
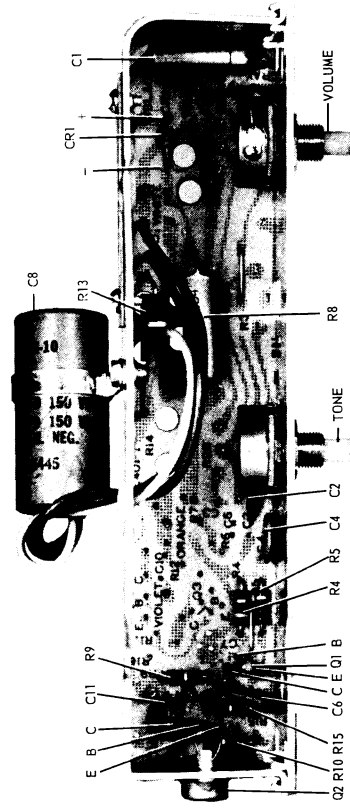


# Admiral

Chassis 2B2, Models YG1027, YG1029, YG1037, YG1047, YG1057

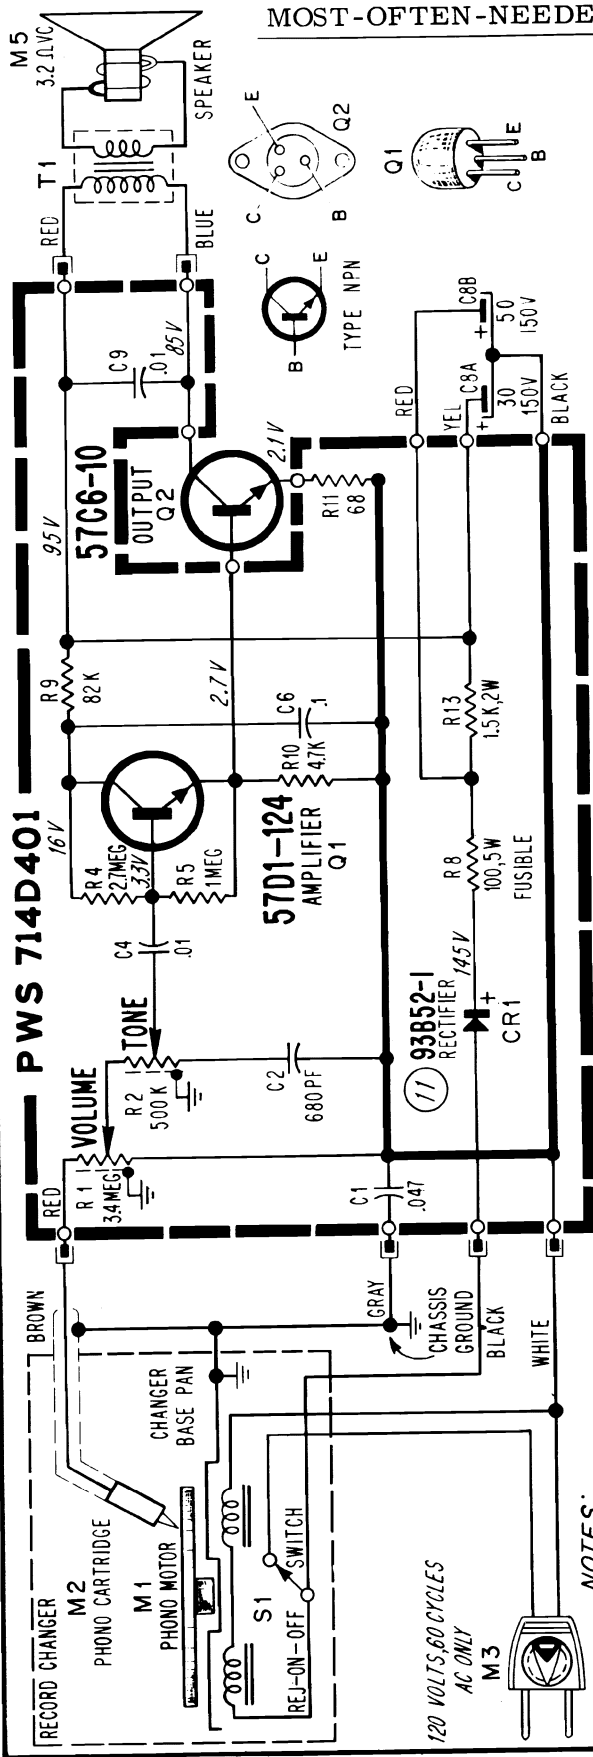

VIEW OF CHASSIS SHOWING COMPONENTS

### CHASSIS REMOVAL

1. Remove the four turntable hold-down screws.
2. Raise turntable front edge for access to chassis.
3. For chassis removal: Pull off knobs.
4. Remove the nuts on the tone and loudness shafts, while supporting escutcheon.
5. Set escutcheon and control cups off.
6. Pull "plug-in" wire connectors to chassis off.
7. Remove chassis.

### NOTES:

ALL RESISTOR VALUES IN OHMS AND CAPACITOR VALUES IN MICROFARADS UNLESS OTHERWISE SHOWN. ALL VOLTAGES TAKEN WITH A VACUUM TUBE VOLTMETER WITH RESPECT TO COMMON B - COMMON B - CHASSIS GROUND

⊕ DENOTES FRAME OF CONTROL IS GROUNDED TO CHASSIS.

### NEEDLE REPLACEMENT

Turn Needle Selector handle so that desired needle number ("LP" or "78") faces up. Corresponding needle will be pointing down. Loosen screw at base of needle assembly and slide assembly forward and remove from cartridge. To install new needle assembly, slide lugs of assembly under screw and tighten securely. Needle shaft must rest in centering notch. Be sure new needles are mounted to correct sides of turn-over cartridge.

