


# AV-NW50

EZ(S,B)

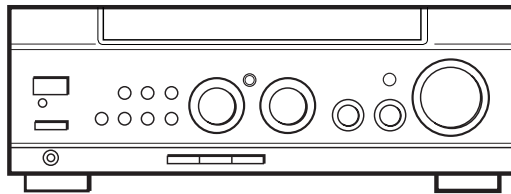

# SERVICE MANUAL

---

AV SURROUND RECEIVER

---

- This Service Manual is the “Revision Publishing” and replaces “Simple Manual” (S/M Code No. 09-02A-364-8T1).

**aiwa**

S/M Code No. 09-02A-364-8R1

REVISION

DATA

## TABLE OF CONTENTS -1/1

|                                                         |       |
|---------------------------------------------------------|-------|
| SPECIFICATIONS .....                                    | 3     |
| ACCESSORIES PARTS LIST .....                            | 4     |
| SERVICE POSITION .....                                  | 5     |
| ELECTRICAL PARTS LIST .....                             | 6-31  |
| TRANSISTOR ILLUSTRATION .....                           | 32    |
| SCHEMATIC DIAGRAM -1/9 (MAIN -1/4) .....                | 33    |
| SCHEMATIC DIAGRAM -2/9 (MAIN -2/4) .....                | 34    |
| SCHEMATIC DIAGRAM -3/9 (MAIN -3/4) .....                | 35    |
| SCHEMATIC DIAGRAM -4/9 (MAIN -4/4) .....                | 36    |
| WIRING -1/6 (MAIN) .....                                | 37    |
| SCHEMATIC DIAGRAM -5/9 (FRONT) .....                    | 38    |
| WIRING -2/6 (FRONT) .....                               | 39    |
| SCHEMATIC DIAGRAM -6/9 (DSP) .....                      | 40    |
| WIRING -3/6 (DSP -1/2) .....                            | 41    |
| WIRING -3/6 (DSP -2/2) .....                            | 42    |
| SCHEMATIC DIAGRAM -7/9 (TUNER) .....                    | 43    |
| WIRING -4/6 (TUNER) .....                               | 44    |
| SCHEMATIC DIAGRAM -8/9 (SUB-PT) .....                   | 45    |
| WIRING -5/6 (SUB-PT) .....                              | 46    |
| SCHEMATIC DIAGRAM -9/9 (KEY/LED,HP/VIDEO,AC1,AC2) ..... | 47    |
| WIRING -6/6 (KEY/LED,HP/VIDEO,AC1,AC2) .....            | 48    |
| LCD DIAGRAM .....                                       | 49    |
| ELECTRICAL ADJUSTMENT .....                             | 50-53 |
| IC BLOCK DIAGRAM .....                                  | 54    |
| IC DESCRIPTION .....                                    | 55-64 |
| MECHANICAL EXPLODED VIEW .....                          | 65    |
| MECHANICAL PARTS LIST .....                             | 66    |
| COLOR NAME TABLE .....                                  | 67    |
| OTHER PARTS LIST .....                                  | 68    |

## SPECIFICATIONS -1/1

### FM tuner section

|                                 |                      |
|---------------------------------|----------------------|
| <b>Tuning range</b>             | 87.5 MHz to 108 MHz  |
| <b>Usable sensitivity (IHF)</b> | 16.8 dBf             |
| <b>Antenna terminal</b>         | 75 ohms (unbalanced) |

### AM tuner section

|                           |                                                                       |
|---------------------------|-----------------------------------------------------------------------|
| <b>Tuning range</b>       | 531 kHz to 1602 kHz (9 kHz step)<br>530 kHz to 1710 kHz (10 kHz step) |
| <b>Usable sensitivity</b> | 350 $\mu$ V/m                                                         |
| <b>Antenna</b>            | Loop antenna                                                          |

### Amplifier section

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power output</b> | <b>Front</b><br>Rated: 80 W + 80 W (8 ohms, T.H.D. 0.9%, 1 kHz/DIN 45500)<br>Reference: 100 W + 100 W (8 ohms, T.H.D. 10%, 1 kHz/DIN 45324)<br>DIN MUSIC POWER<br>150 W + 150 W<br><b>Rear (surround)</b><br>Rated: 80 W + 80 W (8 ohms, T.H.D. 0.9%, 1 kHz/DIN 45500)<br>Reference: 100 W + 100 W (8 ohms, T.H.D. 10%, 1 kHz/DIN 45324)<br>DIN MUSIC POWER<br>150 W + 150 W<br><b>Centre</b><br>Rated: 80 W (8 ohms, T.H.D. 0.9%, 1 kHz/DIN 45500)<br>Reference: 100 W (8 ohms, T.H.D. 10%, 1 kHz/DIN 45324)<br>DIN MUSIC POWER<br>150 W |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Total harmonic distortion

0.05% (60 W, 1 kHz, 8 ohms, front)

### Inputs

AUDIO IN  
DVD: 250 mV, adjustable (47 kohms)  
VIDEO 2/LD/TV: 250 mV, adjustable (47 kohms)  
VIDEO 1/MD: 250 mV, adjustable (47 kohms)  
TAPE: 250 mV, adjustable (47 kohms)  
AUX: 250 mV, adjustable (47 kohms)  
CD: 250 mV, adjustable (47 kohms)  
5.1CH INPUT  
FRONT, CENTER, SURROUND, SUB WOOFER:  
250 mV (47 kohms)  
DIGITAL IN  
COAXIAL (VIDEO 2):  
OPTICAL (VIDEO 1):  
OPTICAL (DVD):  
accept linear PCM signals and bit stream of Dolby Digital and DTS surround (32 kHz, 44.1 kHz, 48 kHz and 96 kHz)  
VIDEO IN  
DVD: 1 Vp-p (75 ohms)  
VIDEO 2/LD/TV: 1 Vp-p (75 ohms)  
VIDEO 1/MD: 1 Vp-p (75 ohms)

### Outputs

AUDIO OUT  
VIDEO 1/MD: 250 mV (1 kohm)  
TAPE: 250 mV (1 kohm)  
VIDEO OUT  
VIDEO 1/MD: 1 Vp-p (75 ohm)  
MONITOR: 1 Vp-p (75 ohm)  
SUB WOOFER: 4.0 V  
FRONT SPEAKERS: accept speakers of 8 ohms or more.  
SURROUND SPEAKERS: accept speakers of 8 ohms or more.  
CENTER SPEAKER: accept speaker of 8 ohms or more.  
PHONES (stereo jack): accepts headphones of 32 ohms or more  
-20 dB

### Muting

### General

|                               |                      |
|-------------------------------|----------------------|
| <b>Power requirements</b>     | 230 V AC, 50 Hz      |
| <b>Power consumption</b>      | 165 W                |
| <b>Dimensions (W × H × D)</b> | 430 × 155.5 × 355 mm |
| <b>Weight</b>                 | 7.8 kg               |

- Design and specifications are subject to change without notice.
- Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other world-wide patents issued and pending. "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. ©1996 Digital Theater Systems, Inc. All rights reserved.

ACCESSORIES PARTS LIST -1/1


! = ⚠ SAFTY PARTS  
C = Components marked  
All components used on this model at the production line are shown in this service manual.  
However, please note that not all components will be available as spare parts for after-sales service.  
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.  
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C | REF-NO | PARTS-NO       | PARTS-NAME            | SUFFIX&MODEL |         |
|-----------|-----|--------|----------------|-----------------------|--------------|---------|
|           |     |        |                |                       | AV-NW50      | AV-NW50 |
|           |     |        |                |                       | EZBC         | EZSC    |
|           | O   | AS1001 | 87-006-226-110 | ANT, LOOP AM          | a            | b       |
|           | O   | AS1002 | 87-A92-346-110 | ANT, WIRE FM (FASTEN) | a            | b       |
|           | O   | AS1003 | 8C-AR5-711-010 | RC UNIT, RC-CAR04     | a            | b       |
|           | O   | AS1004 | 8C-AR5-906-010 | IB, EZ (9L) S AV-NW50 | a            | b       |


## SERVICE POSITION -1/1

### 1. Service Position of the MAIN Board

- (1) Remove the four screws (A) securing the heat sink and the two screws (B) Securing the MAIN board.

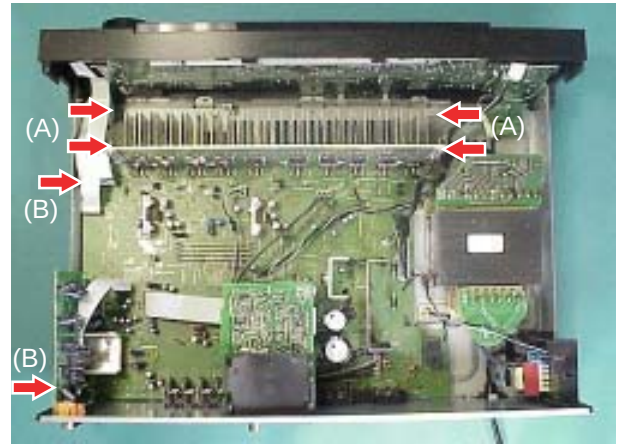

- (2) Remove the five screws (C).

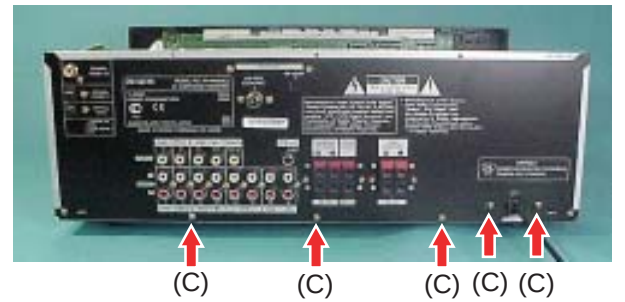

- (3) Lift up the rear panel together with the MAIN board.



- (4) Service position of the MAIN board.



# ELECTRICAL PARTS LIST -1/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C | REF-NO  | PARTS-NO       | PARTS-NAME                  | SUFFIX&MODEL    |                 |
|-----------|---|---|---------|----------------|-----------------------------|-----------------|-----------------|
|           |   |   |         |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| AC1       |   | O | CNA0001 | 8B-AR4-651-010 | CONN ASSY,2P AC OUTLET (EZ) | a               | b               |
| AC2       |   | O | CNA0002 | 8C-AR5-610-010 | CONN ASSY,9P VH 170MM       | a               | b               |
| AC2       |   | X | PR 0009 | 88-100-000-010 | PLATING-JW, 0.58 SN95       | a               | b               |
| AC2       |   | X | PR 0010 | 88-100-000-010 | PLATING-JW, 0.58 SN95       | a               | b               |
| AC2       |   | ! | O       | PT 0001        | 8C-AR5-608-010              | a               | b               |
| AC2       |   | O | WH 0001 | 87-A90-510-010 | HLDR,WIRE 2.5-9P            | a               | b               |
| DSP       |   | O | C 0001  | 87-010-101-080 | CAP,E 220-16 M SME          | a               | b               |
| DSP       |   | O | C 0002  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0003  | 87-010-247-080 | CAP,E 100-50 M SME          | a               | b               |
| DSP       |   | O | C 0004  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0005  | 87-010-382-080 | CAP,E 22-25 M 11L SME       | a               | b               |
| DSP       |   | O | C 0007  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| DSP       |   | O | C 0009  | 87-010-248-080 | CAP,E 220-10 M 11L SME      | a               | b               |
| DSP       |   | O | C 0010  | 87-010-263-080 | CAP,E 100-10 M 11L SME      | a               | b               |
| DSP       |   | O | C 0011  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| DSP       |   | O | C 0012  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| DSP       |   | O | C 0101  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0102  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0111  | 87-012-270-080 | C-CAP,U 470P-50 K B GRM     | a               | b               |
| DSP       |   | O | C 0112  | 87-012-270-080 | C-CAP,U 470P-50 K B GRM     | a               | b               |
| DSP       |   | O | C 0113  | 87-012-186-080 | C-CAP,U 39P-50 J CH GRM     | a               | b               |
| DSP       |   | O | C 0114  | 87-012-186-080 | C-CAP,U 39P-50 J CH GRM     | a               | b               |
| DSP       |   | O | C 0115  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0116  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0117  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0118  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0121  | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM    | a               | b               |
| DSP       |   | O | C 0122  | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM    | a               | b               |
| DSP       |   | O | C 0123  | 87-016-526-080 | C-CAP,S 0.47-16 BK          | a               | b               |
| DSP       |   | O | C 0124  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0125  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0127  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0128  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0151  | 87-010-248-080 | CAP,E 220-10 M 11L SME      | a               | b               |
| DSP       |   | O | C 0152  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0153  | 87-010-248-080 | CAP,E 220-10 M 11L SME      | a               | b               |
| DSP       |   | O | C 0154  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0201  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0202  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0211  | 87-012-270-080 | C-CAP,U 470P-50 K B GRM     | a               | b               |
| DSP       |   | O | C 0212  | 87-012-270-080 | C-CAP,U 470P-50 K B GRM     | a               | b               |
| DSP       |   | O | C 0213  | 87-012-186-080 | C-CAP,U 39P-50 J CH GRM     | a               | b               |
| DSP       |   | O | C 0214  | 87-012-186-080 | C-CAP,U 39P-50 J CH GRM     | a               | b               |
| DSP       |   | O | C 0215  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0216  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0217  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0218  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0221  | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM    | a               | b               |
| DSP       |   | O | C 0222  | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM    | a               | b               |
| DSP       |   | O | C 0223  | 87-016-526-080 | C-CAP,S 0.47-16 BK          | a               | b               |
| DSP       |   | O | C 0224  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0225  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0227  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0228  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0301  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0302  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0311  | 87-012-270-080 | C-CAP,U 470P-50 K B GRM     | a               | b               |
| DSP       |   | O | C 0313  | 87-012-186-080 | C-CAP,U 39P-50 J CH GRM     | a               | b               |
| DSP       |   | O | C 0314  | 87-012-281-080 | C-CAP,U 3900P-50 K B GRM    | a               | b               |
| DSP       |   | O | C 0315  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0316  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0317  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0318  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0321  | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM    | a               | b               |
| DSP       |   | O | C 0322  | 87-012-281-080 | C-CAP,U 3900P-50 K B GRM    | a               | b               |
| DSP       |   | O | C 0323  | 87-016-526-080 | C-CAP,S 0.47-16 BK          | a               | b               |
| DSP       |   | O | C 0324  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0325  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0327  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0328  | 87-010-405-080 | CAP,E 10-50 M 11L SME       | a               | b               |
| DSP       |   | O | C 0406  | 87-010-263-080 | CAP,E 100-10 M 11L SME      | a               | b               |
| DSP       |   | O | C 0407  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0408  | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB    | a               | b               |
| DSP       |   | O | C 0410  | 87-010-402-080 | CAP,E 2.2-50 M 11L SME      | a               | b               |
| DSP       |   | O | C 0411  | 87-A12-317-080 | C-CAP,U 0.1-50 Z F          | a               | b               |
| DSP       |   | O | C 0412  | 87-010-378-080 | CAP,E 10-16 M 11L SME       | a               | b               |
| DSP       |   | O | C 0413  | 87-A12-317-080 | C-CAP,U 0.1-50 Z F          | a               | b               |
| DSP       |   | O | C 0421  | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM    | a               | b               |
| DSP       |   | O | C 0422  | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM    | a               | b               |
| DSP       |   | O | C 0451  | 87-012-180-080 | C-CAP,U 22P-50 J CH GRM     | a               | b               |

# ELECTRICAL PARTS LIST -2/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C    | REF-NO | PARTS-NO       | PARTS-NAME                 | SUFFIX&MODEL    |                 |
|-----------|---|------|--------|----------------|----------------------------|-----------------|-----------------|
|           |   |      |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | O C  | 0452   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0453   | 87-010-379-080 | CAP,E 22-16 M 11L SME      | a               | b               |
| DSP       |   | O C  | 0461   | 87-018-119-080 | CAP,TC U 100P-50 K B UP050 | a               | b               |
| DSP       |   | O C  | 0462   | 87-018-119-080 | CAP,TC U 100P-50 K B UP050 | a               | b               |
| DSP       |   | O C  | 0501   | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB   | a               | b               |
| DSP       |   | O C  | 0502   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0503   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0504   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0505   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0506   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0507   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0508   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0509   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0510   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0511   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0512   | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012   | a               | b               |
| DSP       |   | O C  | 0518   | 87-010-263-080 | CAP,E 100-10 M 11L SME     | a               | b               |
| DSP       |   | O C  | 0606   | 87-010-263-080 | CAP,E 100-10 M 11L SME     | a               | b               |
| DSP       |   | O C  | 0607   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0608   | 87-010-263-080 | CAP,E 100-10 M 11L SME     | a               | b               |
|           |   |      |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | O C  | 0609   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0610   | 87-012-176-080 | C-CAP,U 15P-50 J CH GRM    | a               | b               |
| DSP       |   | O C  | 0611   | 87-012-170-080 | C-CAP,U 8P-50 D CH GRM     | a               | b               |
| DSP       |   | O C  | 0612   | 87-010-263-080 | CAP,E 100-10 M 11L SME     | a               | b               |
| DSP       |   | O C  | 0613   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0617   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| DSP       |   | O C  | 0618   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| DSP       |   | O C  | 0619   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| DSP       |   | O C  | 0623   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM     | a               | b               |
| DSP       |   | O C  | 0624   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| DSP       |   | O C  | 0691   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM   | a               | b               |
| DSP       |   | O C  | 0692   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM   | a               | b               |
| DSP       |   | O CN | 0101   | 87-099-018-010 | CONN,16P V BLK 6216        | a               | b               |
| DSP       |   | O CN | 0102   | 87-A61-013-010 | CONN,15P H BLK TAC-L15P-A3 | a               | b               |
| DSP       |   | S D  | 0151   | 87-020-584-080 | C-ZENER,02CZ5.6Y           | a               | b               |
| DSP       |   | S D  | 0152   | 87-020-584-080 | C-ZENER,02CZ5.6Y           | a               | b               |
| DSP       |   | X FB | 0401   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0402   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0501   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0502   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
|           |   |      |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | X FB | 0503   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0504   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0505   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0506   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0507   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0508   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0509   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0510   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0601   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0602   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X FB | 0603   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | S IC | 0001   | 87-020-903-010 | IC,NJM7805FA               | a               | b               |
| DSP       |   | S IC | 0002   | 87-A21-940-040 | C-IC,NJM2391DL1-25         | a               | b               |
| DSP       |   | S IC | 0101   | 87-A21-760-040 | C-IC,NJM4580V              | a               | b               |
| DSP       |   | S IC | 0102   | 87-A21-760-040 | C-IC,NJM4580V              | a               | b               |
| DSP       |   | S IC | 0201   | 87-A21-760-040 | C-IC,NJM4580V              | a               | b               |
| DSP       |   | S IC | 0202   | 87-A21-760-040 | C-IC,NJM4580V              | a               | b               |
| DSP       |   | S IC | 0301   | 87-A21-760-040 | C-IC,NJM4580V              | a               | b               |
| DSP       |   | S IC | 0302   | 87-A21-760-040 | C-IC,NJM4580V              | a               | b               |
| DSP       |   | S IC | 0401   | 87-A22-284-030 | C-IC,AK4527BVQ             | a               | b               |
|           |   |      |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | S IC | 0501   | 87-A22-329-030 | C-IC,MB86347               | a               | b               |
| DSP       |   | S IC | 0604   | 87-A22-333-040 | C-IC,AK4112B               | a               | b               |
| DSP       |   | S IC | 0611   | 87-A21-974-010 | IC,GPIFA551RZ              | a               | b               |
| DSP       |   | S IC | 0612   | 87-A21-974-010 | IC,GPIFA551RZ              | a               | b               |
| DSP       |   | O J  | 0451   | 87-A61-861-010 | JACK,PIN 1P ORN W/E        | a               | b               |
| DSP       |   | X JR | 0501   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X JR | 0601   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X L  | 0501   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | X L  | 0502   | 88-118-000-080 | C-JUMPER,S                 | a               | b               |
| DSP       |   | S Q  | 0001   | 87-A30-630-080 | TR,2SC5343GL               | a               | b               |
| DSP       |   | S Q  | 0151   | 87-A30-630-080 | TR,2SC5343GL               | a               | b               |
| DSP       |   | S Q  | 0152   | 87-A30-494-080 | TR,2SA1980G                | a               | b               |
| DSP       |   | X R  | 0001   | 88-108-681-080 | C-RES,U 680-1/16W J        | a               | b               |
| DSP       |   | X R  | 0003   | 88-128-680-080 | C-RES, 68-1/8W J           | a               | b               |
| DSP       |   | X R  | 0004   | 88-128-680-080 | C-RES, 68-1/8W J           | a               | b               |
| DSP       |   | X R  | 0007   | 88-108-000-080 | C-JUMPER,U                 | a               | b               |
| DSP       |   | X R  | 0009   | 88-108-472-080 | C-RES,U 4.7K-1/16W J       | a               | b               |
| DSP       |   | X R  | 0011   | 88-108-000-080 | C-JUMPER,U                 | a               | b               |
| DSP       |   | X R  | 0101   | 88-108-104-080 | C-RES,U 100K-1/16W J       | a               | b               |
| DSP       |   | X R  | 0102   | 88-108-104-080 | C-RES,U 100K-1/16W J       | a               | b               |

# ELECTRICAL PARTS LIST -3/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C   | REF-NO | PARTS-NO       | PARTS-NAME           | SUFFIX&MODEL    |                 |
|-----------|---|-----|--------|----------------|----------------------|-----------------|-----------------|
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | X R | 0103   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0104   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0105   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0106   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | O R | 0107   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0108   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0111   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | O R | 0112   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | O R | 0113   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | O R | 0114   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
|           |   |     |        |                |                      |                 |                 |
| DSP       |   | O R | 0117   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
| DSP       |   | O R | 0118   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
| DSP       |   | X R | 0119   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a               | b               |
| DSP       |   | O R | 0121   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0122   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | X R | 0127   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0128   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0129   | 88-108-183-080 | C-RES,U 18K-1/16W J  | a               | b               |
| DSP       |   | X R | 0130   | 88-108-183-080 | C-RES,U 18K-1/16W J  | a               | b               |
| DSP       |   | X R | 0131   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
|           |   |     |        |                |                      |                 |                 |
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | X R | 0132   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0133   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       |   | X R | 0134   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       |   | X R | 0135   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0136   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | O R | 0143   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       |   | O R | 0144   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       |   | X R | 0151   | 88-128-121-080 | C-RES, 120-1/8W J    | a               | b               |
| DSP       |   | X R | 0152   | 88-128-121-080 | C-RES, 120-1/8W J    | a               | b               |
| DSP       |   | X R | 0153   | 88-108-821-080 | C-RES,U 820-1/16W J  | a               | b               |
|           |   |     |        |                |                      |                 |                 |
| DSP       |   | X R | 0154   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0155   | 88-128-121-080 | C-RES, 120-1/8W J    | a               | b               |
| DSP       |   | X R | 0156   | 88-128-121-080 | C-RES, 120-1/8W J    | a               | b               |
| DSP       |   | X R | 0157   | 88-108-821-080 | C-RES,U 820-1/16W J  | a               | b               |
| DSP       |   | X R | 0158   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0201   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0202   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0203   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0204   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0205   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
|           |   |     |        |                |                      |                 |                 |
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | X R | 0206   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | O R | 0207   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0208   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0211   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | O R | 0212   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | O R | 0213   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | O R | 0214   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | O R | 0215   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0216   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0217   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
|           |   |     |        |                |                      |                 |                 |
| DSP       |   | O R | 0218   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
| DSP       |   | X R | 0219   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a               | b               |
| DSP       |   | X R | 0223   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       |   | X R | 0227   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0228   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0229   | 88-108-183-080 | C-RES,U 18K-1/16W J  | a               | b               |
| DSP       |   | X R | 0230   | 88-108-183-080 | C-RES,U 18K-1/16W J  | a               | b               |
| DSP       |   | X R | 0231   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0232   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0234   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
|           |   |     |        |                |                      |                 |                 |
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | X R | 0235   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0236   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | O R | 0243   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       |   | O R | 0244   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       |   | X R | 0301   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0302   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       |   | X R | 0303   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0304   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0305   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | X R | 0306   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
|           |   |     |        |                |                      |                 |                 |
| DSP       |   | O R | 0307   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0308   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0311   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | X R | 0312   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       |   | O R | 0313   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       |   | X R | 0314   | 88-108-183-080 | C-RES,U 18K-1/16W J  | a               | b               |
| DSP       |   | O R | 0315   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       |   | O R | 0317   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
| DSP       |   | O R | 0318   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
| DSP       |   | X R | 0319   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a               | b               |



# ELECTRICAL PARTS LIST -4/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C | REF-NO | PARTS-NO       | PARTS-NAME           | SUFFIX&MODEL    |                 |
|-----------|-----|--------|----------------|----------------------|-----------------|-----------------|
|           |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       | X R | 0327   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0328   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0329   | 88-108-183-080 | C-RES,U 18K-1/16W J  | a               | b               |
| DSP       | O R | 0330   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a               | b               |
| DSP       | X R | 0331   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       | X R | 0332   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       | X R | 0333   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       | X R | 0334   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       | X R | 0335   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       | X R | 0336   | 88-108-104-080 | C-RES,U 100K-1/16W J | a               | b               |
| DSP       | O R | 0338   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       | O R | 0343   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0344   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | X R | 0400   | 88-108-330-080 | C-RES,U 33-1/16W J   | a               | b               |
| DSP       | O R | 0403   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0404   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0405   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0406   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0407   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0408   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
|           |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       | X R | 0409   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0410   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | O R | 0411   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0412   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0413   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0414   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0415   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0416   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | X R | 0417   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       | X R | 0418   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       | X R | 0419   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       | X R | 0420   | 88-108-471-080 | C-RES,U 470-1/16W J  | a               | b               |
| DSP       | X R | 0421   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a               | b               |
| DSP       | X R | 0422   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a               | b               |
| DSP       | X R | 0423   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a               | b               |
| DSP       | X R | 0424   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a               | b               |
| DSP       | X R | 0451   | 88-108-820-080 | C-RES,U 82-1/16W J   | a               | b               |
| DSP       | X R | 0461   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0462   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0463   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
|           |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       | X R | 0464   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0465   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0466   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0467   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0468   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0469   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0470   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0471   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0472   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0473   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0474   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | O R | 0501   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | X R | 0502   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0503   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0506   | 88-108-330-080 | C-RES,U 33-1/16W J   | a               | b               |
| DSP       | X R | 0507   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0508   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0509   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0510   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | O R | 0511   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
|           |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       | O R | 0512   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | X R | 0513   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | O R | 0514   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0533   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
| DSP       | O R | 0536   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a               | b               |
| DSP       | O R | 0538   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0539   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0540   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | X R | 0541   | 88-108-330-080 | C-RES,U 33-1/16W J   | a               | b               |
| DSP       | X R | 0552   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0553   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0554   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0557   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | X R | 0601   | 88-108-000-080 | C-JUMPER,U           | a               | b               |
| DSP       | O R | 0611   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a               | b               |
| DSP       | O R | 0612   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0613   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0614   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | O R | 0615   | 88-108-101-080 | C-RES,U 100-1/16W J  | a               | b               |
| DSP       | X R | 0616   | 88-108-391-080 | C-RES,U 390-1/16W J  | a               | b               |

## ELECTRICAL PARTS LIST -5/26

! =  SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C     | REF-NO | PARTS-NO       | PARTS-NAME                | SUFFIX&MODEL    |                 |
|-----------|---|-------|--------|----------------|---------------------------|-----------------|-----------------|
|           |   |       |        |                |                           | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| DSP       |   | X R   | 0619   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| DSP       |   | X R   | 0622   | 88-108-221-080 | C-RES,U 220-1/16W J       | a               | b               |
| DSP       |   | X R   | 0623   | 88-108-221-080 | C-RES,U 220-1/16W J       | a               | b               |
| DSP       |   | X R   | 0624   | 88-108-271-080 | C-RES,U 270-1/16W J       | a               | b               |
| DSP       |   | X R   | 0625   | 88-108-105-080 | C-RES,U 1M-1/16W J        | a               | b               |
| DSP       |   | X R   | 0626   | 88-128-183-080 | C-RES, 18K-1/8W J         | a               | b               |
| DSP       |   | X R   | 0628   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| DSP       |   | X R   | 0629   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| DSP       |   | X R   | 0630   | 88-108-221-080 | C-RES,U 220-1/16W J       | a               | b               |
| DSP       |   | X R   | 0633   | 88-108-330-080 | C-RES,U 33-1/16W J        | a               | b               |
| DSP       |   | X R   | 0634   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| DSP       |   | X R   | 0680   | 88-128-100-080 | C-RES, 10-1/8W J          | a               | b               |
| DSP       |   | X R   | 0681   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| DSP       |   | X R   | 0682   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| DSP       |   | X R   | 0691   | 88-108-471-080 | C-RES,U 470-1/16W J       | a               | b               |
| DSP       |   | X R   | 0692   | 88-108-471-080 | C-RES,U 470-1/16W J       | a               | b               |
| DSP       |   | O X   | 0601   | 87-A70-115-010 | VIB,XTAL 12.288MHZ        | a               | b               |
| FRONT     |   | O C   | 0101   | 87-010-405-080 | CAP,E 10-50 M 11L SME     | a               | b               |
| FRONT     |   | O C   | 0102   | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB  | a               | b               |
| FRONT     |   | O C   | 0103   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM  | a               | b               |
|           |   |       |        |                |                           | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     |   | O C   | 0104   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM   | a               | b               |
| FRONT     |   | O C   | 0105   | 87-012-176-080 | C-CAP,U 15P-50 J CH GRM   | a               | b               |
| FRONT     |   | O C   | 0106   | 87-012-198-080 | C-CAP,U 180P-50 J CH GRM  | a               | b               |
| FRONT     |   | O C   | 0107   | 87-A10-039-080 | C-CAP,U 470P-50 J CH      | a               | b               |
| FRONT     |   | O C   | 0108   | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB  | a               | b               |
| FRONT     |   | O C   | 0109   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM  | a               | b               |
| FRONT     |   | O C   | 0112   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM  | a               | b               |
| FRONT     |   | O C   | 0119   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM  | a               | b               |
| FRONT     |   | O C   | 0121   | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB  | a               | b               |
| FRONT     |   | O C   | 0122   | 87-A11-242-080 | CAP,E 220-10 M 5L SRM     | a               | b               |
| FRONT     |   | O C   | 0123   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM    | a               | b               |
| FRONT     |   | O C   | 0124   | 87-010-405-080 | CAP,E 10-50 M 11L SME     | a               | b               |
| FRONT     |   | O C   | 0125   | 87-010-405-080 | CAP,E 10-50 M 11L SME     | a               | b               |
| FRONT     |   | O C   | 0126   | 87-010-408-080 | CAP,E 47-50 M 11L SME     | a               | b               |
| FRONT     |   | O C   | 0127   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM    | a               | b               |
| FRONT     |   | O C   | 0130   | 87-010-405-080 | CAP,E 10-50 M 11L SME     | a               | b               |
| FRONT     |   | O C   | 0159   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0160   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0161   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0162   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
|           |   |       |        |                |                           | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     |   | O C   | 0163   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0164   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0165   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0166   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0167   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0168   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0169   | 87-012-336-080 | C-CAP,U 330P-50 J SL GRM  | a               | b               |
| FRONT     |   | O C   | 0201   | 87-010-387-080 | CAP,E 470-25 M SME        | a               | b               |
| FRONT     |   | O C   | 0202   | 87-010-385-080 | CAP,E 220-25 M SME        | a               | b               |
| FRONT     |   | O C   | 0204   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM  | a               | b               |
| FRONT     |   | O C   | 0205   | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB  | a               | b               |
| FRONT     |   | O C   | 0206   | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB  | a               | b               |
| FRONT     |   | O C   | 0207   | 87-010-221-010 | CAP,E 470-10 M SME        | a               | b               |
| FRONT     |   | O C   | 0211   | 87-010-677-080 | CAP,E 0.15-50 M 7L SRA    | a               | b               |
| FRONT     |   | O C   | 0300   | 87-A11-148-080 | CAP,TC U 0.1-50 Z F       | a               | b               |
| FRONT     |   | O C   | 0331   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM  | a               | b               |
| FRONT     |   | O C   | 0341   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM  | a               | b               |
| FRONT     |   | O C   | 0342   | 87-010-787-080 | C-CAP,U 0.022-25 K B GRM  | a               | b               |
| FRONT     |   | O C   | 0343   | 87-012-199-080 | C-CAP,U 220P-50 J CH GRM  | a               | b               |
| FRONT     |   | O C   | 0351   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM  | a               | b               |
|           |   |       |        |                |                           | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     |   | O C   | 0352   | 87-012-199-080 | C-CAP,U 220P-50 J CH GRM  | a               | b               |
| FRONT     |   | O CN  | 0401   | 87-099-202-010 | CONN,9P H BLK 6216        | a               | b               |
| FRONT     |   | O CN  | 0404   | 87-099-035-010 | CONN,18P H BLK 6216       | a               | b               |
| FRONT     |   | O CN  | 0405   | 87-099-039-010 | CONN,22P H BLK 6216       | a               | b               |
| FRONT     |   | O CNA | 0401   | 88-805-083-490 | CONN ASSY,8P V WHT 340 MM | a               | b               |
| FRONT     |   | S D   | 0102   | 87-020-465-080 | DIODE,1SS133              | a               | b               |
| FRONT     |   | S D   | 0104   | 87-020-465-080 | DIODE,1SS133              | a               | b               |
| FRONT     |   | S D   | 0106   | 87-020-465-080 | DIODE,1SS133              | a               | b               |
| FRONT     |   | S D   | 0201   | 87-A40-748-080 | ZENER,UZ5.6BSA            | a               | b               |
| FRONT     |   | S D   | 0202   | 87-020-465-080 | DIODE,1SS133              | a               | b               |
| FRONT     |   | S D   | 0203   | 87-020-465-080 | DIODE,1SS133              | a               | b               |
| FRONT     |   | S D   | 0211   | 87-020-465-080 | DIODE,1SS133              | a               | b               |
| FRONT     |   | O FFC | 0002   | 88-909-081-110 | FF-CABLE,9P 1.25 80MM     | a               | b               |
| FRONT     |   | O FL  | 0101   | 8C-AR6-601-010 | FL,HNA-11SM25 CAR-6       | a               | b               |
| FRONT     |   | S IC  | 0101   | 8C-AR5-602-030 | C-IC,UPD784975-307-3BA    | a               | b               |
| FRONT     |   | S IC  | 0102   | 87-A21-831-010 | IC,SPS-442-1-F1           | a               | b               |
| FRONT     |   | X JR  | 0101   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| FRONT     |   | X JR  | 0102   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| FRONT     |   | X JR  | 0103   | 88-108-000-080 | C-JUMPER,U                | a               | b               |
| FRONT     |   | X JR  | 0104   | 88-108-000-080 | C-JUMPER,U                | a               | b               |

# ELECTRICAL PARTS LIST -6/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C | REF-NO  | PARTS-NO       | PARTS-NAME            | SUFFIX&MODEL    |                 |
|-----------|---|---|---------|----------------|-----------------------|-----------------|-----------------|
|           |   |   |         |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     |   | X | JR 0105 | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     |   | X | JR 0106 | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     |   | X | JR 0107 | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     |   | X | JR 0301 | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     |   | X | JR 0401 | 88-118-000-080 | C-JUMPER,S            | .               | b               |
| FRONT     |   | X | JW 0127 | 88-121-224-080 | RES,220K-1/8W J       | .               | b               |
| FRONT     |   | O | L 0101  | 87-A50-652-010 | COIL,OSC 15.6MHZ      | a               | b               |
| FRONT     |   | S | Q 0101  | 87-A30-538-040 | C-TR,SRA2202S         | a               | b               |
| FRONT     |   | S | Q 0102  | 87-A30-071-080 | C-TR,RT1N 144C        | a               | b               |
| FRONT     |   | S | Q 0103  | 87-A30-087-080 | C-FET,2SK2158         | a               | b               |
| FRONT     |   | S | Q 0105  | 87-A30-071-080 | C-TR,RT1N 144C        | a               | b               |
| FRONT     |   | S | Q 0106  | 87-A30-071-080 | C-TR,RT1N 144C        | a               | b               |
| FRONT     |   | S | Q 0201  | 87-A30-494-080 | TR,2SA1980G           | a               | b               |
| FRONT     |   | S | Q 0202  | 87-A30-076-080 | C-TR,2SC3052F         | a               | b               |
| FRONT     |   | S | Q 0203  | 87-A30-076-080 | C-TR,2SC3052F         | a               | b               |
| FRONT     |   | S | Q 0204  | 87-A30-538-040 | C-TR,SRA2202S         | a               | b               |
| FRONT     |   | S | Q 0211  | 87-A30-076-080 | C-TR,2SC3052F         | a               | b               |
| FRONT     |   | S | Q 0451  | 87-A30-087-080 | C-FET,2SK2158         | a               | b               |
| FRONT     |   | S | Q 0452  | 87-A30-087-080 | C-FET,2SK2158         | a               | b               |
| FRONT     |   | S | Q 0453  | 87-A30-087-080 | C-FET,2SK2158         | a               | b               |
|           |   |   |         |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     |   | S | Q 0454  | 87-A30-087-080 | C-FET,2SK2158         | a               | b               |
| FRONT     |   | S | Q 0455  | 87-A30-087-080 | C-FET,2SK2158         | a               | b               |
| FRONT     |   | S | Q 0456  | 87-A30-087-080 | C-FET,2SK2158         | a               | b               |
| FRONT     |   | O | R 0100  | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     |   | O | R 0101  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | X | R 0102  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0105  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | O | R 0109  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0110  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0114  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0115  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | X | R 0120  | 88-121-563-080 | RES,56K-1/8W J        | a               | b               |
| FRONT     |   | O | R 0122  | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     |   | O | R 0123  | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     |   | X | R 0125  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0126  | 88-121-470-080 | RES,47-1/8W J         | a               | b               |
| FRONT     |   | O | R 0127  | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     |   | O | R 0128  | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     |   | X | R 0129  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0130  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
|           |   |   |         |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     |   | X | R 0131  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | O | R 0132  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0133  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | X | R 0134  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | O | R 0135  | 88-108-473-080 | C-RES,U 47K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0136  | 88-108-473-080 | C-RES,U 47K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0137  | 88-108-473-080 | C-RES,U 47K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0138  | 88-108-473-080 | C-RES,U 47K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0139  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0140  | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     |   | O | R 0142  | 88-108-153-080 | C-RES,U 15K-1/16W J   | a               | b               |
| FRONT     |   | X | R 0143  | 88-121-100-080 | RES,10-1/8W J         | a               | b               |
| FRONT     |   | X | R 0144  | 88-121-683-080 | RES,68K-1/8W J        | a               | b               |
| FRONT     |   | X | R 0145  | 88-121-223-080 | RES,22K-1/8W J        | a               | b               |
| FRONT     |   | X | R 0146  | 88-121-152-080 | RES,1.5K-1/8W J       | a               | b               |
| FRONT     |   | X | R 0147  | 88-121-682-080 | RES,6.8K-1/8W J       | a               | b               |
| FRONT     |   | X | R 0148  | 88-121-682-080 | RES,6.8K-1/8W J       | a               | b               |
| FRONT     |   | X | R 0149  | 88-121-152-080 | RES,1.5K-1/8W J       | a               | b               |
| FRONT     |   | X | R 0150  | 88-121-100-080 | RES,10-1/8W J         | a               | b               |
| FRONT     |   | X | R 0151  | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               | b               |
|           |   |   |         |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     |   | X | R 0155  | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               | b               |
| FRONT     |   | X | R 0159  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0160  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0161  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0162  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0163  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0164  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0165  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0166  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0167  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0168  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0169  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0170  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0171  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0172  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0173  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0174  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0175  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0176  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     |   | X | R 0177  | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |

# ELECTRICAL PARTS LIST -7/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C | REF-NO | PARTS-NO       | PARTS-NAME            | SUFFIX&MODEL    |                 |
|-----------|-----|--------|----------------|-----------------------|-----------------|-----------------|
|           |     |        |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     | X R | 0178   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0179   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0180   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0181   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0182   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0183   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0184   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0185   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0186   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0187   | 88-108-104-080 | C-RES,U 100K-1/16W J  | a               | b               |
| FRONT     | X R | 0191   | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               | b               |
| FRONT     | X R | 0195   | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               | b               |
| FRONT     | X R | 0201   | 88-121-124-080 | RES,120K-1/8W J       | a               | b               |
| FRONT     | X R | 0202   | 88-121-104-080 | RES,100K-1/8W J       | a               | b               |
| FRONT     | X R | 0203   | 88-108-472-080 | C-RES,U 4.7K-1/16W J  | a               | b               |
| FRONT     | O R | 0204   | 88-108-153-080 | C-RES,U 15K-1/16W J   | a               | b               |
| FRONT     | O R | 0205   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | X R | 0206   | 88-108-471-080 | C-RES,U 470-1/16W J   | a               | b               |
| FRONT     | X R | 0210   | 88-121-104-080 | RES,100K-1/8W J       | a               | b               |
| FRONT     | X R | 0211   | 88-121-393-080 | RES,39K-1/8W J        | a               | b               |
|           |     |        |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     | O R | 0212   | 88-108-223-080 | C-RES,U 22K-1/16W J   | a               | b               |
| FRONT     | O R | 0213   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     | O R | 0214   | 88-108-224-080 | C-RES,U 220K-1/16W J  | a               | b               |
| FRONT     | O R | 0215   | 88-108-224-080 | C-RES,U 220K-1/16W J  | a               | .               |
| FRONT     | X R | 0215   | 88-108-000-080 | C-JUMPER,U            | .               | b               |
| FRONT     | O R | 0301   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     | X R | 0302   | 88-121-103-080 | RES,10K-1/8W J        | a               | b               |
| FRONT     | O R | 0303   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | X R | 0304   | 88-108-152-080 | C-RES,U 1.5K-1/16W J  | a               | b               |
| FRONT     | X R | 0305   | 88-108-152-080 | C-RES,U 1.5K-1/16W J  | a               | b               |
| FRONT     | X R | 0306   | 88-108-222-080 | C-RES,U 2.2K-1/16W J  | a               | b               |
| FRONT     | X R | 0307   | 88-108-222-080 | C-RES,U 2.2K-1/16W J  | a               | b               |
| FRONT     | O R | 0308   | 88-108-332-080 | C-RES,U 3.3K-1/16W J  | a               | b               |
| FRONT     | X R | 0309   | 88-108-472-080 | C-RES,U 4.7K-1/16W J  | a               | b               |
| FRONT     | O R | 0315   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | X R | 0316   | 88-108-821-080 | C-RES,U 820-1/16W J   | a               | b               |
| FRONT     | O R | 0317   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0318   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | X R | 0331   | 88-108-222-080 | C-RES,U 2.2K-1/16W J  | a               | b               |
| FRONT     | O R | 0332   | 88-108-123-080 | C-RES,U 12K-1/16W J   | a               | b               |
|           |     |        |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     | X R | 0333   | 88-108-273-080 | C-RES,U 27K-1/16W J   | a               | b               |
| FRONT     | X R | 0334   | 88-108-152-080 | C-RES,U 1.5K-1/16W J  | a               | b               |
| FRONT     | O R | 0335   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a               | b               |
| FRONT     | X R | 0341   | 88-108-222-080 | C-RES,U 2.2K-1/16W J  | a               | b               |
| FRONT     | O R | 0342   | 88-108-123-080 | C-RES,U 12K-1/16W J   | a               | b               |
| FRONT     | X R | 0343   | 88-108-273-080 | C-RES,U 27K-1/16W J   | a               | b               |
| FRONT     | X R | 0344   | 88-108-152-080 | C-RES,U 1.5K-1/16W J  | a               | b               |
| FRONT     | O R | 0345   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a               | b               |
| FRONT     | O R | 0346   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a               | b               |
| FRONT     | X R | 0351   | 88-108-222-080 | C-RES,U 2.2K-1/16W J  | a               | b               |
| FRONT     | O R | 0352   | 88-108-123-080 | C-RES,U 12K-1/16W J   | a               | b               |
| FRONT     | X R | 0353   | 88-108-273-080 | C-RES,U 27K-1/16W J   | a               | b               |
| FRONT     | X R | 0354   | 88-108-152-080 | C-RES,U 1.5K-1/16W J  | a               | b               |
| FRONT     | O R | 0355   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a               | b               |
| FRONT     | O R | 0401   | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     | X R | 0402   | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     | O R | 0403   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0404   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0405   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | X R | 0406   | 88-108-000-080 | C-JUMPER,U            | a               | b               |
|           |     |        |                |                       | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| FRONT     | X R | 0407   | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     | X R | 0408   | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     | O R | 0409   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0410   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0411   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0412   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0413   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0414   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0415   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0416   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | X R | 0417   | 88-108-000-080 | C-JUMPER,U            | a               | b               |
| FRONT     | O R | 0418   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0419   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0420   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a               | b               |
| FRONT     | O R | 0421   | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     | O R | 0422   | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     | O R | 0423   | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     | O R | 0424   | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     | O R | 0425   | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |
| FRONT     | O R | 0426   | 88-108-101-080 | C-RES,U 100-1/16W J   | a               | b               |

# ELECTRICAL PARTS LIST -8/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C | REF-NO  | PARTS-NO       | PARTS-NAME             | SUFFIX&MODEL                   |                 |   |
|-----------|---|---|---------|----------------|------------------------|--------------------------------|-----------------|---|
|           |   |   |         |                |                        | AV-NW50<br>EZBC                | AV-NW50<br>EZSC |   |
| FRONT     |   | O | R       | 0427           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0428           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0429           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0430           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0432           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0433           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0434           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0435           | 88-108-101-080         | C-RES,U 100-1/16W J            | a               | b |
| FRONT     |   | O | R       | 0451           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0452           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0453           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0454           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0455           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0456           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0457           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0458           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | R       | 0459           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| FRONT     |   | O | S       | 0101           | 87-A92-410-010         | SW,RTRY EC12E12F               | a               | b |
| FRONT     |   | O | S       | 0102           | 87-A92-410-010         | SW,RTRY EC12E12F               | a               | b |
| FRONT     |   | O | S       | 0301           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
|           |   |   |         |                |                        | AV-NW50<br>EZBC                | AV-NW50<br>EZSC |   |
| FRONT     |   | O | S       | 0302           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0303           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0304           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0305           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0306           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0307           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0313           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0314           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0315           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0316           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | S       | 0317           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| FRONT     |   | O | SW      | 0301           | 87-A92-411-010         | SW,RTRY EC12E24C               | a               | b |
| FRONT     |   | O | SW      | 0302           | 87-A92-409-010         | SW,RTRY EC12E12E               | a               | b |
| FRONT     |   | O | SW      | 0303           | 87-A92-408-010         | SW,RTRY EC12E24D               | a               | b |
| FRONT     |   | X | W       | 0301           | 8C-AR5-661-010         | WIRE,LUG EARTH 60MM            | a               | b |
| HP/VIDEO  |   | O | C       | 0551           | 87-012-278-080         | C-CAP,U 2200P-50 K B GRM       | a               | b |
| HP/VIDEO  |   | O | C       | 0552           | 87-012-278-080         | C-CAP,U 2200P-50 K B GRM       | a               | b |
| HP/VIDEO  |   | O | C       | 0553           | 87-012-368-080         | C-CAP,S 0.1-50 Z F GRM         | a               | b |
| HP/VIDEO  |   | O | CN      | 0551           | 87-099-209-010         | CONN,4P H BLK 6216             | a               | b |
| HP/VIDEO  |   | O | FB      | 0551           | 87-008-372-080         | FLTR,EMI BL01 RN1              | a               | b |
|           |   |   |         |                |                        | AV-NW50<br>EZBC                | AV-NW50<br>EZSC |   |
| HP/VIDEO  |   | O | J       | 0551           | 87-A61-903-010         | JACK,DIA6.3 BLK/GLD ST W/SW    | a               | b |
| HP/VIDEO  |   | X | R       | 0551           | 88-121-683-080         | RES,68K-1/8W J                 | a               | b |
| KEY/LED   |   | O | CN      | 0501           | 87-099-202-010         | CONN,9P H BLK 6216             | a               | b |
| KEY/LED   |   | O | CN      | 0502           | 87-099-209-010         | CONN,4P H BLK 6216             | a               | b |
| KEY/LED   |   | O | D       | 0525           | 87-A41-142-010         | LED,SPR-39MVWF GRN/RED (L/M/N) | a               | b |
| KEY/LED   |   | O | FFC0001 | 88-904-111-110 | FF-CABLE,4P 1.25 110MM | a                              | b               |   |
| KEY/LED   |   | S | Q       | 0525           | 87-A30-072-080         | C-TR,RT1P 144C                 | a               | b |
| KEY/LED   |   | S | Q       | 0526           | 87-A30-071-080         | C-TR,RT1N 144C                 | a               | b |
| KEY/LED   |   | O | R       | 0521           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| KEY/LED   |   | X | R       | 0522           | 88-108-821-080         | C-RES,U 820-1/16W J            | a               | b |
| KEY/LED   |   | O | R       | 0523           | 88-108-102-080         | C-RES,U 1K-1/16W J             | a               | b |
| KEY/LED   |   | X | R       | 0525           | 88-121-182-080         | RES,1.8K-1/8W J                | a               | b |
| KEY/LED   |   | X | R       | 0526           | 88-121-681-080         | RES,680-1/8W J                 | a               | b |
| KEY/LED   |   | O | S       | 0521           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| KEY/LED   |   | O | S       | 0522           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| KEY/LED   |   | O | S       | 0524           | 87-A90-164-080         | SW,TACT SKQNAB(N)              | a               | b |
| MAIN      |   | O | C       | 0001           | 87-A13-133-090         | CAP,E 10000-25 85 VR(GSO)      | a               | b |
| MAIN      |   | O | C       | 0002           | 87-A13-133-090         | CAP,E 10000-25 85 VR(GSO)      | a               | b |
| MAIN      |   | O | C       | 0011           | 87-A10-122-090         | CAP,E 6800-65 M VR             | a               | b |
| MAIN      |   | O | C       | 0012           | 87-A10-122-090         | CAP,E 6800-65 M VR             | a               | b |
|           |   |   |         |                |                        | AV-NW50<br>EZBC                | AV-NW50<br>EZSC |   |
| MAIN      |   | O | C       | 0013           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0014           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0015           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0016           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0023           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0024           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0025           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0026           | 87-A10-712-080         | C-CAP,S 0.22-50 Z F            | a               | b |
| MAIN      |   | O | C       | 0031           | 87-016-495-000         | CAP,E 3300-25 M SMG            | a               | b |
| MAIN      |   | O | C       | 0032           | 87-012-368-080         | C-CAP,S 0.1-50 Z F GRM         | a               | b |
| MAIN      |   | O | C       | 0033           | 87-012-368-080         | C-CAP,S 0.1-50 Z F GRM         | a               | b |
| MAIN      |   | O | C       | 0034           | 87-010-260-080         | CAP,E 47-25 M 11L SME          | a               | b |
| MAIN      |   | O | C       | 0035           | 87-012-368-080         | C-CAP,S 0.1-50 Z F GRM         | a               | b |
| MAIN      |   | O | C       | 0036           | 87-012-368-080         | C-CAP,S 0.1-50 Z F GRM         | a               | b |
| MAIN      |   | O | C       | 0037           | 87-012-368-080         | C-CAP,S 0.1-50 Z F GRM         | a               | b |
| MAIN      |   | O | C       | 0038           | 87-012-368-080         | C-CAP,S 0.1-50 Z F GRM         | a               | b |
| MAIN      |   | O | C       | 0041           | 87-010-260-080         | CAP,E 47-25 M 11L SME          | a               | b |
| MAIN      |   | O | C       | 0042           | 87-010-403-080         | CAP,E 3.3-50 M 11L SME         | a               | b |
| MAIN      |   | O | C       | 0043           | 87-012-286-080         | C-CAP,U 0.01-25 K B GRM        | a               | b |
| MAIN      |   | O | C       | 0051           | 87-010-235-080         | CAP,E 470-16 M SME             | a               | b |

# ELECTRICAL PARTS LIST -9/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO       | PARTS-NAME                 | SUFFIX&MODEL    |                 |
|-----------|--|-----|--------|----------------|----------------------------|-----------------|-----------------|
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0052   | 87-010-384-080 | CAP,E 100-25 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0053   | 87-010-258-080 | CAP,E 22-35 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0054   | 87-010-235-080 | CAP,E 470-16 M SME         | a               | b               |
| MAIN      |  | O C | 0061   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM    | a               | b               |
| MAIN      |  | O C | 0071   | 87-010-405-080 | CAP,E 10-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0105   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0106   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0107   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0108   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0113   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM   | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | O C | 0114   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0115   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0116   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0117   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM     | a               | b               |
| MAIN      |  | O C | 0118   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM     | a               | b               |
| MAIN      |  | O C | 0119   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0120   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0121   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0122   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0129   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0130   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0133   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0134   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0141   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0142   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0143   | 87-012-282-080 | C-CAP,U 4700P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0144   | 87-012-282-080 | C-CAP,U 4700P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0150   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0151   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0152   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | O C | 0153   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0154   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0155   | 87-A12-310-080 | C-CAP,U 0.01-50 K B        | a               | b               |
| MAIN      |  | O C | 0156   | 87-A12-310-080 | C-CAP,U 0.01-50 K B        | a               | b               |
| MAIN      |  | O C | 0160   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0201   | 87-010-246-080 | CAP,E 47-35 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0202   | 87-010-246-080 | CAP,E 47-35 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0203   | 87-010-195-080 | C-CAP,S 0.068-25 Z F C2012 | a               | b               |
| MAIN      |  | O C | 0204   | 87-012-180-080 | C-CAP,U 22P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0205   | 87-010-764-080 | CAP,E 47-63 M VX           | a               | b               |
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0206   | 87-010-764-080 | CAP,E 47-63 M VX           | a               | b               |
| MAIN      |  | O C | 0207   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0208   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0211   | 87-010-427-080 | C-CAP,S 0.039-25 Z F GRM   | a               | b               |
| MAIN      |  | O C | 0217   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0231   | 87-012-268-080 | C-CAP,U 330P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0232   | 87-012-268-080 | C-CAP,U 330P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0233   | 87-012-268-080 | C-CAP,U 330P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0234   | 87-012-268-080 | C-CAP,U 330P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0251   | 87-016-460-080 | C-CAP,S 0.22-16 K B C2012  | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | O C | 0252   | 87-016-460-080 | C-CAP,S 0.22-16 K B C2012  | a               | b               |
| MAIN      |  | O C | 0261   | 87-012-282-080 | C-CAP,U 4700P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0271   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0272   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0273   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0274   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0275   | 87-A12-310-080 | C-CAP,U 0.01-50 K B        | a               | b               |
| MAIN      |  | O C | 0276   | 87-A12-310-080 | C-CAP,U 0.01-50 K B        | a               | b               |
| MAIN      |  | O C | 0277   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0278   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0305   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0306   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0307   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0308   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0313   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0314   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0315   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0316   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0317   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM     | a               | b               |
| MAIN      |  | O C | 0318   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM     | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | O C | 0319   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0320   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0321   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0322   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0329   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0330   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0333   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0334   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0341   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0342   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |

# ELECTRICAL PARTS LIST -10/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO       | PARTS-NAME                 | SUFFIX&MODEL    |                 |
|-----------|--|-----|--------|----------------|----------------------------|-----------------|-----------------|
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0343   | 87-012-282-080 | C-CAP,U 4700P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0344   | 87-012-282-080 | C-CAP,U 4700P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0350   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0351   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0352   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0353   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0354   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0355   | 87-010-190-080 | C-CAP,S 0.01-50 Z F C2012  | a               | b               |
| MAIN      |  | O C | 0356   | 87-010-190-080 | C-CAP,S 0.01-50 Z F C2012  | a               | b               |
| MAIN      |  | O C | 0360   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | O C | 0401   | 87-010-246-080 | CAP,E 47-35 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0402   | 87-010-246-080 | CAP,E 47-35 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0403   | 87-010-195-080 | C-CAP,S 0.068-25 Z F C2012 | a               | b               |
| MAIN      |  | O C | 0404   | 87-012-180-080 | C-CAP,U 22P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0405   | 87-010-764-080 | CAP,E 47-63 M VX           | a               | b               |
| MAIN      |  | O C | 0406   | 87-010-764-080 | CAP,E 47-63 M VX           | a               | b               |
| MAIN      |  | O C | 0407   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0408   | 87-012-270-080 | C-CAP,U 470P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0411   | 87-010-427-080 | C-CAP,S 0.039-25 Z F GRM   | a               | b               |
| MAIN      |  | O C | 0417   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0431   | 87-012-268-080 | C-CAP,U 330P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0432   | 87-012-268-080 | C-CAP,U 330P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0433   | 87-012-276-080 | C-CAP,U 1500P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0434   | 87-012-276-080 | C-CAP,U 1500P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0503   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0504   | 87-A10-039-080 | C-CAP,U 470P-50 J CH       | a               | b               |
| MAIN      |  | O C | 0506   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0507   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM     | a               | b               |
| MAIN      |  | O C | 0508   | 87-012-278-080 | C-CAP,U 2200P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0509   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | O C | 0510   | 87-010-406-080 | CAP,E 22-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0513   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0519   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM    | a               | b               |
| MAIN      |  | O C | 0521   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0522   | 87-012-282-080 | C-CAP,U 4700P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0541   | 87-012-268-080 | C-CAP,U 330P-50 K B GRM    | a               | b               |
| MAIN      |  | O C | 0542   | 87-012-276-080 | C-CAP,U 1500P-50 K B GRM   | a               | b               |
| MAIN      |  | O C | 0580   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0581   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
| MAIN      |  | O C | 0582   | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM     | a               | b               |
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0583   | 87-010-190-080 | C-CAP,S 0.01-50 Z F C2012  | a               | b               |
| MAIN      |  | O C | 0601   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0602   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0603   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0604   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0605   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0606   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0621   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0622   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0623   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | O C | 0624   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0625   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0626   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM   | a               | b               |
| MAIN      |  | O C | 0631   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0632   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0633   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0634   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0635   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0636   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0641   | 87-010-405-080 | CAP,E 10-50 M 11L SME      | a               | b               |
|           |  |     |        |                |                            | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0642   | 87-010-405-080 | CAP,E 10-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0643   | 87-010-405-080 | CAP,E 10-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0644   | 87-010-405-080 | CAP,E 10-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0645   | 87-010-405-080 | CAP,E 10-50 M 11L SME      | a               | b               |
| MAIN      |  | O C | 0646   | 87-010-405-080 | CAP,E 10-50 M 11L SME      | a               | b               |
| MAIN      |  | X C | 0651   | 88-707-938-810 | CAP,M 0.22-50 J MT         | a               | b               |
| MAIN      |  | X C | 0652   | 88-707-938-810 | CAP,M 0.22-50 J MT         | a               | b               |
| MAIN      |  | X C | 0653   | 88-707-938-810 | CAP,M 0.22-50 J MT         | a               | b               |
| MAIN      |  | X C | 0654   | 88-707-938-810 | CAP,M 0.22-50 J MT         | a               | b               |
| MAIN      |  | X C | 0655   | 88-700-910-810 | CAP,M 0.1-50 J AMZV        | a               | b               |
|           |  |     |        |                |                            |                 |                 |
| MAIN      |  | X C | 0656   | 88-700-910-810 | CAP,M 0.1-50 J AMZV        | a               | b               |
| MAIN      |  | X C | 0657   | 88-700-910-810 | CAP,M 0.1-50 J AMZV        | a               | b               |
| MAIN      |  | X C | 0658   | 88-700-910-810 | CAP,M 0.1-50 J AMZV        | a               | b               |
| MAIN      |  | X C | 0659   | 88-700-720-810 | CAP,M 4700P-50 J AMZV      | a               | b               |
| MAIN      |  | X C | 0660   | 88-700-720-810 | CAP,M 4700P-50 J AMZV      | a               | b               |
| MAIN      |  | O C | 0661   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0662   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0663   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0665   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |
| MAIN      |  | O C | 0666   | 87-010-404-080 | CAP,E 4.7-50 M 11L SME     | a               | b               |

## ELECTRICAL PARTS LIST -11/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO  | PARTS-NO       | PARTS-NAME                     | SUFFIX&MODEL    |                 |
|-----------|--|-----|---------|----------------|--------------------------------|-----------------|-----------------|
|           |  |     |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0671    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0672    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0673    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0674    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0681    | 87-010-263-080 | CAP,E 100-10 M 11L SME         | a               | b               |
| MAIN      |  | O C | 0682    | 87-010-383-080 | CAP,E 33-25 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0683    | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM       | a               | b               |
| MAIN      |  | O C | 0690    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0691    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0692    | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM         | a               | b               |
|           |  |     |         |                |                                |                 |                 |
| MAIN      |  | O C | 0693    | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM         | a               | b               |
| MAIN      |  | O C | 0694    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0695    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0696    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0697    | 87-A11-148-080 | CAP,TC U 0.1-50 Z F            | a               | b               |
| MAIN      |  | O C | 0701    | 87-010-407-080 | CAP,E 33-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0702    | 87-010-407-080 | CAP,E 33-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0703    | 87-010-407-080 | CAP,E 33-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0711    | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM       | a               | b               |
| MAIN      |  | O C | 0712    | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM       | a               | b               |
|           |  |     |         |                |                                |                 |                 |
|           |  |     |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | O C | 0713    | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM       | a               | b               |
| MAIN      |  | O C | 0714    | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM       | a               | b               |
| MAIN      |  | O C | 0715    | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM       | a               | b               |
| MAIN      |  | O C | 0716    | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM       | a               | b               |
| MAIN      |  | O C | 0717    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0730    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0731    | 87-012-188-080 | C-CAP,U 47P-50 J CH GRM        | a               | b               |
| MAIN      |  | O C | 0732    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0733    | 87-012-188-080 | C-CAP,U 47P-50 J CH GRM        | a               | b               |
| MAIN      |  | O C | 0734    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
|           |  |     |         |                |                                |                 |                 |
| MAIN      |  | O C | 0735    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0736    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0737    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0738    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0739    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0761    | 87-010-383-080 | CAP,E 33-25 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0762    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0763    | 87-010-383-080 | CAP,E 33-25 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0764    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0781    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
|           |  |     |         |                |                                |                 |                 |
|           |  |     |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | X C | 0801    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |  | O C | 0803    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0804    | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM         | a               | b               |
| MAIN      |  | O C | 0805    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0806    | 87-010-759-080 | C-CAP,U 0.1-25 Z F CM/CB       | a               | b               |
| MAIN      |  | O C | 0807    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0808    | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM         | a               | b               |
| MAIN      |  | O C | 0812    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0900    | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM       | a               | b               |
| MAIN      |  | O C | 0901    | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM        | a               | b               |
|           |  |     |         |                |                                |                 |                 |
| MAIN      |  | O C | 0902    | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM        | a               | b               |
| MAIN      |  | O C | 0904    | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM        | a               | b               |
| MAIN      |  | O C | 0905    | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM        | a               | b               |
| MAIN      |  | O C | 0906    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0907    | 87-012-270-080 | C-CAP,U 470P-50 K B GRM        | a               | b               |
| MAIN      |  | O C | 0908    | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM         | a               | b               |
| MAIN      |  | O C | 0909    | 87-010-405-080 | CAP,E 10-50 M 11L SME          | a               | b               |
| MAIN      |  | O C | 0910    | 87-012-199-080 | C-CAP,U 220P-50 J CH GRM       | a               | b               |
| MAIN      |  | O C | 0911    | 87-012-199-080 | C-CAP,U 220P-50 J CH GRM       | a               | b               |
| MAIN      |  | X   | CLP0001 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
|           |  |     |         |                |                                |                 |                 |
|           |  |     |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |  | X   | CLP0006 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0007 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0008 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0009 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0011 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0012 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0013 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0014 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | X   | CLP0015 | 87-A60-884-010 | PIN,DIA1 COATING-SHS           | a               | b               |
| MAIN      |  | O   | CN 0004 | 87-A60-851-010 | CONN,9P V VH                   | a               | b               |
|           |  |     |         |                |                                |                 |                 |
| MAIN      |  | O   | CN 0007 | 87-A60-620-010 | CONN,3P V 2MM JMT              | a               | b               |
| MAIN      |  | O   | CN 0602 | 87-009-036-010 | CONN,8P V WHT PH               | a               | b               |
| MAIN      |  | X   | CN 0603 | 87-099-024-010 | CONN,22P V BLK 6216            | a               | b               |
| MAIN      |  | O   | CN 0604 | 87-A60-998-010 | CONN,15P V BLK TAC-L15X-A3     | a               | b               |
| MAIN      |  | O   | CN 0606 | 87-099-018-010 | CONN,16P V BLK 6216            | a               | b               |
| MAIN      |  | O   | CN 0693 | 87-099-020-010 | CONN,18P V BLK 6216            | a               | b               |
| MAIN      |  | O   | CN 0694 | 87-099-018-010 | CONN,16P V BLK 6216            | a               | b               |
| MAIN      |  | O   | CNA0201 | 8C-AR5-650-010 | CONN ASSY,5P -2/3P SDN (CAR-5) | a               | b               |
| MAIN      |  | S   | D 0011  | 87-A40-673-090 | DIODE,D10XB20                  | a               | b               |
| MAIN      |  | S   | D 0021  | 87-A40-547-090 | DIODE,D5SBA20                  | a               | b               |



## ELECTRICAL PARTS LIST -12/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C   | REF-NO | PARTS-NO       | PARTS-NAME           | SUFFIX&MODEL    |                 |
|-----------|---|-----|--------|----------------|----------------------|-----------------|-----------------|
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | S D | 0031   | 87-A40-393-090 | DIODE,1N5402GW (F20) | a               | b               |
| MAIN      |   | S D | 0032   | 87-A40-393-090 | DIODE,1N5402GW (F20) | a               | b               |
| MAIN      |   | S D | 0034   | 87-070-274-080 | DIODE,1N4003 SEM     | a               | b               |
| MAIN      |   | S D | 0041   | 87-A40-313-080 | C-DIODE,MC2840       | a               | b               |
| MAIN      |   | S D | 0042   | 87-A40-313-080 | C-DIODE,MC2840       | a               | b               |
| MAIN      |   | S D | 0043   | 87-A40-270-080 | C-DIODE,MC2838       | a               | b               |
| MAIN      |   | S D | 0044   | 87-A40-269-080 | C-DIODE,MC2836       | a               | b               |
| MAIN      |   | S D | 0045   | 87-A40-781-080 | ZENER,UZ36BSA        | a               | b               |
| MAIN      |   | S D | 0046   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0047   | 87-A40-768-080 | ZENER,UZ16BSA        | a               | b               |
| MAIN      |   | S D | 0051   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0052   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0054   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0055   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0071   | 87-A40-778-080 | ZENER,UZ30BSD        | a               | b               |
| MAIN      |   | S D | 0075   | 87-A40-313-080 | C-DIODE,MC2840       | a               | b               |
| MAIN      |   | S D | 0076   | 87-A40-313-080 | C-DIODE,MC2840       | a               | b               |
| MAIN      |   | S D | 0101   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0102   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0103   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | S D | 0104   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0105   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0106   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0111   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0112   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0113   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0114   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0115   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0116   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0121   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0122   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0123   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0124   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0131   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0201   | 87-A40-646-010 | DIODE,FMB-G16L       | a               | b               |
| MAIN      |   | S D | 0202   | 87-A40-646-010 | DIODE,FMB-G16L       | a               | b               |
| MAIN      |   | S D | 0203   | 87-A40-770-080 | ZENER,UZ20BSA        | a               | b               |
| MAIN      |   | S D | 0204   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0205   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0206   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | S D | 0207   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0208   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0209   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0210   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0211   | 87-A40-768-080 | ZENER,UZ16BSA        | a               | b               |
| MAIN      |   | S D | 0231   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0232   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0233   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0234   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0261   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0281   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0282   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0301   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0302   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0303   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0304   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0305   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0306   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0311   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0312   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
|           |   |     |        |                |                      | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | S D | 0313   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0314   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0315   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0316   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0321   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0322   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0325   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0326   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0381   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0401   | 87-A40-646-010 | DIODE,FMB-G16L       | a               | b               |
| MAIN      |   | S D | 0402   | 87-A40-646-010 | DIODE,FMB-G16L       | a               | b               |
| MAIN      |   | S D | 0403   | 87-A40-770-080 | ZENER,UZ20BSA        | a               | b               |
| MAIN      |   | S D | 0404   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0405   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0406   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0407   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0408   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0409   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0410   | 87-020-465-080 | DIODE,1SS133         | a               | b               |
| MAIN      |   | S D | 0411   | 87-A40-768-080 | ZENER,UZ16BSA        | a               | b               |

## ELECTRICAL PARTS LIST -13/26

! =  SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C    | REF-NO  | PARTS-NO       | PARTS-NAME                     | SUFFIX&MODEL    |                 |
|-----------|---|------|---------|----------------|--------------------------------|-----------------|-----------------|
|           |   |      |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | S D  | 0431    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0432    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0435    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0436    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0451    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0453    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0501    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0502    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0504    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0505    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0506    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0508    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0510    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0511    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0581    | 87-020-465-080 | DIODE,1SS133                   | a               | b               |
| MAIN      |   | S D  | 0681    | 87-A40-754-080 | ZENER,UZ6.8BSC                 | a               | b               |
| MAIN      |   | S D  | 0761    | 87-A40-754-080 | ZENER,UZ6.8BSC                 | a               | b               |
| MAIN      |   | S D  | 0762    | 87-A40-754-080 | ZENER,UZ6.8BSC                 | a               | b               |
| MAIN      |   | O    | FFC0003 | 88-916-121-110 | FF-CABLE,16P 1.25 120MM        | a               | b               |
| MAIN      |   | O    | FFC0004 | 88-918-221-110 | FF-CABLE,18P 1.25 220MM        | a               | b               |
|           |   |      |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | O    | FFC0005 | 88-916-191-110 | FF-CABLE,16P 1.25 190MM        | a               | b               |
| MAIN      |   | O    | FFC0006 | 88-922-121-110 | FF-CABLE,22P 1.25 120MM        | a               | b               |
| MAIN      |   | S IC | 0002    | 87-A21-368-010 | IC,NJM7812FA(A)                | a               | b               |
| MAIN      |   | S IC | 0501    | 87-A22-267-030 | C-IC,BD3811K1                  | a               | b               |
| MAIN      |   | S IC | 0701    | 87-A22-287-040 | C-IC,NJM2279M                  | a               | b               |
| MAIN      |   | S IC | 0801    | 87-017-888-080 | C-IC,NJM4558MD                 | a               | b               |
| MAIN      |   | S IC | 0900    | 87-A20-440-040 | C-IC,BU1920FS                  | a               | b               |
| MAIN      |   | O J  | 0101    | 87-A61-877-010 | TERMINAL,SP 4P SCREW LTS0420-1 | a               | b               |
| MAIN      |   | O J  | 0201    | 87-A60-617-110 | TERMINAL,SP 4P (MSC)           | a               | b               |
| MAIN      |   | O J  | 0300    | 87-A61-860-110 | TERMINAL,SP 6P CJ-9033-06-0203 | a               | b               |
| MAIN      |   | O J  | 0601    | 87-A61-863-010 | JACK,PIN 3P B/W/R W/E          | a               | b               |
| MAIN      |   | O J  | 0602    | 87-A61-864-010 | JACK,PIN 4P W/R W/O E          | a               | b               |
| MAIN      |   | X J  | 0603    | 87-A61-866-010 | JACK,PIN 6P OWR/BWR W/E        | a               | b               |
| MAIN      |   | O J  | 0701    | 87-A61-865-010 | JACK,PIN 6P YWR/YWR W/E        | a               | b               |
| MAIN      |   | O J  | 0702    | 87-A61-865-010 | JACK,PIN 6P YWR/YWR W/E        | a               | b               |
| MAIN      |   | O J  | 0731    | 87-A61-862-010 | JACK,PIN 3P Y/W/R W/E          | a               | b               |
| MAIN      |   | X JR | 0010    | 88-129-000-080 | C-JUMPER, 3216                 | a               | b               |
| MAIN      |   | X JR | 0011    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0012    | 88-129-000-080 | C-JUMPER, 3216                 | a               | b               |
| MAIN      |   | X JR | 0014    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
|           |   |      |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | X JR | 0061    | 88-128-102-080 | C-RES, 1K-1/8W J               | a               | b               |
| MAIN      |   | O JR | 0062    | 88-108-102-080 | C-RES,U 1K-1/16W J             | a               | b               |
| MAIN      |   | X JR | 0111    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0113    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0211    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0303    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0304    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0311    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0312    | 88-129-000-080 | C-JUMPER, 3216                 | a               | b               |
| MAIN      |   | X JR | 0511    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0512    | 88-129-000-080 | C-JUMPER, 3216                 | a               | b               |
| MAIN      |   | X JR | 0605    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0606    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0607    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0608    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0611    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0612    | 88-129-000-080 | C-JUMPER, 3216                 | a               | b               |
| MAIN      |   | X JR | 0615    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0616    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JR | 0617    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
|           |   |      |         |                |                                | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      |   | X JR | 0912    | 88-108-000-080 | C-JUMPER,U                     | a               | b               |
| MAIN      |   | X JW | 0103    | 88-121-223-080 | RES,22K-1/8W J                 | a               | b               |
| MAIN      |   | X JW | 0104    | 88-121-223-080 | RES,22K-1/8W J                 | a               | b               |
| MAIN      |   | X JW | 0303    | 88-121-223-080 | RES,22K-1/8W J                 | a               | b               |
| MAIN      |   | X JW | 0304    | 88-121-223-080 | RES,22K-1/8W J                 | a               | b               |
| MAIN      |   | X JW | 0505    | 88-121-223-080 | RES,22K-1/8W J                 | a               | b               |
| MAIN      |   | O JW | 0648    | 87-008-372-080 | FLTR,EMI BL01 RN1              | a               | b               |
| MAIN      |   | O L  | 0111    | 87-A50-610-010 | COIL,1UH K(MDEC)               | a               | b               |
| MAIN      |   | O L  | 0112    | 87-A50-610-010 | COIL,1UH K(MDEC)               | a               | b               |
| MAIN      |   | O L  | 0211    | 87-A50-610-010 | COIL,1UH K(MDEC)               | a               | b               |
| MAIN      |   | O L  | 0212    | 87-A50-610-010 | COIL,1UH K(MDEC)               | a               | b               |
| MAIN      |   | O L  | 0311    | 87-A50-610-010 | COIL,1UH K(MDEC)               | a               | b               |
| MAIN      |   | O L  | 0312    | 87-A50-610-010 | COIL,1UH K(MDEC)               | a               | b               |
| MAIN      |   | O L  | 0581    | 87-A50-610-010 | COIL,1UH K(MDEC)               | a               | b               |
| MAIN      |   | X L  | 0761    | 88-121-100-080 | RES,10-1/8W J                  | a               | b               |
| MAIN      |   | X L  | 0762    | 88-100-000-010 | PLATING-JW, 0.58 SN95          | a               | b               |
| MAIN      |   | O L  | 0900    | 87-005-847-080 | COIL,2.2UH K CECS              | a               | b               |
| MAIN      |   | X PR | 0011    | 88-100-000-010 | PLATING-JW, 0.58 SN95          | a               | b               |
| MAIN      |   | X PR | 0012    | 88-100-000-010 | PLATING-JW, 0.58 SN95          | a               | b               |
| MAIN      |   | X PR | 0013    | 88-100-000-010 | PLATING-JW, 0.58 SN95          | a               | b               |

# ELECTRICAL PARTS LIST -14/26

! = ⚠ SAFTY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO | PARTS-NAME     | SUFFIX&MODEL          |                 |
|-----------|--|-----|--------|----------|----------------|-----------------------|-----------------|
|           |  |     |        |          |                | AV-NW50<br>EZBC       | AV-NW50<br>EZSC |
| MAIN      |  | X   | PR     | 0014     | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               |
| MAIN      |  | X   | PR     | 0201     | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               |
| MAIN      |  | X   | PR     | 0202     | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               |
| MAIN      |  | X   | PR     | 0401     | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               |
| MAIN      |  | X   | PR     | 0402     | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a               |
| MAIN      |  | S   | Q      | 0011     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0012     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0013     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0014     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0015     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0022     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0023     | 87-A30-686-010 | TR,2SA2057Q           | a               |
| MAIN      |  | S   | Q      | 0025     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0026     | 87-A30-289-040 | C-TR,2SA1037AK(Q)     | a               |
| MAIN      |  | S   | Q      | 0027     | 87-A30-686-010 | TR,2SA2057Q           | a               |
| MAIN      |  | S   | Q      | 0031     | 87-A30-494-080 | TR,2SA1980G           | a               |
| MAIN      |  | S   | Q      | 0032     | 87-A30-494-080 | TR,2SA1980G           | a               |
| MAIN      |  | S   | Q      | 0033     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0101     | 87-A30-675-040 | C-TR,2SD1306NE07TL    | a               |
| MAIN      |  | S   | Q      | 0102     | 87-A30-675-040 | C-TR,2SD1306NE07TL    | a               |
|           |  |     |        |          |                | AV-NW50<br>EZBC       | AV-NW50<br>EZSC |
| MAIN      |  | S   | Q      | 0103     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0104     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0105     | 87-A30-669-040 | C-TR,SBT5401          | a               |
| MAIN      |  | S   | Q      | 0106     | 87-A30-669-040 | C-TR,SBT5401          | a               |
| MAIN      |  | S   | Q      | 0107     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0108     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0111     | 87-A30-696-080 | TR,2SA1145Y           | a               |
| MAIN      |  | S   | Q      | 0112     | 87-A30-696-080 | TR,2SA1145Y           | a               |
| MAIN      |  | S   | Q      | 0113     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0114     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0115     | 87-A30-697-080 | TR,2SC2705Y           | a               |
| MAIN      |  | S   | Q      | 0116     | 87-A30-697-080 | TR,2SC2705Y           | a               |
| MAIN      |  | S   | Q      | 0117     | 87-A30-630-080 | TR,2SC5343GL          | a               |
| MAIN      |  | S   | Q      | 0118     | 87-A30-630-080 | TR,2SC5343GL          | a               |
| MAIN      |  | S   | Q      | 0121     | 87-A30-097-010 | TR,FN1016             | a               |
| MAIN      |  | S   | Q      | 0122     | 87-A30-097-010 | TR,FN1016             | a               |
| MAIN      |  | S   | Q      | 0123     | 87-A30-098-010 | TR,FP1016             | a               |
| MAIN      |  | S   | Q      | 0124     | 87-A30-098-010 | TR,FP1016             | a               |
| MAIN      |  | S   | Q      | 0125     | 87-A30-662-040 | C-TR,2SD814A(RS)      | a               |
| MAIN      |  | S   | Q      | 0126     | 87-A30-662-040 | C-TR,2SD814A(RS)      | a               |
|           |  |     |        |          |                | AV-NW50<br>EZBC       | AV-NW50<br>EZSC |
| MAIN      |  | S   | Q      | 0132     | 87-A30-494-080 | TR,2SA1980G           | a               |
| MAIN      |  | S   | Q      | 0191     | 87-A30-663-040 | C-TR,2SB792A(RS)      | a               |
| MAIN      |  | S   | Q      | 0192     | 87-A30-538-040 | C-TR,SRA2202S         | a               |
| MAIN      |  | S   | Q      | 0201     | 87-A30-186-010 | FET,2SK3053           | a               |
| MAIN      |  | S   | Q      | 0202     | 87-A30-186-010 | FET,2SK3053           | a               |
| MAIN      |  | S   | Q      | 0203     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0204     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0205     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0206     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0207     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0208     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0210     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
| MAIN      |  | S   | Q      | 0251     | 87-A30-663-040 | C-TR,2SB792A(RS)      | a               |
| MAIN      |  | S   | Q      | 0252     | 87-A30-663-040 | C-TR,2SB792A(RS)      | a               |
| MAIN      |  | S   | Q      | 0253     | 87-A30-662-040 | C-TR,2SD814A(RS)      | a               |
| MAIN      |  | S   | Q      | 0261     | 87-A30-268-040 | C-TR,2SA1514K(S)      | a               |
| MAIN      |  | S   | Q      | 0262     | 87-A30-662-040 | C-TR,2SD814A(RS)      | a               |
| MAIN      |  | S   | Q      | 0281     | 87-A30-494-080 | TR,2SA1980G           | a               |
| MAIN      |  | S   | Q      | 0282     | 87-A30-494-080 | TR,2SA1980G           | a               |
| MAIN      |  | S   | Q      | 0291     | 87-A30-075-080 | C-TR,2SA1235F         | a               |
|           |  |     |        |          |                | AV-NW50<br>EZBC       | AV-NW50<br>EZSC |
| MAIN      |  | S   | Q      | 0301     | 87-A30-675-040 | C-TR,2SD1306NE07TL    | a               |
| MAIN      |  | S   | Q      | 0302     | 87-A30-675-040 | C-TR,2SD1306NE07TL    | a               |
| MAIN      |  | S   | Q      | 0303     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0304     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0305     | 87-A30-669-040 | C-TR,SBT5401          | a               |
| MAIN      |  | S   | Q      | 0306     | 87-A30-669-040 | C-TR,SBT5401          | a               |
| MAIN      |  | S   | Q      | 0307     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0308     | 87-A30-659-040 | C-TR,2SC4117GR.BL     | a               |
| MAIN      |  | S   | Q      | 0311     | 87-A30-696-080 | TR,2SA1145Y           | a               |
| MAIN      |  | S   | Q      | 0312     | 87-A30-696-080 | TR,2SA1145Y           | a               |
| MAIN      |  | S   | Q      | 0313     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0314     | 87-A30-076-080 | C-TR,2SC3052F         | a               |
| MAIN      |  | S   | Q      | 0315     | 87-A30-697-080 | TR,2SC2705Y           | a               |
| MAIN      |  | S   | Q      | 0316     | 87-A30-697-080 | TR,2SC2705Y           | a               |
| MAIN      |  | S   | Q      | 0317     | 87-A30-630-080 | TR,2SC5343GL          | a               |
| MAIN      |  | S   | Q      | 0318     | 87-A30-630-080 | TR,2SC5343GL          | a               |
| MAIN      |  | S   | Q      | 0321     | 87-A30-097-010 | TR,FN1016             | a               |
| MAIN      |  | S   | Q      | 0322     | 87-A30-097-010 | TR,FN1016             | a               |
| MAIN      |  | S   | Q      | 0323     | 87-A30-098-010 | TR,FP1016             | a               |
| MAIN      |  | S   | Q      | 0324     | 87-A30-098-010 | TR,FP1016             | a               |

ELECTRICAL PARTS LIST -15/26

!

= ⚠ SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.  
However, please note that not all components will be available as spare parts for after-sales service.  
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.  
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO       | PARTS-NAME           | SUFFIX&MODEL |         |
|-----------|--|-----|--------|----------------|----------------------|--------------|---------|
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | S Q | 0325   | 87-A30-662-040 | C-TR,2SD814A(RS)     | a            | b       |
| MAIN      |  | S Q | 0326   | 87-A30-662-040 | C-TR,2SD814A(RS)     | a            | b       |
| MAIN      |  | S Q | 0381   | 87-A30-494-080 | TR,2SA1980G          | a            | b       |
| MAIN      |  | S Q | 0391   | 87-A30-663-040 | C-TR,2SB792A(RS)     | a            | b       |
| MAIN      |  | S Q | 0392   | 87-A30-538-040 | C-TR,SRA2202S        | a            | b       |
| MAIN      |  | S Q | 0395   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0401   | 87-A30-186-010 | FET,2SK3053          | a            | b       |
| MAIN      |  | S Q | 0402   | 87-A30-186-010 | FET,2SK3053          | a            | b       |
| MAIN      |  | S Q | 0403   | 87-A30-076-080 | C-TR,2SC3052F        | a            | b       |
| MAIN      |  | S Q | 0404   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | S Q | 0405   | 87-A30-076-080 | C-TR,2SC3052F        | a            | b       |
| MAIN      |  | S Q | 0406   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0407   | 87-A30-076-080 | C-TR,2SC3052F        | a            | b       |
| MAIN      |  | S Q | 0408   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0410   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0501   | 87-A30-675-040 | C-TR,2SD1306NE07TL   | a            | b       |
| MAIN      |  | S Q | 0502   | 87-A30-659-040 | C-TR,2SC4117GR.BL    | a            | b       |
| MAIN      |  | S Q | 0503   | 87-A30-669-040 | C-TR,SBT5401         | a            | b       |
| MAIN      |  | S Q | 0504   | 87-A30-659-040 | C-TR,2SC4117GR.BL    | a            | b       |
| MAIN      |  | S Q | 0506   | 87-A30-696-080 | TR,2SA1145Y          | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | S Q | 0507   | 87-A30-630-080 | TR,2SC5343GL         | a            | b       |
| MAIN      |  | S Q | 0508   | 87-A30-697-080 | TR,2SC2705Y          | a            | b       |
| MAIN      |  | S Q | 0509   | 87-A30-076-080 | C-TR,2SC3052F        | a            | b       |
| MAIN      |  | S Q | 0511   | 87-A30-097-010 | TR,FN1016            | a            | b       |
| MAIN      |  | S Q | 0512   | 87-A30-098-010 | TR,FP1016            | a            | b       |
| MAIN      |  | S Q | 0513   | 87-A30-662-040 | C-TR,2SD814A(RS)     | a            | b       |
| MAIN      |  | S Q | 0554   | 87-A30-663-040 | C-TR,2SB792A(RS)     | a            | b       |
| MAIN      |  | S Q | 0555   | 87-A30-538-040 | C-TR,SRA2202S        | a            | b       |
| MAIN      |  | S Q | 0581   | 87-A30-494-080 | TR,2SA1980G          | a            | b       |
| MAIN      |  | S Q | 0595   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | S Q | 0681   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0682   | 87-A30-612-080 | TR,2SC5343Y          | a            | b       |
| MAIN      |  | S Q | 0683   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0684   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0801   | 87-A30-675-040 | C-TR,2SD1306NE07TL   | a            | b       |
| MAIN      |  | S Q | 0821   | 87-A30-075-080 | C-TR,2SA1235F        | a            | b       |
| MAIN      |  | S Q | 0900   | 87-A30-076-080 | C-TR,2SC3052F        | a            | b       |
| MAIN      |  | S Q | 0901   | 87-A30-076-080 | C-TR,2SC3052F        | a            | b       |
| MAIN      |  | X R | 0010   | 88-128-123-080 | C-RES, 12K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0011   | 88-128-104-080 | C-RES, 100K-1/8W J   | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0012   | 88-128-104-080 | C-RES, 100K-1/8W J   | a            | b       |
| MAIN      |  | X R | 0013   | 88-128-123-080 | C-RES, 12K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0014   | 88-128-123-080 | C-RES, 12K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0015   | 88-128-123-080 | C-RES, 12K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0020   | 88-108-392-080 | C-RES,U 3.9K-1/16W J | a            | b       |
| MAIN      |  | X R | 0021   | 88-108-273-080 | C-RES,U 27K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0022   | 88-108-273-080 | C-RES,U 27K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0031   | 88-129-000-080 | C-JUMPER, 3216       | a            | b       |
| MAIN      |  | X R | 0034   | 88-128-102-080 | C-RES, 1K-1/8W J     | a            | b       |
| MAIN      |  | X R | 0035   | 88-118-152-080 | C-RES,S 1.5K-1/10W J | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0036   | 88-118-152-080 | C-RES,S 1.5K-1/10W J | a            | b       |
| MAIN      |  | X R | 0037   | 88-108-394-080 | C-RES,U 390K-1/16W J | a            | b       |
| MAIN      |  | O R | 0038   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0039   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | O R | 0040   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0041   | 88-108-682-080 | C-RES,U 6.8K-1/16W J | a            | b       |
| MAIN      |  | O R | 0042   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | X R | 0043   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0044   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | O R | 0045   | 88-108-822-080 | C-RES,U 8.2K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0046   | 88-121-473-080 | RES,47K-1/8W J       | a            | b       |
| MAIN      |  | O R | 0047   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0053   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0054   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0059   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0060   | 88-108-102-080 | C-RES,U 1K-1/16W J   | a            | b       |
| MAIN      |  | X R | 0063   | 88-121-183-080 | RES,18K-1/8W J       | a            | b       |
| MAIN      |  | O R | 0064   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0065   | 88-121-183-080 | RES,18K-1/8W J       | a            | b       |
| MAIN      |  | O R | 0066   | 88-108-123-080 | C-RES,U 12K-1/16W J  | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0067   | 88-108-333-080 | C-RES,U 33K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0068   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0069   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0071   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0072   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0073   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0074   | 88-118-100-080 | C-RES,S 10-1/10W J   | a            | b       |
| MAIN      |  | O R | 0075   | 88-108-223-080 | C-RES,U 22K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0077   | 88-108-183-080 | C-RES,U 18K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0079   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |

ELECTRICAL PARTS LIST -16/26

!

=  SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO       | PARTS-NAME           | SUFFIX&MODEL |         |
|-----------|--|-----|--------|----------------|----------------------|--------------|---------|
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0101   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0102   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0105   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0106   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0107   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | O R | 0108   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | X R | 0109   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0110   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0111   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | O R | 0112   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | O R | 0113   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | O R | 0114   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | X R | 0115   | 88-108-821-080 | C-RES,U 820-1/16W J  | a            | b       |
| MAIN      |  | X R | 0116   | 88-108-821-080 | C-RES,U 820-1/16W J  | a            | b       |
| MAIN      |  | X R | 0117   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0118   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0119   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0120   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0121   | 88-108-152-080 | C-RES,U 1.5K-1/16W J | a            | b       |
| MAIN      |  | X R | 0122   | 88-108-152-080 | C-RES,U 1.5K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0123   | 88-118-560-080 | C-RES,S 56-1/10W J   | a            | b       |
| MAIN      |  | X R | 0124   | 88-118-560-080 | C-RES,S 56-1/10W J   | a            | b       |
| MAIN      |  | X R | 0125   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0126   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0127   | 88-118-101-080 | C-RES,S 100-1/10W J  | a            | b       |
| MAIN      |  | X R | 0128   | 88-118-101-080 | C-RES,S 100-1/10W J  | a            | b       |
| MAIN      |  | X R | 0129   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0130   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0131   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0132   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0133   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0134   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0135   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0136   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0137   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0138   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | O R | 0139   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0140   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | X R | 0141   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0142   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0143   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0144   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | O R | 0145   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0146   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0147   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0148   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0149   | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a            | b       |
| MAIN      |  | O R | 0150   | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0153   | 88-108-392-080 | C-RES,U 3.9K-1/16W J | a            | b       |
| MAIN      |  | X R | 0154   | 88-108-392-080 | C-RES,U 3.9K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0155   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0156   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0157   | 88-108-333-080 | C-RES,U 33K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0158   | 88-108-333-080 | C-RES,U 33K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0159   | 88-108-123-080 | C-RES,U 12K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0160   | 88-108-123-080 | C-RES,U 12K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0161   | 88-108-220-080 | C-RES,U 22-1/16W J   | a            | b       |
| MAIN      |  | X R | 0162   | 88-108-220-080 | C-RES,U 22-1/16W J   | a            | b       |
| MAIN      |  | X R | 0163   | 88-128-333-080 | C-RES, 33K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0164   | 88-128-333-080 | C-RES, 33K-1/8W J    | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | O R | 0165   | 88-108-563-080 | C-RES,U 56K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0166   | 88-128-563-080 | C-RES, 56K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0167   | 88-121-683-080 | RES,68K-1/8W J       | a            | b       |
| MAIN      |  | X R | 0168   | 88-121-683-080 | RES,68K-1/8W J       | a            | b       |
| MAIN      |  | X R | 0169   | 88-108-182-080 | C-RES,U 1.8K-1/16W J | a            | b       |
| MAIN      |  | X R | 0170   | 88-108-182-080 | C-RES,U 1.8K-1/16W J | a            | b       |
| MAIN      |  | X R | 0171   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0172   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0173   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0174   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0175   | 88-128-100-080 | C-RES, 10-1/8W J     | a            | b       |
| MAIN      |  | X R | 0176   | 88-121-100-080 | RES,10-1/8W J        | a            | b       |
| MAIN      |  | X R | 0177   | 88-128-100-080 | C-RES, 10-1/8W J     | a            | b       |
| MAIN      |  | X R | 0178   | 88-128-100-080 | C-RES, 10-1/8W J     | a            | b       |
| MAIN      |  | X R | 0179   | 88-108-151-080 | C-RES,U 150-1/16W J  | a            | b       |
| MAIN      |  | X R | 0180   | 88-108-151-080 | C-RES,U 150-1/16W J  | a            | b       |
| MAIN      |  | O R | 0181   | 87-A00-879-050 | RES,M/F 270-1W J     | a            | b       |
| MAIN      |  | O R | 0182   | 87-A00-879-050 | RES,M/F 270-1W J     | a            | b       |
| MAIN      |  | O R | 0183   | 87-A00-878-050 | RES,M/F 220-1W J     | a            | b       |
| MAIN      |  | O R | 0184   | 87-A00-878-050 | RES,M/F 220-1W J     | a            | b       |

ELECTRICAL PARTS LIST -17/26

!

=  SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C | REF-NO | PARTS-NO | PARTS-NAME     | SUFFIX&MODEL         |         |   |
|-----------|-----|--------|----------|----------------|----------------------|---------|---|
|           |     |        |          |                | AV-NW50              | AV-NW50 |   |
|           |     |        |          |                | EZBC                 | EZSC    |   |
| MAIN      |     | X R    | 0185     | 88-128-220-080 | C-RES, 22-1/8W J     | a       | b |
| MAIN      |     | X R    | 0186     | 88-128-180-080 | C-RES, 18-1/8W J     | a       | b |
| MAIN      |     | X R    | 0187     | 88-128-180-080 | C-RES, 18-1/8W J     | a       | b |
| MAIN      |     | X R    | 0189     | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a       | b |
| MAIN      |     | X R    | 0190     | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a       | b |
| MAIN      |     | O R    | 0191     | 88-108-102-080 | C-RES,U 1K-1/16W J   | a       | b |
| MAIN      |     | X R    | 0192     | 88-128-473-080 | C-RES, 47K-1/8W J    | a       | b |
| MAIN      |     | X R    | 0193     | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a       | b |
| MAIN      |     | X R    | 0194     | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a       | b |
| MAIN      |     | X R    | 0203     | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a       | b |
| MAIN      |     | O R    | 0204     | 88-108-123-080 | C-RES,U 12K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0205     | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a       | b |
| MAIN      |     | O R    | 0206     | 88-108-473-080 | C-RES,U 47K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0207     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | X R    | 0208     | 88-108-331-080 | C-RES,U 330-1/16W J  | a       | b |
| MAIN      |     | X R    | 0209     | 88-118-820-080 | C-RES,S 82-1/10W J   | a       | b |
| MAIN      |     | O R    | 0210     | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a       | b |
| MAIN      |     | X R    | 0211     | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a       | b |
| MAIN      |     | O R    | 0212     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | X R    | 0213     | 88-108-152-080 | C-RES,U 1.5K-1/16W J | a       | b |
|           |     |        |          |                | AV-NW50              | AV-NW50 |   |
|           |     |        |          |                | EZBC                 | EZSC    |   |
| MAIN      |     | X R    | 0214     | 88-108-333-080 | C-RES,U 33K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0215     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0216     | 88-108-562-080 | C-RES,U 5.6K-1/16W J | a       | b |
| MAIN      |     | X R    | 0217     | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a       | b |
| MAIN      |     | X R    | 0218     | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a       | b |
| MAIN      |     | O R    | 0219     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | X R    | 0220     | 88-128-332-080 | C-RES, 3.3K-1/8W J   | a       | b |
| MAIN      |     | X R    | 0222     | 88-118-151-080 | C-RES,S 150-1/10W J  | a       | b |
| MAIN      |     | X R    | 0224     | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a       | b |
| MAIN      |     | O R    | 0226     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0228     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0229     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0230     | 88-108-153-080 | C-RES,U 15K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0231     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0232     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0233     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0234     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0235     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0236     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0237     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
|           |     |        |          |                | AV-NW50              | AV-NW50 |   |
|           |     |        |          |                | EZBC                 | EZSC    |   |
| MAIN      |     | O R    | 0238     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0241     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0242     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0243     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | O R    | 0244     | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a       | b |
| MAIN      |     | X R    | 0245     | 88-108-682-080 | C-RES,U 6.8K-1/16W J | a       | b |
| MAIN      |     | X R    | 0246     | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a       | b |
| MAIN      |     | O R    | 0247     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | X R    | 0248     | 88-128-472-080 | C-RES, 4.7K-1/8W J   | a       | b |
| MAIN      |     | X R    | 0249     | 88-128-472-080 | C-RES, 4.7K-1/8W J   | a       | b |
| MAIN      |     | X R    | 0251     | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a       | b |
| MAIN      |     | X R    | 0252     | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a       | b |
| MAIN      |     | X R    | 0253     | 88-128-473-080 | C-RES, 47K-1/8W J    | a       | b |
| MAIN      |     | O R    | 0254     | 88-108-102-080 | C-RES,U 1K-1/16W J   | a       | b |
| MAIN      |     | X R    | 0255     | 88-128-473-080 | C-RES, 47K-1/8W J    | a       | b |
| MAIN      |     | O R    | 0261     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0262     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | X R    | 0263     | 88-128-473-080 | C-RES, 47K-1/8W J    | a       | b |
| MAIN      |     | O R    | 0264     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0270     | 88-108-822-080 | C-RES,U 8.2K-1/16W J | a       | b |
|           |     |        |          |                | AV-NW50              | AV-NW50 |   |
|           |     |        |          |                | EZBC                 | EZSC    |   |
| MAIN      |     | X R    | 0275     | 88-128-100-080 | C-RES, 10-1/8W J     | a       | b |
| MAIN      |     | X R    | 0276     | 88-128-100-080 | C-RES, 10-1/8W J     | a       | b |
| MAIN      |     | X R    | 0277     | 88-128-100-080 | C-RES, 10-1/8W J     | a       | b |
| MAIN      |     | X R    | 0278     | 88-128-100-080 | C-RES, 10-1/8W J     | a       | b |
| MAIN      |     | X R    | 0281     | 88-128-220-080 | C-RES, 22-1/8W J     | a       | b |
| MAIN      |     | X R    | 0282     | 88-128-180-080 | C-RES, 18-1/8W J     | a       | b |
| MAIN      |     | X R    | 0283     | 88-128-180-080 | C-RES, 18-1/8W J     | a       | b |
| MAIN      |     | O R    | 0284     | 88-108-822-080 | C-RES,U 8.2K-1/16W J | a       | b |
| MAIN      |     | X R    | 0285     | 88-128-220-080 | C-RES, 22-1/8W J     | a       | b |
| MAIN      |     | X R    | 0286     | 88-128-180-080 | C-RES, 18-1/8W J     | a       | b |
| MAIN      |     | X R    | 0287     | 88-128-180-080 | C-RES, 18-1/8W J     | a       | b |
| MAIN      |     | O R    | 0288     | 88-108-822-080 | C-RES,U 8.2K-1/16W J | a       | b |
| MAIN      |     | X R    | 0291     | 88-108-683-080 | C-RES,U 68K-1/16W J  | a       | b |
| MAIN      |     | X R    | 0292     | 88-108-105-080 | C-RES,U 1M-1/16W J   | a       | b |
| MAIN      |     | O R    | 0293     | 88-108-103-080 | C-RES,U 10K-1/16W J  | a       | b |
| MAIN      |     | O R    | 0294     | 88-108-102-080 | C-RES,U 1K-1/16W J   | a       | b |
| MAIN      |     | X R    | 0295     | 88-128-153-080 | C-RES, 15K-1/8W J    | a       | b |
| MAIN      |     | X R    | 0296     | 88-128-153-080 | C-RES, 15K-1/8W J    | a       | b |
| MAIN      |     | X R    | 0297     | 88-128-153-080 | C-RES, 15K-1/8W J    | a       | b |
| MAIN      |     | X R    | 0298     | 88-128-153-080 | C-RES, 15K-1/8W J    | a       | b |

ELECTRICAL PARTS LIST -18/26

!

=  SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO       | PARTS-NAME           | SUFFIX&MODEL |         |
|-----------|--|-----|--------|----------------|----------------------|--------------|---------|
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0301   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0302   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0305   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0306   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0307   | 88-121-101-080 | RES,100-1/8W J       | a            | b       |
| MAIN      |  | O R | 0308   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | X R | 0309   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0310   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0311   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | O R | 0312   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | O R | 0313   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | O R | 0314   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | X R | 0315   | 88-108-821-080 | C-RES,U 820-1/16W J  | a            | b       |
| MAIN      |  | X R | 0316   | 88-108-821-080 | C-RES,U 820-1/16W J  | a            | b       |
| MAIN      |  | X R | 0317   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0318   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0319   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0320   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0321   | 88-108-152-080 | C-RES,U 1.5K-1/16W J | a            | b       |
| MAIN      |  | X R | 0322   | 88-108-152-080 | C-RES,U 1.5K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0323   | 88-118-560-080 | C-RES,S 56-1/10W J   | a            | b       |
| MAIN      |  | X R | 0324   | 88-118-560-080 | C-RES,S 56-1/10W J   | a            | b       |
| MAIN      |  | X R | 0325   | 88-121-222-080 | RES,2.2K-1/8W J      | a            | b       |
| MAIN      |  | X R | 0326   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0327   | 88-118-101-080 | C-RES,S 100-1/10W J  | a            | b       |
| MAIN      |  | X R | 0328   | 88-118-101-080 | C-RES,S 100-1/10W J  | a            | b       |
| MAIN      |  | X R | 0329   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0330   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0331   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0332   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0333   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0334   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0335   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0336   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0337   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0338   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | O R | 0339   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0340   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | X R | 0341   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0342   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0343   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0344   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | O R | 0345   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0346   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0347   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0348   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0349   | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a            | b       |
| MAIN      |  | O R | 0350   | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0353   | 88-108-392-080 | C-RES,U 3.9K-1/16W J | a            | b       |
| MAIN      |  | X R | 0354   | 88-108-392-080 | C-RES,U 3.9K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0355   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0356   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0357   | 88-108-333-080 | C-RES,U 33K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0358   | 88-108-333-080 | C-RES,U 33K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0359   | 88-108-123-080 | C-RES,U 12K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0360   | 88-108-123-080 | C-RES,U 12K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0361   | 88-108-220-080 | C-RES,U 22-1/16W J   | a            | b       |
| MAIN      |  | X R | 0362   | 88-108-220-080 | C-RES,U 22-1/16W J   | a            | b       |
| MAIN      |  | X R | 0363   | 88-128-333-080 | C-RES, 33K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0364   | 88-128-333-080 | C-RES, 33K-1/8W J    | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | O R | 0365   | 88-108-563-080 | C-RES,U 56K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0366   | 88-108-563-080 | C-RES,U 56K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0367   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0368   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0369   | 88-108-182-080 | C-RES,U 1.8K-1/16W J | a            | b       |
| MAIN      |  | X R | 0370   | 88-108-182-080 | C-RES,U 1.8K-1/16W J | a            | b       |
| MAIN      |  | X R | 0371   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0372   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0373   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0374   | 88-128-153-080 | C-RES, 15K-1/8W J    | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0375   | 88-121-100-080 | RES,10-1/8W J        | a            | b       |
| MAIN      |  | X R | 0376   | 88-121-100-080 | RES,10-1/8W J        | a            | b       |
| MAIN      |  | X R | 0377   | 88-128-100-080 | C-RES, 10-1/8W J     | a            | b       |
| MAIN      |  | X R | 0378   | 88-128-100-080 | C-RES, 10-1/8W J     | a            | b       |
| MAIN      |  | X R | 0379   | 88-108-151-080 | C-RES,U 150-1/16W J  | a            | b       |
| MAIN      |  | X R | 0380   | 88-108-151-080 | C-RES,U 150-1/16W J  | a            | b       |
| MAIN      |  | X R | 0381   | 88-128-220-080 | C-RES, 22-1/8W J     | a            | b       |
| MAIN      |  | X R | 0382   | 88-128-180-080 | C-RES, 18-1/8W J     | a            | b       |
| MAIN      |  | X R | 0383   | 88-128-180-080 | C-RES, 18-1/8W J     | a            | b       |
| MAIN      |  | O R | 0384   | 88-108-822-080 | C-RES,U 8.2K-1/16W J | a            | b       |

ELECTRICAL PARTS LIST -19/26

!

=  SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO       | PARTS-NAME           | SUFFIX&MODEL |         |
|-----------|--|-----|--------|----------------|----------------------|--------------|---------|
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0389   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0390   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0391   | 88-108-102-080 | C-RES,U 1K-1/16W J   | a            | b       |
| MAIN      |  | X R | 0392   | 88-128-473-080 | C-RES, 47K-1/8W J    | a            | b       |
| MAIN      |  | X R | 0393   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0394   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0395   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0396   | 88-108-105-080 | C-RES,U 1M-1/16W J   | a            | b       |
| MAIN      |  | O R | 0397   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0398   | 88-121-102-080 | RES,1K-1/8W J        | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0403   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | O R | 0405   | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a            | b       |
| MAIN      |  | O R | 0406   | 88-108-473-080 | C-RES,U 47K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0407   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0408   | 88-108-331-080 | C-RES,U 330-1/16W J  | a            | b       |
| MAIN      |  | X R | 0409   | 88-118-121-080 | C-RES,S 120-1/10W J  | a            | b       |
| MAIN      |  | O R | 0410   | 88-108-272-080 | C-RES,U 2.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0411   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0412   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0413   | 88-108-152-080 | C-RES,U 1.5K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0414   | 88-108-333-080 | C-RES,U 33K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0415   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0416   | 88-108-562-080 | C-RES,U 5.6K-1/16W J | a            | b       |
| MAIN      |  | X R | 0417   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0418   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | O R | 0419   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0420   | 88-128-332-080 | C-RES, 3.3K-1/8W J   | a            | b       |
| MAIN      |  | X R | 0422   | 88-118-331-080 | C-RES,S 330-1/10W J  | a            | b       |
| MAIN      |  | X R | 0424   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0426   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | O R | 0428   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | X R | 0429   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | O R | 0430   | 88-108-153-080 | C-RES,U 15K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0431   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0432   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0433   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0434   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0435   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0436   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0437   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | O R | 0438   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0441   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0442   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | O R | 0443   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | X R | 0445   | 88-108-682-080 | C-RES,U 6.8K-1/16W J | a            | b       |
| MAIN      |  | X R | 0446   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0447   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0448   | 88-128-472-080 | C-RES, 4.7K-1/8W J   | a            | b       |
| MAIN      |  | X R | 0449   | 88-128-472-080 | C-RES, 4.7K-1/8W J   | a            | b       |
| MAIN      |  | O R | 0452   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0454   | 88-128-332-080 | C-RES, 3.3K-1/8W J   | a            | b       |
| MAIN      |  | O R | 0456   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | X R | 0501   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0503   | 88-108-103-080 | C-RES,U 10K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0504   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | X R | 0505   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0506   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | O R | 0507   | 88-108-101-080 | C-RES,U 100-1/16W J  | a            | b       |
| MAIN      |  | X R | 0508   | 88-108-821-080 | C-RES,U 820-1/16W J  | a            | b       |
| MAIN      |  | X R | 0509   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
|           |  |     |        |                |                      |              |         |
|           |  |     |        |                |                      | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                      | EZBC         | EZSC    |
| MAIN      |  | X R | 0510   | 88-118-000-080 | C-JUMPER,S           | a            | b       |
| MAIN      |  | X R | 0511   | 88-108-152-080 | C-RES,U 1.5K-1/16W J | a            | b       |
| MAIN      |  | X R | 0512   | 88-108-222-080 | C-RES,U 2.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0513   | 88-118-560-080 | C-RES,S 56-1/10W J   | a            | b       |
| MAIN      |  | X R | 0514   | 88-118-101-080 | C-RES,S 100-1/10W J  | a            | b       |
| MAIN      |  | O R | 0517   | 88-108-332-080 | C-RES,U 3.3K-1/16W J | a            | b       |
| MAIN      |  | X R | 0519   | 88-118-272-080 | C-RES,S 2.7K-1/10W J | a            | b       |
| MAIN      |  | X R | 0520   | 88-108-683-080 | C-RES,U 68K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0521   | 88-108-393-080 | C-RES,U 39K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0522   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
|           |  |     |        |                |                      |              |         |
| MAIN      |  | X R | 0523   | 88-108-000-080 | C-JUMPER,U           | a            | b       |
| MAIN      |  | X R | 0524   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0525   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | X R | 0526   | 88-108-122-080 | C-RES,U 1.2K-1/16W J | a            | b       |
| MAIN      |  | O R | 0527   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | O R | 0528   | 87-A00-764-010 | RES,M/F 0.22-3W J    | a            | b       |
| MAIN      |  | X R | 0531   | 88-108-392-080 | C-RES,U 3.9K-1/16W J | a            | b       |
| MAIN      |  | X R | 0532   | 88-108-472-080 | C-RES,U 4.7K-1/16W J | a            | b       |
| MAIN      |  | X R | 0533   | 88-108-333-080 | C-RES,U 33K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0534   | 88-128-333-080 | C-RES, 33K-1/8W J    | a            | b       |



ELECTRICAL PARTS LIST -20/26

!

=  SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.  
However, please note that not all components will be available as spare parts for after-sales service.  
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.  
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME |  | ! C | REF-NO | PARTS-NO       | PARTS-NAME            | SUFFIX&MODEL |         |
|-----------|--|-----|--------|----------------|-----------------------|--------------|---------|
|           |  |     |        |                |                       | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                       | EZBC         | EZSC    |
| MAIN      |  | O R | 0535   | 88-108-123-080 | C-RES,U 12K-1/16W J   | a            | b       |
| MAIN      |  | X R | 0536   | 88-118-220-080 | C-RES,S 22-1/10W J    | a            | b       |
| MAIN      |  | O R | 0541   | 88-108-332-080 | C-RES,U 3.3K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0542   | 88-108-332-080 | C-RES,U 3.3K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0543   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0544   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0545   | 88-108-563-080 | C-RES,U 56K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0559   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | X R | 0560   | 88-128-473-080 | C-RES, 47K-1/8W J     | a            | b       |
| MAIN      |  | X R | 0581   | 88-128-153-080 | C-RES, 15K-1/8W J     | a            | b       |
|           |  |     |        |                |                       |              |         |
| MAIN      |  | X R | 0582   | 88-128-153-080 | C-RES, 15K-1/8W J     | a            | b       |
| MAIN      |  | X R | 0583   | 88-121-100-080 | RES,10-1/8W J         | a            | b       |
| MAIN      |  | X R | 0584   | 88-128-100-080 | C-RES, 10-1/8W J      | a            | b       |
| MAIN      |  | X R | 0585   | 88-108-182-080 | C-RES,U 1.8K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0586   | 88-108-222-080 | C-RES,U 2.2K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0587   | 88-128-220-080 | C-RES, 22-1/8W J      | a            | b       |
| MAIN      |  | X R | 0588   | 88-128-180-080 | C-RES, 18-1/8W J      | a            | b       |
| MAIN      |  | X R | 0589   | 88-108-151-080 | C-RES,U 150-1/16W J   | a            | b       |
| MAIN      |  | X R | 0591   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0592   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
|           |  |     |        |                |                       |              |         |
|           |  |     |        |                |                       | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                       | EZBC         | EZSC    |
| MAIN      |  | X R | 0593   | 88-128-180-080 | C-RES, 18-1/8W J      | a            | b       |
| MAIN      |  | O R | 0594   | 88-108-822-080 | C-RES,U 8.2K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0595   | 88-108-683-080 | C-RES,U 68K-1/16W J   | a            | b       |
| MAIN      |  | X R | 0596   | 88-108-105-080 | C-RES,U 1M-1/16W J    | a            | b       |
| MAIN      |  | O R | 0597   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0598   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0601   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0602   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0603   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0604   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
|           |  |     |        |                |                       |              |         |
| MAIN      |  | O R | 0605   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0606   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | X R | 0607   | 88-108-472-080 | C-RES,U 4.7K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0608   | 88-108-472-080 | C-RES,U 4.7K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0609   | 88-108-472-080 | C-RES,U 4.7K-1/16W J  | a            | b       |
| MAIN      |  | X R | 0610   | 88-108-472-080 | C-RES,U 4.7K-1/16W J  | a            | b       |
| MAIN      |  | O R | 0611   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0612   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0613   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0614   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
|           |  |     |        |                |                       |              |         |
|           |  |     |        |                |                       | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                       | EZBC         | EZSC    |
| MAIN      |  | O R | 0615   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0616   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0617   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0618   | 88-108-103-080 | C-RES,U 10K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0621   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0622   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0623   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0624   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0625   | 88-108-102-080 | C-RES,U 1K-1/16W J    | a            | b       |
| MAIN      |  | O R | 0626   | 88-108-822-080 | C-RES,U 8.2K-1/16W J  | a            | b       |
|           |  |     |        |                |                       |              |         |
| MAIN      |  | O R | 0631   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0632   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0633   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0634   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | O R | 0635   | 88-108-473-080 | C-RES,U 47K-1/16W J   | a            | b       |
| MAIN      |  | X R | 0636   | 88-108-393-080 | C-RES,U 39K-1/16W J   | a            | b       |
| MAIN      |  | X R | 0637   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0638   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0639   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0640   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
|           |  |     |        |                |                       |              |         |
|           |  |     |        |                |                       | AV-NW50      | AV-NW50 |
|           |  |     |        |                |                       | EZBC         | EZSC    |
| MAIN      |  | X R | 0641   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0642   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0643   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0644   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0645   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0646   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0647   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0648   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0649   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0650   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
|           |  |     |        |                |                       |              |         |
| MAIN      |  | X R | 0651   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0652   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0653   | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a            | b       |
| MAIN      |  | X R | 0654   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0655   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0656   | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a            | b       |
| MAIN      |  | X R | 0657   | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a            | b       |
| MAIN      |  | X R | 0658   | 88-100-000-010 | PLATING-JW, 0.58 SN95 | a            | b       |
| MAIN      |  | X R | 0659   | 88-108-000-080 | C-JUMPER,U            | a            | b       |
| MAIN      |  | X R | 0660   | 88-108-000-080 | C-JUMPER,U            | a            | b       |

# ELECTRICAL PARTS LIST -21/26

! = ⚠ SAFTY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C    | REF-NO | PARTS-NO       | PARTS-NAME             | SUFFIX&MODEL    |                 |
|-----------|--------|--------|----------------|------------------------|-----------------|-----------------|
|           |        |        |                |                        | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      | X R    | 0679   | 88-108-000-080 | C-JUMPER,U             | a               | b               |
| MAIN      | X R    | 0680   | 88-108-000-080 | C-JUMPER,U             | a               | b               |
| MAIN      | X R    | 0681   | 88-128-120-080 | C-RES, 12-1/8W J       | a               | b               |
| MAIN      | X R    | 0682   | 88-128-120-080 | C-RES, 12-1/8W J       | a               | b               |
| MAIN      | X R    | 0683   | 88-128-120-080 | C-RES, 12-1/8W J       | a               | b               |
| MAIN      | X R    | 0684   | 88-128-150-080 | C-RES, 15-1/8W J       | a               | b               |
| MAIN      | X R    | 0685   | 88-100-000-010 | PLATING-JW, 0.58 SN95  | a               | b               |
| MAIN      | O R    | 0686   | 88-108-103-080 | C-RES,U 10K-1/16W J    | a               | b               |
| MAIN      | O R    | 0687   | 88-108-223-080 | C-RES,U 22K-1/16W J    | a               | b               |
| MAIN      | O R    | 0688   | 88-108-103-080 | C-RES,U 10K-1/16W J    | a               | b               |
| MAIN      | X R    | 0691   | 88-128-120-080 | C-RES, 12-1/8W J       | a               | b               |
| MAIN      | O R    | 0692   | 87-A00-147-050 | RES,M/F 68-1W J RSF(S) | a               | b               |
| MAIN      | O R    | 0693   | 87-A00-147-050 | RES,M/F 68-1W J RSF(S) | a               | b               |
| MAIN      | X R    | 0694   | 88-129-000-080 | C-JUMPER, 3216         | a               | b               |
| MAIN      | X R    | 0695   | 88-128-120-080 | C-RES, 12-1/8W J       | a               | b               |
| MAIN      | X R    | 0696   | 88-128-120-080 | C-RES, 12-1/8W J       | a               | b               |
| MAIN      | X R    | 0697   | 88-128-120-080 | C-RES, 12-1/8W J       | a               | b               |
| MAIN      | O R    | 0698   | 88-108-103-080 | C-RES,U 10K-1/16W J    | a               | b               |
| MAIN      | X R    | 0701   | 88-118-750-080 | C-RES,S 75-1/10W J     | a               | b               |
| MAIN      | X R    | 0702   | 88-118-750-080 | C-RES,S 75-1/10W J     | a               | b               |
|           |        |        |                |                        | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      | X R    | 0703   | 88-118-750-080 | C-RES,S 75-1/10W J     | a               | b               |
| MAIN      | O R    | 0711   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0712   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0713   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0714   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0715   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0716   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0721   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0722   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0723   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0724   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0725   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0726   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | X R    | 0731   | 88-121-750-080 | RES,75-1/8W J          | a               | b               |
| MAIN      | X R    | 0732   | 88-121-750-080 | RES,75-1/8W J          | a               | b               |
| MAIN      | X R    | 0761   | 88-128-181-080 | C-RES, 180-1/8W J      | a               | b               |
| MAIN      | X R    | 0762   | 88-128-181-080 | C-RES, 180-1/8W J      | a               | b               |
| MAIN      | X R    | 0763   | 88-128-181-080 | C-RES, 180-1/8W J      | a               | b               |
| MAIN      | O R    | 0764   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0766   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
|           |        |        |                |                        | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      | O R    | 0771   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0772   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0773   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0774   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | X R    | 0775   | 88-121-472-080 | RES,4.7K-1/8W J        | a               | b               |
| MAIN      | X R    | 0776   | 88-108-182-080 | C-RES,U 1.8K-1/16W J   | a               | b               |
| MAIN      | O R    | 0781   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0782   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0783   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | O R    | 0784   | 88-108-473-080 | C-RES,U 47K-1/16W J    | a               | b               |
| MAIN      | X R    | 0791   | 88-128-820-080 | C-RES, 82-1/8W J       | a               | b               |
| MAIN      | X R    | 0792   | 88-128-820-080 | C-RES, 82-1/8W J       | a               | b               |
| MAIN      | X R    | 0793   | 88-128-100-080 | C-RES, 10-1/8W J       | a               | b               |
| MAIN      | X R    | 0801   | 88-108-273-080 | C-RES,U 27K-1/16W J    | a               | b               |
| MAIN      | X R    | 0802   | 88-121-101-080 | RES,100-1/8W J         | a               | b               |
| MAIN      | O R    | 0803   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0804   | 88-108-103-080 | C-RES,U 10K-1/16W J    | a               | b               |
| MAIN      | X R    | 0805   | 88-108-682-080 | C-RES,U 6.8K-1/16W J   | a               | b               |
| MAIN      | O R    | 0806   | 88-108-822-080 | C-RES,U 8.2K-1/16W J   | a               | b               |
| MAIN      | X R    | 0807   | 88-108-392-080 | C-RES,U 3.9K-1/16W J   | a               | b               |
|           |        |        |                |                        | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      | X R    | 0809   | 88-108-474-080 | C-RES,U 470K-1/16W J   | a               | b               |
| MAIN      | X R    | 0821   | 88-108-683-080 | C-RES,U 68K-1/16W J    | a               | b               |
| MAIN      | X R    | 0822   | 88-108-105-080 | C-RES,U 1M-1/16W J     | a               | b               |
| MAIN      | O R    | 0823   | 88-108-103-080 | C-RES,U 10K-1/16W J    | a               | b               |
| MAIN      | X R    | 0824   | 88-121-102-080 | RES,1K-1/8W J          | a               | b               |
| MAIN      | O R    | 0900   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | O R    | 0901   | 88-108-102-080 | C-RES,U 1K-1/16W J     | a               | b               |
| MAIN      | X R    | 0902   | 88-121-471-080 | RES,470-1/8W J         | a               | b               |
| MAIN      | X R    | 0903   | 88-108-471-080 | C-RES,U 470-1/16W J    | a               | b               |
| MAIN      | X R    | 0904   | 88-121-272-080 | RES,2.7K-1/8W J        | a               | b               |
| MAIN      | O R    | 0905   | 88-108-123-080 | C-RES,U 12K-1/16W J    | a               | b               |
| MAIN      | X R    | 0906   | 88-108-104-080 | C-RES,U 100K-1/16W J   | a               | b               |
| MAIN      | X R    | 0907   | 88-108-104-080 | C-RES,U 100K-1/16W J   | a               | b               |
| MAIN      | O RY   | 0101   | 87-A92-442-010 | RELAY,12V DH12D2-OS    | a               | b               |
| MAIN      | ! O RY | 0201   | 87-A91-686-010 | RELAY, G5PA-28(OMRON)  | a               | b               |
| MAIN      | O RY   | 0202   | 87-A92-442-010 | RELAY,12V DH12D2-OS    | a               | b               |
| MAIN      | ! O RY | 0301   | 87-A91-686-010 | RELAY, G5PA-28(OMRON)  | a               | b               |
| MAIN      | ! O RY | 0501   | 87-A91-686-010 | RELAY, G5PA-28(OMRON)  | a               | b               |
| MAIN      | O TH   | 0101   | 87-A91-042-080 | C-THMS,100K 55001      | a               | b               |
| MAIN      | O TH   | 0102   | 87-A91-042-080 | C-THMS,100K 55001      | a               | b               |

# ELECTRICAL PARTS LIST -22/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C | REF-NO  | PARTS-NO       | PARTS-NAME                  | SUFFIX&MODEL    |                 |
|-----------|-----|---------|----------------|-----------------------------|-----------------|-----------------|
|           |     |         |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| MAIN      | O   | TH 0301 | 87-A91-042-080 | C-THMS,100K 55001           | a               | b               |
| MAIN      | O   | TH 0302 | 87-A91-042-080 | C-THMS,100K 55001           | a               | b               |
| MAIN      | O   | TH 0501 | 87-A91-042-080 | C-THMS,100K 55001           | a               | b               |
| MAIN      | O   | X 0900  | 87-A70-307-010 | VIB,XTAL 4.332MHZ CSA-309ST | a               | b               |
| OUTLET    | O   | CN 0601 | 87-099-448-010 | CONN,2P V VT                | a               | b               |
| OUTLET    | ! S | F 0601  | 87-A91-214-010 | FUSE,1.6A 250V T 50T        | a               | b               |
| OUTLET    | O   | FC 0601 | 87-033-213-080 | FUSE CLAMP,PFC5000          | a               | b               |
| OUTLET    | O   | FC 0602 | 87-033-213-080 | FUSE CLAMP,PFC5000          | a               | b               |
| OUTLET    | ! O | J 0602  | 87-009-932-010 | OUTLET,AC E YKE31-0090      | a               | b               |
| OUTLET    | ! O | J 0603  | 87-009-932-010 | OUTLET,AC E YKE31-0090      | a               | b               |
| SUB-PT    | O   | C 0051  | 87-010-388-080 | CAP,E 1000-25 M SME         | a               | b               |
| SUB-PT    | O   | C 0052  | 87-010-403-080 | CAP,E 3.3-50 M 11L SME      | a               | b               |
| SUB-PT    | O   | C 0053  | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM      | a               | b               |
| SUB-PT    | O   | C 0054  | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM      | a               | b               |
| SUB-PT    | O   | C 0055  | 87-012-368-080 | C-CAP,S 0.1-50 Z F GRM      | a               | b               |
| SUB-PT    | ! O | C 0060  | 87-A10-480-090 | CAP,CER 4700P-250 M E KH    | a               | b               |
| SUB-PT    | O   | CN 0051 | 87-099-448-010 | CONN,2P V VT                | a               | b               |
| SUB-PT    | O   | CNA0051 | 8B-AR4-651-010 | CONN ASSY,2P AC OUTLET (EZ) | a               | b               |
| SUB-PT    | O   | CNA0052 | 88-805-033-690 | CONN ASSY,3P 300            | a               | b               |
| SUB-PT    | S   | D 0051  | 87-020-465-080 | DIODE,1SS133                | a               | b               |
|           |     |         |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| SUB-PT    | S   | D 0052  | 87-020-465-080 | DIODE,1SS133                | a               | b               |
| SUB-PT    | S   | D 0053  | 87-020-465-080 | DIODE,1SS133                | a               | b               |
| SUB-PT    | S   | D 0054  | 87-020-465-080 | DIODE,1SS133                | a               | b               |
| SUB-PT    | S   | D 0055  | 87-020-465-080 | DIODE,1SS133                | a               | b               |
| SUB-PT    | S   | D 0056  | 87-020-465-080 | DIODE,1SS133                | a               | b               |
| SUB-PT    | S   | D 0057  | 87-020-465-080 | DIODE,1SS133                | a               | b               |
| SUB-PT    | X   | PR 0051 | 88-100-000-010 | PLATING-JW, 0.58 SN95       | a               | b               |
| SUB-PT    | ! O | PT 0051 | 8Z-NF8-659-010 | PT,SUB ZNF-8(E)TAM          | a               | b               |
| SUB-PT    | S   | Q 0051  | 87-026-235-080 | C-TR,DTC114EK               | a               | b               |
| SUB-PT    | S   | Q 0052  | 87-A30-630-080 | TR,2SC5343GL                | a               | b               |
| SUB-PT    | X   | R 0051  | 88-121-100-080 | RES,10-1/8W J               | a               | b               |
| SUB-PT    | X   | R 0052  | 88-121-333-080 | RES,33K-1/8W J              | a               | b               |
| SUB-PT    | X   | R 0053  | 88-121-101-080 | RES,100-1/8W J              | a               | b               |
| SUB-PT    | ! O | RY 0051 | 87-A91-368-010 | RELAY,AC DC12V DG12D-O(M)-2 | a               | b               |
| SUB-PT    | O   | T 0051  | 87-A60-317-010 | TERMINAL, 1P MSC            | a               | b               |
| SUB-PT    | O   | T 0052  | 87-A60-317-010 | TERMINAL, 1P MSC            | a               | b               |
| SUB-PT    | ! O | W 0051  | 87-A80-143-110 | AC CORD ASSY,E BLK          | a               | b               |
| TUNER     | O   | C 0772  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0779  | 87-012-280-080 | C-CAP,U 3300P-50 K B GRM    | a               | b               |
| TUNER     | O   | C 0780  | 87-012-280-080 | C-CAP,U 3300P-50 K B GRM    | a               | b               |
|           |     |         |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     | O   | C 0781  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0782  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0783  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0785  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0786  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0788  | 87-012-167-080 | C-CAP,U 5P-50 C CH GRM      | a               | b               |
| TUNER     | O   | C 0789  | 87-010-786-080 | C-CAP,U 0.018-25 K B GRM    | a               | b               |
| TUNER     | O   | C 0790  | 87-010-786-080 | C-CAP,U 0.018-25 K B GRM    | a               | b               |
| TUNER     | O   | C 0792  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0793  | 87-A10-262-080 | C-CAP,U 1-10 Z F            | a               | b               |
| TUNER     | O   | C 0795  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0796  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0797  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0799  | 87-010-383-040 | CAP,E 33-25 M 11L SME       | a               | b               |
| TUNER     | O   | C 0800  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0801  | 87-A10-262-080 | C-CAP,U 1-10 Z F            | a               | b               |
| TUNER     | O   | C 0802  | 87-010-829-080 | C-CAP,U 0.047-16 Z F CM/CB  | a               | b               |
| TUNER     | O   | C 0804  | 87-010-263-040 | CAP,E 100-10 M 11L SME      | a               | b               |
| TUNER     | O   | C 0807  | 87-A10-463-080 | C-CAP,U 0.47-10 Z F         | a               | b               |
| TUNER     | O   | C 0808  | 87-A10-262-080 | C-CAP,U 1-10 Z F            | a               | b               |
|           |     |         |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     | O   | C 0809  | 87-A10-262-080 | C-CAP,U 1-10 Z F            | a               | b               |
| TUNER     | O   | C 0814  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0815  | 87-A10-463-080 | C-CAP,U 0.47-10 Z F         | a               | b               |
| TUNER     | O   | C 0816  | 87-A10-463-080 | C-CAP,U 0.47-10 Z F         | a               | b               |
| TUNER     | O   | C 0821  | 87-A11-796-080 | C-CAP,S 4.7-10 Z F          | a               | b               |
| TUNER     | O   | C 0823  | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM    | a               | b               |
| TUNER     | O   | C 0825  | 87-A11-317-080 | C-CAP,U 0.068U-16 K B       | a               | b               |
| TUNER     | O   | C 0831  | 87-010-382-040 | CAP,E 22-25 M 11L SME       | a               | b               |
| TUNER     | O   | C 0832  | 87-010-419-080 | CAP,E 4.7-16 M 5L SRE       | a               | b               |
| TUNER     | O   | C 0837  | 87-A12-022-080 | C-CAP,U 0.22-16 Z F         | a               | b               |
| TUNER     | O   | C 0842  | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM      | a               | b               |
| TUNER     | O   | C 0847  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0848  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0850  | 87-A10-262-080 | C-CAP,U 1-10 Z F            | a               | b               |
| TUNER     | O   | C 0851  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0852  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0853  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0854  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0855  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |
| TUNER     | O   | C 0856  | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM     | a               | b               |

# ELECTRICAL PARTS LIST -23/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C    | REF-NO | PARTS-NO       | PARTS-NAME               | SUFFIX&MODEL    |                 |
|-----------|---|------|--------|----------------|--------------------------|-----------------|-----------------|
|           |   |      |        |                |                          | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     |   | O C  | 0859   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM   | a               | b               |
| TUNER     |   | O C  | 0860   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0901   | 87-012-162-080 | C-CAP,U 1P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0902   | 87-012-165-080 | C-CAP,U 3P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0903   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0904   | 86-ZA1-615-080 | C-CAP,U 680P-25 J CH     | a               | b               |
| TUNER     |   | O C  | 0905   | 87-012-162-080 | C-CAP,U 1P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0906   | 87-012-172-080 | C-CAP,U 10P-50 D CH GRM  | a               | b               |
| TUNER     |   | O C  | 0907   | 87-012-166-080 | C-CAP,U 4P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0908   | 87-012-165-080 | C-CAP,U 3P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0909   | 86-ZA1-615-080 | C-CAP,U 680P-25 J CH     | a               | b               |
| TUNER     |   | O C  | 0910   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0911   | 87-012-166-080 | C-CAP,U 4P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0912   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM | a               | b               |
| TUNER     |   | O C  | 0913   | 87-A12-310-080 | C-CAP,U 0.01-50 K B      | a               | b               |
| TUNER     |   | O C  | 0914   | 87-A12-310-080 | C-CAP,U 0.01-50 K B      | a               | b               |
| TUNER     |   | O C  | 0915   | 87-A12-310-080 | C-CAP,U 0.01-50 K B      | a               | b               |
| TUNER     |   | O C  | 0916   | 87-A12-310-080 | C-CAP,U 0.01-50 K B      | a               | b               |
| TUNER     |   | O C  | 0917   | 87-012-178-080 | C-CAP,U 18P-50 J CH GRM  | a               | b               |
| TUNER     |   | O C  | 0918   | 87-012-172-080 | C-CAP,U 10P-50 D CH GRM  | a               | b               |
|           |   |      |        |                |                          | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     |   | O C  | 0919   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM  | a               | b               |
| TUNER     |   | O C  | 0920   | 87-012-184-080 | C-CAP,U 33P-50 J CH GRM  | a               | b               |
| TUNER     |   | O C  | 0921   | 87-012-180-080 | C-CAP,U 22P-50 J CH GRM  | a               | b               |
| TUNER     |   | O C  | 0922   | 87-012-174-080 | C-CAP,U 12P-50 J CH GRM  | a               | b               |
| TUNER     |   | O C  | 0923   | 87-A12-310-080 | C-CAP,U 0.01-50 K B      | a               | b               |
| TUNER     |   | O C  | 0924   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0925   | 87-012-164-080 | C-CAP,U 2P-50 C CH GRM   | a               | b               |
| TUNER     |   | O C  | 0926   | 88-108-101-080 | C-RES,U 100-1/16W J      | a               | b               |
| TUNER     |   | O C  | 0927   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM | a               | b               |
| TUNER     |   | O C  | 0931   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM   | a               | b               |
| TUNER     |   | O C  | 0932   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0933   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0934   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0935   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0936   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0937   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0938   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0939   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0946   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0947   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
|           |   |      |        |                |                          | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     |   | O C  | 0950   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | X C  | 0957   | 88-108-000-080 | C-JUMPER,U               | a               | b               |
| TUNER     |   | O C  | 0961   | 87-012-172-080 | C-CAP,U 10P-50 D CH GRM  | a               | b               |
| TUNER     |   | O C  | 0962   | 87-A10-262-080 | C-CAP,U 1-10 Z F         | a               | b               |
| TUNER     |   | O C  | 0963   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM   | a               | b               |
| TUNER     |   | O C  | 0971   | 87-010-381-080 | CAP,E 330-16 M SME       | a               | b               |
| TUNER     |   | O C  | 0972   | 87-A11-063-080 | C-CAP,S 4.7-10 Z F       | a               | b               |
| TUNER     |   | O C  | 0973   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0974   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0976   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM   | a               | b               |
| TUNER     |   | O C  | 0979   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM | a               | b               |
| TUNER     |   | O C  | 0981   | 87-010-380-040 | CAP,E 47-16 M 11L SME    | a               | b               |
| TUNER     |   | O C  | 0982   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM   | a               | b               |
| TUNER     |   | O C  | 0983   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0984   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0985   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM | a               | b               |
| TUNER     |   | O C  | 0987   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0988   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0989   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O C  | 0990   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM | a               | b               |
|           |   |      |        |                |                          | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     |   | O C  | 0991   | 87-012-182-080 | C-CAP,U 27P-50 J CH GRM  | a               | b               |
| TUNER     |   | O C  | 0992   | 87-012-172-080 | C-CAP,U 10P-50 D CH GRM  | a               | b               |
| TUNER     |   | O C  | 0993   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0994   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM | a               | b               |
| TUNER     |   | O C  | 0995   | 87-012-274-080 | C-CAP,U 1000P-50 K B GRM | a               | b               |
| TUNER     |   | O C  | 0996   | 87-012-195-080 | C-CAP,U 100P-50 J CH GRM | a               | b               |
| TUNER     |   | O C  | 0997   | 87-010-831-080 | C-CAP,U 0.1-16 Z F GRM   | a               | b               |
| TUNER     |   | O C  | 0998   | 87-010-380-040 | CAP,E 47-16 M 11L SME    | a               | b               |
| TUNER     |   | O C  | 0999   | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM  | a               | b               |
| TUNER     |   | O CF | 0831   | 87-008-423-010 | FLTR,CF SFE10.7MS3G-A    | a               | b               |
| TUNER     |   | O CF | 0832   | 82-785-747-010 | CF,MS2GH-A               | a               | b               |
| TUNER     |   | O CN | 0403   | 87-099-033-010 | CONN,16P H BLK 6216      | a               | b               |
| TUNER     |   | S D  | 0801   | 87-020-465-080 | DIODE,1SS133             | a               | b               |
| TUNER     |   | S D  | 0803   | 87-020-465-080 | DIODE,1SS133             | a               | b               |
| TUNER     |   | X D  | 0896   | 88-100-000-010 | PLATING-JW, 0.58 SN95    | a               | b               |
| TUNER     |   | O D  | 0901   | 87-A41-048-040 | C-VARI-CAP,HVM16-03 TL   | a               | b               |
| TUNER     |   | O D  | 0902   | 87-A41-048-040 | C-VARI-CAP,HVM16-03 TL   | a               | b               |
| TUNER     |   | O D  | 0903   | 87-A41-048-040 | C-VARI-CAP,HVM16-03 TL   | a               | b               |
| TUNER     |   | O D  | 0951   | 87-A40-799-040 | C-VARI-CAP,KV1610S       | a               | b               |
| TUNER     |   | S D  | 0991   | 87-017-149-080 | ZENER,HZS6A2L            | a               | b               |

## ELECTRICAL PARTS LIST -24/26

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! | C | REF-NO | PARTS-NO | PARTS-NAME     | SUFFIX&MODEL              |                 |
|-----------|---|---|--------|----------|----------------|---------------------------|-----------------|
|           |   |   |        |          |                | AV-NW50<br>EZBC           | AV-NW50<br>EZSC |
| TUNER     |   | S | D      | 0992     | 87-020-465-080 | DIODE,1SS133              | a               |
| TUNER     |   | S | IC     | 0801     | 87-A22-060-010 | IC,LA1845N-A              | a               |
| TUNER     |   | S | IC     | 0991     | 87-A21-928-010 | IC,LC72131D-N             | a               |
| TUNER     |   | O | J      | 0832     | 87-A61-823-010 | TERMINAL,ANT PAL AJ-2073  | a               |
| TUNER     |   | O | J      | 0940     | 87-A60-633-010 | CONN,2P H 2.5MM JMT       | a               |
| TUNER     |   | X | JR     | 0782     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | O | JR     | 0783     | 88-108-103-080 | C-RES,U 10K-1/16W J       | a               |
| TUNER     |   | X | JR     | 0801     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0802     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0805     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0806     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0807     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0821     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0822     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0835     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0887     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0901     | 88-118-000-080 | C-JUMPER,S                | a               |
| TUNER     |   | X | JR     | 0902     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0903     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0904     | 88-108-000-080 | C-JUMPER,U                | a               |
|           |   |   |        |          |                | AV-NW50<br>EZBC           | AV-NW50<br>EZSC |
| TUNER     |   | X | JR     | 0905     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0906     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0907     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | X | JR     | 0908     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0951     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0952     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0953     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0955     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | JR     | 0991     | 88-118-000-080 | C-JUMPER,S                | a               |
| TUNER     |   | X | JR     | 0999     | 88-129-000-080 | C-JUMPER, 3216            | a               |
| TUNER     |   | O | L      | 0801     | 87-A50-694-010 | COIL,FM-DET 2 (COILS)     | a               |
| TUNER     |   | O | L      | 0802     | 87-A91-551-010 | FLTR,PCFJZH-450 L (TOK)   | a               |
| TUNER     |   | O | L      | 0811     | 87-005-847-080 | COIL,2.2UH K CECS         | a               |
| TUNER     |   | O | L      | 0832     | 87-005-847-080 | COIL,2.2UH K CECS         | a               |
| TUNER     |   | O | L      | 0901     | 86-ZA1-612-010 | COIL,FM ANT/RF-1-Z        | a               |
| TUNER     |   | O | L      | 0902     | 86-ZA1-613-010 | COIL,FM ANT/RF-2-Z        | a               |
| TUNER     |   | O | L      | 0903     | 87-005-847-080 | COIL,2.2UH K CECS         | a               |
| TUNER     |   | O | L      | 0904     | 86-ZA1-612-010 | COIL,FM ANT/RF-1-Z        | a               |
| TUNER     |   | O | L      | 0905     | 86-ZA1-613-010 | COIL,FM ANT/RF-2-Z        | a               |
| TUNER     |   | O | L      | 0906     | 87-005-847-080 | COIL,2.2UH K CECS         | a               |
|           |   |   |        |          |                | AV-NW50<br>EZBC           | AV-NW50<br>EZSC |
| TUNER     |   | O | L      | 0907     | 86-ZA1-614-010 | COIL,FM OSC-Z             | a               |
| TUNER     |   | O | L      | 0908     | 88-ZA1-624-010 | COIL,FM IFT 7-6.2 (COILS) | a               |
| TUNER     |   | O | L      | 0952     | 87-A50-752-010 | COIL,MW ANT (2B)          | a               |
| TUNER     |   | O | L      | 0953     | 87-A50-753-010 | COIL,MW OSC (2B)          | a               |
| TUNER     |   | S | Q      | 0835     | 89-327-143-080 | C-TR,2SC27140             | a               |
| TUNER     |   | S | Q      | 0836     | 87-A30-677-040 | C-TR,SRA2207S             | a               |
| TUNER     |   | S | Q      | 0901     | 89-503-602-080 | C-FET,2SK360E             | a               |
| TUNER     |   | S | Q      | 0902     | 89-327-143-080 | C-TR,2SC27140             | a               |
| TUNER     |   | S | Q      | 0903     | 89-327-143-080 | C-TR,2SC27140             | a               |
| TUNER     |   | S | Q      | 0904     | 89-327-143-080 | C-TR,2SC27140             | a               |
| TUNER     |   | S | Q      | 0905     | 89-327-143-080 | C-TR,2SC27140             | a               |
| TUNER     |   | S | Q      | 0981     | 87-A30-494-080 | TR,2SA1980G               | a               |
| TUNER     |   | S | Q      | 0982     | 87-A30-540-040 | C-TR,2SC5343SF/S(G)       | a               |
| TUNER     |   | S | Q      | 0983     | 87-A30-540-040 | C-TR,2SC5343SF/S(G)       | a               |
| TUNER     |   | X | R      | 0789     | 88-108-333-080 | C-RES,U 33K-1/16W J       | a               |
| TUNER     |   | O | R      | 0790     | 87-012-286-080 | C-CAP,U 0.01-25 K B GRM   | a               |
| TUNER     |   | O | R      | 0791     | 88-108-102-080 | C-RES,U 1K-1/16W J        | a               |
| TUNER     |   | X | R      | 0793     | 88-108-221-080 | C-RES,U 220-1/16W J       | a               |
| TUNER     |   | X | R      | 0795     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | O | R      | 0801     | 88-108-103-080 | C-RES,U 10K-1/16W J       | a               |
|           |   |   |        |          |                | AV-NW50<br>EZBC           | AV-NW50<br>EZSC |
| TUNER     |   | O | R      | 0802     | 88-108-223-080 | C-RES,U 22K-1/16W J       | a               |
| TUNER     |   | X | R      | 0803     | 88-108-183-080 | C-RES,U 18K-1/16W J       | a               |
| TUNER     |   | X | R      | 0804     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | O | R      | 0805     | 88-108-332-080 | C-RES,U 3.3K-1/16W J      | a               |
| TUNER     |   | X | R      | 0806     | 88-108-682-080 | C-RES,U 6.8K-1/16W J      | a               |
| TUNER     |   | X | R      | 0809     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | X | R      | 0810     | 88-108-000-080 | C-JUMPER,U                | a               |
| TUNER     |   | O | R      | 0813     | 88-108-224-080 | C-RES,U 220K-1/16W J      | a               |
| TUNER     |   | X | R      | 0814     | 88-108-105-080 | C-RES,U 1M-1/16W J        | a               |
| TUNER     |   | X | R      | 0815     | 88-121-682-080 | RES,6.8K-1/8W J           | a               |
| TUNER     |   | O | R      | 0818     | 88-108-103-080 | C-RES,U 10K-1/16W J       | a               |
| TUNER     |   | X | R      | 0823     | 88-108-393-080 | C-RES,U 39K-1/16W J       | a               |
| TUNER     |   | O | R      | 0826     | 88-108-223-080 | C-RES,U 22K-1/16W J       | a               |
| TUNER     |   | X | R      | 0832     | 88-108-391-080 | C-RES,U 390-1/16W J       | a               |
| TUNER     |   | X | R      | 0840     | 88-108-221-080 | C-RES,U 220-1/16W J       | a               |
| TUNER     |   | O | R      | 0850     | 88-108-103-080 | C-RES,U 10K-1/16W J       | a               |
| TUNER     |   | O | R      | 0853     | 88-108-102-080 | C-RES,U 1K-1/16W J        | a               |
| TUNER     |   | X | R      | 0854     | 88-108-331-080 | C-RES,U 330-1/16W J       | a               |
| TUNER     |   | X | R      | 0855     | 88-108-183-080 | C-RES,U 18K-1/16W J       | a               |
| TUNER     |   | O | R      | 0856     | 88-108-103-080 | C-RES,U 10K-1/16W J       | a               |

# ELECTRICAL PARTS LIST -25/26

! =  SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.


| UNIT-NAME | ! | C  | REF-NO | PARTS-NO       | PARTS-NAME                  | SUFFIX&MODEL    |                 |
|-----------|---|----|--------|----------------|-----------------------------|-----------------|-----------------|
|           |   |    |        |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     | X | R  | 0857   | 88-108-181-080 | C-RES,U 180-1/16W J         | a               | b               |
| TUNER     | X | R  | 0858   | 88-108-271-080 | C-RES,U 270-1/16W J         | a               | b               |
| TUNER     | X | R  | 0860   | 88-121-101-080 | RES,100-1/8W J              | a               | b               |
| TUNER     | X | R  | 0890   | 88-108-474-080 | C-RES,U 470K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0901   | 88-108-104-080 | C-RES,U 100K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0902   | 88-108-104-080 | C-RES,U 100K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0903   | 88-108-221-080 | C-RES,U 220-1/16W J         | a               | b               |
| TUNER     | O | R  | 0904   | 88-108-103-080 | C-RES,U 10K-1/16W J         | a               | b               |
| TUNER     | X | R  | 0905   | 88-108-221-080 | C-RES,U 220-1/16W J         | a               | b               |
| TUNER     | X | R  | 0906   | 88-108-564-080 | C-RES,U 560K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0908   | 88-108-271-080 | C-RES,U 270-1/16W J         | a               | b               |
| TUNER     | X | R  | 0909   | 88-108-181-080 | C-RES,U 180-1/16W J         | a               | b               |
| TUNER     | X | R  | 0910   | 88-108-334-080 | C-RES,U 330K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0911   | 88-108-181-080 | C-RES,U 180-1/16W J         | a               | b               |
| TUNER     | X | R  | 0912   | 88-108-104-080 | C-RES,U 100K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0913   | 88-108-152-080 | C-RES,U 1.5K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0914   | 88-108-472-080 | C-RES,U 4.7K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0915   | 88-108-104-080 | C-RES,U 100K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0916   | 88-108-470-080 | C-RES,U 47-1/16W J          | a               | b               |
| TUNER     | X | R  | 0945   | 88-108-104-080 | C-RES,U 100K-1/16W J        | a               | b               |
|           |   |    |        |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     | X | R  | 0962   | 88-121-221-080 | RES,220-1/8W J              | a               | b               |
| TUNER     | X | R  | 0963   | 88-108-330-080 | C-RES,U 33-1/16W J          | a               | b               |
| TUNER     | O | R  | 0974   | 88-108-101-080 | C-RES,U 100-1/16W J         | a               | b               |
| TUNER     | O | R  | 0975   | 88-108-562-080 | C-RES,U 5.6K-1/16W J        | a               | b               |
| TUNER     | O | R  | 0976   | 88-108-102-080 | C-RES,U 1K-1/16W J          | a               | b               |
| TUNER     | O | R  | 0977   | 88-108-102-080 | C-RES,U 1K-1/16W J          | a               | b               |
| TUNER     | X | R  | 0978   | 88-108-681-080 | C-RES,U 680-1/16W J         | a               | b               |
| TUNER     | X | R  | 0980   | 88-108-684-080 | C-RES,U 680K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0981   | 88-121-471-080 | RES,470-1/8W J              | a               | b               |
| TUNER     | O | R  | 0982   | 88-108-103-080 | C-RES,U 10K-1/16W J         | a               | b               |
| TUNER     | O | R  | 0983   | 88-108-562-080 | C-RES,U 5.6K-1/16W J        | a               | b               |
| TUNER     | O | R  | 0984   | 88-108-102-080 | C-RES,U 1K-1/16W J          | a               | b               |
| TUNER     | X | R  | 0985   | 88-121-471-080 | RES,470-1/8W J              | a               | b               |
| TUNER     | X | R  | 0986   | 88-108-222-080 | C-RES,U 2.2K-1/16W J        | a               | b               |
| TUNER     | X | R  | 0988   | 88-108-000-080 | C-JUMPER,U                  | a               | b               |
| TUNER     | X | R  | 0989   | 88-121-102-080 | RES,1K-1/8W J               | a               | b               |
| TUNER     | O | R  | 0990   | 88-108-563-080 | C-RES,U 56K-1/16W J         | a               | b               |
| TUNER     | O | R  | 0992   | 88-108-103-080 | C-RES,U 10K-1/16W J         | a               | b               |
| TUNER     | O | R  | 0994   | 88-108-103-080 | C-RES,U 10K-1/16W J         | a               | b               |
| TUNER     | O | R  | 0996   | 88-108-103-080 | C-RES,U 10K-1/16W J         | a               | b               |
|           |   |    |        |                |                             | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
| TUNER     | X | R  | 0997   | 88-108-154-080 | C-RES,U 150K-1/16W J        | a               | b               |
| TUNER     | O | R  | 0998   | 88-108-102-080 | C-RES,U 1K-1/16W J          | a               | b               |
| TUNER     | O | R  | 0999   | 88-108-103-080 | C-RES,U 10K-1/16W J         | a               | b               |
| TUNER     | X | SH | 0901   | 8C-ZA3-604-010 | SHLD-CASE,CZA-3             | a               | b               |
| TUNER     | X | SH | 0902   | 8C-ZA3-629-010 | SHLD-CASE,CZA3E P C         | a               | b               |
| TUNER     | O | X  | 0992   | 87-A70-306-010 | VIB,XTAL 4.500MHZ CSA-309ST | a               | b               |

- Regarding connectors, they are not stocked as they are not the initial order items.  
The connectors are available after they are supplied from connector manufacturers upon the order is received.


○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち

Chip Resistor Part Coding

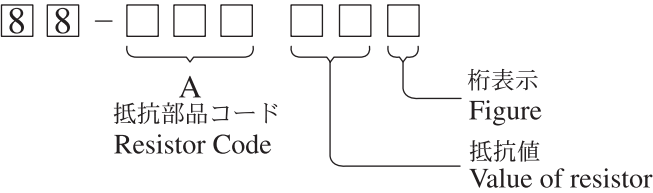

チップ抵抗  
Chip resistor
 
| 容量<br>Wattage | 種類<br>Type | 許容誤差<br>Tolerance | 記号<br>Symbol | 寸法／Dimensions (mm)                                                                 |     |      |      | 抵抗コード : A<br>Resistor Code : A |
|---------------|------------|-------------------|--------------|------------------------------------------------------------------------------------|-----|------|------|--------------------------------|
|               |            |                   |              | 外形／Form                                                                            | L   | W    | t    |                                |
| 1/16W         | 1005       | ± 5%              | CJ           |  | 1.0 | 0.5  | 0.35 | 104                            |
| 1/16W         | 1608       | ± 5%              | CJ           |                                                                                    | 1.6 | 0.8  | 0.45 | 108                            |
| 1/10W         | 2125       | ± 5%              | CJ           |                                                                                    | 2   | 1.25 | 0.45 | 118                            |
| 1/8W          | 3216       | ± 5%              | CJ           |                                                                                    | 3.2 | 1.6  | 0.55 | 128                            |

# TRANSISTOR ILLUSTRATION -1/1



 
E C B

2SA1980G  
2SC5343Y



E C B

2SA1145Y  
2SC2705Y  
2SC5343G




B C E

FN1016  
FP1016




B C E

 2SA2057Q




G D S

2SK3053

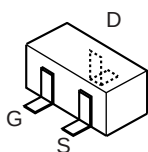


G S D

2SK2158

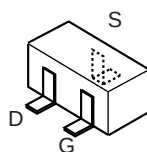

D G S

2SK360E

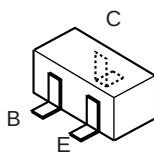



B E C

|             |           |
|-------------|-----------|
| 2SA1514K(S) | 2SD1306NE |
| 2SA1235F    | 2SD814A   |
| 2SB792A     | DTC114EK  |
| 2SC2714O    | RT1P144C  |
| 2SC3052F    | RT1N144C  |
| 2SC4117GR   | SBT5401   |
| 2SC5343SF/S | SRA2202S  |
| 2SA1037AK   | SRA2207S  |






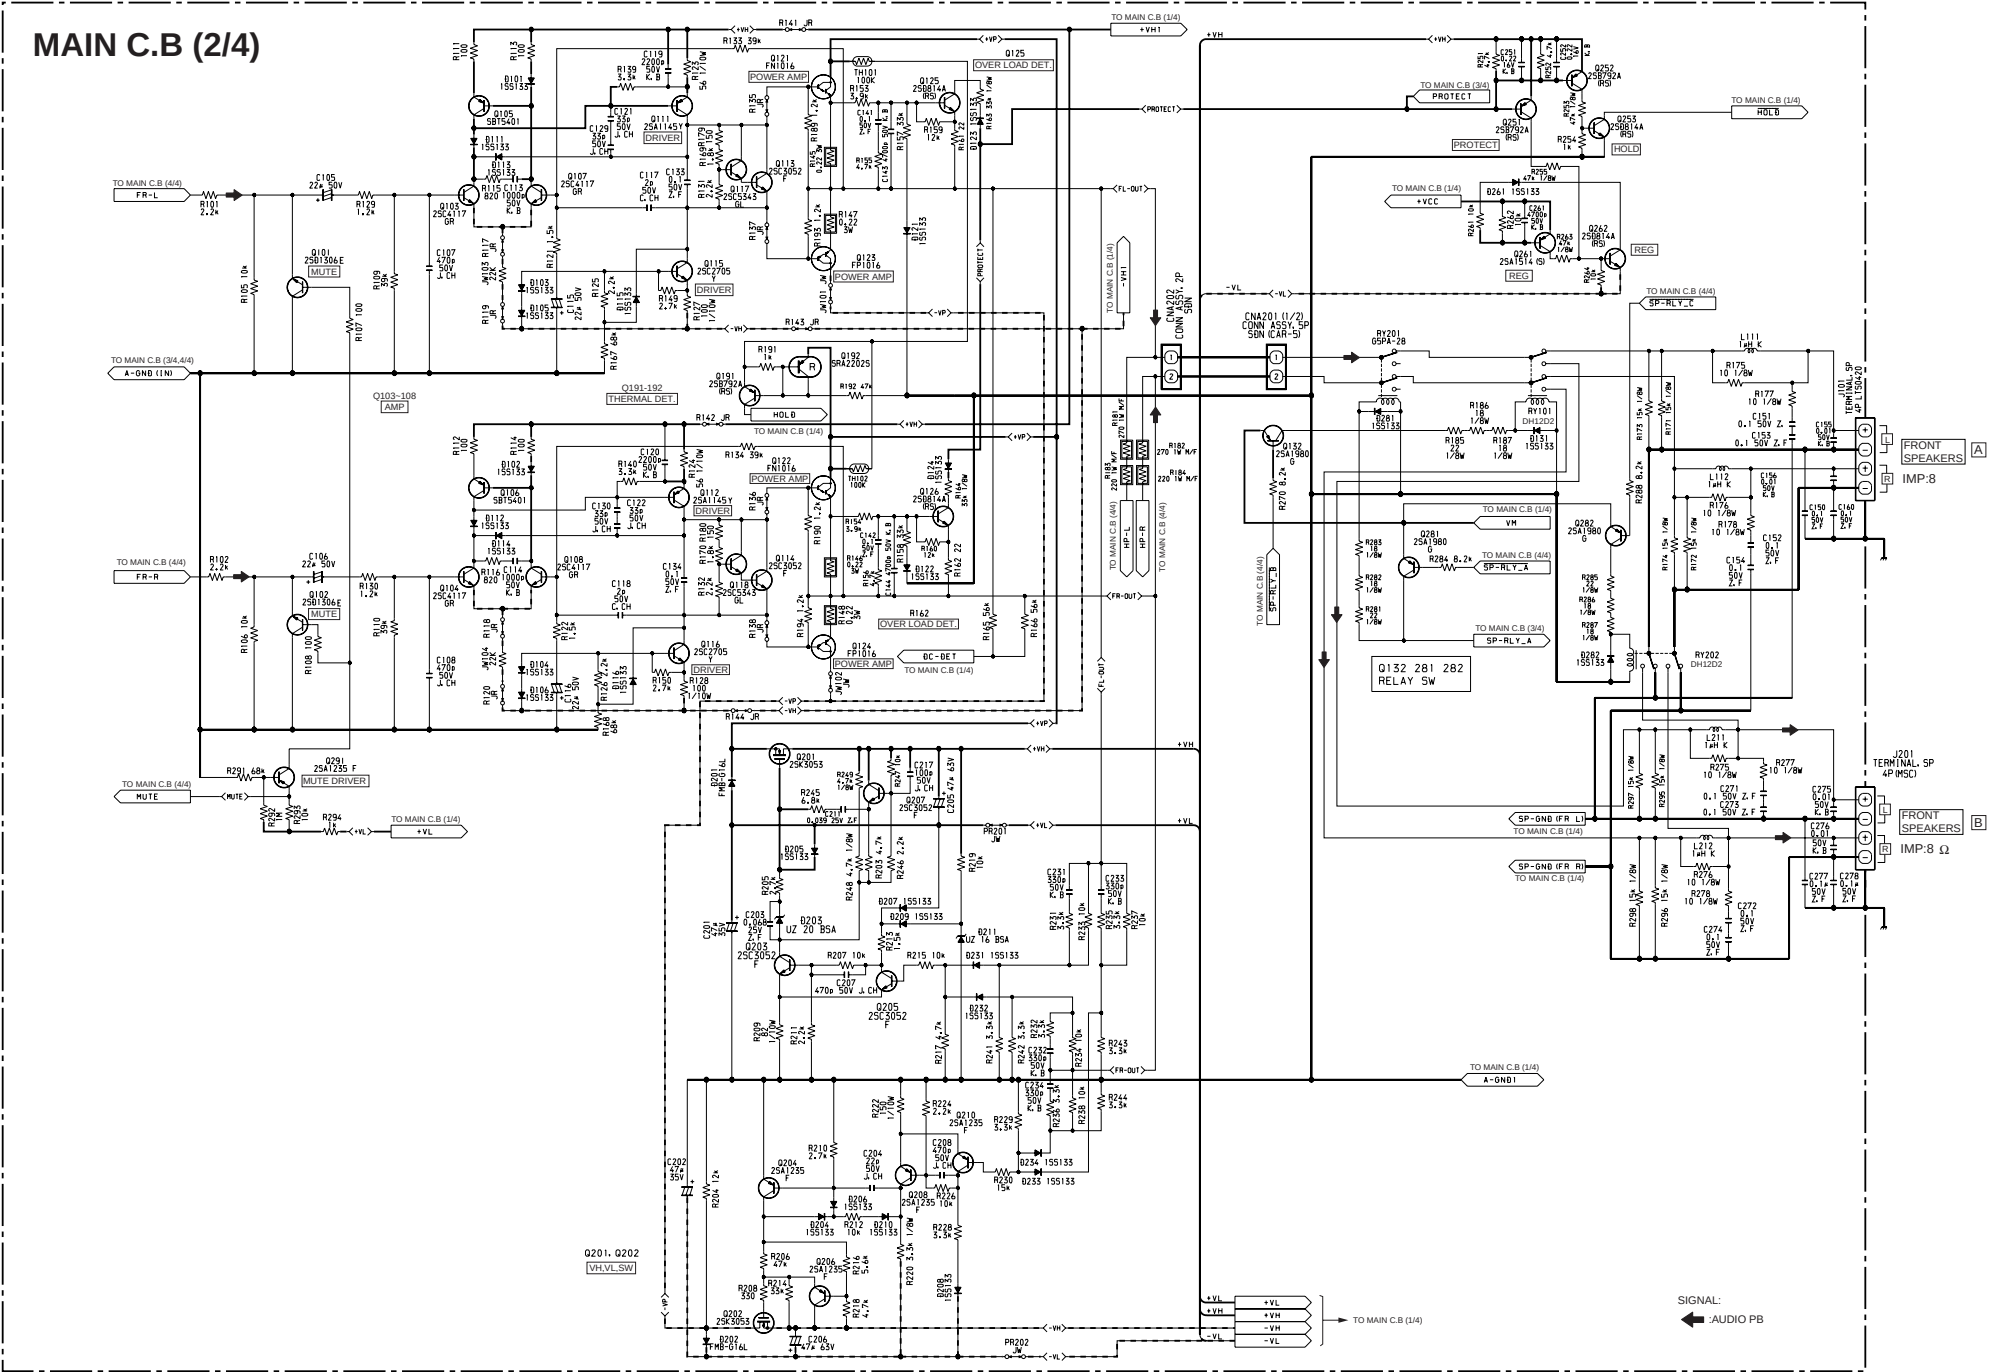

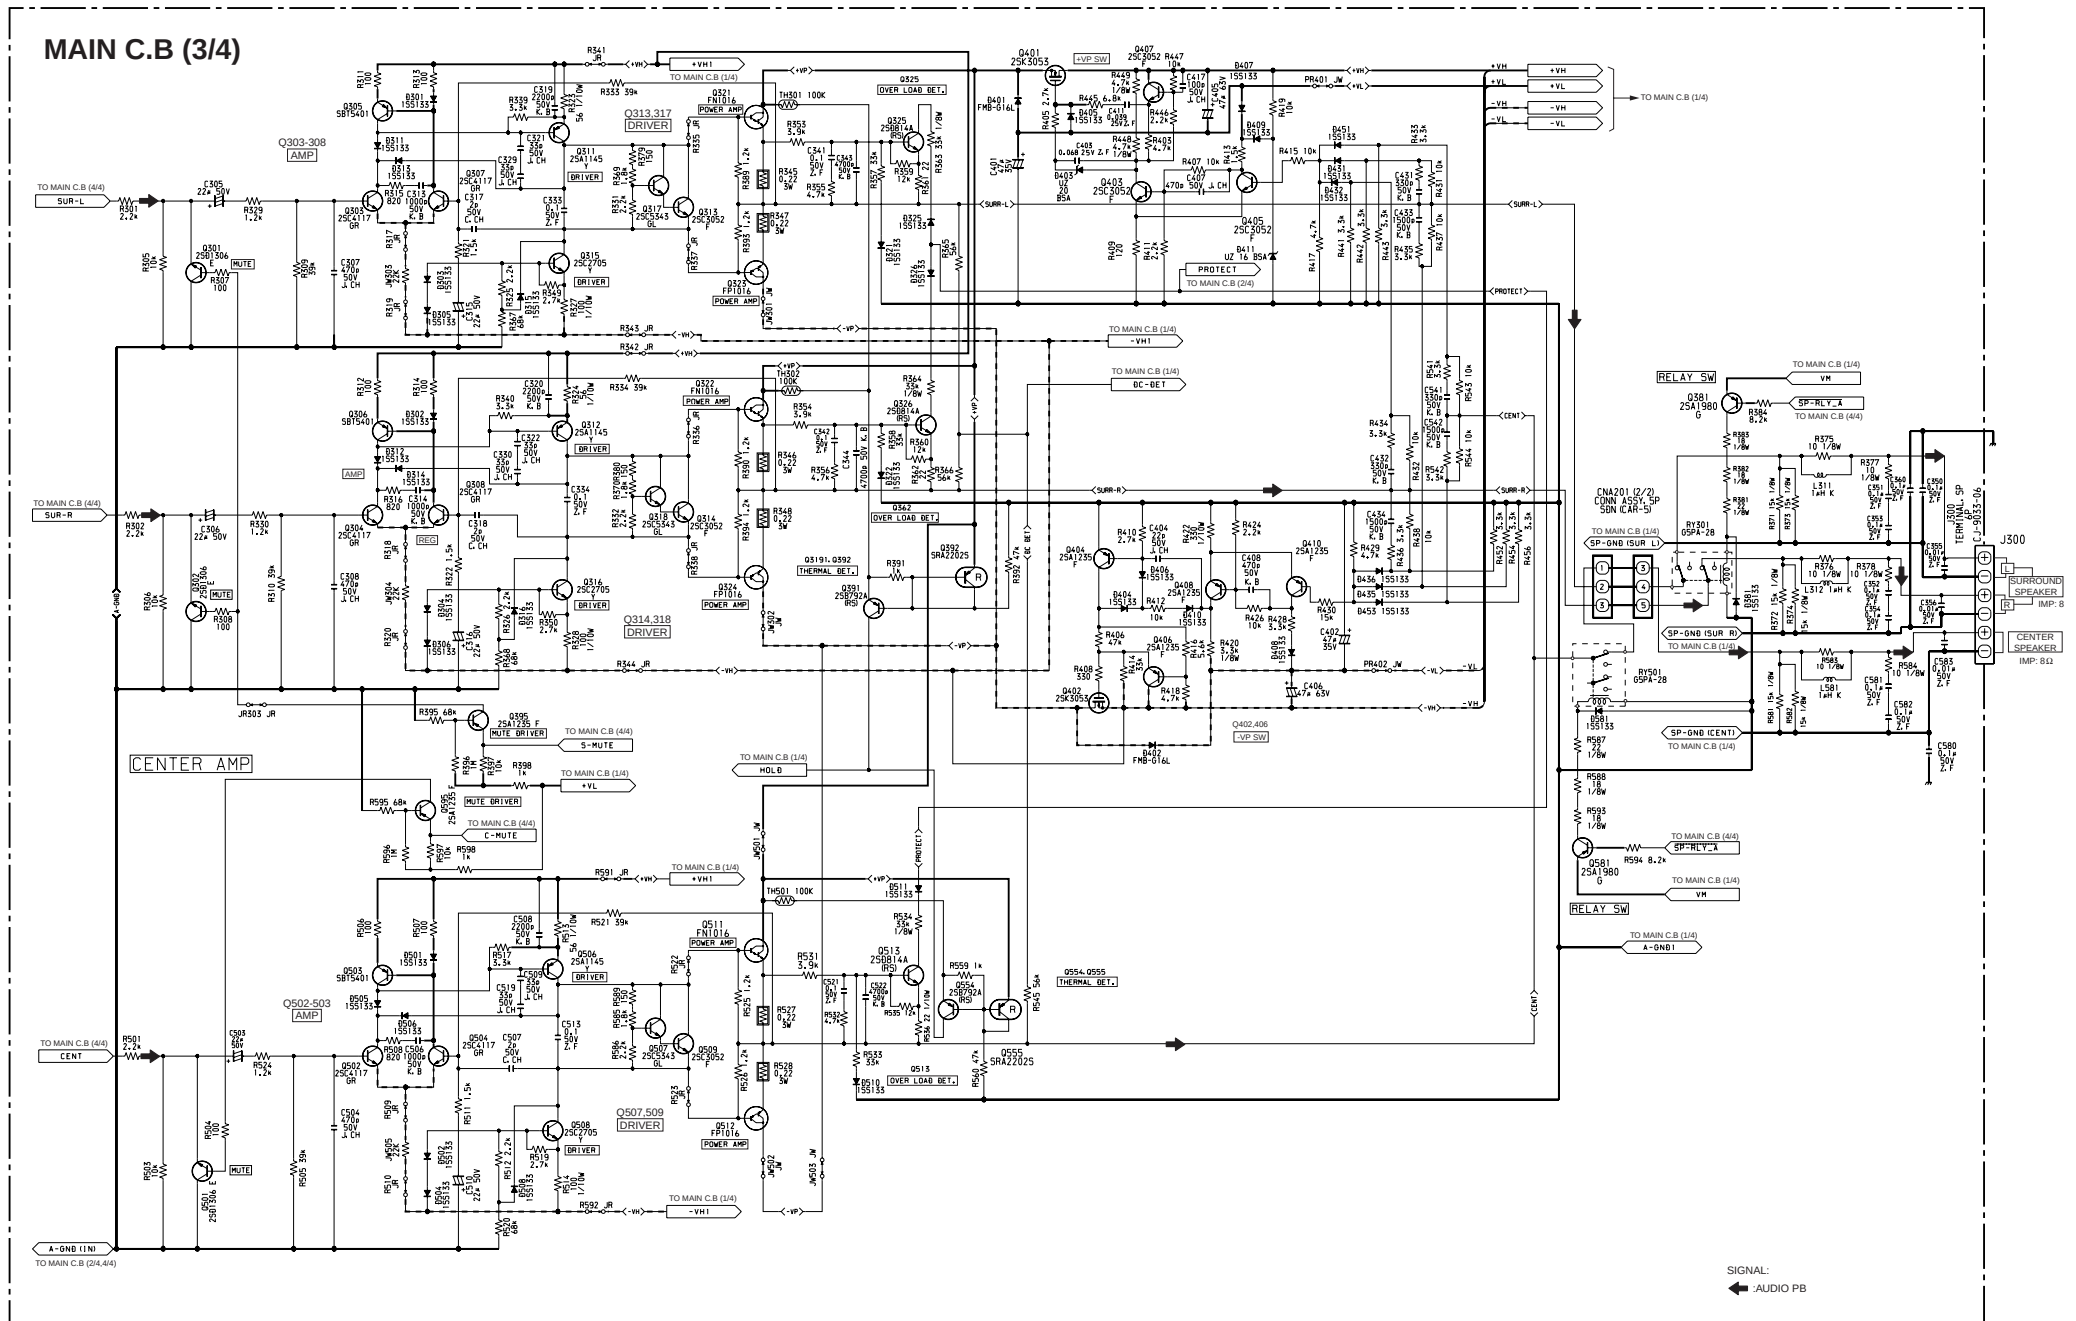

MAIN C.B 4/4

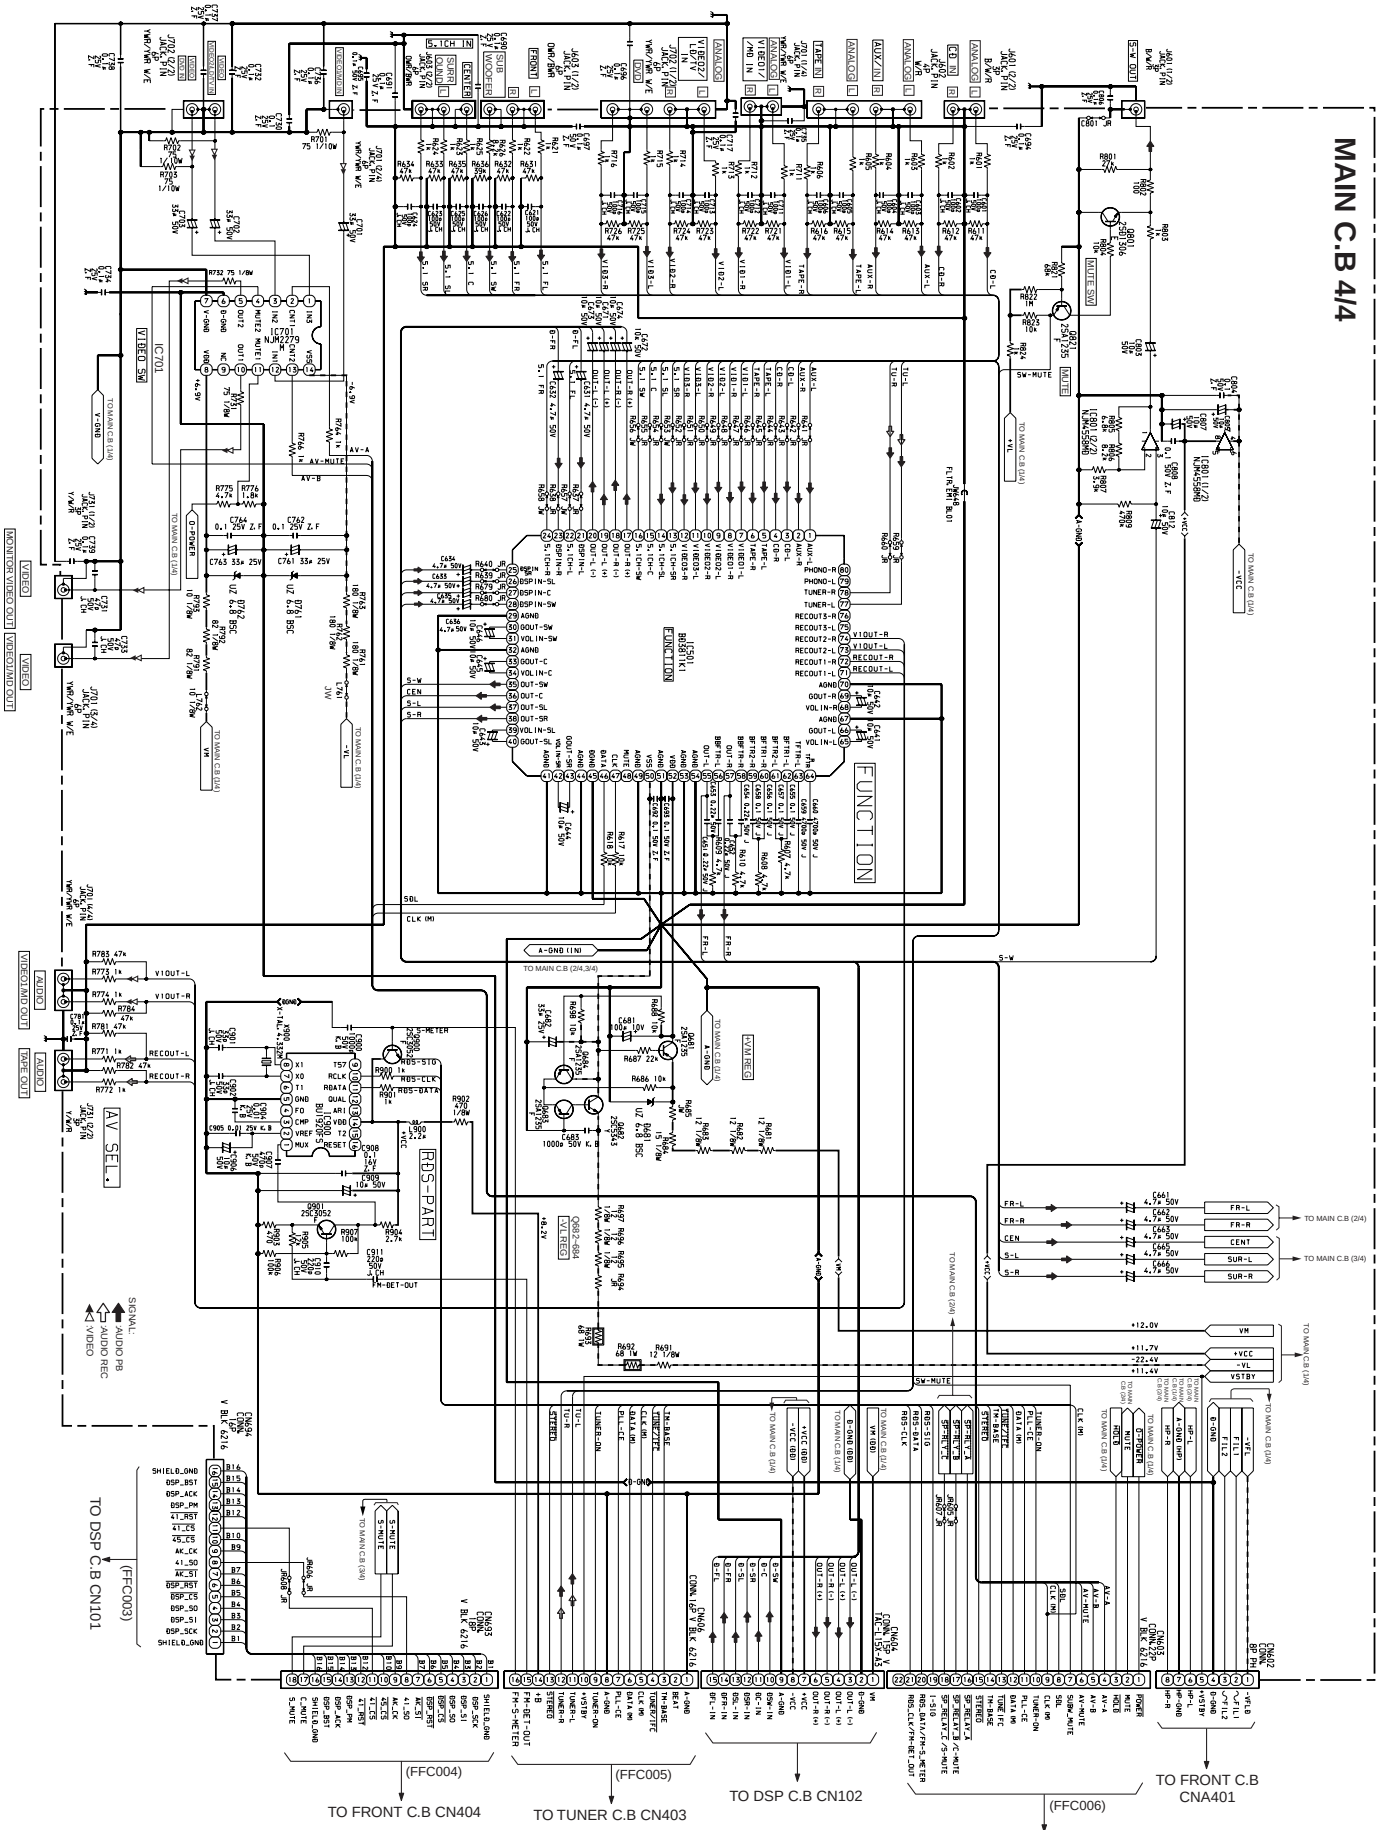







## EI 101




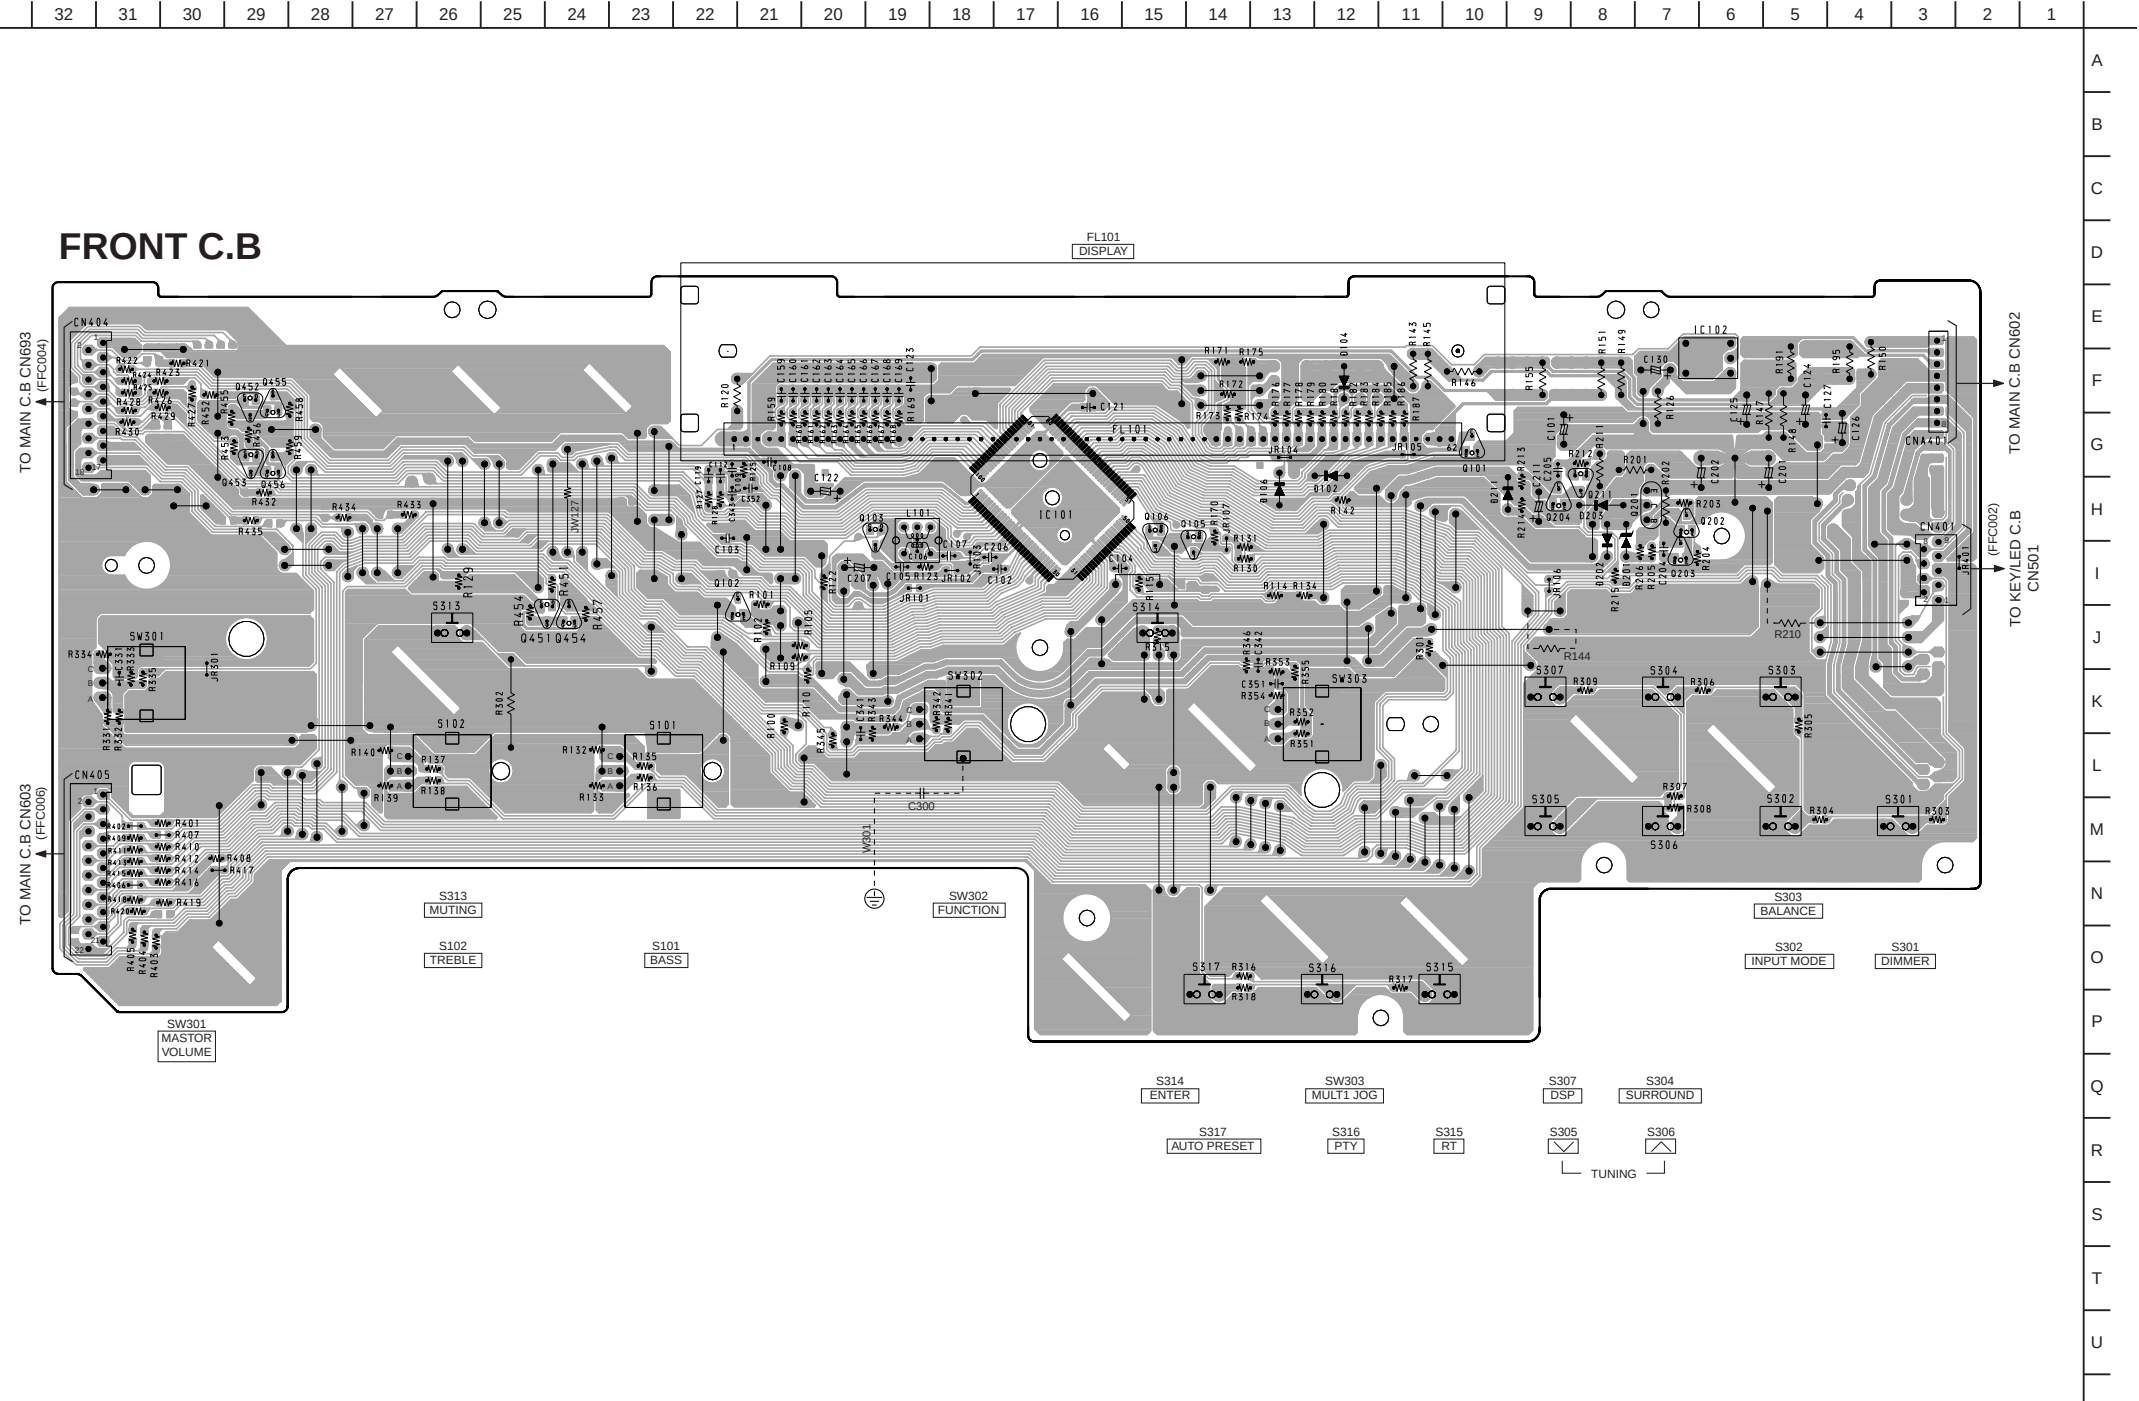




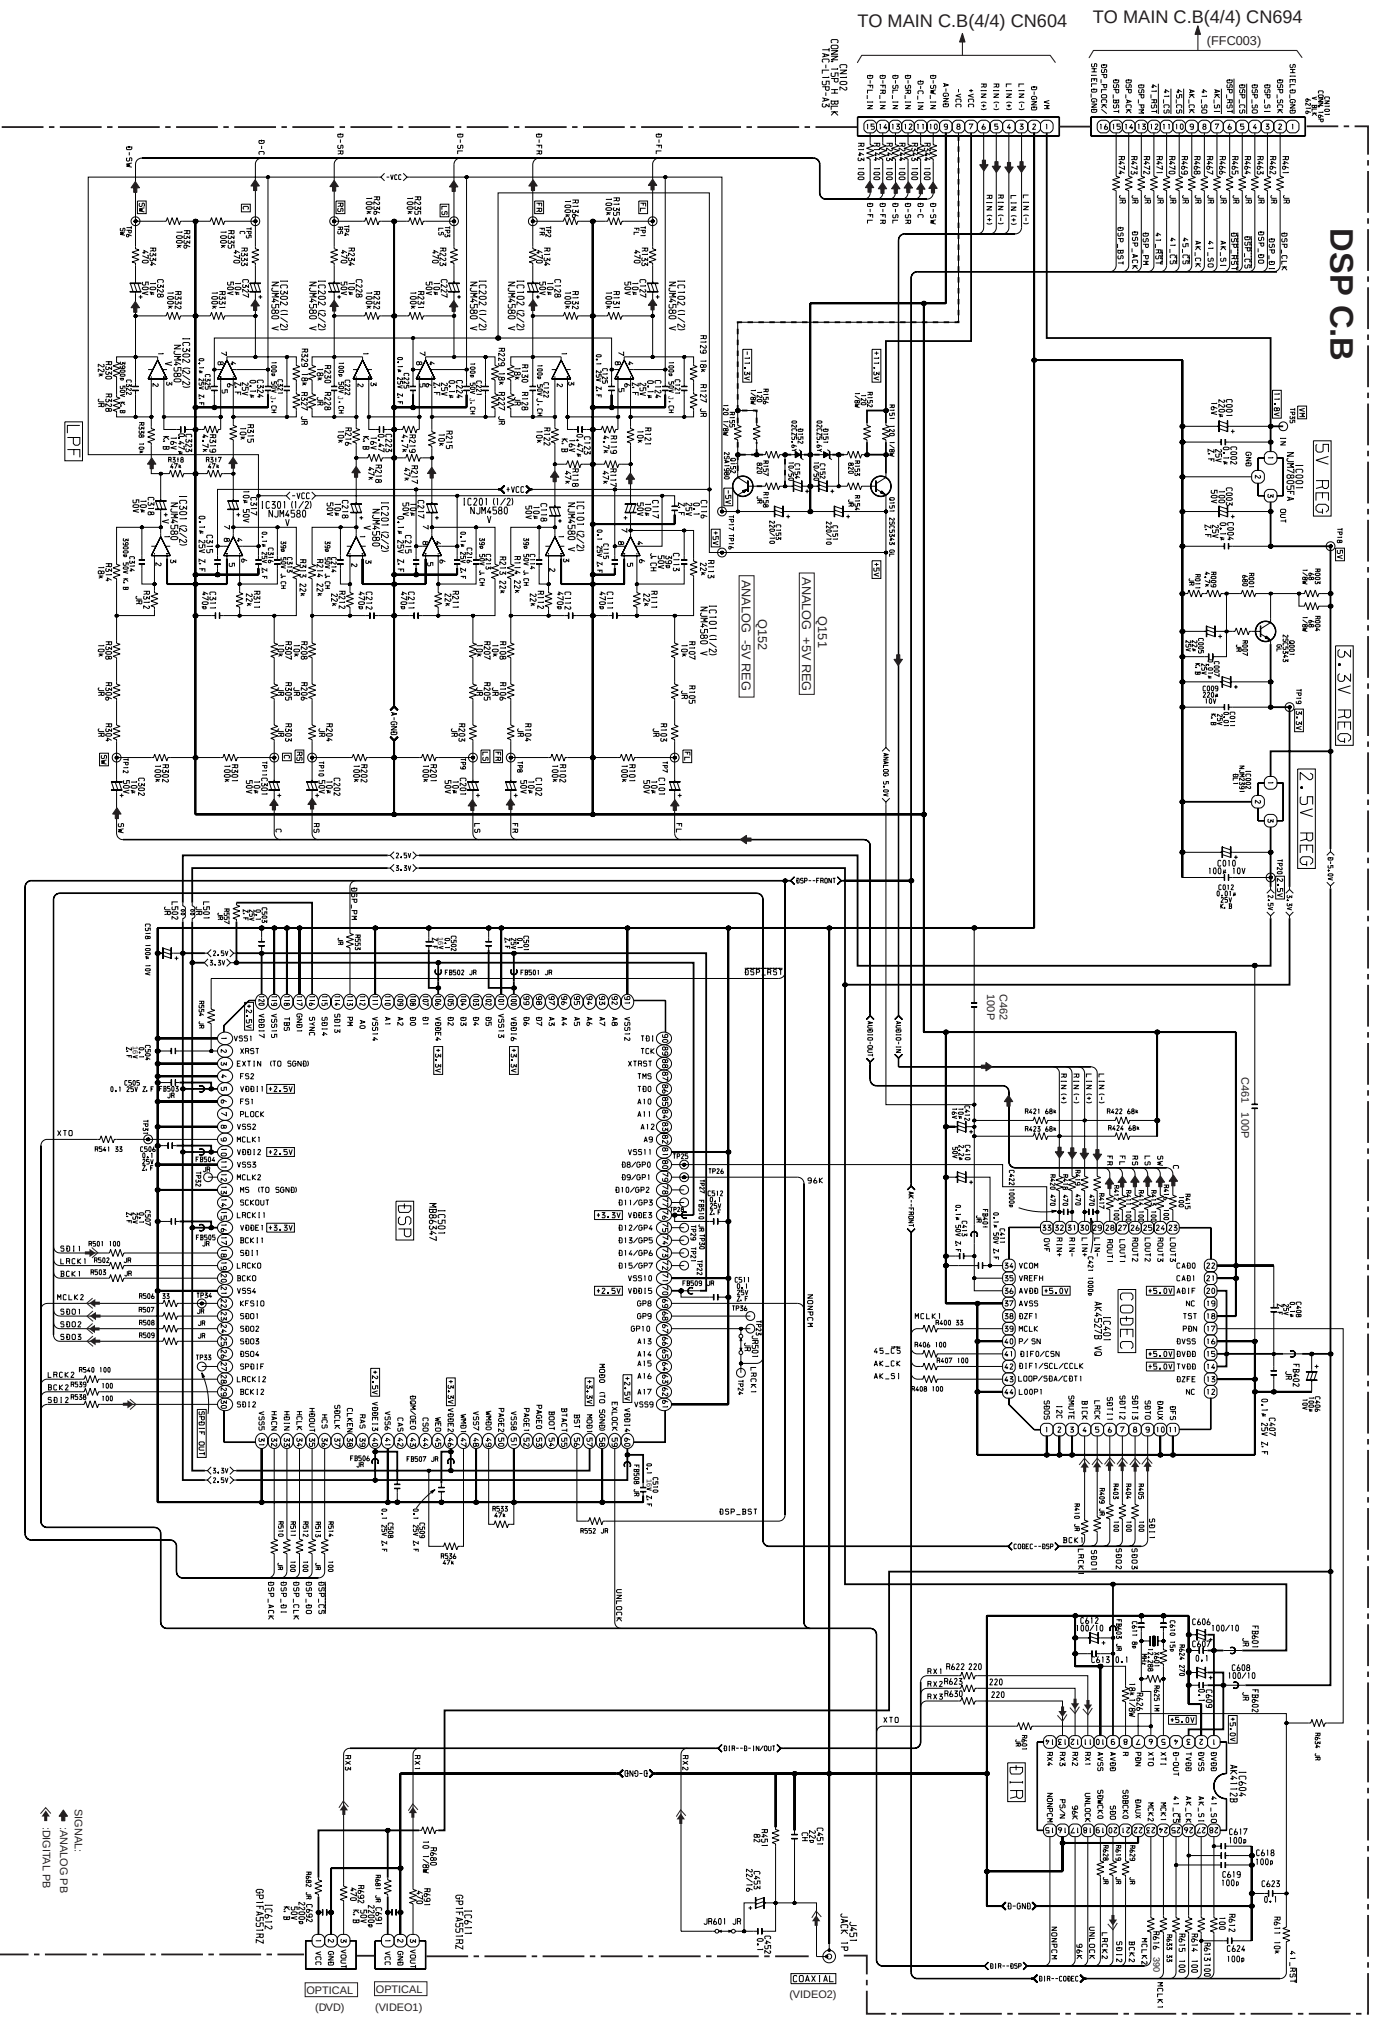




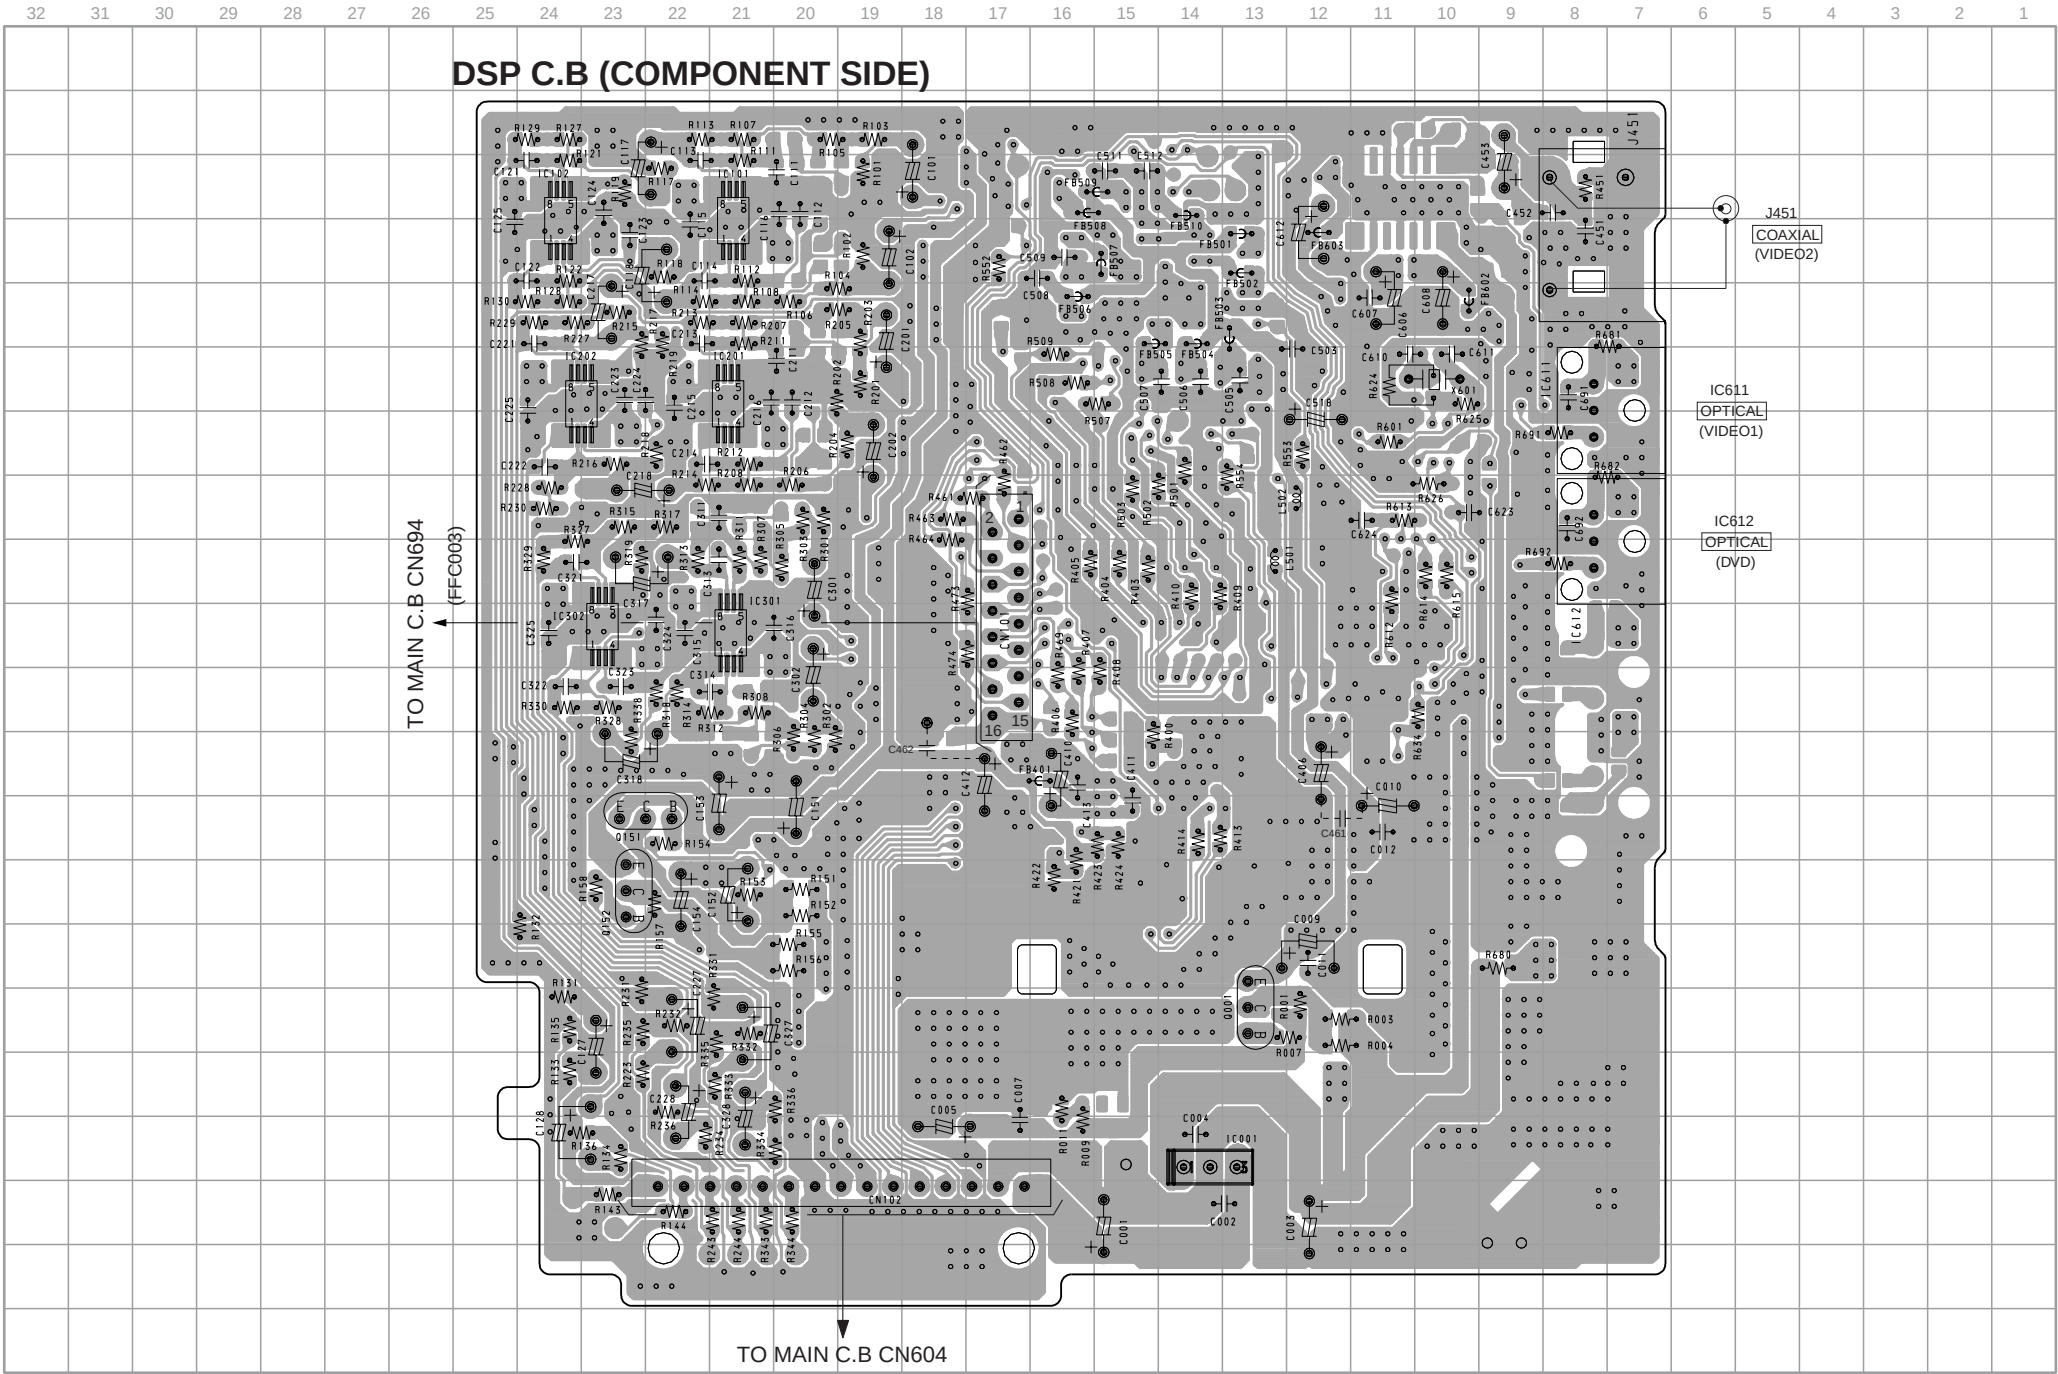

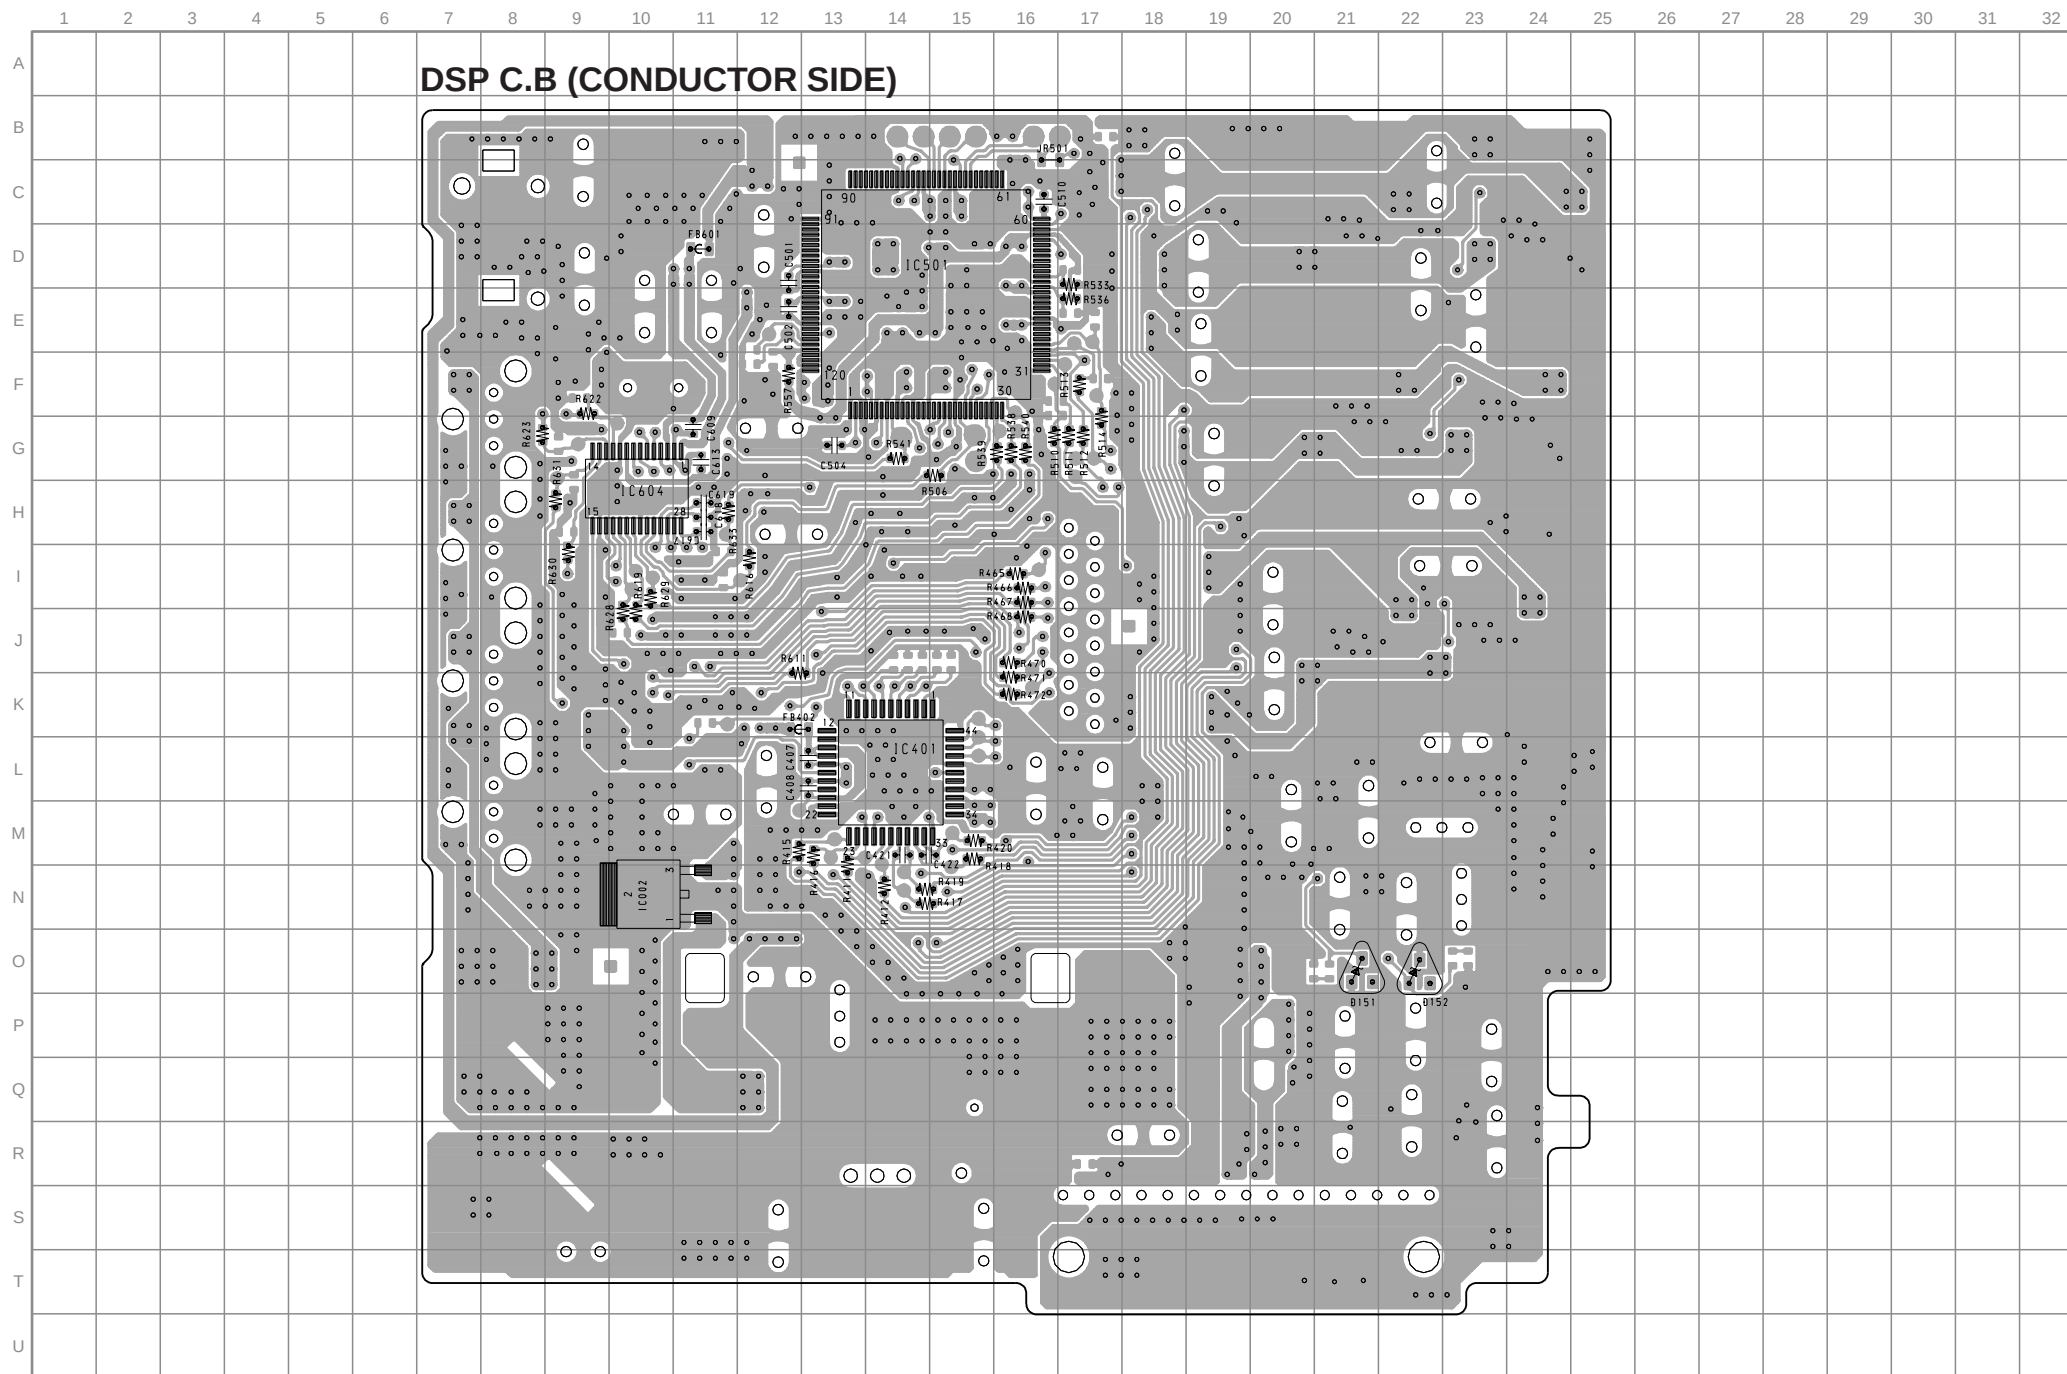



TO MAIN C.B (4/4) CN606  
(FC005)


# TUNER C.B

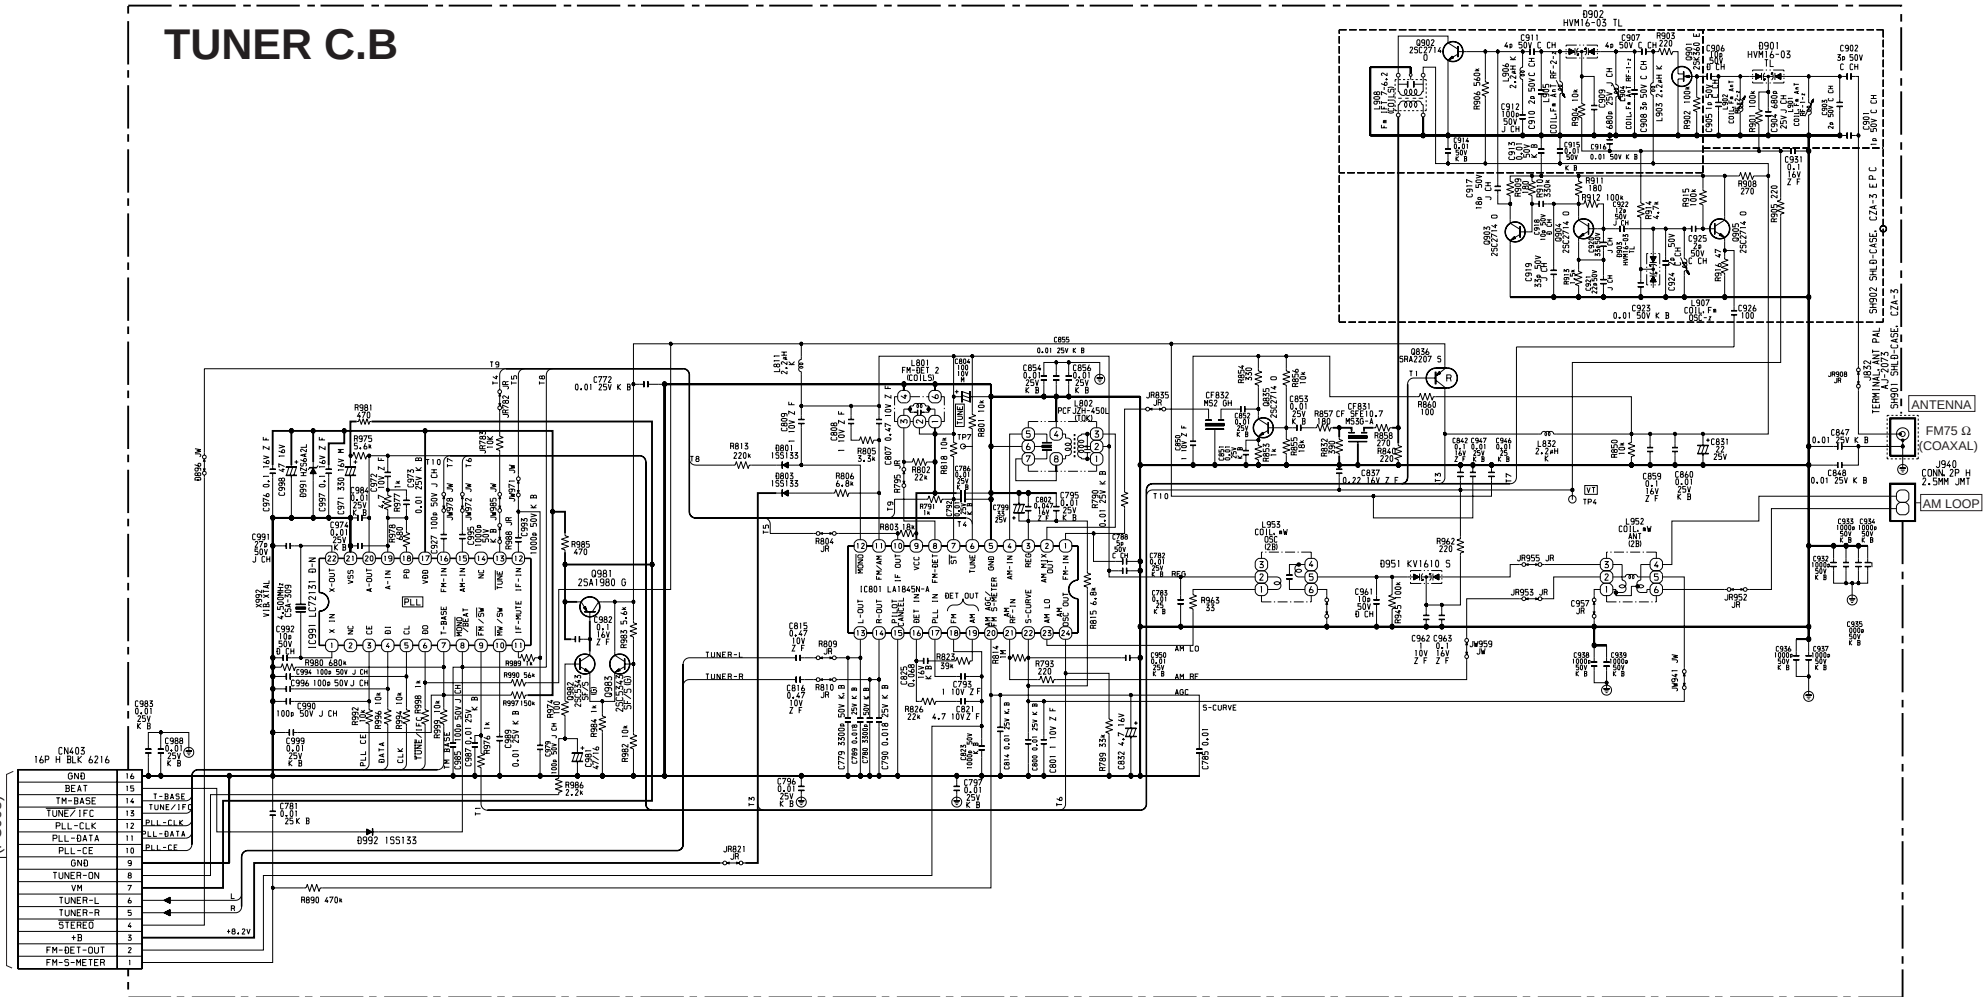



## TUNER C.B

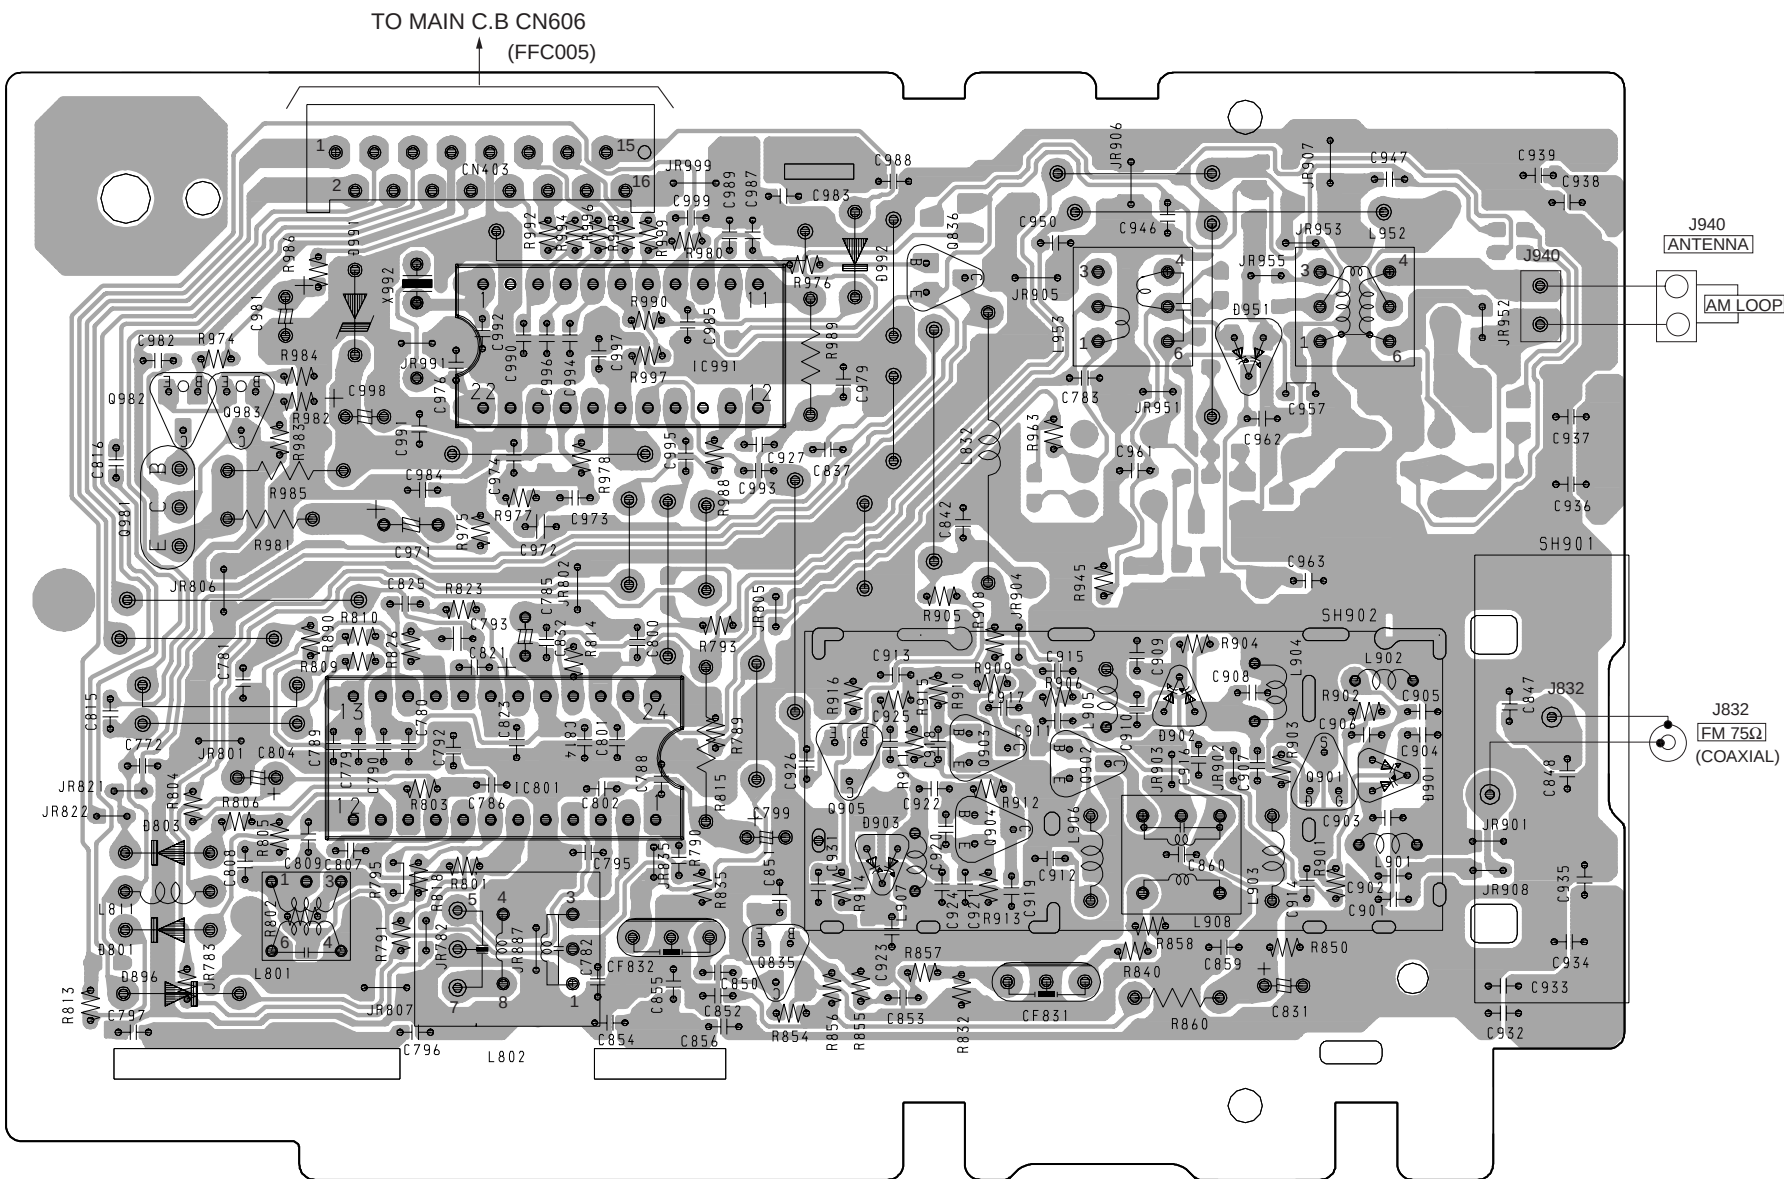

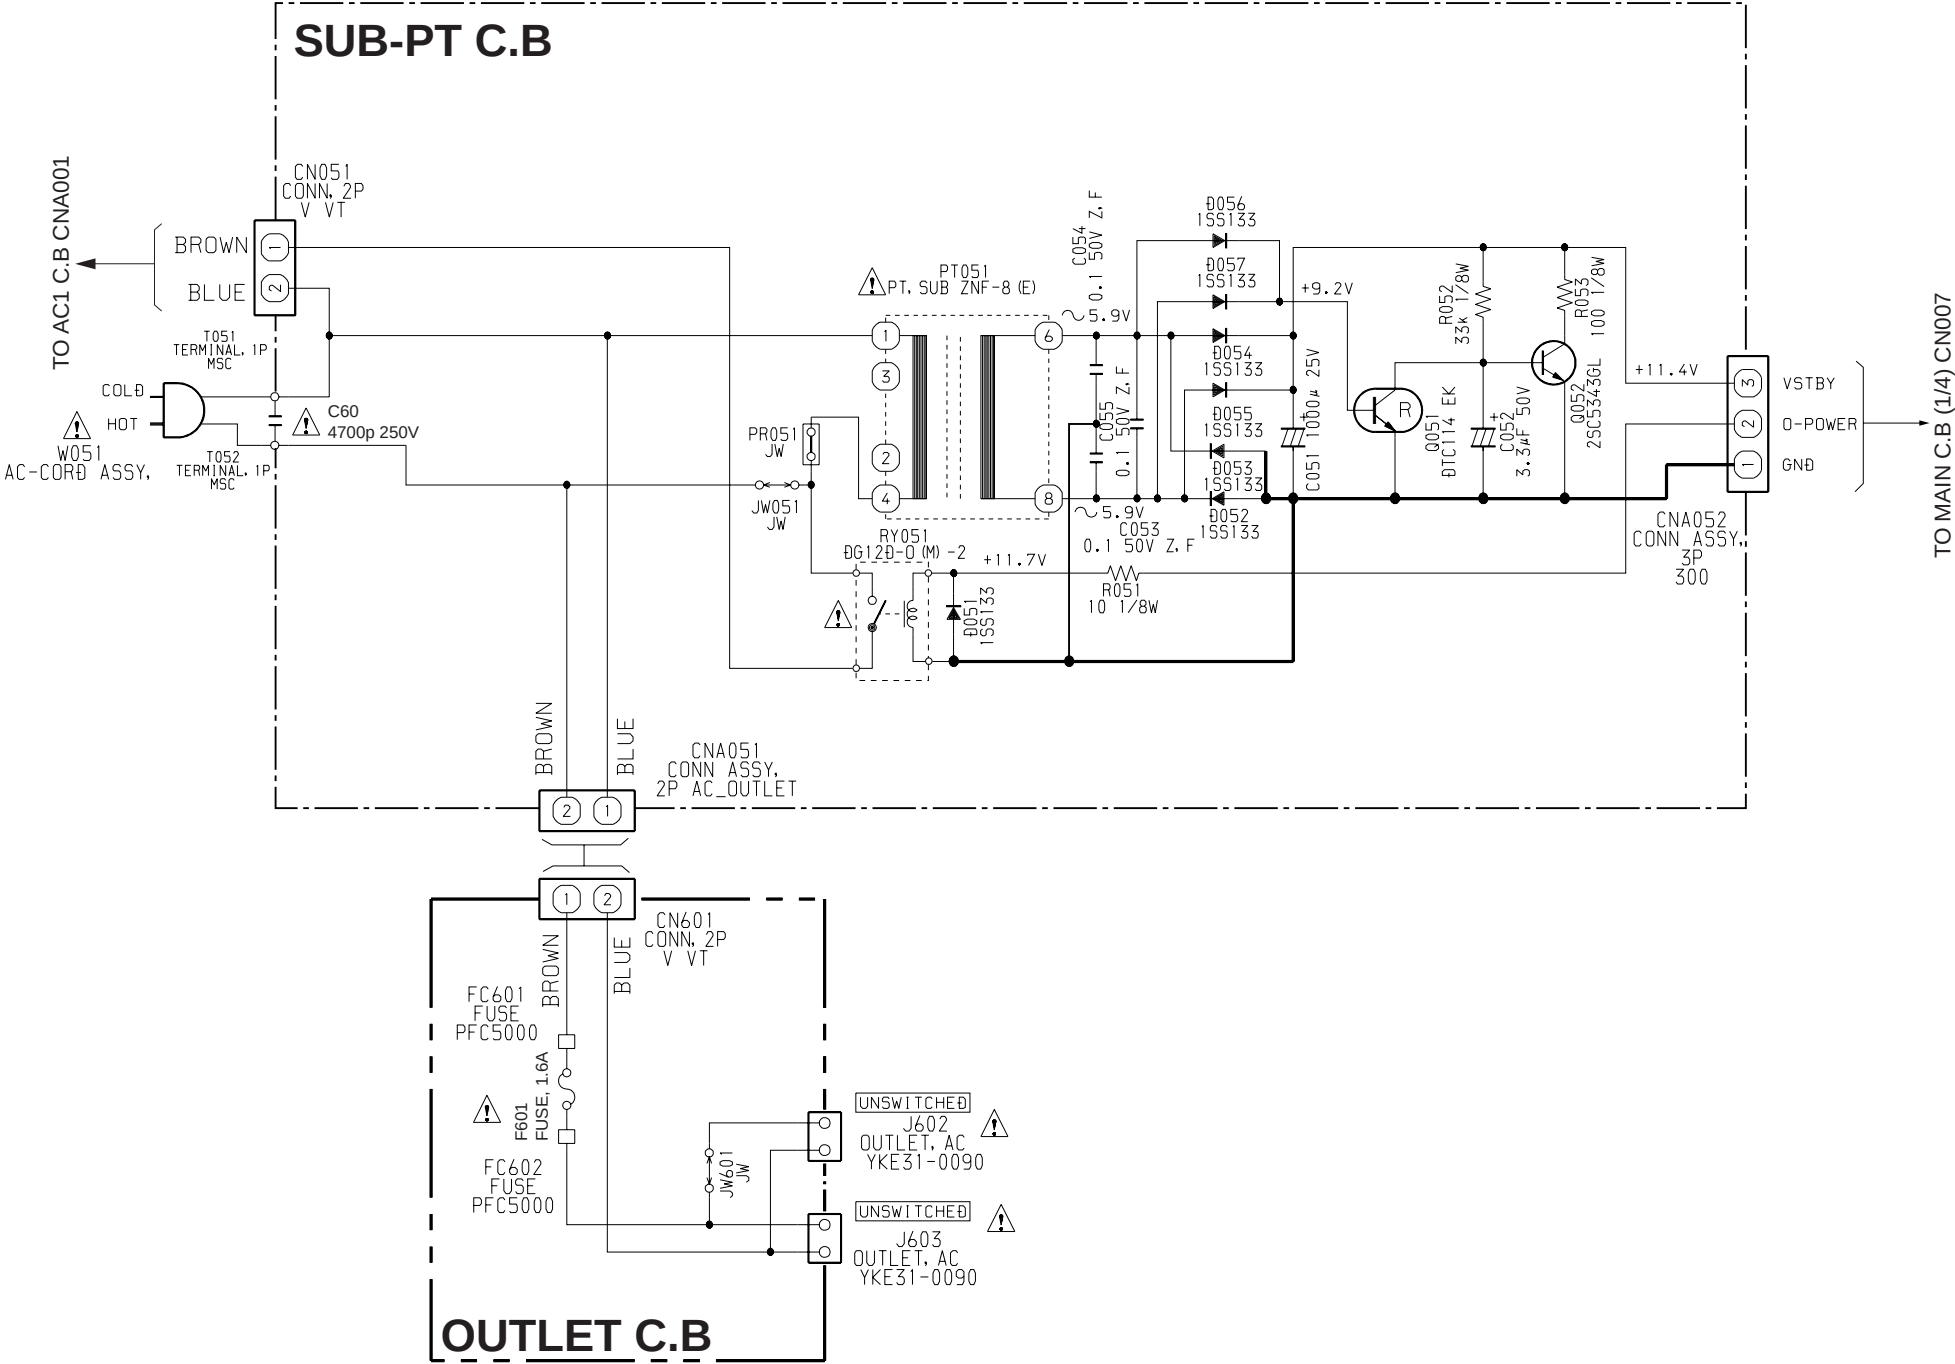

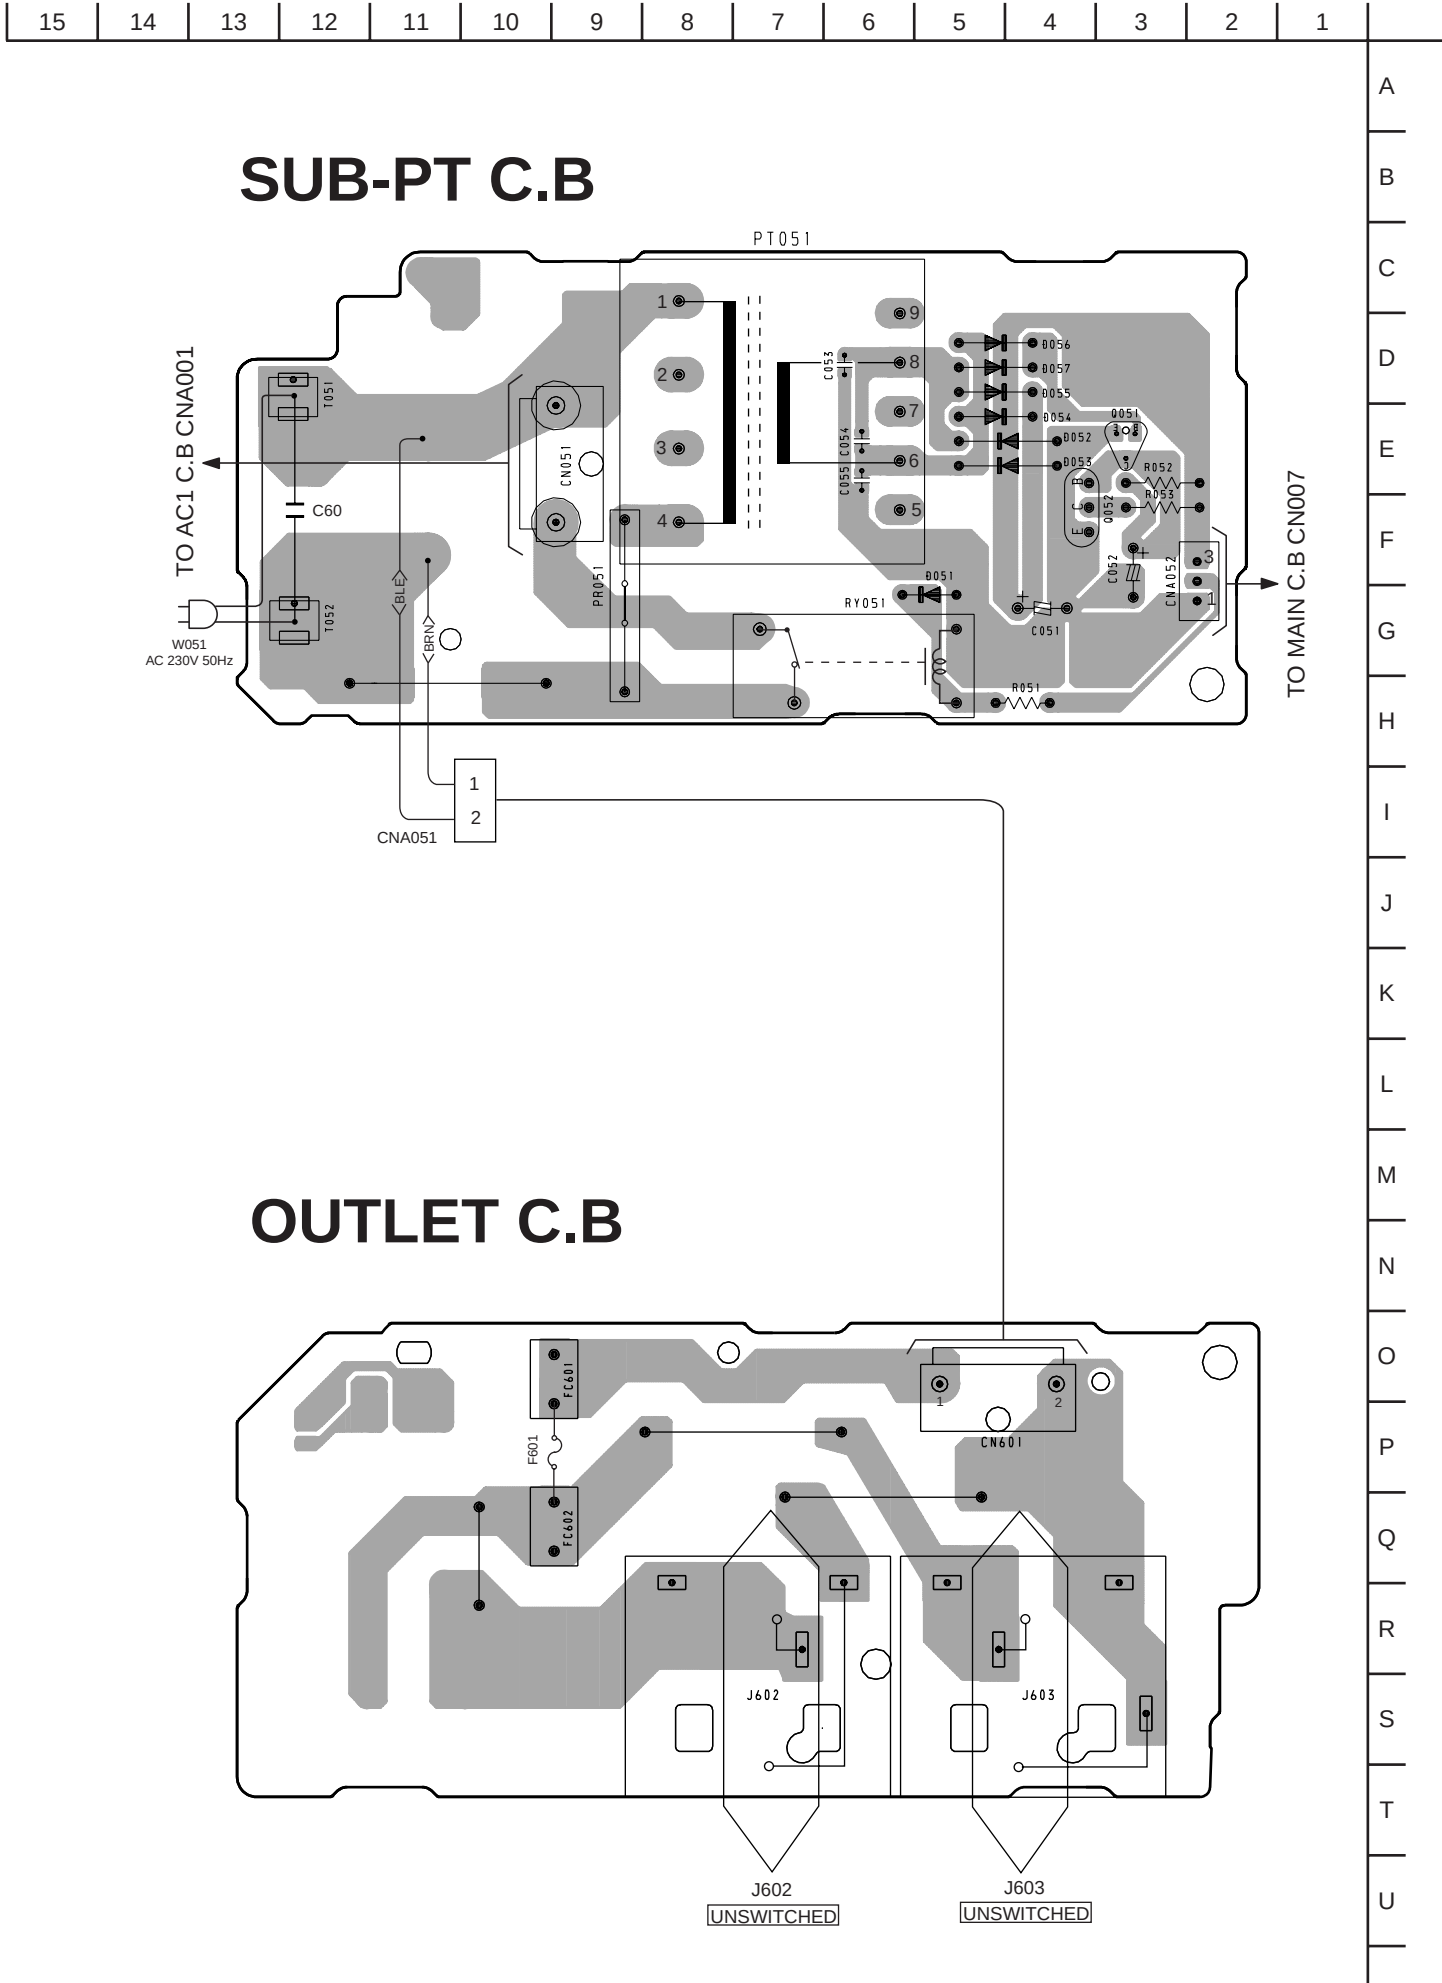

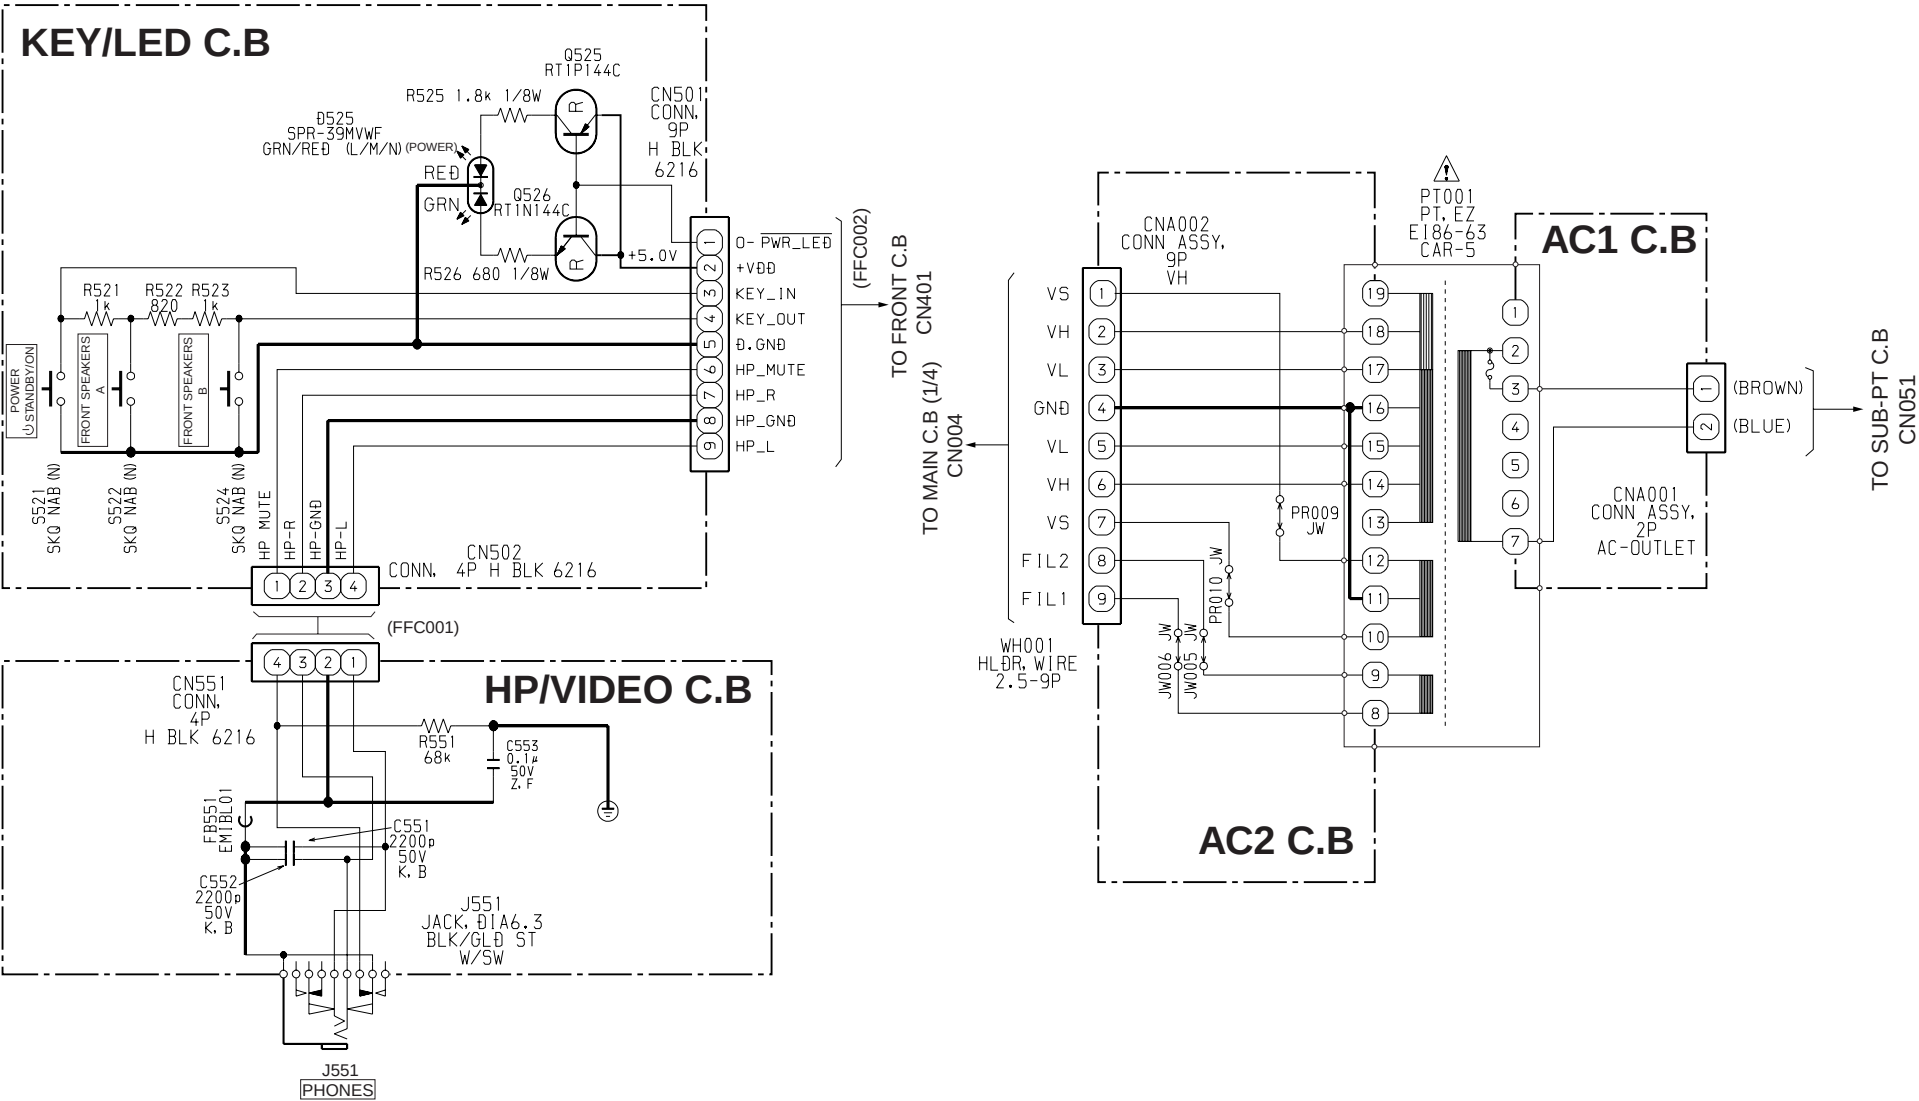

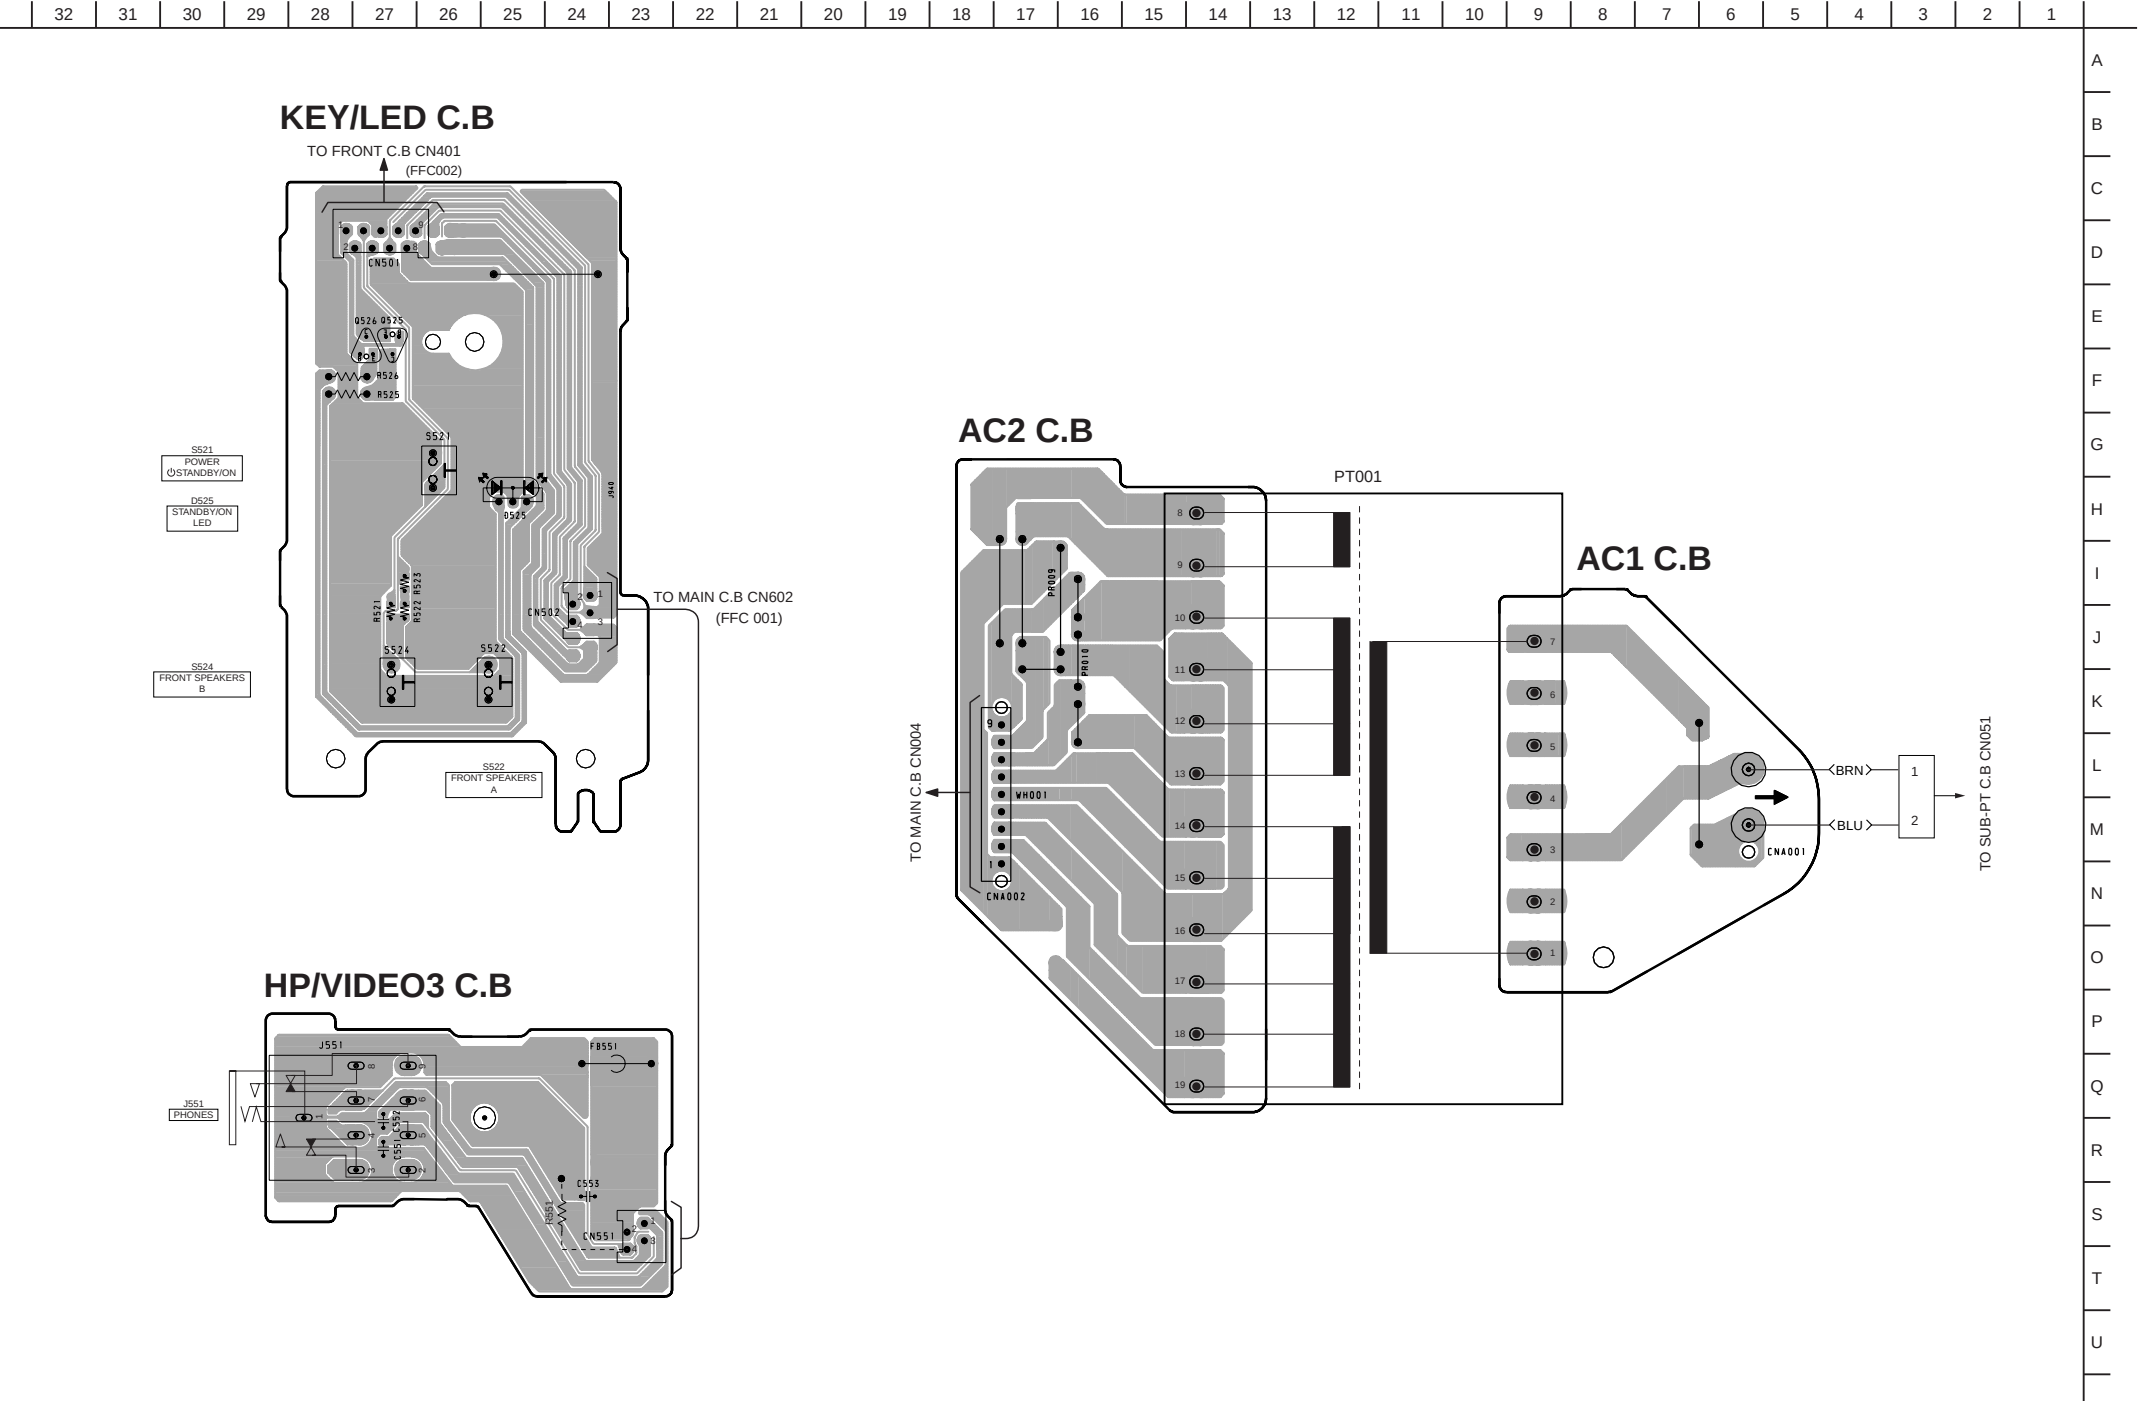




# LCD DIAGRAM -1/1 (HNA-11SM25 CAR-6)

## GRID ASSIGNMENT

| 1G               | 2G     | 3G    | 4G  | 5G | 6G  | 7G   | 8G | 9G | 10G            | 11G |
|------------------|--------|-------|-----|----|-----|------|----|----|----------------|-----|
| SP    OVER LEVEL | 192kHz | 96kHz | PCM |    |     | AUTO | VF |    | MUTING         |     |
| DIGITAL          | TONE   | SLEEP | RDS | AG | EON |      |    |    | mS             |     |
| PRO LOGIC II     |        |       |     |    |     |      |    |    | dB             |     |
| SOURCE DIRECT    |        |       |     |    |     |      |    |    | kHz            |     |
| STEREO           |        |       |     |    |     |      |    |    | MHz            |     |
|                  |        |       |     |    |     |      |    |    | ANALOG DIGITAL |     |


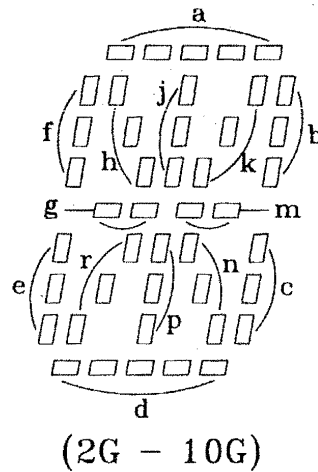


## ANODE CONNECTION

|     | 1G            | 2G     | 3G    | 4G    | 5G  | 6G  | 7G  | 8G   | 9G | 10G  | 11G     |
|-----|---------------|--------|-------|-------|-----|-----|-----|------|----|------|---------|
| P1  | SP            | 192kHz | —     | 96kHz | —   | PCM | —   | AUTO | VF |      |         |
| P2  |               | —      | —     | —     | —   | —   | —   | col  | —  |      |         |
| P3  |               | d      | d     | d     | d   | d   | d   | d    | d  | d    |         |
| P4  | OVER LEVEL    | n      | n     | n     | n   | n   | n   | n    | n  | n    |         |
| P5  |               | p      | p     | p     | p   | p   | p   | p    | p  | p    |         |
| P6  | DIGITAL       | r      | r     | r     | r   | r   | r   | r    | r  | r    |         |
| P7  | PRO LOGIC     | e      | e     | e     | e   | e   | e   | e    | e  | e    |         |
| P8  |               | c      | c     | c     | c   | c   | c   | c    | c  | c    |         |
| P9  | SOURCE DIRECT | g      | g     | g     | g   | g   | g   | g    | g  | g    | DIGITAL |
| P10 | STEREO        | m      | m     | m     | m   | m   | m   | m    | m  | m    | ANALOG  |
| P11 |               | f      | f     | f     | f   | f   | f   | f    | f  | f    | MHz     |
| P12 | —             | b      | b     | b     | b   | b   | b   | b    | b  | b    | kHz     |
| P13 | —             | k      | k     | k     | k   | k   | k   | k    | k  | k    | dB      |
| P14 | —             | j      | j     | j     | j   | j   | j   | j    | j  | j    | mS      |
| P15 | —             | h      | h     | h     | h   | h   | h   | h    | h  | h    | MUTING  |
| P16 | —             | a      | a     | a     | a   | a   | a   | a    | a  | a    | —       |
| P17 | —             | TONE   | SLEEP | —     | RDS | AG  | EON | Dp   |    | MONO | —       |

# ELECTRICAL ADJUSTMENT -1/4

## TUNER ADJUSTMENT

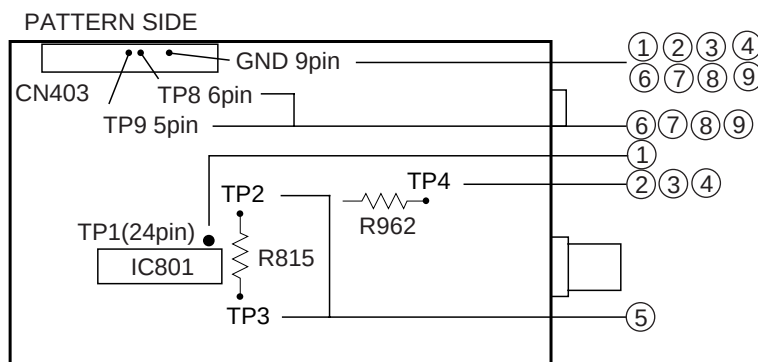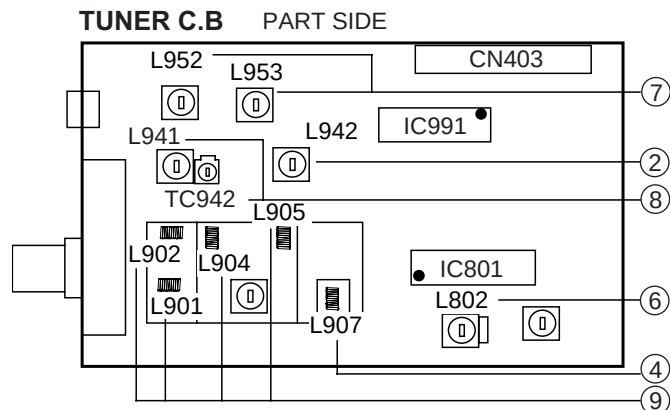


### 1. CLOCK CHECK

Requirements:

Measuring equipment: Frequency counter

Test point: TP1 (CLOCK), GND

- (1) Adjust the reception frequency of the main unit to 1,620KHz.
- (2) Check that the test point frequency is  $2,160 \pm 0.045\text{KHz}$ .

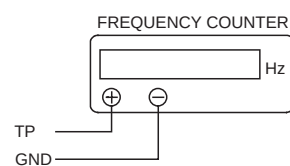

### 2. VT ADJUSTMENT (LW)


Requirements:

Measuring equipment: Digital multi-meter

Test point: TP4 (R962), GND

Adjustment point: L942

- (1) Adjust the reception frequency of the main unit to 144KHz.
- (2) Adjust L942 until the test point voltage (VT) is  $1.3\text{V} \pm 0.05\text{V}$ .

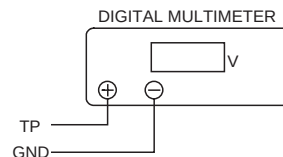


### 3. VT CHECK (MW)

Requirements:

Measuring equipment: Digital multi-meter

Test point: TP4 (R962), GND

- (1) Adjust the reception frequency of the main unit to 531KHz.
- (2) Check that the test point (VT) voltage is about 0.5V.
- (3) Adjust the reception frequency of the main unit to 1602KHz.
- (4) Check that the test point (VT) voltage is below 8.0V.

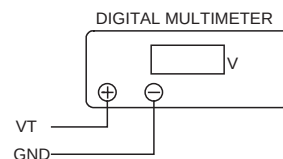

### 4. VT ADJUSTMENT & CHECK (FM)


Requirements:

Measuring equipment: Digital multi-meter

Test point: TP4 (R962), GND

Adjustment point: L907

- (1) Adjust the reception frequency of the main unit to 108.0MHz.
- (2) Adjust L907 until the test point voltage (VT) is  $7.0\text{V} \pm 0.1\text{V}$ .
- (3) Adjust the reception frequency of the main unit to 87.5MHz.
- (4) Check that the test point (VT) voltage is about 0.5V.

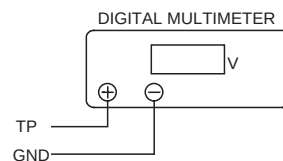

## ELECTRICAL ADJUSTMENT -2/4


### 5. DC BALANCE CHECK

#### Requirement

Measuring equipment: Digital multi-meter


Test point: TP2, 3

- (1) Adjust the reception frequency of the main unit to 98.0MHz.
- (2) Check that the test point voltage difference between TP2 and TP3 is  $0\text{mV} \pm 500\text{mV}$ .

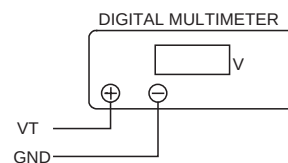

### LW/MW ADJUSTMENT

For LW / MW adjustment, do wiring and connection as in the following.

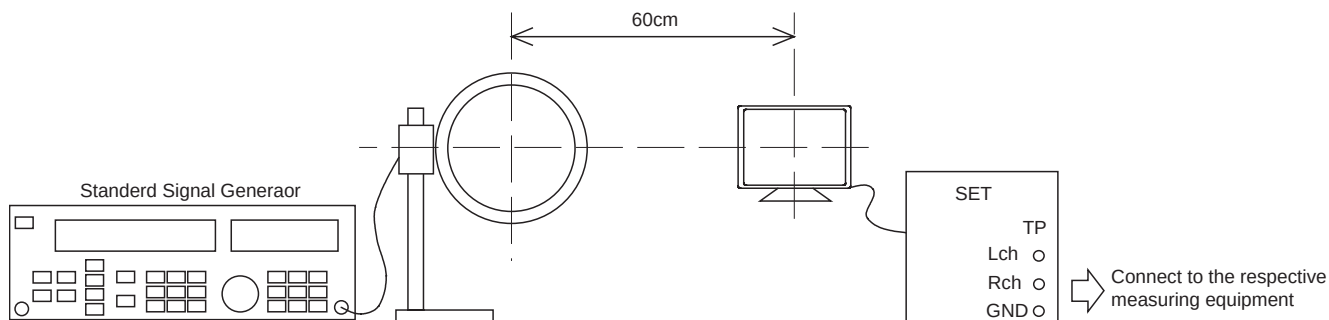

### 6. IF ADJUSTMENT (MW)


#### Requirement

Measuring equipment: Oscilloscope or Millivoltmeter

Test point: TP8(Lch), TP9(Rch), GND

Adjustment point: L802

- (1) Adjust the setting of Standard Signal Generator (hereinafter S.S.G.) to 999KHz of 30% variation.
- (2) Adjust the receiving frequency of the main unit at 999KHz.
- (3) While looking at the waveform on the oscilloscope, reduce the output level all the way (till a certain degree of is monitored through the oscilloscope).
- (4) Adjust L802 until the waveform of the oscilloscope reaches the maximum.

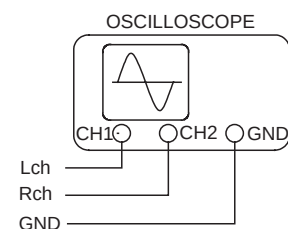

### 7. TRACKING ADJUSTMENT (MW)


#### Requirement

Measuring equipment: Millivoltmeter

Test point: TP8(Lch), TP9(Rch), GND

Adjustment point: L952, L953

- (1) Adjust the S.S.G. setting to 999KHz of 30% variation and reduce the output level all the way (till a certain degree of is monitored through the oscilloscope).
- (2) Adjust the reception frequency of the main unit to 999KHz.
- (3) Adjust L952 until the value of the millivoltmeter reaches the maximum.
- (4) Adjust the S.S.G. setting to 603KHz of 30% variation and reduce the output level all the way (till a certain degree of is monitored through the oscilloscope).
- (5) Adjust the reception frequency of the main unit to 603KHz.
- (6) Adjust L953 until the value of the millivoltmeter reaches the maximum.
- (7) Repeat the adjustment 2 or 3 times from step 1 to 6 above.

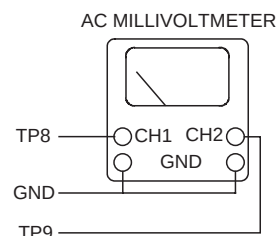

## ELECTRICAL ADJUSTMENT -3/4

### 8. TRACKING ADJUSTMENT (LW)


#### Requirement

Measuring equipment: Millivoltmeter

Test point: TP8(Lch), TP9(Rch), GND


Adjustment point: L941, TC942

- (1) Adjust the S.S.G. setting to 144KHz of 30% variation and reduce the output level all the way (till a certain degree of is monitored through the oscilloscope).
- (2) Adjust the reception frequency of the main unit to 144KHz.
- (3) Adjust L941 until the value of the millivoltmeter reaches the maximum.
- (4) Adjust the S.S.G. setting to 290KHz of 30% variation and reduce the output level all the way (till a certain degree of is monitored through the oscilloscope).
- (5) Adjust the reception frequency of the main unit to 290KHz.
- (6) Adjust TC942 until the value of the millivoltmeter reaches the maximum.
- (7) Repeat the adjustment 2 or 3 times from step 1 to 6 above.

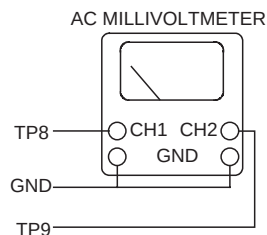

### FM ADJUSTMENT

For adjusting FM, do wiring function and connection as in the following.

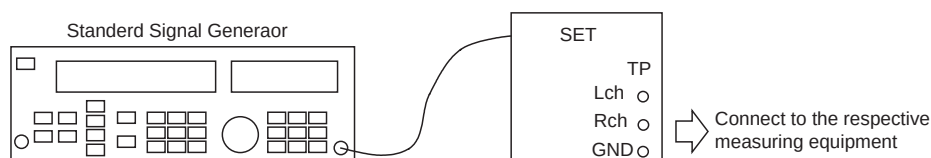

### 9. TRACKING ADJUSTMENT (FM)


#### Requirement

Measuring equipment: millivoltmeter

Test point: TP8(Lch), TP9(Rch), GND


Adjustment point: L901, L902, L904, L905

- (1) Adjust the S.S.G. setting to 144KHz of 30% variation and reduce the output level all the way (till a certain degree of is monitored through the oscilloscope).
- (2) Adjust L905 > L904 > L902 > L901 until the value of the millivoltmeter reaches the maximum.
- (3) Adjust L901 > L902 > L904 > L905 until the value of the millivoltmeter reaches the maximum.
- (4) Repeat the adjustment 2 or 3 times from step 2 to 3 above.

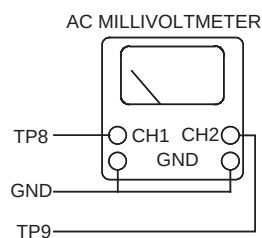

## ELECTRICAL ADJUSTMENT -4/4

### CLOCK ADJUSTMENT

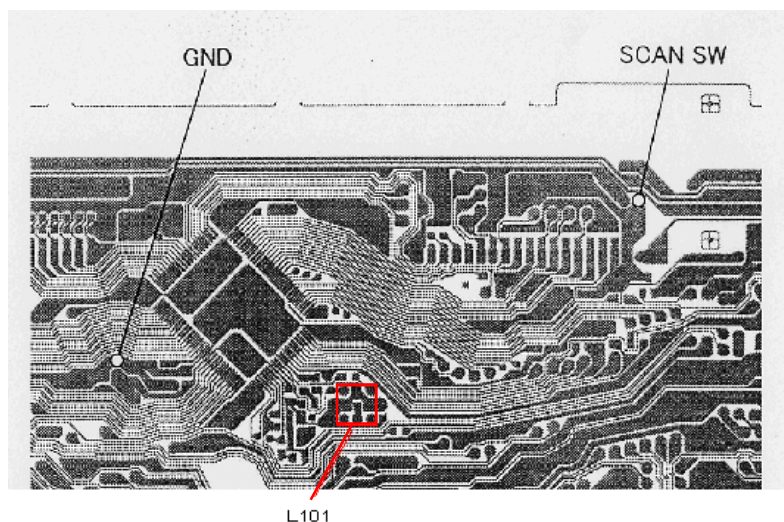

#### 1. CLOCK ADJUSTMENT

Requirements

Measuring equipment: Frequency counter


Test point: SCAN SW, GND

Adjustment point: L101


- (1) While pressing and holding down the POWER button and the TUNER button, insert the AC plug to outlet.
- (2) Adjust L101 so that the oscilloscope indicates the frequency within  $78.315 \pm 0.78\text{Hz}$ .

IC BLOCK DIAGRAM -1/1


IC, NJM2279M

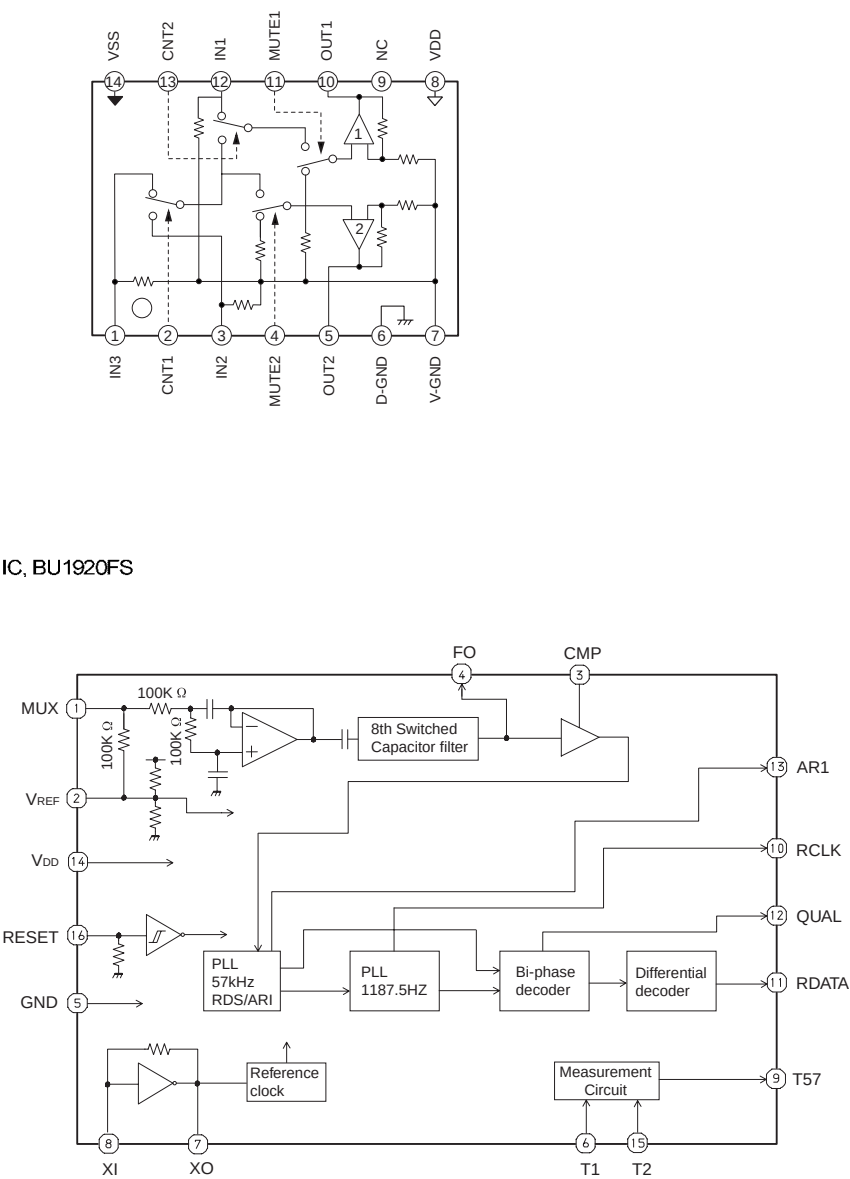


IC, LC7213D-N

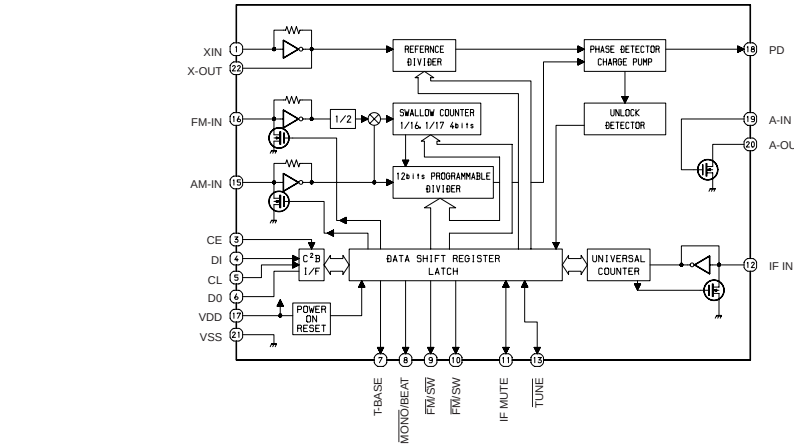

IC, BU1920FS

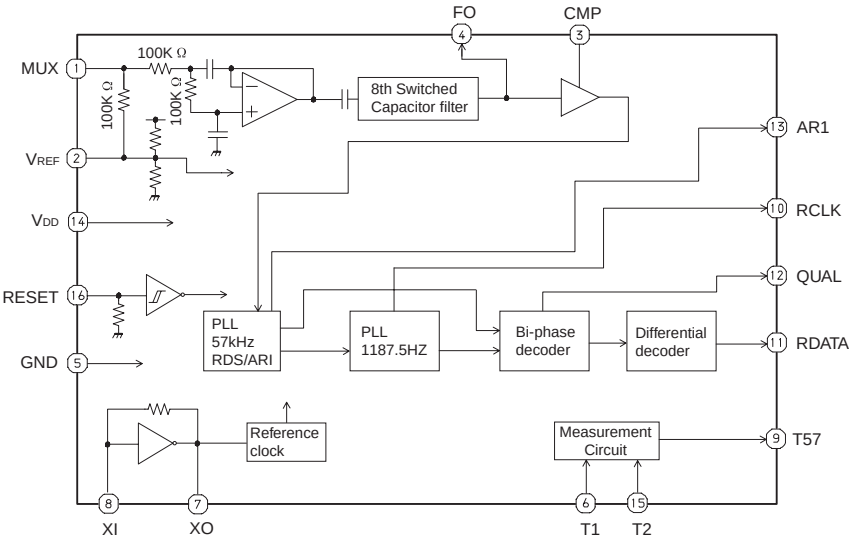

IC, LA1845N-A

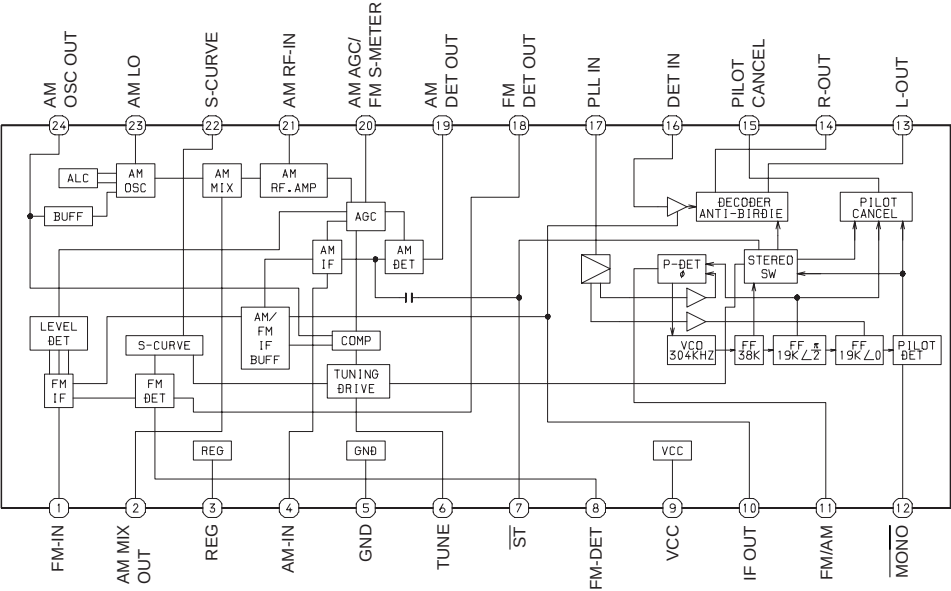

# IC DESCRIPTION -1/5(IC,UPD784975A-307-3BA) -1/2

| Pin No. | Pin Name    | I/O | Description                                                                  |
|---------|-------------|-----|------------------------------------------------------------------------------|
| 1       | AVDD        | O   | Analog power supply of A/D converter.                                        |
| 2       | HOLD        | I   | HOLD input.                                                                  |
| 3       | I-RE_VOL    | I   | MAIN VOL input. (Rotary encoder) AD input.                                   |
| 4       | I-RDS_SIG   | I   | RDS SIG input.                                                               |
| 5       | I-RE_MULTI  | I   | MULTI JOG input. (Rotary encoder) AD input.                                  |
| 6       | I-RE_FUNC   | I   | FUNCTION encoder input.                                                      |
| 7       | I-KEY1      | I   | Key input 1.                                                                 |
| 8       | I-KEY2      | I   | Key input 2.                                                                 |
| 9       | I-TUNE/IFC  | I   | TUNE/IFC detection input to tuner.                                           |
| 10      | NC          | –   | No connected.                                                                |
| 11      | NC          | –   | No connected.                                                                |
| 12      | I-DSP_SO2   | I   | MB86347 data input.                                                          |
| 13      | I-41_SO2    | I   | AK4112 serial data output.                                                   |
| 14      | AVSS        | –   | Ground potential of A/D converter. Same voltage VSS1.                        |
| 15      | VSS1        | –   | Ground potential (Excluding port and analog blocks).                         |
| 16,17   | X1, X2      | –   | External crystal for main system colck oscillation is connected to this pin. |
| 18      | VDD1        | –   | Positive voltage (Excluding port, analog, FIP controller/driver).            |
| 19      | IC          | –   | High voltage connection port during program write/verification.              |
| 20      | I-RMC       | I   | Remote control input. (Active "L").                                          |
| 21      | O-CLK_SHIFT | O   | Microprocessor shift clock output.                                           |
| 22      | O-AK_SI     | O   | AK4527,AK4112 serial data output.                                            |
| 23      | O-AK_CK     | O   | AK4527,AK4112 clock output.                                                  |
| 24      | O-45_CS     | O   | AK4527 chip relect output.                                                   |
| 25      | O-41_CS     | O   | AK4112 chip relect output.                                                   |
| 26      | NC          | –   | No connected.                                                                |
| 27      | I-RDS_CLK   | I   | RDS clock input.                                                             |
| 28      | I-RDS_DATA  | I   | RDS data input.                                                              |
| 29      | O-DSP_SCK   | O   | MB86347 clock data output.                                                   |
| 30      | O-DSP_SI    | –   | MB86347 rerial data output.                                                  |
| 31      | O-41_RESET  | O   | AK4112 RESET output.                                                         |
| 32      | O-KEY_SCAN  | O   | Scan output for diode input.                                                 |
| 33      | O-TUNER_ON  | I   | TUNE/IFC detection input to tuner.                                           |
| 34      | O-POWER     | O   | System power ON.                                                             |
| 35      | O-S_MUTE    | O   | Surround speaker output. Mute ON/OFF contral output.                         |
| 36      | O-MUTE      | O   | System mute ON/OFF control output.                                           |
| 37      | O-C_MUTE    | O   | Center speaker output. Mute ON/OFF contral output.                           |
| 38      | O-SUBW_MUTE | O   | SUB WOOFER output. Mute ON/OFF control output.                               |
| 39      | O-RLY_A     | –   | SPEAKER_RELAY output. (Used when switching the RELAY_A ON/OFF).              |
| 40      | VSS0        | –   | Port block ground potential.                                                 |
| 41      | VDD0        | –   | Port block positive potential.                                               |
| 42      | RESET       | –   | Reset.                                                                       |

# IC DESCRIPTION -1/5(IC,UPD784975A-307-3BA) -2/2

| Pin No. | Pin Name               | I/O | Description                                                                     |
|---------|------------------------|-----|---------------------------------------------------------------------------------|
| 43      | O-SDL                  | O   | FUNCTION IC.                                                                    |
| 44      | O-CLK(M)               | O   | FUNCTION IC,PLL,SW VOL clock output.                                            |
| 45      | O-DATA(M)              | O   | FUNCTION IC,PLL,SW VOL data output.                                             |
| 46      | I-TM_BASE              | I   | Watch reference clock input.                                                    |
| 47      | O-PLL_CE               | O   | Tuner PLL chip enable output.                                                   |
| 48      | O-DSP_CS               | O   | MB86347 chip select output.                                                     |
| 49      | O-DSP_RESET            | O   | DSP reset output.                                                               |
| 50      | O-PWR_LED              | O   | POWER_LED output.                                                               |
| 51      | O-RLY_C                | O   | SPEAKER_RELAY output. (Used when switching the RELAY_A+B ON/OFF).               |
| 52      | O-RLY_B                | O   | SPEAKER_RELAY output. (Used when switching the RELAY_B ON/OFF).                 |
| 53      | O-RLY_A                | O   | SPEAKER_RELAY output. (Used when switching the RELAY_A ON/OFF).(No connected.)  |
| 54      | O_AV_MUTE              | O   | Video signal MUTE output.                                                       |
| 55,56   | O_AV_B,O_AV_A          | O   | Video signal select output.                                                     |
| 57      | SW_RELAY               | O   | AC OUTLET ON/OFF output.                                                        |
| 58      | NC                     | –   | No connected.                                                                   |
| 59      | I-DSP_PLOCK            | I   | DSP PLL clock input.                                                            |
| 60      | O-DSP_PM               | O   | RESET input of DSP PLL.                                                         |
| 61      | I-DSP_ACK2             | I   | DSP ACK output.                                                                 |
| 62      | DSP_BST                | –   | Bootstrap signal.                                                               |
| 63      | NOT FOR USE            | –   | Not used pin.(It connected with GND through 100kΩ)                              |
| 64,65   | I-RE_BASS2, I-RE_BASS1 | I   | BASS VOL input. (Rotary encoder) input.                                         |
| 66,67   | I-RE_TRE2, I-RE_TRE1   | I   | TREBLE VOL input. (Rotary encoder) input.                                       |
| 68      | I-HP_MUTE              | I   | Headphones insertion detection output: “L”:STEREO.(No connected)                |
| 69      | I-STEREO               | I   | Stereo detection: “L”:STEREO.                                                   |
| 70-72   | P1-P3                  | O   | LCD segment output (S1-S3).                                                     |
| 73      | P4                     | I/O | LCD segment output (S4)/DIODE input. “LW”.                                      |
| 74      | P5                     | I/O | LCD segment output (S5)/DIODE input. “RDS”.                                     |
| 75      | P6                     | I/O | LCD segment output (S6)/DIODE input. “AMST/WIDE”.                               |
| 76      | P7                     | I/O | LCD segment output (S7)/DIODE input. “AM10K”.                                   |
| 77      | P8                     | I/O | LCD segment output (S8)/DIODE input. “KARAOKE”.                                 |
| 78      | P9                     | I/O | LCD segment output (S9)/DIODE input. “FEET/NETER”.                              |
| 79      | VDD2                   | –   | Positive voltage power supply for FIP controlller/driver.                       |
| 80      | -VFL                   | –   | External pull-down resistor for FIP controller/driver is connected to this pin. |
| 81      | P10                    | I/O | LCD segment output (S10)/DIODE input: 96KHz input.                              |
| 82      | P11                    | I/O | LCD segment output (S11)/DIODE input DIGITAL1 input.                            |
| 83      | P12                    | I/O | LCD segment output (S12)/DIODE input DIGITAL2 input.                            |
| 84-88   | P13-P17                | I/O | LCD segment output (S13-S17).                                                   |
| 89      | NC                     | –   | No connected.                                                                   |
| 90-100  | G11-G1                 | O   | FL grid output (G11-G1).                                                        |



# IC DESCRIPTION -2/5 (IC,AK4112B) -1/1

| Pin No. | Pin Name                   | I/O | Function                                                                                                                            |
|---------|----------------------------|-----|-------------------------------------------------------------------------------------------------------------------------------------|
| 1       | DVDD                       | –   | Digital Power Supply Pin, 3.3V.                                                                                                     |
| 2       | DVSS                       | –   | Digital Ground Pin.                                                                                                                 |
| 3       | TVDD                       | –   | Input Buffer Power Supply Pin, 3.3V or 5V.                                                                                          |
| 4       | D-OUT                      | O   | Transmit channel (through data) Output Pin in Serial Mode. (No connected.)                                                          |
| 5       | XTI                        | I   | X'tal Input Pin.                                                                                                                    |
| 6       | XTO                        | O   | X'tal Output Pin.                                                                                                                   |
| 7       | PDN                        | I   | Power-Down Mode Pin. When "L", the AK4112B is powered-down and reset.                                                               |
| 8       | R                          | –   | External Resistor Pin 18K $\Omega$ $\pm$ 1% resistor to AVSS externally.                                                            |
| 9       | AVDD                       | –   | Analog Power Supply Pin.                                                                                                            |
| 10      | AVSS                       | –   | Analog Ground Pin.                                                                                                                  |
| 11      | RX1                        | I   | Receiver Channel 1. This channel is selected in Parallel Mode or default of Serial Mode.                                            |
| 12      | DIF0                       | I   | Audio Data Interface Format 0 Pin in Parallel Mode.                                                                                 |
|         | RX2                        | I   | Receiver Channel 2 in Serial Mode.                                                                                                  |
| 13      | DIF1                       | I   | Audio Data Interface Format 1 Pin in Parallel Mode.                                                                                 |
|         | RX3                        | I   | Receiver Channel 3 in Serial Mode.                                                                                                  |
| 14      | DIF2                       | I   | Audio Data Interface Format 2 Pin in Parallel Mode.(No connected.)                                                                  |
|         | RX4                        | I   | Receiver Channel 4 in Serial Mode.(No connected.)                                                                                   |
| 15      | NONPCM                     | O   | Non-PCM Detect Pin. "L": No detect, "H": Detect.                                                                                    |
| 16      | PS/N                       | I   | Parallel/Serial Select Pin. "L": Serial Mode, "H": Parallel Mode.                                                                   |
| 17      | 96K                        | O   | 96kHz Sampling Detect Pin.<br>(RX Mode) "H": fs=88.2kHz or more, "L": fs=54kHz or less.<br>(X'tal Mode) "H": XFS96=1, "L": XFS96=0. |
| 18      | UNLOCK                     | O   | Unlock & Parity Error Output Pin. "L": No Error, "H": Error.                                                                        |
| 19      | SDWCKO                     | I/O | Output Channel Clock Pin.                                                                                                           |
| 20      | SDO                        | O   | Audio Serial Data Output Pin.                                                                                                       |
| 21      | SDBCKO                     | I/O | Audio Serial Data Clock Pin.                                                                                                        |
| 22      | DAUX                       | I   | Auxiliary Audio Data Input Pin.                                                                                                     |
| 23      | MCK02                      | O   | Master Clock #2 Output Pin.                                                                                                         |
| 24      | MCK01                      | O   | Master Clock #1 Output Pin.                                                                                                         |
| 25      | 41_ $\overline{\text{CS}}$ | I   | Chip Select Pin in Serial Mode.                                                                                                     |
| 26      | AK_CK                      | I   | Control Data Clock Pin in Serial Mode.                                                                                              |
| 27      | AK_SI                      | I   | Control Data Input Pin in Serial Mode.                                                                                              |
| 28      | 41_SO                      | O   | Control Data Output Pin in Serial Mode.                                                                                             |

# IC DESCRIPTION - 3/5 (IC,BD3811K1) - 1/2

| Pin No. | Pin Name  | I/O | Description                                |
|---------|-----------|-----|--------------------------------------------|
| 1       | AUX-L     | I   | AUX-Lch input terminal.                    |
| 2       | AUX-R     | I   | AUX-Rch input terminal.                    |
| 3       | CD-L      | I   | CD-Lch input terminal.                     |
| 4       | CD-R      | I   | CD-Rch input terminal.                     |
| 5       | TAPE-L    | I   | TAPE-Lch input terminal.                   |
| 6       | TAPE-R    | I   | TAPE-Rch input terminal.                   |
| 7       | VIDEO1-L  | I   | VIDEO1-Lch input terminal.                 |
| 8       | VIDEO1-R  | I   | VIDEO1-Rch input terminal.                 |
| 9       | VIDEO2-L  | I   | VIDEO2-Lch input terminal.                 |
| 10      | VIDEO2-R  | I   | VIDEO2-Rch input terminal.                 |
| 11      | VIDEO3-L  | I   | VIDEO3-Lch input terminal.                 |
| 12      | VIDEO3-R  | I   | VIDEO3-Rch input terminal.                 |
| 13      | 5.1CH-SR  | I   | 5.1CH Surround Rch input terminal.         |
| 14      | 5.1CH-SL  | I   | 5.1CH Surround Lch input terminal.         |
| 15      | 5.1CH-C   | I   | 5.1CH Center input Terminal.               |
| 16      | 5.1CH-SW  | I   | 5.1 Sub woofer input terminal.             |
| 17      | OUT-R(+)  | O   | Rch(+) A/D output terminal.                |
| 18      | OUT-R(-)  | O   | Rch(-) A/D output terminal.                |
| 19      | OUT-L(+)  | O   | Lch(+) A/D output terminal.                |
| 20      | OUT-L(-)  | O   | Lch(-) A/D output terminal.                |
| 21      | DSP IN-L  | I   | DSP Lch input termnal.                     |
| 22      | 5.1CH-L   | I   | 5.1CH Lch input terminal.                  |
| 23      | DSP IN-R  | I   | DSP Rch input termnal.                     |
| 24      | 5.1CH-R   | I   | 5.1CH Rch input terminal.                  |
| 25      | DSP IN SR | I   | DSP Surround Rch input terminal.           |
| 26      | DSP IN-SL | I   | DSP Surround Lch input terminal.           |
| 27      | DSP IN-C  | I   | DSP Center input terminal.                 |
| 28      | DSP IN-SW | I   | DSP Sub woofer input terminal.             |
| 29      | AGND      | –   | Analog ground terminal.                    |
| 30      | GOUT-SW   | O   | Sub woofer input gain output terminal.     |
| 31      | VOL IN SW | I   | Sub woofer volume input terninal.          |
| 32      | AGND      | –   | Analog ground terminal.                    |
| 33      | GOUT-C    | O   | Center speaker input gain output terminal. |
| 34      | VOL IN-C  | I   | Center speaker volume iutput terminal.     |
| 35      | OUT-SW    | O   | Sub woofer output terminal.                |
| 36      | OUT-C     | O   | Center speaker output terminal.            |
| 37      | OUT-SL    | O   | Surround Lch output terminal.              |
| 38      | OUT-SR    | O   | Surround Rch output terminal.              |
| 39      | VOL IN-SL | I   | Surround Lch volume iutput terminal.       |
| 40      | GOUT-SL   | O   | Surround Lch input gain output terminal.   |
| 41      | AGND      | –   | Analog ground terminal.                    |
| 42      | VOL IN-SR | I   | Surround Rch volume input terminal.        |
| 43      | GOUT-SR   | O   | Surround Rch inout gain output terminal.   |
| 44      | AGND      | –   | Analog ground terminal.                    |
| 45      | DGND      | –   | Ground terminal for comparator.            |
| 46      | DATA      | I   | Serial data and latch input terminal.      |
| 47      | CLK       | I   | Serial clock input terminal.               |
| 48      | MUTE      | –   | Mute terminal. (No connected)              |
| 49      | AGND      | –   | Analog ground terminal.                    |
| 50      | VSS       | –   | Power supply terminal (-).                 |
| 51      | AGND      | –   | Analog ground terminal.                    |

# IC DESCRIPTION - 3/5 (IC,BD3811K1) - 2/2

| Pin No. | Pin Name  | I/O | Description                               |
|---------|-----------|-----|-------------------------------------------|
| 52      | VDD       | –   | Power supply terminal (+).                |
| 53      | AGND      | –   | Analog ground terminal.                   |
| 54      | AGND      | –   | Analog ground terminal.                   |
| 55      | OUT-L     | O   | Lch output terminal.                      |
| 56      | BBFTR-L   | –   | Lch bass boost filter terminal.           |
| 57      | OUT-R     | O   | Rch output terminal.                      |
| 58      | BBFTR-R   | –   | Rch bass boost filter terminal.           |
| 59      | BFTR2-R   | –   | Rch bass filter terminal 2.               |
| 60      | BFTR1-R   | –   | Rch bass filter terminal 1.               |
| 61      | BFTR2-L   | –   | Lch bass filter terminal 2.               |
| 62      | BFTR1-L   | –   | Lch bass filter terminal 1.               |
| 63      | TFTR-L    | –   | Lch treble filter terminal.               |
| 64      | TFTR-R    | –   | Rch treble filter terminal.               |
| 65      | VOL IN-L  | I   | Lch volume Input terminal.                |
| 66      | GOUT-L    | O   | Lch input gain output terminal.           |
| 67      | AGND      | –   | Analog ground terminal.                   |
| 68      | VOL IN-R  | I   | Rch volume Input terminal.                |
| 69      | GOUT-R    | O   | Rch input gain output terminal.           |
| 70      | AGND      | –   | Analog ground terminal.                   |
| 71      | RECOUT1-L | I/O | REC Lch input and output terminal.        |
| 72      | RECOUT1-R | I/O | REC Rch input and output terminal.        |
| 73      | RECOUT2-L | O   | REC Lch output terminal 2.                |
| 74      | RECOUT2-R | O   | REC Rch output terminal 2.                |
| 75      | RECOUT3-L | O   | REC Lch output terminal 3. (No connected) |
| 76      | RECOUT3-R | O   | REC Rch output terminal 3. (No connected) |
| 77      | TUNER-L   | I   | TUNER Lch input terminal.                 |
| 78      | TUNER-R   | I   | TUNER Rch nput terminal.                  |
| 79      | PHONO-L   | I   | PHONE Lch input terminal. (No connected)  |
| 80      | PHONO-R   | I   | PHONE Rch input terminal. (No connected)  |

## IC DESCRIPTION -4/5 (IC,AK4527BVQ) -1/2

| Pin No. | Pin Name | I/O | Description                                                                                                                                                                                       |
|---------|----------|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | SDOS     | I   | SDTO Source Select Pin (Note 1). "L": Internal ADC output, "H" DAUX input.                                                                                                                        |
| 2       | I2C      | I   | Control Mode Select Pin. "L": 3-wire Serial, "H": I <sup>2</sup> C Bus.                                                                                                                           |
| 3       | SMUTE    | I   | Soft Mute Pin (Note 1). When this pin goes to "H", soft mute cycle is initialized. When returning to "L", the output mute releases.                                                               |
| 4       | BICK     | I   | Audio Serial Data Clock Pin.                                                                                                                                                                      |
| 5       | LRCK     | I   | Input Channel Clock Pin.                                                                                                                                                                          |
| 6       | SDTI1    | I   | DAC1 Audio Serial Data Input Pin.                                                                                                                                                                 |
| 7       | SDTI2    | I   | DAC2 Audio Serial Data Input Pin.                                                                                                                                                                 |
| 8       | SDTI3    | I   | DAC3 Audio Serial Data Input Pin.                                                                                                                                                                 |
| 9       | SDTO     | O   | Audio Serial Data Output Pin.                                                                                                                                                                     |
| 10      | DAUX     | I   | AUX Audio Serial Data Input Pin.                                                                                                                                                                  |
| 11      | DFS      | I   | Double Speed Sampling Mode Pin (Note1). "L": Normal Speed, "H": Double Speed.                                                                                                                     |
| 12      | NC       | –   | No connected.                                                                                                                                                                                     |
| 13      | DZFE     | I   | Zero Input Detect: Enable Pin "L": mode 7 (disable) at parallel mode, zero detect mode is selectable by DZFM2-0 bits at serial mode. "H": mode 0 (DZF1 is AND of all six channels).               |
| 14      | TVDD     | –   | Output Buffer Power Supply Pin, 2.7V-5.5V.                                                                                                                                                        |
| 15      | DVDD     | –   | Digital Power Supply Pin, 4.5V-5.5V.                                                                                                                                                              |
| 16      | DVSS     | –   | Digital Ground Pin, 0V.                                                                                                                                                                           |
| 17      | PDN      | I   | Power-Down & Reset Pin. When "L", the AK4527B is powered-down and the control registers are reset to default state. If the state of P/S or CAD0-1 changes, then the AK4527B must be reset by PDN. |
| 18      | TST      | I   | Test Pin. This pin should be connected to DVSS.                                                                                                                                                   |
| 19      | NC       | –   | No connected.                                                                                                                                                                                     |
| 20      | ADIF     | I   | Analog Input Format Select Pin. "H": Full-differential input, "L": Single-ended input.                                                                                                            |
| 21      | CAD1     | I   | Chip Address 1 Pin.                                                                                                                                                                               |
| 22      | CAD0     | I   | Chip Address 0 Pin.                                                                                                                                                                               |
| 23      | LOUT3    | O   | DAC3 Lch Analog Output Pin.                                                                                                                                                                       |
| 24      | ROUT3    | O   | DAC3 Rch Analog Output Pin.                                                                                                                                                                       |
| 25      | LOUT2    | O   | DAC2 Lch Analog Output Pin.                                                                                                                                                                       |
| 26      | ROUT2    | O   | DAC2 Rch Analog Output Pin.                                                                                                                                                                       |
| 27      | LOUT1    | O   | DAC1 Lch Analog Output Pin.                                                                                                                                                                       |
| 28      | ROUT1    | O   | DAC1 Rch Analog Output Pin.                                                                                                                                                                       |
| 29      | LIN–     | I   | Lch Analog Negative Input Pin.                                                                                                                                                                    |
| 30      | LIN+     | I   | Lch Analog Positive Input Pin.                                                                                                                                                                    |
| 31      | RIN–     | I   | Rch Analog Negative Input Pin.                                                                                                                                                                    |
| 32      | RIN+     | I   | Rch Analog Positive Input Pin.                                                                                                                                                                    |
| 33      | DZF2     | O   | Zero Input Detect 2 Pin (Note 2). When the input data of the group 1 follow total 8192 LRCK cycles with "0" input data, this pin goes to "H".                                                     |
|         | OVF      | O   | Analog Input Overflow Detect Pin (Note 3). This pin goes to "H" if the analog input of Lch or Rch is overflows.                                                                                   |

## IC DESCRIPTION -4/5 (IC,AK4527BVQ) -2/2

| Pin No. | Pin Name | I/O | Description                                                                                                                                                   |
|---------|----------|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 34      | VCOM     | O   | Common Voltage Output Pin, AVDD/2. Large external capacitor around 2.2uF is used to reduce power-supply noise.                                                |
| 35      | VREFH    | I   | Positive Voltage Reference Input Pin, AVDD.                                                                                                                   |
| 36      | AVDD     | –   | Analog Power Supply Pin, 4.5V-5.5V.                                                                                                                           |
| 37      | AVSS     | –   | Analog Ground Pin, 0V.                                                                                                                                        |
| 38      | DZF1     | O   | Zero Input Detect 1 Pin (Note 2). When the input data of the group 1 follow total 8192 LRCK cycles with "0" input data, this pin goes to "H". (No connected.) |
| 39      | MCLK     | I   | Master Clock Input Pin.                                                                                                                                       |
| 40      | P/SN     | I   | Parallel/Serial Select Pin. "L": Serial control mode, "H": Parallel control mode.                                                                             |
| 41      | DIF0     | I   | Audio Data Interface Format 0 Pin in parallel control mode.                                                                                                   |
|         | CSN      | I   | Chip Select Pin in 3-wire serial control mode. This pin should be connected to DVDD at I <sup>2</sup> C bus control mode.                                     |
| 42      | DIF1     | I   | Audio Data Interface Format 1 Pin in parallel control mode.                                                                                                   |
|         | SCL/CCLK | I   | Control Data Clock Pin in serial control mode. I2C = "L": CCLK (3-wire Serial), I2C = "H": SCL (I <sup>2</sup> C Bus).                                        |
| 43      | LOOP0    | I   | Loopback Mode 0 Pin in parallel control mode. Enables digital loop-back from ADC to 3 DACs.                                                                   |
|         | SDA/CDTI | I/O | Control Data Input Pin in serial control mode. I2C = "L": CDTI (3-wire Serial), I2C = "H": SDA (I <sup>2</sup> C Bus).                                        |
| 44      | LOOP1    | I   | Loopback Mode 1 Pin (Note 1). Enables all 3 DAC channels to be input from SDTI1.                                                                              |

# IC DESCRIPTION -5/5 (IC,MB86347) -1/3

| Pin No. | Pin Name | I/O | Description                                                                                                                                      |
|---------|----------|-----|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | VSS1     | –   | Ground pin.                                                                                                                                      |
| 2       | XRST     | I   | External reset input.                                                                                                                            |
| 3       | EXTIN    | I   | Master clock input. (Connected to ground)                                                                                                        |
| 4       | FS2      | I   | Sample frequency switching signal input terminal.                                                                                                |
| 5       | VDDI1    | –   | Power supply pin (+2.5V).                                                                                                                        |
| 6       | FS1      | I   | Sample frequency switching signal input terminal.                                                                                                |
| 7       | PLOCK    | O   | Internal PLL lock signal. (No connected.)                                                                                                        |
| 8       | VSS2     | –   | Ground pin.                                                                                                                                      |
| 9       | MCLK1    | I   | Clock signal input terminal. (External crystal oscillator is connected to this terminal.)                                                        |
| 10      | VDDI2    | –   | Power supply pin (+2.4V).                                                                                                                        |
| 11      | VSS3     | –   | Ground pin.                                                                                                                                      |
| 12      | MCLK2    | I/O | Clock signal input/output terminal. (External crystal oscillator is connected to this terminal.)                                                 |
| 13      | MS       | I   | Not used pin. (Connected to ground.)<br>0: Internal oscillation clock by crystal.<br>1: EXT IN clock is used. (Internal oscillation is stopped.) |
| 14      | SCKOUT   | O   | Internal system clock output. (No connected.)                                                                                                    |
| 15      | LRCKI1   | I/O | Sampling clock input/output terminal for audio I/F and serial data. (No connected.)                                                              |
| 16      | VDDE1    | –   | Power supply pin (+3.3V).                                                                                                                        |
| 17      | BCKI1    | I/O | Bit clock input/output terminal for audio I/F and serial data. (No connected.)                                                                   |
| 18      | SDI1     | I   | Data input terminal for audio I/F.                                                                                                               |
| 19      | LRCKO    | O   | Sampling clock output terminal for audio I/F and serial data.                                                                                    |
| 20      | BCKO     | O   | Bit clock output terminal for audio I/F and serial data.                                                                                         |
| 21      | VSS4     | –   | Ground pin.                                                                                                                                      |
| 22      | KFSIO    | I/O | Audio clock (384fs/256fs) input/output terminal.                                                                                                 |
| 23      | SDO1     | O   | Serial data output terminal for audio I/F.                                                                                                       |
| 24      | SDO2     | O   | Serial data output terminal for audio I/F.                                                                                                       |
| 25      | SDO3     | O   | Serial data output terminal for audio I/F.                                                                                                       |
| 26      | SDO4     | O   | Serial data output terminal for audio I/F. (Not connected.)                                                                                      |
| 27      | SPDIF    | O   | S/P DIF output. (Not connected.)                                                                                                                 |
| 28      | LRCKI2   | I   | Sampling input terminal for audio I/F and serial data.                                                                                           |
| 29      | BCKI2    | I   | Bit clock input terminal for audio I/F and serial data.                                                                                          |
| 30      | SDI2     | I   | Data input terminal for audio I/F.                                                                                                               |
| 31      | VSS5     | –   | Ground pin.                                                                                                                                      |
| 32      | HACN     | O   | Acknowledge output terminal for host I/F.                                                                                                        |
| 33      | HDIN     | I   | Serial data input terminal for host I/F.                                                                                                         |
| 34      | HCLK     | I   | Clock input terminal for host I/F.                                                                                                               |
| 35      | HDOUT    | O   | Serial data output terminal for host I/F.                                                                                                        |
| 36      | HCS      | I   | Chip select input terminal for host I/F.                                                                                                         |
| 37      | SDCLK    | O   | SDRAM clock. (No connected.)                                                                                                                     |
| 38      | CLKEN    | O   | SDRAM clock enable. (No connected.)                                                                                                              |
| 39      | RAS      | O   | Low address strobe. (No connected.)                                                                                                              |
| 40      | VDDEI3   | –   | Power supply pin (+2.4V).                                                                                                                        |
| 41      | VSS6     | –   | Ground pin.                                                                                                                                      |
| 42      | CAS      | O   | Column address strobe. (No connected.)                                                                                                           |
| 43      | DQM/OEO  | O   | Data input/output mask. (No connected.)                                                                                                          |
| 44      | CSO      | O   | External memory chip select (SRAM). (No connected.)                                                                                              |
| 45      | WEO      | O   | SRAM write enable. (No connected.)                                                                                                               |
| 46      | VDDE2    | –   | Power supply pin (+3.3V).                                                                                                                        |


# IC DESCRIPTION -5/5 (IC, MB86347) -2/3

| Pin No. | Pin Name     | I/O | Description                                                                               |
|---------|--------------|-----|-------------------------------------------------------------------------------------------|
| 47      | WMD1         | I   | External memory WAIT mode.                                                                |
|         |              |     | WMDI                                                                                      |
|         |              |     | Wait cycle                                                                                |
|         |              |     | Rewrite                                                                                   |
|         |              |     | 0 Prohibited to use. –                                                                    |
| 48      | VSS7         | –   | Ground pin.                                                                               |
|         |              |     | 0 5 cyc Impossible                                                                        |
|         |              |     | 1 15 cyc Possible                                                                         |
|         |              |     | 1 30 cyc Possible                                                                         |
| 49      | WMDO         | I   | External memory WAIT mode.                                                                |
|         |              |     | WMD0                                                                                      |
|         |              |     | Wait cycle                                                                                |
|         |              |     | Rewrite                                                                                   |
|         |              |     | 0 Prohibited to use. –                                                                    |
| 50      | PAGE2        | O   | External memory page selection. (No connected.)                                           |
|         |              |     | 1 5 cyc Impossible                                                                        |
|         |              |     | 0 15 cyc Possible                                                                         |
|         |              |     | 1 30 cyc Possible                                                                         |
| 51      | VSS8         | –   | Ground pin.                                                                               |
| 52, 53  | PAGE1, PAGE0 | O   | External memory page selection. (No connected.)                                           |
| 54      | BOOT         | I   | Boot mode control signal. (No connected.)                                                 |
| 55      | BTACT        | O   | Boot mode status display signal. (No connected.)                                          |
| 56      | BST          | I   | Bootstrap signal.                                                                         |
| 57      | MOD1         | I   | MOD1                                                                                      |
|         |              |     | Operation mode                                                                            |
|         |              |     | 0 384fs (PLL x 6) (Connected to power supply +3.3V.)                                      |
| 58      | MOD0         | I   | MOD0                                                                                      |
|         |              |     | Operation mode                                                                            |
|         |              |     | 0 Single chip mode (Connected to ground.)                                                 |
| 59      | EXLOCK       | I   | 1 Prohibited to use.                                                                      |
|         |              |     |                                                                                           |
|         |              |     |                                                                                           |
| 60      | VDDI4        | –   | Power supply pin (+2.5V).                                                                 |
| 61      | VSS9         | –   | Ground pin.                                                                               |
| 62–66   | A17–A13      | O   | External memory address (SRAM). (No connected.)                                           |
| 67      | GP10         | O   | General purpose port terminal GP [7:0].                                                   |
| 68      | GP9          | O   | General purpose port terminal GP [7:0]. (No connected.)                                   |
| 69      | GP8          | O   | General purpose port terminal GP [7:0].                                                   |
| 70      | VDDI5        | –   | Power supply pin (+2.5V).                                                                 |
| 71      | VSSI0        | –   | Ground pin.                                                                               |
| 72      | D15/GP7      | I/O | External memory data input/output/general purpose port terminal GP [7:0]. (No connected.) |
| 73      | D14/GP6      | I/O | External memory data input/output/general purpose port terminal GP [7:0]. (No connected.) |
| 74      | D13/GP5      | I/O | External memory data input/output/general purpose port terminal GP [7:0]. (No connected.) |
| 75      | D12/GP4      | I/O | External memory data input/output/general purpose port terminal GP [7:0]. (No connected.) |
| 76      | VDDE3        | –   | Power supply pin. (+3.3V).                                                                |
| 77      | D11/GP3      | I/O | External memory data input/output/general purpose port terminal GP [7:0]. (No connected.) |
| 78      | D10/GP2      | I/O | External memory data input/output/general purpose port terminal GP [7:0]. (No connected.) |
| 79      | D9/GP1       | I/O | External memory data input/output/general purpose port terminal GP [7:0].                 |
| 80      | D8/GP0       | I/O | External memory data input/output/general purpose port terminal GP [7:0].                 |
| 81      | VSSI1        | –   | Ground pin.                                                                               |
| 82      | A9           | O   | External memory address (SRAM). (No connected.)                                           |
| 83–85   | A12–A10      | O   | External memory address (SRAM). (No connected.)                                           |
| 86      | TDO          | O   | Simplified emulation data output terminal. (No connected.)                                |
| 87      | TMS          | I   | Simplified emulation data input start/stop terminal. (No connected.)                      |
| 88      | XTRST        | I   | Simplified emulation asynchronous break input terminal. (No connected.)                   |
| 89      | TCK          | I   | Simplified emulation clock input terminal. (No connected.)                                |
| 90      | TDI          | I   | Simplified emulation data input terminal. (No connected.)                                 |
| 91      | VSSI2        | –   | Ground pin.                                                                               |
| 92–97   | A8–A3        | O   | External memory address (SRAM). (No connected.)                                           |
| 98, 98  | D7, D6       | I/O | External memory data input/output (SRAM). (No connected.)                                 |
| 100     | VDDI6        | –   | Power supply pin (+3.3V).                                                                 |

# IC DESCRIPTION -5/5 (IC, MB86347) -3/3

| Pin No.  | Pin Name   | I/O | Description                                                                    |
|----------|------------|-----|--------------------------------------------------------------------------------|
| 101      | VSSI3      | –   | Ground pin.                                                                    |
| 102–105  | D5–D2      | I/O | External memory data input/output (SRAM). (No connected.)                      |
| 106      | VDDE4      | –   | Power supply pin (+3.3V).                                                      |
| 107, 108 | D1, D0     | I/O | External memory data input/output (SRAM). (No connected.)                      |
| 109, 110 | A2, A1     | O   | External memory address (SRAM). (No connected.)                                |
| 111      | VSSI4      | –   | Ground pin.                                                                    |
| 112      | A0         | O   | External memory address (SRAM). (No connected.)                                |
| 113      | PM         | I   | PLL initialization terminal. Refer to the PLL operation sequence.              |
| 114, 115 | SDI3, SDI4 | I   | Data input terminal for audio I/F. (No connected.)                             |
| 116      | SYNC       | I   | Synchronous/asynchronous selection terminal (L: Synchronous, H: Asynchronous). |
| 117      | GND1       | –   | Ground pin.                                                                    |
| 118      | TBS        | –   | Connected to ground.                                                           |
| 119      | VSSI5      | –   | Ground pin.                                                                    |
| 120      | VDDI7      | –   | Power supply pin (+2.5V).                                                      |



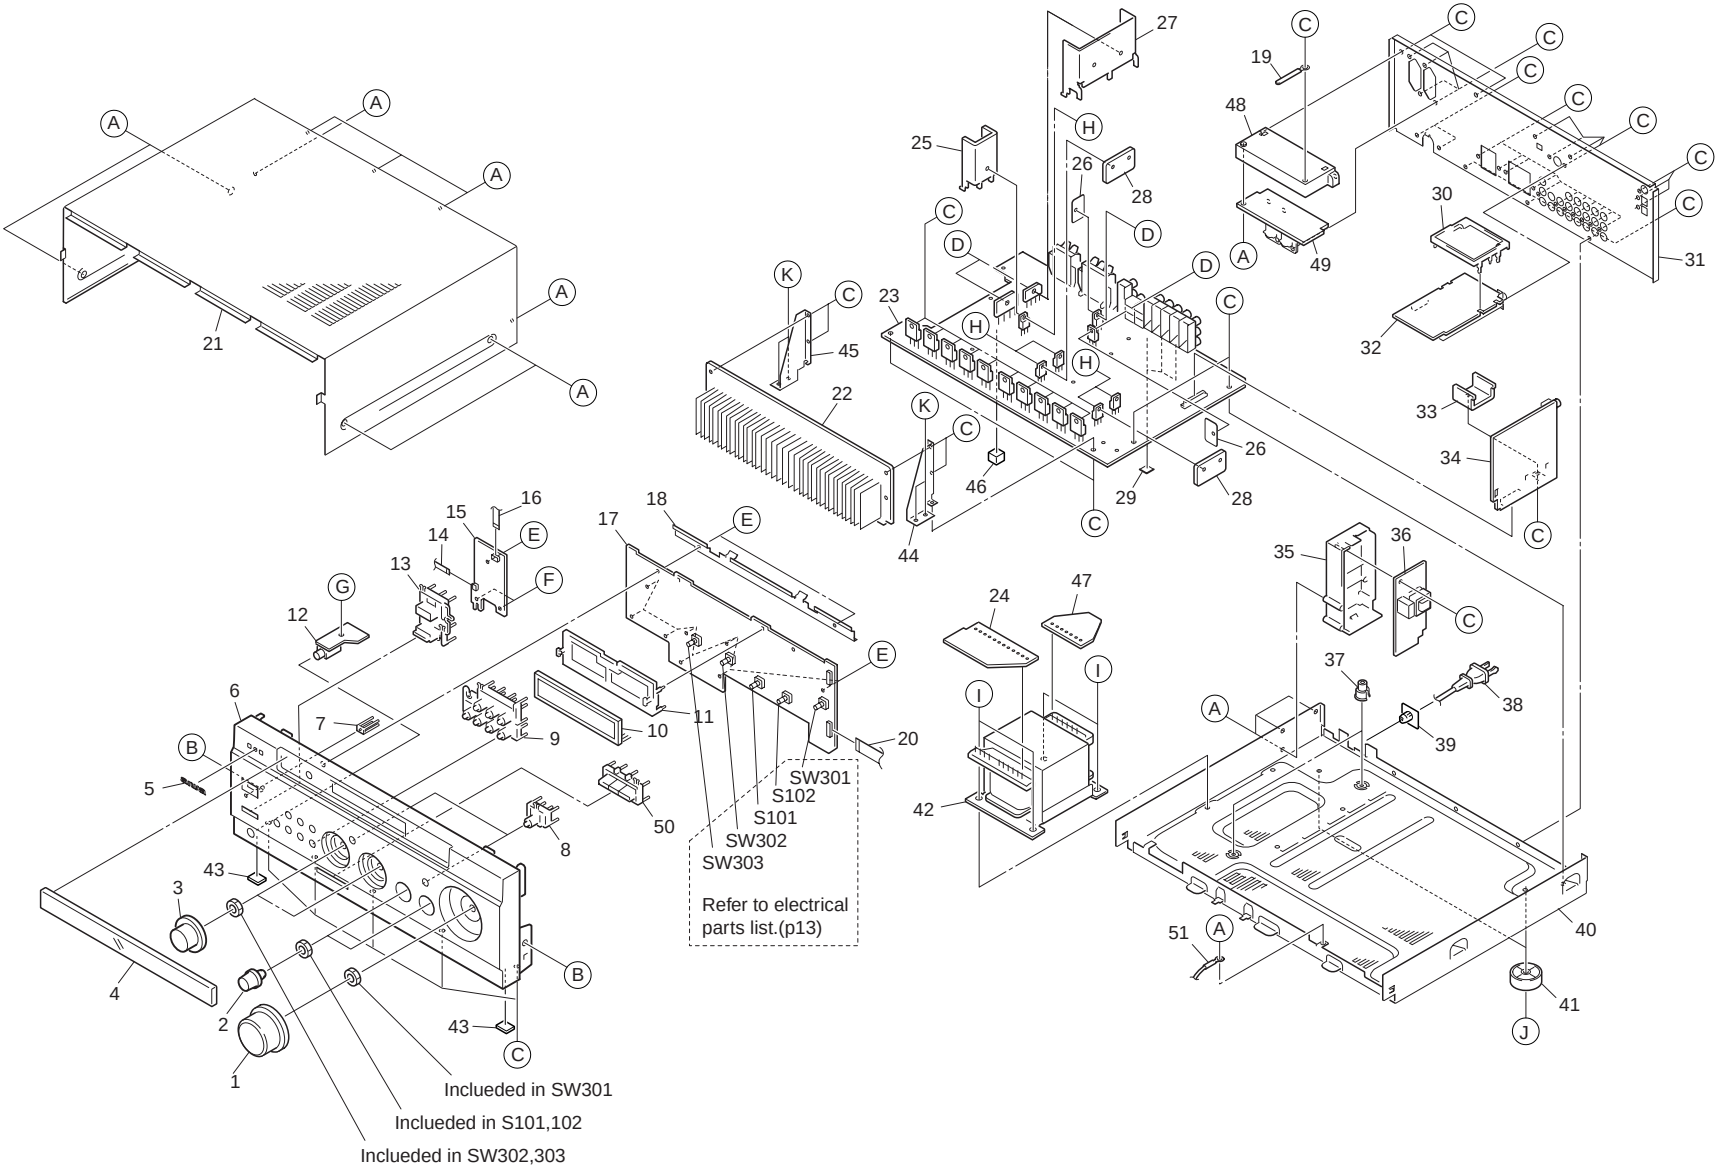

# MECHANICAL PARTS LIST -1/1

! = SAFETY PARTS  
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C | REF-NO    | PARTS-NO       | PARTS-NAME              | SUFFIX&MODEL    |                 |
|-----------|-----|-----------|----------------|-------------------------|-----------------|-----------------|
|           |     |           |                |                         | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
|           |     | O MC1001  | 8C-AR6-017-010 | KNOB,RTRY VOL ASSY      | a               | .               |
|           |     | O MC1001  | 8C-AR6-039-010 | KNOB,RTRY VOL ASSY SIL  | .               | b               |
|           |     | X MC1001a | 8C-AR6-215-010 | KNOB,RTRY VOL           | a               | b               |
|           |     | X MC1001b | 8C-AR6-012-010 | CAP, VOL                | a               | .               |
|           |     | X MC1001b | 8C-AR6-040-010 | CAP, VOL SIL            | .               | b               |
|           |     | O MC1002  | 8C-AR6-014-010 | KNOB,RTRY BASS          | a               | .               |
|           |     | O MC1002  | 8C-AR6-042-010 | KNOB,RTRY BASS SIL      | .               | b               |
|           |     | O MC1003  | 8C-AR6-013-010 | KNOB,RTRY FUN           | a               | .               |
|           |     | O MC1003  | 8C-AR6-041-010 | KNOB,RTRY FUN SIL       | .               | b               |
|           |     | O MC1004  | 8C-AR6-016-010 | WINDOW,DISP K           | a               | b               |
|           |     | O MC1005  | 8C-AR6-015-010 | BADGE,AIWA 32.5         | a               | .               |
|           |     | O MC1005  | 8C-AR6-019-010 | BADGE,AIWA 32.5 SIL     | .               | b               |
|           |     | O MC1006  | 8C-AR5-007-010 | CABI,FR EZ              | a               | .               |
|           |     | O MC1006  | 8C-AR5-004-110 | CABI,FR EZ SIL          | .               | b               |
|           |     | O MC1007  | 8C-AR6-006-010 | REFLECTOR,ECO           | a               | b               |
|           |     | O MC1008  | 8C-AR6-009-010 | KEY,ENTER               | a               | .               |
|           |     | O MC1008  | 8C-AR6-037-010 | KEY,ENTER SIL           | .               | b               |
|           |     | O MC1009  | 8C-AR6-008-010 | KEY,BAL                 | a               | .               |
|           |     | O MC1009  | 8C-AR6-036-010 | KEY,BAL SIL             | .               | b               |
|           |     | O MC1010  | 8C-AR6-601-010 | FL,HNA-11SM25 CAR-6     | a               | b               |
|           |     |           |                |                         | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
|           |     | X MC1011  | 8C-AR6-202-010 | GUIDE,FL                | a               | b               |
|           |     | X MC1012  | 8C-AR5-656-010 | PWB,HP EZ CAR-5         | a               | b               |
|           |     | O MC1013  | 8C-AR5-005-010 | KEY,POWER               | a               | .               |
|           |     | O MC1013  | 8C-AR5-006-010 | KEY,POWER SIL           | .               | b               |
|           |     | O MC1014  | 88-904-111-110 | FF-CABLE,4P 1.25 110MM  | a               | b               |
|           |     | X MC1015  | 8C-AR5-657-010 | PWB,KEY EZ CAR-5        | a               | b               |
|           |     | O MC1016  | 88-909-081-110 | FF-CABLE,9P 1.25 80MM   | a               | b               |
|           |     | X MC1017  | 8C-AR5-652-010 | PWB,FRONT EZ CAR-5      | a               | b               |
|           |     | X MC1018  | 8C-AR6-216-010 | HLDR,STCB               | a               | b               |
|           |     | X MC1019  | 87-064-080-010 | BINDER,WIRE             | a               | b               |
|           |     | O MC1020  | 88-918-221-110 | FF-CABLE,18P 1.25 220MM | a               | b               |
|           |     | O MC1020  | 88-922-121-110 | FF-CABLE,22P 1.25 120MM | a               | b               |
|           |     | O MC1021  | 8C-AR6-003-010 | CABI,STEEL              | a               | .               |
|           |     | O MC1021  | 8C-AR6-043-010 | CABI,STEEL SIL          | .               | b               |
|           |     | X MC1022  | 8C-AR6-206-010 | HT-SINK,ASSY U          | a               | b               |
|           |     | X MC1022a | 8C-AR6-207-010 | HT-SINK,MAIN T3         | a               | b               |
|           |     | X MC1022b | 8C-AR6-208-010 | HT-SINK,FIN T0.5        | a               | b               |
|           |     | X MC1023  | 8C-AR6-632-210 | PWB,MAIN                | a               | b               |
|           |     | X MC1024  | 8C-AR5-655-010 | PWB,AC2 EZ CAR-5        | a               | b               |
|           |     | X MC1025  | 8C-AR6-212-010 | HT-SINK,VM              | a               | b               |
|           |     |           |                |                         | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
|           |     | X MC1026  | 88-AR1-220-010 | HT-SINK,TR VCC          | a               | b               |
|           |     | X MC1027  | 8C-AR6-214-010 | HT-SINK,DIODE           | a               | b               |
|           |     | X MC1028  | 88-AR1-213-010 | HT-SINK,FET             | a               | b               |
|           |     | O MC1029  | 80-XV1-218-010 | CUSH-S,PWB              | a               | b               |
|           |     | X MC1030  | 8C-AR6-213-010 | HLDR,TU                 | a               | b               |
|           |     | O MC1031  | 8C-AR5-003-010 | PANEL,REAR EZSC         | a               | b               |
|           |     | X MC1032  | 8C-AR5-653-010 | PWB,TUNER EZ CAR-5      | a               | b               |
|           |     | X MC1033  | 8B-AR1-222-010 | HT-SINK,TR DD           | a               | b               |
|           |     | X MC1034  | 8C-AR5-641-010 | PWB,DSP 4M CAR-5        | a               | b               |
|           |     | X MC1035  | 8C-AR6-209-010 | HLDR,PWB SUB PT         | a               | b               |
|           |     | X MC1036  | 8C-AR5-659-010 | PWB,SUB PT EZ CAR-5     | a               | b               |
|           |     | X MC1037  | 8C-AR6-203-010 | HLDR,PWB H11.9          | a               | b               |
|           | !   | O MC1038  | 87-A80-143-110 | AC CORD ASSY,E BLK      | a               | b               |
|           |     | O MC1039  | 88-NF9-210-010 | BUSHING,CORD-E          | a               | b               |
|           |     | O MC1040  | 8C-AR6-221-010 | CHAS,MAIN 85-63         | a               | b               |
|           |     | X MC1041  | 89-AA1-042-010 | FOOT,H15                | a               | b               |
|           | !   | O MC1042  | 8C-AR5-608-010 | PT,EZ EI86-63 CAR-5     | a               | b               |
|           |     | X MC1043  | 86-NFZ-205-010 | CUSH, 12.5-15.5-2 (NP)  | a               | b               |
|           |     | X MC1044  | 8C-AR6-204-010 | HLDR,HT-SINK L          | a               | b               |
|           |     | X MC1045  | 8C-AR6-205-010 | HLDR,HT-SINK R          | a               | b               |
|           |     |           |                |                         | AV-NW50<br>EZBC | AV-NW50<br>EZSC |
|           |     | X MC1046  | 8C-AR6-219-010 | CUSH, 10-10-10          | a               | b               |
|           |     | X MC1047  | 8C-AR5-654-010 | PWB,AC1 EZ CAR-5        | a               | b               |
|           |     | X MC1048  | 8C-AR5-201-010 | HLDR,PWB AC OUT         | a               | b               |
|           |     | X MC1049  | 8C-AR5-658-010 | PWB,ACOUTLET EZ CAR-5   | a               | b               |
|           |     | O MC1050  | 8C-AR6-011-010 | KEY,RDS                 | a               | .               |
|           |     | O MC1050  | 8C-AR6-038-010 | KEY,RDS SIL             | .               | b               |
|           |     | X MC1051  | 8C-AR5-661-010 | WIRE,LUG EARTH 60MM     | a               | b               |
|           |     | O MC1A    | 87-067-641-010 | UTT2+3-8 W/O SLOT BLK   | a               | b               |
|           |     | O MC1B    | 87-721-095-410 | QT2+3-8 W/O SLOT        | a               | b               |
|           |     | O MC1C    | 87-067-703-010 | BVT2+3-10 W/O SLOT      | a               | b               |
|           |     | O MC1D    | 87-067-958-010 | BVTT+3-10               | a               | b               |
|           |     | O MC1E    | 87-352-075-210 | VT2+2.6-10              | a               | b               |
|           |     | O MC1F    | 87-512-074-210 | VFT2+2.6-8              | a               | b               |
|           |     | O MC1G    | 87-NF4-224-010 | S-SCREW,IT3B+3-8 CU     | a               | b               |
|           |     | O MC1H    | 87-067-579-010 | BVT2+3-8 W/O SLOT       | a               | b               |
|           |     | O MC1I    | 87-078-200-010 | S-SCREW,ITC+4-8 R       | a               | b               |
|           |     | O MC1J    | 87-661-100-010 | VFT1+3-16               | a               | b               |
|           |     | O MC1K    | 87-B10-315-010 | BVIT3B+3-8 R W/O        | a               | b               |

## COLOR NAME TABLE -1/1

| Basic color symbol | Color             | Basic color symbol | Color              | Basic color symbol | Color              |
|--------------------|-------------------|--------------------|--------------------|--------------------|--------------------|
| B                  | Black             | C                  | Cream              | D                  | Orange             |
| G                  | Green             | H                  | Gray               | L                  | Blue               |
| LT                 | Transparent Blue  | N                  | Gold               | P                  | Pink               |
| R                  | Red               | S                  | Silver             | ST                 | Titan Silver       |
| T                  | Brown             | V                  | Violet             | W                  | White              |
| WT                 | Transparent White | Y                  | Yellow             | YT                 | Transparent Yellow |
| LM                 | Metallic Blue     | LL                 | Light Blue         | GT                 | Transparent Green  |
| LD                 | Dark Blue         | DT                 | Transparent Orange | GM                 | Metallic Green     |
| YM                 | Metallic Yellow   | DM                 | Metallic Orange    | PT                 | Transparent Pink   |
| LA                 | Aqua Blue         | GL                 | Light Green        | HT                 | Transparent Gray   |
| HM                 | Metallic Gray     | NH                 | Champagne Gold     | M                  | Wood Pattern       |

OTHERS PARTS LIST -1/1

! = SAFETY PARTS  
C = Components marked

All components used on this model at the production line are shown in this service manual.  
However, please note that not all components will be available as spare parts for after-sales service.  
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.  
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

| UNIT-NAME | ! C | REF-NO | PARTS-NO       | PARTS-NAME                 | SUFFIX&MODEL |         |
|-----------|-----|--------|----------------|----------------------------|--------------|---------|
|           |     |        |                |                            | AV-NW50      | AV-NW50 |
|           |     |        |                |                            | EZBC         | EZSC    |
|           | X   |        | 8C-AR6-222-010 | SH, 25-60-2 W/ADH          | a            | b       |
|           | X   |        | 87-B40-281-010 | LBL,BAR-CODE A 35X8        | a            | b       |
|           | X   |        | 8C-AR6-018-010 | SH,FL                      | a            | b       |
|           | X   |        | 87-098-368-010 | LBL,FUSE 1.6A 250Y T L     | a            | b       |
|           | X   |        | 87-B40-098-010 | BAG,PV 0.025-650-750 PL    | a            | b       |
|           | X   |        | 8C-AR4-851-010 | CUSHION,LEFT SOB           | a            | b       |
|           | X   |        | 8C-AR4-852-010 | CUSHION,RIGHT SOB          | a            | b       |
|           | X   |        | 8C-AR6-857-010 | PAD,FRONT TOP              | a            | b       |
|           | X   |        | 92-370-716-010 | SH,FOAMED-MAT 0.31-700-500 | a            | b       |
|           | X   |        | 87-B40-086-010 | BAG,PV 0.04-230-400 PL     | a            | b       |
|           | X   |        | 87-B50-079-010 | LIST,FACILITY(B)-0007      | a            | b       |
|           | X   |        | 87-056-168-010 | SH,CAUTION INF-WARR(EC)    | a            | b       |
|           | X   |        | 8C-AR5-971-010 | LBL,POP EZ                 | a            | b       |
|           | X   |        | 8C-AR5-854-110 | CTN,PRINTED 50 EZBC        | a            | .       |
|           | X   |        | 8C-AR6-921-010 | SH,ADDITIONAL DSP(9L)      | a            | .       |
|           | X   |        | 8C-AR5-853-110 | CTN,PRINTED 50 EZSC        | .            | b       |