


# aiwa



## CA-DW620

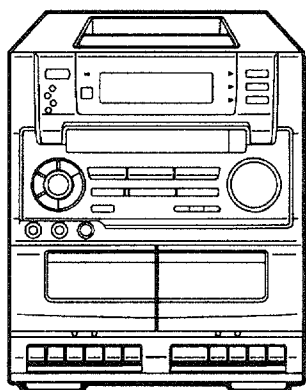

CD CARRY COMPONENT SYSTEM

- BASIC TAPE MECHANISM: TN-21ZSW-1691
- BASIC CD MECHANISM: 3ZG-3 A6N

•TYPE: U,LH

## REVISION PUBLISHING

This Service Manual is the "Revision Publishing" and replaces "Simple Manual" (S/M Code No. 09-97A-203-70T).

## TABLE OF CONTENTS

|                                                      |        |
|------------------------------------------------------|--------|
| SPECIFICATIONS .....                                 | 3      |
| PROTECTION OF EYES FROM LASER BEAM DURING SERVICING/ |        |
| Precaution to replace Optical block .....            | 4      |
| ELECTRICAL MAIN PARTS LIST .....                     | 5-7    |
| TRANSISTOR ILLUSTRATION .....                        | 7      |
| LCD DISPLAY .....                                    | 8      |
| BLOCK DIAGRAM-1 (MAIN) .....                         | 9, 10  |
| BLOCK DIAGRAM-2 (TUNER) .....                        | 11     |
| BLOCK DIAGRAM-3 (CD) .....                           | 12, 13 |
| SCHEMATIC DIAGRAM-1 (MAIN) .....                     | 14-16  |
| WIRING-1 (MAIN) .....                                | 17, 18 |
| WIRING-2 (FRONT) .....                               | 19, 20 |
| SCHEMATIC DIAGRAM-2 (FRONT) .....                    | 21, 22 |
| WIRING-3 (CD) .....                                  | 23, 24 |
| SCHEMATIC DIAGRAM-3 (CD) .....                       | 25, 26 |
| VOLTAGE CHART .....                                  | 27-29  |
| IC DESCRIPTION .....                                 | 30-36  |
| IC BLOCK DIAGRAM .....                               | 37-41  |
| ELECTRICAL ADJUSTMENT .....                          | 42-45  |
| PRACTICAL SERVICE FIGURE .....                       | 46     |
| MECHANICAL EXPLODED VIEW 1/1 .....                   | 47, 48 |
| MECHANICAL PARTS LIST 1/1 .....                      | 49     |
| TAPE MECHANISM EXPLODED VIEW 1/2 .....               | 50     |
| TAPE MECHANISM PARTS LIST 1/2 .....                  | 51     |
| TAPE MECHANISM EXPLODED VIEW 2/2 .....               | 52     |
| TAPE MECHANISM PARTS LIST 2/2 .....                  | 53     |
| CD MECHANISM EXPLODED VIEW 1/2 .....                 | 54     |
| CD MECHANISM PARTS LIST 1/2 .....                    | 55     |
| CD MECHANISM EXPLODED VIEW 2/2 .....                 | 56     |
| CD MECHANISM PARTS LIST 2/2 .....                    | 56     |
| SPEAKER EXPLODED VIEW, PARTS LIST 1/1 .....          | 57, 58 |
| ACCESSORIES/PACKAGE LIST .....                       | 59     |
| REFERENCE NAME LIST .....                            | 60     |

## SPECIFICATIONS

### LH MODEL

#### Tuner section

|           |                                                                                                       |
|-----------|-------------------------------------------------------------------------------------------------------|
| <b>FM</b> | 87.5 - 108.0 MHz<br>Antenna: Rod antenna                                                              |
| <b>AM</b> | 530 - 1,710 kHz<br>(10 kHz steps)<br>531 - 1,602 kHz<br>(9 kHz steps)<br>Antenna: Ferrite bar antenna |

#### Amplifier section

|                     |                        |
|---------------------|------------------------|
| <b>Power output</b> | 5W + 5W (4 ohms, EIAJ) |
|---------------------|------------------------|

#### Power requirements

DC 12 V using eight size D ( R20) batteries  
AC 110-120 V/220-240 V selectable, 50/60 Hz

#### Power consumption

30 W

#### CD player section

|                        |                                                                |
|------------------------|----------------------------------------------------------------|
| <b>Disc</b>            | Compact disc                                                   |
| <b>Scanning method</b> | Non-contact optical laser<br>(semiconductor laser application) |

#### Laser

Semiconductor laser  
 $\lambda = 780 \text{ nm}$

#### Rotation speed

Approx. 500 - 200 rpm/CLV

#### Error correction

Cross Interleave, Reed Solomon code

#### Number of channels

2 channels

#### D/A conversion

1-bit dual

#### Cassette deck section

**Track format** 4 tracks, 2 channels

#### Frequency response

Normal tape: 50-12,000 Hz (EIAJ)

#### Recording system

AC bias

#### Erasure system

Magnet erase

#### Motor

DC motor (1)

#### Heads

Deck 1  
Recording/playback head (1)  
Erasure head (1)  
Deck 2  
Playback head (1)

#### Common section

##### Dimensions (W × H × D)

266 × 303.7 × 274.1 mm

##### Weight

4.3 kg (not including batteries)

##### Speaker

##### Cabinet type

2-way bass reflex type

##### Speaker

120 mm (4<sup>3</sup>/<sub>4</sub> in.)

cone type woofer

27 mm (1<sup>1</sup>/<sub>8</sub> in.)

ceramic type tweeter

##### Impedance

4 ohms

##### Allowable max. input

10 W

##### Dimensions (W × H × D)

200 × 303.7 × 236.5 mm

##### Weight

1.75 kg

● Design and specifications are subject to change without notice.

### U MODEL

#### Tuner section

|           |                                                                                                       |
|-----------|-------------------------------------------------------------------------------------------------------|
| <b>FM</b> | 87.5 - 108.0 MHz<br>Antenna: Rod antenna                                                              |
| <b>AM</b> | 530 - 1,710 kHz<br>(10 kHz steps)<br>531 - 1,602 kHz<br>(9 kHz steps)<br>Antenna: Ferrite bar antenna |

#### Amplifier section

|                     |                                                                                                                                            |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power output</b> | 5W + 5W (4 ohms, EIAJ)<br>FTC rule<br>4 Watts per channel, Min.<br>RMS at 4 ohms from 65 Hz to 15,000 Hz, With no more than 1 % distortion |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------|

#### Power requirements

DC 12 V using eight size D ( R20) batteries  
AC 120 V, 60 Hz

#### Power consumption

30 W

#### CD player section

|                        |                                                                |
|------------------------|----------------------------------------------------------------|
| <b>Disc</b>            | Compact disc                                                   |
| <b>Scanning method</b> | Non-contact optical laser<br>(semiconductor laser application) |

#### Laser

Semiconductor laser  
 $\lambda = 780 \text{ nm}$

#### Rotation speed

Approx. 500 - 200 rpm/CLV

#### Error correction

Cross Interleave, Reed Solomon code

#### Number of channels

2 channels

#### D/A conversion

1-bit dual

#### Cassette deck section

**Track format** 4 tracks, 2 channels

#### Frequency response

Normal tape: 50-12,000 Hz (EIAJ)

#### Recording system

AC bias

#### Erasure system

Magnet erase

#### Motor

DC motor (1)

#### Heads

Deck 1  
Recording/playback head (1)  
Erasure head (1)  
Deck 2  
Playback head (1)

#### Common section

##### Dimensions (W × H × D)

266 × 303.7 × 274.1 mm  
(10<sup>1</sup>/<sub>2</sub> × 12 × 10<sup>7</sup>/<sub>8</sub> in.)

##### Weight

4.3 kg (9 lbs 8 oz) (not including batteries)

##### Speaker

##### Cabinet type

2-way bass reflex type

##### Speaker

120 mm (4<sup>3</sup>/<sub>4</sub> in.)

cone type woofer

27 mm (1<sup>1</sup>/<sub>8</sub> in.)

ceramic type tweeter

##### Impedance

4 ohms

##### Allowable max. input

10 W

##### Dimensions (W × H × D)

200 × 303.7 × 236.5 mm  
(8 × 12 × 9<sup>3</sup>/<sub>8</sub> in.)

##### Weight

1.75 kg (3 lbs 14 oz)


● Design and specifications are subject to change without notice.

## PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

### WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

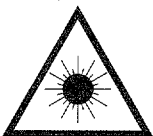

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

### ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

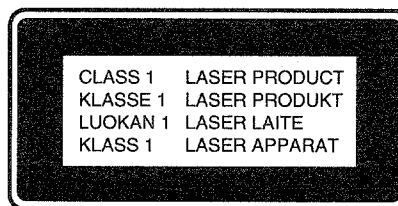

### VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylitävälle näkymättömälle lasersäteilylle.


### WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

## Precaution to replace Optical block (KSS-212A)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in the right figure.

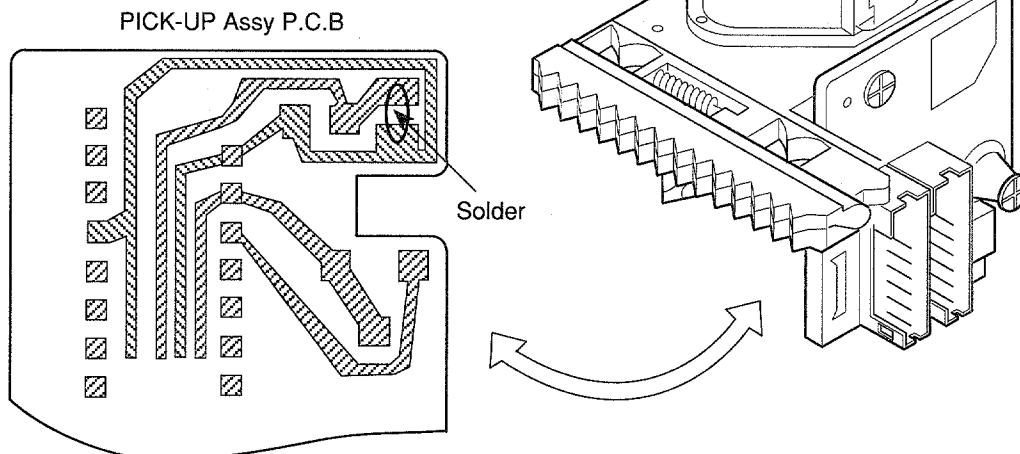



# ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO    | PART NO.       | KANRI NO.         | DESCRIPTION | REF. NO | PART NO.       | KANRI NO. | DESCRIPTION           |
|------------|----------------|-------------------|-------------|---------|----------------|-----------|-----------------------|
| IC         |                |                   |             | C132    | 87-010-221-010 |           | CAP,E 470-10V         |
|            | 87-001-440-010 | IC,BA15218N       |             | C142    | 87-010-221-010 |           | CAP,E 470-10V         |
|            | 87-020-828-010 | IC,BA3416BL       |             | C160    | 87-010-263-080 |           | ELECT CAP 100-10V     |
|            | 87-070-282-010 | IC,BU2092         |             | C167    | 87-010-403-010 |           | CAP,E 3.3-50V         |
|            | 87-017-804-010 | IC,BU4052BC       |             | C194    | 87-010-263-080 |           | ELECT CAP 100-10V     |
|            | 87-002-444-010 | IC,BU4094B        |             |         |                |           |                       |
|            | 87-070-083-010 | IC,GP1U281X       |             | C195    | 87-010-380-010 |           | CAP,E 47-16V          |
| △          | 87-001-132-080 | IC,ICP-N38        |             | C305    | 87-010-380-010 |           | CAP,E 47-16V          |
| △          | 87-002-330-080 | IC,ICP-N5         |             | C306    | 87-010-380-010 |           | CAP,E 47-16V          |
|            | 87-002-268-010 | IC,LA1851N        |             | C307    | 87-010-038-010 |           | CAP,E 22-25V          |
|            | 87-001-376-010 | IC,LC7218         |             | C308    | 87-010-037-010 |           | CAP,E 10-50V          |
|            | 87-017-564-010 | IC,LC7533         |             |         |                |           |                       |
|            | 84-CT4-640-010 | IC,LC867116W-5844 |             | C309    | 87-010-545-010 |           | CAP,E 0.22-50V        |
|            | SI-NS7-805-00C | IC,LM7805         |             | C310    | 87-010-545-010 |           | CAP,E 0.22-50V        |
|            | 87-017-787-010 | IC,M62412P        |             | C311    | 87-010-248-080 |           | ELECT CAP 220-10V     |
|            | 87-027-235-010 | IC,NJM4558DD      |             | C312    | 87-010-380-010 |           | CAP,E 47-16V          |
|            | 87-001-596-010 | IC,NJM4580L       |             | C315    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-070-416-010 | IC,NJU7201L55     |             |         |                |           |                       |
|            | 87-017-801-080 | IC,TA2058F        |             | C316    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-070-134-010 | IC,TA2065F        |             | C317    | 87-010-038-010 |           | CAP,E 22-25V          |
|            | 87-001-982-010 | IC,TA7291S        |             | C318    | 87-010-038-010 |           | CAP,E 22-25V          |
|            | 87-017-681-010 | IC,TA8126SN       |             | C319    | 87-010-037-010 |           | CAP,E 10-50V          |
|            | 87-017-680-010 | IC,TA8176SN       |             | C320    | 87-010-037-010 |           | CAP,E 10-50V          |
|            | 87-002-848-010 | IC,TA8229K        |             |         |                |           |                       |
|            | 87-070-101-010 | IC,TC9284AF       |             | C327    | 87-010-404-010 |           | CAP,E 4.7-50V         |
| TRANSISTOR |                |                   |             | C331    | 87-010-380-010 |           | CAP,E 47-16V          |
|            | 89-110-155-010 | TR,2SA1015-GR     |             | C351    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 89-112-964-010 | TR,2SA1296GR      |             | C501    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 89-113-187-080 | TR,2SA1318T/U     |             | C502    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-026-463-010 | TR,2SA933S        |             |         |                |           |                       |
|            | 89-109-521-210 | TR,2SA952/K/L     |             | C503    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 89-213-702-010 | TR,2SB1370E/F     |             | C504    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-026-447-080 | TR,2SC1740S       |             | C505    | 87-010-263-080 |           | ELECT CAP 100-10V     |
|            | 89-318-154-010 | TR,2SC1815-BL     |             | C531    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 86-NFZ-657-080 | TR,2SC1923(O)     |             | C532    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 89-320-011-210 | TR,2SC2001/K      |             |         |                |           |                       |
|            | 89-322-405-080 | TR,2SC2240GR      |             | C539    | 87-010-545-010 |           | CAP,E 0.22-50V        |
|            | 89-414-680-080 | TR,2SD1468S       |             | C540    | 87-010-545-010 |           | CAP,E 0.22-50V        |
|            | 89-501-615-080 | TR,2SK161         |             | C541    | 87-010-260-080 |           | CAP,E 47-25V          |
|            | 89-502-464-010 | TR,2SK246Y        |             | C571    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-026-572-080 | TR,DTA114TS       |             | C572    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-026-286-010 | TR,DTA143ES       |             |         |                |           |                       |
|            | 87-026-486-010 | TR,DTA144TS       |             | C573    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-026-464-010 | TR,DTC114TS       |             | C574    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-026-291-010 | TR,DTC124XS       |             | C579    | 87-010-380-010 |           | CAP,E 47-16V          |
|            | 87-026-287-010 | TR,DTC143ES       |             | C580    | 87-010-053-810 |           | CAP,E 1-50V           |
| DIODE      |                |                   |             | C581    | 87-010-544-010 |           | CAP,E 0.1-50V         |
|            | 87-020-465-010 | DIODE,1SS133      |             |         |                |           |                       |
|            | 87-017-625-010 | DIODE,GP15B       |             | C582    | 87-010-221-010 |           | CAP,E 470-10V         |
|            | 82-135-799-010 | DIODE,IN4148      |             | C583    | 87-010-263-080 |           | ELECT CAP 100-10V     |
|            | S3-MTZ-J15-A10 | ZENER,MTZJ15A     |             | C591    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | S0-100-821-210 | ZENER,UJZJ8-2B    |             | C592    | 87-010-053-810 |           | CAP,E 1-50V           |
|            | 87-001-913-080 | ZENER,UTZJ5.6B    |             | C607    | 87-010-038-010 |           | CAP,E 22-25V          |
| MAIN C.B   |                |                   |             |         |                |           |                       |
| C64        | 87-010-544-010 | CAP,E 0.1-50V     |             | C608    | 87-010-038-010 |           | CAP,E 22-25V          |
| C103       | 87-010-248-080 | ELECT CAP 220-10V |             | C609    | 87-010-260-080 |           | CAP,E 47-25V          |
| C104       | 87-010-035-010 | CAP,E 2.2-50V     |             | C613    | 87-010-263-080 |           | ELECT CAP 100-10V     |
| C108       | 87-010-053-810 | CAP,E 1-50V       |             | C614    | 87-010-263-080 |           | ELECT CAP 100-10V     |
| C109       | 87-010-053-810 | CAP,E 1-50V       |             | C615    | 87-010-376-010 |           | CAP,E 2200-10V        |
| C110       | 87-010-053-810 | CAP,E 1-50V       |             |         |                |           |                       |
| C111       | 87-010-546-080 | CAP,E 0.33-50V    |             | C616    | 87-010-376-010 |           | CAP,E 2200-10V        |
| C113       | 87-010-404-010 | CAP,E 4.7-50V     |             | C621    | 87-010-260-080 |           | CAP,E 47-25V          |
| C116       | 87-010-037-010 | CAP,E 10-50V      |             | C622    | 87-010-387-080 |           | CAP,E 470-25V         |
| C131       | 87-010-545-010 | CAP,E 0.22-50V    |             | C623    | 87-010-546-080 |           | CAP,E 0.33-50V        |
|            |                |                   |             | C624    | 87-010-546-080 |           | CAP,E 0.33-50V        |
|            |                |                   |             |         |                |           |                       |
|            |                |                   |             | C625    | 87-010-037-010 |           | CAP,E 10-50V          |
|            |                |                   |             | C641    | 87-010-248-080 |           | ELECT CAP 220-10V     |
|            |                |                   |             | C720    | 87-010-037-010 |           | CAP,E 10-50V          |
|            |                |                   |             | C721    | 87-010-698-010 |           | CAP,E 4700-25V        |
|            |                |                   |             | C722    | 87-010-385-010 |           | CAP,E 220-25V         |
|            |                |                   |             |         |                |           |                       |
|            |                |                   |             | C723    | 87-010-248-080 |           | ELECT CAP 220-10V     |
|            |                |                   |             | C726    | 87-010-404-010 |           | CAP,E 4.7-50V         |
|            |                |                   |             | C727    | 87-010-053-810 |           | CAP,E 1-50V           |
|            |                |                   |             | C728    | 87-010-221-010 |           | CAP,E 470-10V         |
|            |                |                   |             | C729    | 87-010-263-080 |           | ELECT CAP 100-10V     |
|            |                |                   |             |         |                |           |                       |
|            |                |                   |             | C730    | 87-010-248-080 |           | ELECT CAP 220-10V     |
|            |                |                   |             | C741    | 87-010-263-080 |           | ELECT CAP 100-10V     |
|            |                |                   |             | C831    | 87-010-037-010 |           | CAP,E 10-50V          |
|            |                |                   |             | C832    | 87-010-053-810 |           | CAP,E 1-50V           |
|            |                |                   |             | CF1     | S0-001-070-000 |           | CER,FIL SFE-10.7MA5-M |

 
| REF. NO   | PART NO.       | KANRI NO. | DESCRIPTION              | REF. NO   | PART NO.       | KANRI NO. | DESCRIPTION           |
|-----------|----------------|-----------|--------------------------|-----------|----------------|-----------|-----------------------|
| CF101     | S0-001-070-000 |           | CER, FIL SFE-10.7MA5-M   | SW5       | 87-036-170-080 |           | SW, TACT              |
| CT51      | S2-001-690-000 |           | TRIMMER TZ03R300FR169    | SW7       | 87-036-170-080 |           | SW, TACT              |
| IFT101    | S0-029-200-070 |           | IFT, 292MCAS-A617HM      | SW8       | 87-036-170-080 |           | SW, TACT              |
| J601      | S0-020-003-500 |           | JACK, HP 3.5MM           | SW9       | 87-036-170-080 |           | SW, TACT              |
| J602      | S0-003-240-000 |           | TERMINAL, 4P             | SW10      | 87-036-170-080 |           | SW, TACT              |
| J801      | S0-002-420-000 |           | JACK, RCAHSP-242V-05     | SW11      | 87-036-170-080 |           | SW, TACT              |
| L4        | 87-003-098-080 |           | INDUCTOR, 2.2UH          | SW12      | 87-036-170-080 |           | SW, TACT              |
| L52       | S0-091-310-070 |           | I. F. T. PA7BRS-A9131CCG | SW13      | 87-036-170-080 |           | SW, TACT              |
| L61       | S0-612-051-200 |           | ANT, COILMW 61T:20T      | SW14      | 87-036-170-080 |           | SW, TACT              |
| L151      | 87-003-143-010 |           | INDUCTOR, 4.7UH          | SW15      | 87-036-170-080 |           | SW, TACT              |
| L152      | 87-005-440-080 |           | INDUCTOR, 47UH           | SW16      | 87-036-170-080 |           | SW, TACT              |
| L191      | S0-091-340-070 |           | I. F. T. A7BRCS-A9134    | SW17      | 87-036-170-080 |           | SW, TACT              |
| L192      | 87-005-696-080 |           | INDUCTOR, 100UH          | SW18      | 87-036-170-080 |           | SW, TACT              |
| L301      | S0-091-300-070 |           | I. F. T. 126ANS-A9130YWD | SW19      | 87-036-170-080 |           | SW, TACT              |
| MFT101    | S0-006-600-070 |           | I. F. T. PCFMT-066       | SW20      | 87-036-170-080 |           | SW, TACT              |
| SFR751    | S2-020-650-000 |           | SFR, 2K                  | SW21      | 87-036-170-080 |           | SW, TACT              |
| SW301     | S0-062-200-010 |           | SW, RECORDING            | VR401     | SE-111-032-010 |           | RES, VARIABLE 10KA    |
| VC1       | 87-002-730-010 |           | DIODE, SVC203SPA         | X1        | S3-327-680-000 |           | X, TAL 32.768KHZ      |
| VC2       | 87-002-730-010 |           | DIODE, SVC203SPA         | X2        | 87-030-214-080 |           | RESONATOR KBR-6       |
| VC3       | 87-002-730-010 |           | DIODE, SVC203SPA         |           |                |           |                       |
| VC52      | 81-754-634-010 |           | CAP, VARI KV1260TS2      | CD C.B    |                |           |                       |
| X101      | 87-030-218-010 |           | CER, RESO KBR457HS15     |           |                |           |                       |
| X151      | S6-072-000-000 |           | X' TAL 7.2 MHZ           | C4        | 87-010-380-010 |           | CAP, E 47-16V         |
| FRONT C.B |                |           |                          | C5        | 87-010-380-010 |           | CAP, E 47-16V         |
| C7        | 87-010-400-010 |           | CAP, E 0.47-50V          | C6        | 87-010-263-080 |           | ELECT CAP 100-10V     |
| C8        | 87-010-053-810 |           | CAP, E 1-50V             | C9        | 87-010-037-010 |           | CAP, E 10-50V         |
| C10       | 87-010-075-040 |           | CAP, E 10-16V            | C10       | 87-010-380-010 |           | CAP, E 47-16V         |
| C12       | 87-010-079-010 |           | CAP, E 100-6.3V          | C13       | 87-010-037-010 |           | CAP, E 10-50V         |
| C18       | 87-010-908-010 |           | CAP, E 220-10V           | C14       | 87-010-038-010 |           | CAP, E 22-25V         |
| C98       | 87-010-263-080 |           | ELECT CAP 100-10V        | C15       | 87-010-403-010 |           | CAP, E 3.3-50V        |
| C404      | 87-010-053-810 |           | CAP, E 1-50V             | C16       | 87-010-053-810 |           | CAP, E 1-50V          |
| C405      | 87-010-545-010 |           | CAP, E 0.22-50V          | C22       | 87-010-265-010 |           | CAP, E 33-16V         |
| C407      | 87-010-053-810 |           | CAP, E 1-50V             | C26       | 87-010-263-080 |           | ELECT CAP 100-10V     |
| C408      | 87-010-380-010 |           | CAP, E 47-16V            | C35       | 87-010-263-080 |           | ELECT CAP 100-10V     |
| C409      | 87-010-263-080 |           | ELECT CAP 100-10V        | C38       | 87-010-404-010 |           | CAP, E 4.7-50V        |
| C410      | 87-010-037-010 |           | CAP, E 10-50V            | C44       | 87-010-248-080 |           | ELECT CAP 220-10V     |
| C413      | 87-010-037-010 |           | CAP, E 10-50V            | C48       | 87-010-380-010 |           | CAP, E 47-16V         |
| C980      | 87-010-380-010 |           | CAP, E 47-16V            | C50       | 87-010-380-010 |           | CAP, E 47-16V         |
| D4        | 87-002-285-010 |           | LED, 5-5 (RED)           | C70       | 87-010-045-010 |           | CAP, E 100-25V        |
| D5        | 87-017-508-080 |           | LED, 3MM (GRN)           | C85       | 87-010-053-810 |           | CAP, E 1-50V          |
| D6        | 87-017-508-080 |           | LED, 3MM (GRN)           | C124      | 87-010-263-080 |           | ELECT CAP 100-10V     |
| D7        | 87-017-508-080 |           | LED, 3MM (GRN)           | C126      | 87-010-221-010 |           | CAP, E 470-10V        |
| D8        | 87-017-508-080 |           | LED, 3MM (GRN)           | C132      | 87-010-545-010 |           | CAP, E 0.22-50V       |
| D9        | 87-002-285-010 |           | LED, 5-5 (RED)           | C361      | 87-010-035-010 |           | CAP, E 2.2-50V        |
| D10       | 87-002-285-010 |           | LED, 5-5 (RED)           | C363      | 87-010-221-010 |           | CAP, E 470-10V        |
| D11       | 87-002-285-010 |           | LED, 5-5 (RED)           | C364      | 87-010-263-080 |           | ELECT CAP 100-10V     |
| D21       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | C377      | 87-010-035-010 |           | CAP, E 2.2-50V        |
| D22       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | FB1       | S1-011-620-000 |           | FERRITE BEAD INDUCTOR |
| D23       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | FB2       | S1-011-620-000 |           | FERRITE BEAD INDUCTOR |
| D24       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | L1        | 87-005-196-080 |           | INDUCTOR, 10UH        |
| D25       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | L302      | 87-005-495-080 |           | INDUCTOR 680UH        |
| D26       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | SFR1      | S1-030-850-000 |           | SFR, 10K              |
| D27       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | SFR2      | 87-024-176-080 |           | SFR, 100K             |
| D28       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | SFR3      | 87-024-176-080 |           | SFR, 100K             |
| D29       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | SFR4      | 87-024-176-080 |           | SFR, 100K             |
| D30       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | X1        | S0-016-930-000 |           | CER, RESO             |
| D33       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     |           |                |           |                       |
| D34       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | POWER C.B |                |           |                       |
| D35       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | △         | S7-900-000-000 |           | FUSE HOLDER           |
| D36       | 87-017-719-010 |           | LED GL3EG8 3MM (GRN)     | C743      | 87-010-404-010 |           | CAP, E 4.7-50V        |
| J1        | S0-515-460-000 |           | JACK, MIC 3.5MM          | △F701     | S0-315-200-010 |           | FUSE, 3.15A/250V<U>   |
| L10       | 87-005-647-080 |           | COIL, 10UH               | △F701     | S0-315-200-030 |           | FUSE, 3.15A/250V<LH>  |
| L11       | 87-005-647-080 |           | COIL, 10UH               |           |                |           |                       |
| LCD1      | S1-120-040-350 |           | LCD, AIW4035T-30P        | DRIVE C.B |                |           |                       |
| SW1       | 87-036-170-080 |           | SW, TACT                 | SW1       | 87-036-340-019 |           | SW, LEAF LSA-1121     |
| SW2       | 87-036-170-080 |           | SW, TACT                 | M1        | 87-045-358-019 |           | MOT, RF-310TA 43      |
| SW3       | 87-036-170-080 |           | SW, TACT                 | M2        | 87-045-356-019 |           | MOT, RF-310TA 30      |
| SW4       | 87-036-170-080 |           | SW, TACT                 |           |                |           |                       |

| REF. NO      | PART NO.       | KANRI NO.        | DESCRIPTION |
|--------------|----------------|------------------|-------------|
| MOTOR CD C.B |                |                  |             |
| SW1          | 87-036-110-019 | SW, PUSH SPPB 62 |             |
| SW2          | 87-036-110-019 | SW, PUSH SPPB 62 |             |
| M1           | 87-045-305-019 | MOTOR, RF-500TB  |             |

## TRANSISTOR ILLUSTRATION




2SA952  
2SA1015  
2SA1296  
2SA1318  
2SC1815  
2SC1923  
2SC2001  
2SC2240



2SA933S  
2SC1740S  
2SD1468S  
DTA114TS  
DTA143ES  
DTA144TS  
DTC114TS  
DTC124XS  
DTC143ES



 2SB1370





2SK161



2SK246


LCD DISPLAY (AIW4035T-30P)

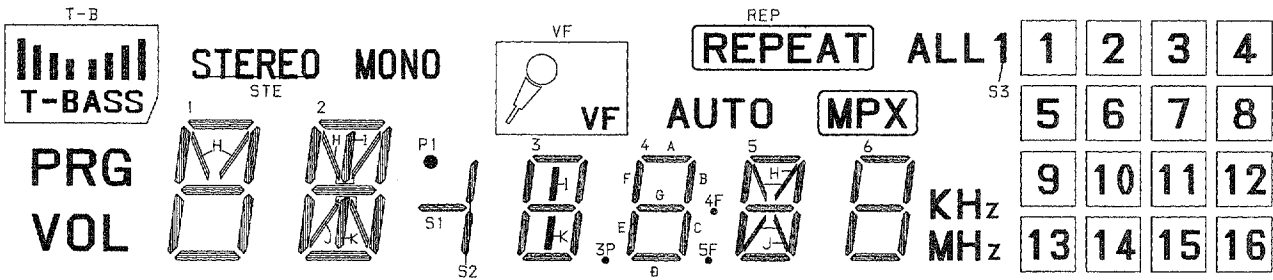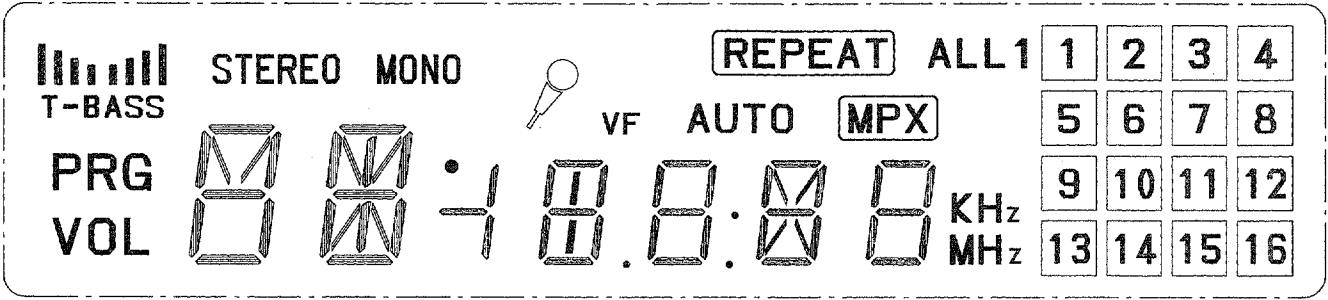


| NO.  | 1    | 2    | 3    | 4   | 5  | 6  | 7  | 8   | 9  | 10 | 11 | 12   | 13  | 14 | 15  | 16 | 17 |
|------|------|------|------|-----|----|----|----|-----|----|----|----|------|-----|----|-----|----|----|
| COM1 | COM1 | —    | —    | TOB | 1A | 1H | —  | 2I  | 2G | 2K | 2B | MONO | REP | 3F | 3A  | 3B | 4F |
| COM2 | —    | COM2 | —    | PRG | 1F | 1G | 1B | 2A  | 2H | 2J | 2C | P1   | VF  | 3G | 3IK | 3C | 4G |
| COM3 | —    | —    | COM3 | VOL | 1B | 1D | 1C | STE | 2F | 2E | 2D | S1   | S2  | 3E | 3D  | 3P | 4E |

|    |    |      |     |    |     |    |     |    |    |    |    |    |     |     |
|----|----|------|-----|----|-----|----|-----|----|----|----|----|----|-----|-----|
| 18 | 19 | 20   | 21  | 22 | 23  | 24 | 25  | 26 | 27 | 28 | 29 | 30 | 31  | 32  |
| 4B | 2A | AUTO | 5A  | 5B | 6F  | 6B | 6A  | 5  | 6  | 7  | 8  | 4  | MPX | ALL |
| 4C | 4P | 5F   | 5HJ | 5C | 6G  | 6C | KHZ | 9  | 10 | 11 | 12 | 3  | —   | —   |
| 4D | 5P | 5E   | 5G  | 5D | MHZ | 13 | MHZ | 13 | 14 | 15 | 16 | 2  | 1   | S3  |


BLOCK DIAGRAM-1 (MAIN)

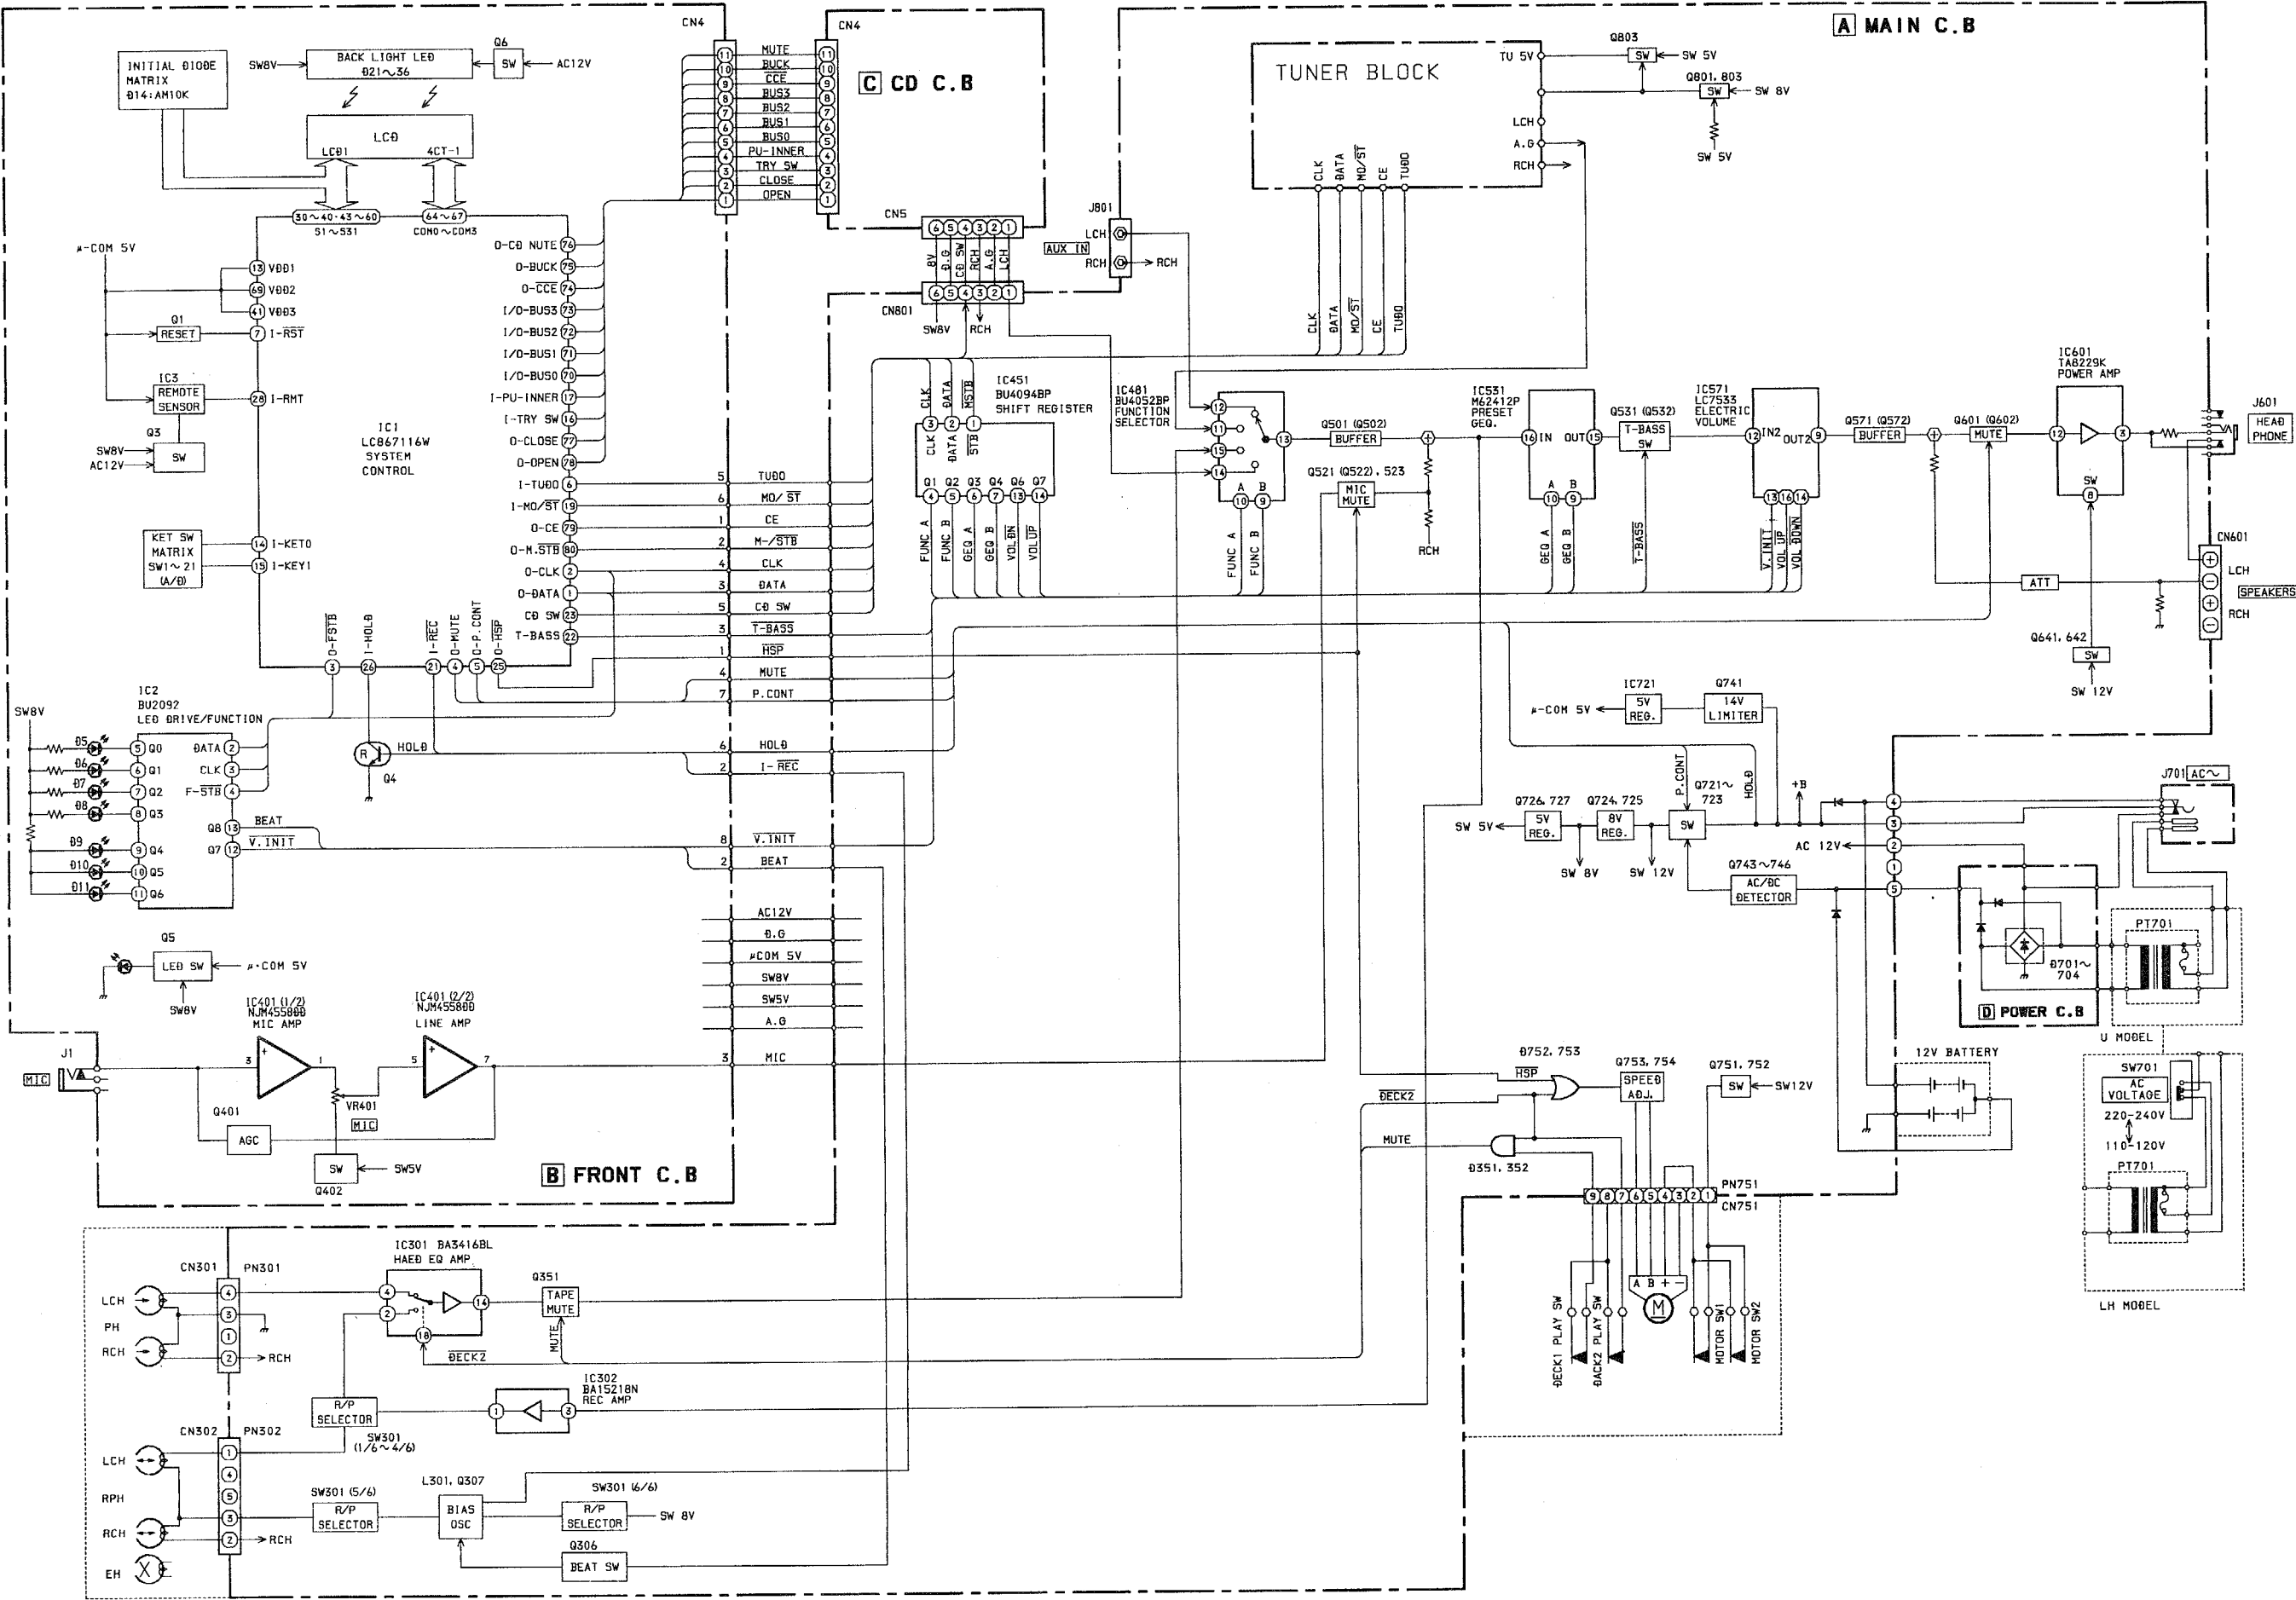

### BLOCK DIAGRAM-2 (TUNER)

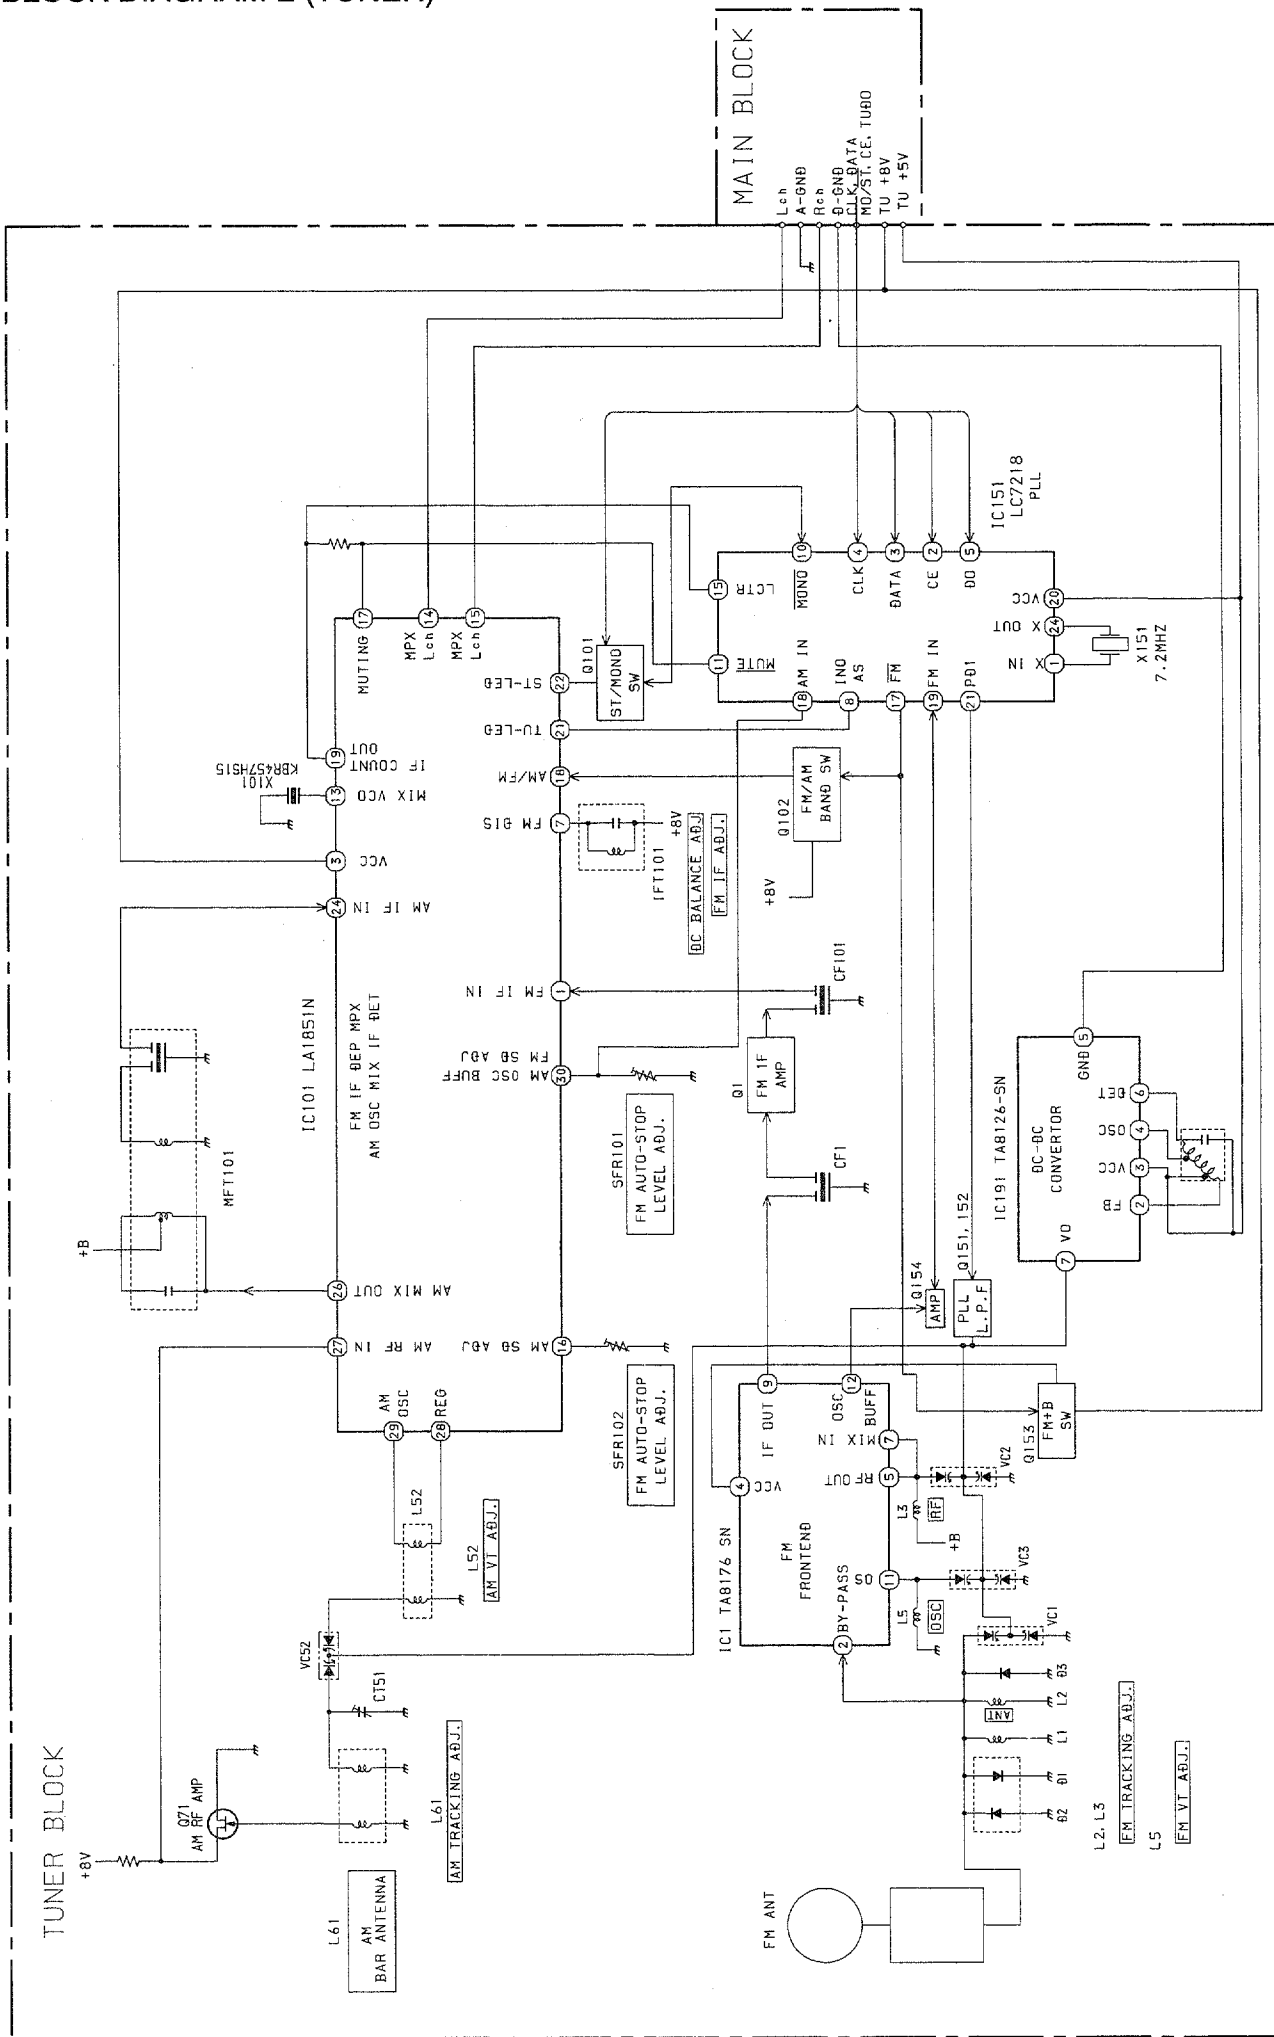




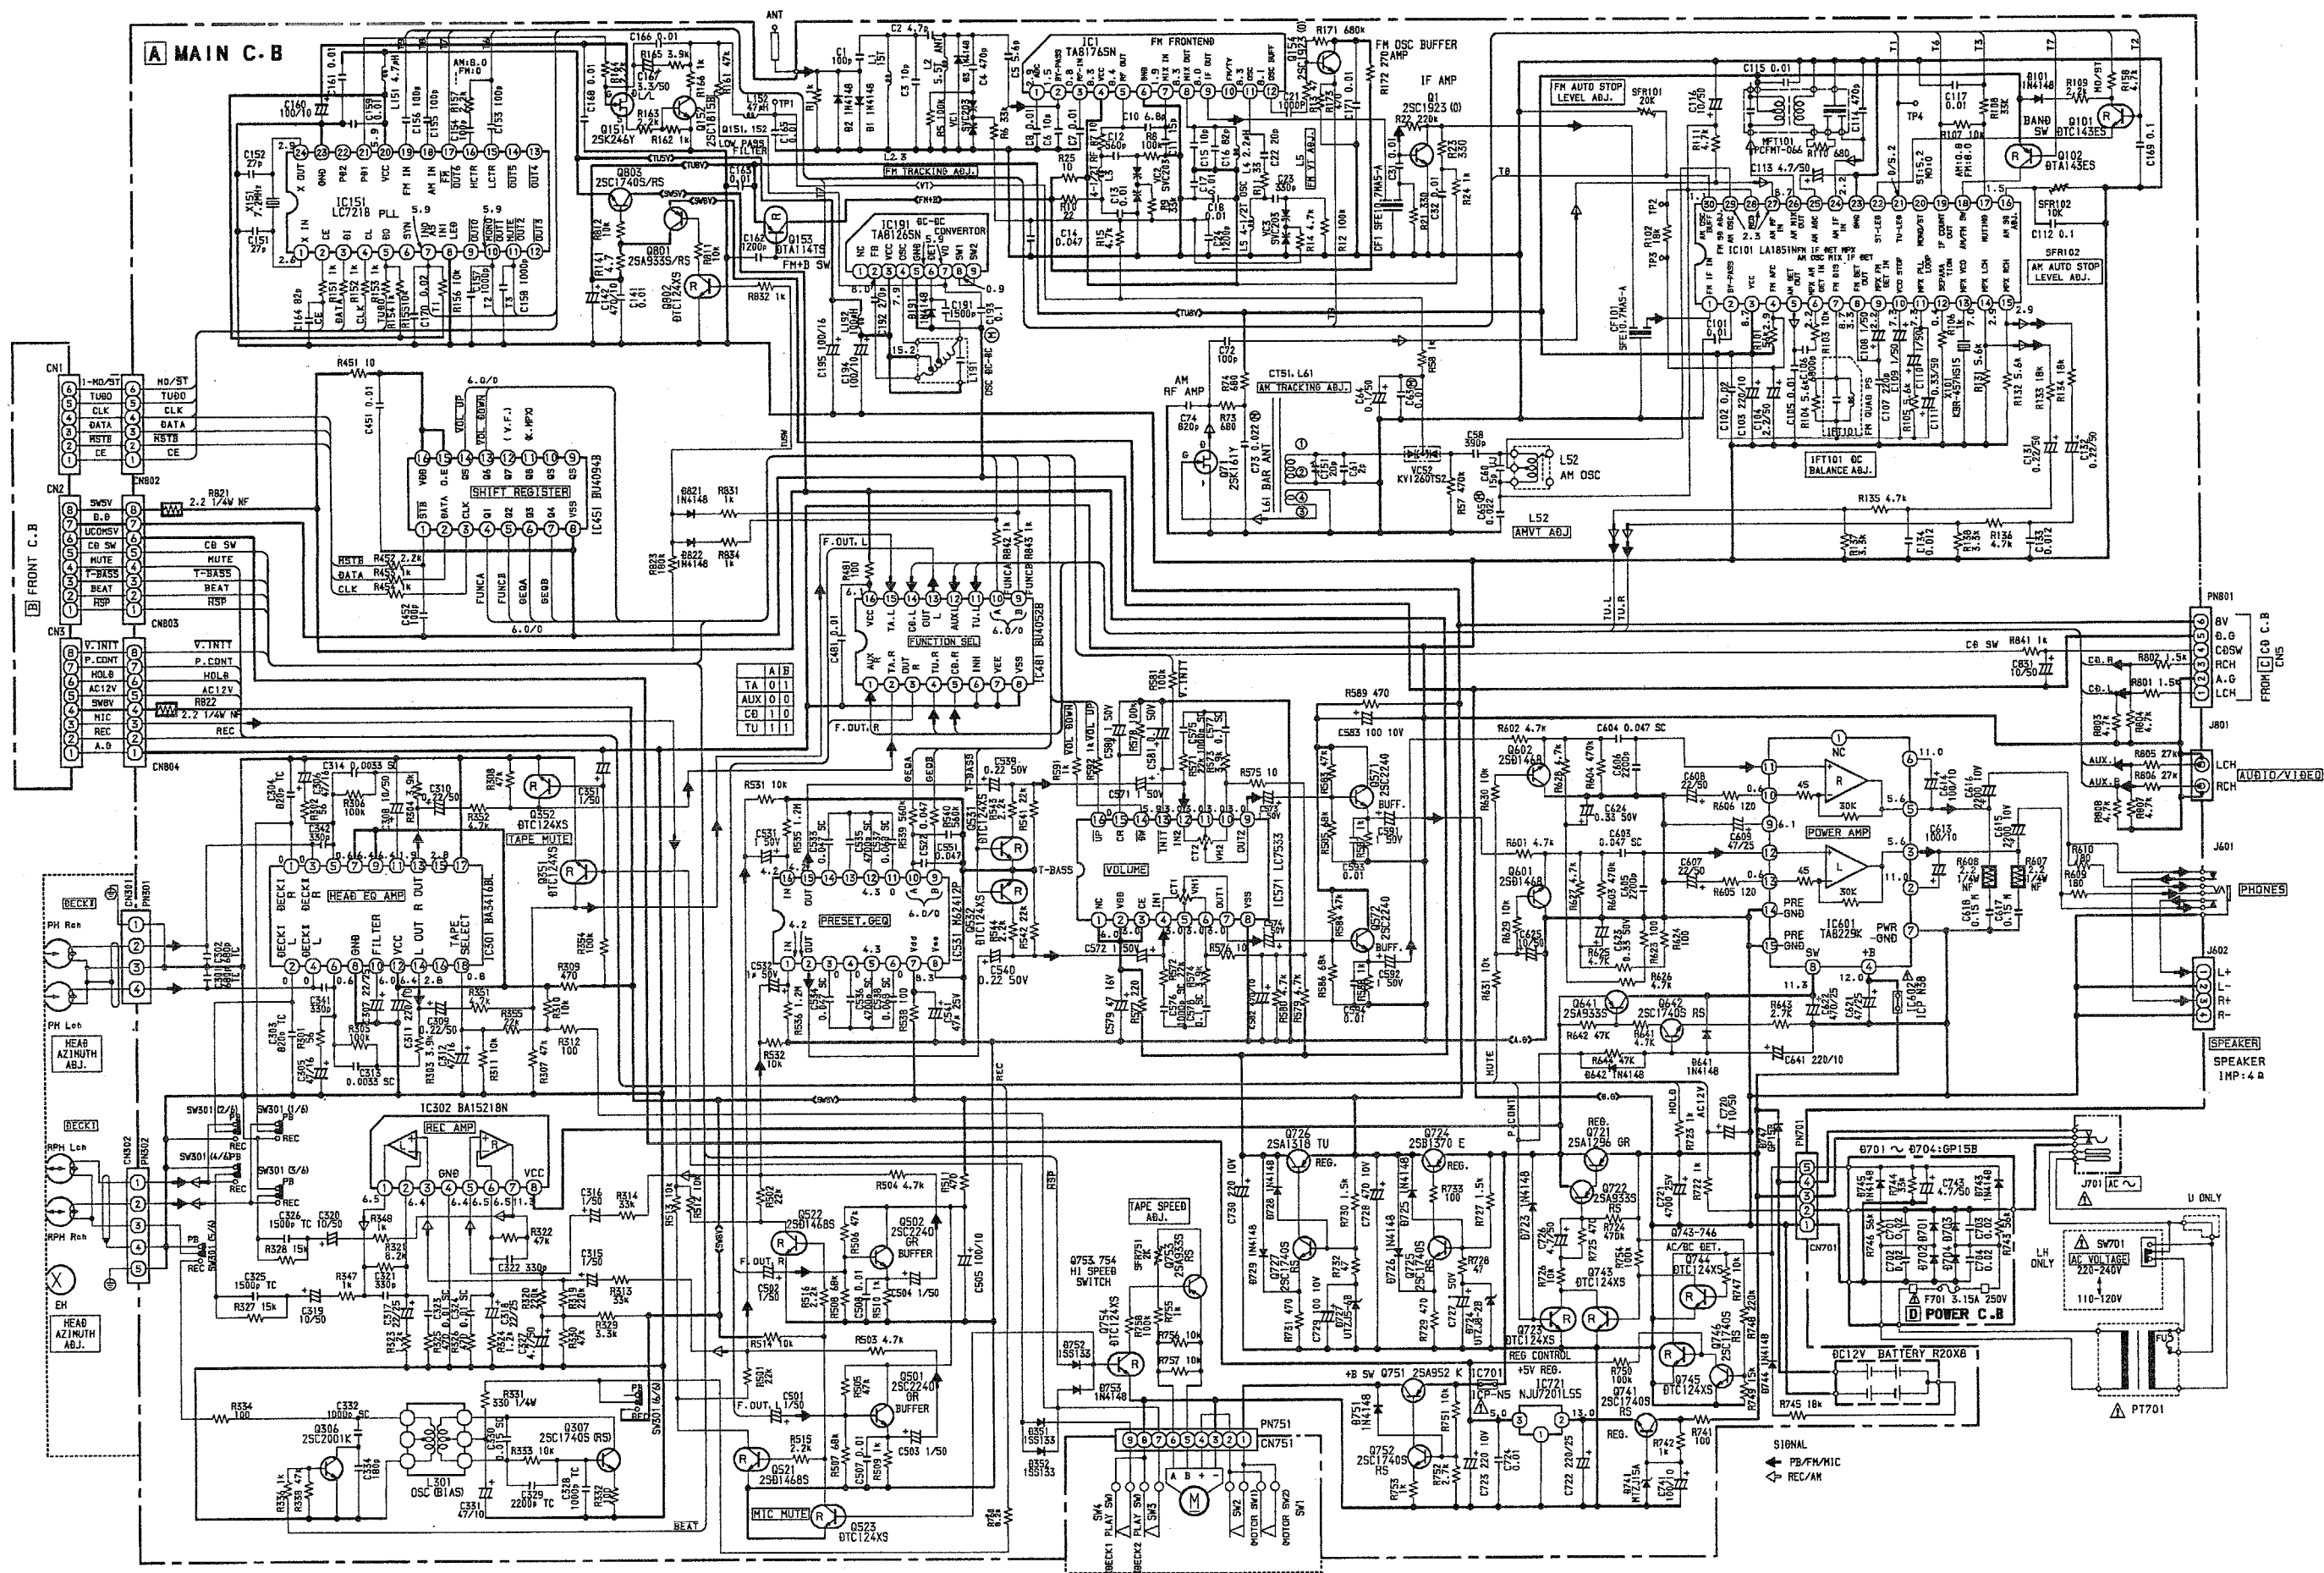




# WIRING-1 (MAIN)

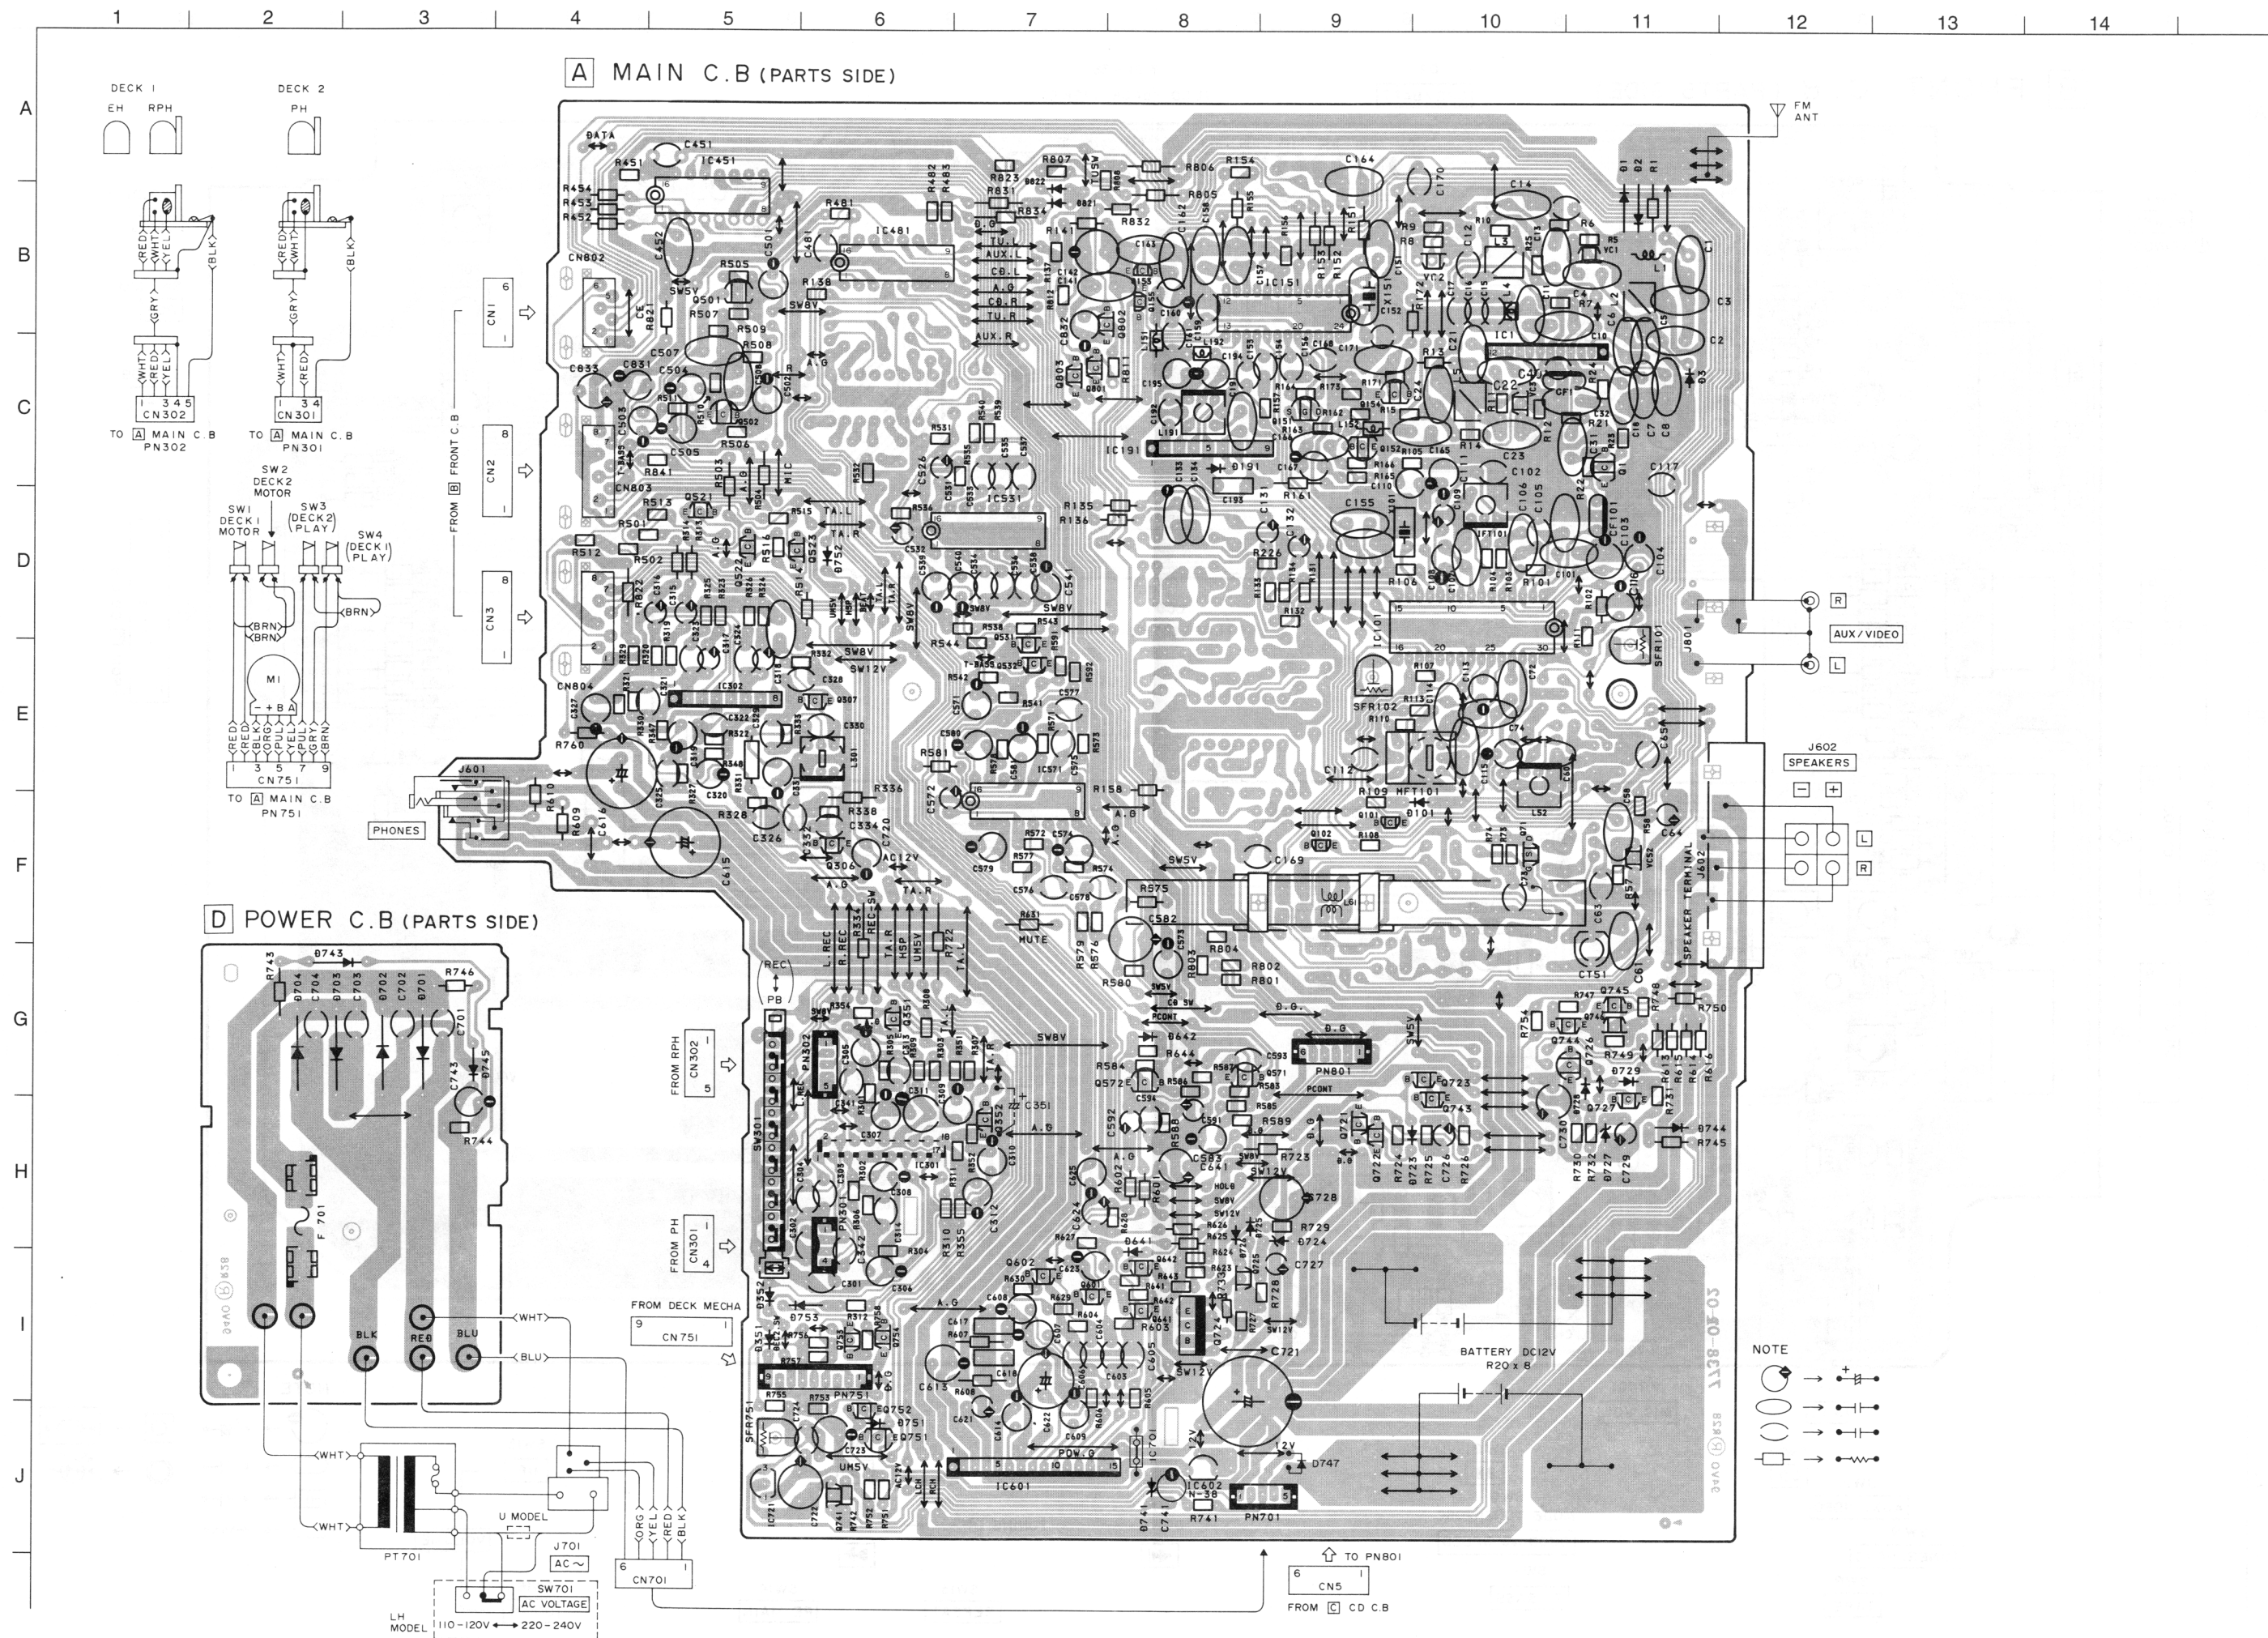







SCHEMATIC DIAGRAM-2 (FRONT)

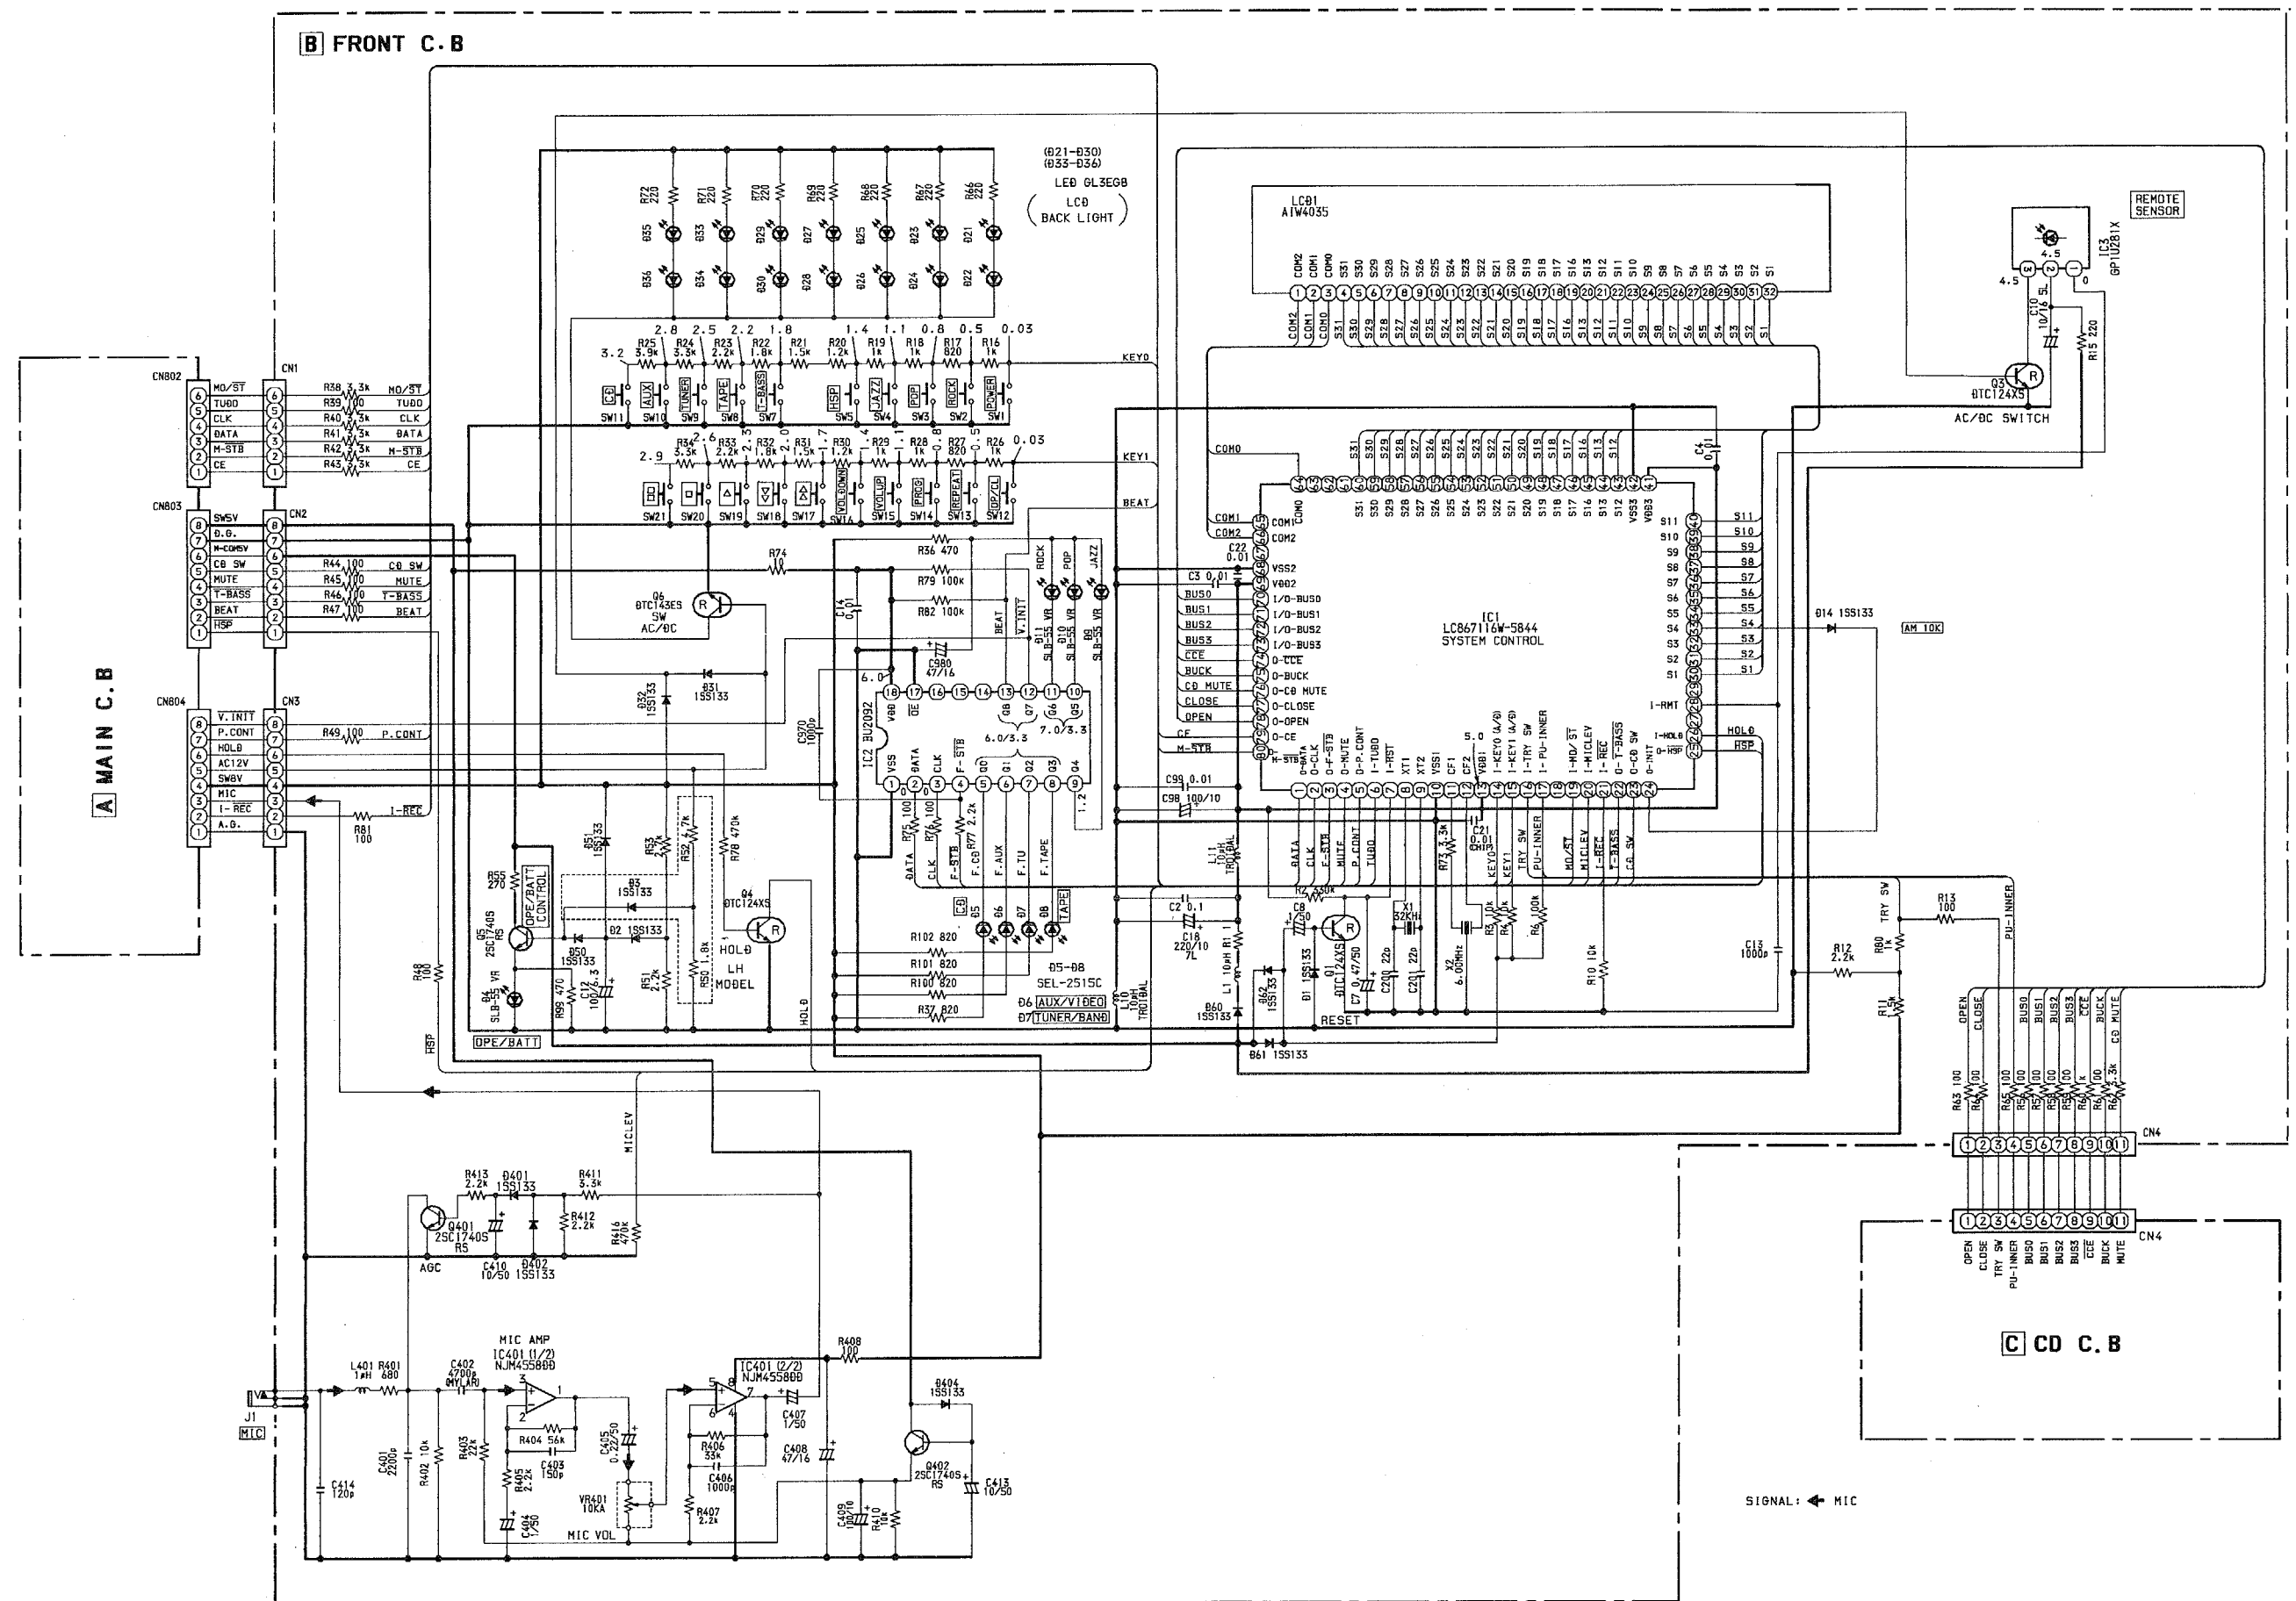



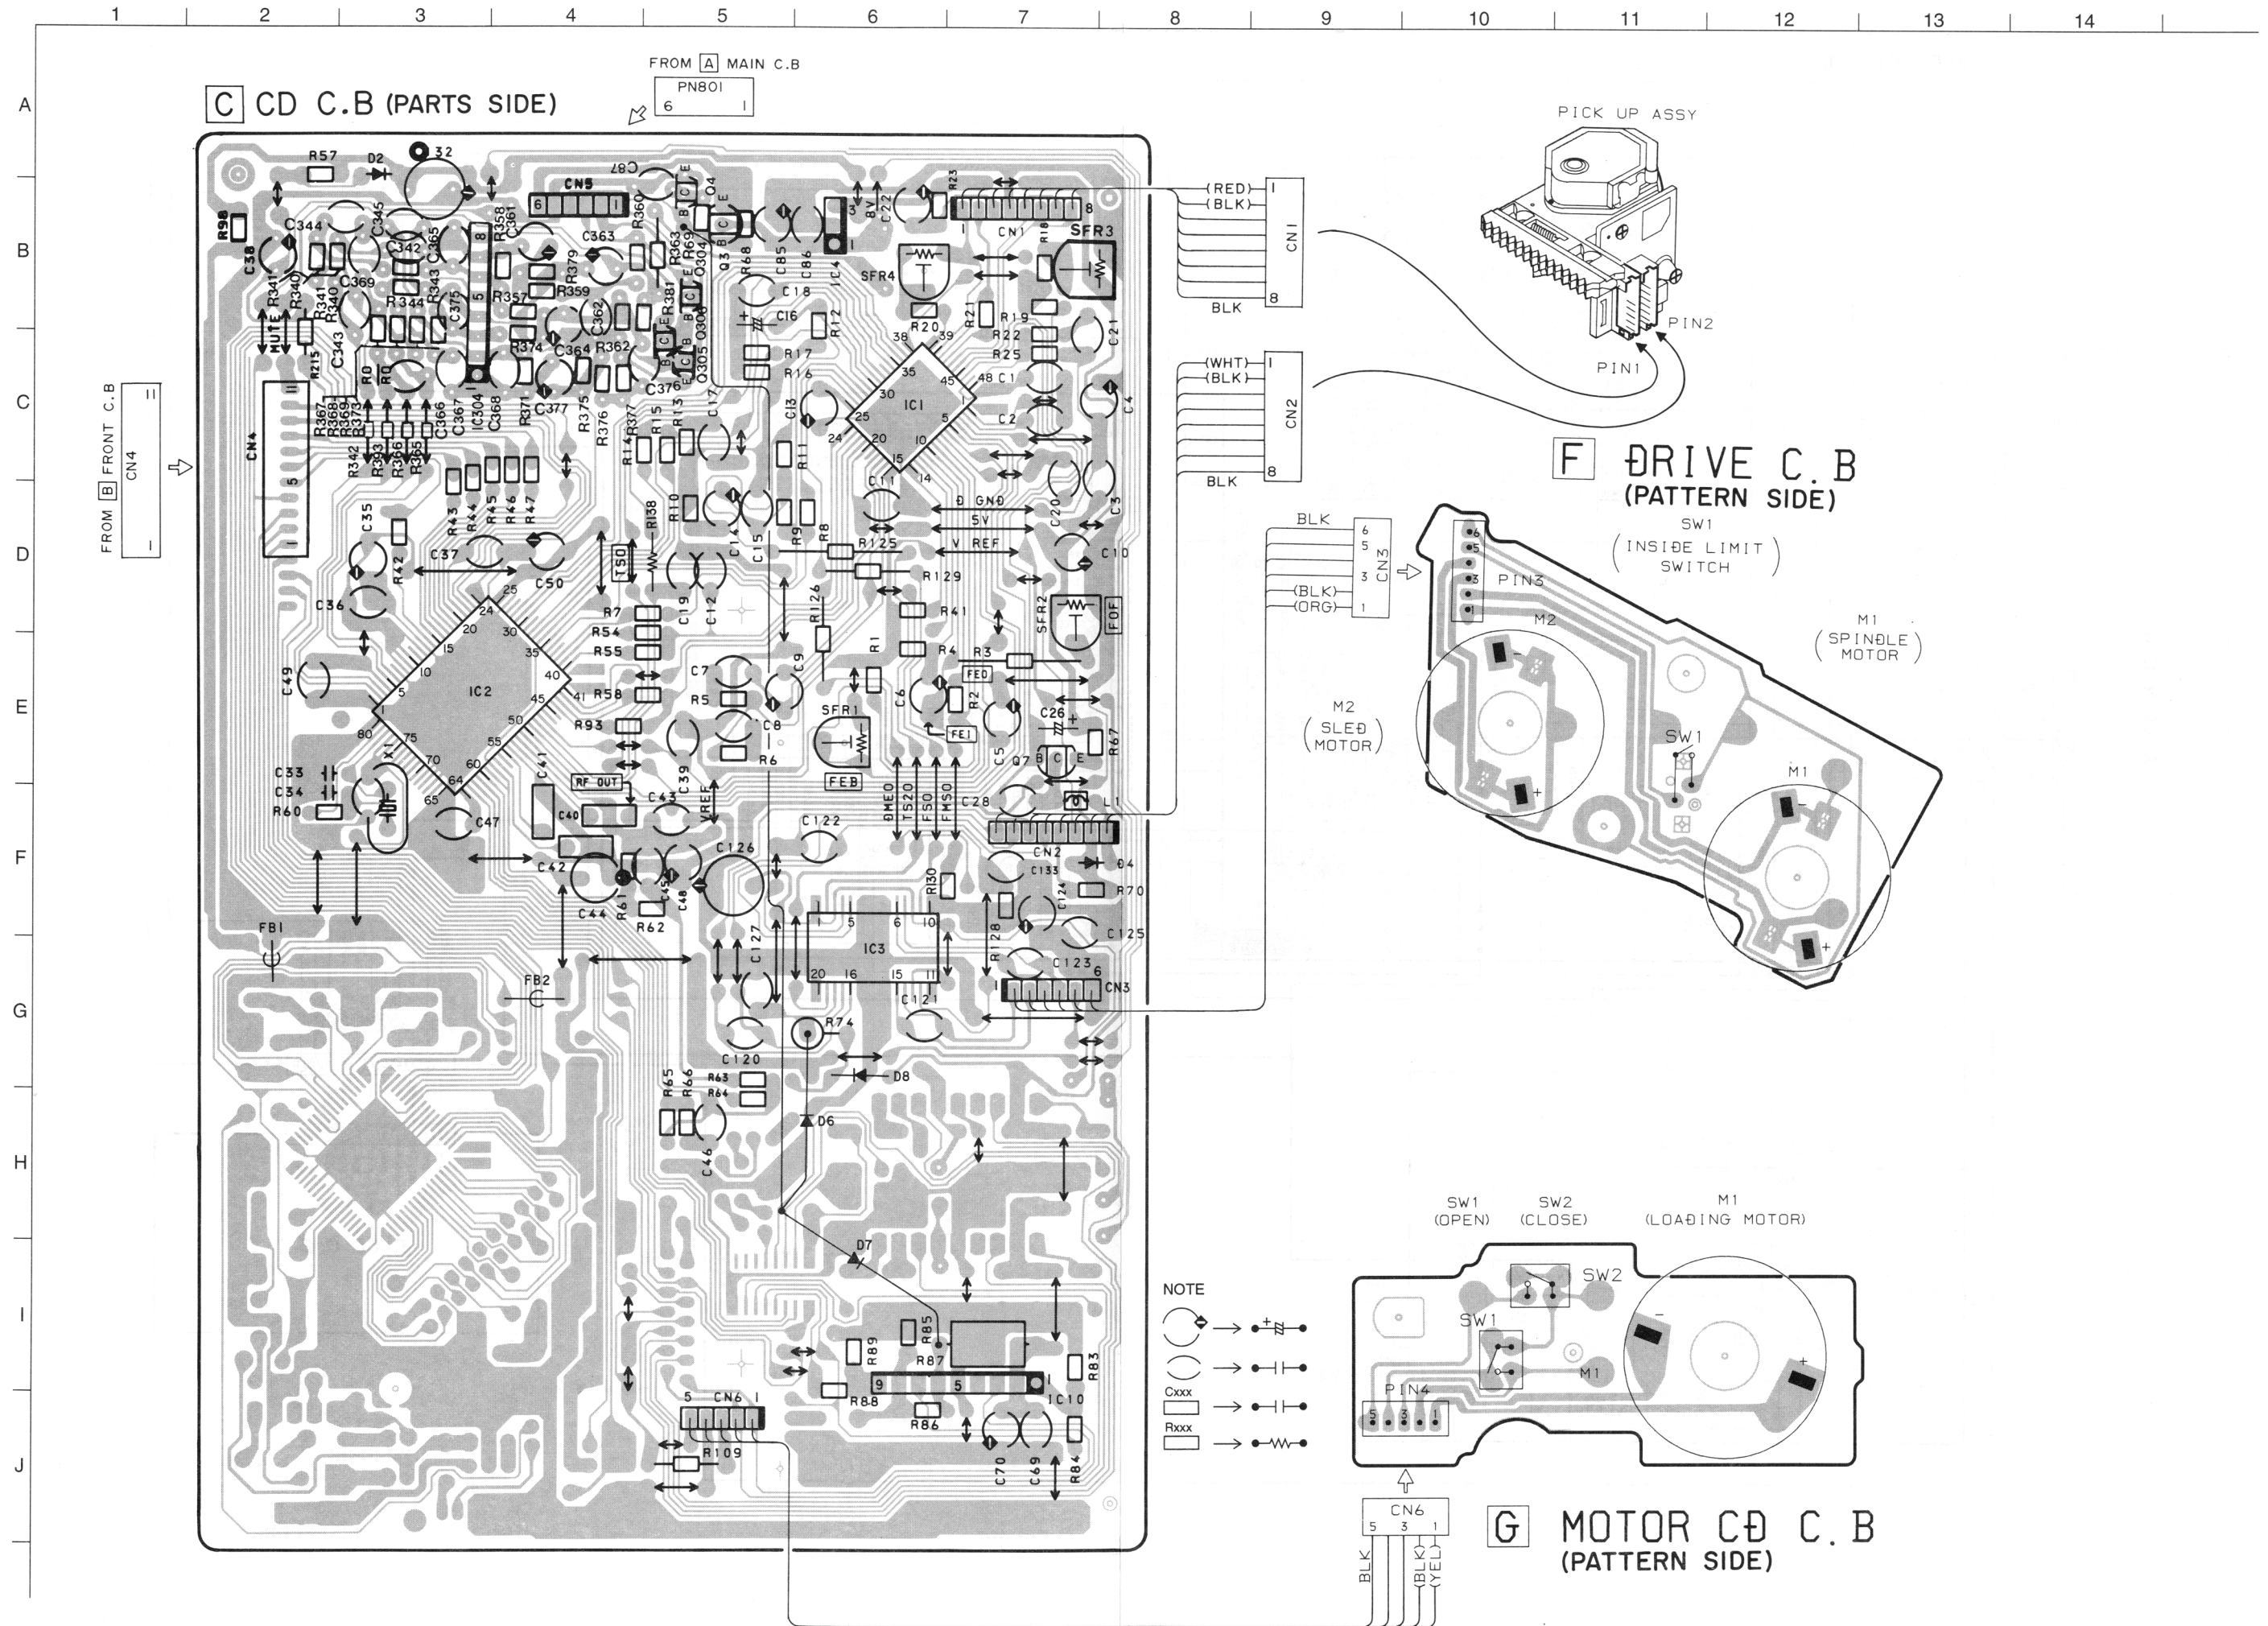

SCHEMATIC DIAGRAM-3 (CD)

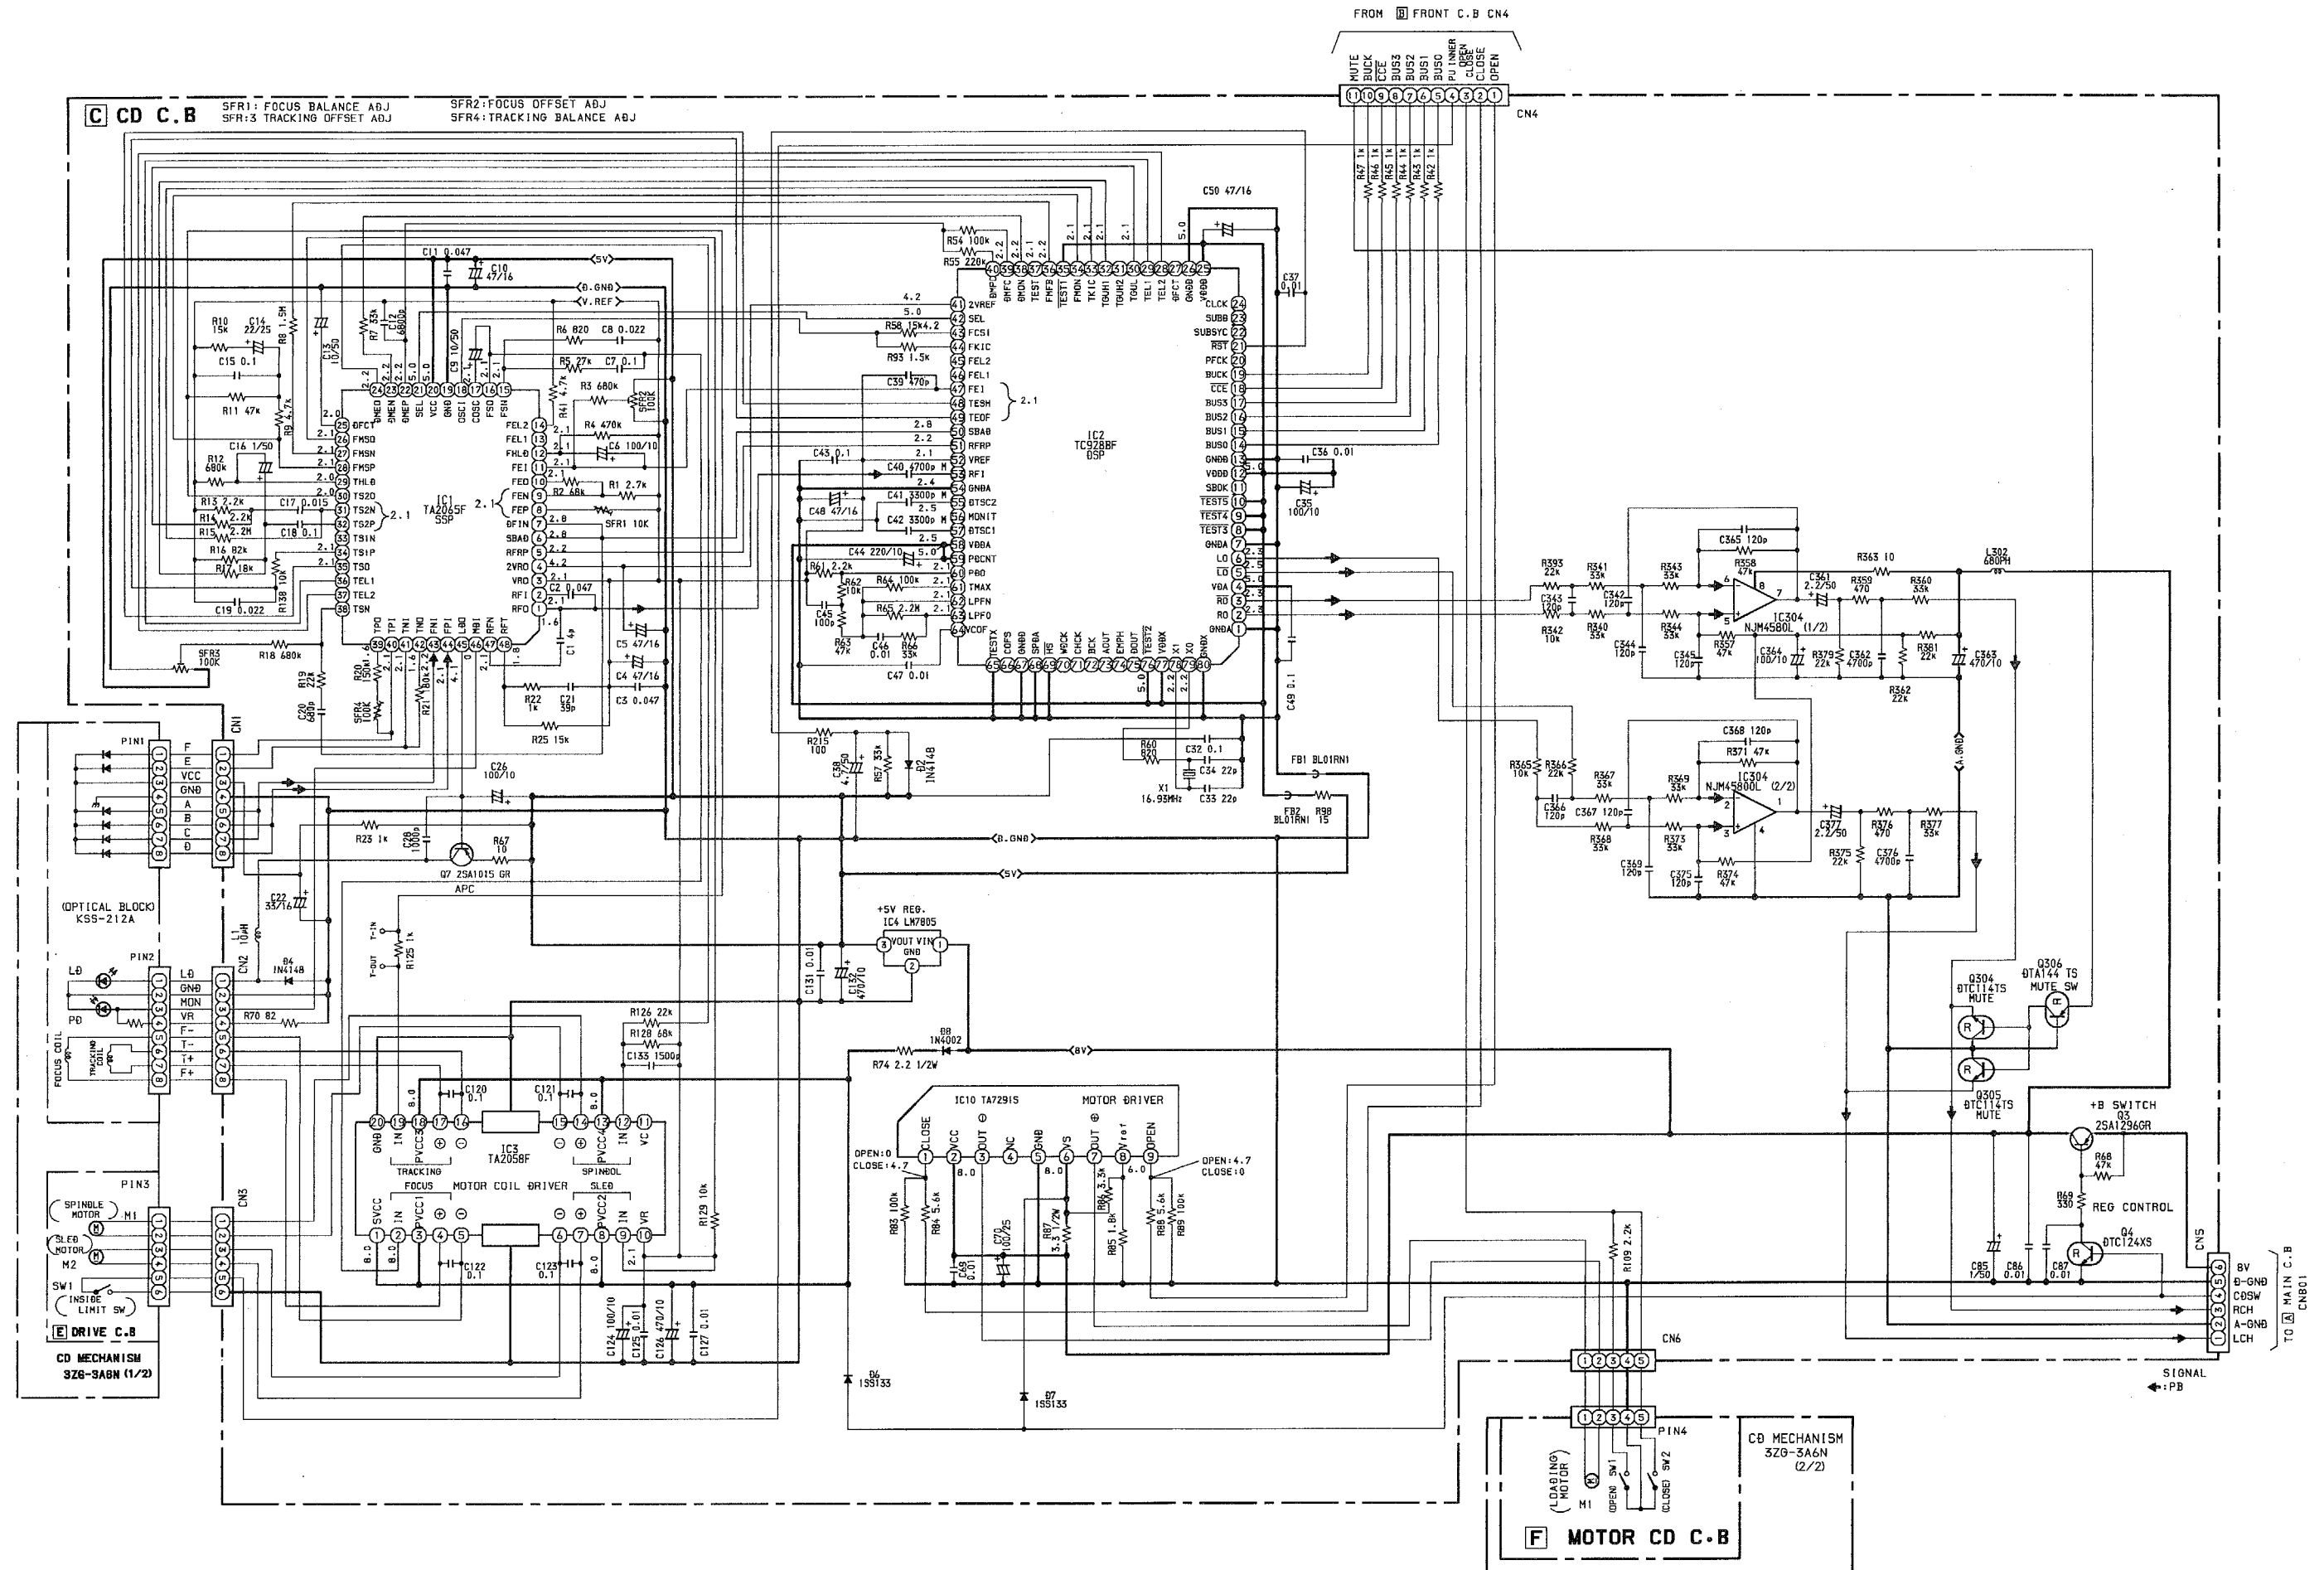

# VOLTAGE CHART

## TUNER SECTION

TEST CONDITION: SET TUNER AM/FM ON ONE FREQUENCY

### IC151(LC7218)

| PIN'S NUMBER | 1    | 2    | 3  | 4  | 5    | 6    | 7    | 8    | 9    | 10   | 11 | 12   |
|--------------|------|------|----|----|------|------|------|------|------|------|----|------|
| FM           | 2.56 | 0    | 0  | 0  | 5.30 | 0    | 5.70 | 0.00 | /    | 5.68 | 0  | 2.50 |
| AM           | 2.60 | 0    | 0  | 0  | 5.33 | 0    | 5.80 | 0    | /    | 0    | 0  | 1.90 |
| PIN'S NUMBER | 13   | 14   | 15 | 16 | 17   | 18   | 19   | 20   | 21   | 22   | 23 | 24   |
| FM           | 2.68 | 2.54 | 0  | 0  | 0.19 | 0.03 | 2.88 | 5.70 | 1.04 | 2.10 | 0  | 2.93 |
| AM           | 0    | 1.95 | 0  | 0  | 8.03 | 2.91 | 0.02 | 5.81 | 1.19 | 1.70 | 0  | 2.98 |

### IC1(TA8176SN)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6 | 7    | 8    | 9    | 10   | 11   | 12   |
|--------------|------|------|------|------|------|---|------|------|------|------|------|------|
| FM           | 2.91 | 1.49 | 0.77 | 7.57 | 7.70 | 0 | 1.90 | 7.57 | 7.29 | 0.02 | 7.53 | 7.38 |

### IC101(LA1851N)

| PIN'S NUMBER | 1           | 2    | 3    | 4          | 5    | 6    | 7            | 8    | 9    | 10   |
|--------------|-------------|------|------|------------|------|------|--------------|------|------|------|
| FM           | 2.09        | 2.11 | 7.82 | 2.62       | 0    | 2.19 | 7.83         | 3.26 | 2.18 | 6.39 |
| AM           | 2.34        | 2.34 | 0.04 | 2.41       | 0.70 | 2.18 | 8.04         | 2.31 | 2.18 | 6.63 |
| PIN'S NUMBER | 11          | 12   | 13   | 14         | 15   | 16   | 17           | 18   | 19   | 20   |
| FM           | 6.38        | 0.38 | 6.11 | 3.05       | 3.14 | 1.51 | 0.05         | 7.82 | 0.07 | 0.80 |
| AM           | 6.61        | 0.38 | 6.04 | 3.07       | 3.15 | 1.48 | 0.05         | 0.79 | 0.07 | 0.77 |
| PIN'S NUMBER | 21          | 22   | 23   | 24         | 25   | 26   | 27           | 28   | 29   | 30   |
| FM           | 5.70        | 5.02 | 0    | 2.11       | 0.08 | 7.82 | 2.30         | 2.30 | 2.30 | 1.07 |
| AM           | 5.81        | 0    | 0    | 2.34       | 0.69 | 8.04 | 2.26         | 2.26 | 2.26 | 0.79 |
|              | Q801(A933S) |      |      | Q802(C124) |      |      | Q803(C1740S) |      |      |      |
| PIN'S NUMBER | E           | C    | B    | E          | C    | B    | E            | C    | B    |      |
| FM           | 8.31        | 8.08 | 7.53 | 0          | 0.02 | 1.50 | 5.72         | 5.84 | 6.44 |      |
| AM           | 8.32        | 8.20 | 7.57 | 0          | 0.02 | 1.50 | 5.82         | 5.86 | 6.50 |      |

## CASSETTE SECTION

TEST CONDITION: TAPE PLAY

### IC301(BA3416BL)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8  | 9    |
|--------------|------|------|------|------|------|------|------|----|------|
| PLAY         | 0    | 0    | 0    | 0    | 0.59 | 0.59 | 5.68 | 0  | 5.68 |
| PIN'S NUMBER | 10   | 11   | 12   | 13   | 14   | 15   | 16   | 17 | 18   |
| PLAY         | 5.31 | 0.66 | 5.68 | 2.62 | 2.59 | 0    | 0    | 0  | 0.34 |

### IC302(BA15218N)

| PIN'S NUMBER | 1           | 2    | 3    | 4            | 5    | 6    | 7           | 8    |      |             |      |      |
|--------------|-------------|------|------|--------------|------|------|-------------|------|------|-------------|------|------|
| REC          | 5.97        | 5.97 | 5.84 | 0            | 5.84 | 5.97 | 5.97        | 9.17 |      |             |      |      |
| PIN'S NUMBER | Q306(C2001) |      |      | Q307(C1740S) |      |      | Q501(C2240) |      |      | Q502(C2240) |      |      |
|              | E           | C    | B    | E            | C    | B    | E           | C    | B    | E           | C    | B    |
| REC          | 0           | 9.90 | 0    | 0.90         | 5.28 | 0.11 | 2.53        | 5.83 | 3.15 | 2.54        | 5.83 | 3.17 |
|              | Q753(A933S) |      |      |              |      |      |             |      |      |             |      |      |
| PIN'S NUMBER | E           | C    | B    |              |      |      |             |      |      |             |      |      |
| NOR SPEED    | 8.04        | 8.00 | 7.41 |              |      |      |             |      |      |             |      |      |
| HI SPEED     | 8.04        | 8.00 | 7.41 |              |      |      |             |      |      |             |      |      |
|              | Q751(A952)  |      |      | Q752(C1740S) |      |      |             |      |      |             |      |      |
| PIN'S NUMBER | E           | C    | B    | E            | C    | B    |             |      |      |             |      |      |
| TAPE         | 9.09        | 9.01 | 8.35 | 1.28         | 8.35 | 1.91 |             |      |      |             |      |      |

# POWER AMP SECTION

## TEST CONDITION: TAPE PLAY

### IC451(BU4094B)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    |
|--------------|------|------|------|------|------|------|------|------|
| TAPE         | 0    | 0    | 0    | 0    | 5.84 | 0    | 0    | 0    |
| RADIO        | 0    | 0    | 0    | 5.83 | 5.83 | 0    | 0    | 0    |
| CD           | 0    | 0    | 0    | 5.86 | 0    | 0    | 0    | 0    |
| AUX          | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    |
| PIN'S NUMBER | 9    | 10   | 11   | 12   | 13   | 14   | 15   | 16   |
| TAPE         | 5.84 | 5.84 | 5.84 | 5.84 | 5.84 | 5.84 | 5.84 | 5.84 |
| RADIO        | 5.83 | 5.83 | 5.83 | 5.83 | 5.83 | 5.83 | 5.83 | 5.83 |
| CD           | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 |
| AUX          | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 | 5.86 |

### IC481(BU4052BC)

| PIN'S NUMBER | 1    | 2    | 3  | 4  | 5  | 6  | 7  | 8    |
|--------------|------|------|----|----|----|----|----|------|
| TAPE         | 0    | 0    | 0  | 0  | 0  | 0  | 0  | 0    |
| RADIO        | 0    | 0    | 0  | 0  | 0  | 0  | 0  | 0    |
| CD           | 0    | 0    | 0  | 0  | 0  | 0  | 0  | 0    |
| AUX          | 0    | 0    | 0  | 0  | 0  | 0  | 0  | 0    |
| PIN'S NUMBER | 9    | 10   | 11 | 12 | 13 | 14 | 15 | 16   |
| TAPE         | 5.87 | 0    | 0  | 0  | 0  | 0  | 0  | 5.87 |
| RADIO        | 5.84 | 5.84 | 0  | 0  | 0  | 0  | 0  | 5.84 |
| CD           | 0    | 5.87 | 0  | 0  | 0  | 0  | 0  | 5.87 |
| AUX          | 0    | 0    | 0  | 0  | 0  | 0  | 0  | 5.87 |

### IC571(LC7533)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    |
|--------------|------|------|------|------|------|------|------|------|
|              | 5.83 | 5.83 | 5.83 | 2.90 | 2.91 | 2.91 | 2.91 | 0    |
| PIN'S NUMBER | 9    | 10   | 11   | 12   | 13   | 14   | 15   | 16   |
|              | 2.91 | 2.91 | 2.91 | 2.90 | 5.76 | 5.87 | 0    | 5.87 |

### IC531(M62417P)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6  | 7    | 8    |
|--------------|------|------|------|------|------|----|------|------|
|              | 4.27 | 4.22 | 0.41 | 0    | 4.29 | 0  | 7.68 | 0    |
| PIN'S NUMBER | 9    | 10   | 11   | 12   | 13   | 14 | 15   | 16   |
|              | 0.04 | 0.05 | 0    | 4.30 | 0    | 0  | 4.24 | 4.27 |

### IC601(TA8229K)

| PIN'S NUMBER | 1           | 2    | 3    | 4           | 5    | 6    | 7           | 8    | 9    |              |      |      |
|--------------|-------------|------|------|-------------|------|------|-------------|------|------|--------------|------|------|
|              | 1.76        | 3.05 | 3.07 | 4.48        | 0    | 3.04 | 3.07        | 3.05 | 9.73 |              |      |      |
| PIN'S NUMBER | 10          | 11   | 12   | 13          | 14   | 15   | 16          | 17   |      |              |      |      |
|              | 9.70        | 4.10 | 4.10 | 0           | 0    | 4.12 | 4.09        | 9.73 |      |              |      |      |
|              | Q721(A1296) |      |      | Q722(A933S) |      |      | Q726(A1318) |      |      | Q727(C1740S) |      |      |
| PIN'S NUMBER | E           | C    | B    | E           | C    | B    | E           | C    | B    | E            | C    | B    |
|              | 9.84        | 9.14 | 9.15 | 9.15        | 9.15 | 8.48 | 8.35        | 5.88 | 7.67 | 5.16         | 7.67 | 5.71 |

# CD SECTION

## TEST CONDITION:CD PLAY

### IC1(TA2065F)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   |
|--------------|------|------|------|------|------|------|------|------|------|------|------|------|
|              | 0.90 | 1.00 | 2.20 | 4.40 | 1.80 | 2.20 | 2.20 | 2.20 | 2.20 | 2.20 | 2.20 | 1.90 |
| PIN'S NUMBER | 13   | 14   | 15   | 16   | 17   | 18   | 19   | 20   | 21   | 22   | 23   | 24   |
|              | 2.00 | 2.20 | 2.20 | 2.00 | 2.00 | 2.60 | 0.00 | 4.50 | 0.00 | 1.80 | 2.20 | 2.20 |
| PIN'S NUMBER | 25   | 26   | 27   | 28   | 29   | 30   | 31   | 32   | 33   | 34   | 35   | 36   |
|              | 1.80 | 2.20 | 2.20 | 2.20 | 0.60 | 2.20 | 2.20 | 1.70 | 2.20 | 2.20 | 2.20 | 2.20 |
| PIN'S NUMBER | 37   | 38   | 39   | 40   | 41   | 42   | 43   | 44   | 45   | 46   | 47   | 48   |
|              | 2.20 | 2.20 | 2.20 | 2.20 | 2.20 | 2.20 | 2.20 | 2.20 | 4.40 | 0    | 2.20 | 1.20 |

### IC2(TC9284F)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   |
|--------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
|              | 2.80 | 3.00 | 2.40 | 4.40 | 2.40 | 3.00 | 2.80 | 4.40 | 4.40 | 4.40 | 0    | 4.40 | 0    | 4.60 |
| PIN'S NUMBER | 15   | 16   | 17   | 18   | 19   | 20   | 21   | 22   | 23   | 24   | 25   | 26   | 27   | 28   |
|              | 4.60 | 4.60 | 4.60 | 4.60 | 4.60 | 2.20 | 4.40 | 0    | 0    | 0    | 4.50 | 0    | 0    | 2.20 |
| PIN'S NUMBER | 29   | 30   | 31   | 32   | 33   | 34   | 35   | 36   | 37   | 38   | 39   | 40   | 41   | 42   |
|              | 2.00 | 2.20 | 0    | 2.20 | 0    | 2.20 | 4.60 | 0.40 | 3.80 | 2.00 | 2.20 | 0.80 | 4.40 | 0    |
| PIN'S NUMBER | 43   | 44   | 45   | 46   | 47   | 48   | 49   | 50   | 51   | 52   | 53   | 54   | 55   | 56   |
|              | 2.20 | 2.40 | 0    | 0    | 2.00 | 2.20 | 2.20 | 1.70 | 1.60 | 2.20 | 1.50 | 0    | 1.60 | 2.20 |
| PIN'S NUMBER | 57   | 58   | 59   | 60   | 61   | 62   | 63   | 64   | 65   | 66   | 67   | 68   | 69   | 70   |
|              | 2.00 | 4.40 | 4.40 | 2.20 | 0    | 1.20 | 3.80 | 0    | 0    | 4.40 | 0    | 0    | 0    | 2.20 |
| PIN'S NUMBER | 71   | 72   | 73   | 74   | 75   | 76   | 77   | 78   | 79   | 80   |      |      |      |      |
|              | 2.20 | 2.20 | 0    | 4.40 | 2.20 | 4.40 | 0    | 0    | 0    | 0    |      |      |      |      |

### IC3(TA2058F)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   |
|--------------|------|------|------|------|------|------|------|------|------|------|
|              | 8.00 | 2.00 | 8.00 | 3.80 | 3.80 | 3.80 | 3.80 | 8.00 | 2.20 | 2.20 |
| PIN'S NUMBER | 11   | 12   | 13   | 14   | 15   | 16   | 17   | 18   | 19   | 20   |
|              | 3.6  | 2.00 | 8.00 | 3.80 | 3.80 | 3.80 | 3.80 | 8.00 | 2.20 | 0    |

### IC10(TA7291S)

| PIN'S NUMBER | 1 | 2    | 3 | 4 | 5 | 6    | 7 | 8    | 9 |
|--------------|---|------|---|---|---|------|---|------|---|
|              | 0 | 8.00 | 0 | 0 | 0 | 8.00 | 0 | 3.00 | 0 |

### IC1(LC867116W)

| PIN'S NUMBER | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   |
|--------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
|              | 0    | 0    | 0    | 0    | 4.40 | 3.40 | 1.80 | 0    | 0    | 0    | 4.40 | 4.40 | 4.40 | 4.40 |
| PIN'S NUMBER | 15   | 16   | 17   | 18   | 19   | 20   | 21   | 22   | 23   | 24   | 25   | 26   | 27   | 28   |
|              | 4.40 | 0    | 0    | 0    | 0    | 2.40 | 0    | 0    | 0    | 4.50 | 4.50 | 0    | 0    | 4.20 |
| PIN'S NUMBER | 29   | 30   | 31   | 32   | 33   | 34   | 35   | 36   | 37   | 38   | 39   | 40   | 41   | 42   |
|              | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 1.80 | 4.50 | 0    |
| PIN'S NUMBER | 43   | 44   | 45   | 46   | 47   | 48   | 50   | 51   | 52   | 53   | 54   | 55   | 56   | 57   |
|              | 1.80 | 1.80 | 2.00 | 2.00 | 2.00 | 1.80 | 1.80 | 1.80 | 1.90 | 1.90 | 1.90 | 1.90 | 1.80 | 2.00 |
| PIN'S NUMBER | 58   | 59   | 60   | 61   | 62   | 63   | 64   | 65   | 66   | 67   | 68   | 69   | 70   | 71   |
|              | 2.00 | 1.90 | 1.90 | 0    | 0    | 0    | 1.90 | 1.90 | 1.90 | 0    | 0    | 4.40 | 0    | 0    |
| PIN'S NUMBER | 72   | 73   | 74   | 75   | 76   | 77   | 78   | 79   | 80   |      |      |      |      |      |
|              | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    |      |      |      |      |      |



IC DESCRIPTION  
IC, LC867116W-5844

| Pin No. | Pin Name                     | I/O | Description                                                     |
|---------|------------------------------|-----|-----------------------------------------------------------------|
| 1       | O-DATA                       | O   | PLL, shift register data output.                                |
| 2       | O-CLK                        | O   | PLL, shift register clock output.                               |
| 3       | $\overline{\text{O-FSTB}}$   | O   | Shift register data latch strobe output.                        |
| 4       | O-MUTE                       | O   | Main mute output.                                               |
| 5       | O-PCONT                      | O   | Machine power supply control output.                            |
| 6       | I-TUDO                       | I   | PLL IC tuner data input.                                        |
| 7       | $\overline{\text{I-RST}}$    | I   | Microprocessor reset..                                          |
| 8       | XT1                          | I   | Connected to 32.768 kHz crystal.                                |
| 9       | XT2                          | O   | Connected to 32.768 kHz crystal.                                |
| 10      | VSS1                         | —   | GND.                                                            |
| 11      | CF1                          | I   | Connected to 6 MHz ceramic lock.                                |
| 12      | CF2                          | O   | Connected to 6 MHz ceramic lock.                                |
| 13      | VDD1                         | —   | Microprocessor power supply (5 V).                              |
| 14      | I-KEY0                       | I   | Key A/D input.                                                  |
| 15      | I-KEY1                       | I   | Key A/D input.                                                  |
| 16      | I-TRY SW                     | I   | CD tray open/close switch A/D input.                            |
| 17      | I-PU-INNER                   | I   | CD inside limit switch input.                                   |
| 18      | —                            | I   | N.C.                                                            |
| 19      | I-MO/ $\overline{\text{ST}}$ | I   | Tuner · stereo detection.                                       |
| 20      | I-MICLEV                     | I   | Microphone level detection.                                     |
| 21      | I-REC                        | I   | N.C.                                                            |
| 22      | $\overline{\text{O-T-BASS}}$ | O   | T-bass circuit ON/OFF switch output (ON: L).                    |
| 23      | O-CDSW                       | O   | CD block power supply control output (ON: H).                   |
| 24      | O-INIT                       | O   | Initial setting output.                                         |
| 25      | $\overline{\text{O-HSP}}$    | O   | High speed dubbing selector output (ON: L).                     |
| 26      | I-HOLD                       | I   | Hold backup mode at “H”.                                        |
| 27      | —                            | I   | N.C.                                                            |
| 28      | I-RMT                        | I   | Remote control input.                                           |
| 29      | PAO                          | I   | Initial setting input.                                          |
| 30      | S1                           | O   | LCD segment output.                                             |
| 31-40   | S2-S11                       | O   | LCD segment output and initial setting output at the same time. |
| 41      | VDD3                         | —   | Microprocessor power supply.                                    |
| 42      | VSS3                         | —   | GND.                                                            |
| 43      | S12                          | O   | LCD segment output.                                             |
| 44      | S13                          | O   | LCD segment output.                                             |
| 45-60   | S16-31                       | O   | LCD segment output.                                             |
| 61      | V3                           | —   | LCD drive bias power supply.                                    |
| 62      | V2                           | —   | LCD drive bias power supply.                                    |
| 63      | V1                           | —   | LCD drive bias power supply.                                    |
| 64      | COM0                         | O   | LCD common output.                                              |
| 65      | COM1                         | O   | LCD common output.                                              |

| Pin No. | Pin Name                  | I/O | Description                                          |
|---------|---------------------------|-----|------------------------------------------------------|
| 66      | COM2                      | O   | LCD common output.                                   |
| 67      | COM3                      | O   | N.C.                                                 |
| 68      | VSS2                      | —   | GND.                                                 |
| 69      | VDD2                      | —   | CD IC control data bus input/output.                 |
| 70      | I/O BUS0                  | I/O | CD IC control data bus input/output.                 |
| 71      | I/O BUS1                  | I/O | CD IC control data bus input/output.                 |
| 72      | I/O BUS2                  | I/O | CD IC control data bus input/output.                 |
| 73      | I/O BUS3                  | I/O | CD IC control data bus input/output.                 |
| 74      | $\overline{\text{O-CCE}}$ | O   | CD IC control chip enable output.                    |
| 75      | O-BUCK                    | O   | CD IC control data bus clock output.                 |
| 76      | O-CDMUTE                  | O   | CD mute output.                                      |
| 77      | O-CLOSE                   | O   | CD tray close output (Close ON: H).                  |
| 78      | O-OPEN                    | O   | CD tray open output (Close ON: H).                   |
| 79      | O-CE                      | O   | PLL chip enable output.                              |
| 80      | O-MSTB                    | O   | Shift register (MAIN C.B.) data latch strobe output. |

# IC, TA2065F

| Pin No. | Pin Name | I/O | Description                                                                    |
|---------|----------|-----|--------------------------------------------------------------------------------|
| 1       | RFO      | O   | RF amp (RF AMP) output terminal.                                               |
| 2       | RFI      | I   | RF ripple signal generating circuit input terminal.                            |
| 3       | VRO      | O   | VR amp output terminal.                                                        |
| 4       | 2VRO     | O   | 2VR amp output terminal.                                                       |
| 5       | RFRP     | O   | RF ripple signal output terminal.                                              |
| 6       | SBAD     | O   | Defects detection signal output terminal.                                      |
| 7       | DFIN     | I   | Defect detecting comparator positive phase input terminal.                     |
| 8       | FEP      | I   | Focus error balance adjusting input terminal.                                  |
| 9       | FEN      | I   | Focus error amp (FE AMP) negative phase input terminal.                        |
| 10      | FEO      | O   | Focus error amp (FE AMP) output terminal.                                      |
| 11      | FEI      | I   | Focus output amp (FS AMP) positive phase input terminal.                       |
| 12      | FHLD     | I   | Hold switch terminal for defect.                                               |
| 13      | FEL1     | I   | Focus gain adjusting terminal.                                                 |
| 14      | FEL2     | I   | Focus gain adjusting terminal.                                                 |
| 15      | FSN      | I   | Focus output amp (FS AMP) negative phase input terminal.                       |
| 16      | FSO      | O   | Focus output amp (FS AMP) output terminal.                                     |
| 17      | COSC     | O   | Focus search signal generating capacitor connecting terminal.                  |
| 18      | OSCI     | I   | Focus search signal generating built-in current source control input terminal. |
| 19      | GND      | —   | Ground terminal.                                                               |
| 20      | VCC      | —   | Power source terminal.                                                         |
| 21      | SEL      | I   | Analog switch control signal input terminal.                                   |
| 22      | DMEP     | I   | Disc motor amp (DM AMP) positive phase input terminal.                         |
| 23      | DMEN     | I   | Disc motor amp (DM AMP) negative phase input terminal.                         |
| 24      | DMEO     | O   | Disc motor amp (DM AMP) output terminal.                                       |
| 25      | DFCT     | I   | Defect detecting comparator negative phase input terminal.                     |
| 26      | FMSO     | O   | Feed motor output amp (FMS AMP) output terminal.                               |
| 27      | FMSN     | I   | Feed motor output amp (FMS AMP) negative phase input terminal.                 |
| 28      | FMSP     | I   | Feed motor output amp (FMS AMP) positive phase input terminal.                 |
| 29      | THLD     | I   | Hold switch terminal for defect.                                               |
| 30      | TS2O     | O   | Tracking servo amp 2 (TS2 AMP) output terminal.                                |
| 31      | TS2N     | I   | Tracking servo amp 2 (TS2 AMP) negative phase input terminal.                  |
| 32      | TS2P     | I   | Tracking servo amp 2 (TS2 AMP) positive phase input terminal.                  |
| 33      | TS1N     | I   | Tracking servo amp 1 (TS1 AMP) negative phase input terminal.                  |
| 34      | TS1P     | I   | Tracking servo amp 1 (TS1 AMP) positive phase input terminal.                  |
| 35      | TSO      | O   | Tracking output amp (TS AMP) output terminal.                                  |
| 36      | TEL1     | I   | Tracking gain adjusting terminal.                                              |
| 37      | TEL2     | I   | Tracking gain adjusting terminal.                                              |
| 38      | TSN      | I   | Tracking output amp (TS AMP) negative phase input terminal.                    |
| 39      | TPO      | O   | Sub-beam I-V amp output terminal.                                              |
| 40      | TPI      | I   | Sub-beam I-V amp input terminal.                                               |
| 41      | TNI      | I   | Sub-beam I-V amp input terminal.                                               |

| Pin No. | Pin Name | I/O | Description                             |
|---------|----------|-----|-----------------------------------------|
| 42      | TNO      | O   | Sub-beam I-V amp output terminal.       |
| 43      | FNI      | I   | Main-beam I-V amp input terminal.       |
| 44      | FPI      | I   | Main-beam I-V amp input terminal.       |
| 45      | LDO      | O   | Laser diode amp output terminal.        |
| 46      | MDI      | I   | Monitor photo diode amp input terminal. |
| 47      | RFN      | I   | RF amp negative phase input terminal.   |
| 48      | RFT      | I   | RF amp peaking terminal.                |

# IC, TC9284AF


| Pin No. | Pin Name                 | I/O | Description                                                                                                                                                                             |
|---------|--------------------------|-----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | GNDA                     | —   | D/A converter R-channel analog GND.                                                                                                                                                     |
| 2       | RO                       | O   | R-channel data positive output.                                                                                                                                                         |
| 3       | $\overline{RO}$          | O   | R-channel data inverted output.                                                                                                                                                         |
| 4       | VDA                      | —   | D/A converter power supply.                                                                                                                                                             |
| 5       | $\overline{LO}$          | O   | L-channel data inverted output.                                                                                                                                                         |
| 6       | LO                       | O   | L-channel data positive output.                                                                                                                                                         |
| 7       | GNDA                     | —   | D/A converter L-channel analog GND.                                                                                                                                                     |
| 8-10    | $\overline{TEST3-TEST5}$ | I   | TEST pin. Normally “H” or open.                                                                                                                                                         |
| 11      | SBOK                     | O   | Sub code Q data CRCC judgment result output. Judgment result OK: H                                                                                                                      |
| 12      | VDDD                     | —   | Digital power supply. (+5 V)                                                                                                                                                            |
| 13      | GNDD                     | —   | Digital GND.                                                                                                                                                                            |
| 14-17   | BUS0-BUS3                | I/O | μprocessor interface, data input/output.                                                                                                                                                |
| 18      | CCE                      | I   | μprocessor interface, chip enable signal input. When “L” : BUS 3-0 are active                                                                                                           |
| 19      | BUCK                     | I   | μprocessor interface, clock input.                                                                                                                                                      |
| 20      | PFCK                     | O   | PB frame sync output.                                                                                                                                                                   |
| 21      | $\overline{RST}$         | I   | Reset signal input. “L” at reset.                                                                                                                                                       |
| 22      | SUBSYC                   | O   | Sub code block sync output. When sub code is detected, “H” at S1 position.                                                                                                              |
| 23      | SUBD                     | O   | Sub code P-W output.                                                                                                                                                                    |
| 24      | CLCK                     | I   | Sub code P-W data read clock input.                                                                                                                                                     |
| 25      | VDDD                     | —   | Digital power supply. (+5 V)                                                                                                                                                            |
| 26      | GNDD                     | —   | Digital GND.                                                                                                                                                                            |
| 27      | DFCT                     | O   | Defect detection signal output. When defect is detected: “VREF”, normally “HiZ”.                                                                                                        |
| 28      | TEL2                     | O   | Tracking gain adjustment analog switch output. “VREF” , or “HiZ”.                                                                                                                       |
| 29      | TEL1                     | O   | Tracking gain adjustment analog switch output. “VREF” , or “HiZ”.                                                                                                                       |
| 30      | TGUL                     | O   | Analog switch output for tracking servo gain up. Polarity in gain-up mode and normal mode can be selected by command.                                                                   |
| 31      | TGUH2                    | O   | Analog switch output for tracking servo gain up. “HiZ” for gain-up, normally “VREF”.                                                                                                    |
| 32      | TUGH1                    | O   | TGUH1 during normal playback. TGUH2: not used                                                                                                                                           |
| 33      | TKIC                     | O   | Tracking actuator kick signal output. NKICx and CKICx are used for kick during tracking gain adjustment. “VREF” for outermost track. “O” for moving toward inner track. Normally “HiZ”. |
| 34      | FMON                     | O   | Analog switch output to turn ON/OFF the feed servo. “HiZ” to turn ON servo. “VREF” to turn OFF servo.                                                                                   |
| 35      | $\overline{TEST1}$       | I   | TEST pin. Normally “H” or open.                                                                                                                                                         |
| 36      | FMFB                     | O   | Feed motor FWD/BWD direction control signal output. “2VREF” for outmost track. “O” for moving toward inner track. Normally “HiZ”.                                                       |
| 37      | $\overline{TEST}$        | I   | TEST pin. Normally “H” or open.                                                                                                                                                         |
| 38      | DMON                     | O   | Analog switch output to select gain of the disc motor drive circuit. “HiZ” for CLV servo OFF, “HiZ” or “VREF” can be selected by command.                                               |

| Pin No.                | Pin Name   | I/O    | Description                                                                                                                                                  |             |                  |                |
|------------------------|------------|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|------------------|----------------|
| 39                     | DMPC       | O      | Disc motor CLV servo AFC signal output.                                                                                                                      |             |                  |                |
|                        |            |        | Operation                                                                                                                                                    | Command     | DMFC output      |                |
|                        |            |        | Motor acceleration                                                                                                                                           | DMFK        | “2VREF”          |                |
|                        |            |        | CLV servo ON                                                                                                                                                 | DMSV        | AFC signal (PWM) |                |
|                        |            |        | Motor brake                                                                                                                                                  | DMBK        | “L”              |                |
| CLV servo OFF          | DMOFF      | “VREF” |                                                                                                                                                              |             |                  |                |
| 40                     | DMPC       | O      | Disc motor CLV servo APC signal output.                                                                                                                      |             |                  |                |
| 41                     | 2VREF      | —      | Analog power supply. (twice the “VREF” voltage)                                                                                                              |             |                  |                |
| 42                     | SEL        | O      | Servo mode select output. It turns ON/OFF the laser diode (LD) and focus servo.                                                                              |             |                  |                |
|                        |            |        | SEL output                                                                                                                                                   | LD          | Focus servo      | Operating mode |
|                        |            |        | “L”                                                                                                                                                          | OFF         | OFF              | LD OFF         |
|                        |            |        | “HiZ”                                                                                                                                                        | ON          | OFF              | Focus search   |
| “H”                    | ON         | ON     | Focus ON (normal play)                                                                                                                                       |             |                  |                |
| 43                     | FCSI       | O      | Focus actuator drive signal output during focus search mode. “VDDA” to move the lens far from disc. “L” to move the lens closer to disc. Normally “HiZ”.     |             |                  |                |
| 44                     | FKIC       | O      | Focus actuator drive signal output during focus adjustment mode. “VDDA” to move the lens far from disc. “L” to move the lens closer to disc. Normally “HiZ”. |             |                  |                |
| 45, 46                 | FEL1, FEL2 | O      | Focus gain adjustment analog switch output. “VREF” or “HiZ”.                                                                                                 |             |                  |                |
| 47                     | FEI        | I      | Focus error signal input.                                                                                                                                    |             |                  |                |
| 48                     | TESH       | I      | Analog switch input to track error signal sample-and-hold.                                                                                                   |             |                  |                |
| 49                     | TEOF       | O      | Focus gain adjustment analog switch output. “VREF” when tracking servo off.                                                                                  |             |                  |                |
| 50                     | SBAD       | I      | Sub beam added signal input.                                                                                                                                 |             |                  |                |
| 51                     | RFRP       | I      | RF ripple signal input.                                                                                                                                      |             |                  |                |
| 52                     | VREF       | —      | Analog power supply.                                                                                                                                         |             |                  |                |
| 53                     | RFI        | I      | RF signal input.                                                                                                                                             |             |                  |                |
| 54                     | GNDA       | —      | Analog GND.                                                                                                                                                  |             |                  |                |
| 55                     | DTSC2      | O      | Data slice control EFM signal inverted output.                                                                                                               |             |                  |                |
| 56                     | MONI T     | O      | Internal signal monitored output. EFMO, PLCK or LOCK signals can be selected by command. Can be muted. (Not used)                                            |             |                  |                |
| 57                     | DTSC 1     | O      | Data slice control EFM signal positive polarity output.                                                                                                      |             |                  |                |
| 58                     | VDDA       | —      | Analog power supply.                                                                                                                                         |             |                  |                |
| 59                     | PDCNT      | I      | PDO output control signal input. “L” to fix to “HiZ” forcibly. “H” : normal output.                                                                          |             |                  |                |
| 60                     | PDO        | O      | Phase error signal between EFM and PLCK signals is output.                                                                                                   |             |                  |                |
| 61                     | TMAX       | O      | TMAX detected result output.                                                                                                                                 |             |                  |                |
|                        |            |        | TMAX detected result                                                                                                                                         | TMAX output |                  |                |
|                        |            |        | Longer than specified cycle                                                                                                                                  | “L”         |                  |                |
|                        |            |        | Shorter than specified cycle                                                                                                                                 | “VREF”      |                  |                |
| Within specified cycle | “HiZ”      |        |                                                                                                                                                              |             |                  |                |
| 62                     | LPFN       | I      | Low-pass filter amplifier inverted input.                                                                                                                    |             |                  |                |




| Pin No. | Pin Name | I/O | Description                                                                                                 |
|---------|----------|-----|-------------------------------------------------------------------------------------------------------------|
| 63      | LPFO     | O   | Low-pass filter amplifier output.                                                                           |
| 64      | VCOF     | O   | VCO filter output.                                                                                          |
| 65      | TESTX    | I   | TEST pin. Normally “H” or “L” .(Connected to +5 V)                                                          |
| 66      | HS       | O   | Double speed mode output. “H” : normal speed. “L” : double speed                                            |
| 67      | GNDD     | —   | Digital GND.                                                                                                |
| 68      | SPDA     | O   | Processor status signal output.                                                                             |
| 69      | COFS     | O   | Correction circuit frame clock (7.35 kHz) output.                                                           |
| 70      | WDCK     | O   | Word clock (88.2 kHz) output. SUBQ, BUF0V or 1PF can be selected by the $\mu$ processor command. (Not used) |
| 71      | CHCK     | O   | Channel clock (44.1 kHz) output. “L” for L-channel. “H” for R-channel.                                      |
| 72      | BCK      | O   | Bit clock (1.4112 MHz) output.                                                                              |
| 73      | AOUT     | O   | Audio data output. (Not used)                                                                               |
| 74      | EMPH     | O   | Emphasis ON/OFF select signal. “H” : emphasis ON. “L” for emphasis OFF                                      |
| 75      | DOUT     | O   | DIGITAL SIGNAL output.                                                                                      |
| 76      | TEST2    | I   | TEST pin. Normally “H”.                                                                                     |
| 77      | VDDX     | —   | Crystal oscillator circuit power supply.                                                                    |
| 78      | XI       | I   | External crystal oscillator is connected. (Crystal oscillator frequency 16.9344 MHz)                        |
| 79      | XO       | O   | External crystal oscillator is connected. (Crystal oscillator frequency 16.9344 MHz)                        |
| 80      | GNDX     | —   | Crystal oscillator GND.                                                                                     |


IC BLOCK DIAGRAM  
IC, BA3416BL

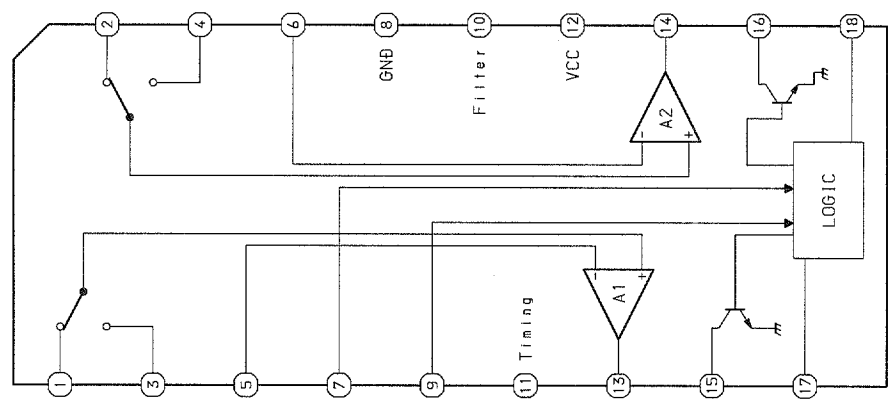

IC, BU2092F

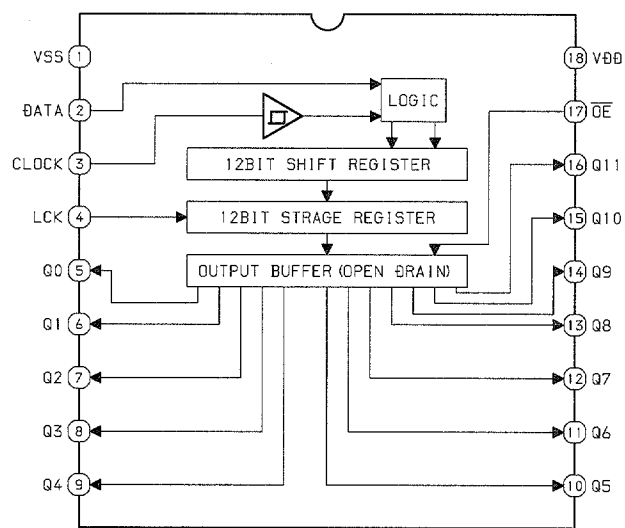


IC, BU4052BC

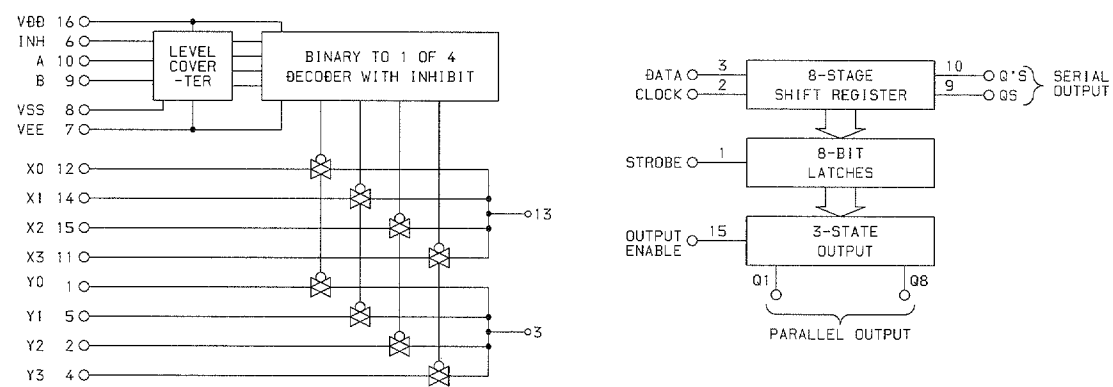

| TRUTH TABLE |   |   |           |
|-------------|---|---|-----------|
| INHIBIT     | A | B | ON SWITCH |
| L           | L | L | X0 Y0     |
| L           | H | L | X1 Y1     |
| L           | L | H | X2 Y2     |
| L           | H | H | X3 Y3     |
| H           | X | X | NONE      |

IC, BU4094B

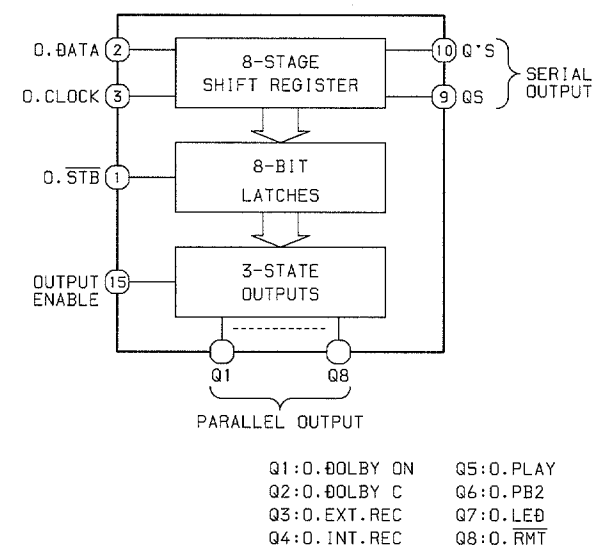


TRUTH TABLE


| CLOCK | OUTPUT ENABLE | STROBE | DATA | PARALLEL OUTPUTS |         | SERIAL OUTPUTS |         |
|-------|---------------|--------|------|------------------|---------|----------------|---------|
|       |               |        |      | Q1               | Qn      | Q5             | Q'S     |
|       | L             | x      | x    | Z                | Z       | Q7             | NO CHG. |
|       | L             | x      | x    | Z                | Z       | NO CHG.        | Q5      |
|       | H             | L      | x    | NO CHG.          | NO CHG. | Q7             | NO CHG. |
|       | H             | H      | L    | L                | Qn-1    | Q7             | NO CHG. |
|       | H             | H      | H    | H                | Qn-1    | Q7             | NO CHG. |
|       | H             | x      | x    | NO CHG.          | NO CHG. | NO CHG.        | Q5      |

Z = HIGH IMPEDANCE  
x = DON'T CARE


IC, LA1851N

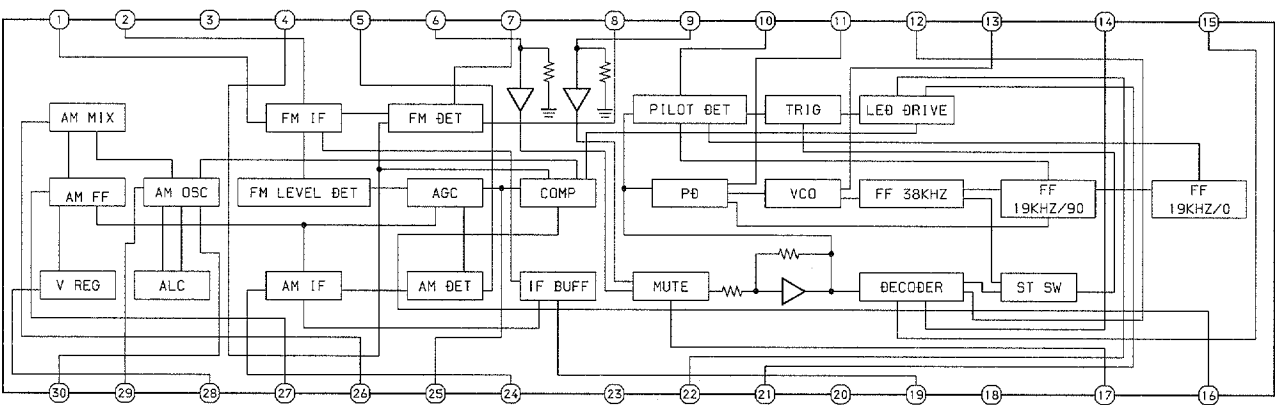


## IC, LC7218

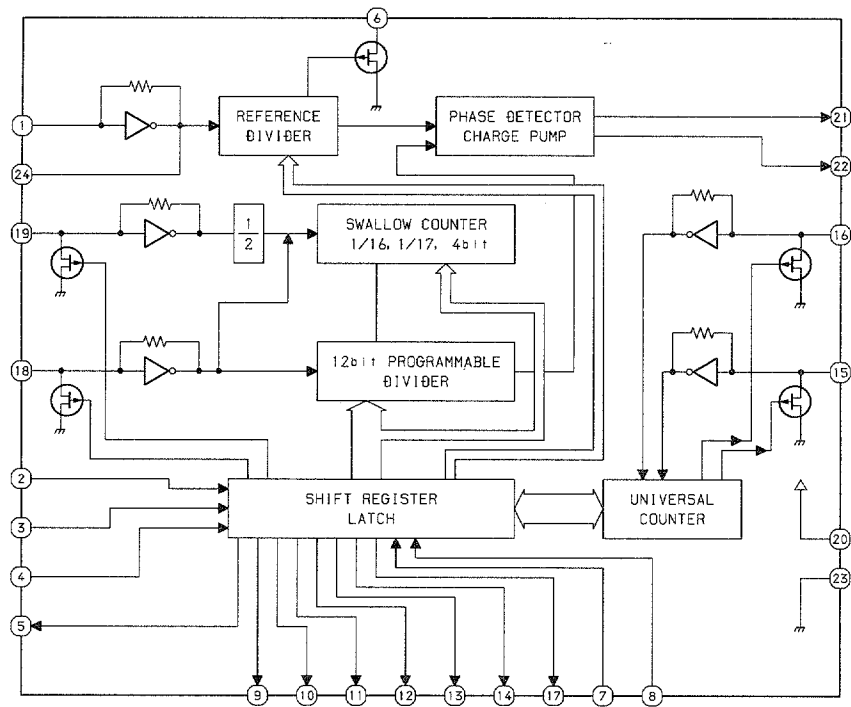


## IC, LC7533

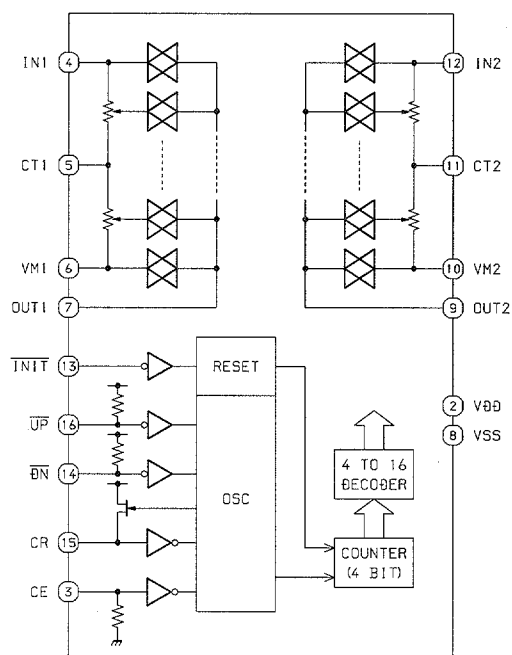


## IC, M62412P

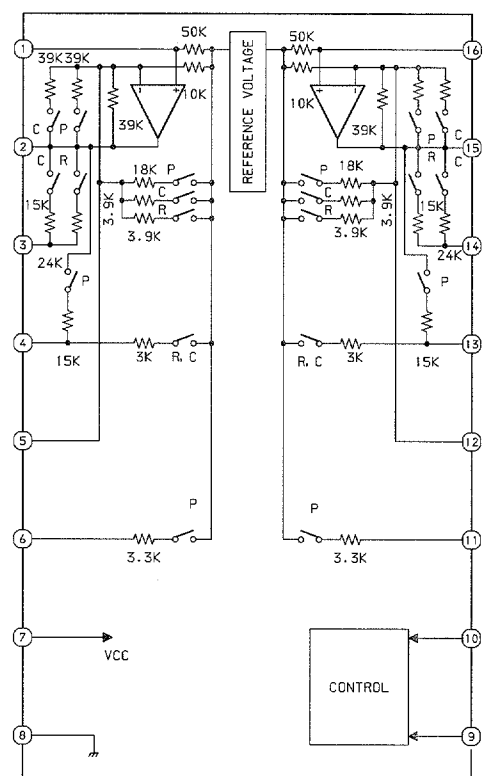

IC, TA2058F

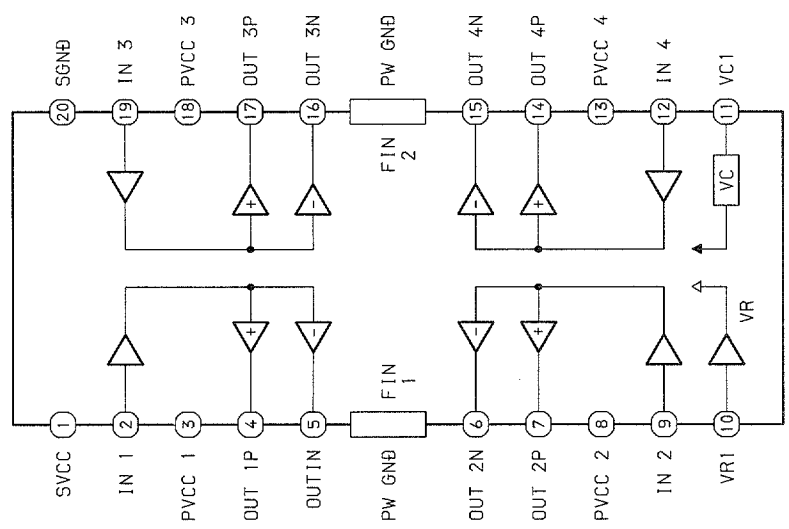


IC, TA7291S

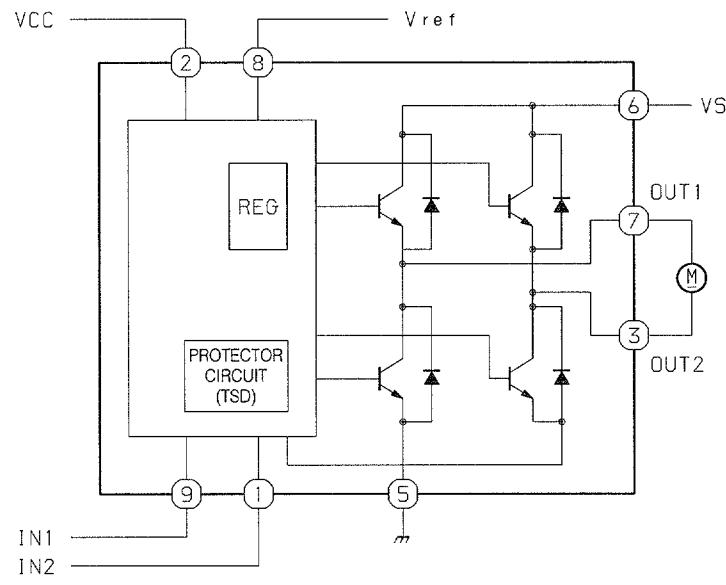


| INPUT |     | OUTPUT   |          | MODE   |
|-------|-----|----------|----------|--------|
| IN1   | IN2 | OUT1     | OUT2     |        |
| 0     | 0   | $\infty$ | $\infty$ | STOP   |
| 1     | 0   | H        | L        | CW/CCW |
| 0     | 1   | L        | H        | CCW/CW |
| 1     | 1   | L        | L        | BRAKE  |


$\infty$  : HI IMPEDANCE  
NOTE : INPUT "H" ACTIVE

# IC, TA8126SN

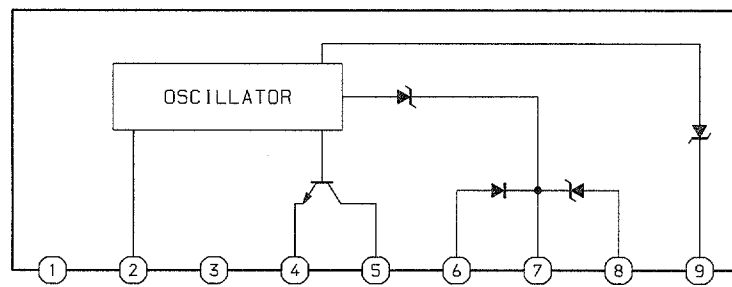


# IC, TA8176SN

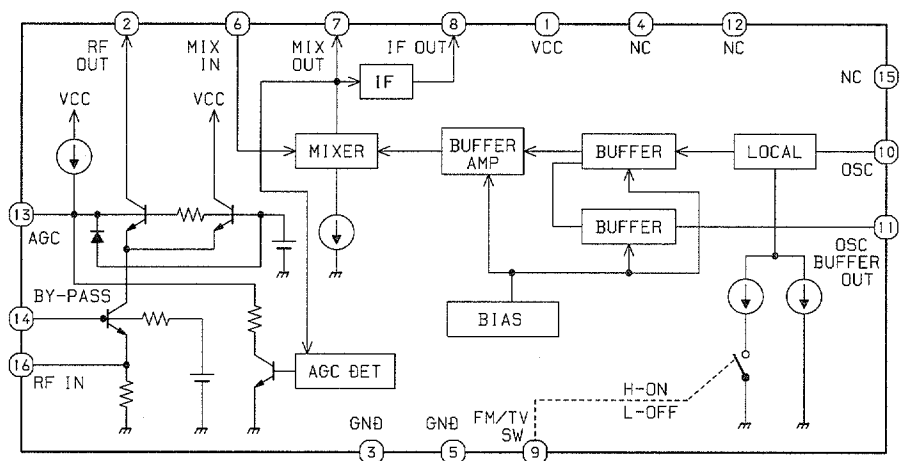

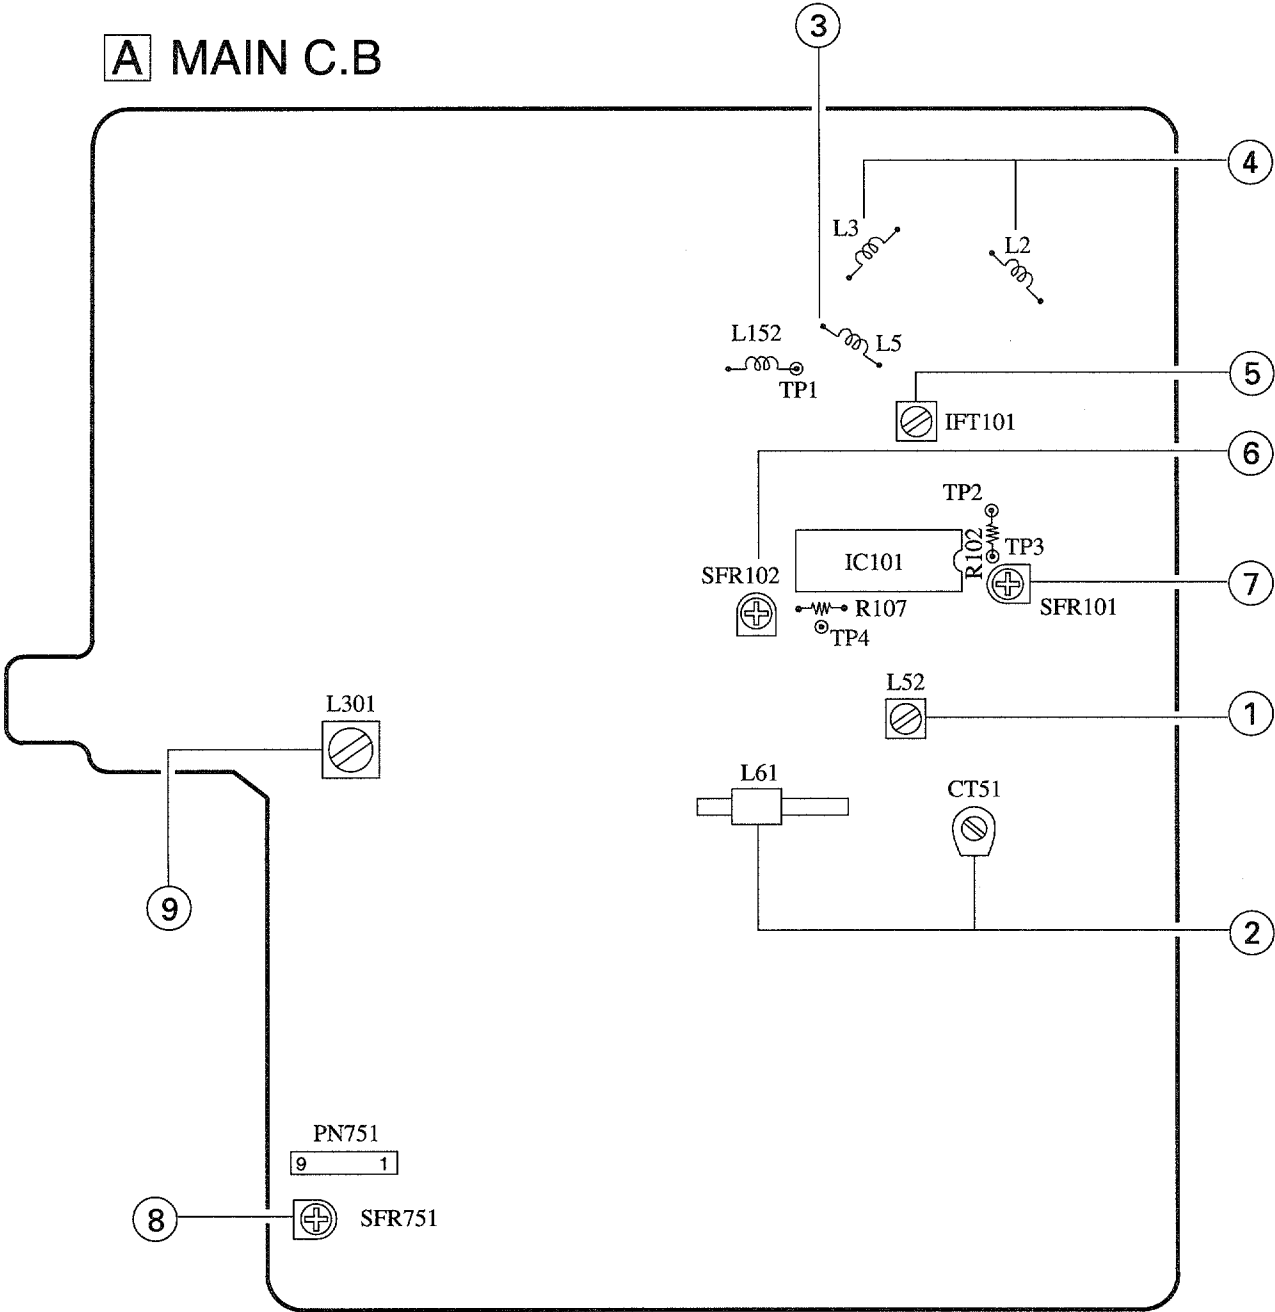

**RPH (DECK1) / PH (DECK2)**

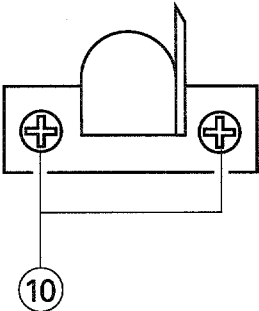




## < TUNER SECTION >

1. AM VT Adjustment  
 Settings:   • Test point: TP1  
              • Adjustment location: L52  
 Method:   Set to AM 530kHz adjust L52 so that the test point becomes 1.3V.
2. AM Tracking Adjustment  
 L61 ..... 612±10kHz  
 CT51 ..... 1404kHz±10kHz
3. FM VT Check  
 Settings:   • Test point: TP1  
              • Adjustment location: L5  
 Method:   Set to FM 87.5MHz adjust L5 so that the test point is 4.0V.
4. FM Tracking Adjustment  
 L2, 3 ..... 87.5±0.3MHz
5. DC Balance/MONO Distortion Adjustment  
 Settings:   • Test point: TP2, TP3  
              • Adjustment location: MFT101  
              • Input level: 54dB  
 Method:   Set to FM 98.0MHz and adjust MFT101 so that the voltage between TP2 and TP3 becomes 0V±10mV.
6. AM Auto Stop Level Adjustment  
 Settings:   • Test point: TP4  
 SFR102 ..... 0V
7. FM Auto Stop Level Adjustment  
 Settings:   • Test point: TP4  
 SFR101 ..... 0V

## < TAPE SECTION >

8. Tape speed Adjustment (DECK2)  
 Settings:   • Test tape: TTA-100  
              • Adjustment location: SFR751  
 Method:   Play back the test tape with DECK1 and adjust SFR751 so that the output frequency is 3000Hz. After the adjustment, check that the frequency of DECK2 is 3000±55Hz.
9. BIAS Frequency Adjustment  
 L301 ..... 60kHz
10. Azimuth Adjustment (DECK1, DECK2)  
 Settings:   • Test tape: TTA-320  
              • Adjustment location: Head azimuth adjustment screw  
 Method:   Play back the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on each FWD PLAY and REV PLAY mode.


**C** CD C.B

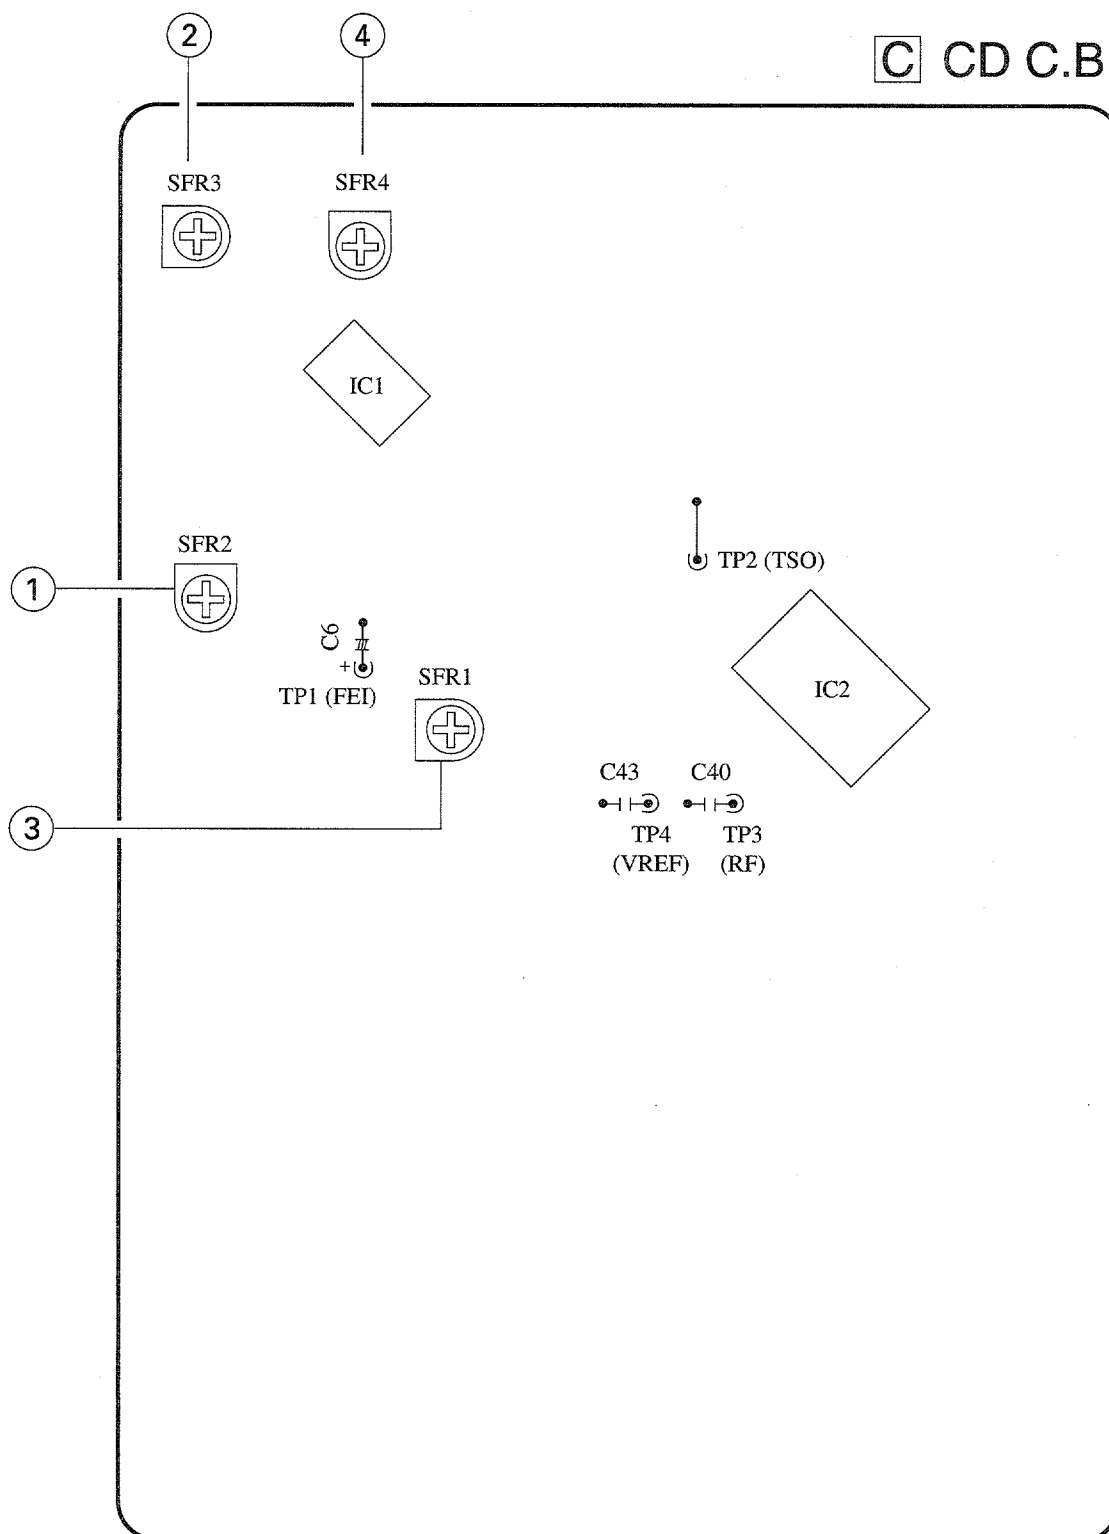

## < CD SECTION >


**Note:** · Connect a probe (10: 1) of the oscilloscope to a test point.

### 1. Focus offset Adjustment

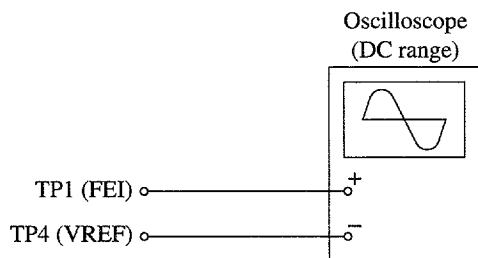

- 1) Make short-circuit between TP3 (RF) and TP4 (VREF) by wire.
- 2) Connect an oscilloscope between test points TP1 (FEI) and TP4 (VREF).
- 3) Turn on the main power to the CD player.
- 4) Insert the test disc TCD-782 and reads the TOC data.
- 5) Adjust SFR2 so that the offset level is  $0 \pm 10\text{mV}$ .
- 6) Remove short-circuit after completing adjustment.


### 2. Tracking offset Adjustment

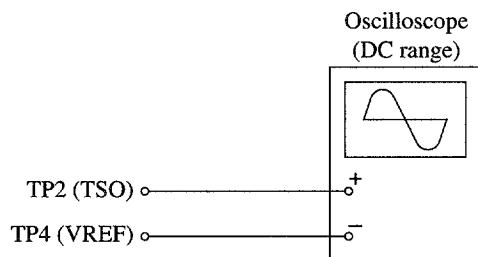


- 1) Make short-circuit between TP3 (RF) and TP4 (VREF) by wire.
- 2) Connect an oscilloscope between test points TP2 (TSO) and TP4 (VREF).
- 3) Turn on the main power to the CD player.
- 4) Insert the test disc TCD-782 and reads the TOC data.
- 5) Adjust SFR3 so that the offset level is  $10 \pm 10\text{mV}$ .
- 6) Remove short-circuit after completing adjustment.

### 3. Focus Balance Adjustment

Make the focus bias adjustment when replacing and repairing the optical block.

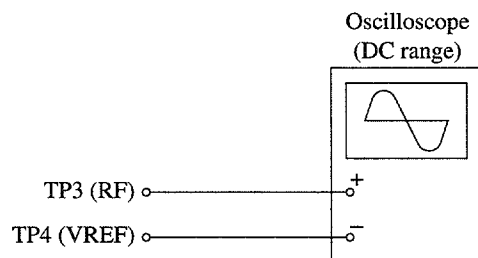


- 1) Connect an oscilloscope to test points TP3 (RF) and TP4 (VREF).
- 2) Turn on the power switch.
- 3) Insert test disc TCD-782 and play back the second composition.
- 4) Adjust SFR1 so that the level of RF wave to be maximum and clear.

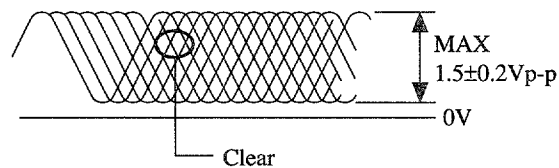


VOLT/DIV: 0.5V  
TIME/DIV: 1mS

### 4. Tracking Balance Adjustment

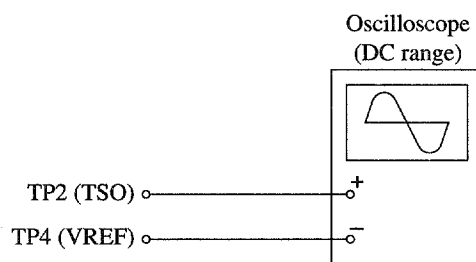

- 1) Connect an oscilloscope to test points TP2 (TSO) and TP4 (VREF).
- 2) Turn on the power switch.
- 3) Insert test disc TCD-782 and press the PLAY (▶) button.
- 4) Push and hold the [ ] button. (MS mode)
- 5) Adjust SFR4 so that the waveform on the oscilloscope is vertically symmetrical as shown in the figure below.

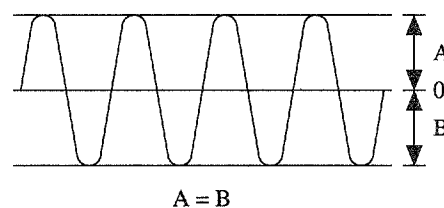

VOLT/DIV: 20mV  
TIME/DIV: 1mS

## PRACTICAL SERVICE FIGURE

### < TUNER SECTION >

#### < FM SECTION >


|                         |                      |
|-------------------------|----------------------|
| Sensitivity:            | 15±5dB (87.5MHz)     |
| (THD 3%)                | 16±5dB (98.0MHz)     |
|                         | 17±5dB (108.0MHz)    |
| Signal to Noise Ratio:  | 60±5dB (98MHz)       |
| (Input 54dB)            |                      |
| Distortion:             | Less than 2% (98MHz) |
| (Input 54dB)            |                      |
| Intermediate frequency: | 10.7MHz              |
| Stereo separation:      | More than 25dB       |

#### < AM SECTION >

|                         |                             |
|-------------------------|-----------------------------|
| Sensitivity:            | Less than 50dB±5dB (600kHz) |
| (S/N 10dB)              | Less than 45dB±5dB          |
|                         | (1000kHz)                   |
|                         | Less than 43dB±5dB          |
|                         | (1400kHz)                   |
| Distortion:             | Less than 5% (1000kHz)      |
| (Input 74dB)            |                             |
| Intermediate frequency: | 450kHz±1.2kHz               |

### < CASSETTE SECTION >

|                           |                            |
|---------------------------|----------------------------|
| Tape speed:               | 3000Hz±90Hz                |
| Wow & flutter:            | Less than 0.4% (JIS RMS)   |
| Take-up torque:           | 30-60g-cm (DECK 1/2)       |
| F.F torque:               | 55-120g-cm (DECK 1/2)      |
| Rew torque:               | 55-120g-cm (DECK 1/2)      |
| S/N ratio:                | More than 40dB (AC/DC, PB) |
|                           | More than 37dB             |
|                           | (AC/DC, REC/PB)            |
| Distortion:               | Less than 3.0% (PB)        |
| Noise (PB):               | Less than 1mV (AC/DC, MIN) |
| Erasing Ratio (W/FILTER): | More than 60dB             |

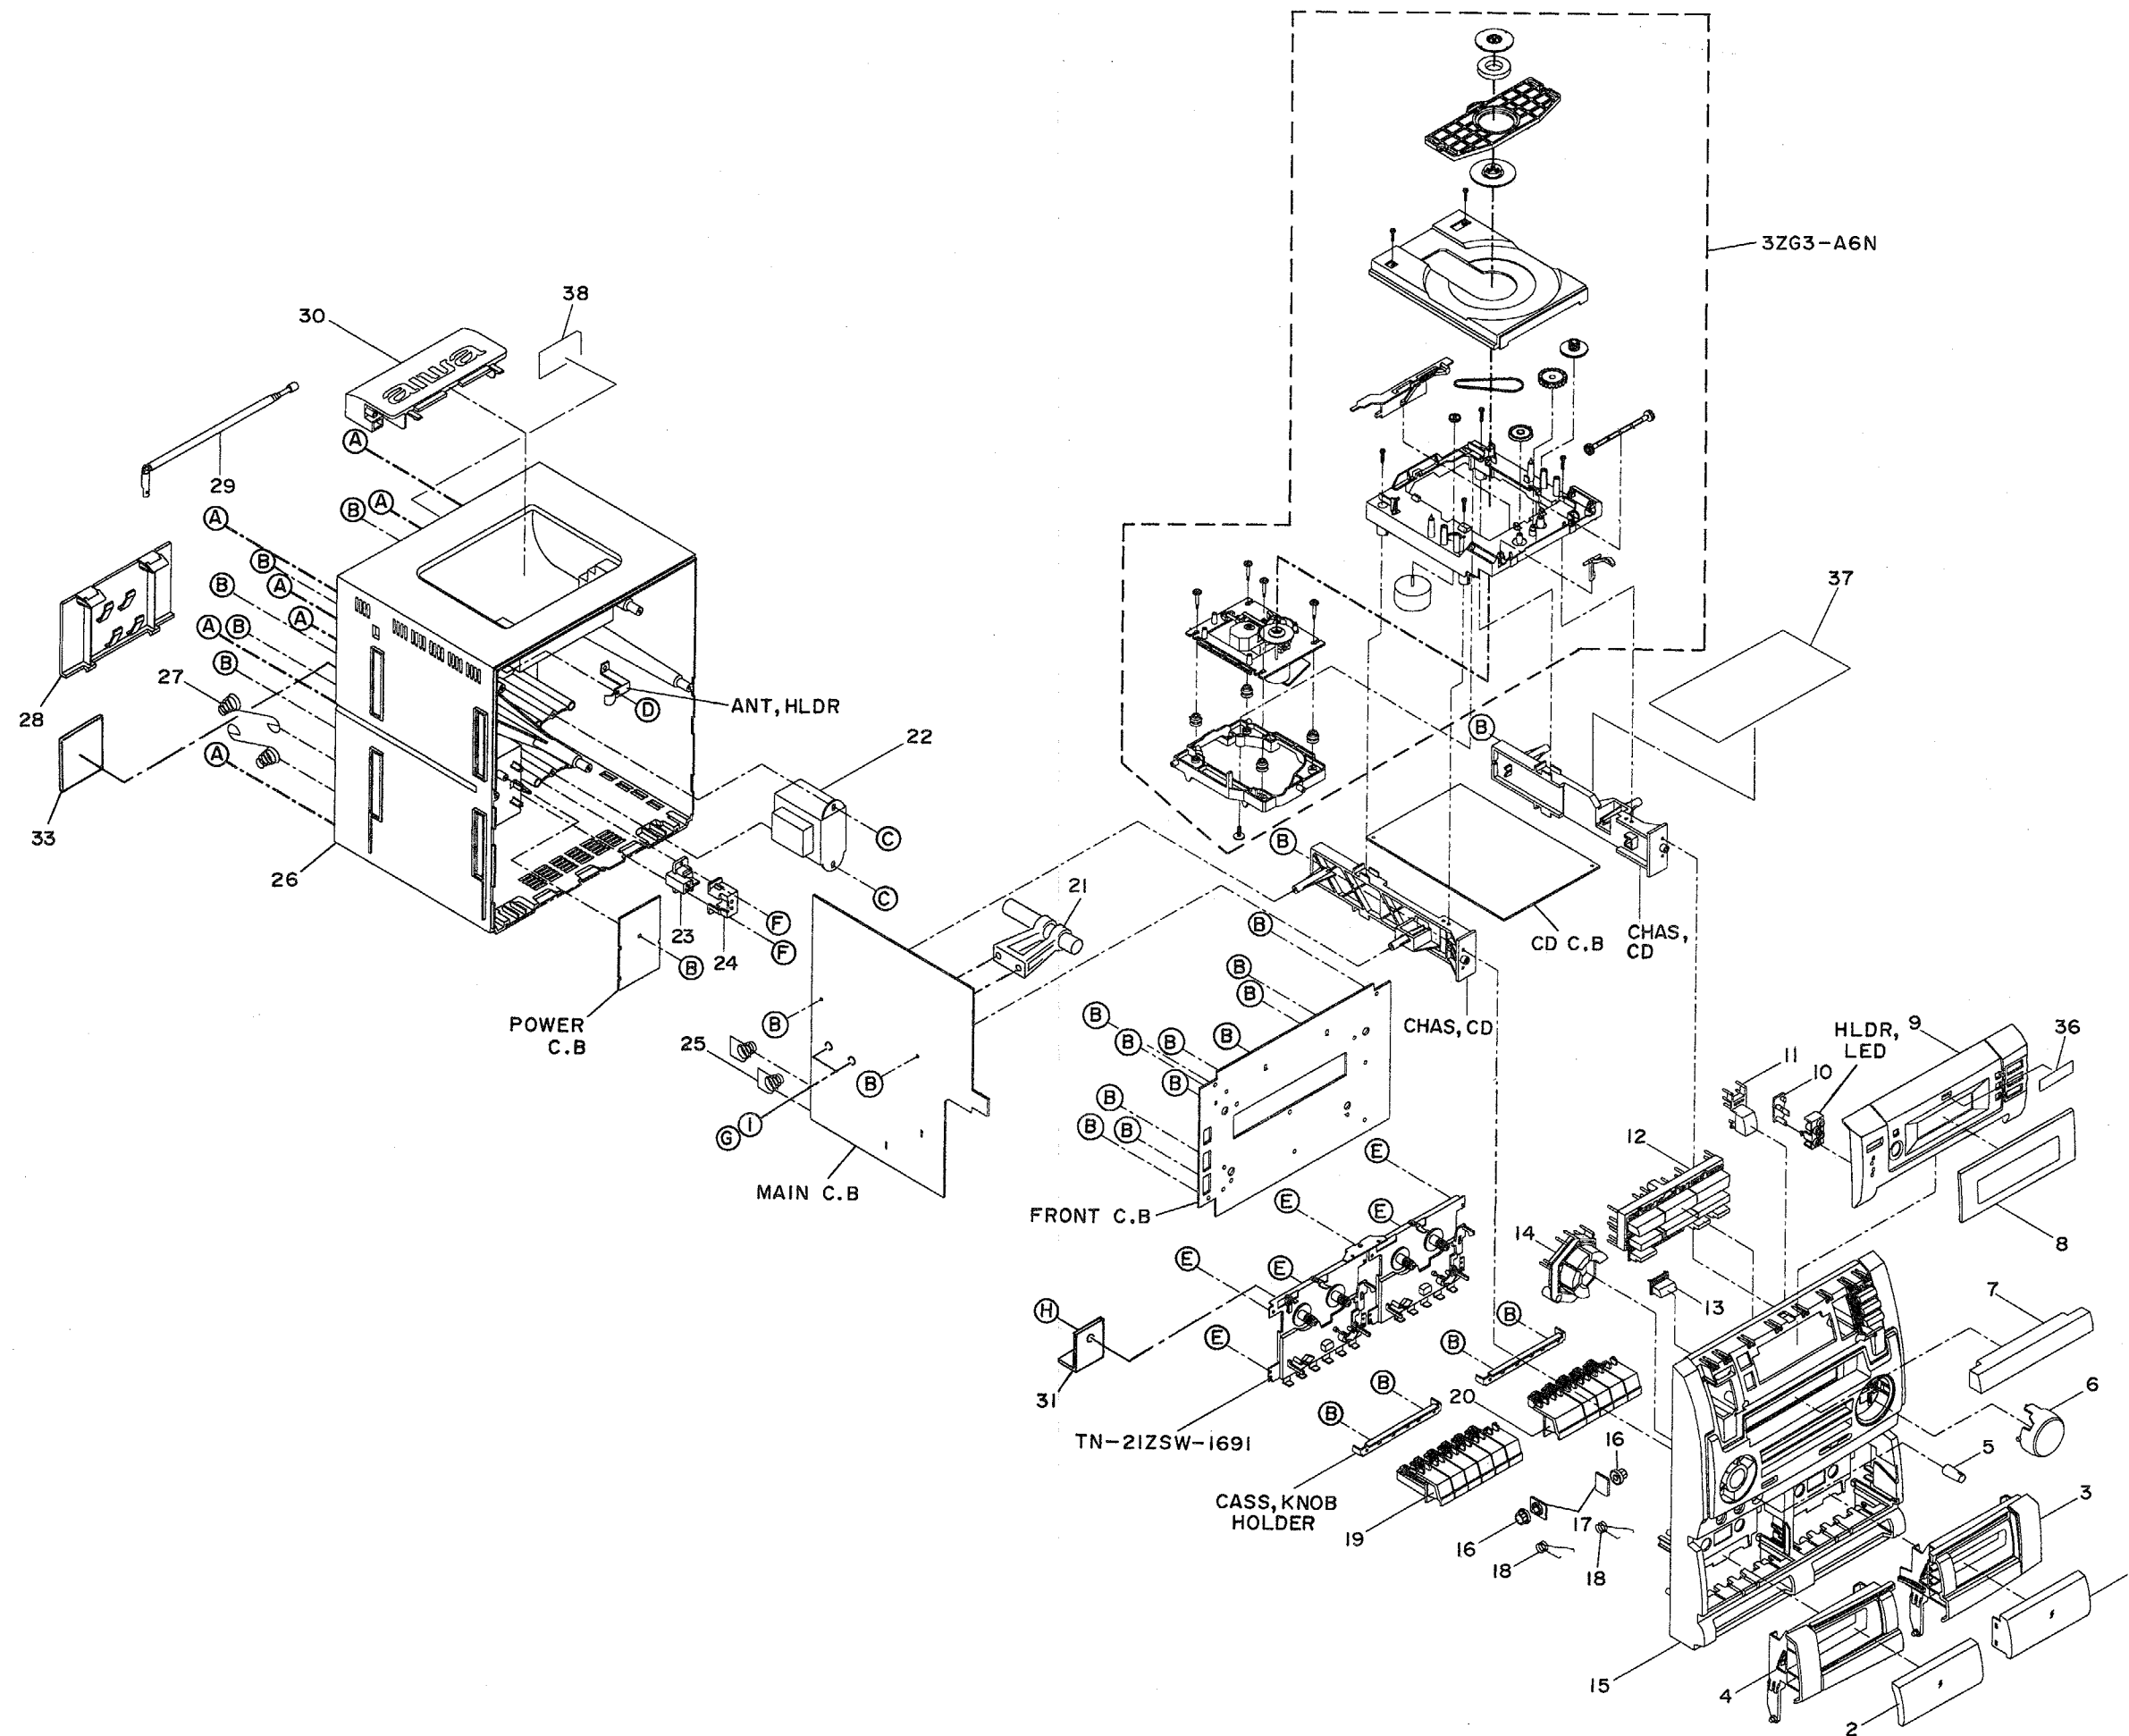


# MECHANICAL PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO.       | KANRI NO. | DESCRIPTION              | REF. NO | PART NO.       | KANRI NO. | DESCRIPTION                 |
|---------|----------------|-----------|--------------------------|---------|----------------|-----------|-----------------------------|
| 1       | S7-CT4-070-000 |           | LENS, DOOR CASS (R)      | 26      | S7-738-020-010 |           | CAB, BACK                   |
| 2       | S7-CT4-060-000 |           | LENS, DOOR CASS (L)      | 28      | S7-738-070-000 |           | DOOR BATTERY                |
| 3       | S7-CT4-040-100 |           | DOOR, CASS (R)           | 28      | S7-738-400-000 |           | SPR, BAT (-)                |
| 4       | S7-CT4-030-100 |           | DOOR, CASS (L)           | 29      | 87-043-116-010 |           | ROD ANTENNA                 |
| 5       | S7-738-130-010 |           | KNOB, MIC                | 30      | S7-738-050-010 |           | PANEL, TOP                  |
| 6       | S7-CT4-130-010 |           | KEY, VOLUME              | 31      | S7-CT4-220-000 |           | PLATE, SPR REC<LH>          |
| 7       | S7-CT4-080-100 |           | PANEL, CD                | 31      | S5-617-CT4-220 |           | PLATE, SPR REC<U>           |
| 8       | S7-CT4-050-200 |           | WINDOW, DISPLAY<LH>      | 33      | S7-538-700-000 |           | PLATE, COVER SW VOLTAGE<LH> |
| 8       | S7-CT4-050-100 |           | WINDOW, DISPLAY<U>       | 33      | S7-738-240-000 |           | VOLTAGE PLATE<U>            |
| 9       | S7-CT4-020-100 |           | PANEL, FRONT             | 34      | S1-200-000-030 |           | SW, SLIDE SS12J01M-A-65<LH> |
| 10      | S7-CT4-090-000 |           | LENS, FUNCTION           | 35      | S2-838-080-000 |           | VOLT, SW COVER<LH>          |
| 11      | S7-CT4-150-010 |           | KEY, OPEN CD             | 36      | S7-538-120-000 |           | BADGE AIWA                  |
| 12      | S7-CT4-140-100 |           | KEY, CONTROL CD          | 37      | S7-738-500-000 |           | CD PLATE                    |
| 13      | S7-CT4-120-000 |           | KNOB, POWER              | 38      | S7-738-250-000 |           | CD-G PLATE                  |
| 14      | S7-CT4-160-000 |           | KEY, FUNCTION            | A       | 87-741-104-010 |           | SCREW, ST3-30MM PAB         |
| 15      | S7-CT4-010-100 |           | CAB, FRONT               | B       | 87-352-097-210 |           | SCREW, ST3-12               |
| 16      | S7-538-280-000 |           | GEAR,                    | C       | 87-743-103-410 |           | SCREW ST3-25MM HEAD         |
| 17      | S7-538-270-000 |           | BRACKET GEAR             | D       | 87-078-157-010 |           | SCREW 3-16                  |
| 18      | S7-738-390-000 |           | SPR, CASS<U>             | E       | 87-741-096-410 |           | SCREW, ST3-10MM             |
| 18      | S7-CT4-240-000 |           | SPR, CASS<LH>            | F       | 87-343-075-210 |           | SCREW, ST 2.6-10            |
| 19      | S7-CT4-170-100 |           | KEY, CASS (L)            | G       | 87-343-075-210 |           | SCREW, 2.6-10               |
| 20      | S7-CT4-180-100 |           | KEY, CASS (R)            | H       | 87-262-547-310 |           | SCREW, 2-3 PM               |
| 21      | S0-101-000-000 |           | FERRI, BAR 10-100MM (LW) | I       | S0-000-264-500 |           | NUT, M2.6-0.45              |
| 22      | S4-130-150-200 |           | PT, TF EI-57/30<U>       |         |                |           |                             |
| 22      | S4-540-041-300 |           | PT, TF EI-57/30<LH>      |         |                |           |                             |
| 22      | S7-738-470-000 |           | RUBBER FOOT              |         |                |           |                             |
| 23      | S2-201-000-050 |           | AC SOCKET 220V<LH>       |         |                |           |                             |
| 23      | 87-099-712-010 |           | SOCKET, AC<U>            |         |                |           |                             |
| 24      | S2-838-070-000 |           | AC SOCKET COVER BLK      |         |                |           |                             |
| 25      | S7-738-420-000 |           | SPR, BAT(+)              |         |                |           |                             |

TAPE MECHANISM EXPLODED VIEW 1/2

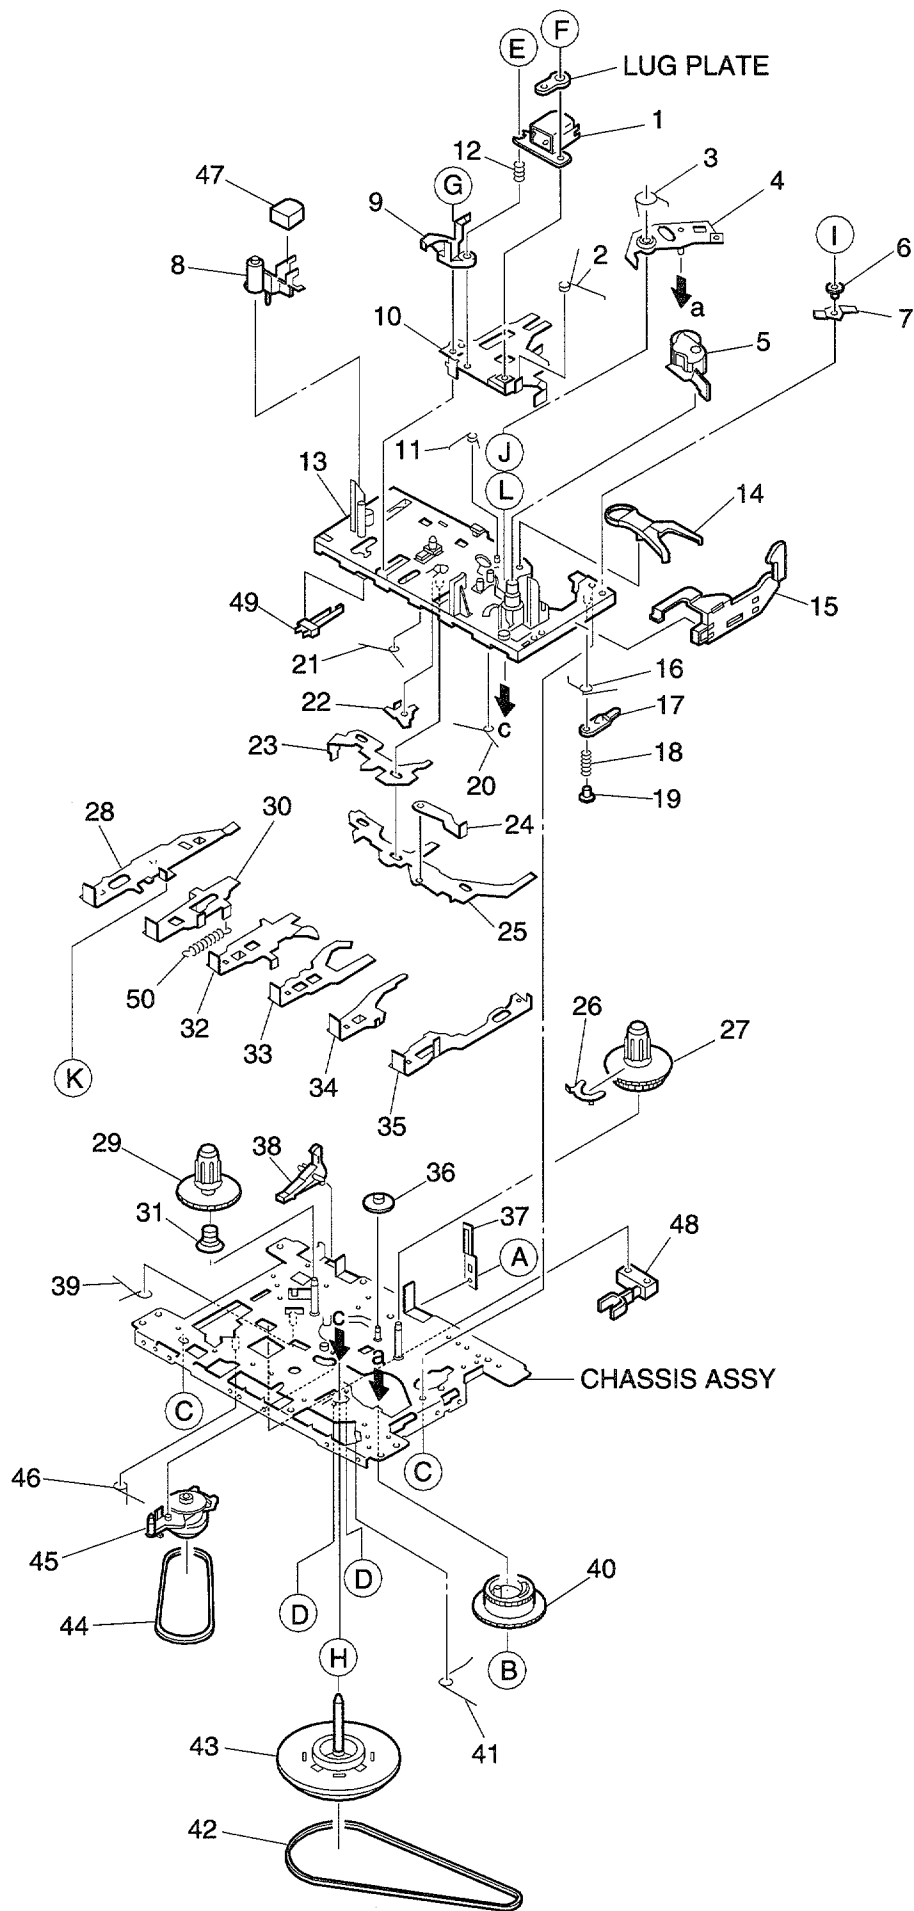


## TAPE MECHANISM PARTS LIST 1/2

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO.       | KANRI NO. | DESCRIPTION            | REF. NO | PART NO.       | KANRI NO. | DESCRIPTION               |
|---------|----------------|-----------|------------------------|---------|----------------|-----------|---------------------------|
| 1       | S6-201-011-110 |           | HEAD,RF7442ES-0951     | 31      | S1-829-100-100 |           | BACK TENSION SPRING       |
| 2       | S1-921-030-030 |           | PANEL P SPRING         | 32      | S1-921-140-240 |           | REW BUTTON LEVER          |
| 3       | S1-921-260-050 |           | GEAR PLATE SPRING      | 33      | S1-921-140-250 |           | FF BUTTON LEVER           |
| 4       | S1-921-265-020 |           | GEAR PLATE ASSY        | 34      | S1-921-140-260 |           | STOP BUTTON LEVER         |
| 5       | S1-921-043-090 |           | PINCH ROLLER ARM ASY   | 35      | S1-921-140-610 |           | PAUSE BUTTON LEVER        |
| 6       | S1-921-140-370 |           | P ARM COLLER           | 36      | S1-821-100-700 |           | FF GEAR                   |
| 7       | S1-921-140-340 |           | P ARM                  | 37      | S1-829-100-010 |           | PACK SPRING               |
| 8       | S1-921-030-050 |           | MG ARM                 | 38      | S1-821-100-690 |           | RECORD SAFETY LEVER       |
| 9       | S1-921-030-4A0 |           | HEAD BASE              | 39      | S1-921-140-210 |           | REC BUTTON LEVER SPRING   |
| 10      | S1-921-030-110 |           | HEAD PANEL             | 40      | S1-921-260-020 |           | CAM GEAR                  |
| 11      | S1-921-141-8A0 |           | M CONTROL SPRING       | 41      | S1-921-140-160 |           | E ACTUATOR SPRING         |
| 12      | S1-821-030-070 |           | AZIMUTH SPRING         | 42      | S1-921-090-240 |           | MAIN BELT                 |
| 13      | S1-921-143-010 |           | BASE ASSY              | 43      | S1-921-093-030 |           | FLYWHEEL ASSY             |
| 14      | S1-921-260-4A0 |           | SENSING LEVER          | 44      | S1-921-070-030 |           | RF BELT                   |
| 15      | S1-921-130-020 |           | EJECT SLIDE LEVER      | 45      | S1-921-073-080 |           | RF CLUTCH ASSY            |
| 16      | S1-921-141-3A0 |           | P CONTROL SPRING       | 46      | S1-921-140-170 |           | P.S.LEVER SPRING          |
| 17      | S1-921-140-820 |           | PAUSE LEVER(F)         | 47      | S6-209-100-100 |           | E HEAD PH-K380-MS1        |
| 18      | S1-921-140-120 |           | PAUSE LEVER SPRING     | 48      | S6-401-011-610 |           | LEAF SW MSW-17820MVEI     |
| 19      | S1-921-140-110 |           | PAUSE STOPPER          | 49      | S6-401-011-520 |           | LEAF SW MSW-1541F         |
| 20      | S1-921-140-150 |           | BUTTON LEVER SPRING(B) | 50      | S1-821-010-500 |           | PLAY BUTTON LEVER SPRING  |
| 21      | S1-921-140-140 |           | BUTTON LEVER SPRING(A) | A       | S9-P33-200-320 |           | DEL TITE SCREWM2-3        |
| 22      | S1-921-140-200 |           | PR STOPPER             | B       | S9-422-000-000 |           | P WASHER CUT 12-3.8-0.3   |
| 23      | S1-921-140-090 |           | SWITCH ACTUATOR        | C       | S9-679-000-000 |           | P TAP SCREW M2-5          |
| 24      | S1-821-011-590 |           | E KICK LEVER           | D       | S9-999-180-090 |           | TAP SCREW M2-4.5          |
| 25      | S1-921-140-080 |           | PUSH BUTTON ACTUATOR   | E       | S9-922-000-000 |           | AZIMUTH SCREW M2-8        |
| 26      | S1-921-050-060 |           | SENSER                 | F       | S9-P01-200-310 |           | SCREW,M2-3                |
| 27      | S1-921-053-030 |           | TAKE UP REEL ASSY      | G       | S9-004-000-000 |           | SCREW M2-6                |
| 28      | S1-921-140-220 |           | REC BUTTON LEVER       | H       | S9-882-000-000 |           | P WASHER 2-3.5-0.4        |
| 29      | S1-921-053-040 |           | SUPPLY REEL ASSY       | I       | S9-999-200-410 |           | P TAP SCREW M2-3          |
| 30      | S1-921-140-230 |           | PLAY BUTTON LEVER      | J       | S9-999-030-130 |           | P WASHER CUT 1.45-3.8-0.5 |
|         |                |           |                        | K       | S9-179-000-000 |           | C TAP SCREW M2-3          |
|         |                |           |                        | L       | S9-999-000-030 |           | P WASHER2.1-4-0.13        |



# TAPE MECHANISM EXPLODED VIEW 2/2

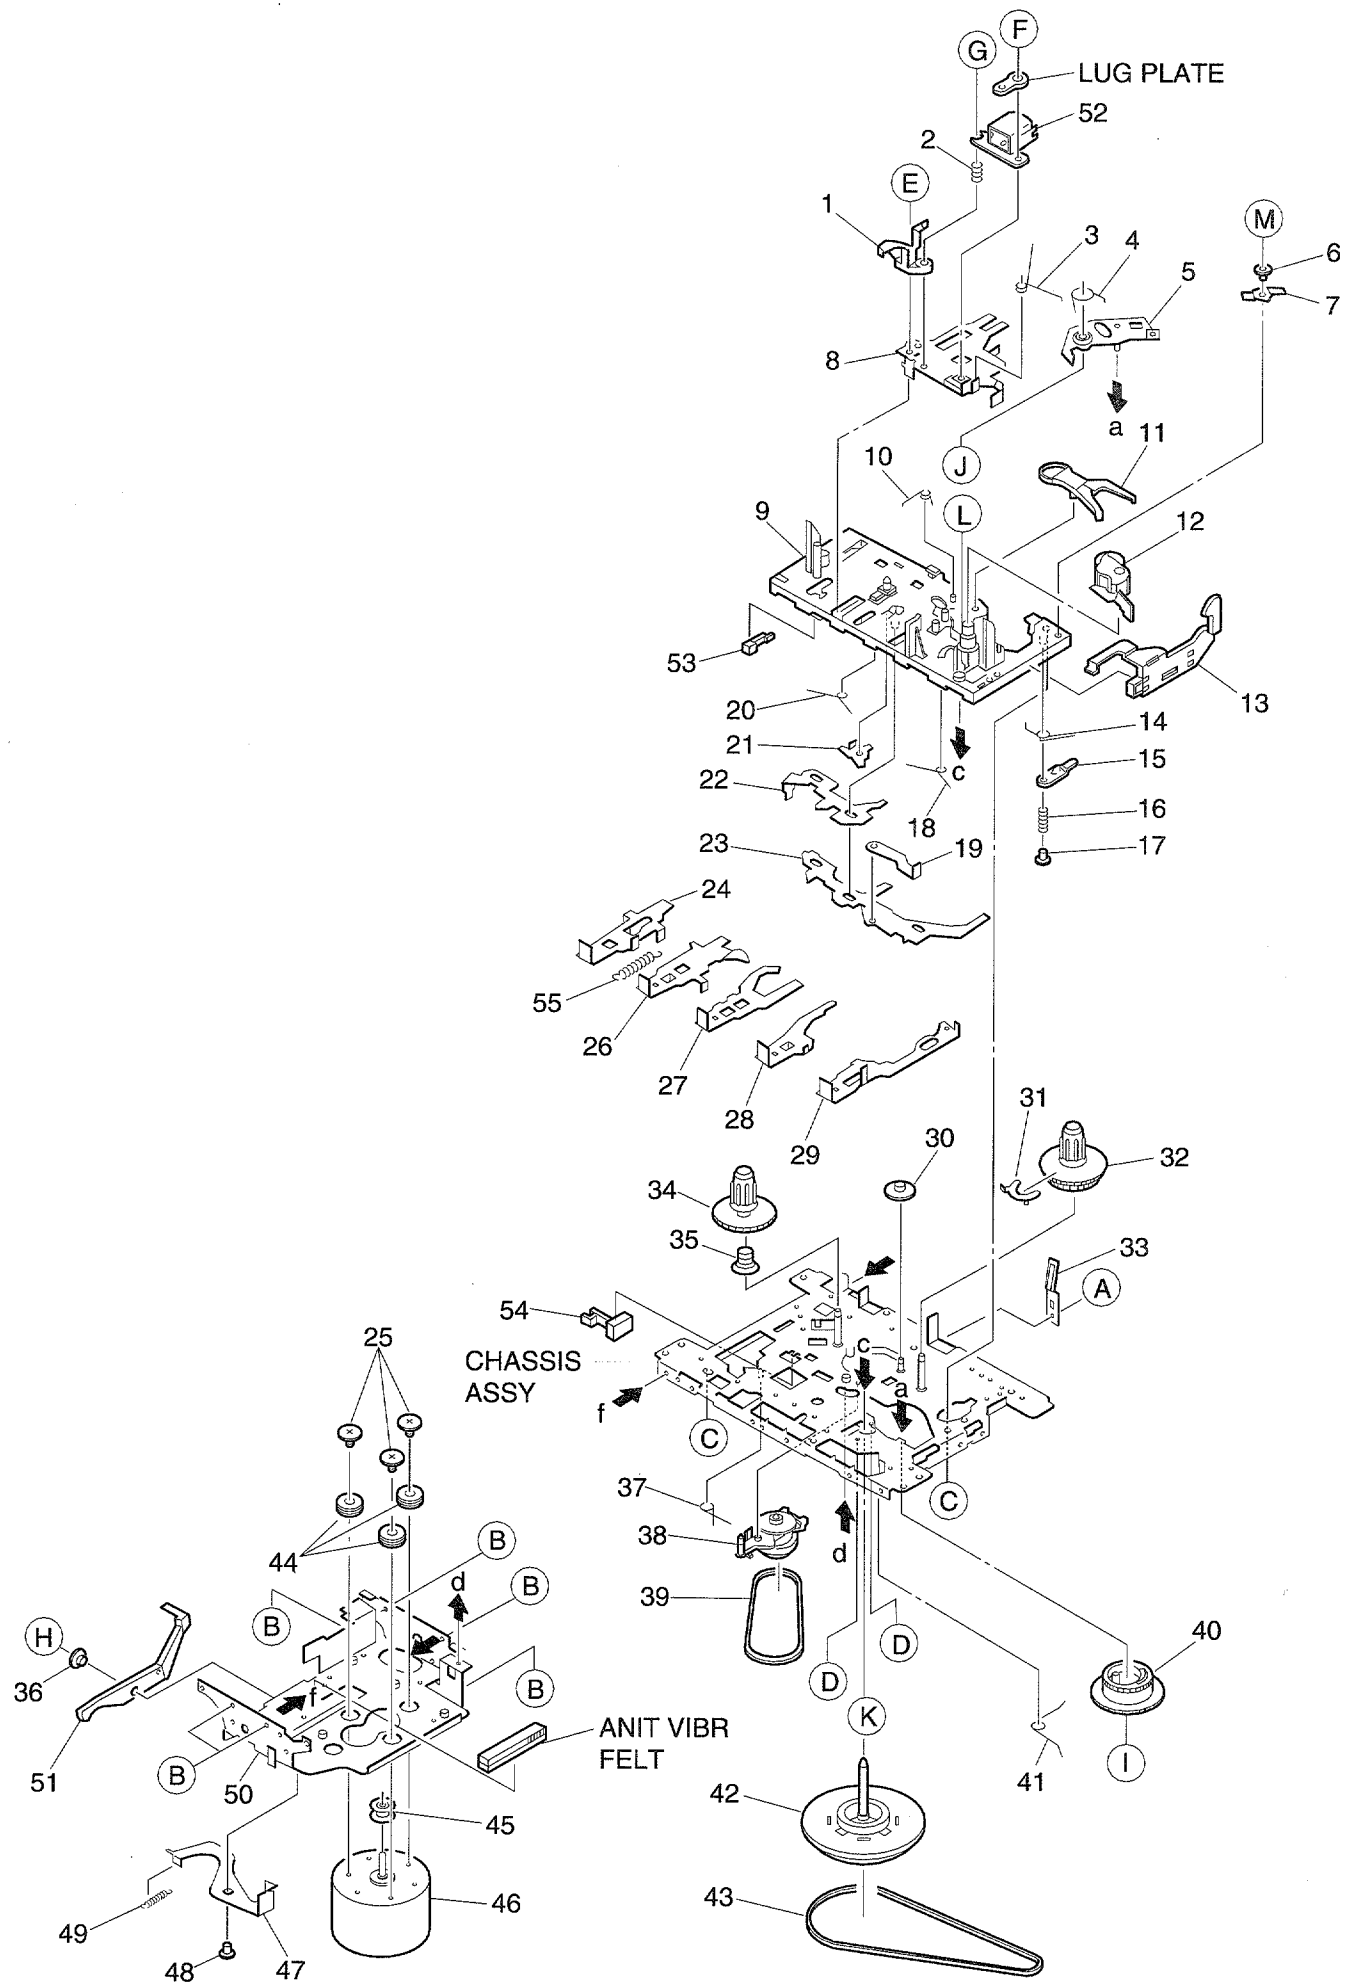


## TAPE MECHANISM PARTS LIST 2/2

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO.       | KANRI NO. | DESCRIPTION            | REF. NO | PART NO.       | KANRI NO. | DESCRIPTION               |
|---------|----------------|-----------|------------------------|---------|----------------|-----------|---------------------------|
| 1       | S1-921-030-4A0 |           | HEAD BASE              | 36      | S1-821-120-650 |           | COLLER B                  |
| 2       | S1-821-030-070 |           | AZIMUTH SPRING         | 37      | S1-921-140-170 |           | P.S.LEVER SPRING          |
| 3       | S1-921-030-030 |           | PANEL P SPRING         | 38      | S1-921-073-080 |           | RF CLUTCH ASSY            |
| 4       | S1-921-260-050 |           | GEAR PLATE SPRING      | 39      | S1-921-070-030 |           | RF BELT                   |
| 5       | S1-921-265-020 |           | GEAR PLATE ASSY        | 40      | S1-921-260-020 |           | CAM GEAR                  |
| 6       | S1-921-140-370 |           | P ARM COLLER           | 41      | S1-921-140-160 |           | E ACTUATOR SPRING         |
| 7       | S1-921-140-340 |           | P ARM                  | 42      | S1-921-093-040 |           | FLYWHEEL ASSY             |
| 8       | S1-921-030-110 |           | HEAD PANEL             | 43      | S1-921-090-240 |           | MAIN BELT                 |
| 9       | S1-921-143-010 |           | BASE ASSY              | 44      | S1-820-130-060 |           | MOTOR RUBBER              |
| 10      | S1-921-141-8A0 |           | M CONTROL SPRING       | 45      | S1-921-120-130 |           | MOTOR PULLEY              |
| 11      | S1-921-260-4A0 |           | SENSING LEVER          | 46      | S6-002-030-290 |           | MOTOR EG530YD-2BH         |
| 12      | S1-921-043-090 |           | PINCH ROLLER ARM ASY   | 47      | S1-821-120-680 |           | P KICK LEVER (A)          |
| 13      | S1-921-130-020 |           | EJECT SLIDE LEVER      | 48      | S1-821-120-230 |           | PK COLLER SCREW A         |
| 14      | S1-921-141-3A0 |           | P CONTROL SPRING       | 49      | S1-821-120-250 |           | P KICK LEVER SPRING       |
| 15      | S1-921-140-820 |           | PAUSE LEVER(F)         | 50      | S1-921-120-110 |           | MOTOR BRACKET             |
| 16      | S1-921-140-120 |           | PAUSE LEVER SPRING     | 51      | S1-921-120-090 |           | P KICK LEVER              |
| 17      | S1-921-140-110 |           | PAUSE STOPPER          | 52      | S6-201-011-110 |           | HEAD,RP7442ES-0951        |
| 18      | S1-921-140-150 |           | BUTTON LEVER SPRING(B) | 53      | S6-401-011-520 |           | LEAF SW MSW-1541F         |
| 19      | S1-821-011-590 |           | E KICK LEVER           | 54      | S6-401-011-610 |           | LEAF SW MSW-17820MVEI     |
| 20      | S1-921-140-140 |           | BUTTON LEVER SPRING(A) | 55      | S1-821-010-500 |           | PLAY BUTTON LEVER SPRING  |
| 21      | S1-921-140-200 |           | PR STOPPER             | A       | S9-P33-200-320 |           | DEL TITE SCREWM2-3        |
| 22      | S1-921-140-090 |           | SWITCH ACTUATOR        | B       | S9-180-000-000 |           | C TAP SCREW M2-4          |
| 23      | S1-921-140-080 |           | PUSH BUTTON ACTUATOR   | C       | S9-679-000-000 |           | P TAP SCREW M2-5          |
| 24      | S1-921-140-230 |           | PLAY BUTTON LEVER      | D       | S9-999-180-090 |           | TAP SCREW M2-4.5          |
| 25      | S1-821-120-020 |           | MOTOR COLLER SCREW     | E       | S9-004-000-000 |           | SCREW M2-6                |
| 26      | S1-921-140-240 |           | REW BUTTON LEVER       | F       | S9-P01-200-310 |           | SCREW,M2-3                |
| 27      | S1-921-140-250 |           | FF BUTTON LEVER        | G       | S9-922-000-000 |           | AZIMUTH SCREW M2-8        |
| 28      | S1-921-140-260 |           | STOP BUTTON LEVER      | H       | S9-182-000-000 |           | C TAP SCREW M2-6          |
| 29      | S1-921-140-610 |           | PAUSE BUTTON LEVER     | I       | S9-422-000-000 |           | P WASHER CUT 12-3.8-0.3   |
| 30      | S1-821-100-700 |           | FF GEAR                | J       | S9-999-030-130 |           | P WASHER CUT 1.45-3.8-0.5 |
| 31      | S1-921-050-060 |           | SENSOR                 | K       | S9-882-000-000 |           | P WASHER 2-3.5-0.4        |
| 32      | S1-921-053-030 |           | TAKE UP REEL ASSY      | L       | S9-999-000-030 |           | P WASHER2.1-4-0.13        |
| 33      | S1-829-100-010 |           | PACK SPRING            | M       | S9-999-200-410 |           | P TAP SCREW M2-3          |
| 34      | S1-921-053-040 |           | SUPPLY REEL ASSY       |         |                |           |                           |
| 35      | S1-829-100-100 |           | BACK TENSTON SPRING    |         |                |           |                           |

# CD MECHANISM EXPLODED VIEW 1/2

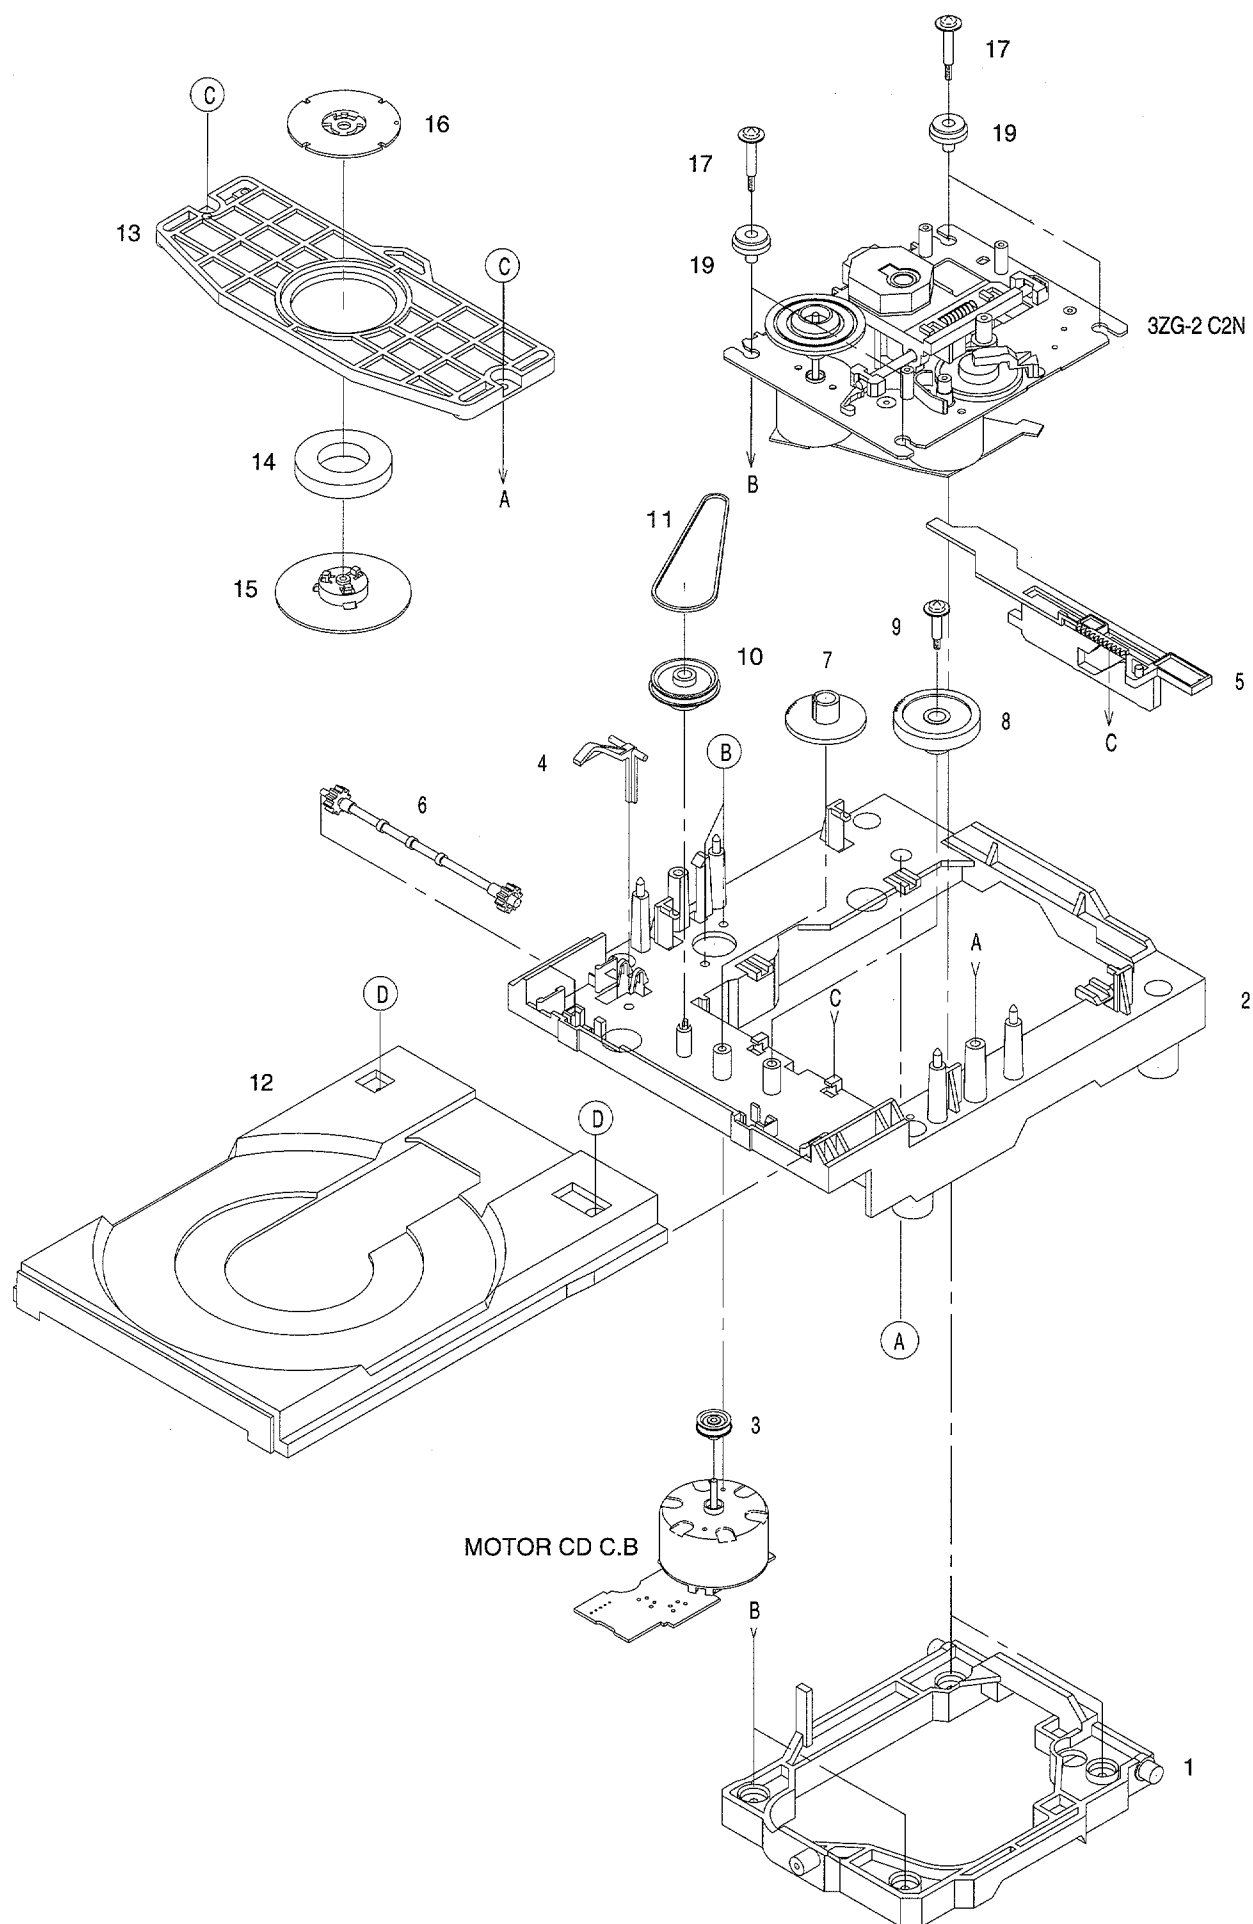


## CD MECHANISM PARTS LIST 1/2

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO.       | KANRI NO. | DESCRIPTION     | REF. NO | PART NO.       | KANRI NO. | DESCRIPTION       |
|---------|----------------|-----------|-----------------|---------|----------------|-----------|-------------------|
| 1       | 83-ZG3-224-119 |           | HLDR, M2        | 16      | 83-ZG3-211-01K |           | PLATE, DISC       |
| 2       | 83-ZG3-228-21K |           | CHAS, L6        | 17      | 81-ZG1-254-019 |           | S-SCEW, MECH HLDR |
| 3       | 83-ZG3-208-01K |           | PULLEY, MOTOR   | 19      | 83-ZG3-225-019 |           | CUSH-G, MAIN A    |
| 4       | 83-ZG3-213-01K |           | LVR, SW         | A       | 87-067-945-119 |           | VFT2+3-12 (F10)   |
| 5       | 83-ZG3-209-01K |           | CAM, SLIDE      | B       | 87-251-071-119 |           | U+2.6-4           |
| 6       | 83-ZG3-207-01K |           | GEAR, TRAY      | C       | 87-512-074-219 |           | VFT2+2.6-8        |
| 7       | 83-ZG3-204-01K |           | GEAR, C         | D       | 87-352-075-219 |           | VT2+2.6-10        |
| 8       | 83-ZG3-205-01K |           | GEAR, D         |         |                |           |                   |
| 9       | 83-ZG3-217-019 |           | S-SCREW, GEAR D |         |                |           |                   |
| 10      | 83-ZG3-220-11K |           | GEAR, PULLEY 2  |         |                |           |                   |
| 11      | 83-ZG3-214-019 |           | BELT, L         |         |                |           |                   |
| 12      | 83-ZG3-229-01K |           | TRAY, CD 2      |         |                |           |                   |
| 13      | 83-ZG3-210-01K |           | HLDR, CHUCK     |         |                |           |                   |
| 14      | 83-ZG3-602-010 |           | RING, MAG       |         |                |           |                   |
| 15      | 83-ZG3-212-01K |           | CAP, DISC       |         |                |           |                   |


CD MECHANISM EXPLODED VIEW 2/2

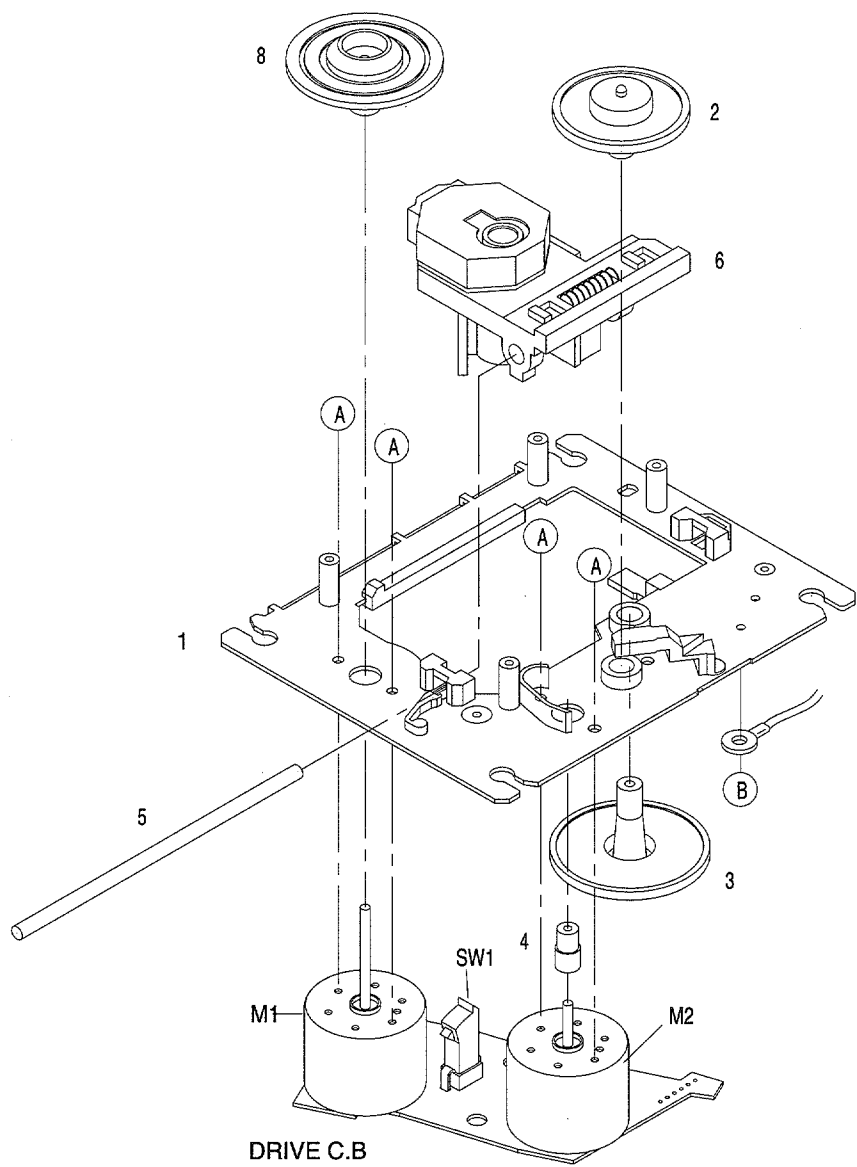

CD MECHANISM PARTS LIST 2/2

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO.       | KANRI NO. | DESCRIPTION          |
|---------|----------------|-----------|----------------------|
| 1       | 83-ZG2-202-71K |           | O-SERT S ASSY,S      |
| 2       | 83-ZG2-204-419 |           | GEAR,A               |
| 3       | 83-ZG2-205-219 |           | GEAR,B               |
| 4       | 83-ZG2-220-01K |           | GEAR MOTOR 2         |
| 5       | 83-ZG2-240-019 |           | SHAFT,SLIDE 3        |
| 6       | 87-070-109-019 |           | KSS 212A,PICKUP UNIT |
| 8       | 83-ZG2-233-019 |           | TURN TABLE,A5        |
| A       | 87-261-032-219 |           | SCREW V+2-3          |
| B       | 87-067-174-019 |           | SCRE VTT+2-4         |

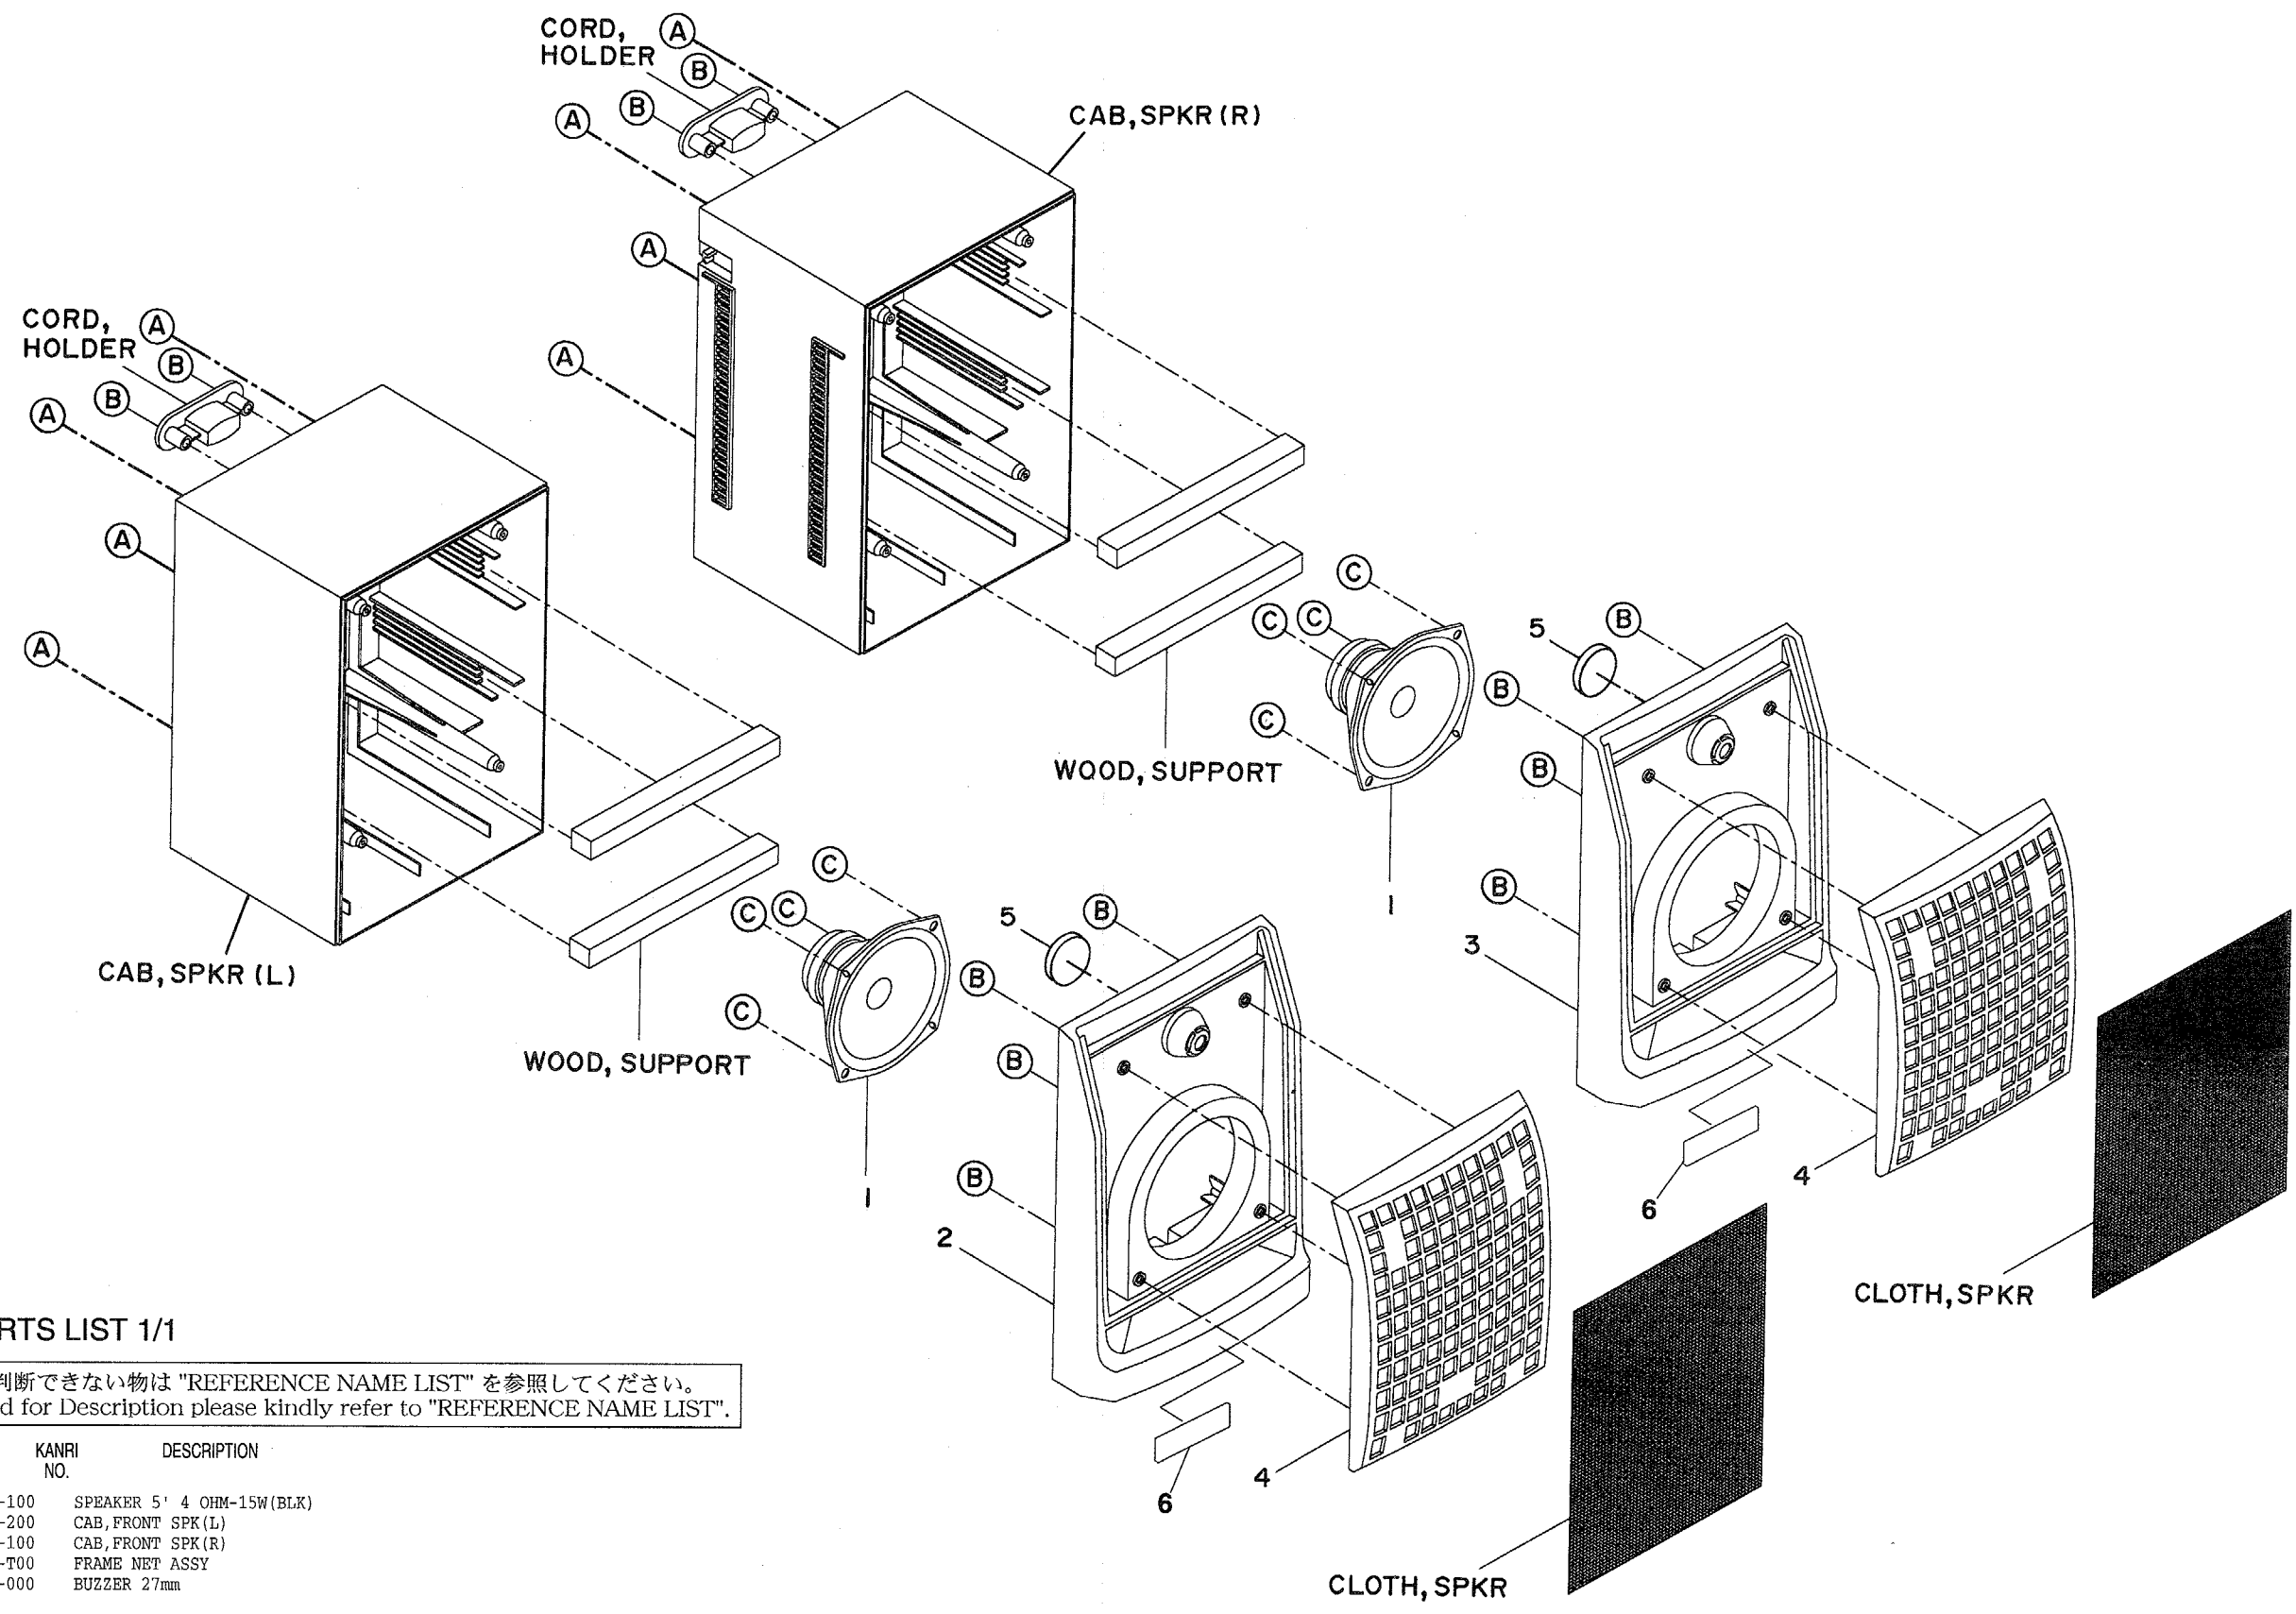

SPEAKER PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO.       | KANRI NO. | DESCRIPTION               |
|---------|----------------|-----------|---------------------------|
| 1       | S5-040-150-100 |           | SPEAKER 5" 4 OHM-15W(BLK) |
| 2       | S7-CT4-100-200 |           | CAB, FRONT SPK(L)         |
| 3       | S7-CT4-100-100 |           | CAB, FRONT SPK(R)         |
| 4       | S7-CT4-FNE-T00 |           | FRAME NET ASSY            |
| 5       | S3-270-010-000 |           | BUZZER 27mm               |
| 6       | S0-410-210-000 |           | LOGO AIWA                 |
| A       | 87-342-099-210 |           | SCREW ST 3-15             |
| B       | 87-352-097-210 |           | SCREW, ST3-12             |
| C       | 87-661-097-410 |           | SCREW ST3-12              |

## ACCESSORIES/PACKAGE LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。  
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO.      | DESCRIPTION                     |
|---------|----------|----------------|---------------------------------|
|         | 1        | S7-CT4-910-200 | INSTRUCTION BOOK (DW620LH) <LH> |
|         | 1        | S7-CT4-910-100 | INSTRUCTION BOOK (DW620U) <U>   |
|         | 2        | SR-CDW-620-EX0 | RC, RC-DW620EX <LH>             |
| ⚠       | 3        | S2-201-100-000 | POWER CORD (E) <LH>             |
| ⚠       | 3        | S1-171-101-000 | CORD, POWER SET <U>             |
| ⚠       | 4        | S0-220-117-000 | CONVERTOR 220V-117V <LH>        |

## REFERENCE NAME LIST

### ELECTRICAL SECTION

| DESCRIPTION | REFERENCE NAME     |
|-------------|--------------------|
| ANT         | ANTENNAS           |
| C-          | CHIP               |
| C-CAP       | CAP, CHIP          |
| C-CAP TN    | CAP, CHIP TANTALUM |
| C-COIL      | COIL, CHIP         |
| C-DI        | DIODE, CHIP        |
| C-DIODE     | DIODE, CHIP        |
| C-FET       | FET, CHIP          |
| C-FOTR      | FILTER, CHIP       |
| C-JACK      | JACK, CHIP         |
| C-LED       | LED, CHIP          |
| C-RES       | RES, CHIP          |
| C-SFR       | SFR, CHIP          |
| C-SLIDE SW  | SLIDE SWITCH, CHIP |
| C-SW        | SWITCH, CHIP       |
| C-TR        | TRANSISTOR, CHIP   |
| C-VR        | VOLUME, CHIP       |
| C-ZENER     | ZENER, CHIP        |
| CAP, CER    | CAP, CERA-SOL      |
| CAP, E      | CAP, ELECT         |
| CAP, M/F    | CAP, FILM          |
| CAP, TC     | CAP, CERA-SOL      |
| CAP, TC-U   | CAP, CERA-SOL SS   |
| CAP, TN     | CAP, TANTALUM      |
| CERA FIL    | FILTER, CERAMIC    |
| CF          | FILTER, CERAMIC    |
| DL          | DELAY LINE         |
| E/CAP       | CAP, ELECT         |
| FILT        | FILTER             |
| FLTR        | FILTER             |
| FUSE RES    | RES, FUSE          |
| MOT         | MOTOR              |
| P-DIODE     | PHOTO DIODE        |
| P-SNSR      | PHOTO SENSER       |
| P-TR        | PHOTO TRANSISTOR   |
| POLY VARI   | VARIABLE CAPACITOR |
| PPCAP       | CAP, PP            |
| PT          | POWER TRANSFORMER  |
| PTR, RES    | PTR, MELF          |
| RC          | REMOTE CONTROLLER  |
| RES NF      | RES, NON-FLAMMABLE |
| RESO        | RESONATOR          |
| SHLD        | SHIELD             |
| SOL         | SOLENOID           |
| SPKR        | SPEAKER            |
| SW, LVR     | SWITCH, LEVER      |
| SW, RTRY    | SWITCH, ROTARY     |
| SW, SL      | SWITCH, SLIDE      |
| TC CAP      | CAP, CERA-SOL      |
| THMS        | THERMISTOR         |
| TR          | TRANSISTOR         |
| TRIMMER     | CAP, TRIMMER       |
| TUN-CAP     | VARIABLE CAPACITOR |
| VIB, CER    | RESONATOR, CERAMIC |
| VIB, XTAL   | RESONATOR, CRYSTAL |
| VR          | VOLUME             |
| ZENER       | DIODE, ZENER       |

### MECHANICAL SECTION

| DESCRIPTION    | REFERENCE NAME      |
|----------------|---------------------|
| ADHESHIVE      | SHEET ADHESHIVE     |
| AZ             | AZIMUTH             |
| BAR-ANT        | BAR-ANTENNA         |
| BAT            | BATTERY             |
| BATT           | BATTERY             |
| BRG            | BEARING             |
| BTN            | BUTTON              |
| CAB            | CABINET             |
| CASS           | CASSETTE            |
| CHAS           | CHASSIS             |
| CLR            | COLLAR              |
| CONT           | CONTROL             |
| CRSR           | CURSOR              |
| CU             | CUSHION             |
| CUSH           | CUSHION             |
| DIR            | DIRECTION           |
| DUBB           | DUBBING             |
| FL             | FRONT LOADING       |
| FLY-WHL        | FLYWHEEL            |
| FR             | FRONT               |
| FUN            | FUNCTION            |
| G-CU           | G-CUSHION           |
| HDL            | HANDOL              |
| HIMERON        | CLOTH               |
| HINGE, BAT     | HINGE, BATTERY      |
| HLDR           | HOLDER              |
| HT-SINK        | HEAT SINK           |
| IB             | INSTRUCTION BOOKLET |
| IDLE           | IDLER               |
| IND, L-R       | INDICATOR, L-R      |
| KEY, CONT      | KEY, CONTROL        |
| KEY, PRGM      | KEY, PROGRAM        |
| KNOB, SL       | KNOB, SLIDE         |
| LBL            | LABEL               |
| LID, BATT      | LID, BATTERY        |
| LID, CASS      | LID, CASSETTE       |
| LVR            | LEVER               |
| P-SP           | P-SPRING            |
| PANEL, CONT    | PANEL, CONTROL      |
| PANEL, FR      | PANEL, FRONT        |
| PRGM           | PROGRAM             |
| PULLY, LOAD MO | PULLY, LOAD MOTOR   |
| RBN            | RIBBON              |
| S-             | SPECIAL             |
| SEG            | SEGMENT             |
| SH             | SHEET               |
| SHLD-SH        | SHIELD-SHEET        |
| SL             | SLIDE               |
| SP             | SPRING              |
| SP-SCREW       | SPECIAL-SCREW       |
| SPACER, BAT    | SPACER, BATTERY     |
| SPR            | SPRING              |
| SPR-P          | P-SPRING            |
| SPR-PC-PUSH    | P-SPRING, C-PUSH    |
| T-SP           | T-SPRING            |
| TERM           | TERMINAL            |
| TRIG           | TRIGGER             |
| TUN            | TUNING              |
| VOL            | VOLUME              |
| W              | WASHER              |
| WHL            | WHEEL               |
| WORM-WHL       | WORM-WHEEL          |

| サービス技術ニュース |      |
|------------|------|
| 番号         | 連絡内容 |
| G- -       |      |
| G- -       |      |
| G- -       |      |

**アイワ株式会社**  
**AIWA CO.,LTD.**

912162

Tokyo Japan