

# aiwa

AIWA CO.,LTD

UTSUNOMIYA FACTORY

2620, TOKUJIROU-MACHI, UTSUNOMIYA-SHI, TOCHIGI 321-21, JAPAN

## SERVICE TECHNICAL INFORMATION

### ONE POINT REPAIR

UTSUNOMIYA, JUNE 15, 1996


REF. NO. : SI-96-013

CUSTOMER RELATIONS & SERVICE DIV.


MODEL : CSD-ES50 / ES60 / ES70 / CA-DW700M / NSX-E7M  
SUBJECT : Remote control does not operate  
SYMPTOM : The height of the positive terminal (+) with some AA batteries is low. When such batteries are used, the battery does not make contact with the positive terminals (+) of the remote control unit and so the unit does not operate.

(Battery with which this condition has been currently discovered: Duracell)

REMEDY : Attach a spacer to the positive terminals (arrow) of the remote control unit (refer to the figure below).

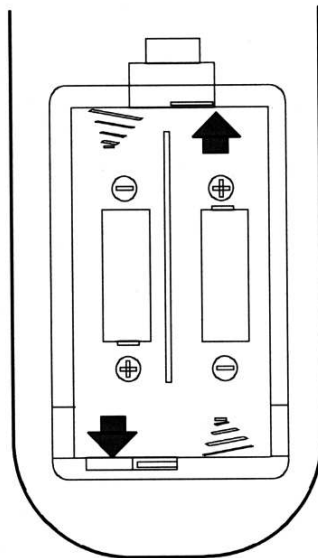

Remote Control (bottom)

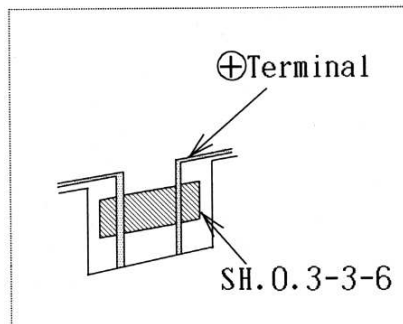

Use tweezer to attach to the back of the positive terminal.

Part No.	Part Name	Ref. No.
SV-T00-024-010	SH, 0.3-3-6	—