

AIWA CO.,LTD UTSUNOMIYA FACTORY

2620, TOKUJIROU-MACHI, UTSUNOMIYA-SHI, TOCHIGI 321-21, JAPAN

## **SERVICE TECHNICAL INFORMATION**

## **ONE POINT REPAIR**

UTSUNOMIYA, JUNE 15, 1994

REF. NO.: SI-94-007

SERVICE ENGINEERING DIV.

**MODEL** 

NSX-320 HE. LH. E. K. Z. U.

CX-N3100 U.

SUBJECT

While in the CD function mode, there is a noise when turning off the power.

SYMPTOM

There are cases in which a clicking sound may occur when turning off the power after playing

a CD for several minutes.

REMEDY

Insert a resistor (330 $\Omega$  1/2W) between the Q109 collector and the ground, and then, attach it on the board with DiaBond #1620 (black). DiaBond #1620 (black) is available at Service Parts Center Japan.

This procedure enables the unit to mute sounds promptly after the power is turned off, and as a result, no clicking sounds occur.

