

ALLEN&HEATH

Parts identification sheet

XONE2:464




Version 2 identified by 2 in serial number


How to order parts


Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>


UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp


POTS FADERS & KNOBS:


Pot nut
AB8172 


AJ3673 


5.5mm
AJ2864 

Lt blue
AJ3675 


Blue
AJ3674 


AJ3740 


AJ4251 

 
AJ4310 




 
Gain
AI8111 

EQ
Freq Hz
AI8005 


EQ HI, LO,
+/-
AI8004 


Aux
AI8003 

 
Pan
AI8008 

Fader
AI8117 


Aux
AI8003 


Gain
AI8006 


EQ
HI, MID1,
MID2, LO
AI8006 


Fader
002-684 




AJ2961 

Aj4245 

AJ8107 

AJ2960 

 EXT IN
AI8007

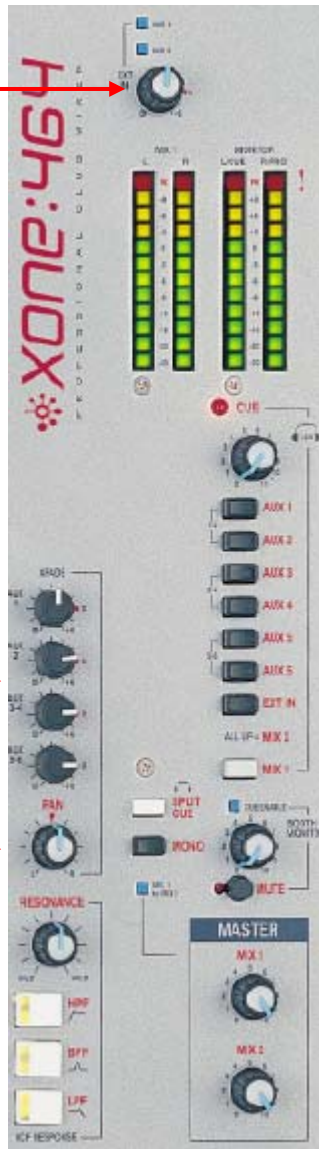

Aux mix
AI8003

Pan
AI8008

Resonance
AI8003

H/phones
AI8007

AJ7182

AJ7179


AJ7180

Booth
AI8007

MIX1/2
AI8007

The VERSION 2 model uses the Penny & Giles crossfader assembly :

 XONE:464 Crossfader Assembly Part number 002-719

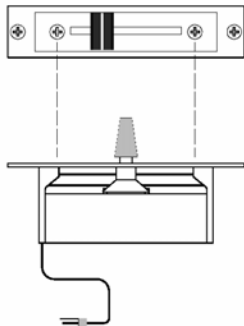

5mm
AJ2052

AJ5320

VCF
AI8003


AJ4246



AI0328

Fader plate
AA4231

 RCA phono
AL3753

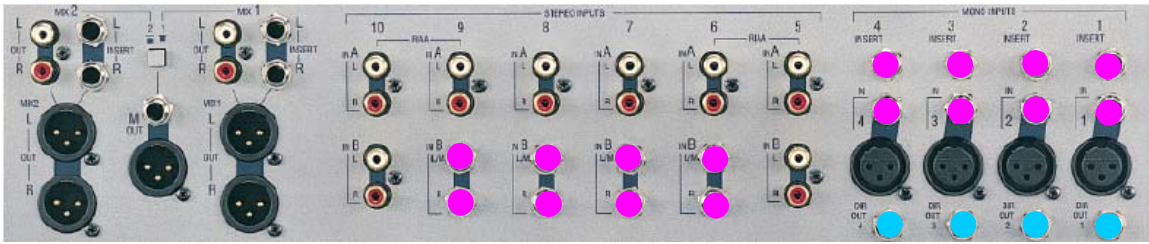

o/p XLR
AL2411



i/p XLR
AL2410



AL8106



AJ8071



Phones
AL8114



Blank plate
AA2407

Fuse holder
AL3178

AC inlet
AL3458

AJ2887



AJ2887




Switched jacks.
AL3410

Line In
Insert
Left/Mono IN
Right IN
Ext IN


Un-switched jacks.
AL3407

Direct Out
Aux
Local Monitor L/R

 
INTERIOR PARTS:

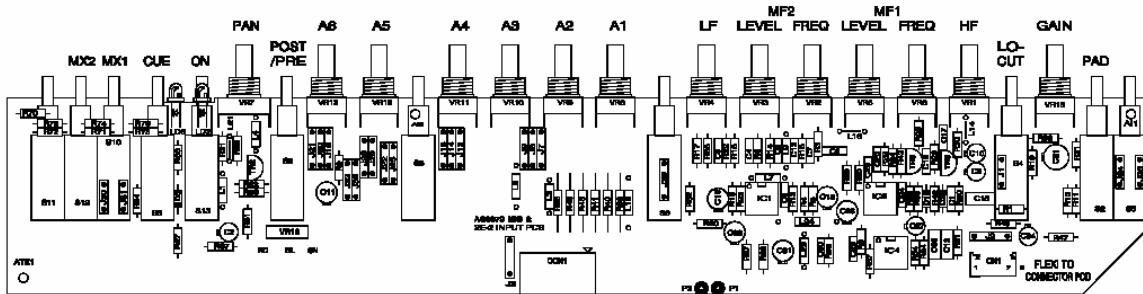

Mic/line input 002-517

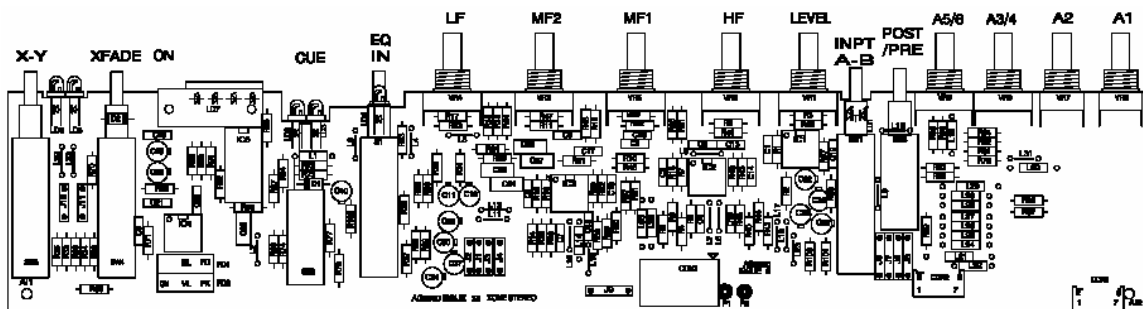 


Stereo input 002-687

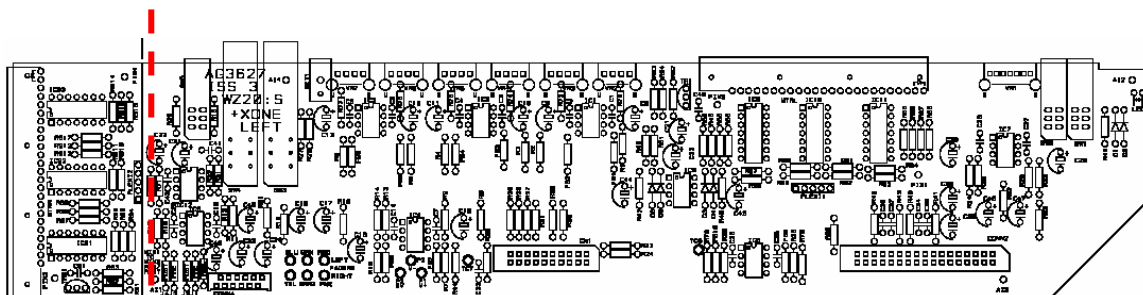 


Break-off Meters

 Left PCB 002-691

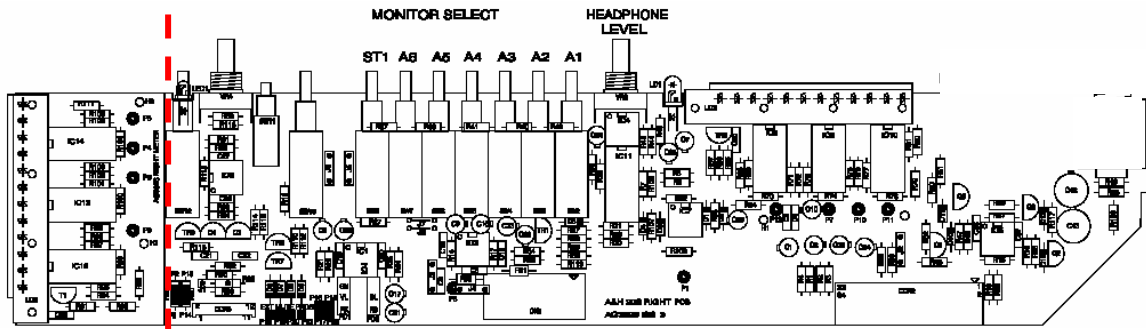


Break-off
Meters

 
Right PCB 002-622

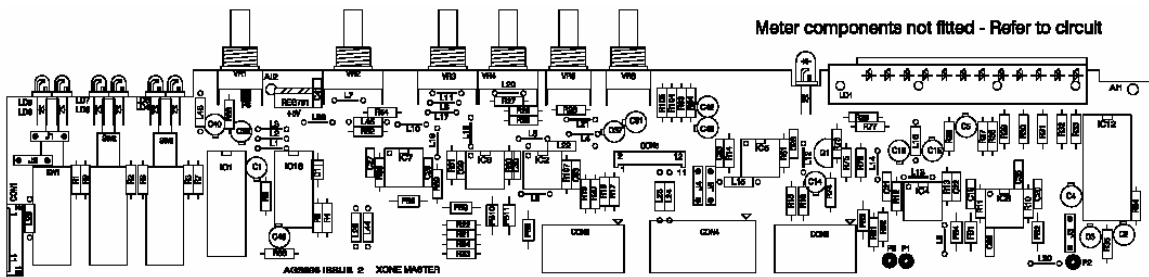


Master PCB 002-510

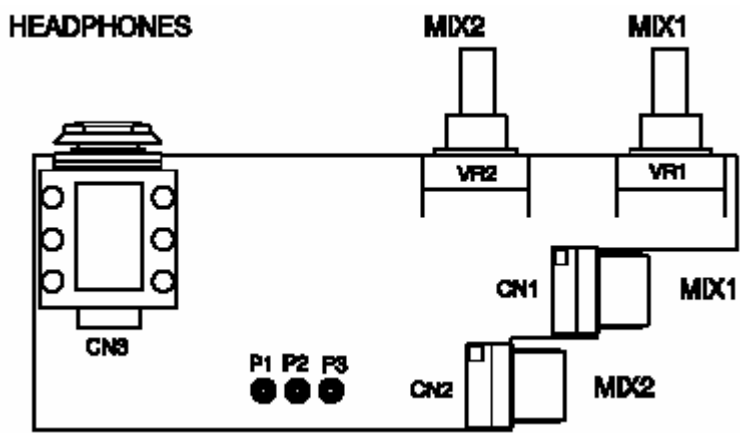 

Rotary / Headphones 002-650


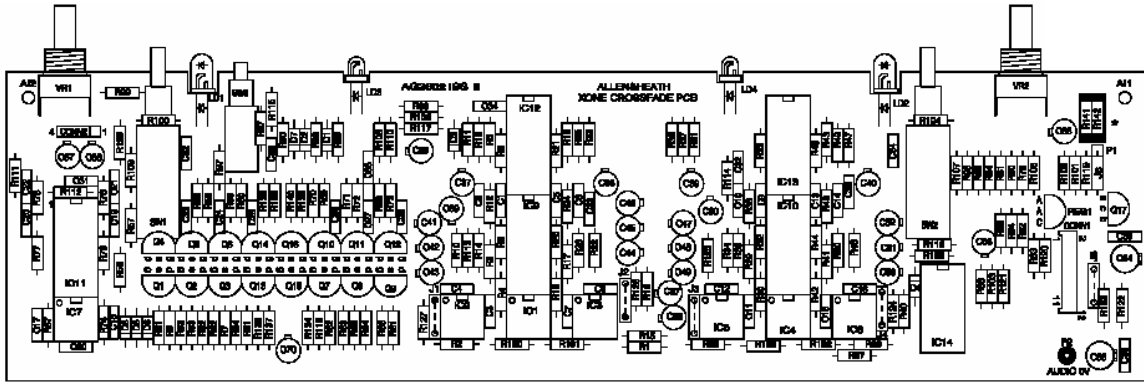 


X fade 002-627

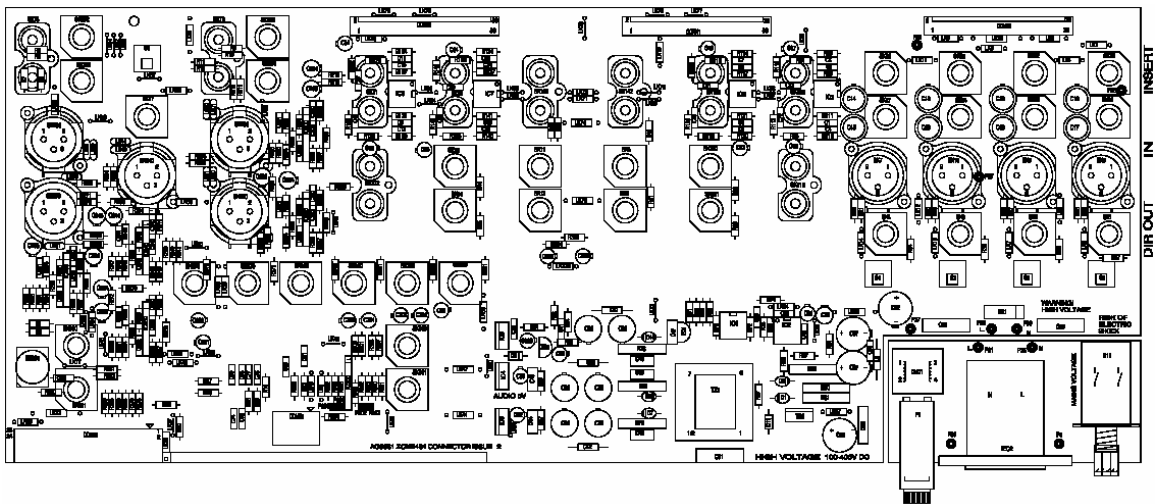 


Connector
AC inlet
PSU

  002-504

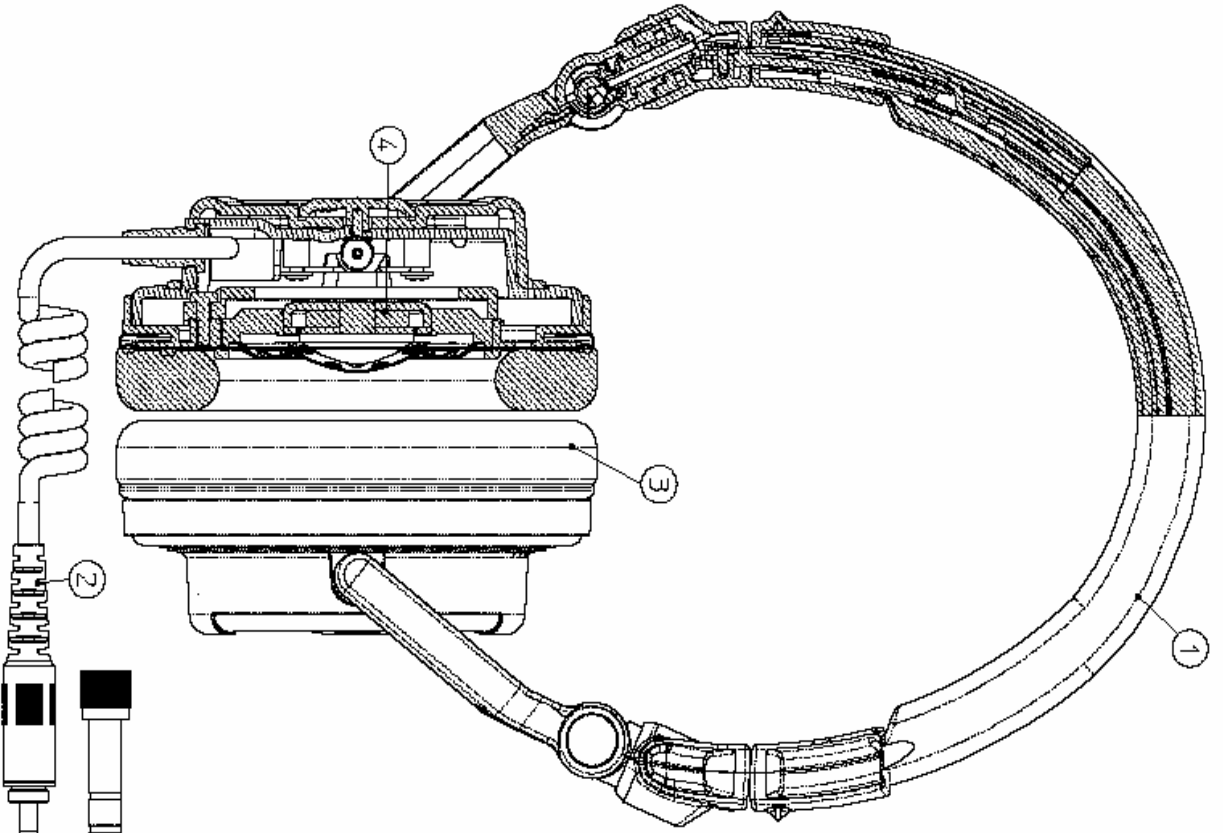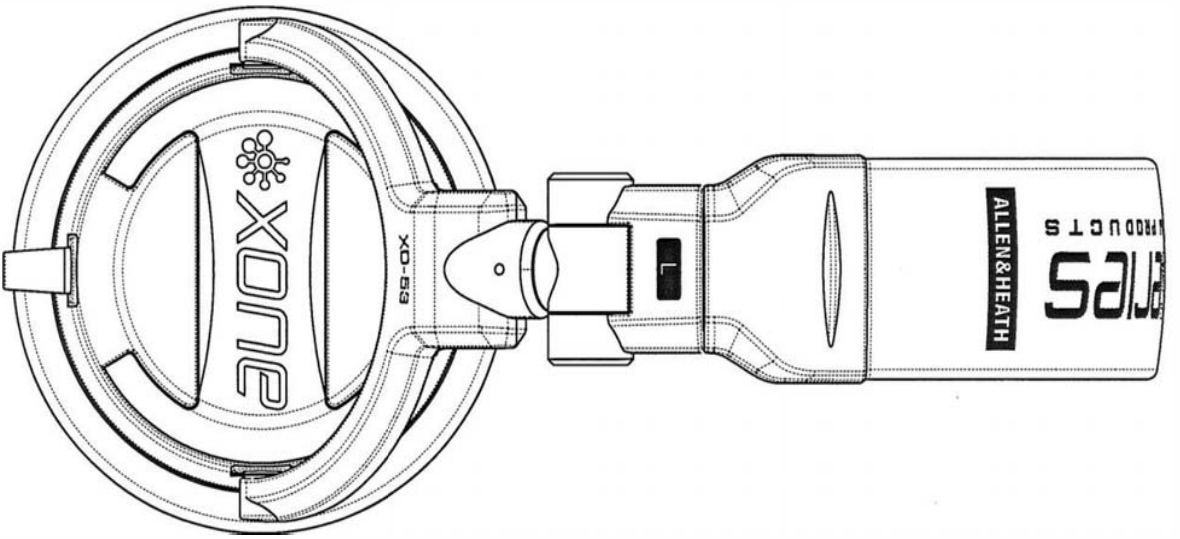

No	DESCRIPTION	PART No
1	XD-53 HEADBAND	003-804X
2	XD-53 CORD	003-805X
3	XD-53 EAR PAD	003-806X
4	XD-53 HD-111 DRIVER	003-807X

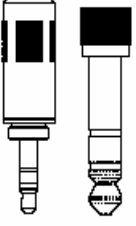 

ALLEN&HEATH

ISSUED BY	DATE	REV
1	AVT 12.10.07	

*All parts to be suited to compliance

TITLE XONE : XD53X

DRG No. PD0001 ISSUE 1 SHEET 1 OF 1

ALLEN&HEATH

Parts identification sheet

 
 
 
 
Xone:02

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>



UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

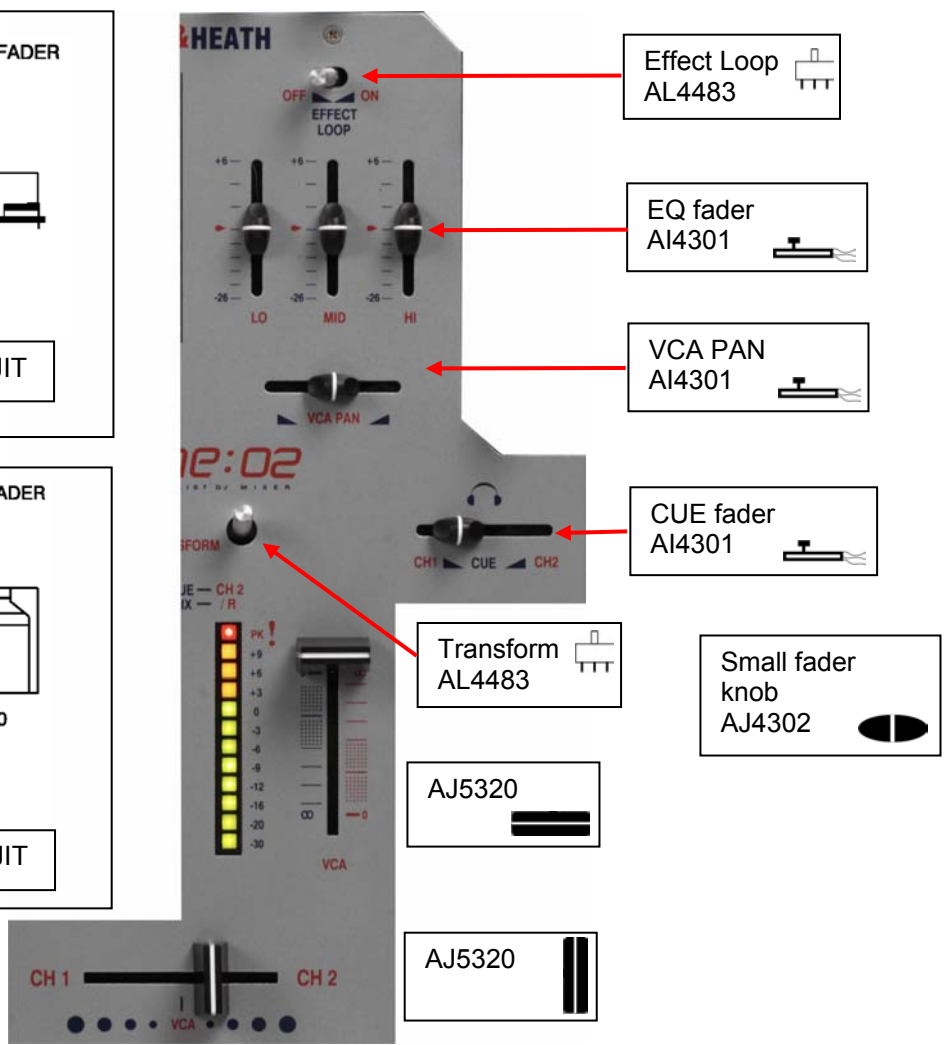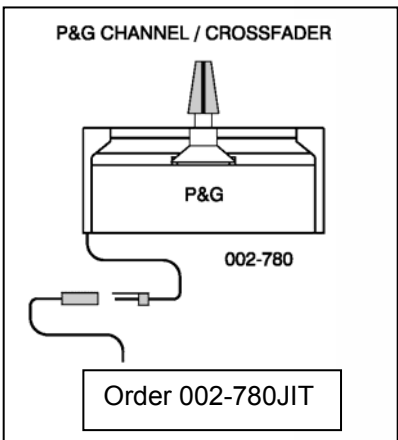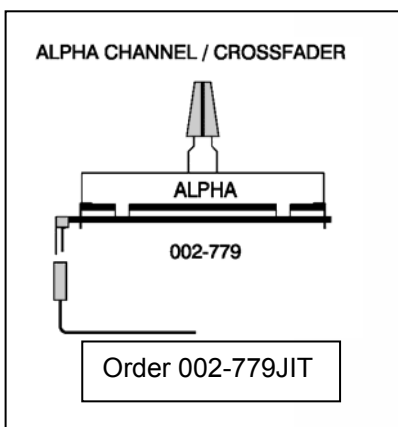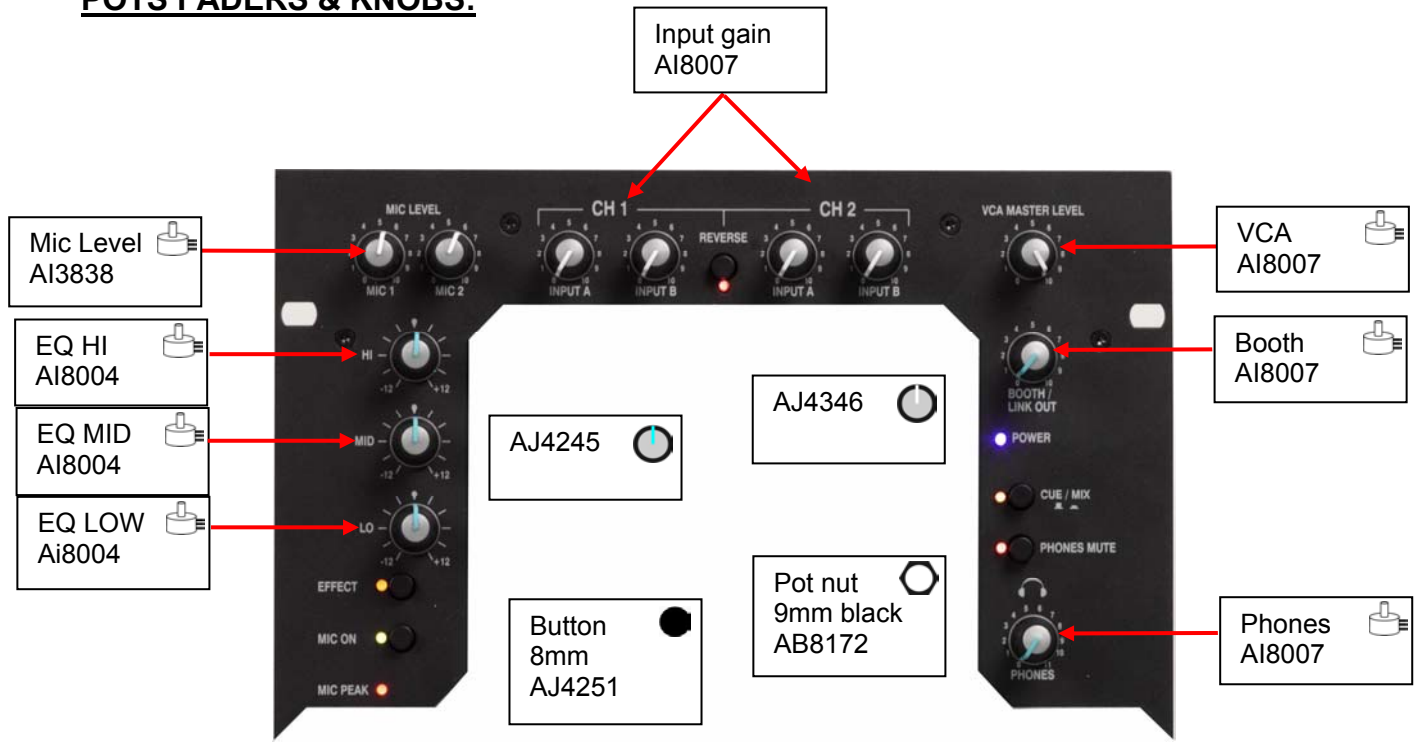
POTS FADERS & KNOBS:



ALLEN&HEATH XONE:02





Contour
AI8007 
AJ4346 

 
Phones socket
AL0328 


XLR male
AL2411

Jack socket
AL3410

Ground post
AL8106 


XLR female
AL2410 

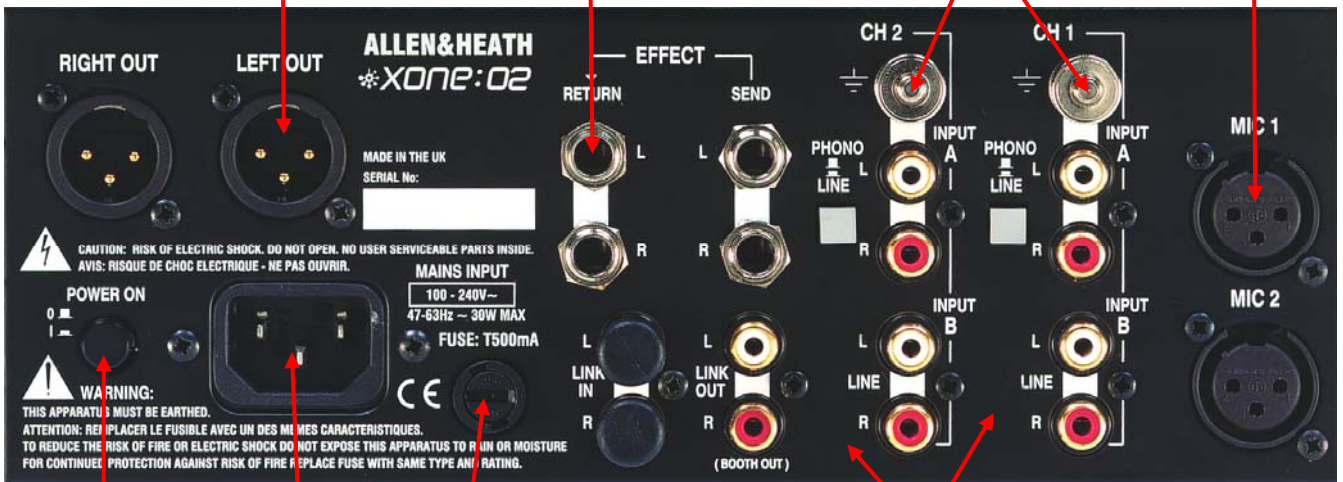

Power switch
AB4502 

AC inlet
AL3458

 
Shorting plug
AL4396 

RCA phono
AI3753 


Button
AJ2887 

Fuse holder
AL3178

INTERIOR PARTS:

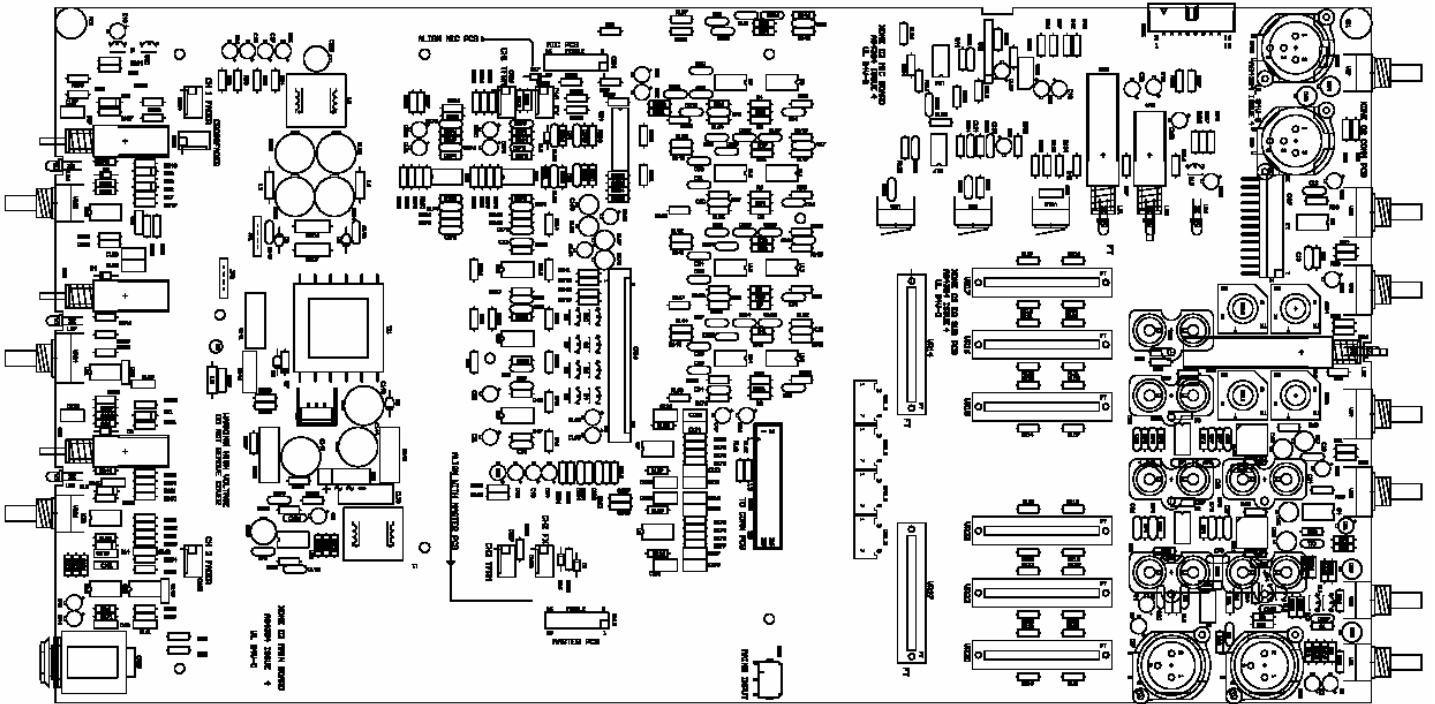

 Main / Mic / Con. 002-763.
Single PCB with break-off sections.

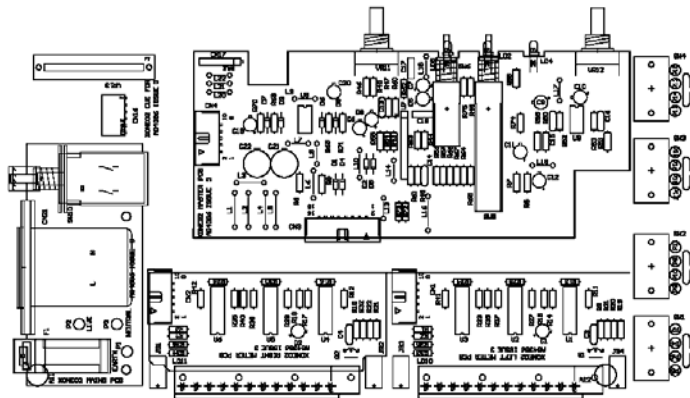

Master / Mains / Meters 002-764

ALLEN&HEATH

Parts identification sheet

 


How to order parts


Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PARTS:

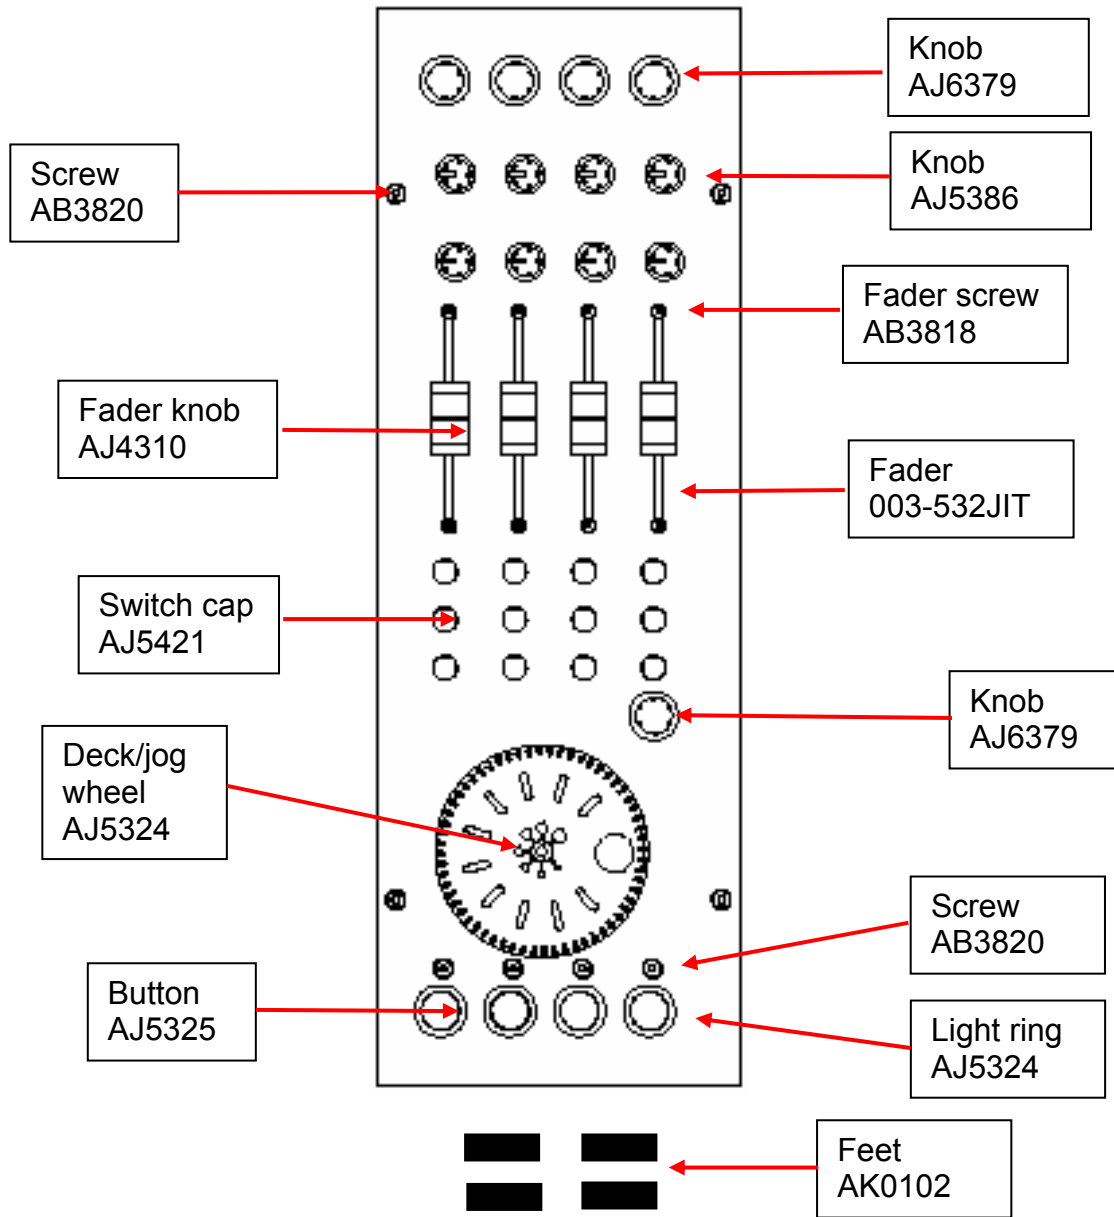

INTERIOR PARTS:

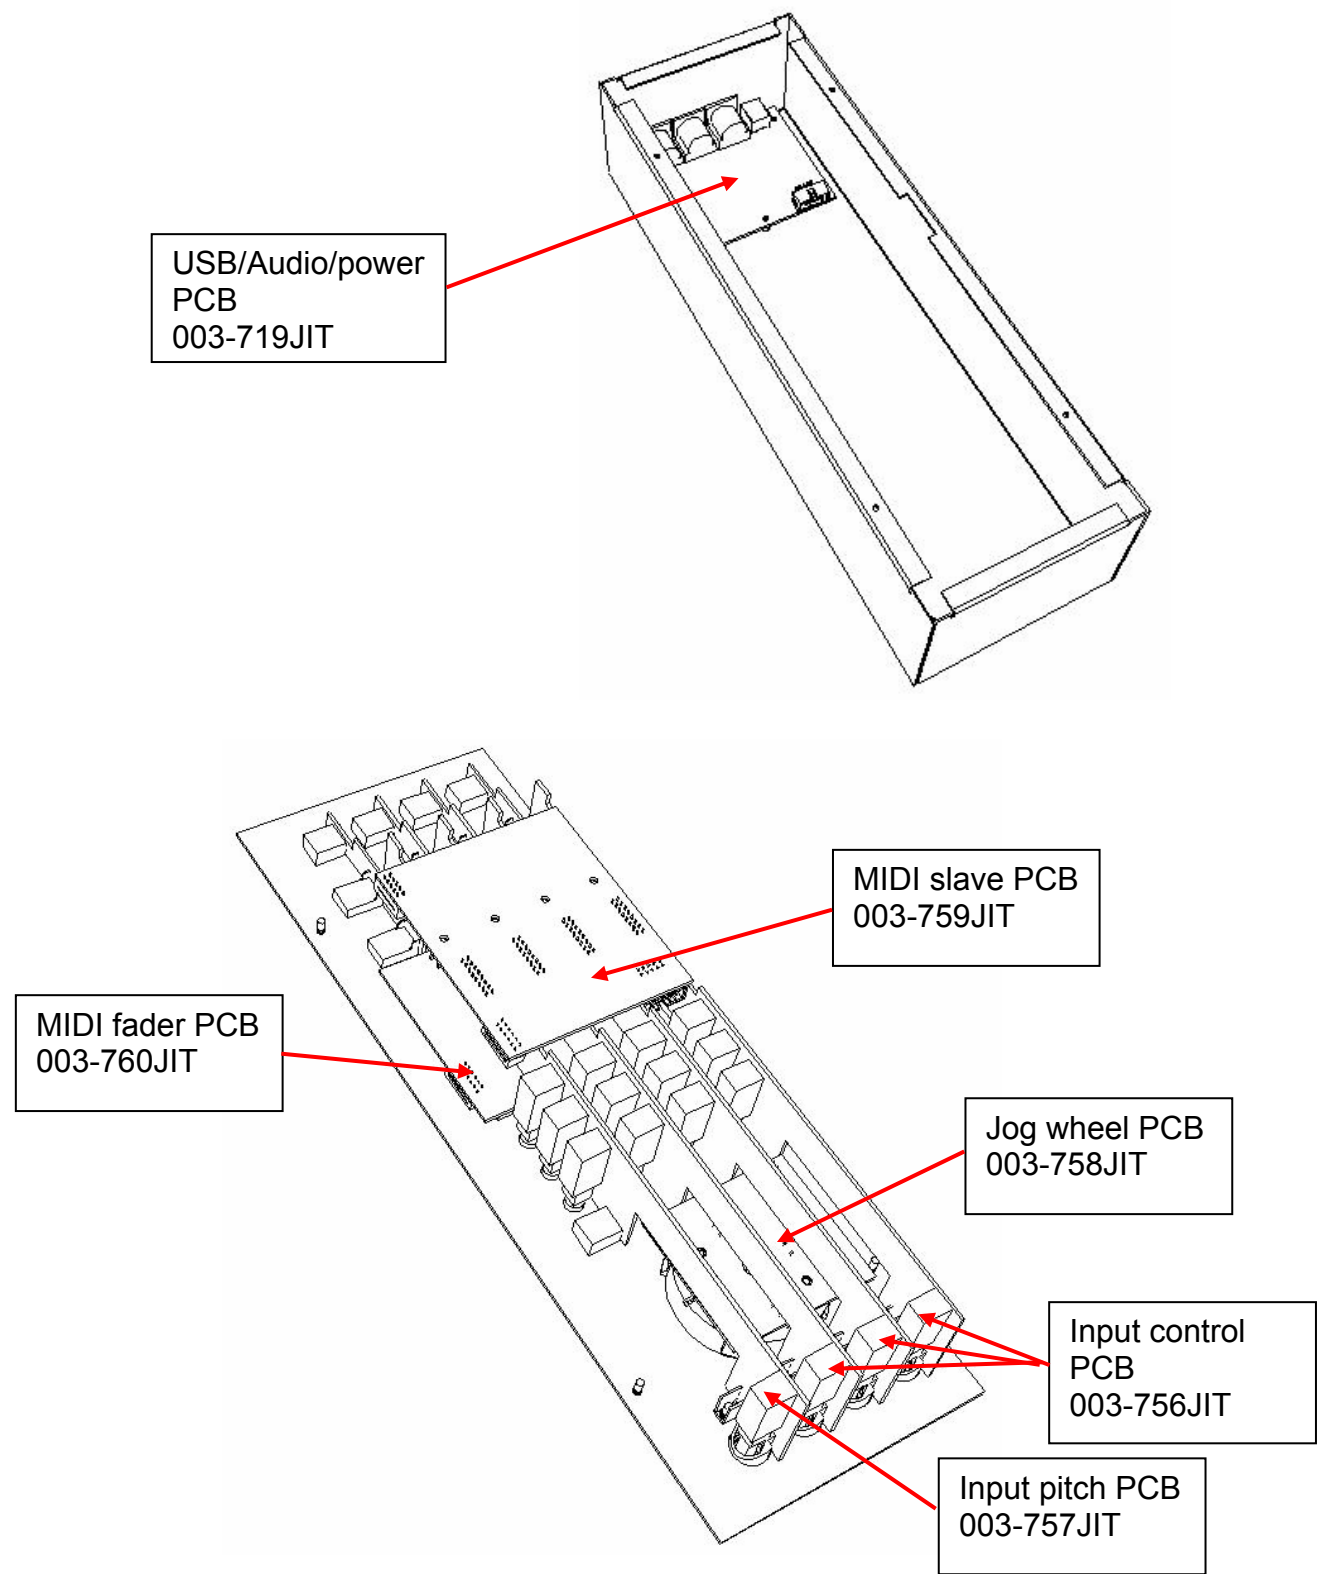 

ALLEN&HEATH

Parts identification sheet

 


 
How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>


UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp


EXTERIOR PARTS:

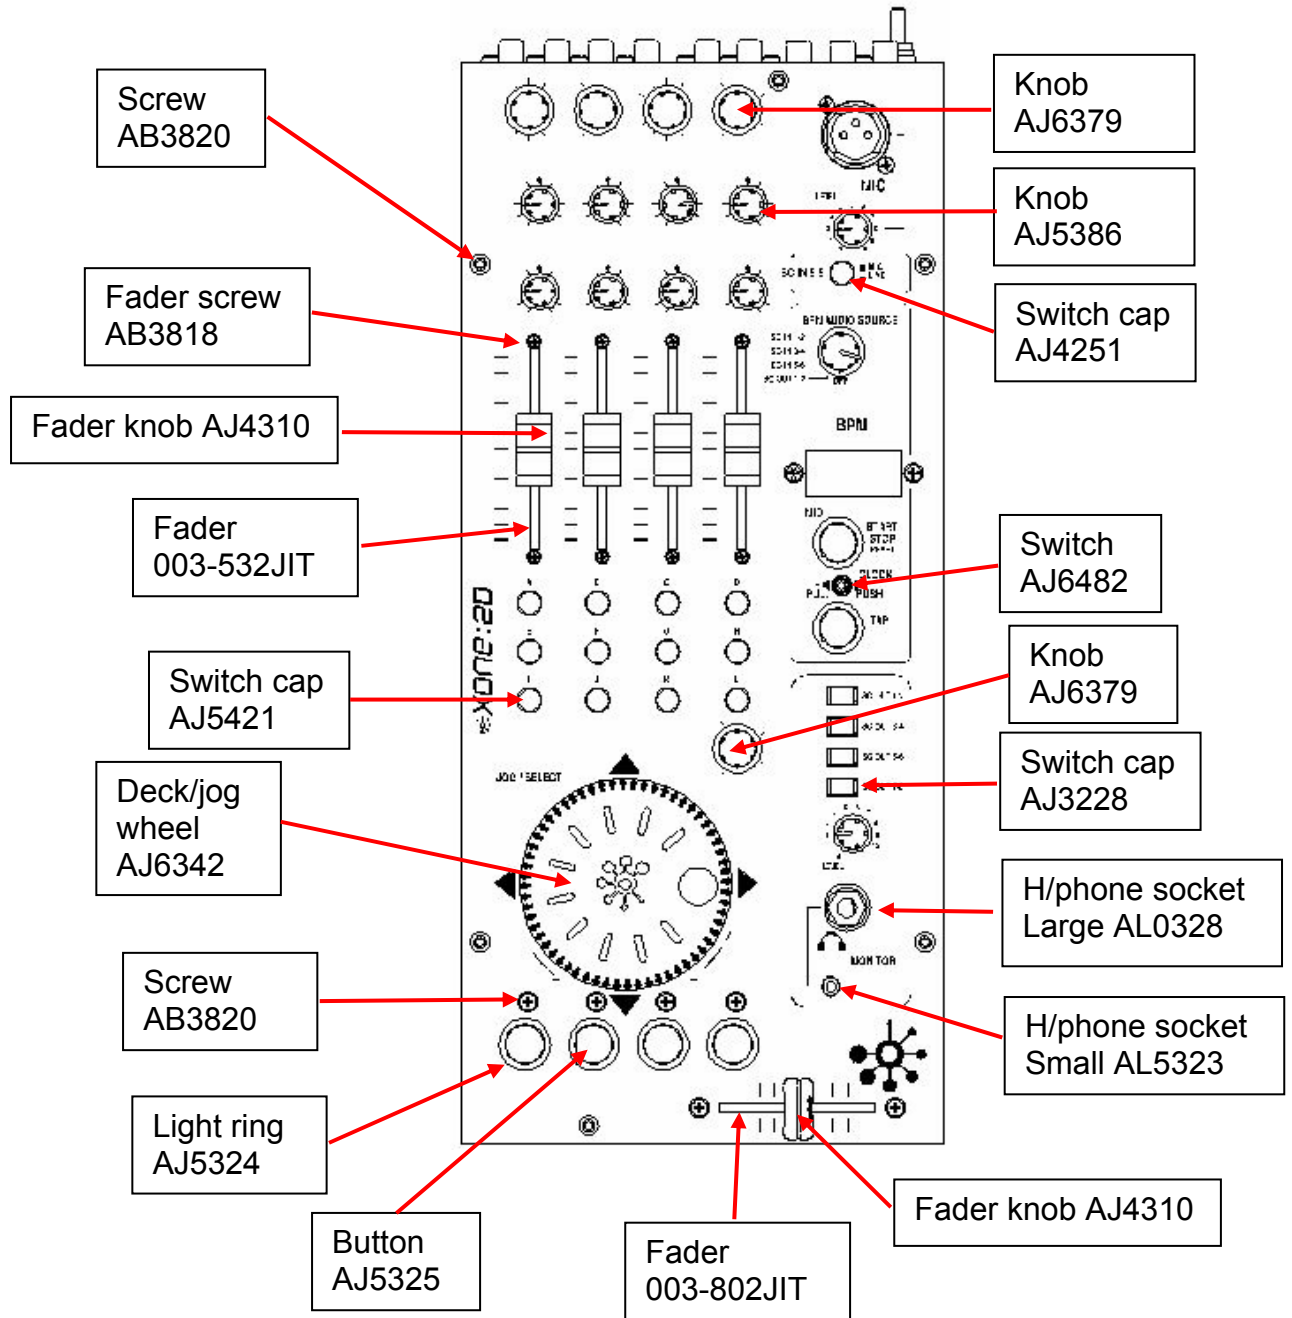

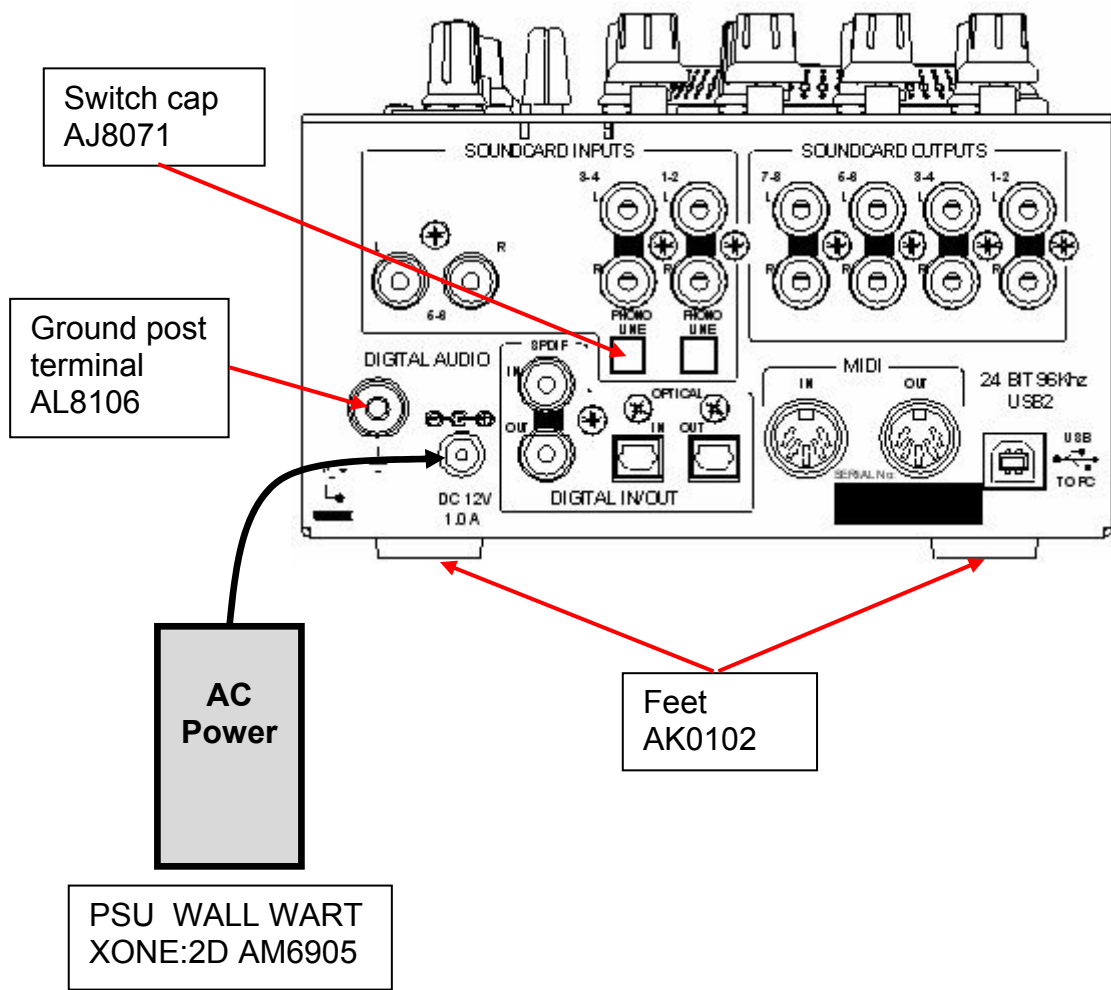

INTERIOR PARTS:

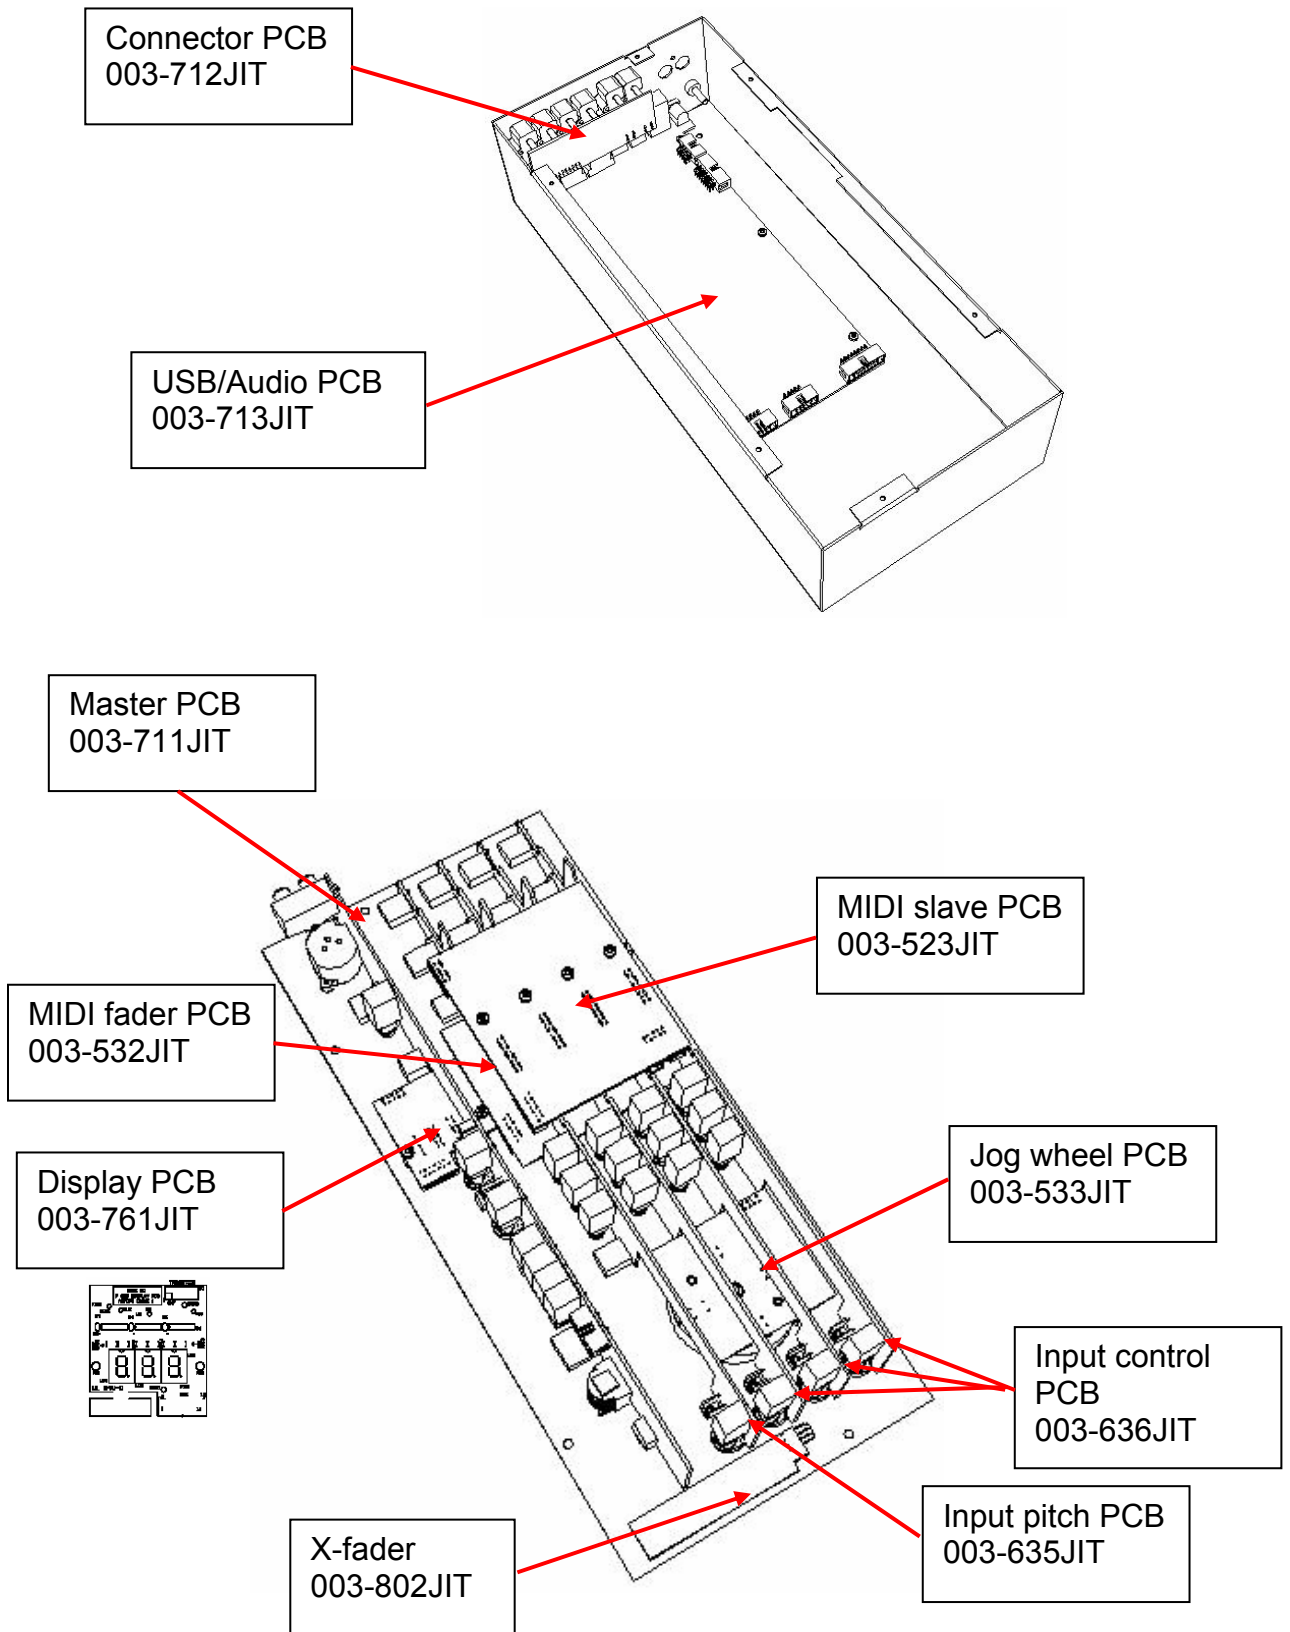 

 


RCA PHONO PLUG SHORTING-
Pt No. AL4396

TERMINAL POST-PT No
AL8106

D TYPE CONNECTOR-
Pt No. AL6351

QUAD RCA SOCKET-Pt No. AL497
SCREW-Pt No. AB2771

 JACK SOCKET-
Pt No. AL0328

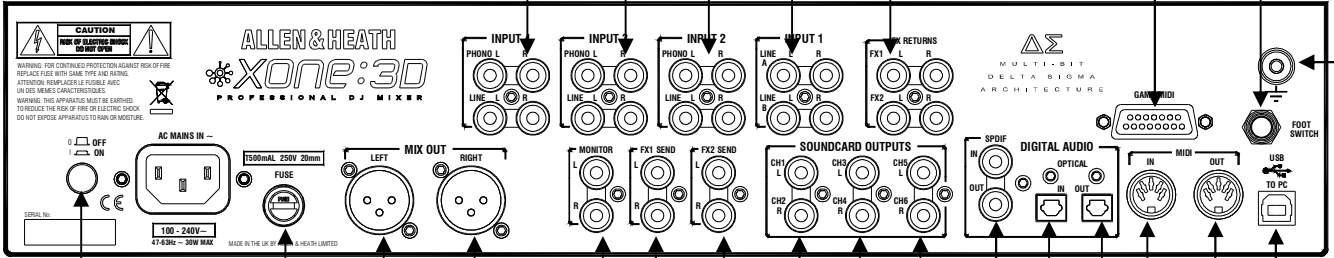

SWITCH CAP-Pt
No AJ2887

XLR MALE SKT-Pt No. AL241 I
SCREW-Pt No. AB2810

FUSE 20mm 500 mA-
Pt No. AL3534

RCA DUAL VERTICAL SOCKET-
Pt No. AL3753
SCREW -Pt No. AB2771

 
PHONO DUAL
SOCKET-Pt No.
AL0566

OPTICAL IN SOCKET-
Pt No. AE6096
OPTICAL OUT SOCKET-
Pt No. AE5899

USB SOCKET-
Pt No. AL6096

5 WAY DIN-
Pt No. AL0095

OPTICAL IN/OUT BLANKING PLUG-
Pt No. AL6531

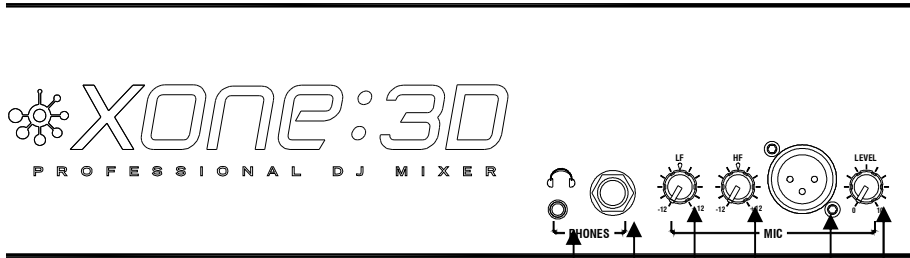

JACK SOCKET-
Pt No. AL5323

KNOB-Pt No.
AJ4346
POT-Pt No.
AI8004

KNOB-Pt No.
AJ4346
POT-Pt No.
AI8003

JACK SOCKET-
Pt No. AL0328

XLR SOCKET-
Pt No. AL2414
SCREW-Pt No.

CONNECTING WIREFORMS USED IN CONSOLE

From	to
AL5904-	HEADPHONE ASSY
AL5904-	7 SEGMENT DISPLAY
AL5904-	ANALOGUE SLAVE ASSY
AL5904-	JOGWHEEL (L) ASSY
AL5904-	JOGWHEEL (R) ASSY
AL4606-	CONNECTOR ASSY
AL6407-	MIDI SLAVE (L) ASSY
AL6592-	MIDI CONTROL (R) ASSY
AL5485-	ANALOGUE SLAVE ASSY
AL6098-	GAMEPORT ASSY
AL3817-	LINEAR FADER ASSY'S
AL3817-	X FADER ASSY
AH2228	MIDI FADER ASSY'S
	MASTER ASSY
	USB CONTROL ASSY
	POWER SUPPLY ASSY
	MIDI SLAVE (L) ASSY
	MIDI SLAVE (R) ASSY
	MASTER ASSY
	USB CONTROL ASSY
	USB CONTROL ASSY
	USB CONTROL ASSY
	INPUT ASSY'S
	FILTER ASSY
	MIDI SLAVE ASSY'S

MASTER ASSY- Pt No. 003-522 INPUT ASSY- Pt No. 003521 FILTER ASSY- Pt No. 003-525 7 SEGMENT DISPLAY ASSY- Pt No. 003-695

CONTROL INPUT P ASSY - Pt No. 003-635

MIDI SLAVE R ASSY- Pt No. 003-546

MIDI FADER ASSY- Pt No. 003-532 (under midi slave assy)

JOGWHEEL ASSY- Pt No. 003-533

CONTROL INPUT P ASSY - Pt No. 003-635

MIDI SLAVE L ASSY- Pt No. 003-523

MIDI FADER ASSY- Pt No. 003-532 (under midi slave assy)

ANALOGUE SLAVE ASSY_ Pt No. 003-519

JOGWHEEL ASSY- Pt No. 003-533

CONTROL INPUT ASSY_ Pt No.. 003-636

LINEAR FADER ASSY- Pt No. 003-526

X FADER ASSY- Pt No. 003-579

CONTROL INPUT ASSY_ Pt No.. 003-636

GAMEPORT ASSY- Pt No. 003-531

USB CONTROL ASSY- Pt No. 003-528

CONNECTOR ASSY- Pt No. 003-527

POWER SUPPLY ASSY- Pt No. 003-233

HEADPHONE SOCKET ASSY- Pt No. 003-530

ALLEN&HEATH

Parts identification sheet

 
XONE:4D

 
How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PART

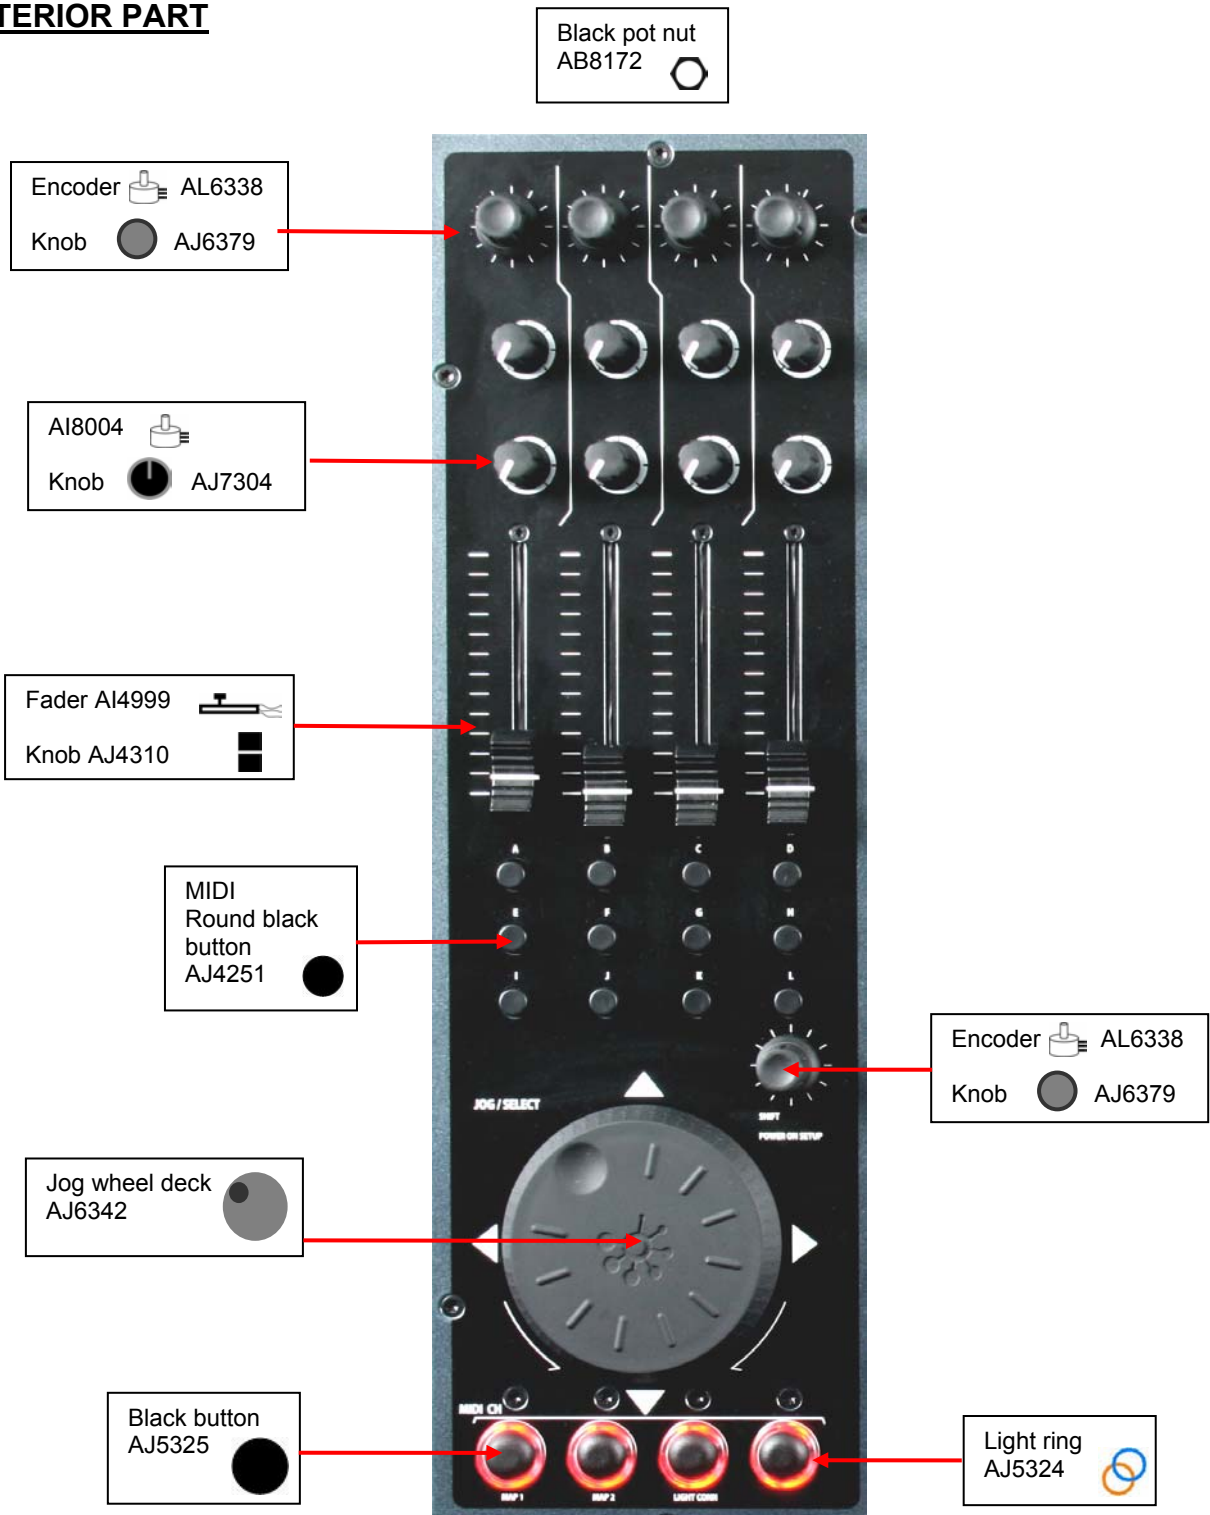

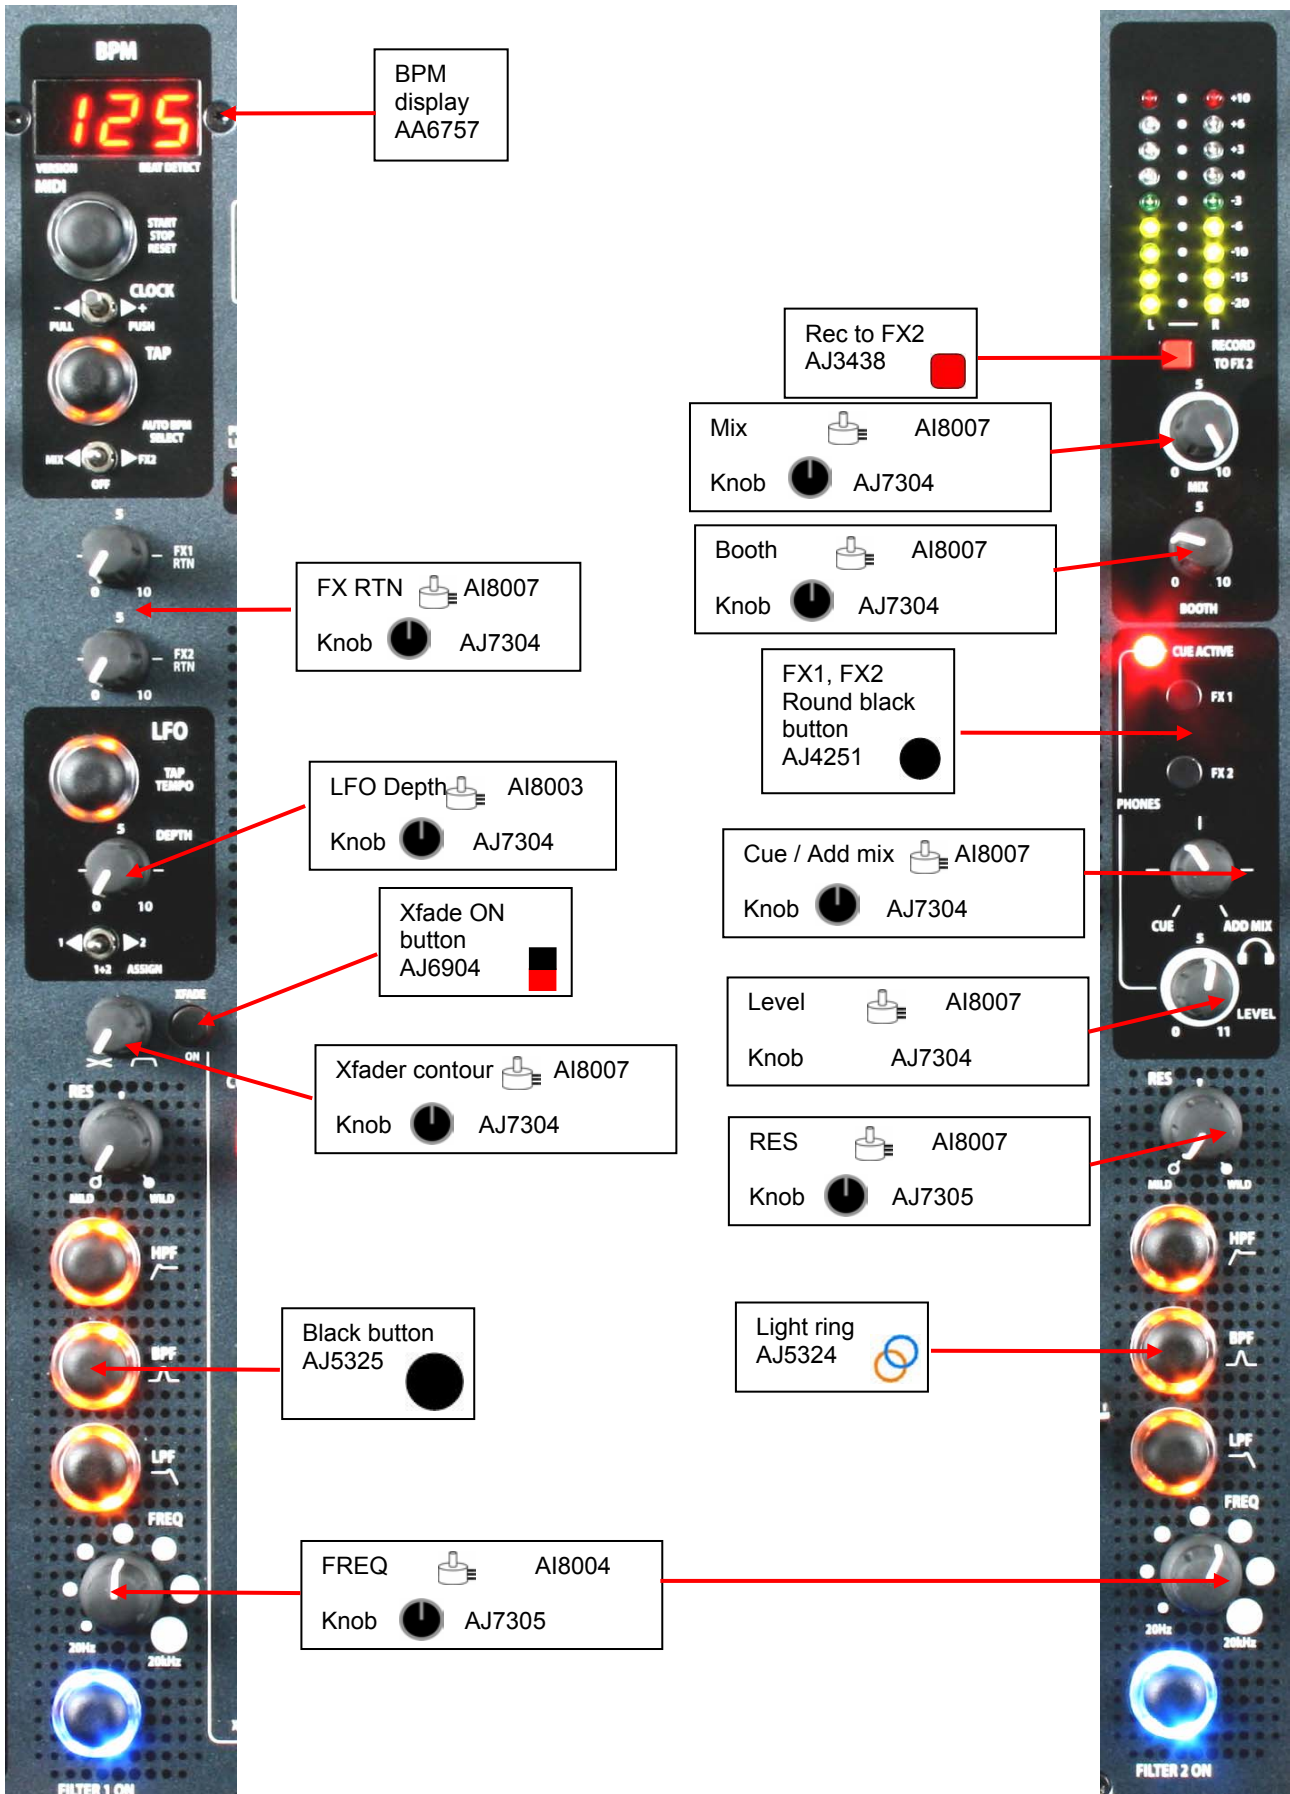





FX1 & 2  AI8007
 Knob  AJ7304



PH, LN, SC
 Round black
 button
 AJ4251 

HF, MF, LF  AI8007
 Knob  AJ7305

 
 
 
 
 
 
 
Pre black
 button
 AJ7286 

FX, CH,
 Pre button
 AJ5388 



Level  AI8006
 Knob  AJ7304


Up fader 003-860 
 Knob AJ5320 

X- fader 003-579 
 Knob AJ5320 

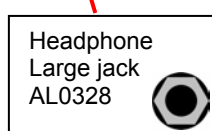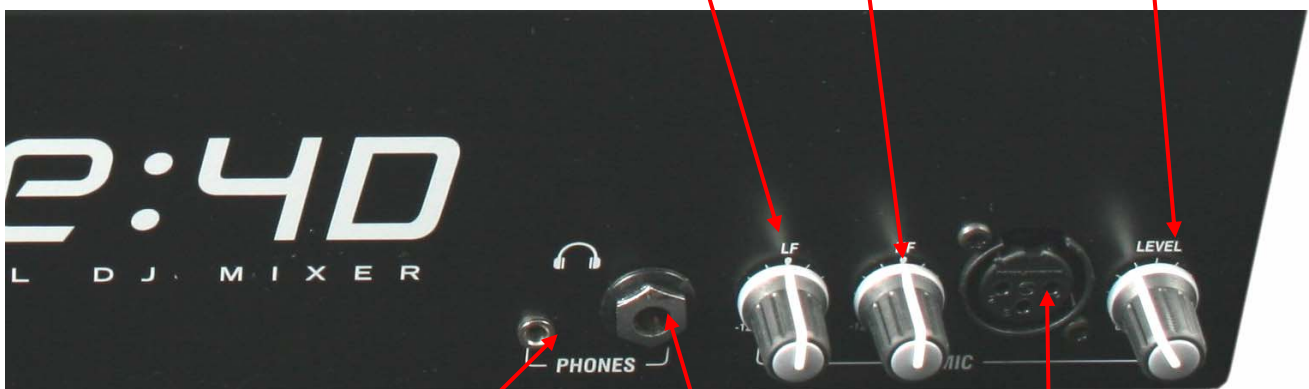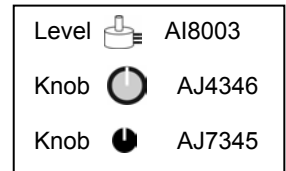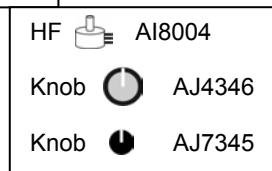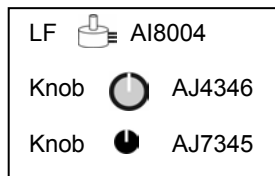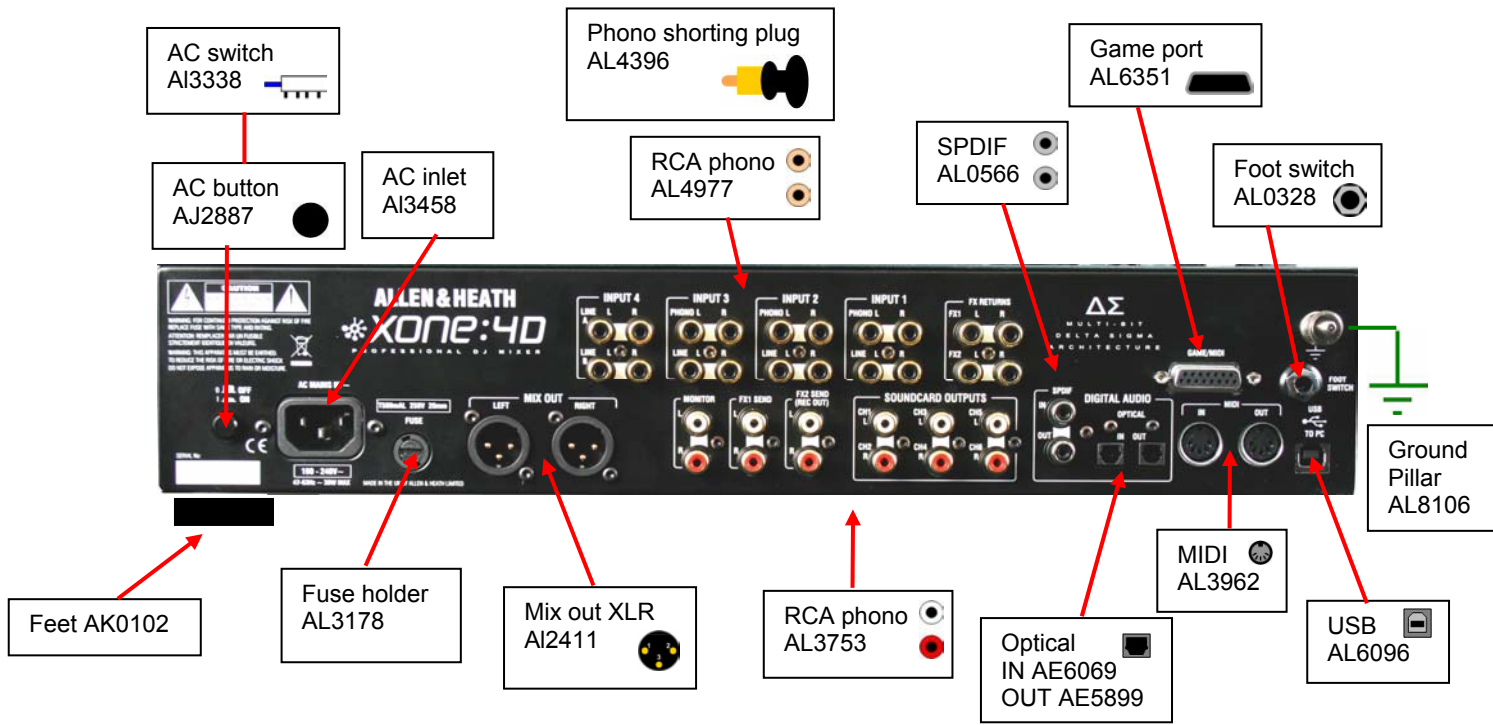

INTERIOR PARTS

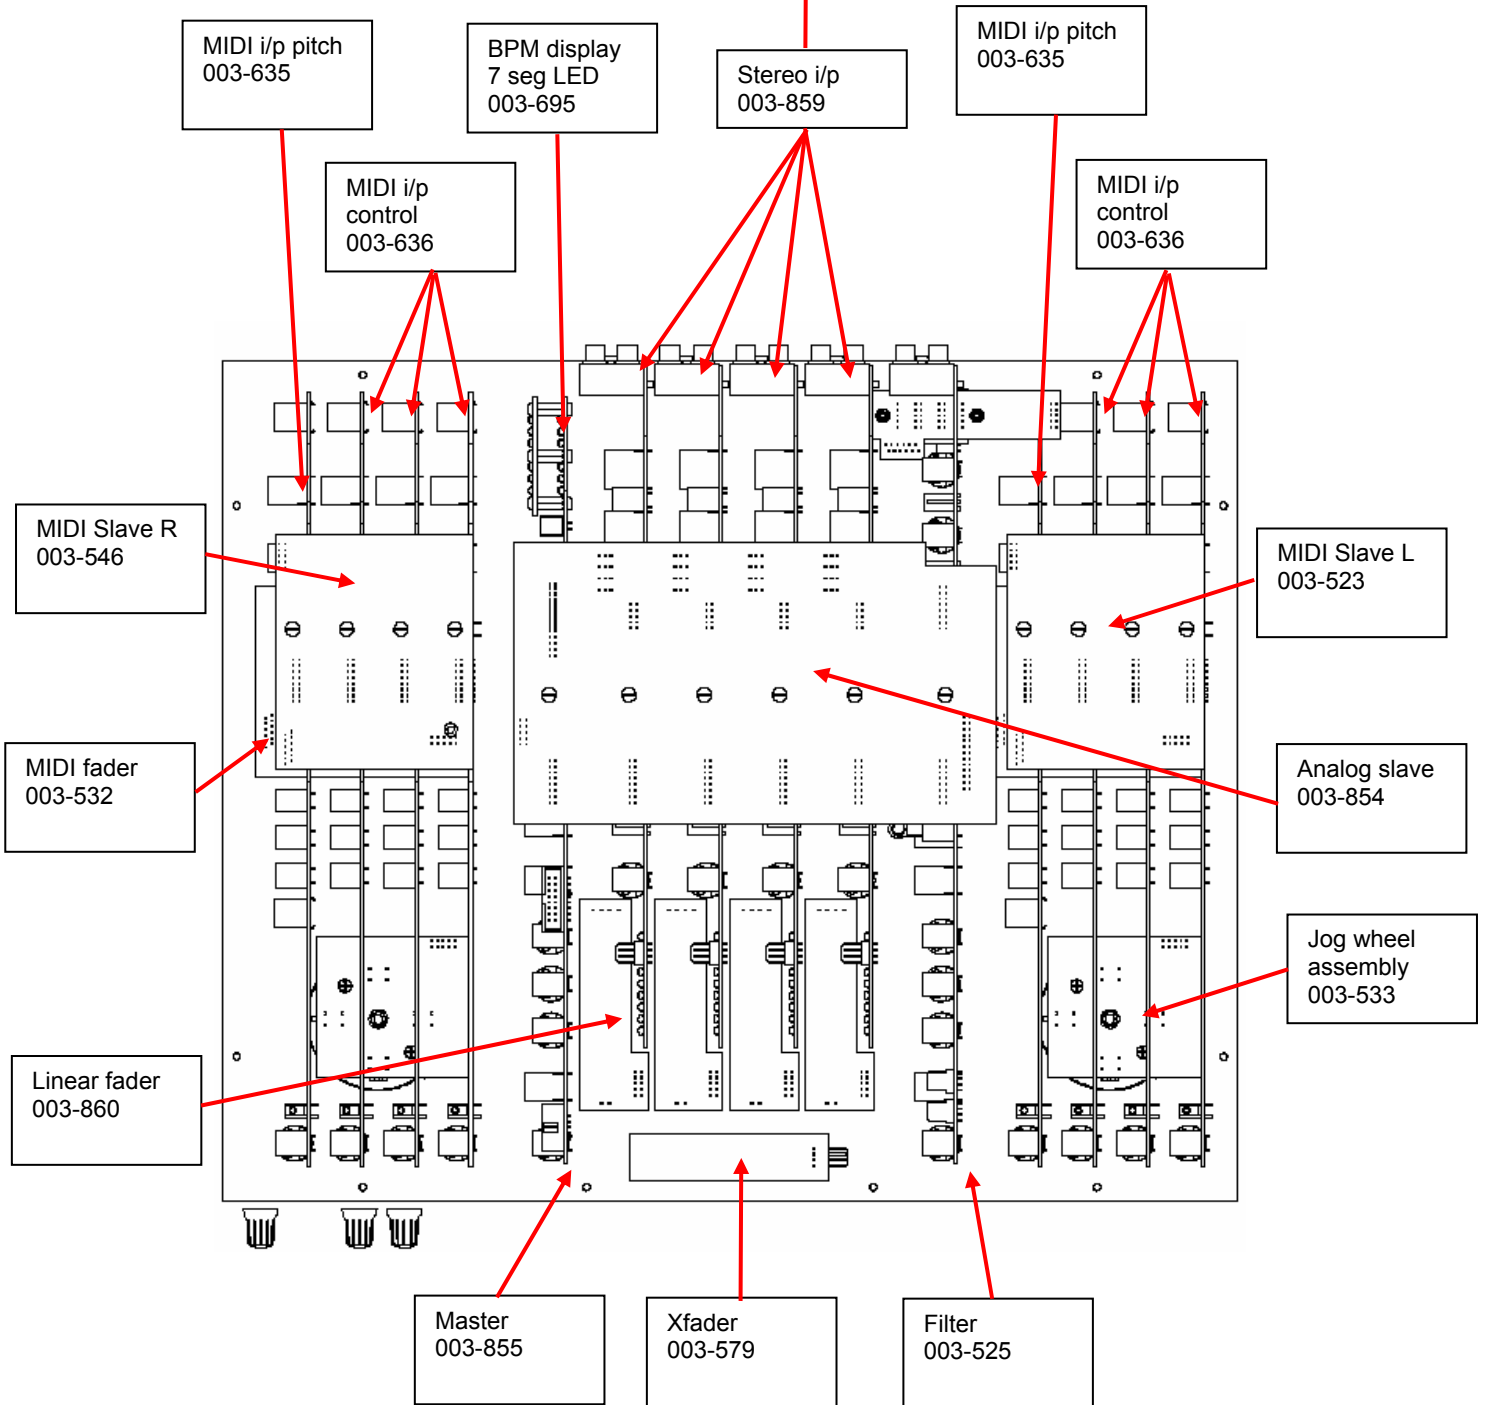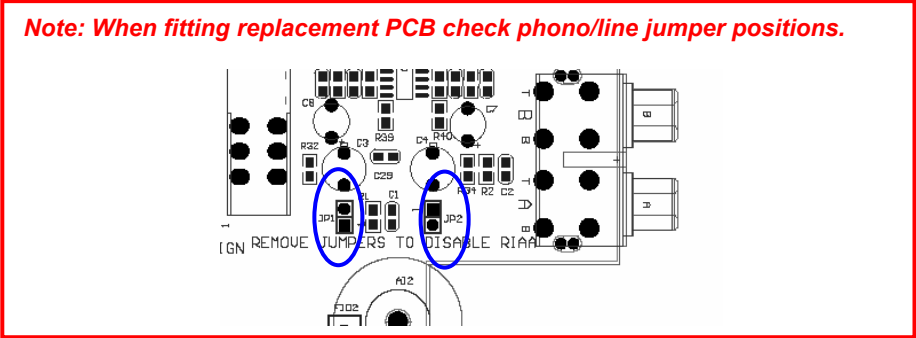  

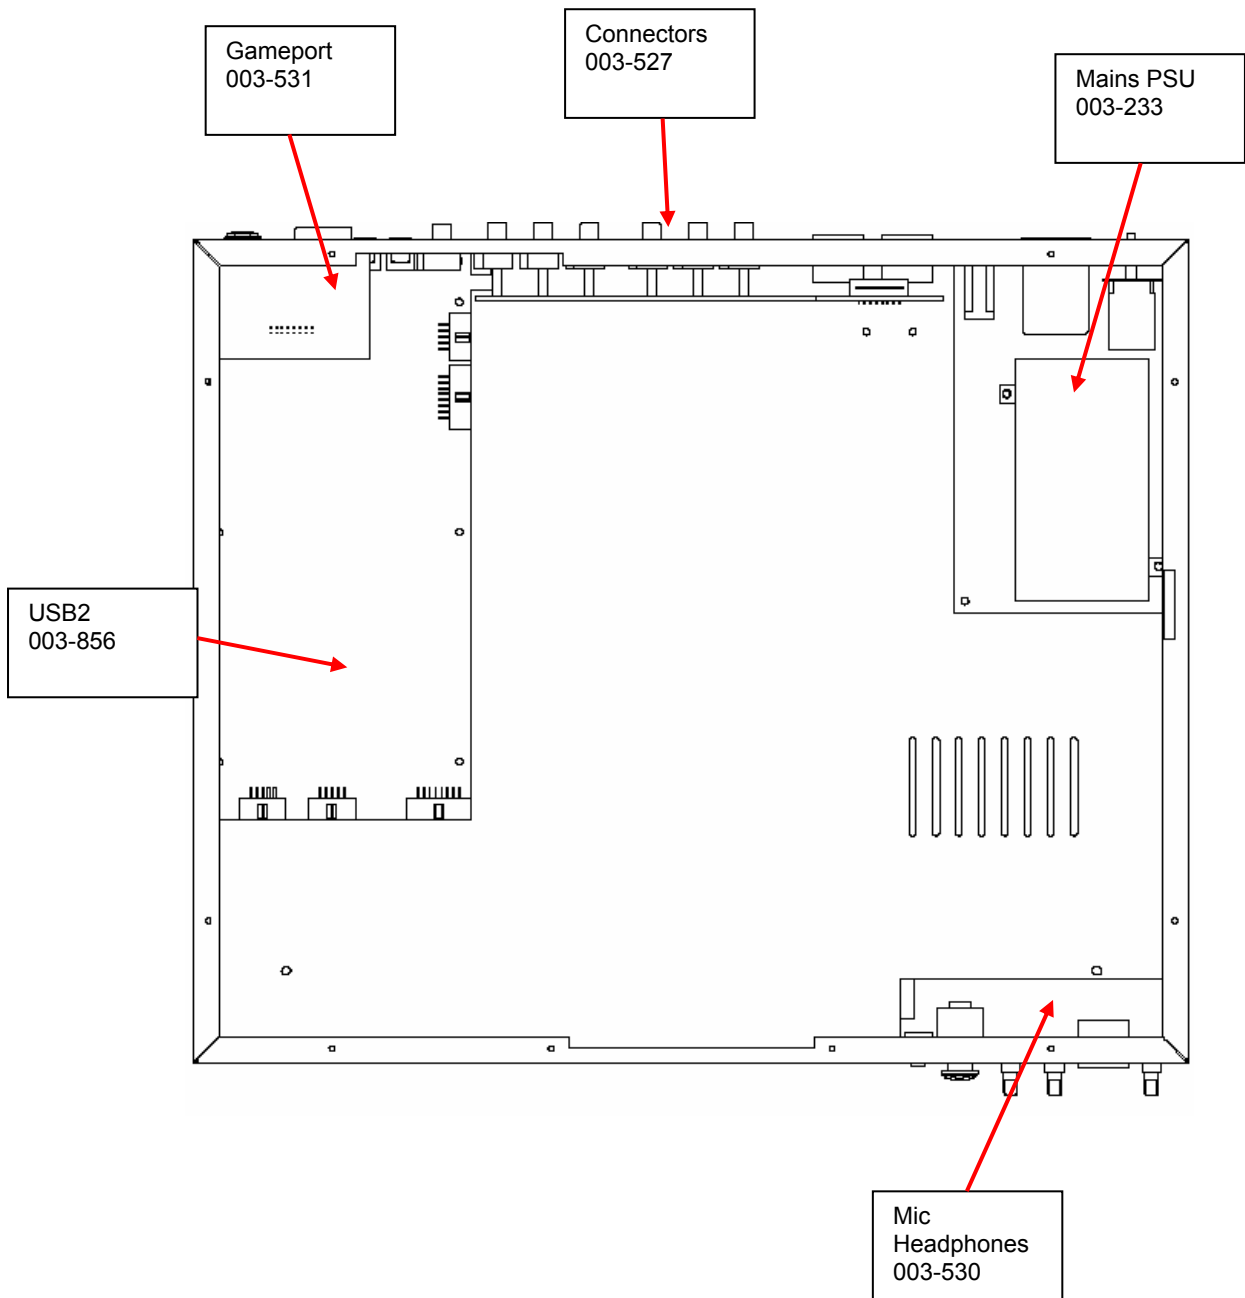 

HARNESSES:

AL5904- HEADPHONE → MASTER

AL5904- BPM 7 SEGMENT DISPLAY → USB CONTROL

AL5904- ANALOGUE SLAVE → POWER SUPPLY

AL5904- JOGWHEEL (L) → MIDI SLAVE (L)

AL5904- JOGWHEEL (R) → MIDI SLAVE (R)

AL4606- CONNECTOR → MASTER

AL4607-MIDI SLAVE (L) → USB CONTROL

AL6592- MIDI CONTROL (R) → USB CONTROL

AL7338- ANALOGUE SLAVE → USB CONTROL

AL6098- GAMEPORT → USB COTROL

AL3817- LINEAR FADER → INPUT

AL3817- X FADER → FILTER

AH2228 MIDI FADER → MIDI SLAVE

ALLEN & HEATH

Parts identification sheet

XONE:22

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

 
PARTS IDENTIFICATION

 
 
How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>


UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PARTS

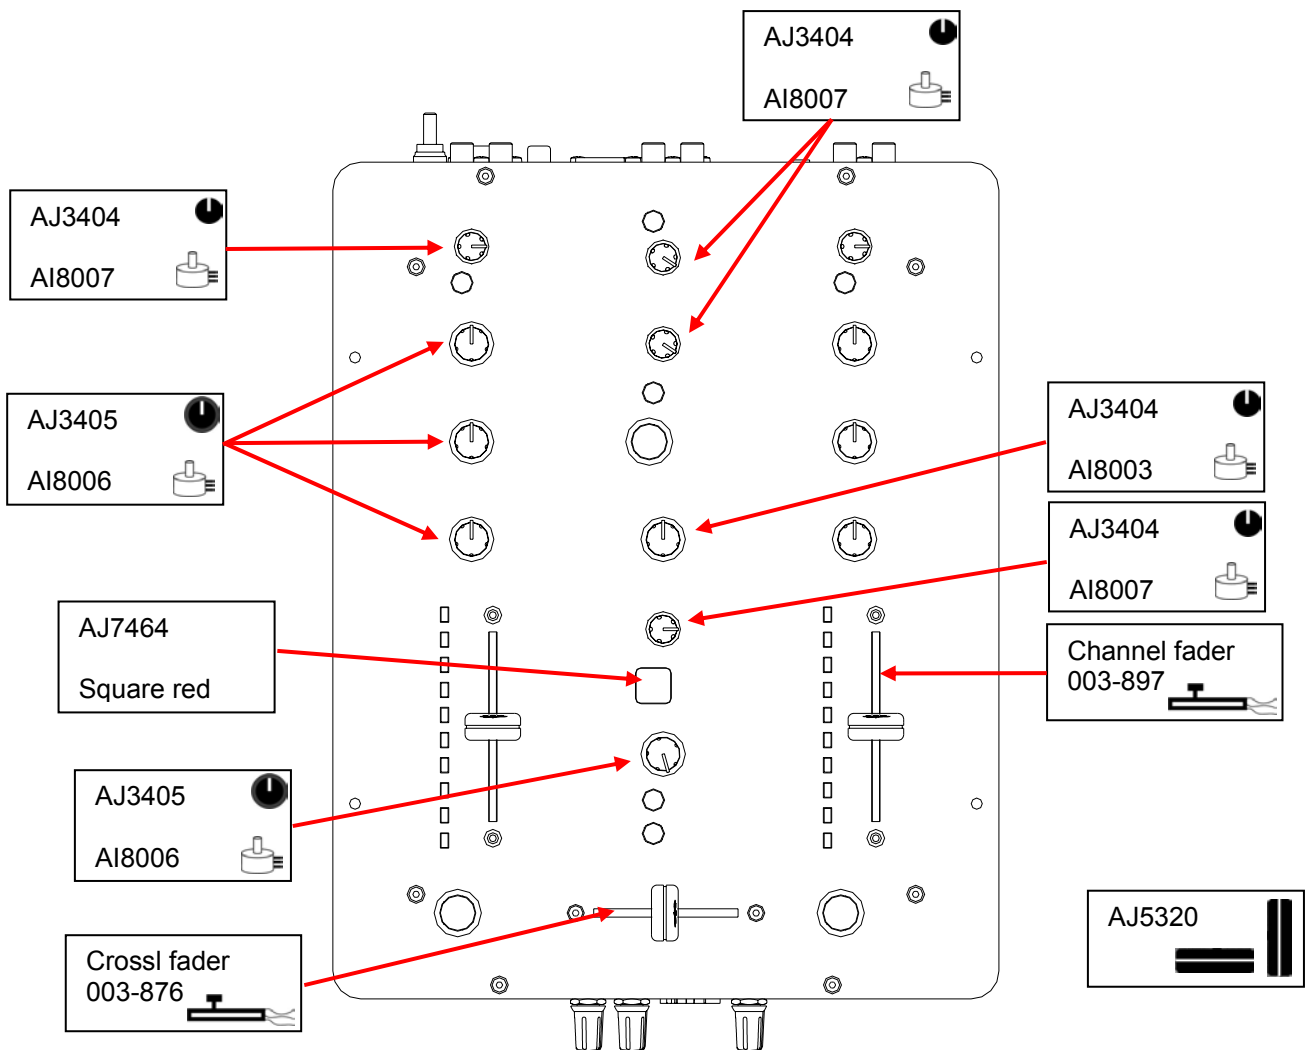


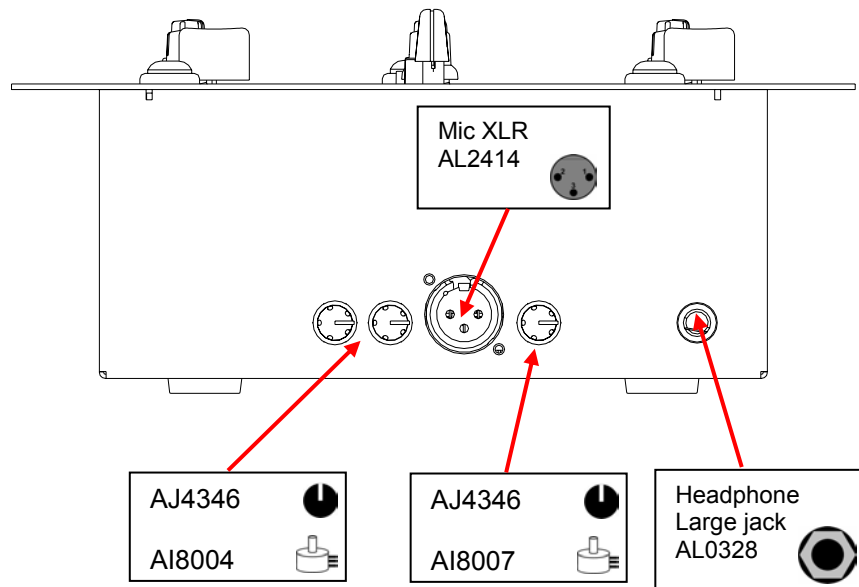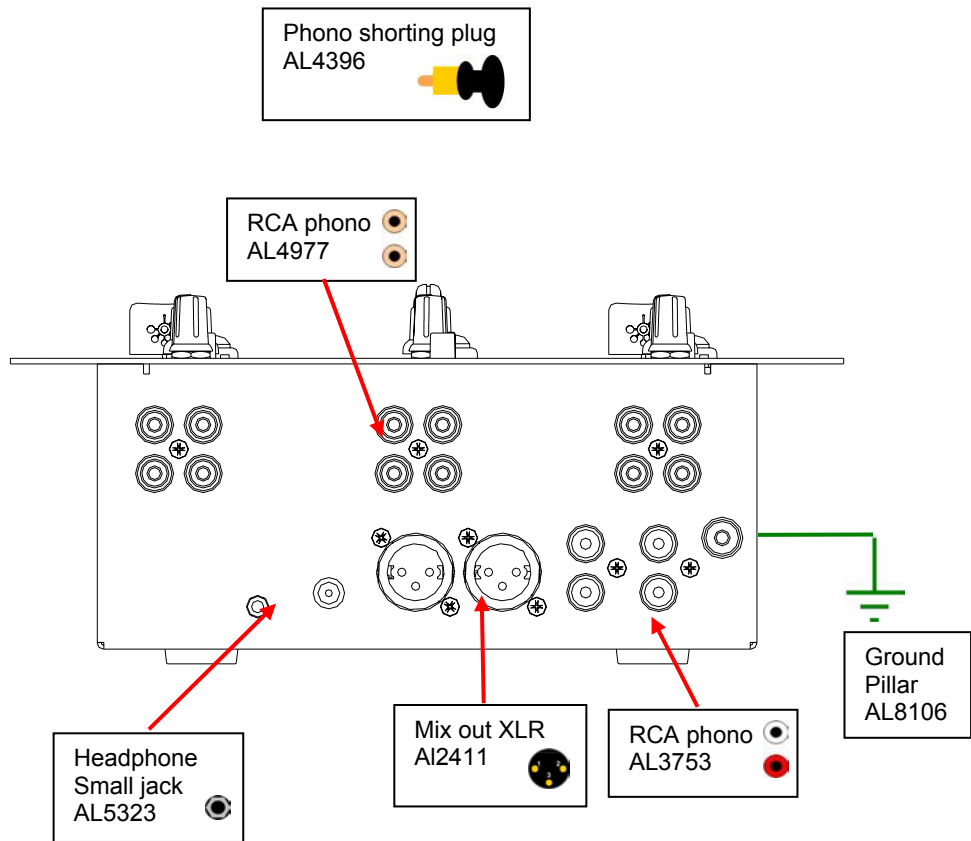


INTERIOR PARTS

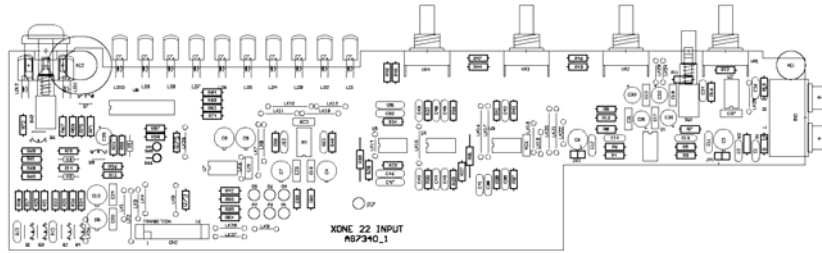 

Input 003-873

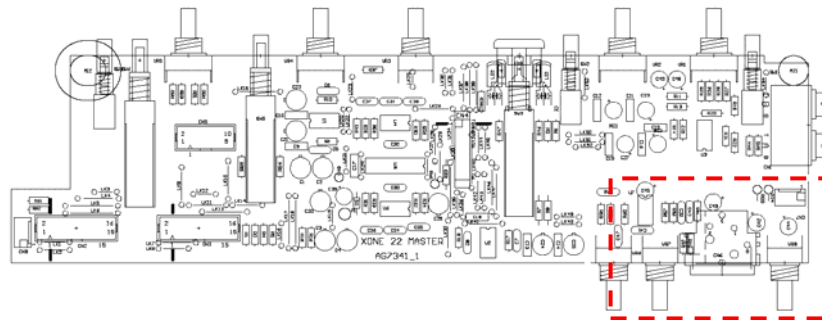 

Master 003-874
Mic is break off - - - - -

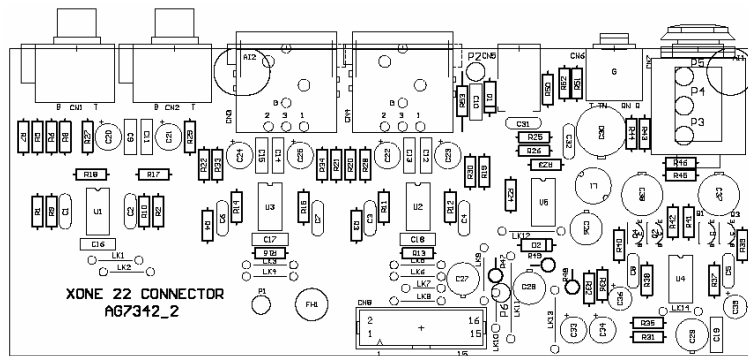 

Connector 003-875

ALLEN&HEATH

Parts identification sheet

Xone:32

 
How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>


UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PARTS:


STEREO INPUT CHANNEL

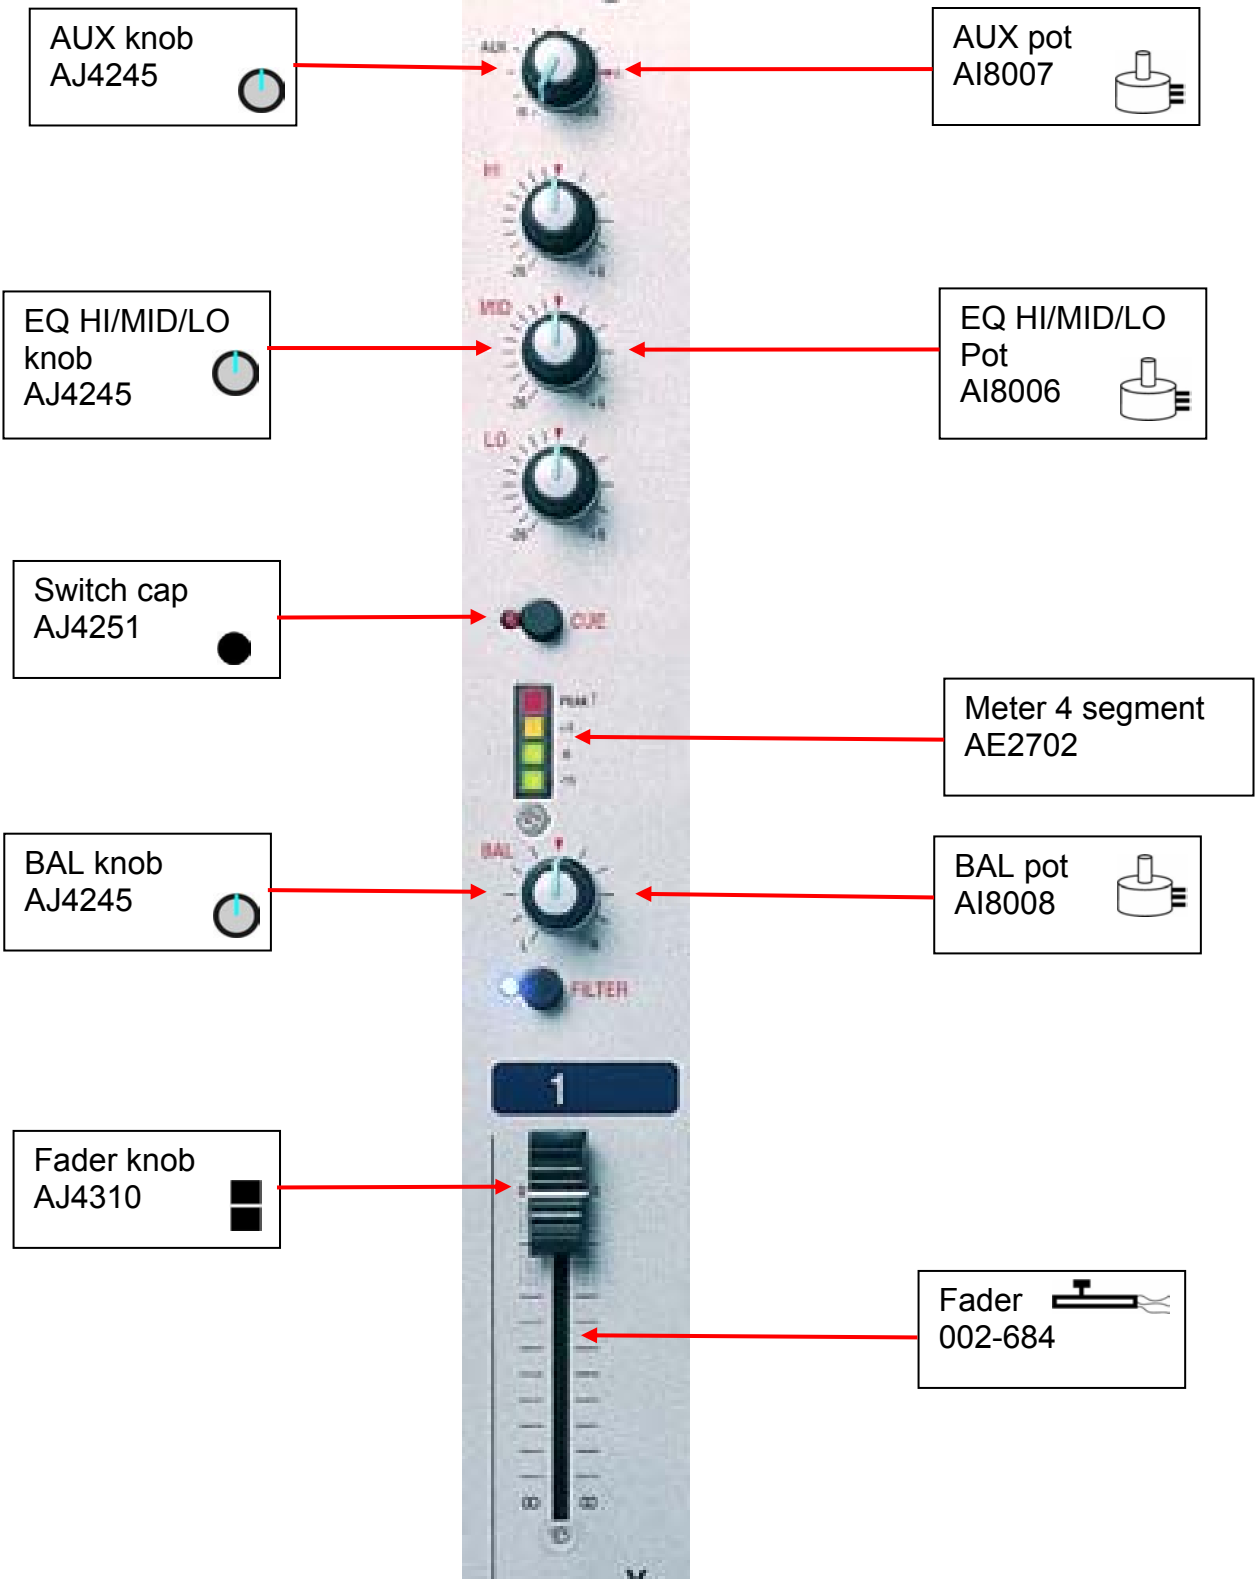

MASTER SECTION

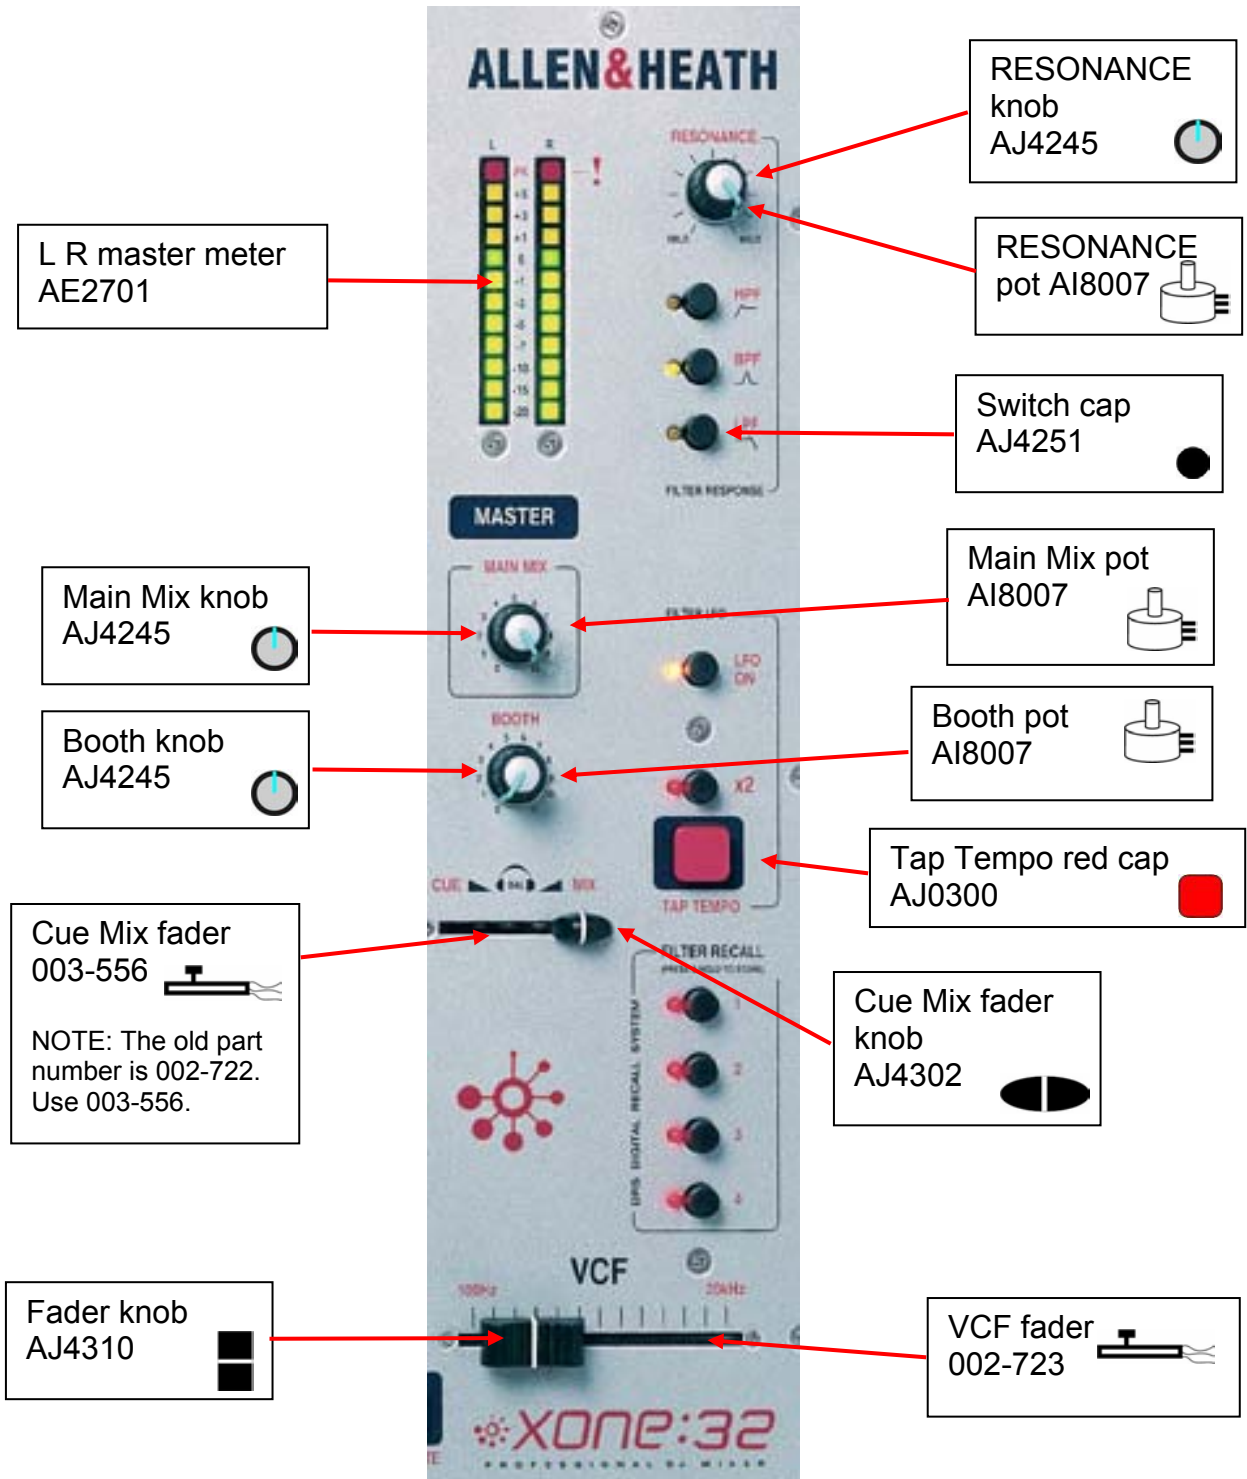 

CROSS FADER / TRANSMUTE

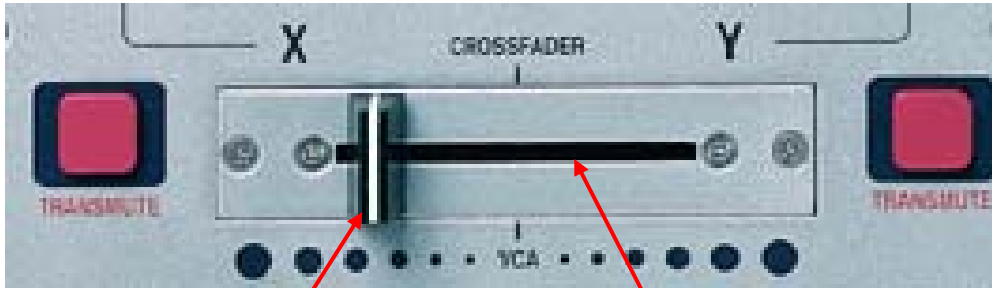 

xfader knob XONE
AJ5320


X fader assembly





Alpha 002-784

P&G 002-719

 
RACK MOUNT EARS

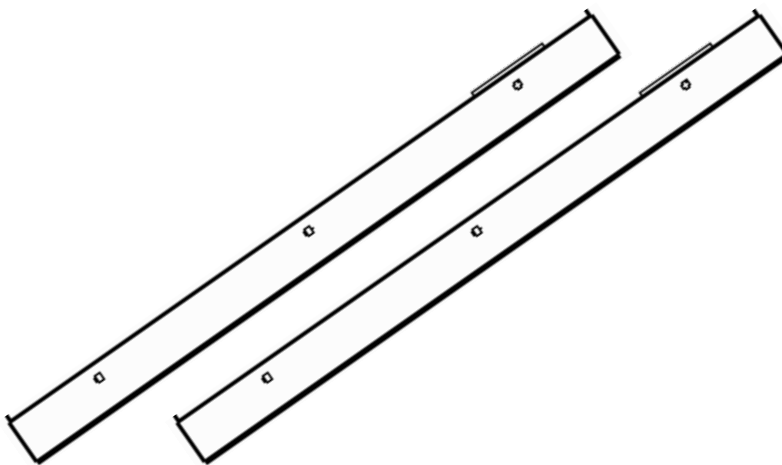

XONE:32-RK

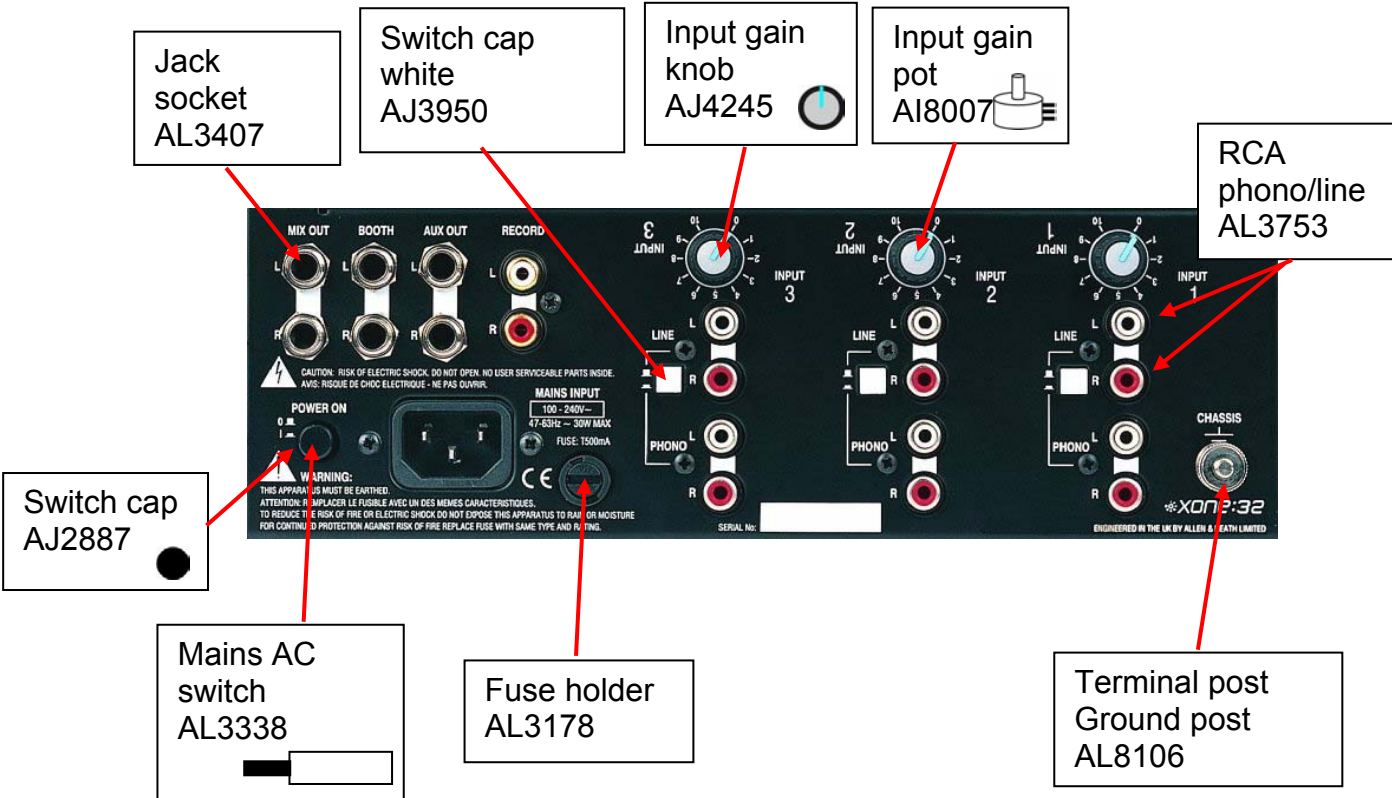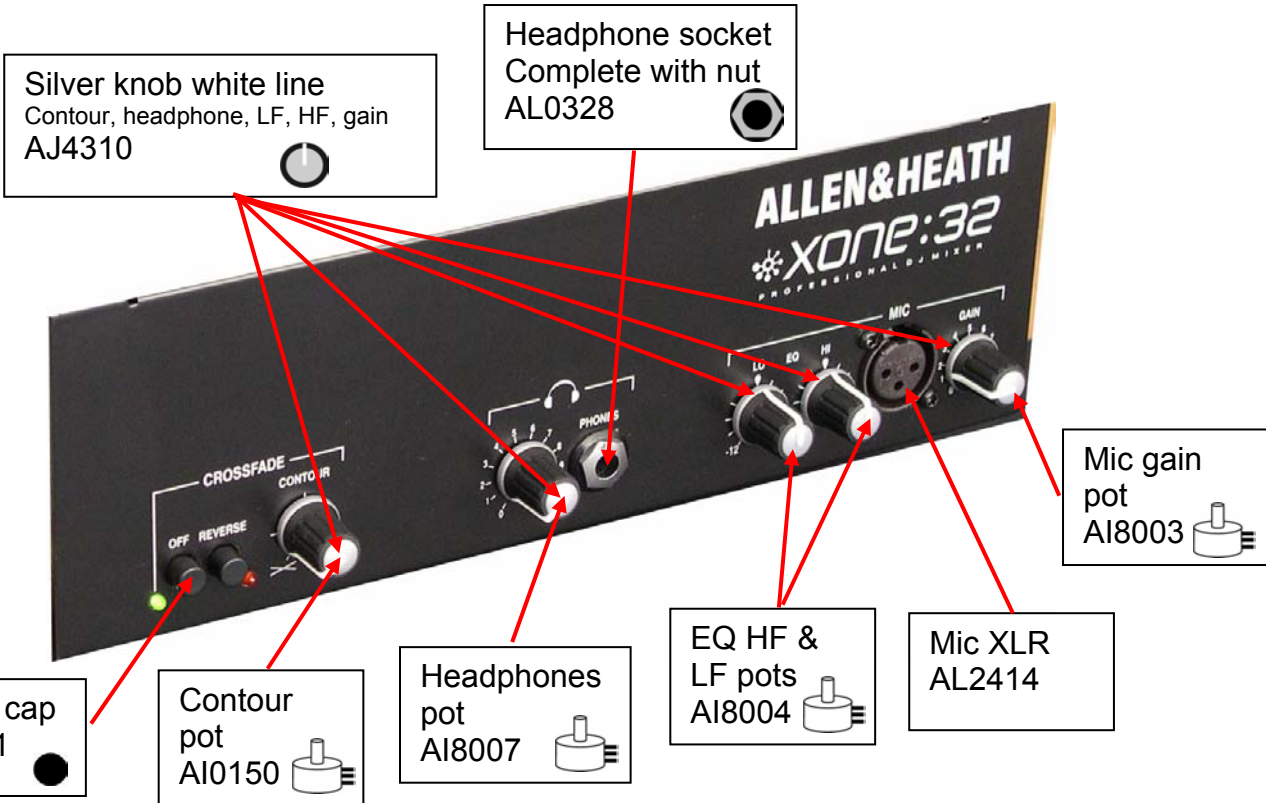  


INTERIOR PARTS:

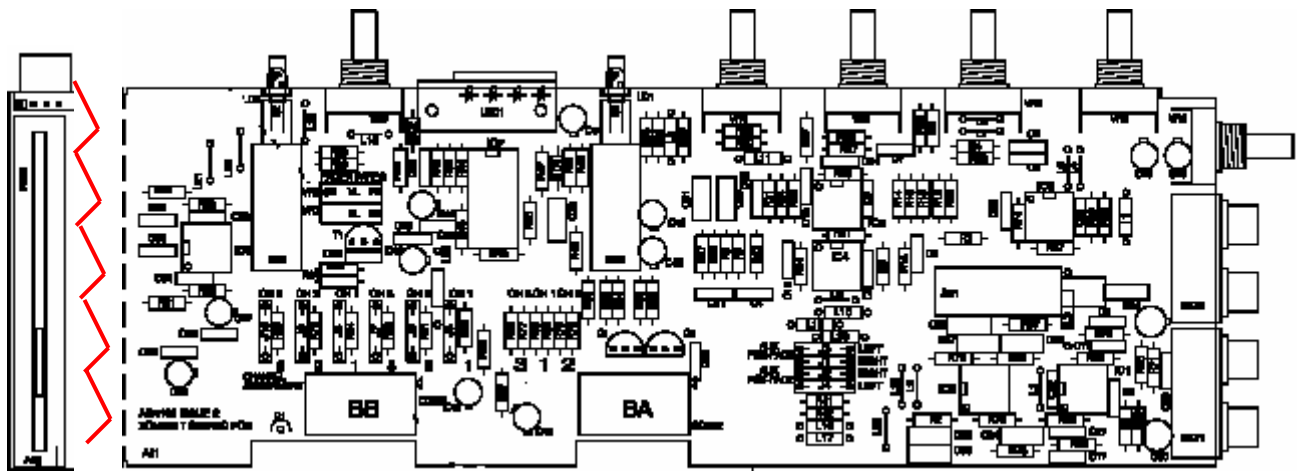 

Channel fader PCB
is a snap off

 
Stereo input / channel fader
 Channel 1 002- 679
 Channel 2 002- 680
 Channel 3 002- 704

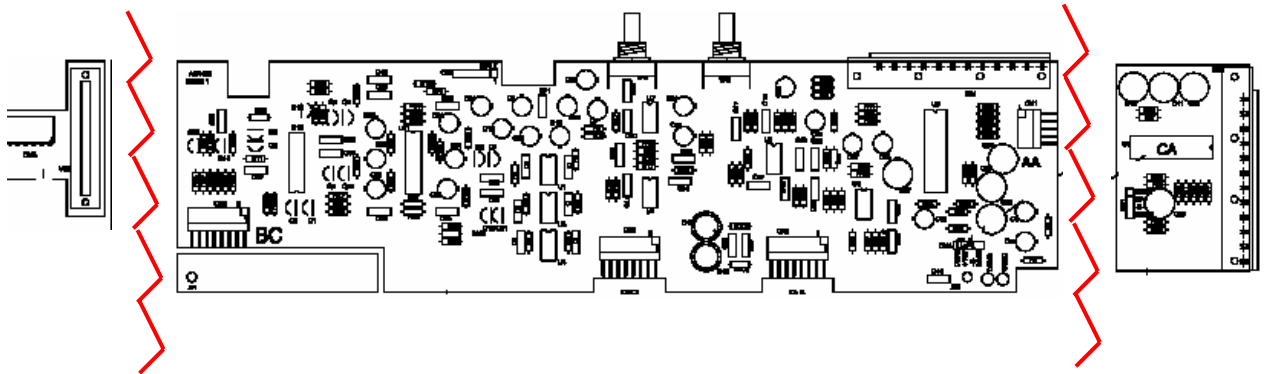

Cue-Mix PCB is a
snap off


Master Left / Cue-Mix / Right meter
002-678

 Right meter PCB is
a snap off

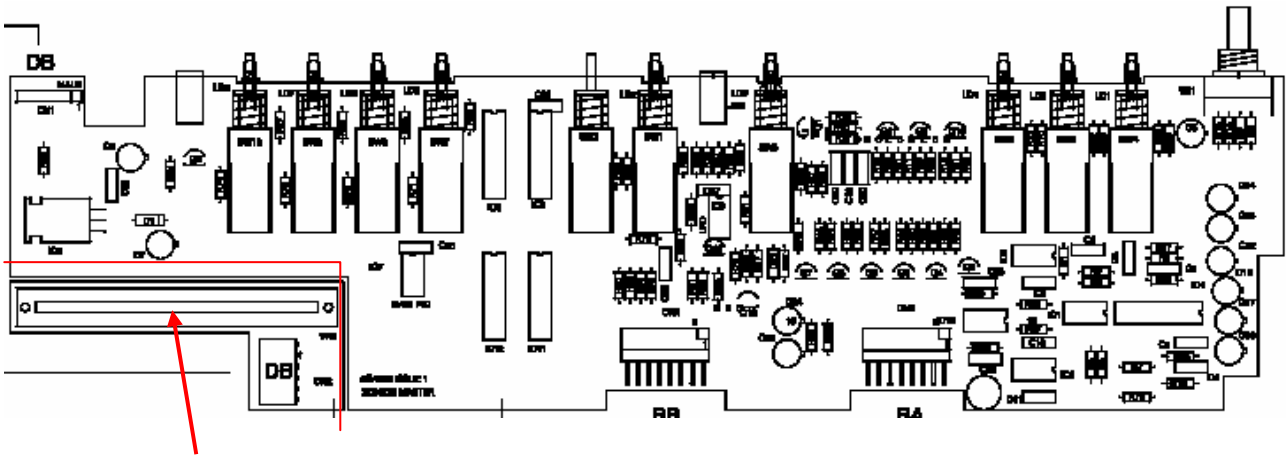

VCF PCB is a snap off

 
MASTER / VCF 002-677

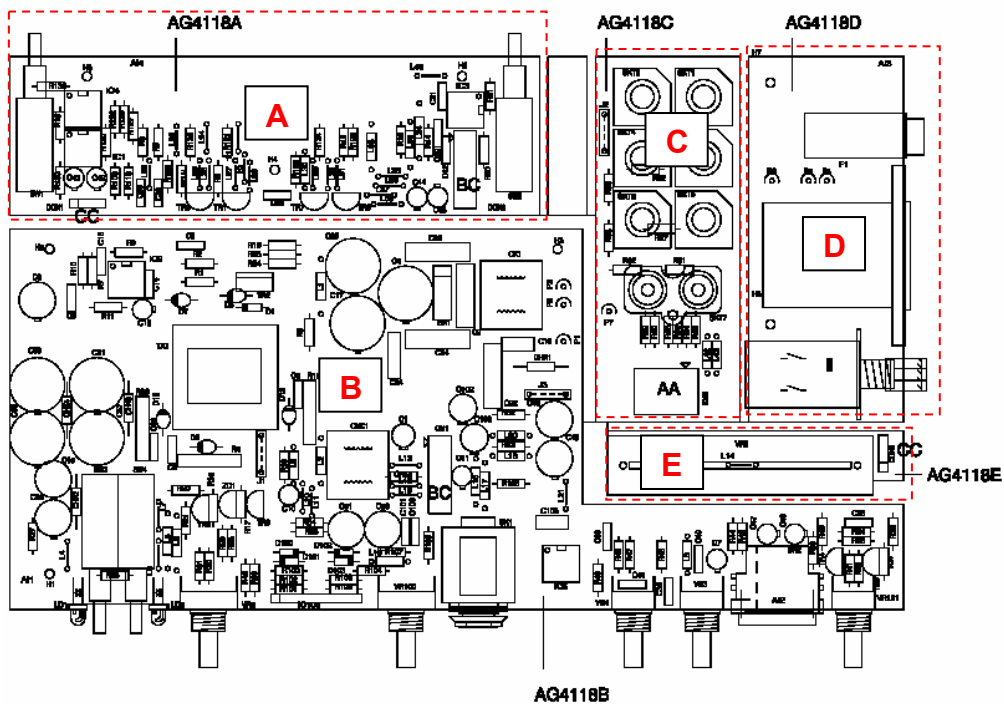


X-fader / PSU 002-682
Contains

Transmute A
PSU B
Main connectors C
AC mains socket and switch D
X-fader E

 Harnesses:

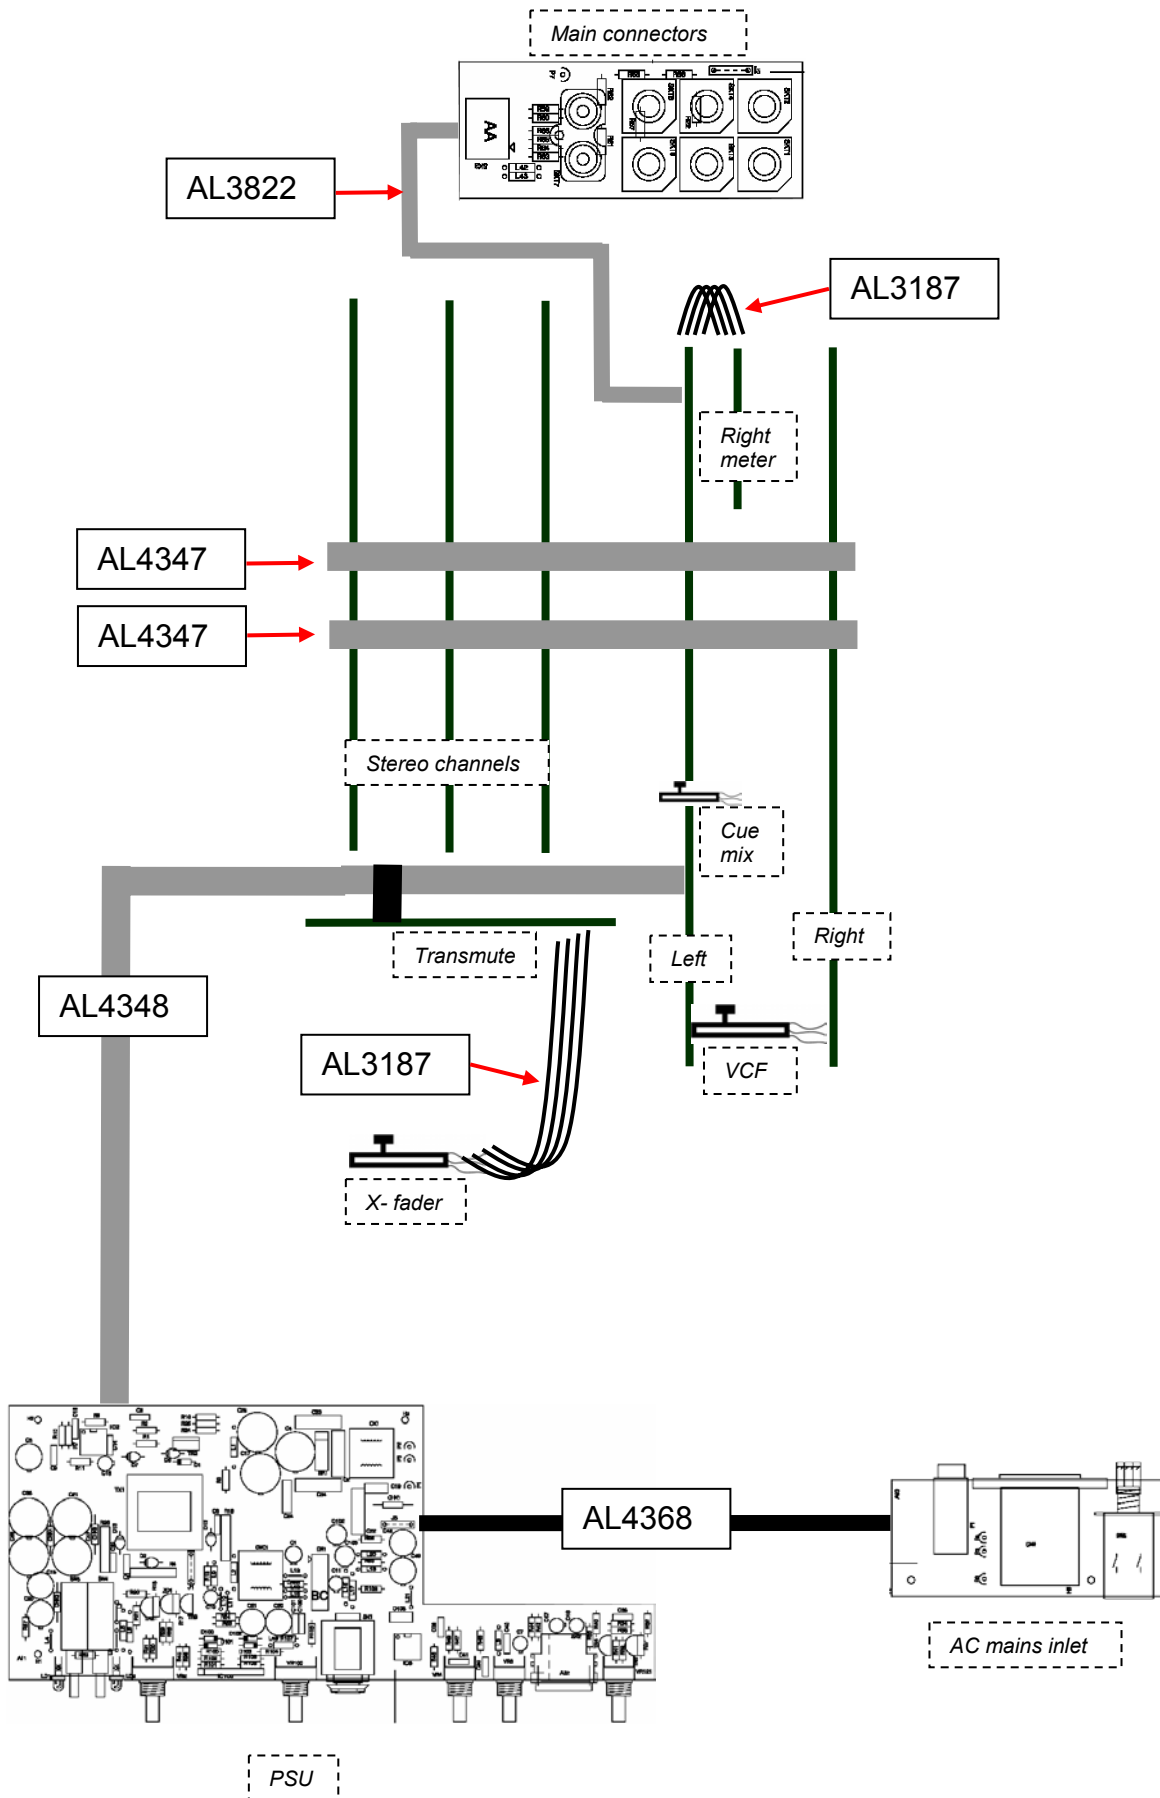

Xone:42- Surface Parts Identification

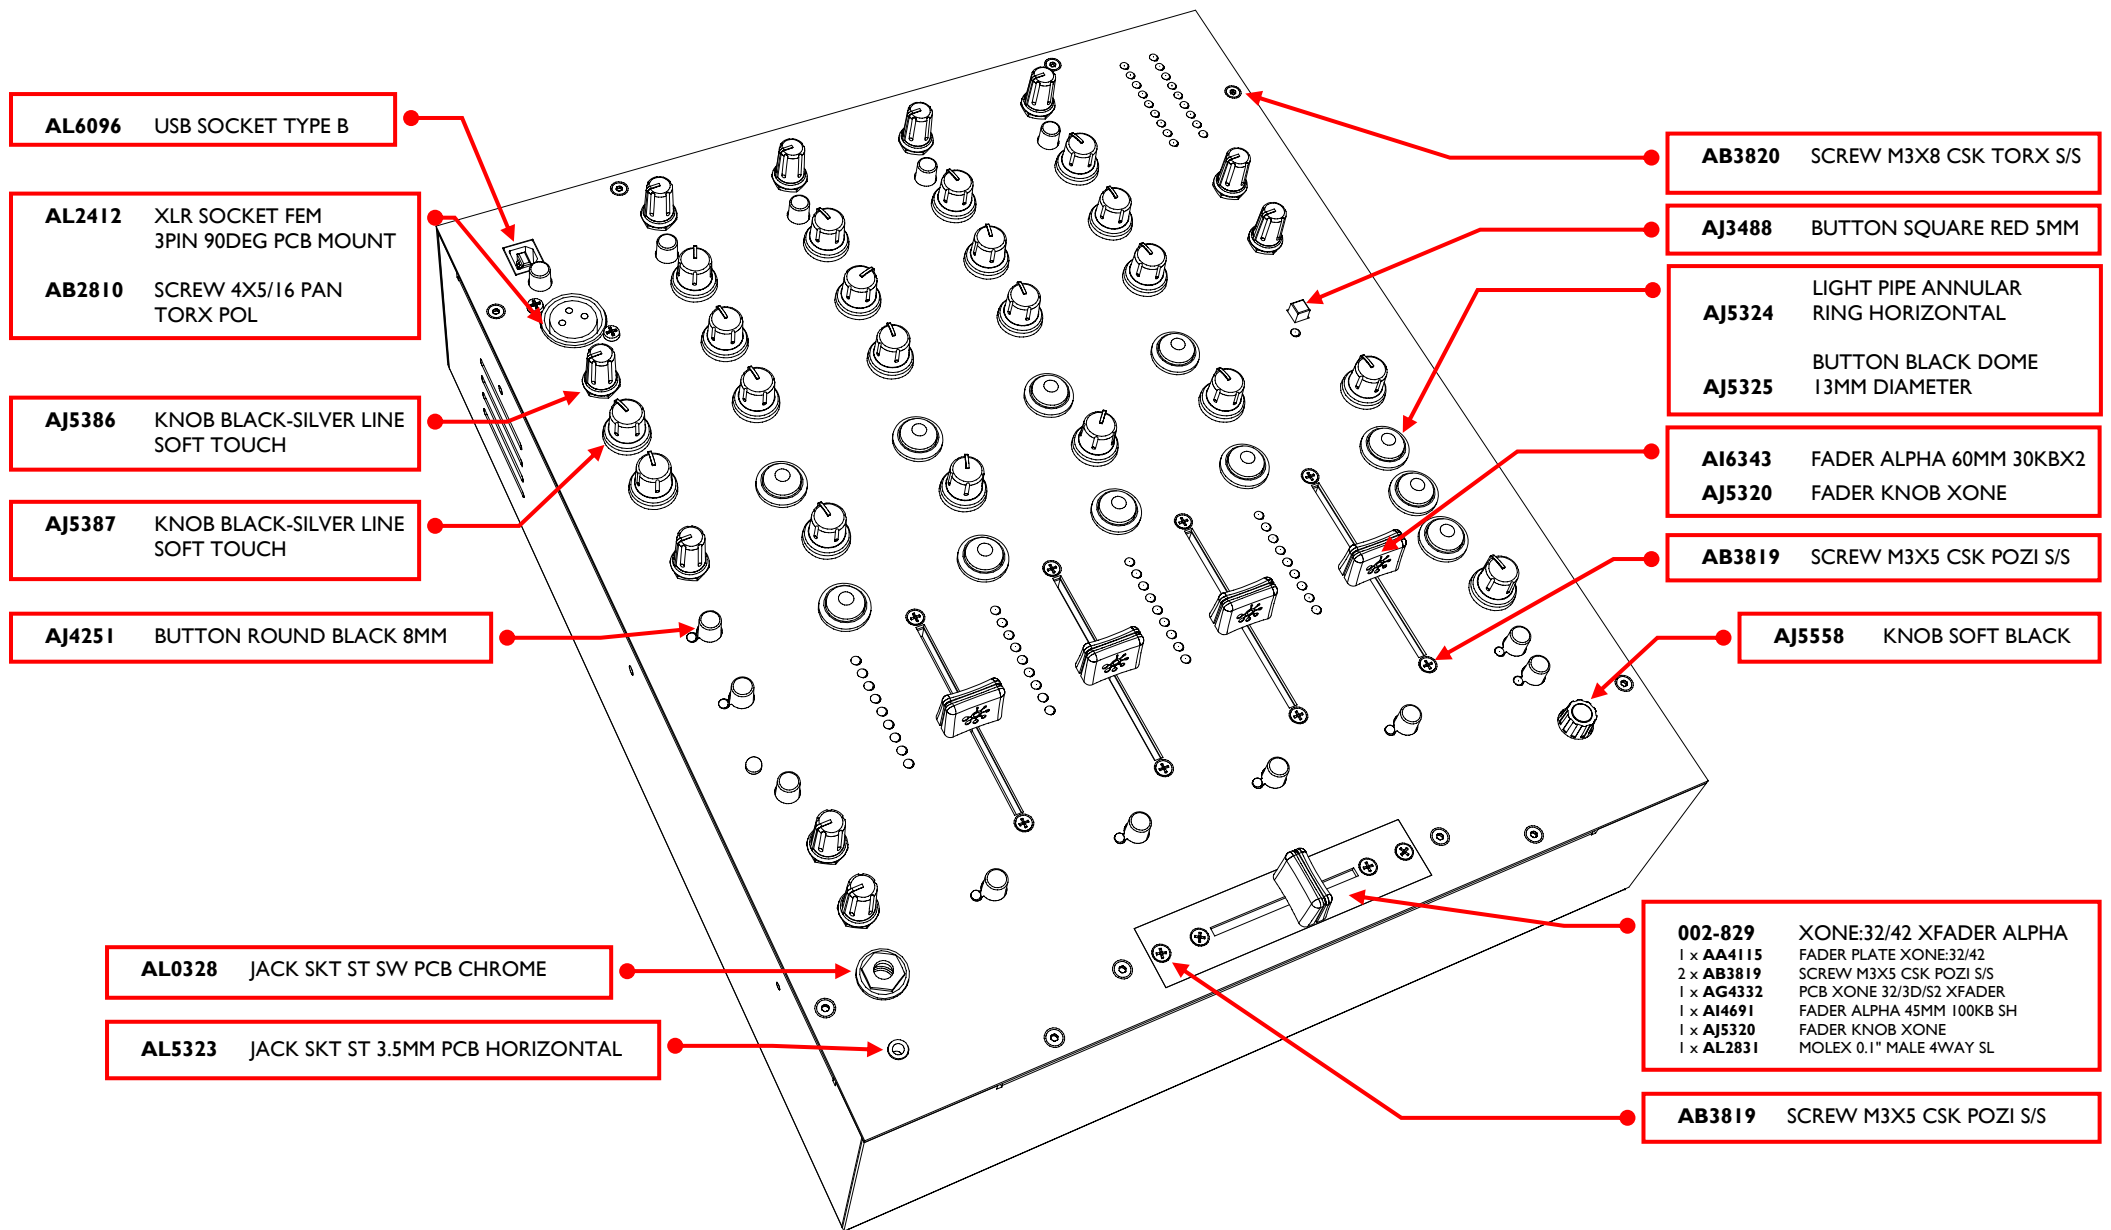 

AL6096 USB SOCKET TYPE B

AL2412 XLR SOCKET FEM
3PIN 90DEG PCB MOUNT

AB2810 SCREW 4X5/16 PAN
TORX POL

AJ5386 KNOB BLACK-SILVER LINE
SOFT TOUCH

AJ5387 KNOB BLACK-SILVER LINE
SOFT TOUCH

AJ4251 BUTTON ROUND BLACK 8MM

AL0328 JACK SKT ST SW PCB CHROME

AL5323 JACK SKT ST 3.5MM PCB HORIZONTAL

AB3820 SCREW M3X8 CSK TORX S/S

AJ3488 BUTTON SQUARE RED 5MM

AJ5324 LIGHT PIPE ANNULAR
RING HORIZONTAL

AJ5325 BUTTON BLACK DOME
13MM DIAMETER

AI6343 FADER ALPHA 60MM 30KBX2

AJ5320 FADER KNOB XONE

AB3819 SCREW M3X5 CSK POZI S/S

AJ5558 KNOB SOFT BLACK

002-829 XONE:32/42 XFADER ALPHA

1 x **AA4115** FADER PLATE XONE:32/42

2 x **AB3819** SCREW M3X5 CSK POZI S/S

1 x **AG4332** PCB XONE 32/3D/S2 XFADER

 
1 x **AI4691** FADER ALPHA 45MM 100KB SH

1 x **AJ5320** FADER KNOB XONE

1 x **AL2831** MOLEX 0.1" MALE 4WAY SL

AB3819 SCREW M3X5 CSK POZI S/S

Xone:42 - Internal Parts Identification

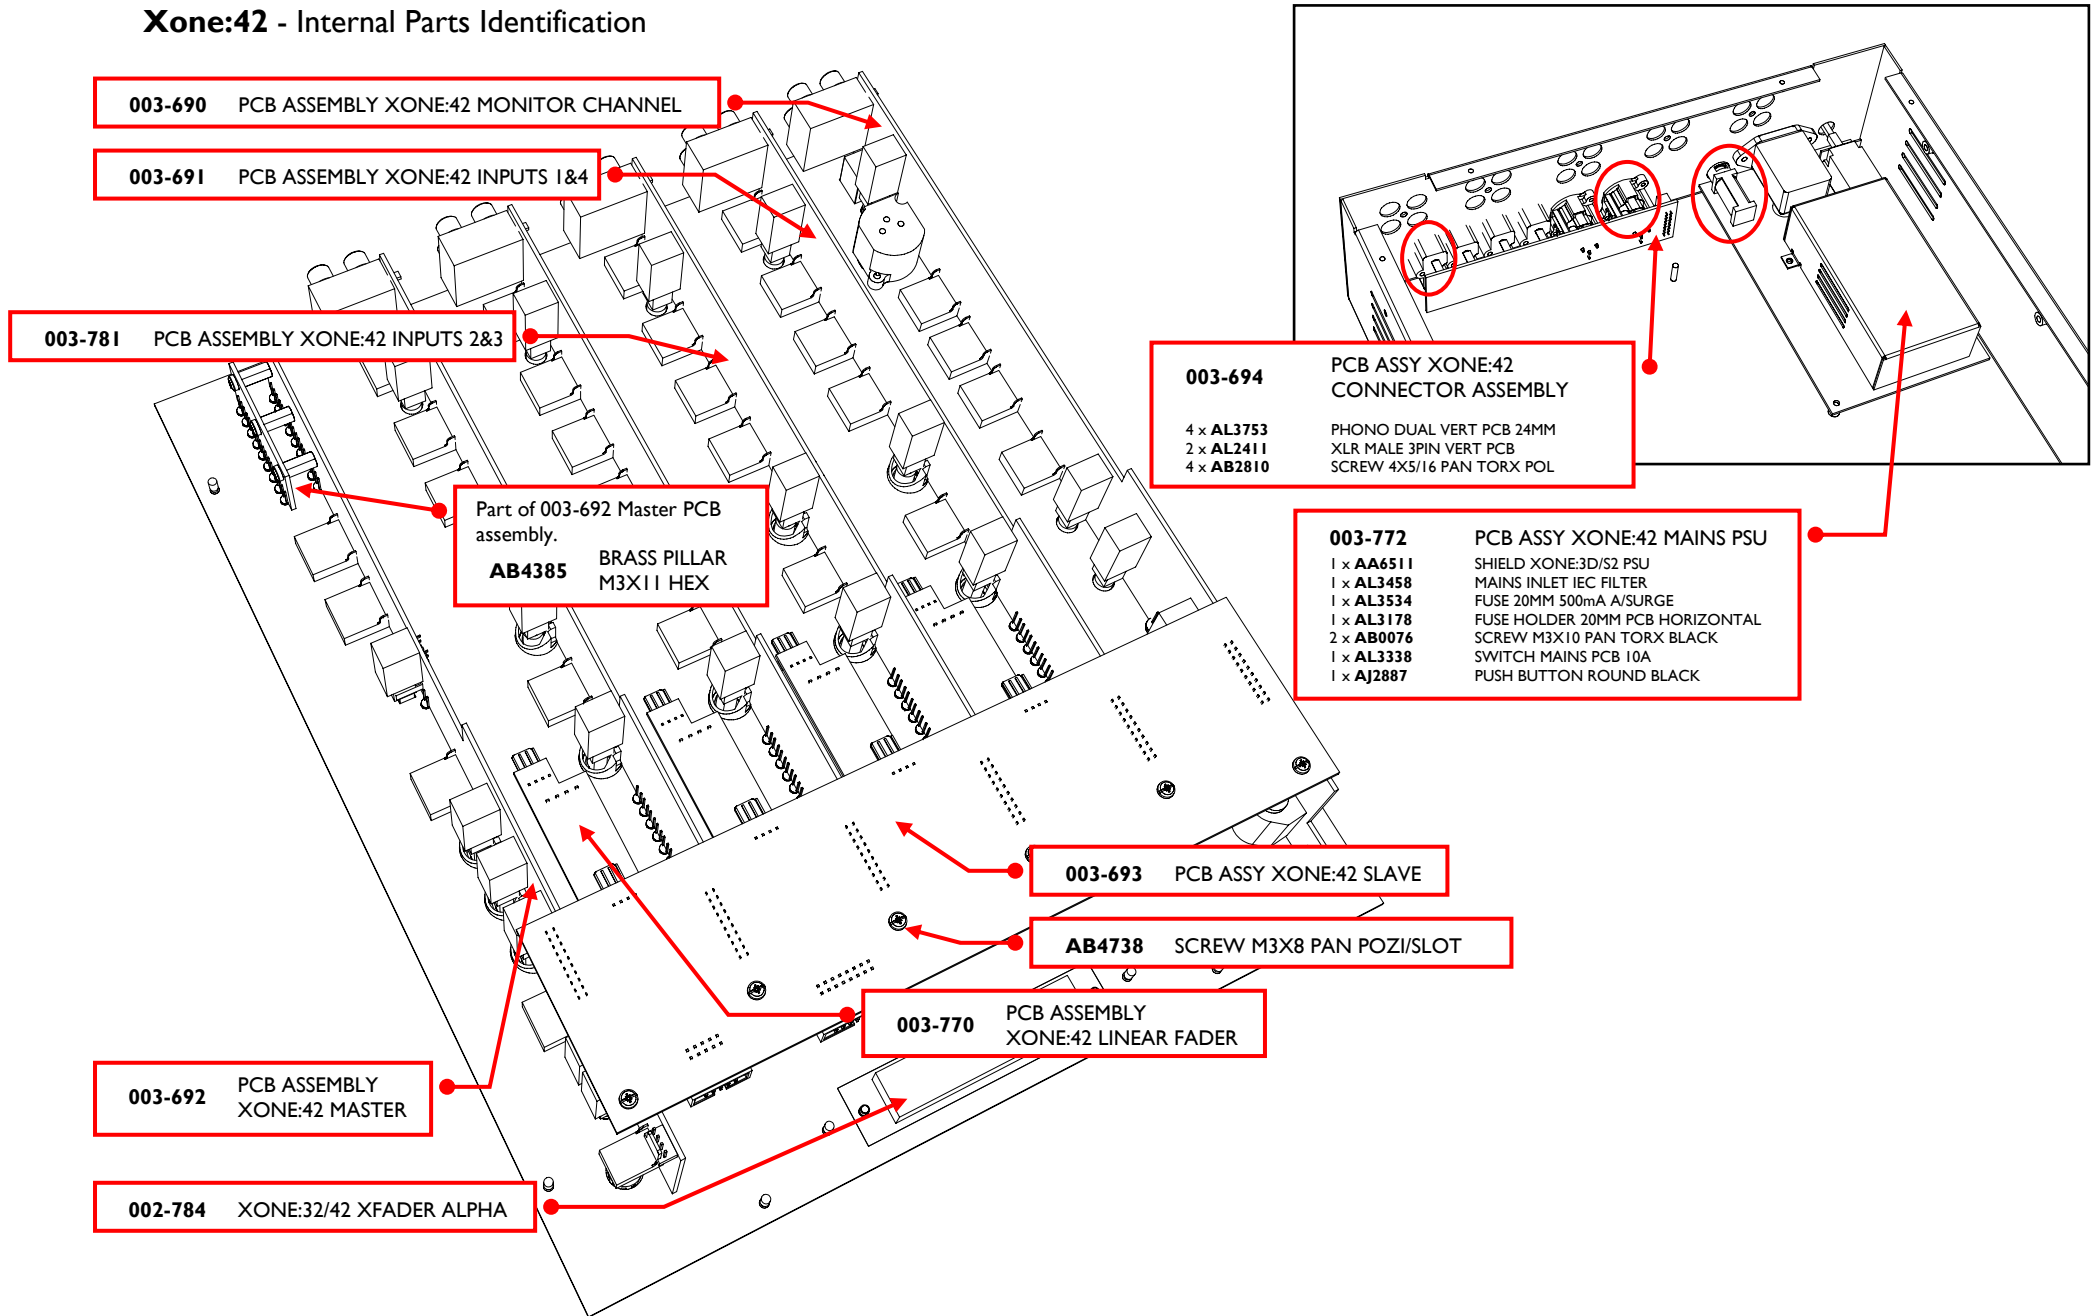

003-690 PCB ASSEMBLY XONE:42 MONITOR CHANNEL

003-691 PCB ASSEMBLY XONE:42 INPUTS 1&4

003-781 PCB ASSEMBLY XONE:42 INPUTS 2&3

Part of 003-692 Master PCB assembly.
AB4385 BRASS PILLAR M3X11 HEX

003-694 PCB ASSY XONE:42 CONNECTOR ASSEMBLY
4 x **AL3753** PHONO DUAL VERT PCB 24MM
2 x **AL2411** XLR MALE 3PIN VERT PCB
4 x **AB2810** SCREW 4X5/16 PAN TORX POL

003-772 PCB ASSY XONE:42 MAINS PSU
1 x **AA6511** SHIELD XONE:3D/S2 PSU
1 x **AL3458** MAINS INLET IEC FILTER
1 x **AL3534** FUSE 20MM 500mA A/SURGE
1 x **AL3178** FUSE HOLDER 20MM PCB HORIZONTAL
2 x **AB0076** SCREW M3X10 PAN TORX BLACK
1 x **AL3338** SWITCH MAINS PCB 10A
1 x **AJ2887** PUSH BUTTON ROUND BLACK

003-693 PCB ASSY XONE:42 SLAVE

AB4738 SCREW M3X8 PAN POZI/SLOT

003-770 PCB ASSEMBLY XONE:42 LINEAR FADER

003-692 PCB ASSEMBLY XONE:42 MASTER

002-784 XONE:32/42 XFADER ALPHA

ALLEN&HEATH

Parts identification sheet

XONE2:62

Silver & Storm Grey

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PARTS:

MIC channel

PRE switch cap
 Silver AJ2052
 Storm grey AJ7210

MIC Line switch cap
 Silver AJ2960
 Storm grey AJ7211

EQ switch cap
 AJ4251

Channel meter
 AE2702

Meter screw
 Silver AB3821
 Storm grey AB0059

Fader knob
 AJ4310

Pot nut
 AB8172

AUX pot
 AI8007

Silver / blue line knob
 AJ4245
 Black / white line knob
 AJ7304

GAIN pot
 AI8006

HI, MID1, MID2,
 LO pot
 AI8006

Silver / blue line knob
 AJ4245
 Black / white line knob
 AJ7305

CUE switch cap
 AJ8107

Fader screw
 Silver AB3818
 Storm grey AB3329

Fader
 002-684



MUSIC channel

PRE switch cap
Silver AJ2052
Storm grey AJ7210

MIC Line switch cap
Silver AJ2960
Storm grey AJ7211

EQ switch cap
AJ4251

Channel meter
AE2702

Fader knob
AJ4310



AUX pot
AI8007


GAIN pot
AI8006

HI, MID1, MID2,
LO pot
AI8006


CUE switch cap
AJ8107

Fader 002-684

 MASTER & filters

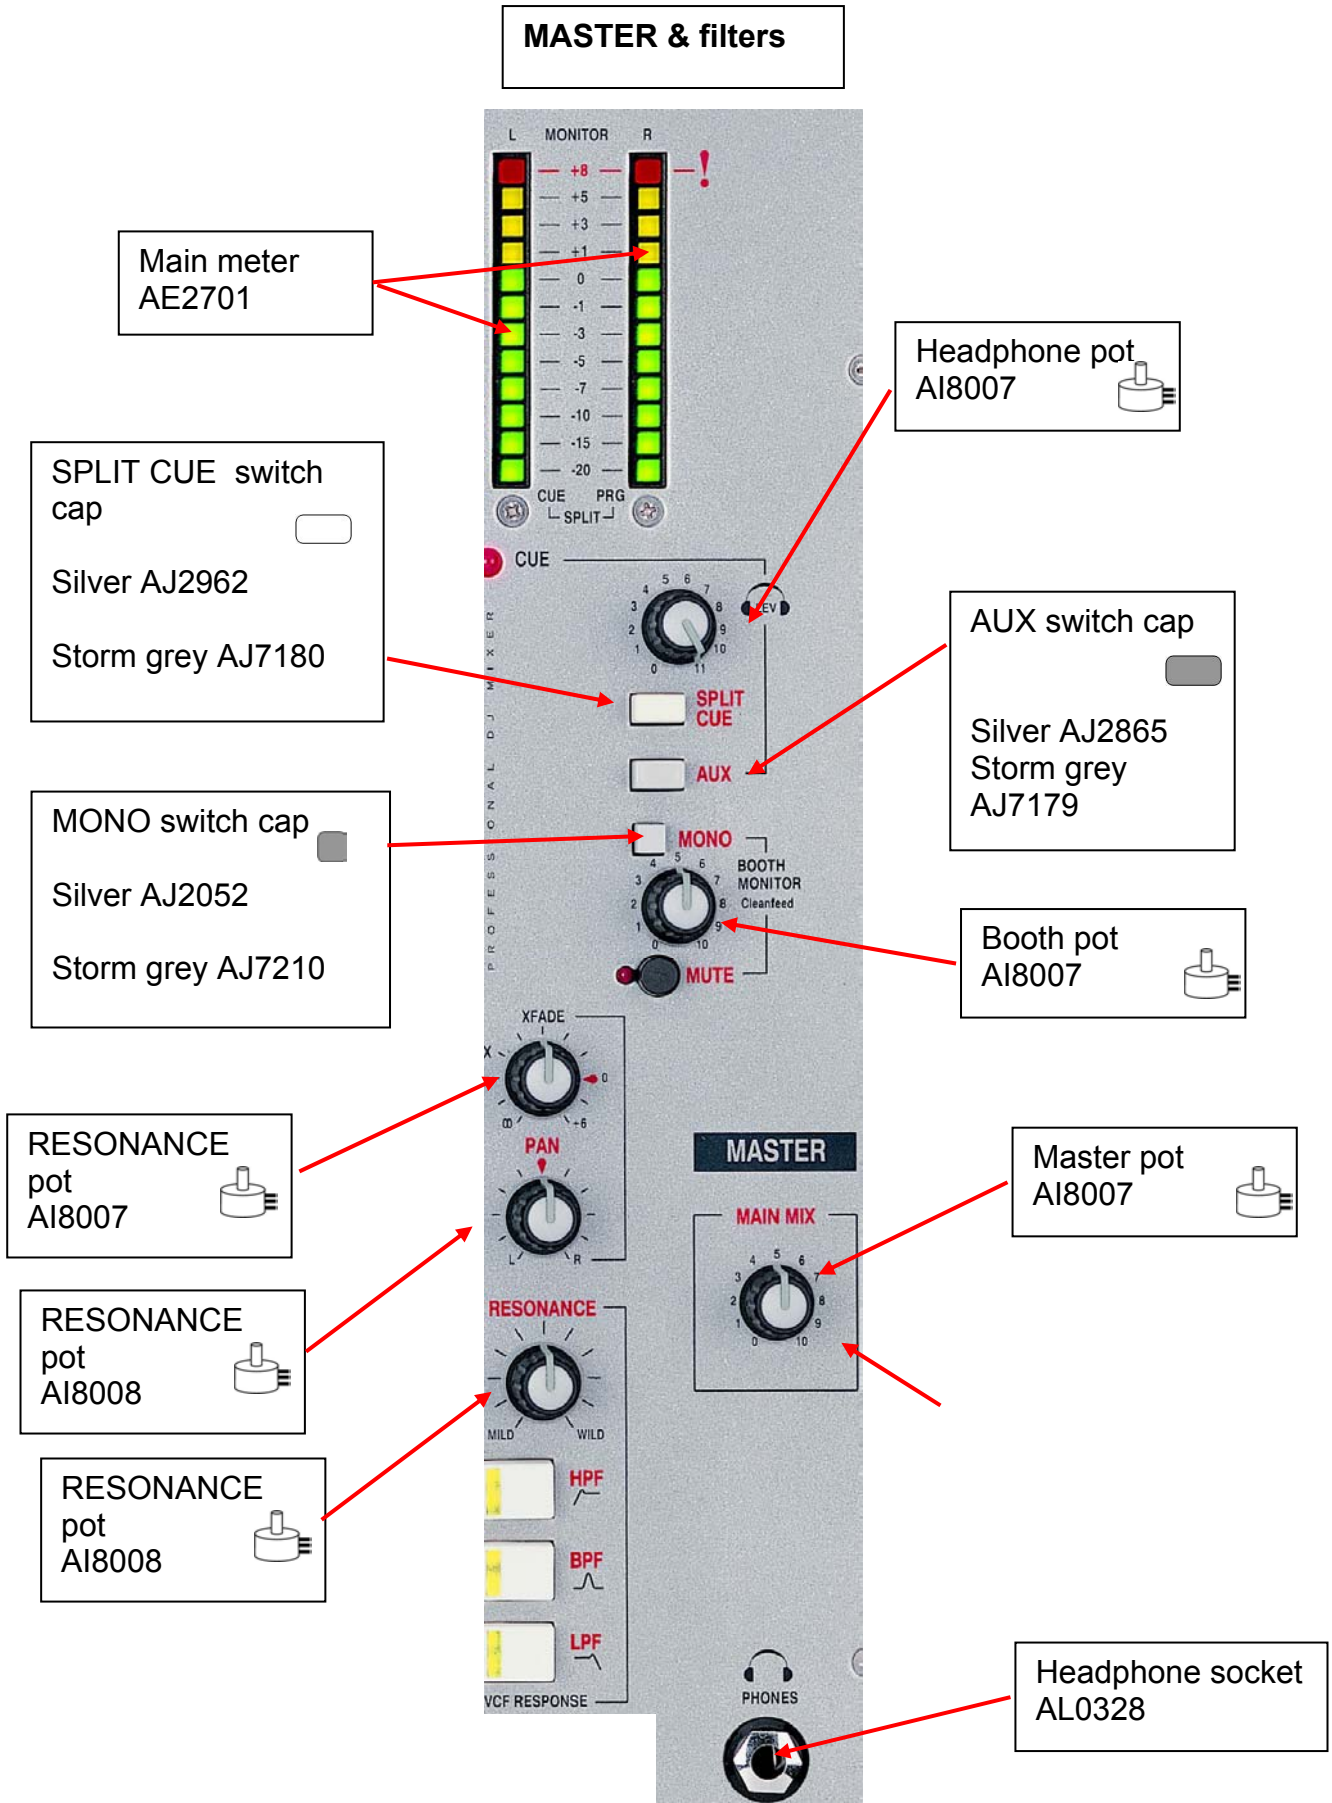

Cross fader & VCF

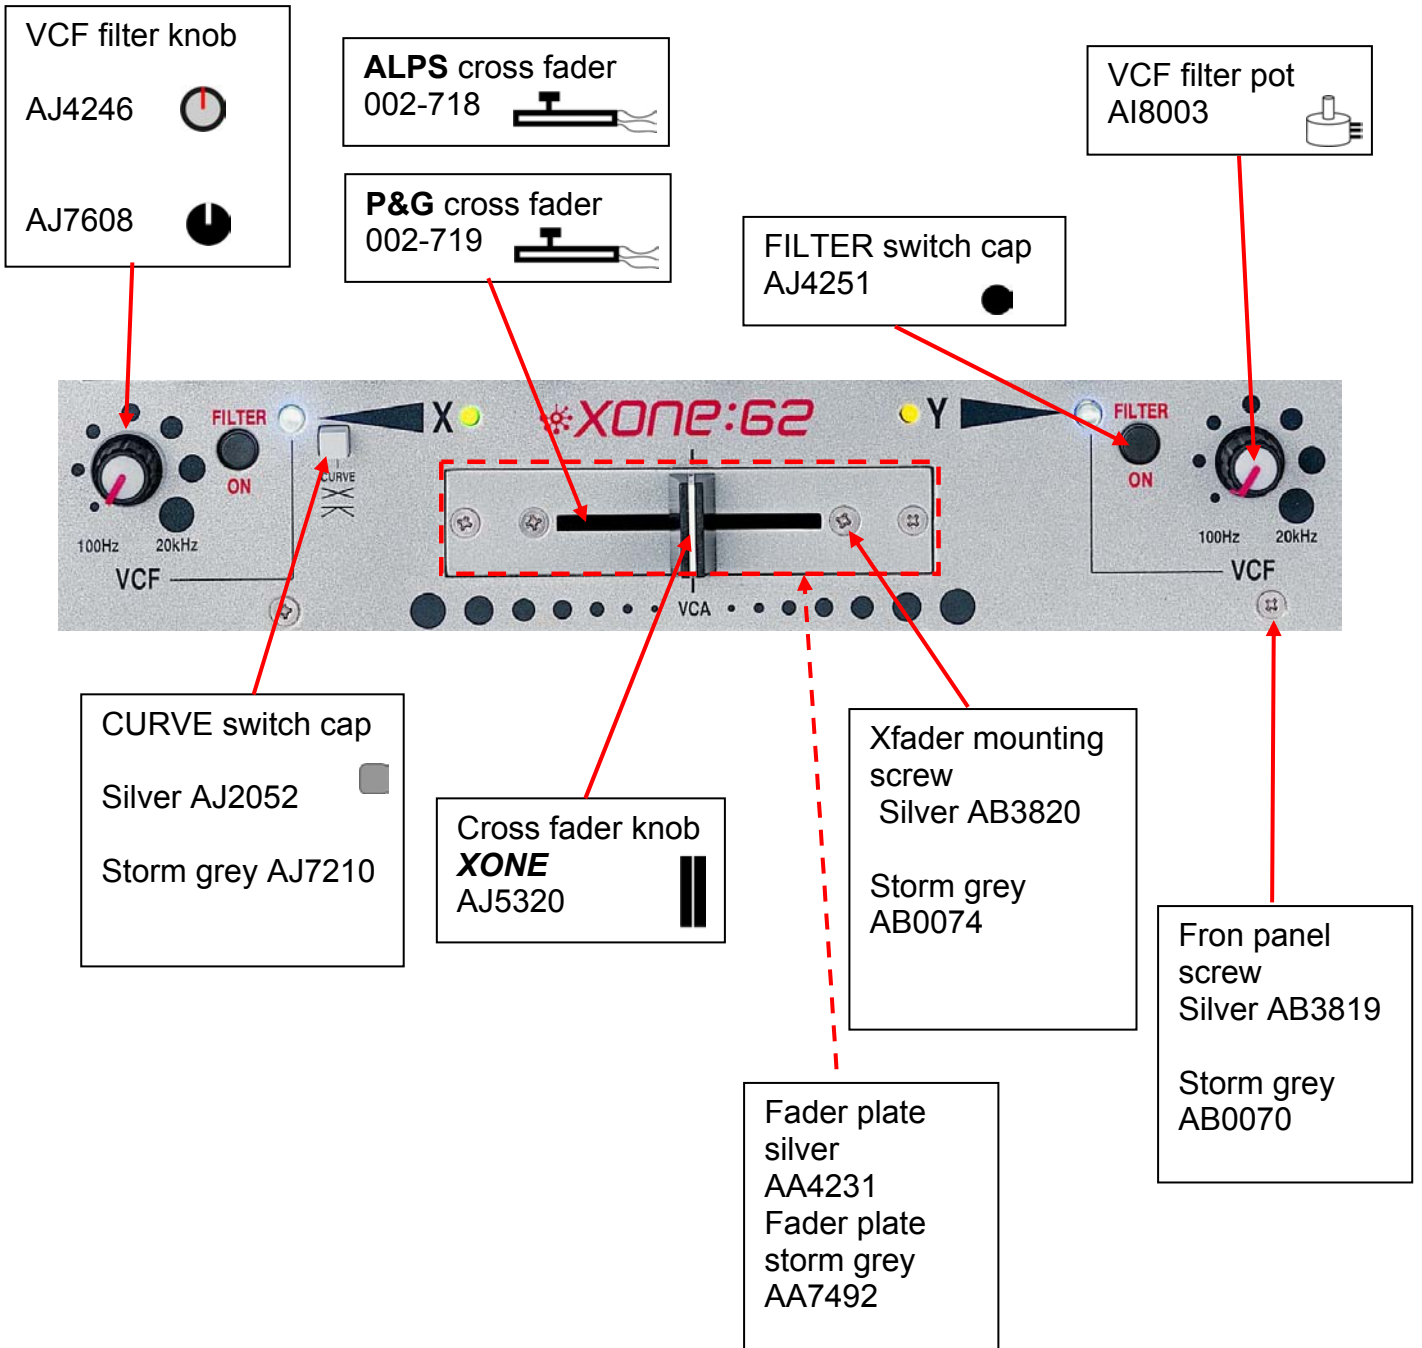 

Connectors

FX, Aux,
Mono jacks
AL3407

RCA phono /
line
AL3753

Ground
terminal post
AL8106



Mains switch
cap
AJ2887

Fuse holder
AL3178

Output XLR
AL2413

Mic input
XLR
AL2410

 
Line input
jack
AL3410

Feet
AK0102


Mains switch
AL3338

INTERIOR PARTS:

Same as MUSIC
channels 3, 4, 5, 6 but
NO X-fade XY switches

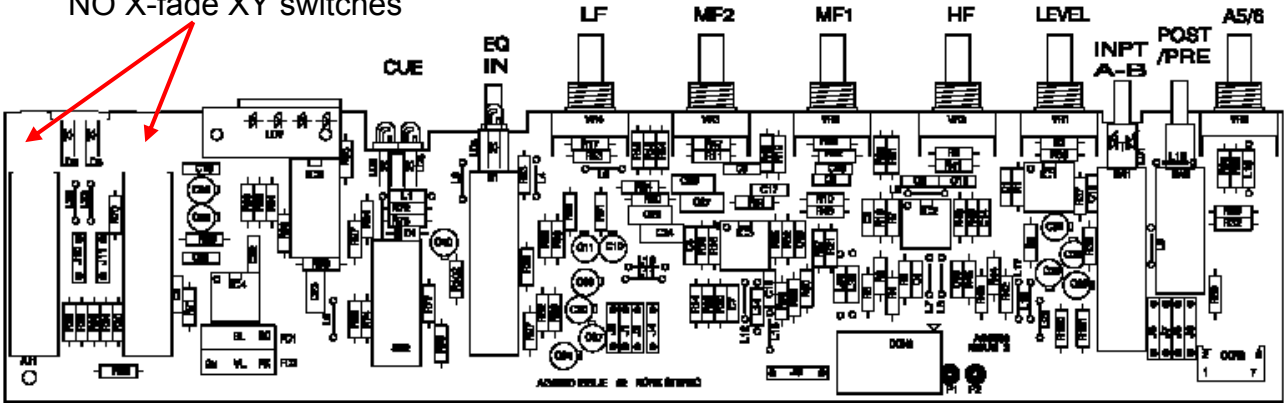


MIC 1,2 channel 002-685

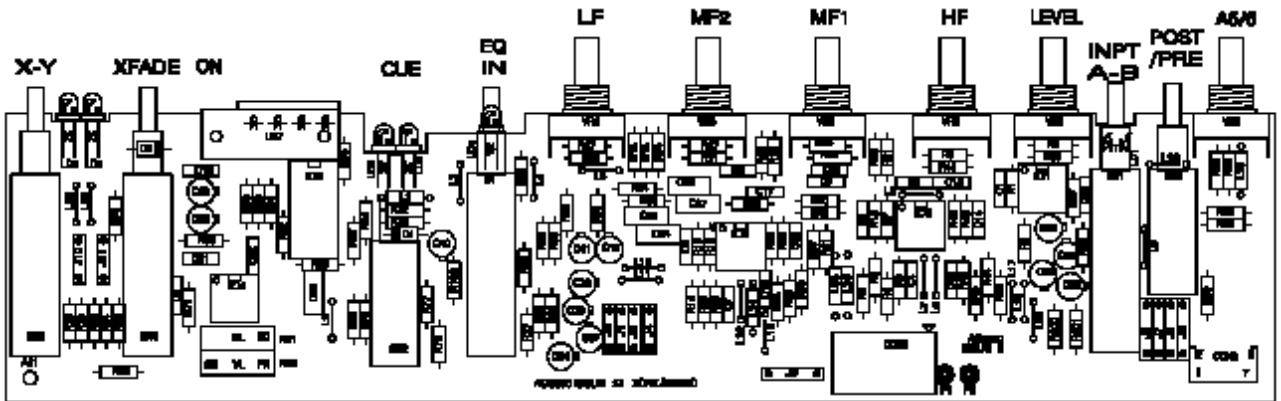 


MUSIC 3, 4, 5, 6 stereo channel 002-686

 Same as Xone:464 but NO
aux 1-4 pots

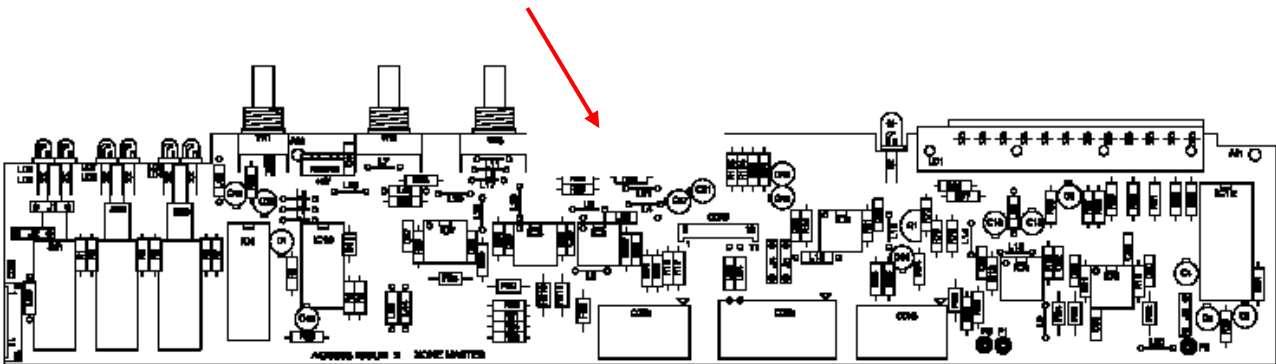


Left 002-525

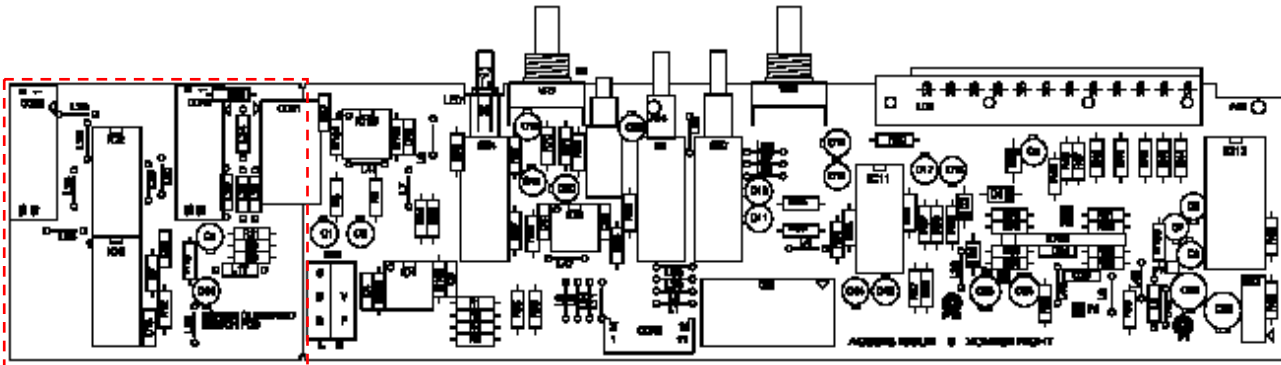 


Clean feed

 
Right & mic clean feed 002-692

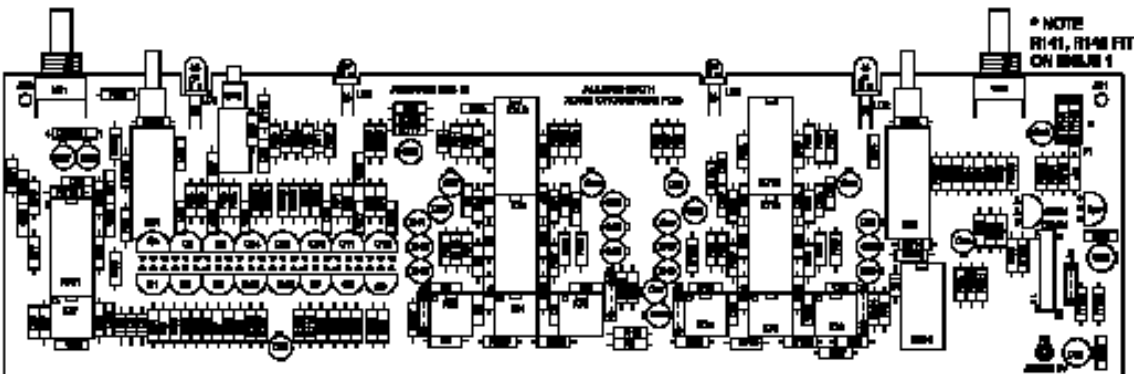


X-fade 002-627

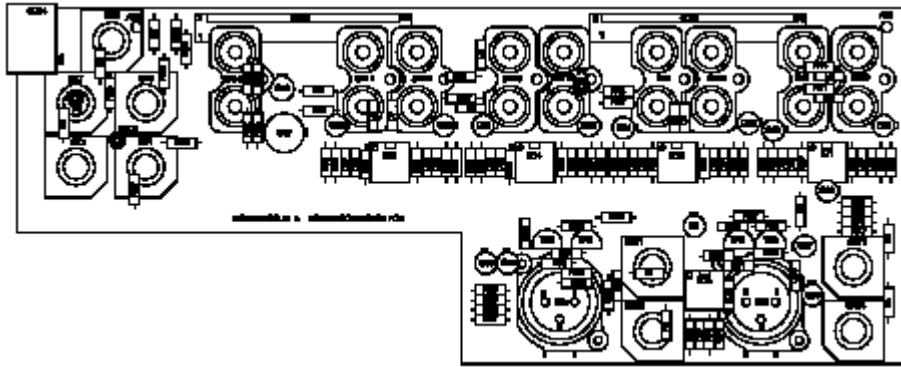 

Rear connector 002-527

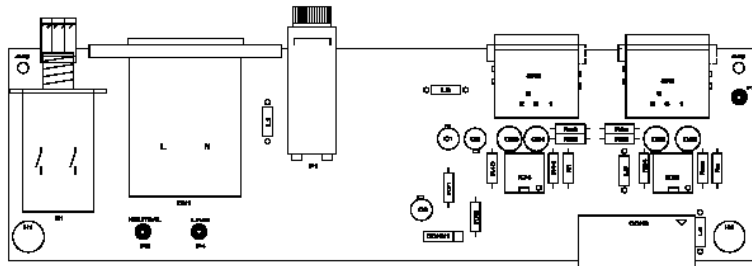 


Mains AC inlet & main output 002-652

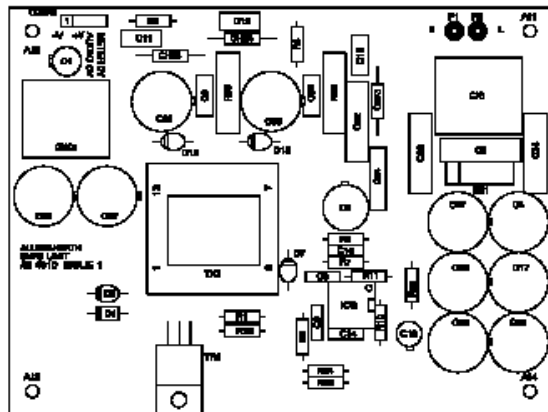 

PSU 002-629

 HARNESSES:

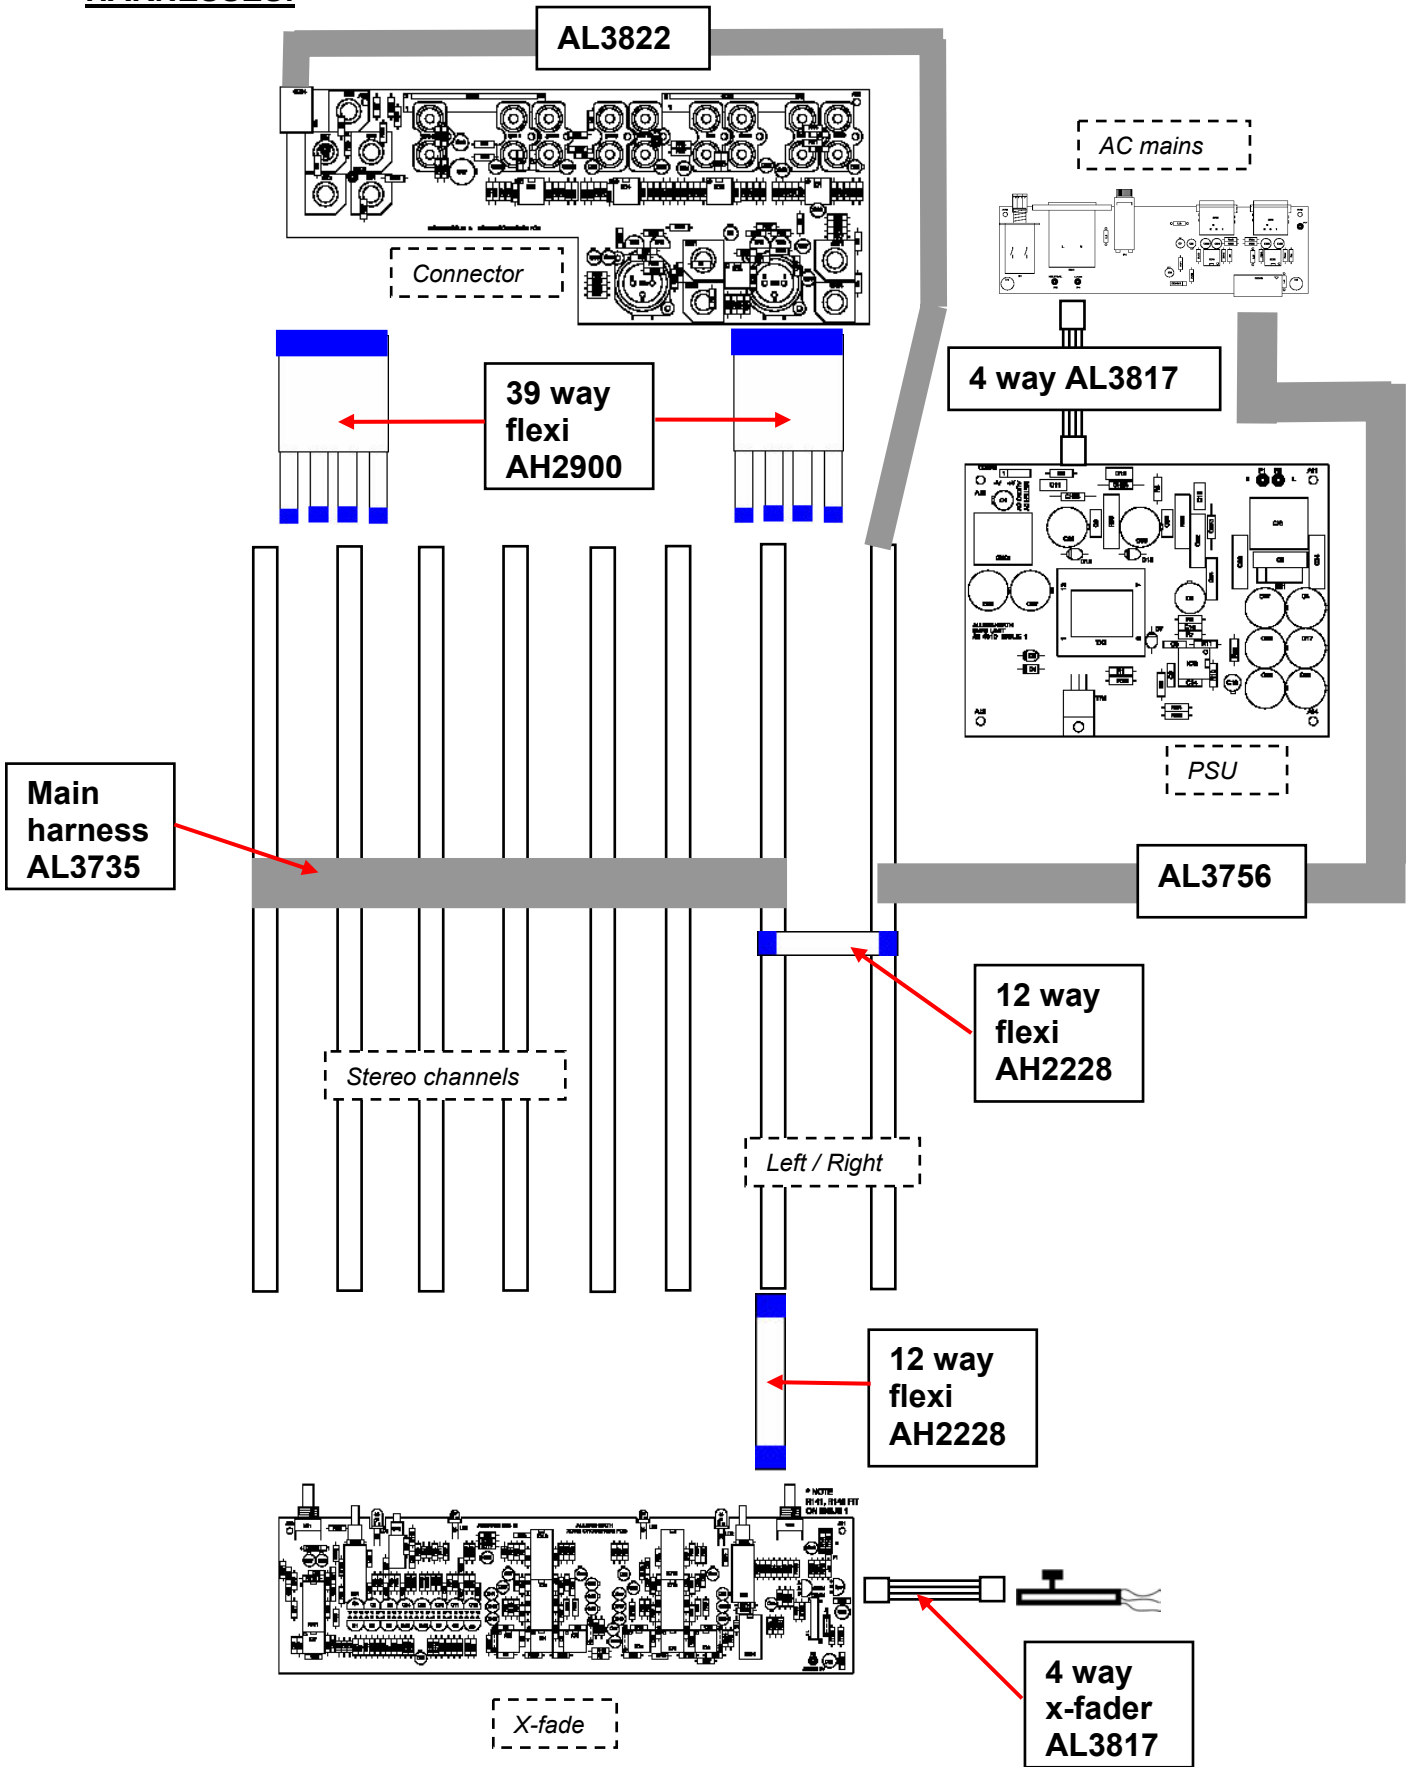

ALLEN&HEATH

Parts identification sheet

XONE2:62

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PARTS:

MIC channel

PRE switch cap
AJ2052

MIC Line switch
cap AJ2969

Silver / blue line
knob AJ4245

EQ switch cap
AJ4251

Channel meter
AE2702

Fader screw
AB3821

Fader knob
AJ4310

Pot nut
AB8172

AUX pot
AI8007

GAIN pot
AI8006

HI, MID1, MID2,
LO pot
AI8006

 
CUE switch cap
AJ8107

Fader screw
AB3818


Fader
002-684



MUSIC channel

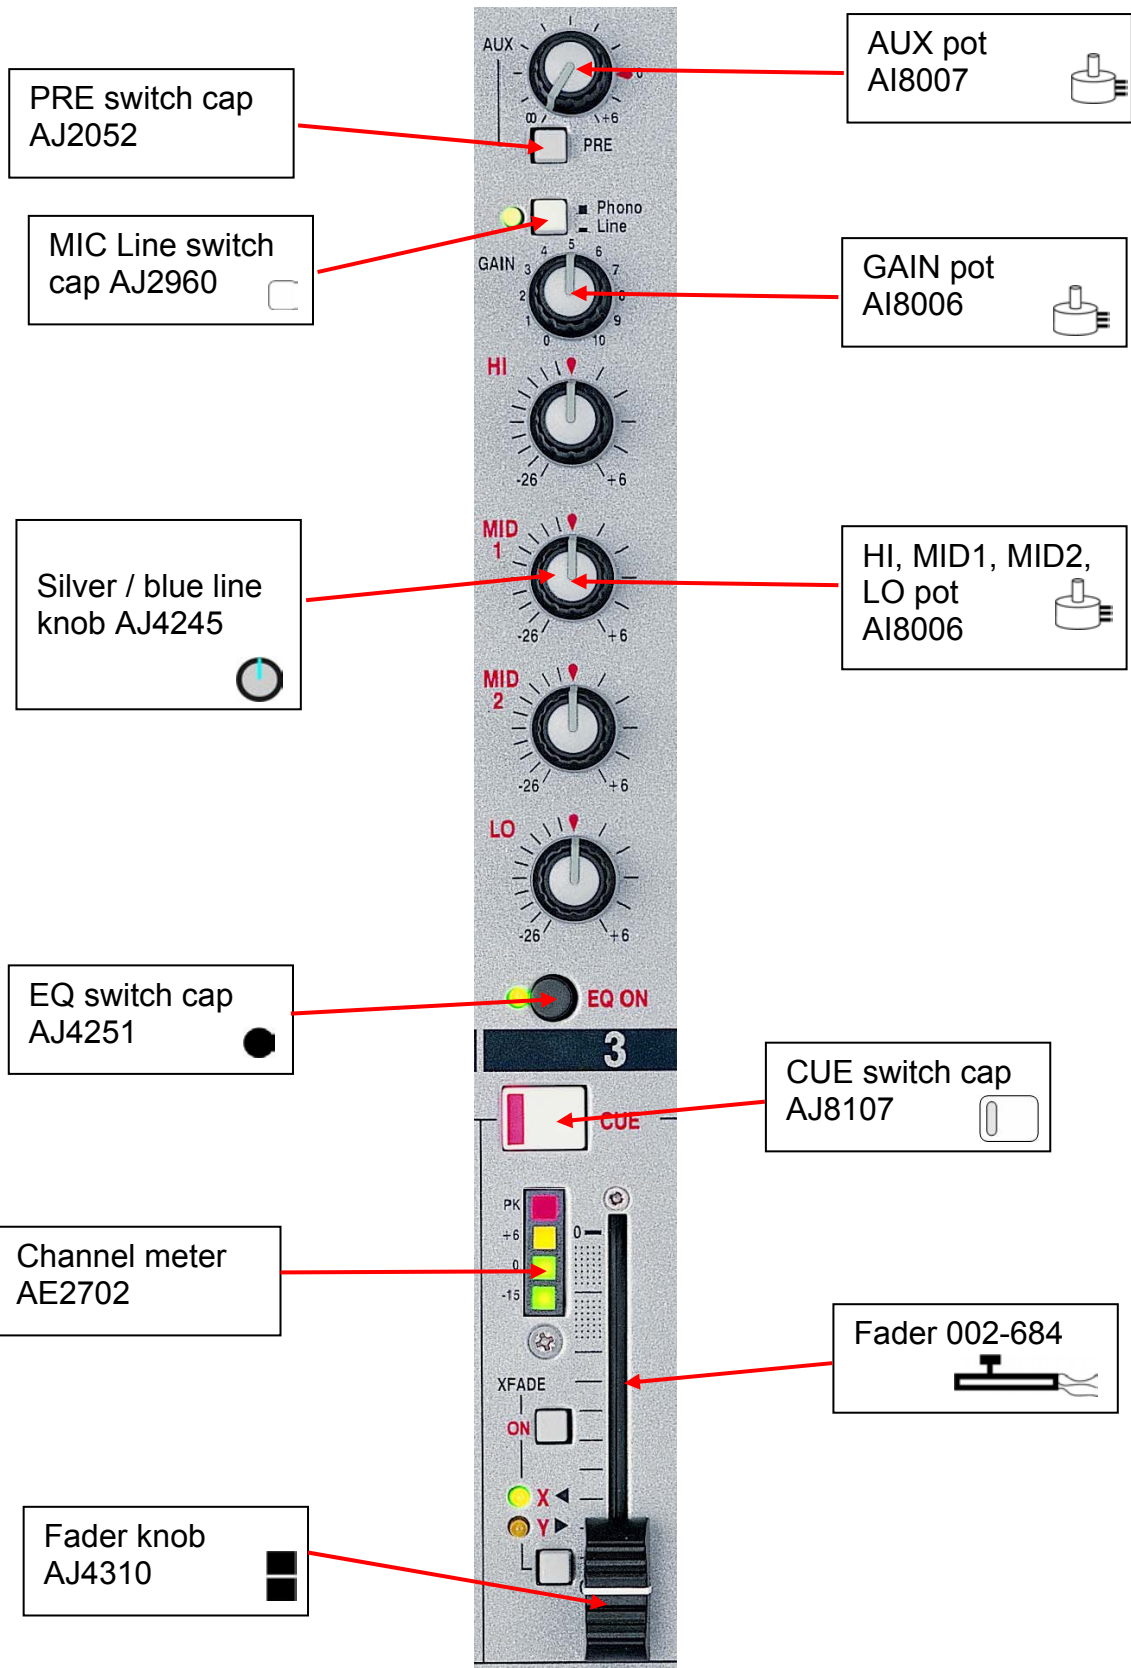

MASTER & filters

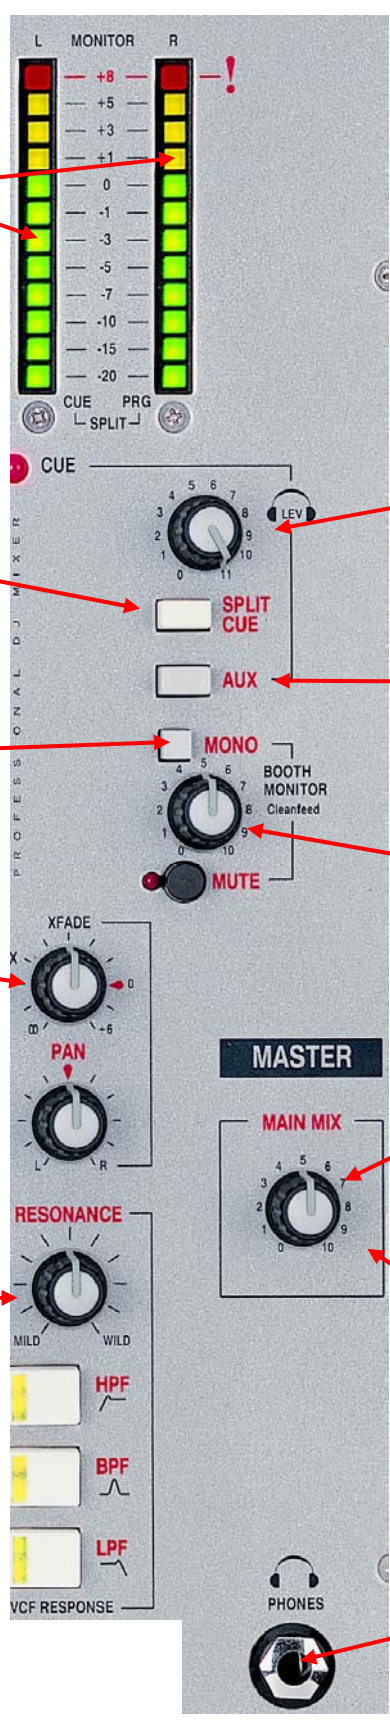 

Main meter
AE2701

SPLIT CUE
switch cap
AJ2962

MONO switch
cap AJ2052

RESONANCE
pot
AI8007

RESONANCE
pot
AI8008

RESONANCE
pot
AI8008

Headphone pot
AI8007

AUX switch cap
AJ2865

Booth pot
AI8007

 
Master pot
AI8007

Silver / blue line
knob AJ4245

Headphone socket
AL0328

Cross fader & VCF

ALPS cross fader
002-718




VCF filter pot
AI8003




VCF filter knob
AJ4246



 P&G cross fader
002-719



FILTER switch cap
AJ4251

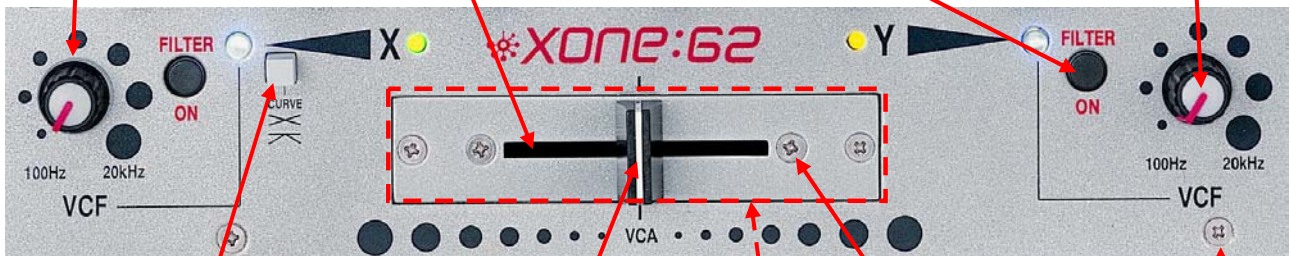 

CURVE switch
cap AJ2052



Cross fader knob
XONE
AJ5320



Xfader mounting
screw
AB3820

Fader plate
AA4231

Fron panel
screw
AB3819

Connectors

FX, Aux,
Mono jacks
AL3407

RCA phono /
line
AL3753

Ground
terminal post
AL8106



Mains switch
cap
AJ2887

Fuse holder
AL3178

Output XLR
AL2413

Mic input
XLR
AL2410

 
Line input
jack
AL3410

Feet
AK0102


Mains switch
AL3338

INTERIOR PARTS:

Same as MUSIC
channels 3, 4, 5, 6 but
NO X-fade XY switches

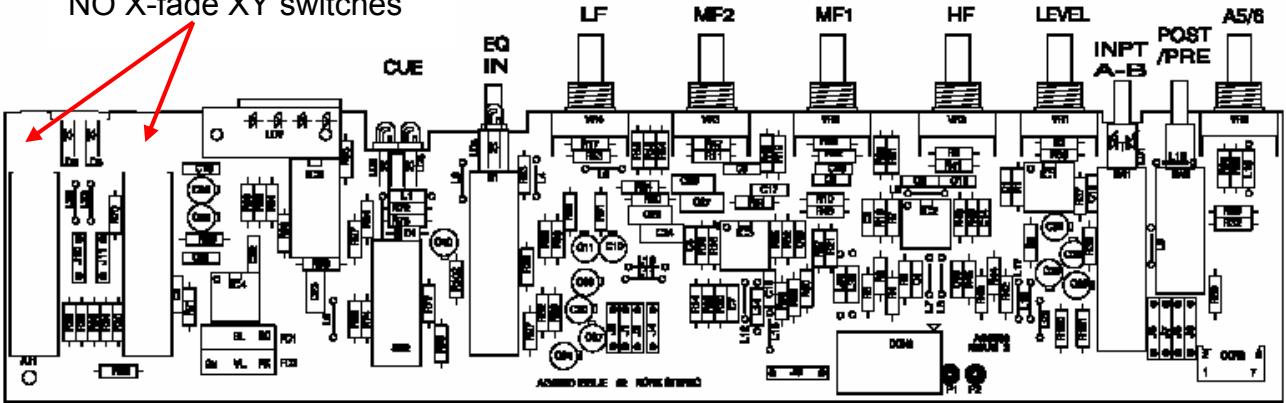


MIC 1,2 channel 002-685

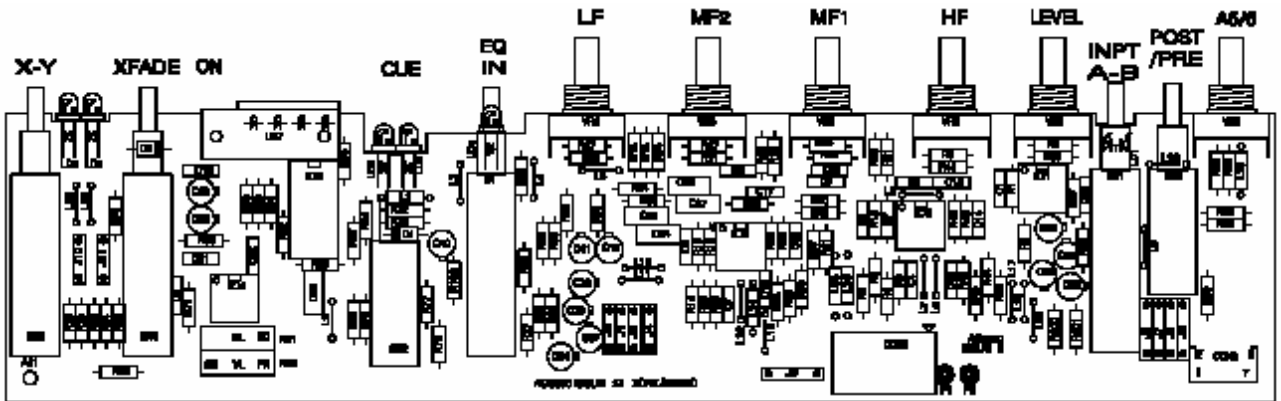 


MUSIC 3, 4, 5, 6 stereo channel 002-686

 Same as Xone:464 but NO
aux 1-4 pots

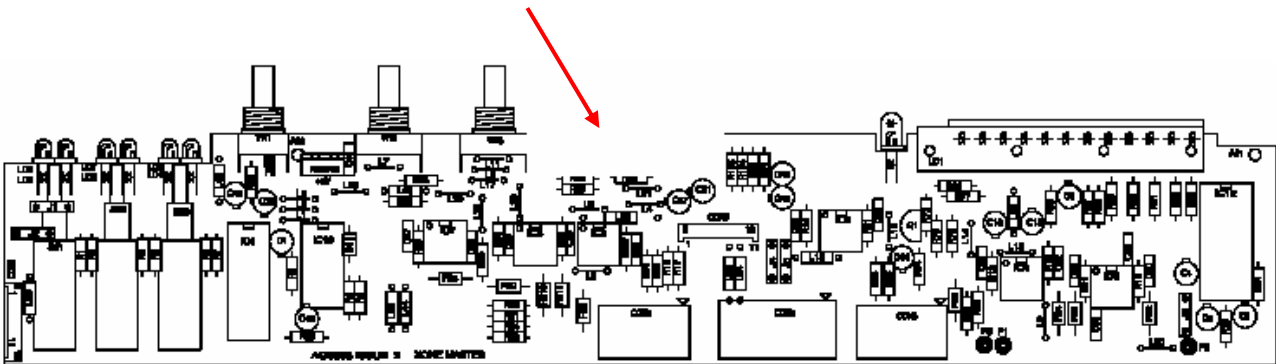


Left 002-525

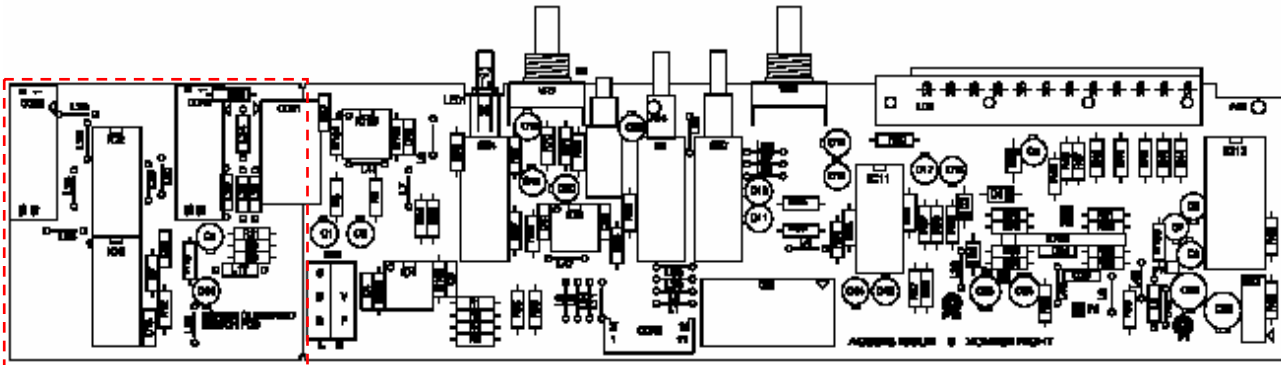 


Clean feed

 
Right & mic clean feed 002-692

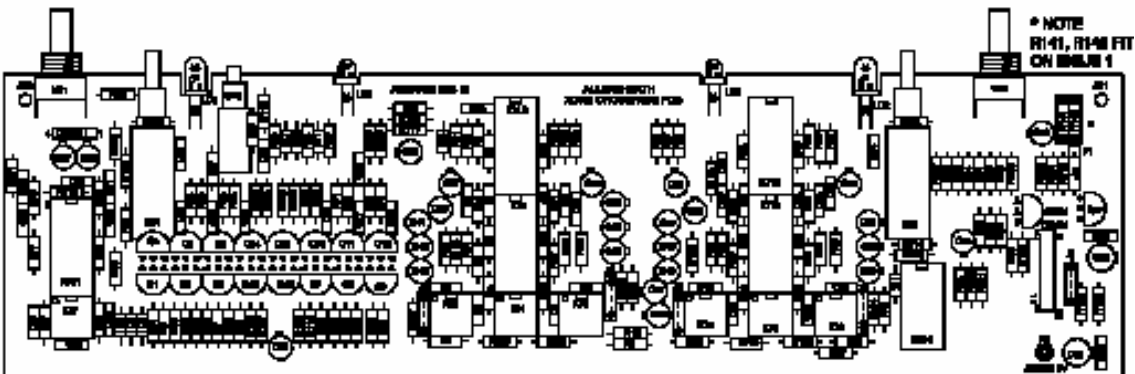


X-fade 002-627

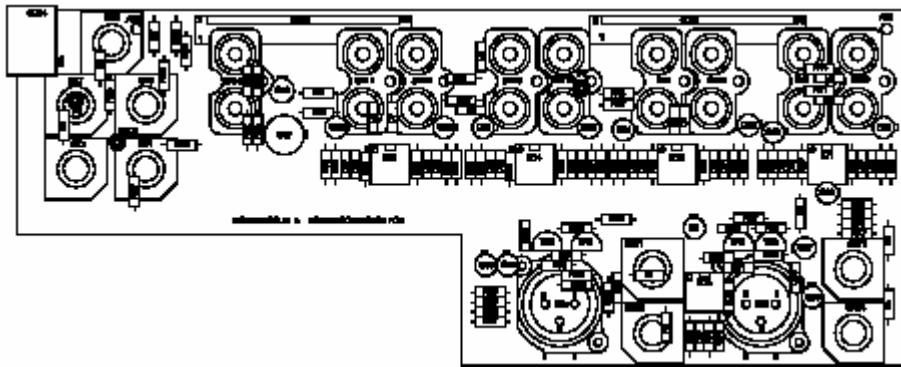 

Rear connector 002-527

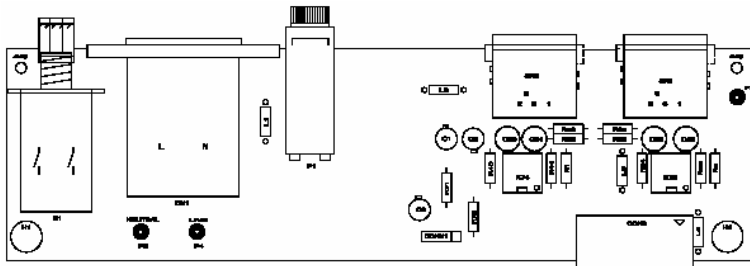 


Mains AC inlet & main output 002-652

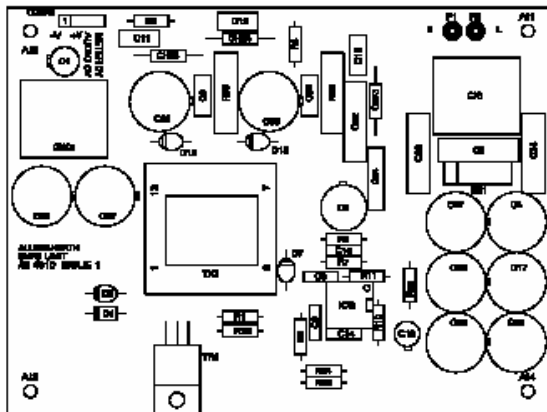 

PSU 002-629

 HARNESSES:

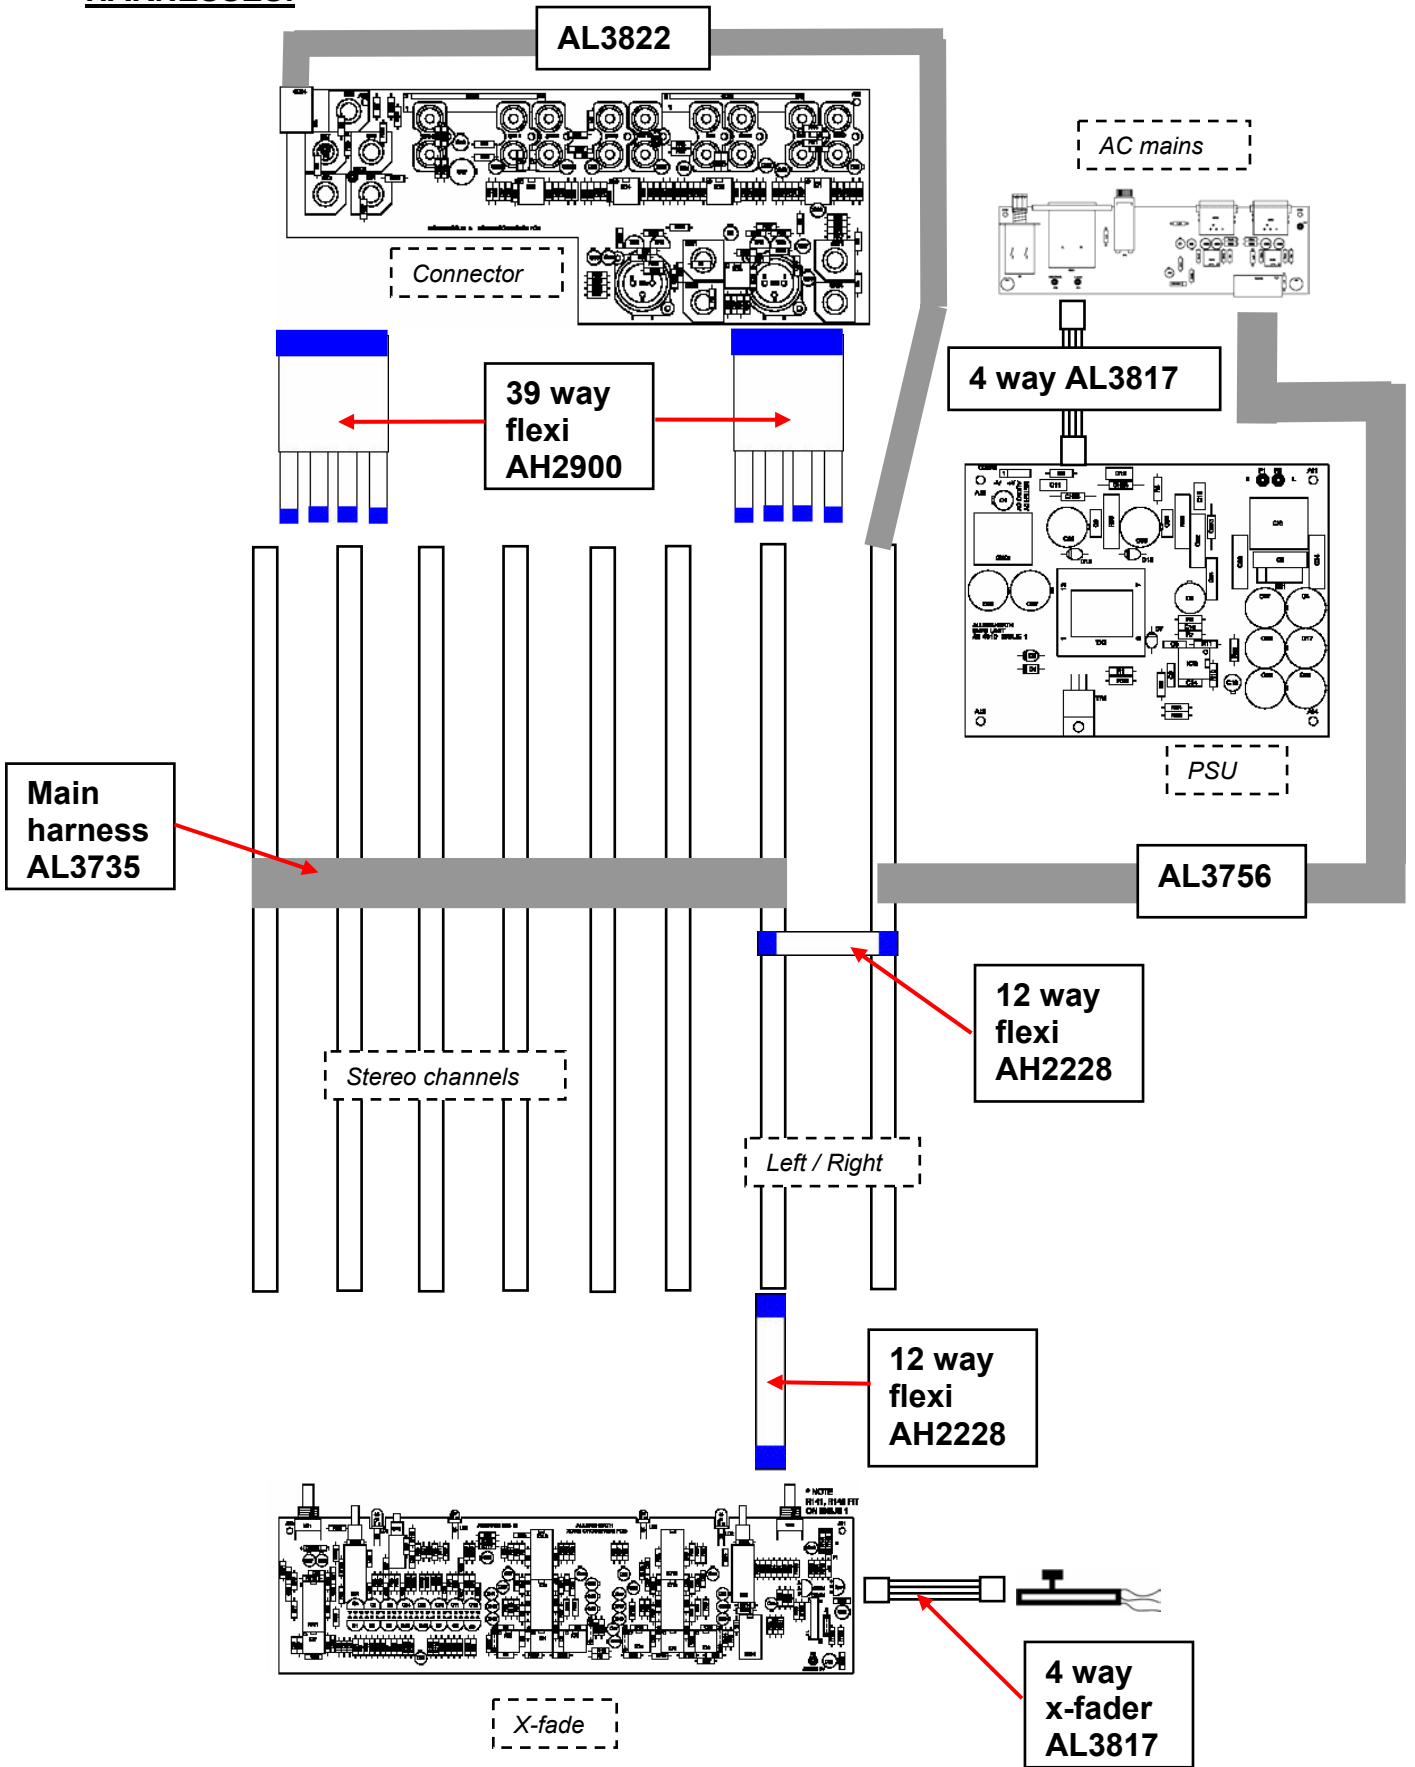

ALLEN&HEATH

Parts identification sheet

Xone:92

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>


UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp


Screw AB3818 top panel to chassis SILVER.
 Screw AB3329 top panel to chassis STORM GREY.
 Screw AB3819 fader & x-fader SILVER.
 Screw AB0070 fader & x-fader STORM GREY.





MIC/RTN channel

POTS FADERS & KNOBS:


Knob small black
AJ5386 


Small switch cap
AJ5388 

 
Large switch cap
AJ4251 


MIC/RTN fader
knob
AJ4310 




Aux pot
AI8007 

Level pot
AI8007 

EQ
HI, MID1, MID2, LO
AI8006 

Fader screw
AB3329 

MIC/RTN fader
002-684 

Front panel
Silver AA5319
Storm grey
AA7581



X-fader & filters

Black knob small
AI5386



Black button
AI5325



Black knob large
AI5387



 
 
Large switch cap
AJ4251



Xfade curve
very small
black knob
AJ5558



X-fader
002-719

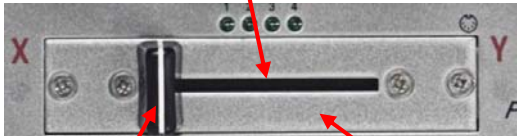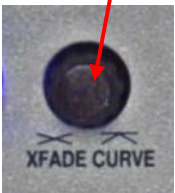

Xone x-fader
knob
AJ4251



Fader plate
storm grey
AA7492



DATA, MIDI
pot
AI8004



LFO DEPTH
pot
AI8003



RESONANCE
pot
AI8007



FREQ pot
AI8003






Stereo channel


Black knob
small
AI5386




Small switch cap
AJ5388




Large switch cap
AJ4251




Black knob
large
AI5387





Aux pot
AI8007



Level pot
AI8006



EQ
HI, MID1, MID2, LO
AI5317




1-2 X-Y
Toggle switch
AI5328

Line fader
003-144



Xone fader knob
AJ5320





Monitor section



Black knob small
AI5386



MIX 1-2
AI8007



Large switch cap
AJ4251



Booth pot
AI8007



Small switch cap
AJ5388



CUE ADD MIX
AI8003



Large headphone socket
AL0328



Headphone level
AI8007



Small headphone socket
AL5323



Phono shorting plug
AL4396

 
AC inlet
AL3458

MIDI
AL3962

RCA Phono
AL4977

Ground post
AL8106

XLR female
AL2410

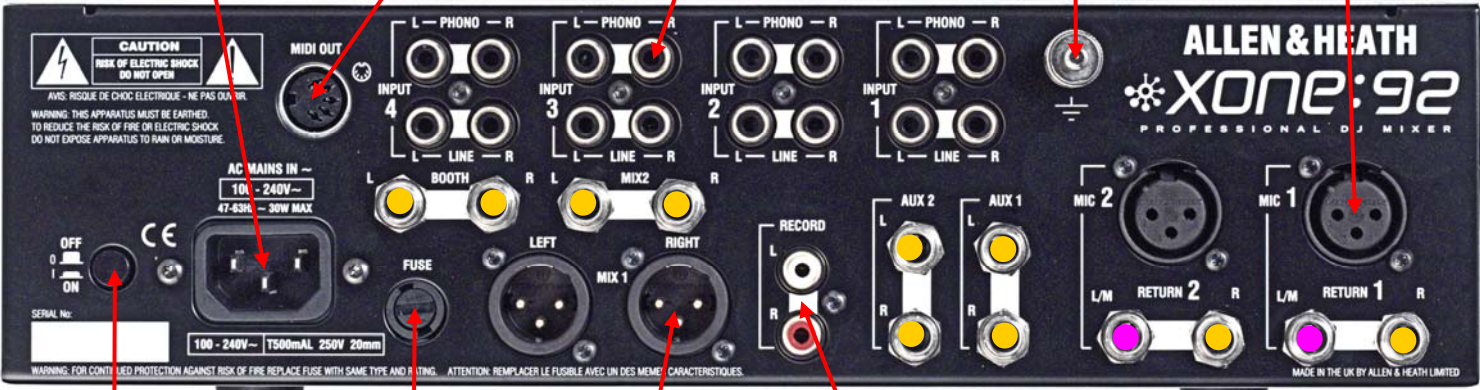

Switch
AL3338

Fuse holder
AL3178

XLR male
AL2411

RCA phono
AL3753

 
Jack
AL3410

Button
AJ2887


Fuse
AL3534

Jack
AL3407

INTERIOR PARTS:




Stereo fader 002-684

 


Linear fader 003-144



 
Rotary fader 003-145 (92R)

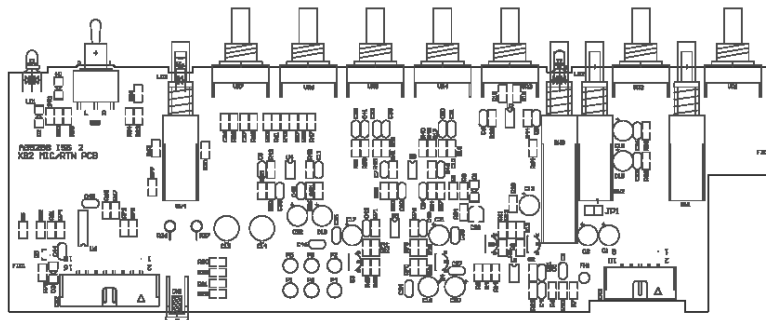


Mic/Stereo Return 003-136

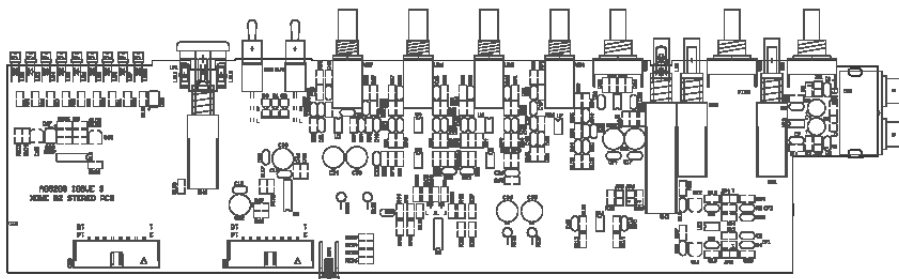 

Stereo 003-137

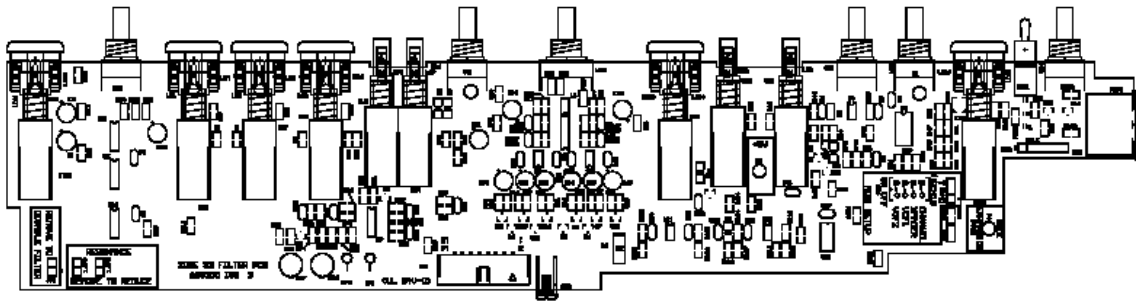 


Filter 003-138

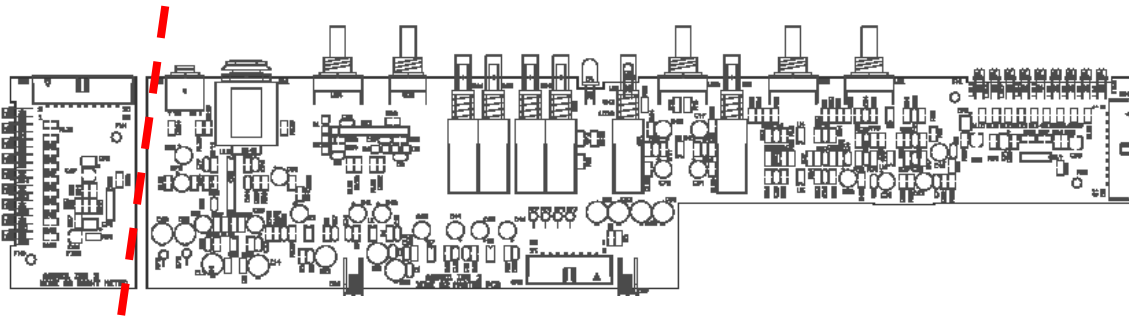 


Meter snap-off

 
Master 003-139

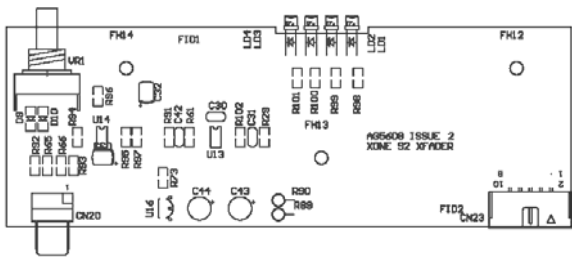

Xfade 003-140

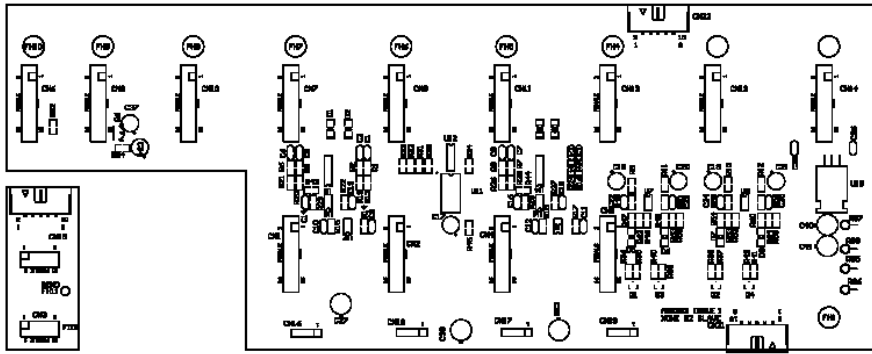 

Slave 003-141

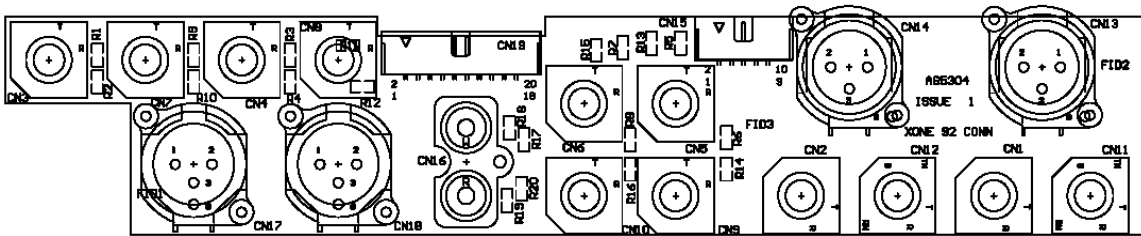 

Connector 003-142



ALLEN & HEATH
Parts identification sheet

XONE:DB4

 
Copyright © 2011 Allen & Heath Limited. All rights reserved

 
Allen & Heath Limited

Kernick Industrial Estate, Penryn, Cornwall, TR10 9LU, UK

<http://www.allen-heath.com>


EXTERIOR PARTS

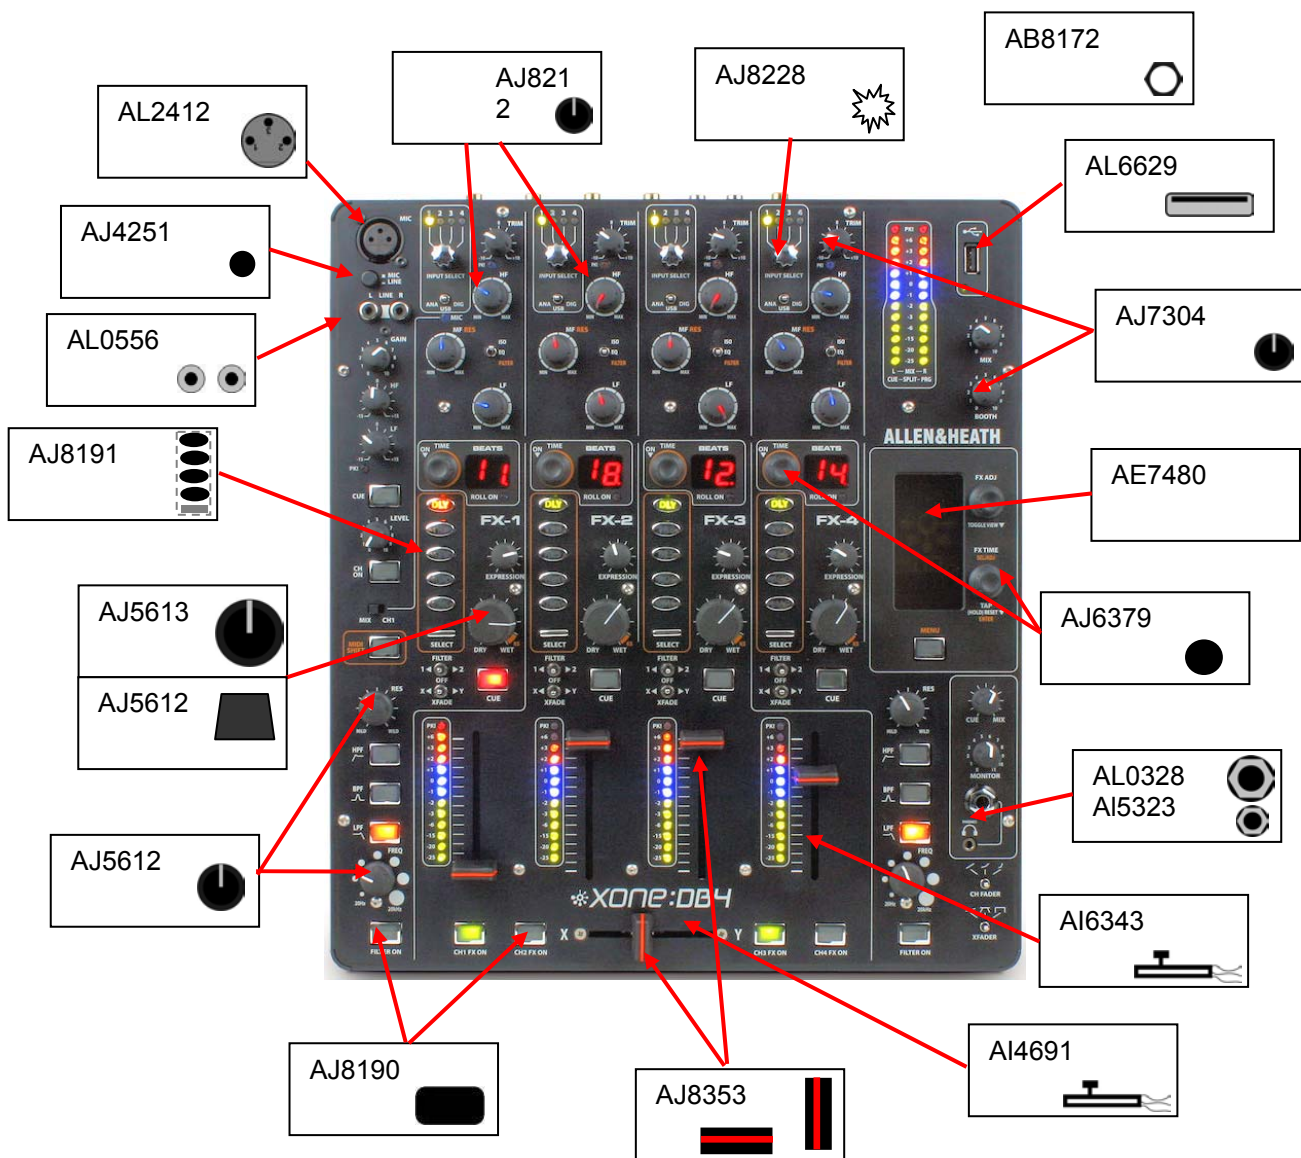

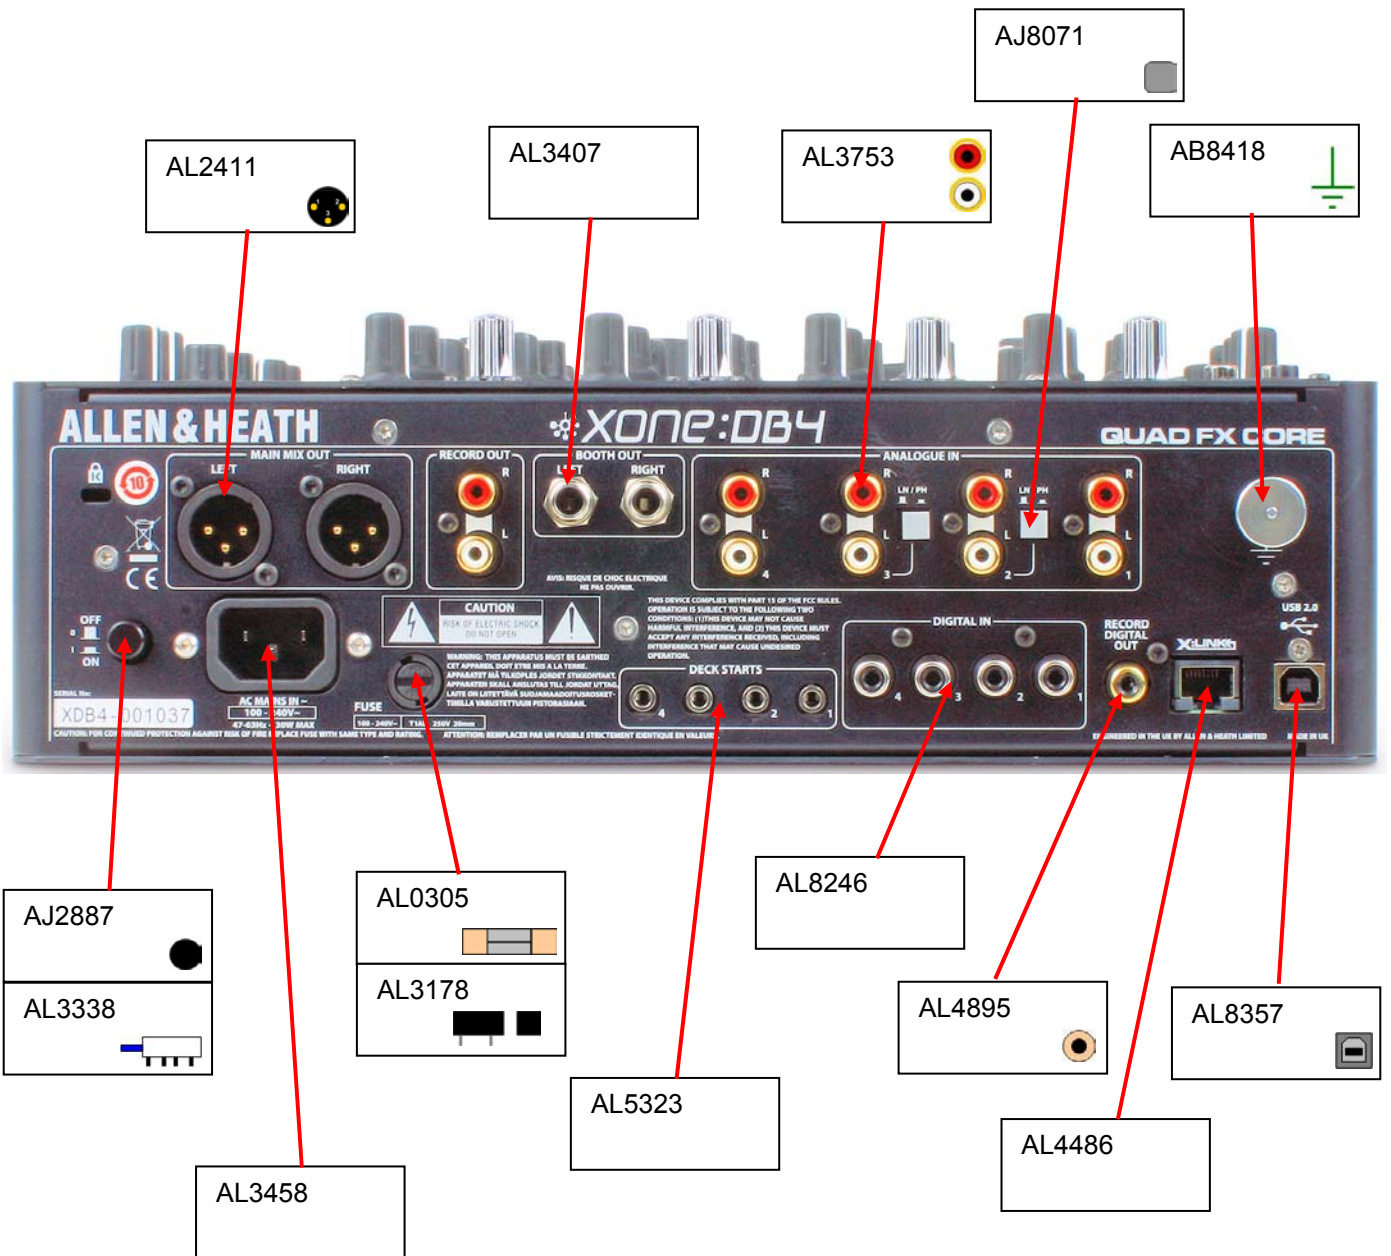


INTERIOR PARTS

 
For identification only. Due to the complexity of these PCBs and the need to protect our digital audio circuitry, we do not publish all schematics for this product. Schematics for mic in, connector and PSU are published on distributor/service access pages on our website.

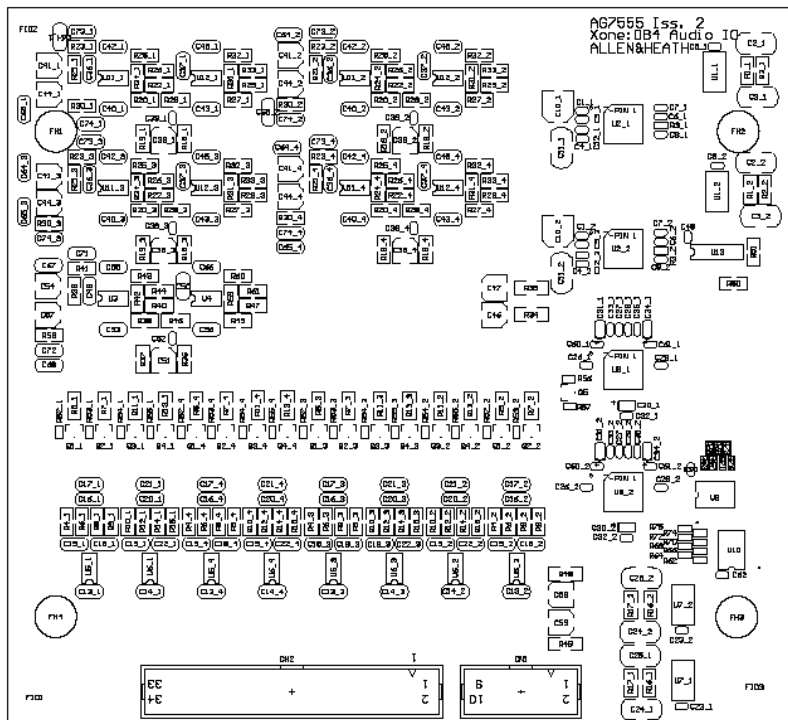


Audio IO 004-068

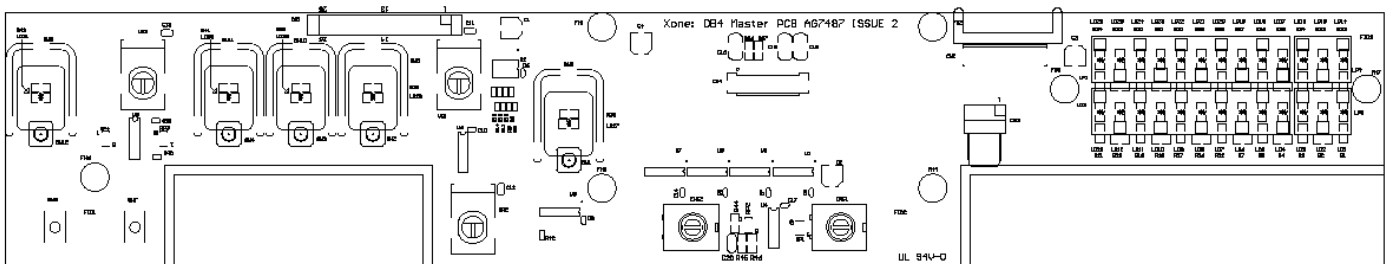 


Master 004-070

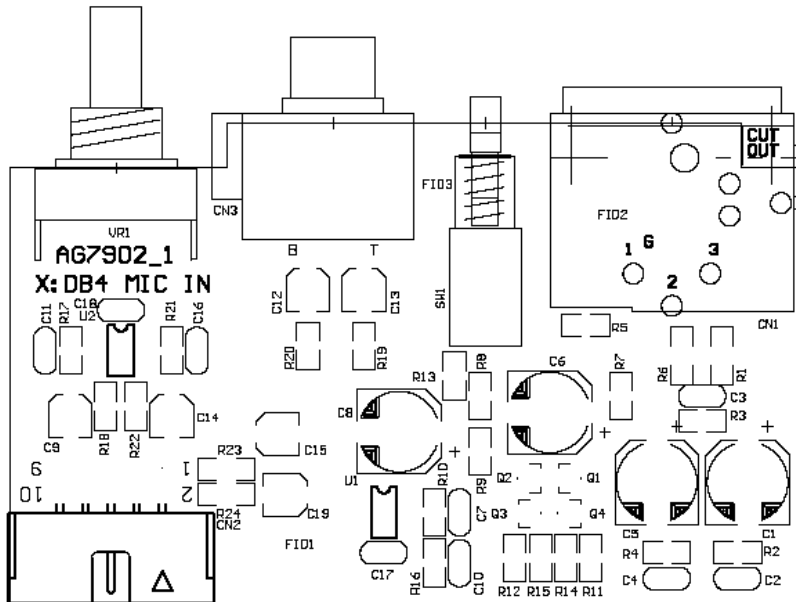 


Mic IP 004-073

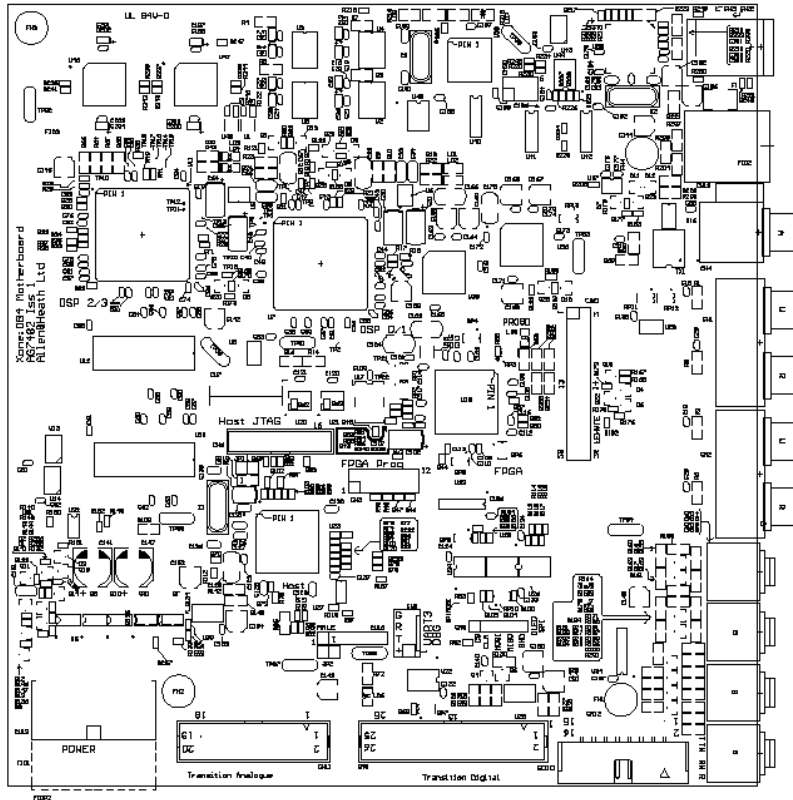 


Motherboard 004-067

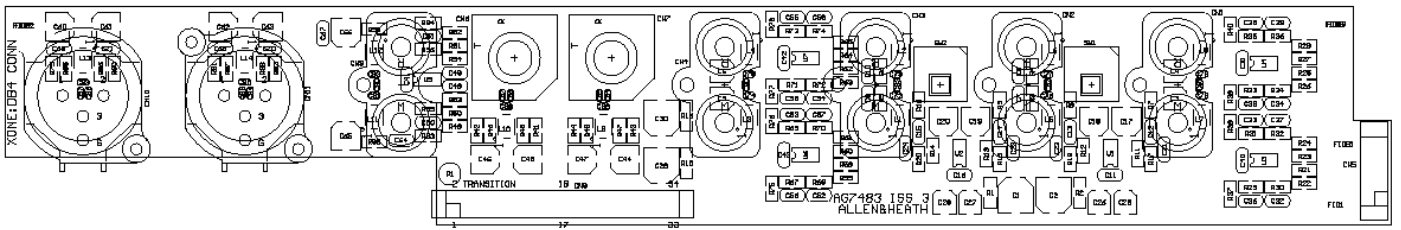 


Connector 004-069

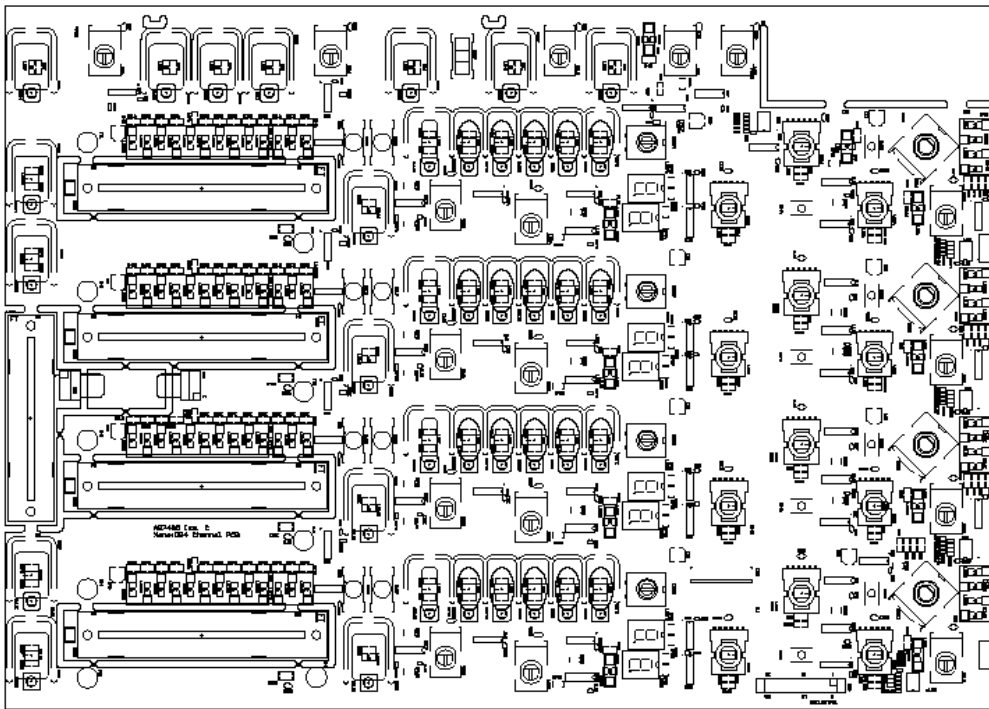 

Channel IP 004-072

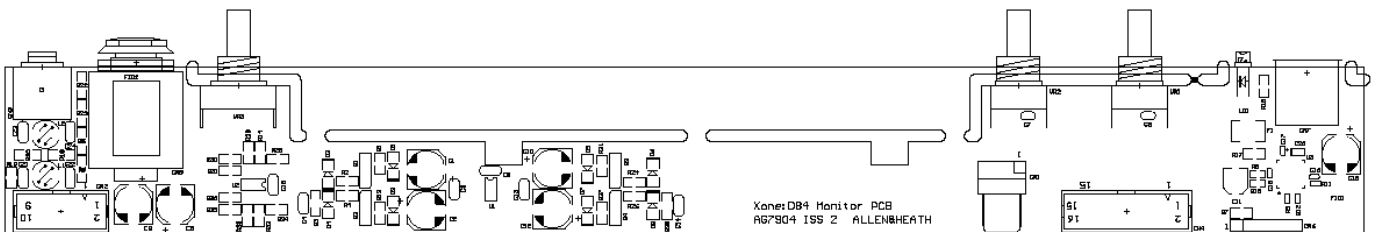 

Monitor 004-071

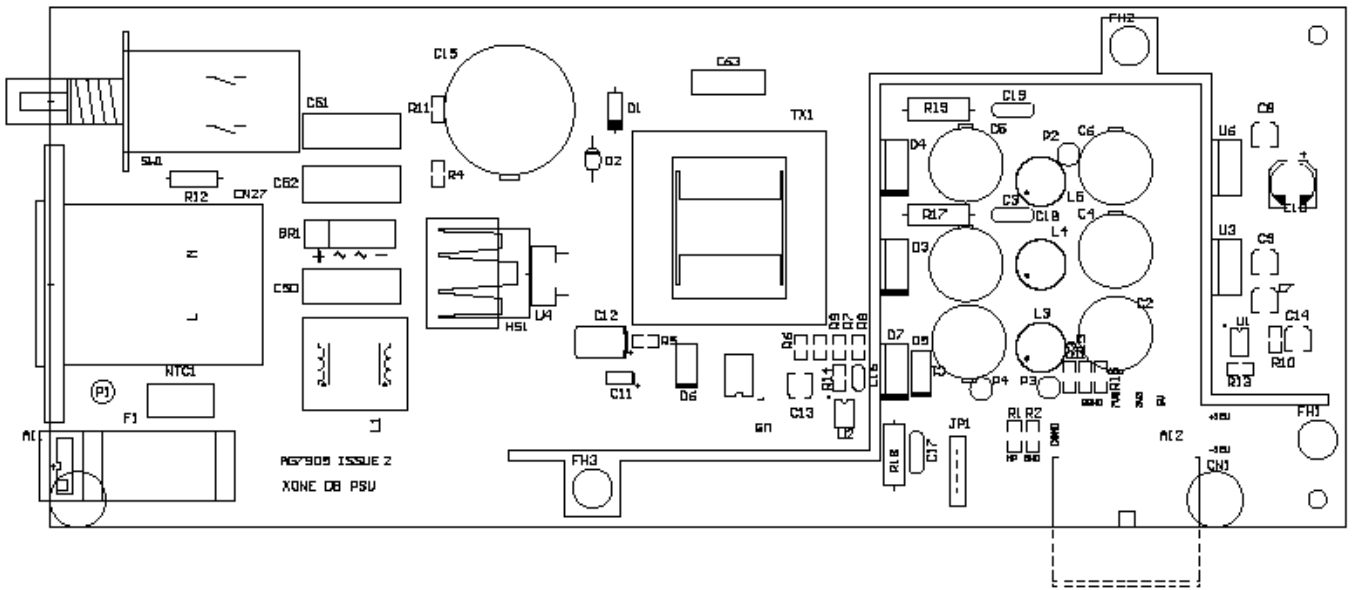 

PSU 004-066



ALLEN & HEATH
Parts identification sheet

Xone:DX

Copyright © 2011 Allen & Heath Limited. All rights reserved

Allen & Heath Limited

Kernick Industrial Estate, Penryn, Cornwall, TR10 9LU, UK

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

Front panel
AA7428

Pot nut black
AB8172

EXTERIOR PARTS



Knob small
black white line
AJ7304

Push button
small
AJ4251

Push button
black
AJ7609

Button black
AJ7345

Knob large
black white line
AJ7305

Light pipe
AJ5324

Knob black
AJ6379

Corner plastic
moulding
Outside AA7717-
Inside AA7717-1

 
 
Fader knob
Xfader knob
AJ5320

 
Knob small
black white line
AJ7304

Xfader
003-579


Channel fader
003-860



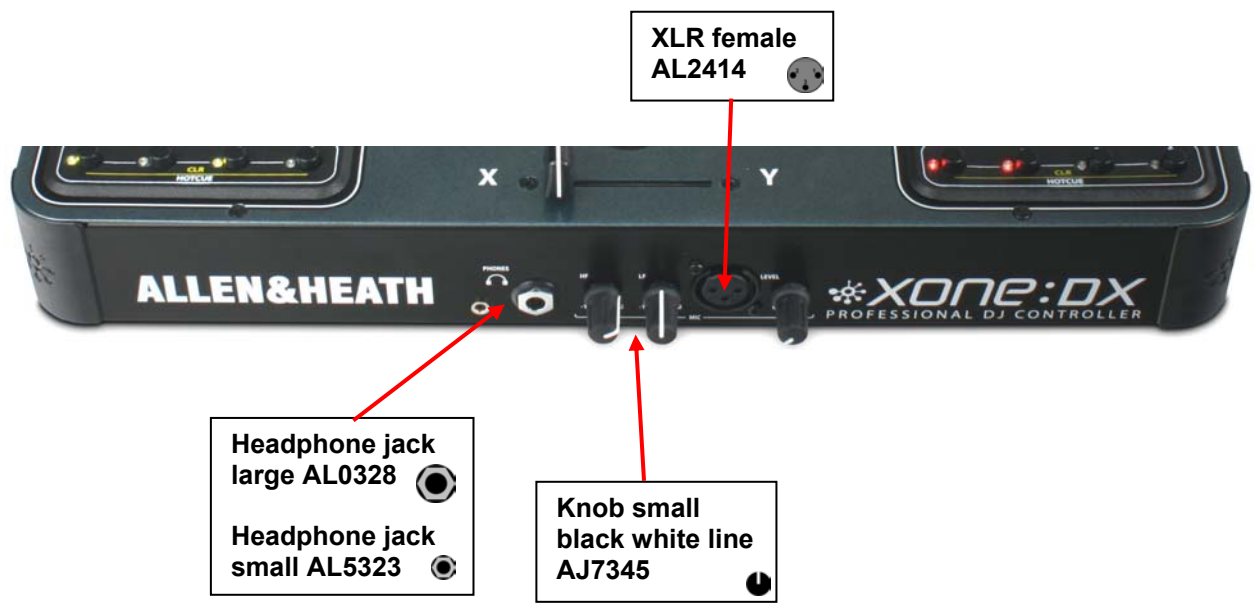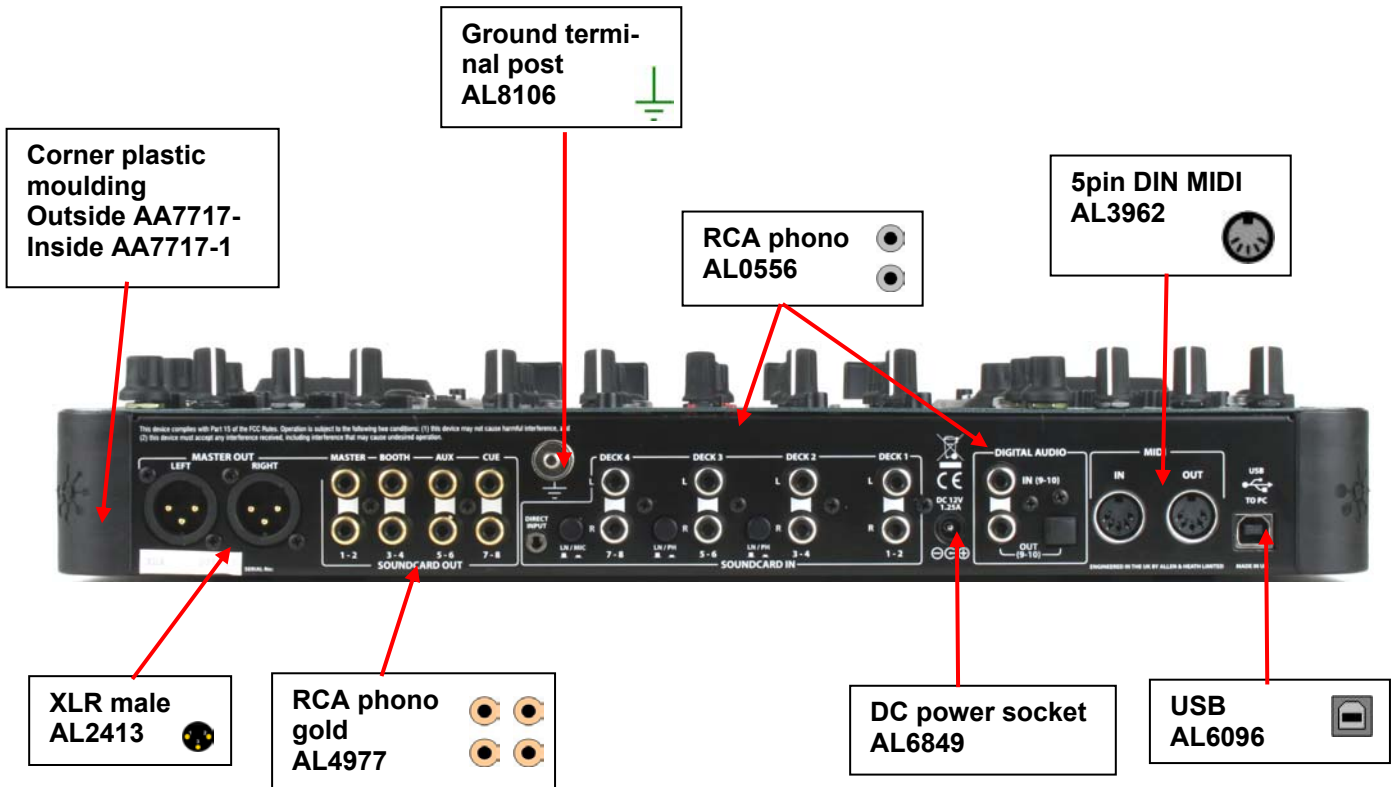


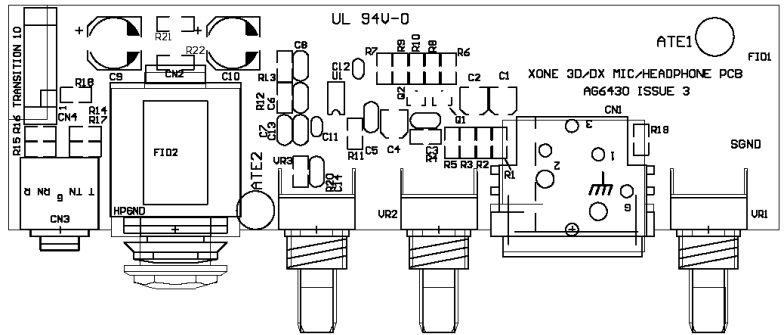

**Mic/Headphone
003-998**

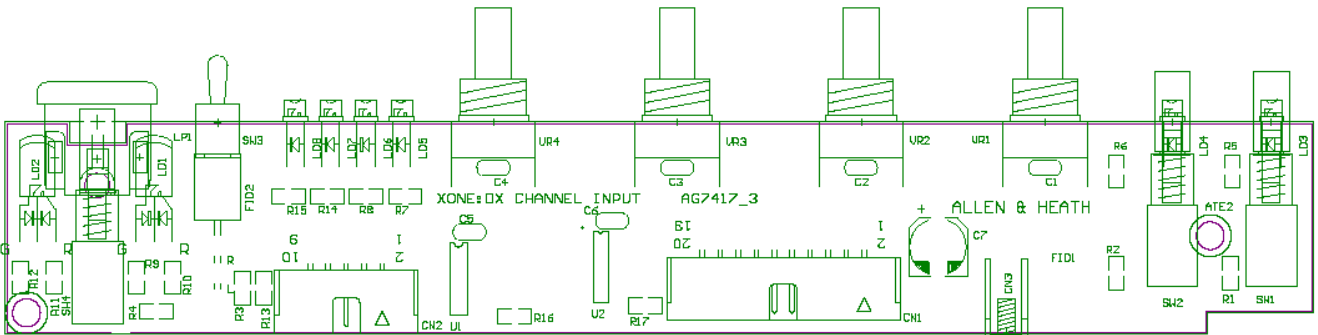 


**MIDI channel
003-878**

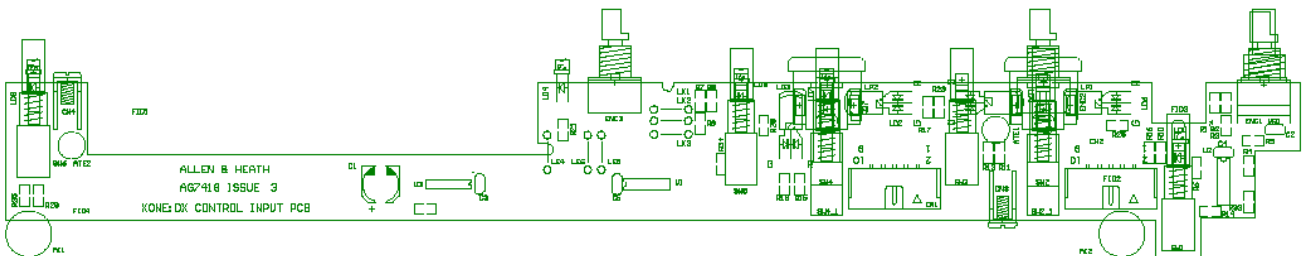 


MIDI control 1, 5 003-879

 
MIDI control 2, 3 003-994

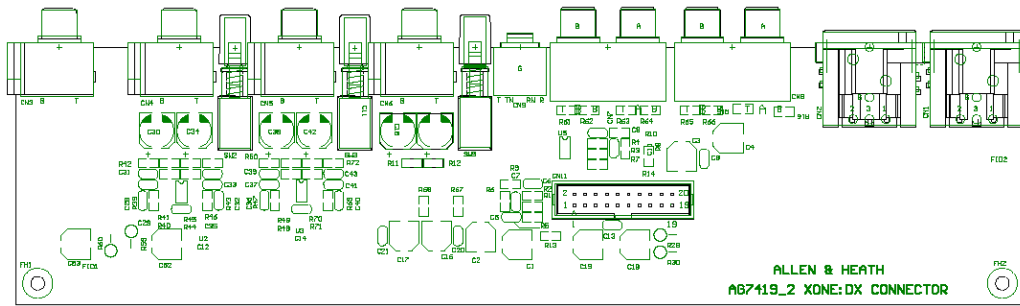


**Connector
003-880**

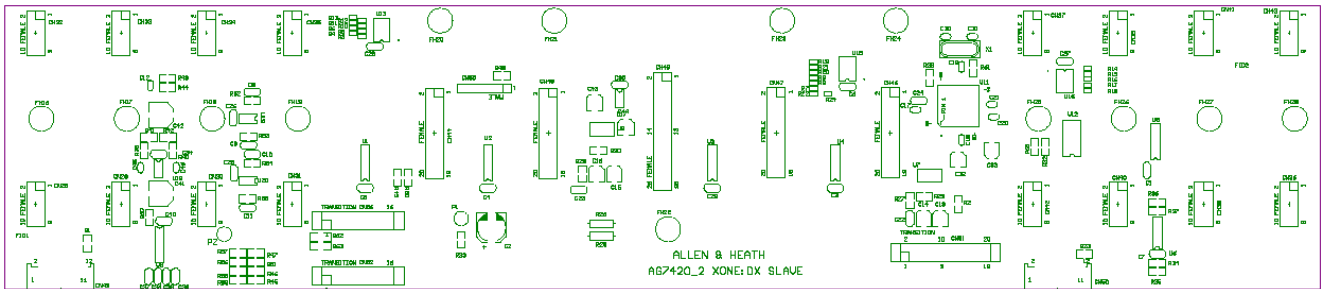 


**MIDI slave
003-881**

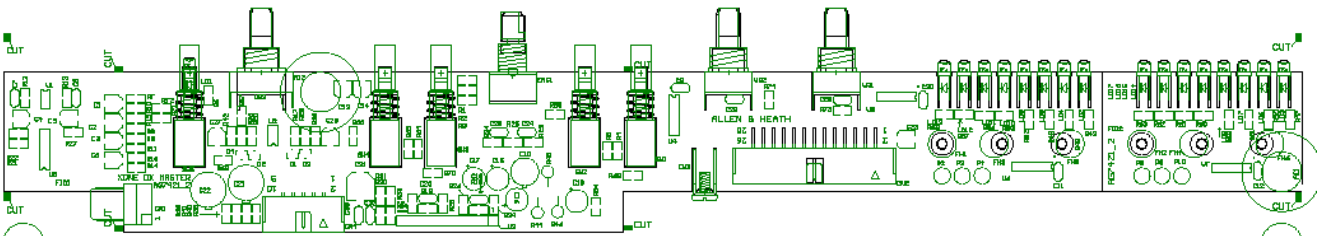 

**Master
003-882**

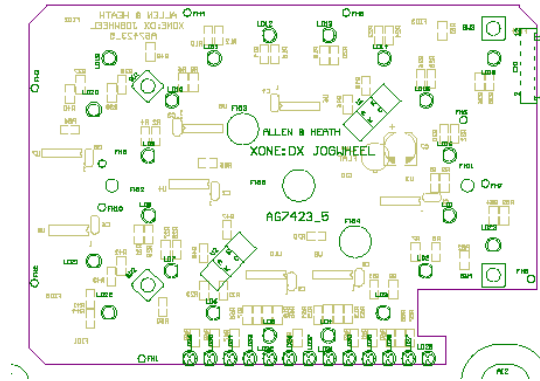 

**Jogwheel
003-884**

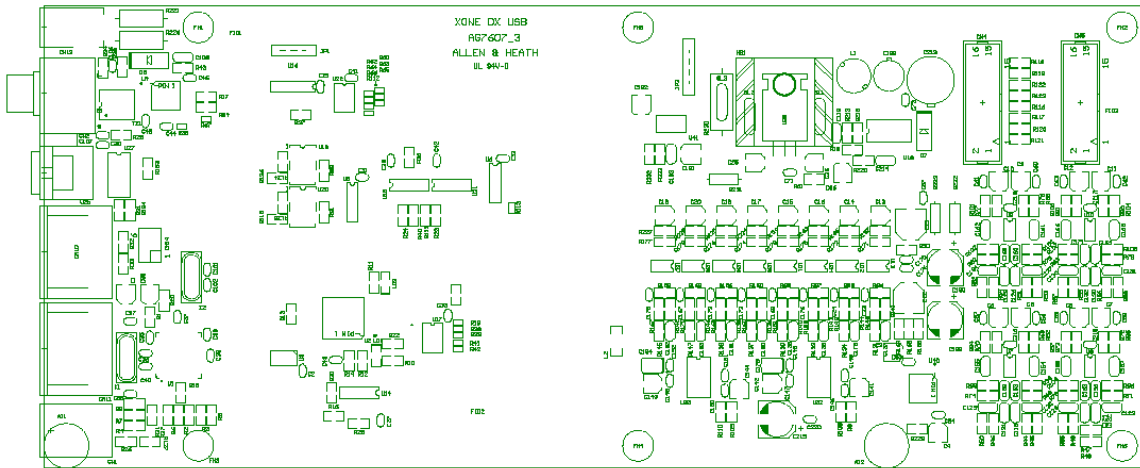 

**USB Audio
003-877**

ALLEN&HEATH

Parts identification sheet

Xone:S2

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PARTS:

AJ5386 Rotary knob small. Black / silver. (19pcs)
AI8006 Pot 20KBx2. Centre detent.

AJ5387 Rotary knob large. Soft touch. Black / silver. (14pcs)
AI8006 Pot 20KBx2. Centre detent.

AJ4251 Push button round. 8mm. Black. (11pcs)

AL2412 XLR F socket. (2pcs)

AB2810 Screw 4X5/16 Pan
 Torx Blk Pips (10pcs)

AL5323 Jack socket. 3.5mm. PCB mount (1pc)

AL0328 Jack socket. Chrome
 bezel. (1pc)

AJ6904 Push button. Offset. Red / black. (7pcs)

AB3819 Screw
 M3X5 Csk Pozi
 S/S (6 pcs)

AJ5324 'Lightpipe' ring. (7pcs)

AJ5325 Push button. 13mm. Black. (7pcs)

 
AJ5320 Fader knob. Xone. Black. (4pcs)

 
AB3818 Screw. M2X4 countersunk.
 Torx head. Stainless steel. (4pcs)

AJ4310 Fader knob 11mm. Black / White. (2pcs)

003-724 X-fader assembly (1pc)


AB6952 P cable clamp 3.5mm (2 pcs)

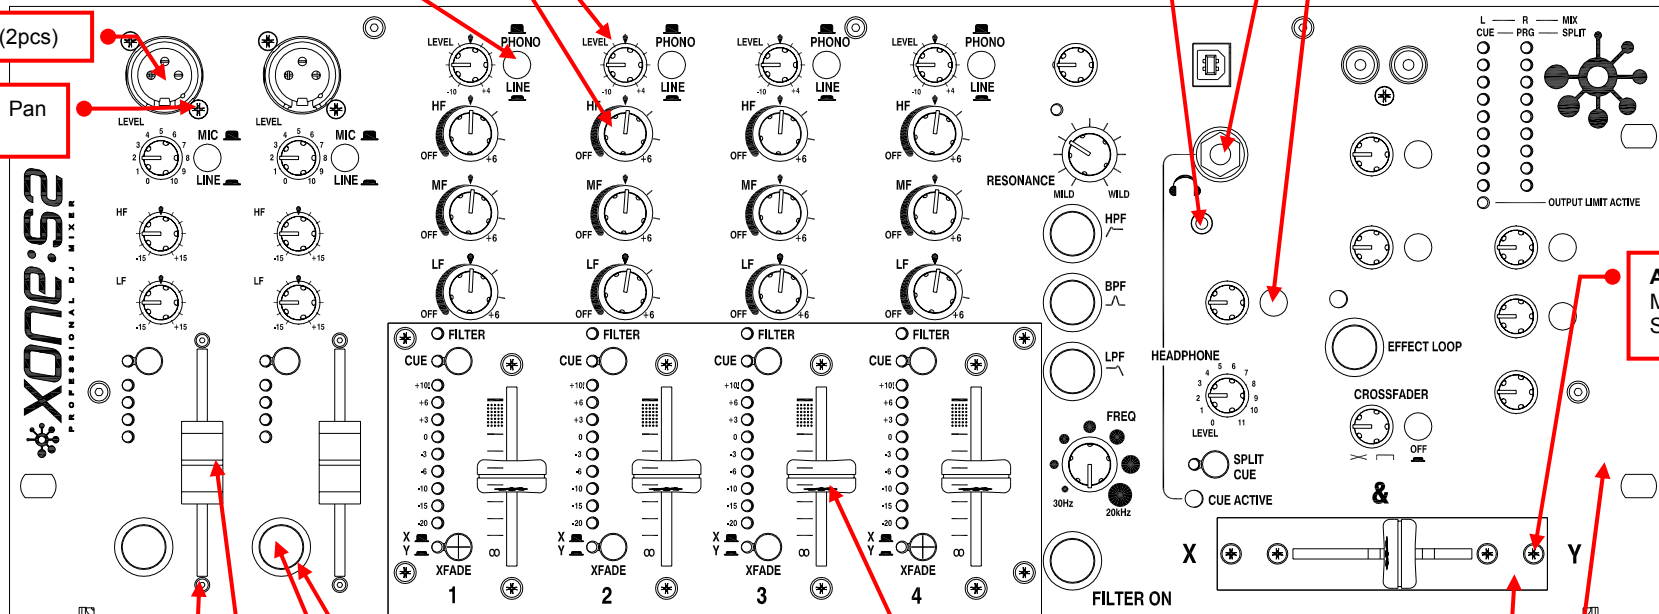

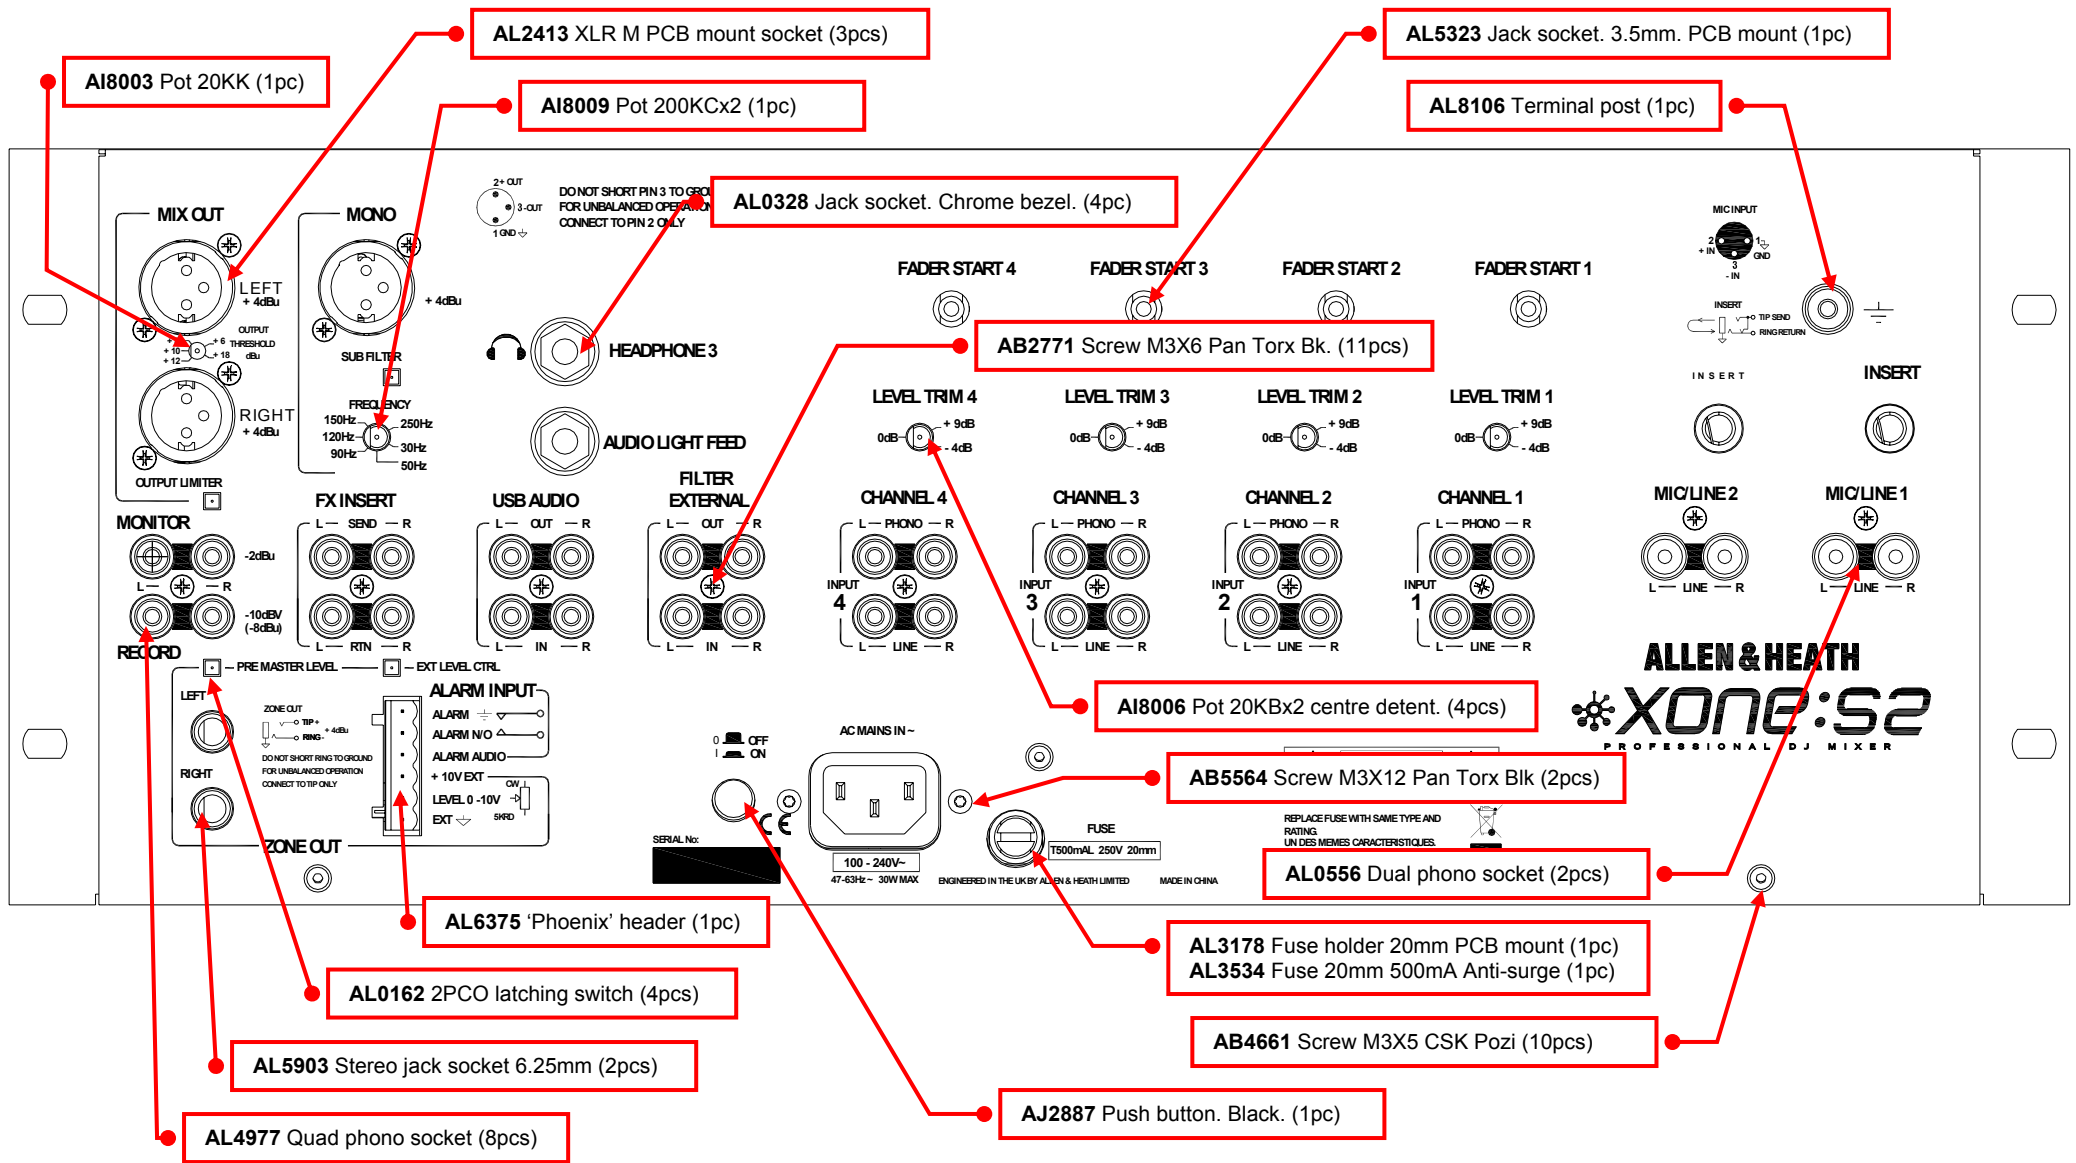

INTERIOR PARTS:

 Xone:S2- Internal parts and assemblies.

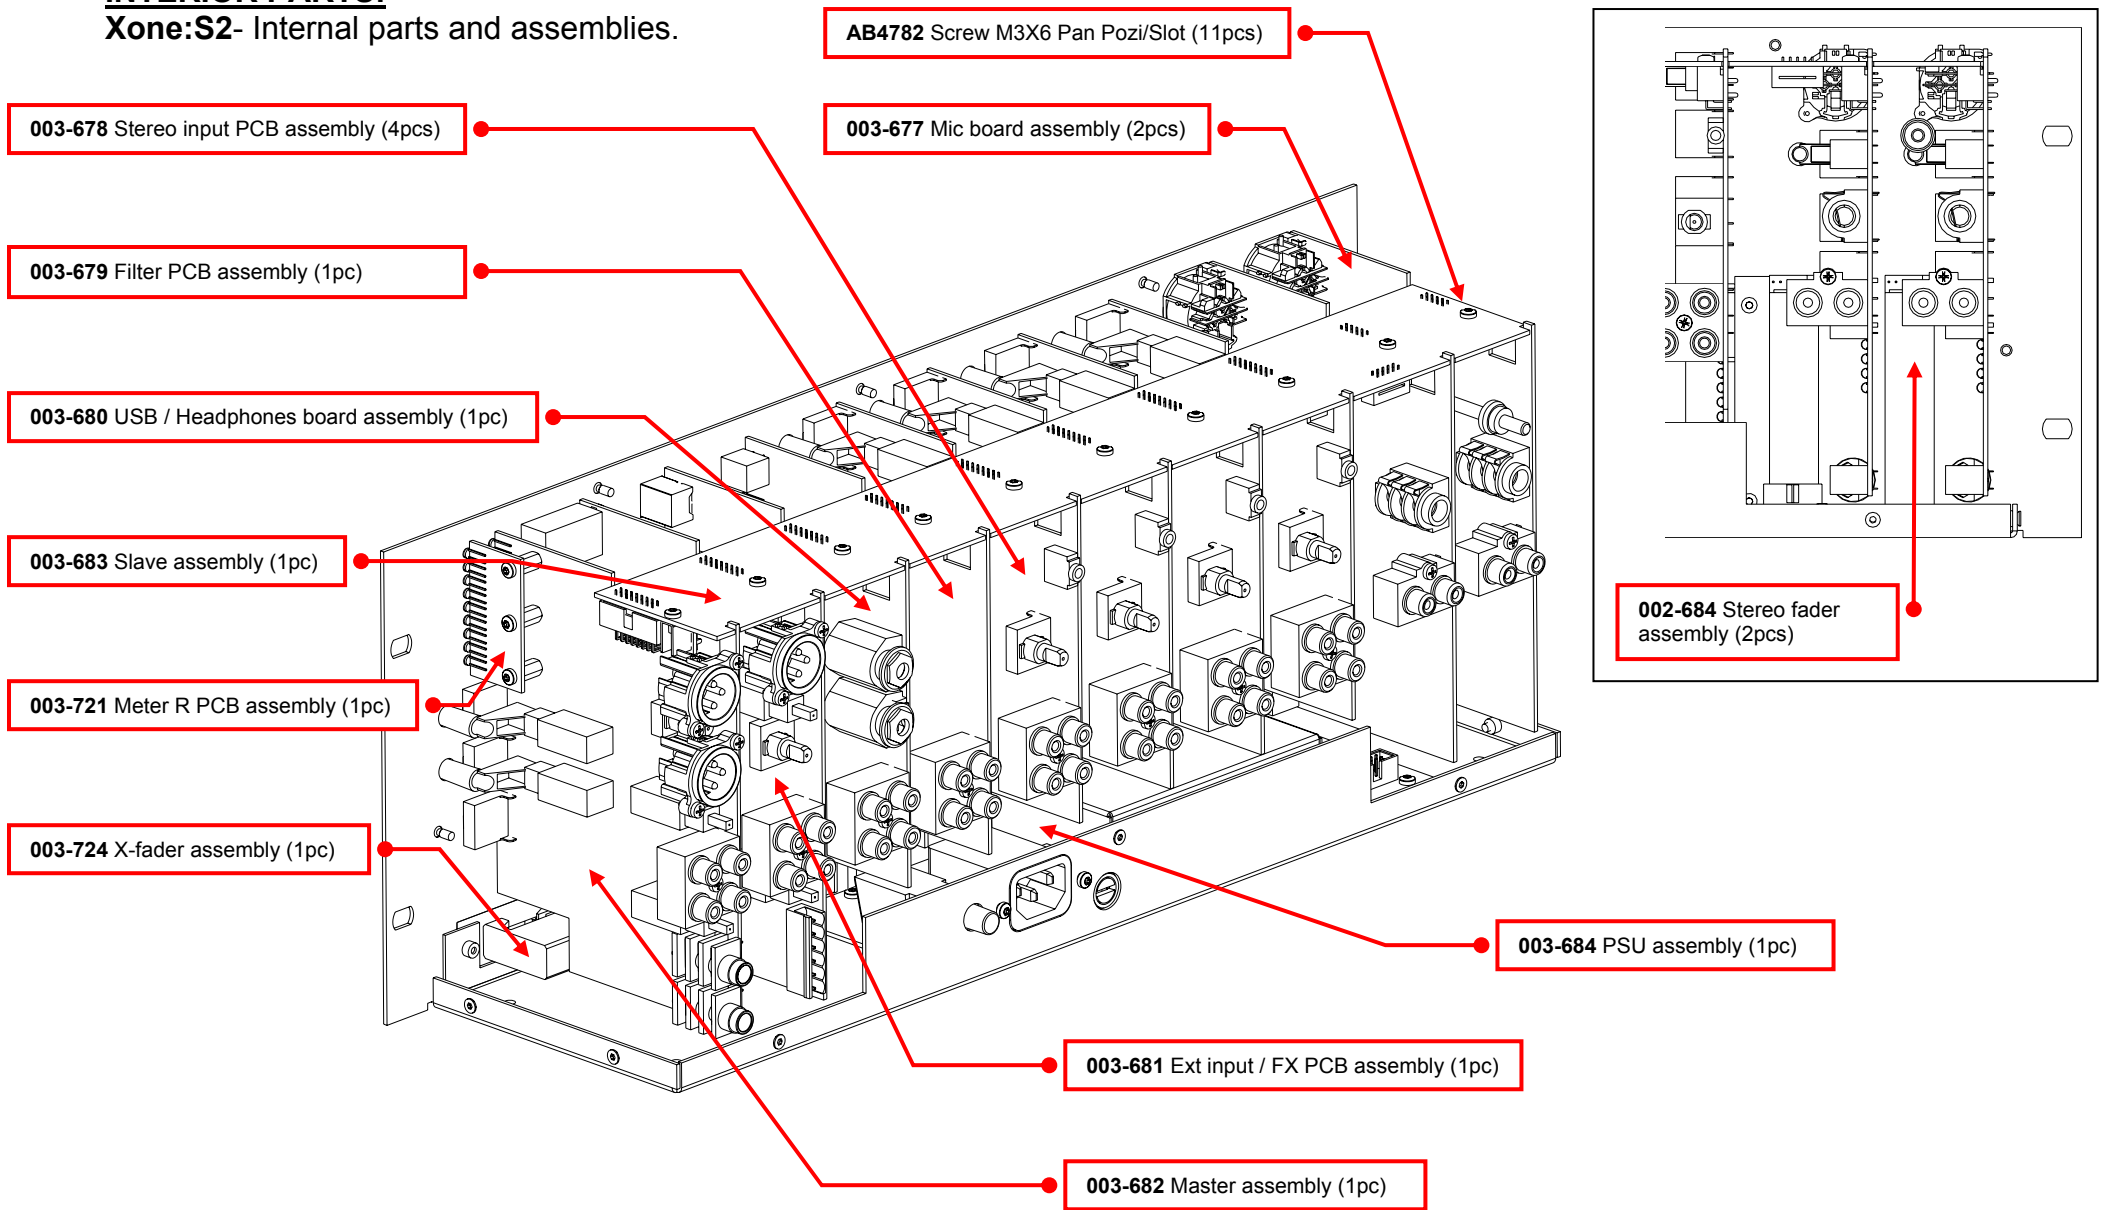

ALLEN&HEATH

Parts identification sheet

 
 
 
 
XONE:S6

How to order parts


Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp


EXTERIOR PARTS:

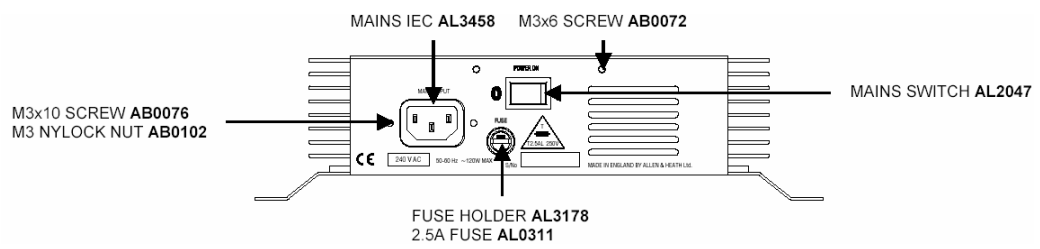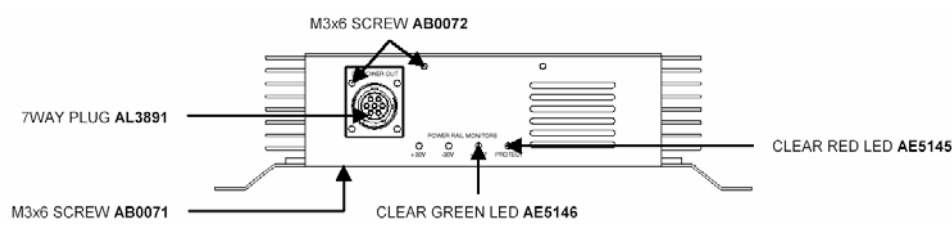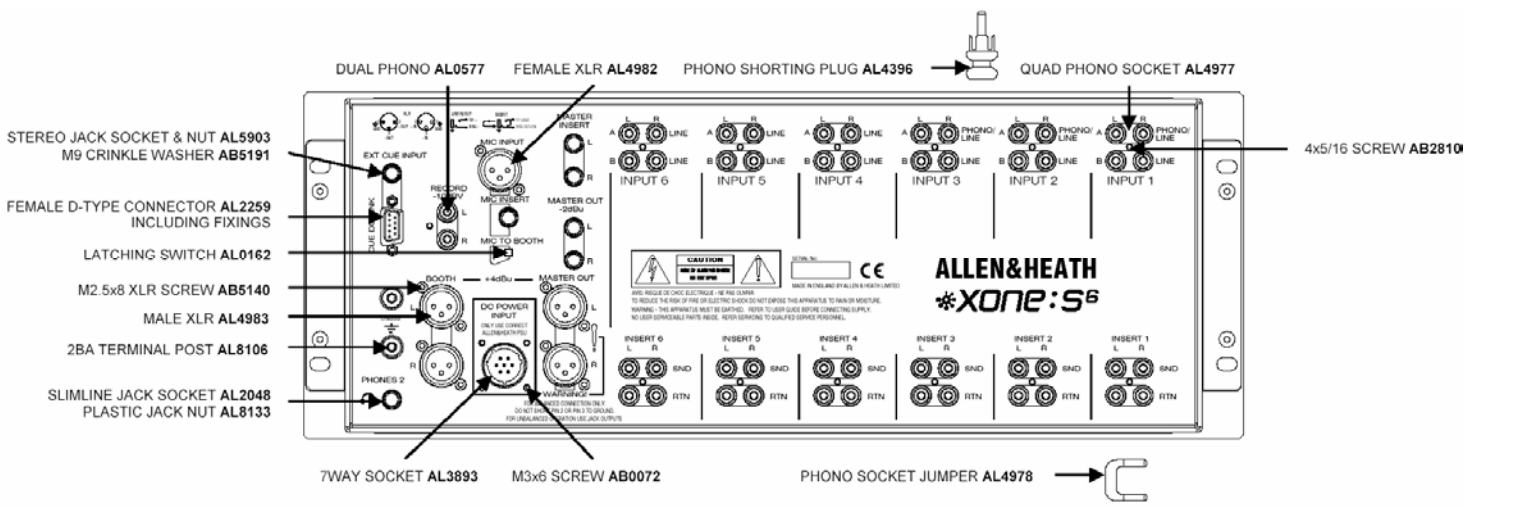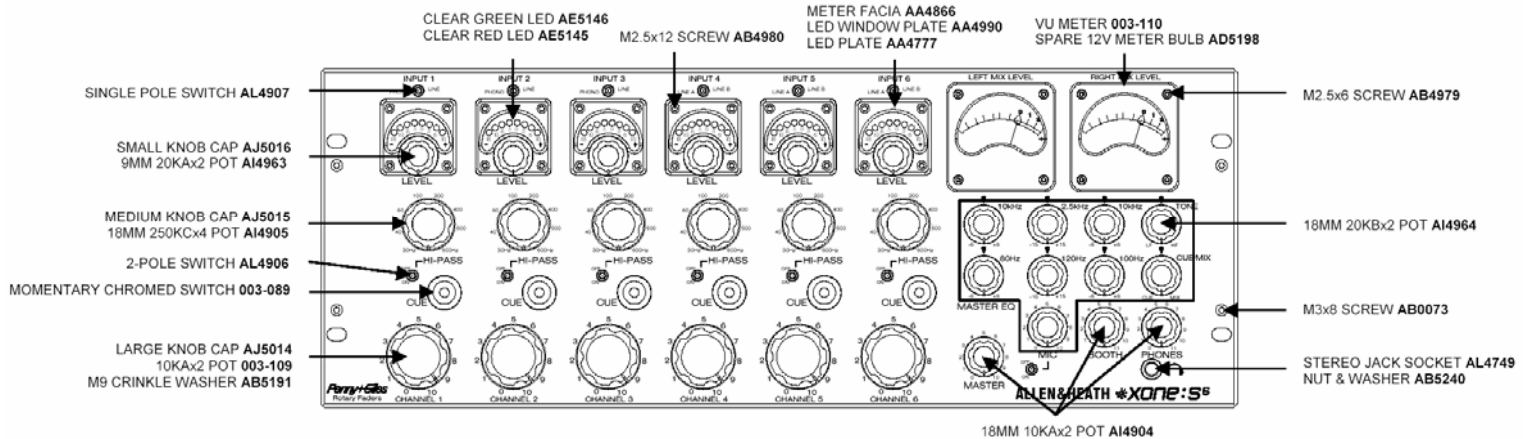


INTERIOR PARTS:

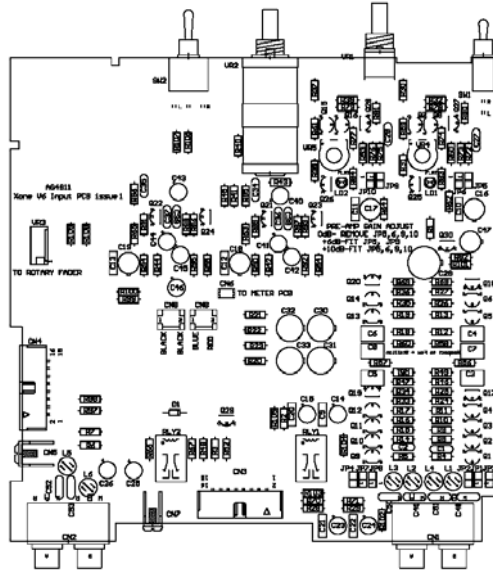 


Input 003-050

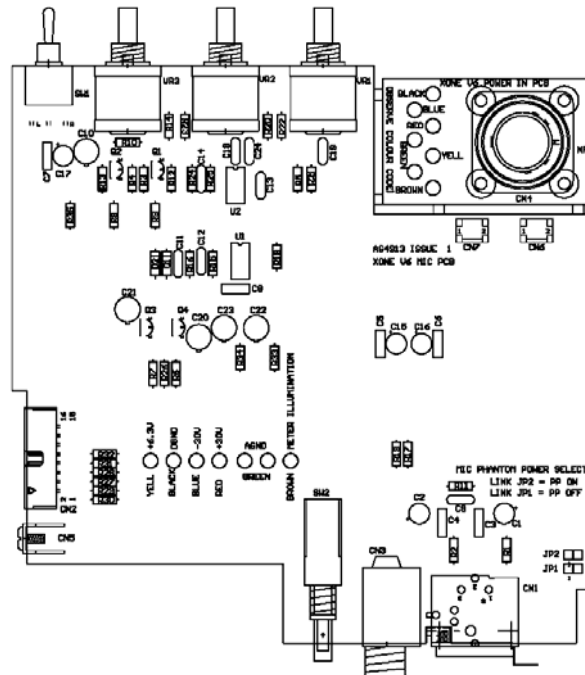 


Mic & DC power socket
003-052

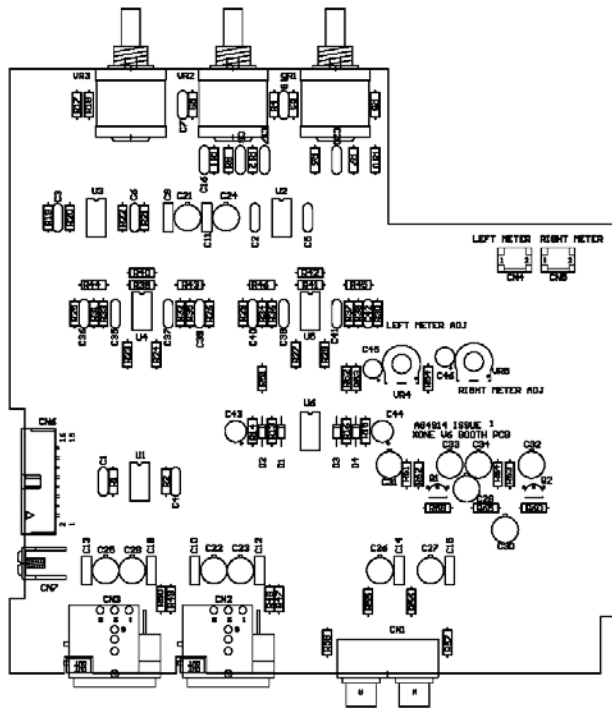 


Booth 003-053

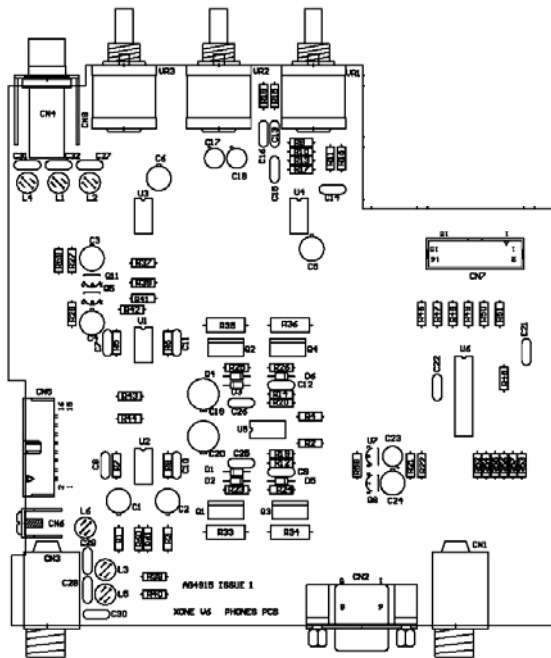 


Phones 003-054

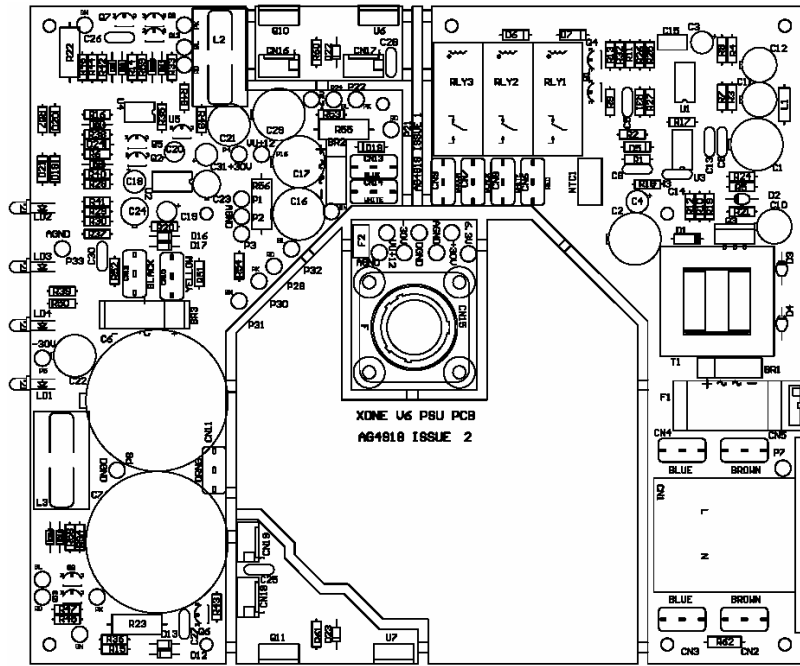 

Power 003-470

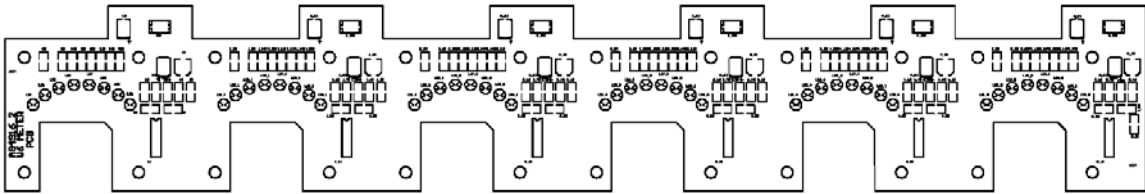 

Meter 003-471

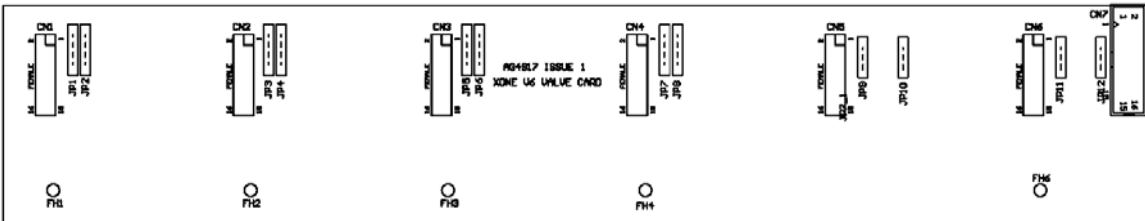 

Slave (valve card) 003-472