


DIODES	
D101	WZ-240
D102-106, 202-206, 702-706, 803-805, 809-815	1S353 or 1S2472
D201, 306, 307, 701	WZ-120
D301	S1VB20
D302, 303, 605, 606	K B2S5
D304, 305, 816, 817	WZ-100
D601, 604, 801, 802, 807	1N4002
D806	1N188
D808	WZ-061
FET'S	
Q101-104, 201, 202	2SK147
Q701, 702	2SK170

TRANSISTORS	
Q105, 106, 108, 109, 112, 203, 204, 206, 302, 303, 307, 703, 704, 708	2SC2240
Q107, 309	2SC2235
Q110, 111, 206, 207, 301, 304, 308, 706, 707	2SA970
Q113, 205, 209, 601-603, 605, 606, 705, 709, 801-805	2SC945
Q114, 210, 710	2SC2824
Q115, 211, 711	2SA1184
Q305	2SC2238 or 2SC22354
Q306	2SA968 or 2SA1011
Q310	2SA965
Q604, 607	2SA733
I.C.'S	
IC101, 201, 701	TL082
IC801	4558

VOLUMES	
VR1	VOLUME CONTROL
VR2	BALANCE CONTROL
VR3	BASS
VR4	TREBLE

SWITCHES	
SW1a,b	(A CONNECTION) PHONO
SW1b	(B CONNECTION) PHONO
SW2a,b,c,d	CARTS
SW3a,b	INPUT
SW4a,b,c,d	MODE
SW5a,b	ATTEN
SW6a,b	RECOR
SW7	FILTER
SW8	STONE
SW9a,b	BASS
SW10a,b	TREBLE

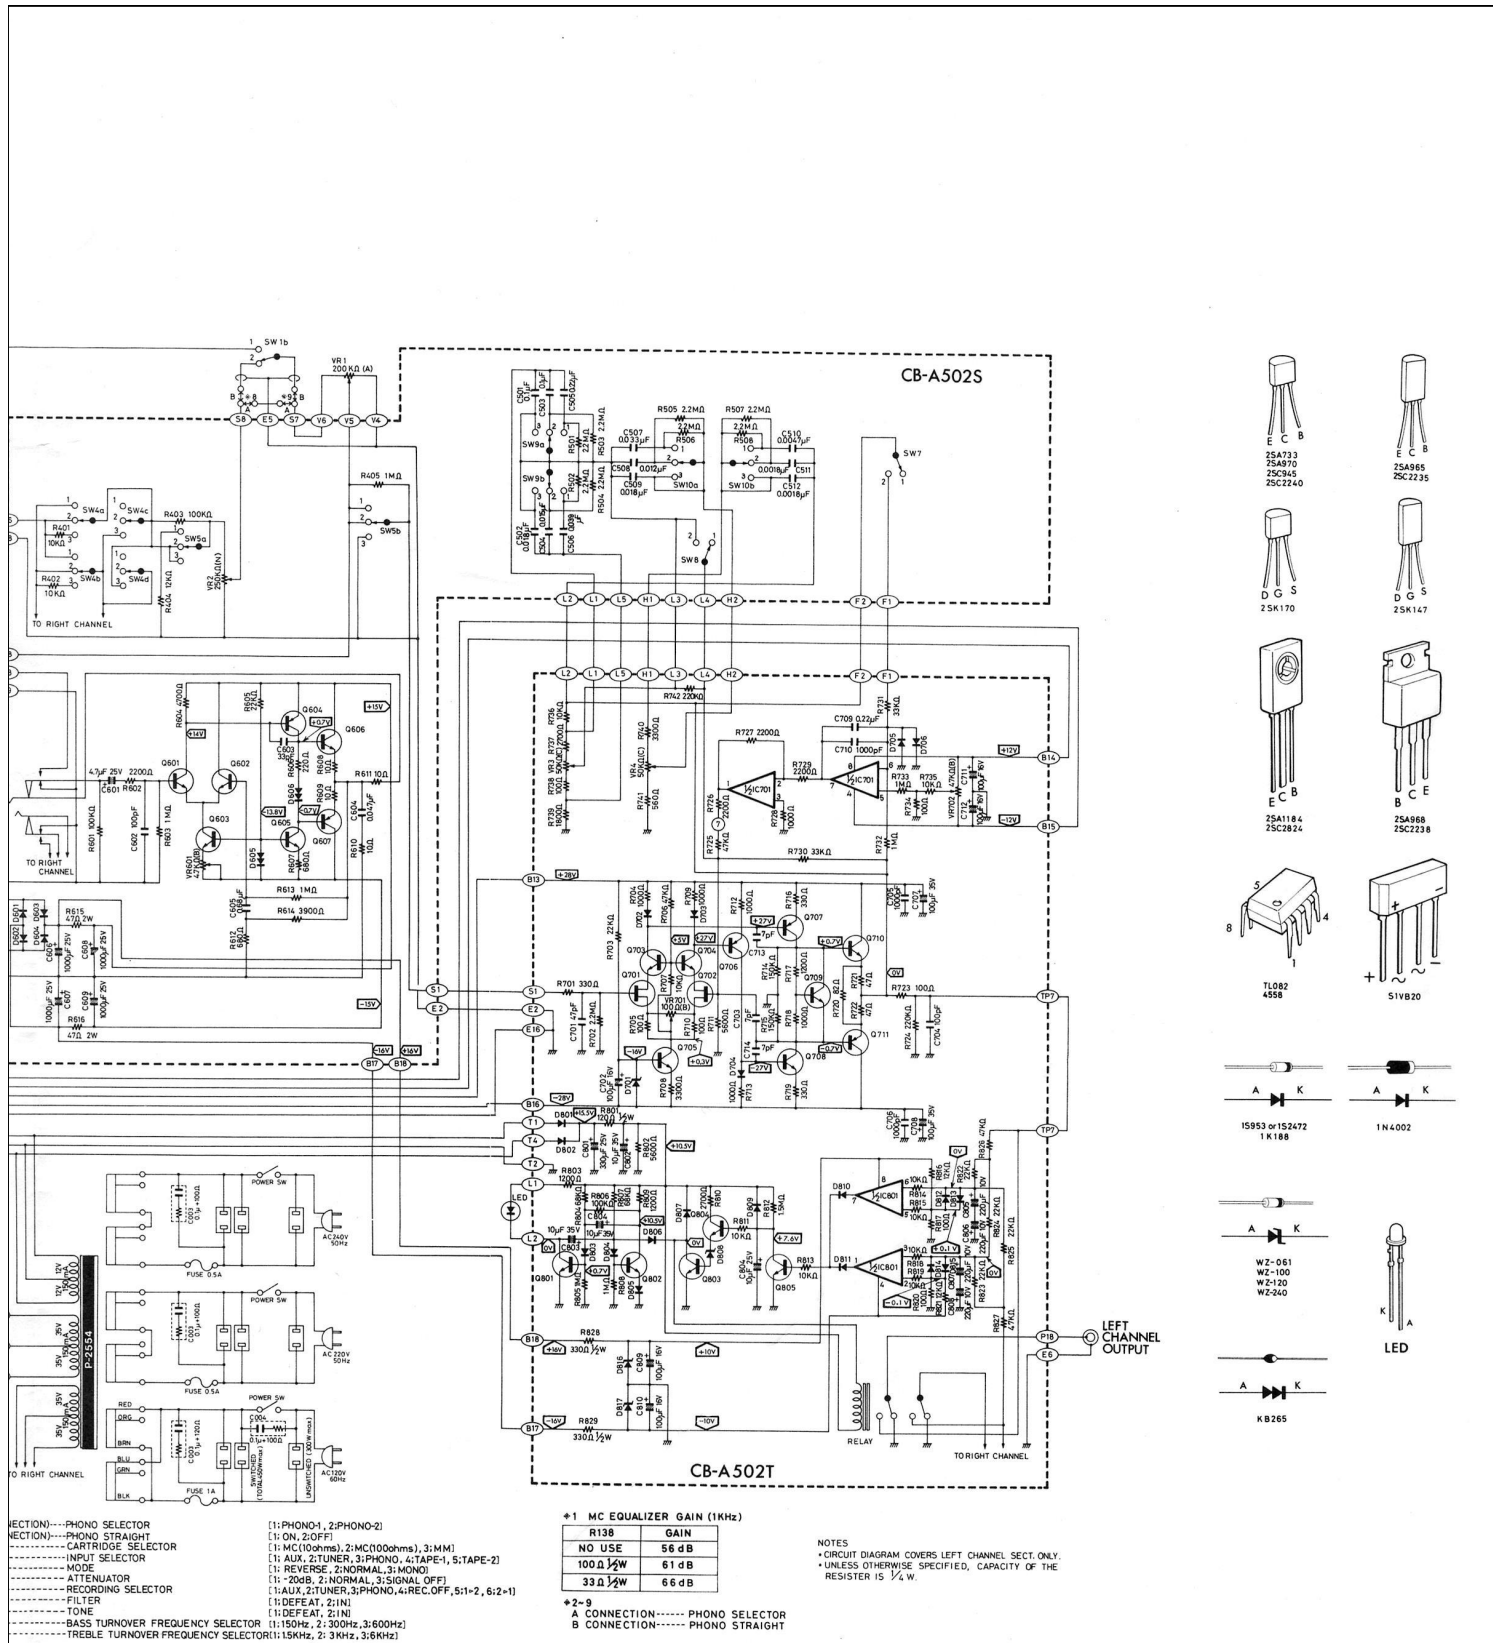

avance Z 502