

# Bang & Olufsen

## Beocenter 2300

Type 2611, 2612, 2613, 2614,  
2615, 2616, 2617, 2618,  
2619, 2620

## Beocenter 2300

Type 2611, 2612, 2613, 2614,  
2615, 2616, 2617, 2618,  
2619, 2620


Indklæbes i Serviceanvisningen Beosystem 2500 (3538775)  
Paste into Service Manual Beosystem 2500 (3538775)  
In Serviceanleitung Beosystem 2500 (3538776) einkleben  
A coller le Manual d'entretien pour Beosystem 2500 (3538776)

3538787

5-91




SERVICE ANVISNING  
SERVICE MANUAL  
SERVICEANLEITUNG  
MANUAL d'ENTRETIEN

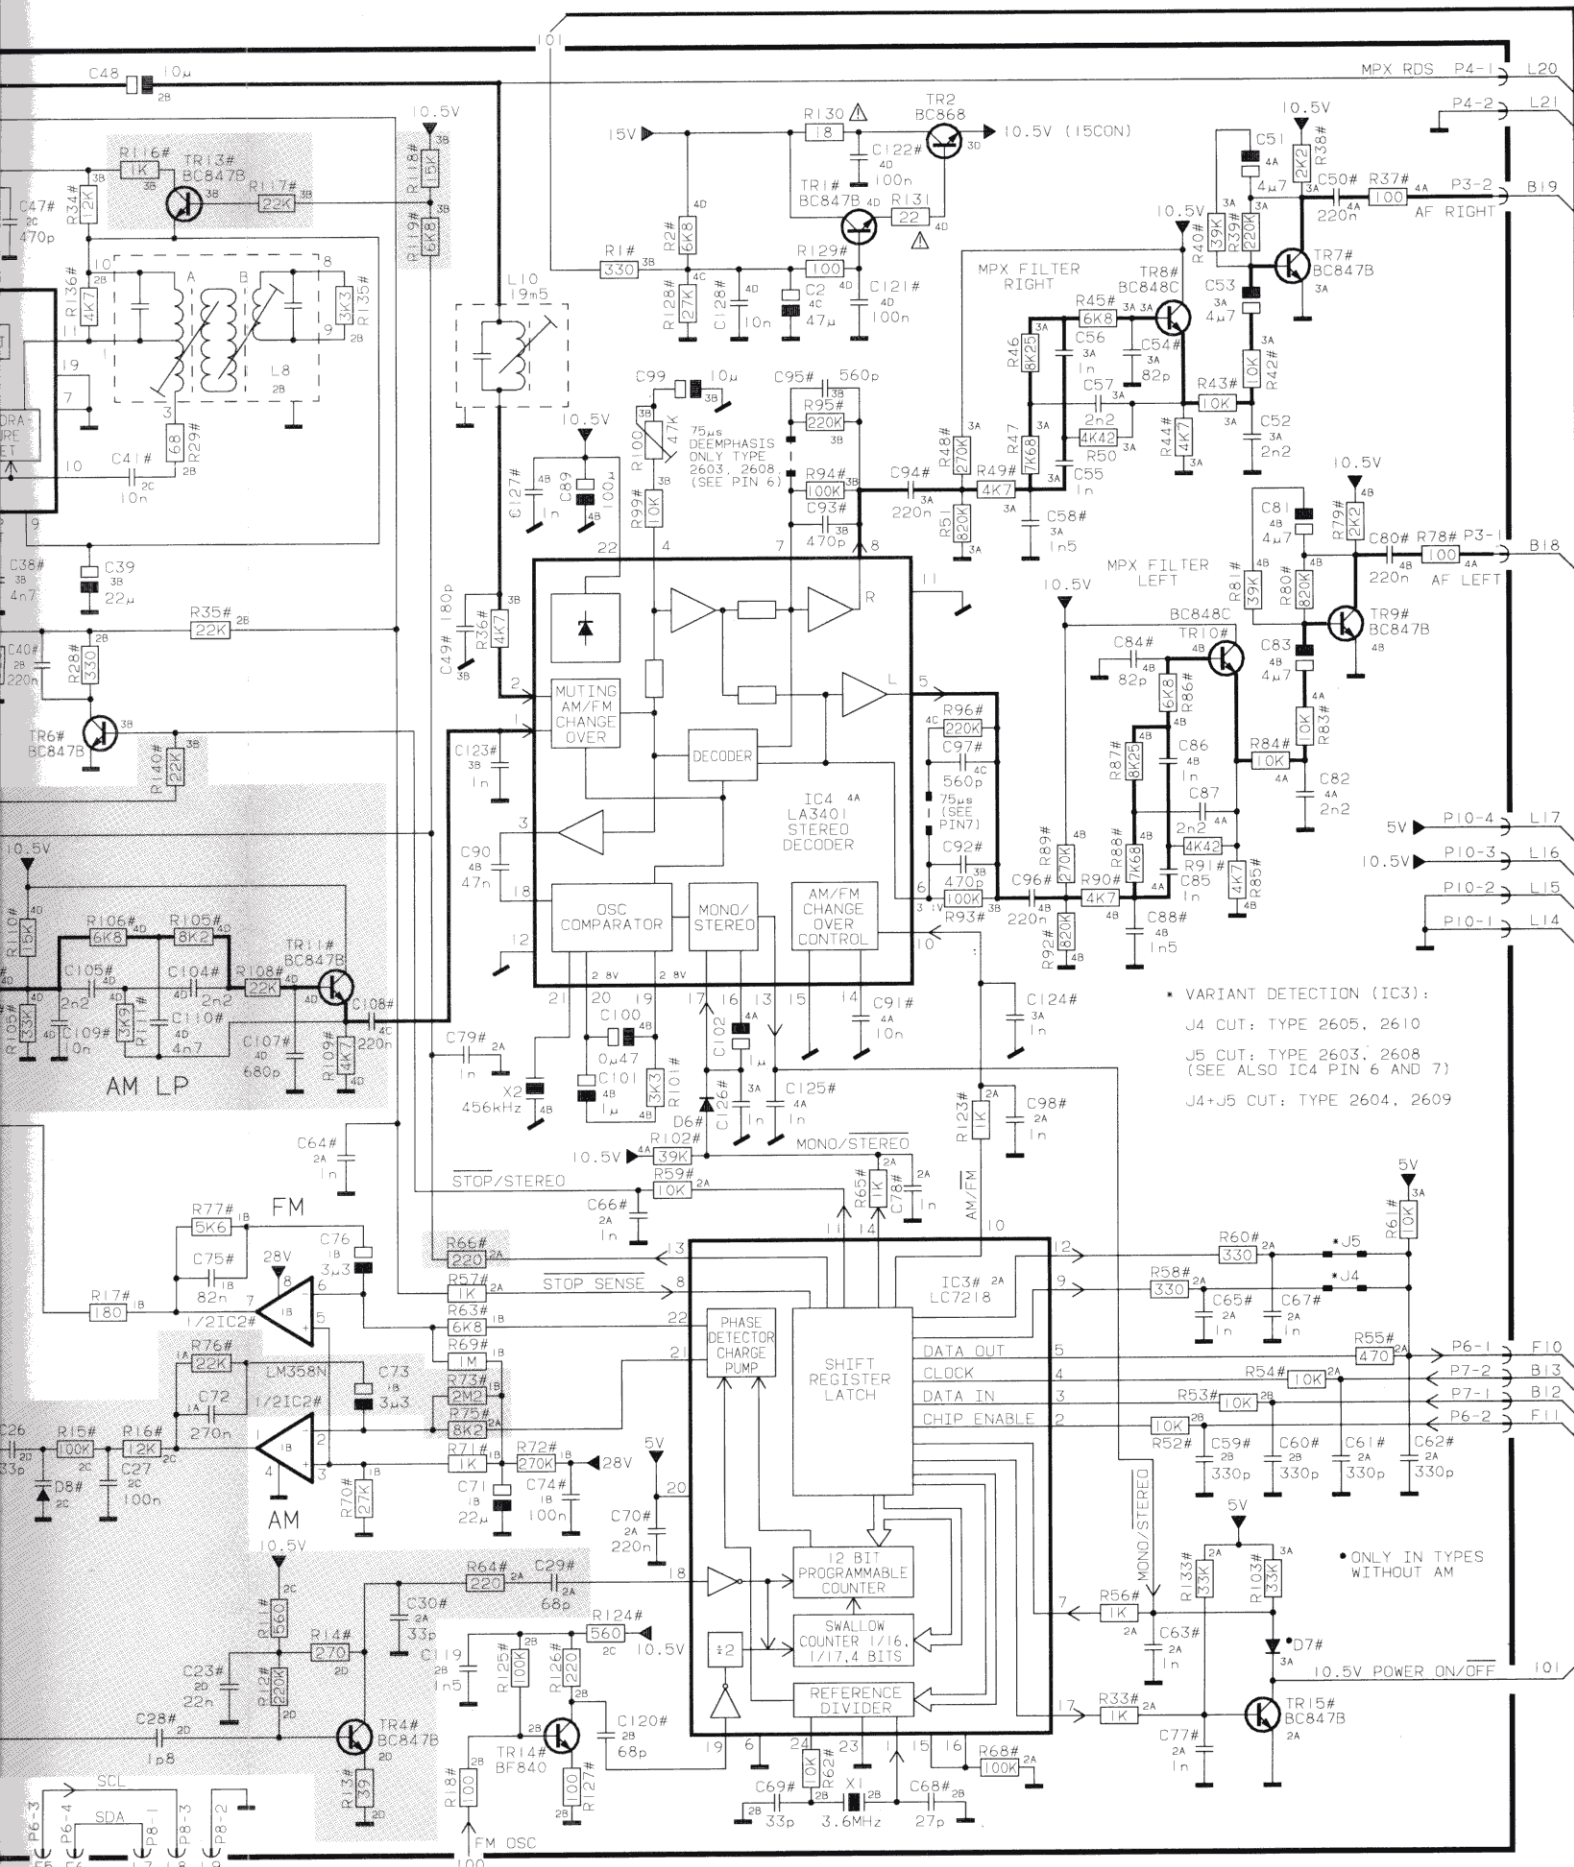


• VARIANT DETECTION (IC3):  
 J4 CUT: TYPE 2605, 2610  
 J5 CUT: TYPE 2603, 2608  
 (SEE ALSO IC4 PIN 6 AND 7)  
 J4+J5 CUT: TYPE 2604, 2609


• ONLY IN TYPES WITHOUT AM



DIAGRAM A FM/AM, RF, IF decoder

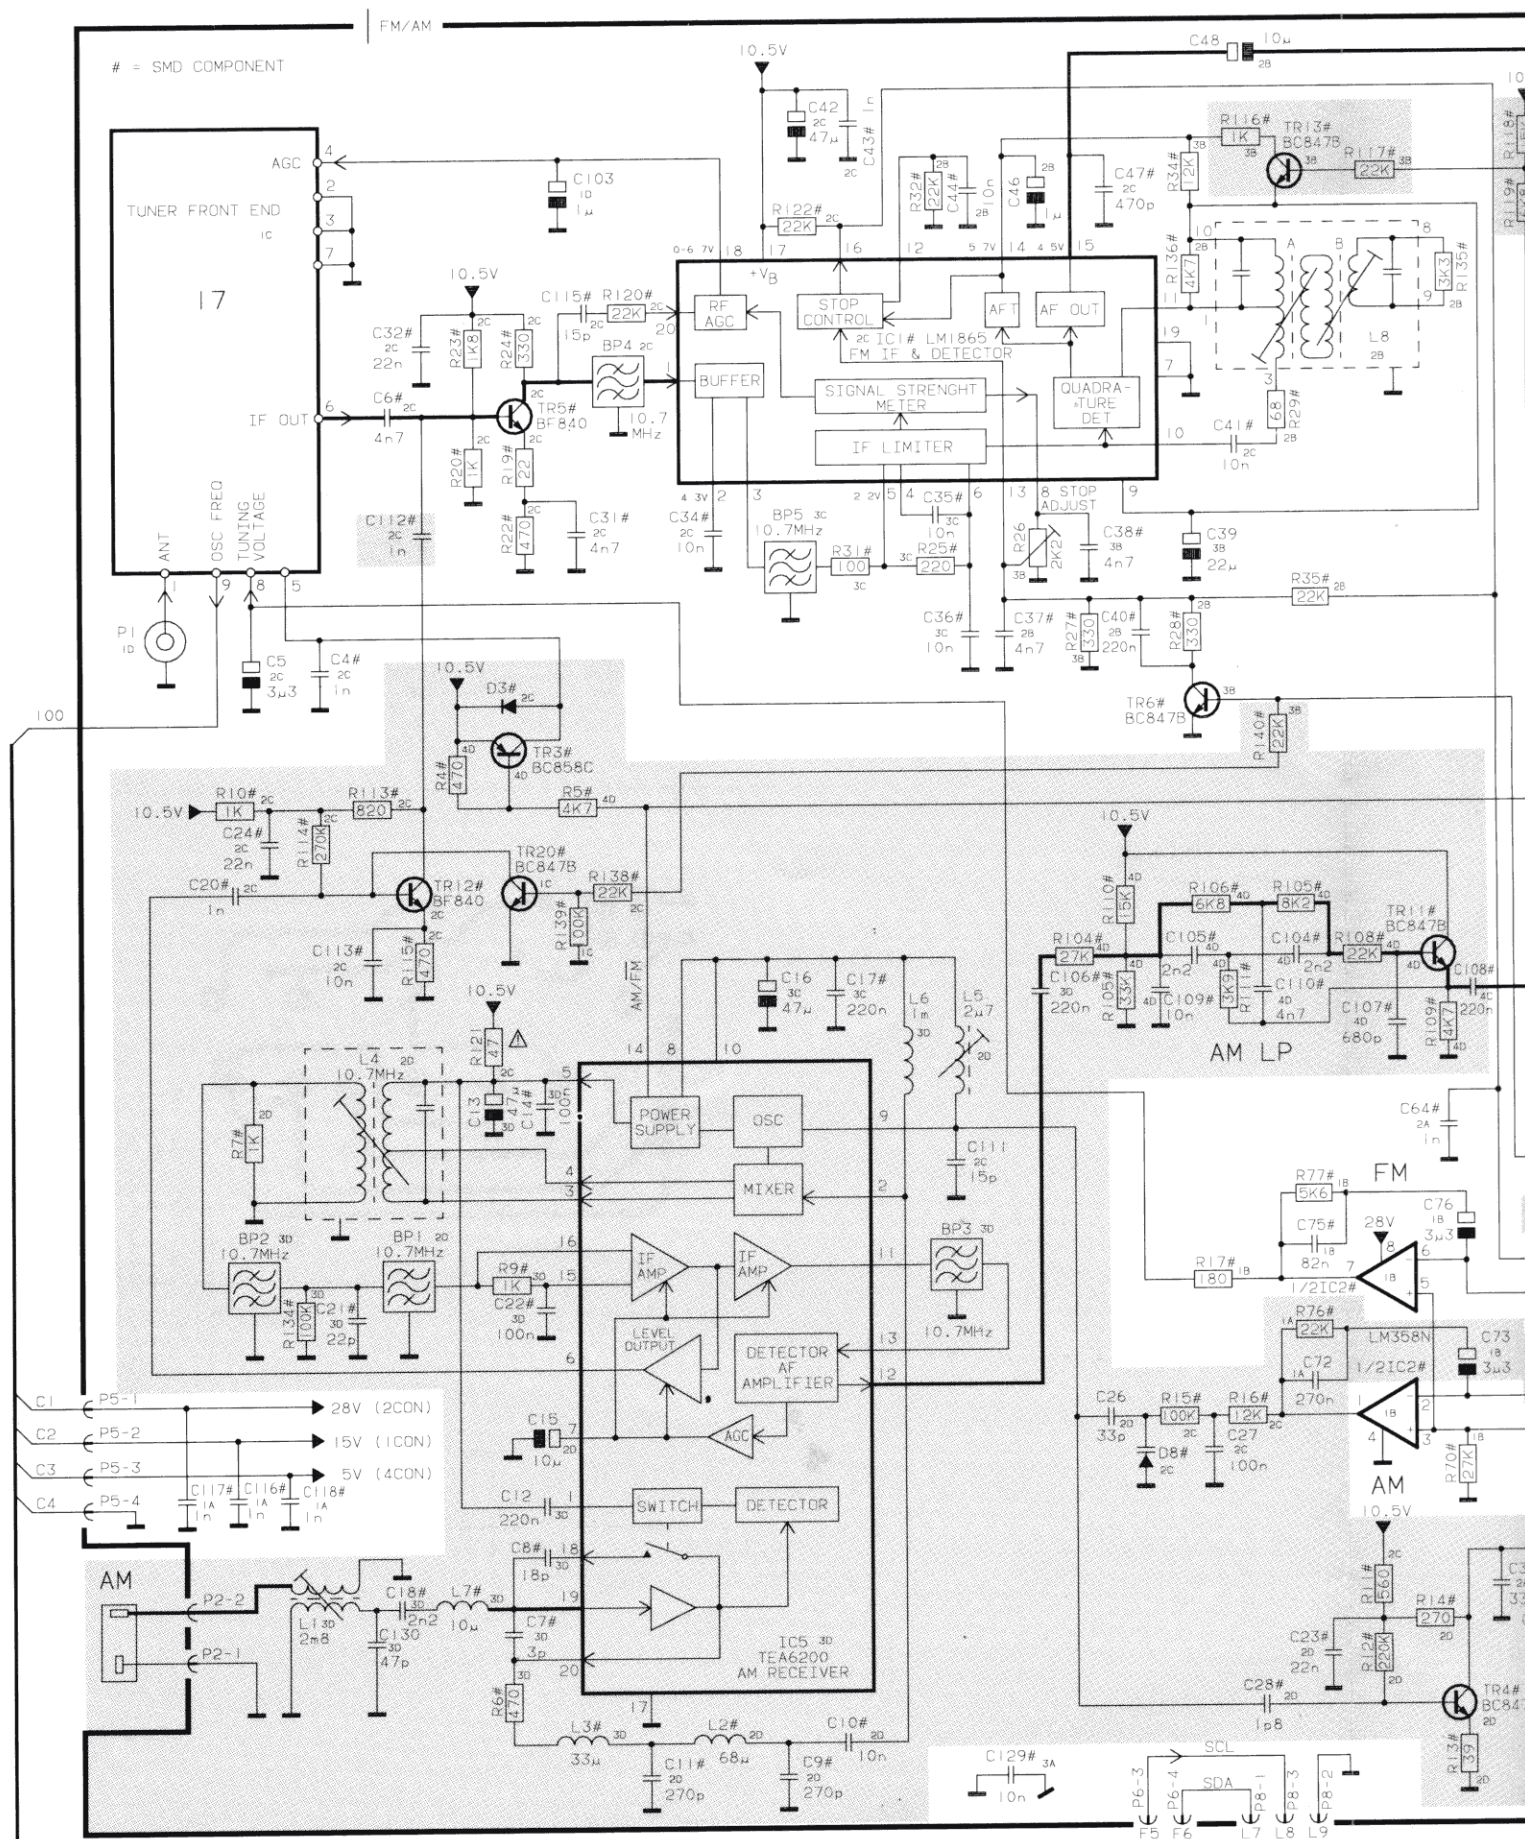

## DIAGRAM F MICROCOMPUTER

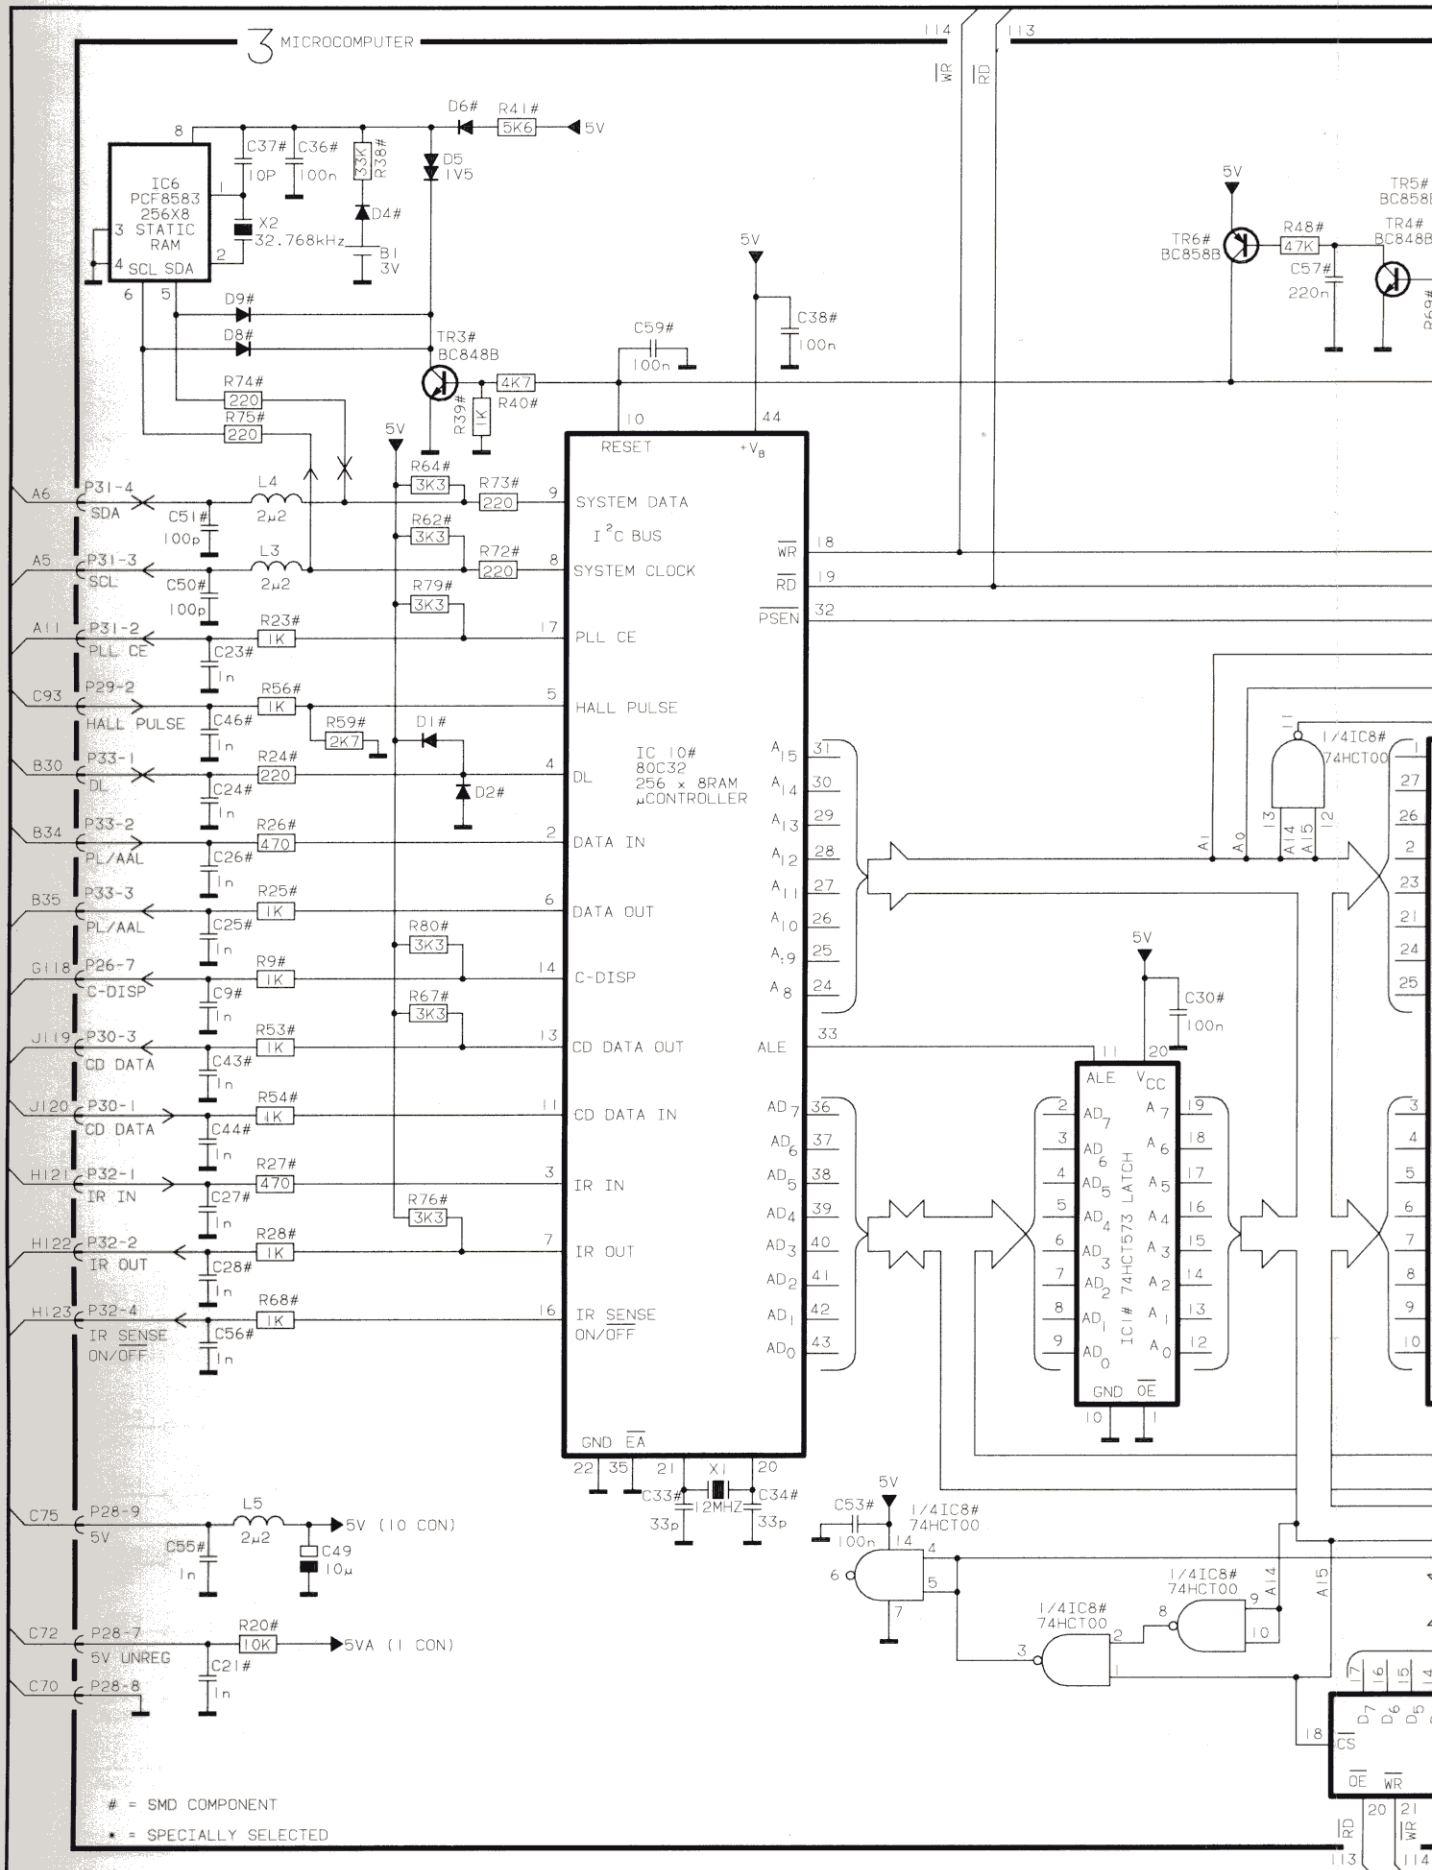

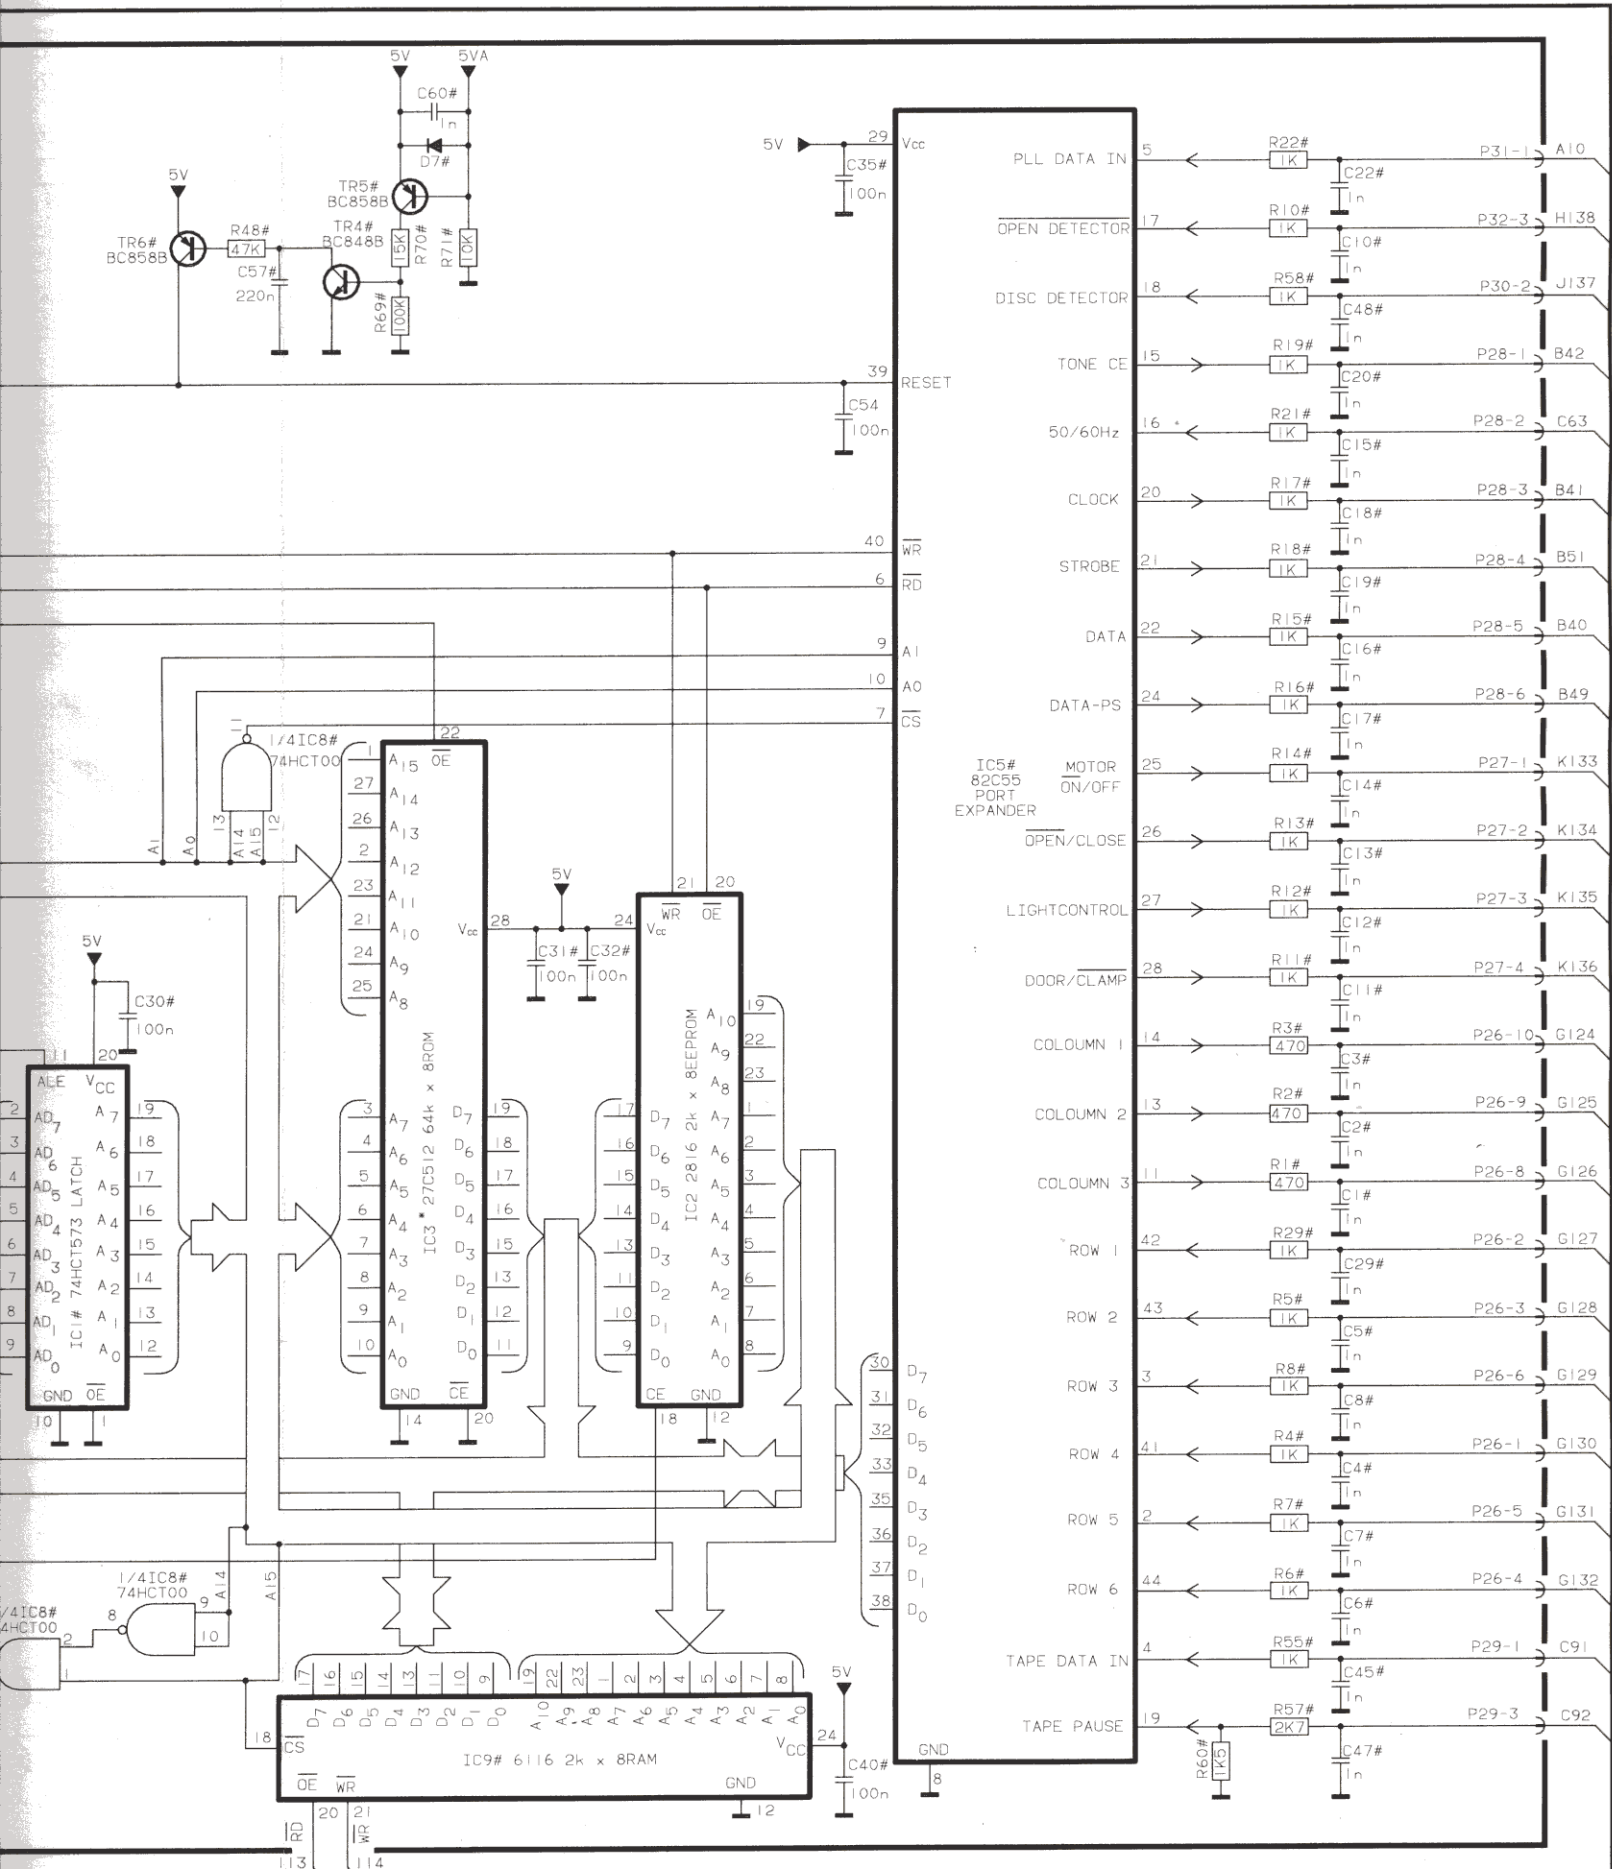

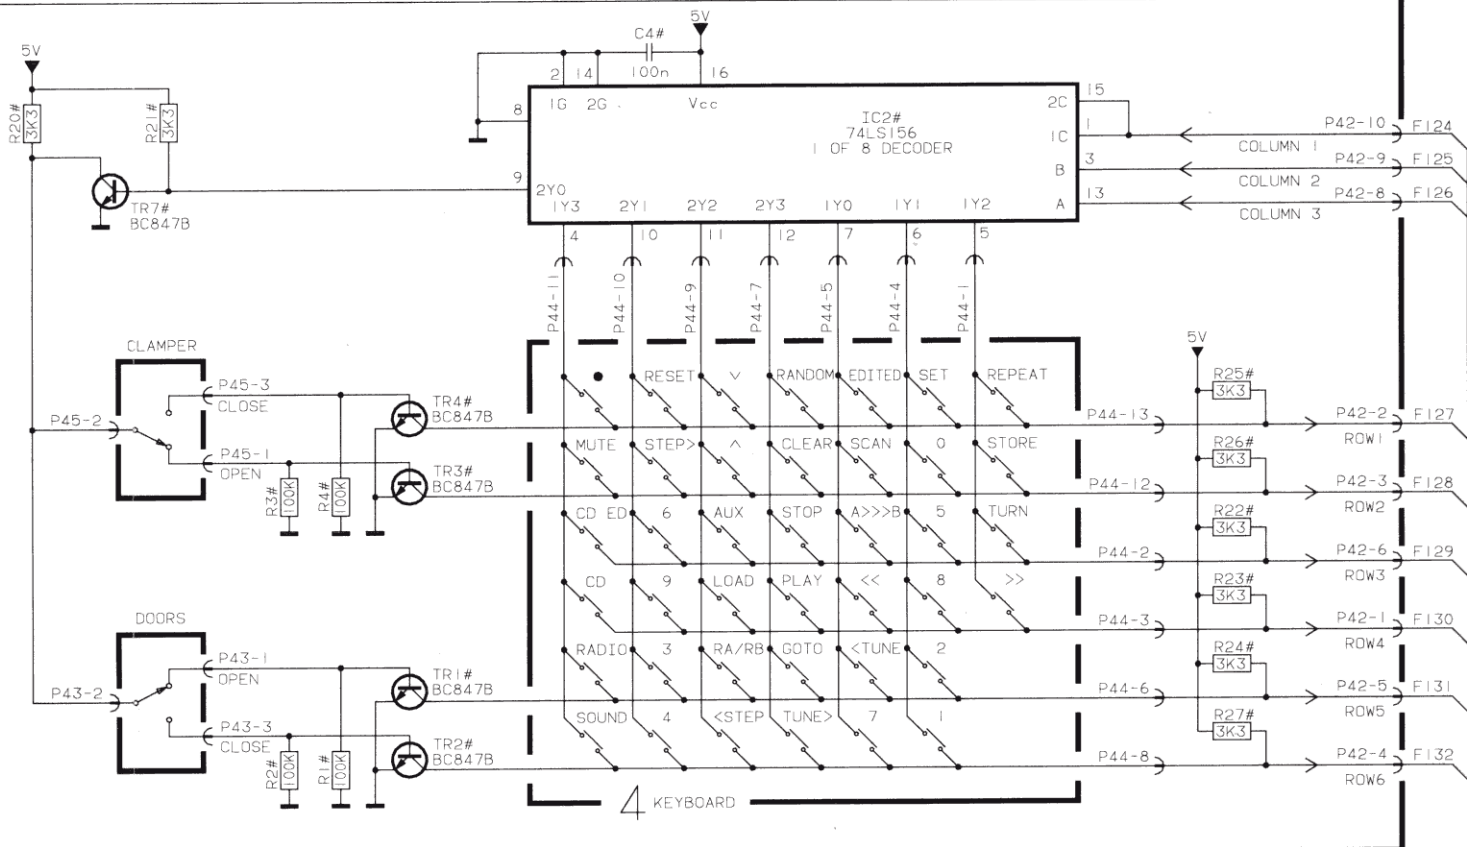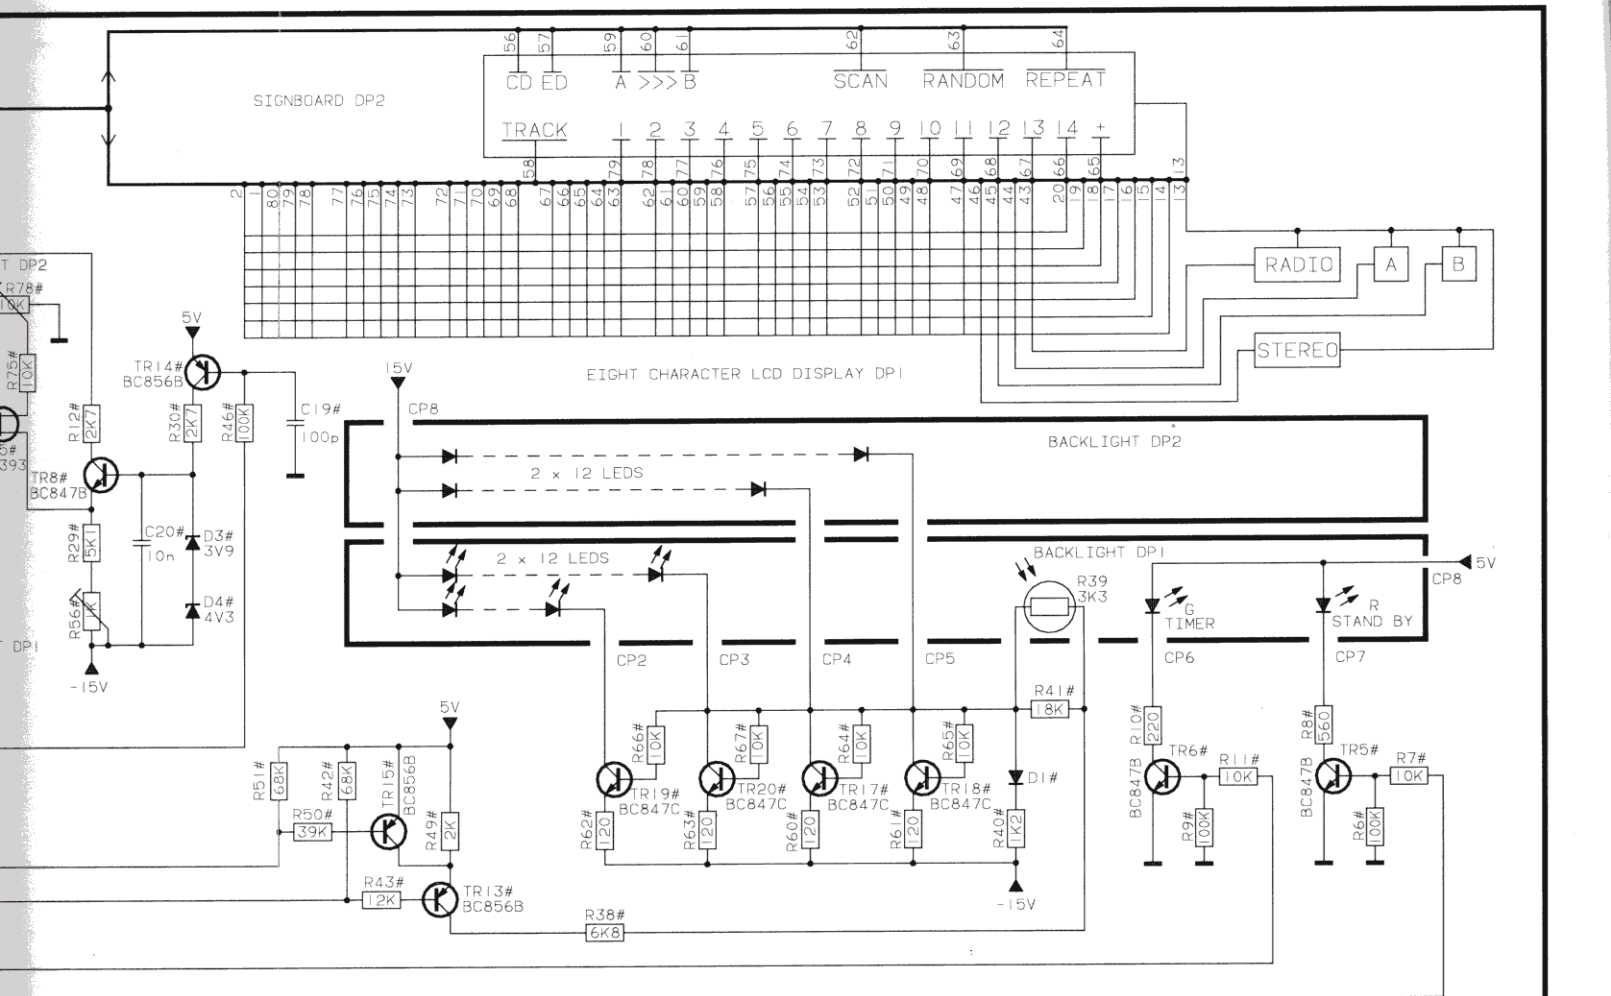

## DIAGRAM G DISPLAY AND KEYBOARD

