


ufsen

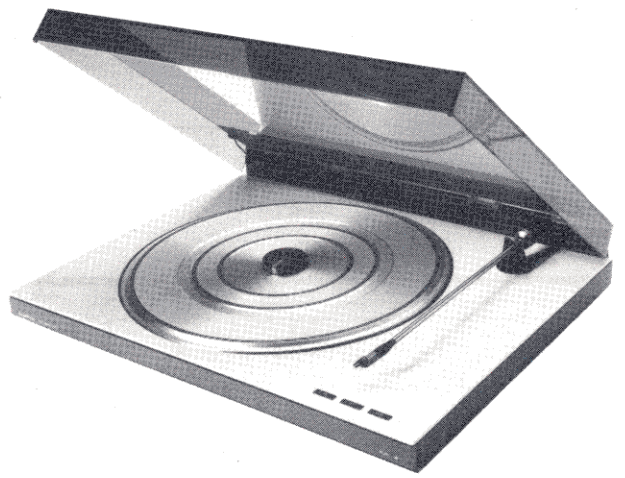


Beogram RX-2
Type 5831 - 5833 - 5835
Supplement for
Beogram 1800, 2000, 5000

0608690231





PLATE INTO SERVICE MANUAL BEOGRAM 1800, 2000, 5000, 1111, 3000

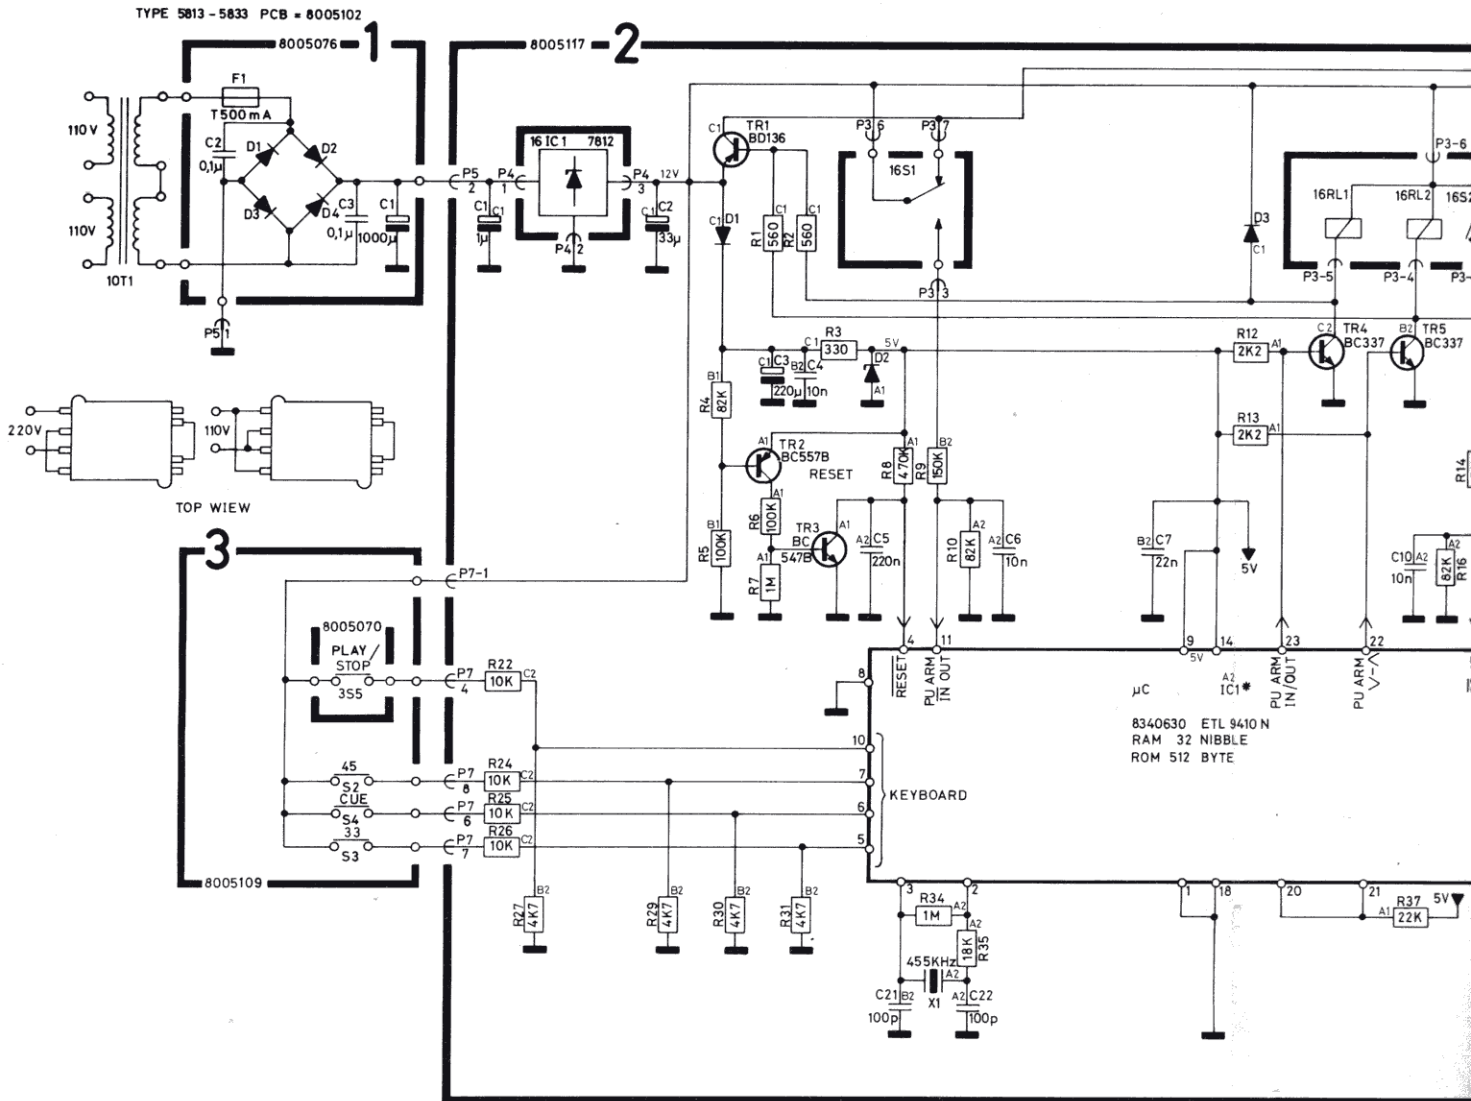

	ACTIVATE	PLAY - STOP		CUE	CUE	PLAY- STOP		CUE	CUE	RUN OFF STOP								
	17cm record on turntable	PU in 2.7-3sec	PU down 1.8sec	Playing	PU up 1.8sec	Pause	PU down 1.8sec	Playing	PU up 1.8sec	PU out 2.7sec	Stop	PU in 2.7-3sec	PU down 1.8sec	Playing	PU up 1.8sec	PU out 2.7sec	Stop	
PU arm in/out output	PIN 23 (16RL1)	[Timing diagram showing a series of pulses corresponding to the control signals]																
30/17 cm. input	* PIN 13 (16S2)	[Timing diagram showing a series of pulses corresponding to the control signals]																
PU arm in/out input	PIN 11 (16S1)	[Timing diagram showing a series of pulses corresponding to the control signals]																
Lift/lower output	PIN 22 (16RL2)	[Timing diagram showing a series of pulses corresponding to the control signals]																
Lift/lower input	PIN 12 (16S3)	[Timing diagram showing a series of pulses corresponding to the control signals]																

* PIN 13 is constant low with 30 cm. record

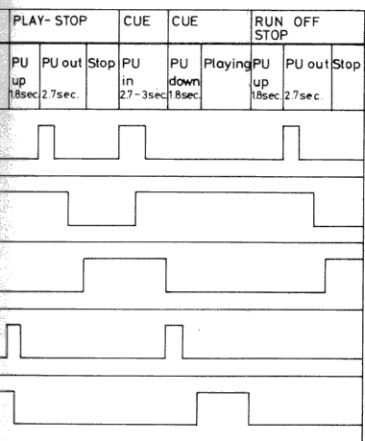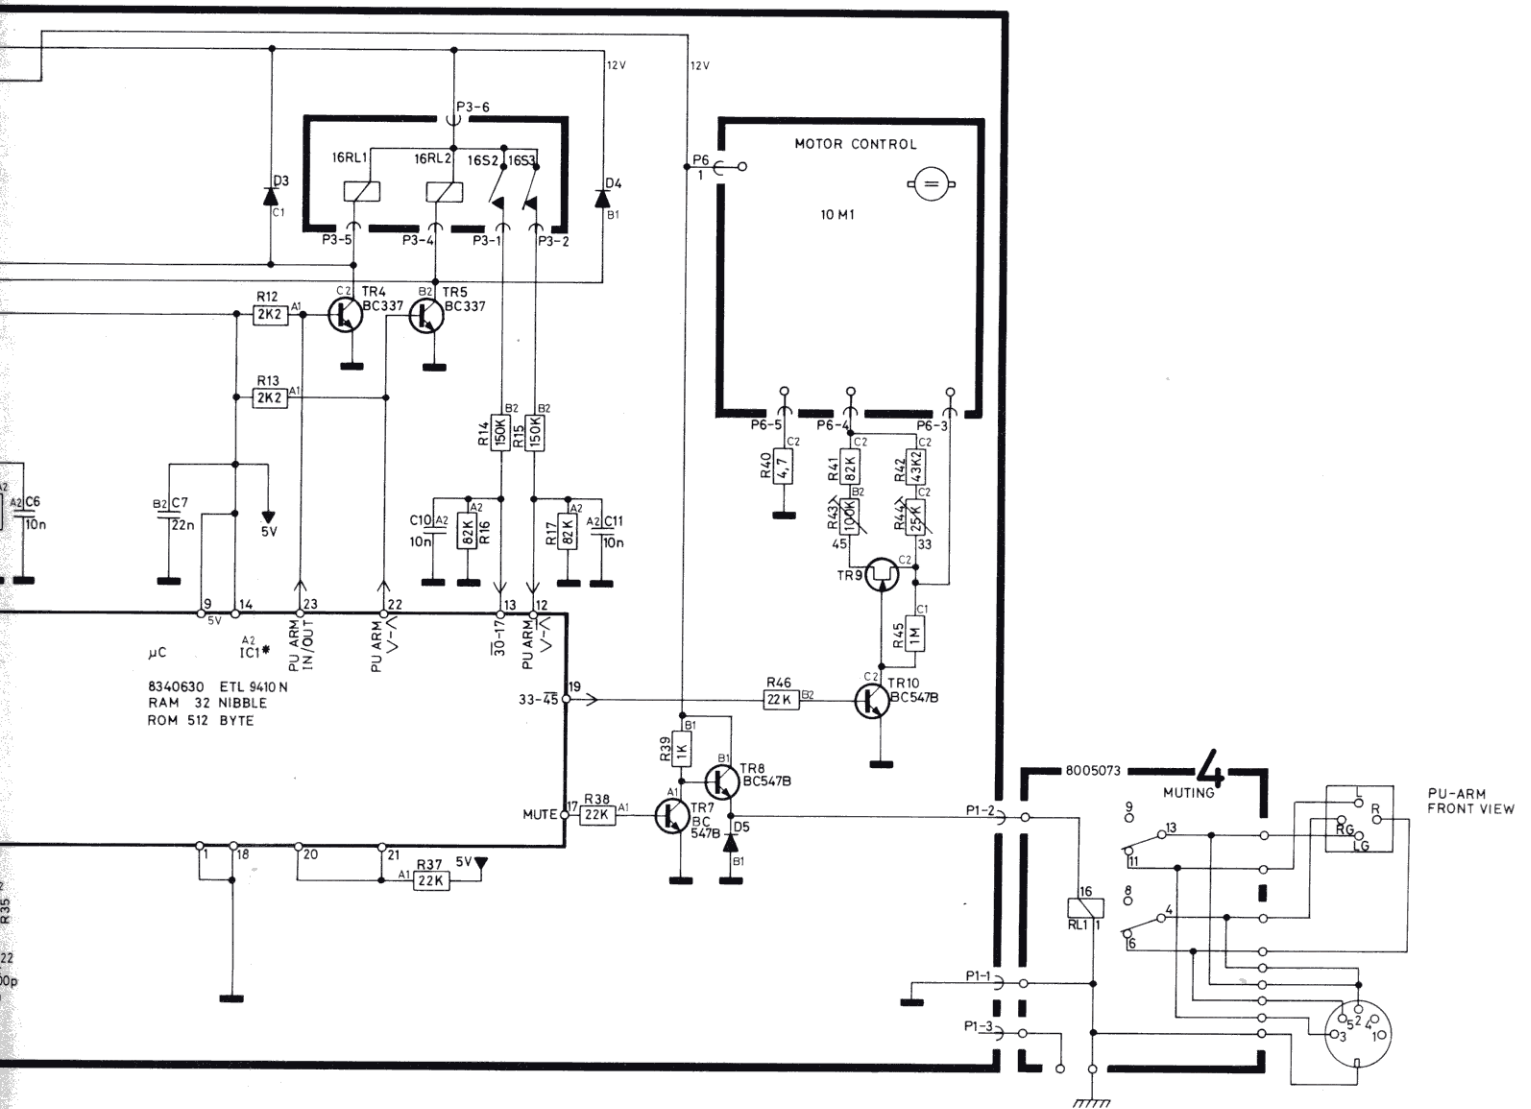

Explanation of the fuse symbols used in the set:
 Replace with same type 500 mA-250 V Slow acting fuse.

GND	1	24	D0
CK0	2	23	D1
CK1	3	22	D2
RESET	4	21	D3
L7	5	20	G3
L6	6	19	G2
L5	7	18	G1
L4	8	17	G0
Vcc	9	16	SK
L3	10	15	S0
L2	11	14	S1
L1	12	13	L0

ETL 9410N