


# Bang & Olufsen

## Beogram 9000

Type 5961, 5963, 5964, 5965

## BEOGRAM 4500

Type 5951-5953-5954-5955

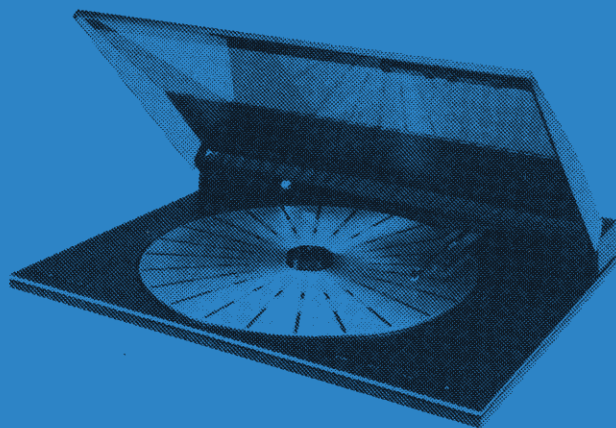

## BEOGRAM 3000

Type 5901-5903-5904-5905

## BEOGRAM 5005

Type 5921-5923-5924-5925

## TX 2

Type 5911-5913

## BEOGRAM 3300


Type 5931, 5933, 5934, 5935

## BEOGRAM 5500

Type 5941, 5943, 5944, 5945

SERVICEMANLEITUNG  
MANUEL d'ENTRETIEN



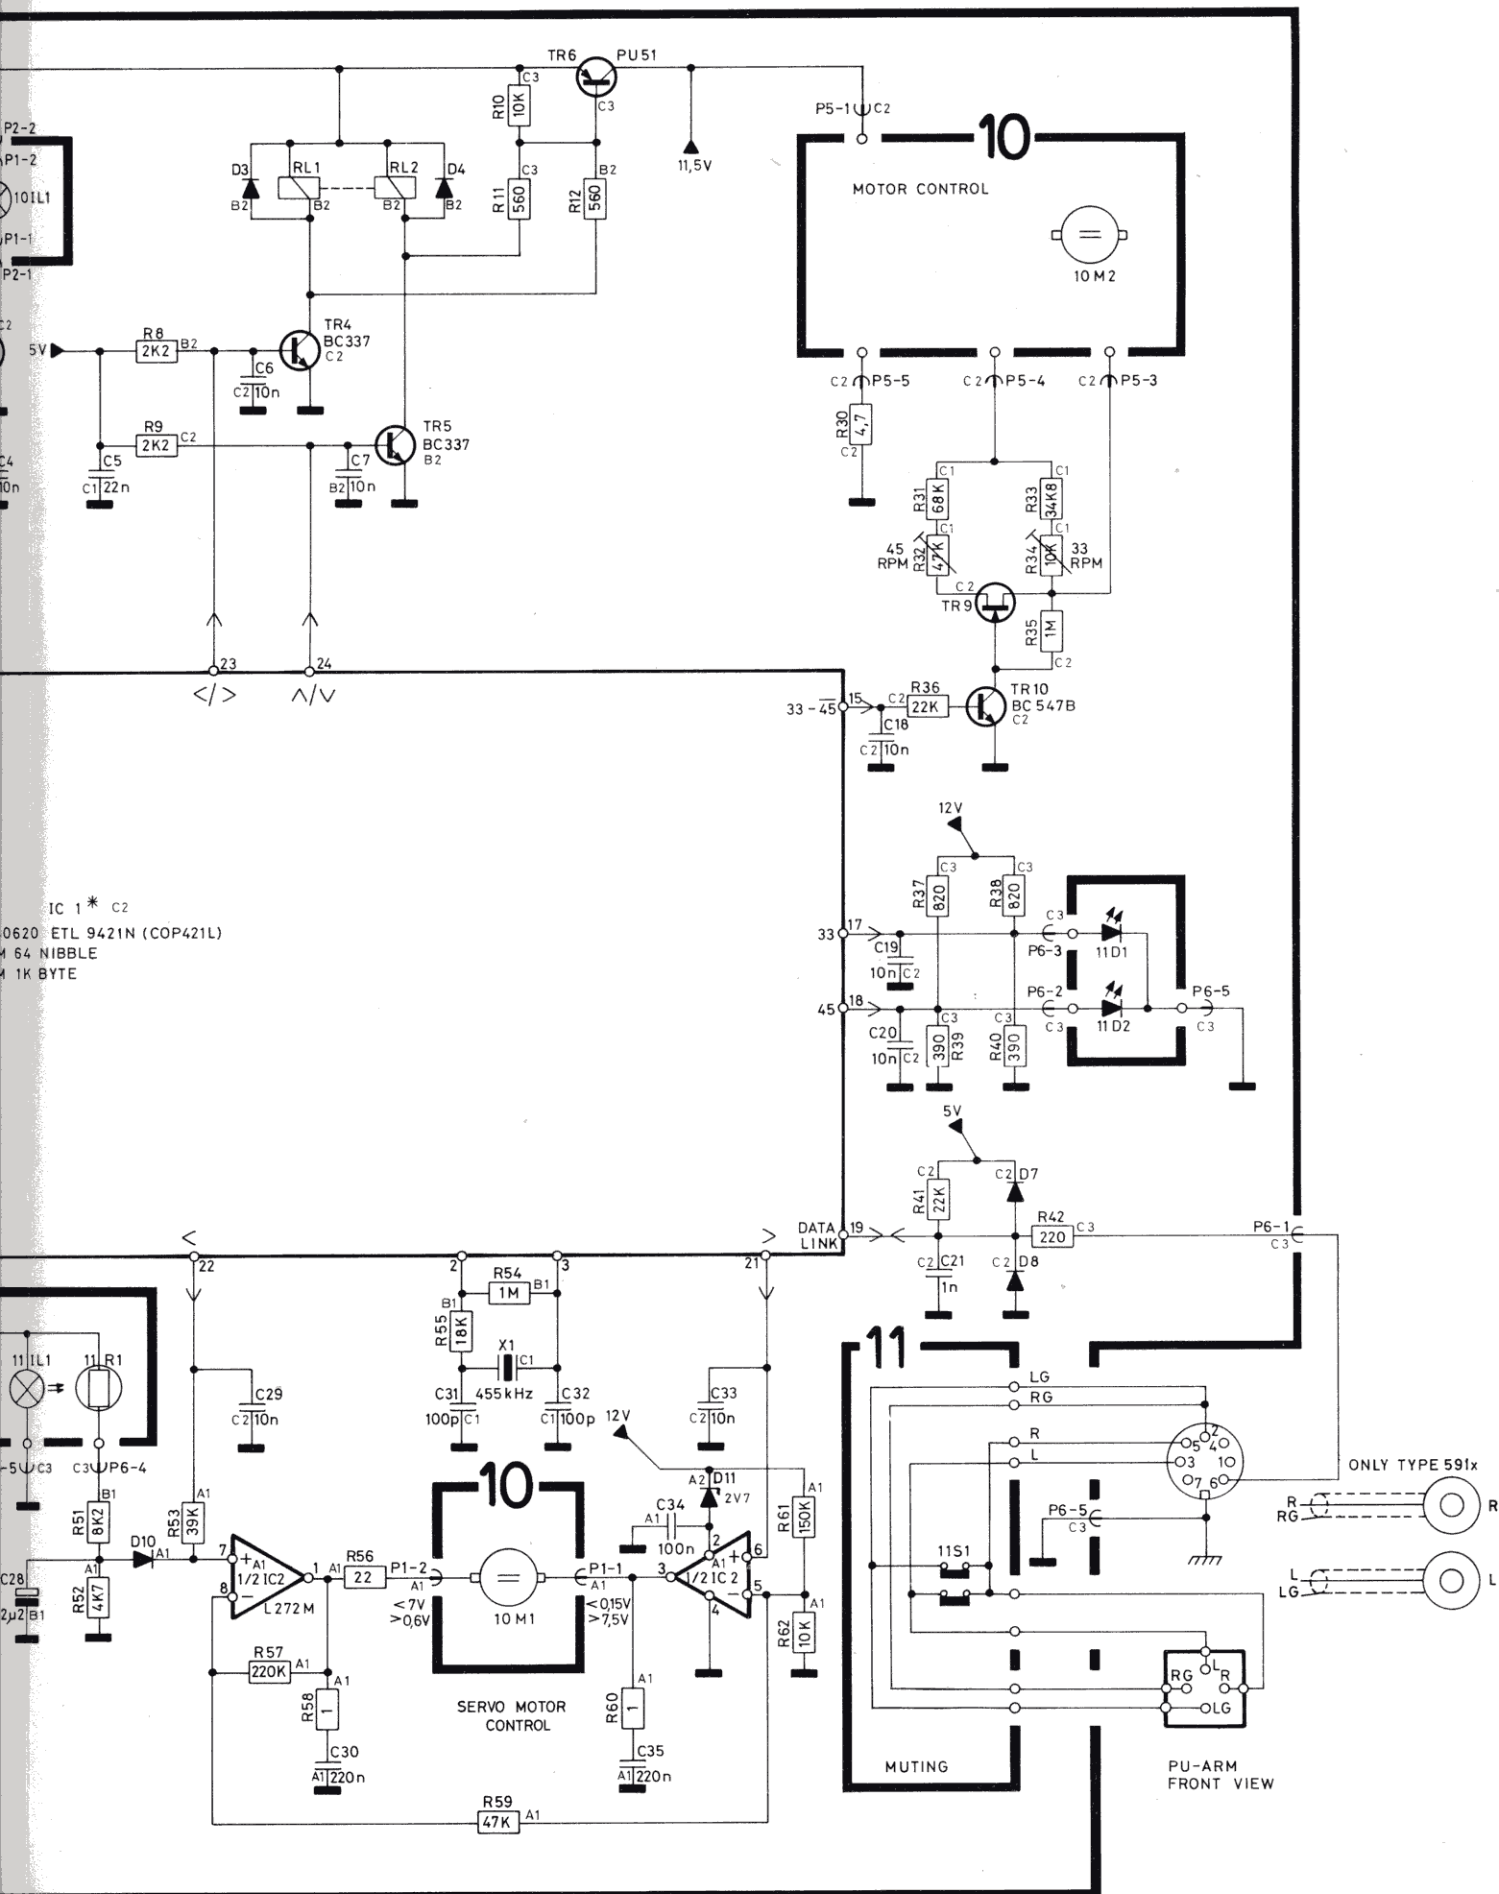

## DIAGRAM

TYPE 5903 - 5913 - 5923 PCB2 = 8005154

