

Unbalanced output connection diagrams

Immediately

The unbalanced output connection diagrams shown in these manuals are incorrect.

For barrier strip connectors: The shield and ground wires **MUST** connect to the **ground** terminal for the output connections, not the **negative** terminal. See **Figure 1** for reference.

For XLR connectors: The shield and ground wires **MUST** connect to **pin 1** for the output connections, not **pin 3**. **Pin 3** is unconnected, not **Pin 1**. See **Figure 1** for reference.

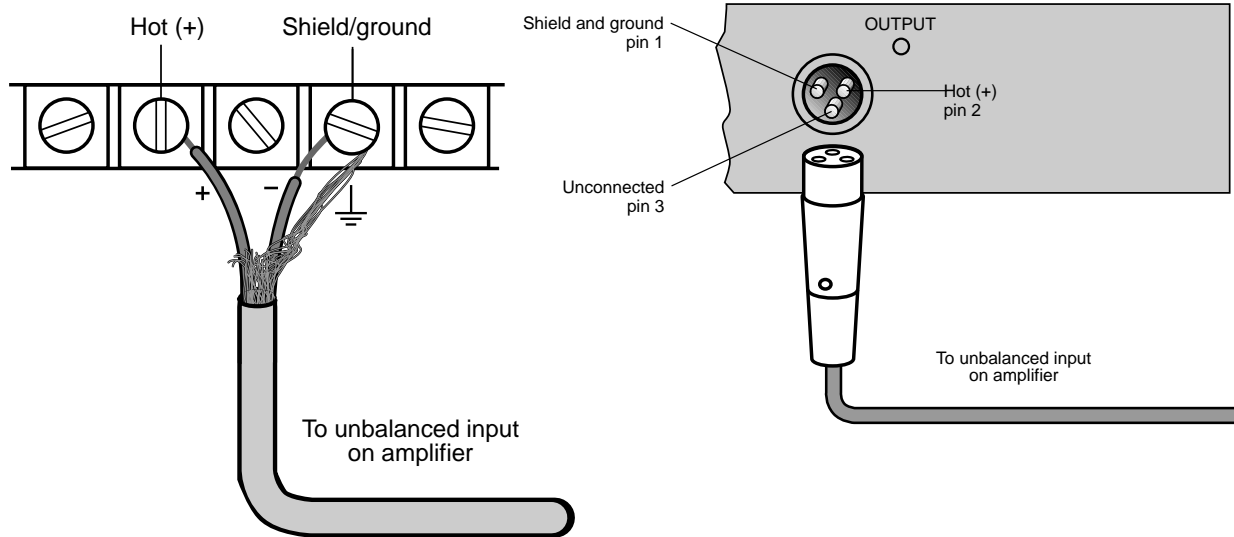


Figure 1. Corrected Unbalanced Output Connection Diagrams

Figures affected: Figure 24, 402/802 II Controller Service Manual, P/N 174785. Figure 19, 502 (Panaray) Service Manual, P/N 170310.