

IC1 ----- 74235P
 IC2 ----- 74740AP
 IC3 ----- 74743P


VOLTAGE CHECK POSITION
 V --- ALL POSITION
 F --- FM POSITION
 A --- AM POSITION

FM 87 - 108MHz
 MW 515 - 1600kHz
 SW1 1.9 - 6.0MHz
 SW2 5.0 - 10.5MHz

O1,2 ----- 25C1250 - A or B
 O3,5,6,7,9 ----- 25C108C - Per 5

D2,3 ----- RA-150
 D4,5,6 ----- SLPV80-01

S1 --- FM/AM/SW1/SW2 SELECTOR SWITCH (FM POSITION)
 S2 --- MUTING AND STEREO ON/OFF SWITCH (FM POSITION)

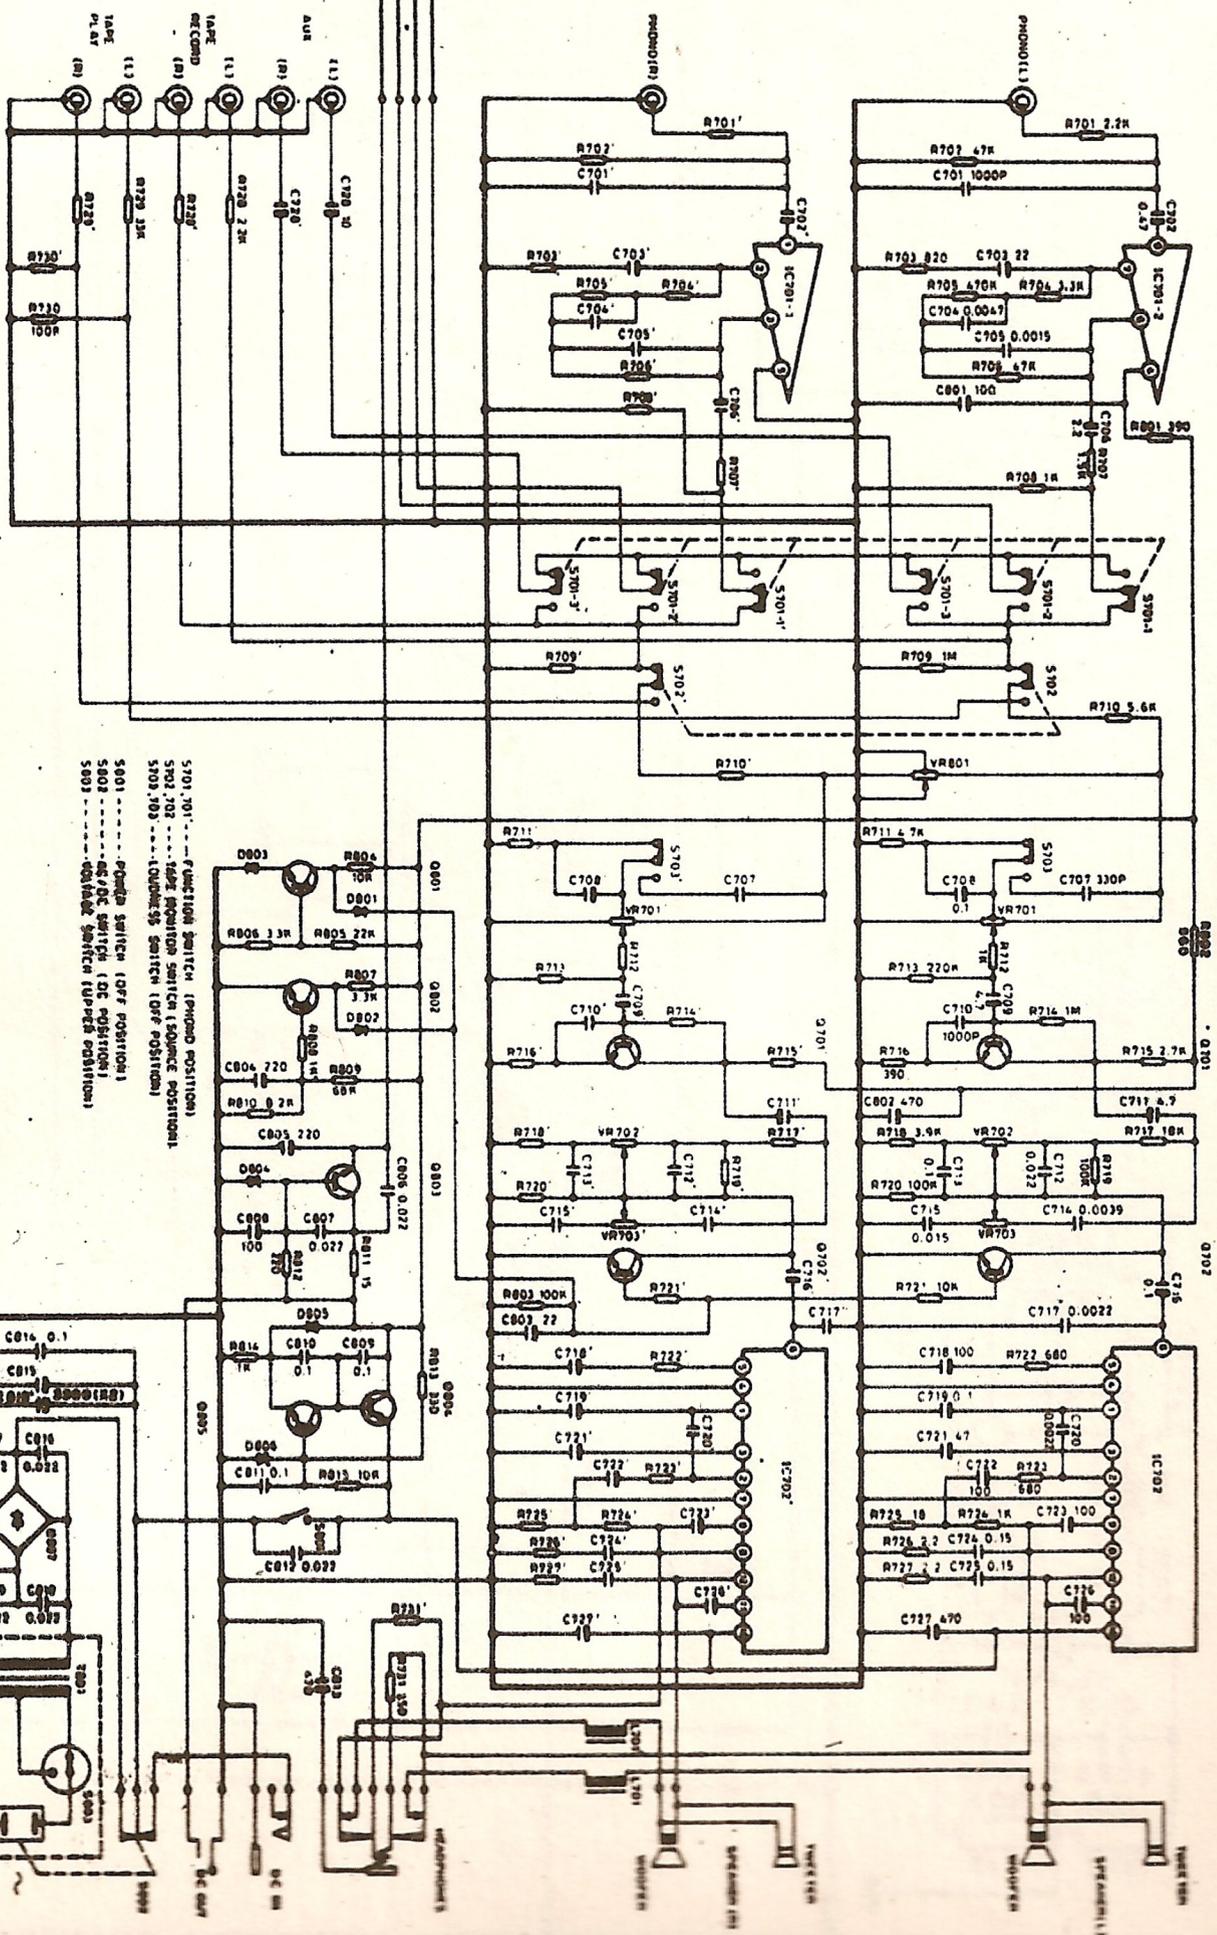

- IC701-1 6X4
- IC702-1 6AR5
- IC703-1 6AV6
- IC704-1 6BE6
- IC705-1 6BD6
- IC706-1 6BE7
- IC707-1 6X4
- IC708-1 6AR5
- IC709-1 6AV6
- IC710-1 6BE6
- IC711-1 6BD6
- IC712-1 6BE7
- IC713-1 6X4
- IC714-1 6AR5
- IC715-1 6AV6
- IC716-1 6BE6
- IC717-1 6BD6
- IC718-1 6BE7
- IC719-1 6X4
- IC720-1 6AR5
- IC721-1 6AV6
- IC722-1 6BE6
- IC723-1 6BD6
- IC724-1 6BE7
- IC725-1 6X4
- IC726-1 6AR5
- IC727-1 6AV6
- IC728-1 6BE6

S701-101 FUNCTION SWITCH (PHONE POSITION)
 S702-102 TAP POSITION SWITCH (SIGNAL POSITION)
 S703-103 TOUCH/SP. SWITCH (OFF POSITION)

S801 PHONE SWITCH (OFF POSITION)
 S802 AF/DC SWITCH (DC POSITION)
 S803 TOUCHER SWITCH (UPPER POSITION)

