



Wiring Diagram

Model : AMI-329LW/RW

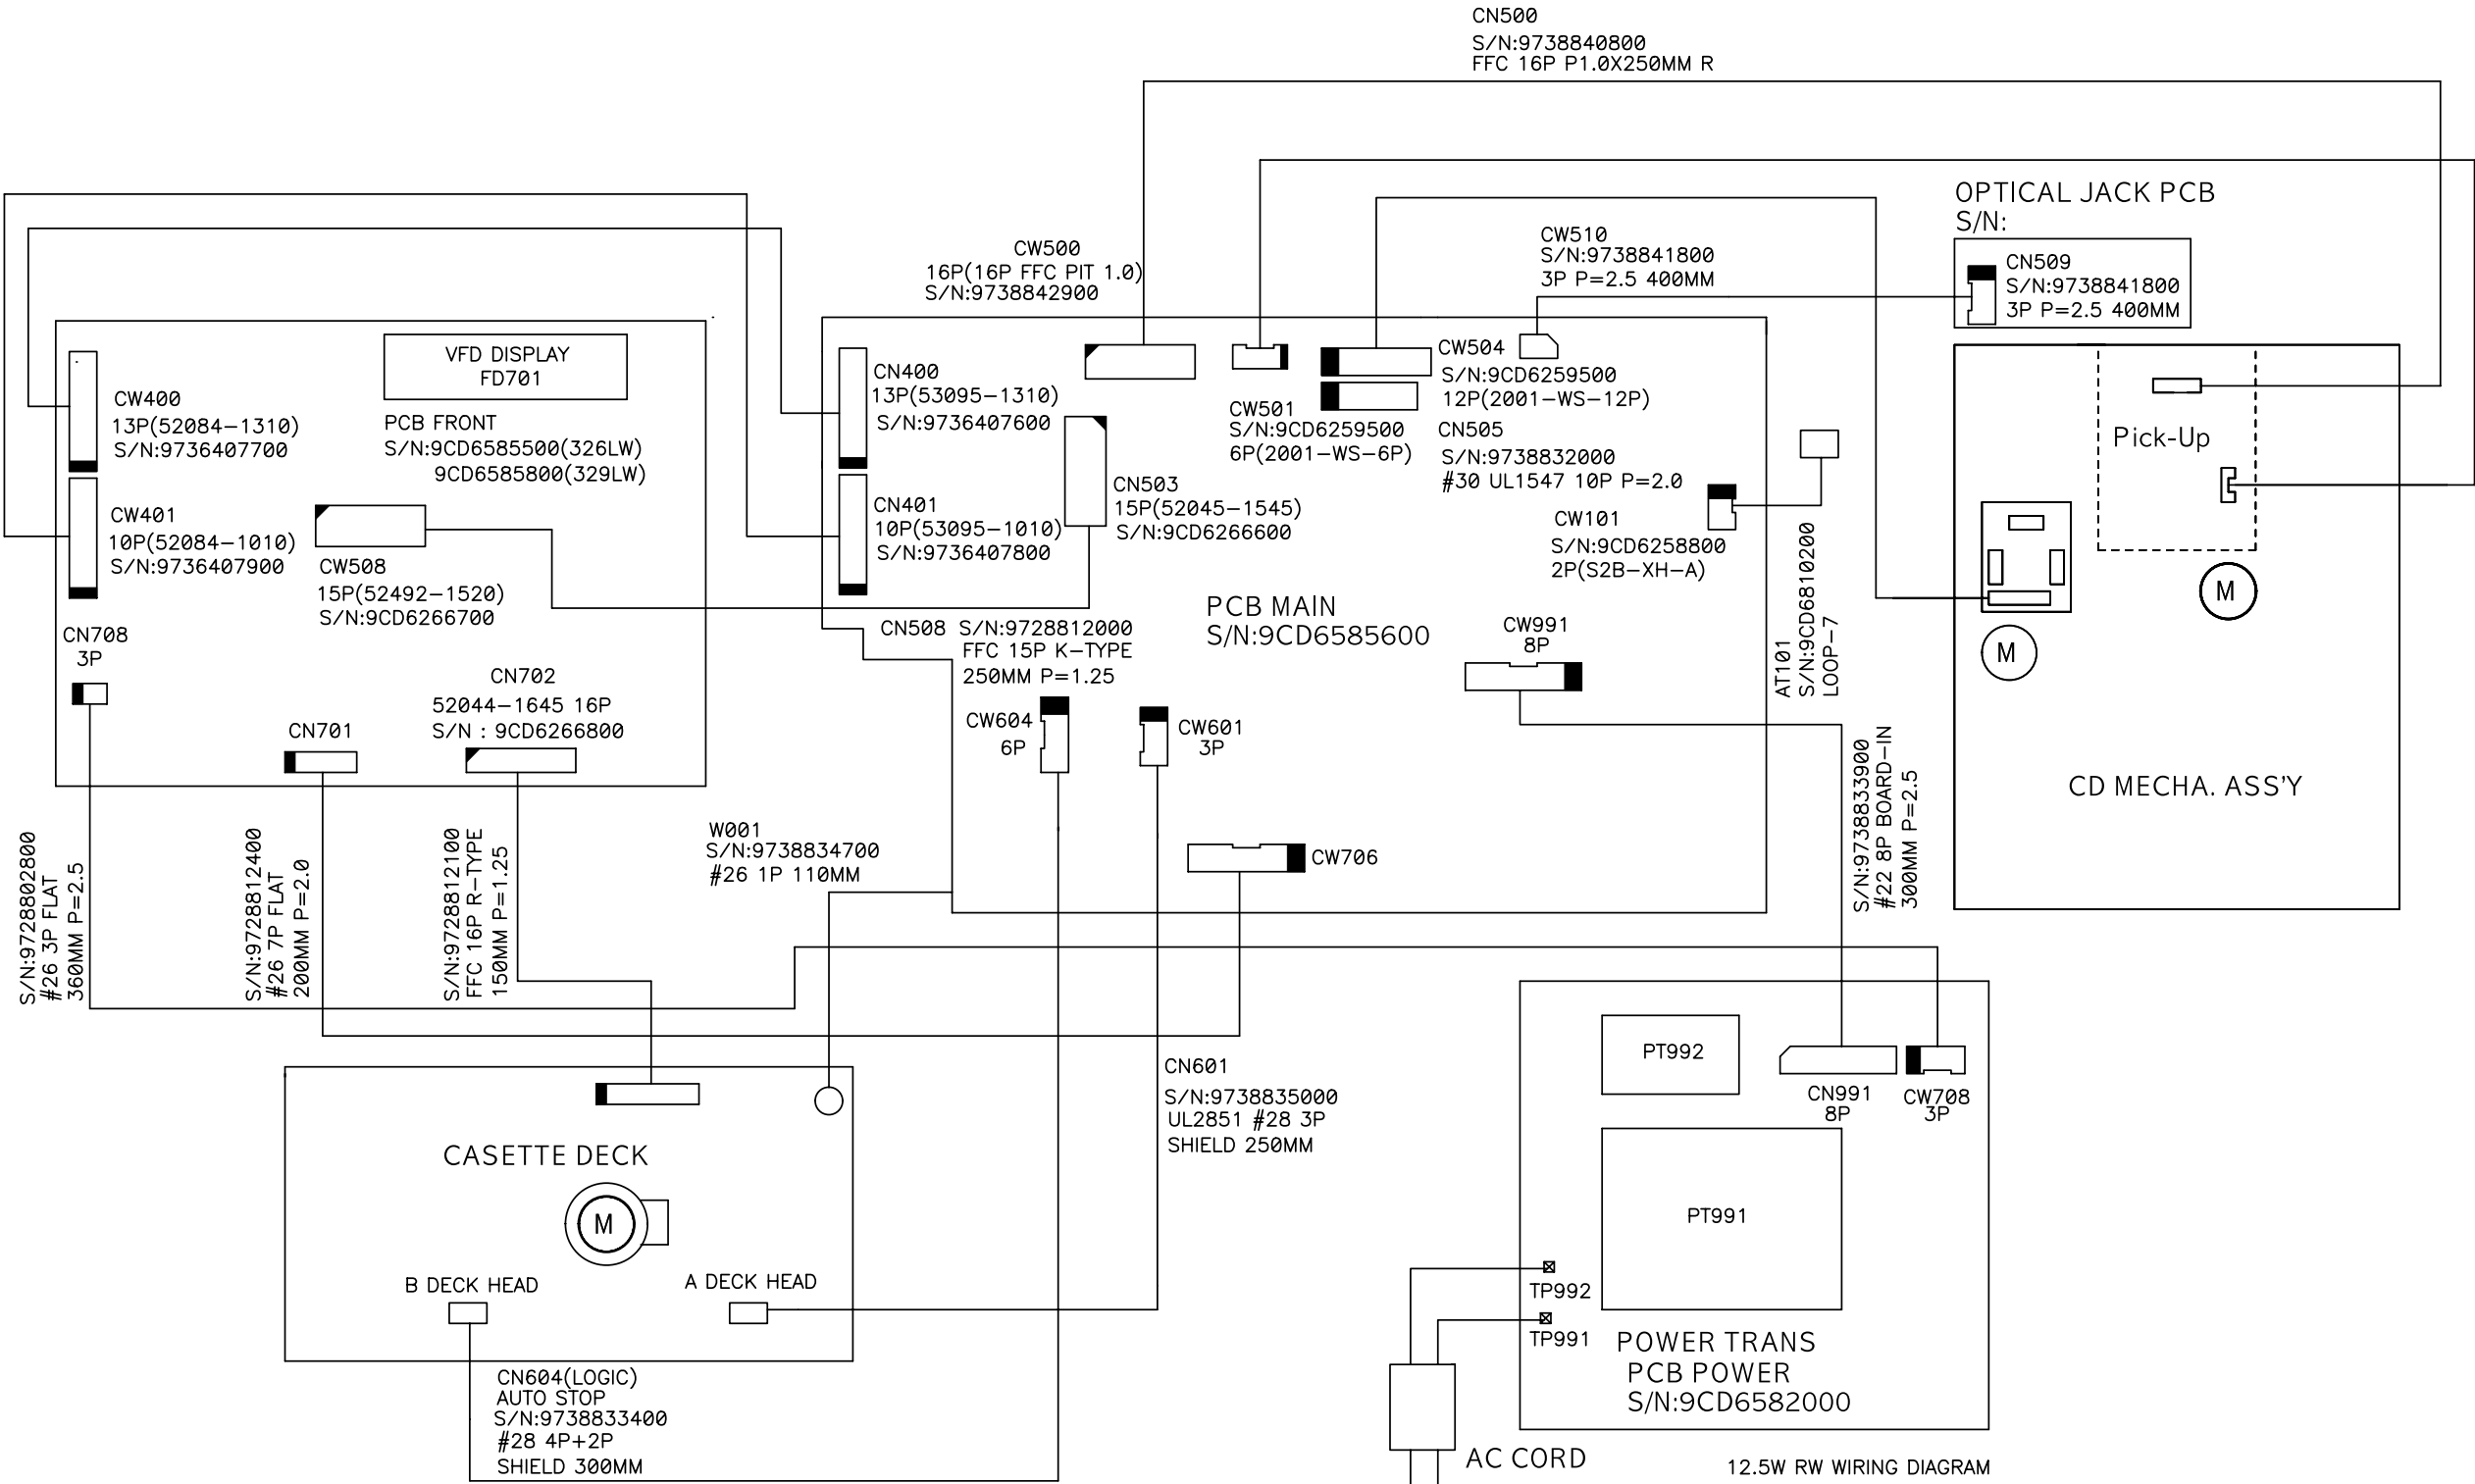


Wiring Diagram

Model : AMI-829LW/RW

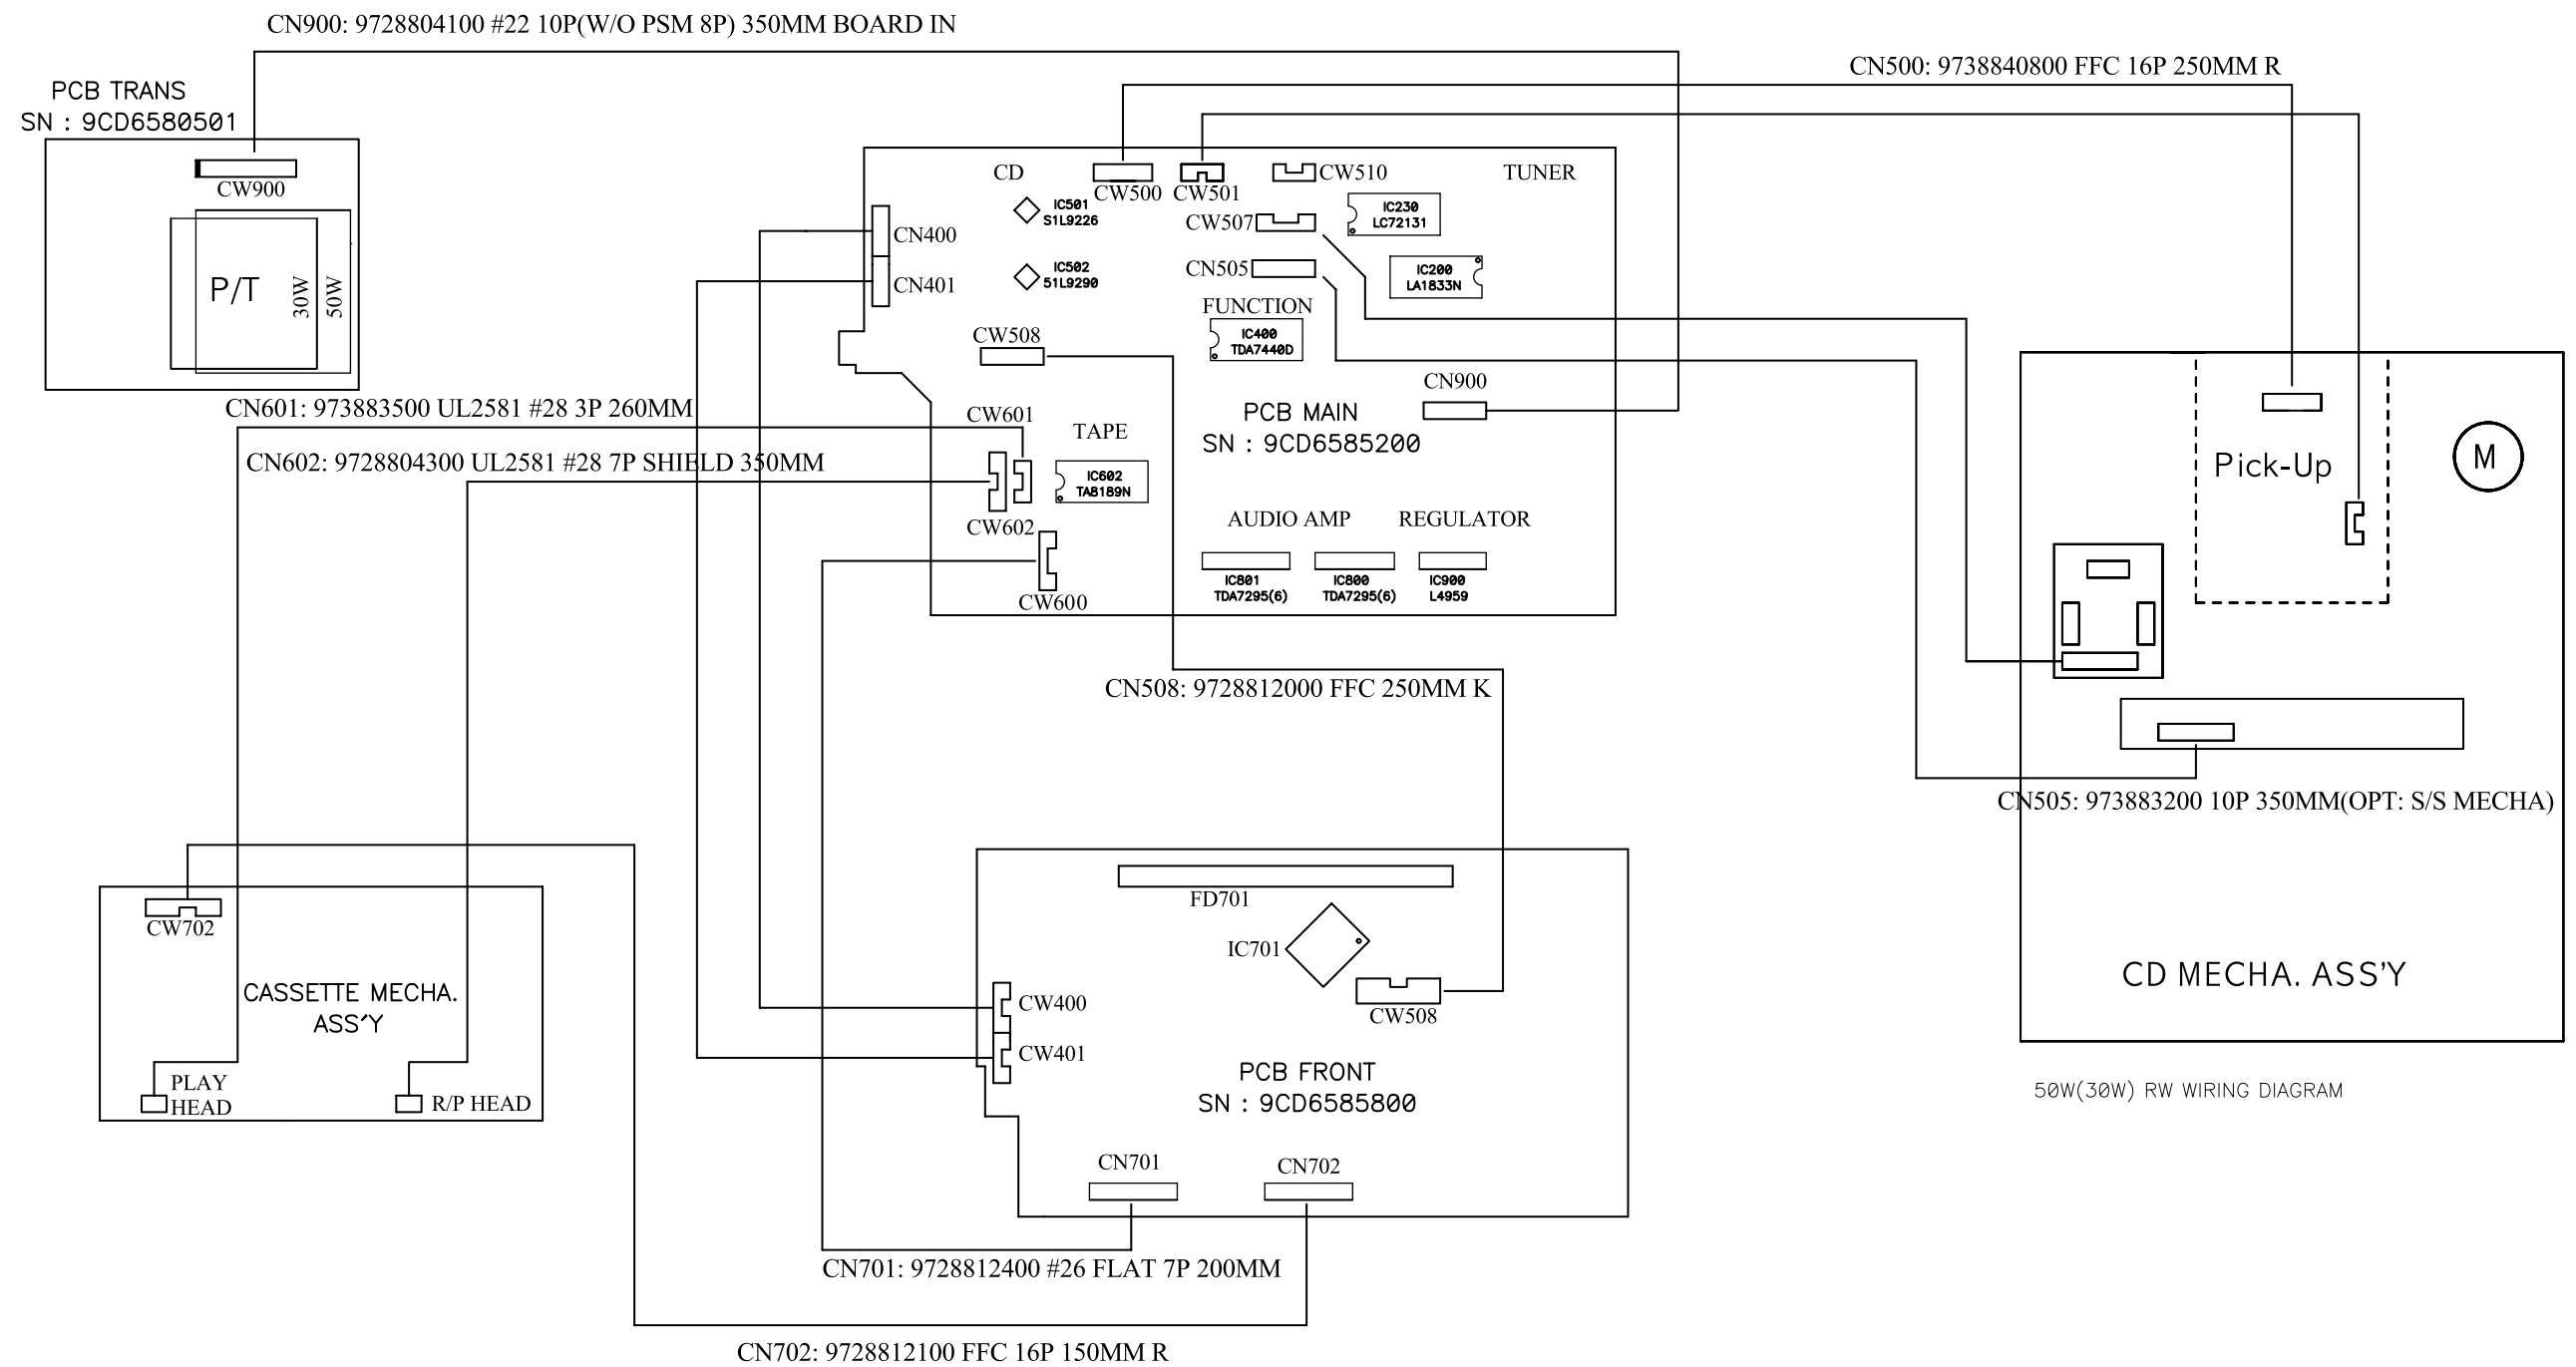

Block Diagram


Model : AMI-329LW/RW

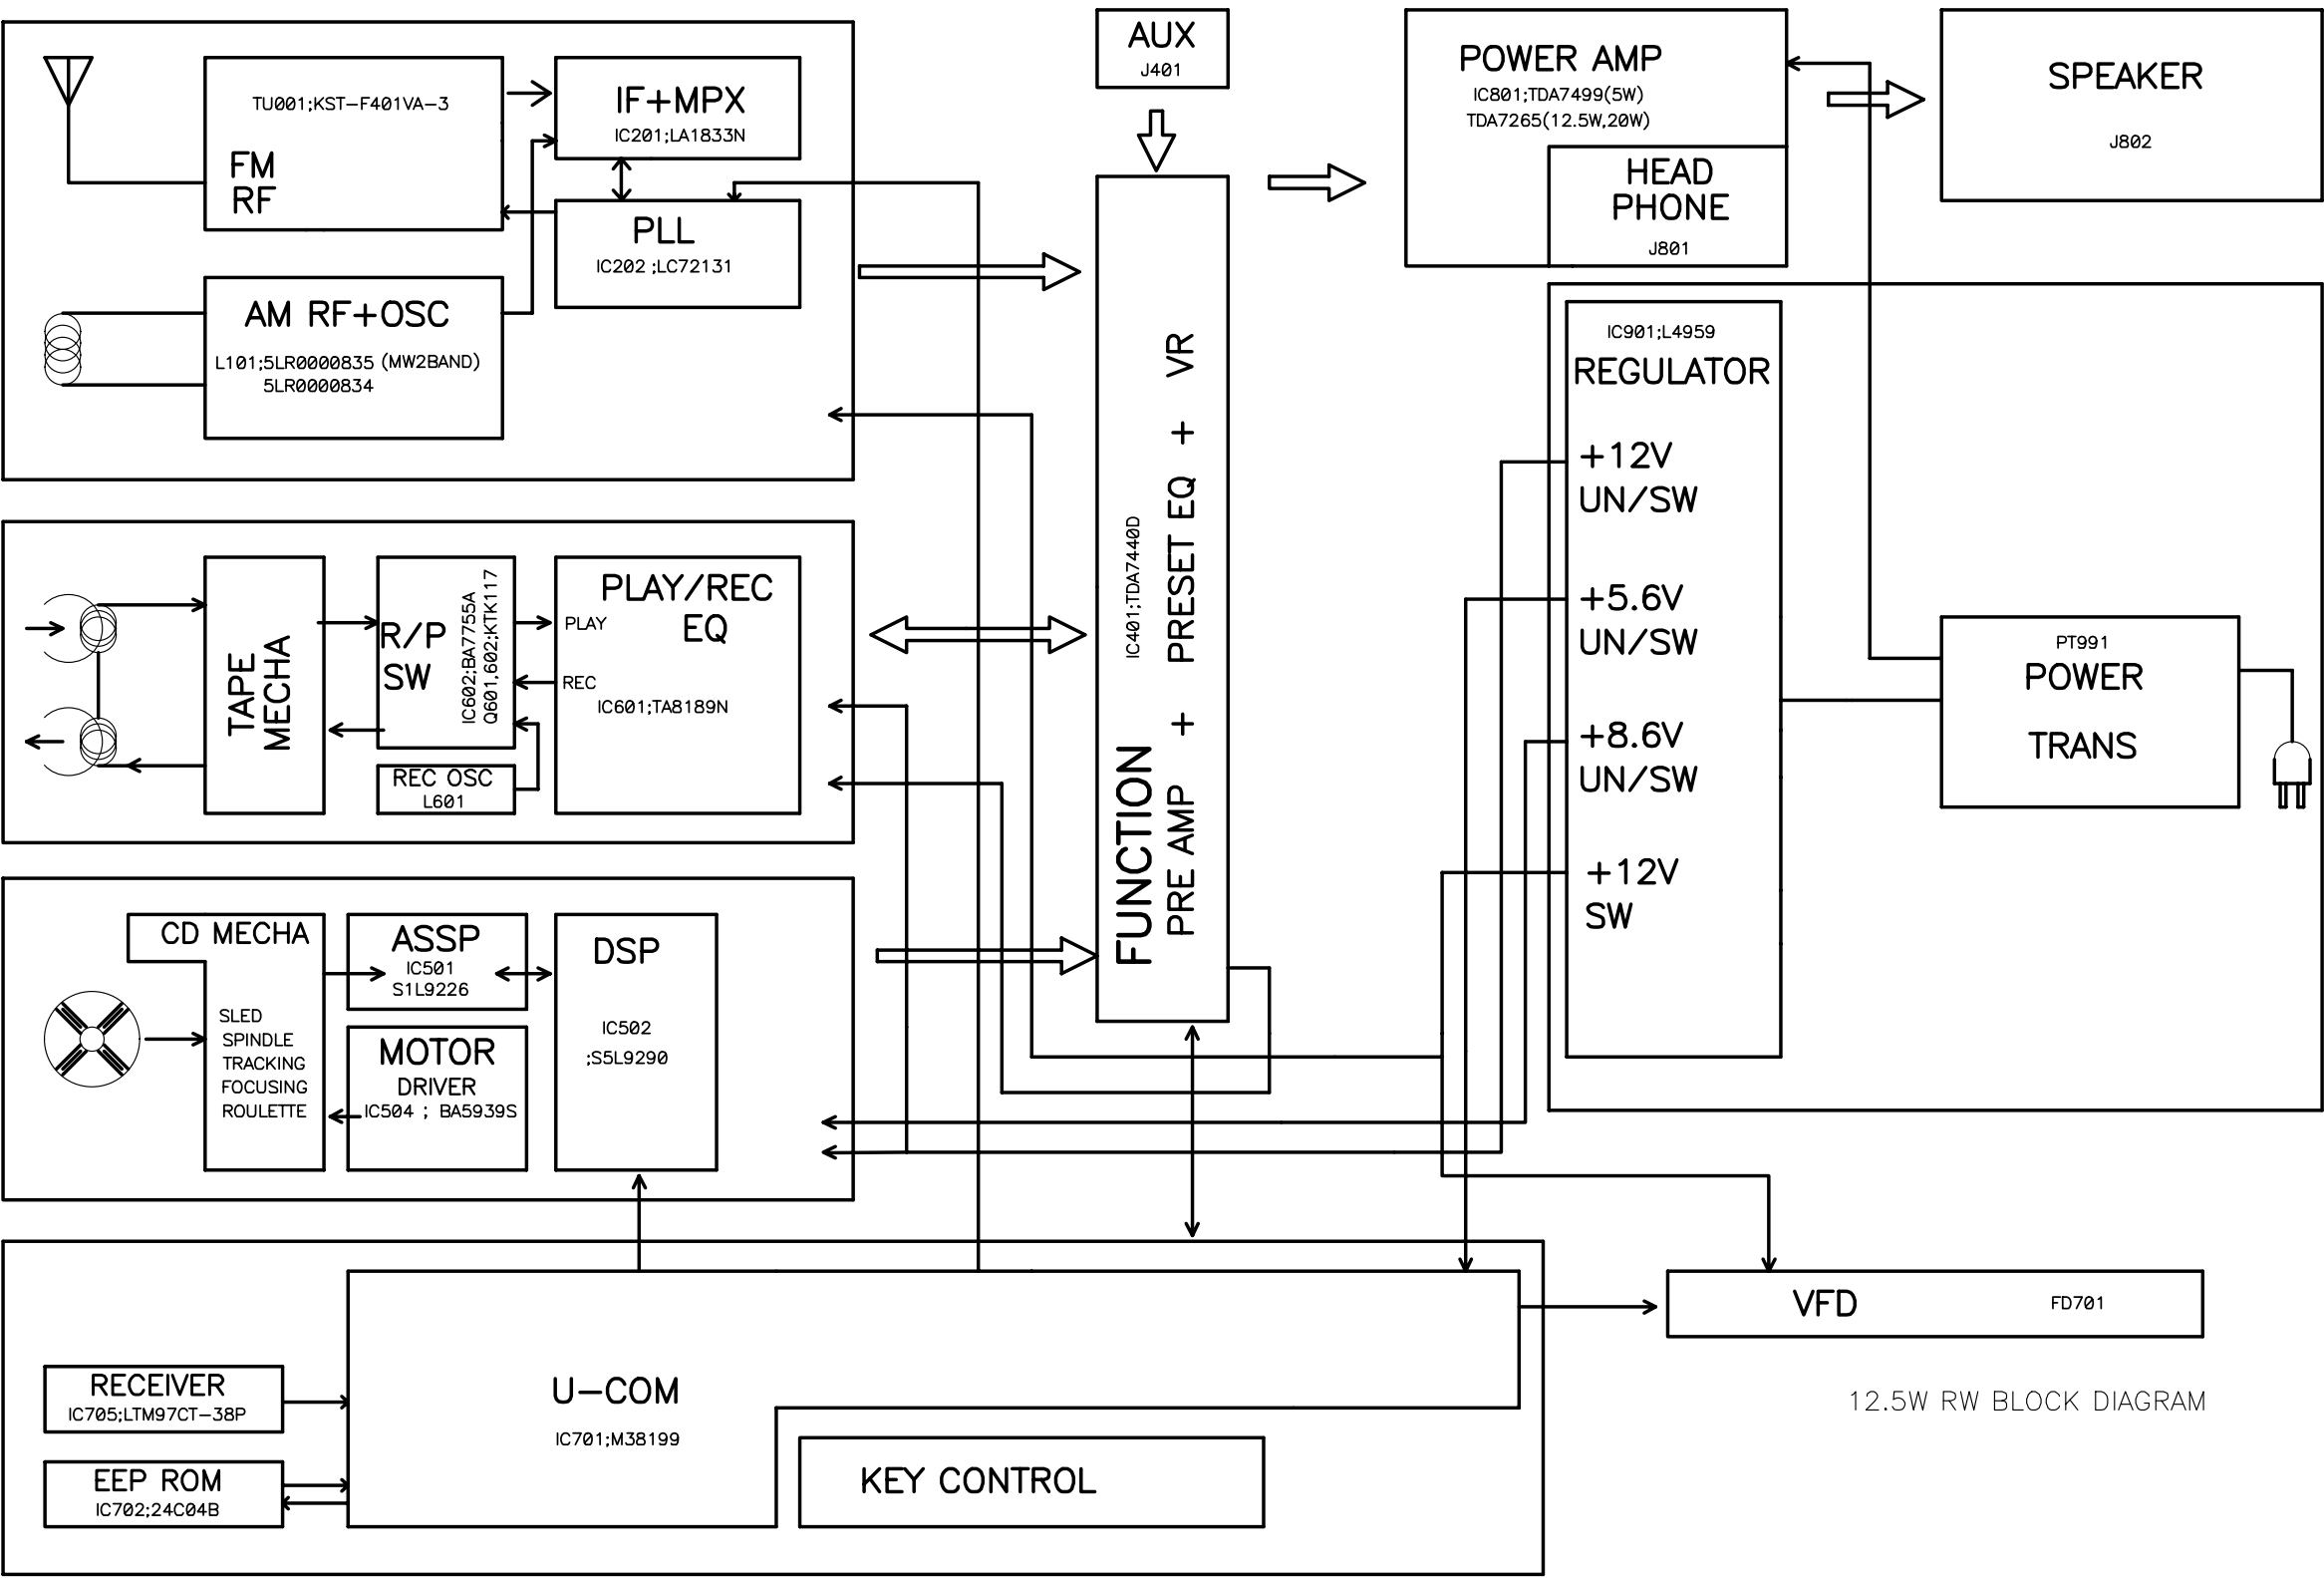

12.5W RW BLOCK DIAGRAM


Block Diagram

Model : AMI-829LW/RW

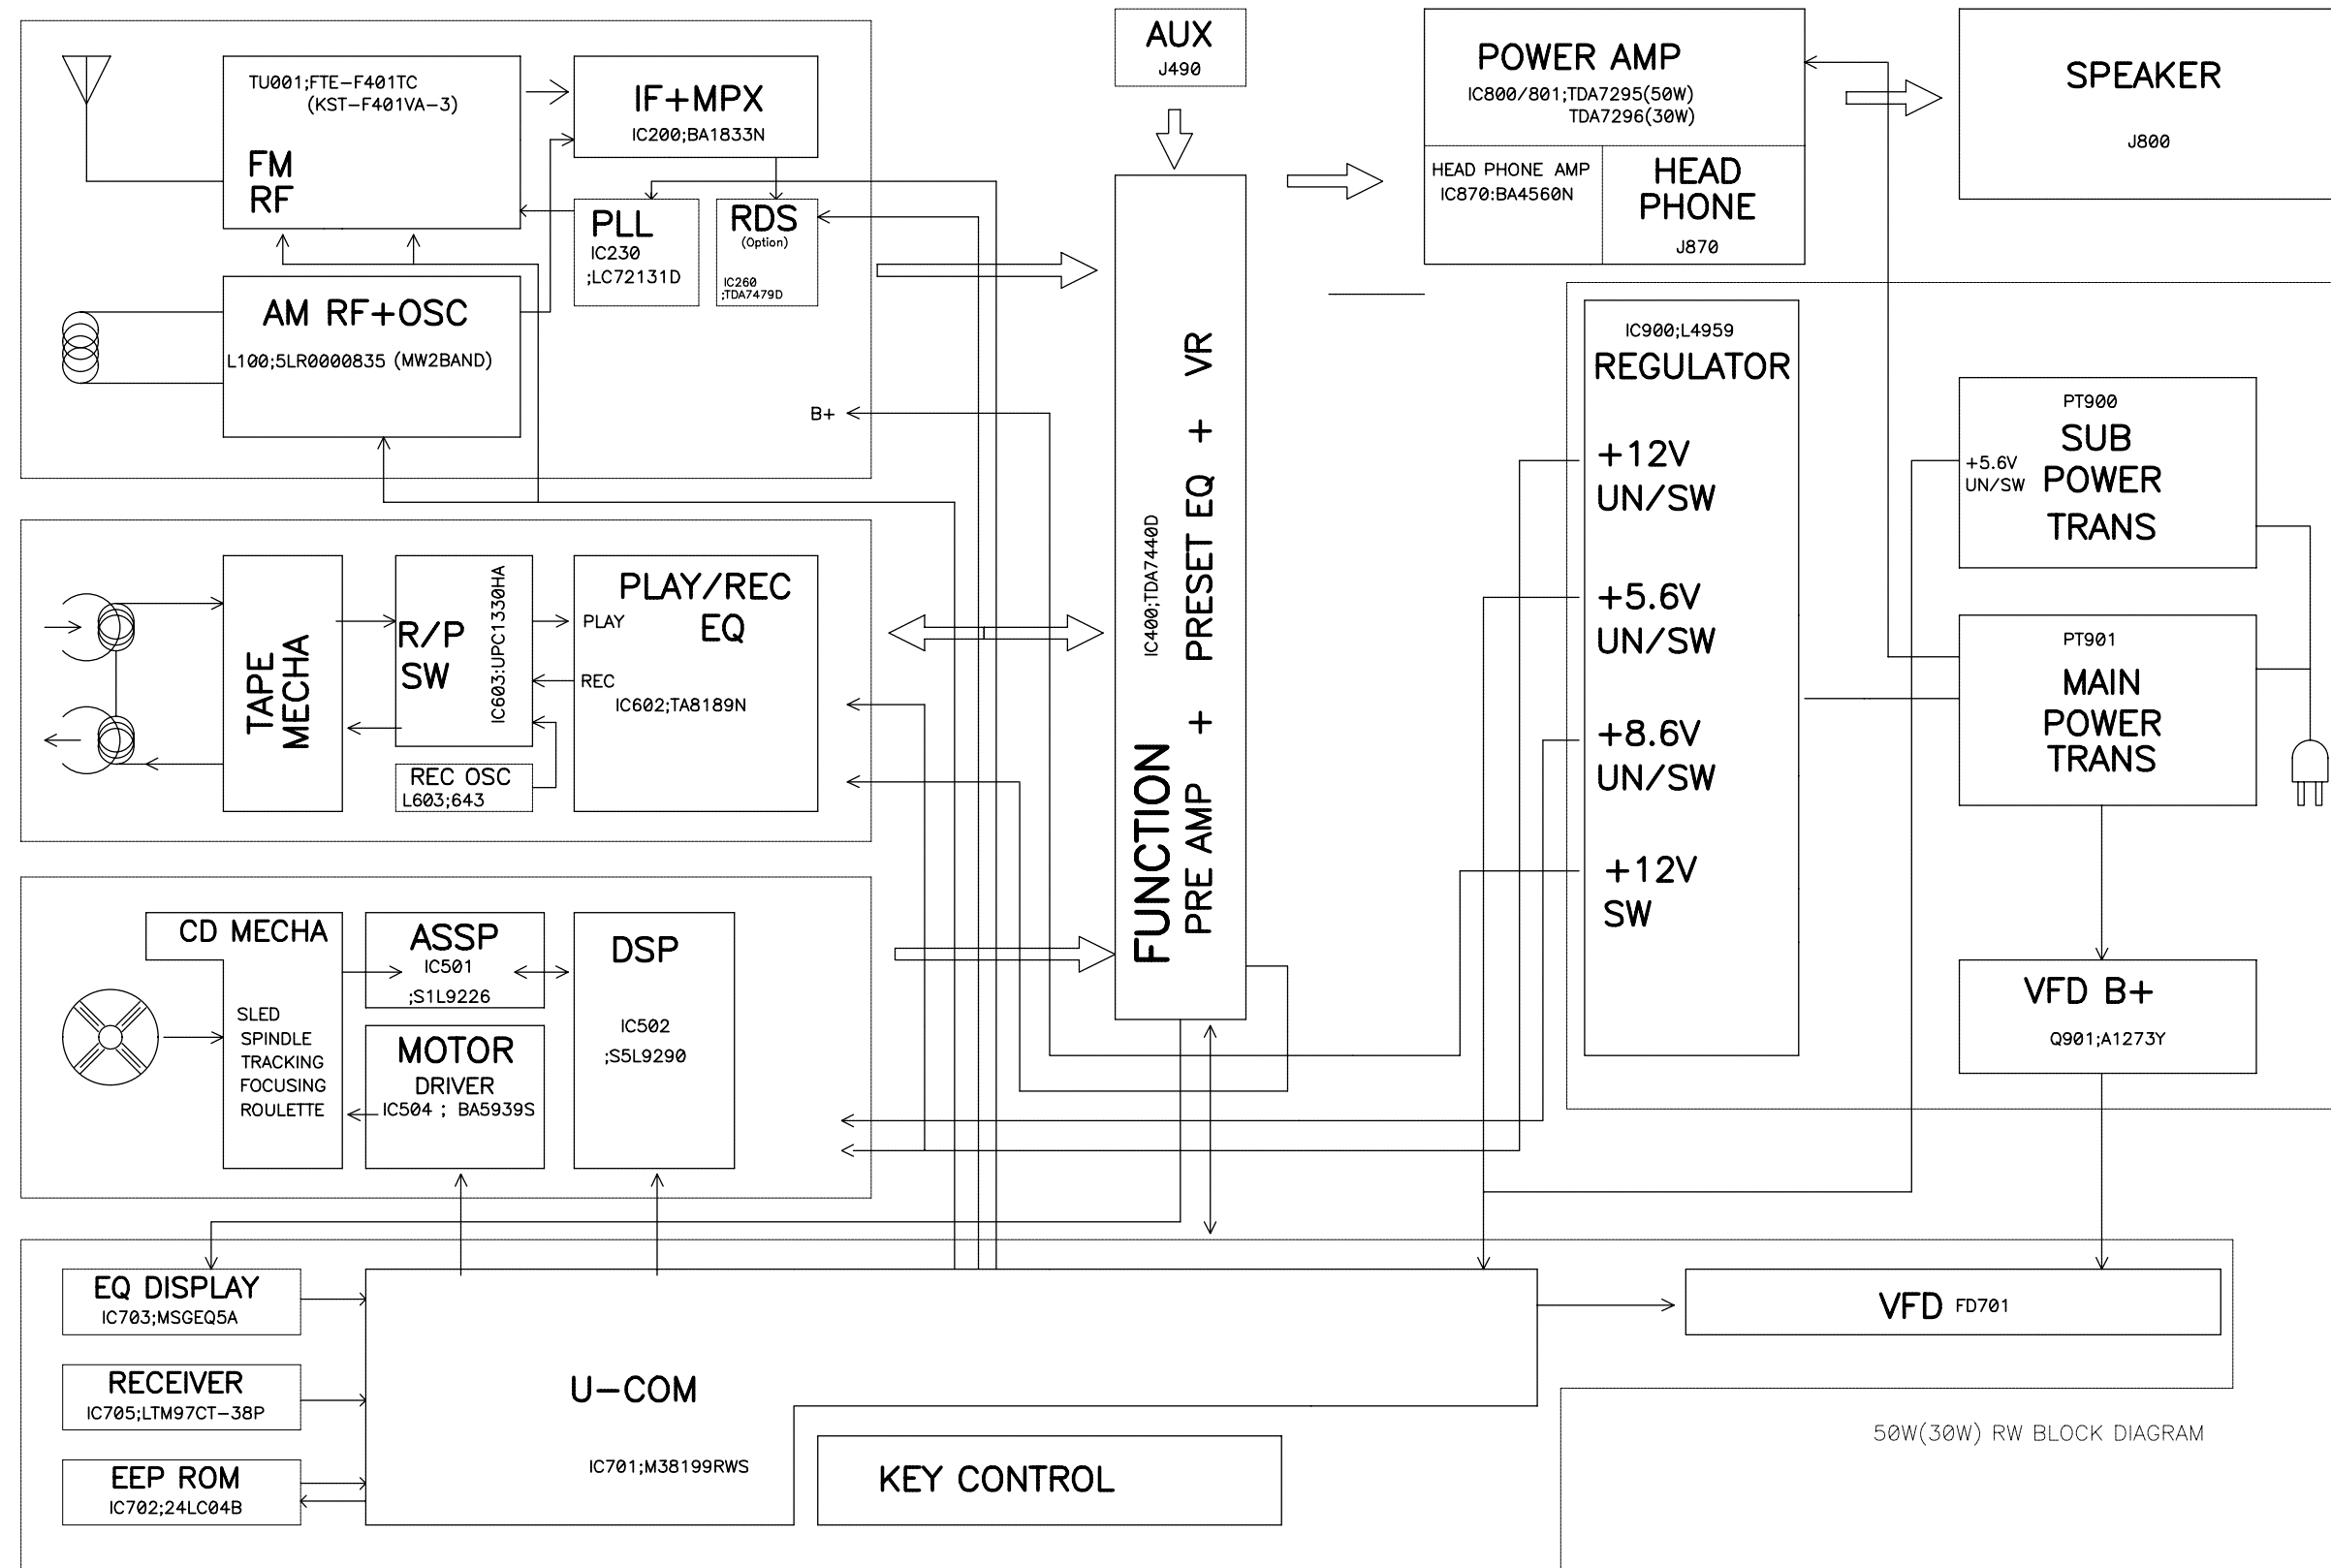

Schematic Diagram

Model : AMI-329LW/RW
Ass'y Name : AMP / POWER

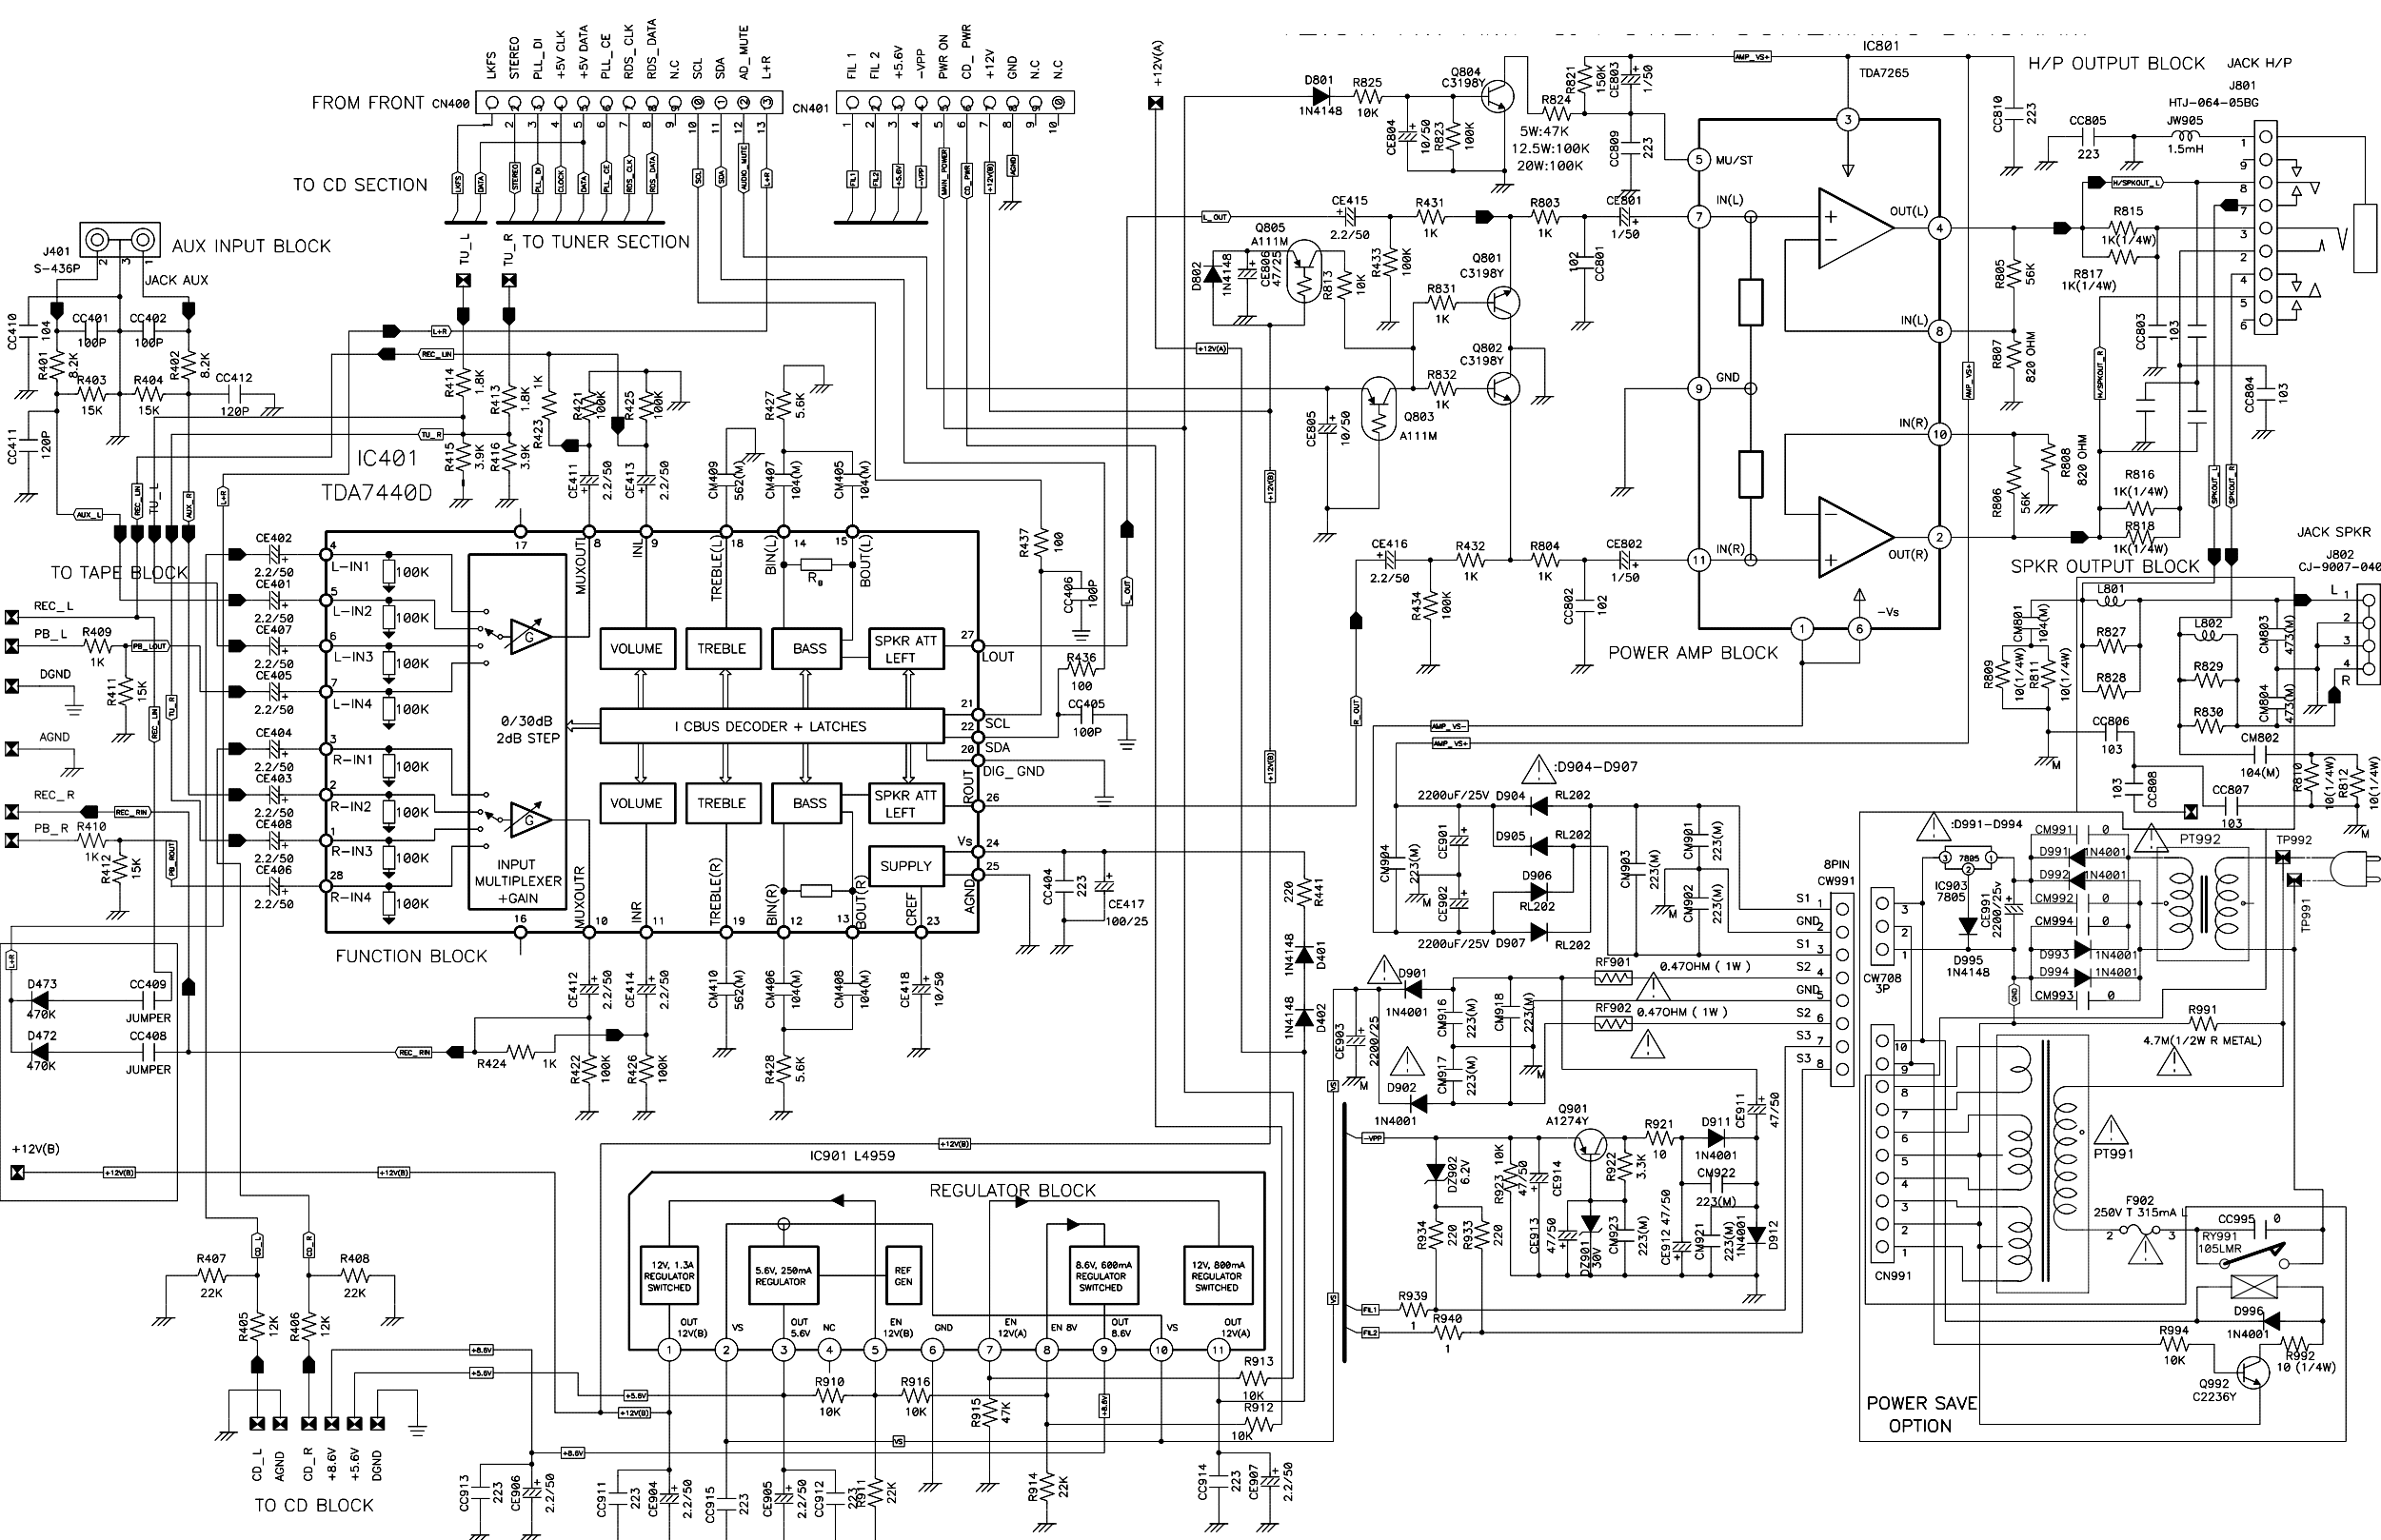

BEFORE RETURNING THE RECEIVER TO CUSTOMER, APPROPRIATE LEAKAGE CURRENT OR RESISTANCE SHOULD BE CONDUCTED TO DETERMINE THAT EXPOSED PARTS ARE PROPERLY INSULATED FROM THE SUPPLY CIRCUIT


NOTE : THE COMPONENTS IDENTIFIED BY MARK  ARE CRITICAL FOR SAFETY REPLACE ONLY WITH SAME TYPE PARTS SPECIFIED

WARNING : FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURE'S RECOMMENDED PARTS

Schematic Diagram

Model : AMI-829LW/RW

Ass'y Name : TUNER / TAPE / AMP / POWER

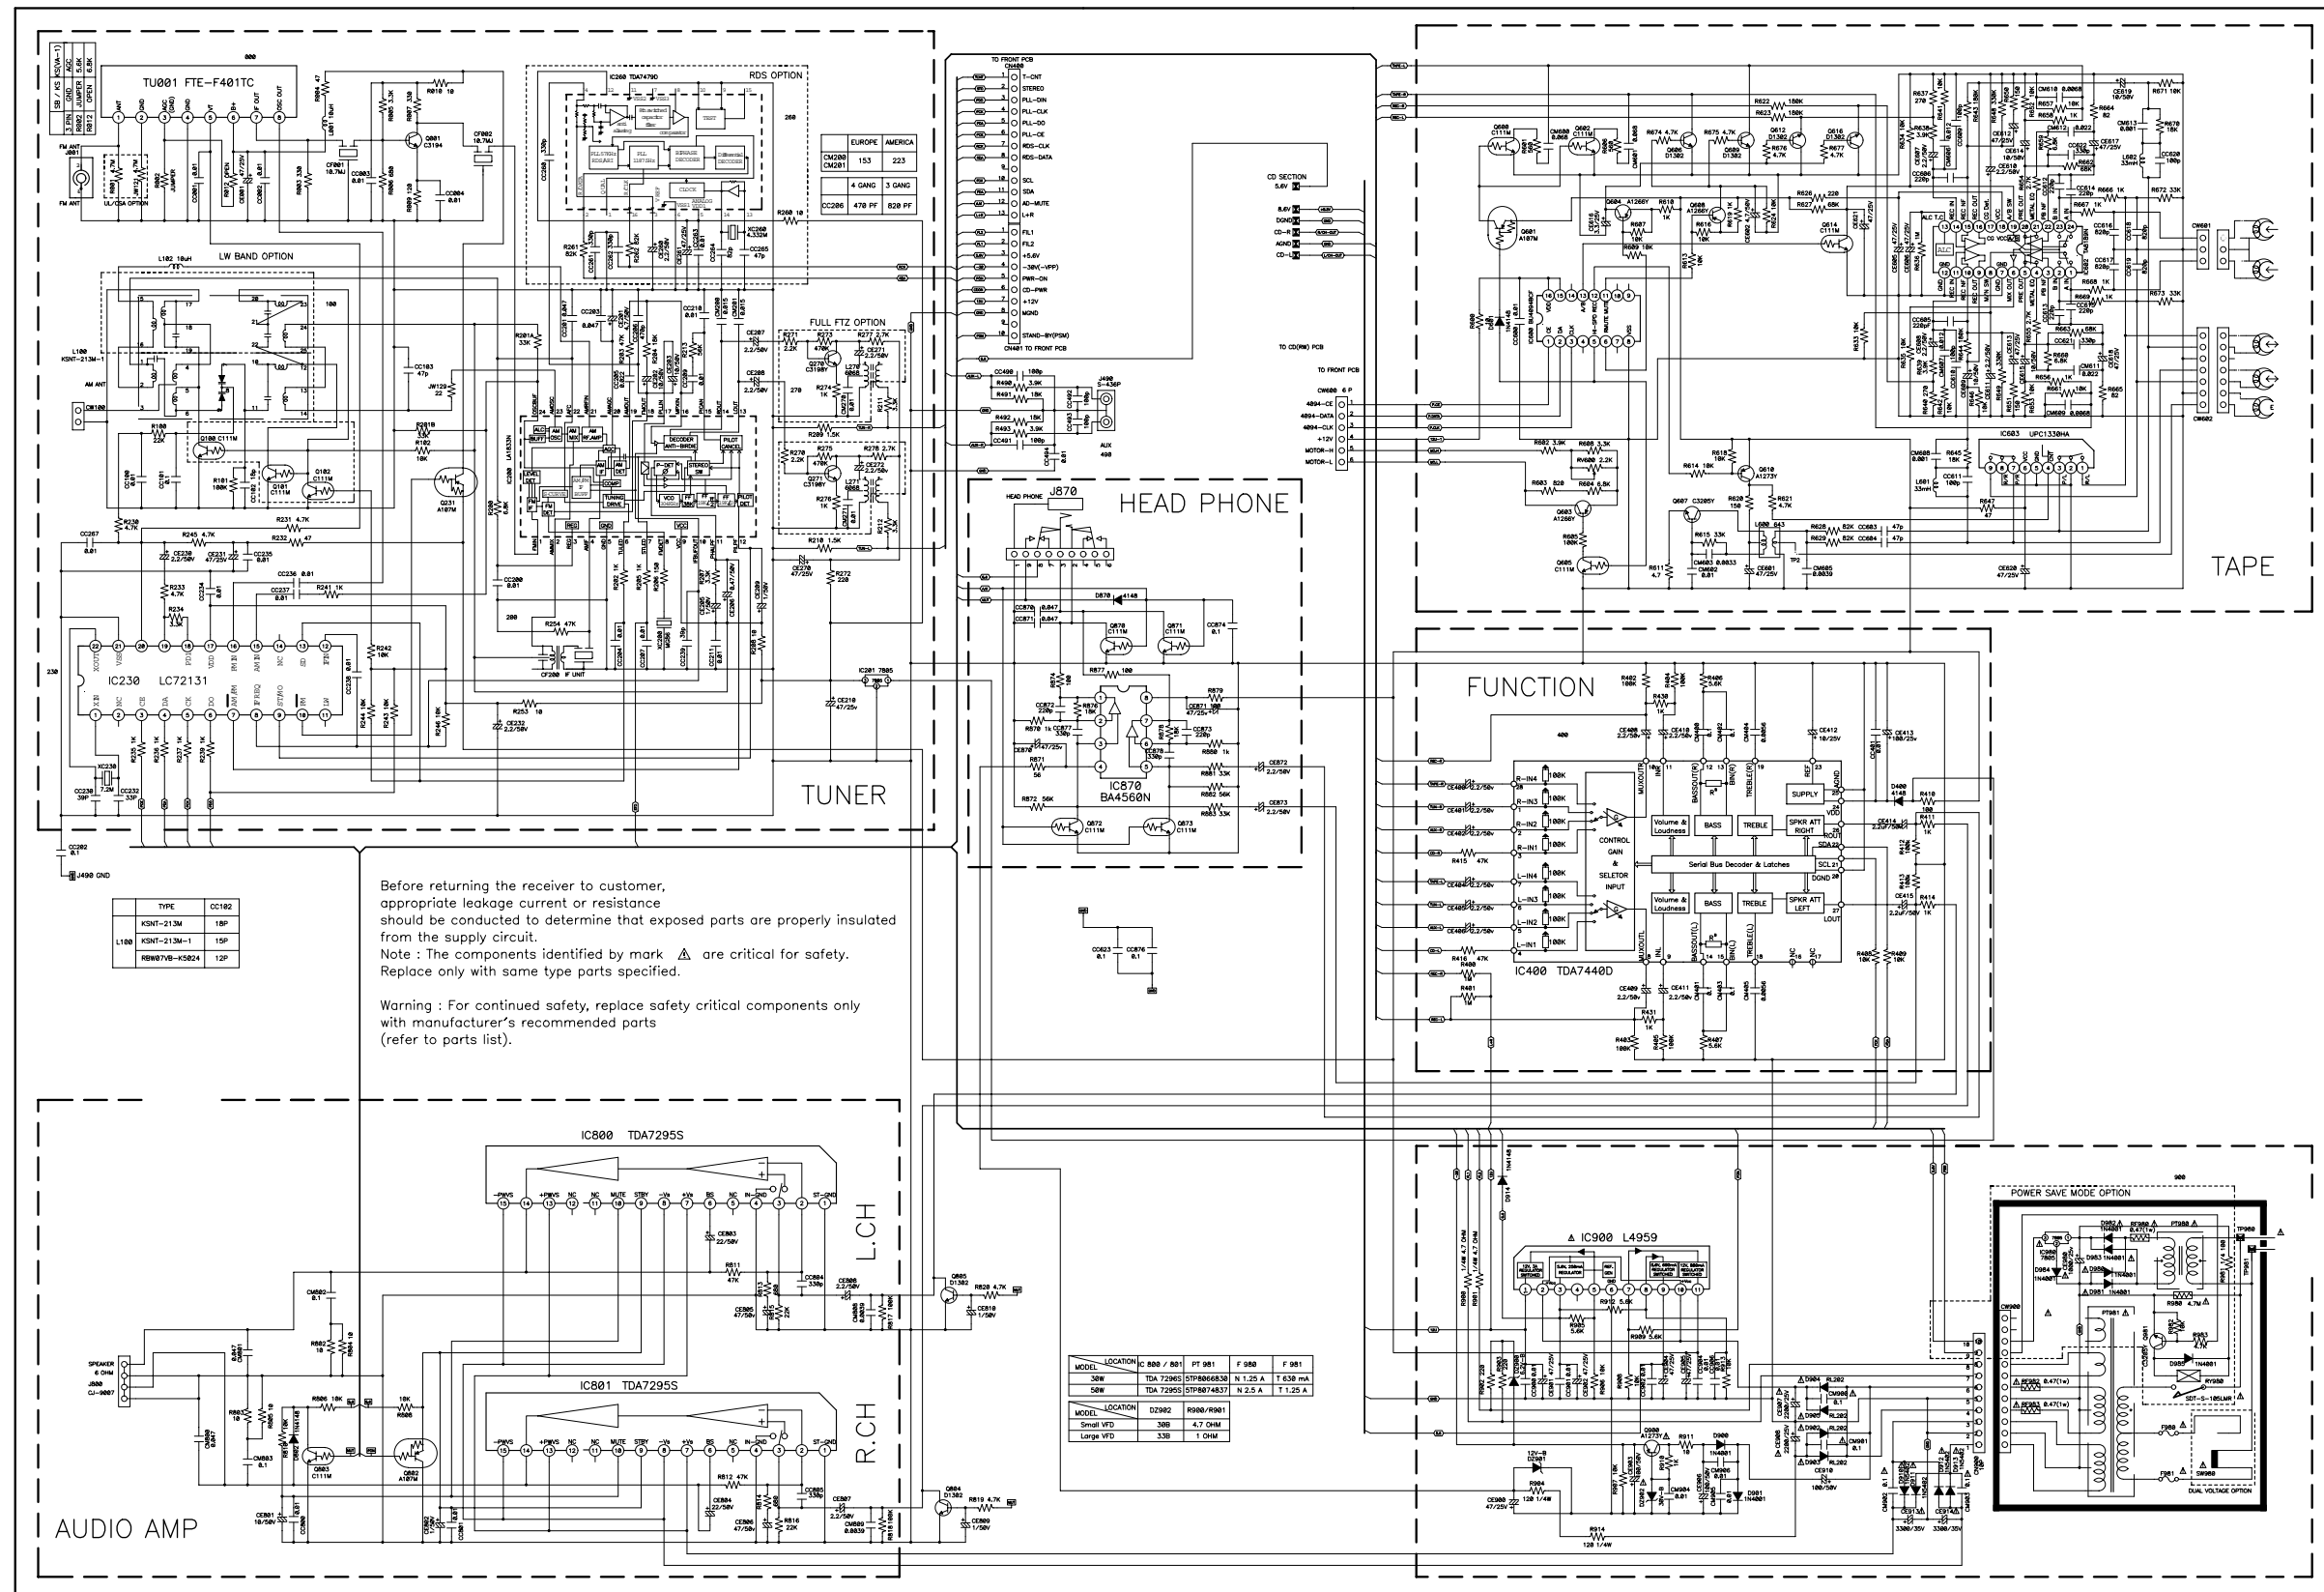


50W (30W) RW MAIN

Model : AMI-329LW/RW
Ass'y Name : TUNER



Schematic Diagram


Model : AMI-329LW/RW
Ass'y Name : TAPE

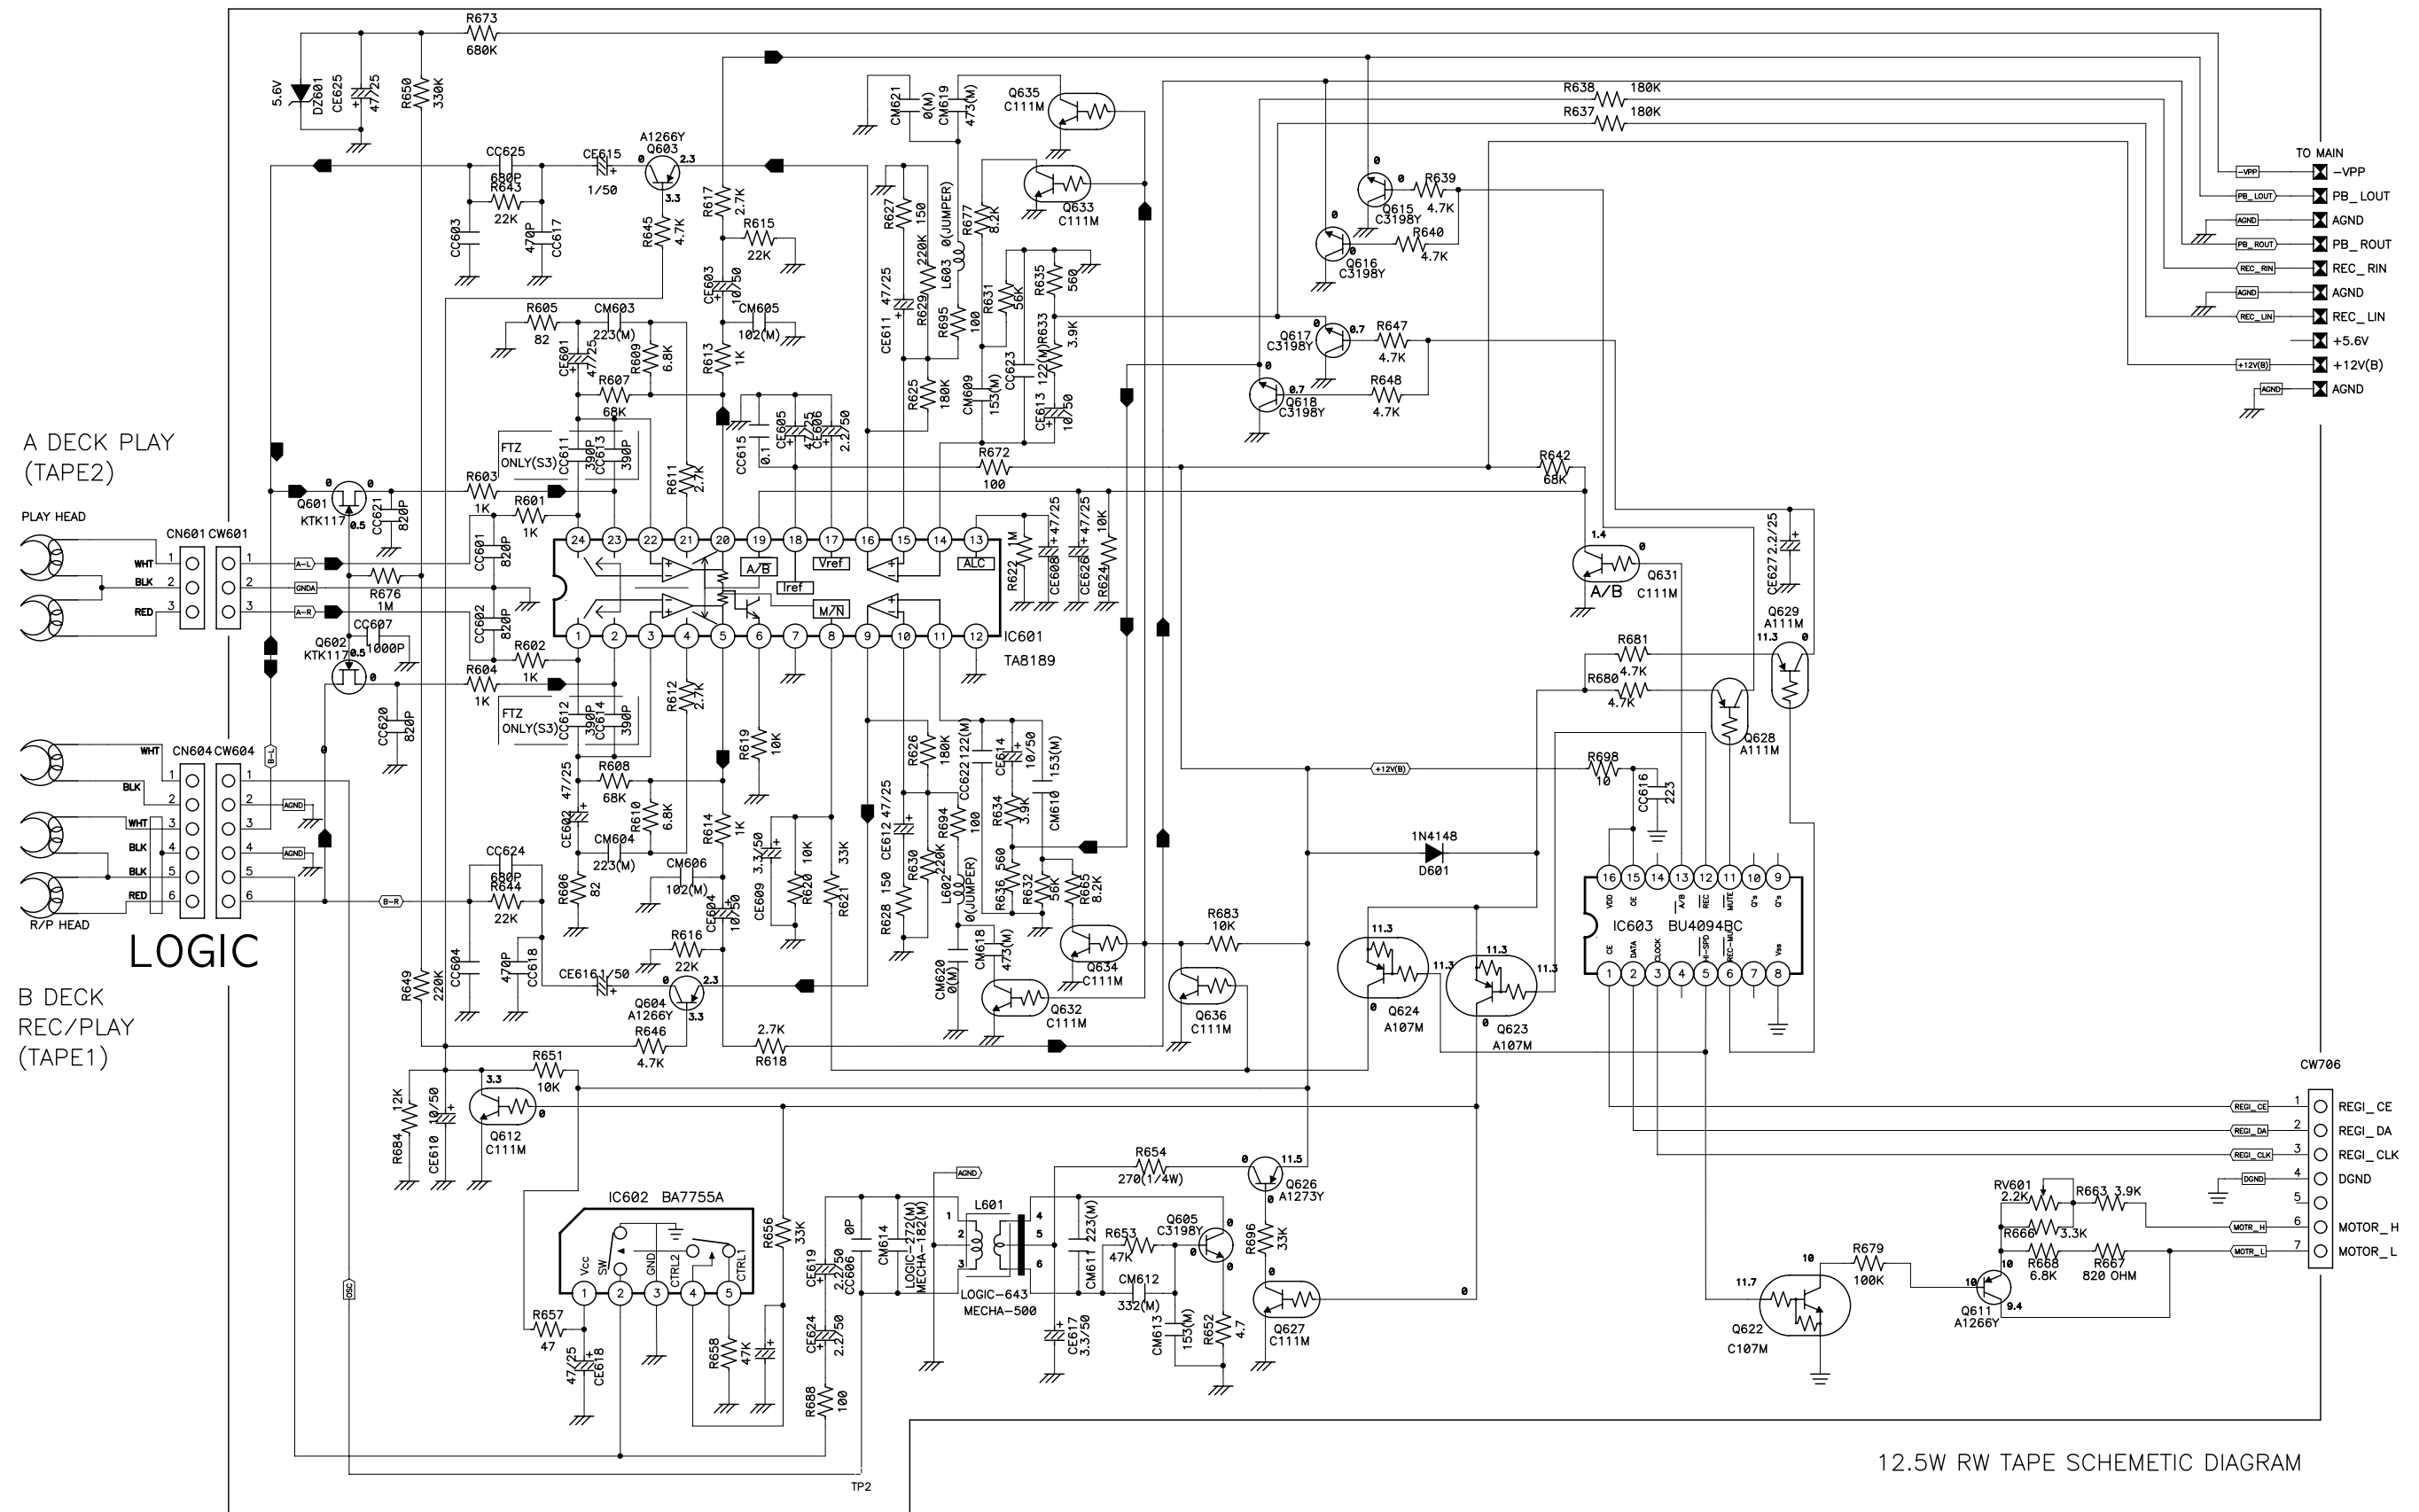

Model : AMI-329LW/RW
Ass'y Name : CD



 Model : AMI-829LW/RW
Ass'y Name : CD



Model : AMI-329LW/RW, AMI-829LW/RW
Ass'y Name : FRONT

