




SCHEMATIC DIAGRAM

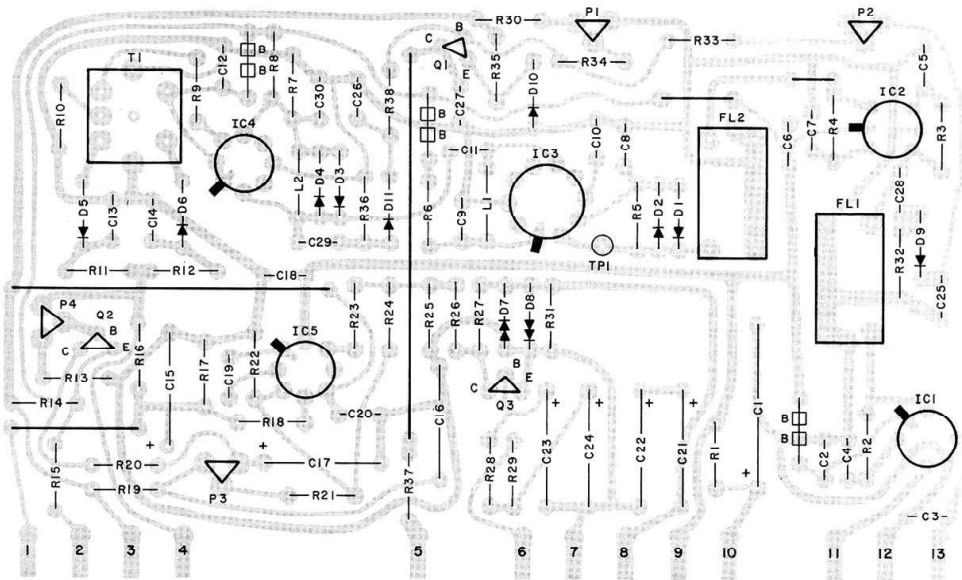

PC-25

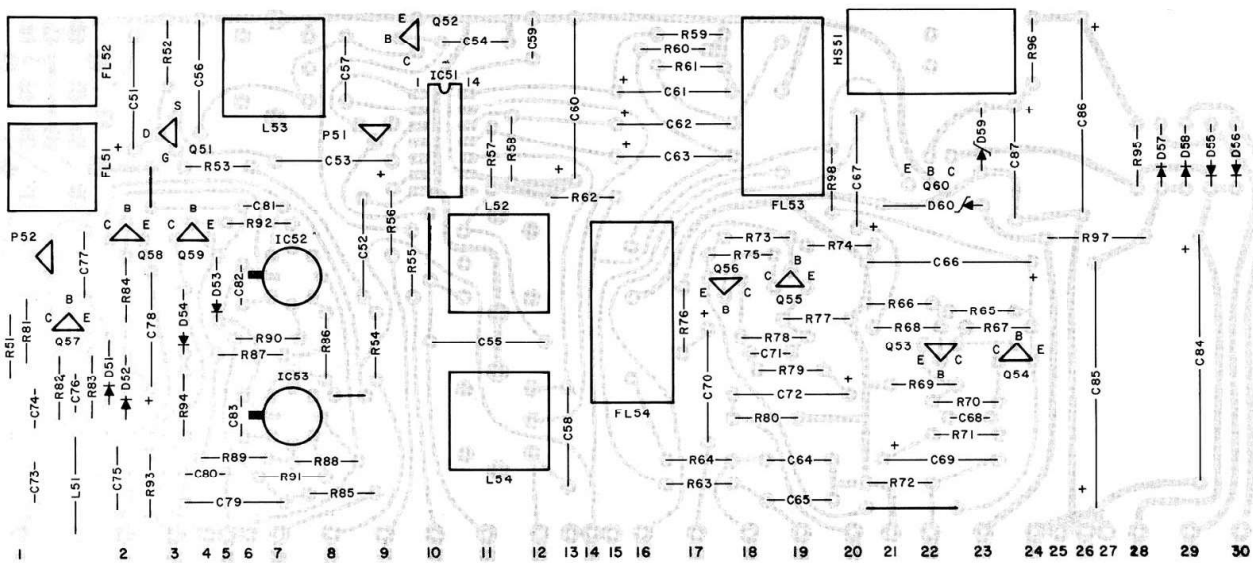


PC-26

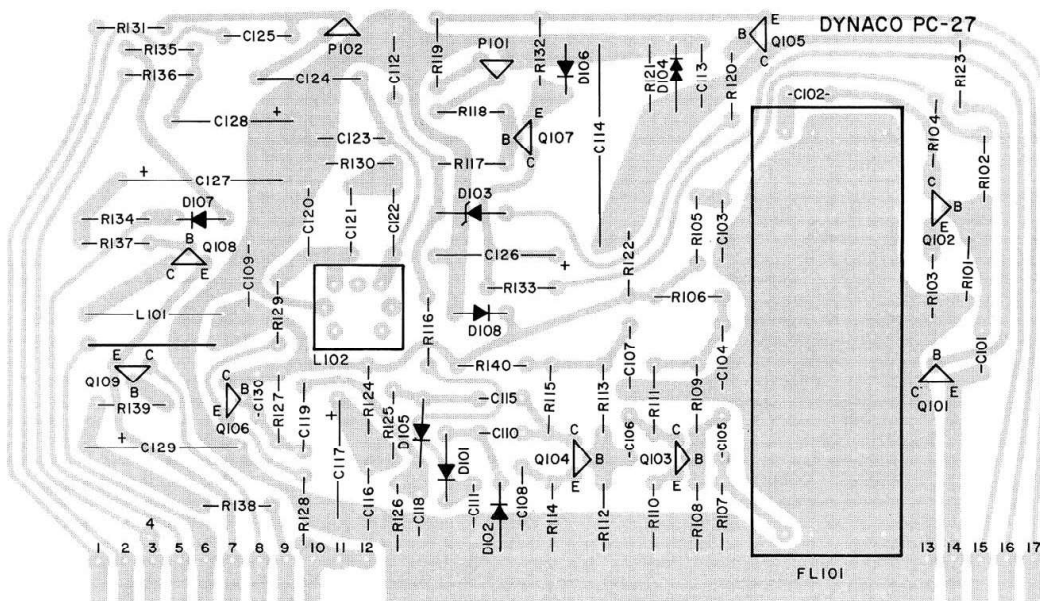


PC-27


THIS VIEW IS OF THE CIRCUIT SIDE OF BOARD

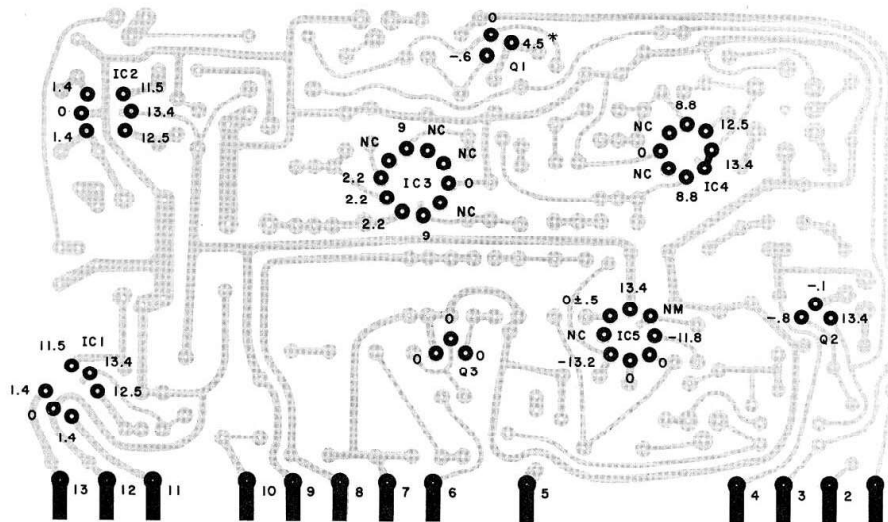

PC-25

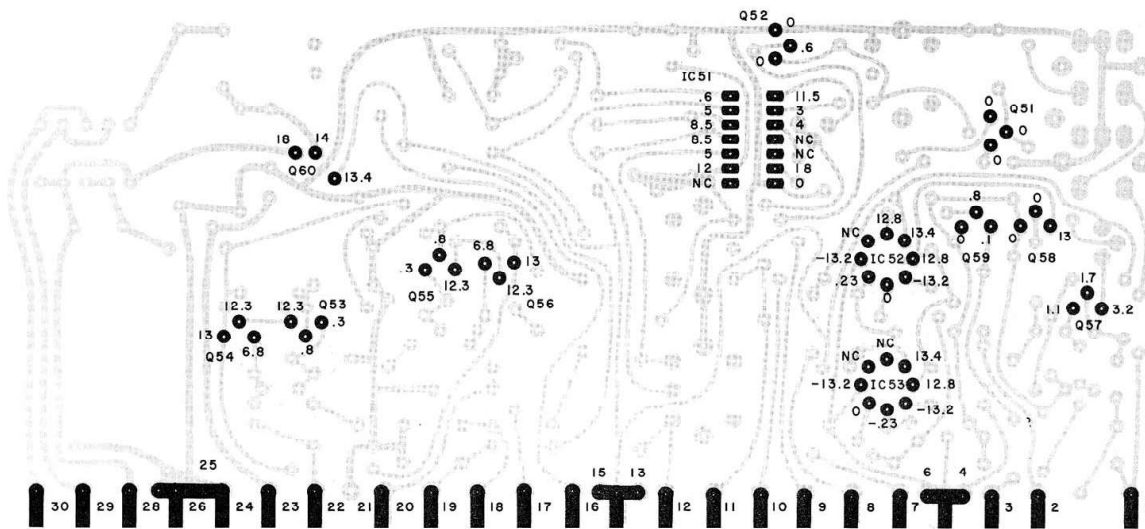

PC-26

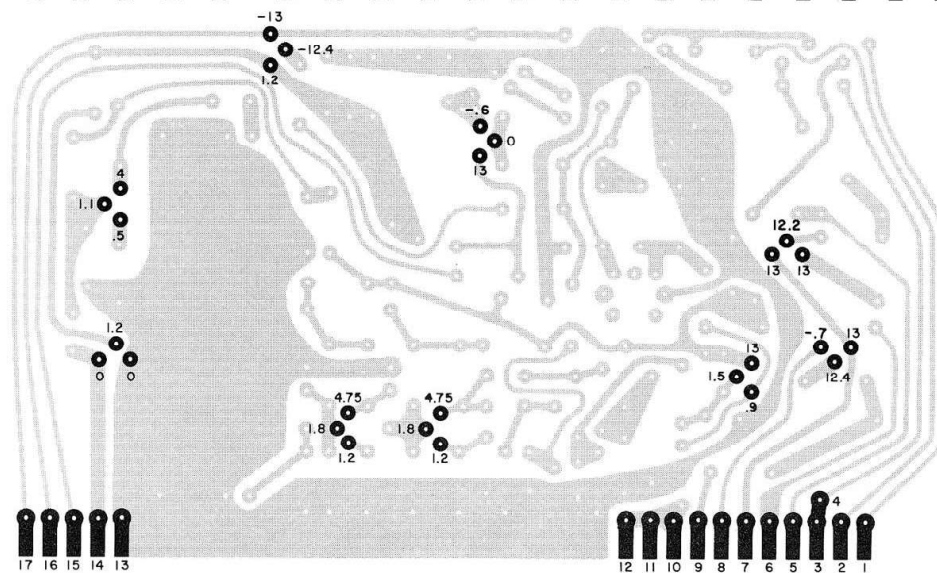

PC-27

**VOLTAGE TEST POINTS**

Measured with VTVM or TVM with at least 10 megohms input impedance. All FM measurements taken with a 1500  $\mu\text{V}$  input (unless otherwise noted), MONO mode, with muting switch in DYNATUNE<sup>™</sup>. All AM measurements taken with AM antenna input shorted to ground, and with mode switch in AM position. Chassis is ground reference. Be careful the meter does not short to adjacent circuit points or damage may result.

\* @ full scale deflection of tuning meter

NC = No Connection

NM = Not Measurable (no meaning)

## AF-6 PICTORIAL DIAGRAM

