





- S301 POWER ----- OFF
- S302 REAR GND ----- OFF
- S303 REAR GND ----- OFF
- S304 FUNCTION ----- TAPE
- S305 REC/PLAY ----- PLAY
- S306 REC/PLAY ----- PLAY
- S307 TAPE ----- NORMAL
- S308 TAPE ----- NORMAL

