



PICKUP HEAD FITTING INSTRUCTIONS

1. Release locking screw approximately two turns.
2. Line up track on pickup head with underside of arm and push gently into position, do not use force in this operation as it is completely unnecessary.
3. Retighten locking screw (finger tight only).

**Garrard Engineering Limited
Swindon Wiltshire England**