


Model: DVD2550S

The DVD2550S is nearly identically with DVD25 the below part list and exploded view show the part there is difference.

For service manual see DVD25 SN> **WA0001-23264**

The main board for DVD2550 is not available, use the DVD25 V2 main board and then download the DVD2550S software from the HCI-SERVICES.COM. or change U8 and U9 see part number below.

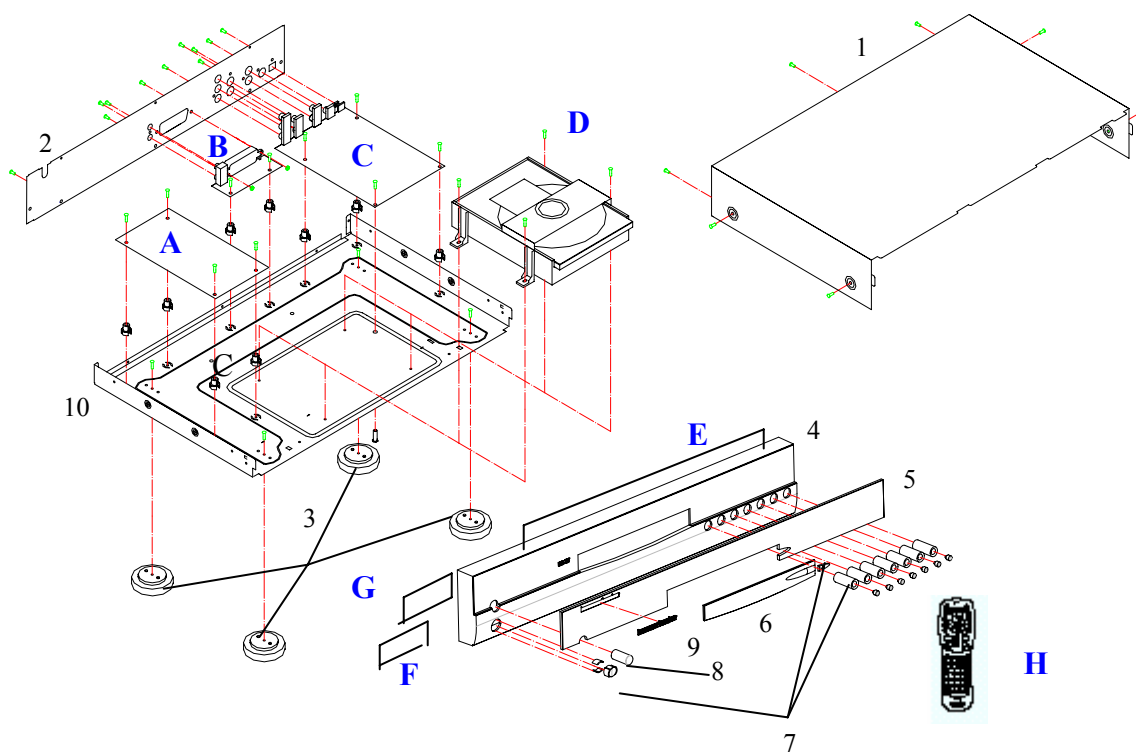

Pos	Part name	Part Number	Pos	Part name	Part Number
A	Power supply PCB 714C	WLD6.672.223	1	Top cover	WLD8.404.014-4
B	Output board 736C scart	WLD6.672.228	2	Rear Panel HB028-1	WLD8.610.030-4
C	Main board 737C-1	WLD6.672.227-1	3	Foot SD005-1	WLD8.085.005-4
D	Mechanism DVD-kit710	WLD5.018.024	4	Front Panel MB028-1	WLD6.116.033-4
E	Front board 787C	WLD6.672.229	5	window Lens	WLD7.370.004
F	Front St-by board 787C-1	WLD6.672.229-1	6	Door SC010	WLD8.082.021-4
G	Front SW board 787C-2	WLD6.672.229-2	7	Button set	WLD
H	Remote control	WLD2.018.059	8	Power button SA009	WLD8.337.024-4
U8	HY29F800TG-90 U8	WLD5.HY29F8.2550.U8.V1	9	Harman / kardon badge	WLD8.809.002-4
U9	HY29F800TG-90 U9	WLD5.HY29F8.2550.U9.V1	10	Chassis DZ025-1	WLD8.031.027-1

	Carton Box	WLD8.865.066-4		Owners Manual	WLD8.810.2550S
--	------------	----------------	--	---------------	----------------