


SWITCH

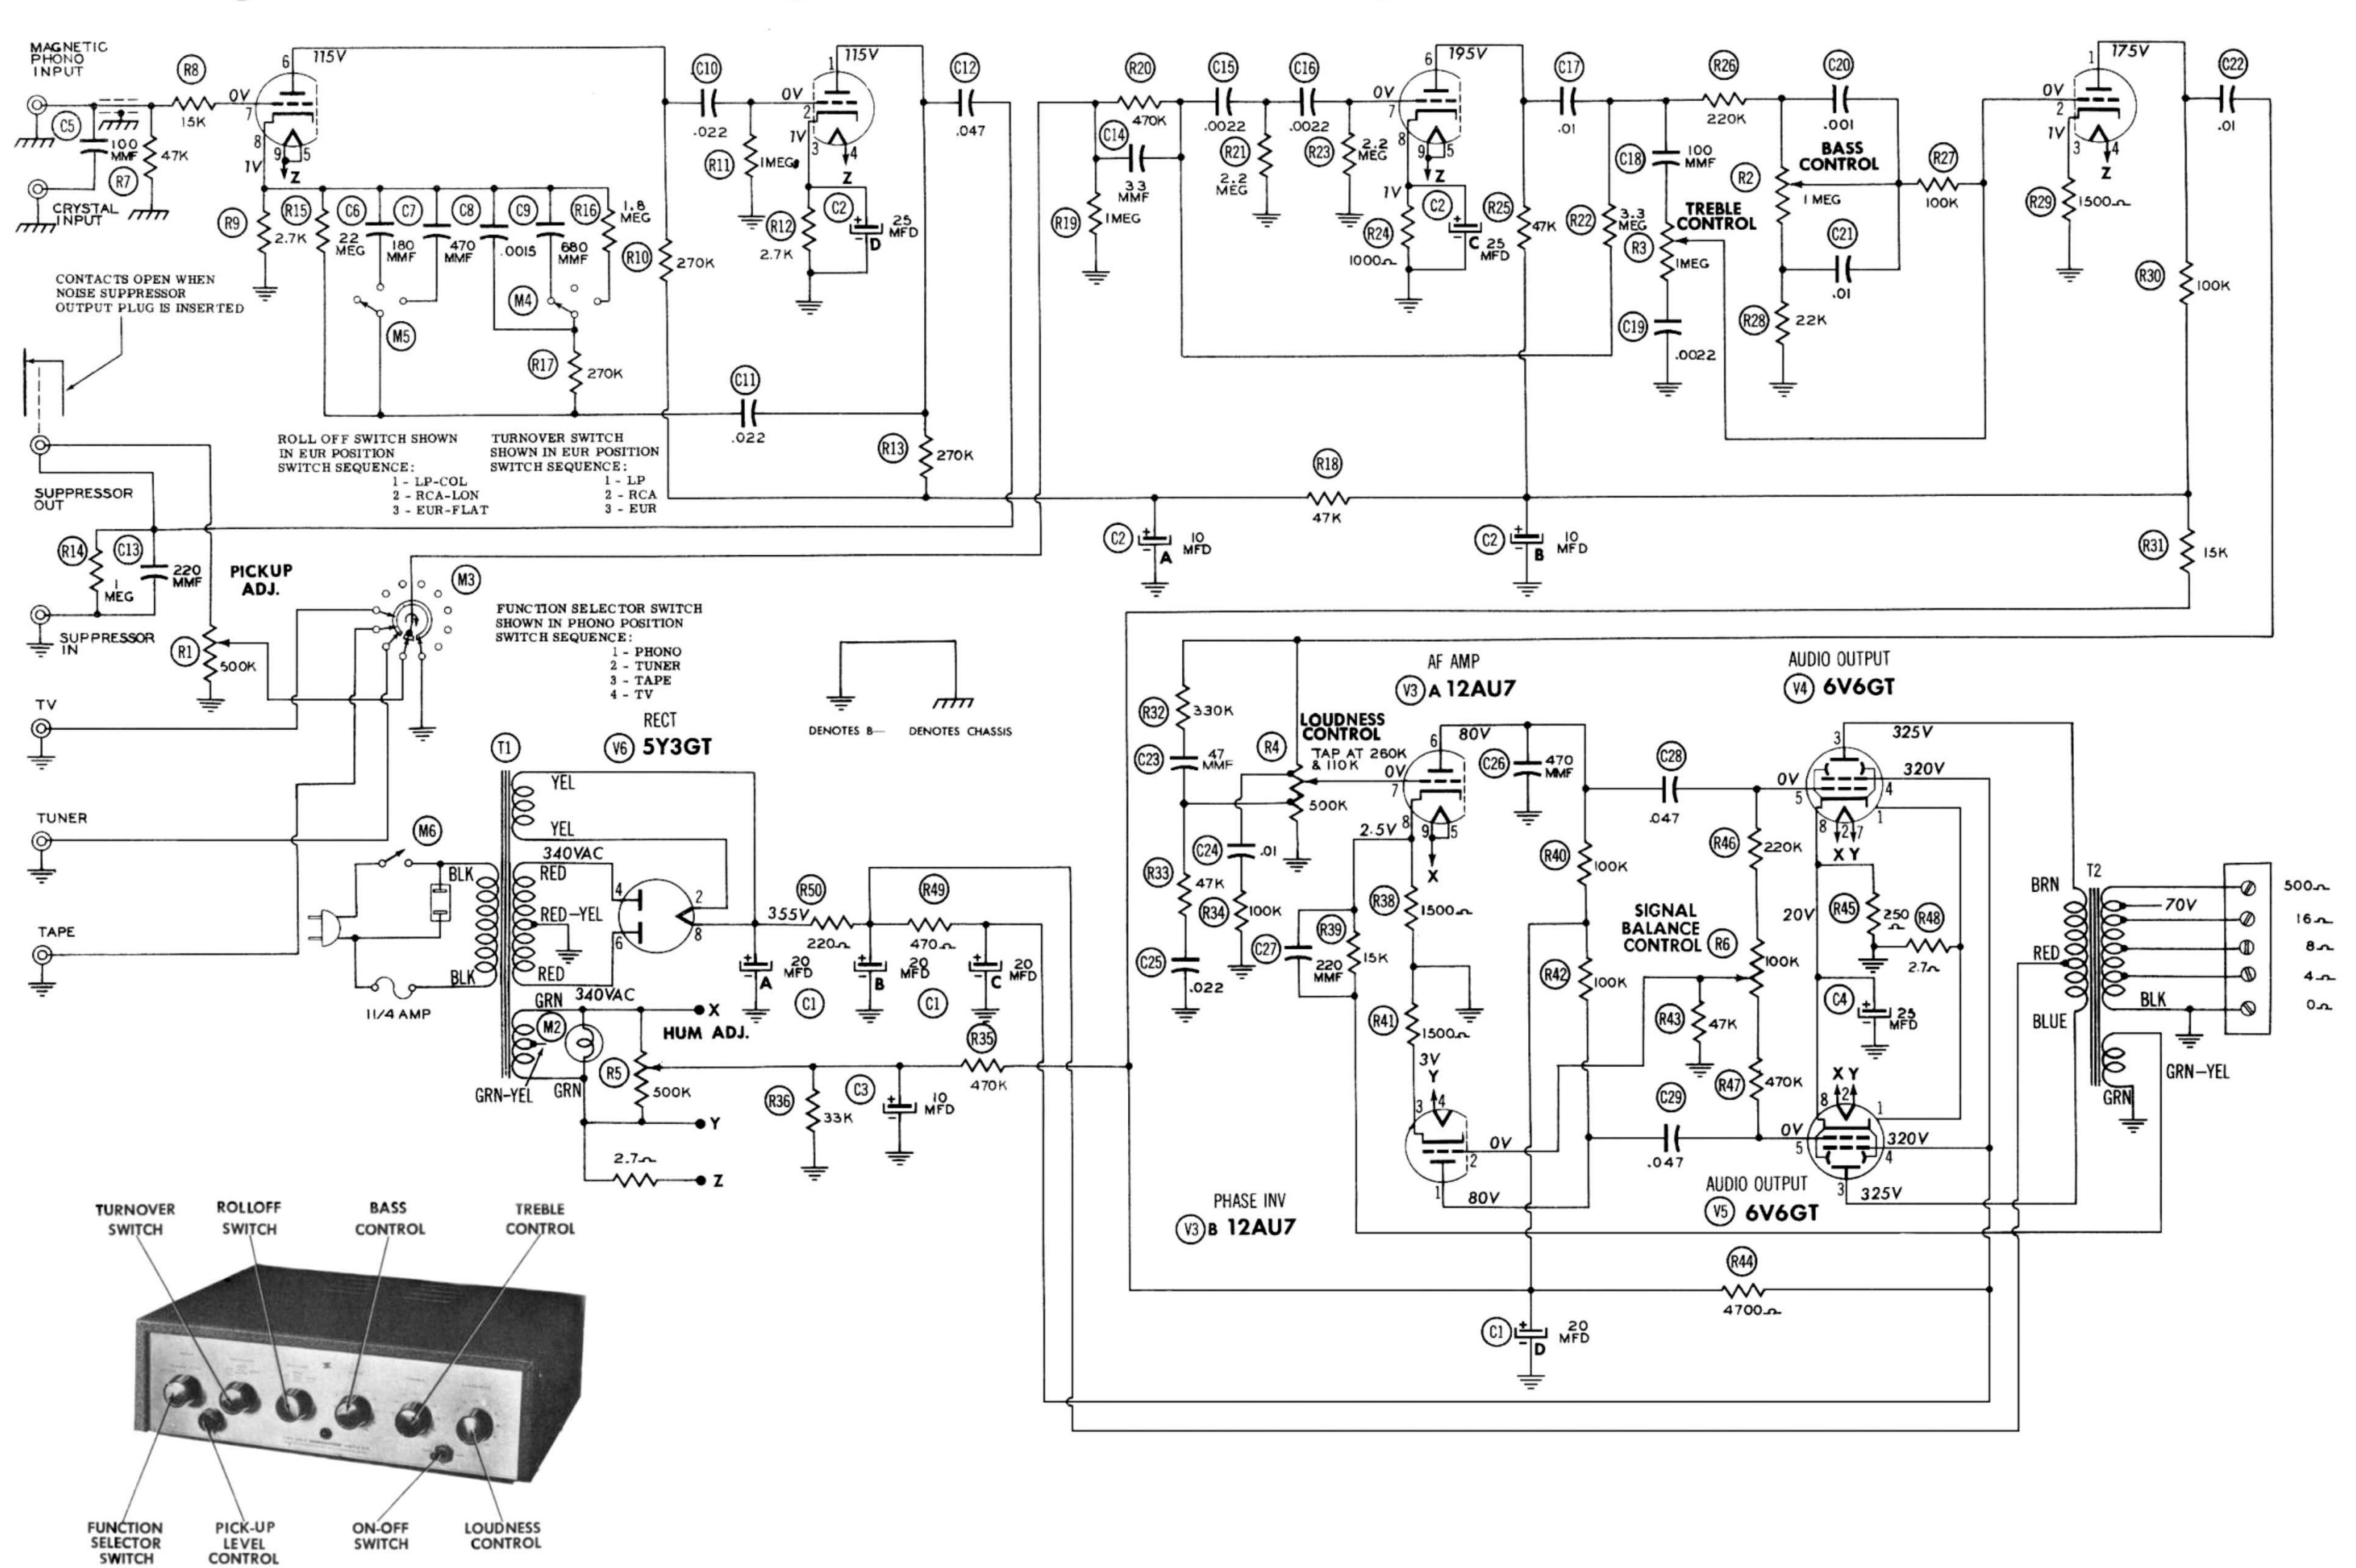

PHONO PRE-AMP (V1)B12AX7

AF AMP (V2) A 12 A X 7

AF AMP (V2) B 12AX7