




# **Service Manual**


---


---

**Radiograbador**


**Modelo CX-45**

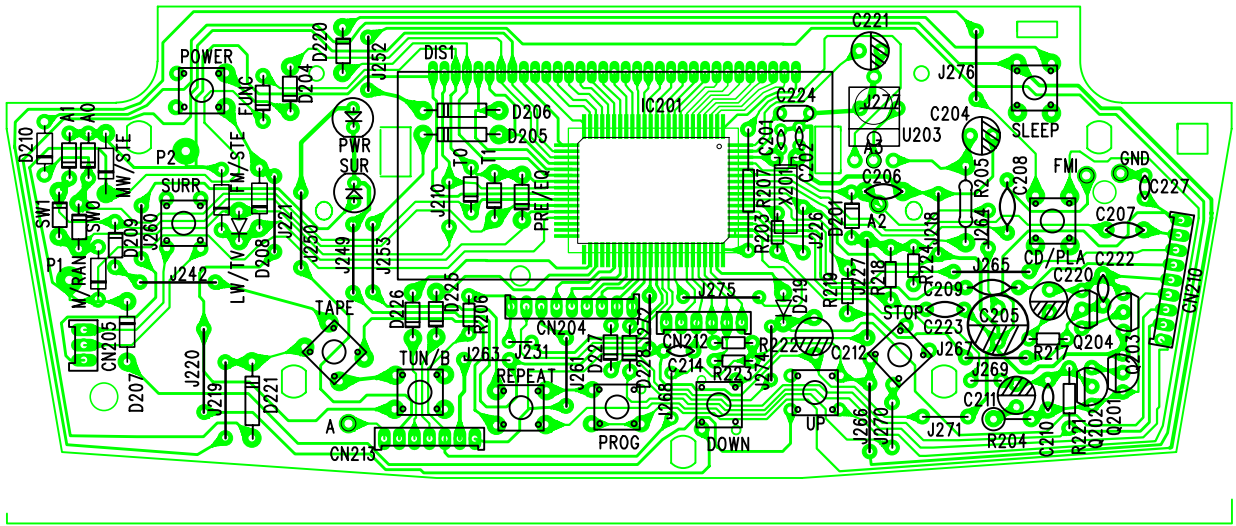

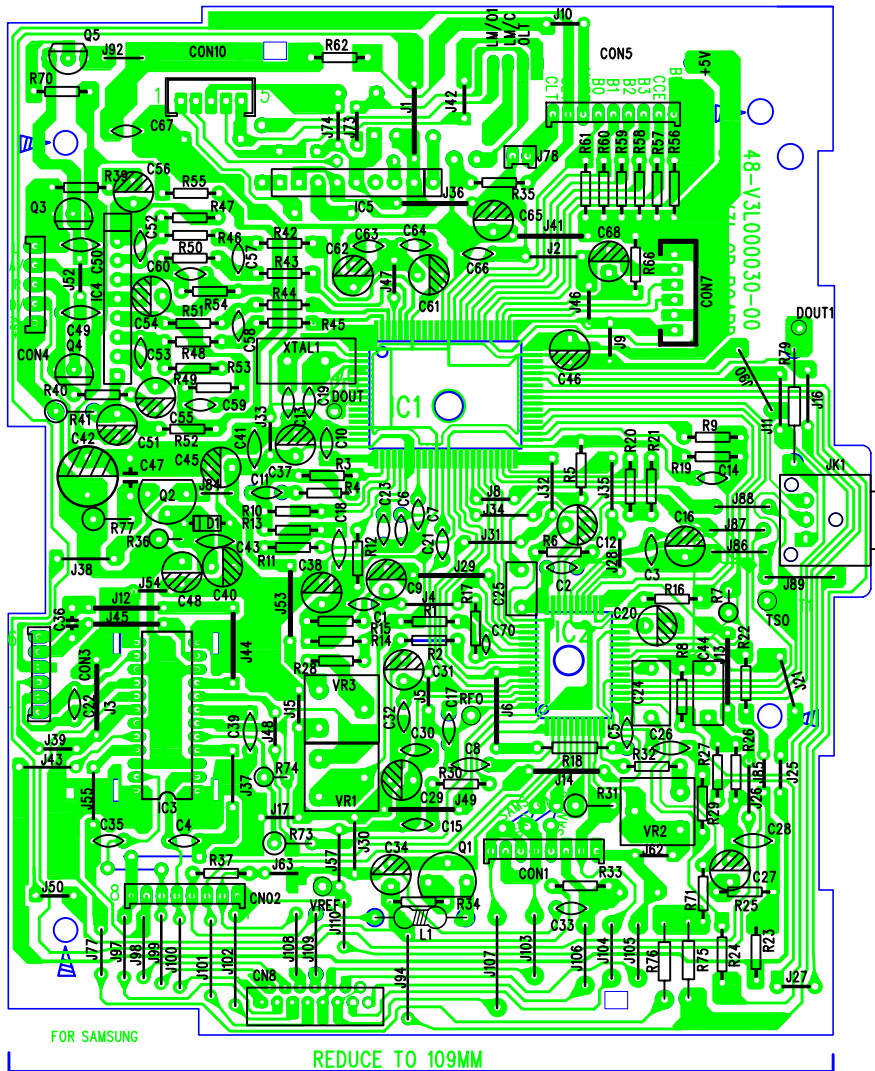


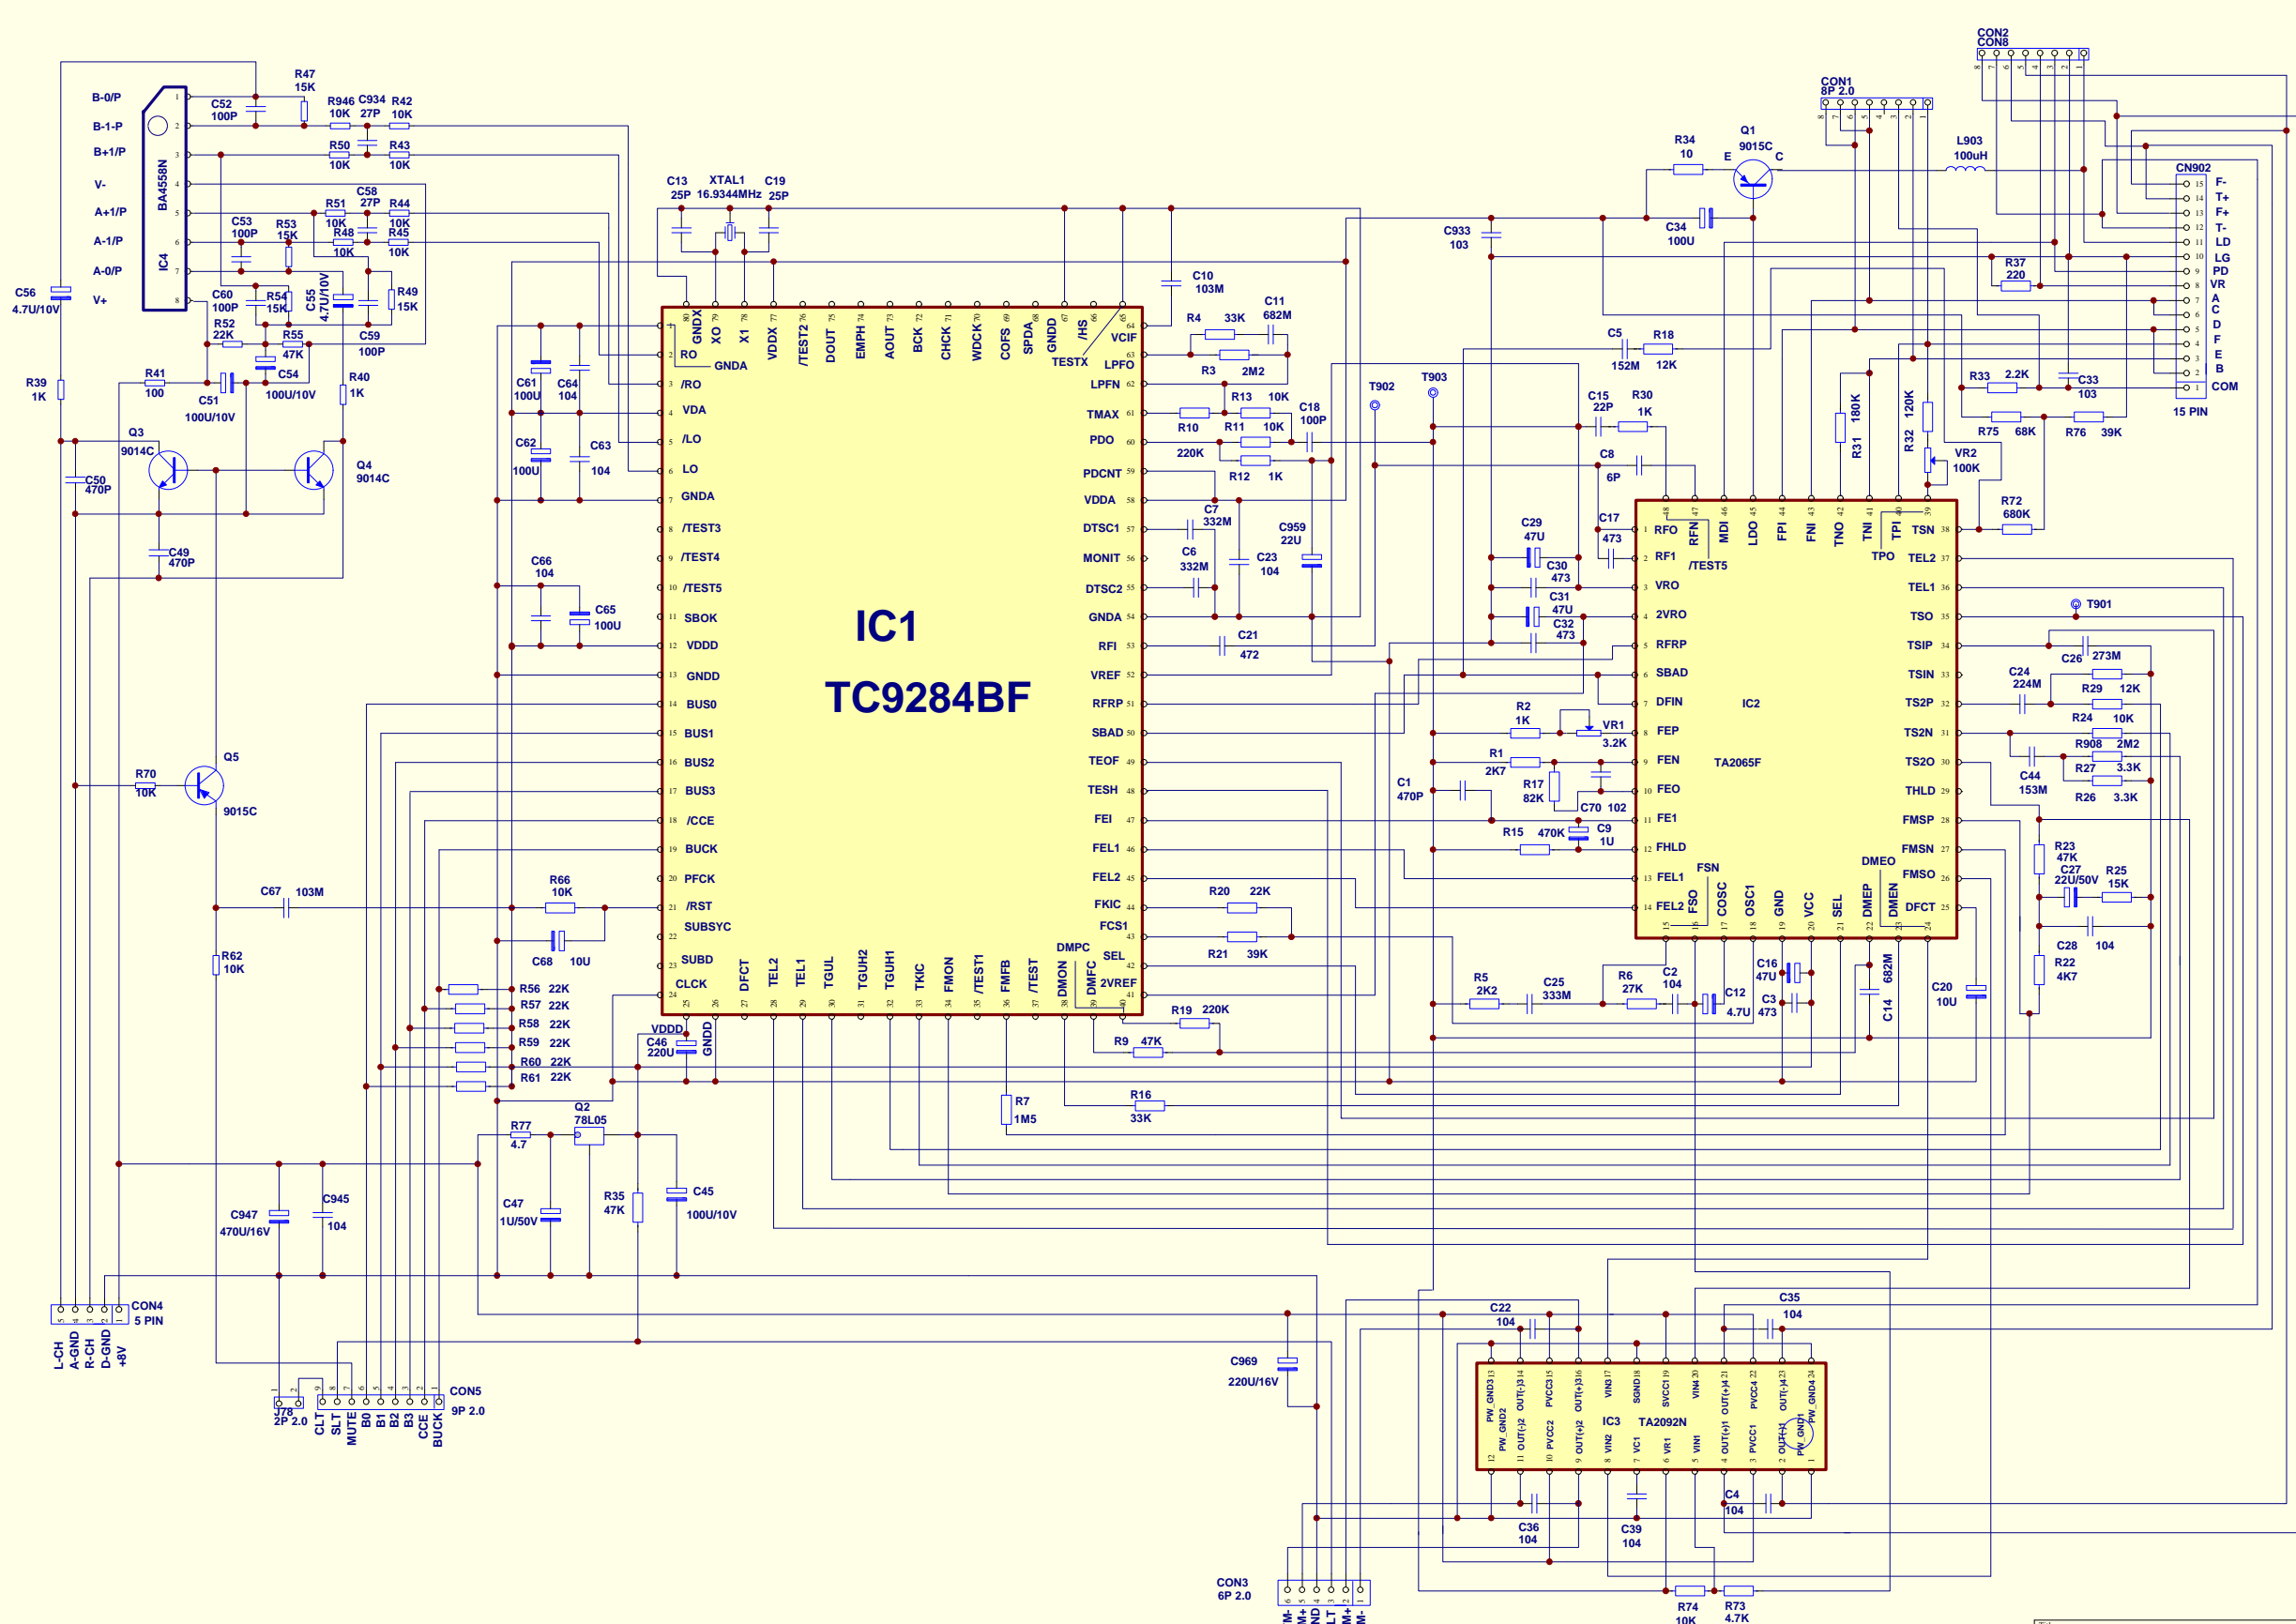

Title			
SKC-V3L SANYO DA11 CD MECH			
Size	Number	Revision	
D	4	1	
Date:	27-Nov-2001	Sheet of	01
File:	E:\R\Pack\I\pct\modsch\V3l.cad	Drawn By:	

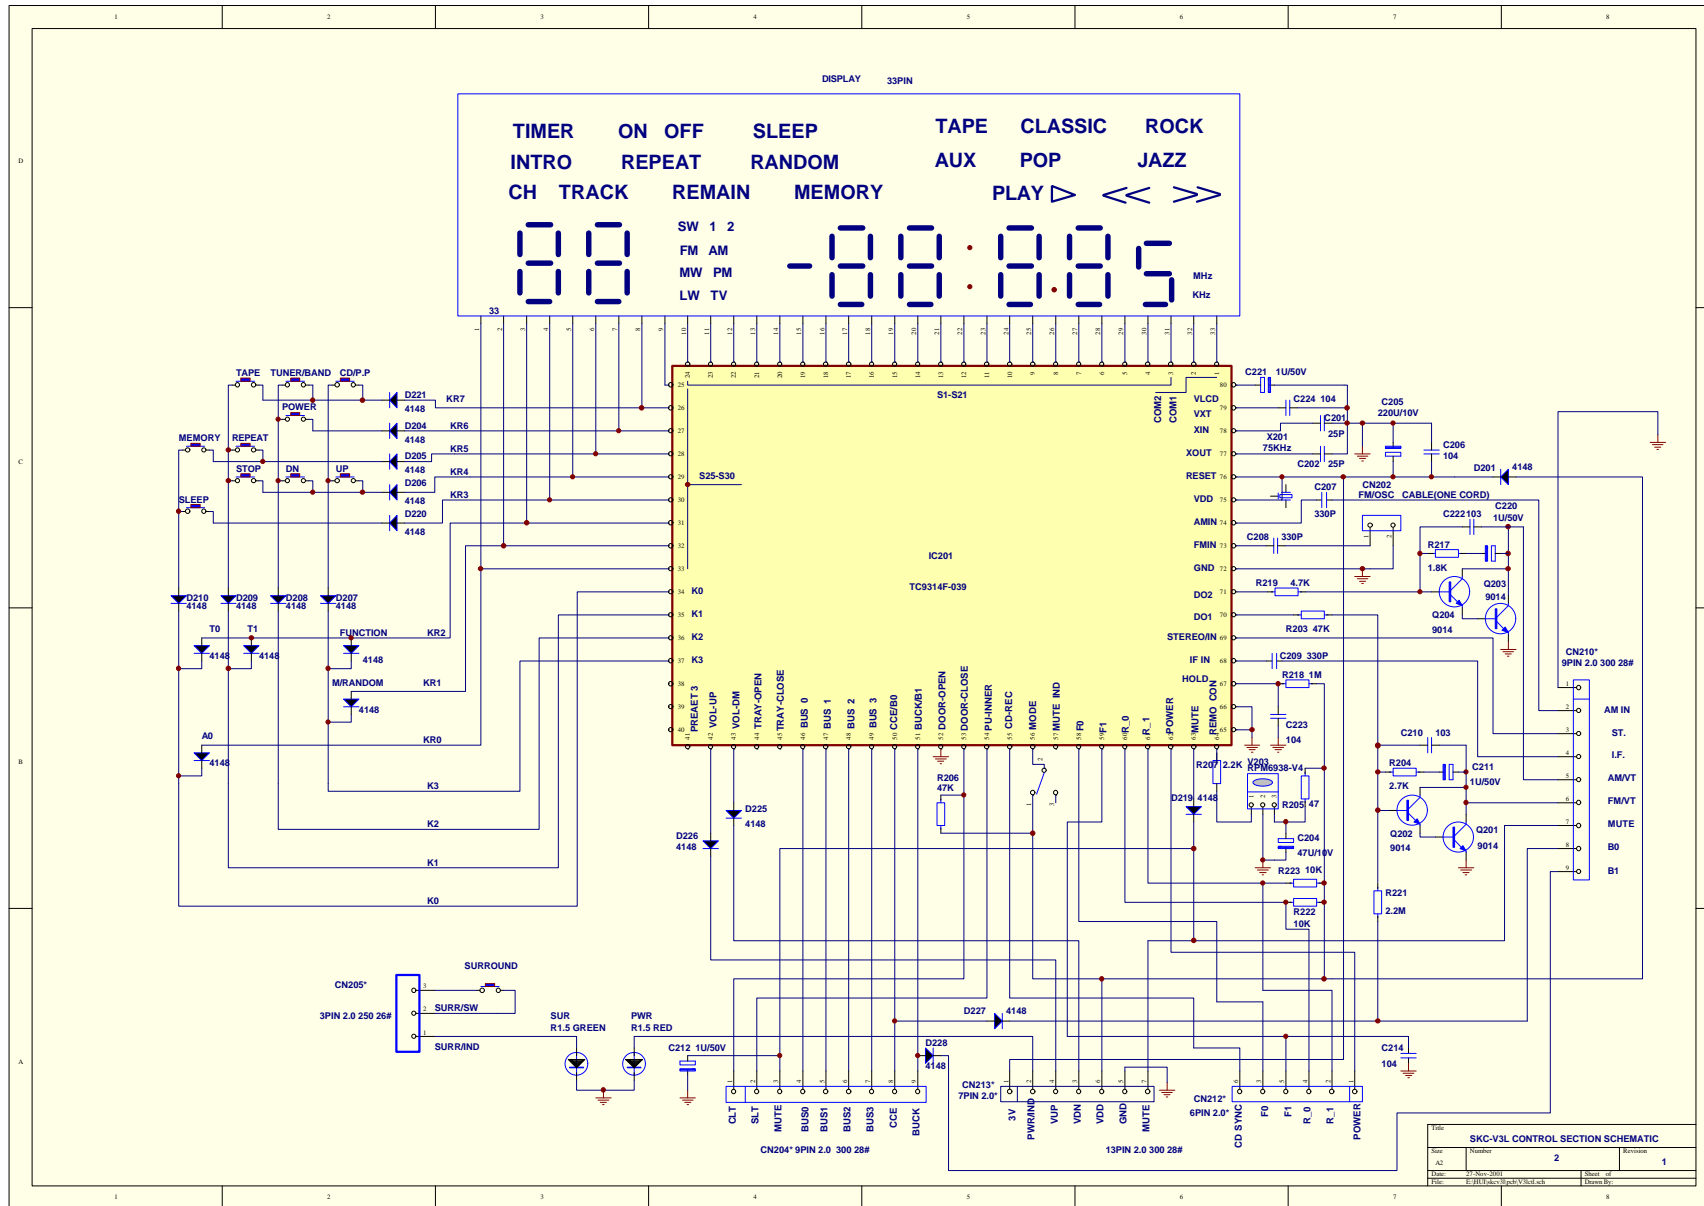


SKC-V3L CONTROL SECTION SCHEMATIC		
File	Number	Revision
2	2	1
Date	Drawn By	Checked By
17 Nov 2000		
File	Drawn By	Checked By
E:\JTB\skc-v3l\skc-v3l.sch		

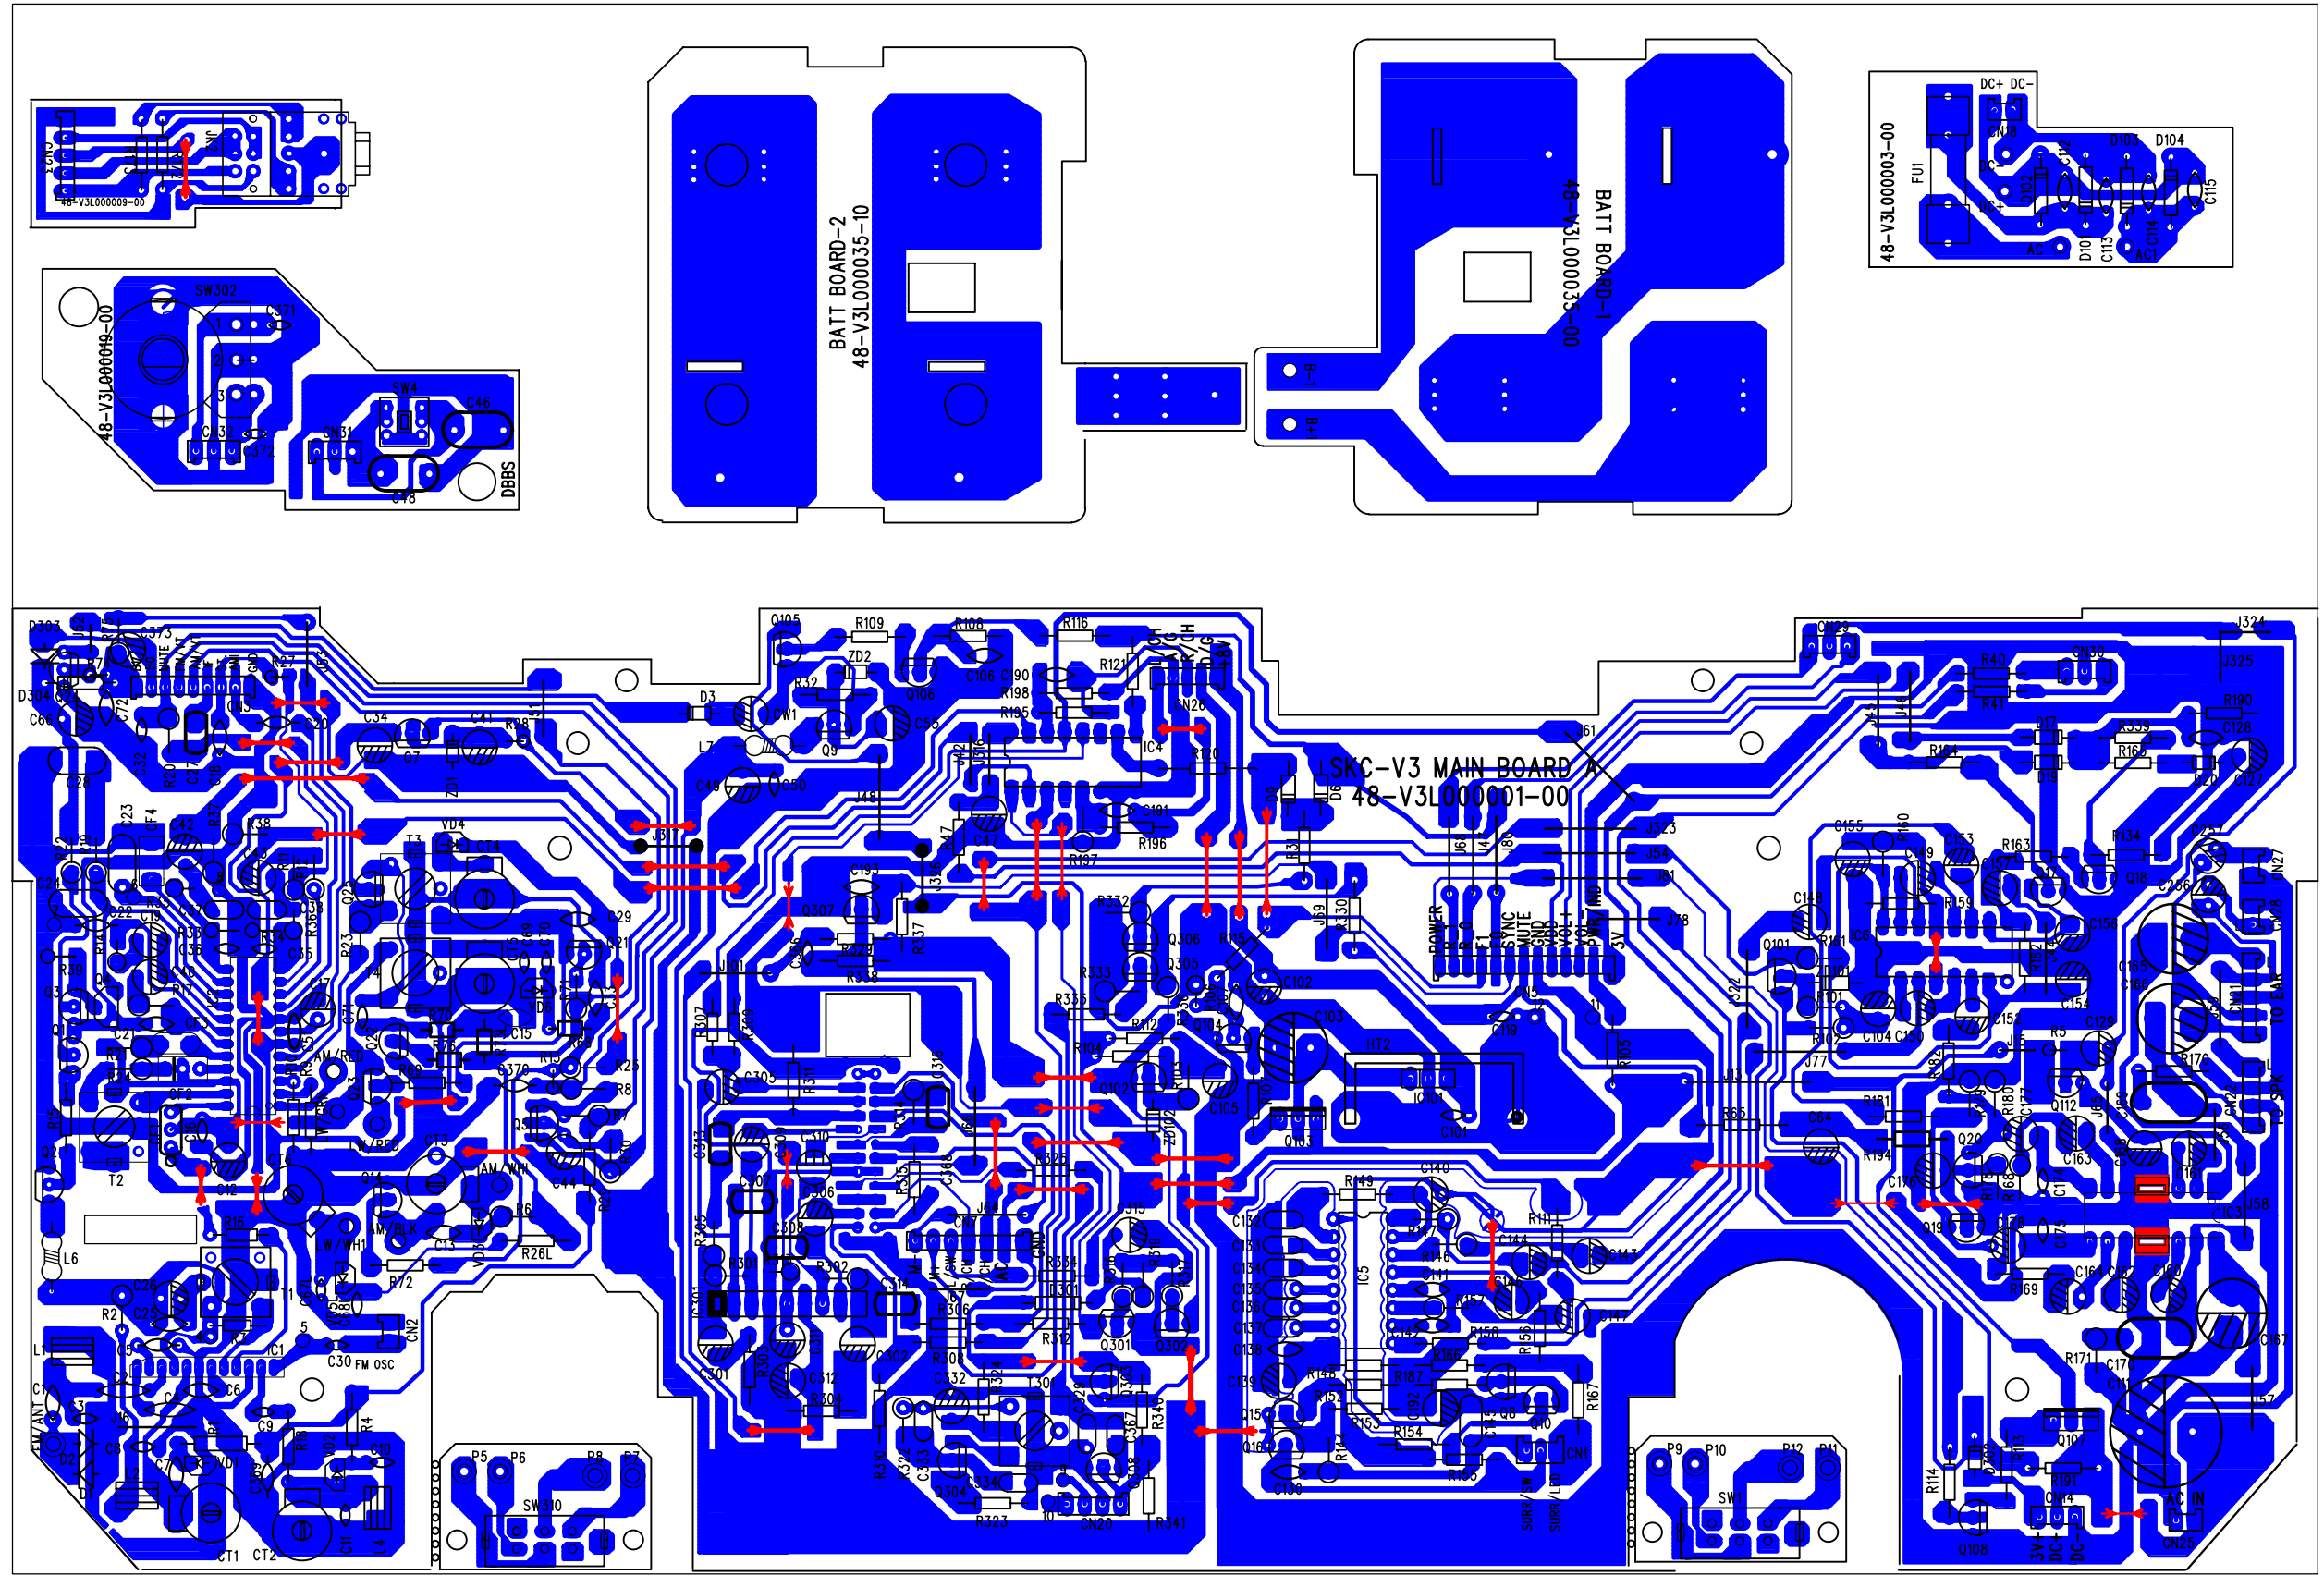

SKC-V3L MAIN BOARD COMPONENT SIDE  
2000 02 24

330mm



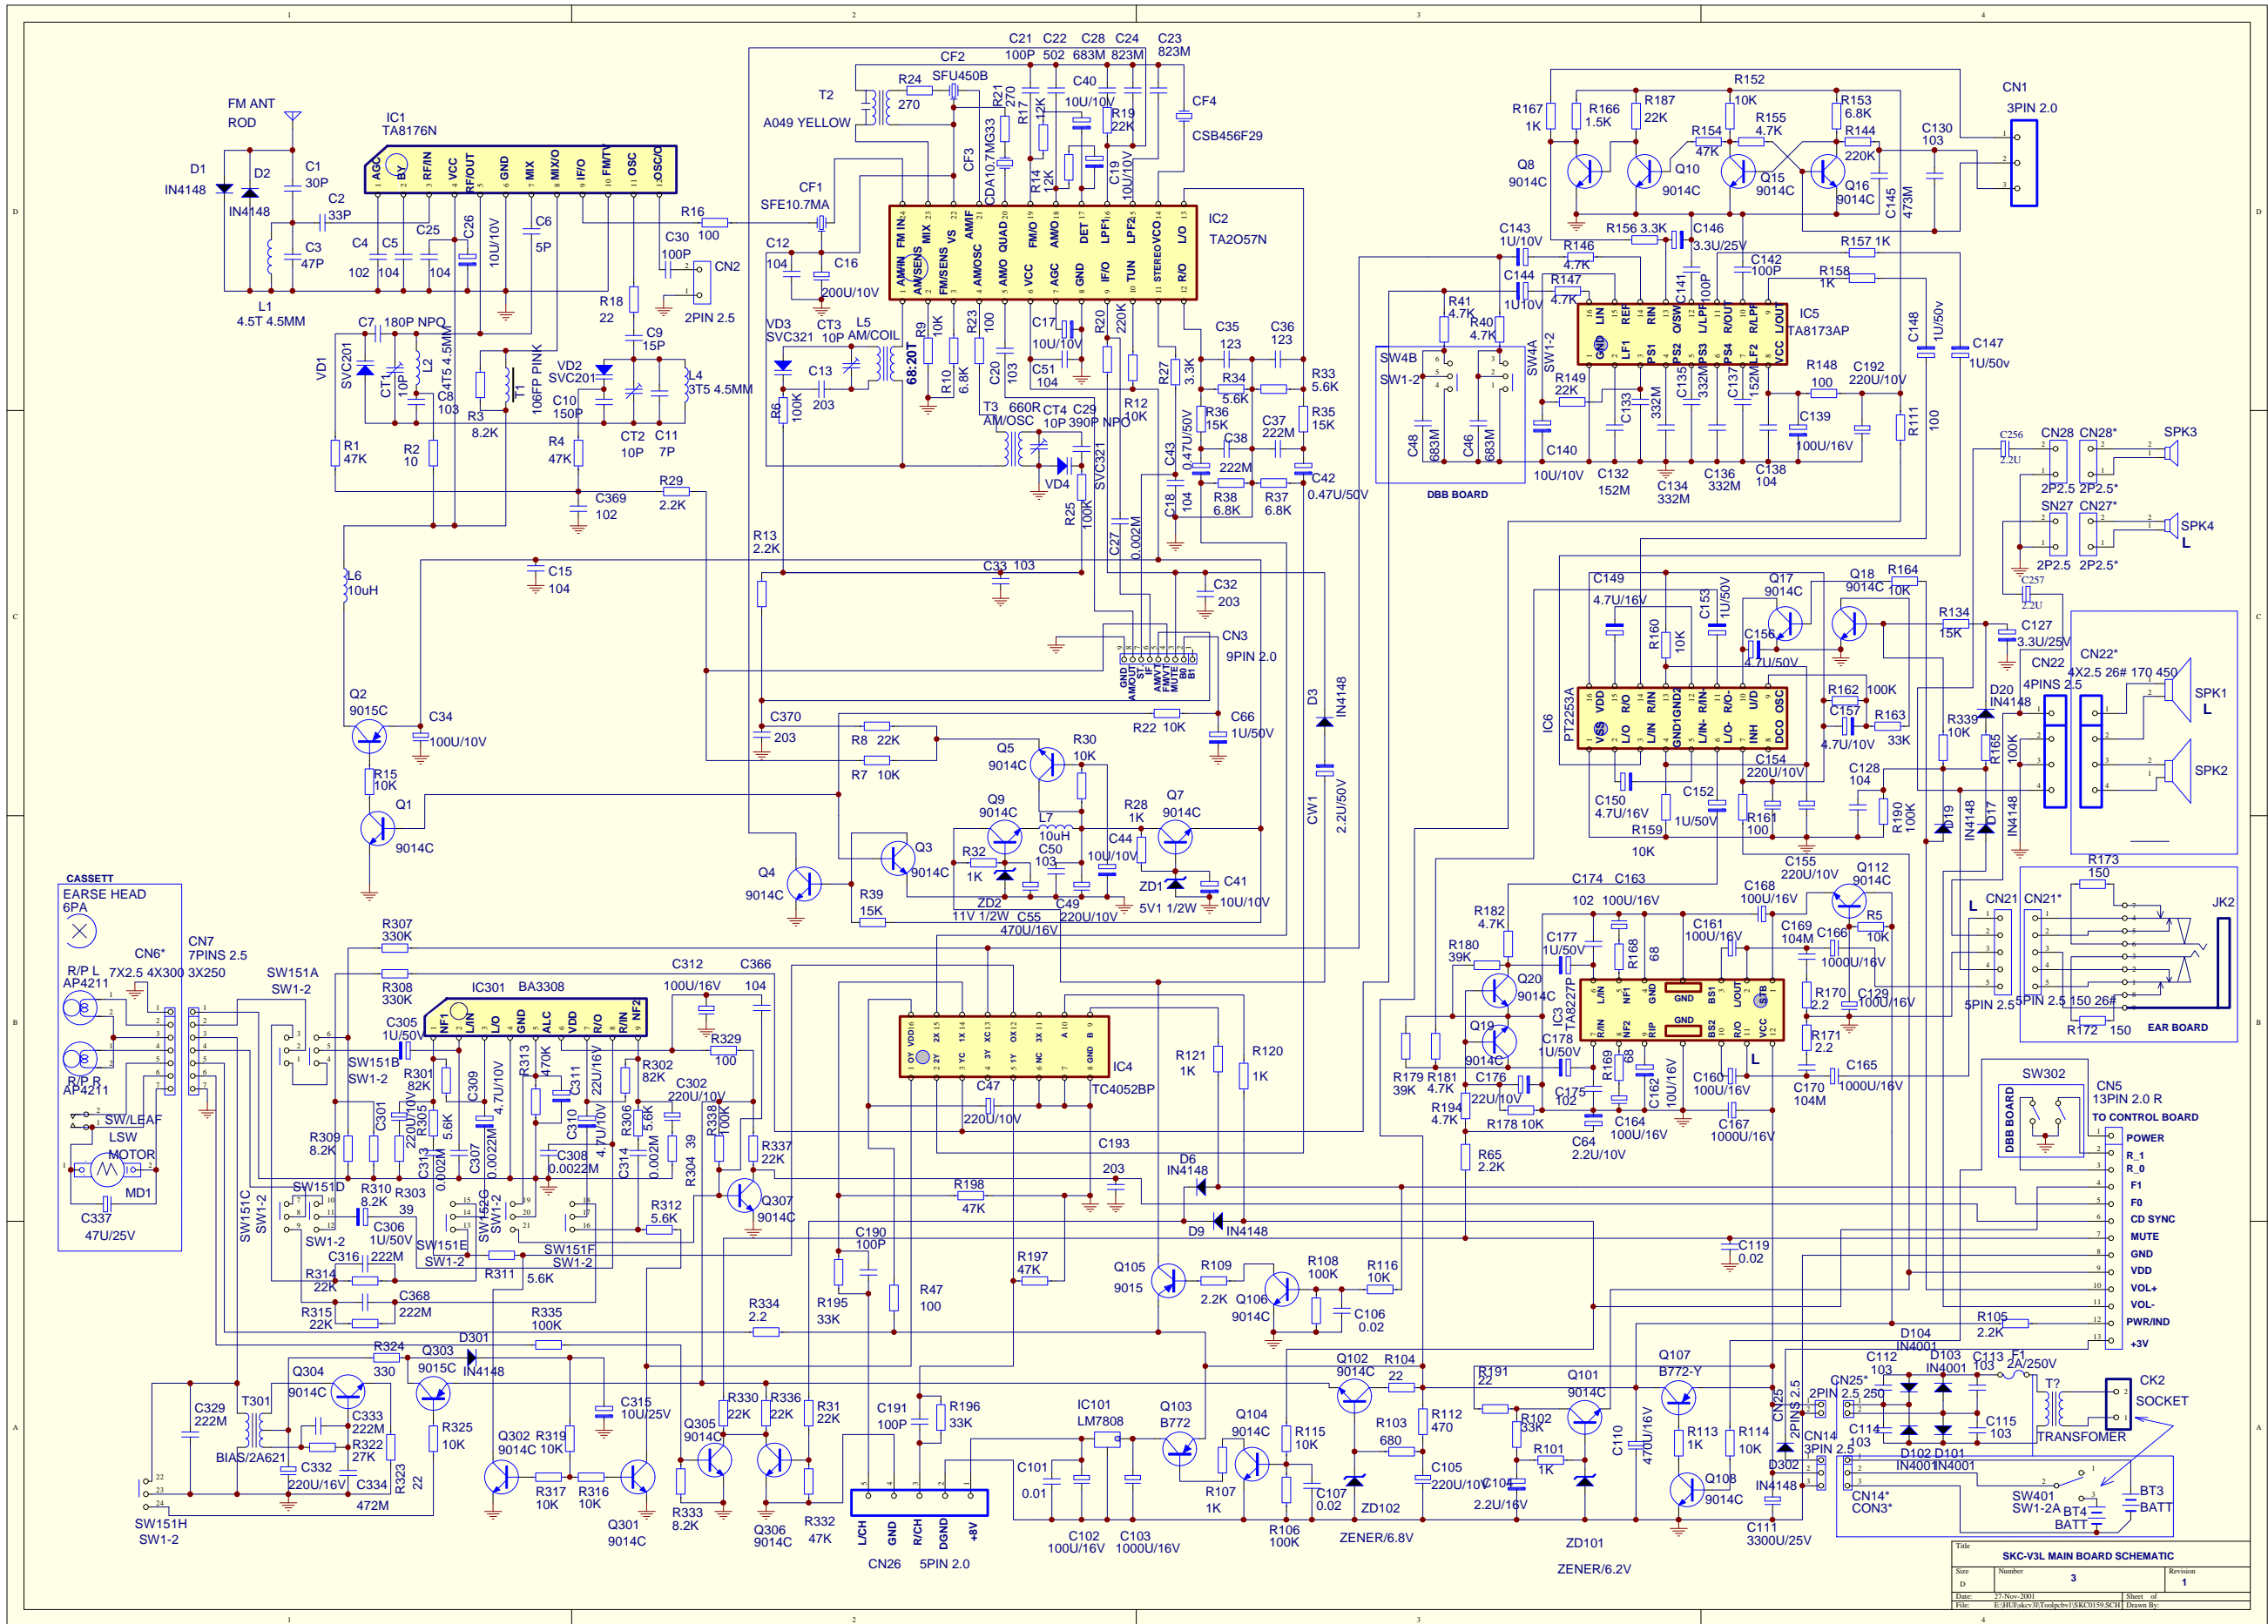

Title: SKC-V3L MAIN BOARD SCHEMATIC

Rev	Number	Revision
1	3	1

Date: 17-Nov-2001  
 File: E:\JHE\skc\3\Toadpcb\1\SKC0159.SCH Drawn By:

## LISTADO DE MATERIALES CX-45

01-1V3L00000-30	REMOTE CONTROL ASSY
01-V3L000001-20	MAIN BOARD ASSY AM/FM
01-V3L000003-10	RECTIFIER BOARD ASSY
01-V3L000004-00	DISPLAY BOARD ASSY
01-V3L000009-00	AM/FM H.P.BOARD ASSY
01-V3L000019-00	VOLUME BOARD ASSY
01-V3L000030-10	CD BOARD ASSY
18-2485V3000-17	TRANSFORMER 230V 12V/1A
19-810530108-07	SPEAKER 3W 8 OHM
19-821051032-08	TWEETER 5W 8 OHM
26-341030300-00	ELECT CAP 100UF 25V
26-352230200-00	ELECT CAP 2200UF 16V
32-100000009-02	ANTENNA
32-516300500-00	MAGNET
38-219510029-00	FM COIL
41-061100000-0L	LEAF SWITCH
43-520115020-01	AC SOCKET
44-302610200-41	STRAND JUMPER WIRE UL1007
44-8E0006065-00	15P FLEX FLAT CABLE
46-220420100-10	FUSE 2.A/250V
47-304051302-10	UL TUBE
57-08V300010-07	MASK PLATE-(SILVER)
57-08V300030-076	PVC PLATE
58-09KOPEN00-00	CABLE TIE 2.5MM
58-190275700-00	FELT (W/TAPE)
58-190DS9500-00	FELT (W/TAPE 90x5mm)
58-26D77A000-00	RUBBER DIA 6x1 mm
58-26SKCV200-00	HARD RUBBER FOOT
58-51SCD6600-00	BATTERY RIBBON
58-61AC21000-00	SHOCK ABSORBER (RED)
58-61AC22000-00	SHOCK ABSORBER (GREEN)
58-76V300000-00	CLOTH 40x40mm
58-82SKCV200-00	SPONGE 55x25x25mm



61-04SKCV200-00	ANTENNA CONTACT PLATE
61-11SKCV200-02	TRANS. BRACKET
61-16V300000-00	MAGNET CAP TOP DIA 40mm
61-26TX44001-00	BATTERY SPRING (-)
61-68V300000-00	CD DOOR PLATE
61-80V3L0010-00	RECORD SHAFT
61-900006020-00	SPEAKER CLIP
61-900016000-00	SPEAKER CLIP
61-91V300181-01	SPEAKER GRILL R
61-91V300281-01	SPEAKER GRILL L
61-91V300381-01	SPEAKER GRILL SMALL
61-94SKCV220-02	SPRING-CASS DOOR
61-97V300020-03	SPRING-CD
61-97V300041-00	SPRING-CD DOOR
71-11V300010-20	V/CASS DECK
71-70DA11N00-02	CD MECHANISM
45-121830418-06	AC CORD SET
56-02V3002A1-10	TWEETER TOP CABINET
56-02V3003A1-10	TWEETER BOTTOM CABINET
56-02V3L01A1-20	TOP PANEL
56-04V3000A1-20	FRONT CABINET
56-05V3006A1-20	REAR CABINET
56-06V3000A1-10	BATTERY DOOR
56-07V3000B0-10	DOOR CLIP HOLDER
56-07V3001B0-10	CASS DOOR BRACKET
56-07V3005B0-10	CD MAGNET HOLDER
56-07V3L0080-10	LCD BRACKET
56-13V300065-40	CASS DOOR HITACHI
56-14V300063-10	CD DOOR (LIGHT BLUE)
56-220338C00-BA	LASER COVER
56-1610601B0-1	MAGNET CAP BOTTOM(BLACK)
56-22V300162-41	LEFT COVER-SPEAKER
56-22V300262-41	RIGHT COVER-SPEAKER
56-22V3003A1-10	LEFT COVER-TWEETER
56-22V3004A1-10	RIGHT COVER TWEETER

56-22V3L00A1-10	FRONT COVER
56-240Z24100-BA	GEAR
56-240Z24110-BA	HOLDER GEAR
56-41V3000A1-10	HANDLE (SILVER)
56-41V3001A1-10	HANDLE COVER (SILVER)
56-54V300431-10	DBBS KNOB (MET, ORANGE)
56-54V3L00A1-10	CD CONTROL KNOB (SILVER)
56-54V3L01A1-10	VOL KNOB (SILVER)
56-55V300081-11	CASS KNOB(GRAY)
56-57V3L0081-40	DISPLAY LENS
56-62V200080-10	SPACER
56-63V3000B0-10	CD DOOR CLIP
56-69V3000B0-10	LONG PLATE (ABS)
56-810000000-AA	AC SOCKET COVER