



- |                          |               |   |           |
|--------------------------|---------------|---|-----------|
| S <sub>1</sub> SP切换      | 1. OFF        | X <sub>101</sub> ~ X <sub>102</sub> , X <sub>301</sub> ~ X <sub>302</sub> | 2SC458LGC |
| (a~e)                    | 2. H. PHONE   | X <sub>401</sub> ~ X <sub>402</sub> , X <sub>404</sub>                    | 2SC458LC  |
|                          | 3. SYSTEM 1   | X <sub>103</sub> ~ X <sub>104</sub> , X <sub>303</sub> ~ X <sub>304</sub> | 2SC484Y   |
|                          | 4. SYSTEM 2   | X <sub>405</sub>  | 2SC484Y   |
|                          | 5. SYSTEM 1+2 | X <sub>105</sub> , X <sub>305</sub>                                       | 2SA537A   |
| S <sub>2</sub> VU.SENSI. | 1. 30 db      | X <sub>403</sub>  | 2SC497    |
| (a~b)                    | 2. 20 db      | X <sub>1</sub> ~ X <sub>4</sub>   | 2SD203    |
|                          | 3. 10 db      |   |           |
|                          | 4. 0 db       |   |           |
| S <sub>3</sub> DF. CONT. | 1. DF 50      |   |           |
| (a~f)                    | 2. DF 5       |   |           |
|                          | 3. DF 0.5     |   |           |

指定ナキ抵抗ハ 1/2 Wトスル