

# JVC

## SERVICE MANUAL

MODEL No. **RX-150BK/RX-150LBK**



This unit is almost the same as the RX-111BK/RX-111LBK.  
The differences are listed herein.  
When using this Service Manual, refer to the previously published  
RX-111BK/RX-111LBK Service Manual (No. 2871, Nov. 1985).

**Note: The marks for Designated Areas**

J ..... U.S.A.	E, LE ..... Europe
C ..... Canada	LBS ..... U.K.
A ..... Australia	P, PG ..... U.S. Military Market
G ..... West Germany	U ..... Other Countries

No mark indicates all areas.

### New Parts

#### 1. Printed Circuit Board Ass'y and Parts List

Refer to page 2-10 in the RX-111BK/LBK Service Manual.

Parts Name	Item No.	Parts Number		Areas
		RX-111BK/LBK	RX-150BK/LBK	
Audio PCB Ass'y		ENH-055H	ENH-092A	J
		ENH-055I	ENH-092B	C
		ENH-055J	ENH-092C	U, P, PG
		ENH-055K	ENH-092D	E, LE
		ENH-055L	ENH-092E	LBS
		ENH-055M	ENH-092F	G
		ENH-055N	ENH-092G	A
Headphone Jack	P901	QMS6302-128	QMS6302-131	

## 2. Exploded View Parts List

Refer to page 2-3 in the RX-111BK/LBK Service Manual.

Parts Name	Item No.	Parts Number		Areas
		RX-111BK/LBK	RX-150BK/LBK	
Front Panel Ass'y	1	-----	EFP-RX150BKJ	J, C, U, P, PG
		EFP-RX111BKE	EFP-RX150BKE	E, A, G
		EFP-RX111LBKE	EFP-RX150LBKE	LE, LBS
Front Plate	1-4	E24942-014	E24942-017	E, A, G
		E24942-015	E24942-018	LE, LBS
		E24942-016	E24942-019	J, C, U, P, PG
Window Screen	1-5	E303676-005	E303676-006	
Indicator Sheet	1-6	E303678-005	E303678-006	
Front Base	1-7	E11083-003	E11083-005	J, C, U, P, PG, E, A, G
		E11083-004	E11083-006	LE, LBS
Front Panel	1-8	E24940-011	E24940-013	J, C, U, P, PG, E, A, G
		E24940-012	E24940-014	LE, LBS
Metal Cover	23	E24633-003	E24633-005	
Rear Panel	34	E24944-010	E24944-014	J, C
		E24944-011	E24944-015	U, P, PG
		E24944-012	E24944-016	E, A, LE, LBS
		E24944-013	E24944-017	G

## 3. Packing Materials Parts List

Refer to page 2-13 in the RX-111BK/LBK Service Manual.

Parts Name	Item No.	Parts Number		Areas
		RX-111BK/LBK	RX-150BK/LBK	
Packing Case	1	PK-RX111BKJ (E300382-621)	PK-RX150BKJ (E300382-711)	J, C, P, PG
		PK-RX111BKE (E300382-622)	PK-RX150BKE (E300382-712)	U, E, A, G
		PK-RX111LBK (E300382-623)	PK-RX150LBK (E300382-713)	LE, LBS

## 4. Accessories Parts List

Refer to page 2-13 in the RX-111BK/LBK Service Manual.

Parts Name	Parts Number		Areas
	RX-111BK/LBK	RX-150BK/LBK	
Instruction Book	E30580-1295A	E30580-1369A	J, C, U, P, PG, E, A, G, LE
	E30580-1295ABS	E30580-1369ABS	LBS

# JVC

VICTOR COMPANY OF JAPAN, LIMITED  
AUDIO PRODUCTS DIVISION, YAMATO PLANT, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN