


JVC

SERVICE MANUAL

DVD DIGITAL THEATER SYSTEM

TH-S11

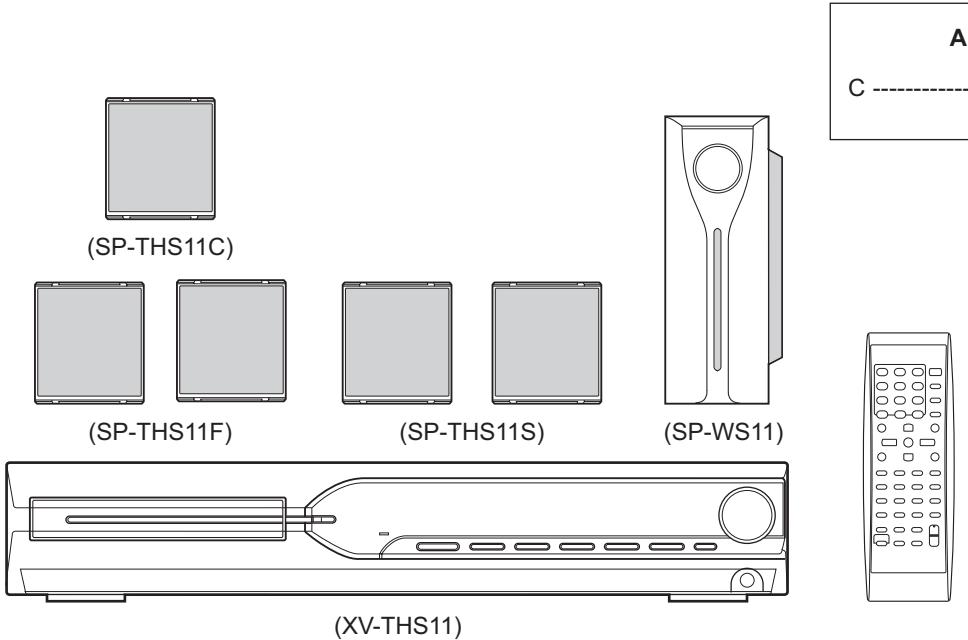

DVD VIDEO **COMPACT DISC SUPER VIDEO** **DOLBY DIGITAL PRO LOGIC II** **DTS SURROUND** *Digital Direct Progressive Scan*

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

TABLE OF CONTENTS

1 PRECAUTION	1-4
2 SPECIFIC SERVICE INSTRUCTIONS	1-7
3 DISASSEMBLY	1-8
4 ADJUSTMENT	1-23
5 TROUBLESHOOTING	1-25

SPECIFICATION

Center unit (XV-THS11)

Audio section	Front/Center/Surround	33 W per channel, RMS at 6 Ω at 1 kHz, with 10% total harmonic distortion.
	Subwoofer	40 W, RMS at 4 Ω at 100 Hz, with 10% total harmonic distortion.
Video section	Video System	NTSC
	Horizontal Resolution	500 lines
	Signal-to-Noise Ratio	64 dB
	Video output level	Composite 1.0 V(p-p)/75 Ω S-video-Y 1.0 V(p-p)/75 Ω S-video-C 0.286 V(p-p)/75 Ω Component (Interlace/Progressive) Y: 1.0 V(p-p)/75 Ω PB/PR: 0.7 V(p-p)/75 C
	Tuning Range	FM 87.5 MHz to 108.0 MHz AM 530 kHz to 1 710 kHz
Speaker impedance	Front/Center/Surround	6 Ω to 16 Ω
	Subwoofer	4 Ω to 16 Ω
General	Power Requirements	AC 120 V , 60 Hz
	Power Consumption	135 W (at operation) 1.3 W (in standby mode)
	Dimensions (W × H × D)	360 mm × 65 mm × 370 mm
	Mass	5.3 kg

Front speakers (SP-THS11F)

Type	1-Way Bass-Reflex Type(Magnetically-shielded Type)
Speaker	8.0 cm cone × 1
Power Handling Capacity	33 W
Impedance	6 Ω
Frequency Range	90 Hz to 20 000 Hz
Sound Pressure Level	84 dB/W·m
Dimensions (W × H × D)	92 mm × 101 mm × 95 mm
Mass	0.58 kg each

Center speaker (SP-THS11C)

Type	1-Way Bass-Reflex Type(Magnetically-shielded Type)
Speaker	8.0 cm cone × 1
Power Handling Capacity	33 W
Impedance	6 Ω
Frequency Range	90 Hz to 20 000 Hz
Sound Pressure Level	85 dB/W·m
Dimensions (W × H × D)	92 mm × 101 mm × 95 mm
Mass	0.65 kg

Surround speakers (SP-THS11S)

Type	1-Way Bass-Reflex Type
Speaker	8.0 cm cone × 1
Power Handling Capacity	33 W
Impedance	6 Ω
Frequency Range	90 Hz to 20 000 Hz
Sound Pressure Level	82 dB/W·m
Dimensions (W × H × D)	92 mm × 101 mm × 95 mm
Mass	0.56 kg each

Subwoofer (SP-WS11)

Type	1-Way Bass-Reflex Type
Speaker	15.0 cm cone × 1
Power Handling Capacity	40 W
Impedance	4 Ω
Frequency Range	40 Hz to 1 800 Hz
Sound Pressure Level	84 dB/W·m
Dimensions (W × H × D)	129 mm × 284 mm × 337 mm
Mass	3.0 kg

Designs & specifications are subject to change without notice.

SECTION 1

PRECAUTION

1.1 Safety Precautions

- (1) This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
- (2) Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturers warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
- (3) Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
- (4) The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after reassembling.

(5) Leakage shock hazard testing

After reassembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock. Do not use a line isolation transformer during this check.

- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).


• Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 Ω per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC

voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

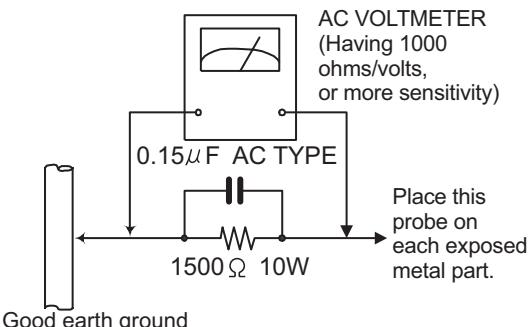

1.2 Warning

- (1) This equipment has been designed and manufactured to meet international safety standards.
- (2) It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
- (3) Repairs must be made in accordance with the relevant safety standards.
- (4) It is essential that safety critical components are replaced by approved parts.
- (5) If mains voltage selector is provided, check setting for local voltage.

1.3 Caution

Burrs formed during molding may be left over on some parts of the chassis.

Therefore, pay attention to such burrs in the case of performing repair of this system.

1.4 Critical parts for safety

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (- - -), diode (■ ■) and ICP (● ●) or identified by the " Δ " mark nearby are critical for safety. When replacing them, be sure to use the parts of the same type and rating as specified by the manufacturer.
(This regulation dose not Except the J and C version)

1.5 Preventing static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

1.5.1 Grounding to prevent damage by static electricity

Static electricity in the work area can destroy the optical pickup (laser diode) in devices such as laser products.


Be careful to use proper grounding in the area where repairs are being performed.

(1) Ground the workbench

Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

(2) Ground yourself

Use an anti-static wrist strap to release any static electricity built up in your body.

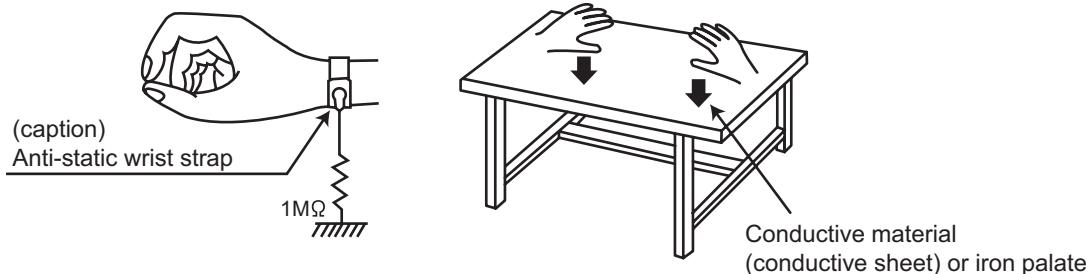

(3) Handling the optical pickup

- In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition.
(Refer to the text.)
- Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.


1.6 Handling the traverse unit (optical pickup)

- Do not subject the traverse unit (optical pickup) to strong shocks, as it is a sensitive, complex unit.
- Cut off the shorted part of the flexible cable using nippers, etc. after replacing the optical pickup. For specific details, refer to the replacement procedure in the text. Remove the anti-static pin when replacing the traverse unit. Be careful not to take too long a time when attaching it to the connector.
- Handle the flexible cable carefully as it may break when subjected to strong force.
- It is not possible to adjust the semi-fixed resistor that adjusts the laser power. Do not turn it.


1.7 Attention when traverse unit is decomposed

*Please refer to "Disassembly method" in the text for the pickup unit.


- Apply solder to the short land sections before the flexible wire is disconnected from the connecto on the servo board. (If the flexible wire is disconnected without applying solder, the pickup may be destroyed by static electricity.)
- In the assembly, be sure to remove solder from the short land sections after connecting the flexible wire.

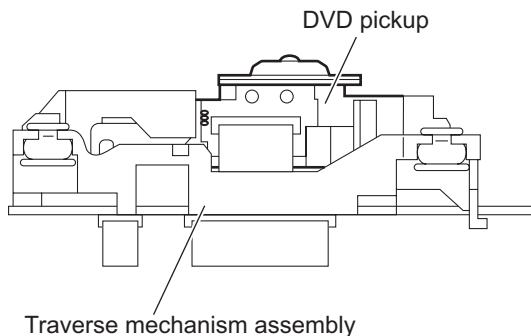

1.8 Importance administering point on the safety

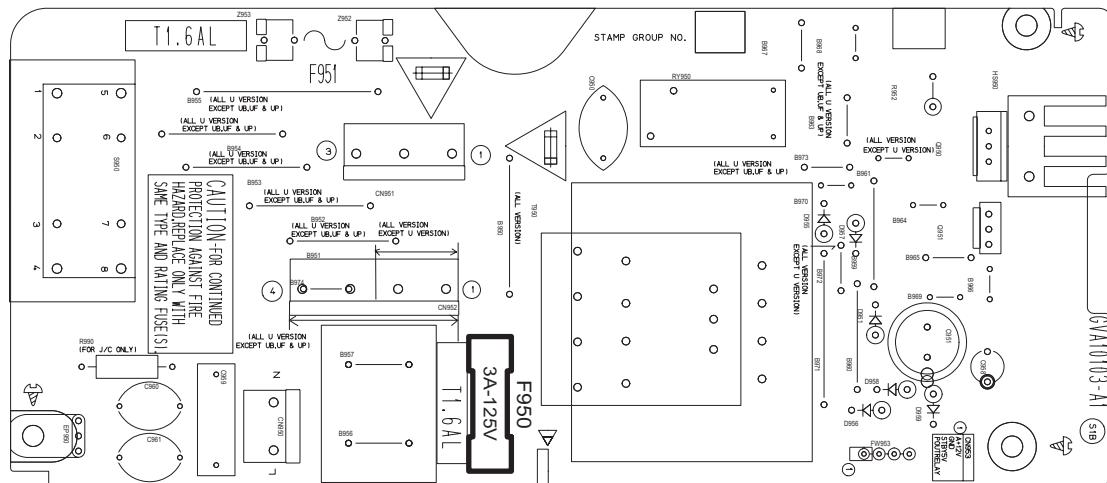

For USA and Canada / pour États - Unis d' Amérique et Canada

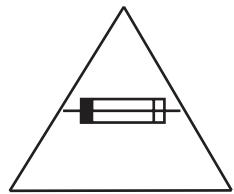

Caution: For continued protection against risk of fire, replace only with same type 3A/125V for F950. This symbol specifies type of fast operating fuse.

Précaution: Pour éviter risques de feux, remplacez le fusible de sûreté de F950 comme le même type que 3A/125V.
Ce sont des fusibles sûres qui fonctionnent rapidement.

SECTION 2

SPECIFIC SERVICE INSTRUCTIONS

This service manual does not describe SPECIFIC SERVICE INSTRUCTIONS.

SECTION 3 DISASSEMBLY

3.1 Main body section

3.1.1 Removing the metal cover (See Figs.1 to 4)

- (1) From the both sides of the main body, remove the four screws **A** attaching the metal cover. (See Figs.1 and 2.)
- (2) From the back side of the main body, remove the five screws **B** attaching the metal cover. (See Fig.3.)
- (3) Lift the rear section of the metal cover in the direction of the arrow while extending the lower sections of the metal cover, release the claws **a** using a longer screwdriver from the inside as required. (See Fig.4.)

Note:

Do not damage any parts and boards inside the main body when releasing the claws **a** using the longer screwdriver. (See Fig.4.)

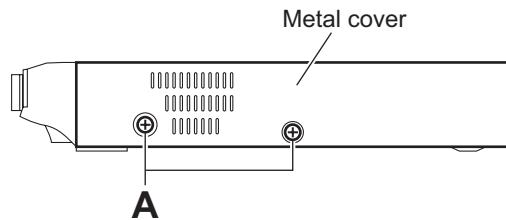


Fig.1

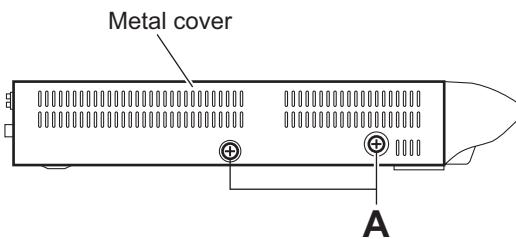


Fig.2

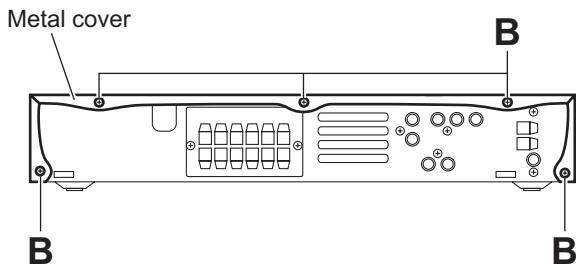


Fig.3

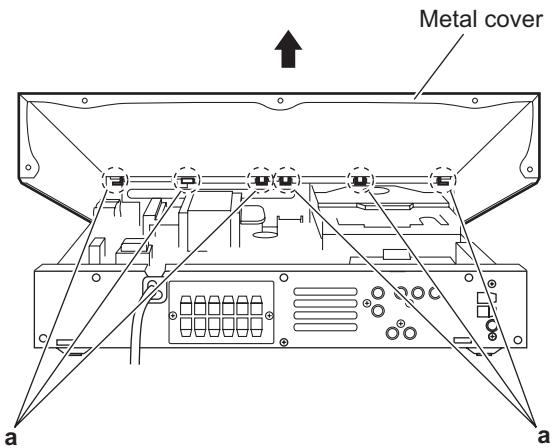


Fig.4

3.1.2 Removing the front panel assembly

(See Figs.5 to 7)

- Remove the metal cover.
- (1) From the right side of the DVD mechanism assembly, push the slide cam and pull the tray assembly out of the main body in the direction of the arrow. (See Fig.5.)
- (2) From the front side of the main body, remove the CD fitting assembly from the tray assembly in the direction of the arrow and push in the tray assembly as before. (See Fig.6.)
- (3) From the top side of the main body, disconnect the card wire from the connector [CN400](#) on the main board. (See Fig.5.)
- (4) Disconnect the card wire from the connector [CN510](#) on the HP terminal board. (See Fig.5.)
- (5) From the bottom side of the main body, remove the three screws **C** attaching the front panel assembly. (See Fig.7.)
- (6) From both sides and back side of the main body, remove the front panel assembly in the direction of the arrow while releasing the joints **b**. (See Fig.7.)

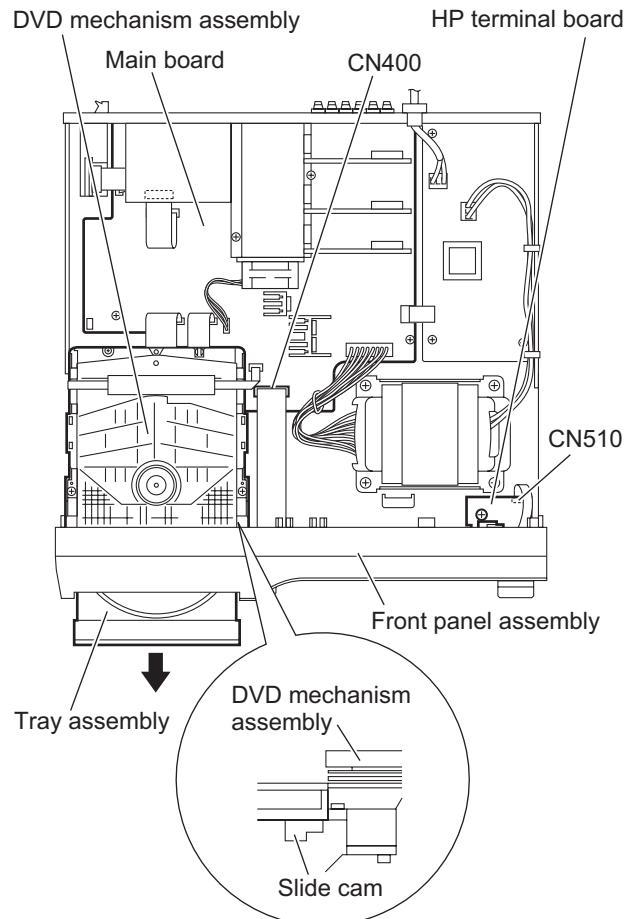


Fig.5

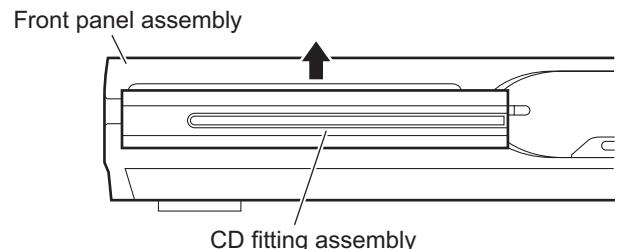


Fig.6

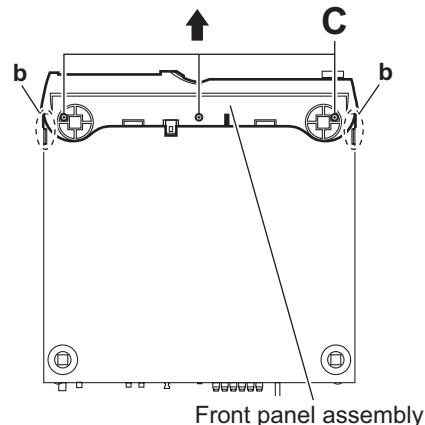


Fig.7

3.1.3 Removing the DVD mechanism assembly

(See Figs.5,6 and 8)

- Remove the metal cover.
- (1) From the right side of the DVD mechanism assembly, push the slide cam and pull the tray assembly out of the main body in the direction of the arrow. (See Fig.5.)
- (2) From the front side of the main body, remove the CD fitting from the tray assembly in the direction of the arrow and push in the tray assembly as before. (See Fig.6.)
- (3) From the top side of the main body, disconnect the card wires from the connectors [CN403](#) to [CN405](#) on the main board. (See Fig.8.)
- (4) Remove the three screws **D** attaching the DVD mechanism assembly to the chassis base. (See Fig.8.)

3.1.4 Removing the HP terminal board

(See Fig.8)

- Remove the metal cover.

Reference:

Remove the front panel assembly as required. (See 3.1.2 "Removing the front panel assembly".)

- (1) From the top side of the main body, remove the screw **E** attaching the HP terminal board to the chassis base.
- (2) Disconnect the card wires from the connectors [CN510](#) on the HP terminal board. (See Fig.8.)
- (3) Take out the HP terminal board from the main body.

Reference:

When attaching the HP terminal board, align the hole on the HP terminal board to the projection **c** of the chassis base before attaching the screw **E**.

3.1.5 Removing the rear panel

(See Fig.9)

- Remove the metal cover.
- (1) From the back side of the main body, remove the strain relief attaching the power cord in the direction of the arrow.
- (2) Remove the eight screws **F** attaching the rear panel to the main body.
- (3) Release the joints **d**, and remove the rear panel from the main body.

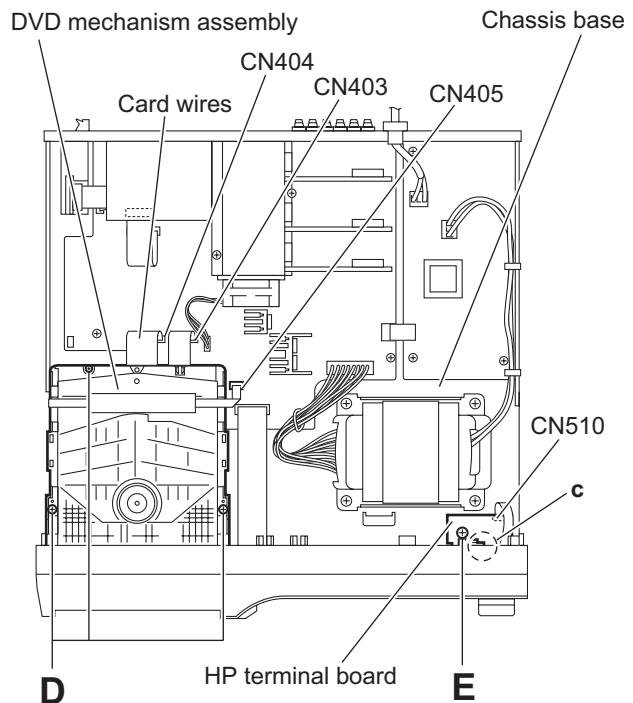


Fig.8

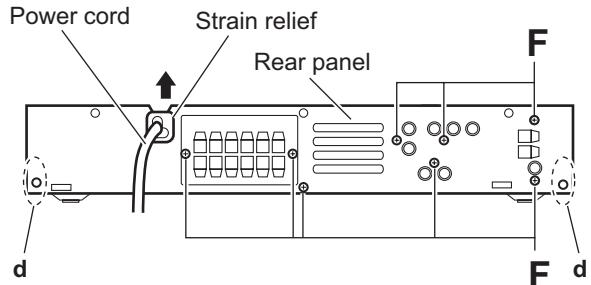


Fig.9

3.1.6 Removing the tuner assembly

(See Figs.10 and 11)

- Remove the metal cover.
 - (1) From the top side of the main body, disconnect the card wire from the connector **CN1** on the tuner assembly. (See Fig.10.)
 - (2) From the back side of the main body, remove the two screws **G** attaching the tuner assembly to the rear panel. (See Fig.11.)
 - (3) Take out the tuner assembly from the main body.

3.1.7 Removing the video board

(See Figs.10 and 11)

- Remove the metal cover.
 - (1) From the top side of the main body, disconnect the card wire from the connector **CN350** on the video board. (See Fig.10.)
 - (2) From the back side of the main body, remove the two screws **H** attaching the video board to the rear panel. (See Fig.11.)
 - (3) Take out the video board from the main body.

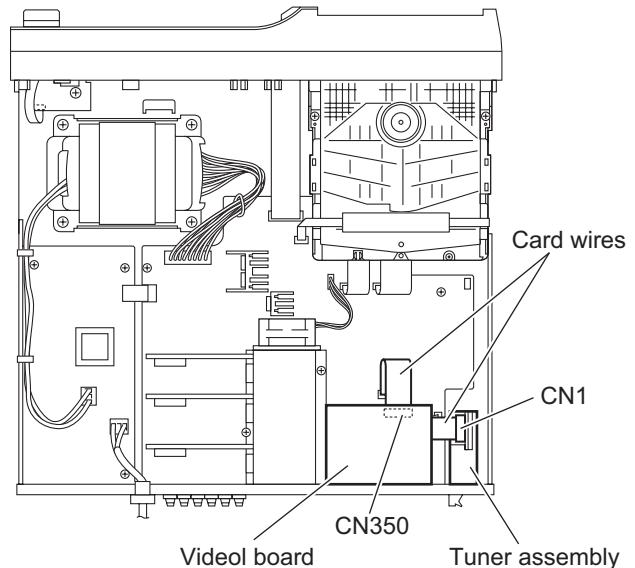


Fig.10

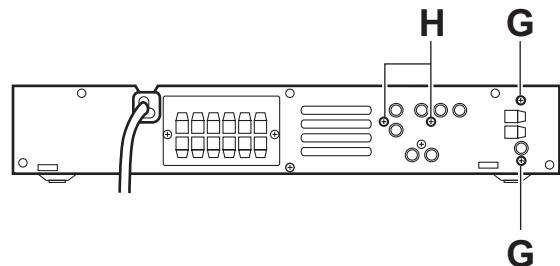


Fig.11

3.1.8 Removing the power amp.boards

(See Figs.12 and 13)

- Remove the metal cover and video board.
- (1) From the top side of the main board, remove the three screws **J** attaching the heat sink. (See Fig.12.)
- (2) Disconnect the wire from the connector **CN100** on the main board. (See Fig.8.)
- (3) Disconnect the each power amp.boards connecters from the connectors **CN271**, **CN276**, **CN281** on the main board. (See Fig.12.)
- Reference:**
When attaching the heat sink with power amp.boards, confirm the connectors **CN281**, **CN276** and **CN271** already lock before attaching the screws **J**.
- (4) Take out the heat sink with power amp.boards from the main board. (See Fig.12.)
- (5) Remove the two screws **K**, two screws **M** and two screws **N** attaching the heat sink. (See Fig.13.)
- (6) Remove the each power amp.boards from the heat sink.

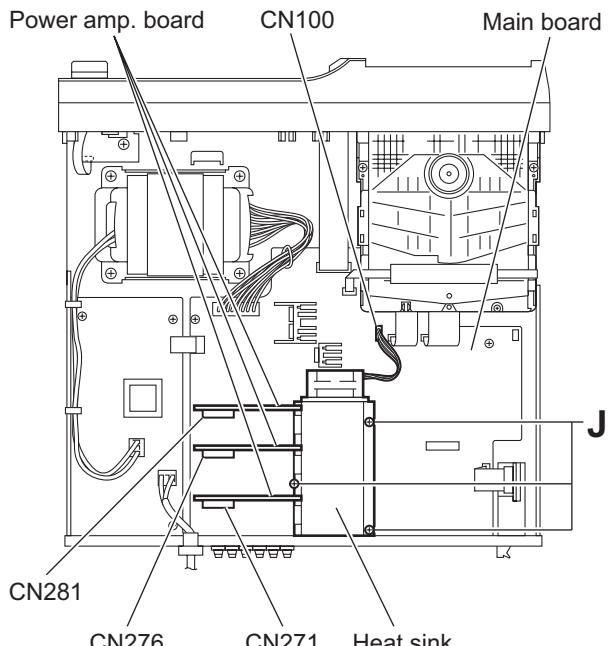


Fig.12

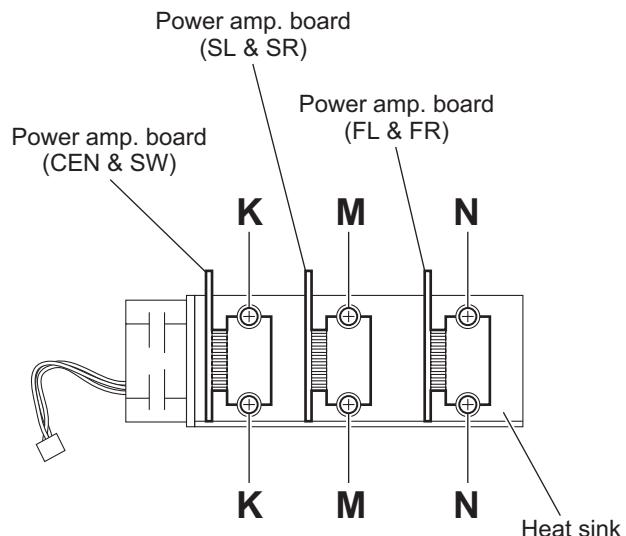


Fig.13

3.1.9 Removing the main board

(See Figs.14 and 15)

- Remove the metal cover, video board and heat sink with power amp. boards.

- (1) From the top side of the main body, disconnect the card wires from the connectors CN400, CN401 and CN403 to CN405, on the main board. (See Fig.14.)
- (2) Disconnect the wires from the connectors CN102, CN101 on the main board. (See Fig.14.)

Reference:

After connecting the wires, fix the wires with the wire clamp.

- (3) Remove the two screws **P** attaching the main board to the chassis base. (See Fig.14.)
- (4) From the back side of the main body, remove the three screws **Q** attaching the main board to the rear panel. (See Fig.15.)
- (5) Take out the main board from the main body.

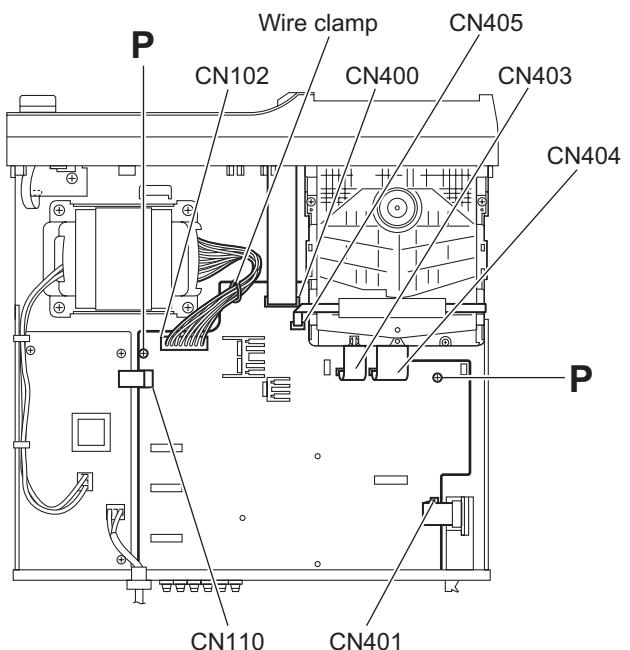


Fig.14

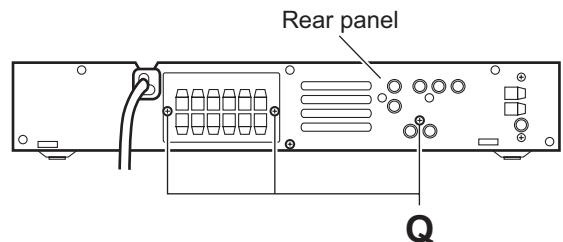


Fig.15

3.1.10 Removing the transformer board (See Fig.16)

- Remove the metal cover.
 - (1) From the top side of the main body, disconnect the wires from the connectors [CN950](#), [CN952](#) on the transformer board.
 - (2) Disconnect the wires from the connectors [CN101](#) on the main board.
 - (3) Remove the three screws **R** attaching the transformer board.
 - (4) Take out the transformer board from the main body.

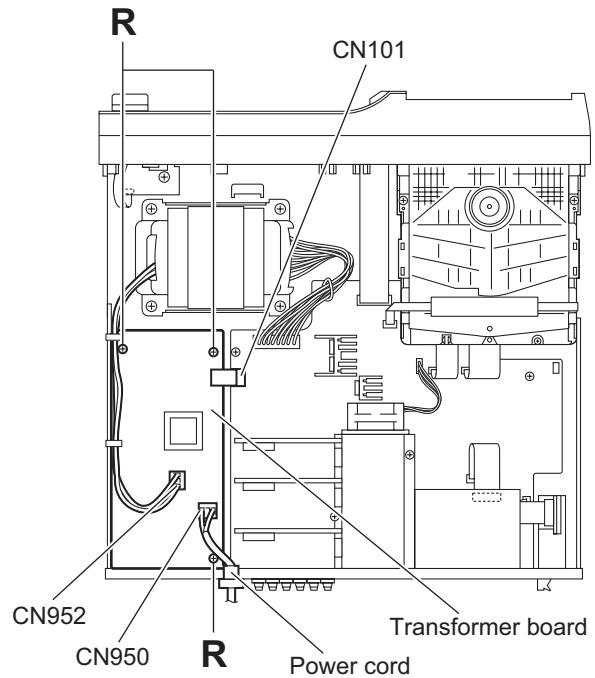


Fig.16

3.1.11 Removing the power transformer (See Fig.17)

- Remove the metal cover.
 - (1) From the top side of the main body, remove the tie bands and wire clamp bundling the wires.
 - (2) Disconnect the wire from the connector [CN952](#) on the transformer board.
 - (3) Disconnect the wire from the connector [CN102](#) on the main board.

Reference:

After connecting the wires to the connectors, bundle the wires with the wire clamps and new tie bands as before.

- (4) Remove the four screws **S** and take out the power transformer from the main body.

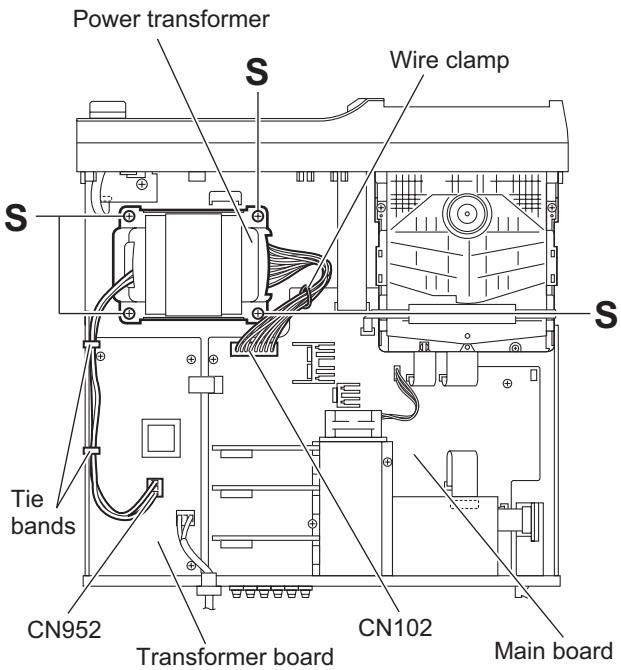


Fig.17

3.1.12 Removing the front board

(See Figs.18 and 19)

- Remove the metal cover and front panel assembly.
 - (1) From the front side of the front panel assembly, pull out the volume knob in the direction of the arrow. (See Fig.18.)
 - (2) From the inside of the front panel assembly, remove the six screws **T** attaching the front board. (See Fig.19.)
 - (3) Take out the front board from the front panel assembly.

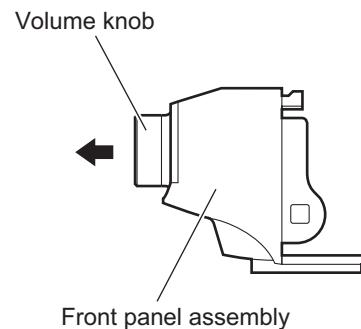


Fig.18

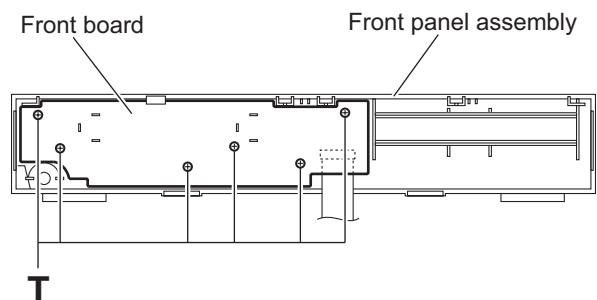


Fig.19

3.2 DVD mechanism section

- Remove the DVD mechanism assembly from the main body.

3.2.1 Removing the traverse mechanism assembly

(See Fig.1)

From the bottom side of the DVD mechanism assembly, remove the four screws **A** attaching the traverse mechanism assembly and take out the traverse mechanism assembly with the DVD module board.

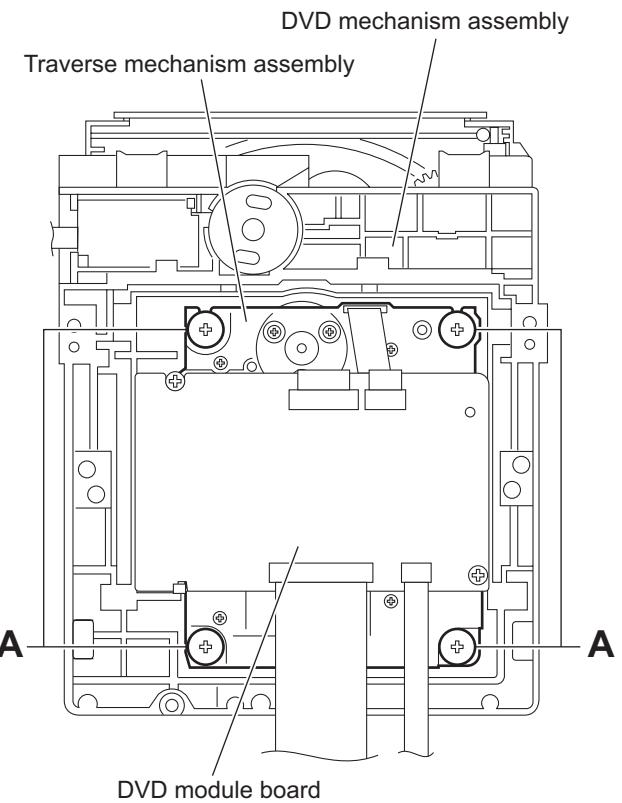


Fig.1

3.2.2 Removing the DVD module board

(See Figs.2 and 3)

- Remove the traverse mechanism assembly.

- (1) From the side of the traverse mechanism assembly, solder the short land sections **a** on the DVD pickup. (See Fig.2.)
- (2) From the bottom side of the traverse mechanism assembly, release the lock of the connector CN101 on the DVD module board in the direction of the arrow and disconnect the card wire. (See Fig.3.)

Caution:

- Solder the short land sections **a** on the DVD pickup before disconnecting the card wire from the connector CN101 on the DVD module board. If the card wire is disconnected without attaching solder, the DVD pickup may be destroyed by static electricity. (See Figs.2 and 3.)
 - When attaching the DVD module board, be sure to remove solders from the short land sections **a** after connecting the card wire to the connector CN101 on the DVD module board. (See Figs.2 and 3.)
- (3) Disconnect the card wire from the connector CN201 on the DVD module board. (See Fig.3.)
 - (4) Remove the two screws **B** attaching the DVD module board. (See Fig.3.)
 - (5) Remove the DVD module board from the engagement section **b** in an upward and remove the engagement section **c** in the direction of the arrow. (See Fig.3.)


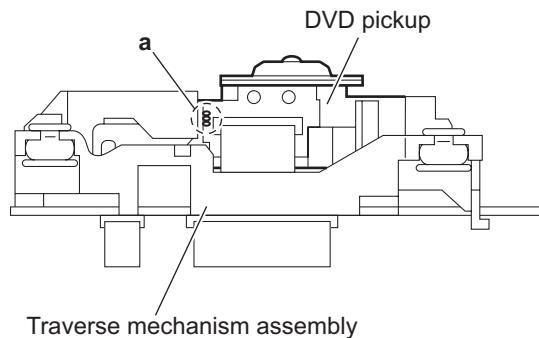


Fig.2

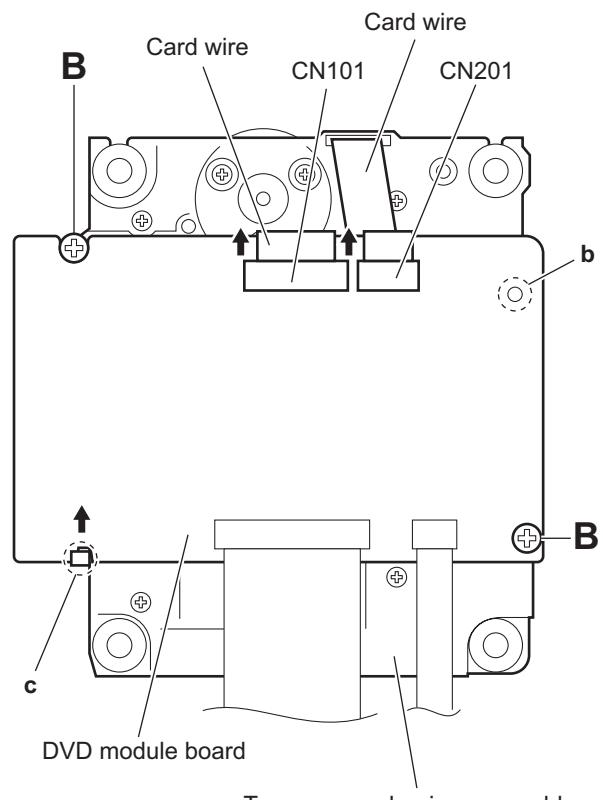

Traverse mechanism assembly

Fig.3

3.2.3 Removing the DVD pickup

(See Figs.2,4 to 6)

- Remove the traverse mechanism assembly.
- (1) From the side of the traverse mechanism assembly, solder the short land sections **a** on the DVD pickup. (See Fig.2.)
- (2) Release the lock of the connector on the DVD pickup in the direction of the arrow and disconnect the card wire. (See Fig.4.)

Caution:

- Solder the short land sections **a** on the DVD pickup before disconnecting the card wire from the connector on the DVD pickup. If the card wire is disconnected without attaching solder, the DVD pickup may be destroyed by static electricity. (See Figs.2 and 4.)
- When attaching the DVD pickup, be sure to remove solders from the short land sections **a** after connecting the card wire to the connector on the DVD pickup. (See Figs.2 and 4.)

- (3) Remove the screw **C** and remove the feed bracket from the sections **d**. (See Fig.4.)
- (4) Release the claw **e** of the thrust spring in the direction of the arrow and remove the thrust spring. (See Fig.4.)
- (5) Remove the guide shaft of the DVD pickup from the section **f** on the traverse mechanism assembly and remove the guide shaft from the section **g** while moving it in the direction of the arrow. (See Fig.5.)
- (6) Remove the DVD pickup from the section **h** of the traverse mechanism assembly and take out the DVD pickup with the guide shaft. (See fig.5.)
- (7) From the bottom side of the DVD pickup, remove the two screws **D** attaching the rack arm and rack arm spring. (See Fig.6.)
- (8) Pull the guide shaft out of the DVD pickup. (See Fig.6.)

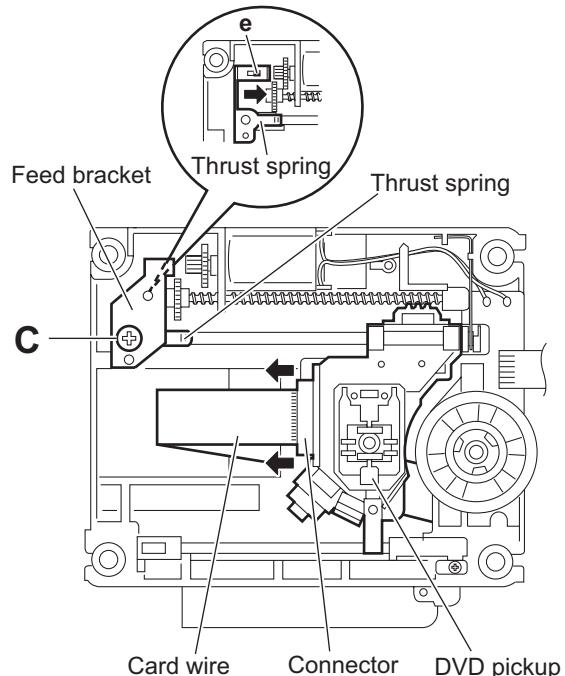


Fig.4

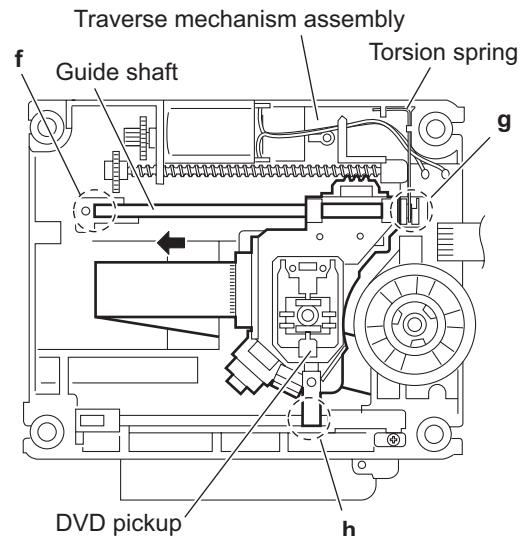


Fig.5

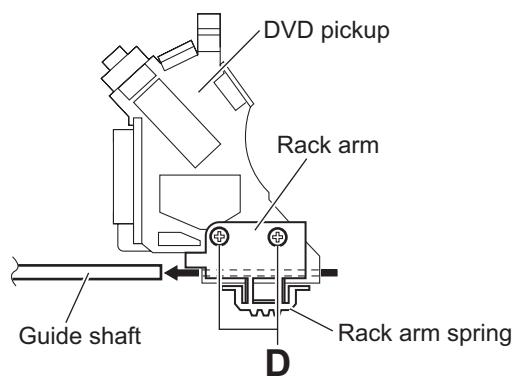


Fig.6

3.2.4 Attaching the DVD pickup

(See Figs.2,4 to 7)

- See "3.2.3 Removing the DVD pickup".
- (1) Attach the guide shaft, rack arm and rack arm spring to the DVD pickup. (See Fig.6.)
- (2) Align the DVD pickup to the section **h** of the traverse mechanism assembly first, and set the both ends of the guide shaft of the DVD pickup in the sections **f** and **g** of the traverse mechanism assembly. (See Fig.5.)
- Reference:**
When attaching the guide shaft to the section **g**, attach it under the rod spring. (See Fig.5.)
- (3) Attach the feed bracket and thrust spring. (See Fig.4.)
- (4) Remove solders from the short land sections **a** after connecting the card wire to the connector on the DVD pickup. (See Figs.2 and 4.)
- (5) Turn the screw shaft gear in the direction of the arrow 1 to move the DVD pickup fully in the direction of the arrow 2. (See Fig.7.)

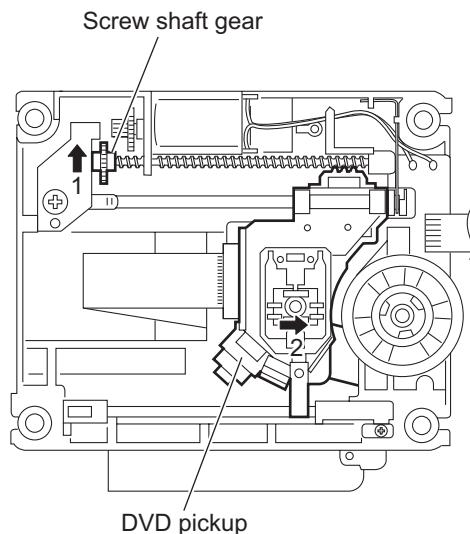


Fig.7

3.2.5 Removing the feed motor

(See Figs.4,8 and 9)

- Remove the traverse mechanism assembly.
- (1) From the top side of the traverse mechanism assembly, remove the screw **C** and remove the feed bracket from the sections **d**. (See Fig.4.)
- (2) Release the claw **e** of the thrust spring in the direction of the arrow and remove the thrust spring. (See Fig.4.)
- (3) Remove the wires from the soldered section **j** on the spindle motor board. (See Fig.8.)

Reference:

- When attaching the feed motor, pass the wire through the section **k** on the traverse mechanism assembly. (See Fig.8.)
- Pass the wire through the lower section of the rod spring. (See Fig.8.)

- (4) Remove the screw shaft in the direction of the arrow. (See Fig.8.)
- (5) From the side of the traverse mechanism assembly, remove the screw **E** attaching the feed motor. (See Fig.8.)
- (6) Take out the feed motor from the traverse mechanism assembly.

3.2.6 Removing the spindle motor board

(See Figs.8 and 9)

- Remove the traverse mechanism assembly and DVD module board.
- (1) From the top side of the traverse mechanism assembly, remove the wires from the soldered section **j** on the spindle motor board. (See Fig.8.)
- (2) From the bottom side of the traverse mechanism assembly, remove the three screws **F** attaching the spindle motor board. (See Fig.9.)

Reference:

- When attaching the spindle motor board, pass the wire through the section **m** on the traverse mechanism assembly. (See Fig.9.)
- After attaching the screws **F**, apply bond as before.

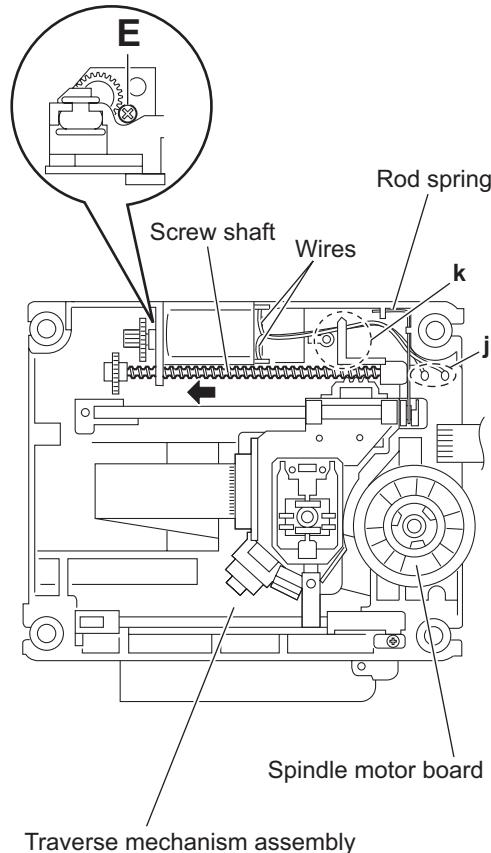


Fig.8

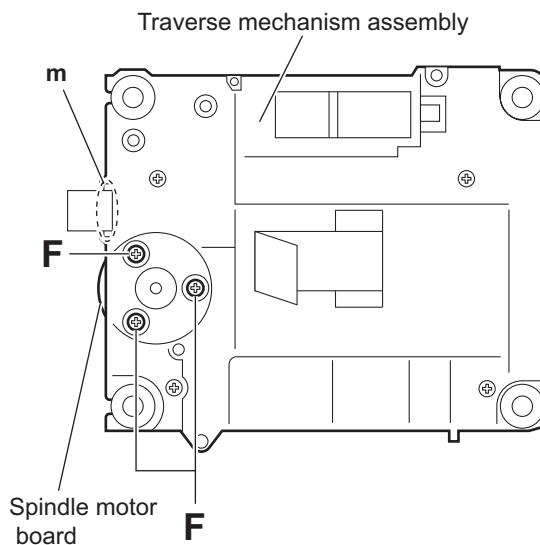


Fig.9

3.2.7 Removing the DVD loading switch board

(See Fig.10.)

- (1) From the bottom side of the DVD mechanism assembly, remove the wires from the soldered sections **n** on the DVD loading switch board.
- (2) Remove the screw **G** attaching the DVD loading switch board.
- (3) Lift the DVD loading switch board while pressing the claw **p** of the DVD mechanism assembly in the direction of the arrow and remove it from the section **q**.

Reference:

Pass the wires through the section **r** after attaching the DVD loading switch board to the DVD mechanism assembly.

3.2.8 Removing the loading motor

(See Figs.10 to 14)

- (1) From the bottom side of the DVD mechanism assembly, remove the wires from the soldered section **n** on the DVD loading switch board. (See Fig.10.)
- (2) Remove the screw **H** attaching the tray assembly. (See Fig.10.)
- (3) From the right side of the DVD mechanism assembly, push the slide cam and pull the tray assembly out of the DVD mechanism assembly in the direction of the arrow. (See Fig.11.)
- (4) From the top side of the DVD mechanism assembly, remove the two screws **J** attaching the clamper base. (See Fig.12.)
- (5) Lift the clamper base in an upward direction to remove it from the engagement sections **s** and remove the engagement sections **t** in the direction of the arrow. (See Fig.12.)
- (6) Remove the two screws **K** attaching the tray assembly and take out the tray assembly from the DVD mechanism assembly. (See Fig.13.)
- (7) Remove the belt from the motor pulley. (See Fig.14.)

Note:

Take care not to attach grease on the belt.

- (8) Remove the two screws **M** attaching the loading motor to the DVD mechanism assembly and take out the loading motor from the bottom side of the DVD mechanism assembly. (See Fig.14.)

Reference:

Pass the wires through the section **r** after attaching the loading motor to the DVD mechanism assembly. (See Fig.10.)

DVD loading switch board

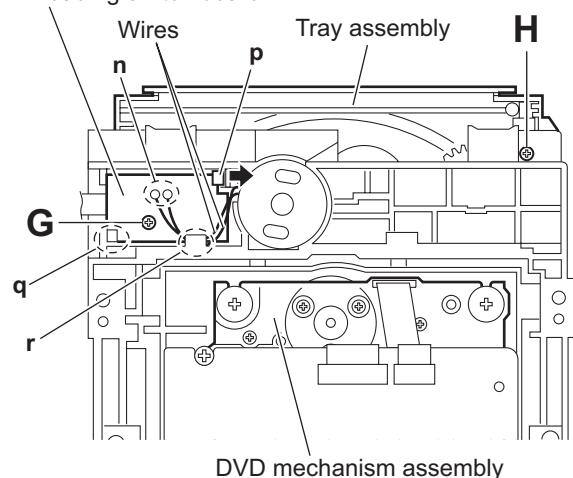


Fig.10

Tray assembly

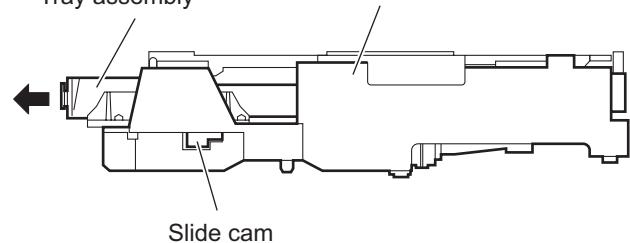


Fig.11

Clamper base

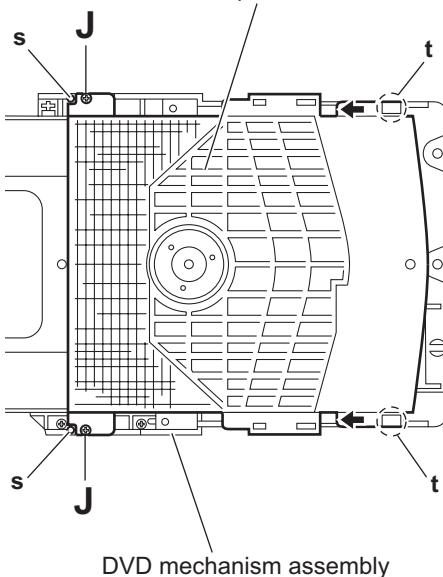


Fig.12

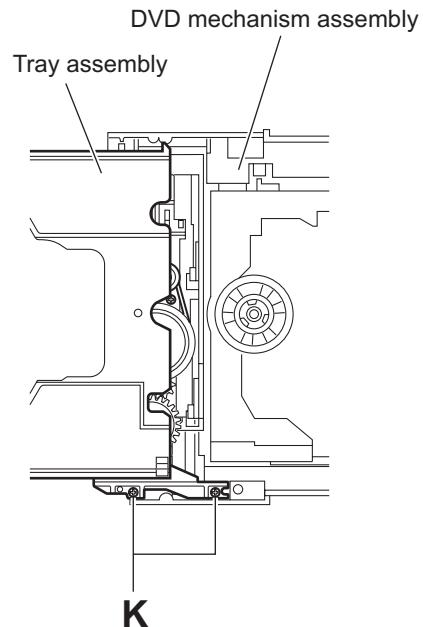


Fig.13

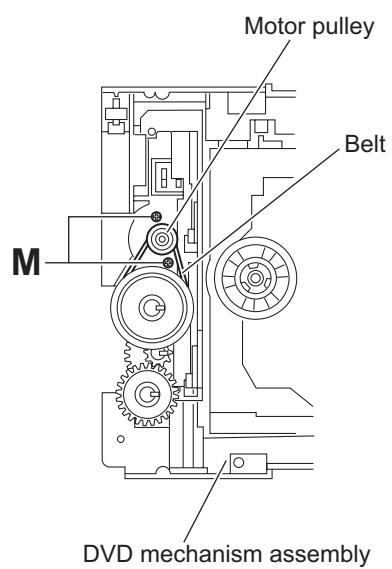


Fig.14

SECTION 4 ADJUSTMENT

4.1 TH-S11 TEST MODE

This player has a TEST MODE for product QC, service or repair.

Contents as follows. If the DVD TRAY is not completely closed, supply AC power and press POWER ON to close the TRAY.


After confirm that the TRAY is completely closed go to standby.

Once LED lights up, pull off the power plug. Reinsert the AC power plug to the outlet while pressing "POWER" and "STOP" button at the front panel of the set.

TEST MODE has the 7 different steps. Press MENU key on the remote control to change the steps.

TEST MODE is canceled by the POWER key.

STEP 1:

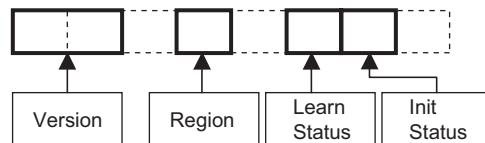

Version & Region explanation. Refer to next page.


Learn Status
Bit 0 - already learn DVD
Bit 1 - already learn CD
Bit 2 - already checked BCA area
Init Status
0x00 - normal init
0x01 - all init (above + FE)
0xFF - not yet init

Region
0 - RF
1 - USA, Canada
2 - Europe, Middle East, Japan, South Africa
3 - S.Korea, Taiwan, HK, ASEAN
4 - Australia, NZ, Latin America
5 - Ex-Soviets, Indian sub-continent, Africa
6 - China
7 - Reserved
8 - International territory (airplanes, cruise ship, etc.)

STEP 2:

CPRM checksum (If Device key not input - FFFF)

STEP 3:

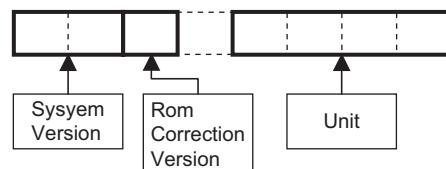


STEP 4:

Indicator check mode. All FL segment light up.

STEP 5:


Mechanism check mode. In this mode player displays "CHECK".

STEP 6:

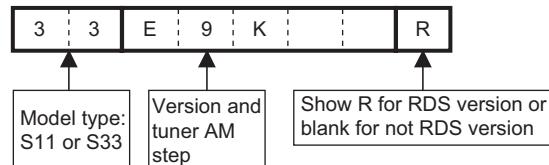

STEP 7:

System micon version

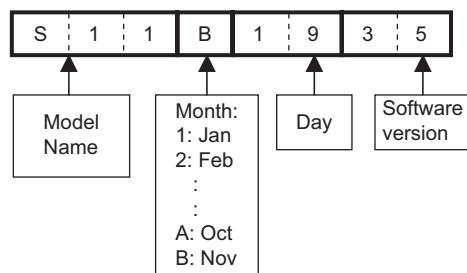

4.2 How to repair after carried out full-initialize

- (1) Learning DVD playback VT-501
- (2) Learning CD playback CTS-1000
- (3) standby mode (push power key)
- (4) Checking BCA
insert V-2805
test mode (press POWER and STOP button together during AC power plug in)
check mode (press menu key of remote controller)
BCA check (press +10 key of remote controller)
FL indication change "0000 0000" to "0000 0001" and Disc auto stop
- (5) standby mode (push power key)

4.3 Rating Source, Region Code

Area Code	Video Signal	Rating Source Rating Frequency	FL indicate of Area Code in Test mode	Region Code
B/E/EN/EV	PAL	AC230V 50Hz	E	2
EE	NTSC	AC230V 50Hz	EE	5
J/C		AC120V 60Hz	JC	1
UJ		AC110,127,220,230-240V 50/60Hz	1U	1
US/UN		AC110,127,220,230-240V 50/60Hz	3U	3
UB		AC220V 50Hz	UB	3
UT		AC110,127,220,230-240V 50/60Hz	UT	3
UF/UFC		AC220V 50Hz	UF	6
UW/UY		AC110,127,220,230-240V 50/60Hz	4U	4
UX/UG		AC110,127,220,230-240V 50/60Hz	2U	2
A		AC240V 50Hz	4U	4

SECTION 5

TROUBLESHOOTING

This service manual does not describe TROUBLESHOOTING.



Victor Company of Japan, Limited


AV & MULTIMEDIA COMPANY AUDIO/VIDEO SYSTEMS CATEGORY 10-1, 1chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.MB413)



Printed in Japan
VPT

JVC

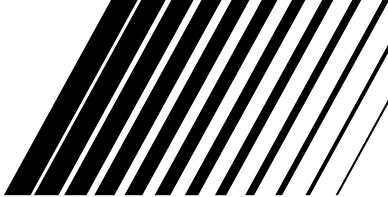

English


Français

DVD DIGITAL THEATER SYSTEM Système Cinéma Numérique DVD

TH-S11

Consists of XV-THS11, SP-WS11, SP-THS11F,
SP-THS11C and SP-THS11S

Se compose de XV-THS11, SP-WS11,
SP-THS11F, SP-THS11C et SP-THS11S

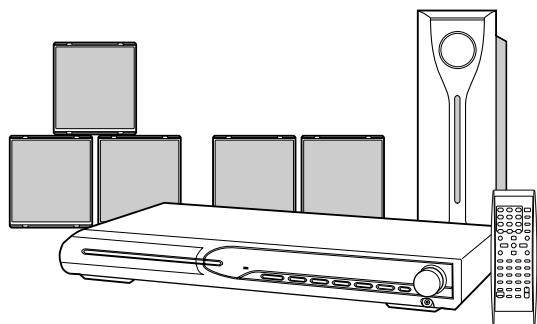

Digital Direct Progressive Scan

INSTRUCTIONS MANUEL D'INSTRUCTIONS

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

CAUTION— button!

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off).

The  button in any position does not disconnect the mains line.

- When the system is on standby, the STANDBY lamp lights red.
- When the system is turned on, the STANDBY lamp goes off. The power can be remote controlled.

ATTENTION—Touche !

Déconnectez la fiche secteur pour mettre l'appareil complètement hors tension (tous les témoins et toutes les indications s'éteignent).

La touche  dans n'importe quelle position ne déconnecte pas l'appareil du secteur.

- Quand l'appareil est en mode de veille, le témoin STANDBY est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY s'éteint.

L'alimentation ne peut pas être commandée à distance.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

IMPORTANT POUR LES PRODUITS LASER

1. PRODUIT LASER CLASSE 1
2. **ATTENTION:** N'ouvrez pas le couvercle supérieur. Il n'y a aucune pièce réparable par l'utilisateur à l'intérieur de l'appareil; confiez toute réparation à un personnel qualifié.
3. **ATTENTION:** Risque de radiations laser visible et invisible quand l'appareil est ouvert ou que le système de verrouillage ne fonctionne pas ou a été mis hors service. Évitez toute exposition directe au rayon.
4. REPRODUCTION DE L'ÉTIQUETTE: ÉT QUETTE DE PRÉCAUTION PLACÉE L'INTERIEUR DE L'APPAREIL.

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.
(e)

ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling.
(d)

VARNING : Synlig och osynlig laserstråning när den öppnas och spärren är urkopplad. Betrakta ej strålen.
(d)

VARO : Avattessa ja suojaalukitus ohitettuna tai viallisena olet alittina näkyville ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

**WARNING: TO REDUCE THE RISK OF FIRE
OR ELECTRIC SHOCK, DO NOT EXPOSE
THIS APPLIANCE TO RAIN OR MOISTURE.**

For Canada/pour le Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

ATTENTION: POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQUAU FOND

For Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECRIQUES APPLICABLES AUX APPAREILS NUMERIQUES DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR; "APPAREILS NUMERIQUES", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of contents

Introduction	2	Playback	14
Notes on handling	2	Basic playback	14
Supplied accessories	2	One touch replay	16
About discs	3	Fast-forward/fast-reverse search	16
Playable disc types	3	Skip to the beginning of a desired selection	16
Index of parts and controls	5	Locating a desired title/group using number buttons	17
Connections	7	Selecting the desired title/playlist from the control display	17
Connecting the FM and AM antennas	7		
Connecting the satellite (front, center, surround) speakers and the subwoofer	8		
Speaker layout	9		
Connecting a TV	9		
Connecting an external component	9		
Connecting the power cord	9		
Operating the TV	10		
Basic operations	11		
Turning the system on/off	11		
Selecting the source to play	12		
Adjusting the volume [VOLUME]	12		
Listening with headphones (not supplied)	12		
Turning off the sound temporarily [MUTING]	12		
Adjusting the brightness of the indications [DIMMER]	12		
Sleep Timer [SLEEP]	13		
Adjusting the output level of the front/center/surround speakers and subwoofer	13		
Adjusting the sound	13		
Changing the scan mode	13		
Advanced operations	18		
Using the surround mode	18		
Using the on-screen bar	19		
Playing from a specified position on a disc	21		
Using the file control display	22		
Resume playback	23		
Selecting a view angle	23		
Selecting the subtitle	24		
Selecting the audio	24		
Special picture playback	25		
Program playback	26		
Random playback	26		
Repeat playback	27		
Tray lock	28		
Balance setting	28		
Setting DVD preferences	29		
Using the setup menus	29		
Menu description	29		
Tuner operations	32		
Manual tuning	32		
Preset tuning	33		
Selecting the FM reception mode	33		
References	34		
Maintenance	34		
Troubleshooting	34		
Specifications	35		

Notes on handling

■ Important cautions

Installation of the system


- Select a place which is level, dry and neither too hot nor too cold; between 5°C and 35°C.
- Leave sufficient distance between the system and the TV.
- Do not use the system in a place subject to vibration.

Power cord

- Do not handle the power cord with wet hands!
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- When unplugging the power cord from the wall outlet, always pull on the plug, not the power cord.

To prevent malfunctions of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the system.
- Do not use any non-standard shape disc (like a heart, flower or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because it may damage the system.

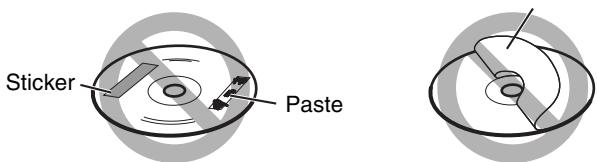

Note about copyright laws

Check the copyright laws in your country before recording from the discs. Recording of copyrighted material may infringe copyright laws.

Note about copyguard system

The discs are protected by copyguard system. When you connect the system to your VCR directly, the copyguard system activates and the picture may not be played back correctly.

■ Safety precautions

Avoid moisture, water and dust

Do not place the system in moist or dusty places.

Avoid high temperatures

Do not expose the system to direct sunlight and do not place it near a heating device.

When you are away

When away on travel or for other reasons for an extended period of time, disconnect the power cord plug from the wall outlet.

Do not block the vents

Blocking the vents may damage the system.

Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

If water gets inside the system

Turn the system off and disconnect the power cord plug from the wall outlet, then call the store where you made your purchase. Using the system in this condition may cause fire or electrical shock.

Supplied accessories

Check to be sure you have all of the supplied accessories. The number in parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- FM antenna (1)
- AM loop antenna (1)
- Composite Video cord (1)

About discs

Playable disc types

This system has been designed to play back the following discs: DVD VIDEO, Video CD (VCD), Super Video CD (SVCD), Audio CD (CD), CD-R and CD-RW.

- This system accommodates the NTSC system, and also can play discs recorded with PAL system.
- This system can also play finalized DVD-R/-RWs recorded in DVD VIDEO format. However, some discs may not be played because of their disc characteristics or recording conditions.

Discs you can play:

DVD VIDEO  	Audio CD 
VCD  	SVCD  

- The following discs cannot be played back: CD-I (CD-I Ready), Photo CD, SACD, etc. Playing back these discs will generate noise and damage the speakers.
- The Non-DVD side of a “DualDisc” does not comply with the “Compact Disc Digital Audio” standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.
- **On some DVD VIDEOs, VCDs or SVCDs, their actual operation may be different from what is explained in this manual. This is due to the disc programming and disc structure, not a malfunction of this system.**

DVD Logo is a trademark of DVD Format/Logo Licensing Corporation.

Region code of DVD VIDEO

DVD VIDEO players and DVD VIDEO discs have their own Region Code numbers. This system can play back DVD VIDEO discs whose Region Code numbers include the system's Region Code, which is indicated on the rear panel.

- Example of playable DVD:



If a DVD with an improper Region Code number is loaded, “REGION CODE ERROR!” appears on the TV screen and playback cannot start.

Notes on DVD-R, DVD-RW and DVD-RAM

- This system can also play finalized DVD-Rs or DVD-RWs recorded in DVD VIDEO format and DVD-RWs or DVD-RAMs recorded in DVD VR format.
- This system can also play DVD-Rs or DVD-RWs if MP3 and JPEG files are recorded on them with UDF Bridge format. This system does not support “multi-border” disc.

Notes on CD-R and CD-RW

- This system can also play CD-Rs or CD-RWs if MP3 and JPEG files are recorded on them with ISO 9660 format.
- This system supports “multi-session” discs (up to 20 sessions).
- This system cannot play “packet write” discs.

Some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.

About discs

For all playable files

- The system can only recognize and play files with one of the following extensions, which can be in any combination of upper and lower case:
MP3: ".MP3", ".mp3"
JPEG: ".JPG", ".JPEG", ".jpg", ".jpeg"
- The system recognizes up to 150 tracks (files) per group, 99 groups per disc, and the total number of the tracks (files) that the system can play is 4000.
- Some files may not be played back normally because of their disc characteristics or recording conditions.
- MP3/JPEG discs require a longer readout time. (It differs due to the complexity of the directory/file configuration.)
- If different kinds of the file are mixed on a disc, set the FILE TYPE setting in the PICTURE menu to the appropriate setting for the data to be read ("AUDIO" or "STILL PICTURE"). (See page 30.)

Notes on MP3 files

- Tag information (album name, artist name, and track name) can be shown on the TV. (See page 22.)
- The system can play back the MP3 files recorded at 32 kbps to 320 kbps as a bit rate, and at 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz and 48 kHz as a sampling frequency.
- We recommend to record each piece of material (song) at a sample rate of 44.1 kHz and at a data transfer rate of 128 kbps.

Notes on JPEG files


- We recommend to record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a longer time to be displayed.)
- This system can only play baseline JPEG files.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.


Index of parts and controls

The numbers in the figures indicate the pages where the details of the parts are described.

Front panel (center unit)

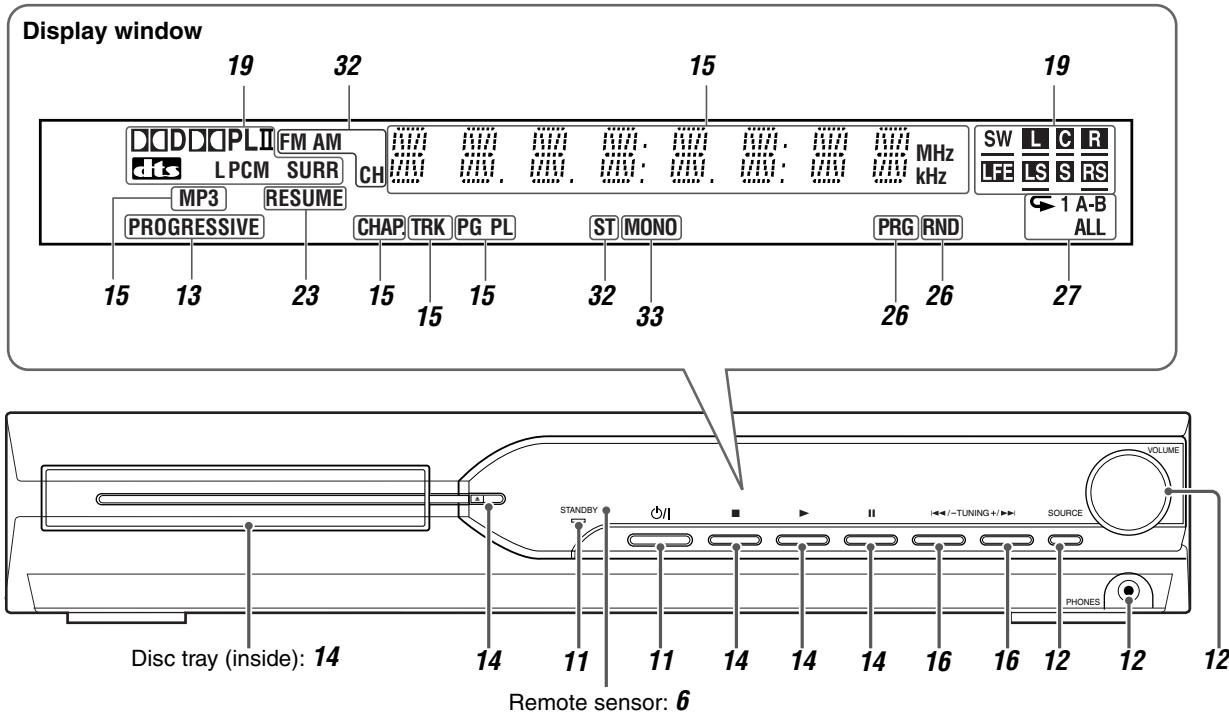


Rear panel (center unit)

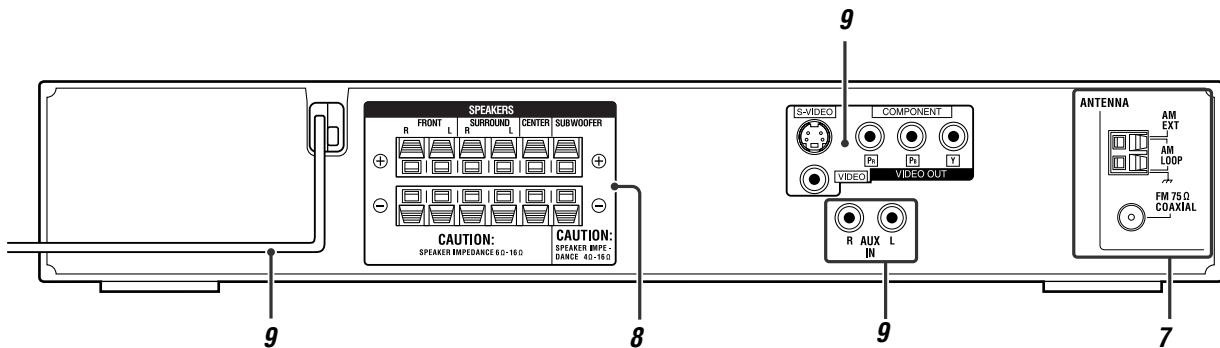


Index of parts and controls

Remote control

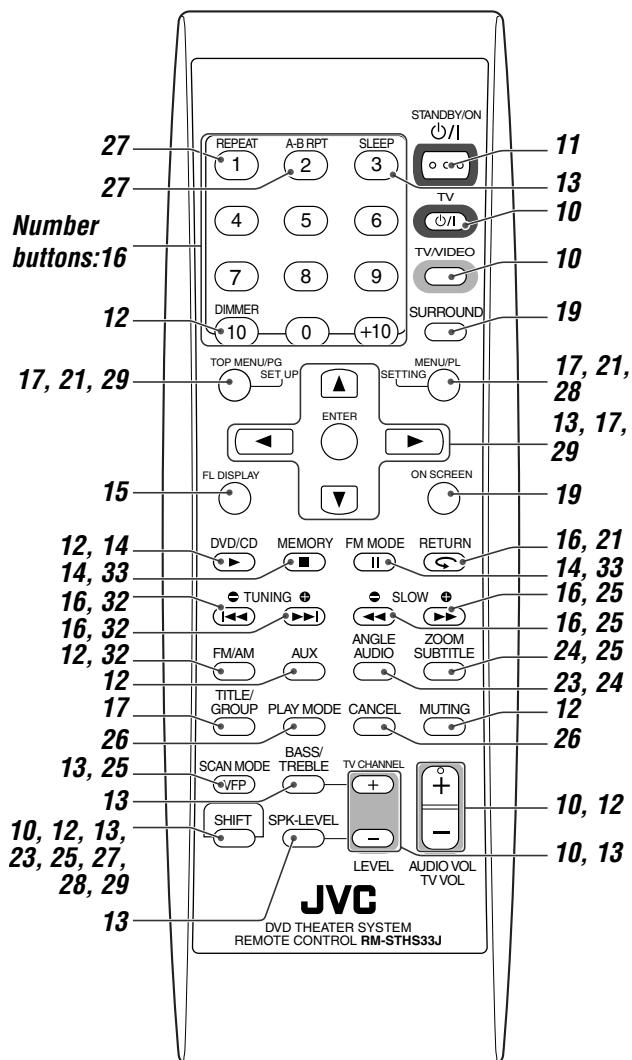

Putting batteries in the remote control

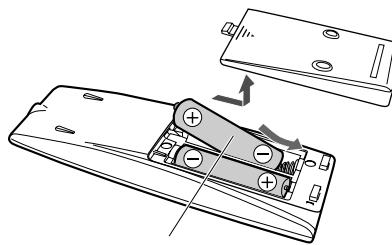

R6P (SUM-3)/AA (15F) type dry-cell batteries (supplied)

If the range or effectiveness of the remote control decreases, replace both batteries.

CAUTION

- Do not expose batteries to heat or flame.

Operating the system from the remote control

Aim the remote control directly to the front panel of the center unit.

- Do not hide the remote sensor.


Connections

Do not connect the power cord until all other connections have been made.

Connecting the FM and AM antennas

■ AM loop antenna


Setting up supplied AM loop antenna

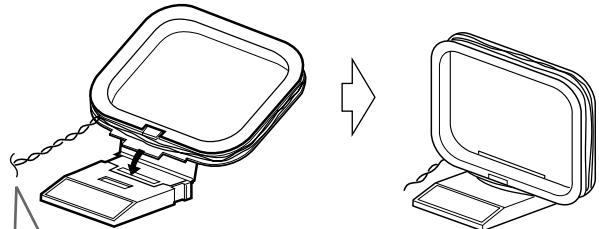


If the antenna cord is covered with the insulation coat, twist and pull the insulation coat off and remove.

Connecting AM loop antenna


1

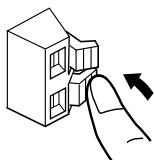

2

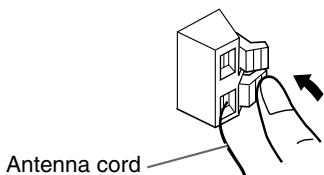

3

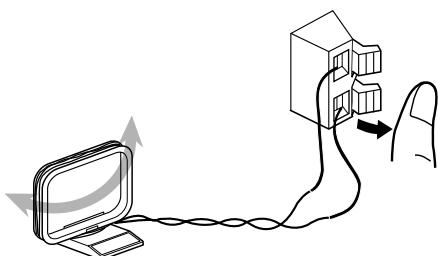


- Turn the loop antenna until you have the best reception during AM broadcast program reception.

NOTE

- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cords. This could cause poor reception.

If reception is poor

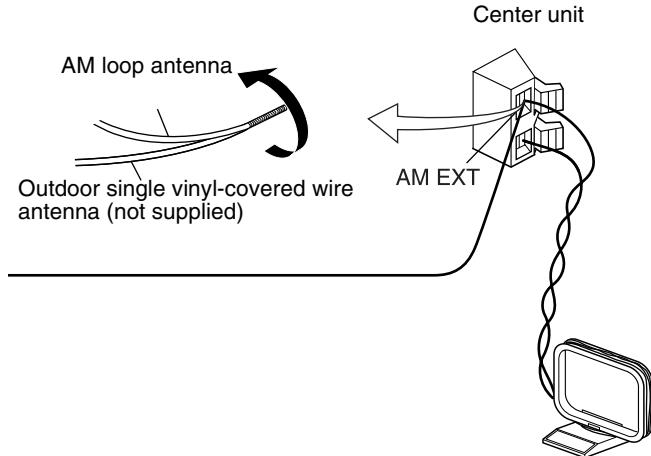


■ FM antenna

Center unit




FM antenna (supplied)

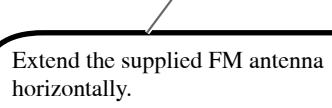


Extend the supplied FM antenna horizontally.

If reception is poor

Center unit

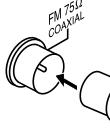


Outdoor FM antenna (not supplied)

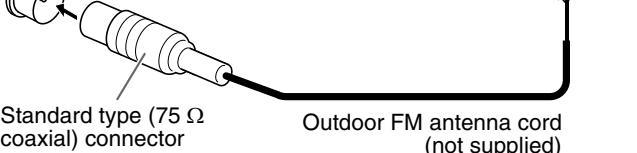

NOTE

- We recommend that you use coaxial cable for the FM antenna as it is well-shielded against interference.

Connecting the satellite (front, center, surround) speakers and the subwoofer

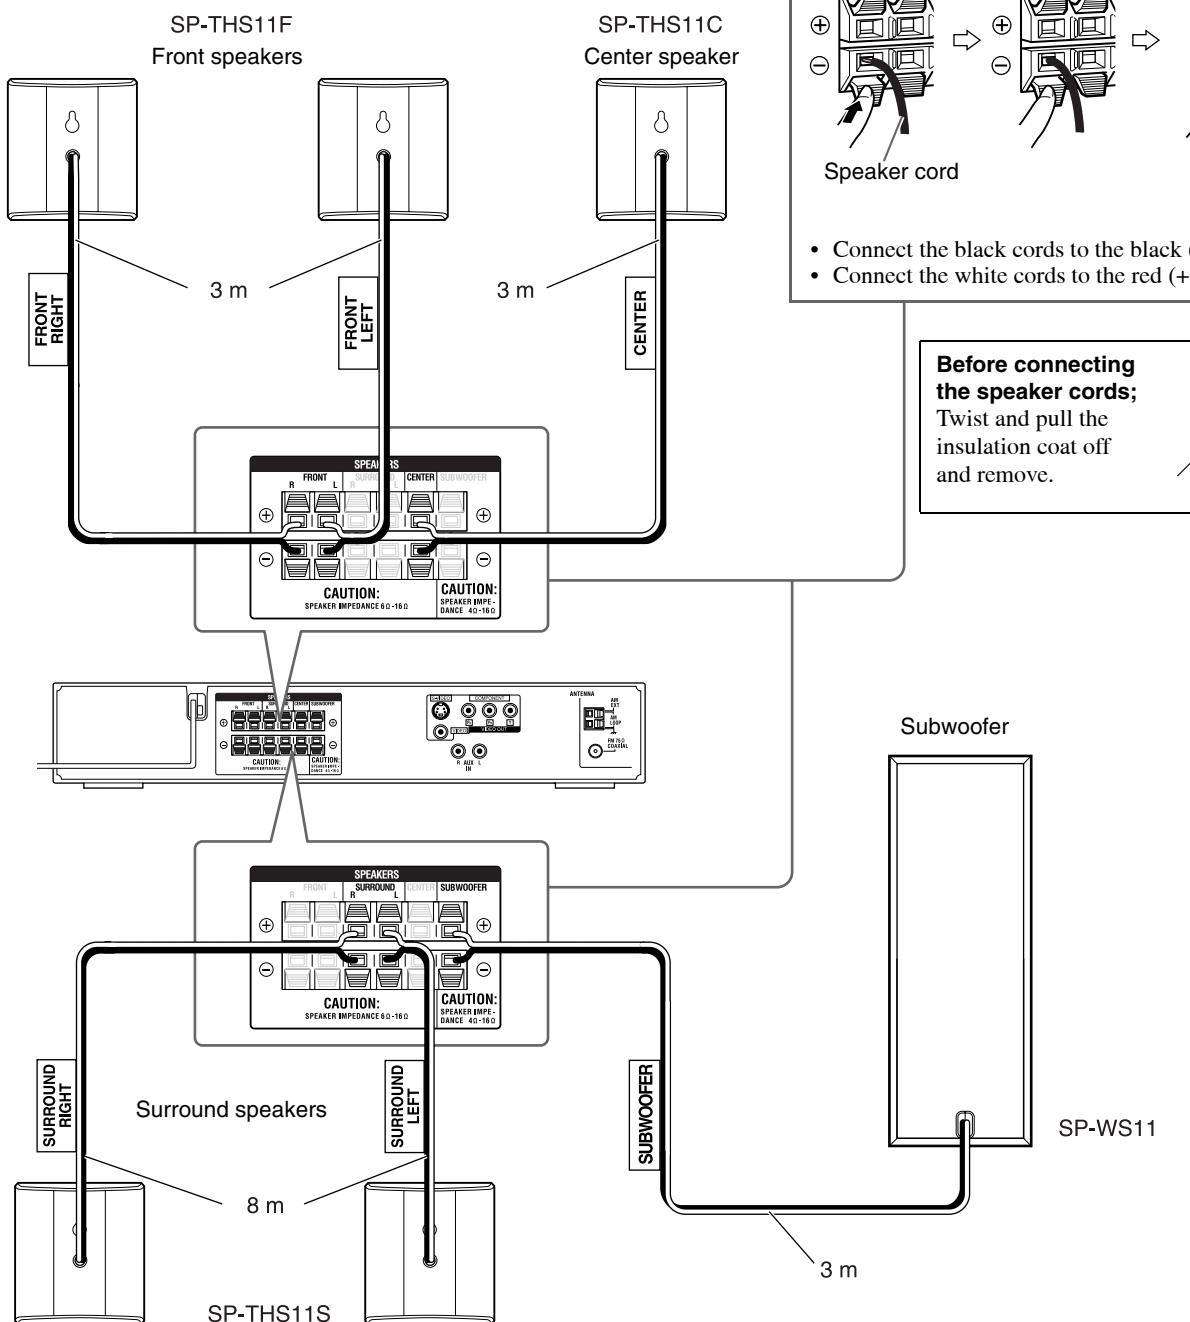

CAUTION


- When you connect speakers other than the supplied ones, use speakers of the same speaker impedance (SPEAKER IMPEDANCE) indicated on the rear of the center unit.
- DO NOT connect more than one speaker to one speaker terminal.

- When installing the satellite speakers on the wall;
 - Be sure to have them installed on the wall by a qualified personnel. DO NOT install the satellite speakers on the wall by yourself to avoid unexpected damage from their falling off the wall due to incorrect installation or weakness in wall structure.
 - Care must be taken in selecting a location for speaker installation on a wall. Injury to personnel or damage to equipment may result if the speakers installed interfere with daily activities.

Connections

Do not connect the power cord until all other connections have been made.

Speaker layout

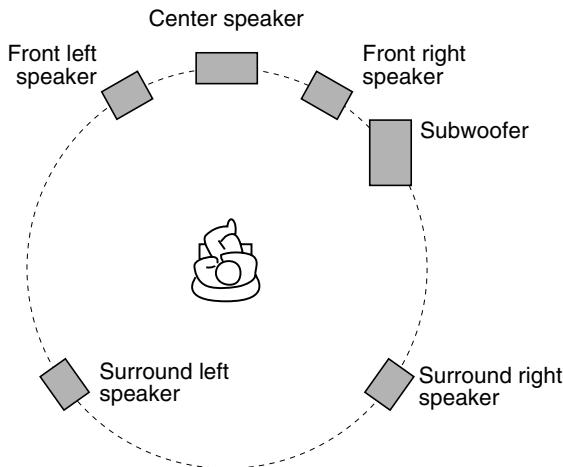


NOTE

- Place the satellite speakers on a flat and level surface.
- The front and center speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, they may cause color distortions. So, pay attention to the following when installing the speakers.
 - When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers. Then wait at least 30 minutes before turning on the TV's main power switch again.
- Some TVs may still be affected even though you have followed the above. If this happens, move the speakers away from the TV.
- The surround speakers and the subwoofer are not magnetically shielded.
- If it is located nearby the TV or monitor, it will probably cause color distortion on the screen. To avoid this, do not place the speaker nearby the TV or monitor.
- Be sure to place the subwoofer to the TV's right. If you place the subwoofer to the TV's left, keep sufficient distance between them to prevent the TV screen from appearing mottled.

Connecting a TV

- Distortion of picture may occur when connecting the TV via a VCR, or to a TV with a built-in VCR.
- You need to set "MONITOR TYPE" in the PICTURE menu correctly according to the aspect ratio of your TV. (See page 30.)


To connect a TV equipped with the component video input jacks

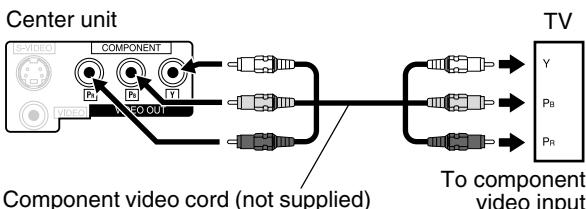

NOTE

- If your TV supports progressive video input, you can enjoy a high quality picture by setting the progressive scan mode to active. (See page 13.)
- If the component video input jacks of your TV are of the BNC type, use a plug adapter (not supplied) to convert the pin plugs to BNC plugs.
- The video signals can be output only when you select "DVD" as the source to play. (See page 12.)

To connect a TV equipped with the S-VIDEO and/or the composite video input jacks

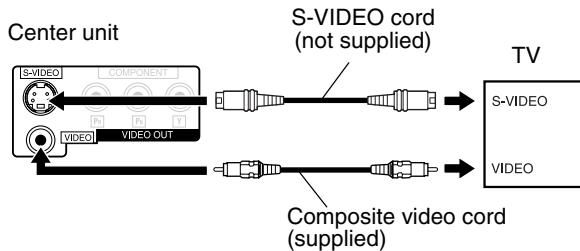


NOTE

- Select the appropriate scan mode according to your TV. (See page 13.)

Connecting an external component

You can enjoy the sound of an analog component.

Center unit

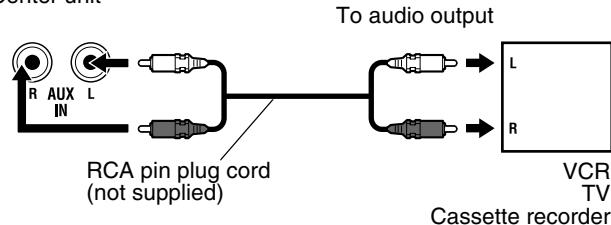


NOTE

- If you connect a sound-enhancing device such as a graphic equalizer between the source components and this system, the sound output through this system may be distorted.
- When playing a video component such as a VCR;
 - To listen to the sound, select "AUX" as the source to play. (See page 12.)
 - To see the picture, connect the video output jack of the component to the video input jack of the TV directly, and select the correct input mode on the TV.

Connecting the power cord

Make sure that all other connections have been completed.

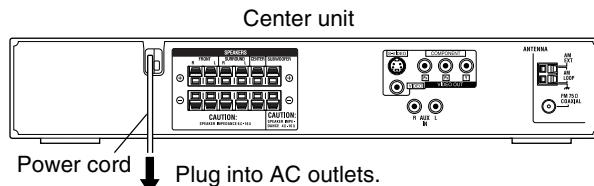

CAUTION

- Disconnect the power cord before cleaning or moving the system.
- Do not pull on the power cord to unplug the cord. When unplugging the cord, always grasp and pull the plug so as not to damage the cord.

NOTE

- Preset settings, such as preset stations and surround mode adjustment, may be erased in a few days in the following cases;
 - If you unplug the power cord of the center unit.
 - If a power failure occurs.


Operating the TV

You can use the remote control to operate not only this unit but also JVC's TV.

- Refer also to the manuals supplied for the TV.
- To operate the TV, aim the remote control directly at the remote sensor on the TV.

■ To operate a JVC's TV

You can perform the following operations on the TV.


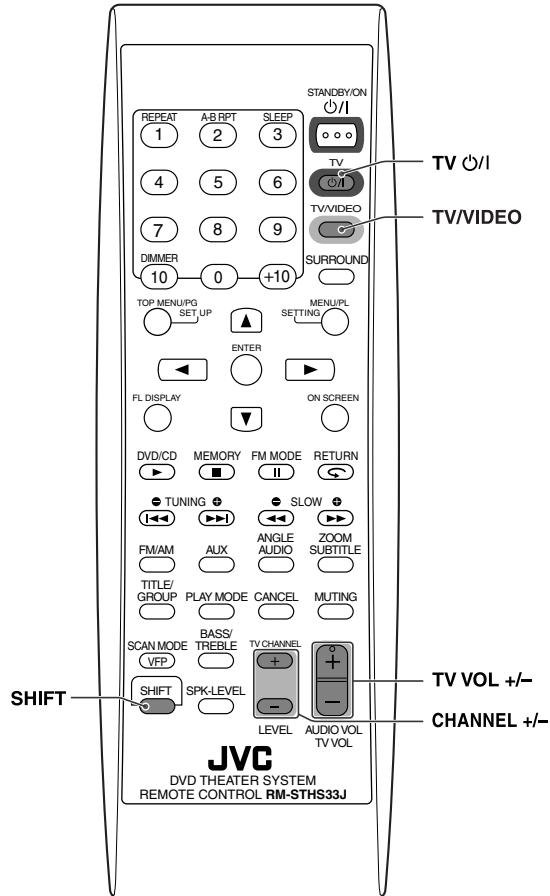


TV \odot/I:	Turn on or off the TV.
TV VOL +/− with SHIFT pressed and held:	Adjust the volume.
TV/VIDEO:	Set the input mode (either TV or VIDEO).
CHANNEL +/− with SHIFT pressed and held:	Change the channels.

Basic operations

The buttons on the remote control are used to explain most of the operations in this manual. You can use the buttons on the center unit same as on the remote control for operations unless otherwise noted.

The buttons described below are used on pages 11 to 13.

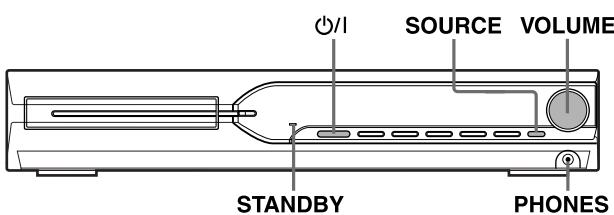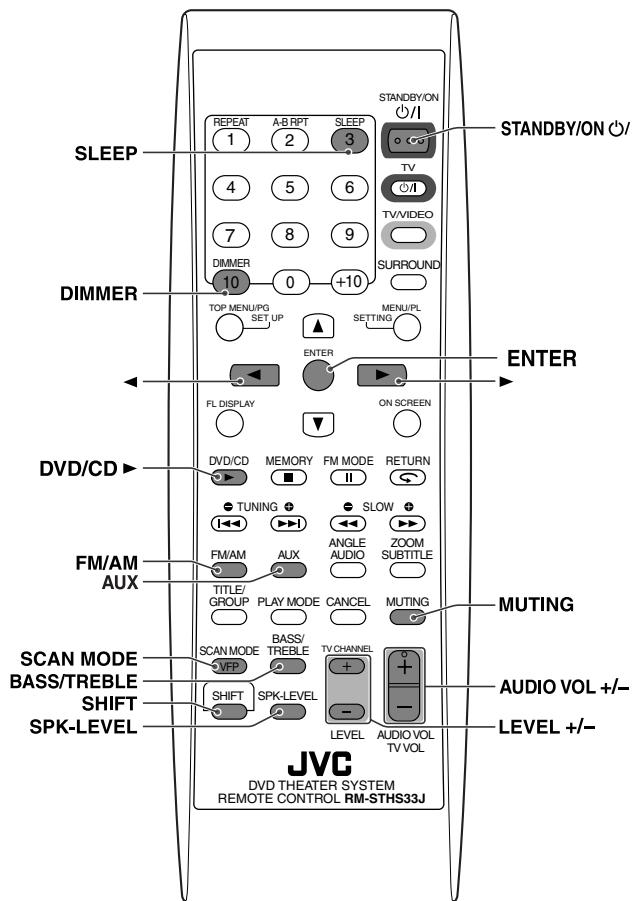


Turning the system on/off

On the remote control:
Press STANDBY/ON $\textcircled{O}/\textcircled{I}$.

On the center unit:
Press $\textcircled{O}/\textcircled{I}$.

When DVD is selected as the source (see page 12), the following messages will appear on the TV screen.

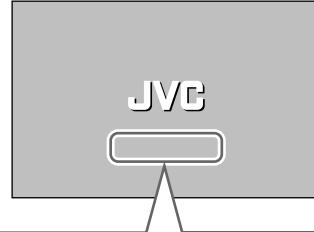

- “OPEN”/“CLOSE”: Appears when opening or closing the disc tray.
- “NOW READING”: Appears when the system is reading the disc information.
- “REGION CODE ERROR!”: Appears when the Region Code of the DVD VIDEO does not match the code the system supports. The disc cannot be played back.
- “NO DISC”: Appears when no disc is loaded.
- “CANNOT PLAY THIS DISC”: Appears when unplayable disc is loaded.

NOTE

- The STANDBY lamp goes off when the power is turned on, and the lamp lights when the power is turned off.
- A small amount of the power is consumed even when the power is turned off. This is called standby mode and the STANDBY lamp lights in this mode. Unplug the power cord from the AC outlet to turn the power off completely.
- You can also turn on the system by pressing the following buttons;
 - Δ on the center unit
 - One of the source selecting buttons on the remote control
 - \blacktriangleright on the center unit.

Selecting the source to play

On the remote control:

Press one of the source selecting buttons (DVD/CD▶, FM/AM or AUX).

DVD/CD▶: To play back a disc (DVD VIDEO, VCD etc.). (See page 14.)

FM/AM: To tune in an FM or AM station. (See page 32.)
Each time you press the button, the band alternates between FM and AM.

AUX: To select the external component connected to the center unit. (See page 9.)

On the center unit:

Press SOURCE repeatedly until the source name you want appears on the display window.

NOTE

- When a source except DVD is selected, this system does not output video signals.
- It may take time to change the source.

Adjusting the volume [VOLUME]

CAUTION

- Always set the volume to minimum level before starting any source. If the volume is set at its high level, the sudden blast of sound could permanently damage your hearing and/or blow out the speakers.

On the remote control:

Press AUDIO VOL +/−.

On the center unit:

Turn VOLUME.

Listening with headphones (not supplied)

CAUTION

Be sure to turn down the volume;

- Before connecting or putting on headphones as high volume may damage both the headphones and your hearing.
- Before disconnecting headphones as high volume may be suddenly output from the speakers.

While connecting a pair of headphones to the PHONES jack on the center unit, the system automatically cancels the surround mode (see page 18) currently selected, deactivates the speakers, and activates the headphone mode. "H.PHONE" appears on the display window.

Headphone mode

When using the headphones, the following signals are output regardless of your speaker setting;

- For 2 channel sources, the front left and right channel signals are output from the headphones.
- Multi-channel signals are down-mixed and output from the headphones.

Turning off the sound temporarily [MUTING]

Press MUTING.

To restore the sound

Perform one on the following:

- Press MUTING again.
- Press AUDIO VOL +/− (or turn VOLUME on the center unit).

Adjusting the brightness of the indications [DIMMER]

Press DIMMER, with SHIFT pressed.

Each time you repeat the procedure, the brightness level changes.

Sleep Timer [SLEEP]

The system turns off automatically when the specified period of time has passed.

Press SLEEP, with SHIFT pressed.

Each time you repeat the procedure, the shut-off time changes.

Example:



To check the remaining time

Press SLEEP, with SHIFT pressed once.

To change the remaining time

Press SLEEP repeatedly, with SHIFT pressed.

To cancel

Press SLEEP repeatedly, with SHIFT pressed until "SLEEP --" appears.

- Turning off the power also cancels the Sleep Timer.

Adjusting the output level of the front/center/ surround speakers and subwoofer

1 Press SPK-LEVEL to show the target speaker indication on the display window.

Each time you press the button, the indication of the speakers changes as follows:

**FRONL → FRONTR → CENTER →
SURR(surround) L → SURR(surround) R →
SUBWFR → (back to the beginning)**

2 Press LEVEL +/- to adjust the output level from -6 to 6.

NOTE

- You can also make adjustments by using the setup menu shown on the TV screen. (See page 31.)
- The adjustments take effect for all sources.

Adjusting the sound

1 Press BASS/TREBLE to show "BASS" or "TREBLE" on the display window.

Each time you press the button, the indication alternates between "BASS" and "TREBLE".

2 Press LEVEL +/- to adjust the level from -8 to 8.

NOTE

- The adjustments take effect for all sources.

Changing the scan mode

The system can be accommodated to your TV's scan mode.

- To use the system in progressive mode, it is required that the center unit is connected to the TV using a component video cord (not supplied) in advance. (See page 9.)

■ While DVD is selected as the source and before playback

1 Press and hold SCAN MODE for 2 seconds, with SHIFT pressed.

The current setting appears on the display window.

2 Press Cursor ▶/◀ to select the desired mode.

- INTER,: Select when your TV supports the interlaced video input only.
- PROGRESS: Select when your TV equipped with component jacks supports the progressive video input.

You can get better picture quality in the order — "PROGRESS" > S-video > Composite.

3 Press ENTER while the selected mode is displayed.

When "PROGRESS" is selected, the PROGRESSIVE indicator lights on the display window.

NOTE

- Although the picture may be distorted when you press ENTER, this is not a malfunction of the system.



- There are some progressive TVs and High-Definition TVs that are not fully compatible with this system, resulting in an unnatural picture when playing back a DVD VIDEO in the progressive scan mode. In such a case, change the scan mode to "INTER.". To check the compatibility of your TV, contact your local JVC customer service center.
- All JVC progressive TVs and High-Definition TVs are fully compatible with this system.

Playback

English

- The mark  shows the types of discs the operation is available for.

The buttons described below are used on pages 14 to 17.

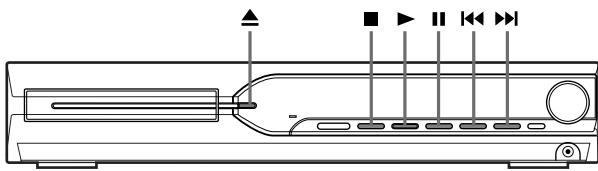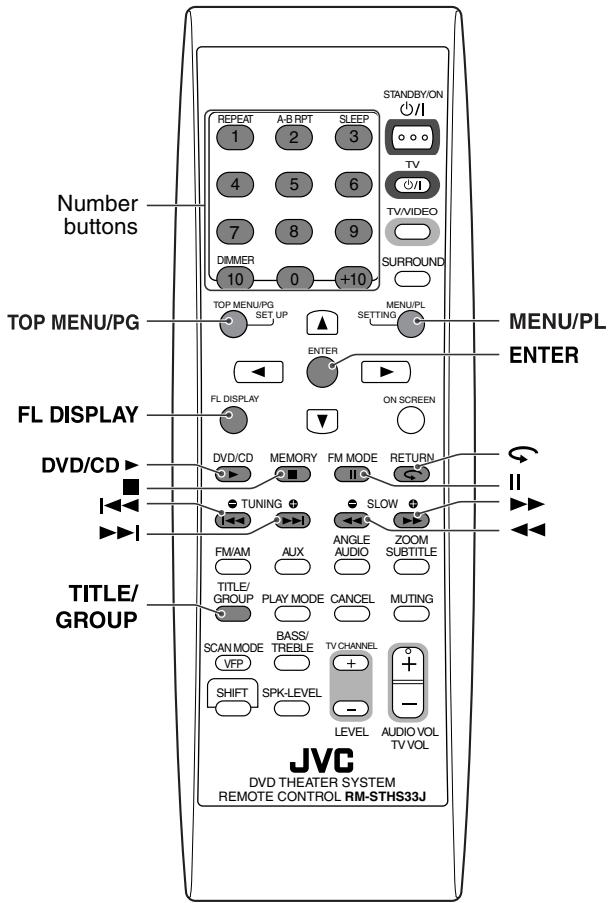

Basic playback


1 Press on the center unit.

- The system turns on and the disc tray comes out.

DVD VIDEO	DVD VR	VCD	SVCD
CD	MP3	JPEG	

2 Place a disc.

When placing an 8 cm (3 inches) disc
Label side up

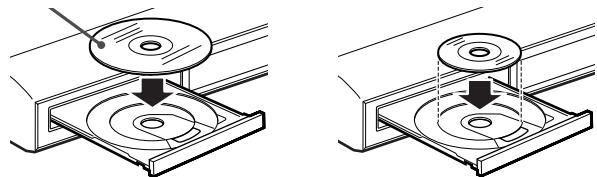

3 Press (play button).

For MP3

The file control display (see page 22) appears on the TV screen.

For JPEG

Each file (still pictures) is shown on the TV screen for about 3 seconds (slide-show). When stopping playback, the file control display (see page 22) appears on the TV screen.

For DVD VR disc

Pressing TOP MENU/PG or MENU/PL shows the control display on the TV screen (see page 17).

■ To pause

Press .

To return to playback, press  (play button).

■ To stop

Press .

■ On-screen guide icons

During DVD VIDEO playback, the following guide icons may appear for a while on the TV screen;

- : appears at the beginning of a scene containing multi-subtitle languages.
- : appears at the beginning of a scene containing multi-audio languages.
- : appears at the beginning of a scene containing multi-angle views.
- (Play), (Pause), / (Fast forward/fast-reverse), / (Slow-motion forward/reverse): appears when you perform each operation.
- : the disc cannot accept an operation you have tried to do.

NOTE

- (For JPEG) The system cannot accept operations even though you press any buttons before the entire picture appears on the TV screen.
- If you do not want the on-screen guide icons to appear, see page 31.

Playback


See page 14 for button locations.

■ Playback information on the display window

DVD VIDEO

Example:


When a DVD VIDEO encoded with Dolby Digital 5.1ch is played

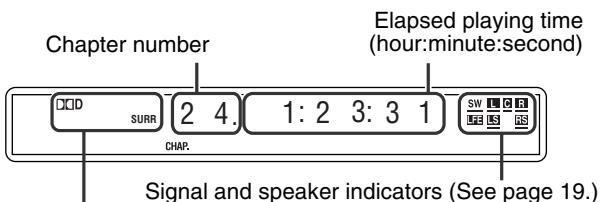

Signal and speaker indicators (See page 19.)

Surround mode and digital signal format (See page 19.)


↑ Pressing FL DISPLAY

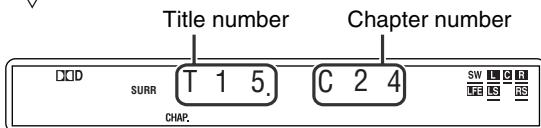

DVD VR disc


Example:

During playback on the Original program*

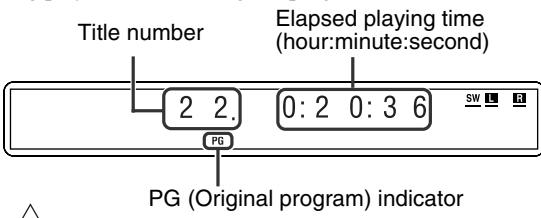


PG (Original program) indicator

↑ Pressing FL DISPLAY

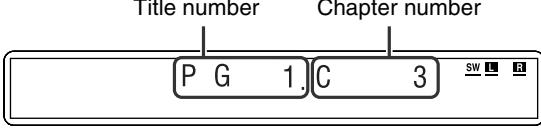


Example:

During playback on the Playlist*

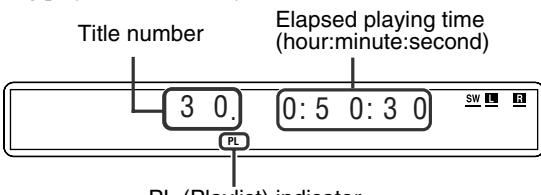

PL (Playlist) indicator

↑ Pressing FL DISPLAY

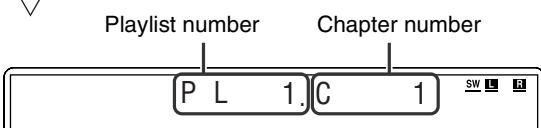


* Pressing TOP MENU/PG or MENU/PL, you can change the play mode. (See page 17.)

VCD/SVCD/CD

Example:

When a CD is played back

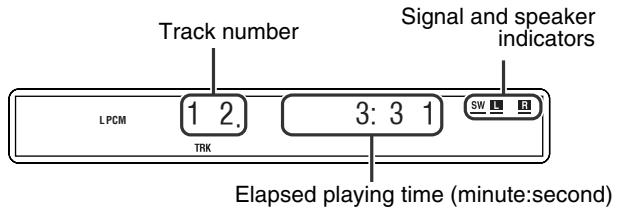


Elapsed playing time (minute:second)

NOTE


- When a VCD or SVCD with PBC function is played, the elapsed playing time does not appear, but "PBC" appears.

MP3 file

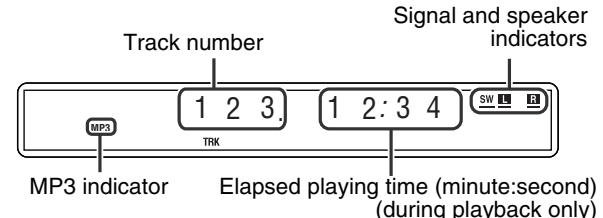


MP3 indicator Elapsed playing time (minute:second)
(during playback only)

↑ Pressing FL DISPLAY

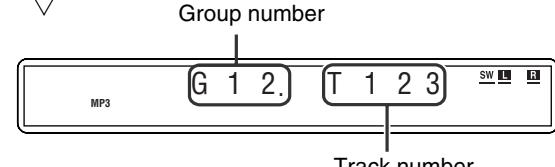


Track number

JPEG file

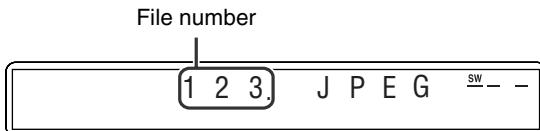

File number

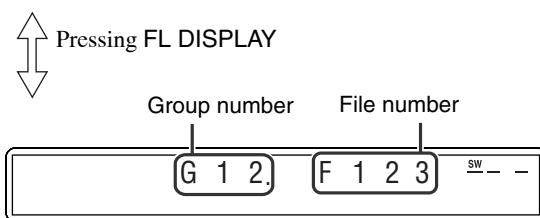

File number

NOTE

- You can change the time information mode (except for MP3/JPEG). (See page 20.)
- You can also check the playback information on the TV screen. (See page 19.)

■ Screen saver

A TV screen may burn out if a static picture is displayed for a long time. To prevent this, the system automatically dims the screen if a static picture is displayed for over 5 minutes (the screen saver function).

- Pressing any button will cancel the screen saver function.
- If you do not want to use the screen saver function, see page 30.

One touch replay

You can move back the playback position by 10 seconds from the current position.



■ During playback

On the remote control:

Press ↲.

NOTE

- This function works in the same title.
- This feature may not work for some discs.

Fast-forward/fast-reverse search

■ During playback

On the remote control:

Press ▶▶ or ◀◀.

Each time you press the button, the search speed changes (x2, x5, x10, x20, x60).



To return to normal speed playback

Press DVD/CD▶ (play button).

On the center unit:

Press and hold ▶▶ or ◀◀.


Continuously pressing ▶▶ or ◀◀ increases the fast-forward/reverse search speed (x5 → x20).

NOTE

- When a DVD VIDEO, DVD VR, VCD or SVCD is played back, no sound comes out during fast-forward/reverse search.
- When a CD is played back, sound is intermittent and low during fast-forward/reverse search.
- This feature may not work for some discs.
- For MP3, the search speed is not shown.

Skip to the beginning of a desired selection

■ Using ▶▶ / ◀◀ buttons

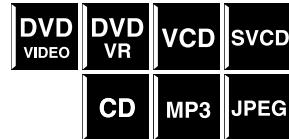

- For DVD VIDEO/DVD VR (chapter): During playback
For VCD/SVCD (track):

During playback without PBC function
For CD/MP3/JPEG (track/file): During playback or while stopped

Press ▶▶ or ◀◀ repeatedly.

NOTE

- When playing back an MP3/JPEG, you can make operations using the file control display. (See page 22.)
- This feature may not work for some discs.

■ Using number buttons on the remote control

- For DVD VIDEO/DVD VR (title, chapter):
While stopped, the title number is selected.
During playback, the chapter number is selected.
For VCD/SVCD (track):
During playback without PBC function
For CD/MP3/JPEG (track/file):
During playback or while stopped

Press number buttons (0-10, +10) to select the desired number.

- For details on using the number buttons, see "How to use the number buttons" below.

How to use the number buttons

- | | |
|---------------|---|
| To select 3: | Press 3. |
| To select 14: | Press +10, then 4. |
| To select 24: | Press +10 twice, then 4. |
| To select 40: | Press +10 three times, then 10.
Or press +10 four times, then 0. |

Locating a desired title/group using number buttons

- During playback or while stopped.

1 Press TITLE/GROUP.

"__" or "_" is shown in the title/group display area in the display window.

Example:

During DVD VIDEO playback



— __. 1: 2 3: 4 5

2 While the display window shows "__" or "_", use number buttons (0-10, +10) to enter the desired title or group number.

The system starts playback from the first chapter/track/file of the selected title/group.

- For details on using the number buttons, see "How to use the number buttons". (See page 16.)

NOTE

- This feature may not work for some discs.

Selecting the desired title/playlist from the control display

- During playback or while stopped.

1 Press TOP MENU/PG or MENU/PL.



The control display is shown on the TV screen, and the system starts playback of the first title/playlist.

- The PLAY LIST is shown only when the playlist is on the DVD VR disc.

TOP MENU/PG: shows the ORIGINAL PROGRAM.
Example:

ORIGINAL PROGRAM			
No	Date	Ch	Title
1	25/04/04	4ch	19:00 JVC DVD World 2004
2	17/05/04	8ch	10:30 Music Festival
3	22/05/04	8ch	17:00 children 001
4	26/05/04	L-1	13:19
5	20/06/04	4ch	22:00
6	25/06/04	L-1	8:23 children 002

*1: Title number

*2: Recording date

*3: Recording source (TV station, the input terminal of the recording equipment etc.)

*4: Start time of recording

*5: Title of the original program/playlist (The title may not be displayed depending on the recording equipment.)

*6: Current title

MENU/PL: shows the PLAY LIST.

Example:

PLAY LIST			
No	Date	Chap	Title
1	25/05/04	001	1:03:16 My JVC World
2	17/06/04	005	1:35:25
3	20/06/04	003	0:10:23 Favorite music
4	25/06/04	001	0:07:19 children 001-002

*7: Playlist number

*8: Creating date of playlists

*9: Number of chapters

*10: Total playing time

*11: Current playlist

2 Press ▼/▲ to select the desired title/playlist.

The system starts playback of the selected title/playlist.

To clear the control display

- Press ENTER.


About the play mode on a DVD VR disc

- Original program (ORIGINAL PROGRAM):
The system can play back the original picture in the recorded order.
- Playlist (PLAY LIST):
The system can play back the playlist edited by the recording equipment.

Advanced operations

- The mark shows the types of discs the operation is available for.

The buttons described below are used on pages 18 to 28.

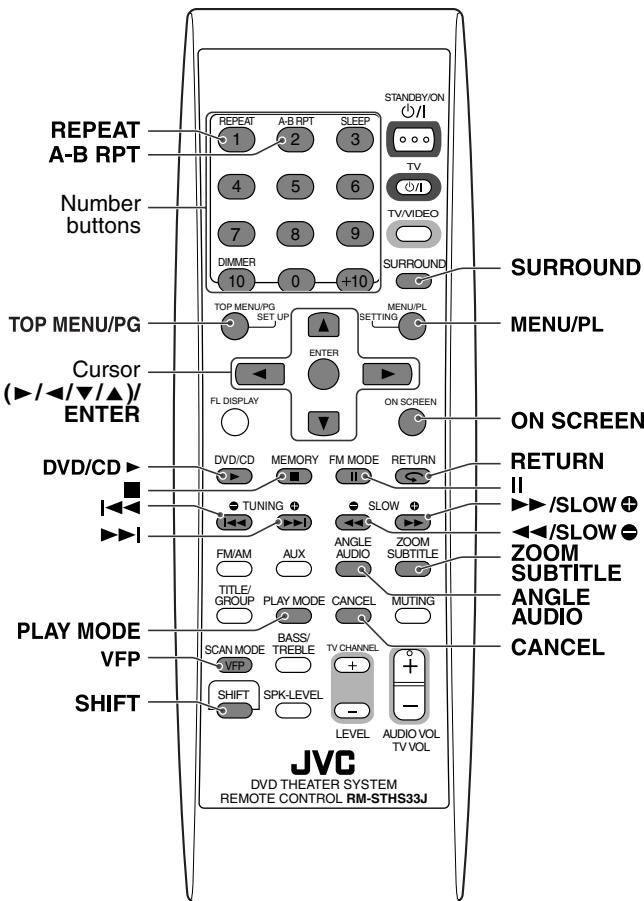

Using the surround mode

■ Auto Surround (AUTO SURR)

This function automatically selects the appropriate surround mode according to the input signals. For example, a multichannel source is automatically reproduced in multichannel audio.

■ Dolby Surround

Dolby Pro Logic II*1

Dolby Pro Logic II has a developed multichannel playback format to decode all 2 channel sources — stereo source and Dolby Surround encoded source — into a 5.1 channel.

Dolby Pro Logic II has two modes — Movie mode and Music mode:

• Pro Logic II Movie (MOVIE)

Suitable for reproduction of Dolby Surround encoded sources bearing the mark .

• Pro Logic II Music (MUSIC)

Suitable for reproduction of any 2 channel stereo music sources.

Dolby Digital*1

Used to reproduce multichannel soundtracks of the software encoded with Dolby Digital (.

■ DTS Digital Surround*2

Used to reproduce multichannel soundtracks of the software encoded with DTS Digital Surround (.

DTS Digital Surround (DTS) is another discrete multichannel digital audio format available on CD and DVD software.

Available Surround modes for each input signal

The √ marks show available surround modes.

Mode	Surround off	Auto Surround	Dolby Surround			DTS Digital Surround	DSP
	SURR OFF	AUTO SURR	MOVIE*3	MUSIC*3	Dolby Digital	DTS	ALL ST*3
Dolby Digital (Multichannel)	√	√	—	—	√	—	—
Dolby Digital (2 channel)	√	√	√	√	—	—	√
DTS Digital Surround (Multichannel)	√	√	—	—	—	√	—
DTS Digital Surround (2 channel)	√	√	√	√	—	—	√
Analog or Linear PCM	√	√	√	√	—	—	√

*1 Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

*2 "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.


*3 You can select these modes by pressing SURROUND. (See page 19.)

Continued on next page


■ All Channel Stereo

All Channel Stereo (ALL ST) mode can reproduce a larger stereo sound field using all the connected (and activated) speakers. All Channel Stereo can be used while reproducing 2 channel stereo source.

Normal stereo sound

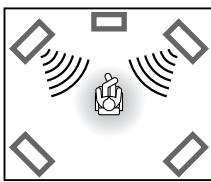

All Channel Stereo

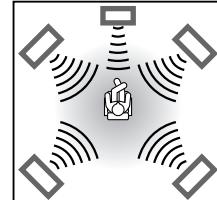

■ Indicators on the display window

Digital signal format indicators

- LPCM, SURR: Lights when Linear PCM signal comes in.
- DOLBY, SURR: Lights when Dolby Digital signals come in.
- DTS, SURR: Lights when DTS Digital (Surround) signals come in.
- No indication: No digital signal indicator lights when analog signals come in.

Dolby Surround mode indicators

- DPLII: Lights when Dolby Pro Logic II mode is activated.

Source signal indicators, etc.

Light to indicate the incoming signals.



L: Lights when the front left channel signal comes in.

C: Lights when the center channel signal comes in.

R: Lights when the front right channel signal comes in.

LFE: Lights when the LFE channel signal comes in.

LS: Lights when the surround left channel signal comes in.

RS: Lights when the surround right channel signal comes in.

S: Lights when the monaural surround channel signal or 2 channel Dolby Surround signal comes in.

SW: Always lights.

The channel with “—” shows that the corresponding speakers are reproducing the channels' sound.

If the channels' sound decoded into 5.1 channel is reproduced, only “—” lights.

Selecting the surround mode

The system is set up to automatically select the optimal surround mode for input signal from digital multichannel software.

When playing back 2 channel source, you can select the desired surround mode manually.

NOTE

- This function also takes effect for the sources other than DVD.
- For FM/AM and AUX, you can select All Channel Stereo (ALL ST) or SURR OFF.

■ When playing back digital multichannel software (except during SURR OFF mode)

The appropriate multichannel surround mode (Dolby Digital, DTS Digital Surround or Linear PCM) is automatically selected.

■ When playing back 2 channel source

You can select either mode of Dolby Pro Logic II (MOVIE/MUSIC) or the DSP (ALL ST) mode.

Press SURROUND repeatedly to select the desired mode.

The surround mode is turned on and the current surround mode appears on the display window.

Each time you press the button, the surround mode changes.

For details on each mode, see page 18.

To turn off the surround mode

Press SURROUND repeatedly until “SURR OFF” appears on the display window.

Storing adjustments — auto memory

When you turn the power off, the system memorizes the current surround mode. The memorized mode is automatically recalled when you turn the power on.

Using the on-screen bar

You can check disc information and you can use some functions using the on-screen bar.

Showing the on-screen bar

- Whenever a disc is loaded




Press ON SCREEN.

Each time you press the button, the on-screen bar changes as follows on the TV screen.

Example:


During DVD VIDEO playback

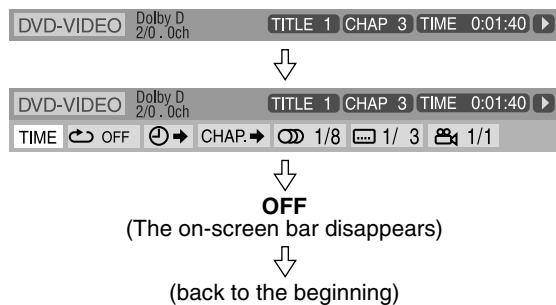


- The currently selected item shows green.

■ Contents of the on-screen bar during playback


DVD VIDEO

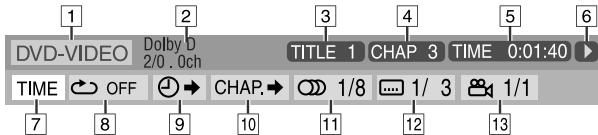


DVD VR disc

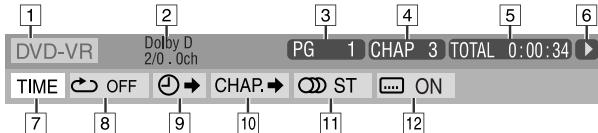

VCD

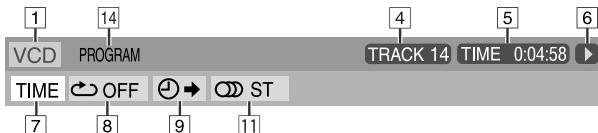

SVCD

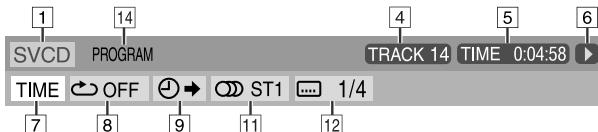

CD



- ① Shows disc type.
- ② Shows audio information.
- ③ Shows current title number.
- ④ Shows current chapter number (for DVD VIDEO and DVD VR) or track number (for other type of discs).
- ⑤ Shows time information. See "Changing the time information".

- ⑥ Shows playback status.

▶: appears during playback.

▶/◀: appears during fast forward/reverse.

▶/◀: appears during playback in forward slow-motion/reverse slow-motion.

II: appears when paused.

■: appears when stopped.

- ⑦ Select this to change time information (⑤). See "Changing the time information".

- ⑧ Select this for Repeat Playback. (See page 27.)

- ⑨ Select this for time search function. (See page 22.)

- ⑩ Select this for chapter search function. (See page 21.)

- ⑪ Select this to change audio language, channel, or stream. (See page 24.)

- ⑫ Select this to change subtitle language. (See page 24.)

- ⑬ Select this to change view angle. (See page 23.)

- ⑭ Shows Playback Mode status.

PROGRAM: appears during Program Playback. (See page 26.)

RANDOM: appears during Random Playback. (See page 26.)

Changing the time information

You can change the time information in the on-screen bar on the TV screen and the display window of the center unit.



- During playback

- 1 Press ON SCREEN twice.**

The on-screen bar appears on the TV screen.

- 2 Press Cursor ▶/◀ to highlight TIME .**

- 3 Press ENTER repeatedly to select the desired information.**

Example:

When elapsed playing time of disc is selected.

TOTAL 1:25:58

■ VCD/SVCD/CD

- TIME: Elapsed playing time of current track
- REM: Remaining time of current track
- TOTAL: Elapsed time of disc
- T. REM: Remaining time of disc

■ DVD VIDEO/DVD VR

- TIME: Elapsed playing time of current chapter
- REM: Remaining time of current chapter
- TOTAL: Elapsed time of Title/Program
- T. REM: Remaining time of Title/Program

- 4 Press ON SCREEN.**

The on-screen bar disappears.

NOTE

- When playing back DVD VR, "TIME" and "REM" cannot be shown.

Playing from a specified position on a disc

You can start playing a title, chapter or track you specify. You can also play a disc from specified time.

Locating a desired scene from the DVD menu


DVD VIDEOS generally have their own menus which show disc contents and you can display them on the TV screen. You can locate a desired scene by using these menus.

- Whenever a DVD VIDEO is loaded

1 Press TOP MENU/PG or MENU/PL.

The menu appears on the TV screen.

Example:

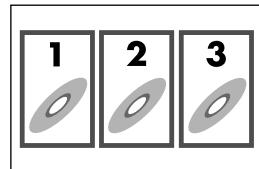

Normally, a DVD VIDEO which contains more than one title will have a "top" menu which lists the titles. Press TOP MENU/PG to show the title menu.

Some DVD VIDEO may also have a different menu which is shown by pressing MENU/PL.

See the instructions for each DVD VIDEO regarding its particular menu.

2 Use Cursor ▶/◀/▼/▲ to select a desired item.

3 Press ENTER.

- With some discs, you can also select items by entering the corresponding number using number buttons.

Locating a desired scene using a VCD/SVCD menu with PBC


A VCD or SVCD recorded with PBC has its own menus such as a list of contained songs. You can locate a specific scene by using these menus.



- During playback with PBC function

1 Press RETURN repeatedly, with SHIFT pressed until the menu appears on the TV screen.

Example:

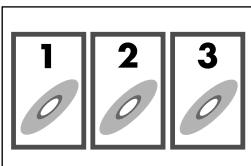

2 Press number buttons (1-10, +10) to select the number of the desired item.

- For details on using the number buttons, see "How to use the number buttons". (See page 16.)

To return to the menu

Press RETURN repeatedly until the menu screen appears.

When "NEXT" or "PREVIOUS" is shown on the TV screen:

- To go to the next page, press ►►.
- To return to the previous page, press ◀◀.

NOTE

- If you want to play a PBC-compatible VCD/SVCD without using the PBC function, perform any of the following:
 - Start playback by pressing number buttons while stopped.
 - Press ►► repeatedly until the desired track number is displayed, then start playback by pressing ► (play button). The track number appears on the display window instead of "PBC".
- To activate the PBC function when playing a PBC-compatible VCD/SVCD without using the PBC function, perform any of the following:
 - Press TOP MENU/PG or MENU/PL.
 - Press ■ twice to stop playback, then press ► (play button).

Locating a desired chapter using the on-screen bar

- During playback



1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ▶/◀ to highlight CHAP.▶.

3 Press ENTER.

Example:

During DVD VIDEO playback



4 Press number buttons (0-9) to enter the desired chapter number.

Example:

- To select 8: Press 8.
- To select 10: Press 1, then 0.
- To select 20: Press 2, then 0.
- To select 37: Press 3, then 7.

To correct a misentry

Repeat step 4.

5 Press ENTER.

6 Press ON SCREEN.

The on-screen bar disappears.

NOTE

- You can select up to the 99th chapter.

Locating a desired position by specifying the time

You can locate a desired position by specifying the time from the beginning the disc (while stopped) or the current title/track (during playback).

■ For DVD VIDEO/DVD VR:

During playback

For VCD/SVCD:

While stopped or during playback without PBC function

For CD:

During playback or while stopped



■ When specifying the elapsed playing time from the beginning of the disc

Perform the following procedure while stopped.

■ When specifying the elapsed playing time from the beginning of current title/track

Perform the following procedure during playback.

1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ▶/◀ to highlight

3 Press ENTER.



4 Use number buttons (0-9) to enter the time.

You can specify the elapsed playing time from the beginning of the disc (while stopped) or from the beginning of the current title/track (during playback).

Example:

To play back from a point 2 (hours): 34 (minutes): 08 (seconds) elapsed

TIME _ : __ : __ \Rightarrow TIME 2 : __ : __ \Rightarrow
Press 2 Press 3

TIME 2 : 3 __ : __ \Rightarrow TIME 2 : 3 4 : __ \Rightarrow
Press 4 Press 0

TIME 2 : 3 4 : 0 \Rightarrow TIME 2 : 3 4 : 0 8
Press 8

To cancel a misentry

Press Cursor \blacktriangleleft repeatedly.

5 Press ENTER.

6 Press ON SCREEN.

The on-screen bar disappears.

NOTE

- You can specify time in hours/minutes/seconds for DVD VIDEO/DVD VR and in minutes/seconds for VCD/SVCD/CD.


Using the file control display

You can search and play desired groups and tracks/files using the file control display on the TV screen.



Current group / total group number

Playback mode (PROGRAM, RANDOM, REPEAT)

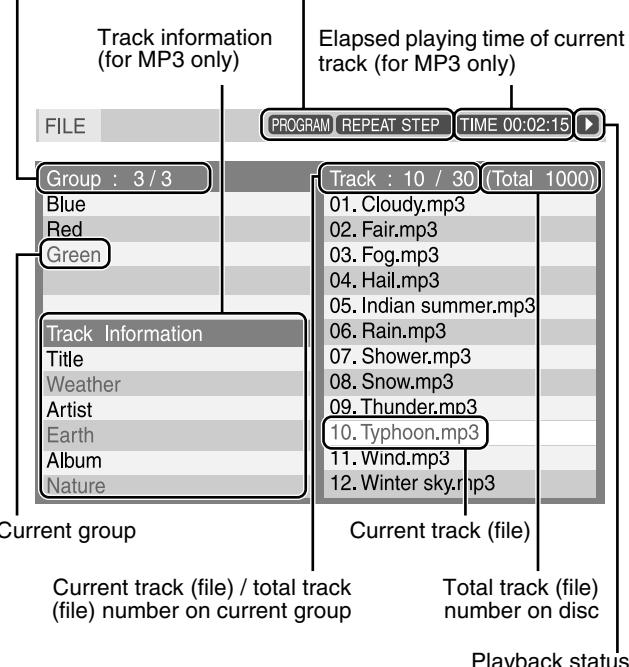

The file control display appears automatically during playback (for MP3) or while stopped.

Continued on next page

- For MP3:
During playback or while stopped
For JPEG:
While stopped

1 Press Cursor ▶/◀/▼/▲ to select the desired group/track/file.

- For MP3, playback starts from the selected track.
- For JPEG, proceed to perform the following operation.

2 Press DVD/CD▶ or ENTER.

- Track playback/slideshow starts from the selected track/file.
- When you press ENTER for JPEG, only the selected file is played back.

To skip the file during playback

Press ▶▶◀◀ or Cursor ▲/▼.

NOTE

- You can also check playback information on the display window. (See page 15.)
- Some group, track and file names may not be displayed correctly depending on recording conditions.
- The order of groups, tracks and files may be displayed differently from the order displayed on your personal computer.

Resume playback

When Resume Playback is set to "ON" (see page 31) and you stop playback by the following operations, the position where playback has been stopped is stored. ("RESUME" appears on the display window.)

- Turning off the power (see page 11)
- Pressing ■ once
- Changing the source (see page 12)



To start playback from the stored position

("RESUME" disappears.)

- Press ▶ (play button) on the remote control or the center unit.
- Select DVD as the source again if you changed the source.

To clear the stored position

Press ■ again or open the disc tray.

Selecting a view angle

- During playback of a disc containing multi-view angles



When using the ANGLE button:

1 Press ANGLE, with SHIFT pressed.

Example:

The first view angle is selected out of 3 view angles recorded.



2 Press ANGLE repeatedly, with SHIFT pressed or Cursor ▼/▲ to select the desired view angle.

When using the on-screen bar:

1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ▶/◀ to highlight 1/3.

3 Press ENTER.



4 Press Cursor ▼/▲ to select the desired view angle.

5 Press ENTER.

6 Press ON SCREEN.

The on-screen bar disappears.

Selecting the subtitle

- During playback of a disc containing subtitles in several languages



When using the SUBTITLE button:

1 Press SUBTITLE.

Example (DVD VIDEO):

“ENGLISH” is selected out of 3 subtitle languages recorded.



2 Press Cursor ▼/▲ to select the desired subtitle.

For DVD VR

- Pressing SUBTITLE activates the subtitles (subpictures) regardless of whether the subtitles are recorded or not. (Subtitles will not change if no subpicture is recorded.)

For SVCD

- An SVCD can contain up to four subtitles. Pressing SUBTITLE changes the subtitles regardless of whether the subtitles are recorded or not. (Subtitles will not change if no subtitle is recorded.)

NOTE

- Each time you press SUBTITLE, the subtitle appears and disappears alternately.

When using the on-screen bar:

1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ▶/◀ to highlight 1/3 .

3 Press ENTER.



4 Press Cursor ▼/▲ repeatedly to select the desired subtitle.

5 Press ENTER.

6 Press ON SCREEN.

The on-screen bar disappears.

NOTE

- Some subtitle or audio languages are abbreviated in the pop-up window. See “The language codes list”. (See page 29.)
- Each time you press SUBTITLE, the subtitle appears and disappears alternately.

Selecting the audio

- During playback of a disc containing audio in several languages



When using the AUDIO button:

1 Press AUDIO.

Example (DVD VIDEO):

“ENGLISH” is selected out of 3 audio languages recorded.



2 Press AUDIO repeatedly or Cursor ▼/▲ to select the desired audio.

When using the on-screen bar:

1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ▶/◀ to highlight 1/3 .

3 Press ENTER.



4 Press Cursor ▼/▲ to select the desired audio.

5 Press ENTER.

6 Press ON SCREEN.

The on-screen bar disappears.

NOTE

- Some subtitle or audio languages are abbreviated in the pop-up window. See “The language codes list”. (See page 29.)
- “ST”, “L” and “R” is displayed when playing a DVD VR, VCD or SVCD respectively representing “stereo”, “left sound” and “right sound”.

Special picture playback

Frame-by-frame playback

- During playback

Press **II** repeatedly.

Each time you press the button, the still picture advances by one frame.



To return to normal playback

Press DVD/CD▶.

Playing back in slow-motion

- During playback



1 Press **II** at the point where you want to start playback in slow-motion from.

The system pauses playback.

2 Press **SLOW +**.

- Playback in forward slow-motion starts.

For DVD VIDEO only:

- To play back in reverse slow-motion, press **SLOW -**.

Each time you press the button, the playback speed become faster.

To return to normal playback

Press DVD/CD▶.

NOTE

- Sound cannot be heard during slow-motion playback.

Zooming in

- During playback or while paused



1 Press **ZOOM**, with **SHIFT** pressed.

Each time you repeat the procedure, the scene magnification changes.

2 While zoomed in, press Cursor **>/</▼/▲** to move zoom-in area.

To return to normal playback

Press **ZOOM** repeatedly, with **SHIFT** pressed to select OFF.

NOTE

- The number of the magnification steps varies depending on the disc type.
- During slide-show playback of JPEG, zooming in is not available. In such a case, press **II** to pause slide-show playback, then zoom in.
- During JPEG playback, there may be a case where Cursor (**>/</▼/▲**) does not work in step 2.

Changing the VFP setting

The VFP (Video Fine Processor) function enables you to adjust the picture character according to the type of programming, picture tone or personal preference.



- During playback

1 Press **VFP**.

The current VFP settings appear on the TV screen.

Example:

NORMAL	
GAMMA	0
BRIGHTNESS	0
CONTRAST	0
SATURATION	0
TINT	0
SHARPNESS	0

2 Press Cursor **>/<** repeatedly to select the VFP mode.

- NORMAL: Normally select this.

- CINEMA: Suitable for movies.

When you select "NORMAL" or "CINEMA", press VFP to complete the setting.

- USER 1 and USER 2:

You can adjust parameters that affect picture appearance.

Only when selecting "USER 1" or "USER 2" in step 2, proceed to perform the following operation;

3 Press Cursor **▼/▲** repeatedly to select a parameter you want to adjust.

Adjust gradually and confirm picture appearance results are as preferred.

- GAMMA:

Controls brightness of neutral tints while maintaining brightness of dark and bright portions.

- BRIGHTNESS:

Controls screen brightness.

- CONTRAST:

Controls screen contrast.

- SATURATION:

Controls screen color depth.

- TINT:

Controls screen tint.

- SHARPNESS:

Controls screen sharpness.

4 Press ENTER.

Example:

**5 Press Cursor ▼/▲ to change the setting.****6 Press ENTER.**


The current VFP settings appear again.

7 Repeat steps 3 to 6 to adjust other parameters.**8 Press VFP.****NOTE**

- Although the setting display disappears in the middle of the procedure, the setting at that time will be stored.

Program playback

- While stopped

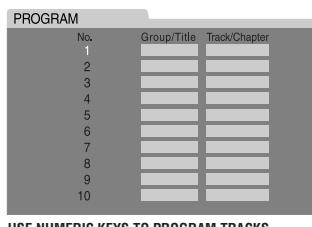**1 Press PLAY MODE repeatedly until program window appears on the TV screen.****2 Follow the instructions that appear on the TV screen to program the desired chapters/tracks.**

- For details on using the number buttons, see "How to use the number buttons". (See page 16.)
- The content's numbers that you have to specify for programming varies depending on the disc type:
 - DVD VIDEO: Titles and chapters
 - VCD, SVCD, CD: Tracks
 - MP3: Groups and tracks
- You can specify the chapters/tracks whose number is up to 99.
- (For CD, SVCD or VCD) When the total playback time exceeds 99 minutes 59 seconds, ":-:" will appear on the display window. But, it is possible to continue programming.

To clear the programs one by one from the last entered number

Press CANCEL repeatedly.

To clear all programs

Press ■.

You can also clear the program by turning off the system.

3 Press DVD/CD▶ to start Program Playback.

If all of the programmed tracks/files have been played back, playback stops and the program window appears again. Note that program setting remains.

To check the program contents

During playback, press ■. Playback stops and the program window appears.

To quit the Program mode

While stopped, press PLAY MODE repeatedly until both program window and "RANDOM" disappears from the TV screen.

NOTE

- The Resume function cannot be used with Program Playback.
- Program Playback may not work for some discs.

Random playback

You can play titles or tracks on a disc in random order.

- While stopped

**1 Press PLAY MODE repeatedly until "RANDOM" appears on the TV screen.****2 Press ▶ (play button).**

After playing all titles/tracks on the disc, the system stops playback and quits the Random mode.

To quit the Random mode

While stopped, press PLAY MODE repeatedly until both program window and "RANDOM" disappear from the TV screen.

You can also clear the Random mode by turning off the system.

NOTE

- The same title/track will not be played back more than once during Random Playback.


Repeat playback

Repeating the current selection

- For DVD VIDEO/DVD VR:
During playback


For VCD/SVCD:
During playback without PBC
function or stopped

For CD/MP3/JPEG:
During playback or stopped

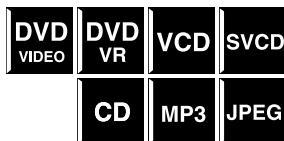

When using the REPEAT button:

Press REPEAT, with SHIFT pressed.

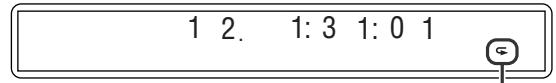

Repeat mode indicator

Each time you press REPEAT, the Repeat mode changes.

Display window	TV screen	Meanings
1	GROUP	Repeats the current group for MP3/JPEG.
	REPEAT GROUP	
	TITLE	Repeats the current title for DVD VIDEO.
	PG	Repeats the current title for Original program for DVD VR.
	PL	Repeats the current playlist for Playlist for DVD VR.
ALL	ALL	Repeats all title/tracks/files for DVD VR/VCD/SVCD/CD/MP3/JPEG.
	REPEAT ALL	
1	TRACK, STEP	Repeats the current track for VCD/SVCD/CD/MP3.
	REPEAT TRACK, REPEAT STEP	
	CHAP, STEP	Repeats the current chapter for DVD VIDEO/DVD VR.
No indication	OFF	Repeat mode is off. The system plays back the disc normally.

NOTE

- For DVD VIDEO, REPEAT ALL may not be available depending on the disc.

When using the on-screen bar (except for MP3/JPEG):

- 1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

- 2 Press Cursor ▶/◀ to highlight OFF.

- 3 Press ENTER.



- 4 Press Cursor ▼/▲ repeatedly to select the Repeat mode.

- 5 Press ENTER.

- 6 Press ON SCREEN.

The on-screen bar disappears.

To cancel Repeat Playback

Select "OFF" in step 4.

Repeating a desired part [A-B Repeat]

You can repeat playback of a desired part by specifying the beginning (point A) and ending (point B).



- During playback

When using the A-B RPT button:

- 1 Press A-B RPT, with SHIFT pressed at the beginning of the part you want to repeat (point A).

The repeat mode indicator “A – ” appears on the display window.

- 2 Press A-B RPT again, with SHIFT pressed at the end of the part you want to repeat (point B).

The repeat mode indicator on the display window changes to “A – B” and A-B Repeat Playback starts. The selected part of the disc (between point A and B) is played repeatedly.



To cancel

Press A-B RPT, with SHIFT pressed during A-B Repeat Playback.

When using the on-screen bar:**1 Press ON SCREEN twice.**

The on-screen bar appears on the TV screen.

2 Press Cursor ▶/◀ to highlight OFF .**3 Press ENTER.****4 Press Cursor ▼/▲ repeatedly to select "A-B".****5 Press ENTER at the beginning of the part you want to repeat (point A).****6 Press ENTER at the end of the part you want to repeat (point B).**

A-B Repeat Playback starts.

7 Press ON SCREEN.

The on-screen bar disappears.

To cancel

Select "OFF" in step 4, then press ENTER.

NOTE


- When playing back a DVD VIDEO, A-B Repeat Playback is possible only within the same title.
- "A-B" cannot be selected during Program and Random Playback.
- "A-B" cannot be selected during playback with PBC function.

Tray lock

You can lock the tray and prohibit the unwanted disc ejection.

On the center unit ONLY:

While the system is on standby mode, press with pressed and held.

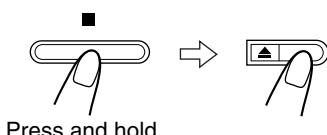

Press and hold

- The system turns on and "LOCKED" appears on the display window.
- If you try to eject the disc, "LOCKED" appears to indicate that the tray is locked.

To cancel

Carry out the same operation again.

- The system turns on and "UNLOCKED" appears on the display window.

Balance setting

You can adjust the balance between the front left and front right speakers.

NOTE

- This function also takes effect for the sources other than DVD.
- Before you start operation; There is a time limit when doing the following steps. If the setting is cancelled before you finish, start from step 1 again.

1 Press SETTING, with SHIFT pressed.

Example:

BAL CTR

2 Press Cursor ▶/◀ to make an adjustment or selection.

Example:

BAL R - 5


The adjustment display automatically disappears a few seconds later with the current setting.

Setting DVD preferences

Using the setup menus


- You can change the language used in the setup menus. See "Menu description".

Basic operation on the setup menus

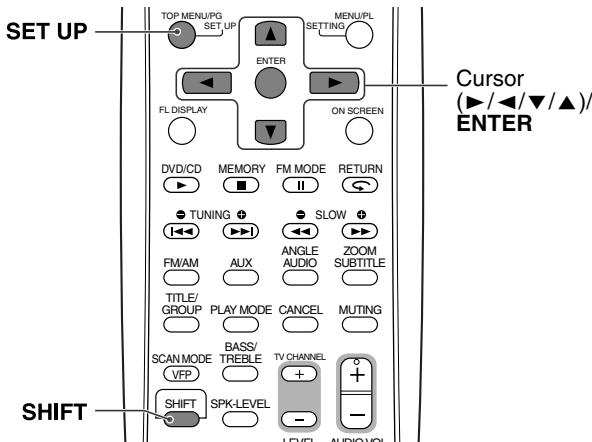

■ While stopped

1 Press SET UP, with SHIFT pressed.

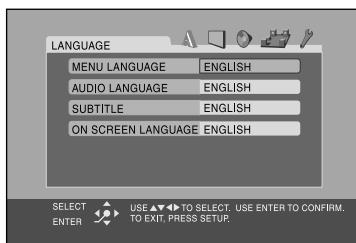

2 Follow the instructions that appear on the TV screen.

Menu description

A : Language menu (LANGUAGE)

■ MENU LANGUAGE

- Some DVDs have their own menus in multiple languages.
• Select the initial menu language*.

■ AUDIO LANGUAGE

- Some DVDs have multiple audio languages.
• Select the initial audio language*.

■ SUBTITLE

- Some DVDs have multiple subtitle languages.
• Select the initial subtitle language*.

■ ON SCREEN LANGUAGE

- Select the language shown on the TV screen when operating this system.

* When the language you have selected is not recorded to a disc, the original language is automatically used as the initial language.

NOTE

- See the following "The language codes list" for the code of each language, such as "AA", etc.

The language codes list

AA	Afar	IK	Inupiak	RN	Kirundi
AB	Abkhazian	IN	Indonesian	RO	Rumanian
AF	Afrikaans	IS	Icelandic	RU	Russian
AM	Ameharic	IW	Hebrew	RW	Kinyarwanda
AR	Arabic	JI	Yiddish	SA	Sanskrit
AS	Assamese	JW	Javanese	SD	Sindhi
AY	Aymara	KA	Georgian	SG	Sangho
AZ	Azerbaijani	KK	Kazakh	SH	Serbo-Croatian
BA	Bashkir	KL	Greenlandic	SI	Singhalese
BE	Byelorussian	KM	Cambodian	SK	Slovak
BG	Bulgarian	KN	Kannada	SL	Slovenian
BH	Bihari	KO	Korean (KOR)	SM	Samoan
BI	Bislama	KS	Kashmiri	SN	Shona
BN	Bengali, Bangla	KU	Kurdish	SO	Somali
BO	Tibetan	KY	Kirghiz	SQ	Albanian
BR	Breton	LA	Latin	SR	Serbian
CA	Catalan	LN	Lingala	SS	Siswati
CO	Corsican	LO	Laothian	ST	Sesotho
CS	Czech	LT	Lithuanian	SU	Sundanese
CY	Welsh	LV	Latvian, Lettish	SV	Swedish
DA	Danish	MG	Malagasy	SW	Swahili
DZ	Bhutani	MI	Maori	TA	Tamil
EL	Greek	MK	Macedonian	TE	Telugu
EO	Esperanto	ML	Malayalam	TG	Tajik
ET	Estonian	MN	Mongolian	TH	Thai
EU	Basque	MO	Moldavian	TI	Tigrinya
FA	Persian	MR	Marathi	TK	Turkmen
FI	Finnish	MS	Malay (MAY)	TL	Tagalog
FJ	Fiji	MT	Maltese	TN	Setswana
FO	Faroese	MY	Burmese	TO	Tonga
FY	Frisian	NA	Nauru	TR	Turkish
GA	Irish	NE	Nepali	TS	Tsonga
GD	Scots Gaelic	NL	Dutch	TT	Tatar
GL	Galician	NO	Norwegian	TW	Twi
GN	Guarani	OC	Occitan	UK	Ukrainian
GU	Gujarati	OM	(Afan) Oromo	UR	Urdu
HA	Hausa	OR	Oriya	UZ	Uzbek
HI	Hindi	PA	Punjabi	VI	Vietnamese
HR	Croatian	PL	Polish	VO	Volapuk
HU	Hungarian	PS	Pashto, Pushto	WO	Wolof
HY	Armenian	PT	Portuguese	XH	Xhosa
IA	Interlingua	QU	Quechua	YO	Yoruba
IE	Interlingue	RM	Rhaeto-Romance	ZU	Zulu

Setting DVD preferences

: Picture menu (PICTURE)

■ MONITOR TYPE

You can select the monitor type to match your TV when you play DVDs recorded in the picture's height/width ratio of 16:9.

- **16:9 (Wide television conversion)**

Select this when the aspect ratio of your TV is 16:9 (wide TV).

- **4:3 LB (Letter Box conversion)**

Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

- **4:3 PS (Pan Scan conversion)**

Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars do not appear, however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9



Ex.: 4:3 LB



Ex.: 4:3 PS

NOTE

- Even if "4:3 PS" is selected, the screen size may become "4:3 LB" with some DVDs. This depends on how DVDs are recorded.

■ PICTURE SOURCE

You can obtain optimal picture quality by selecting whether the content on the disc is processed by field (video source) or by frame (film source).

Normally set to "AUTO".

- **AUTO**

Used to play a disc containing both video and film source materials.

This system recognizes the source type (video or film) of the current disc according to the disc information.

- If the playback picture is unclear or noisy, or the oblique lines of the picture are rough, try to change to other modes.

- **FILM**

Suitable for playing back a film source disc.

- **VIDEO**

Suitable for playing back a video source disc.

■ SCREEN SAVER (See page 16.)

You can activate or deactivate Screen Saver function.

■ FILE TYPE

When several types of files are recorded on a disc, you can select which files to play.

- **AUDIO**

Select this to play MP3 files.

- **STILL PICTURE**

Select this to play JPEG files.

: Audio menu (AUDIO)

■ D. RANGE COMPRESSION

(Dynamic range compression)

You can enjoy low level recorded sound clearly at night even at a low volume when listening to the sound with Dolby Digital.

- **AUTO**

Select this when you want to enjoy surround sound with its full dynamic range (no effect applied).

- **ON**

Select this when you want to fully apply the compression effect (useful at midnight).

NOTE

- When you play a multichannel Dolby Digital source with the surround mode is off, the setting of D. RANGE COMPRESSION is set to ON automatically.

Setting DVD preferences

Speaker setting menu (SPK. SETTING)

■ Level menu (LEVEL)

FRONT LEFT SPEAKER/FRONT RIGHT SPEAKER/ CENTER SPEAKER/SURROUND RIGHT SPEAKER/ SURROUND LEFT SPEAKER

While monitoring the test tone, adjust the output level of the speakers.

You can adjust the output level in the -6 dB to +6 dB range.

TEST TONE*


Outputs the test tone.

* The test tone comes out of all of the activated speakers in the following sequence:

⇒ Front left speaker ⇒ Center speaker ⇒ Front right speaker ⇒ Surround right speaker ⇒ Surround left speaker ⇒ (back to the beginning)

■ Delay menu (DELAY)

Example:

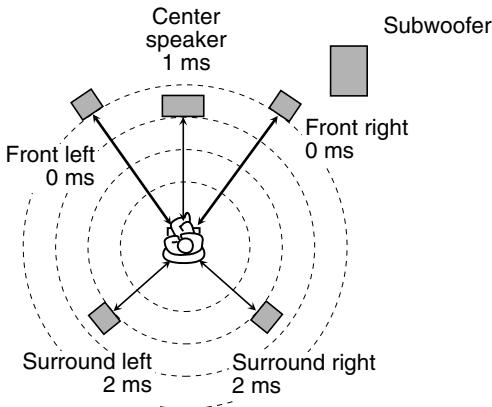

In this case, set the delay time of each speaker as follows;

- Delay time of front speakers: 0 ms
- Delay time of center speaker: 1 ms
- Delay time of surround speakers: 2 ms

FRONT LEFT SPEAKER/FRONT RIGHT SPEAKER/ CENTER SPEAKER/SURROUND RIGHT SPEAKER/ SURROUND LEFT SPEAKER

Adjust the distance from the listening position to the speakers.

Within the range from 0 ms to 15 ms. (by 1 ms)

■ Subwoofer menu (SUBWOOFER)

LEVEL

You can set the output level of the subwoofer in the -6 dB to +6 dB range.

CROSS OVER

The signals below the preset frequency level will be sent to and be reproduced by the subwoofer.

Select one of the cross over frequency levels according to the bass sound quality from the front/center/surround speakers.

Other setting menu (OTHERS)

■ RESUME (See page 23.)


You can activate or deactivate Resume Playback function.

■ ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons. (See page 14.)

Tuner operations

The buttons described below are used on pages 32 and 33.

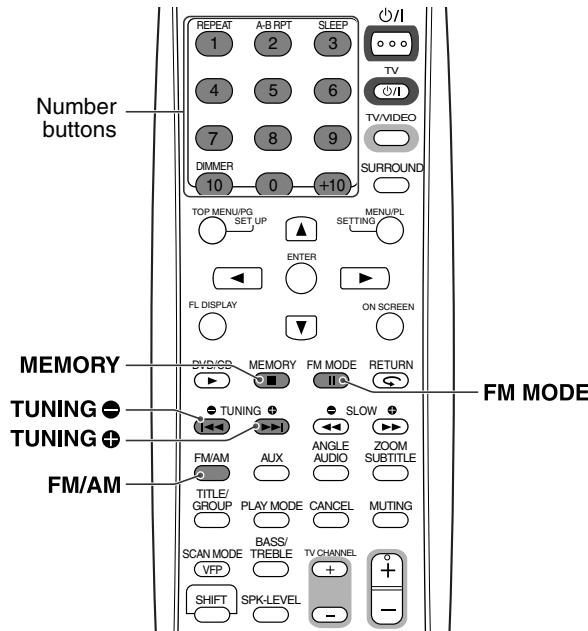


Manual tuning

- 1 Press FM/AM repeatedly to select the band.

Example:

When the system is tuned in to 810 kHz.

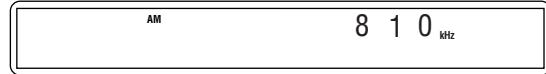

- 2 Press TUNING +/− repeatedly until you find the frequency you want.

When you hold down the button until the system starts searching for stations and then release it, the system stops searching automatically when a station of sufficient signal strength is tuned in to.

NOTE

- When an FM stereo program is received, the ST indicator lights on the display window.

Preset tuning

Once a station is assigned to a channel number, the station can be quickly tuned in. You can preset 30 FM and 15 AM stations.


■ To preset the stations

1 Tune in the station you want to preset.


- If you want to store the FM reception mode for an FM station, select the reception mode you want. See "Selecting the FM reception mode".

Example:

When the system is tuned in to 103.5 MHz.

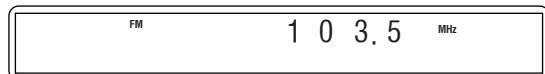

2 Press MEMORY.

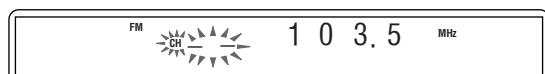


While "—" are flashing:

3 Press number button(s) (1-10, +10) to select a preset number you want.

- For details on using the number buttons, see "How to use the number buttons". (See page 16.)

Example:

When the preset channel 1 is selected.

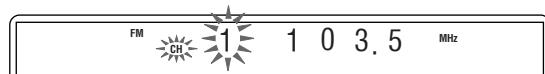

If the setting is cancelled before you finish, start from step 2 again.

While the selected number is flashing:

4 Press MEMORY.

The selected number stops flashing.

The station is assigned to the selected preset number.

If the setting is cancelled before you finish, start from step 2 again.

5 Repeat steps 1 to 4.

- Storing a new station to a used number erases the previously stored one.

■ To tune in to a preset station

1 Press FM/AM repeatedly to select FM or AM.

2 Press number button(s) (1-10, +10) to select a preset number.

- For details on using the number buttons, see "How to use the number buttons". (See page 16.)

Selecting the FM reception mode

When the stereo FM program currently tuned in is noisy, you can change the FM reception mode to improve the reception.

■ While listening to an FM station

Press FM MODE.

The FM reception mode appears on the display window. Each time you press the button, the FM reception mode changes.

• AUTO:

When a program is broadcast in stereo, you will hear stereo sound. (The ST indicator lights on the display window.) When in monaural, you will hear monaural sound. This mode is also useful to suppress static noise between stations.


• MONO:

Reception will be improved although you will lose the stereo effect. (The MONO indicator lights on the display window.) In this mode, you will hear noise until you are tuned in to a station.

Maintenance

■ Handling Discs


- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes and moisture.

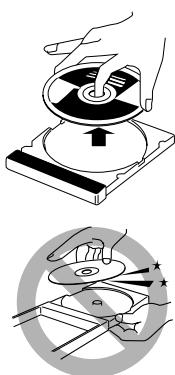

To clean the disc

Wipe the disc with a soft cloth in a straight line from center to edge.

- DO NOT use any solvent — such as conventional record cleaner, spray, thinner or benzine — to clean the disc.

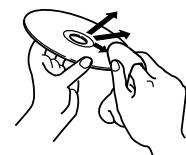

■ Cleaning the system

- Stains on the system should be wiped off with a soft cloth. If the system is heavily stained, wipe it with a cloth soaked in water diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the system may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following.
 - DO NOT wipe it with a hard cloth.
 - DO NOT wipe it strong.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substance such as insecticides to it.
 - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power does not come on.	The power cord is not connected.	Connect the power cord correctly. (See page 9.)
The remote control does not work.	The batteries are exhausted. Sunlight is falling directly on the remote sensor.	Replace the batteries. (See page 6.) Hide the remote sensor from direct sunlight.
The remote control does not work as expected.	The remote control mode is not for the desired source.	Before operation, press one of the source selecting buttons for the desired source.
No sound.	The speaker cord is not connected. An incorrect source has been selected.	Check the connection. (See page 8.) Select the correct source. (See page 12.)
No picture is displayed on the TV screen.	The video cable is not connected correctly. The disc is not playable.	Connect the cable correctly. (See page 9.) Use a playable disc. (See page 3.)
No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.	The scan mode is set to "PROGRESS" though the center unit is connected to the TV which does not support the progressive video input.	Change the scan mode to "INTER.". (See page 13.)
Video and audio are distorted.	The disc is scratched or dirty. A VCR is connected between the center unit and the TV.	Replace or clean the disc. Connect the center unit and TV directly. (See page 9.)
The picture does not fit the TV screen.	The monitor type is not set correctly.	Set "MONITOR TYPE" properly. (See page 30.)
Hard to listen to broadcast because of noise.	Antennas are disconnected.	Reconnect the antennas correctly and securely. (See page 7.)
The system suddenly turns off.	The playback level of the current source is too high.	Play back the source with lower volume level.

References

Specifications

■ Center unit (XV-THS11)

Audio section

Front/Center/Surround: 33 W per channel, RMS at 6 Ω at 1 kHz, with 10% total harmonic distortion.
Subwoofer: 40 W, RMS at 4 Ω at 100 Hz, with 10% total harmonic distortion.

Video section

Video System: NTSC
Horizontal Resolution: 500 lines
Signal-to-Noise Ratio: 64 dB
Video output level
 Composite: 1.0 V(p-p)/75 Ω
 S-video-Y: 1.0 V(p-p)/75 Ω
 S-video-C: 0.286 V(p-p)/75 Ω
 Component (Interlace/Progressive):
 Y: 1.0 V(p-p)/75 Ω
 P_B/P_R: 0.7 V(p-p)/75 Ω

Tuner section

Tuning Range
 FM: 87.5 MHz to 108.0 MHz
 AM: 530 kHz to 1 710 kHz

Speaker impedance

Front/Center/Surround: 6 Ω to 16 Ω
Subwoofer: 4 Ω to 16 Ω

General

Power Requirements: AC 120 V ∼, 60 Hz
Power Consumption: 135 W (at operation)
 1.3 W (in standby mode)
Dimensions (W × H × D): 360 mm × 65 mm × 370 mm
Mass: 5.3 kg

■ Front speakers (SP-THS11F)

Type: 1-Way Bass-Reflex Type
(Magnetically-shielded Type)
Speaker: 8.0 cm cone × 1
Power Handling Capacity: 33 W
Impedance: 6 Ω
Frequency Range: 90 Hz to 20 000 Hz
Sound Pressure Level: 84 dB/W·m
Dimensions (W × H × D): 92 mm × 101 mm × 95 mm
Mass: 0.58 kg each

■ Center speaker (SP-THS11C)

Type: 1-Way Bass-Reflex Type
(Magnetically-shielded Type)
Speaker: 8.0 cm cone × 1
Power Handling Capacity: 33 W
Impedance: 6 Ω
Frequency Range: 90 Hz to 20 000 Hz
Sound Pressure Level: 85 dB/W·m
Dimensions (W × H × D): 92 mm × 101 mm × 95 mm
Mass: 0.65 kg

■ Surround speakers (SP-THS11S)

Type: 1-Way Bass-Reflex Type
Speaker: 8.0 cm cone × 1
Power Handling Capacity: 33 W
Impedance: 6 Ω
Frequency Range: 90 Hz to 20 000 Hz
Sound Pressure Level: 82 dB/W·m
Dimensions (W × H × D): 92 mm × 101 mm × 95 mm
Mass: 0.56 kg each

■ Subwoofer (SP-WS11)

Type: 1-Way Bass-Reflex Type
Speaker: 15.0 cm cone × 1
Power Handling Capacity: 40 W
Impedance: 4 Ω
Frequency Range: 40 Hz to 1 800 Hz
Sound Pressure Level: 84 dB/W·m
Dimensions (W × H × D): 129 mm × 284 mm × 337 mm
Mass: 3.0 kg

Designs & specifications are subject to change without notice.

TH-S11

DVD DIGITAL THEATER SYSTEM

JVC



EN, FR

© 2005 Victor Company of Japan, Limited

0405TMMMDWJEM

PARTS LIST

[TH-S11]

* All printed circuit boards and its assemblies are not available as service parts.





- Contents -

Exploded view of general assembly and parts list (Block No.M1)	3- 2
DVD mechanism assembly and parts list (Block No.MJ)	3- 5
DVD loading base assembly and parts list (Block No.MN)	3- 7
Electrical parts list (Block No.01~04)	3- 9
Packing materials and accessories parts list (Block No.M3)	3-18

Exploded view of general assembly and parts list

Block No. M 1 M M

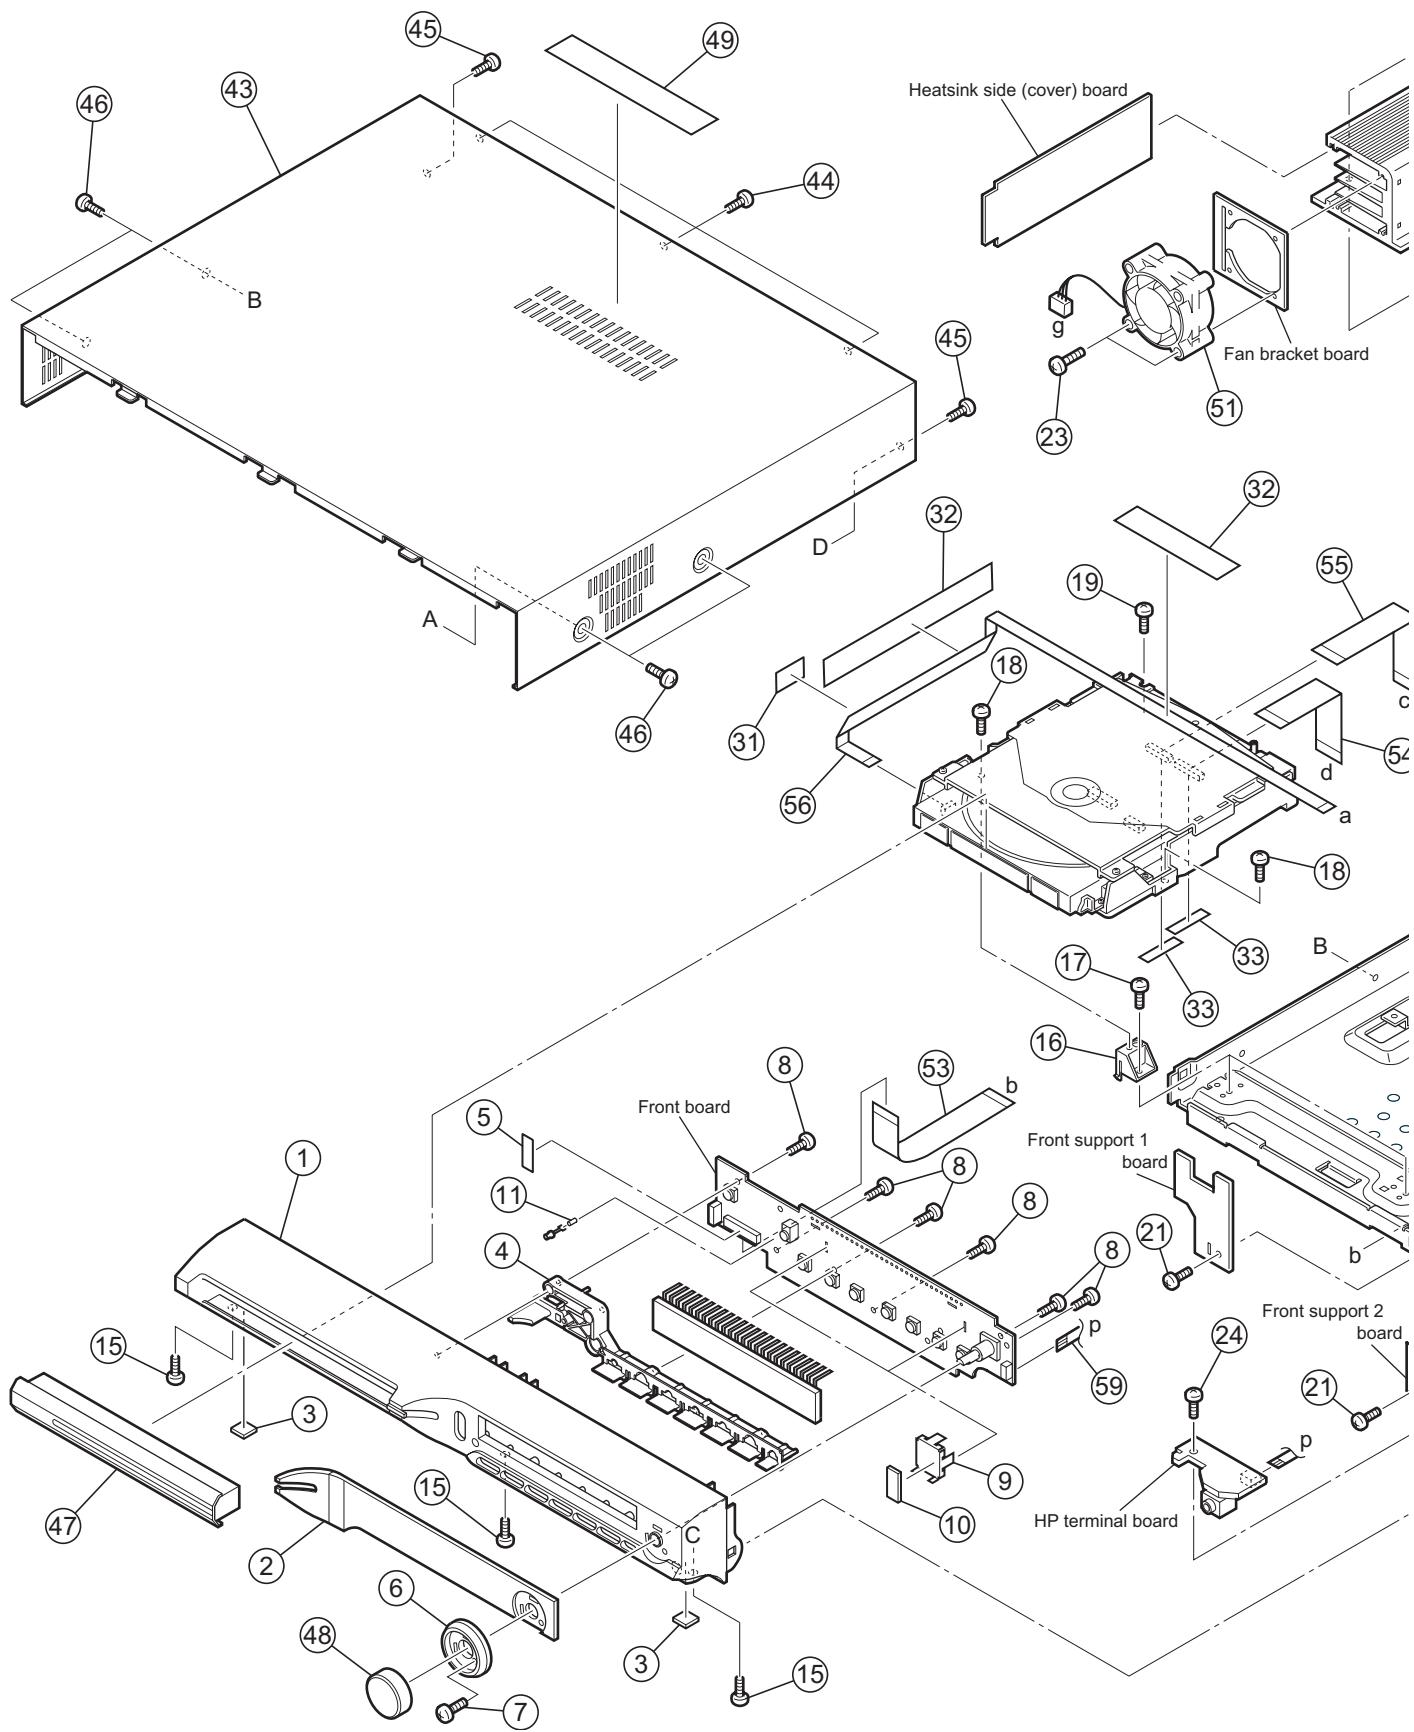

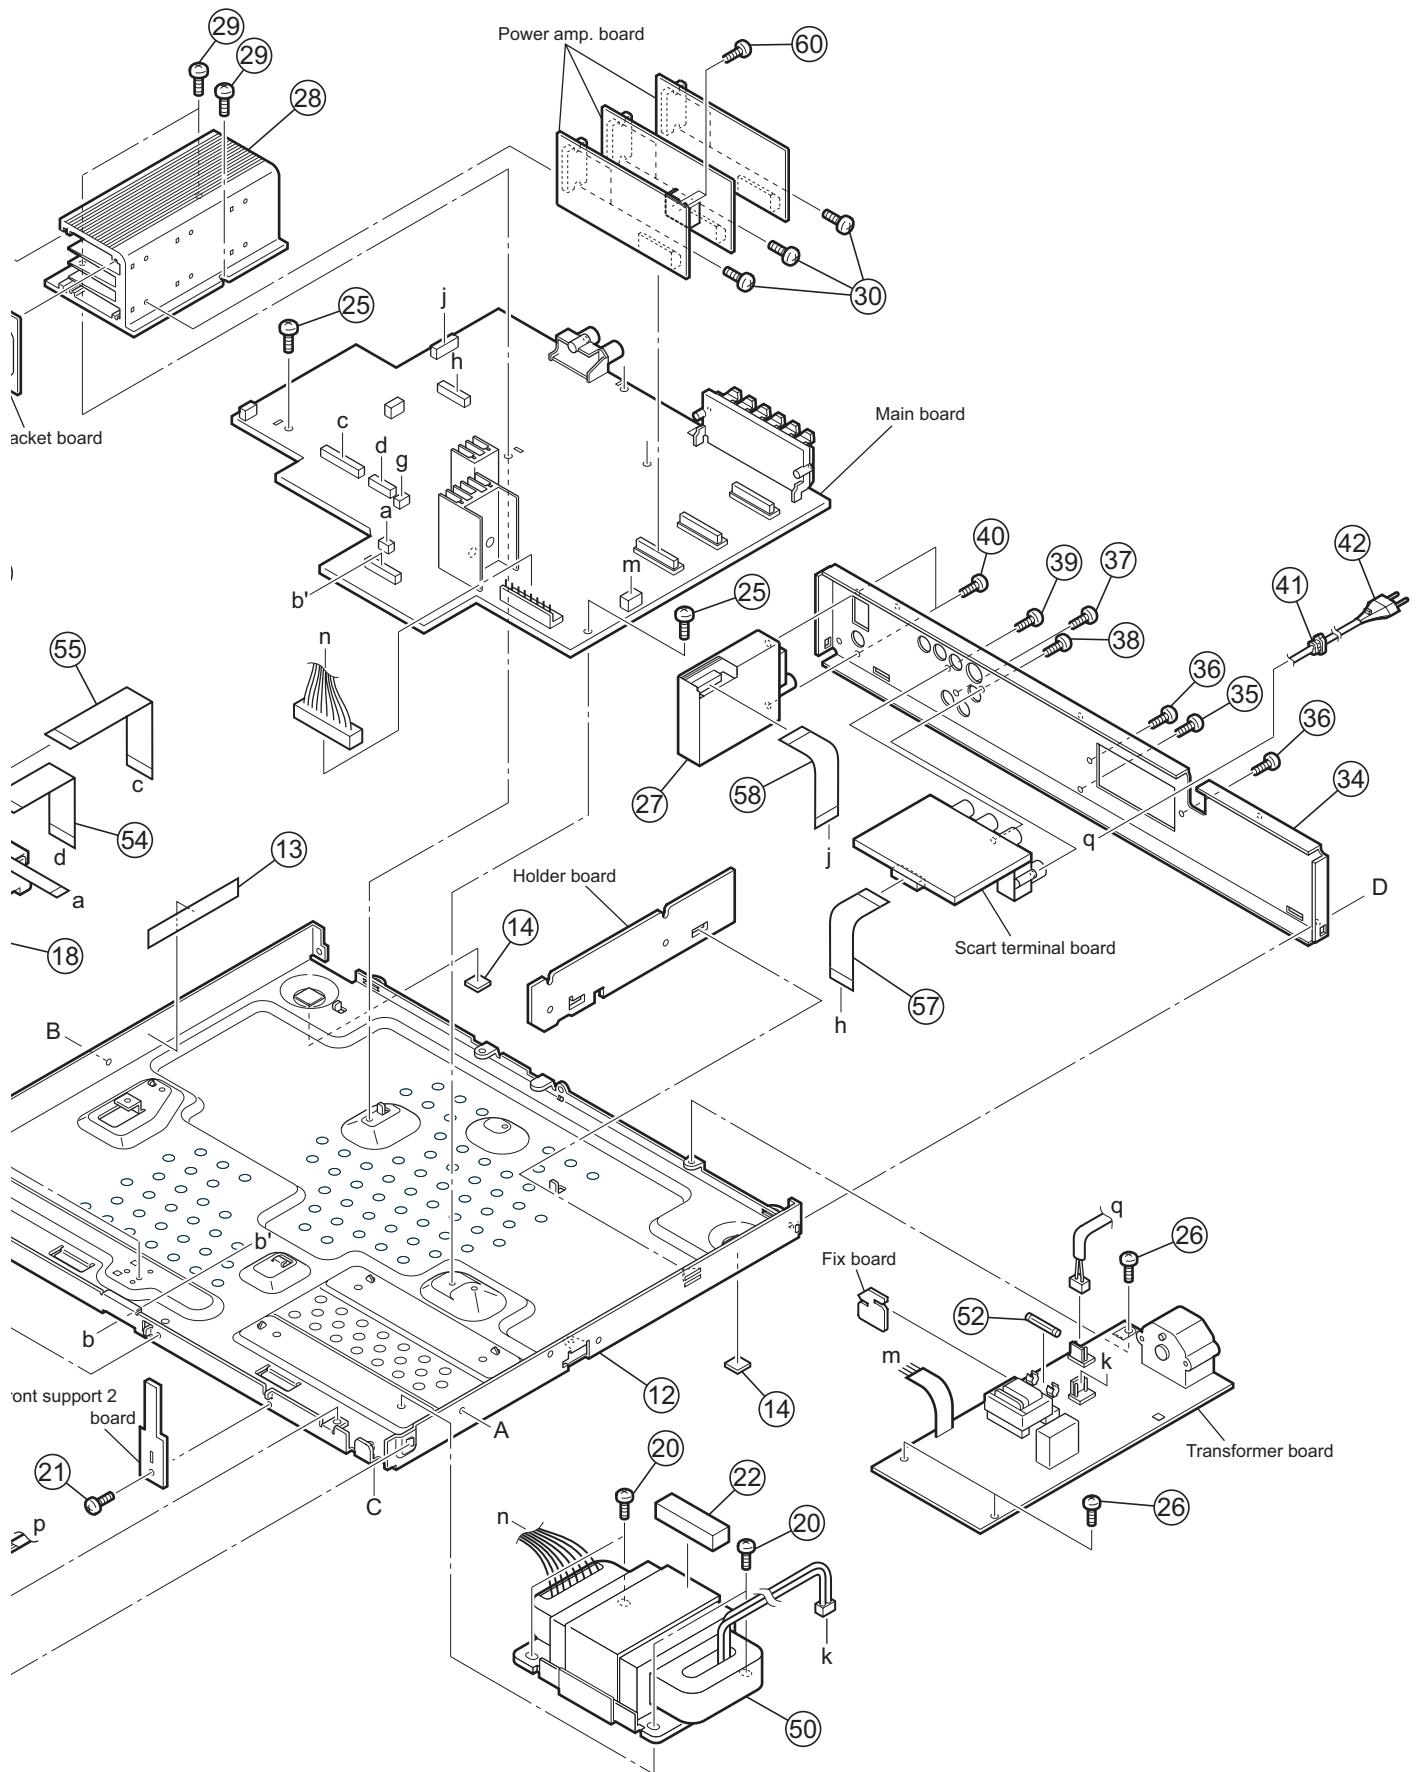

General Assembly

Block No. [M][1][M][M]


△	Symbol No.	Part No.	Part Name	Description	Local
	1	GV10166-029A	FRONT PANEL		
	2	GV30519-005A	WINDOW LENS		
	3	LV40301-001A	FELT SPACER	(x2)	
	4	GV10167-001A	CONTROL BUTTON		
	5	GV40121-005A	SPACER		
	6	GV30522-001A	VOL RING		
	7	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm	
	8	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm(x6)	
	9	LV43659-001A	FL HOLDER	(x2)	
	10	GV30349-020A	FELT SPACER	(x2)	
	11	GV40531-001A	LED HOLDER		
	12	GV10274-001A	CHASSIS BASE		
	13	LV41843-002A	LASER CAUTION		
	14	LV40301-002A	FELT SPACER	(x2)	
	15	QYSBSG3008ZA	TAP SCREW	M3 x 8mm(x3)	
	16	GV40474-001A	MECHA HOLDER F	(x2)	
	17	QYSDST3005ZA	TAP SCREW	M3 x 5mm(x2)	
	18	QYSBSF3008ZA	TAP SCREW	M3 x 8mm(x2)	
	19	QYSBSG3008EA	TAP SCREW	M3 x 8mm	
	20	QYSBKT4006ZA	TAP SCREW	M4 x 6mm(x4)	
	21	QYSDST3005ZA	TAP SCREW	M3 x 5mm(x2)	
	22	GV30349-040A	SPACER		
	23	QYSPSG3015ZA	TAP SCREW	M3 x 15mm(x2)	
	24	QYSBSGG3008EA	TAP SCREW	M3 x 8mm	
	25	QYSBKT3006ZA	TAP SCREW	M3 x 6mm(x2)	
	26	QYSBKT3006ZA	TAP SCREW	M3 x 6mm(x3)	
	27	QAU0346-002	TUNER ASSY.	TU 1	
	28	GV30724-001A	HEAT SINK		
	29	QYSBKT3008ZA	TAP SCREW	M3 x 8mm(x3)	
	30	QYSBSGG3008ZA	TAP SCREW	M3 x 8mm(x6)	
	31	LV30225-035A	SPACER		
	32	GV30349-032A	SPACER	(x2)	
	33	GV40121-005A	SPACER	(x2)	
	34	GV10275-022A	REAR PANEL		
	35	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
	36	QYSBSGY3008EA	TAP SCREW	M3 x 8mm(x2)	
	37	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
	38	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
	39	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
	40	QYSBSGY3008EA	TAP SCREW	M3 x 8mm(x2)	
△	41	QZW0033-001	STRAIN RELIEF		
△	42	QMPD380-200-JN	POWER CORD(US/CA)	2m BLACK	
	43	GV10170-007A/S/	METAL COVER		
	44	QYSBSGY3008EA	TAP SCREW	M3 x 8mm(x3)	
	45	QYSBSGY3008EA	TAP SCREW	M3 x 8mm(x2)	
	46	E406308-007	SCREW	(x4)	
	47	GV30619-001A	CD FITTING		
	48	GV30521-001A	VOLUME KNOB		
	49	E409396-003	CAUTION LABEL		
△	50	QQT0484-005	POWER TRANSF	T 901	
	51	QAR0363-001	COOLING FAN		
△	52	QMF51U1-3R0-J8	FUSE	F 950 3A AC125V	
	53	QUQH10-1917AJ-E	FFC WIRE	19pin 17cm	
	54	QUQH10-1511AJ-E	FFC WIRE	15pin 11cm	
	55	QUQH10-2511AJ-E	FFC WIRE	25pin 11cm	
	56	QUQH10-0533AJ-E	FFC WIRE	5pin 33cm	
	57	QUQH10-1809AJ-E	FFC WIRE	18pin 9cm	
	58	QUQH12-1109CJ-E	FFC WIRE	11pin 9cm	
	59	QUQH12-0408DJ-E	FFC WIRE	4pin 8cm	
	60	QYSDSG3008ZA	TAP SCREW	M3 x 8mm(x2)	

DVD mechanism assembly and parts list


Block No. M J M M

Grease
★ =JVG-31N
● =JVS-1003

FTU-MM1-21M

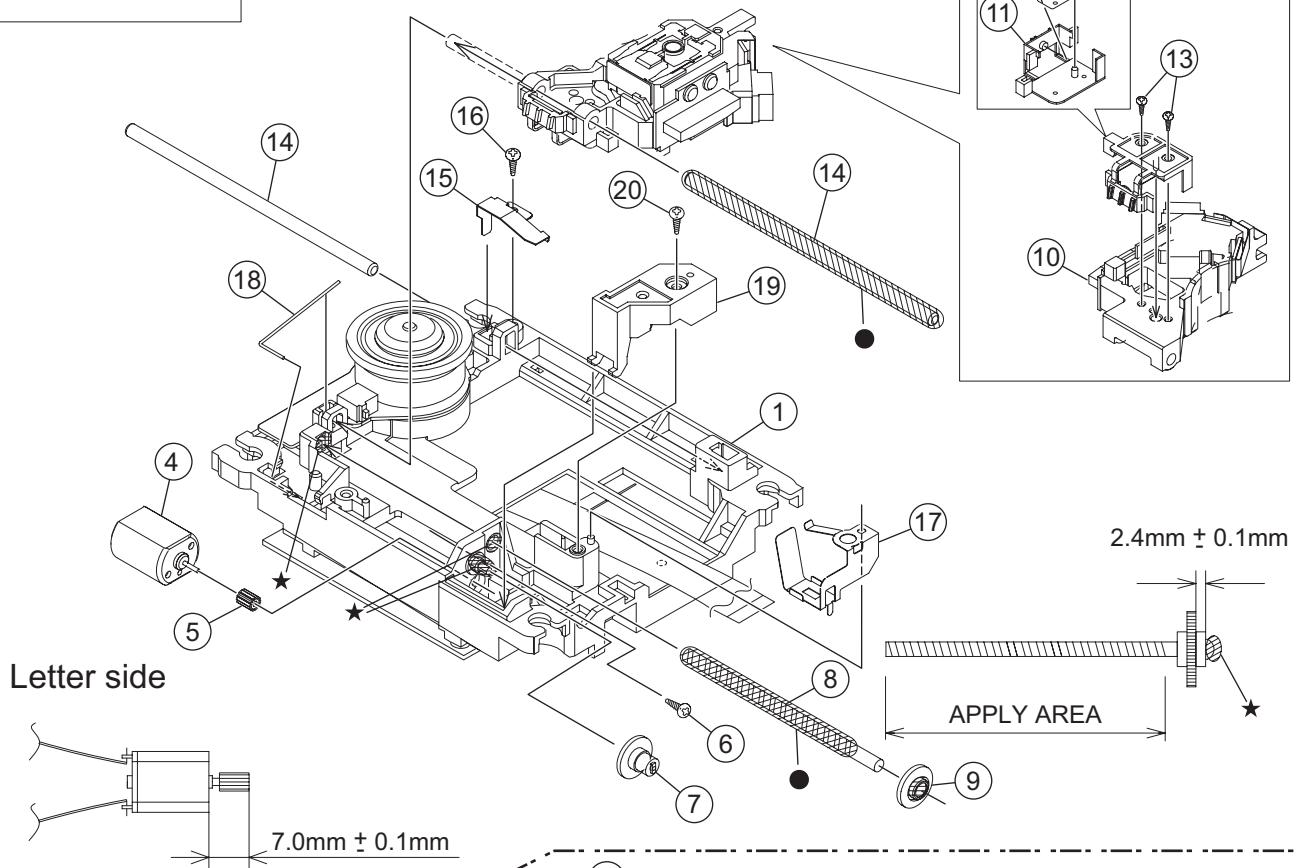

Reverse side

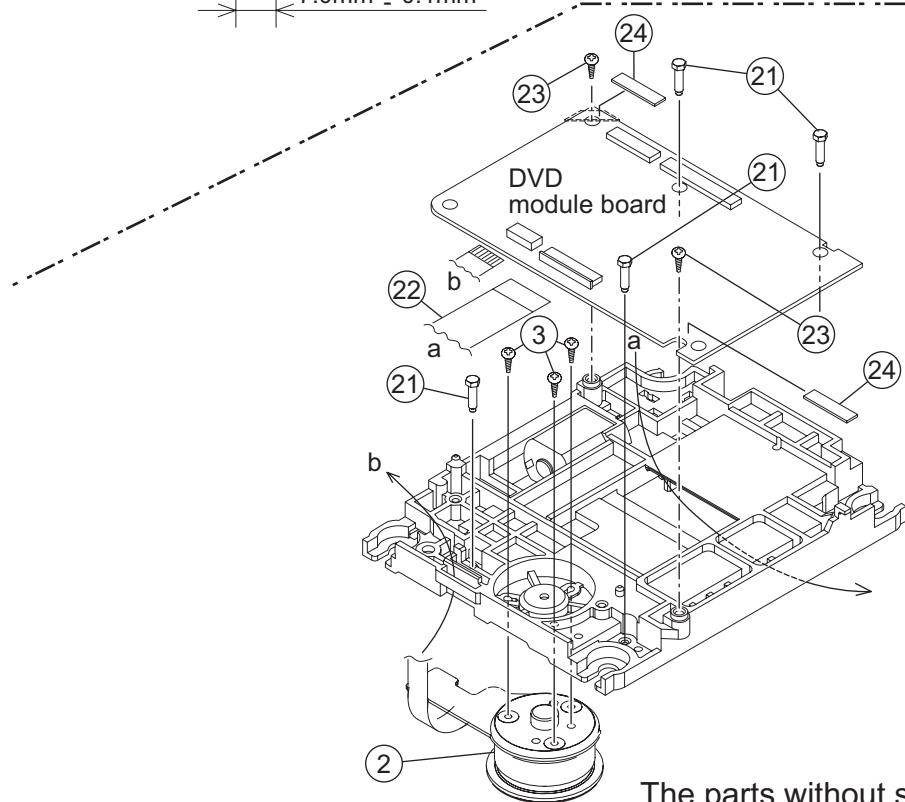

The parts without symbol number are not service.

DVD mechanism


Block No. [M][J][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
1		LV10984-001A	S.TM CHASSIS		
2		QAR0334-002	S.MOTOR		
3		QYSPSPU1740ZA	SCREW	M1.7 x 4mm(x3)	
4		QAR0144-003	MOTOR		
5		VKS5557-001	F.M. GEAR		
6		QYSPSPPT2025ZA	SCREW	M2 x 2.5mm	
7		LV35461-002A	MIDDLE GEAR		
8		LV44040-001A	SCREW SHAFT		
9		LV35462-001A	SCREW SHAFT GEA		
10		QAL0667-001	DVD PICK		
11		LV21869-001A	RACK ARM		
12		LV35463-001A	RACK ARM SPRING		
13		QYSPSFU1740ZA	TAP SCREW	M1.7 x 4mm(x2)	
14		LV44041-001A	GUIDE SHAFT	(x2)	
15		LV35464-001A	G.SHAFT ADJ.SP		
16		QYSDSF2005ZA	TAP SCREW	M2 x 5mm	
17		LV35465-001A	THRUST SPRING		
18		LV44042-001A	ROD SPRING		
19		LV35467-001A	FEED BRACKET		
20		QYSDSF2005ZA	TAP SCREW	M2 x 5mm	
21		LV44046-001A	ADJUST SCREW	(x4)	
22		LV44092-001A	PICK FFC		
23		LV44209-001A	WASHER SCREW	(x2)	
24		LV30225-0V6A	SPACER	(x2)	

DVD loading base assembly and parts list

FMU-MM1-21M

Block No. M N M M

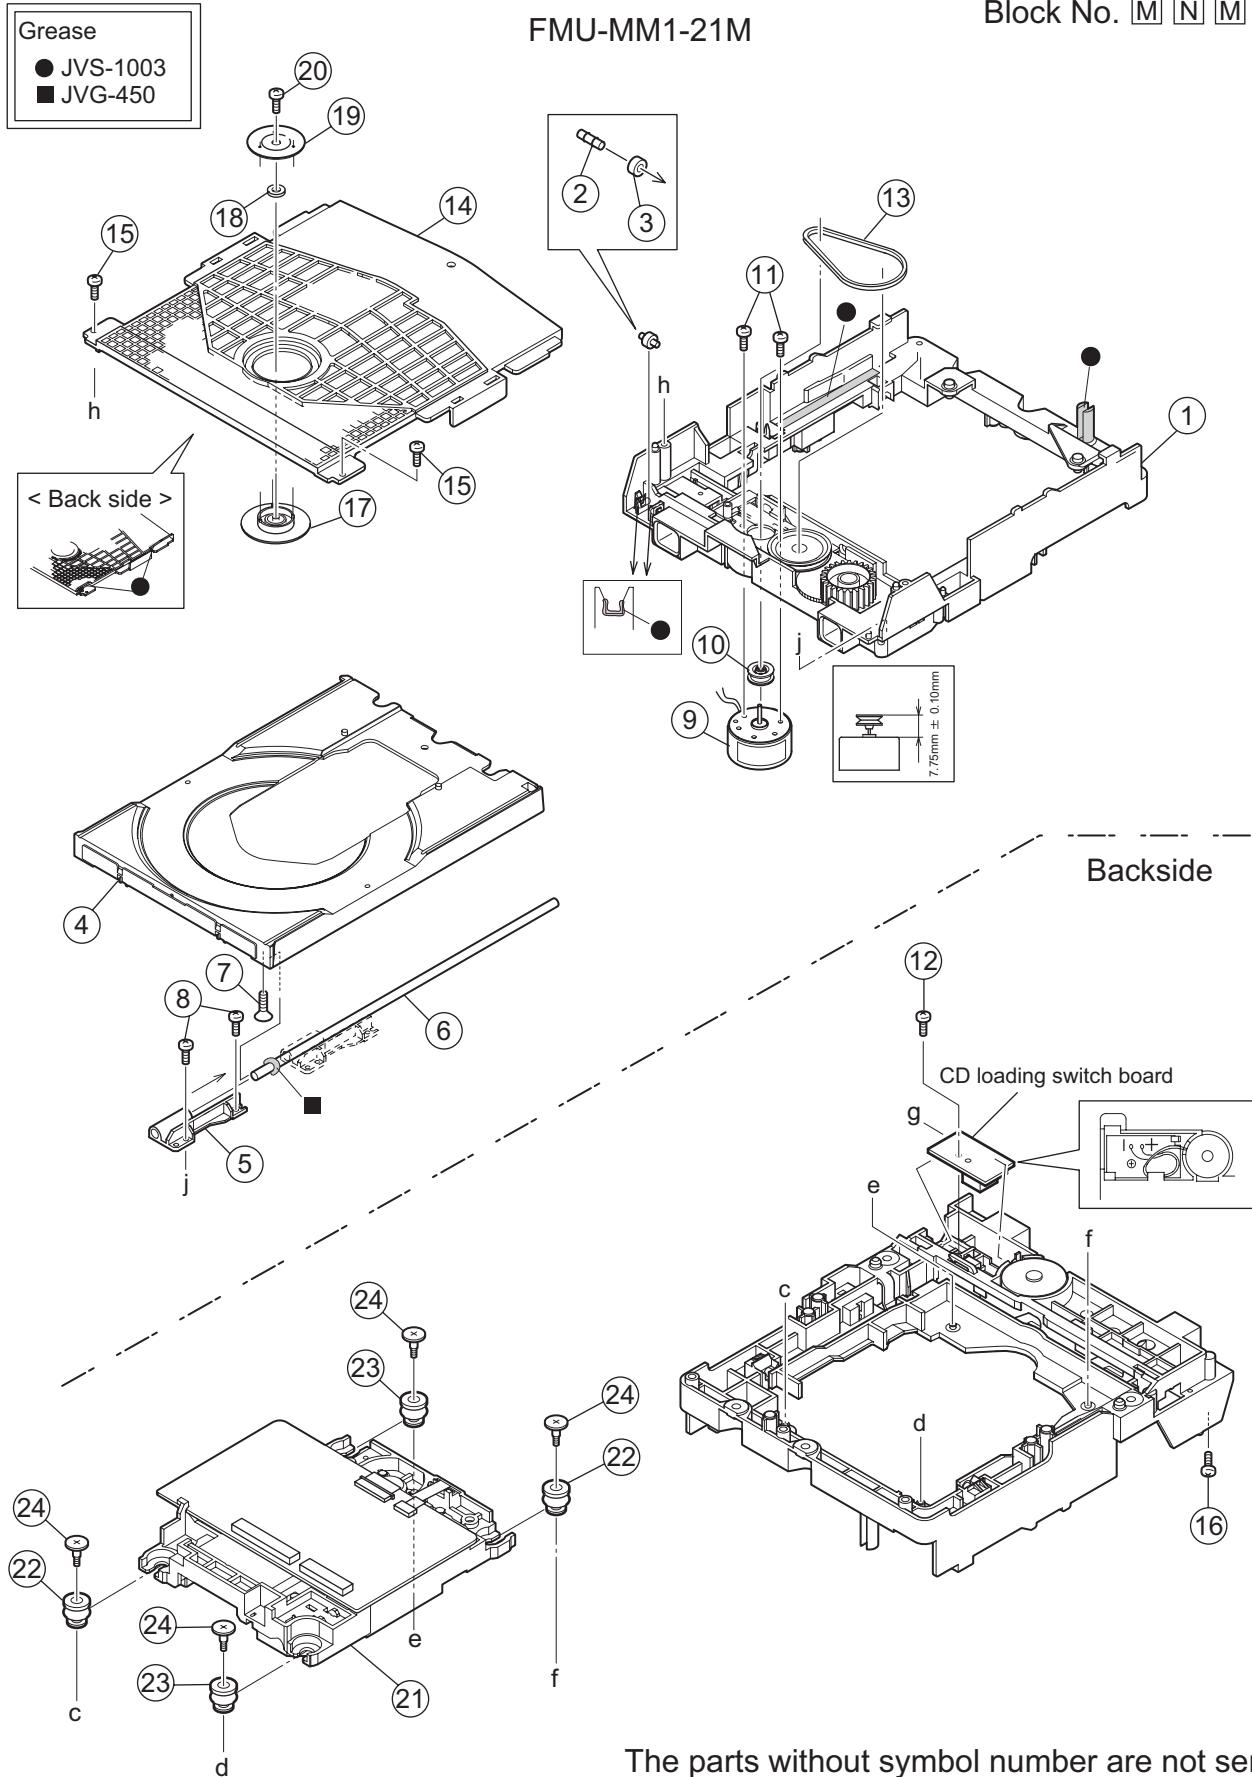

The parts without symbol number are not service.

DVD loading base

Block No. [M][N][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
1		LV11065-002A	LOADER SUB ASSY		
2		E407140-001SS	C.D ROLLER		
3		E407149-001SS	RUBBER TUBE		
4		LV10979-002A	TRAY		
5		LV35499-001A	SHAFT GUIDE		
6		LV44022-001A	SHAFT		
7		QYSSSF2008ZA	TAP SCREW	M2 x 8mm	
8		QYSDSF2008ZA	TAP SCREW	M2 x 8mm(x2)	
9		QAR0197-001	MOTOR		
10		LV43844-002A	MOTOR PULLEY		
11		QYSPSPU1730ZA	SCREW	M1.7 x 3mm(x2)	
12		QYSDSF2008ZA	TAP SCREW	M2 x 8mm	
13		LV43974-001A	BELT		
14		LV21852-003A	CLAMPER BASE		
15		QYSDSF2008ZA	TAP SCREW	M2 x 8mm(x2)	
16		LV41741-004A	SPECIAL SCREW		
17		LV35056-002A	DVD CLAMPER		
18		LV42930-003A	P.C.MAGNET		
19		LV43848-001A	YOKE		
20		LE40906-002A	SPECIAL SCREW		
21	-----		SINGLE DVD TRAM		
22		LV44043-002A	INSULATOR	(x2)	
23		LV44043-003A	INSULATOR	(x2)	
24		LV44044-001A	SPECIAL SCREW	(x4)	

DVD loading switch board

Block No. [0][4]


△ Symbol No.	Part No.	Part Name	Description	Local
CN1 S1	QGF1016F3-05 QSW1074-001	CONNECTOR DETECT SWITCH	FFC/FPC (1-5)	

< MEMO >

Packing materials and accessories parts list

Block No. M 3 M M

No additional / supplemental order of WARRANTY CARDS are available

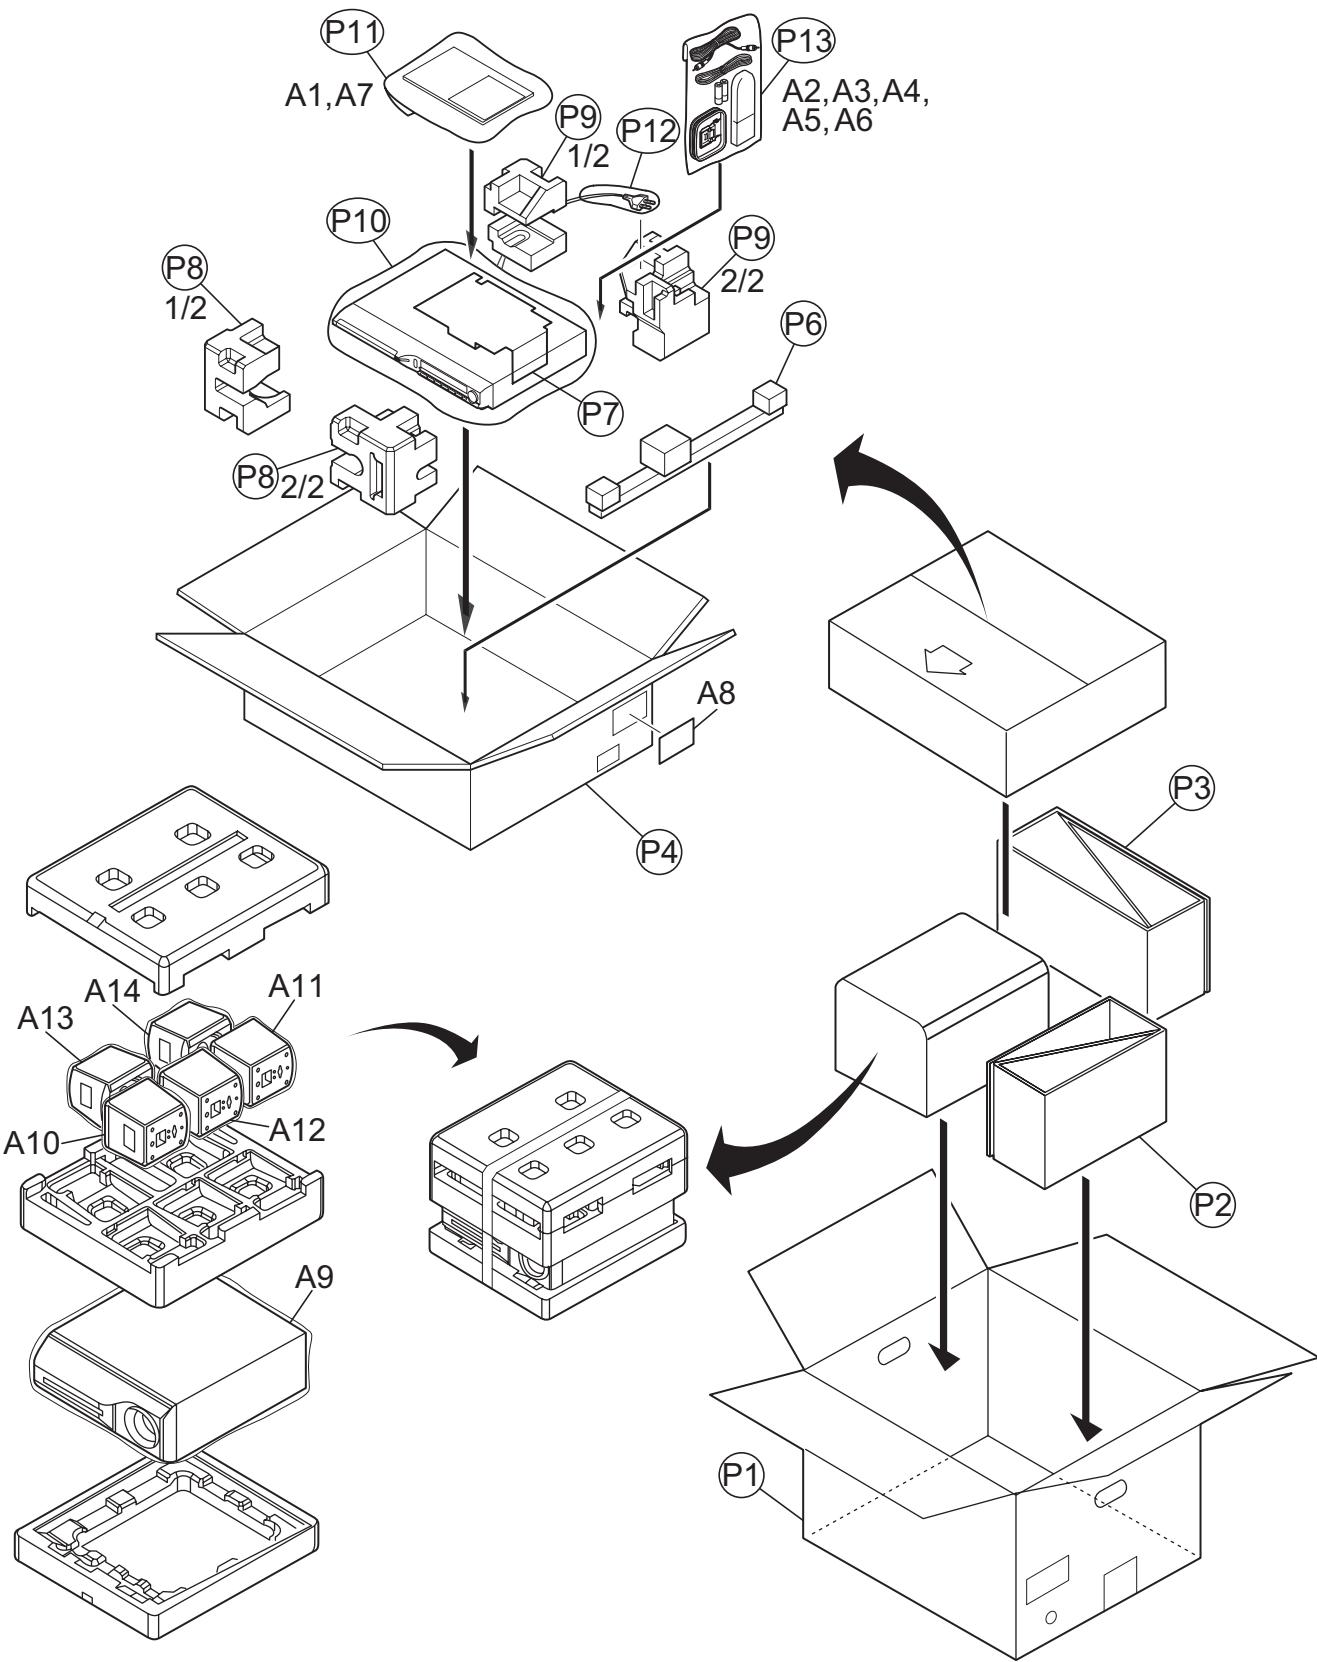

The parts without symbol number are not service.

Packing and Accessories

Block No. [M][3][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
A 1		GVT0155-014B	INST BOOK	ENG FRE	
A 2		QAL0014-001	AM LOOP ANT		
A 3		RM-STHS33J	REMOCON		
A 4		QAL0457-001	ANT.WIRE		
A 5	-----		BATTERY	(x2)	
A 6		QAM0216-001	SIGNAL CORD		
A 7	-----		WARRANTY CARD	BT-52006-2	
A 8		CL0020-001	COMPUTER LABEL		
A 9		SPWS11E-SPBOX-W	SPEAKER BOX	SUBWOOFER	
A 10		THS11E-SPBOX-FL	SPEAKER BOX	FRONT LEFT SPK	
A 11		THS11E-SPBOX-FR	SPEAKER BOX	FRONT RIGHT SPK	
A 12		THS11E-SPBOX-C	SPEAKER BOX	CENTER SPK	
A 13		THS11E-SPBOX-SL	SPEAKER BOX	SURROUND LEFT SPK	
A 14		THS11E-SPBOX-SR	SPEAKER BOX	SURROUND RIGHT SPK	
P 1		GV30727-003A	MASTER CARTON		
P 2		GV30771-002A	CARTON SPACER(A		
P 3		GV30772-002A	CARTON SPACER(B		
P 4		GV30773-003A	CARTON		
P 6		GV30791-001A	BOTTOM SPACER		
P 7		GV30787-002A	CARTON SPACER T		
P 8		GV20256-001A	FRONT CUSHION		
P 9		GV20257-001A	REAR CUSHION		
P 10		QPC05006530P	POLY BAG	50cm x 65cm	
P 11		QPA02503503P	POLY BAG	25cm x 35cm	
P 12		QPA01002503	POLY BAG	10cm x 25cm	
P 13		QPA01702503P	POLY BAG	17cm x 25cm	

JVC

SCHEMATIC DIAGRAMS


DVD DIGITAL THEATER SYSTEM

TH-S11


CD-ROM No.SML200506

Area suffix

C ----- Canada

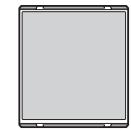


(SP-THS11C)

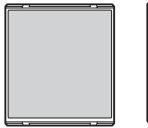


(SP-THS11F)




(SP-THS11S)

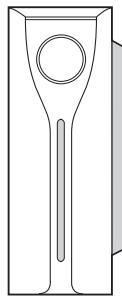

(SP-WS11)

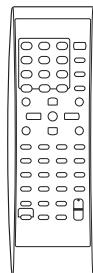

(XV-THS11)

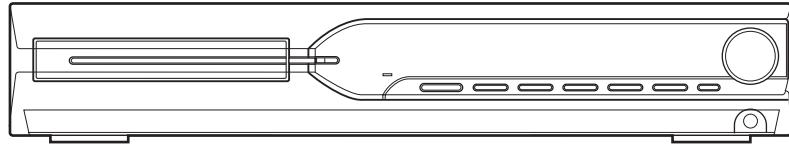

Digital Direct Progressive Scan

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)


Contents


Block diagram -----	2-1
Standard schematic diagrams -----	2-3
Printed circuit boards -----	2-21 to 25

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (■), diode (■) and ICP (●) or identified by the "Δ" mark nearby are critical for safety.

< MEMO >

Block diagram

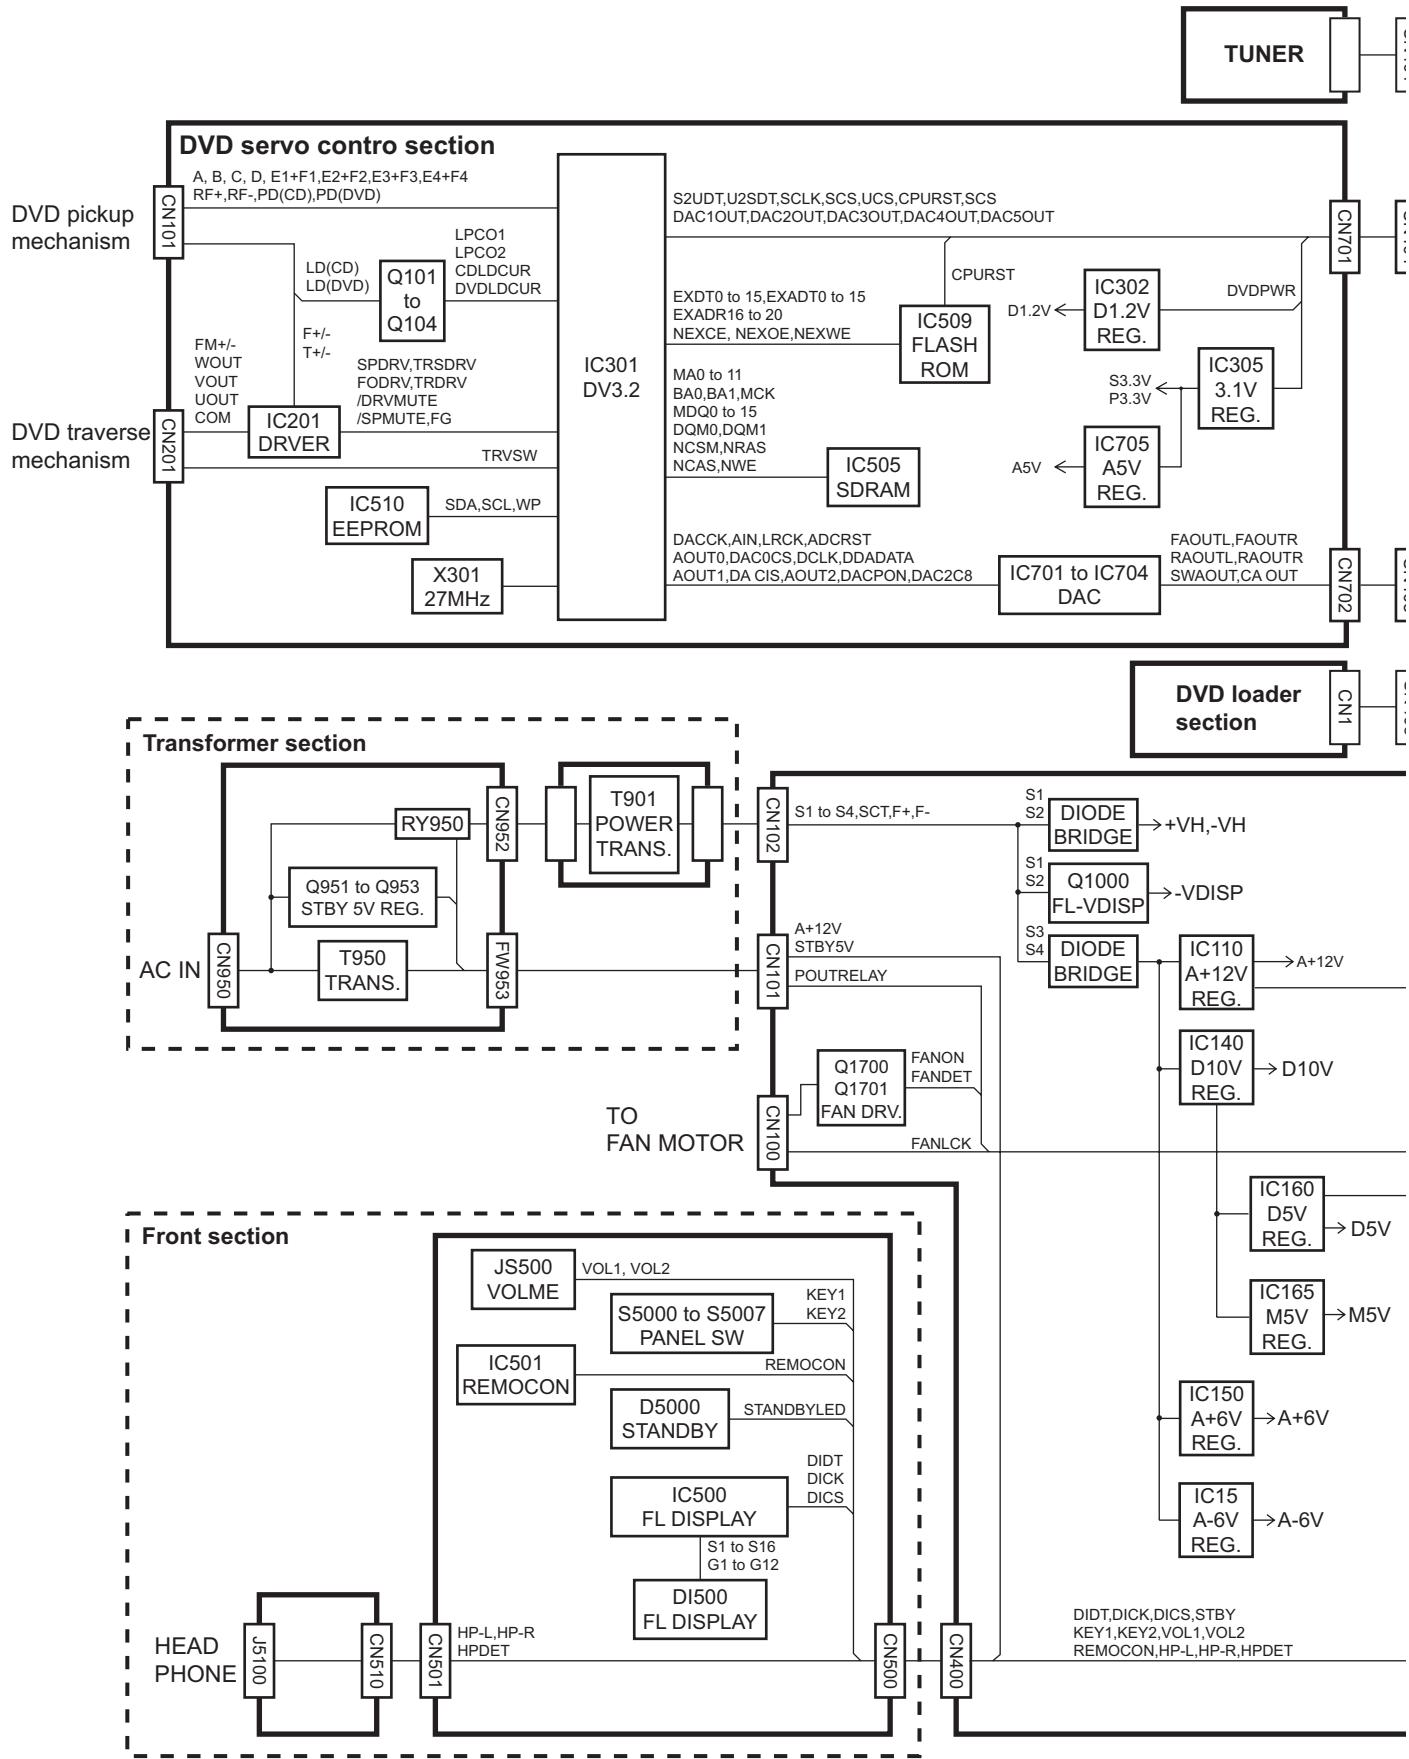

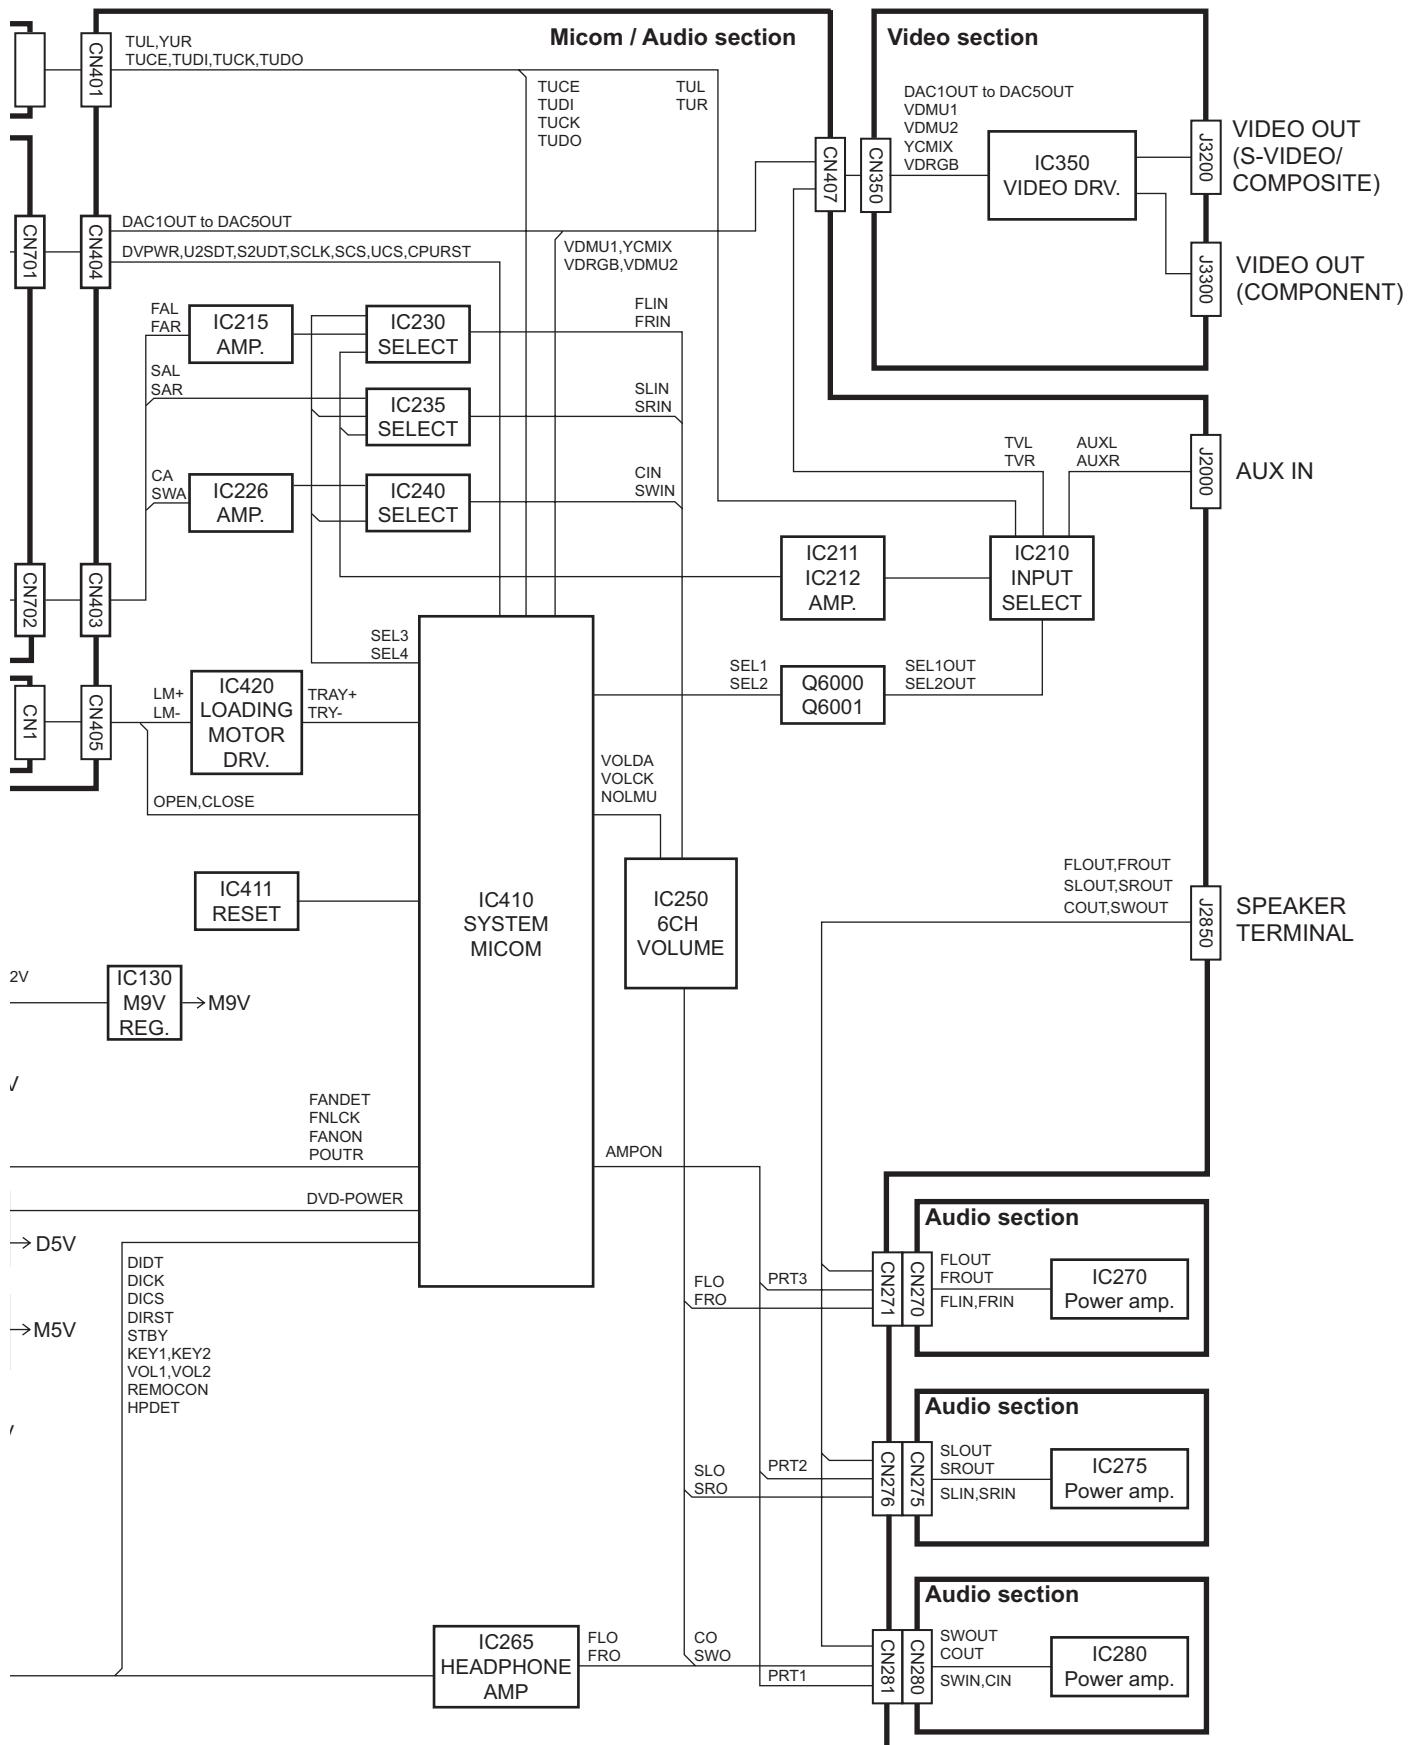


Standard schematic diagrams

■ Transformer section

POWER SUPPLY BLOC

C (CANADA)

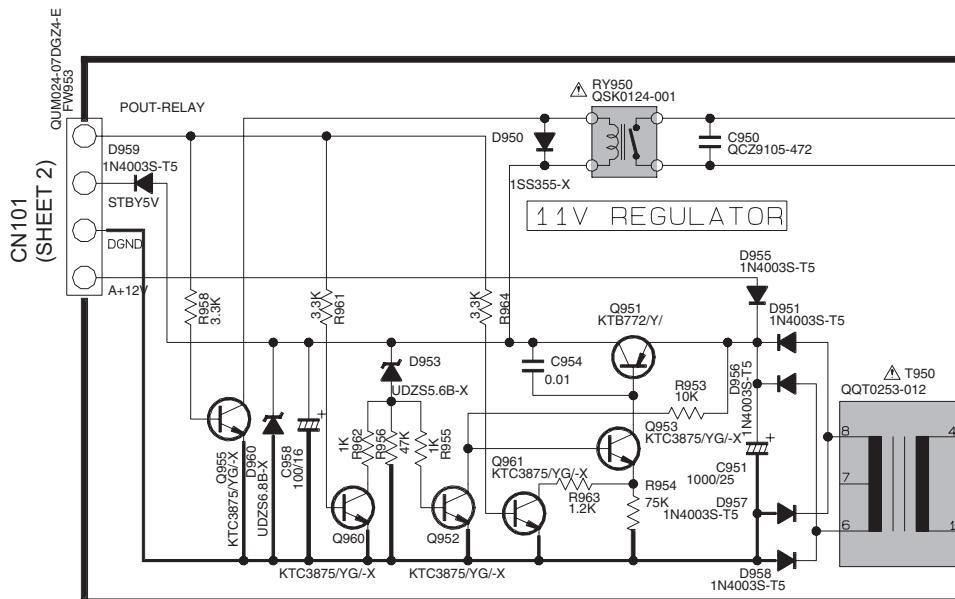

NOTES


1. VOLTAGE ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL
INSIDE BRACKET VALUES ARE OTHER FUNCTIONS
2. UNLESS OTHERWISE SPECIFIED, RESISTOR ARE 1/4W ±5% CARBON RESISTOR
ALL RESISTOR VALUES ARE IN OHM.
- ALL CAPACITOR ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
- ALL CAPACITANCE VALUES ARE IN μF ($\text{P}=\text{PF}$).
- ALL INDUCTANCE VALUES ARE IN μH ($\text{m}=\text{mH}$).
- ALL E-CAPACITOR ARE SHOWN IN THE FORM OF CAPACITANCE (μF) / RATED VOLTAGE (V).

⚠ Parts are safety assurance parts.
When replacing those parts make
sure to use the specified one.

OCK

GVA10103-A1


(120V 60HZ)

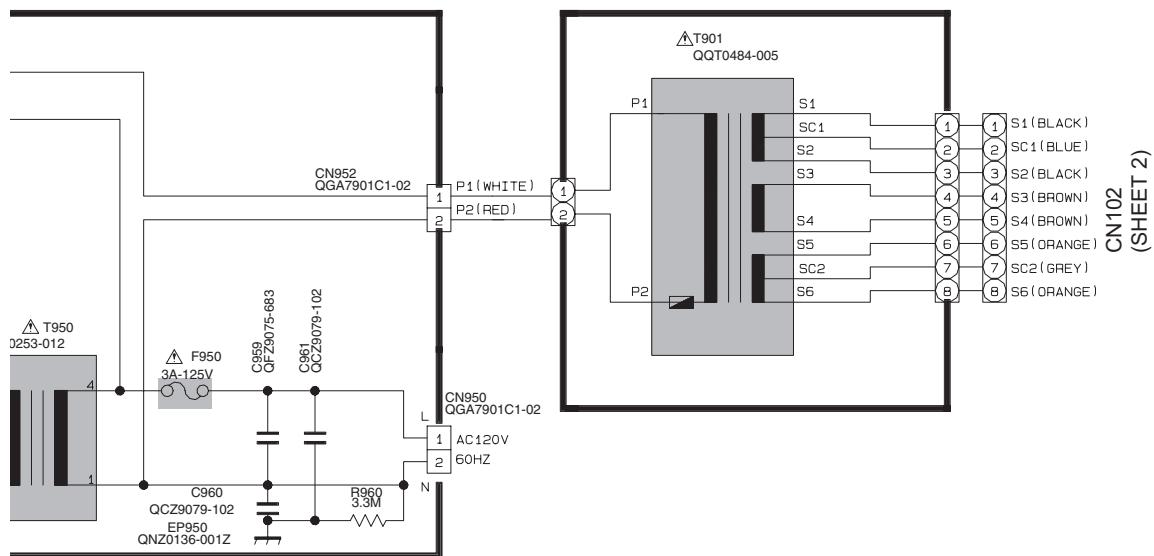

SHEET 1

■ Regulator section

TO TRANSFORMER
(SHEET 1)

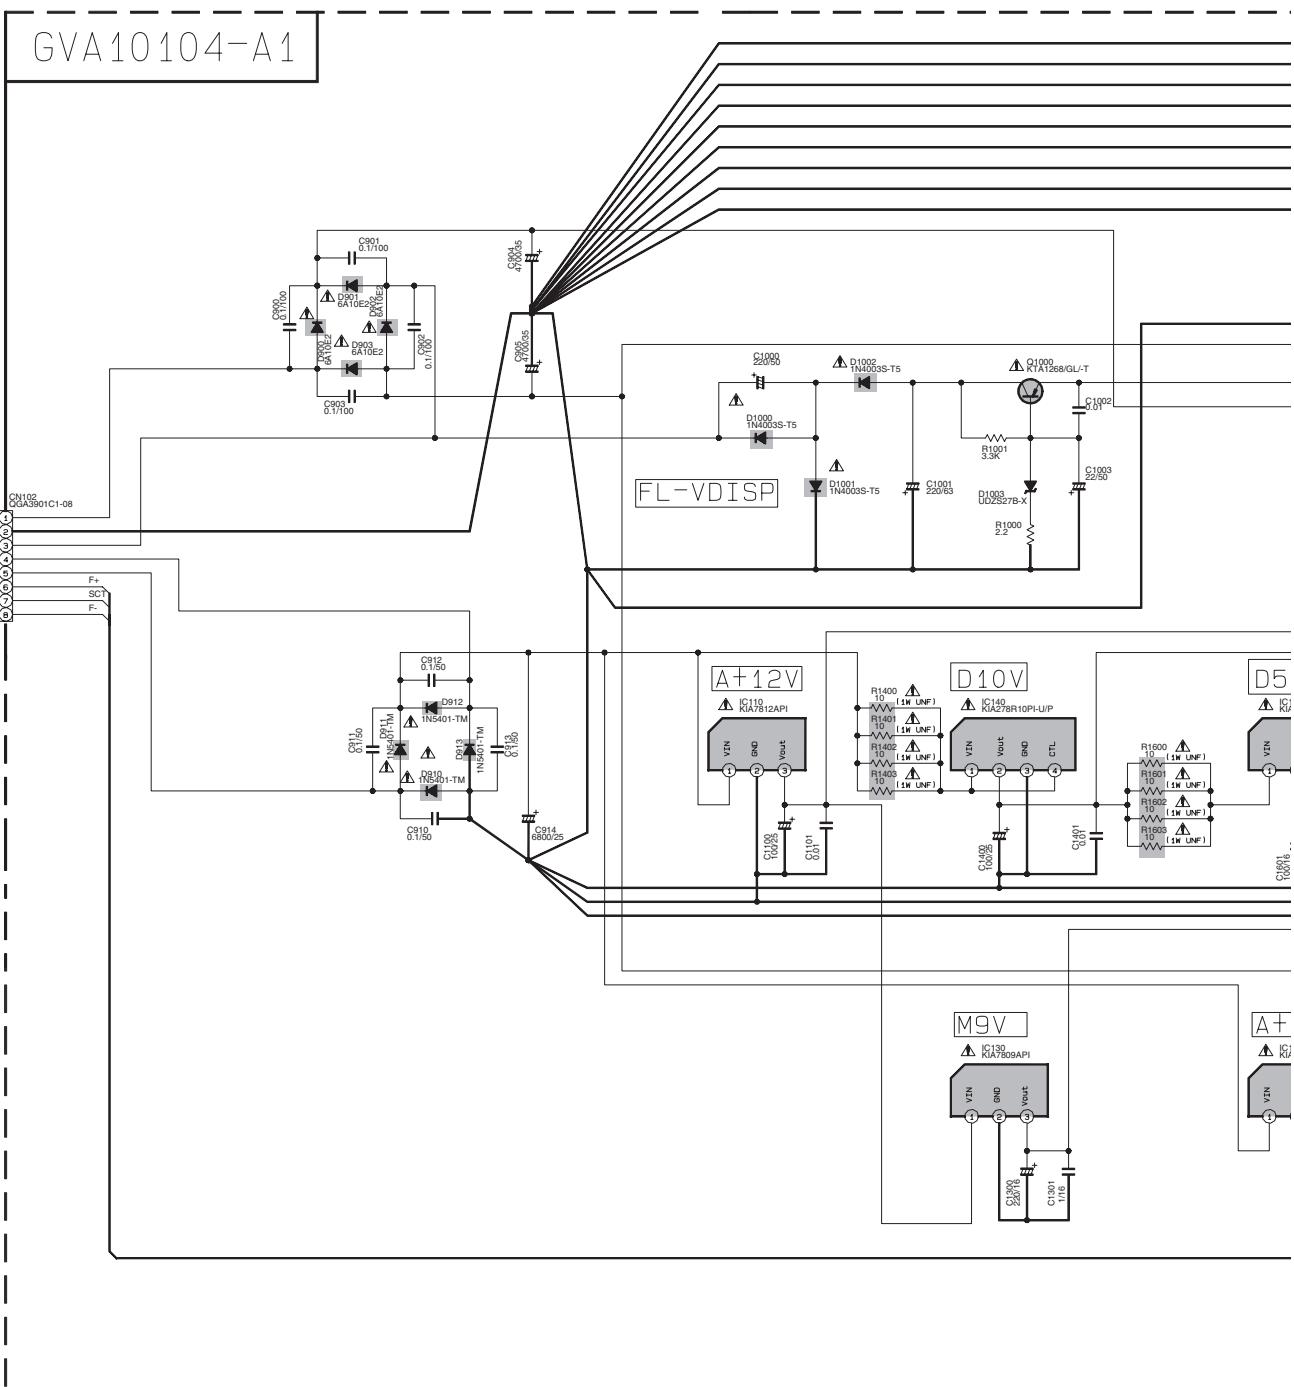


- NOTES**
1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
CONDITION --- CD STOP MODE V01.0
 2. UNLESS OTHERWISE SPECIFIED RESISTORS ARE 1/8W ±5% CARBON RESISTOR.
ALL RESISTANCE VALUES ARE IN OHM(Ω).
 3. MARK(*) AND # IS TO SHOW DEVIATION IN VERSIONS ARE EXPLAINED NEAR MARK.



⚠ Parts are safety assurance parts.
When replacing those parts make sure to use the specified one.

SHEET 2

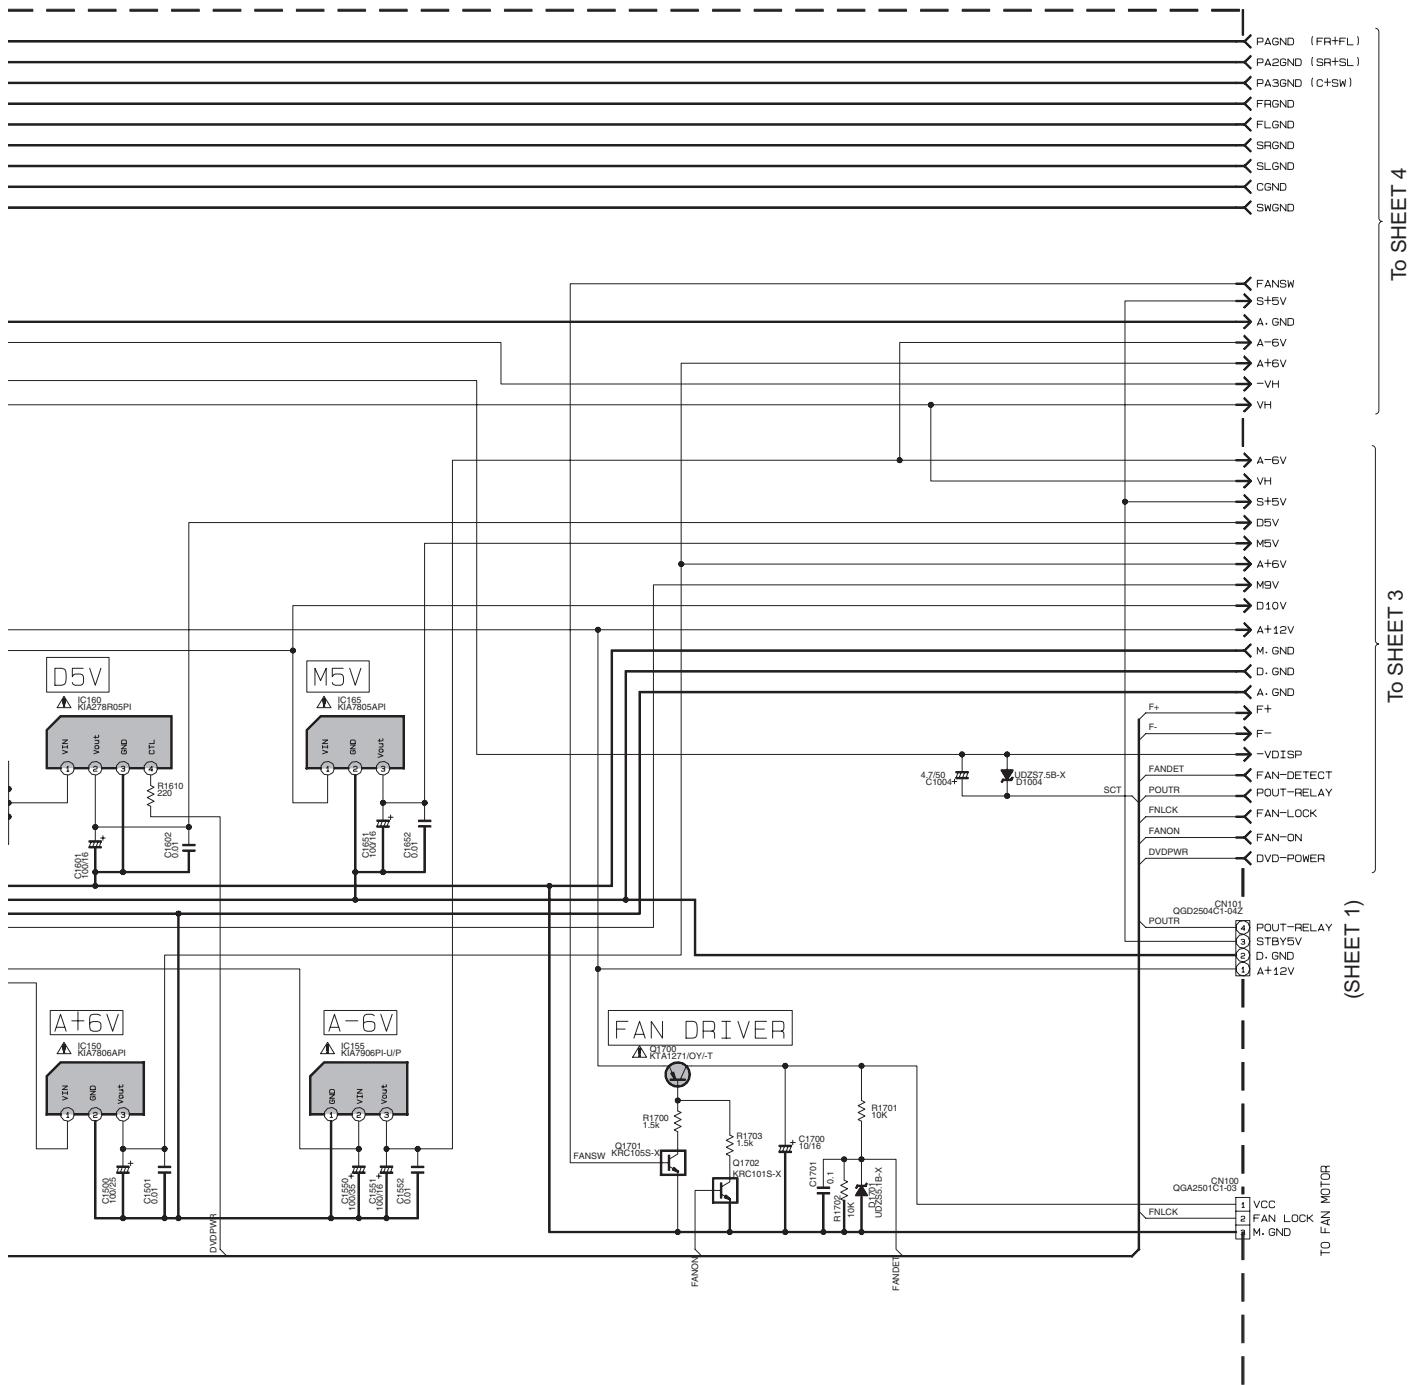

■ Micon section

To SHEET 4

To CN11
(SHEET 9)
TO DVD MECHA UNIT


To CN702
(SHEET 8)
TO DVD MECHA UNIT

To CN701
(SHEET 8)
TO DVD MECHA UNIT


To CN5C
(SHEET 8)

To CN1
(SHEET 9)
TO DVD MECHA UNIT

To SHEET 2

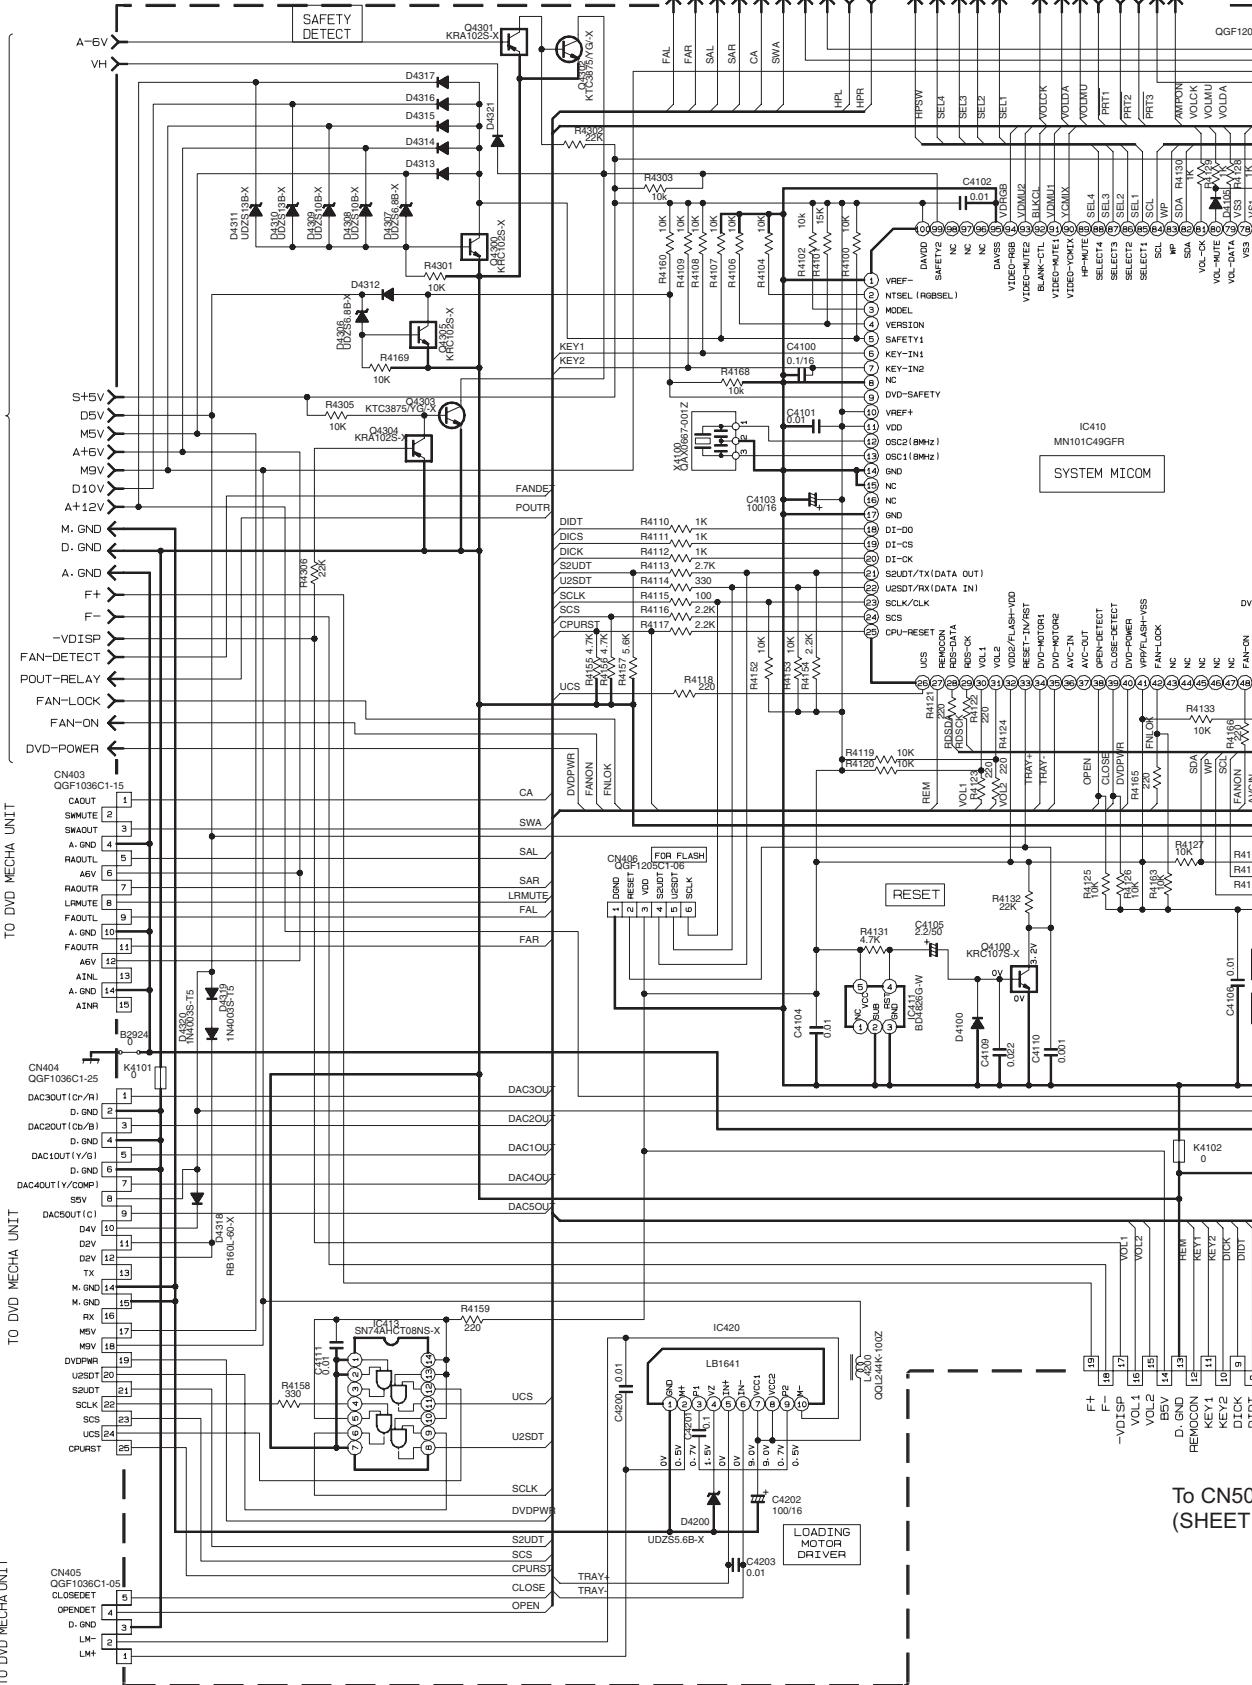

To CN5C
(SHEET 8)

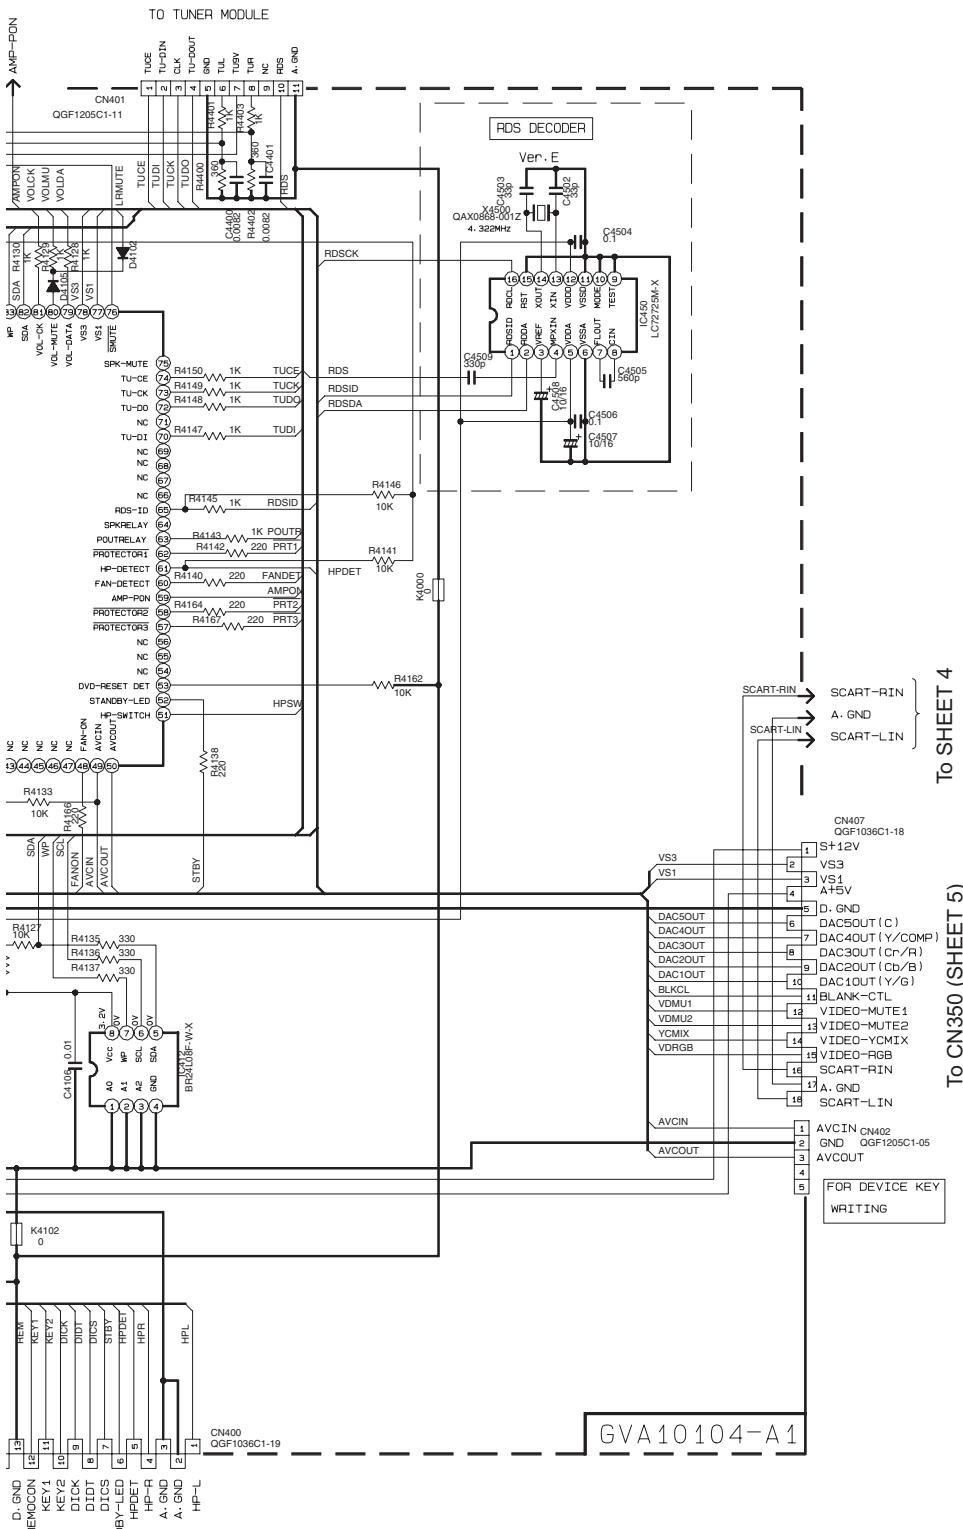


To SHEET 4


To CN350 (SHEET 5)

FOR DEVICE KEY
WRITING

■ Audio section

To SHEET 3

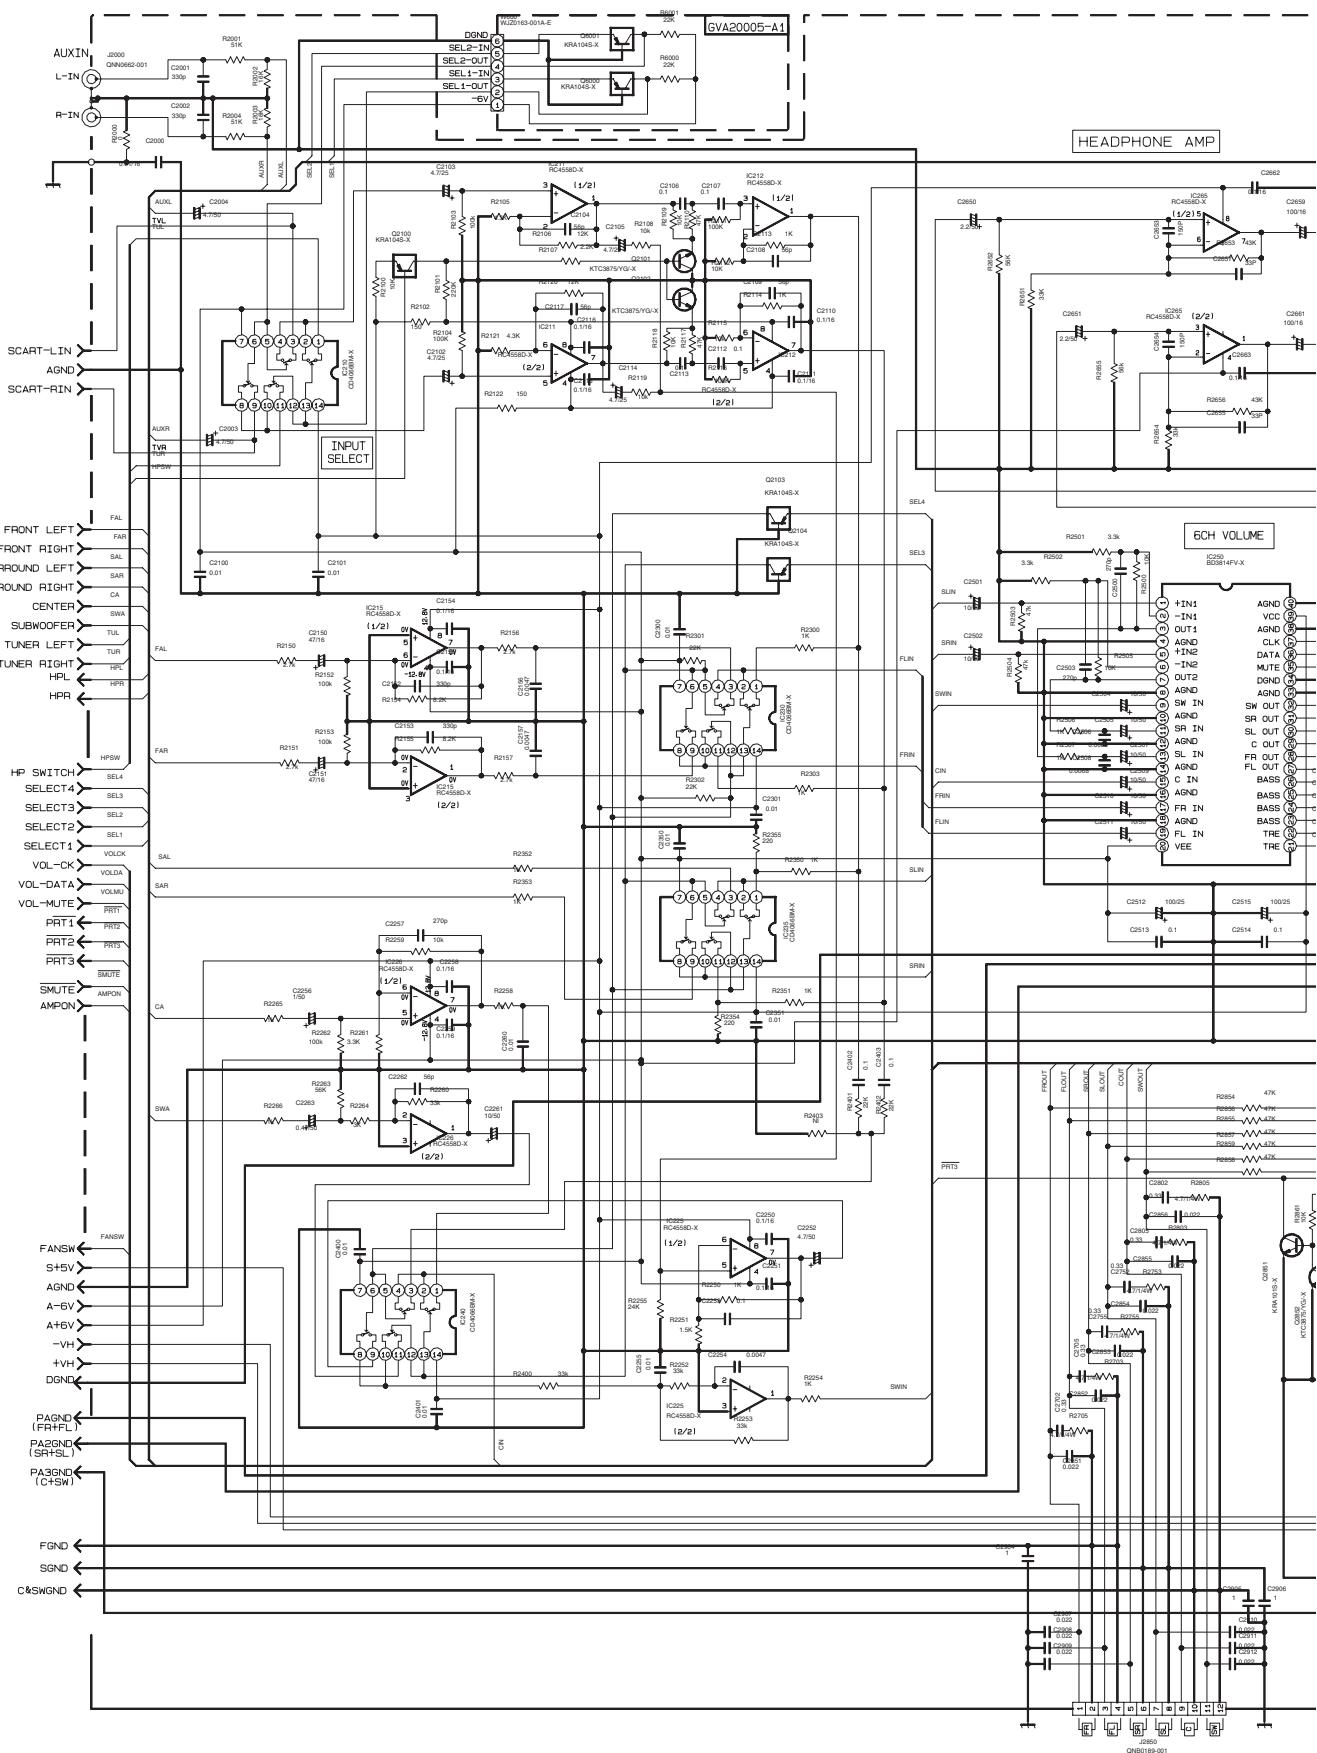

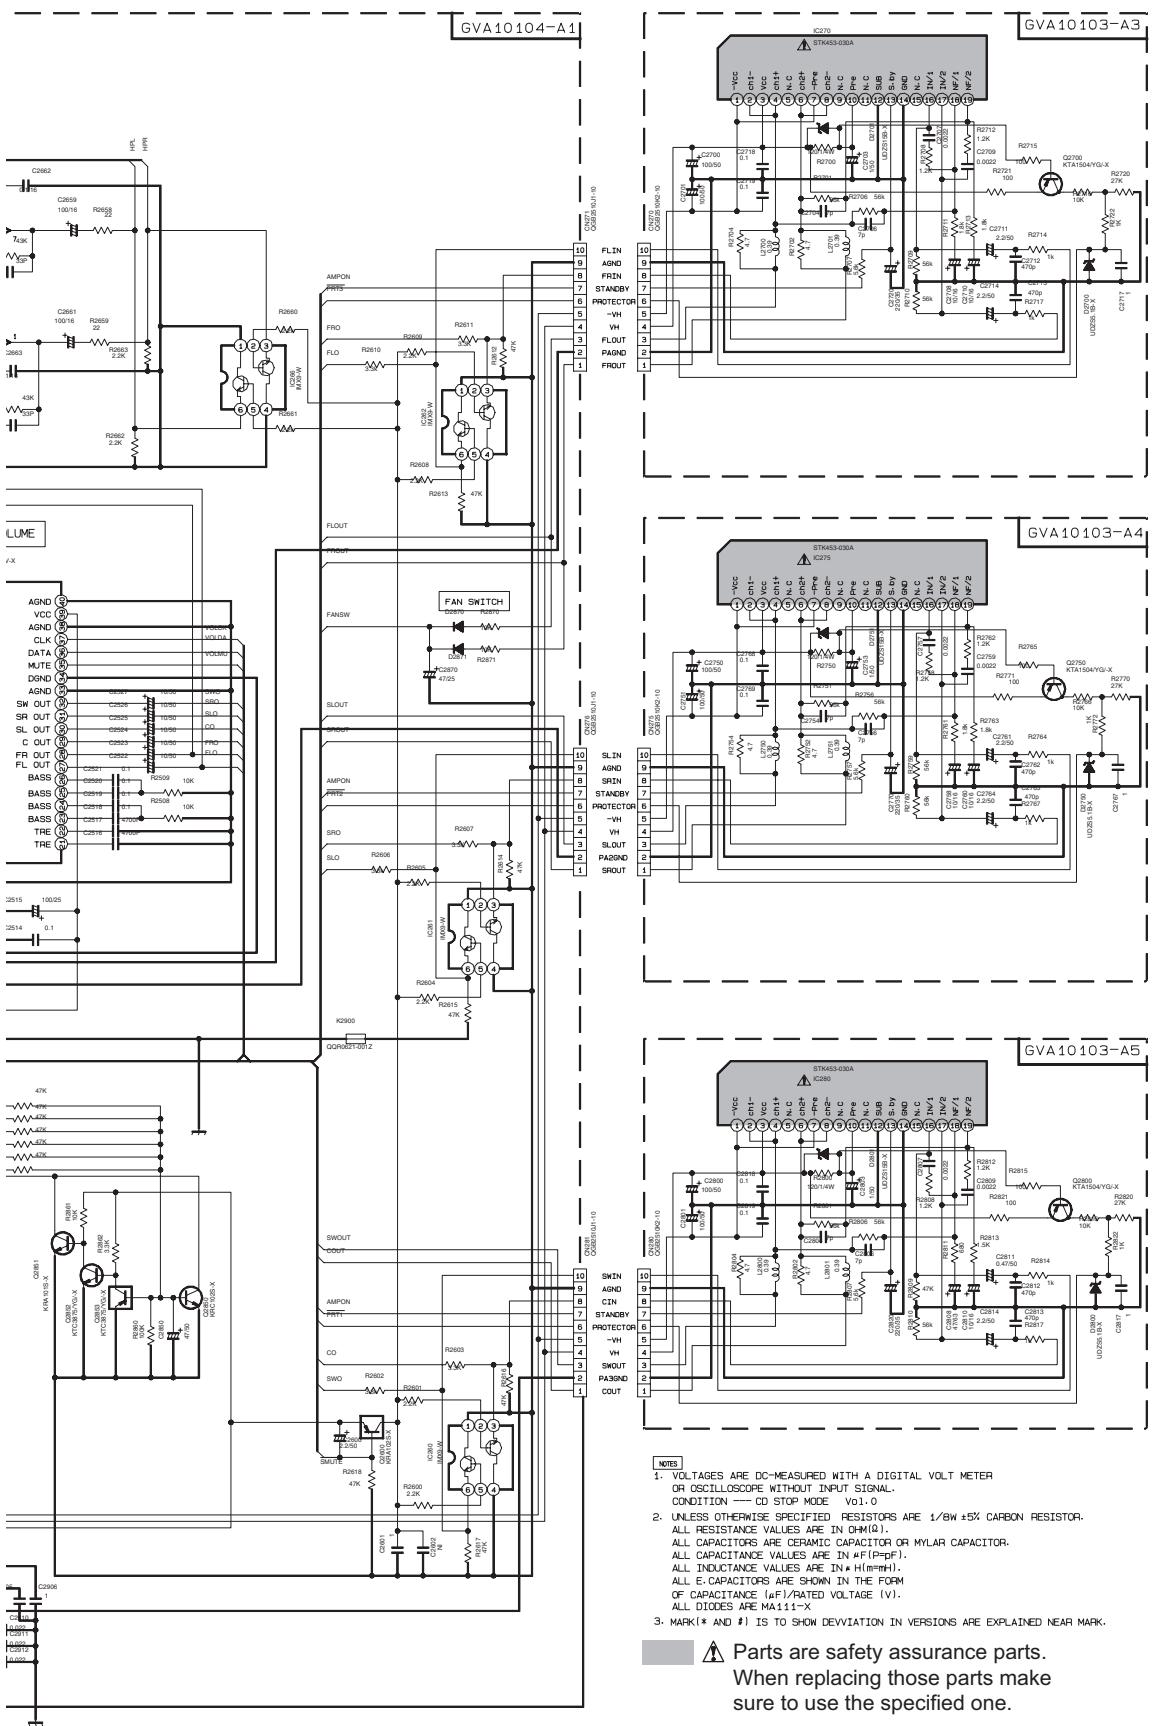



NOTES:

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL CONDITION ---- CD STOP MODE V01.0
2. UNLESS OTHERWISE SPECIFIED RESISTORS ARE 1/8W ±5% CARBON RESISTOR.
ALL RESISTANCE VALUES ARE IN OHM(Ω).
3. MARK* AND #1 IS TO SHOW DEVIATION IN VERSIONS ARE EXPLAINED NEAR MARK.


⚠ Parts are safety assurance parts.
When replacing those parts make sure to use the specified one.

■ Video section

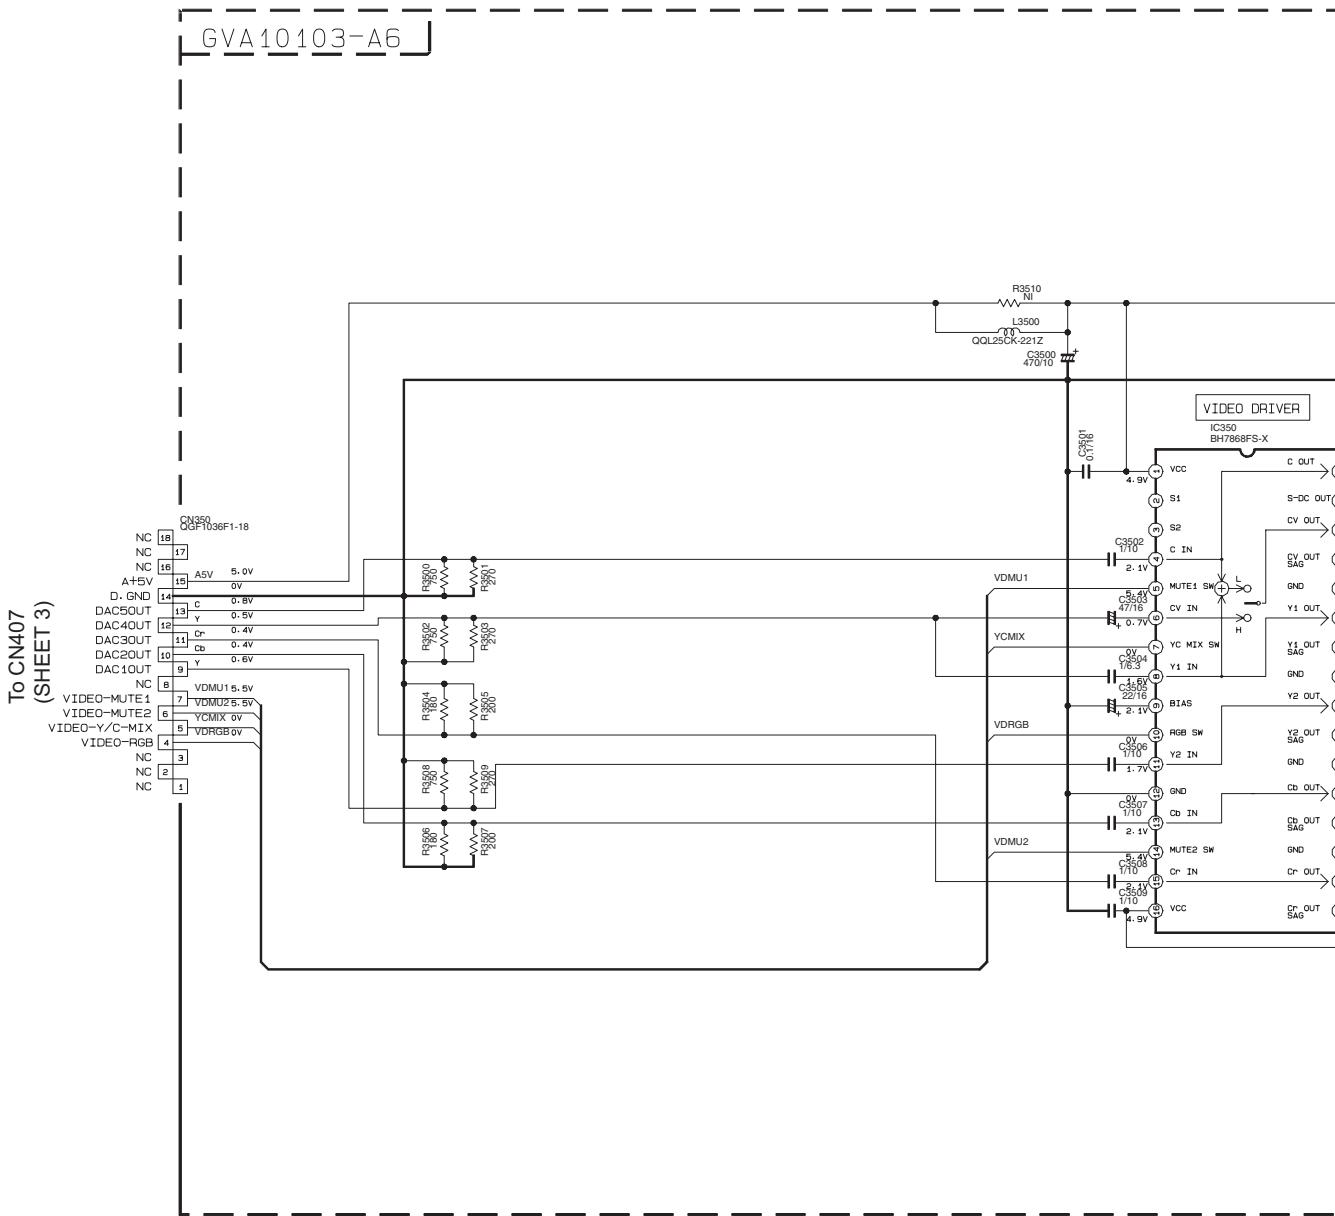


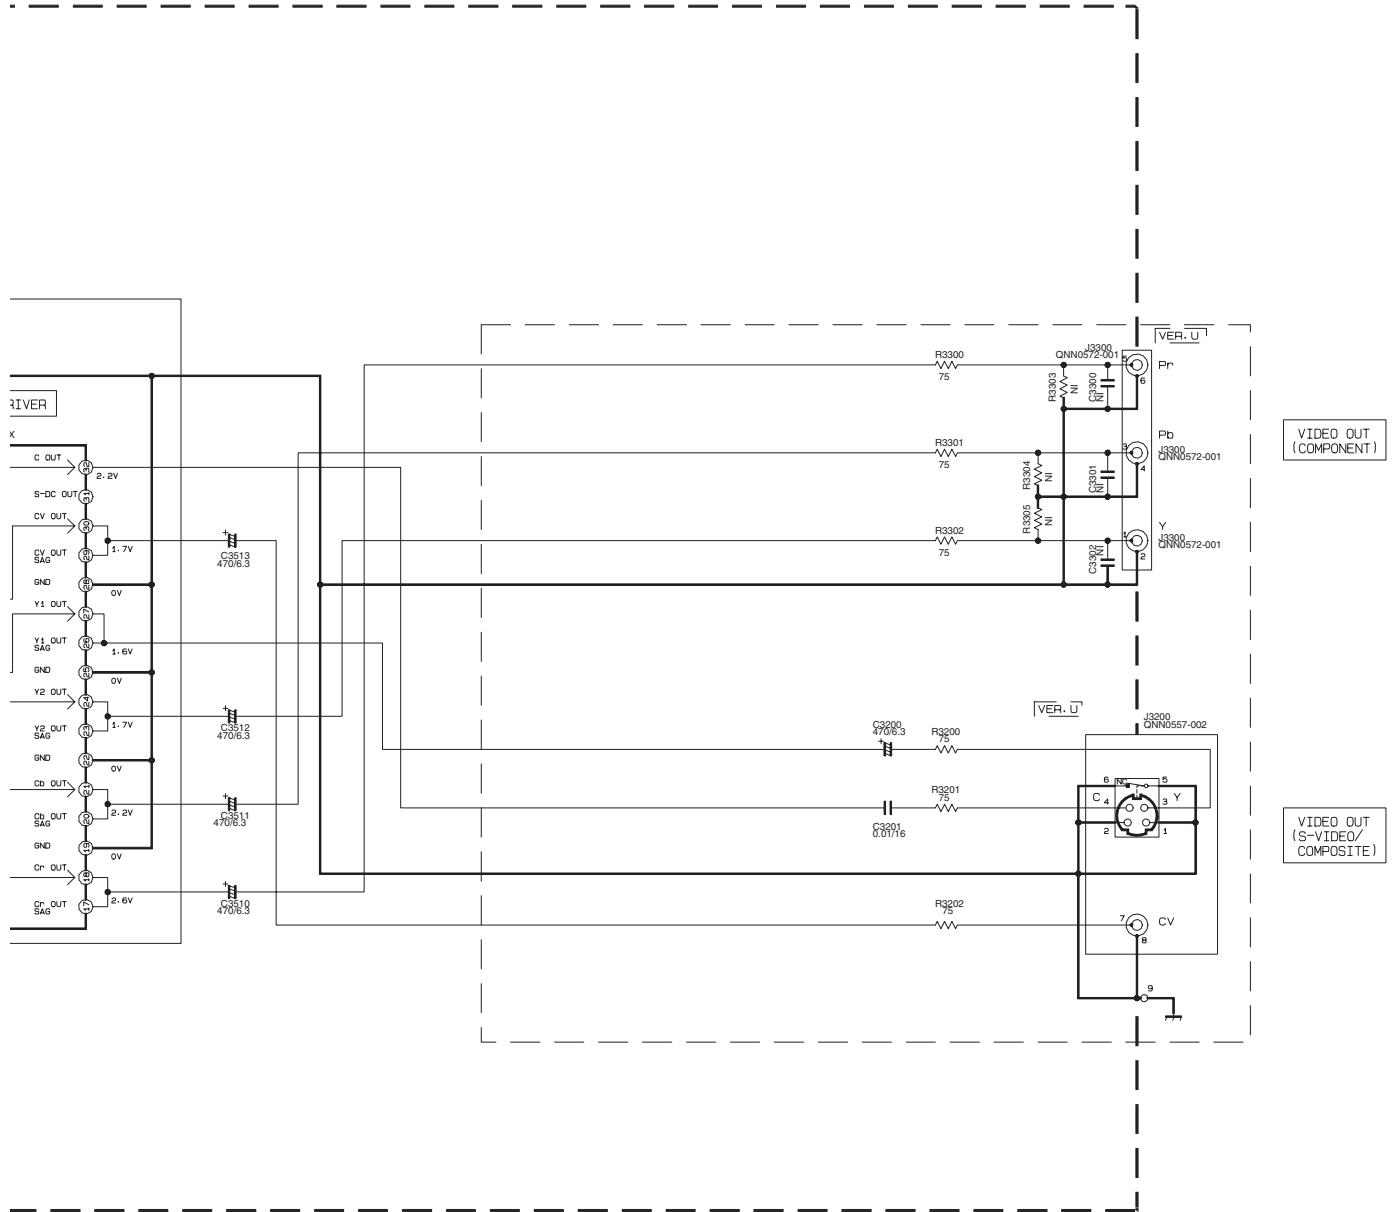


■ Front section

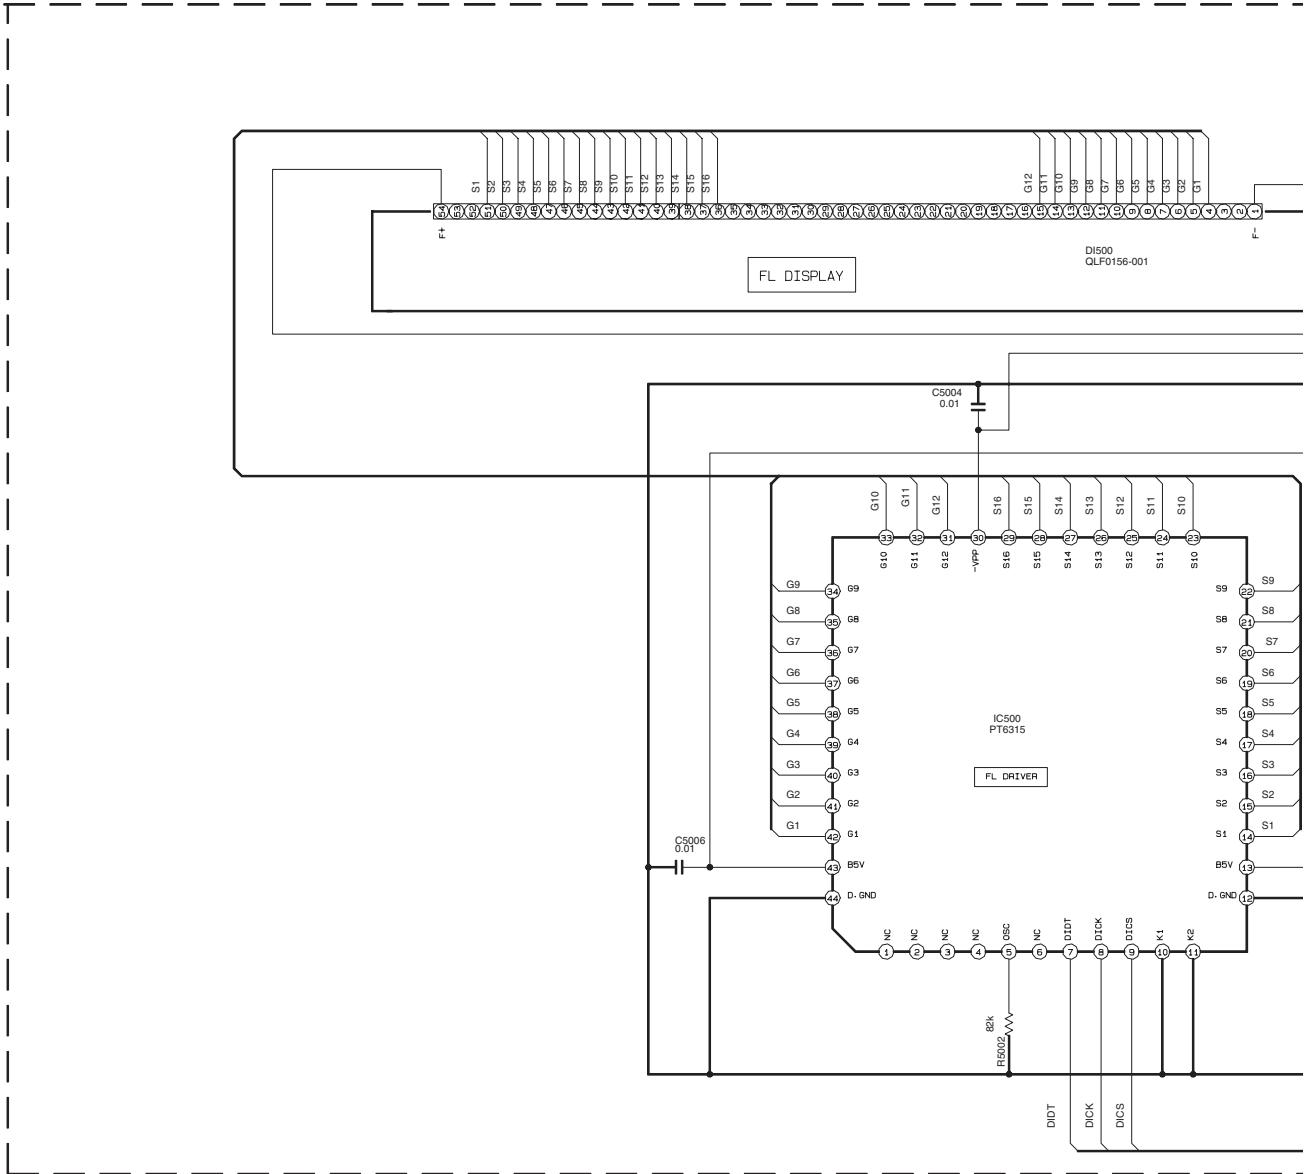

- NOTES**
1. VOLTMAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL CONDITION — CD STOP MODE $V_{O1,0}$.
 2. UNLESS OTHERWISE SPECIFIED RESISTORS ARE $1/\text{BW} \pm 5\%$ CARBON RESISTOR. ALL RESISTANCE VALUES ARE IN Ω .
 3. MARK # AND * IS TO SHOW DEVIATION IN VERSIONS ARE EXPLAINED NEAR MARK.

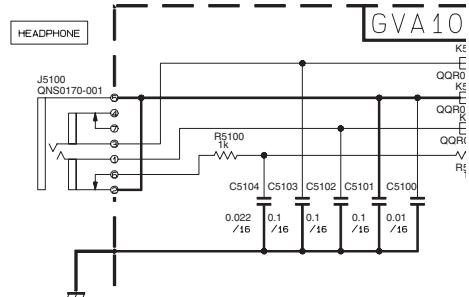




GVA10103-A2

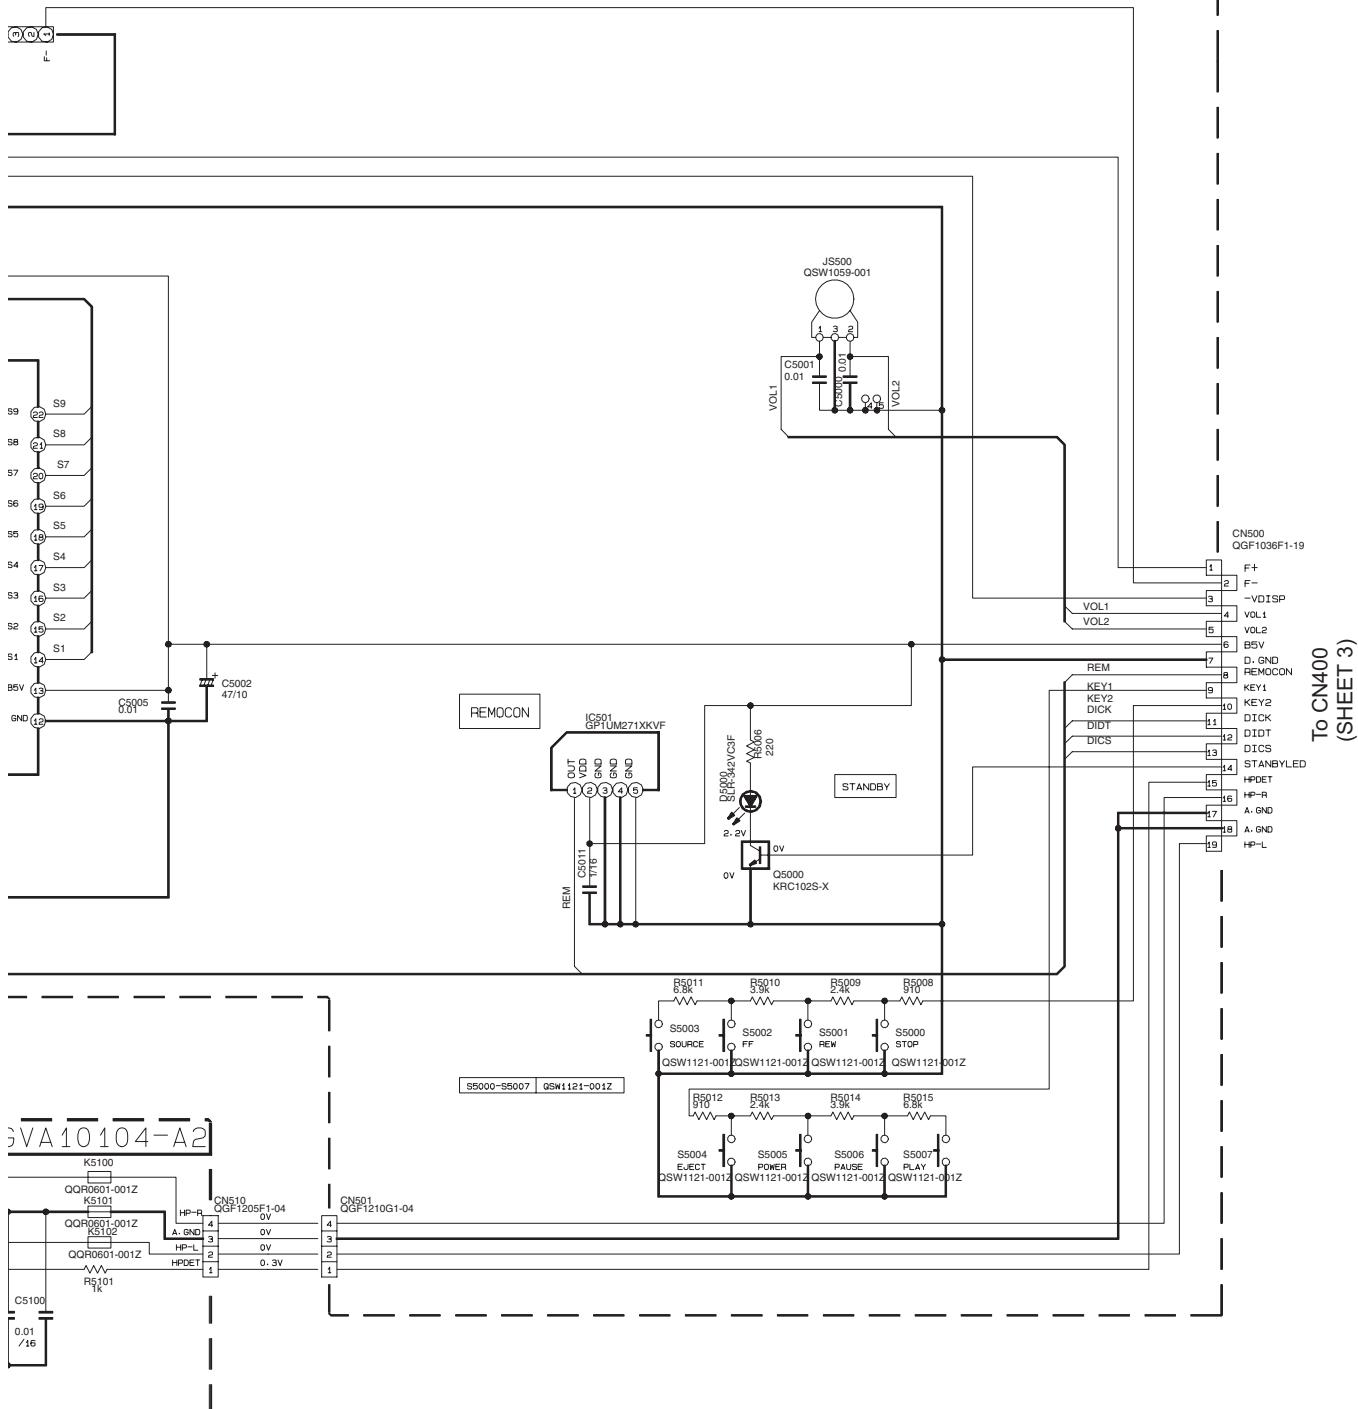

SHEET 6


■ DVD servo control section (1/2)

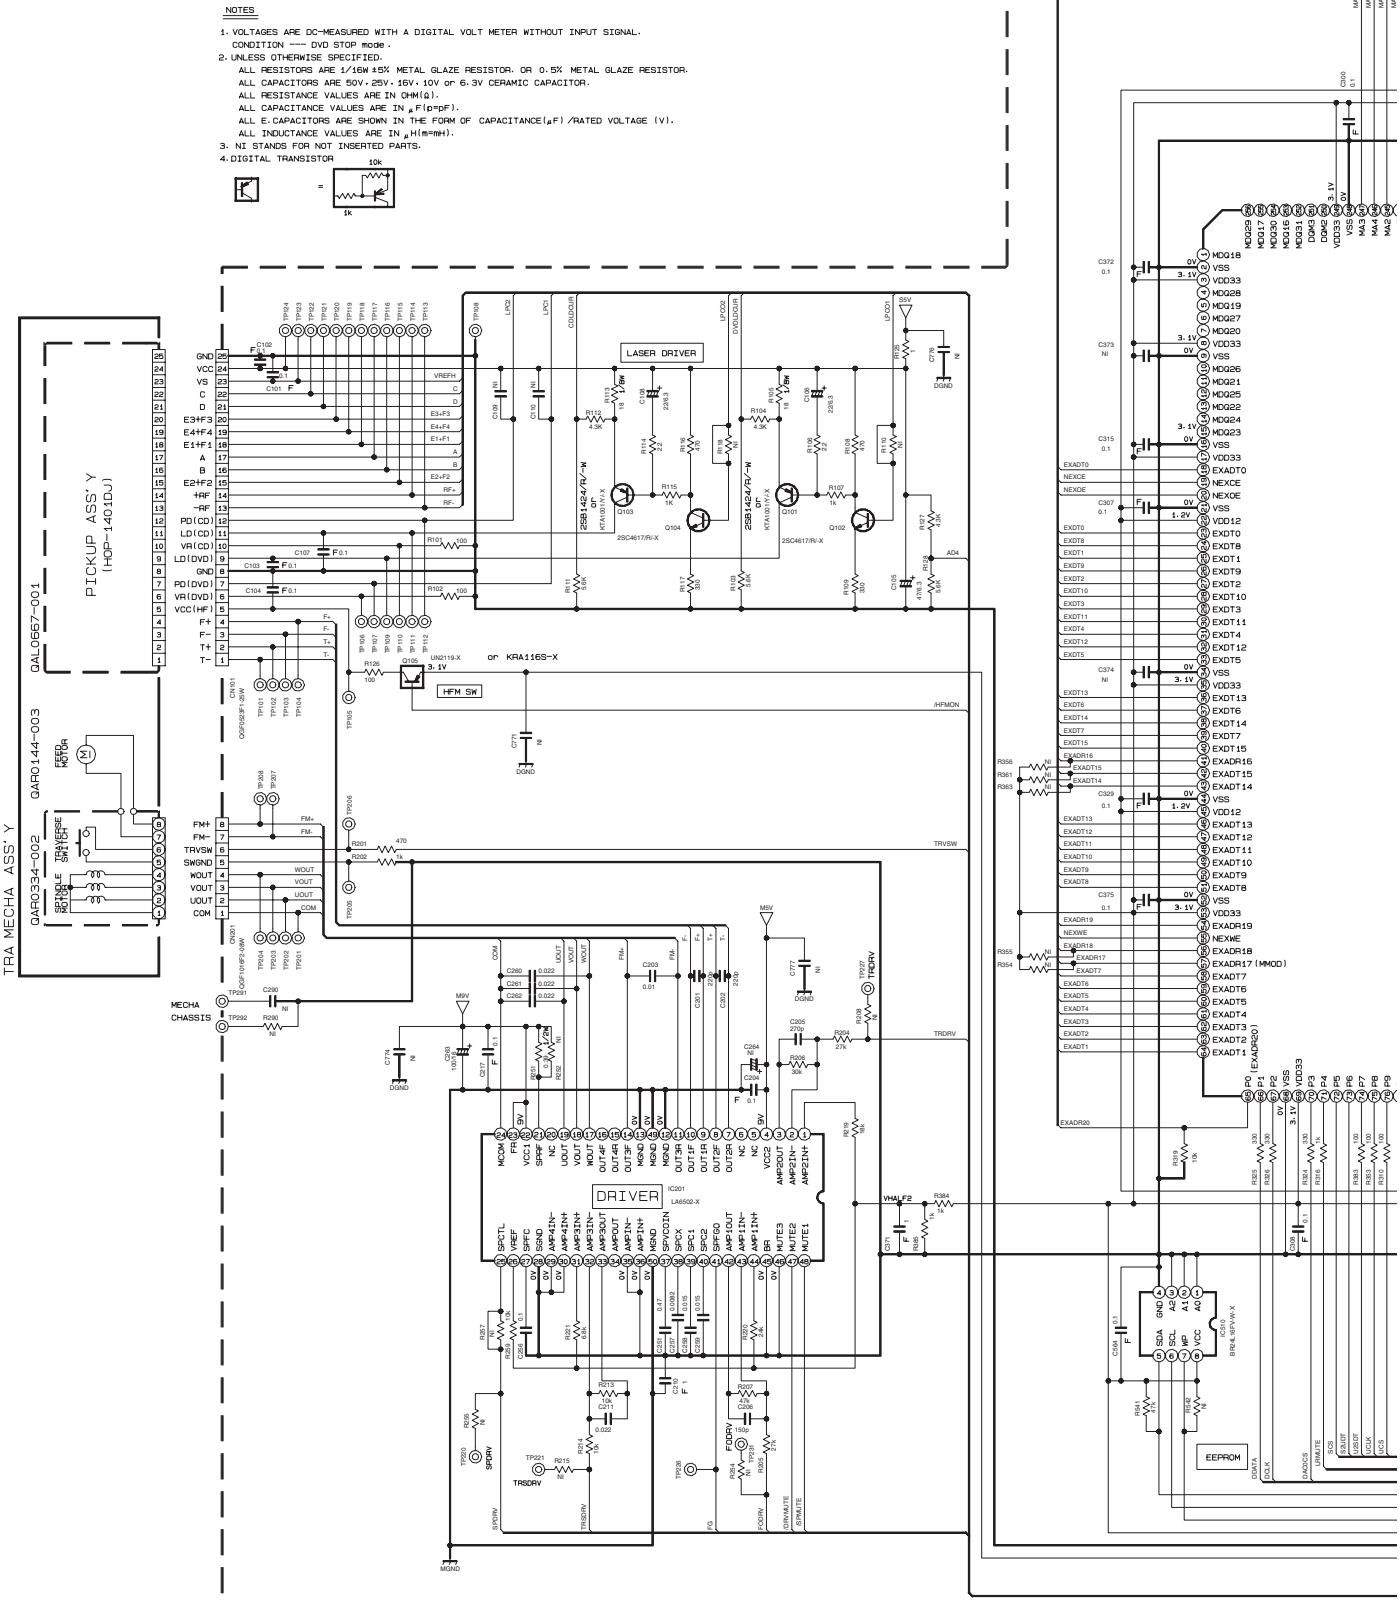


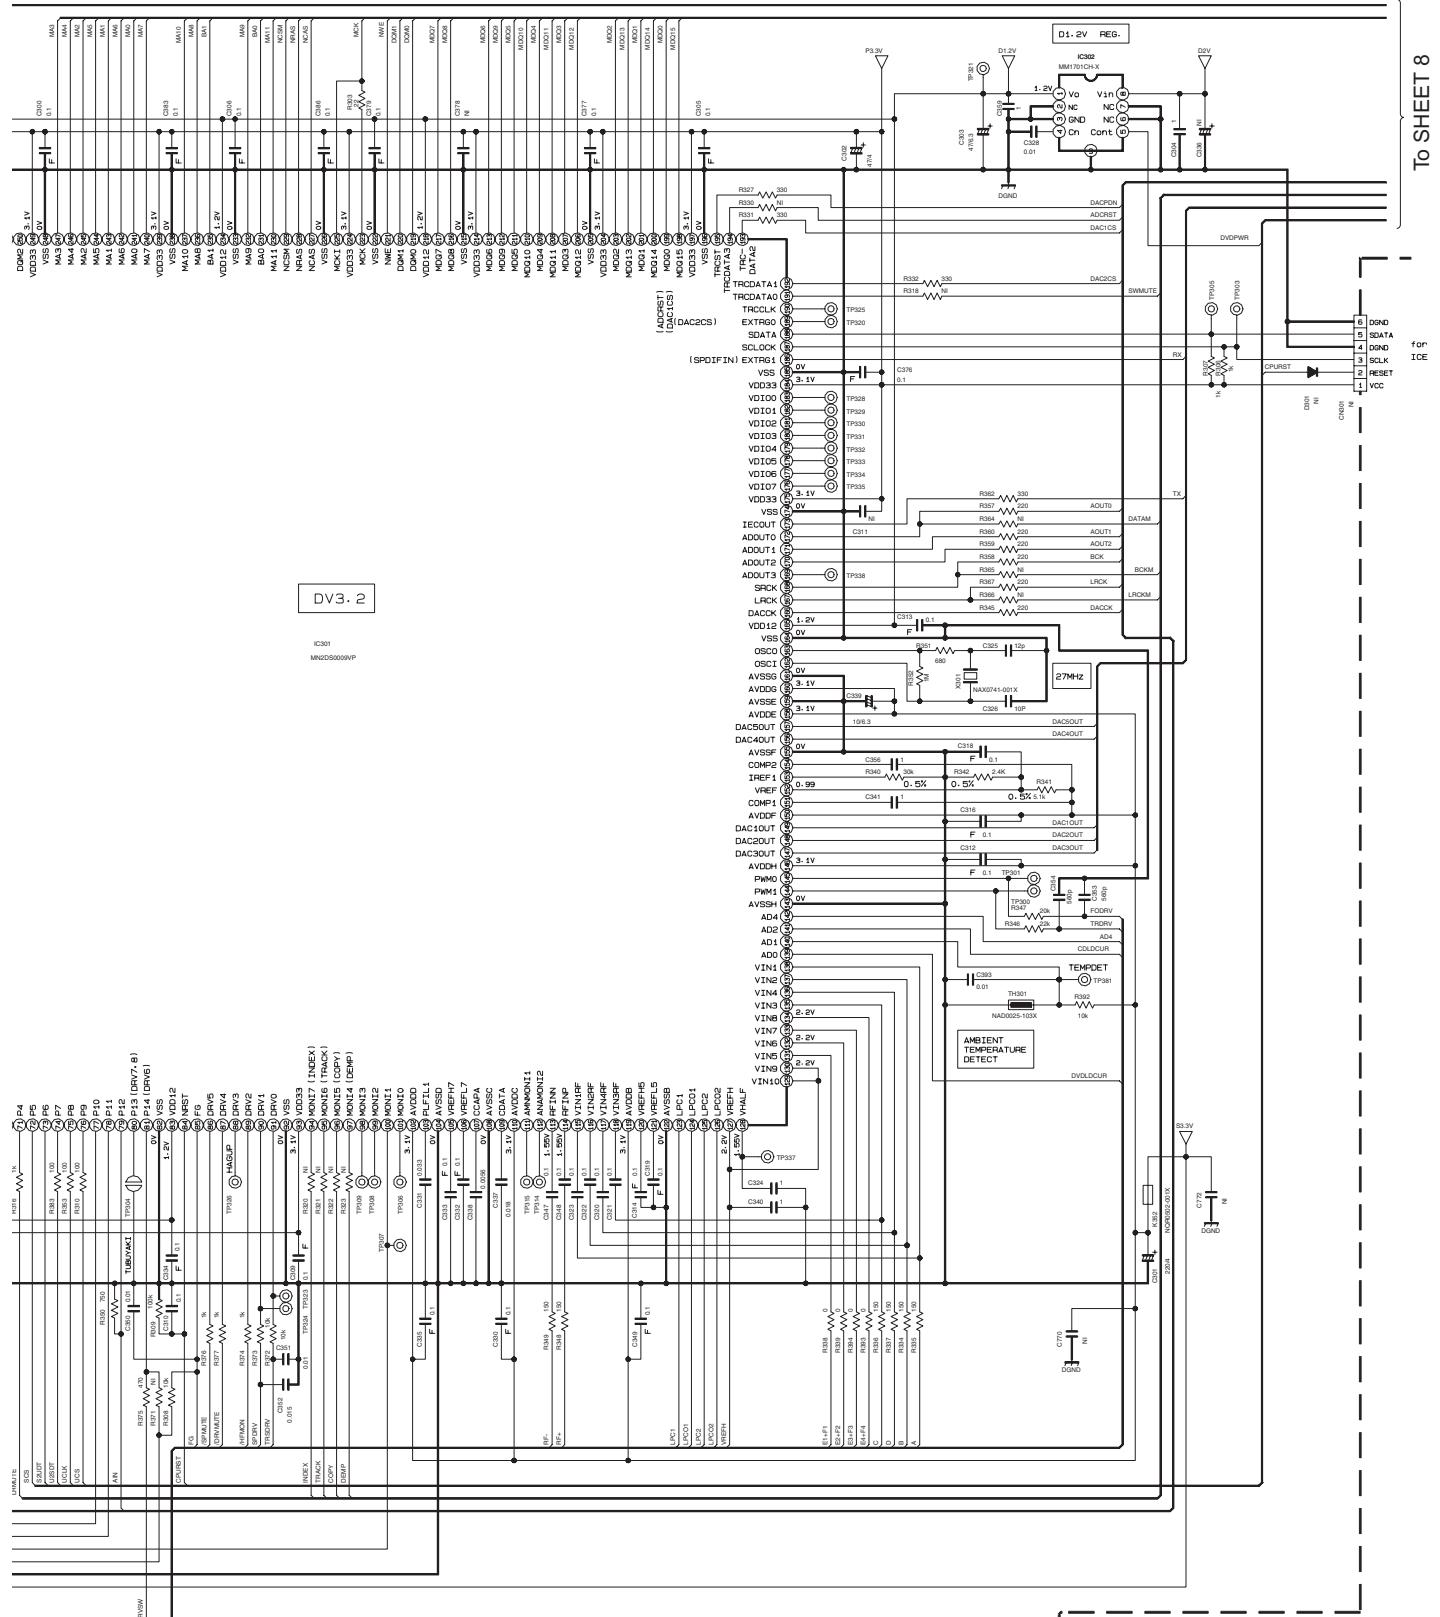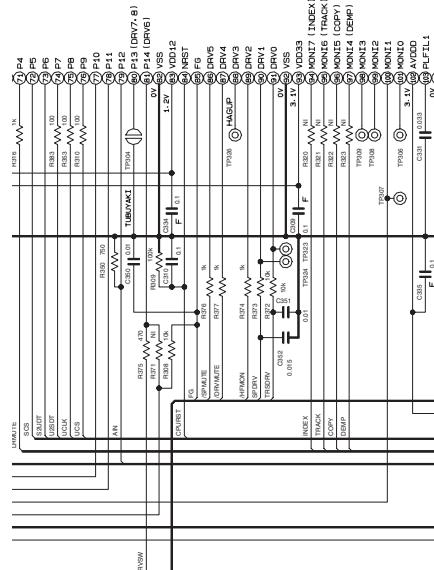

LVA10542-121A(1/2)

■ DVD servo control section (2/2)

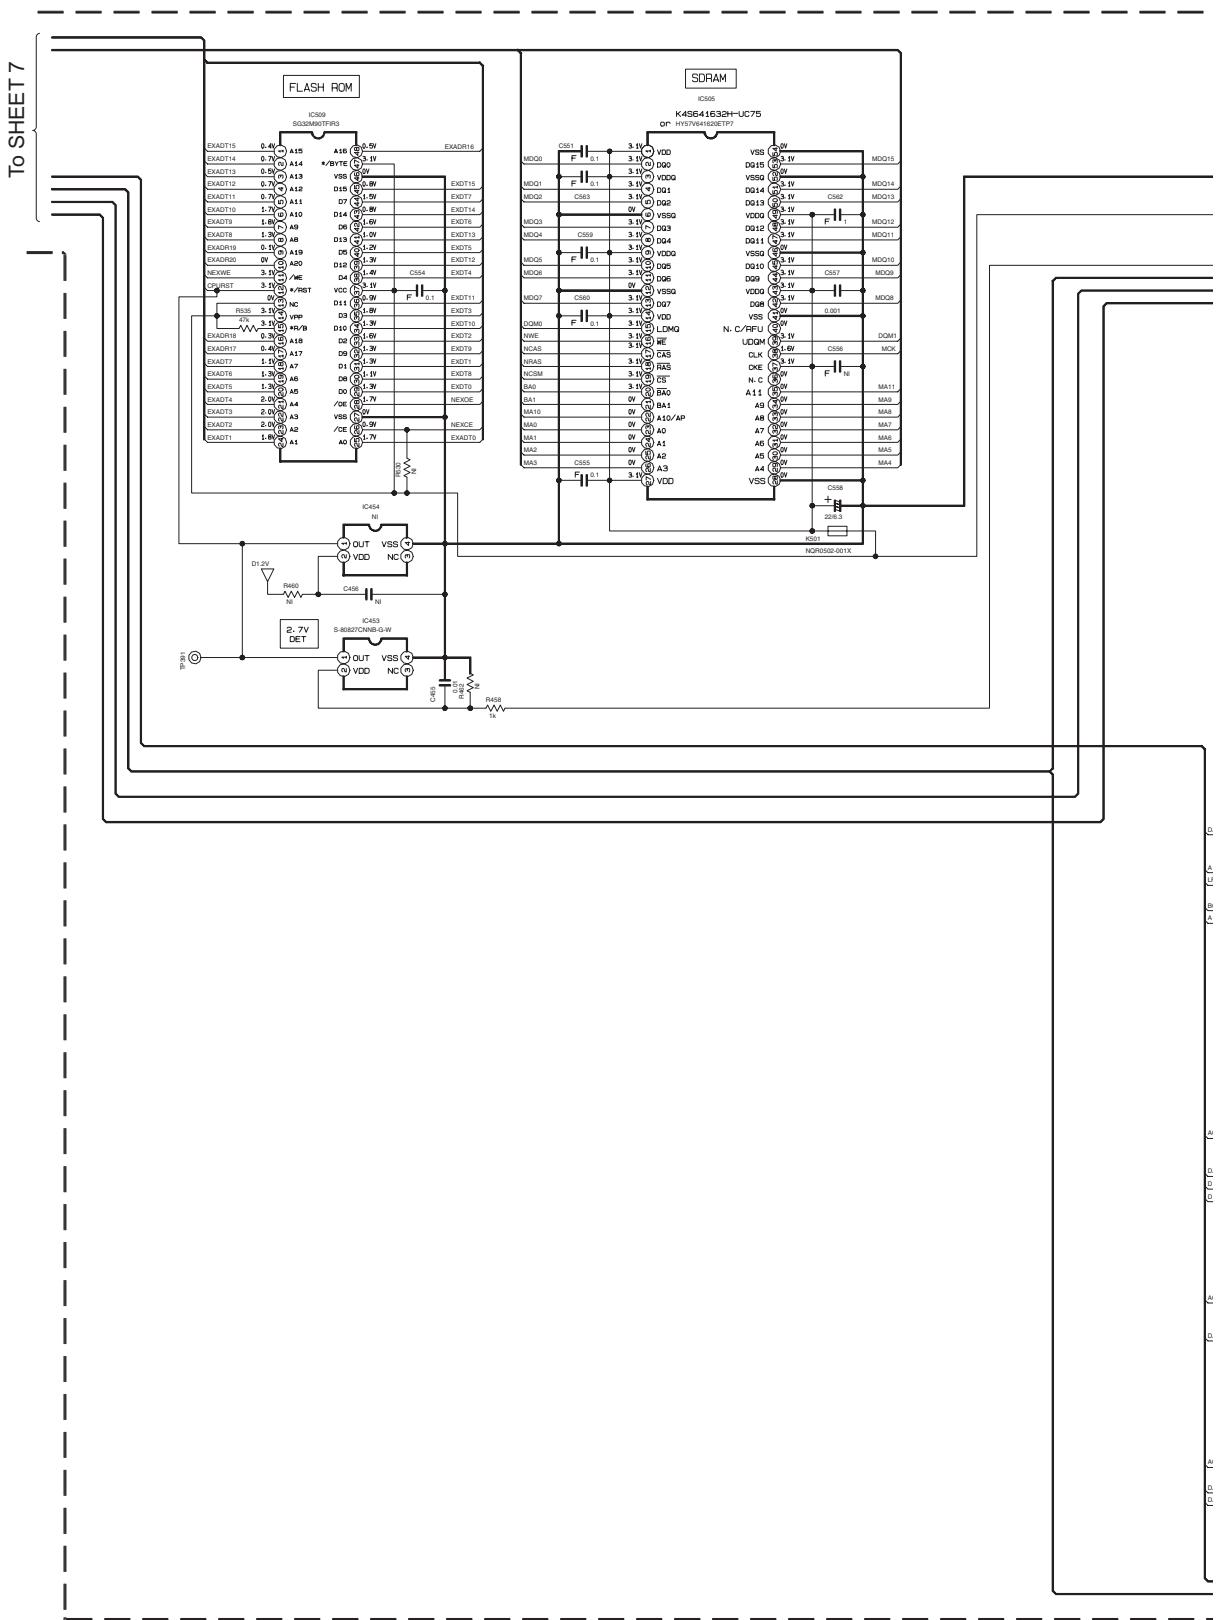


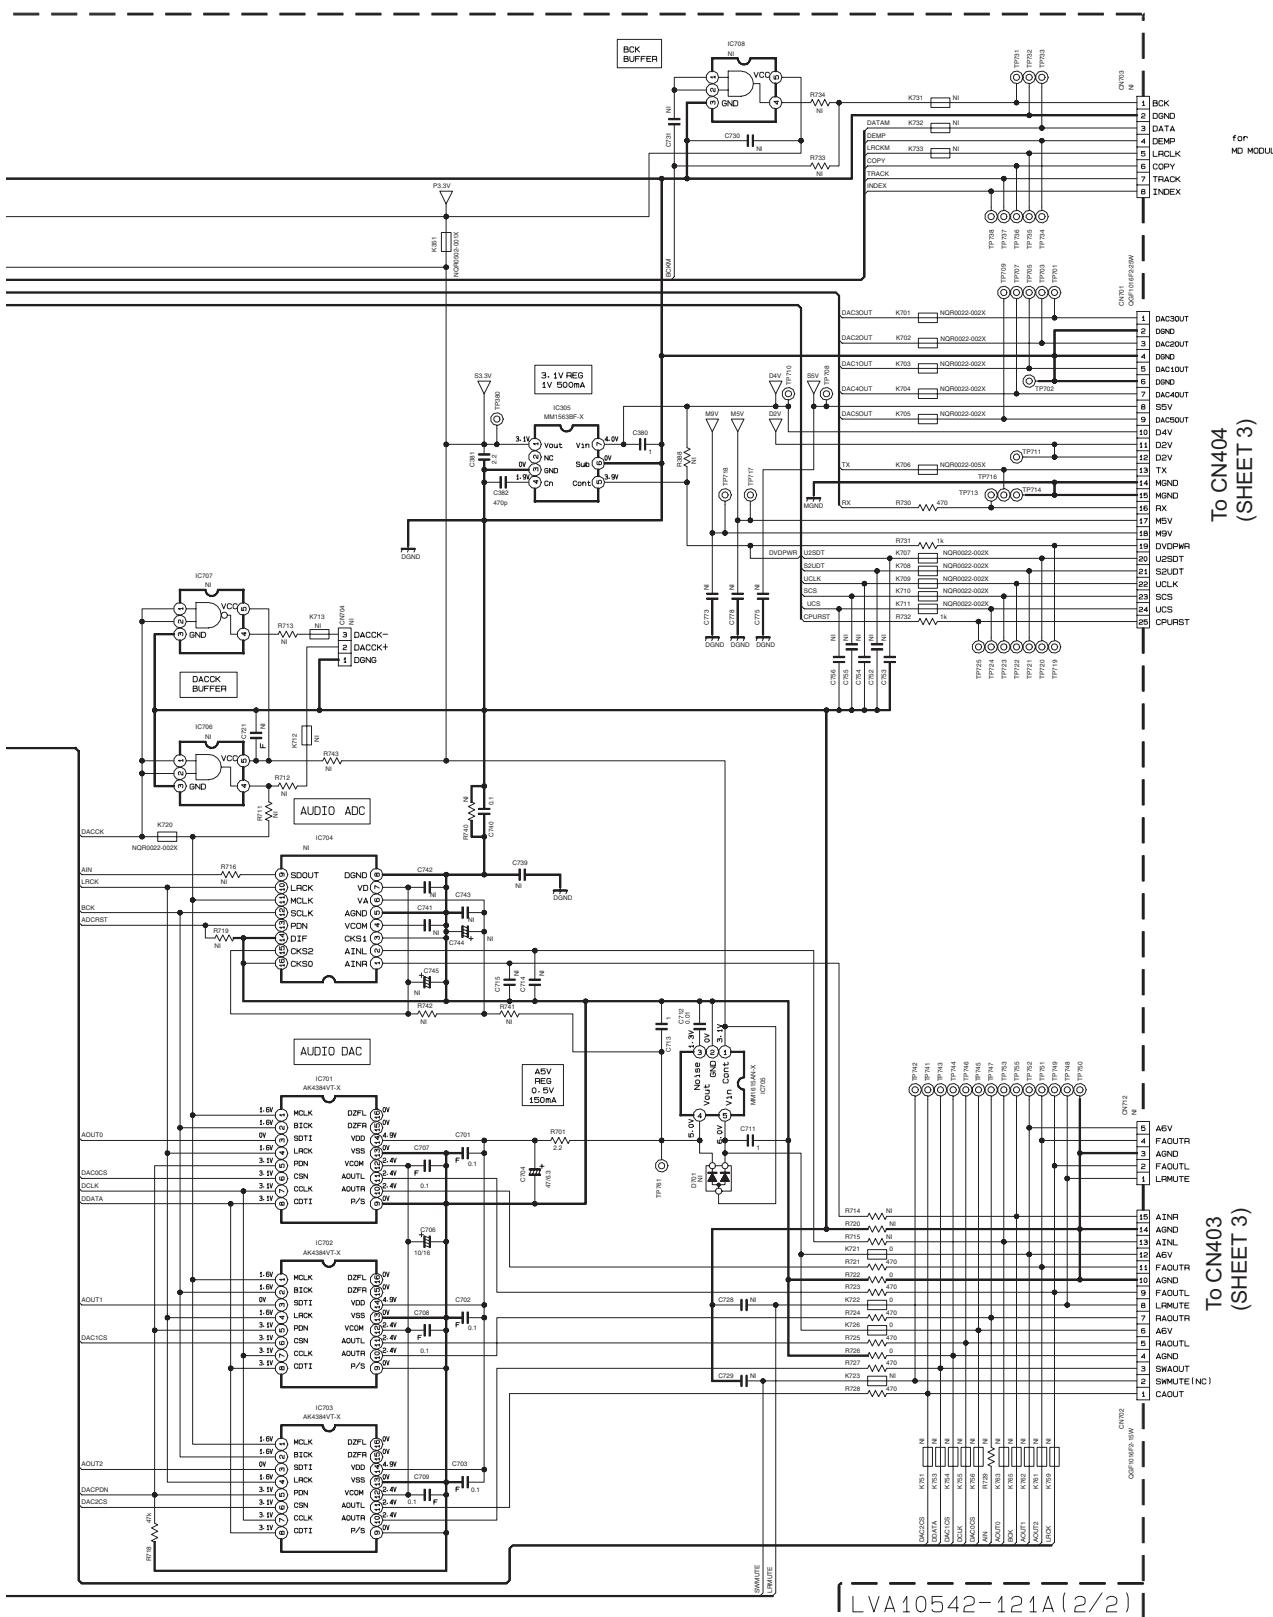

NOTES

1. VOLTMETERS ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL.
2. CONNECTED TO DVX STORE.
3. UNLESS OTHERWISE SPECIFIED.
- ALL RESISTORS ARE 1/16W ±5% METAL GLAZE RESISTOR, OR 0.5W METAL GLAZE RESISTOR.
- ALL CAPACITORS ARE 0.0V-25V-1KV-10V OR 6.3V CERAMIC CAPACITOR.
- ALL RESISTANCE VALUES ARE IN OHM(Ω).
- ALL CAPACITANCE VALUES ARE IN F (PF).
- ALL INDUCTANCE VALUES ARE IN H (MH).
3. NI STANDS FOR NOT INSERTED PARTS.

■ Loader section

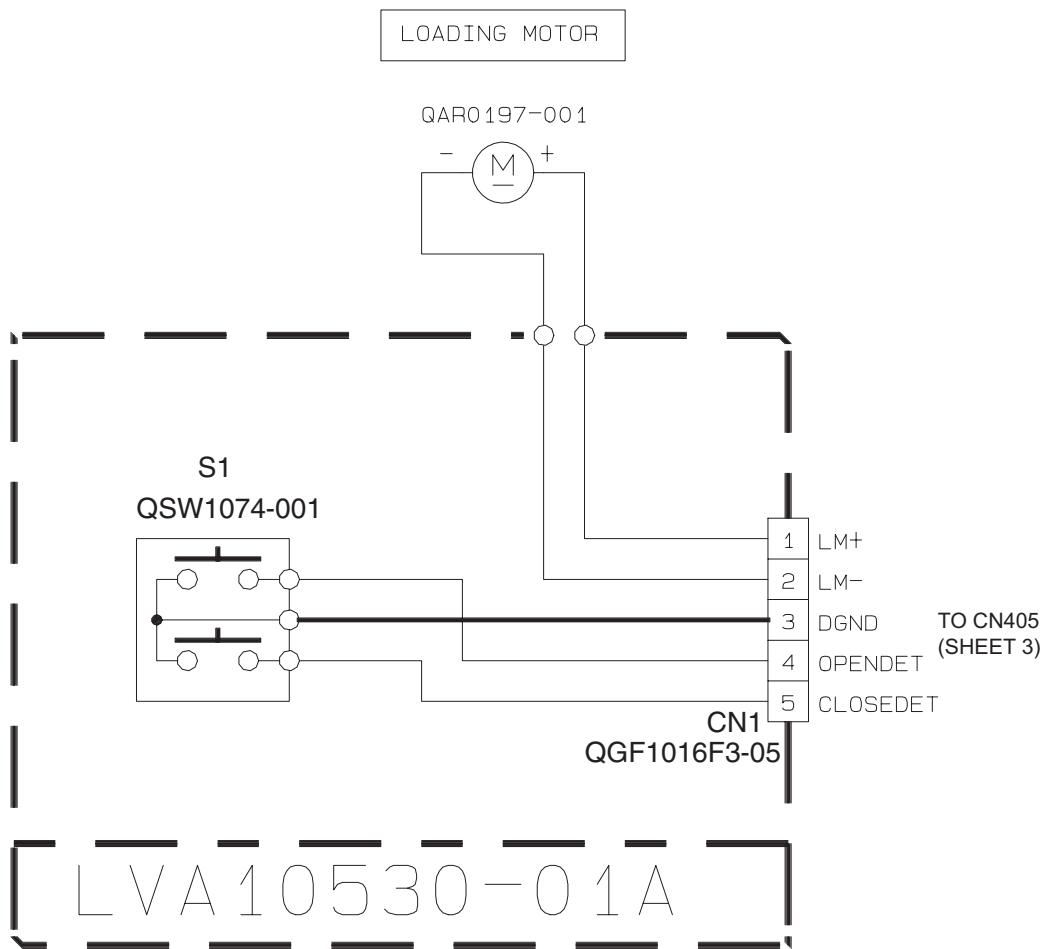


< MEMO >

Printed circuit boards


■ Main board

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

(Main board)


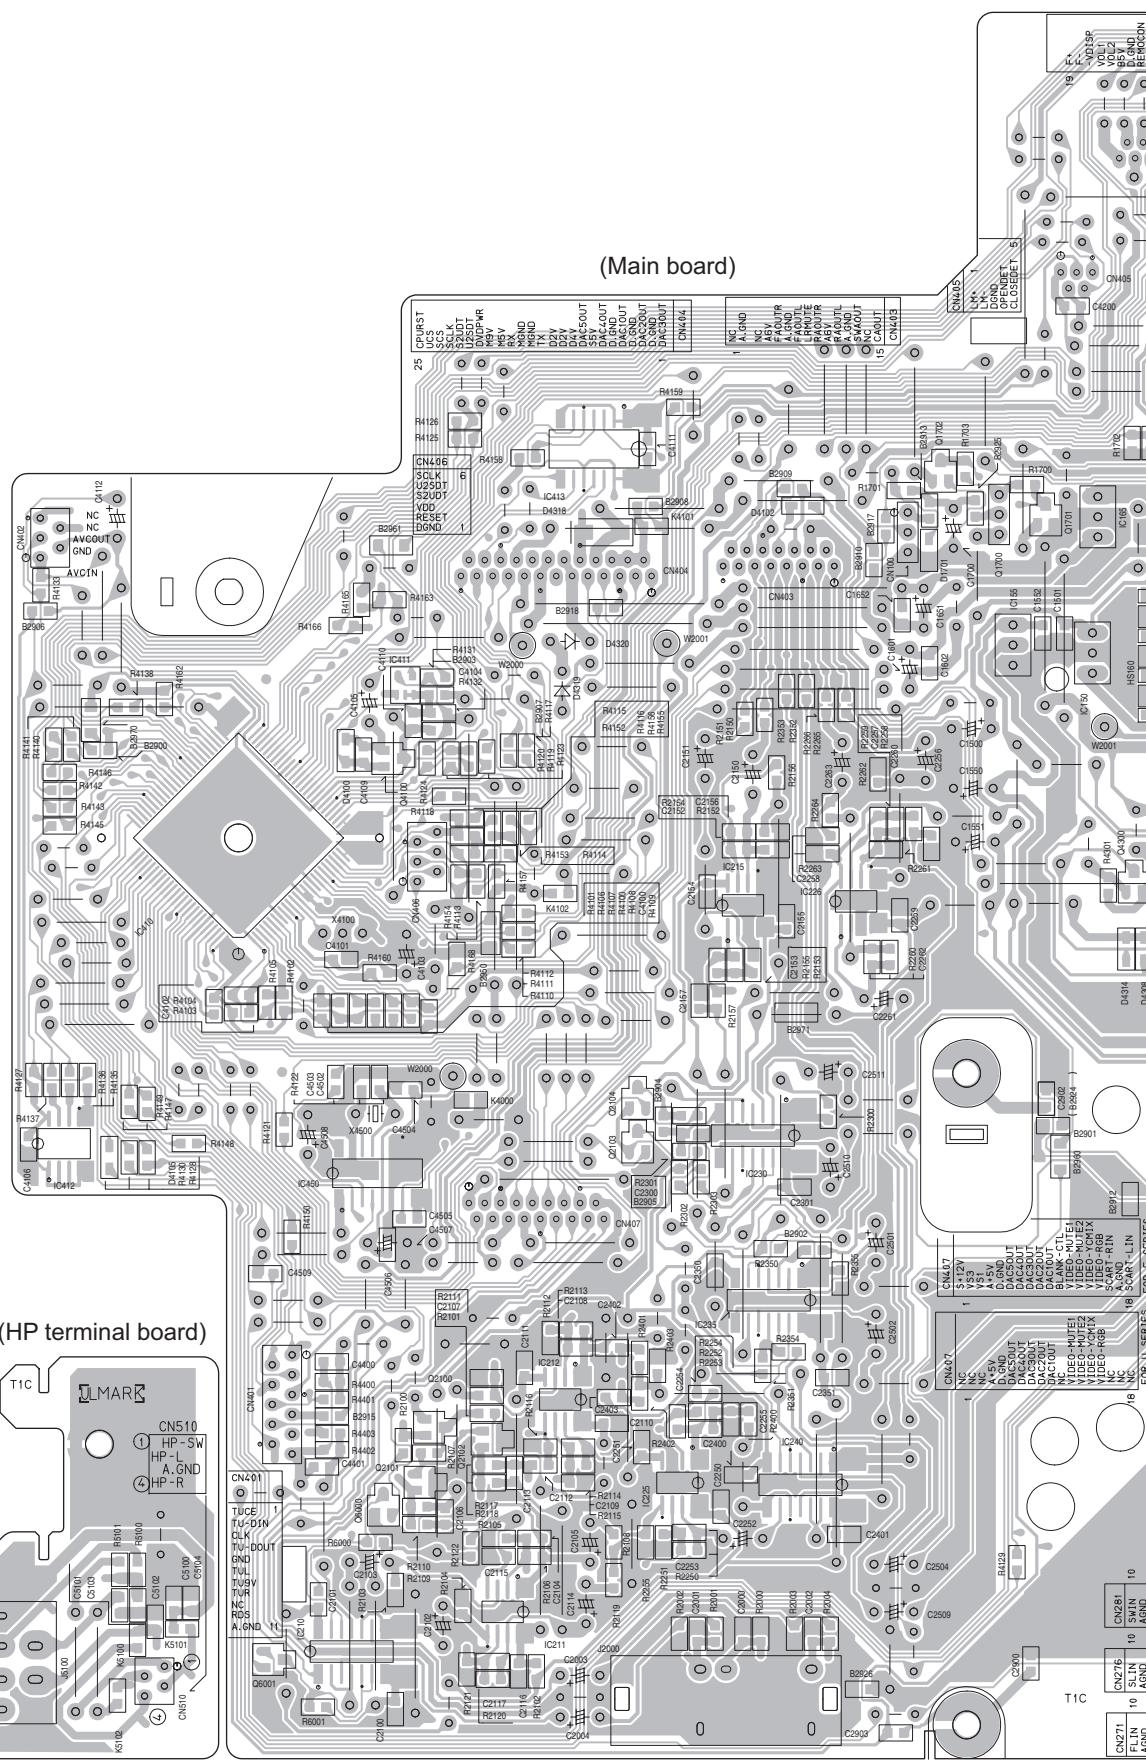


(HP terminal board)

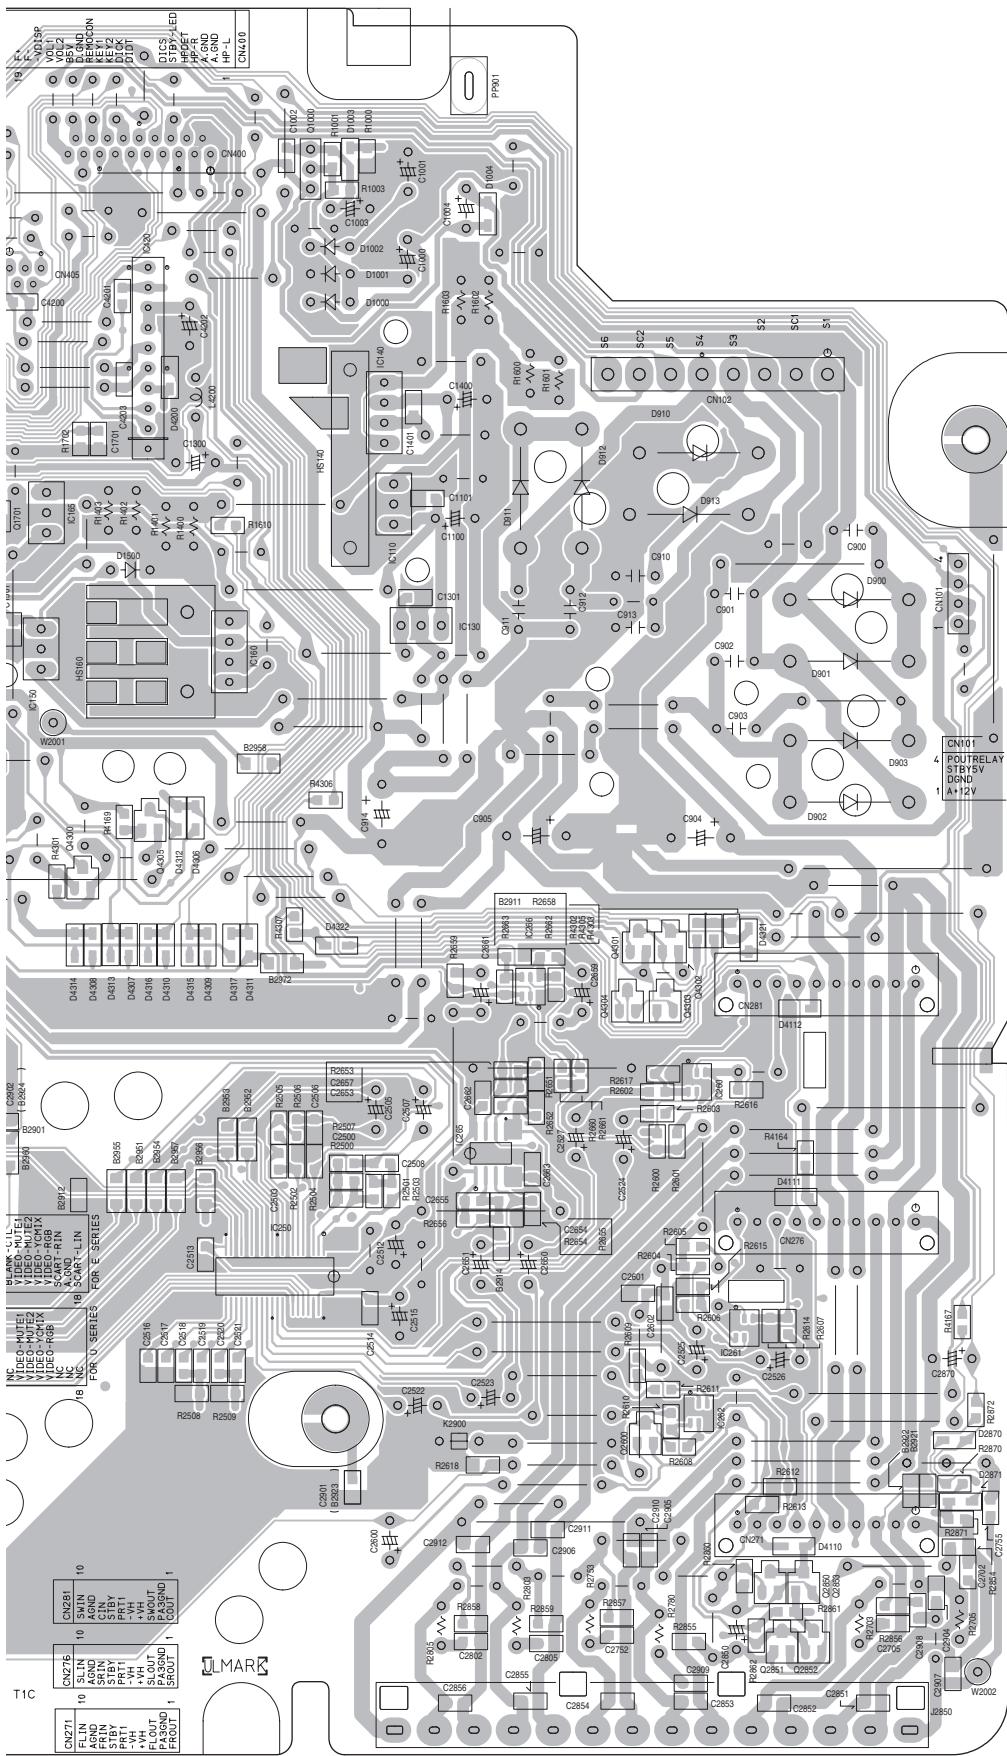


■ Trans board


Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

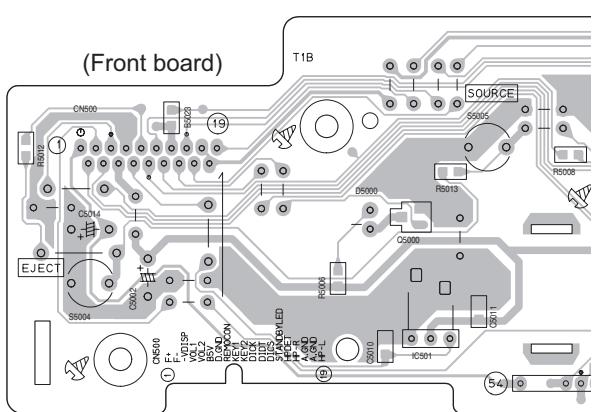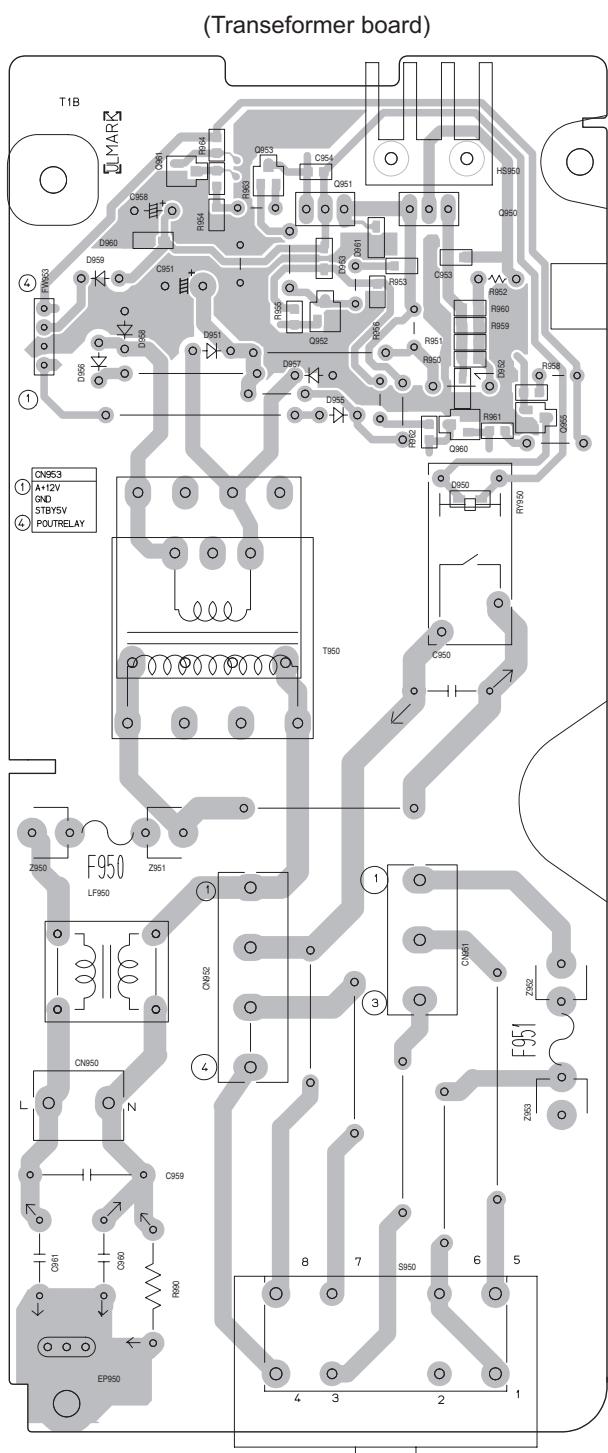


(FL & FR Power Amp. board)

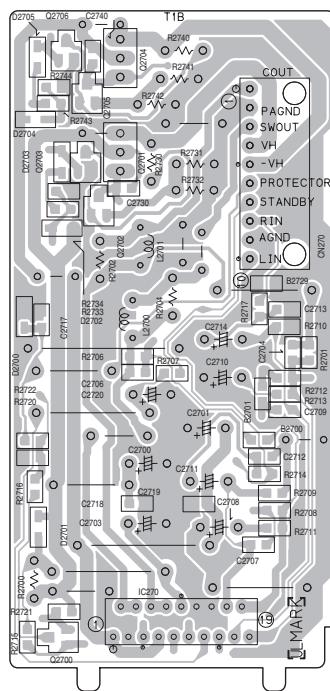


(SL 8)

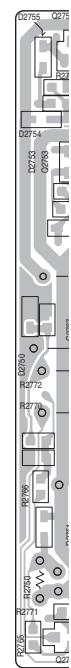


(Transistor board)

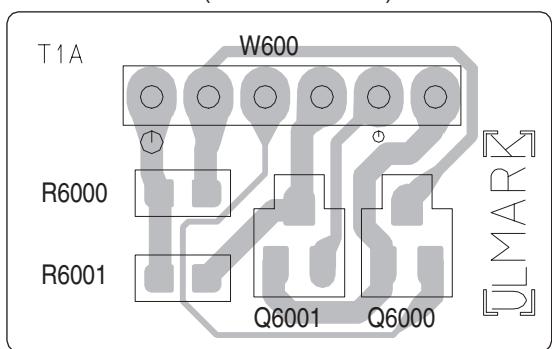


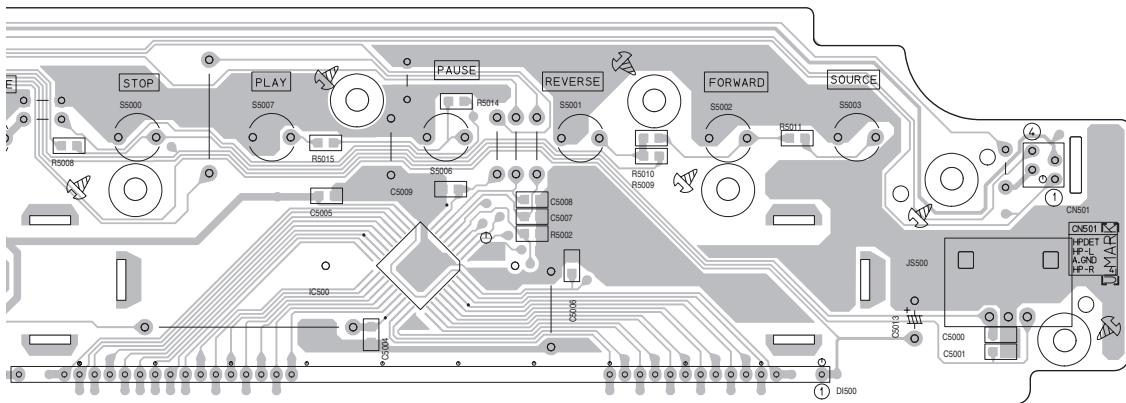


(SL & SR Power Amp. board)

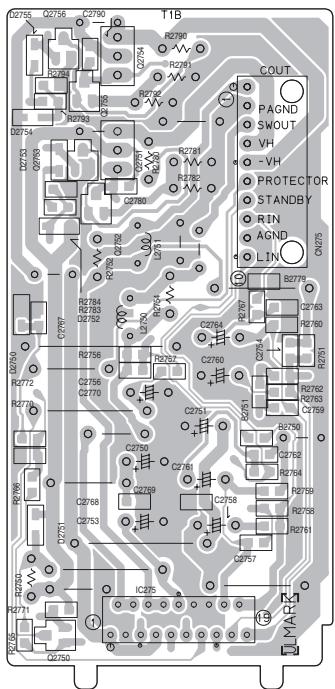

(CEN & SW Power Amp. board)

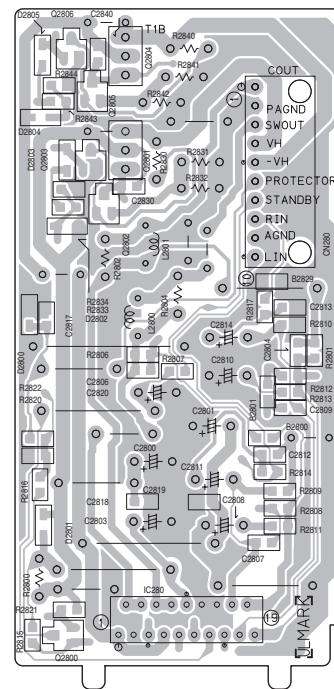


(Scart terminal board)

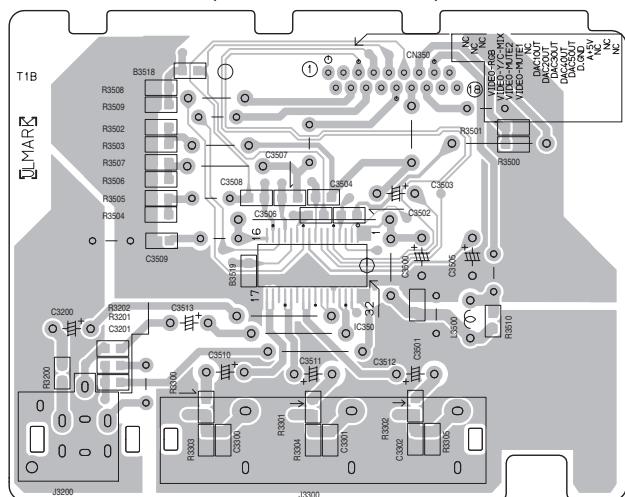


■ DVD servo control board

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

Forward side

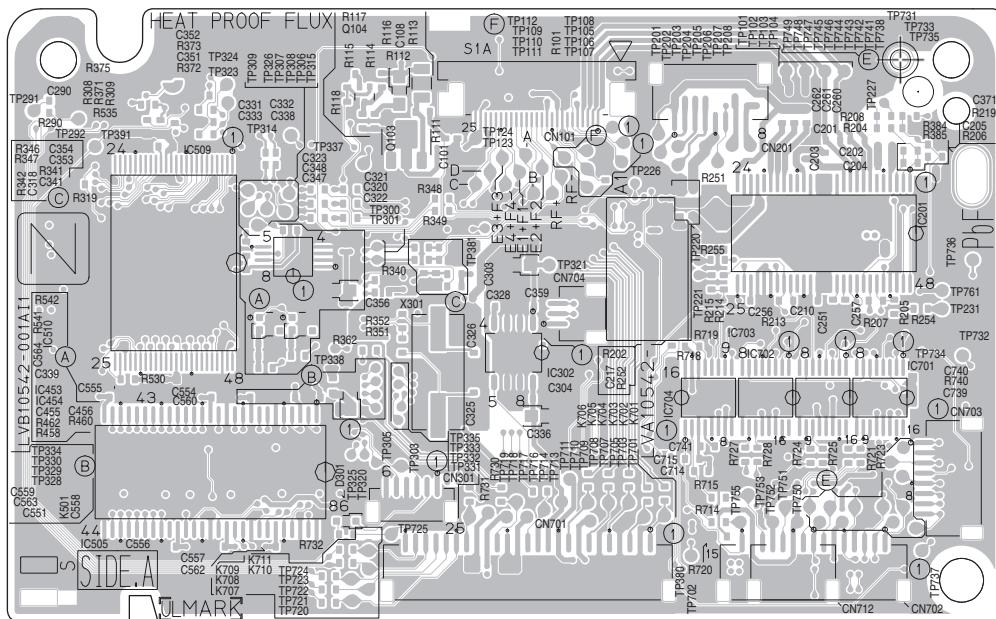


Reverse side

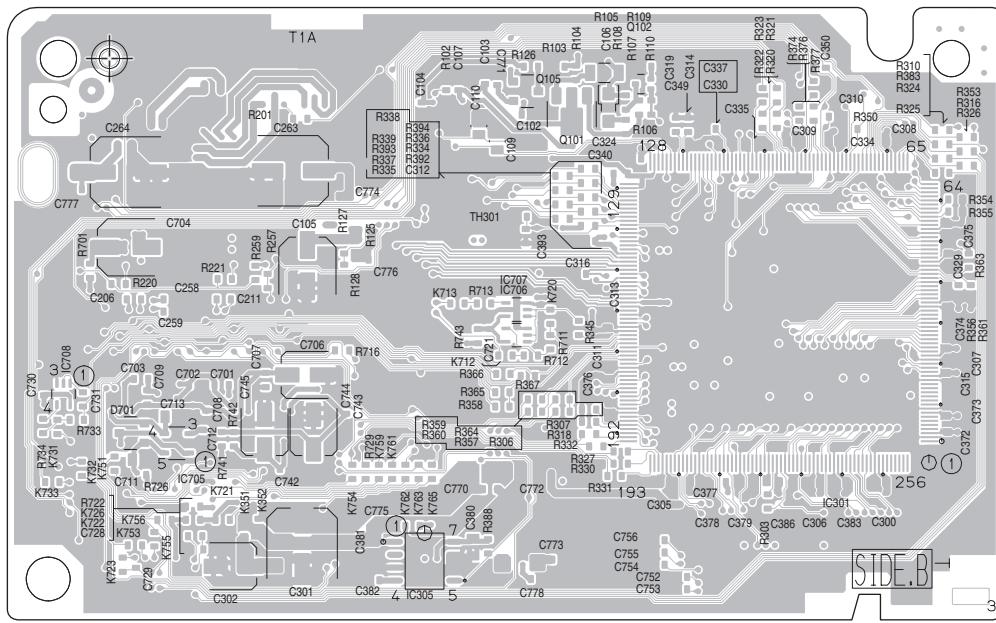

■ DVD loading switch board

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

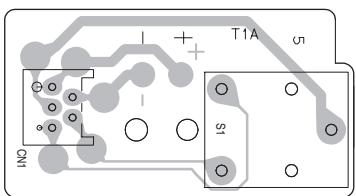

< M E M O >

JVC

Victor Company of Japan, Limited

AV & MULTIMEDIA COMPANY AUDIO/VIDEO SYSTEMS CATEGORY 10-1, 1chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.MB413SCH)

 Printed in Japan
VPT