

- 01 2SC2668
- 03,4,16 2SC2785
- 02,6 D1A114YS
- 05 2SA1175

TRANSISTOR

PIN	01			05			06			016		
	E	C	B	E	C	B	E	C	B	E	C	B
FM 8.7MHz NO SIGNAL	0	8.3	0.7	3.7	0	4.9	98	9.7	0.1	1.0	3.3	1.6
AM 5.2MHz NO SIGNAL	0	0	0	0	0	0	0	0	0	9.8	1.0	3.3


TRANSISTOR


PIN	02			03			04		
	E	C	B	E	C	B	E	C	B
AM 5.2MHz NO SIGNAL	2.0	2.0	0.2	0	0	0.7	0	0	0.7
AM 14MHz NO SIGNAL	2.0	2.0	0.2	0	0	1.0	1.0	0	0.7

PIN NUMBER	3		4		5		6		7		8		9		10		11		12		13		14		15		16		17		18		19		20		21		22		23		24	
	FM NO SIGNAL	2.0	0.5	0	2.0	5.1	5.1	0	0	0.2	5.0	5.0	1.1	1.1	4.4	3.6	3.6	1.4	0	1.3	1.1	2.0	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	
FM 8MHz STEREO	2.0	0.5	0	2.0	5.1	5.1	0	0	0.2	5.1	5.1	1.1	1.1	4.4	4.0	3.7	1.4	0	1.4	1.1	2.0	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0
AM NO SIGNAL	2.0	0.5	0	2.0	5.1	5.1	0	0	0.2	5.1	5.1	1.1	1.1	4.6	2.1	0.6	1.4	1.4	1.5	1.5	2.0	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0	5.1	2.0		
FM NO SIGNAL	2.6	0	0	5.7	5.0	5.2	3.7	0	2.0	3.9	5.0	0	0	0	0	0	0	0	2.5	5.0	1.1	1.1	1.6	0	2.5	5.0	1.1	1.1	1.6	0	2.5	5.0	1.1	1.1	1.6	0	2.5	5.0	1.1	1.1	1.6	0		

FM Radio signal line  
 AM Radio signal line  
 +B line

Q501	2SA952 (L,K)
Q581	2SA952 (L,K)
Q591	2SA1309 (R,S) OR 2SA1175 (HFE) OR 2SA933S (RS)
D601	MA700A OR RB721Q
D691	MA165 OR HSS104TJ OR 1SS254T-77

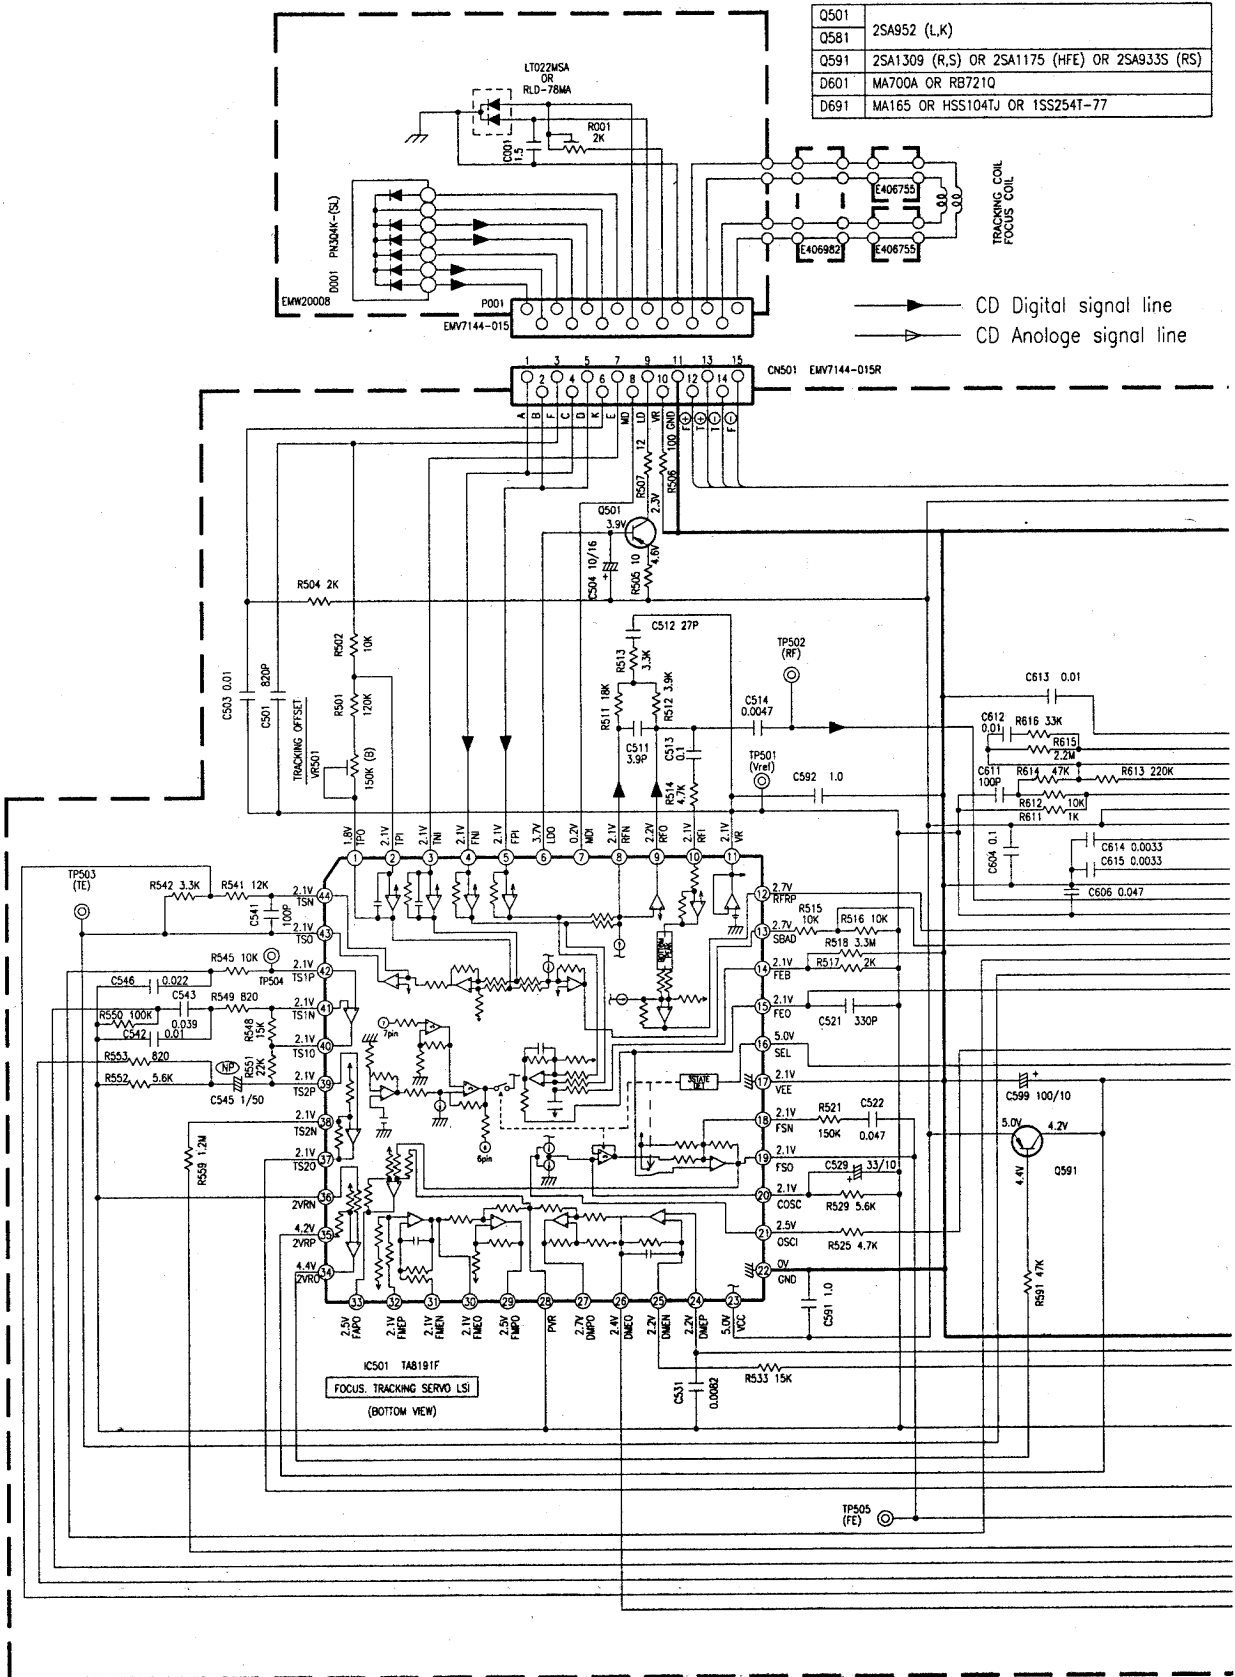


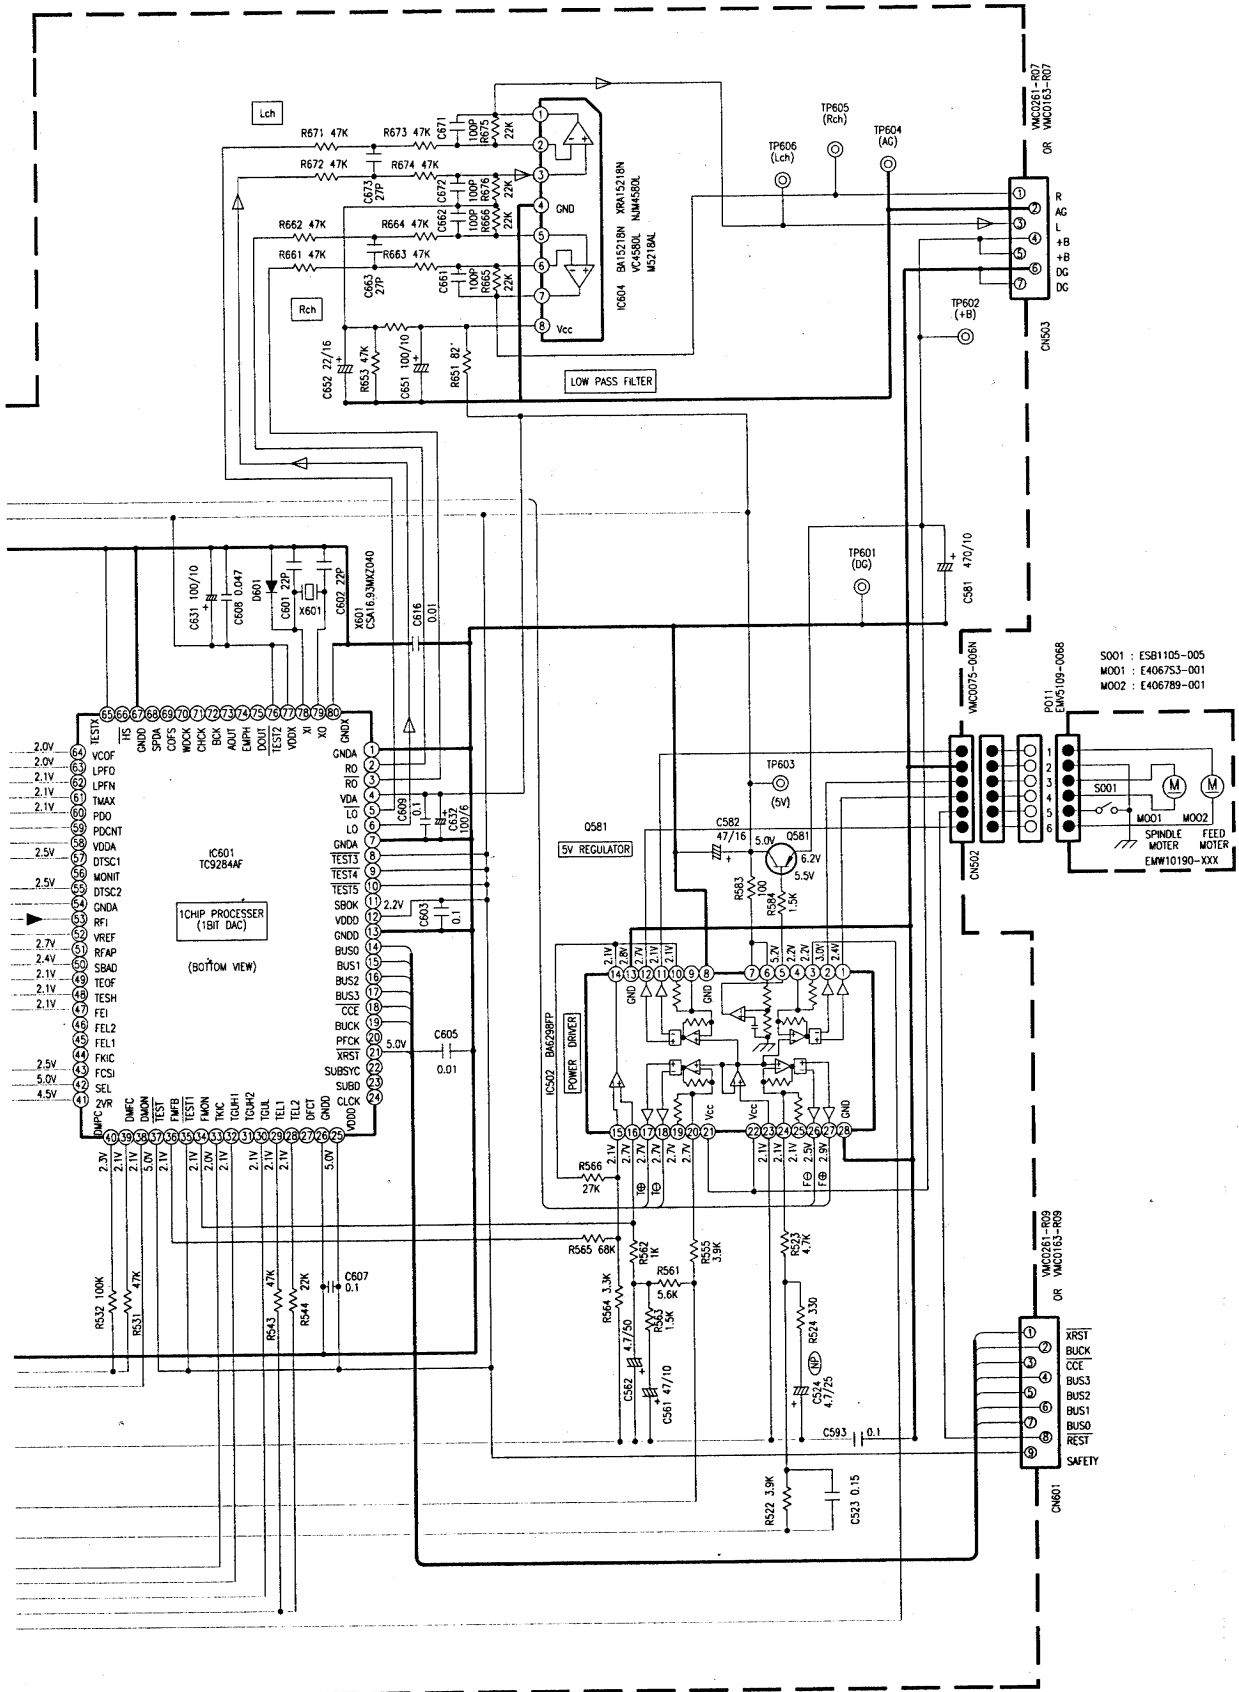


S001 : ESR1105-005  
M001 : E406753-001  
M002 : E406789-001


XRST  
BUCK  
CCE  
BUS3  
BUS2  
BUS1  
BUS0  
REST  
SAFETY




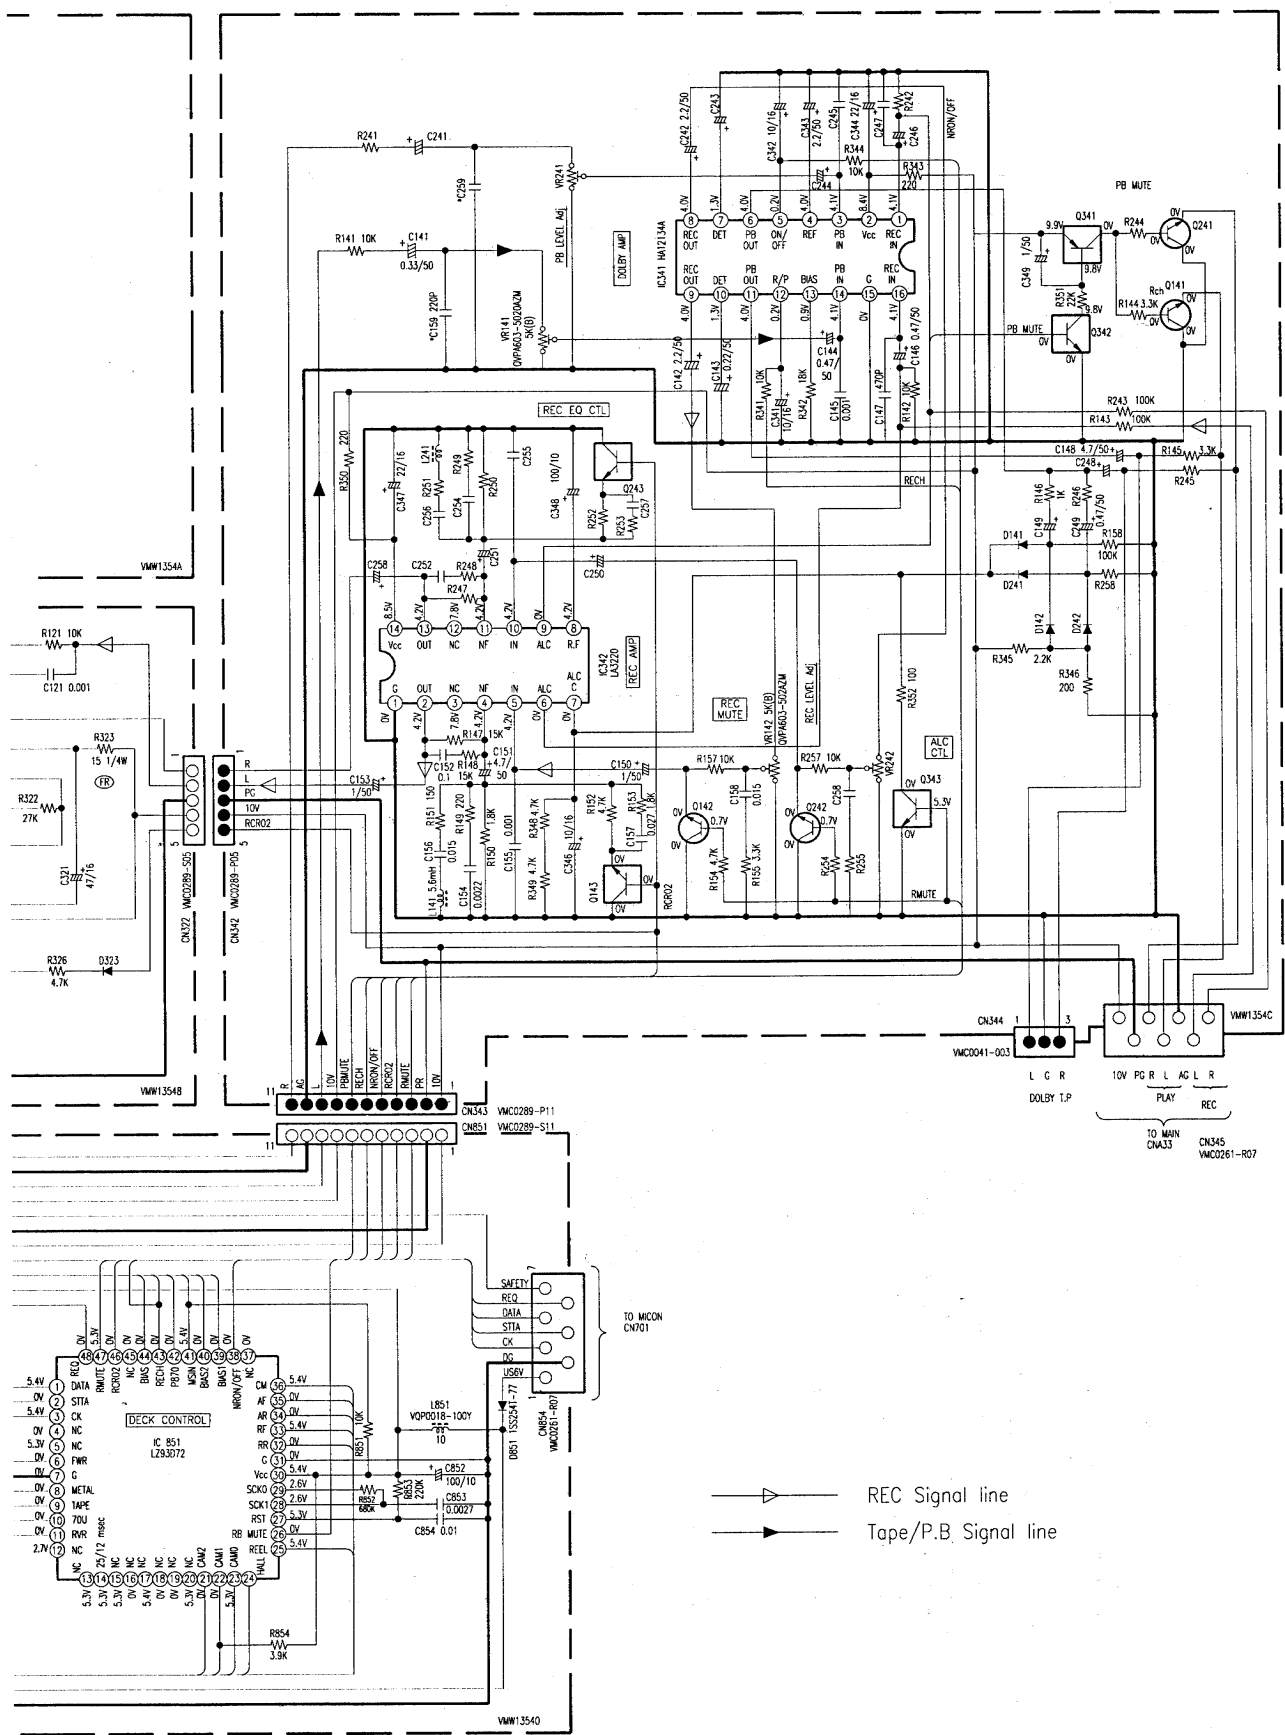


REC Signal line  
 Tape/P.B. Signal line

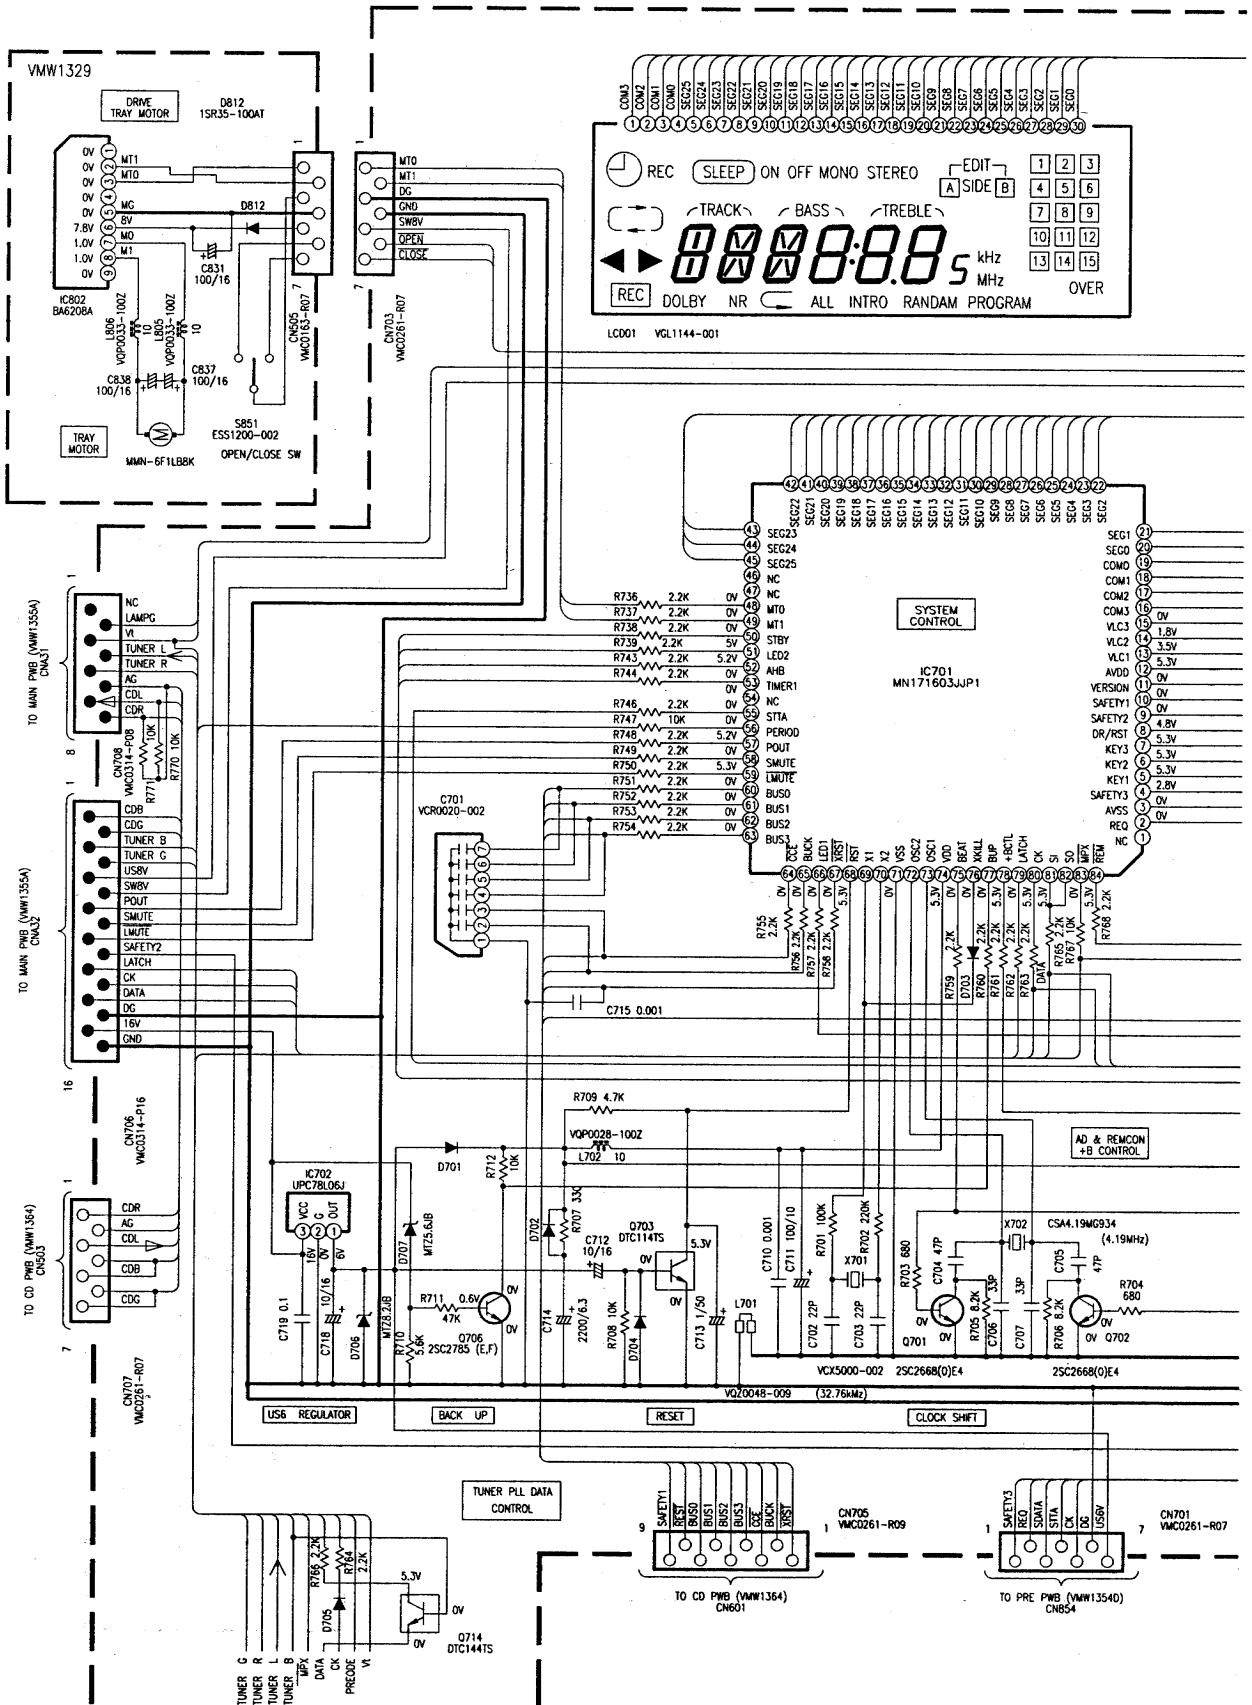

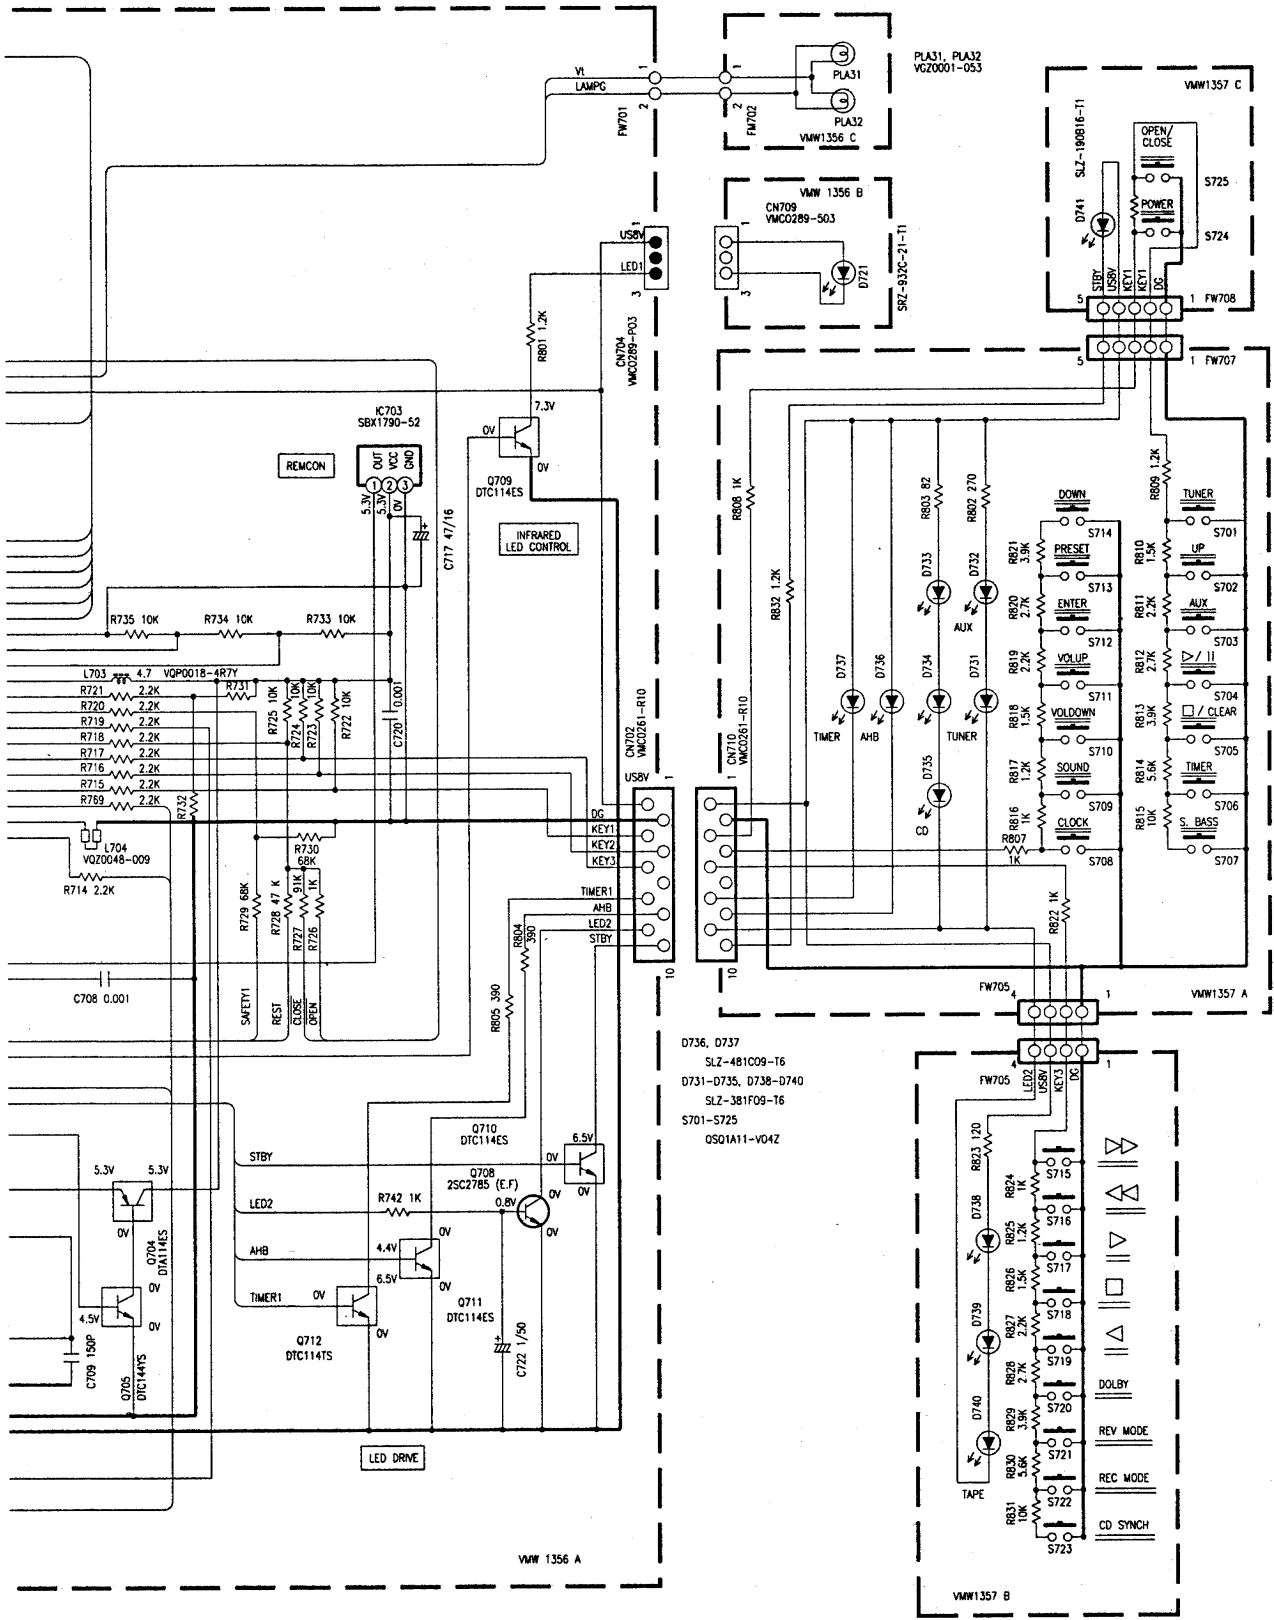

  - D736, D737 SLZ-481C09-16
- D731-D735, D738-D740 SLZ-381F09-16
- S701-S725 QS01A11-V04Z

 CD Analog signal line  
 FM Radio signal line

R1/R2	4.7K/4.7K	10K/47K
DI	DTA143ES	DTA114YS

R1/R2	10K/10K	
DI	DT114ES	

- CD Analogue signal line
- FM Radio signal line
- AUX IN Signal line
- Tape/P.B Signal line
- REC Signal line

