

STEREO MINIDISC RECORDER
DMF-3020/3020(S)/5020
MD-203
SERVICE MANUAL

KENWOOD

©1998-9/B51-5480-00 (K/K) 2945

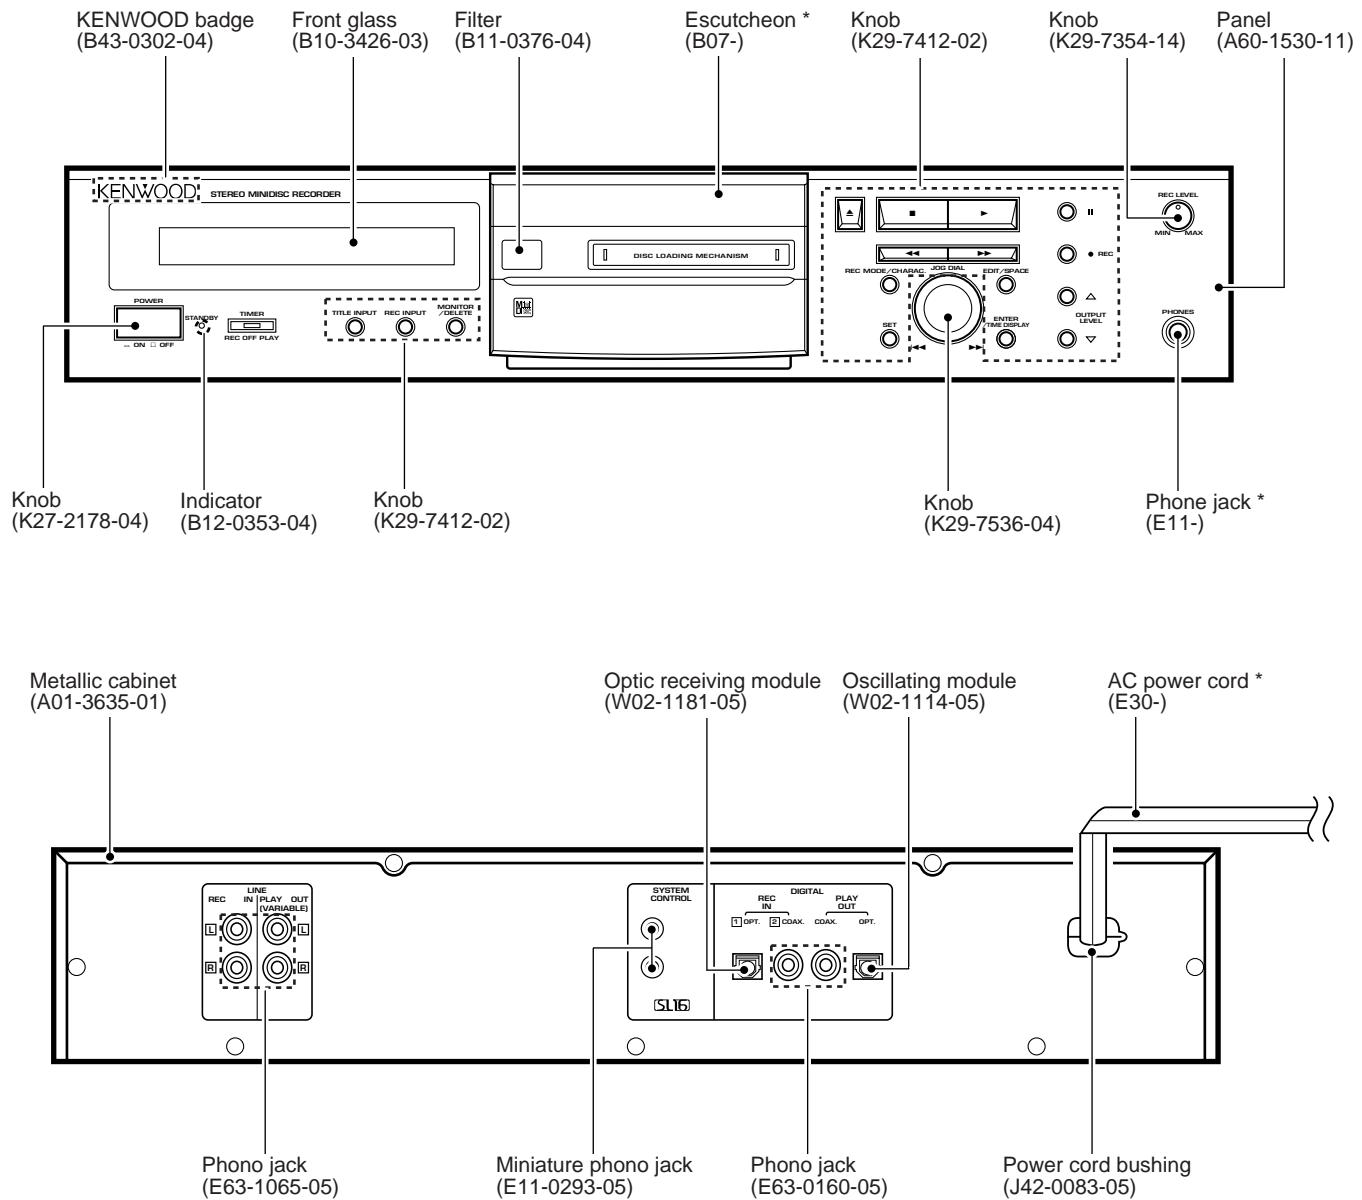


Illustration is DMF-3020.

* Refer to parts list on page 23.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety,

Refer to 1050MD/DM-5090/DM-9090 service manual (B51-5387-00) if you see the mechanism test mode.

KENWOOD-Corp. certifies this equipment conforms to DHHS Regulation No.21 CFR 1040.10, Chapter 1, Subchapter J.

DANGER : Laser radiation when open and interlock defeated.
 AVOID DIRECT EXPOSURE TO BEAM.

CONTENTS/ACCESSORIES/CAUTIONS

CONTENTS

CONTENTS/ACCESSORIES/CAUTIONS	2	SCHEMATIC DIAGRAM	11
CONTROLS	3	EXPLODED VIEW	21
BLOCK DIAGRAM	5	PARTS LIST.....	23
CIRCUIT DESCRIPTION	6	SPECIFICATIONS	Back cover
PC BOARD	8		


Refer to the Service manual, if you see the IC40, 41 on the X25 (PCB)

PCB	Ref No.	Parts No.	Refer to Service manual	Parts No.	Page
X25	IC40	KAN06	DV-203/2070, DVF-5010/9010/K7010	B51-5456-00	20
X25	IC41	PCM1716E	DV-203/2070, DVF-5010/9010/K7010	B51-5456-00	21


Accessories

Check that the following accessories are present.


Audio cord (2)
(E30-0505-05)

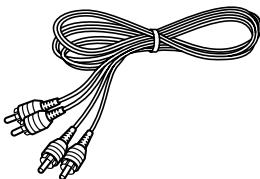


System control cord (1)
(E30-2733-05)

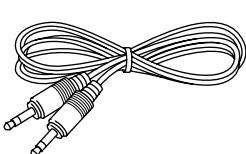

Optical fiber cable (1)
(B19-1529-05)

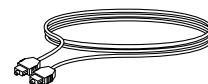


Remote control unit (1)
RC-M0705 (For DMF-5020)
(A70-1238-05)

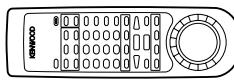


Battery cover (A09-1116-08)

Remote control unit (1)
RC-M0302 (For DMF-3020/MD-203)
(A70-1239-05)

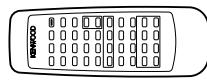

Battery cover (A09-0374-08)

Batteries (2)
R03 ("AAA"-size) batteries (For RC-M0705)
R6 ("AA"-size) batteries (For RC-M0302)

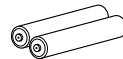

Cautions

Note related to transportation and movement

Before transporting or moving this unit, carry out the following operations.

1. Set the **POWER** key to ON without loading a Mini Disc.
● Check that no disc is present in the unit.
2. Wait a few seconds and verify that the display shown appears.
3. Set the **POWER** key to OFF.

NO DISC

Operation to reset

The microprocessor may fall into malfunction (impossibility to operate erroneous display, etc.) when the power cord is unplugged while power is ON or due to an external factor. In this case, execute the following procedure to reset the microprocessor and return it to normal condition.

With the **POWER key left to ON, unplug the power cord from the power outlet then, while holding the eject (▲) key depressed, plug the power cord again.**

- Please note that resetting the microprocessor clears the contents stored in it, returns the microprocessor to the condition when it left the factory.

Caution on condensation

Condensation (dew) may occur inside the unit when there is a great difference in temperature between this unit and the outside.

This unit may not function properly if condensation occurs. In this case, leave the unit for a few hours with the power left ON, and restart the operation after the condensation has dried up.

Be specially cautious against condensation in a following circumstance:

When this unit is carried from a place to another across a large difference in temperature, when the humidity in the room where this unit is installed increases, etc.


Memory backup

The typical period for which the memory can be backed up while the power cord is unplugged or the **POWER** key is set to the **OFF**position is about 3 weeks, though this may be variable depending on the surrounding environment.

In case of long hours of power failure or slipping out of the power cord, the data related to recording and editing (that is usually recorded at the moment the Mini Disc is ejected) may be cleared or destroyed before it is written in the Mini Disc. Remember that the data lost cannot be recovered.


After recording or editing, be sure to eject the Mini Disc so that the recording or editing data can be written in the disc.

Display / Main unit

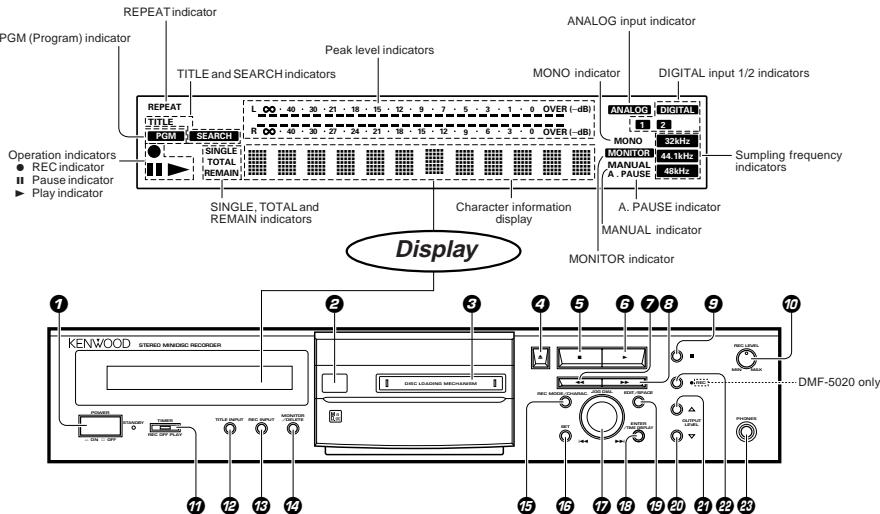

Listening through headphones

Plug the stereo headphones (with standard-plug) available in audio stores into the **PHONES** jack and adjust the listening volume with the **OUTPUT LEVEL** control on the front panel. The default value is 0 dB (maximum volume).

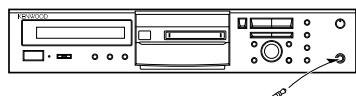

Standby mode

While the standby indicator of the unit is lit, a small amount of current is flowing into the unit's internal circuitry to back up the memory. This condition is referred to as the standby mode of the unit. While the unit is in the standby mode, it can be turned ON from the remote control unit.

Description of main unit keys

① POWER key

: Press to turn the unit ON and OFF.
: The unit may enter the standby mode when the **POWER** key is pressed to turn it ON. This is because the unit holds the memory that it has been put to the standby mode by the remote control unit in the last operation.

② Remote control sensor

③ Mini Disc insertion slot

: When a Mini Disc is inserted while the unit is in the standby mode, it is turned ON automatically.

④ Eject (△) key

: Press to eject the Mini Disc.

⑤ Stop (■) key

: Press to stop playback or recording.

⑥ Play (▶) key

: Press to start playback.

⑦ Manual search down (◀) key

: This key functions as the fast reverse key during playback.
: During an editing mode, press to move the title input cursor or to scroll the track title display to the left.

⑧ Manual search up (▶) key

: This key functions as the fast forward key during playback.
: During an editing mode, press to move the title input cursor or to scroll the track title display to the right.

⑨ Pause (II) key

: Press to let playback or recording pause temporarily.

⑩ REC LEVEL knob

: Rotate to adjust the analog recording level.

⑪ TIMER switch

: This switch is used in timer playback and timer recording.

⑫ TITLE INPUT key

: Press to switch the title input mode ON/OFF.

⑬ REC INPUT key

: Press to switch the recording input line between digital (optical/coaxial), analog and monaural.

⑭ MONITOR/DELETE key

MONITOR

: Press to monitor the sound being input from the source while the unit is in stop mode.

DELETE

: During title editing, press to delete a character. During track editing, press to delete a track.

⑮ REC MODE/CHARAC. (Character) key

REC MODE

: Press to switch the recording setting adjustment modes (record modes) ON/OFF.

CHARAC.

: Press to select a character group during the title input operation.

⑯ SET key

: For use in setting the editing result and input title in memory.
: When pressed in the recording pause mode, the **MEMORY REC** function is set and recording starts from the sound approximately 6 seconds before the current sound.

⑰ JOG DIAL

Skip down (◀◀) / Skip up (▶▶) knob

: During playback, rotate to skip tracks.
: Before starting recording in record mode, rotate to select the recording setting adjustment mode.
: During title search, rotate to select a track number.
: During title input, rotate to select a track number or a character.
: During editing, rotate to select the editing mode or a track number.

⑱ ENTER/TIME DISPLAY key

ENTER

: For use in executing the editing and title input operations.

TIME DISPLAY

: Press to switch the time and title display modes.

⑲ EDIT/SPACE key

EDIT

: Press to switch the editing mode ON/OFF.

SPACE

: Press to insert a blank space character during the title input operation.

⑳ OUTPUT LEVEL DOWN (▽) key

: Use this to decrease the volume of the headphones and the output level.

㉑ OUTPUT LEVEL UP (△) key

: Use this to increase the volume of the headphones and the output level.

㉒ Record (●) key

: Press to start recording.

In stop mode

: When the ● key is pressed while a recordable disc is present in the unit, it enters record-pause mode.
(It enters record-pause mode at the position immediately after the last existing track.)

In record-pause mode

: When the ● key is pressed, the **SOUND SYNCHRO REC** standby mode is set.
: In the **SOUND SYNCHRO REC** standby mode, the set functions in the same way as in the normal recording pause mode.

㉓ PHONES jack

: Connect stereo headphones (optional) here.

CONTROLS

Remote control unit (DMF-3020/MD-203)

The remote control unit incorporates the basic operation keys as well as a variety of applied operation keys so that it can be used in a wide range of purposes.

The keys on the remote control unit with the same names as on the main unit have the same function as the keys on the main unit.

① Numeric keys / Character editing keys

Numeric keys

0-9

: Press when selecting a track number directly.

+10

: Press when selecting a track number 10 or more.

+100

: Press when selecting a track number 100 or more.

: These keys are also used to select a character or symbol during title editing.

CHARACTER DELETE/CLEAR key

CHARACTER DELETE

: During title input, press to delete a character.

CLEAR

: During editing, press to clear a selected track number.

: In program mode, press to clear the program.

CHARACTER SPACE/CHECK key

CHARACTER SPACE

: During title input, press to insert a blank space character.

CHECK

: In program mode, press to check the program contents.

CHARA. (Character)/P.MODE (Play Mode) key

CHARA.

: Press to select a character group during the title input operation.

P.MODE

: Press to initiate the program mode.

② ON/STANDBY key

: Press to turn the unit between ON and STANDBY (I/O) modes.

③ REPEAT key


: Press to switch the repeat modes for repeat playback.

RANDOM key

: Press to initiate the random play mode.

④ OUTPUT LEVEL (△▽) keys

: Use these to adjust the output level and the volume of the headphones.

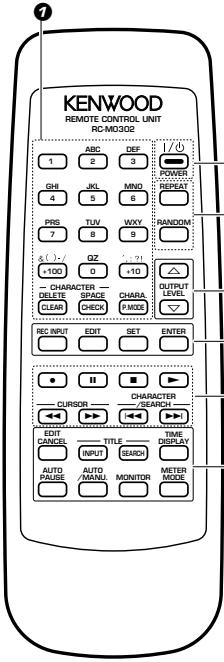

Model: RC-M0302
Infrared ray system

⑤ Editing mode keys

REC INPUT key

: Press to switch the recording input line between digital (optical/coaxial), analog and monaural.

EDIT key

: Press to switch the editing mode ON/OFF.

SET key

: This key is used in the title assignment or editing operations.

: When pressed in the recording pause mode, the MEMORY REC function is set and recording starts from the sound approximately 6 seconds before the current sound.

ENTER key

: Press to execute editing or enter the input title in memory.

⑥ Basic operation keys

PLAY key

: Record key

PAUSE key

: Pause key

STOP key

: Stop key

PLAY key

: Play key

CURSOR / ▲, ▼, ▶, ▶ keys

: During playback, press to fast forward or fast reverse the play.

CURSOR

: During title input, press to move the cursor.

CHARACTER/SEARCH/◀, ▶ keys

CHARACTER

: Press to select a character group during the title input operation.

SEARCH

: During title search, rotate to select a track number.

◀, ▶

: During playback, press to skip tracks in the forward or reverse direction.

⑦ Applied operation keys

EDIT CANCEL key

: Press to cancel the editing operation.

TITLE INPUT key

: Press to switch the title input mode ON/OFF.

TITLE SEARCH key

: Press to switch the title search mode ON/OFF.

: During title editing, press to switch the title change input mode between the "overwrite mode" and "insert mode".

TIME DISPLAY key

: Press to switch the time and title display modes.

AUTO PAUSE key

: When this key is pressed, the pause mode is initiated automatically at the point where the track number changes during playback.

: When pressed in the recording or recording standby mode, the AUTOREC PAUSE mode is turned on.

AUTO/MANU. key

: Selects whether the track numbers are to be marked automatically during recording (AUTO) or to be marked manually after it (MANUAL).

MONITOR key

: Press to monitor the sound being input from the source while the unit is in stop mode.

METER MODE key

: Press to switch the level meter display contents.

Remote control unit (DMF-5020)

The remote control unit incorporates the basic operation keys as well as a variety of applied operation keys so that it can be used in a wide range of purposes.

The keys on the remote control unit with the same names as on the main unit have the same function as the keys on the main unit.

① ON/STANDBY key

: Press to turn the unit between ON and STANDBY (I/O) modes.

② OUTPUT LEVEL (△▽) keys

: Use these to adjust the output level and the volume of the headphones.

③ Character editing keys

TIME DISPLAY key

: Press to switch the time and title display modes.

CHARA. (Character)/ P.MODE (Play Mode) key

CHARA.

: Press to select a character group during the title input operation.

P.MODE

: Press to initiate the program mode.

DELETE/CLEAR key

DELETE

: During title input, press to delete a character.

CLEAR

: During editing, press to clear a selected track number.

CLEAR

: In program mode, press to clear the program.

SPACE/CHECK key

SPACE

: During title input, press to insert a blank space character.

CHECK

: In program mode, press to check the program contents.

④ CURSOR / ▲, ▼, ▶, ▶ keys

CURSOR

: During title input, rotate to move the cursor.

◀, ▶

: Use this during playback for forward and reverse search.

⑤ EJECT (▲) key

⑥ Editing mode keys

EDIT CANCEL key

: Press to cancel the editing operation.

TITLE INPUT key

: Press to switch the title input mode ON/OFF.

TITLE SEARCH key

: Press to switch the title search mode ON/OFF.

: During title editing, press to switch the title change input mode between the "overwrite mode" and "insert mode".

SET key

: This key is used in the title assignment or editing operations.

: When pressed in the recording pause mode, the MEMORY REC function is set and recording starts from the sound approximately 6 seconds before the current sound.

ENTER key

: Press to execute editing or enter the input title in memory.

EDIT key

: Press to switch the editing mode ON/OFF.

⑦ Numeric keys

0-9

: Press when selecting a track number directly.

+10

: Press when selecting a track number 10 or more.

+100

: Press when selecting a track number 100 or more.

: These keys are also used to select a character or symbol during title editing.

⑧ Basic operation keys

▶

: Play key

◀, ▶, ▶

: Skip down/up keys

●


: Record key

■

: Stop key

■

: Pause key

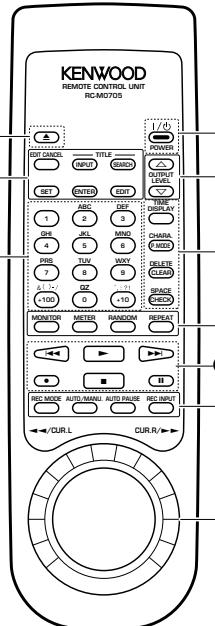

Model: RC-M0705
Infrared ray system

⑨ Recording-related keys

REC MODE key

: Press to switch the recording setting adjustment modes ON/OFF.

AUTO/MANU. key

: Selects whether the track numbers are to be marked automatically during recording (AUTO) or to be marked manually after it (MANUAL).

AUTO PAUSE key

: When this key is pressed, the pause mode is initiated automatically at the point where the track number changes during playback.


: When pressed in the recording or recording standby mode, the AUTOREC PAUSE mode is turned on.

REC INPUT key

: Press to switch the recording input line between digital (optical/coaxial), analog and monaural.

DMF-3020/3020(S)/5020/MD-203


BLOCK DIAGRAM

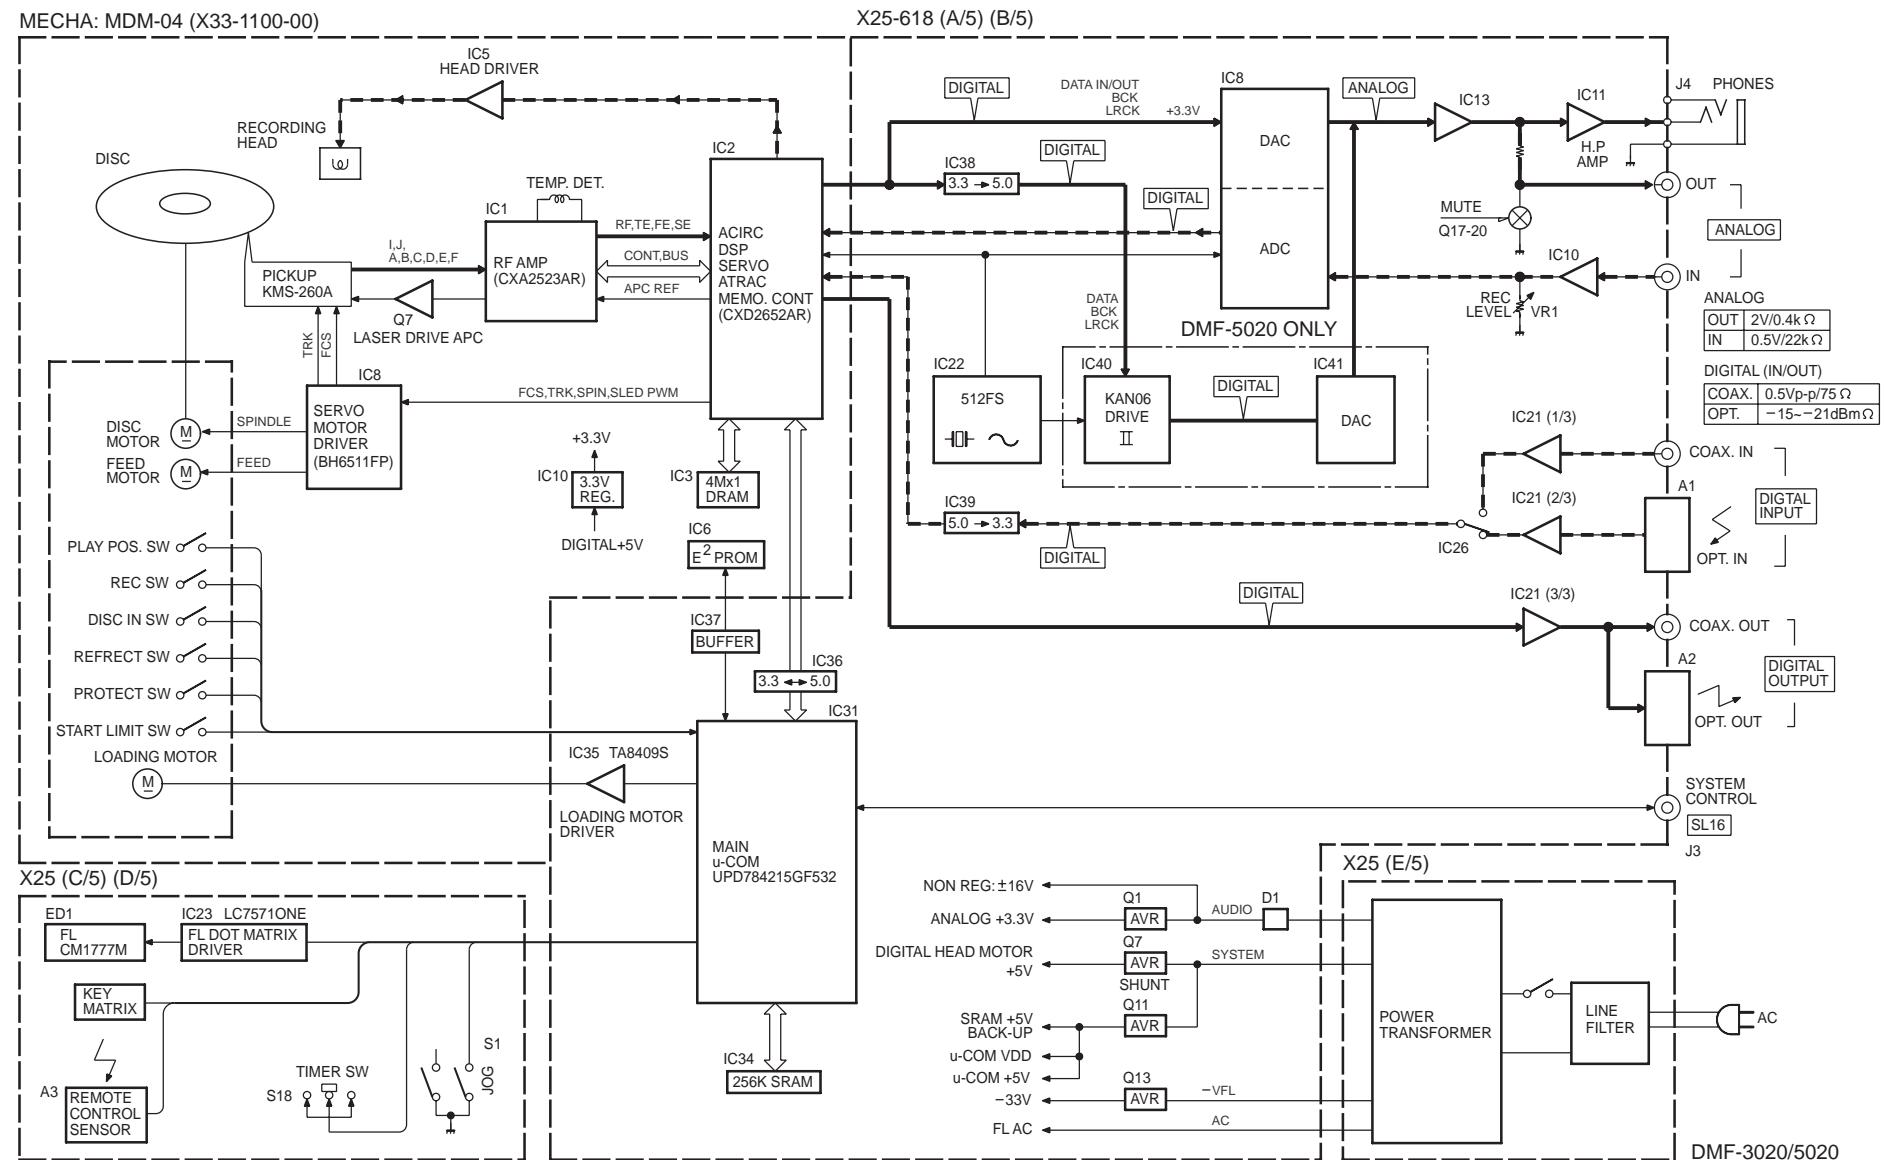

CIRCUIT DESCRIPTION

1. Main microprocessor : uPD784215GF532 (X25: IC31)

1-1 Microprocessor periphery block diagram

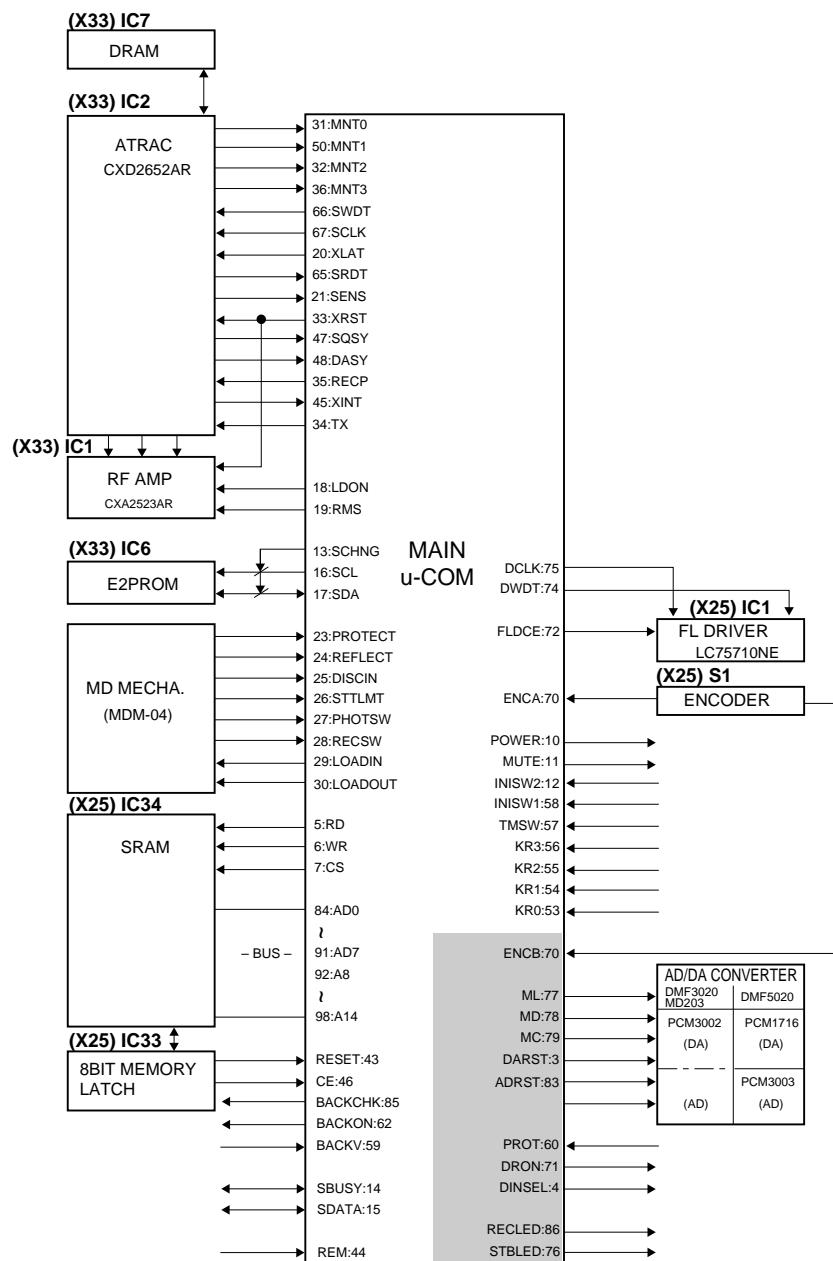

1-2 Pin description

No.	Name	I/O	Description
1,2	-	O	N.C.
3	DARST	O	DAC reset
4	DINSEL	O	Digital 1/2 select
5	RD	O	SRAM read strobe
6	WR	O	SRAM write strobe
7	CS	O	SRAM CS
8	ASTB	O	SRAM address strobe
9	Vdd	-	Power supply (Microprocessor)
10	POWER	O	Power terminal
11	MUTE	O	Mute control output
12	INISW2	I	Destination selector
13	SCHNG	O	E2PROM data IN/OUT change-over
14	SBUSY	I/O	16 serial busy
15	SDATA	I/O	16 serial data
16	SCL	O	E2PROM clock
17	SDA	I/O	E2PROM data
18	LDON	O	Laser ON / OFF control port
19	RMS	O	Pick RMS
20	XLAT	O	System IC latch
21	SENS	I	System IC sens
22	Vpp	-	GND
23	PROTECT	I	Detection port of protect switch
24	REFLECT	I	Detection port of reflect switch
25	DISCIN	I	Detection of disc input switch
26	STTLM	I	Detection port of limit switch
27	PHOTSW	I	Detection of mechanism play position
28	REC SW	I	Input port of detection from REC position switch
29	LOADIN	O	Output port of loading motor control signal
30	LOADOUT	O	Output port of loading motor control signal
31	MNT0	I	FOK signal from CXD2652AR (IC2)
32	MNT2	I	Input port of monitor 2 from CXD2652AR (IC2)
33	XRST	O	Output port of reset signal to CXD2652AR (IC2)
34	TX	O	Output port of recording permitted signal
35	RECP	O	Laser power control to CXD2652AR (IC2)
36	MNT3	I	Input port of monitor 3 from CXD2652AR (IC2)
37	Vdd	-	Power supply (Microprocessor)
38,39	-	-	Clock IN / OUT (12.5MHz)
40	GND	-	GND
41	OPEN	O	No used
42	GND	I	No used
43	RESET	I	Microprocessor hard reset
44	REM	I	Remocon signal input terminal
45	XINT	I	Input port of interrupted status from CXD2652AR (IC2)
46	CE	I	Microprocessor chip enable
47	SQSY	I	Input port of sub code Q from CXD2652AR (IC2)
48	DQSY	I	U-bit of digital IN / SUB Q sync input of CD format from CXD2652AR (IC2)
49	DDQSY	I	N.C.
50	MNT1	I	Input port of track jump detection from CXD2652AR (IC2)
51	Vdd	-	Microprocessor power supply (+5V)
52	Avref 0	-	A/D reference voltage (Connect Vdd)
53-56	KR0-KR3	I	Key return (KR0-KR3)
57	TMSW	I	Timer switch input 0.0V QEE 1.25V PLAY 3.7V REC 5.0V
58	INISW1	I	Detection selector
59	BACK	I	Back up voltage detection (Less than 2.2V : NG)
60	PROT	I	Protection detection
61	GND	-	GND
62	BACK ON	O	Back up charge control
63	ENCA	I	Rotary encoder A
64	Avref 1	-	D/A reference voltage (+5V)
65	SRDT	I	Data for reading input from CXD2652AR (IC2)

DMF-3020/3020(S)/5020/MD-203

CIRCUIT DESCRIPTION

No.	Name	I/O	Description
66	SWDT	O	Data for writing to CXD2652AR (IC2)
67	SCLK	O	Serial clock to CXD2652AR (IC2)
68,69	-	-	N.C.
70	ENCB	I	Communication to sub u-COM (IC28) Rotary encoder B
71	DRON	O	DSP (D.R.I.V.E II : IC40) drive on H: ON
72	FLDCE	O	Latch to FL driver
73	-	I	N.C.
74	DWDT	O	Data to LC75710NE (IC1)
75	DCLK	O	Clock to LC75710NE (IC1)
76	STB LED	O	Latch to LC8904Q (IC23) Standby LED ON/OFF H: ON
77	ML	O	DAC (IC41) control latch
78	MD	O	DAC (IC41) control data
79	MC	O	DAC (IC41) control clock
80	-	O	No used / pull up
81	BACKCHK	O	Back up voltage check
82	REC LED	O	Clock to SM5844AF (IC25) REC LED ON/OFF H: ON
83	ADRST	O	Data to SM5844AF (IC25) ADC reset
84-91	AD0-AD7	O	SRAM address / data (AD0-AD7)
92-99	A8-A15	O	SRAM address (A8-A15)
100	Vss	-	GND

1-3 Initialization

※ POWER	= ON (DM-9090,DM-5090)
※ REC INPUT	= ANALOG
※ OUTPUT LEVEL	= 0 dB
※ AUTO/MANUAL	= AUTO
※ AUTO CUT	= OFF
PLAY MODE	= TRACK
REPEAT	= OFF
TIME DISPLAY	= SINGLE(+)
LEVEL METER MODE	= NORMAL MODE
※ AUTO TNO TIME	= 2 sec
※ AUTO TNO LEVEL	= 0 (-55 dB)
※ REC END WRITE DRIVE	= ON
※ PRESET TITLE	= ON
	= PRE1 : Pops
	PRE2 : Rock
	PRE3 : Classic
	PRE4 : Jazz
	PRE5 : Disco
	PRE6 : Best Hits
	PRE7 : Air Check
	PRE8 : No.
	PRE9 : Vol.

※ : Backup item

1-4 Switch control table

Model	INISW 58	INISW 12
DMF-3020	3.5 (V)	LOW
MD-203		
DMF-5020	1.5 (V)	

1-5 Key voltage matrix

	0.0 V	0.8 V	1.6 V	2.4 V	3.2 V	4.0 V
KR0	-	TT INPUT	REC INPUT	-	MONITOR/	-
KR1	EJECT	STOP	FB	REC MODE	SET	-
KR2	PLAY	FF	EDIT/ SPACE	-	ENTER/ TIME	-
KR3	PAUSE	REC	LEVEL UP	LEVEL DOWN	-	-

5.0V : KEY OFF

2. AD/DA converter : PCM3002E, PCM3003E (X25: IC8)

2-1 PIN DESCRIPTION

(PCM3002E: DMF-3020,MD-203)


PIN	PIN NAME	I/O	DESCRIPTION
1,2	VCC1	-	ADC ANALOG POWER SUPPLY
3	VINR	I	RCH ANALOG INPUT
4,5	VREF1,2	-	REFERENCE VOLTAGE 1,2
6	VINL	I	LCH ANALOG INPUT
7	RST	I	RESET L: ON
8	ML	I	CONTROL DATA INPUT LOAD STROBE
9	SYSCK	I	SYSTEM CLOCK INPUT256fs 384fs 512fs
10	LRCIN	I	SAMPLING CLOCK INPUT
11	BCKIN	I	BIT CLOCK INPUT
12	DOUT	O	DIGITAL AUDIO DATA OUTPUT
13	DGND	-	DIGITAL GND
14	VDD	-	DIGITAL POWER SUPPLY
15	DIN	I	DIGITAL AUDIO DATA INPUT
16	ZERO	I	ZERO FLAG OUTPUT L: ON
17	MD	I	CONTROL DATA INPUT
18	VOUTL	O	LCH ANALOG OUTPUT
20	VOUTR	O	RCH ANALOG OUTPUT
21	VCOM	-	ANALOG AMP COMMON
22	AGND2	-	DAC ANALOG GND
23	AGND1	-	ADC ANALOG GND
24	VCC2	-	DAC ANALOG GND

(PCM3003E: DMF-5020)

PIN	PIN NAME	I/O	DESCRIPTION
1,2	VCC1	-	ADC ANALOG POWER SUPPLY
3	VINR	I	RCH ANALOG INPUT
4,5	VREF1,2	-	REFERENCE VOLTAGE 1,2
6	VINL	I	LCH ANALOG INPUT
7	PDAD	I	ADC POWER DOWN L: ON
8	PDDA	I	DAC POWER DOWN L: ON
9	SYSCK	I	SYSTEM CLOCK INPUT256fs 384fs 512fs
10	LCRIN	I	SAMPLING CLOCK INPUT
11	BCKIN	I	BIT CLOCK INPUT
12	DOUT	O	DIGITAL AUDIO DATA OUTPUT
13	DGND	-	DIGITAL GND

PIN	PIN NAME	I/O	DESCRIPTION
14	VDD	-	DIGITAL POWER SUPPLY
15	DIN	I	DIGITAL AUDIO DATA INPUT
16	20BIT	I	20/16 BIT DATA FORMAT CHOICE
17,18	DEM1,0	I	DE-EMPHASIS CONTROL 1,0
19	VOUTL	O	LCH ANALOG OUTPUT
20	VOUTR	O	RCH ANALOG OUTPUT
21	VCOM	-	ANALOG AMP COMMON
22	AGND2	-	DAC ANALOG GND
23	AGND1	-	ADC ANALOG GND
24	VCC2	-	DAC ANALOG GND

2-2 Block diagram

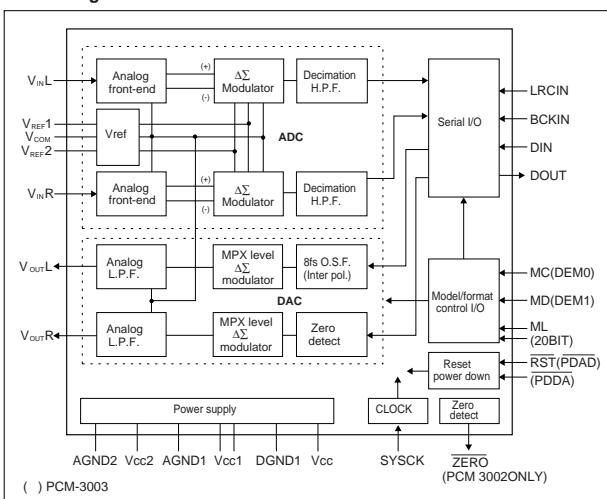

3. Test mode of the unit

3-1 Setting of the test mode

While pressing the [REC/INPUT] key, plug the AC power cord into the AC wall outlet.

3-2 Contents of the test mode

Choose the 3 mode by TIMER switch position below.

TIMER SW	Mode
(1) REC	INSPECTION
(2) PLAY	ERROR RATE
※ OFF	NONE

※ NONE means none mode.

(1) [INSPECTION] mode

• 「ENGLISH」 display (2secs)

• " NIAGARA TEST " display
 [Dot : Niagara
 Segment : All lighting]

• Push a key, then cancel " NIAGARA TEST "

• Function of the key

Key	Mode
REC/INPUT	※ KEY-TEST
EDIT	NIAGARA TEST
TITLE INPUT	None all lighting

※ Display [KEY 028] into the KEY-TEST mode.

Push a key, then display [KEY * * *].

(2) [ERROR RATE] mode

• Function of the key

Key	Function
PLAY	CPLAY (MID)
REC	CREC (MID)
STOP	STOP CPLAY, CREC (2time push) ERROR RATE

4. Microprocessor reset

The microprocessor can be initialized while pressing the [EJECT] key, plug the AC power cord into the AC wall outlet.

5. Mechanism test mode

Refer to 1050MD/DM-5090/MD-9090 service manual (B51-5387-00), if you see this test mode.

A

B



C

D


E

PC BOARD (Component side view)





(X33-1100-00)

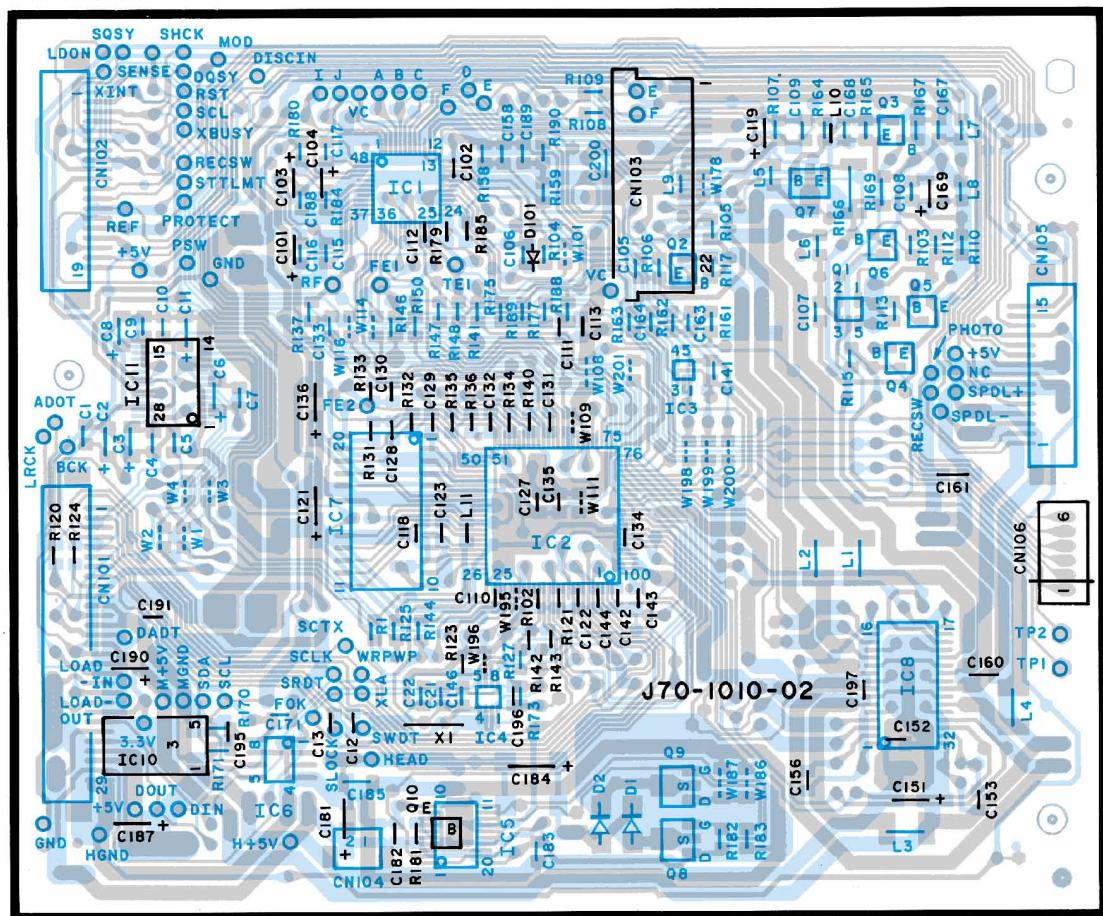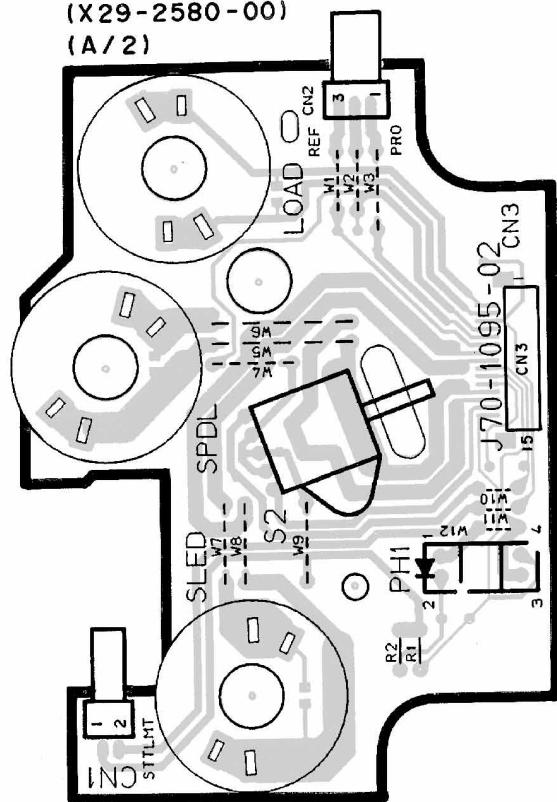(X29-2580-00)
(A/2)


(X29) (B/2)

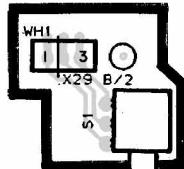


PC BOARD(Component side view)

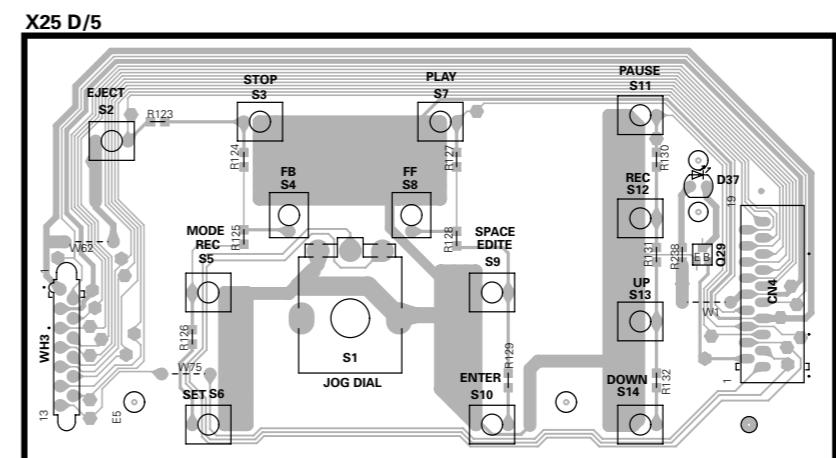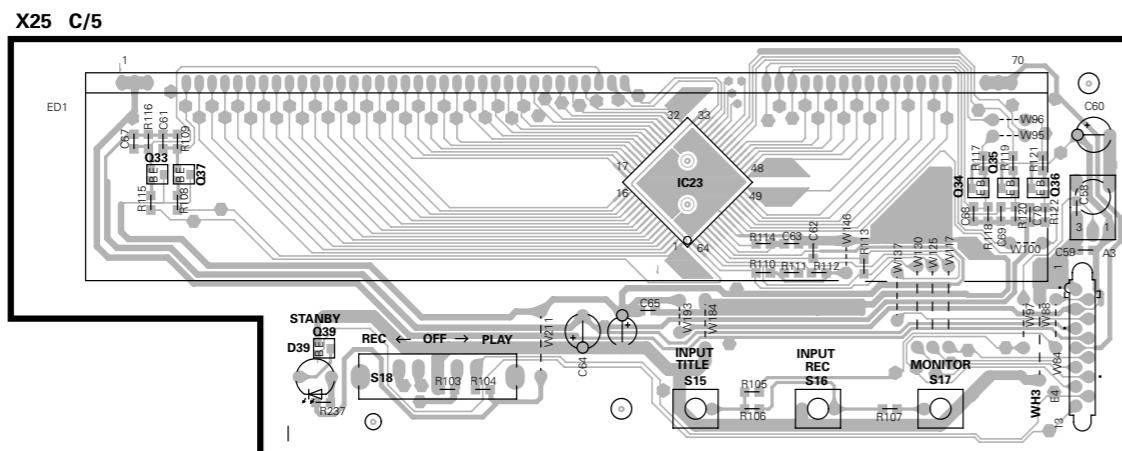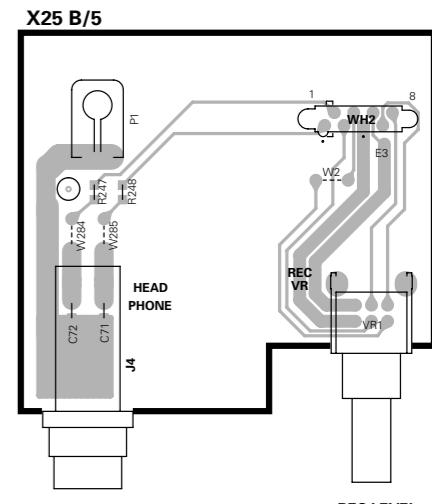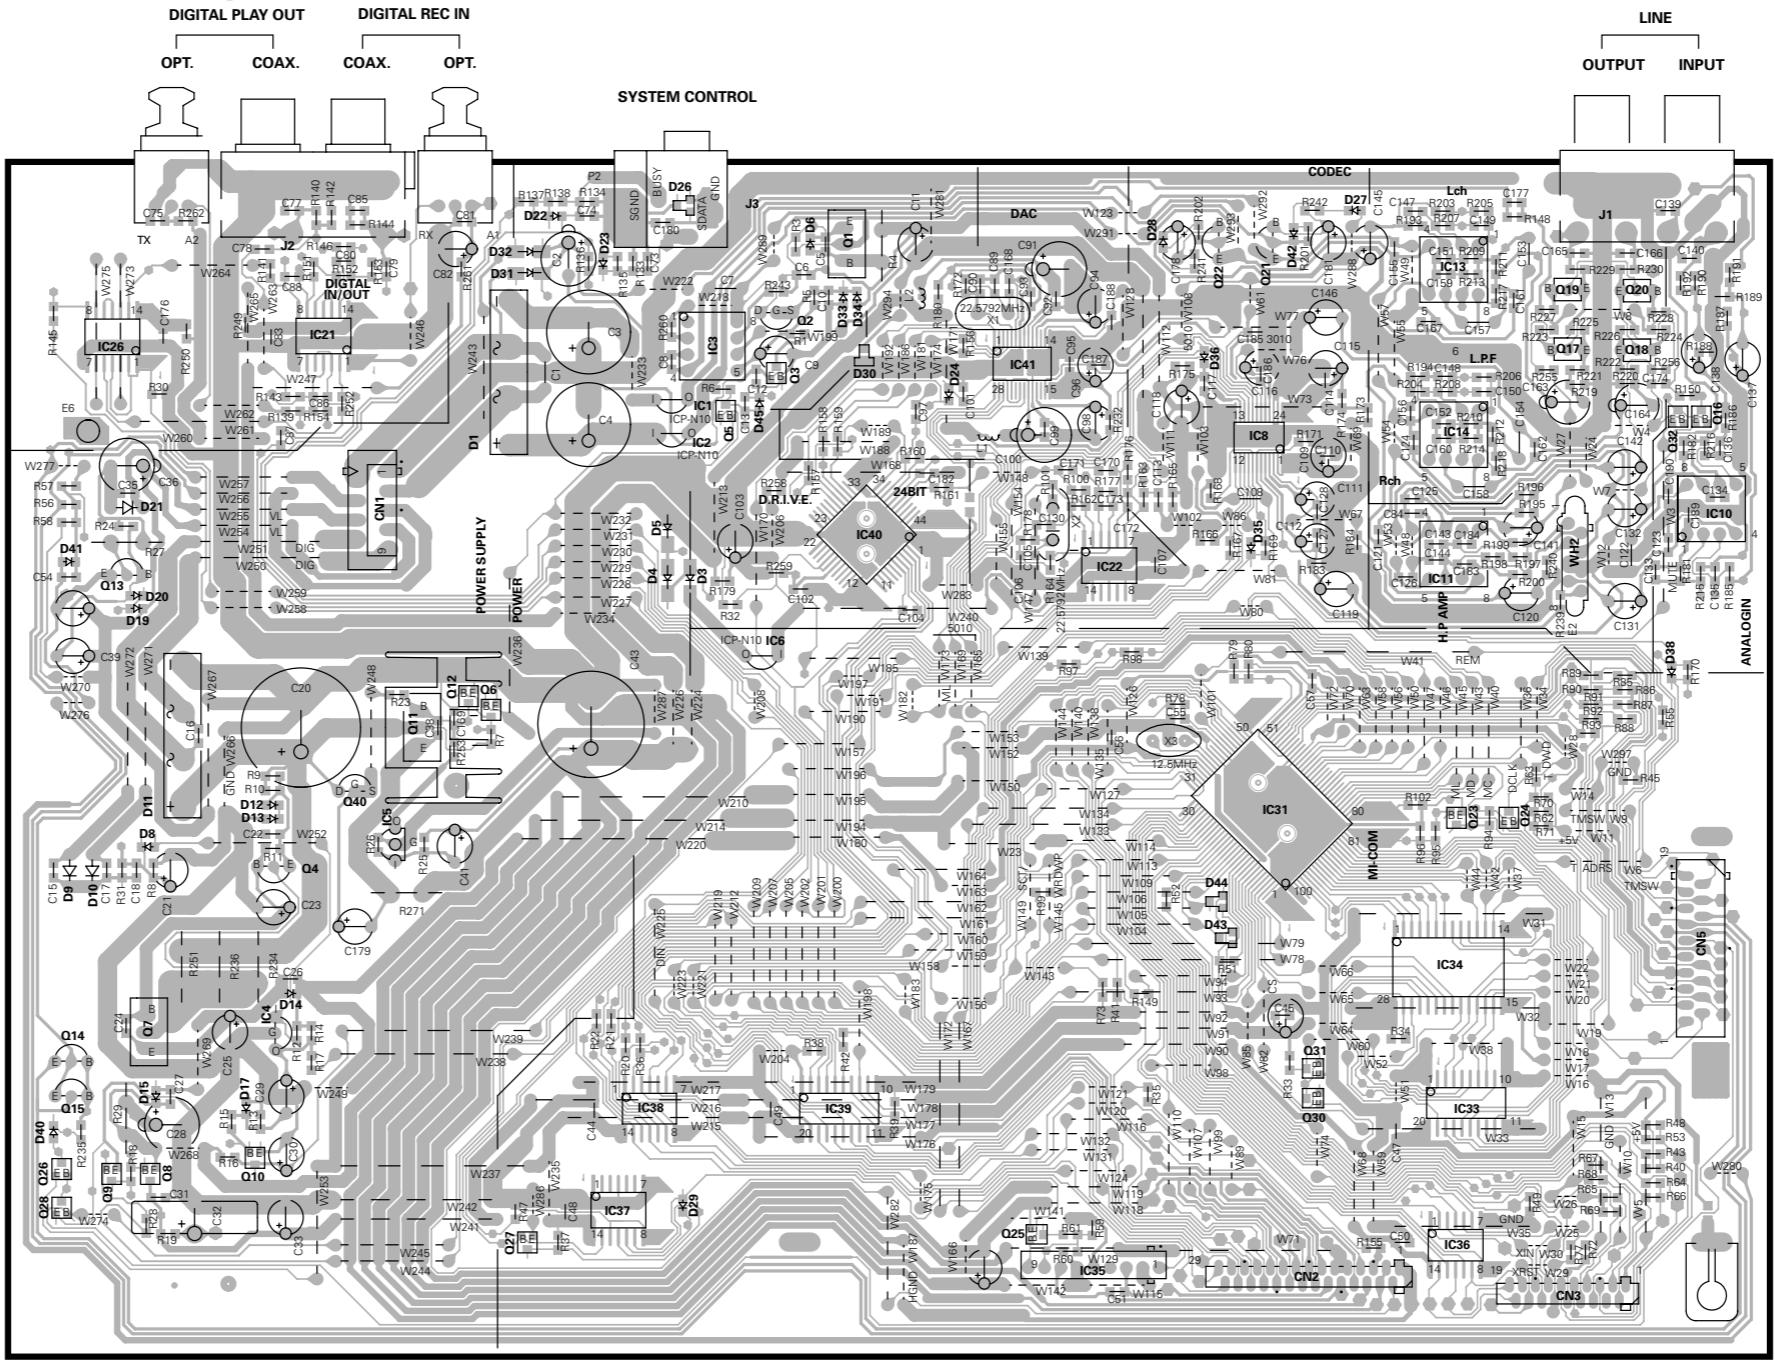

Refer to the schematic diagram for the value of resistors and capacitors.

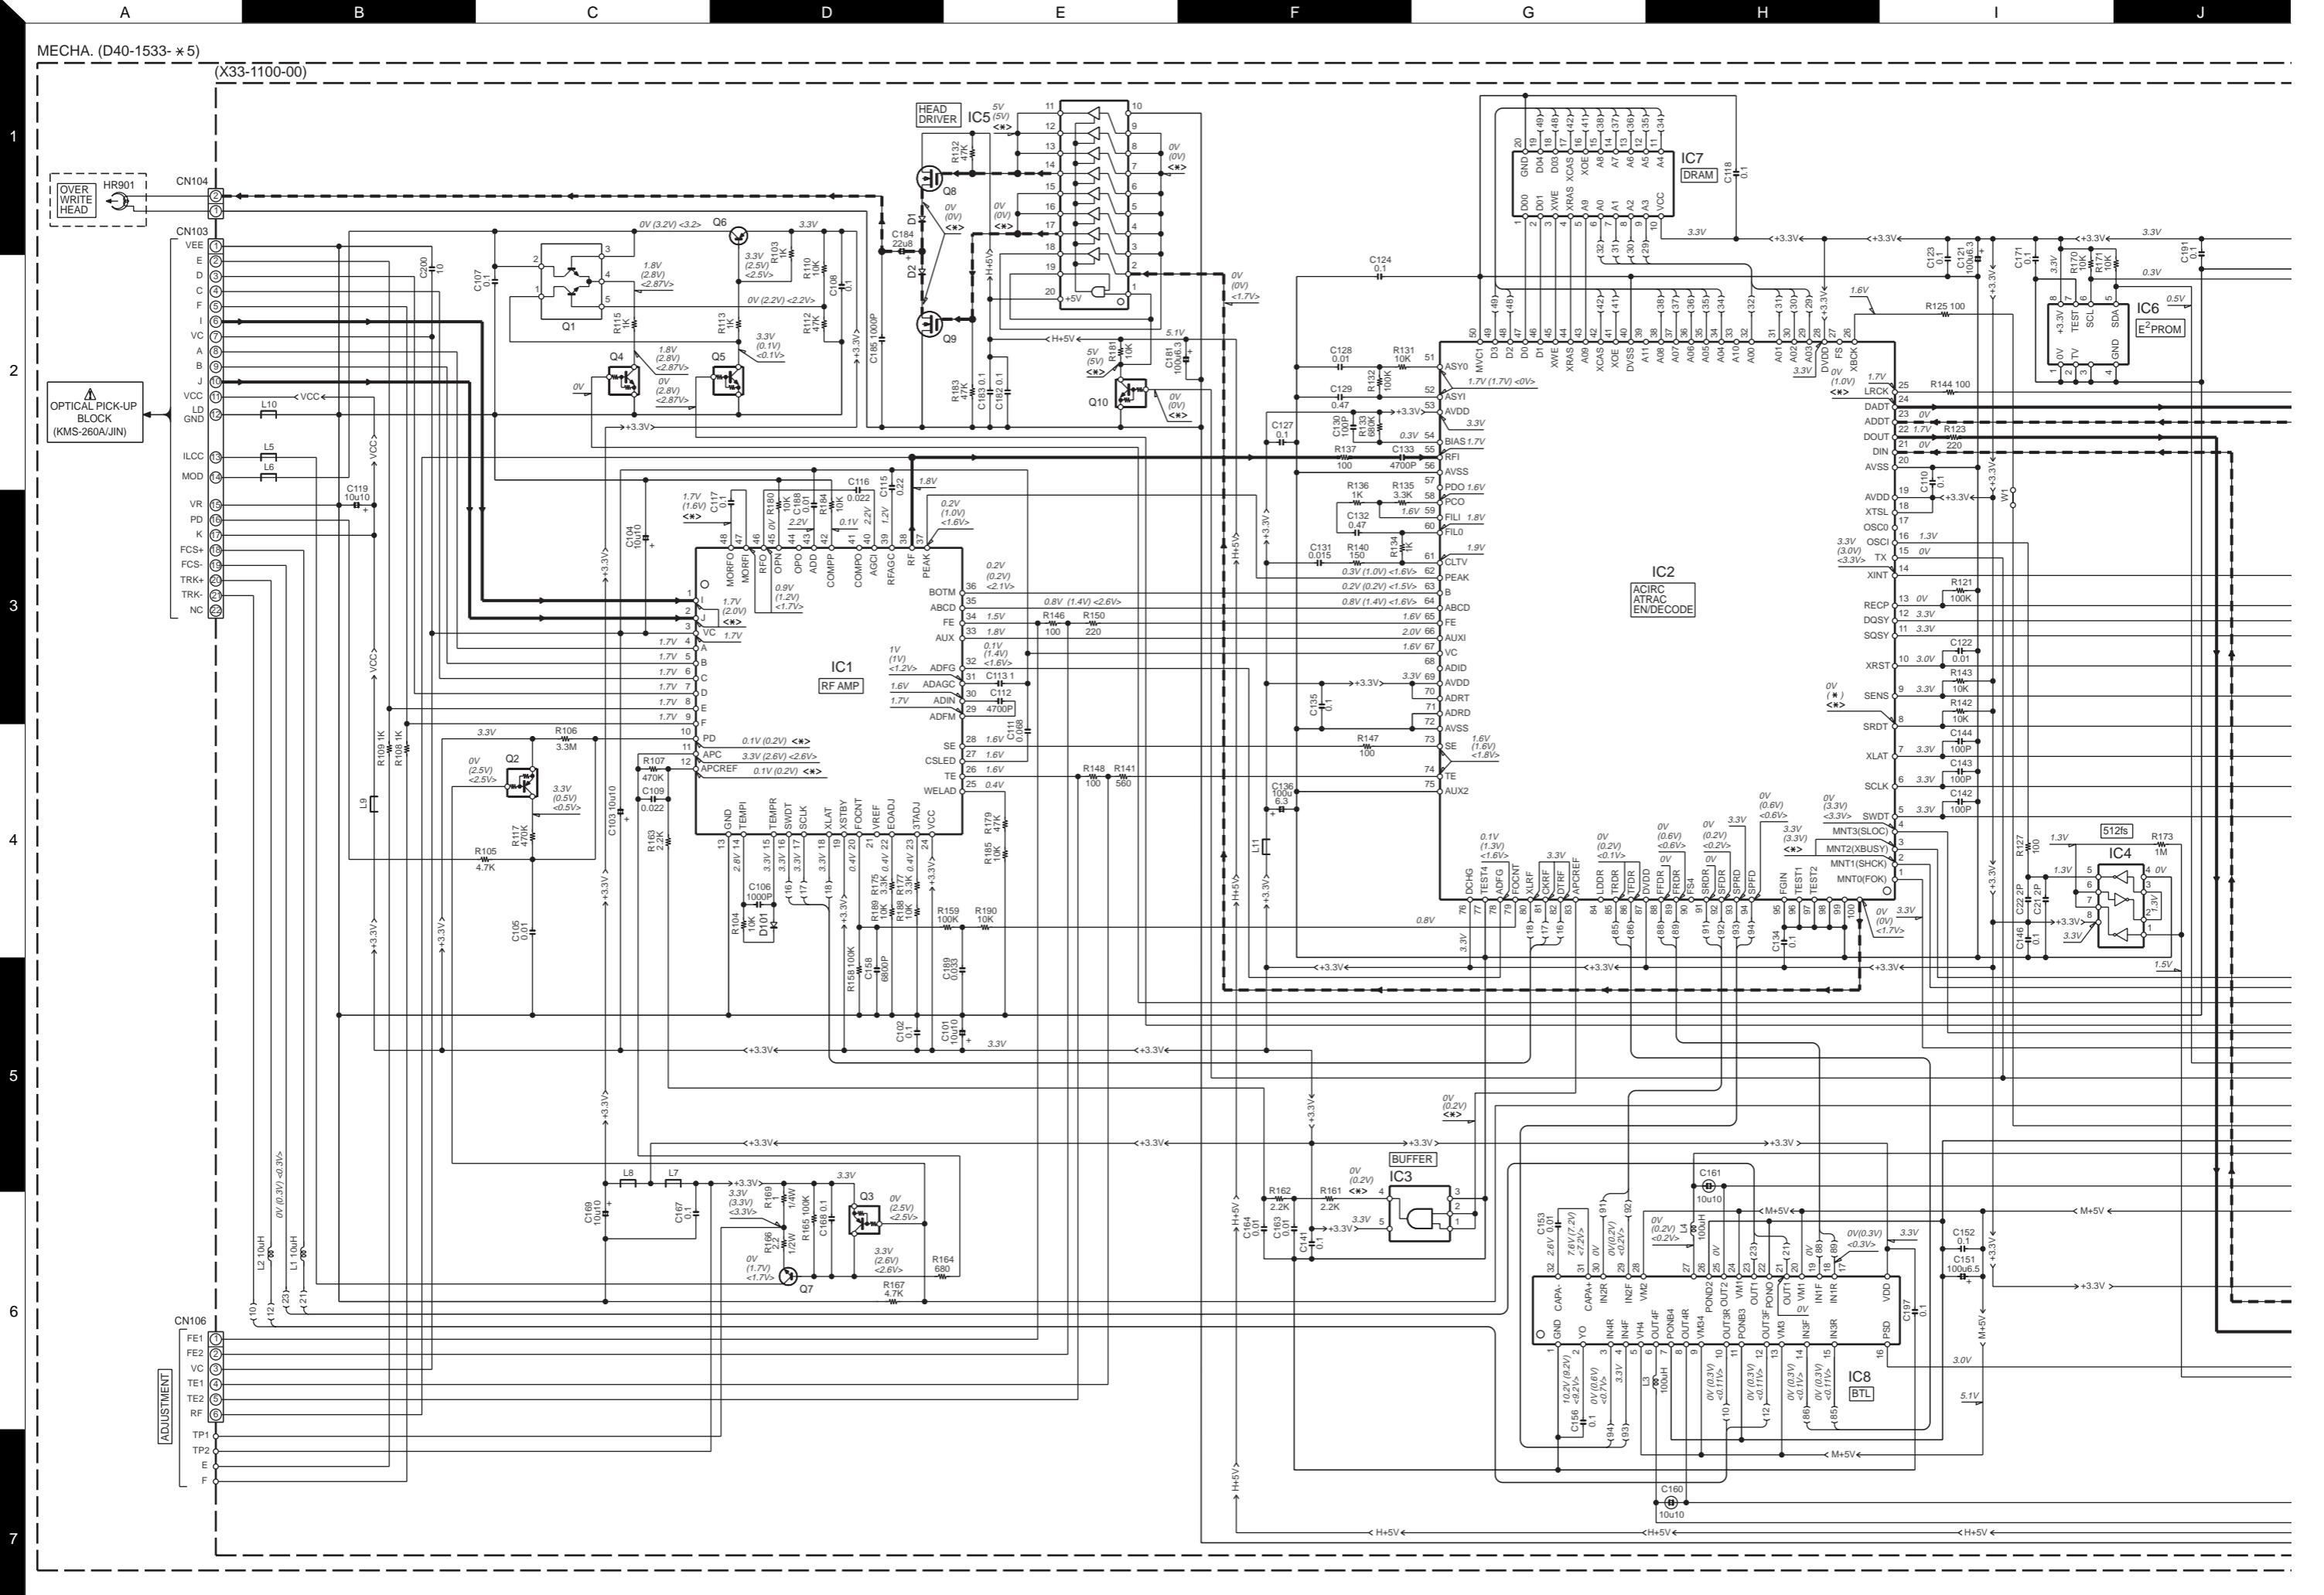

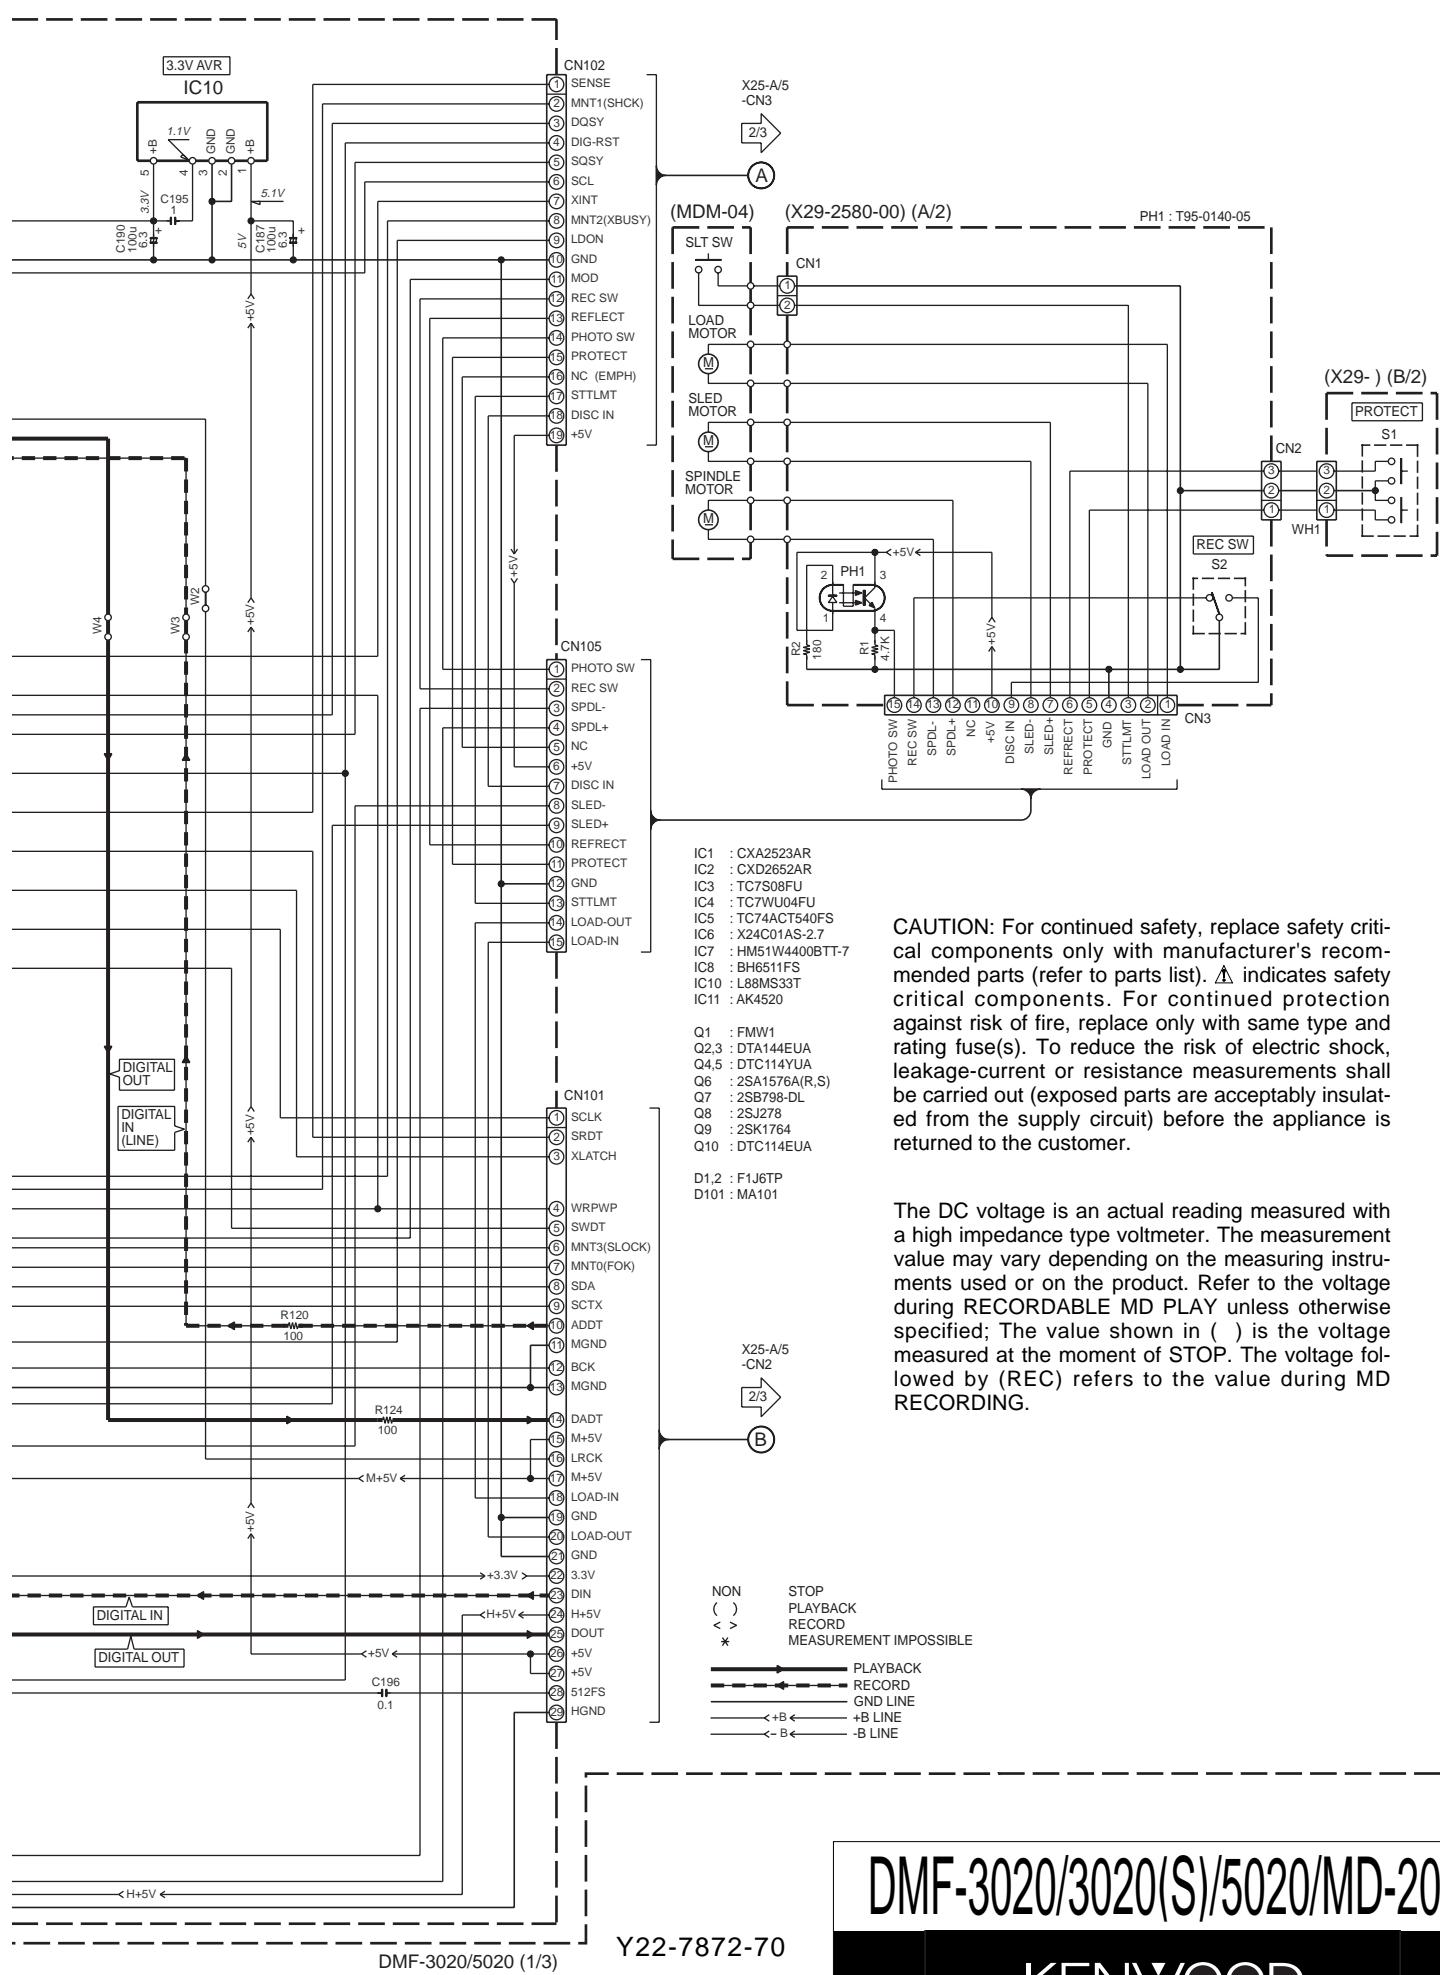

P

Q

R



S

T

**ELECTRIC UNIT
(X25-618X-XX) (A/5)**

MECHA.-MLB-3

MECHA.-MLB-3

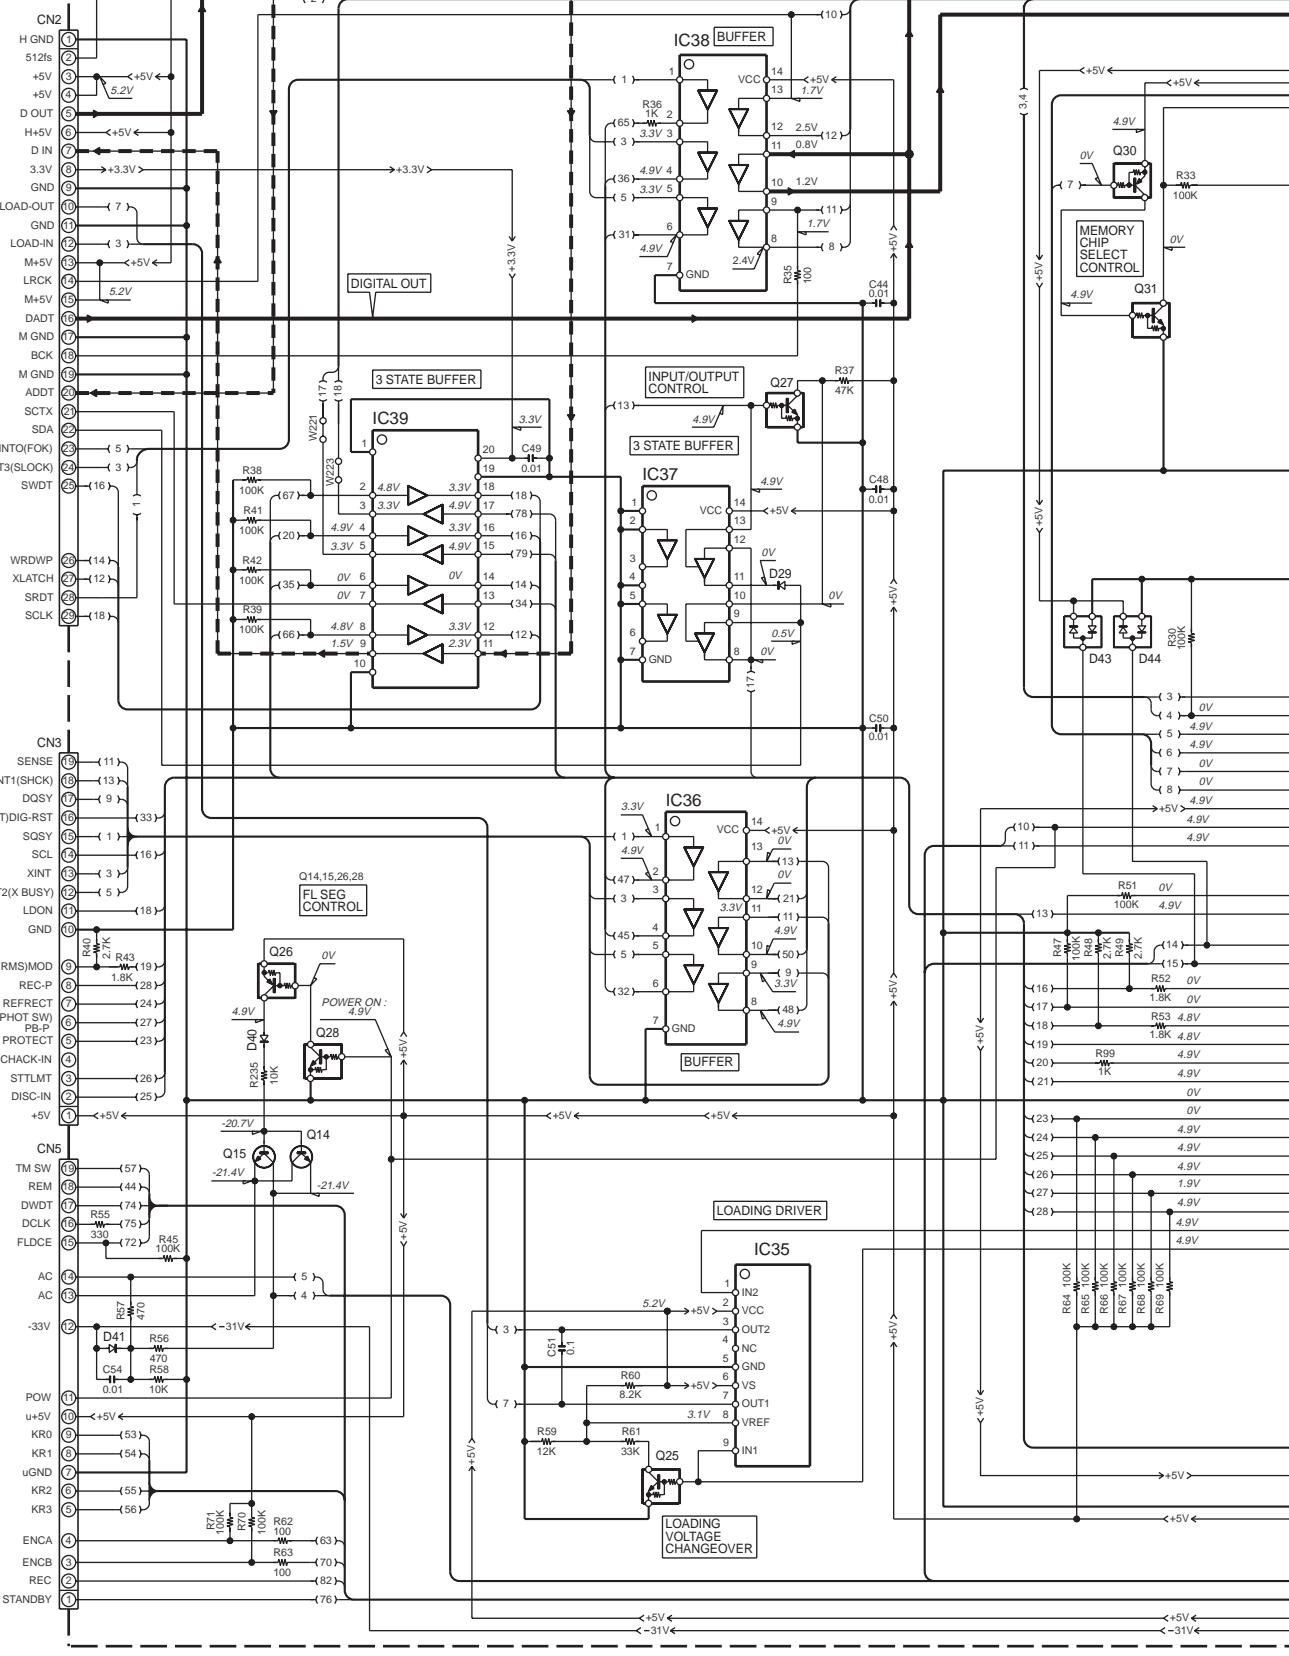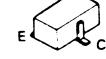
 2SA954
2SA992
2SC1845
2SD1302

 DTA144EUA
DTC114YUA
DTC143TUA
UN5216
UN5219


2SB1218A

2SC4081

2SD1819A


2SD2061




FMW1


2SB798-DL


2SD2012

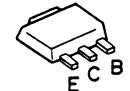

DTC114EUA

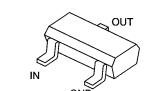

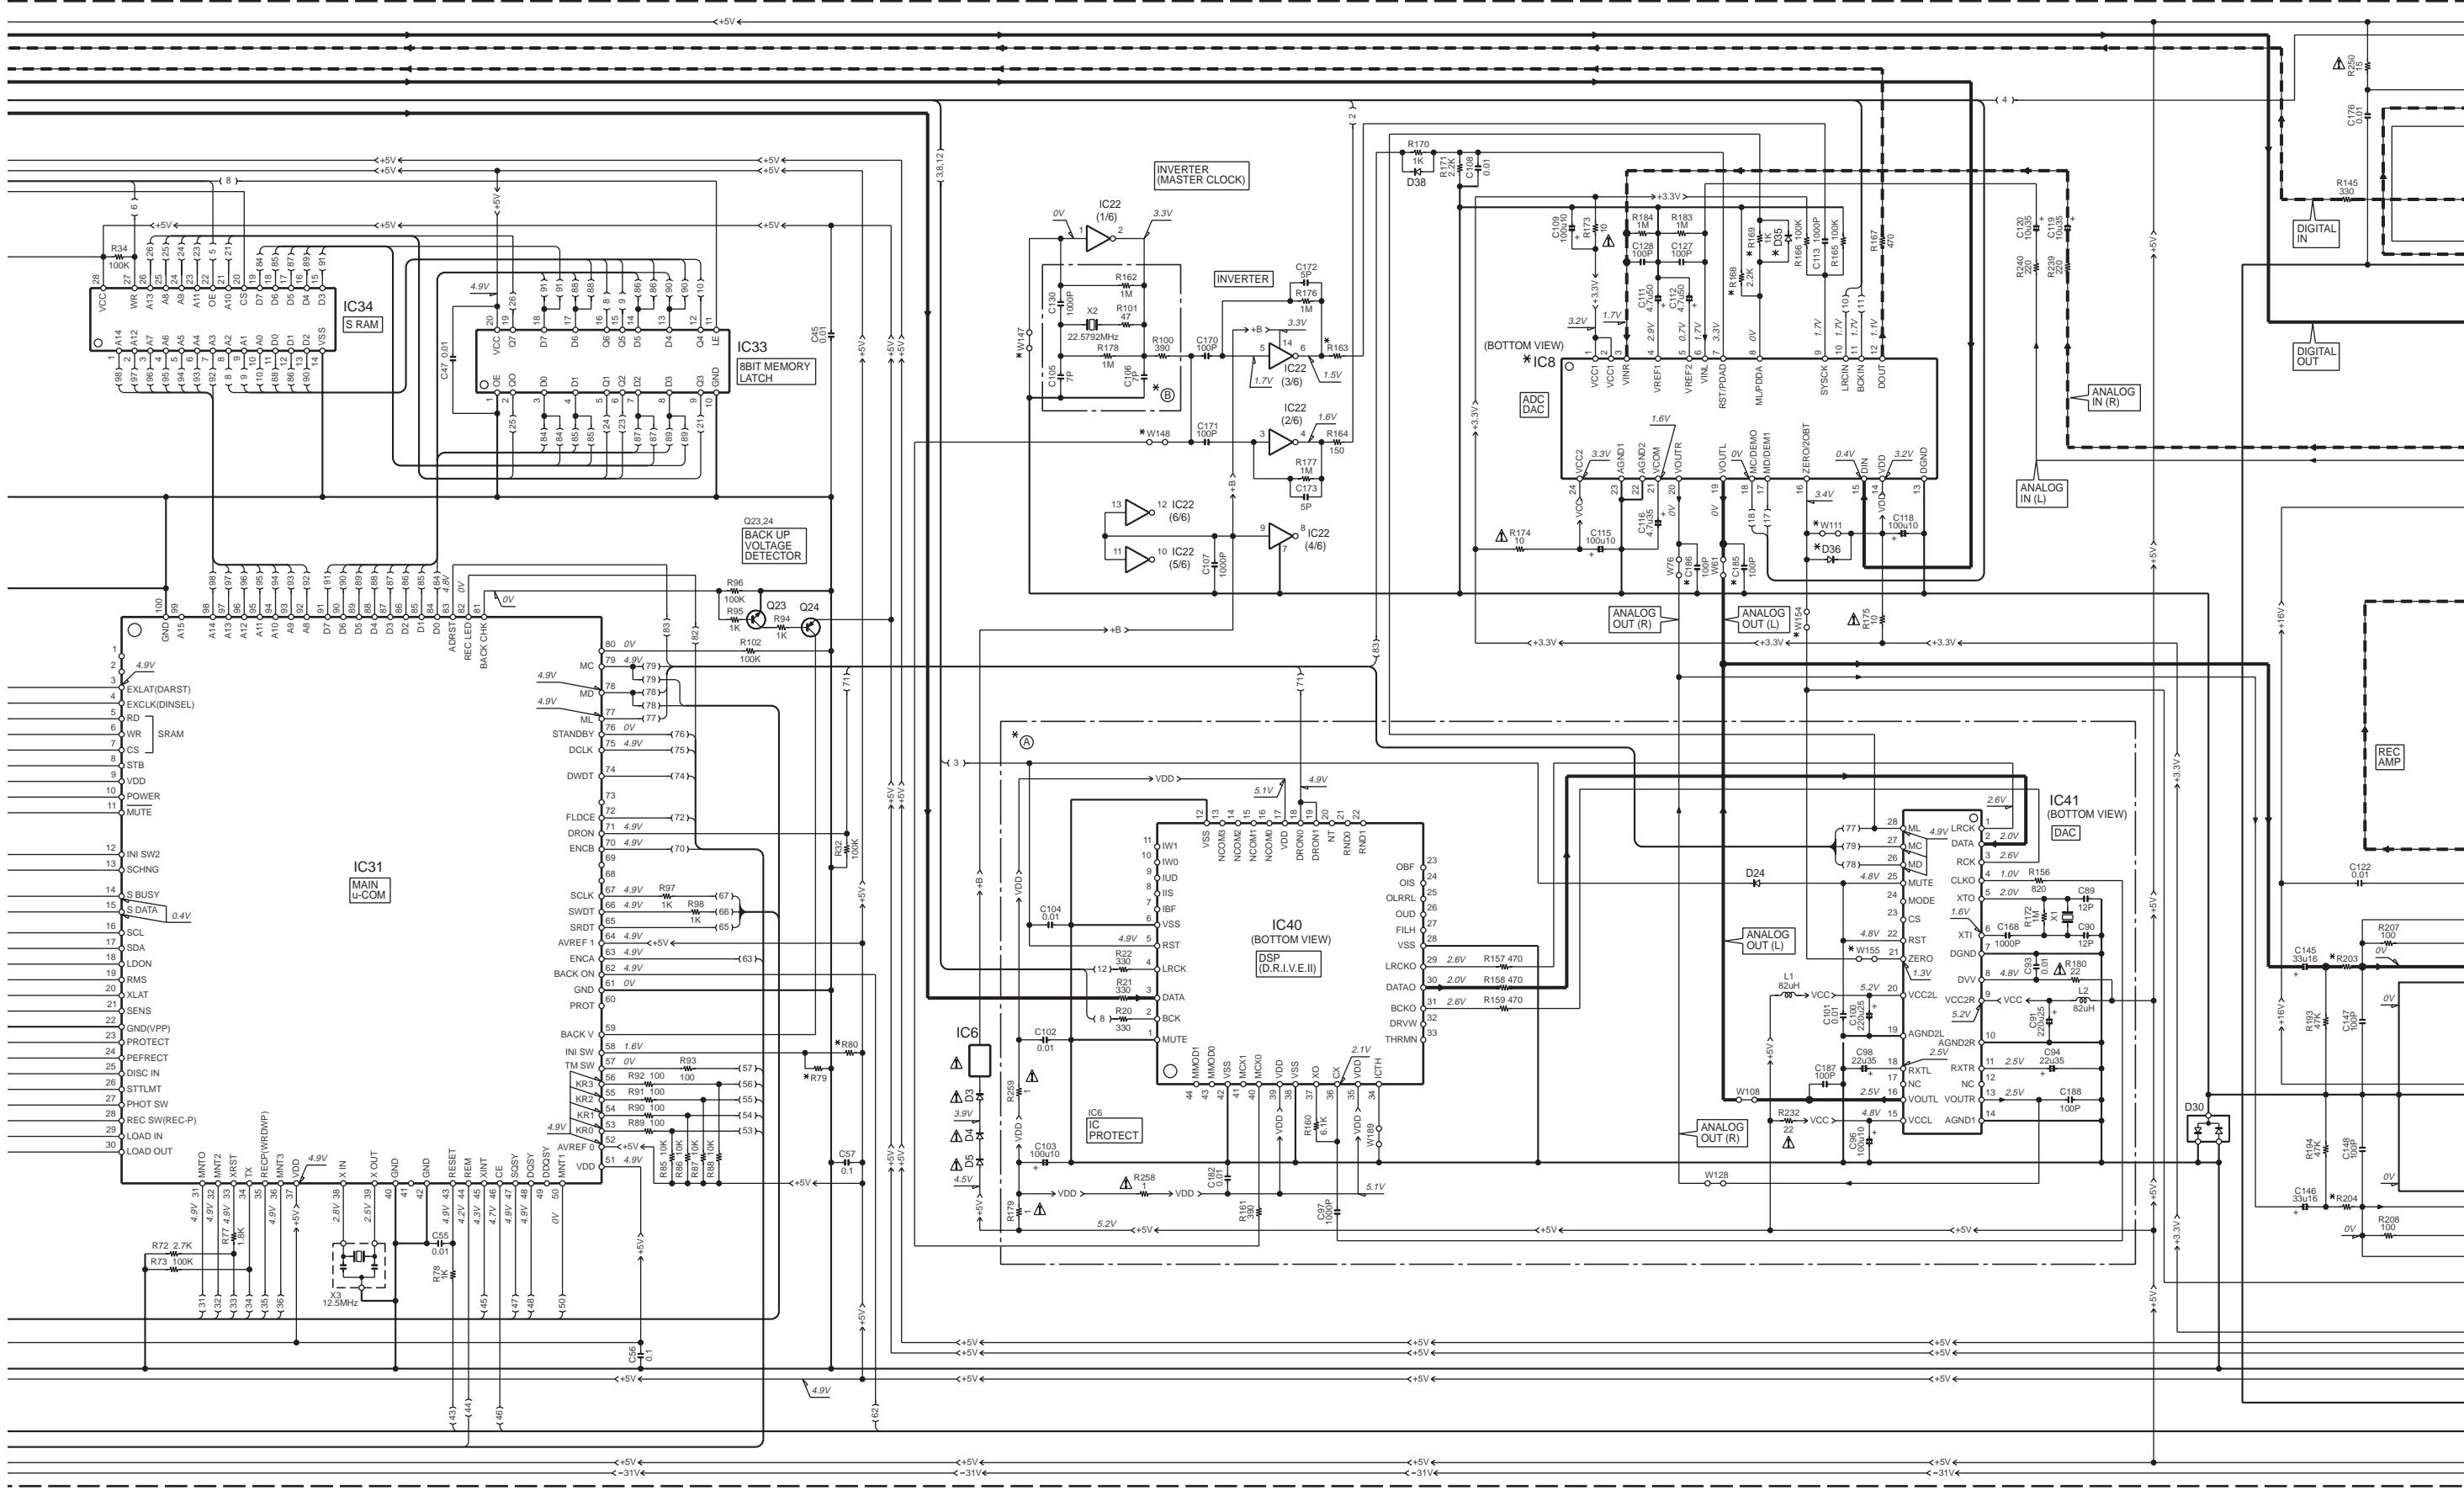

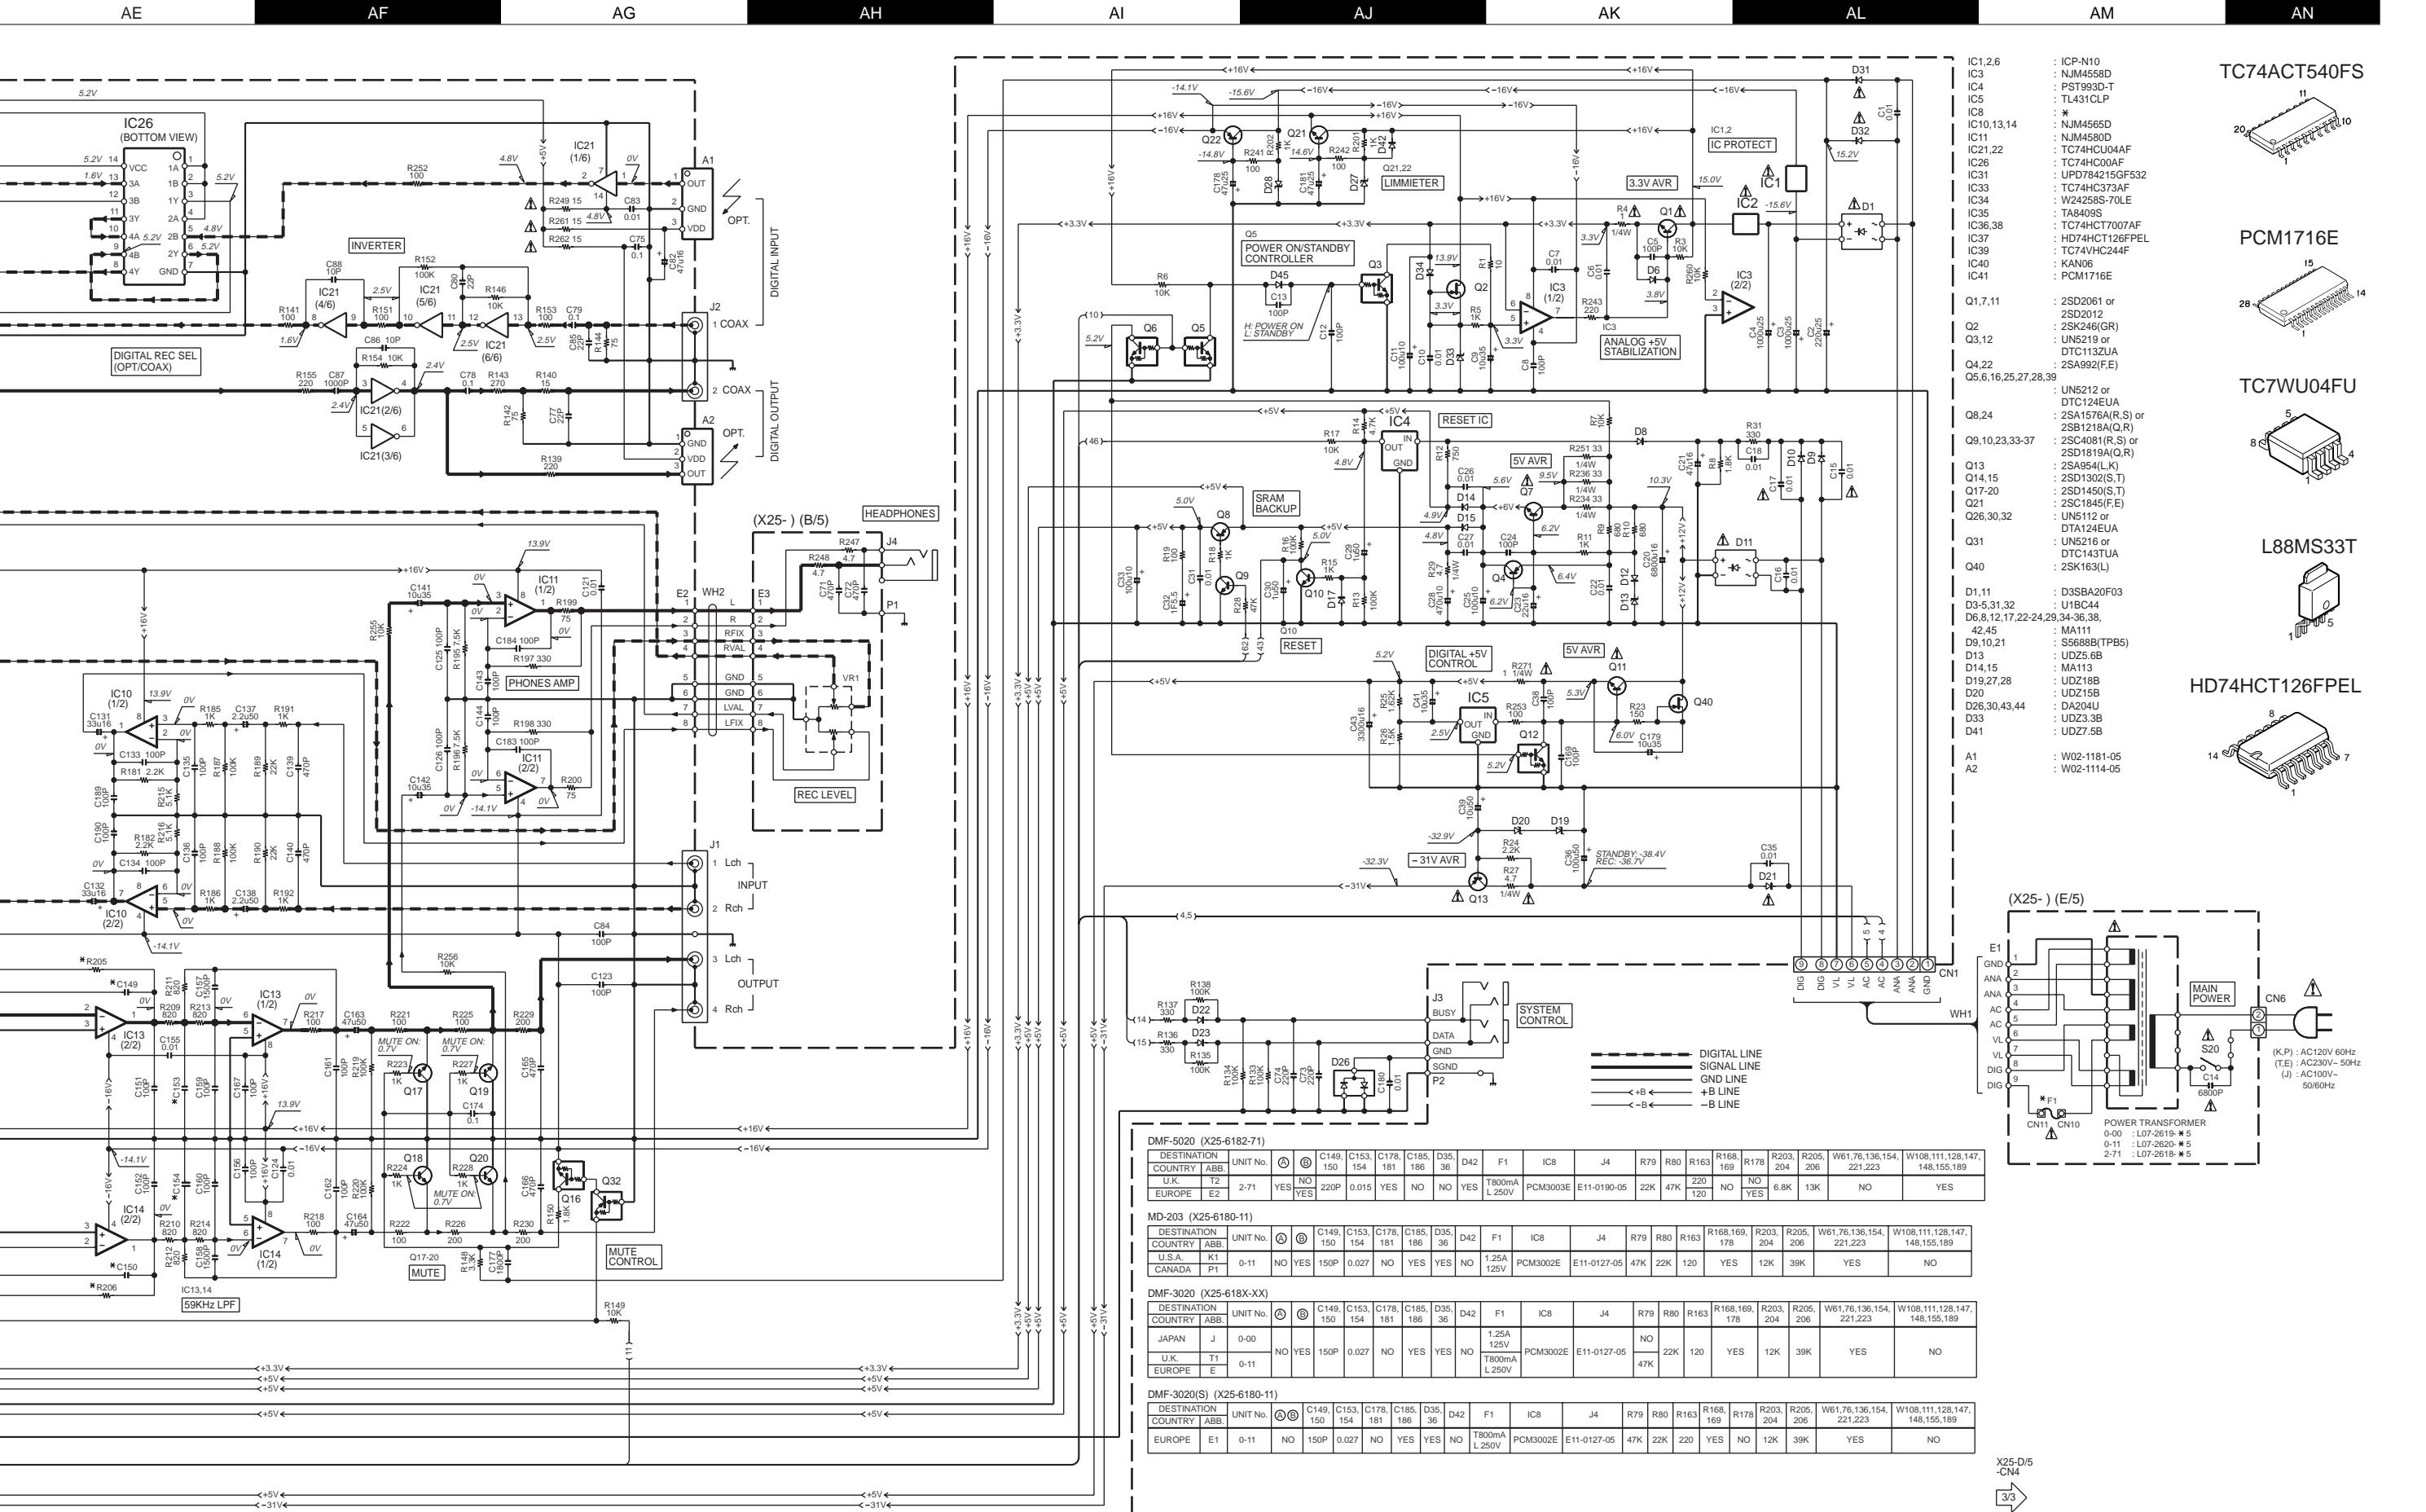

DMF-5020/3020/3020S/MD-203 (2/3)

Y22-7872-70

DMF-3020/3020(S)/5020/MD-203

KENWOOD


**DISPLAY UNIT
(X25-618X-XX) (C/5)**

DMF-5020 (X25-6182-71)					
DESTINATION COUNTRY	ABB.	UNIT No.	D37	Q29	R238
U.K.	T2	2-71	YES	YES	YES
EUROPE	E2				

DMF-3020 (X25-618X-XX)		
DESTINATION	UNIT No.	D37
COUNTRY	ABB.	Q29
JAPAN	J 0-00	R238
U.K.	T1 0-11	NO
EUROPE	E	NO

MD-203 (X25-6180-11)					
DESTINATION	UNIT No.	D37	Q29	R238	
COUNTRY	ABB.				
U.S.A.	K1	0-11	NO	NO	NO
CANADA	P1				

DMF-3020(S) (X25-6180-11)					
DESTINATION COUNTRY	ABB.	UNIT No.	D37	Q29	R238
EUROPE	E1	0-11	NO	NO	NO

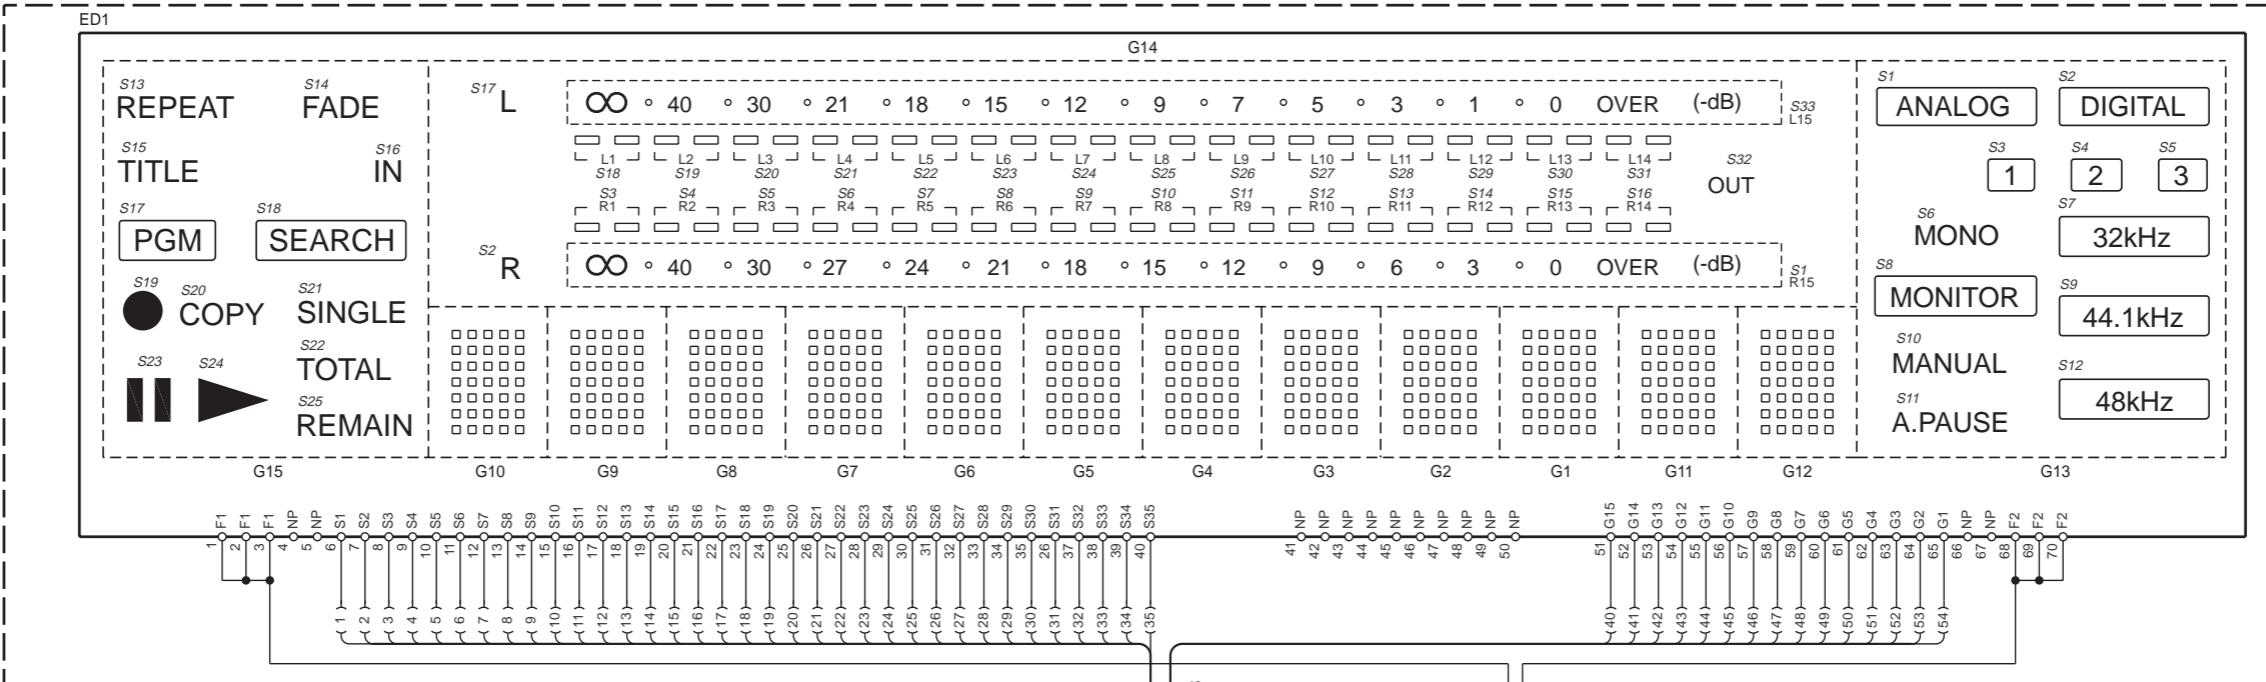

S1	S2	S3	S4	S5
S6	S7	S8	S9	S10
S11	S12	S13	S14	S15
S16	S17	S18	S19	S20
S21	S22	S23	S24	S25
S26	S27	S28	S29	S30
S31	S32	S33	S34	S35


IC23 : LC75710NED

Q29,39 : UN5212
Q33-37 : 2SC4081(R,S) or
 2SD1810A(O,P)

D37 : B30-2430-05
D39 : B30-2493-05

ED1 : CM1777M
A3 : W02-2571-05

GND LINE
+B LINE
-B LINE

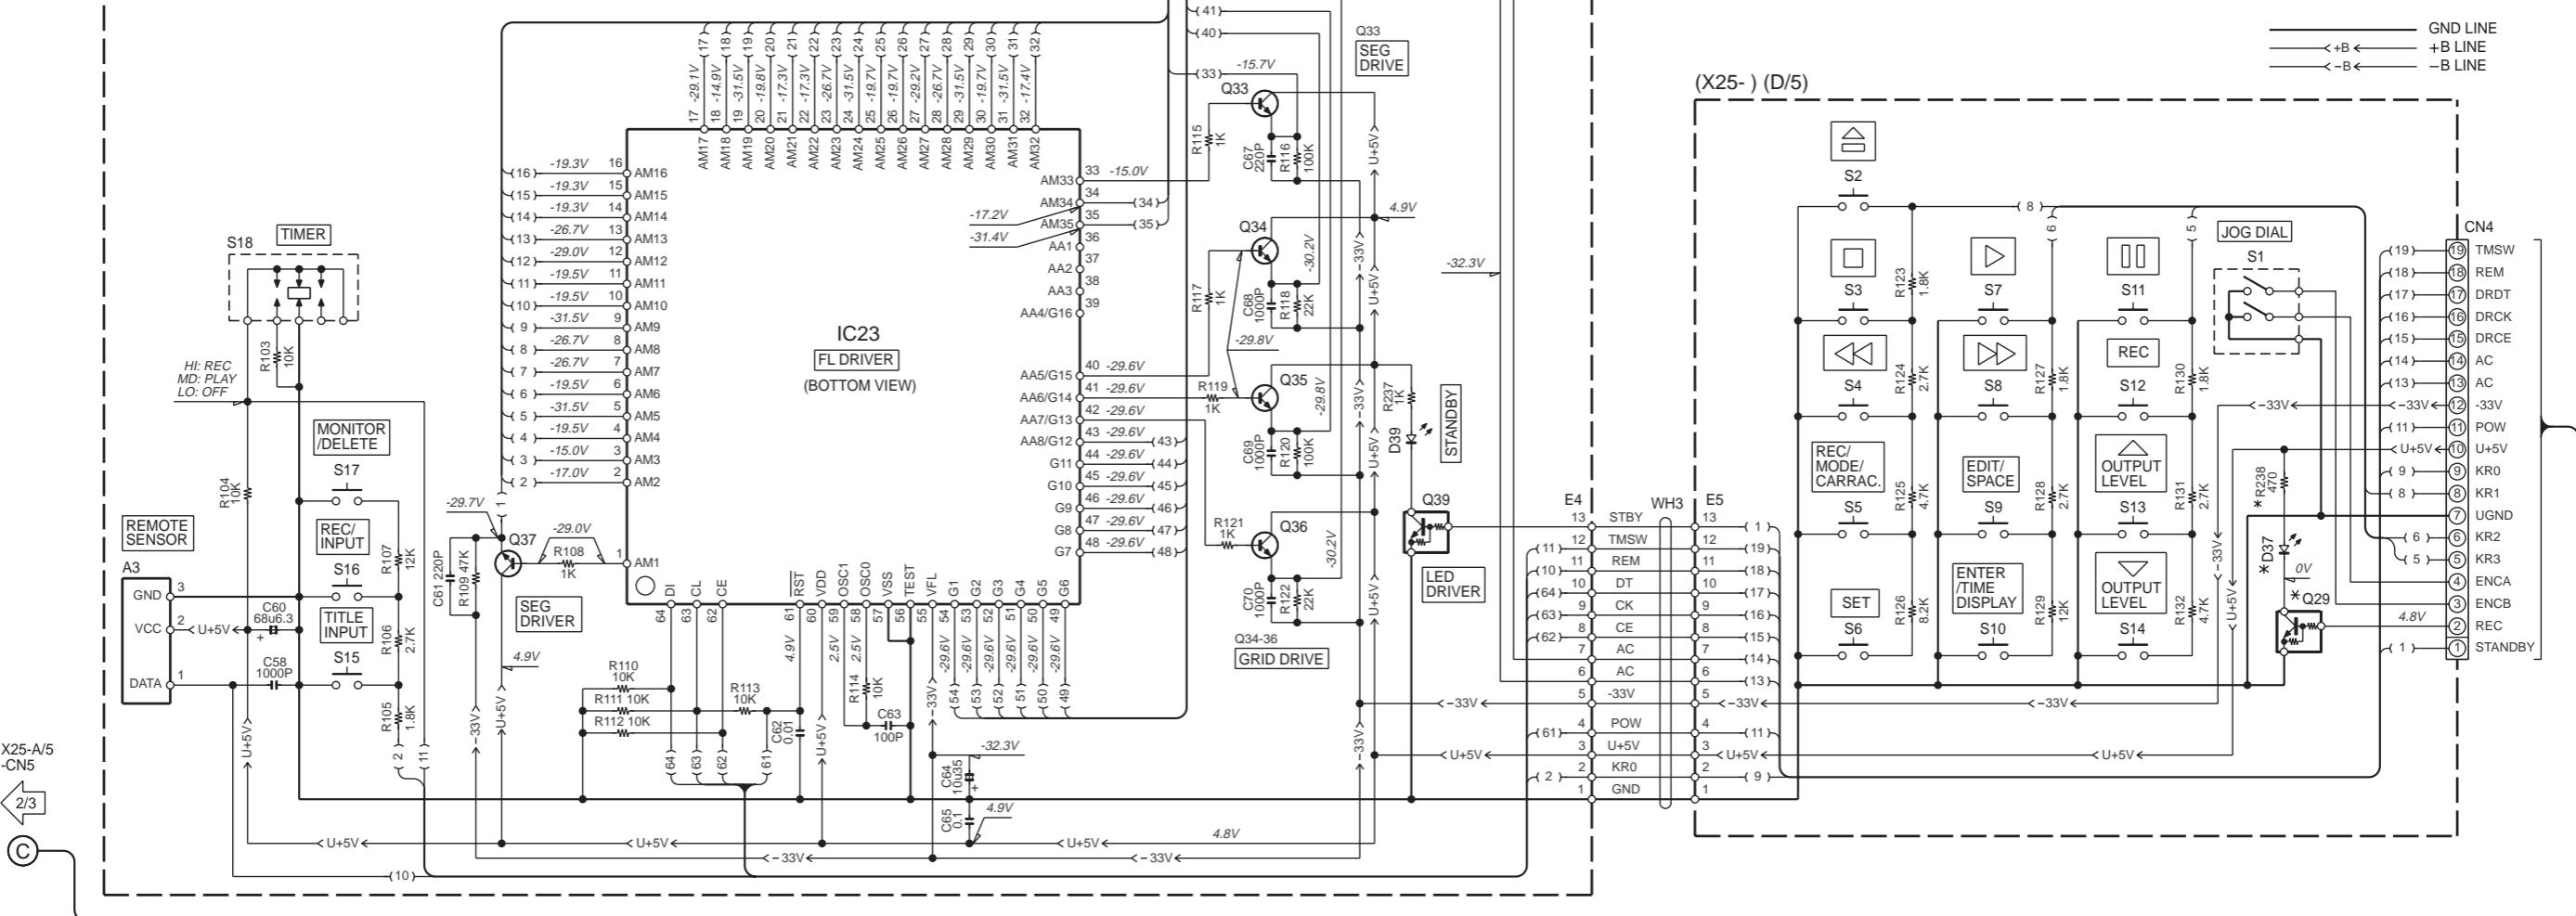

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ indicates safety critical components. For continued protection against risk of fire, replace only with same type and rating fuse(s). To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

The DC voltage is an actual reading measured with a high impedance type voltmeter. The measurement value may vary depending on the measuring instruments used or on the product. Refer to the voltage during RECORDABLE MD PLAY unless otherwise specified; The value shown in () is the voltage measured at the moment of STOP. The voltage followed by (REC) refers to the value during MD RECORDING.


DMF-5020/3020/3020(S)/MD-203 (3/3)

Y22-7872-70


DMF-3020/3020(S)/5020/MD-203

KENWOOD

EXPLODED VIEW (MECHANISM)

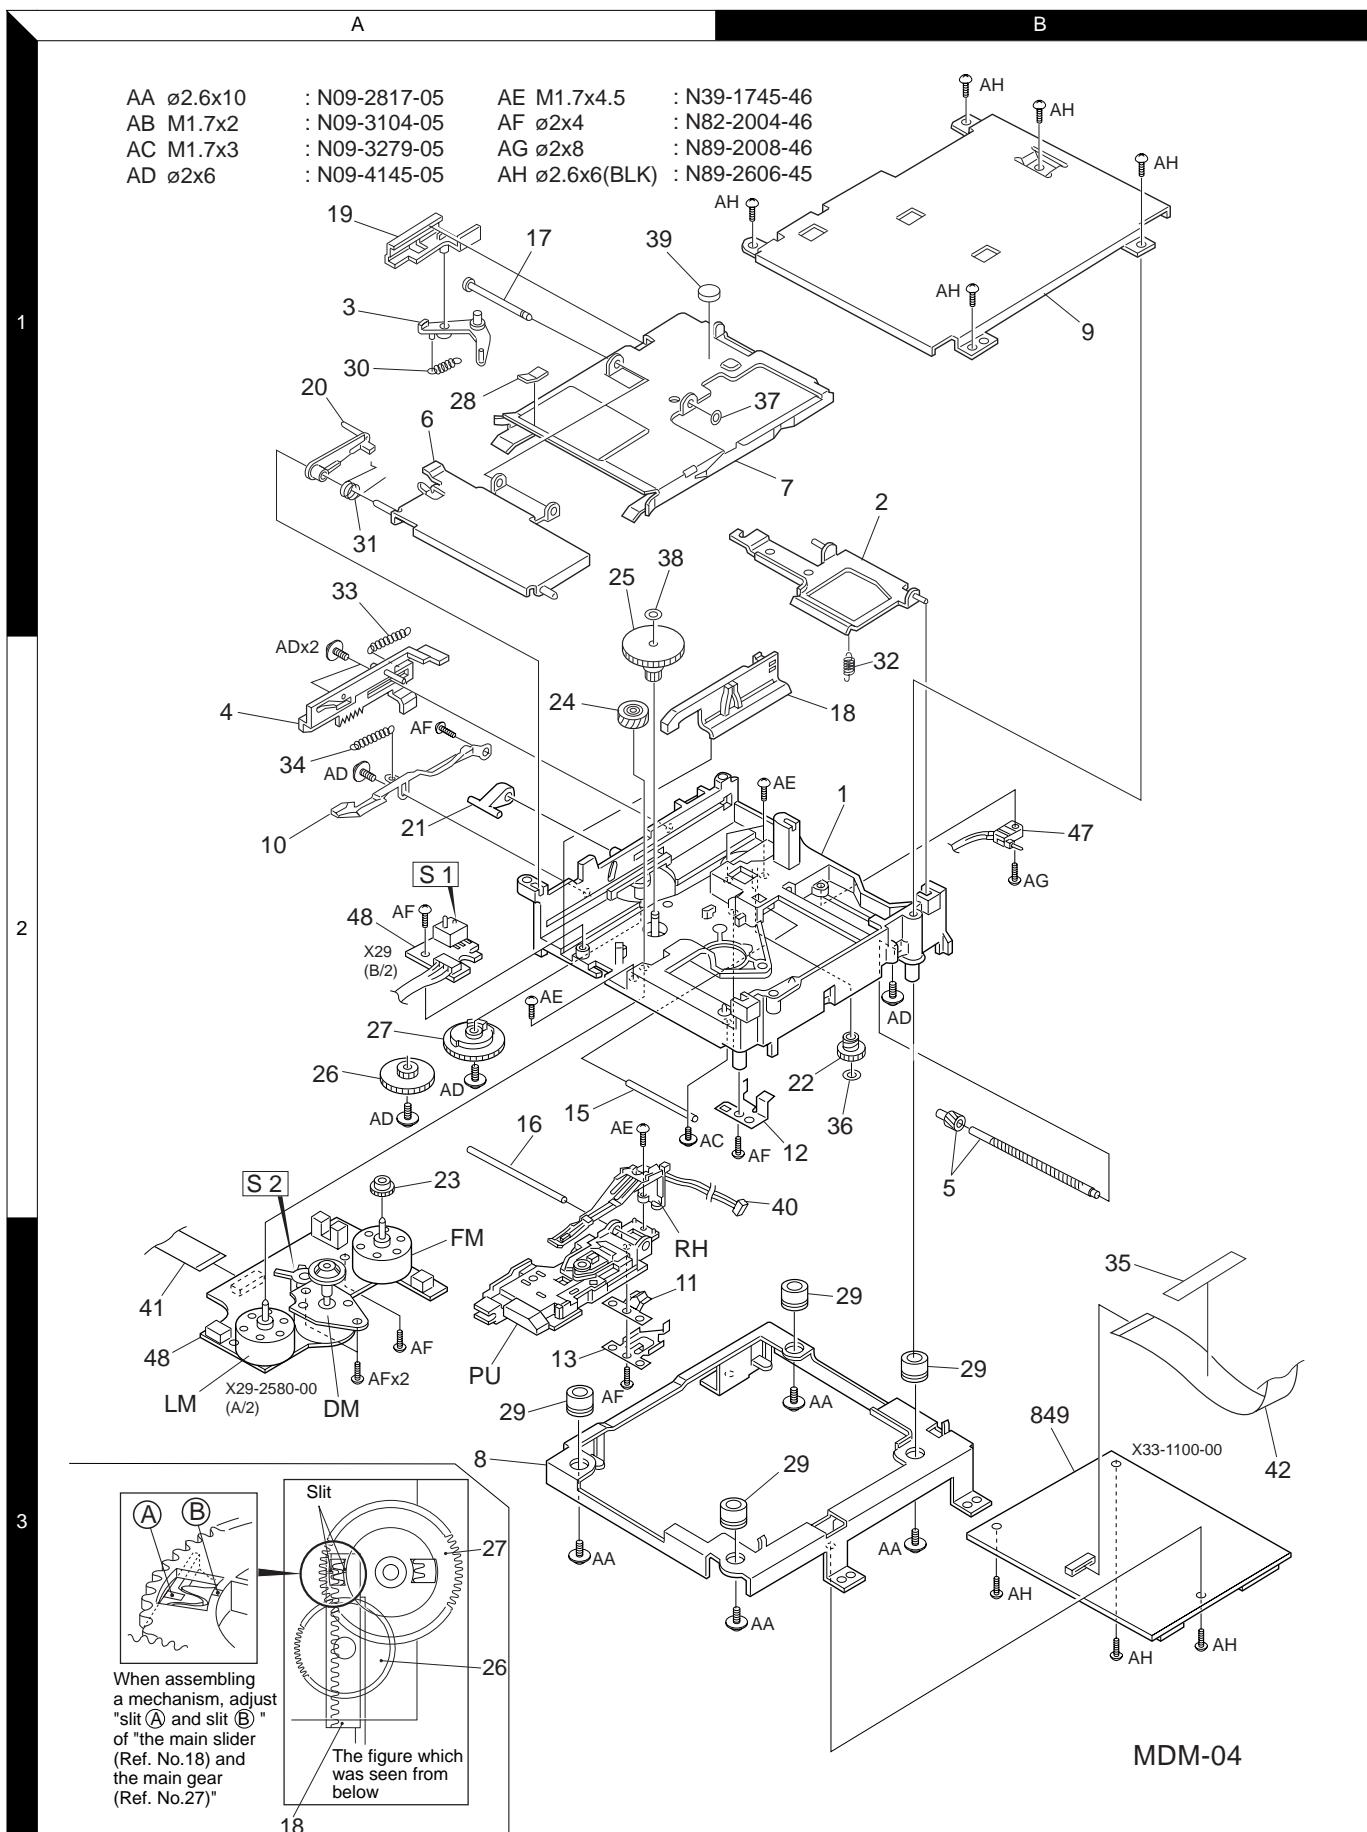

EXPLODED VIEW (UNIT)

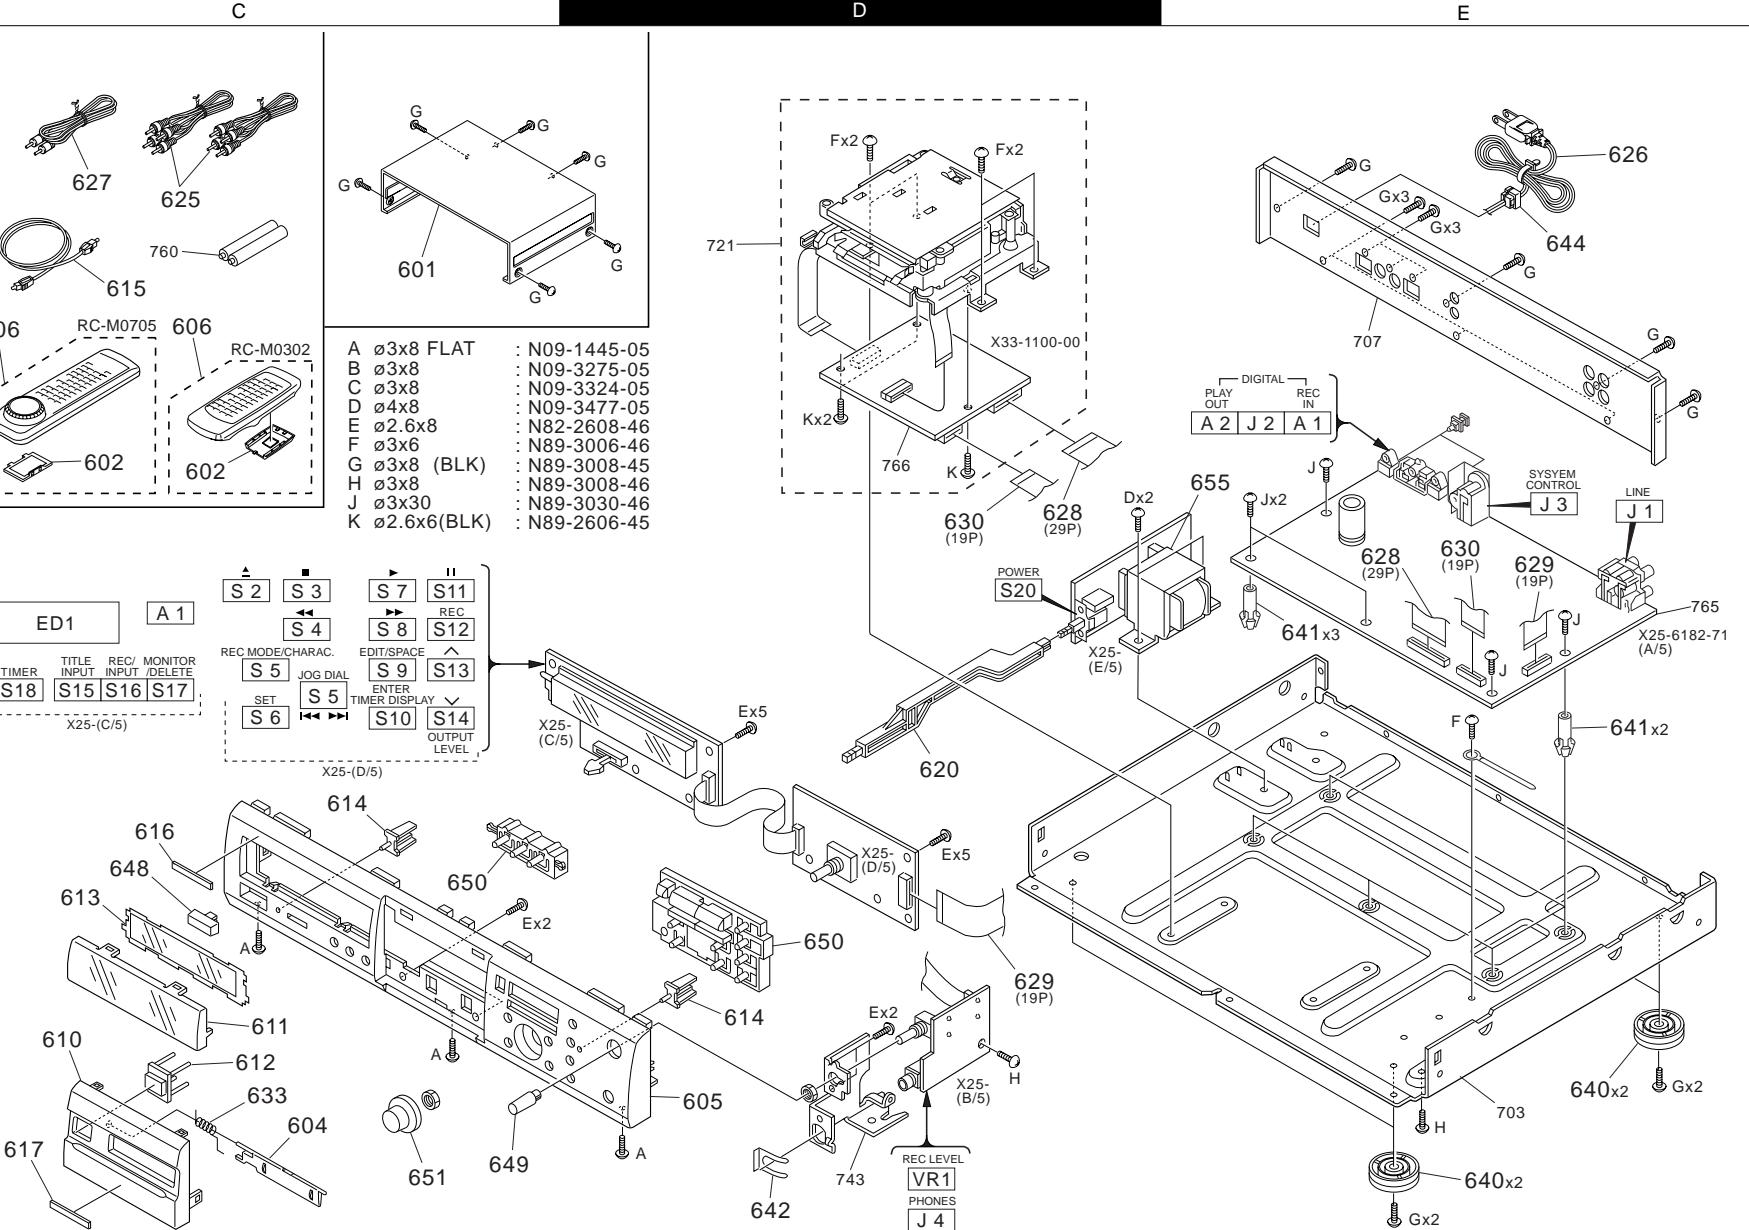

DMF-3020/5020

Parts with exploded view numbers larger than 700 are not supplied.

PARTS LIST

DMF-3020/3020(S)/5020/MD-203

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

①

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
DMF-3020/3020(S)/5020/MD-203						
601	1C	*	A01-3635-01	METALLIC CABINET	EK1P1	
601	1C	*	A01-3635-01	METALLIC CABINET	T1E1T2	
601	1C	*	A01-3637-01	METALLIC CABINET	E2	
602	1C	*	A09-0374-08	BATTERY COVER	EK1P1	
602	1C	*	A09-0374-08	BATTERY COVER	T1E2	
602	1C	*	A09-1116-08	BATTERY COVER	E1T2	
604	2C	*	A29-1024-04	PANEL	EK1P1	
604	2C	*	A29-1025-04	PANEL	T1E1T2	
605	2D	*	A60-1530-11	PANEL	E2	
605	2D	*	A60-1532-11	PANEL	ET1	
605	2D	*	A60-1533-11	PANEL	K1P1	
605	2D	*	A60-1534-11	PANEL	E1T2	
606	1C	*	A70-1238-05	REMOTE CONTROL ASSY(RC-M0705)	E2	
606	1C	*	A70-1239-05	REMOTE CONTROL ASSY(RC-M0302)	EK1P1	
606	1C	*	A70-1239-05	REMOTE CONTROL ASSY(RC-M0302)	T1E2	
610	2C	*	B07-2428-12	ESCUOTHEON	ET1	
610	2C	*	B07-2429-12	ESCUOTHEON	K1P1	
610	2C	*	B07-2430-12	ESCUOTHEON	E2	
610	2C	*	B07-2431-12	ESCUOTHEON	E1T2	
611	2C	*	B10-3426-03	FRONT GLASS		
612	2C	*	B11-0376-04	FILTER	E2	
613	2C	*	B11-0377-04	COLOR FILTER		
614	2C, 2D	*	B12-0353-04	INDICATOR		
615	1C	*	B19-1529-05	OPTICAL FIBER		
616	2C	*	B43-0302-04	KENWOOD BADGE		
617	2C	*	B43-0310-04	BADGE	E1T2	
		*	B46-0310-03	WARRANTY CARD	ET1E1	
		*	B46-0310-03	WARRANTY CARD	T2E2	
		*	B46-0328-03	WARRANTY CARD	K1	
		*	B46-0336-03	WARRANTY CARD	P1	
		*	B60-4074-00	INSTRUCTION MANUAL(EN)	K1P1T1	
		*	B60-4074-00	INSTRUCTION MANUAL(EN)	T2	
		*	B60-4075-00	INSTRUCTION MANUAL(FR)	EP1E1	
		*	B60-4075-00	INSTRUCTION MANUAL(FR)	E2	
		*	B60-4076-00	INSTRUCTION MANUAL(GE/NE)	EE1E2	
		*	B60-4077-00	INSTRUCTION MANUAL(IT/ES)	EE1E2	
620	2D	*	D21-1840-03	EXTENSION SHAFT		
625	1C	*	E30-0505-05	AUDIO CORD		
△ 626	1E	*	E30-2592-15	AC POWER CORD	EE1E2	
△ 626	1E	*	E30-2721-05	AC POWER CORD	T1T2	
△ 626	1E	*	E30-2884-05	AC POWER CORD	K1P1	
627	1C	*	E30-2733-05	CORD WITH PLUG (SYSTEM)		
628	1D, 1E	*	E35-1960-05	FLAT CABLE	29P,180	
629	2D, 1E	*	E35-2149-05	FLAT CABLE	19P,330	
630	1D, 1E	*	E35-2289-05	FLAT CABLE	19P,270	
△ F1		*	F05-8013-05	FUSE (SEMKO)	(250V T800MAL)	
△ F1		*	F05-8013-05	FUSE (SEMKO)	(250V T800MAL)	
△ F1		*	F50-0067-05	FUSE(5X20)		
633	2C	*	G01-4088-04	TORSION COIL SPRING	ET1E1	
					T2E2	
					K1P1	

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia

Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)

Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas △ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

②

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
-		*	H10-7530-12	POLYSTYRENE FOAMED FIXTURE		
-		*	H10-7531-12	POLYSTYRENE FOAMED FIXTURE	EK1P1	
-		*	H25-0232-04	PROTECTION BAG (235X350X0.03)	E1E2	
-		*	H25-0232-04	PROTECTION BAG (235X350X0.03)	T1T2	
-		*	H25-0651-04	PROTECTION BAG		
-		*	H25-0661-04	PROTECTION BAG	ET1	
-		*	H50-3172-14	ITEM CARTON CASE	K1P1	
-		*	H50-3173-04	ITEM CARTON CASE	E1T2	
-		*	H50-3174-14	ITEM CARTON CASE	E2	
-		*	H50-3175-14	ITEM CARTON CASE		
640	2E	J02-1168-03	FOOT		ET1E1	
640	2E	J02-1168-03	FOOT	(D=46,H=14.5,T)	T2	
640	2E	J02-1407-03	FOOT		K1P1E2	
641	1E, 2E	J19-3753-04	UNIT HOLDER			
642	2D	J21-3326-05	JACK MOUNTING HARDWARE			
△ 644	1E	J42-0083-05	POWER CORD BUSHING			
		J61-0307-05	WIRE BAND			
648	2C	K27-2178-04	KNOB (BUTTON)		ET1E1	
648	2C	K27-2178-04	KNOB (BUTTON)		T2	
648	2C	K27-2273-04	KNOB (BUTTON)		K1P1	
648	2C	K27-2330-04	KNOB (BUTTON)		E2	
649	2C	K29-7354-14	KNOB		ET1E1T2	
649	2C	K29-7410-04	KNOB		E2	
650	2C, 2D	K29-7412-02	KNOB		ET1E1	
650	2C, 2D	K29-7412-02	KNOB		T2	
650	2C, 2D	K29-7413-02	KNOB		K1P1	
650	2C, 2D	K29-7414-02	KNOB		E2	
651	2C	K29-7536-04	KNOB		ET1E1	
651	2C	K29-7536-04	KNOB		T2	
651	2C	K29-7537-04	KNOB		K1P1	
651	2C	K29-7538-04	KNOB		E2	
△ 655	1E	L07-2618-05	POWER TRANSFORMER		ET1E1	
△ 655	1E	L07-2618-05	POWER TRANSFORMER		T2E2	
△ 655	1E	L07-2620-05	POWER TRANSFORMER		K1P1	

ELECTRIC PCB (X25-6180-00)

D37		B30-2430-05	LED(RED)		E1T2	
D39		B30-2493-05	LED(RED)			
C1		CK45FF1H103Z	CERAMIC	0.010UF	Z	
C2		CE04KW1E221M	ELECTRO	220UF	25WV	
C3, 4		CE04KW1E102M	ELECTRO	1000UF	25WV	
C5		CC73FSL1H101J	CHIP C	100PF	J	
C6		CK73FB1H103K	CHIP C	0.010UF	K	
C7		CK45FF1H103Z	CERAMIC	0.010UF	Z	
C8		CC73FSL1H101J	CHIP C	100PF	J	
C9		CE04KW1V100M	ELECTRO	10UF	35WV	
C10		CK73FB1H103K	CHIP C	0.010UF	K	
C11		CE04KW1A101M	ELECTRO	100UF	10WV	
C12, 13		CC73FSL1H101J	CHIP C	100PF	J	
C14		CK1-1488-05	MF	6800PF	250VAC	
C15~18		CK73FB1H103K	CHIP C	0.010UF	K	
C20		CE04KW1C682M	ELECTRO	6800UF	16WV	
C21		CE04KW1C470M	ELECTRO	47UF	16WV	

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia

Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)

Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas △ indicates safety critical components.

PARTS LIST

④

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

③

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add- ress	New Parts	Parts No.	Description			Desti- nation	Re- marks
C22			CK73FB1H103K	CHIP C	0.010UF	K		
C23			CE04KW1C220M	ELECTRO	22UF	16WV		
C24			CC73FSL1H101J	CHIP C	100PF	J		
C25			CE04KW1A101M	ELECTRO	100UF	10WV		
C26, 27			CK73FB1H103K	CHIP C	0.010UF	K		
C28			CE04KW1A471M	ELECTRO	470UF	10WV		
C29, 30			CE04KW1H010J	ELECTRO	1.0UF	50WV		
C31			CK73FB1H103K	CHIP C	0.010UF	K		
C32			C90-3542-05	SUPER-C	1.0F	5.5WV		
C33			CE04KW1A101M	ELECTRO	100UF	10WV		
C35			CK73FB1H103K	CHIP C	0.010UF	K		
C36			CE04KW1H010M	ELECTRO	100UF	50WV		
C38			CC73FSL1H101J	CHIP C	100PF	J		
C39			CE04KW1H100M	ELECTRO	10UF	50WV		
C41			CE04KW1V100M	ELECTRO	10UF	35WV		
C43			CE04KW1C332M	ELECTRO	3300UF	16WV		
C44, 45			CK73FB1H103K	CHIP C	0.010UF	K		
C47-50			CK73FB1H103K	CHIP C	0.010UF	K		
C51			CK73FF1E104Z	CHIP C	0.10UF	Z		
C54, 55			CK73FB1H103K	CHIP C	0.010UF	K		
C56, 57			CK73FF1E104Z	CHIP C	0.10UF	Z		
C58			CC73FSL1H102J	CHIP C	1000PF	J		
C60			C90-3213-05	ELECTRO	68UF	6.3WV		
C61			CC73FSL1H221J	CHIP C	220PF	J		
C62			CK73FF1E104Z	CHIP C	0.10UF	Z		
C63			CC73FSL1H101J	CHIP C	100PF	J		
C64			C90-3244-05	ELECTRO	10UF	35WV		
C65			CK73FF1E104Z	CHIP C	0.10UF	Z		
C67			CC73FSL1H221J	CHIP C	220PF	J		
C68-70			CC73FSL1H102J	CHIP C	1000PF	J		
C71, 72			CC73FSL1H471J	CHIP C	470PF	J		
C73, 74			CC73FSL1H221J	CHIP C	220PF	J		
C75			CK73FF1E104Z	CHIP C	0.10UF	Z		
C77			CC73FCH1H220J	CHIP C	22PF	J		
C78, 79			CK73FF1E104Z	CHIP C	0.10UF	Z		
C80			CC73FCH1H220J	CHIP C	22PF	J		
C82			CE04KW1C470M	ELECTRO	47UF	16WV		
C83			CK73FB1H103K	CHIP C	0.010UF	K		
C84			CC73FSL1H101J	CHIP C	100PF	J		
C85			CC73FCH1H220J	CHIP C	22PF	J		
C86			CC73FCH1H100D	CHIP C	10PF	D		
C87			CC73FSL1H102J	CHIP C	1000PF	J		
C88			CC73FCH1H100D	CHIP C	10PF	D	E1T2	
C89, 90			CC73FCH1H120J	CHIP C	12PF	J	E1T2	
C91			CE04KW1E221M	ELECTRO	220UF	25WV	E1T2	
C93			CK73FB1H103K	CHIP C	0.010UF	K	E1T2	
C94			CE04KW1V220M	ELECTRO	22UF	35WV	E1T2	
C96			CE04KW1A101M	ELECTRO	100UF	10WV	E1T2	
C97			CC73FSL1H102J	CHIP C	1000PF	J	E1T2	
C98			CE04KW1V220M	ELECTRO	22UF	35WV	E1T2	
C100			CE04KW1E221M	ELECTRO	220UF	25WV	E1T2	
C101, 102			CK73FB1H103K	CHIP C	0.010UF	K	E1T2	
C103			CE04KW1A101M	ELECTRO	100UF	10WV	E1T2	
C104			CK73FB1H103K	CHIP C	0.010UF	K	E1T2	
C105, 106			CC73FCH1H070D	CHIP C	7.0PF	D	EK1P1	

L : Scandinavia	K : USA	P : Canada	R : Mexico	C : China	I : Malaysia
Y : PX(Far East, Hawaii)	T : Europe	E : Europe	G : Germany	V : China(Shanghai)	
Y : AAFES(Europe)	X : Australia	Q : Russia	H : Korea	M : Other Areas	△ indicates safety critical components.

Ref. No	Add- ress	New Parts	Parts No.	Description			Desti- nation	Re- marks
C105, 106			CC73FCH1H070D	CHIP C	7.0PF	D		
C107			CC73FSL1H102J	CHIP C	1000PF	J		
C108			CK45FF1H103Z	CERAMIC	0.010UF	Z		
C109			CE04KW1A101M	ELECTRO	100UF	10WV		
C111, 112			CE04KW1H4R7M	ELECTRO	4.7UF	50WV		
C113			CC73FSL1H102J	CHIP C	1000PF	J		
C115			CE04KW1A101M	ELECTRO	100UF	10WV		
C116			CE04KW1V4R7M	ELECTRO	4.7UF	35WV		
C118			CE04KW1A101M	ELECTRO	100UF	10WV		
C119, 120			CE04KW1V100M	ELECTRO	10UF	35WV		
C121			CK73FB1H103K	CHIP C	0.010UF	K		
C122			CK45FF1H103Z	CERAMIC	0.010UF	Z		
C123			CC73FSL1H101J	CHIP C	100PF	J		
C124			CK73FB1H103K	CHIP C	0.010UF	K		
C125~128			CC73FSL1H101J	CHIP C	100PF	J		
C130			CC73FSL1H102J	CHIP C	1000PF	J	EK1P1	
C130			CC73FSL1H102J	CHIP C	1000PF	J	T1E2	
C131, 132			CE04KW1C330M	ELECTRO	33UF	16WV		
C133~136			CC73FSL1H101J	CHIP C	100PF	J		
C137, 138			CE04KW1H2R2M	ELECTRO	2.2UF	50WV		
C139, 140			CC73FSL1H471J	CHIP C	470PF	J		
C141, 142			CE04KW1V100M	ELECTRO	10UF	35WV		
C143, 144			CC73FSL1H101J	CHIP C	100PF	J		
C145, 146			CE04KW1C330M	ELECTRO	33UF	16WV		
C147, 148			CC73FSL1H101J	CHIP C	100PF	J		
C149, 150			CC73FSL1H151J	CHIP C	150PF	J	EK1P1	
C149, 150			CC73FSL1H151J	CHIP C	150PF	J	T1E2	
C149, 150			CC73FSL1H221J	CHIP C	220PF	J	E1T2	
C151, 152			CC73FSL1H101J	CHIP C	100PF	J		
C153, 154			Q93FMG1H153J	MYLAR	0.015UF	J	E1T2	
C153, 154			Q93FMG1H273J	MYLAR	0.027UF	J	EK1P1	
C153, 154			Q93FMG1H273J	MYLAR	0.027UF	J	T1E2	
C155			CK73FB1H103K	CHIP C	0.010UF	K		
C156			CC73FSL1H101J	CHIP C	100PF	J		
C157, 158			Q93FMG1H152J	MYLAR	1500PF	J		
C159~162			CC73FSL1H101J	CHIP C	100PF	J		
C163, 164			CE04KW1H470M	ELECTRO	47UF	50WV		
C165, 166			CC73FSL1H471J	CHIP C	470PF	J		
C167			CC73FSL1H101J	CHIP C	100PF	J		
C168			CC73FSL1H102J	CHIP C	1000PF	J	E1T2	
C169~171			CC73FSL1H101J	CHIP C	100PF	J		
C172, 173			CC73FCH1H050C	CHIP C	5.0PF	C		
C174			CK73FF1E104Z	CHIP C	0.10UF	Z		
C176			CK73FB1H103K	CHIP C	0.010UF	K		
C177			CC73FSL1H182J	CHIP C	1800PF	J		
C178			CE04KW1E220M	ELECTRO	22UF	25WV		
C179			CE04KW1V100M	ELECTRO	10UF	35WV		
C180			CK73FB1H103K	CHIP C	0.010UF	K		
C181			CE04KW1E470M	ELECTRO	47UF	25WV		
C182			CK73FB1H103K	CHIP C	0.010UF	K	E1T2	
C183, 184			CC73FSL1H101J	CHIP C	100PF	J		
C185, 186			CC73FSL1H101J	CHIP C	100PF	J	EK1P1	
C185, 186			CC73FSL1H101J	CHIP C	100PF	J	T1E2	
C187, 188			CC73FSL1H101J	CHIP C	100PF	J	E1T2	
C189, 190			CC73FSL1H101J	CHIP C	100PF	J		

L : Scandinavia	K : USA	P : Canada	R : Mexico	C : China	I : Malaysia
Y : PX(Far East, Hawaii)	T : Europe	E : Europe	G : Germany	V : China(Shanghai)	
Y : AAFES(Europe)	X : Australia	Q : Russia	H : Korea	M : Other Areas	△ indicates safety critical components.

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

⑤

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

⑥

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
CN1			E40-4807-05	PIN ASSY		
CN2			E40-8055-05	FLAT CABLE CONNECTOR		
CN3			E40-8054-05	FLAT CABLE CONNECTOR		
CN4			E40-4944-05	FLAT CABLE CONNECTOR		
CN5			E40-4906-05	FLAT CABLE CONNECTOR		
△ CN6		*	E40-4245-05	PIN ASSY		
J1			E63-1065-05	PHONO JACK		
J2			E63-0160-05	PHONO JACK		
J3			E11-0293-05	MINIATURE PHONE JACK(2P)		
J4			E11-0127-05	PHONE JACK (3P)	EK1P1	
J4			E11-0190-05	PHONE JACK (3P)	T1E2	
E6			J13-0075-05	FUSE CLIP		
E6			J11-0808-05	WIRE CLAMPER		
L1, 2		*	L40-8201-58	SMALL FIXED INDUCTOR(82UH,K)	E1T2	
X1			L77-1124-05	CRYSTAL RESONATOR	E1T2	
X2			L77-1124-05	CRYSTAL RESONATOR	EK1P1	
X2			L77-1124-05	CRYSTAL RESONATOR	T1E2	
X3			L78-0615-05	RESONATOR (12.5MHZ)		
R1			RK73FB2A100J	CHIP R	10 J 1/10W	
R3			RK73FB2A103J	CHIP R	10K J 1/10W	
△ R4			RD14NB2E1R0J	RD	1 J 1/4W	
R5			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R6, 7			RK73FB2A103J	CHIP R	10K J 1/10W	
R8			RK73FB2A182J	CHIP R	1.8K J 1/10W	
R9, 10			RK73FB2A681J	CHIP R	680 J 1/10W	
R11			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R12			RK73FB2A751J	CHIP R	750 J 1/10W	
R13			RK73FB2A104J	CHIP R	100K J 1/10W	
R14			RK73FB2A472J	CHIP R	4.7K J 1/10W	
R15			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R16			RK73FB2A104J	CHIP R	100K J 1/10W	
R17			RK73FB2A103J	CHIP R	10K J 1/10W	
R18			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R19			RK73FB2A101J	CHIP R	100 J 1/10W	
R20-22			RK73FB2A331J	CHIP R	330 J 1/10W	
R23			RK73FB2A151J	CHIP R	150 J 1/10W	
R24			RK73FB2A222J	CHIP R	2.2K J 1/10W	
R25			R92-1861-05	METAL GLAZE	1.62K F 1/10W	
△ R26			R92-1860-05	METAL GLAZE	1.50K F 1/10W	
R27			RD14NB2E4R7J	RD	4.7 J 1/4W	
R28			RK73FB2A473J	CHIP R	47K J 1/10W	
R29			RD14NB2E4R7J	RD	4.7 J 1/4W	
R30			RK73FB2A104J	CHIP R	100K J 1/10W	
R31			RK73FB2A331J	CHIP R	330 J 1/10W	
R32-34			RK73FB2A104J	CHIP R	100K J 1/10W	
R35			RK73FB2A101J	CHIP R	100 J 1/10W	
R36			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R37			RK73FB2A473J	CHIP R	47K J 1/10W	
R38, 39			RK73FB2A104J	CHIP R	100K J 1/10W	
R40			RK73FB2A272J	CHIP R	2.7K J 1/10W	
R41, 42			RK73FB2A104J	CHIP R	100K J 1/10W	
R43			RK73FB2A182J	CHIP R	1.8K J 1/10W	
R45			RK73FB2A104J	CHIP R	100K J 1/10W	

L : Scandinavia

K : USA

P : Canada

R : Mexico

C : China

I :

Malaysia

Y : PX(Far East, Hawaii)

T : Europe

E : Europe

G : Germany

V : China(Shanghai)

Y : AAFES(Europe)

X : Australia

Q : Russia

H : Korea

M : Other Areas

△ indicates safety critical components.

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
R47			RK73FB2A104J	CHIP R	100K J 1/10W	
R48, 49			RK73FB2A272J	CHIP R	2.7K J 1/10W	
R51			RK73FB2A104J	CHIP R	100K J 1/10W	
R52, 53			RK73FB2A182J	CHIP R	1.8K J 1/10W	
R55			RK73FB2A331J	CHIP R	330 J 1/10W	
R56, 57			RK73FB2A471J	CHIP R	470 J 1/10W	
R58			RK73FB2A103J	CHIP R	10K J 1/10W	
R59			RK73FB2A123J	CHIP R	12K J 1/10W	
R60			RK73FB2A822J	CHIP R	8.2K J 1/10W	
R61			RK73FB2A333J	CHIP R	33K J 1/10W	
R62, 63			RK73FB2A101J	CHIP R	100 J 1/10W	
R64-71			RK73FB2A104J	CHIP R	100K J 1/10W	
R72			RK73FB2A272J	CHIP R	2.7K J 1/10W	
R73			RK73FB2A104J	CHIP R	100K J 1/10W	
R77			RK73FB2A182J	CHIP R	1.8K J 1/10W	
R78			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R79			RK73FB2A223J	CHIP R	22K J 1/10W	E1T2
R79			RK73FB2A473J	CHIP R	47K J 1/10W	EK1P1
R79			RK73FB2A103J	CHIP R	10K J 1/10W	T1E2
R80			RK73FB2A223J	CHIP R	22K J 1/10W	EK1P1
R80			RK73FB2A473J	CHIP R	47K J 1/10W	T1E2
R85-88			RK73FB2A103J	CHIP R	10K J 1/10W	
R89-93			RK73FB2A101J	CHIP R	100 J 1/10W	
R94, 95			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R96			RK73FB2A104J	CHIP R	100K J 1/10W	
R97-99			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R100			RK73FB2A391J	CHIP R	390 J 1/10W	EK1P1
R100			RK73FB2A391J	CHIP R	390 J 1/10W	T1E2
R101			RK73FB2A470J	CHIP R	47 J 1/10W	EK1P1
R101			RK73FB2A470J	CHIP R	47 J 1/10W	
R102			RK73FB2A104J	CHIP R	100K J 1/10W	
R103, 104			RK73FB2A103J	CHIP R	10K J 1/10W	
R105			RK73FB2A182J	CHIP R	1.8K J 1/10W	
R106			RK73FB2A272J	CHIP R	2.7K J 1/10W	
R107			RK73FB2A123J	CHIP R	12K J 1/10W	
R108			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R109			RK73FB2A473J	CHIP R	47K J 1/10W	
R110-114			RK73FB2A103J	CHIP R	10K J 1/10W	
R115			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R116			RK73FB2A104J	CHIP R	100K J 1/10W	
R117			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R118			RK73FB2A223J	CHIP R	22K J 1/10W	
R119			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R120			RK73FB2A104J	CHIP R	100K J 1/10W	
R121			RK73FB2A102J	CHIP R	1.0K J 1/10W	
R122			RK73FB2A223J	CHIP R	22K J 1/10W	
R123			RK73FB2A182J	CHIP R	1.8K J 1/10W	
R124			RK73FB2A272J	CHIP R	2.7K J 1/10W	
R125			RK73FB2A472J	CHIP R	4.7K J 1/10W	
R126			RK73FB2A822J	CHIP R	8.2K J 1/10W	
R127			RK73FB2A182J	CHIP R	1.8K J 1/10W	
R128			RK73FB2A272J	CHIP R	2.7K J 1/10W	
R129			RK73FB2A123J	CHIP R	12K J 1/10W	
R130			RK73FB2A182J	CHIP R	1.8K J 1/10W	

L : Scandinavia

K : USA

P : Canada

R : Mexico

C : China

I :

Malaysia

Y : PX(Far East, Hawaii)

T : Europe

E : Europe

G : Germany

V : China(Shanghai)

Y : AAFES(Europe)

X : Australia

Q : Russia

H : Korea

M : Other Areas

△ indicates safety critical components.

PARTS LIST

8

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

7

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

8

Ref. No	Add- ress	New Parts	Parts No.	Description			Desti- nation	Re- marks
R131			RK73FB2A272J	CHIP R	2.7K	J	1/10W	
R132			RK73FB2A472J	CHIP R	4.7K	J	1/10W	
R133~135			RK73FB2A104J	CHIP R	100K	J	1/10W	
R136, 137			RK73FB2A331J	CHIP R	330	J	1/10W	
R138			RK73FB2A104J	CHIP R	100K	J	1/10W	
R139			RK73FB2A221J	CHIP R	220	J	1/10W	
R140			RK73FB2A150J	CHIP R	15	J	1/10W	
R141			RK73FB2A101J	CHIP R	100	J	1/10W	
R142			RK73FB2A750J	CHIP R	75	J	1/10W	
R143			RK73FB2A271J	CHIP R	270	J	1/10W	
R144			RK73FB2A750J	CHIP R	75	J	1/10W	
R145			RK73FB2A331J	CHIP R	330	J	1/10W	
R146			RK73FB2A103J	CHIP R	10K	J	1/10W	
R148			RK73FB2A332J	CHIP R	3.3K	J	1/10W	
R149			RK73FB2A103J	CHIP R	10K	J	1/10W	
R150			RK73FB2A182J	CHIP R	1.8K	J	1/10W	
R151			RK73FB2A101J	CHIP R	100	J	1/10W	
R152			RK73FB2A104J	CHIP R	100K	J	1/10W	
R153			RK73FB2A101J	CHIP R	100	J	1/10W	
R154			RK73FB2A103J	CHIP R	10K	J	1/10W	
R155			RK73FB2A221J	CHIP R	220	J	1/10W	
R156			RK73FB2A821J	CHIP R	820	J	1/10W	
R157~159			RK73FB2A471J	CHIP R	470	J	1/10W	
R160			RK73FB2A512J	CHIP R	5.1K	J	1/10W	
R161			RK73FB2A391J	CHIP R	390	J	1/10W	
R162			RK73FB2A105J	CHIP R	1.0M	J	1/10W	E1T2
R162			RK73FB2A105J	CHIP R	1.0M	J	1/10W	E1T2
R163			RK73FB2A121J	CHIP R	120	J	1/10W	E1T2
R163			RK73FB2A121J	CHIP R	120	J	1/10W	E1T2
R163			RK73FB2A221J	CHIP R	220	J	1/10W	E1T2
R164			RK73FB2A151J	CHIP R	150	J	1/10W	
R165, 166			RK73FB2A104J	CHIP R	100K	J	1/10W	
R167			RK73FB2A471J	CHIP R	470	J	1/10W	
R168			RK73FB2A222J	CHIP R	2.2K	J	1/10W	E1T2
R168			RK73FB2A222J	CHIP R	2.2K	J	1/10W	E1T2
R169			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R169			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R170			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R171			RK73FB2A222J	CHIP R	2.2K	J	1/10W	
R172			RK73FB2A105J	CHIP R	1.0M	J	1/10W	
△ R173~175			RK73FB2A100J	CHIP R	10	J	1/10W	
R176, 177			RK73FB2A105J	CHIP R	1.0M	J	1/10W	
R178			RK73FB2A105J	CHIP R	1.0M	J	1/10W	E1T2
△ R178			RK73FB2A105J	CHIP R	1.0M	J	1/10W	E1T2
△ R179			RK73FB2A1R0J	CHIP R	1	J	1/10W	E1T2
△ R180			RK73FB2A220J	CHIP R	22	J	1/10W	
R181, 182			RK73FB2A222J	CHIP R	2.2K	J	1/10W	E1T2
R183, 184			RK73FB2A105J	CHIP R	1.0M	J	1/10W	
R185, 186			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R187, 188			RK73FB2A104J	CHIP R	100K	J	1/10W	
R189, 190			RK73FB2A223J	CHIP R	22K	J	1/10W	
R191, 192			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R193, 194			RK73FB2A473J	CHIP R	47K	J	1/10W	
R195, 196			RK73FB2A752J	CHIP R	7.5K	J	1/10W	
R197, 198			RK73FB2A331J	CHIP R	330	J	1/10W	

L: Scandinavia	K: USA	P: Canada	R: Mexico	C: China	I: Malaysia
Y: PX(Far East, Hawaii)	T: Europe	E: Europe	G: Germany	V: China(Shanghai)	
Y: AAES(Europe)	X: Australia	Q: Russia	H: Korea	M: Other Areas	△ indicates safety critical components.

L: Scandinavia
 Y: PX(Far East, Hawaii)
 Y: AAES(Europe)

K: USA
 T: Europe
 X: Australia

P: Canada
 E: Europe
 Q: Russia

R: Mexico
 G: Germany
 H: Korea

C: China
 V: China(Shanghai)

I: Malaysia

△ indicates safety critical components.

L: Scandinavia
 Y: PX(Far East, Hawaii)
 Y: AAES(Europe)

K: USA
 T: Europe
 X: Australia

P: Canada
 E: Europe
 Q: Russia

R: Mexico
 G: Germany
 H: Korea

C: China
 V: China(Shanghai)

I: Malaysia

△ indicates safety critical components.

PARTS LIST

* New Parts
 Parts without **Parts No.** are not supplied.
 Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
 Teile ohne **Parts No.** werden nicht geliefert.

⑩

* New Parts
 Parts without **Parts No.** are not supplied.
 Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
 Teile ohne **Parts No.** werden nicht geliefert.

⑨

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks	Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
△ D21			S5688B(TPB5)	DIODE			Q9, 10			2SC4081(R,S)	TRANSISTOR		
D22, 23			MA111	DIODE			Q9, 10			2SD1819A(Q,R)	TRANSISTOR		
D24			MA111	DIODE			Q11			2SD2012	TRANSISTOR		
D26			DA204U	DIODE			Q11			2SD2061	TRANSISTOR		
D27, 28			UDZ18B	ZENER DIODE			Q12			DTC113ZUA	DIGITAL TRANSISTOR		
D29			MA111	DIODE			Q12			UN5219	DIGITAL TRANSISTOR		
D30			DA204U	DIODE			Q13			2SA954(L,K)	TRANSISTOR		
△ D31, 32			U1BC44	DIODE			Q14, 15			2SD1302(S,T)	TRANSISTOR		
D33			UDZ3.3B	ZENER DIODE			Q16			DTC124EUA	DIGITAL TRANSISTOR		
D34			MA111	DIODE			Q16			UN5212	DIGITAL TRANSISTOR		
D35, 36			MA111	DIODE			Q17~20			2SD1450(S,T)	TRANSISTOR		
D35, 36			MA111	DIODE			Q21			2SC1845(F,E)	TRANSISTOR		
D38			MA111	DIODE			Q22			2SA992(F,E)	TRANSISTOR		
D40			MA111	DIODE			Q23			2SC4081(R,S)	TRANSISTOR		
D41			UDZ7.5B	ZENER DIODE			Q23			2SD1819A(Q,R)	TRANSISTOR		
D42			MA111	DIODE			Q24			2SA1576A(R,S)	TRANSISTOR		
D43, 44			DA204U	DIODE			Q24			2SB2128A(Q,R)	TRANSISTOR		
D45			MA111	DIODE			Q25			DTC124EUA	DIGITAL TRANSISTOR		
ED1		*	CM177M	INDICATOR TUBE			Q25			UN5212	DIGITAL TRANSISTOR		
△ IC1, 2		*	ICP-N10	ANALOGUE IC			Q26			DTA124EUA	DIGITAL TRANSISTOR		
IC3			NJM4558D	ANALOGUE IC			Q26			UN5112	DIGITAL TRANSISTOR		
IC4			PST993D-T	ANALOGUE IC			Q27, 28			DTC124EUA	DIGITAL TRANSISTOR		E1T2
IC5			TL431CLP	MOS-IC			Q27, 28			UN5212	DIGITAL TRANSISTOR		
△ IC6		*	ICP-N10	ANALOGUE IC			Q29			DTC124EUA	DIGITAL TRANSISTOR		
IC8		*	PCM3002E	MOS-IC			Q29			UN5212	DIGITAL TRANSISTOR		
IC8		*	PCM3002E	MOS-IC			Q30			DTA124EUA	DIGITAL TRANSISTOR		
IC10		*	PCM3003E	MOS-IC			Q30			UN5112	DIGITAL TRANSISTOR		
IC11		*	NJM4565D	ANALOGUE IC			Q31			DTC124EUA	DIGITAL TRANSISTOR		
IC13, 14		*	NJM4565D	IC(OP AMP X2)			Q31			UN5112	DIGITAL TRANSISTOR		
IC21, 22		*	TC74HCU04AF	IC(HEX INVERTER SMD)			Q32			DTA124EUA	DIGITAL TRANSISTOR		
IC23		*	LC75710NED	MOS-IC			Q33~37			UN5112	DIGITAL TRANSISTOR		
IC26		*	TC74HC00AF	IC(2INPUT NAND GATE)			Q33~37			2SC4081(R,S)	TRANSISTOR		
IC31		*	UPD784215GF532	MI-COM IC			Q39			2SD1819A(Q,R)	TRANSISTOR		
IC33		*	TC74HC373AF	IC(8 bit LATCH)			Q39			DTC124EUA	DIGITAL TRANSISTOR		
IC34			W24258S-7OLE	MEMORY IC			Q40			UN5212	DIGITAL TRANSISTOR		
IC35			TA8409S	MOS-IC			A1			UN5112	DIGITAL TRANSISTOR		
IC36			TC74HCT7007AF	IC(HEX BUFFER)			A2			2SC4081(R,S)	TRANSISTOR		
IC37			HD74HCT126FPEL	MOS-IC			A3			2SD1819A(Q,R)	TRANSISTOR		
IC38			TC74HCT7007AF	IC(HEX BUFFER)			Q32			DTC124EUA	DIGITAL TRANSISTOR		
IC39			TC74VHC244F	MOS-IC			Q33~37			UN5112	DIGITAL TRANSISTOR		
IC40			KAN06	CUSTOM IC			Q33~37			2SD1819A(Q,R)	TRANSISTOR		
IC41			PCM1716E	MOS-IC			Q39			DTC124EUA	DIGITAL TRANSISTOR		
△ Q1			2SD2012	TRANSISTOR			Q39			UN5212	DIGITAL TRANSISTOR		
△ Q1			2SD2061	TRANSISTOR			Q40			2SK163(L)	FET		
Q2			2SK246(GR)	FET			A1			W02-1181-05	OPTIC RECEIVING MODULE		
Q3			DTC113ZUA	DIGITAL TRANSISTOR			A2			W02-1114-05	OSCILLATING MODULE		
Q3			UN5219	DIGITAL TRANSISTOR			A3			W02-2571-05	OPTIC RECEIVING MODULE		
Q4			2SA992(F,E)	TRANSISTOR			MD MECHANISM PCB (X29-2580-00)						
Q5, 6			DTC124EUA	DIGITAL TRANSISTOR			CN1			E40-3260-05	PIN ASSY		
Q5, 6			UN5212	TRANSISTOR			CN2			E40-3261-05	PIN ASSY		
△ Q7			2SD2012	TRANSISTOR			CN3			E40-8076-05	FLAT CABLE CONNECTOR		
Q7			2SD2061	TRANSISTOR			S1			S68-0074-05	PUSH SWITCH		
Q8			2SA1576A(R,S)	TRANSISTOR			S2			S64-0028-05	LEVER SWITCH		
Q8			2SB1218A(Q,R)	TRANSISTOR			PH1			T95-0140-05	PHOTO INTERRUPTER		
△ Q7							MD PCB (X33-1100-00)						
C21, 22							C21, 22			CC73FCH1H020C	CHIP C	2.0PF	C
C101							C101			C92-0628-05	CHIP-TAN	10UF	10WV
C102							C102			CK73FB1E104K	CHIP C	0.10UF	K
C103, 104							C103, 104			C92-0628-05	CHIP-TAN	10UF	10WV
C105							C105			CK73FB1H103K	CHIP C	0.010UF	K

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
 Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)
 Y : AAFES(Europe) T : Europe E : Europe G : Germany V : China(Shanghai)
 Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas △ indicates safety critical components.

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
 Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany V : China(Shanghai)
 Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas △ indicates safety critical components.

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

⑪

Ref. No	Add- ress	New Parts	Parts No.	Description			Desti- nation	Re- marks
C106			CC73FCH1H102J	CHIP C	1000PF	J		
C107, 108			CK73FF1E104Z	CHIP C	0.10UF	Z		
C109			CK73FB1H223K	CHIP C	0.022UF	K		
C110			CK73FB1E104K	CHIP C	0.10UF	K		
C111			CK73FB1H683K	CHIP C	0.068UF	K		
C112			CK73FB1H472K	CHIP C	4700PF	K		
C113			CK73FF1C105Z	CHIP C	1.0UF	Z		
C115			CK73FB1C224K	CHIP C	0.22UF	K		
C116			CK73FB1H223K	CHIP C	0.022UF	K		
C117, 118			CK73FB1E104K	CHIP C	0.10UF	K		
C119			C92-0628-05	CHIP-TAN	10UF	10WV		
C121			C92-0048-05	ELECTRO	100UF	6.3WV		
C122			CK73FB1H103K	CHIP C	0.010UF	K		
C123			CK73FF1E104Z	CHIP C	0.10UF	Z		
C127			CK73FF1E104Z	CHIP C	0.10UF	Z		
C128			CK73FB1H103K	CHIP C	0.010UF	K		
C129			CK73FB1C474K	CHIP C	0.47UF	K		
C130			CC73FSL1H101J	CHIP C	100PF	J		
C131			CK73FB1H153K	CHIP C	0.015UF	K		
C132			CK73FB1C474K	CHIP C	0.47UF	K		
C133			CK73FB1H472K	CHIP C	4700PF	K		
C134, 135			CK73FF1E104Z	CHIP C	0.10UF	Z		
C136			C92-0048-05	ELECTRO	100UF	6.3WV		
C141			CK73FF1E104Z	CHIP C	0.10UF	Z		
C142-144			CC73FSL1H101J	CHIP C	100PF	J		
C146			CK73FF1E104Z	CHIP C	0.10UF	Z		
C151			C92-0048-05	ELECTRO	100UF	6.3WV		
C152			CK73FF1E104Z	CHIP C	0.10UF	Z		
C153			CK73FB1H103K	CHIP C	0.010UF	K		
C156			CK73FF1E104Z	CHIP C	0.10UF	Z		
C158			CK73FB1H682K	CHIP C	6800PF	K		
C160, 161			C92-0167-05	CHIP-ELE	10UF	10WV		
C163, 164			CK73FB1H103K	CHIP C	0.010UF	K		
C167, 168			CK73FF1E104Z	CHIP C	0.10UF	Z		
C169			C92-0628-05	CHIP-TAN	10UF	10WV		
C171			CK73FF1E104Z	CHIP C	0.10UF	Z		
C181			C92-0048-05	ELECTRO	100UF	6.3WV		
C182, 183			CK73FF1E104Z	CHIP C	0.10UF	Z		
C184			C92-0149-05	CHIP-ELE	22UF	8WV		
C185			C93-0031-05	CHIP-C	1000P	500V		
C187			C92-0048-05	ELECTRO	100UF	6.3WV		
C188			CK73FB1H103K	CHIP C	0.010UF	K		
C189			CK73FB1H333K	CHIP C	0.033UF	K		
C190			C92-0048-05	ELECTRO	100UF	6.3WV		
C191			CK73FF1E104Z	CHIP C	0.10UF	Z		
C195			CK73FF1C105Z	CHIP C	1.0UF	Z		
C196, 197			CK73FF1E104Z	CHIP C	0.10UF	Z		
C200			C93-0032-05	CHIP C	10UF	10WV		
CN101			E40-8074-05	FLAT CABLE CONNECTOR (29P)				
CN102			E40-8075-05	FLAT CABLE CONNECTOR (19P)				
CN103			E40-8077-05	FLAT CABLE CONNECTOR (22P)				
CN104			E40-8078-05	PIN ASSY (2P)				
CN105			E40-8076-05	FLAT CABLE CONNECTOR (15P)				
L1, 2			L33-0545-05	CHOKE COIL (10UH)				

L : Scandinavia

K : USA

P : Canada

R : Mexico

C : China

I :

Malaysia

Y : PX(Far East, Hawaii)

T : Europe

E : Europe

G : Germany

V : China(Shanghai)

Y : AAFES(Europe)

X : Australia

Q : Russia

H : Korea

M : Other Areas

△ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

⑫

Ref. No	Add- ress	New Parts	Parts No.	Description			Desti- nation	Re- marks
L3, 4			L33-0369-05	CHOKE COIL (100UH)				
L5~11			L79-1216-05	LINE FILTER				
R103			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R104			RK73FB2A103J	CHIP R	10K	J	1/10W	
R105			RK73FB2A472J	CHIP R	4.7K	J	1/10W	
R106			RK73FB2A335J	CHIP R	3.3M	J	1/10W	
R107			RK73FB2A474J	CHIP R	470K	J	1/10W	
R108, 109			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R110			RK73FB2A103J	CHIP R	10K	J	1/10W	
R112			RK73FB2A473J	CHIP R	47K	J	1/10W	
R113			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R115			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R117			RK73FB2A474J	CHIP R	470K	J	1/10W	
R120			RK73FB2A101J	CHIP R	100	J	1/10W	
R121			RK73FB2A104J	CHIP R	100K	J	1/10W	
R123			RK73FB2A221J	CHIP R	220	J	1/10W	
R124, 125			RK73FB2A101J	CHIP R	100	J	1/10W	
R127			RK73FB2A101J	CHIP R	100	J	1/10W	
R131			RK73FB2A103J	CHIP R	10K	J	1/10W	
R132			RK73FB2A104J	CHIP R	100K	J	1/10W	
R133			RK73FB2A684J	CHIP R	680K	J	1/10W	
R134			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R135			RK73FB2A332J	CHIP R	3.3K	J	1/10W	
R136			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R137			RK73FB2A101J	CHIP R	100	J	1/10W	
R140			RK73FB2A151J	CHIP R	150	J	1/10W	
R141			RK73FB2A561J	CHIP R	560	J	1/10W	
R142, 143			RK73FB2A103J	CHIP R	10K	J	1/10W	
R144			RK73FB2A101J	CHIP R	100	J	1/10W	
R146-148			RK73FB2A101J	CHIP R	100	J	1/10W	
R150			RK73FB2A221J	CHIP R	220	J	1/10W	
R158, 159			RK73FB2A104J	CHIP R	100K	J	1/10W	
R161-163			RK73FB2A222J	CHIP R	2.2K	J	1/10W	
R164			RK73FB2A681J	CHIP R	680	J	1/10W	
R165			RK73FB2A104J	CHIP R	100K	J	1/10W	
R166			R92-1854-05	RN	2.2	K	1/2W	
R167			RK73FB2A472J	CHIP R	4.7K	J	1/10W	
R169			R92-1853-05	CHIP-RN	1		1/4W	
R170, 171			RK73FB2A103J	CHIP R	10K	J	1/10W	
R173			RK73FB2A105J	CHIP R	1.0M	J	1/10W	
R175			RK73FB2A332J	CHIP R	3.3K	J	1/10W	
R177			RK73FB2A332J	CHIP R	3.3K	J	1/10W	
R179			RK73FB2A473J	CHIP R	47K	J	1/10W	
R180, 181			RK73FB2A103J	CHIP R	10K	J	1/10W	
R182, 183			RK73FB2A473J	CHIP R	47K	J	1/10W	
R184, 185			RK73FB2A103J	CHIP R	10K	J	1/10W	
R188-190			RK73FB2A103J	CHIP R	10K	J	1/10W	
W1-4			R92-0670-05	CHIP R	0 OHM			
W101			R92-0670-05	CHIP R	0 OHM			
W108			R92-0679-05	CHIP R	0 OHM			
W109			R92-0670-05	CHIP R	0 OHM			
W111			R92-0670-05	CHIP R	0 OHM			
W114			R92-0670-05	CHIP R	0 OHM			
W116			R92-0670-05	CHIP R	0 OHM			

L : Scandinavia

K : USA

P : Canada

R : Mexico

C : China

I : Malaysia

Y : PX(Far East, Hawaii)

T : Europe

E : Europe

G : Germany

V : China(Shanghai)

Y : AAFES(Europe)

X : Australia

Q : Russia

H : Korea

M : Other Areas

△ indicates safety critical components.

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

13

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
W178			R92-0670-05	CHIP R 0 OHM		
W186, 187			R92-0679-05	CHIP R 0 OHM		
W195, 196			R92-0670-05	CHIP R 0 OHM		
W198~201			R92-0670-05	CHIP R 0 OHM		
D1, 2			F1J6TP	DIODE		
D101			MA111	DIODE		
IC1			CXA2523AR	ANALOGUE IC		
IC2			CXD2652AR	MOS-IC		
IC3			TCTS08FU	MOS-IC		
IC4			TC7WU04FU	MOS-IC		
IC5			TC74ACT540FS	MOS-IC		
IC6			X24C01AS-2.7	MEMORY IC		
IC7			HM51W4400BTT-7	MEMORY IC		
IC8			BH6511FS	ANALOGUE IC		
IC10			L88MS33T	ANALOGUE IC		
Q1			FMW1	TRANSISTOR		
Q2, 3			DTA144EUA	DIGITAL TRANSISTOR		
Q4, 5			DTC114YUA	DIGITAL TRANSISTOR		
Q6			2SA1576A(R,S)	TRANSISTOR		
Q7			2SB798-DL	TRANSISTOR		
Q8			2SJ278	FET		
Q9			2SK1764	FET		
Q10			DTC114EUA	DIGITAL TRANSISTOR		

MD MECHANISM (D40-1533-05) : MDM-04

1	2B	A10-3329-08	CHASSIS ASSY			
2	1B	D10-3690-08	LEVER ASSY			
3	1A	D10-3698-08	ARM ASSY			
4	2A	D10-3759-08	SLIDER ASSY (HD)			
5	2B	D13-1784-08	GEAR ASSY (T)			
6	1A	J11-0824-08	CLAMPER ASSY			
7	1B	J19-5766-08	HOLDER ASSY			
8	3A	A11-1113-08	SUB SHASSIS (FRAME)			
9	1B	A11-1116-08	SUB SHASSIS (TOP)			
10	2A	D10-3742-08	LEVER (DOOR)			
11	3A	D13-1792-08	RACK (GEAR)			
12	2B	G02-1616-08	FLAT SPRING (THRUST)			
13	3A	G02-1618-08	FLAT SPRING (SUB)			
15	2A	D10-3685-08	SHAFT (SUB)			
16	2A	D10-3694-08	SHAFT (MAIN)			
17	1A	D21-1859-08	SHAFT (JOINT)			
18	2B	D10-3686-08	SLIDER (MAIN)			
19	1A	D10-3687-08	SLIDER (LD)			
20	1A	D10-3689-08	ARM (CLAMP)			
21	2A	D10-3692-08	ARM (CHANGE)			
22	2B	D13-1786-08	GEAR (WORM)			
23	2A	D13-1787-08	GEAR (MOTOR-T)			
24	2A	D13-1788-08	GEAR (MOTOR-L)			
25	1A	D13-1789-08	GEAR (INTERMEDIATE LA)			
26	2A	D13-1790-08	GEAR (INTERMEDIATE LB)			
27	2A	D13-1791-08	GEAR (MAIN)			
28	1A	G13-0560-08	CUSHION			
29	3A, 3B	J02-1178-08	INSULATOR			
30	1A	G01-3964-08	EXTENSION SP			
31	1A	G01-3965-08	TORSION SP			

L: Scandinavia

K: USA

P: Canada

R: Mexico

C: China

I: Malaysia

Y: PX(Far East, Hawaii)

T: Europe

E: Europe

G: Germany

V: China(Shanghai)

Y: AAFES(Europe)

X: Australia

Q: Russia

H: Korea

M: Other Areas

△ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

14

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
32	2B		G01-3966-08	EXTENSION SP		
33	1A		G01-3967-08	EXTENSION SP (S/HD)		
34	2A		G01-4014-08	EXTENSION SP (DOOR)		
35	3B		G10-0146-04	NON-WOVEN-FABRIC		
36	2B		N19-1101-04	POLY WS 1.2*3.0*0.5CUT		
37	1B		N19-1105-04	POLY WS 1.6*3.5*0.5CUT		
38	1A		N19-0366-04	POLY WS 2.1*4.0*0.5CUT		
39	1A		G16-0877-04	SHEET (TRAY)		
40	2B		E35-1715-08	WIRING HARNESS		
41	3A		E35-1780-08	FLAT CABLE		
42	3B		J80-0012-08	FPC		
47	2B		S33-1022-05	PUSH SWITCH SPPB12		
48	2A, 3A		J26-0052-08	PCB ASSY (X29-2580-00)		
DM	3A		T42-0871-08	MOTOR ASSY		
FM	3A		T42-0880-05	DC MOTOR		
LM	3A		T42-0881-05	DC MOTOR		
PU	3A		T25-0060-05	OPTICAL PICKUP HEAD		
RH	3A		T30-0013-05	RECORD HEAD		

L: Scandinavia

K: USA

P: Canada

R: Mexico

C: China

I: Malaysia

Y: PX(Far East, Hawaii)

T: Europe

E: Europe

G: Germany

V: China(Shanghai)

Y: AAFES(Europe)

X: Australia

Q: Russia

H: Korea

M: Other Areas

△ indicates safety critical components.

HOW TO READ THE PARTS LIST

ABBREVIATION OF MODEL AND MASS PRODUCTION'S DESTINATIONS

MODEL	ABB.	Australia	Canada	China	England	Europe	Germany	Korea	Malaysia
DMF-3020		-	-	-	T1	E	-	-	-
DMF-3020(S)		-	-	-	-	E1	-	-	-
DMF-5020		-	-	-	-	T2	E2	-	-
MD-203		-	-	P1	-	-	-	-	-
MODEL	ABB.	Mexico	PX/AAFES	Russia	Scandinavia	Shanghai	USA	Other area	-
DMF-3020		-	-	-	-	-	-	-	-
DMF-3020(S)		-	-	-	-	-	-	-	-
DMF-5020		-	-	-	-	-	-	-	-
MD-203		-	-	-	-	-	-	K1	-

SPECIFICATIONS

DMF-5020**[Format]**

System Minidisc digital audio system
 Laser Semiconductor laser
 Recording method Field modulation overwrite method
 Audio compression ATRAC (Adaptive TRansform Acoustic Coding)
 Playing rotation Approx. 400 rpm ~ 900 rpm (CLV)

[D/A conversion]

D/A conversion 1 Bit (24 Bit D.R.I.V.E. conversion)
 Oversampling 8 fs (352.8 kHz)

[A/D converter]

A/D converter 5 th order sigma-delta conversion
 Sampling frequency 44.1 kHz

[Digital audio performance]

Frequency response (playback mode) 8 Hz ~ 20 kHz (± 1 dB)
 Signal to noise ratio (playback mode) More than 105 dB
 Dynamic range (playback mode) More than 94 dB
 Total harmonic distortion (1 kHz, playback mode) Less than 0.007 %
 Wow & flutter Less than unmeasurable limit
 Analog input sensitivity / input impedance 500 mV / 22 k Ω or more
 Analog output level / output impedance 2.0 V / Less than 400 Ω
 Headphone output 20 mW/32 Ω load
 Digital input
 Coxial 0.5 Vp-p / 75 Ω
 Optical(Wave length 660 nm) - 15 dBm ~ - 21 dBm
 Digital output
 Coxial 0.5 Vp-p / 75 Ω
 Optical(Wave length 660 nm) - 15 dBm ~ - 21 dBm

[General]

Power consumption 18 W
 Dimensions W : 440 mm (17 - 5 / 16")
 H : 94 mm (3 - 11 / 16")
 D : 379 mm (14 - 15 / 16")
 Weight (Net) 4.0 kg (8.8 lb)



1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).

Note:

Component and circuit are subject to modification to insure best operation under differing local conditions. This manual is based on Europe (E) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

14-6,Dogenzaka 1-chome, Shibuya-ku, Tokyo, 150-8501 Japan

KENWOOD SERVICE CORPORATION

P.O BOX 22745, 2201 East Dominguez St., Long Beach, CA 90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.

P.O BOX 55-2791, Piso 6 plaza Chase, Cl. 47 y Aquilino de la Guardia Panama, Republic de Panama

KENWOOD ELECTRONICS BRASIL LTDA.

Av Indianópolis, 628, 04062-001 Planalto Paulista São Paulo-SP-Brasil

KENWOOD ELECTRONICS U.K. LIMITED

KENWOOD House, Dwight Road, Watford, Herts., WD1 8EB., United Kingdom

KENWOOD ELECTRONICS BELGUM N.V.

Meachelsesteenweg 418, B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücker Str. 15, 63150 Heusenstamm, Germany

KENWOOD ELECTRONICS FRANCE S.A.

13 Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS ITALIA S.p.A.

Via G. Sirtori, 7/9 20129, Milano, Italy

DMF-3020/MD-203**[Format]**

System Minidisc digital audio system
 Laser Semiconductor laser
 Recording method Field modulation overwrite method
 Audio compression ATRAC (Adaptive TRansform Acoustic Coding)
 Playing rotation Approx. 400 rpm ~ 900 rpm (CLV)

[D/A conversion]

D/A conversion 1 Bit (24 Bit D.R.I.V.E. conversion)
 Oversampling 8 fs (352.8 kHz)

[A/D converter]

A/D converter 5 th order sigma-delta conversion
 Sampling frequency 44.1 kHz

[Digital audio performance]

Frequency response (playback mode) 8 Hz ~ 20 kHz (± 1 dB)
 Signal to noise ratio (playback mode) More than 100 dB
 Dynamic range (playback mode) More than 90 dB
 Total harmonic distortion (1 kHz, playback mode) Less than 0.01 %
 Wow & flutter Less than unmeasurable limit
 Analog input sensitivity / input impedance 500 mV / 22 k Ω or more
 Analog output level / output impedance 2.0 V / Less than 400 Ω
 Headphone output 20 mW/32 Ω load
 Digital input
 Coxial 0.5 Vp-p / 75 Ω
 Optical(Wave length 660 nm) - 15 dBm ~ - 21 dBm
 Digital output
 Coxial 0.5 Vp-p / 75 Ω
 Optical(Wave length 660 nm) - 15 dBm ~ - 21 dBm

[General]

Power consumption 18 W
 Dimensions W : 440 mm (17 - 5 / 16")
 H : 94 mm (3 - 11 / 16")
 D : 379 mm (14 - 15 / 16")
 Weight (Net) 4.0 kg (8.8 lb)

KENWOOD IBÉRICA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD.

(A.C.N. 001499 074)
 P.O Box 504, 8 Figtree Drive, Australia Centre, Homebush, N.S.W. 2140, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Unit 3712-3724, Level 37, Tower 1, Metroplaza, 223 Hing Fong Road, Kwai Fong N.T., Hong Kong

KENWOOD ELECTRONICS GULF FZE

P.O.Box 61318, Jebel Ali, Dubai, U.A.E.

KENWOOD ELECTRONICS SINGAPORE PTE LTD.

No. 1 Genting Lane #02-02, KENWOOD Building, Singapore, 349544

KENWOOD ELECTRONICS (MALAYSIA) SDN BHD.

#4.01 Level 4, Wisma Academy Lot 4A, Jalan 19/1 46300 Petaling Jaya Selangor Darul Ehsan Malaysia

KENWOOD ELECTRONICS (THAILAND) CO., LTD.

573/111 Soi Ramkhamhaeng 39, Ramkhamhaeng Road, Wangthonglang, Bangkok, Bangkok 10301 Thailand