




SERVICE MANUAL MODEL: LH-T6347 (LH-T6347X LHS-T6347T, LHS-T6347W)

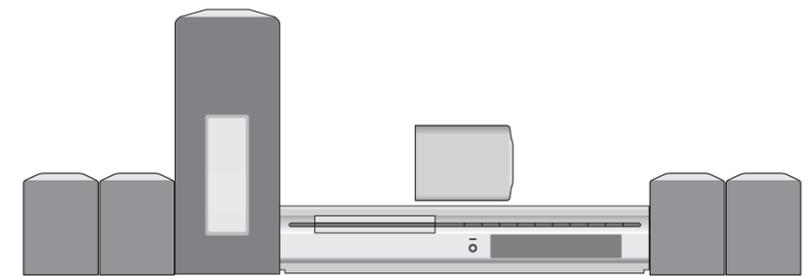

DVD/CD RECEIVER SERVICE MANUAL



MODEL: LH-T6347
LH-T6347X
LHS-T6347T, LHS-T6347W

[CONTENTS]

○ SECTION 1. GENERAL

- SERVICING PRECAUTIONS 1-2
- ESD PRECAUTIONS 1-4
- SPECIFICATIONS 1-5

○ SECTION 2. AUDIO PART

- AUDIO TROUBLESHOOTING GUIDE 2-1
- BLOCK DIAGRAM 2-5
- SCHEMATIC DIAGRAMS 2-7
- WIRING DIAGRAM 2-17
- PRINTED CIRCUIT DIAGRAMS 2-19

○ SECTION 3. DVD PART TROUBLESHOOTING GUIDE

- ELECTRICAL TROUBLESHOOTING GUIDE 3-1
- DVD PART SCHEMATIC DIAGRAMS 3-7

○ SECTION 4. EXPLODED VIEWS 4-1

○ SECTION 5. SPEAKER PART 5-1

○ SECTION 6. REPLACEMENT PARTS LIST 6-1

SECTION 1. GENERAL


 
□ SERVICING PRECAUTIONS

NOTES REGARDING HANDLING OF THE PICK-UP

1. Notes for transport and storage

- 1) The pick-up should always be left in its conductive bag until immediately prior to use.
- 2) The pick-up should never be subjected to external pressure or impact.


Storage in conductive bag

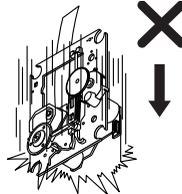

Drop impact

2. Repair notes


- 1) The pick-up incorporates a strong magnet, and so should never be brought close to magnetic materials.
- 2) The pick-up should always be handled correctly and carefully, taking care to avoid external pressure and impact. If it is subjected to strong pressure or impact, the result may be an operational malfunction and/or damage to the printed-circuit board.
- 3) Each and every pick-up is already individually adjusted to a high degree of precision, and for that reason the adjustment point and installation screws should absolutely never be touched.
- 4) Laser beams may damage the eyes!
Absolutely never permit laser beams to enter the eyes!
Also NEVER switch ON the power to the laser output part (lens, etc.) of the pick-up if it is damaged.

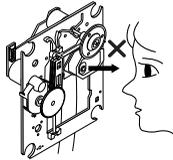

NEVER look directly at the laser beam, and don't let contact fingers or other exposed skin.

5) Cleaning the lens surface

If there is dust on the lens surface, the dust should be cleaned away by using an air bush (such as used for camera lens). The lens is held by a delicate spring. When cleaning the lens surface, therefore, a cotton swab should be used, taking care not to distort this.

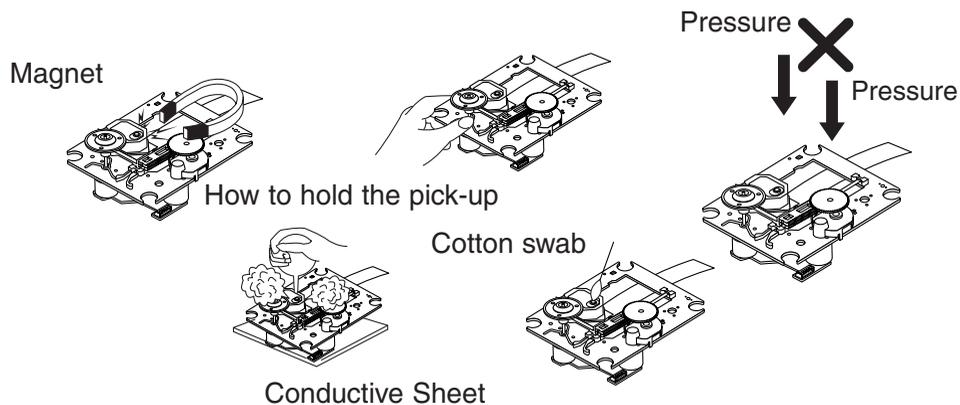

6) Never attempt to disassemble the pick-up.

Spring by excess pressure. If the lens is extremely dirty, apply isopropyl alcohol to the cotton swab. (Do not use any other liquid cleaners, because they will damage the lens.) Take care not to use too much of this alcohol on the swab, and do not allow the alcohol to get inside the pick-up.


NOTES REGARDING COMPACT DISC PLAYER REPAIRS

1. Preparations

- 1) Compact disc players incorporate a great many ICs as well as the pick-up (laser diode). These components are sensitive to, and easily affected by, static electricity. If such static electricity is high voltage, components can be damaged, and for that reason components should be handled with care.
- 2) The pick-up is composed of many optical components and other high-precision components. Care must be taken, therefore, to avoid repair or storage where the temperature or humidity is high, where strong magnetism is present, or where there is excessive dust.

2. Notes for repair

- 1) Before replacing a component part, first disconnect the power supply lead wire from the unit
- 2) All equipment, measuring instruments and tools must be grounded.
- 3) The workbench should be covered with a conductive sheet and grounded.
When removing the laser pick-up from its conductive bag, do not place the pick-up on the bag. (This is because there is the possibility of damage by static electricity.)
- 4) To prevent AC leakage, the metal part of the soldering iron should be grounded.
- 5) Workers should be grounded by an armband (1M Ω)
- 6) Care should be taken not to permit the laser pick-up to come in contact with clothing, in order to prevent static electricity changes in the clothing to escape from the armband.
- 7) The laser beam from the pick-up should NEVER be directly facing the eyes or bare skin.

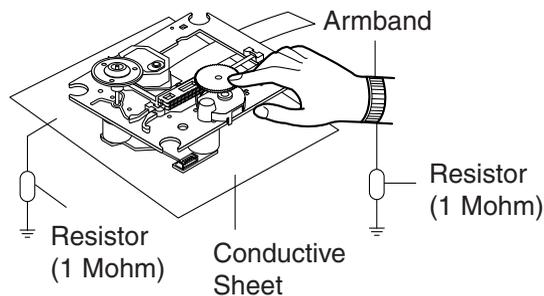

□ ESD PRECAUTIONS

Electrostatically Sensitive Devices (ESD)

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive Devices (ESD). Examples of typical ESD devices are integrated circuits and some field-effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ESD devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ESD devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ESD devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESD devices.
6. Do not remove a replacement ESD device from its protective package until immediately before you are ready to install it. (Most replacement ESD devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive materials).
7. Immediately before removing the protective material from the leads of a replacement ESD device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION : BE SURE NO POWER IS APPLIED TO THE CHASSIS OR CIRCUIT, AND OBSERVE ALL OTHER SAFETY PRECAUTIONS.

8. Minimize bodily motions when handling unpackaged replacement ESD devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ESD device).

CAUTION. GRAPHIC SYMBOLS



THE LIGHTNING FLASH WITH APROWHEAD SYMBOL. WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF IMPORTANT SAFETY INFORMATION IN SERVICE LITERATURE.

□ SPECIFICATIONS


[General]	Power supply	Refer to main label		
	Power consumption	Refer to main label		
	Mass	3.8kg		
	External dimensions (W x H x D)	360 x 75 x 314 mm		
	Operating conditions	Temperature: 5°C to 35°C, Operation status: Horizontal		
	Operating humidity	5% to 85%		
[CD/DVD]	Laser	Semiconductor laser, wavelength 650 nm		
	Signal system	PAL 625/50, NTSC 525/60		
	Frequency response (audio)	200 Hz to 18 kHz		
	Signal-to-noise ratio (audio)	More than 70 dB (1 kHz, NOP, 20 kHz LPF/A-Filter)		
	Dynamic range (audio)	More than 70 dB		
	Harmonic distortion (audio)	1.0 % (1 kHz, at 12W position) (20 kHz LPF/A-Filter)		
[Video]	Video output	1.0 V (p-p), 75Ω , negative sync., RCA jack		
	S-video output	(Y) 1.0 V (p-p), 75Ω , negative sync., Mini DIN 4-pin x 1 (C) 0.3 V (p-p), 75Ω		
[Tuner]	[FM]	Tuning Range	87.5 - 108.0 MHz or 65.0 - 74.0 MHz, 87.5 - 108.0 MHz	
		Intermediate Frequency	10.7 MHz	
		Signal-to Noise Ratio	55 dB (Mono)	
	[AM [MW]]	Frequency Response	180-10,000 Hz	
		Tuning Range	522~1,611kHz, 530~1,610kHz	
		Intermediate Frequency	450 kHz	
[Amplifier]	Stereo mode	25W + 25W (6Ω at 1 kHz, THD 10 %)		
	Surround mode (* Depending on the sound mode settings and the source, there may be no sound output.)	Front: 25W + 25W (THD 10 %) Centre*: 25W Surround*: 25W + 25W (6Ω at 1 kHz, THD 10 %) Subwoofer*: 60W (8Ω at 70 Hz, THD 10 %)		
	Outputs	S-VIDEO MONITOR		
[Speakers]		Satellite Speaker	Passive Subwoofer	
	Type	1Way 1Speaker	1Way 1Speaker	
	Impedance	6Ω	8Ω	
	Frequency Response	130-20,000 Hz	50 -1,500 Hz	
	Sound Pressure Level	83 dB/W (1m)	82 dB/W (1m)	
	Rated Input Power	25 W	60 W	
	Max. Input Power	50 W	120 W	
	Net Dimensions (W x H x D)	88 x 100 x 95 mm	160 x 350 x 325 mm	
Net Weight	0.54 kg	4.12 kg		
[Supplied Accessories]	<ul style="list-style-type: none"> • Speakers6 • AM loop antenna1 • Remote control1 • Speaker cables5 • FM antenna2 • Batteries (AAA)1 			

Designs and specifications are subject to change without notice.


SECTION 2. AUDIO PART

□ AUDIO TROUBLESHOOTING GUIDE

1. POWER SUPPLY CIRCUIT

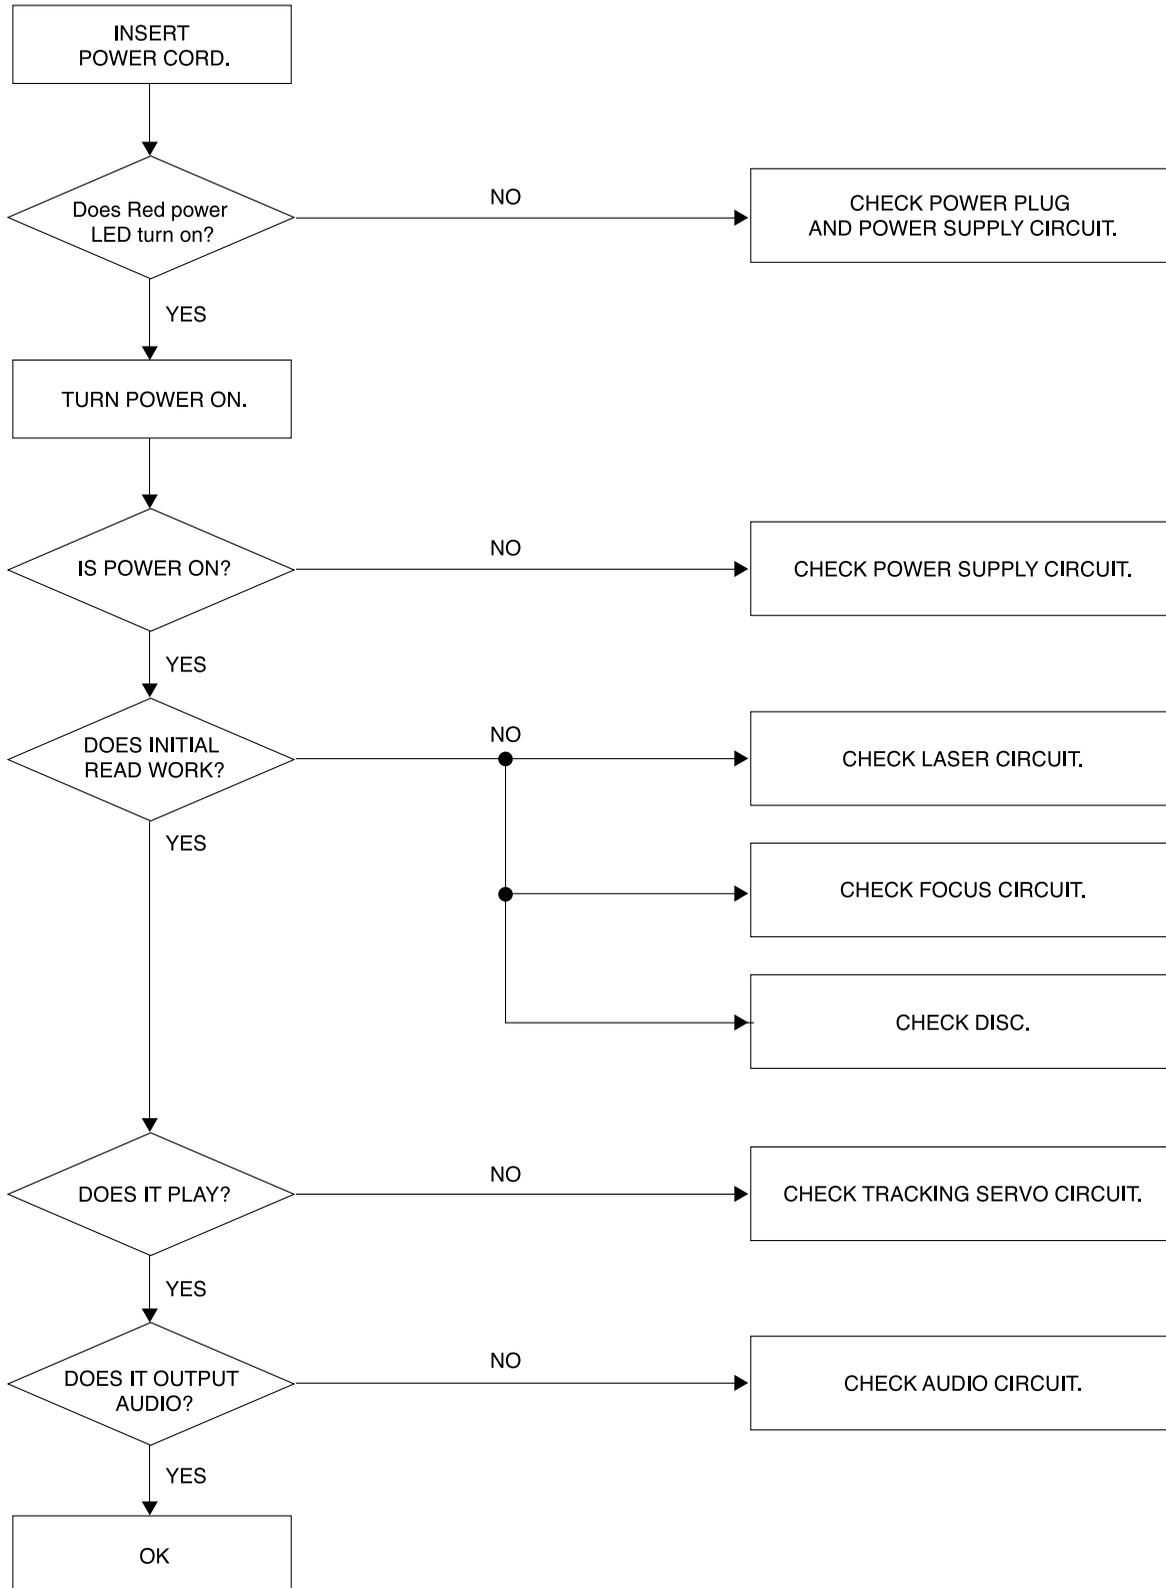



2. FRONT CIRCUIT (1/2)

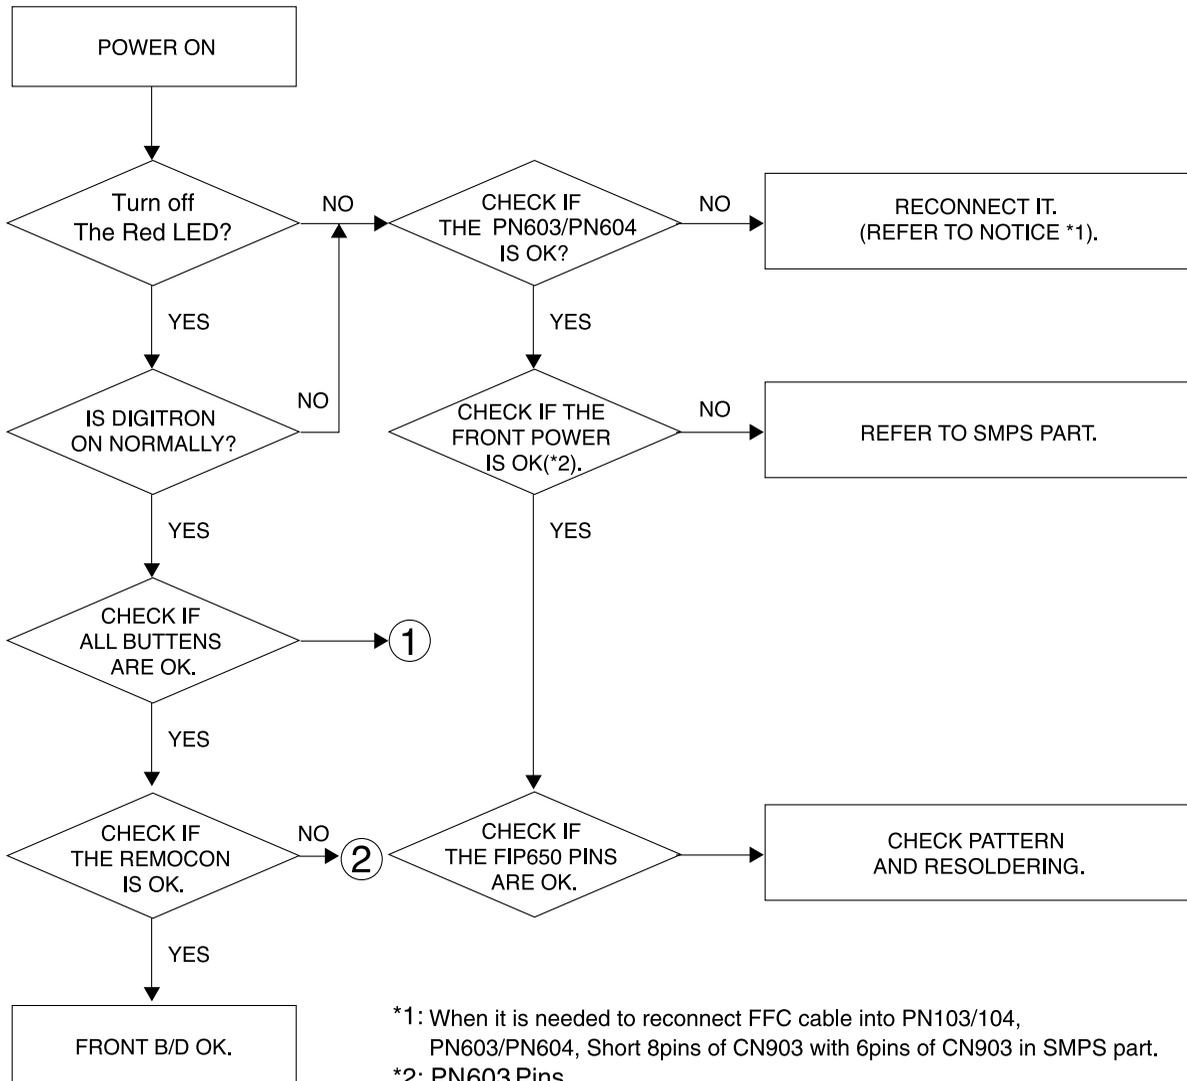

*1: When it is needed to reconnect FFC cable into PN103/104,
PN603/PN604, Short 8pins of CN903 with 6pins of CN903 in SMPS part.


*2: PN603 Pins.
 PIN1 : -32.4
 PIN2 : -27.5
 PIN3 : -23.7
 PIN4 : -23.7
 PIN11 : -5.0

3. FRONT CIRCUIT (2/2)

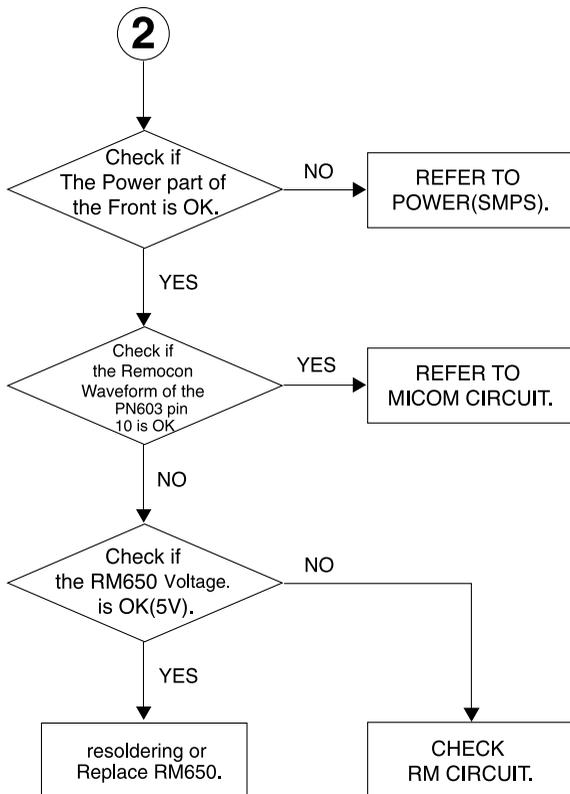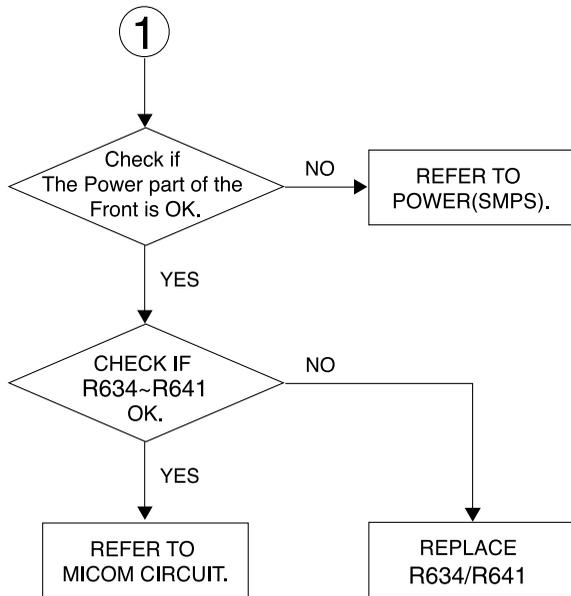


MEMO

□ BLOCK DIAGRAM

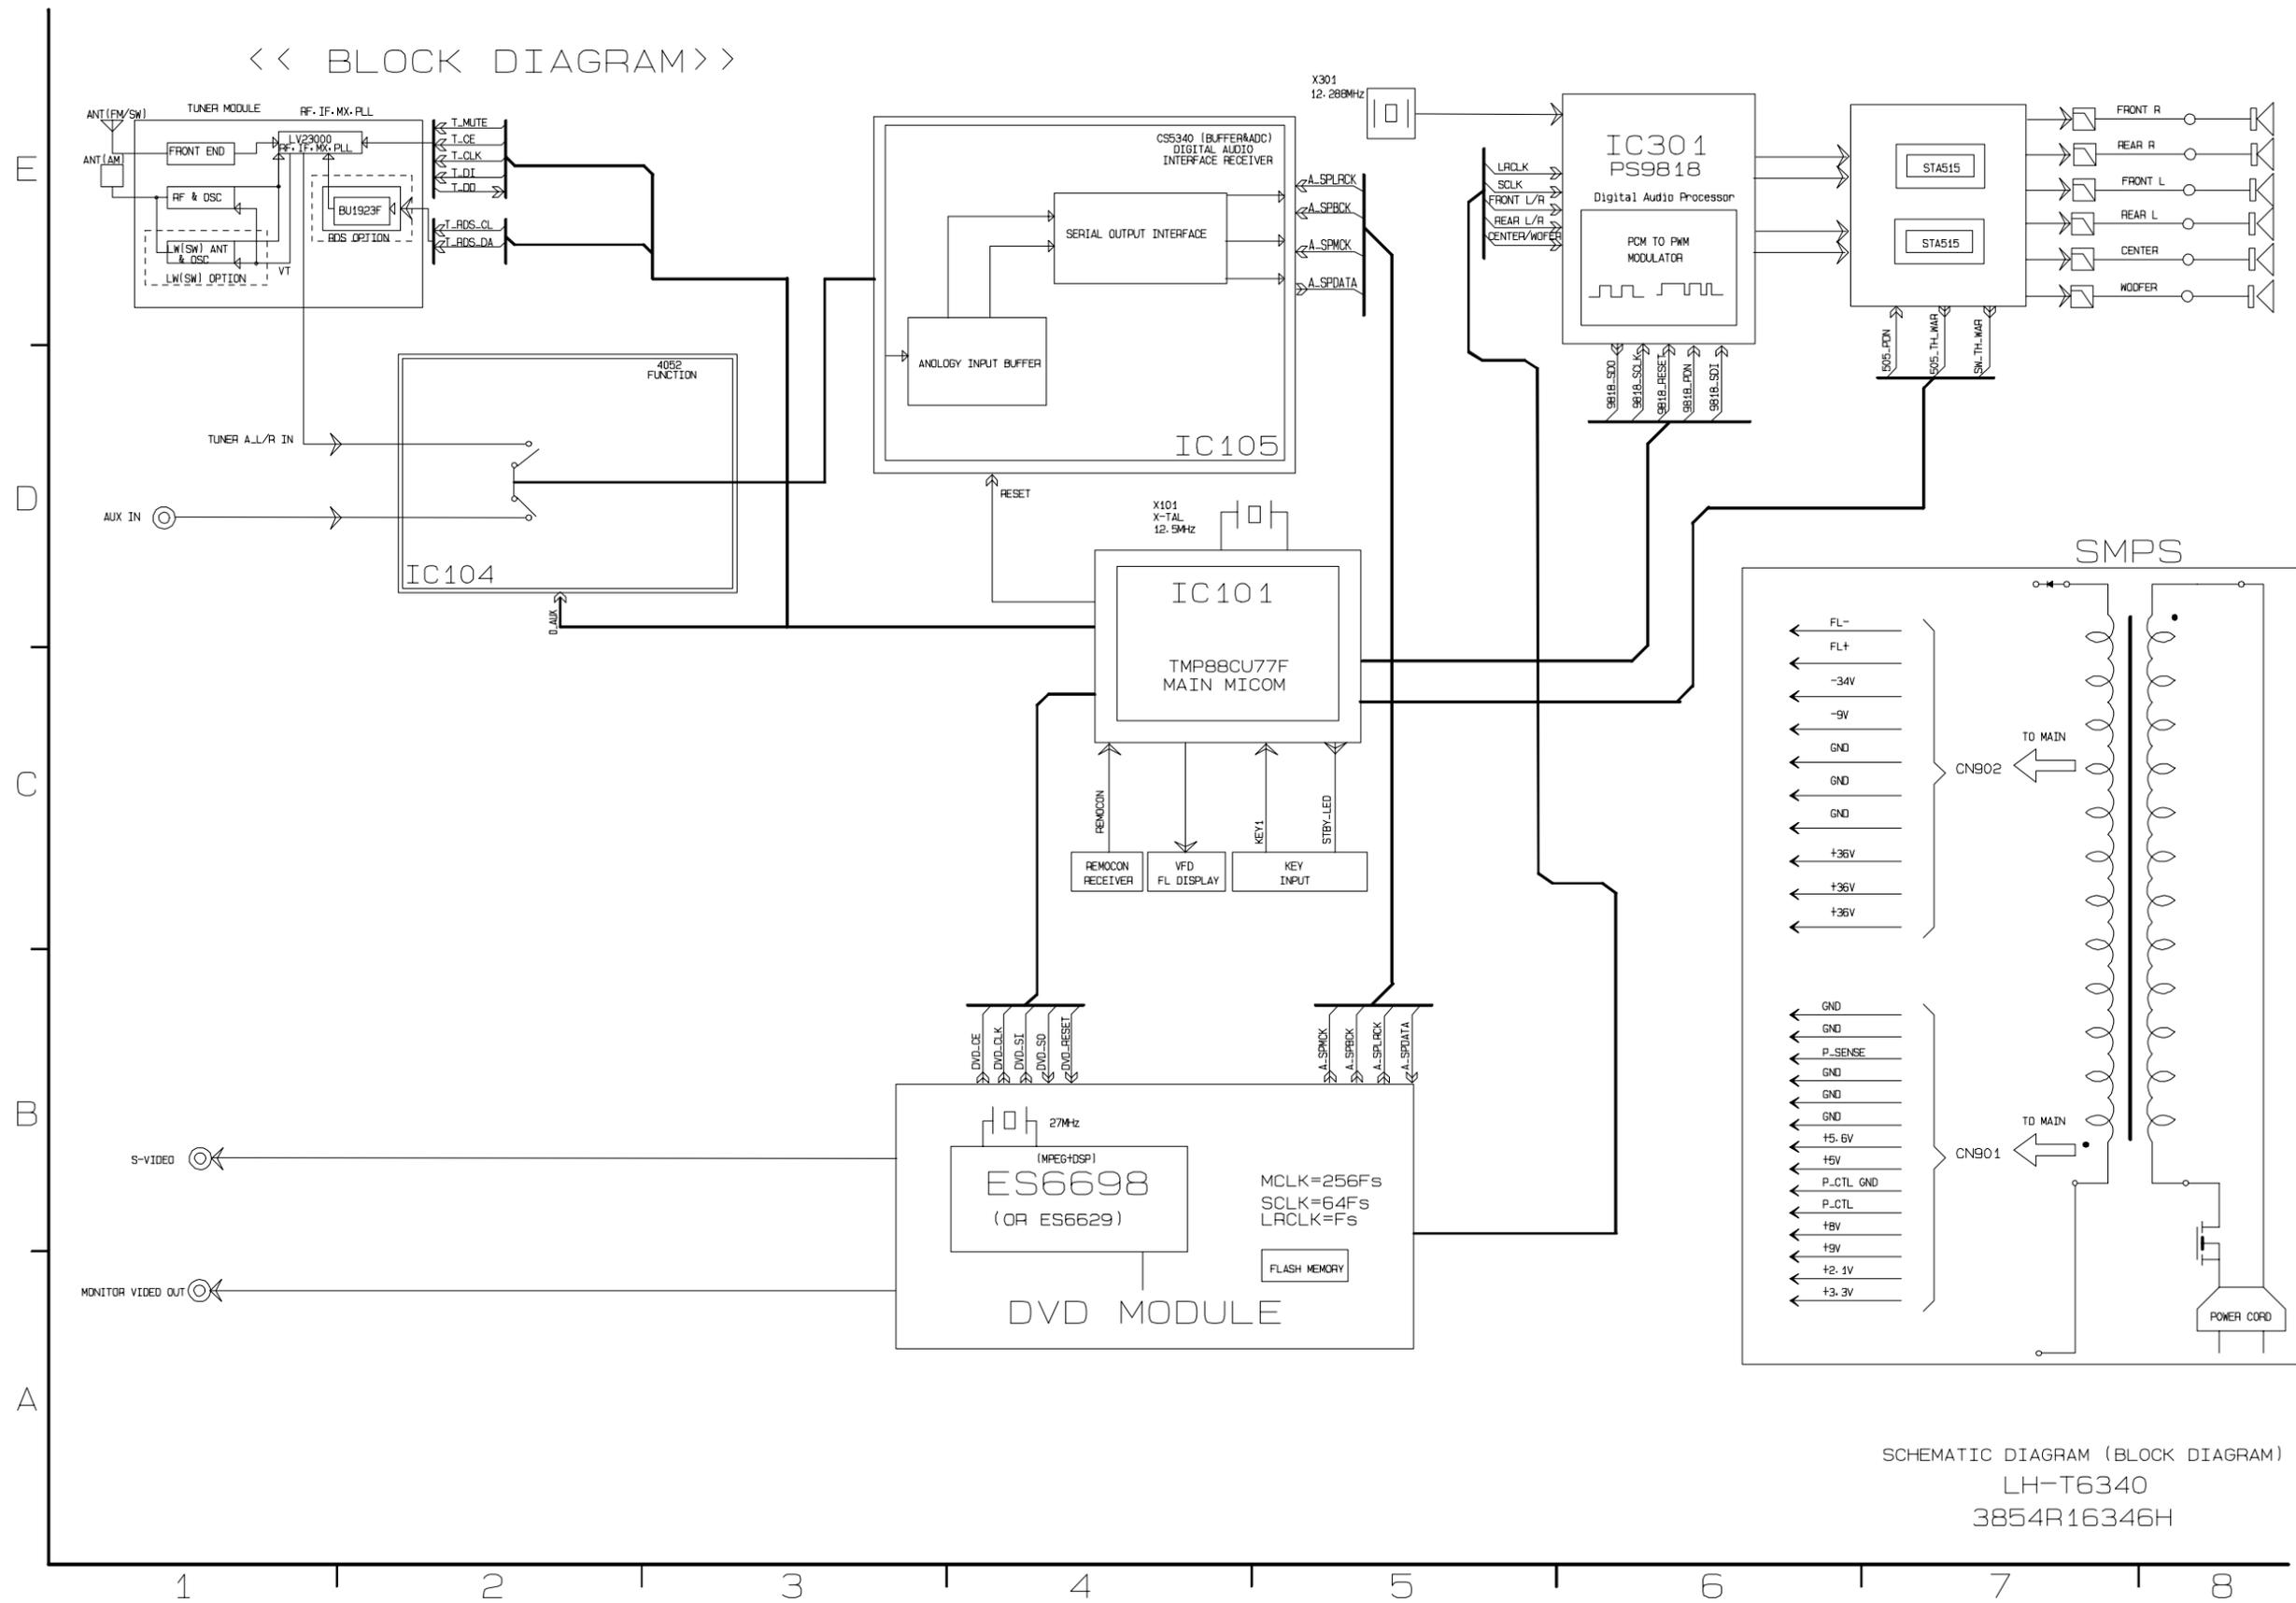


SCHEMATIC DIAGRAMS

POWER SCHEMATIC DIAGRAM

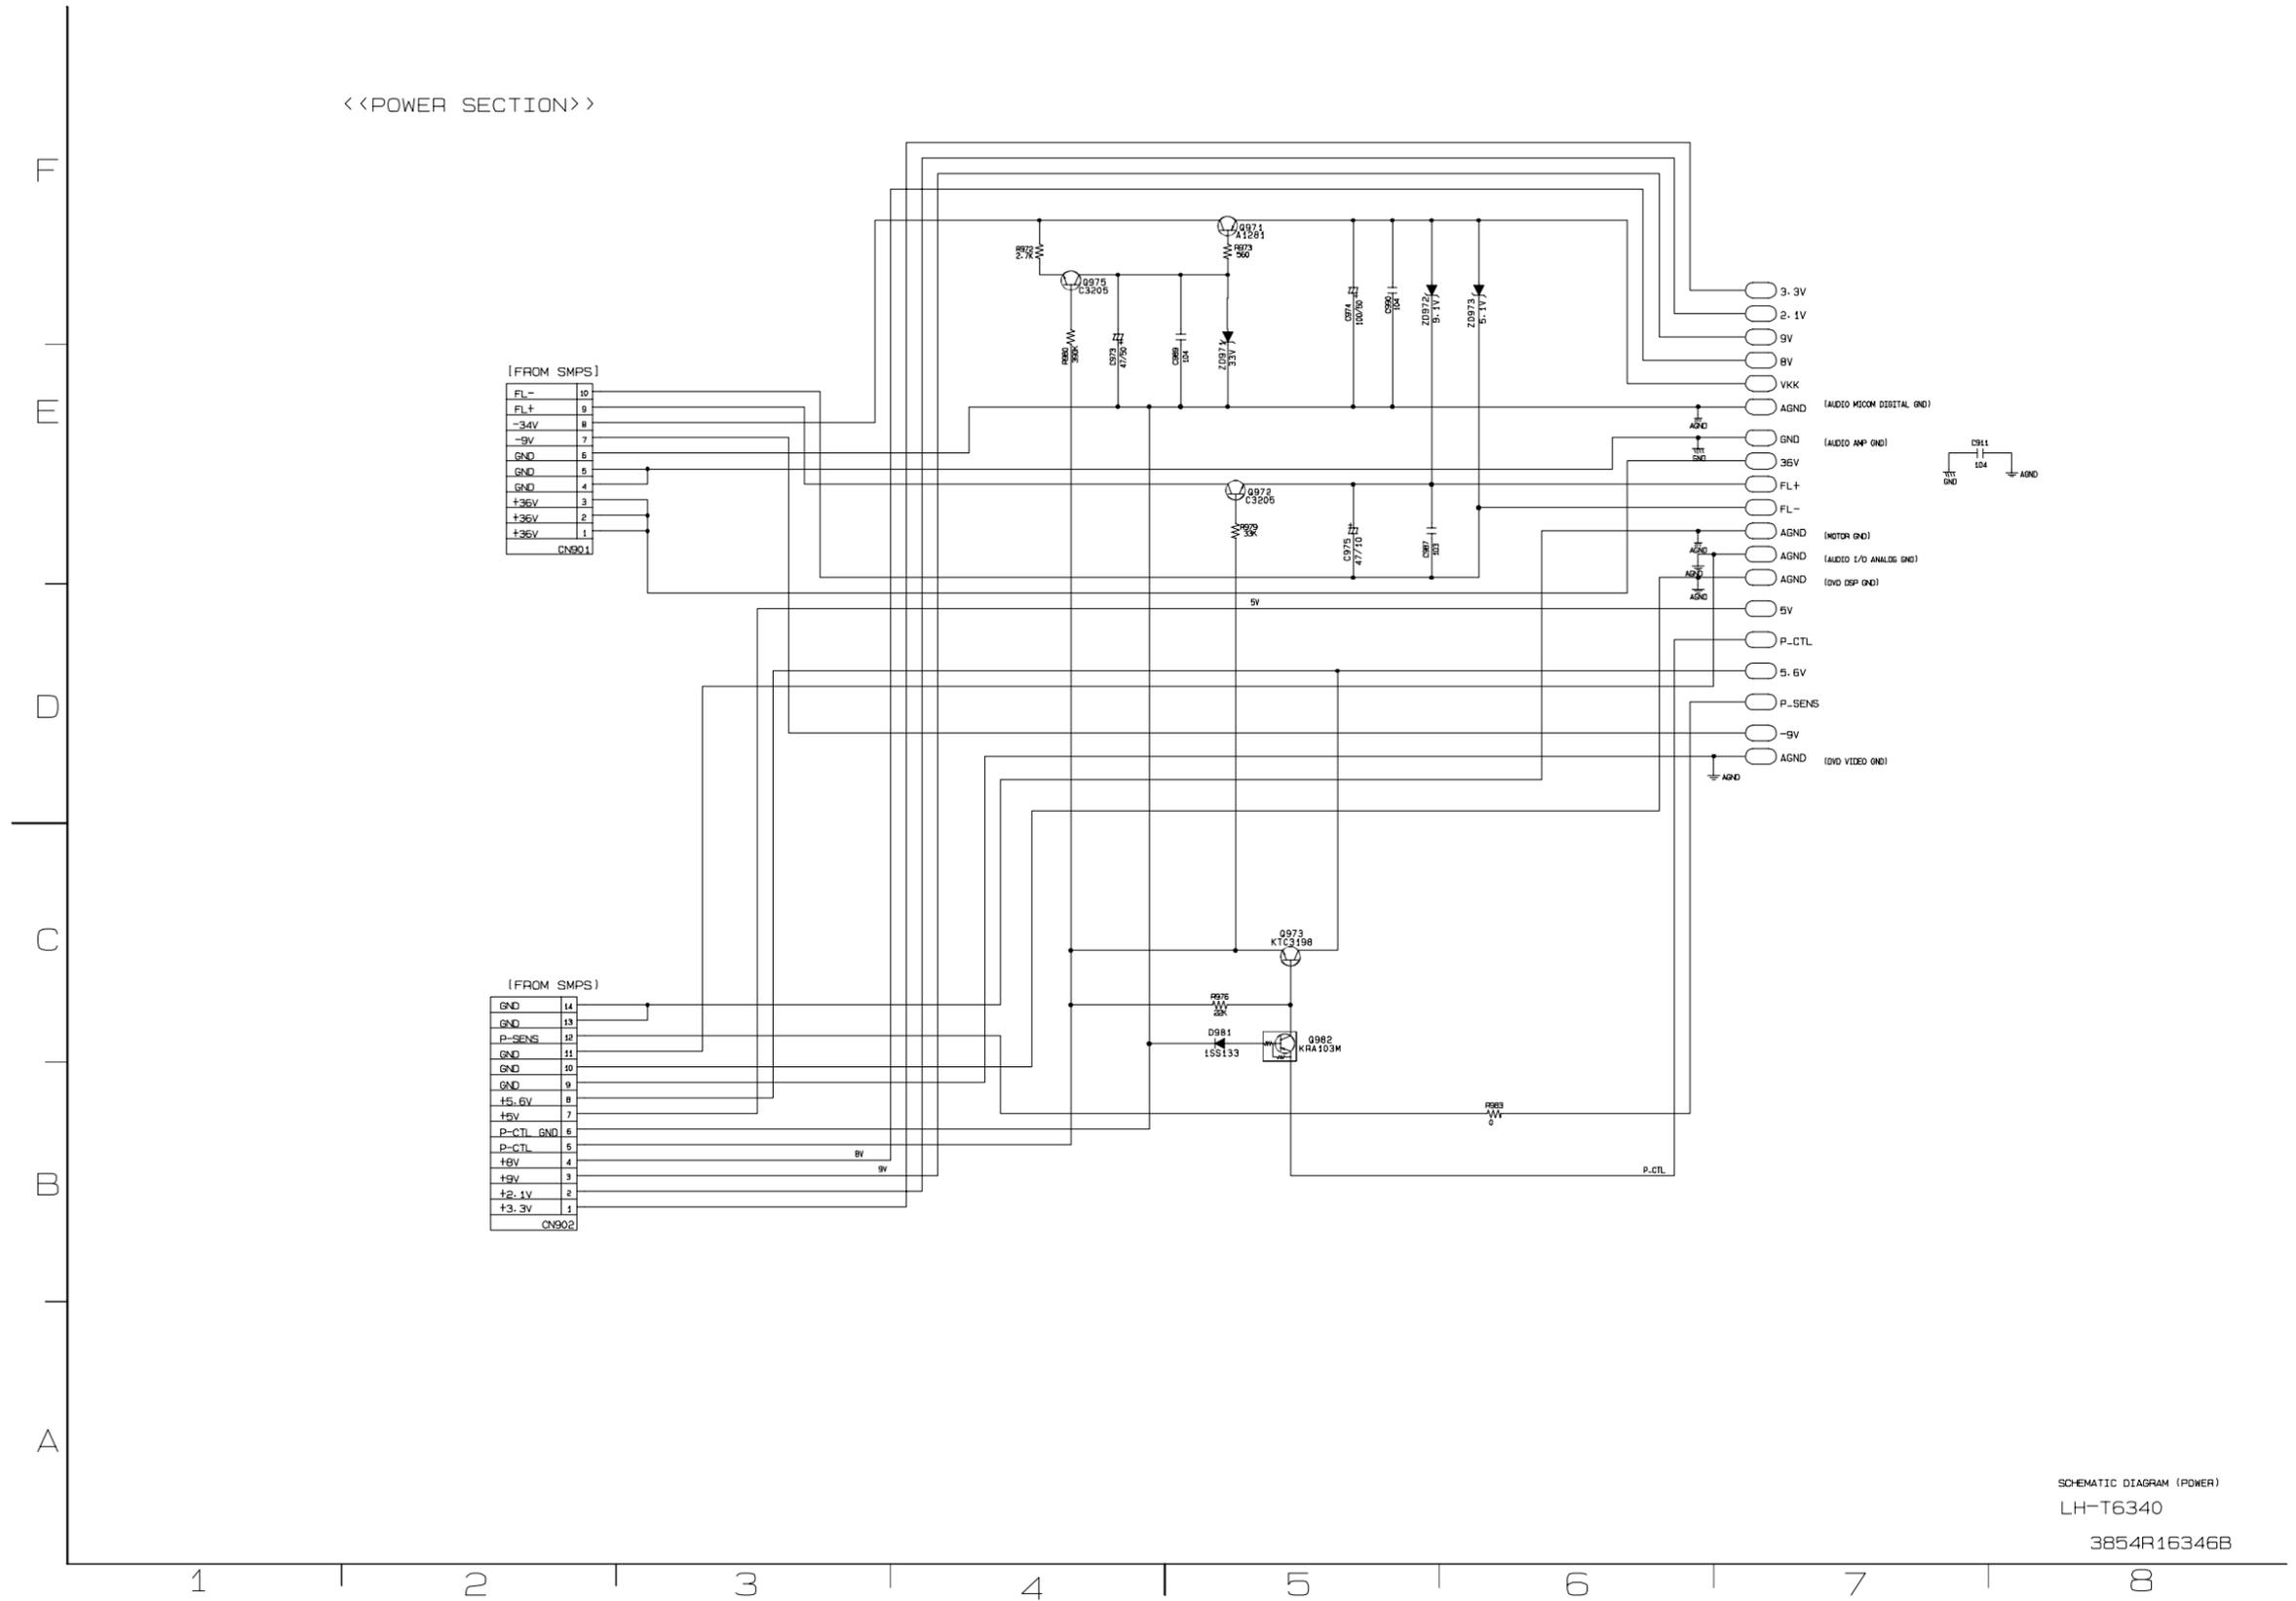

MICOM SCHEMATIC DIAGRAM

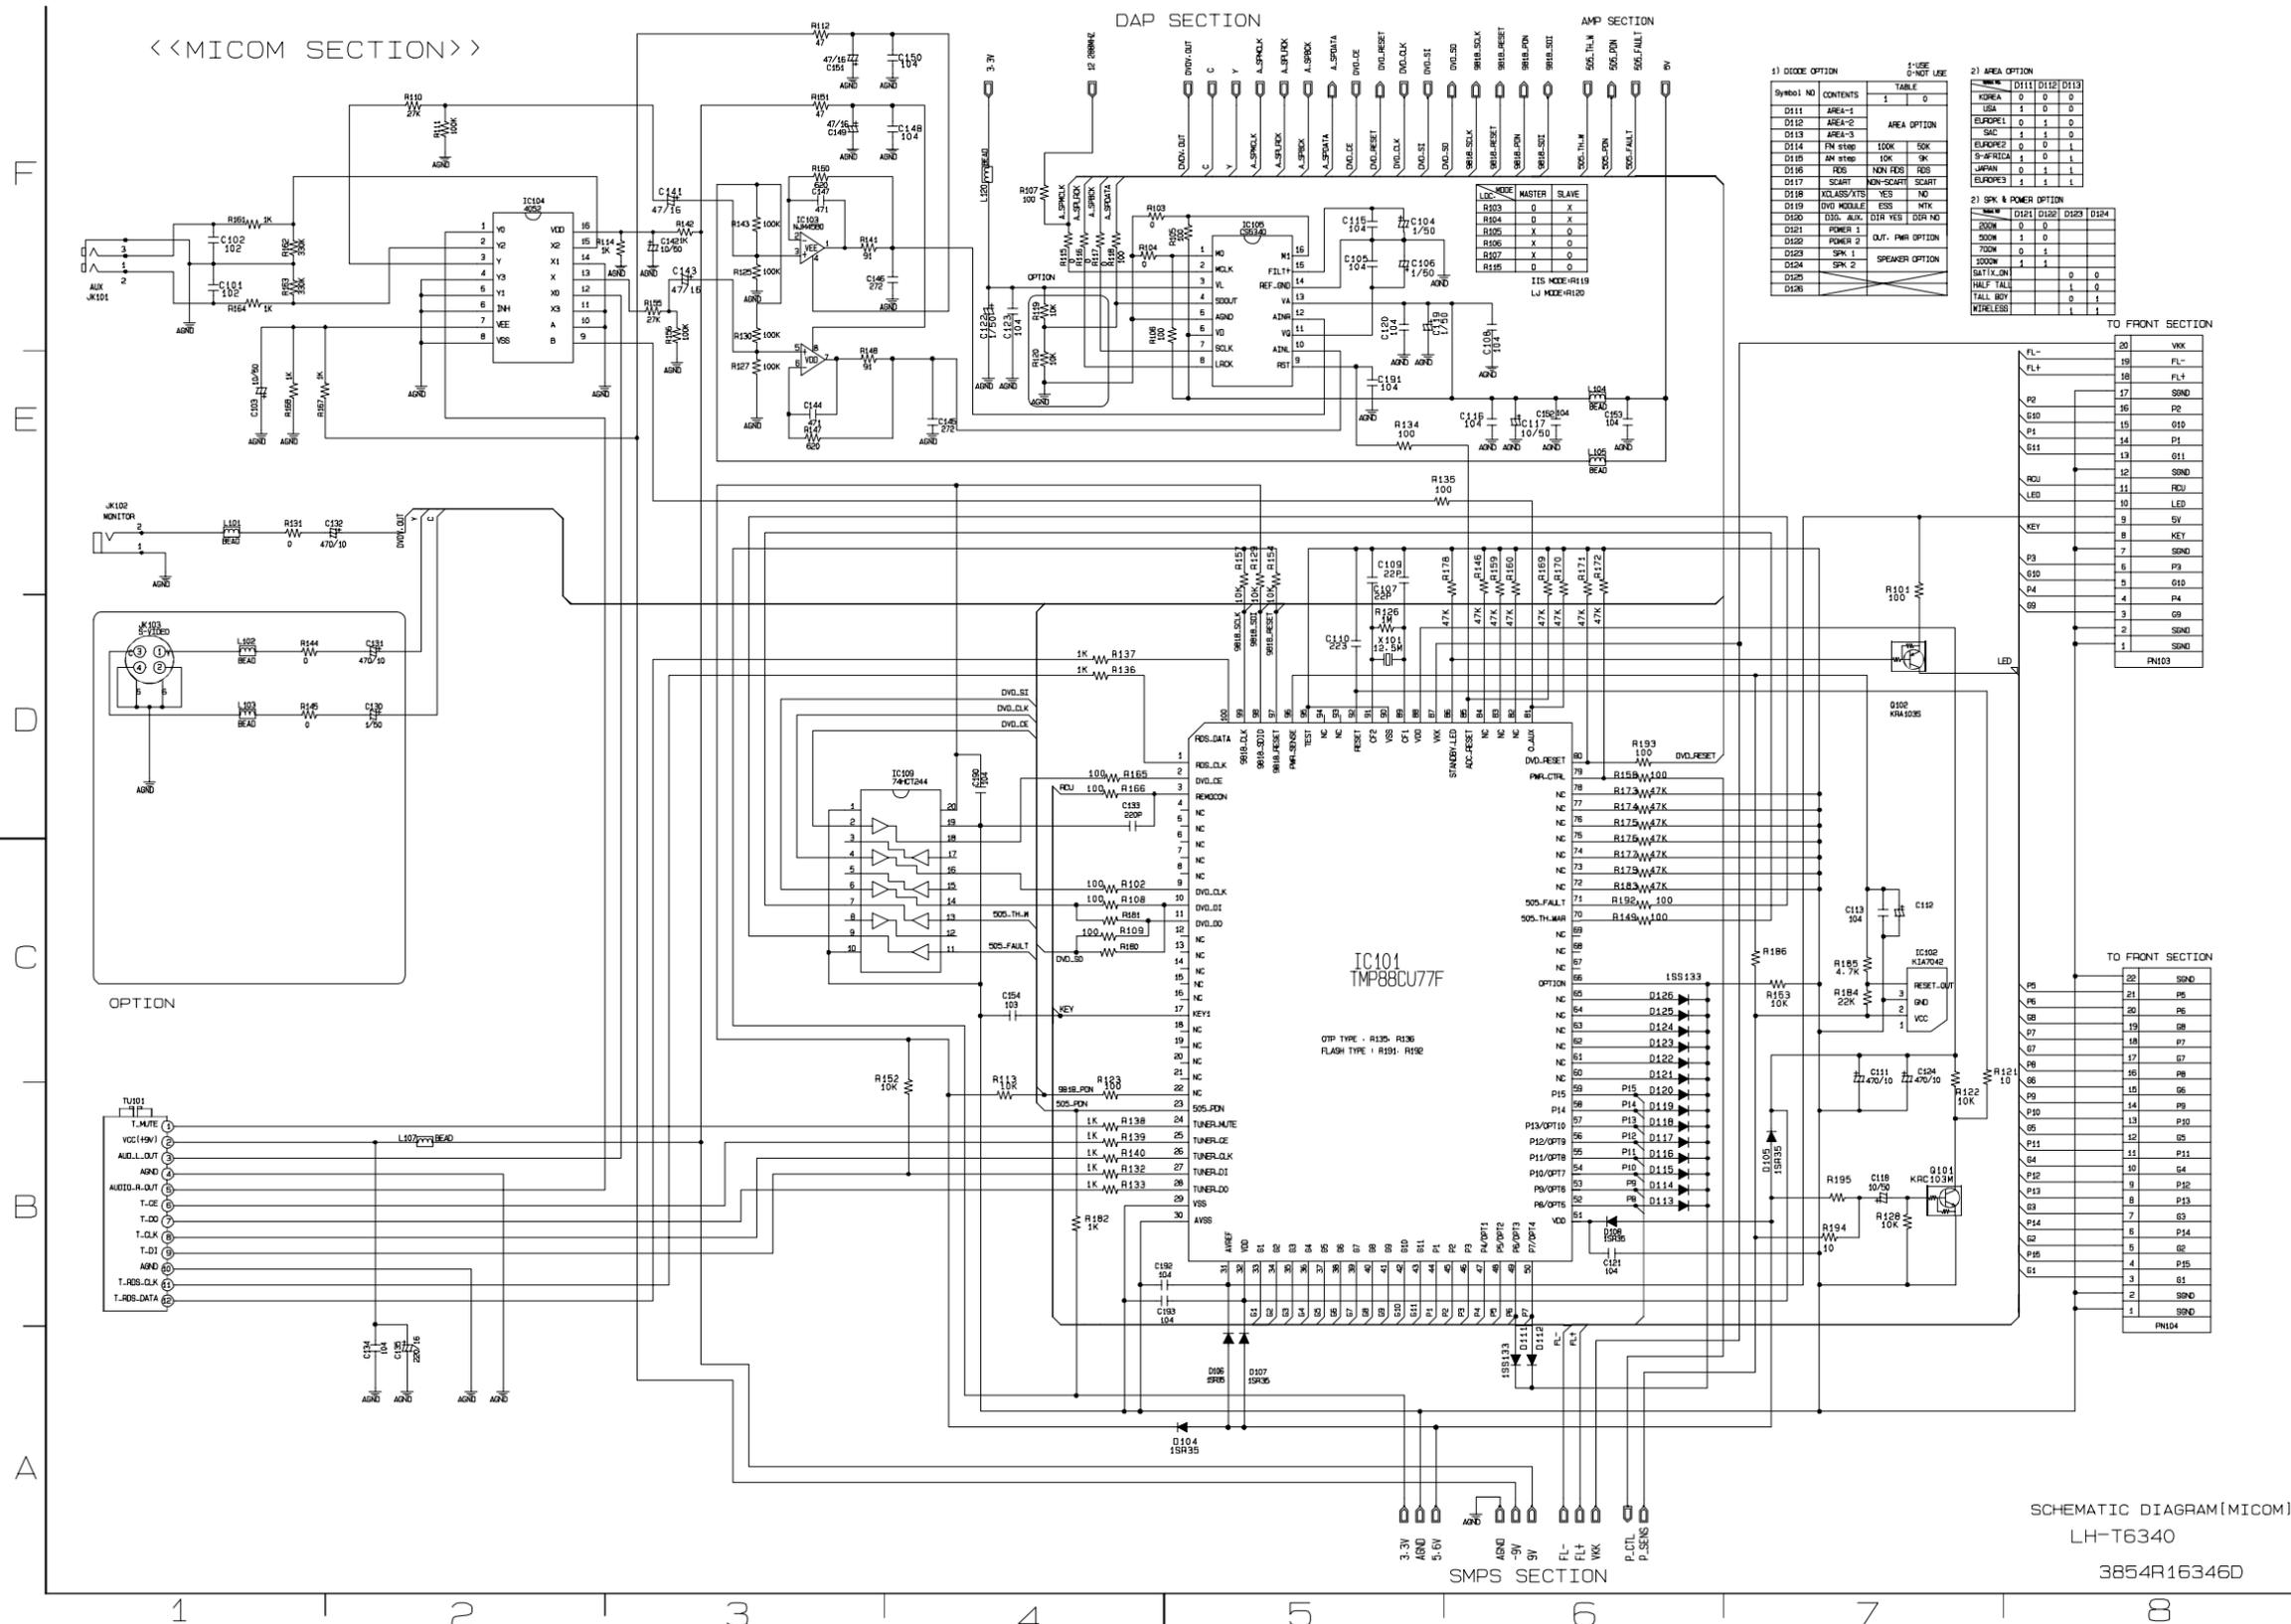

1) DIOCE OPTION

Symbol NO	CONTENTS	TABLE
D111	AREA-1	1 0
D112	AREA-2	0 1
D113	AREA-3	0 0
D114	FM stnd	100K 50K
D115	AM stnd	100K 50K
D116	RES	NON-RES RES
D117	SCART	NON-SCART SCART
D118	XLCLASS	YES NO
D119	DVD MODULE	ESS MTK
D120	DISC ADJ.	DISR YES DISR NO
D121	POWER 1	
D122	POWER 2	OUT. PWR OPTION
D123	SPK 1	
D124	SPK 2	SPEAKER OPTION
D125		
D126		

1-USE 0-NOT USE

2) AREA OPTION


Symbol NO	D111	D112	D113
KOREA	0	0	0
USA	1	0	0
EUROPE1	0	1	0
SAC	1	1	0
EUROPE2	0	0	1
AFRICA	1	0	1
JAPAN	0	1	1
EUROPE3	1	1	1

2) SPK & POWER OPTION


Symbol NO	D121	D122	D123	D124
300M	0	0		
500M	1	0		
700M	0	1		
800M	0	0	1	
BATT.ON				0 0
HALF TALL				1 0
TALL BOT				0 1
WIRELESS				1 1

SCHEMATIC DIAGRAM(MICOM)
LH-T6340
3854R16346D

• FRONT SCHEMATIC DIAGRAM

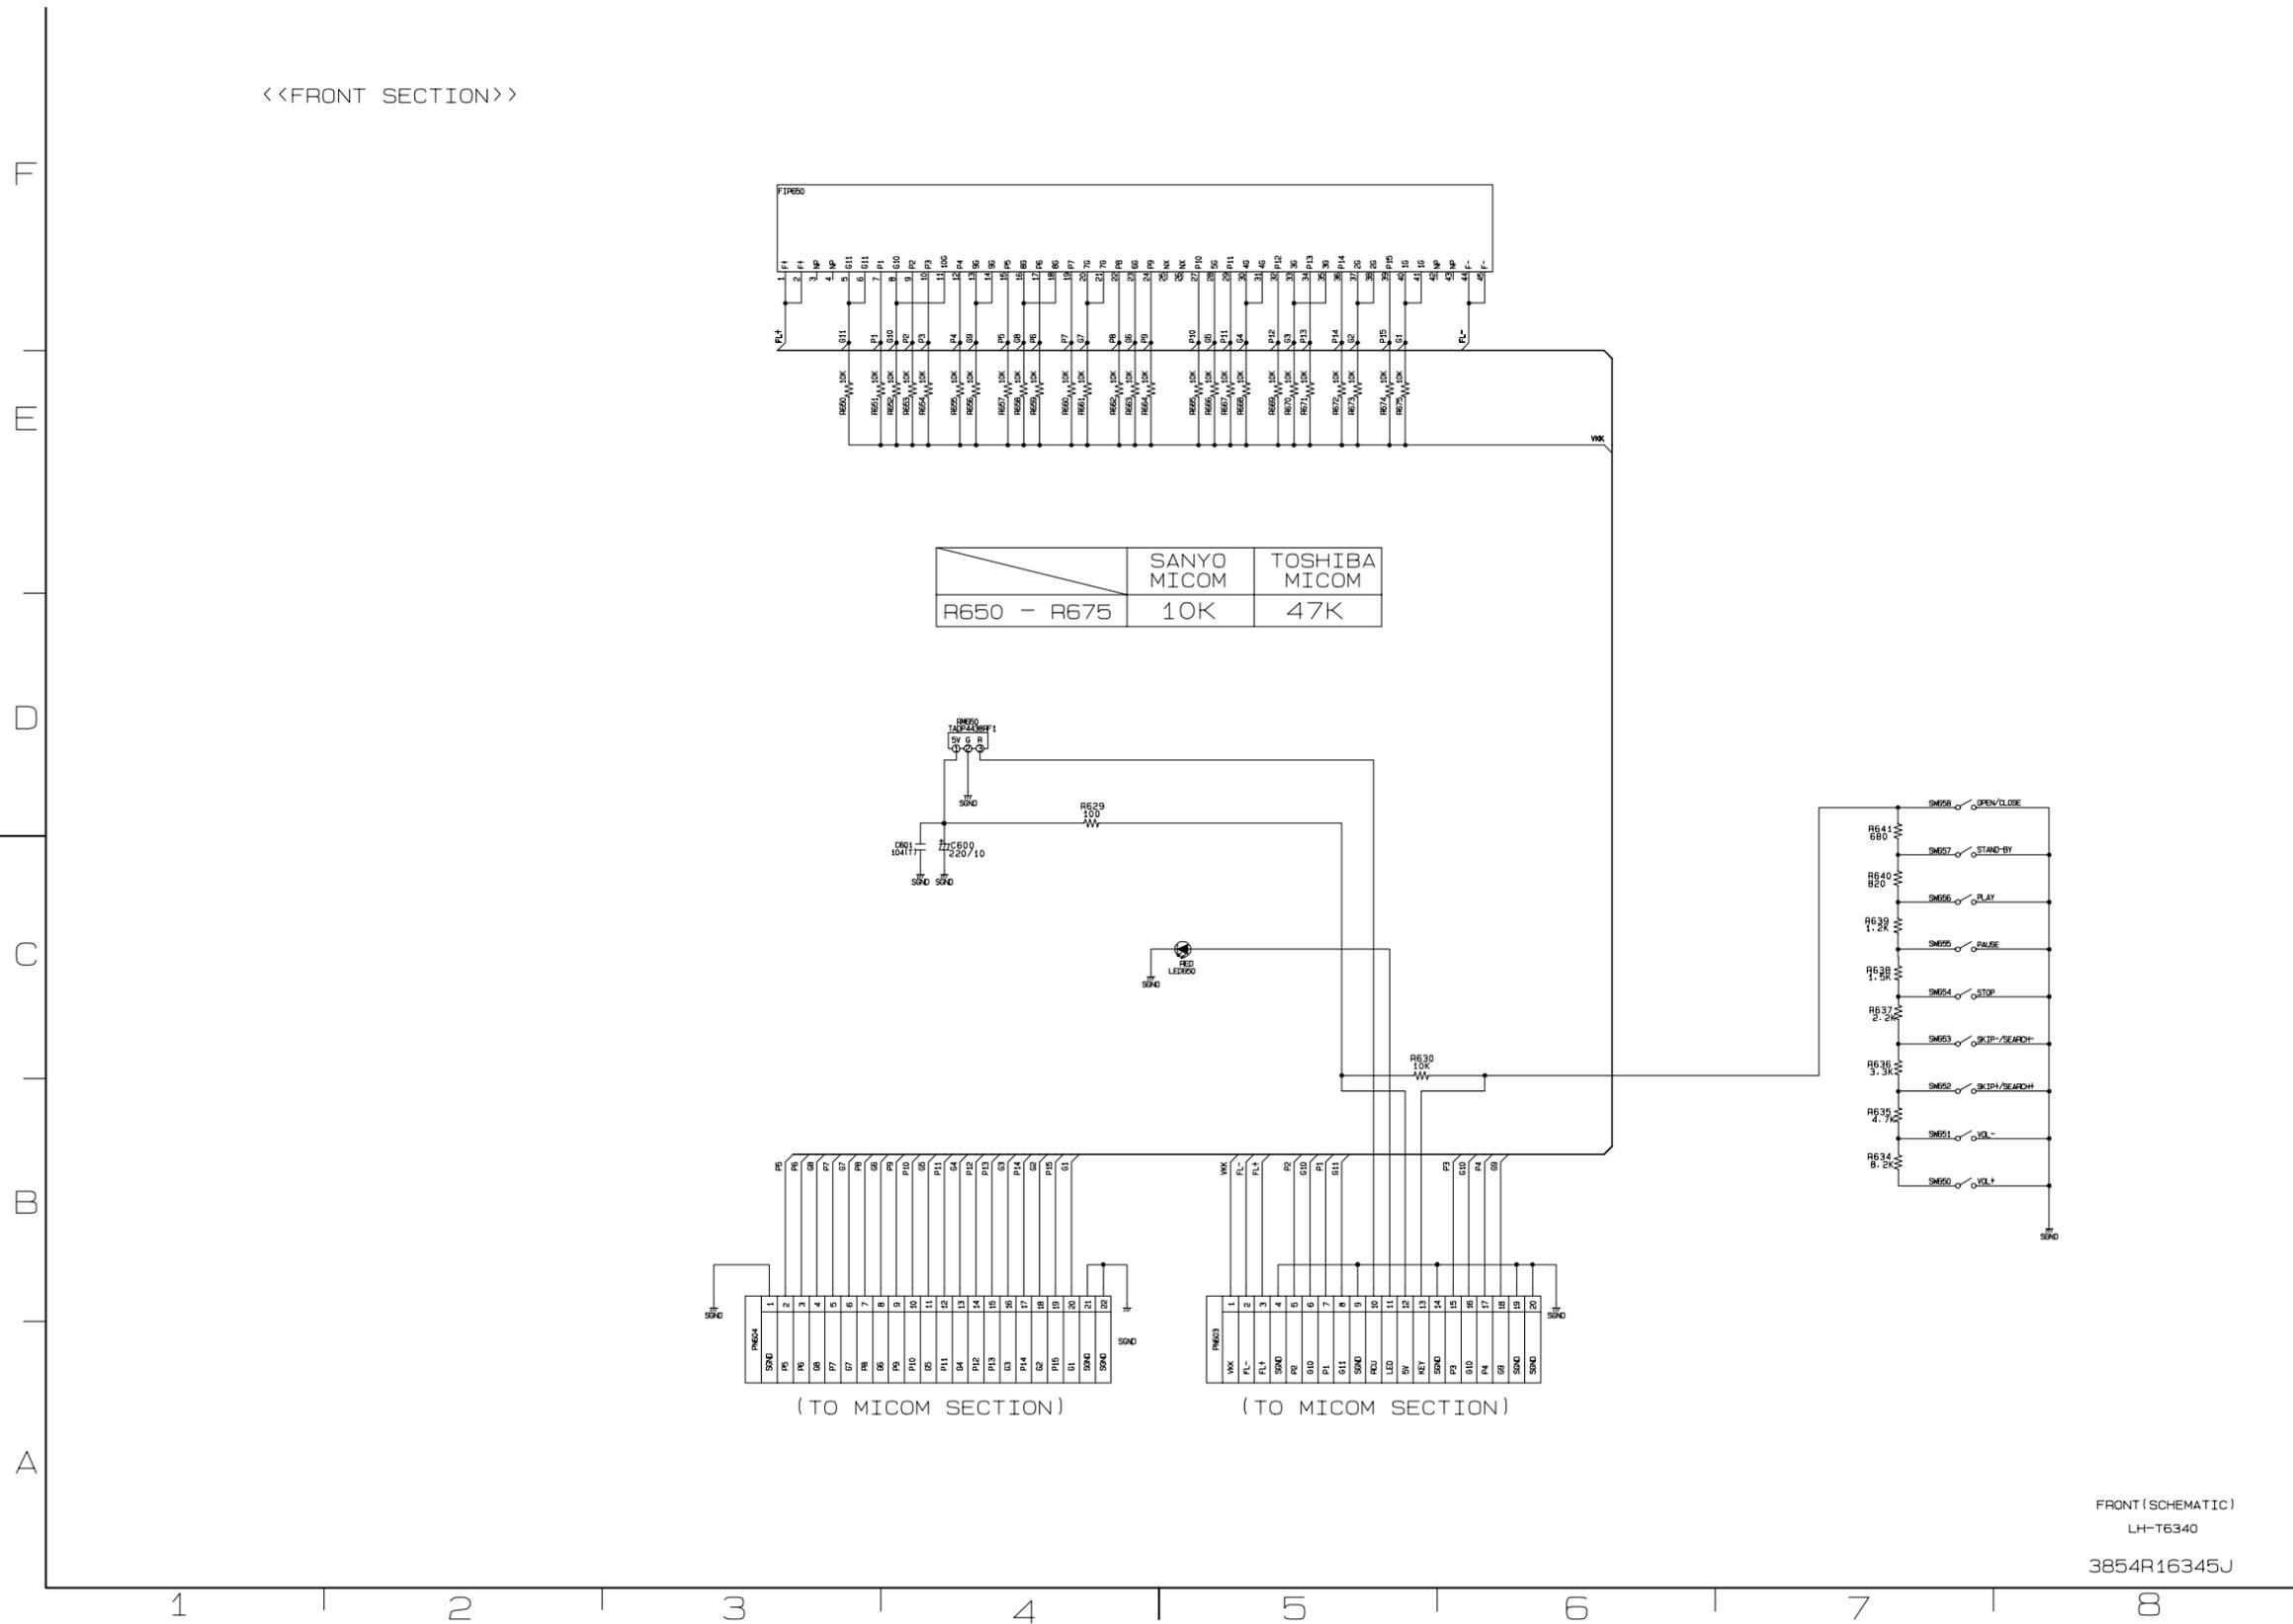


• DSP& SCHEMATIC DIAGRAM

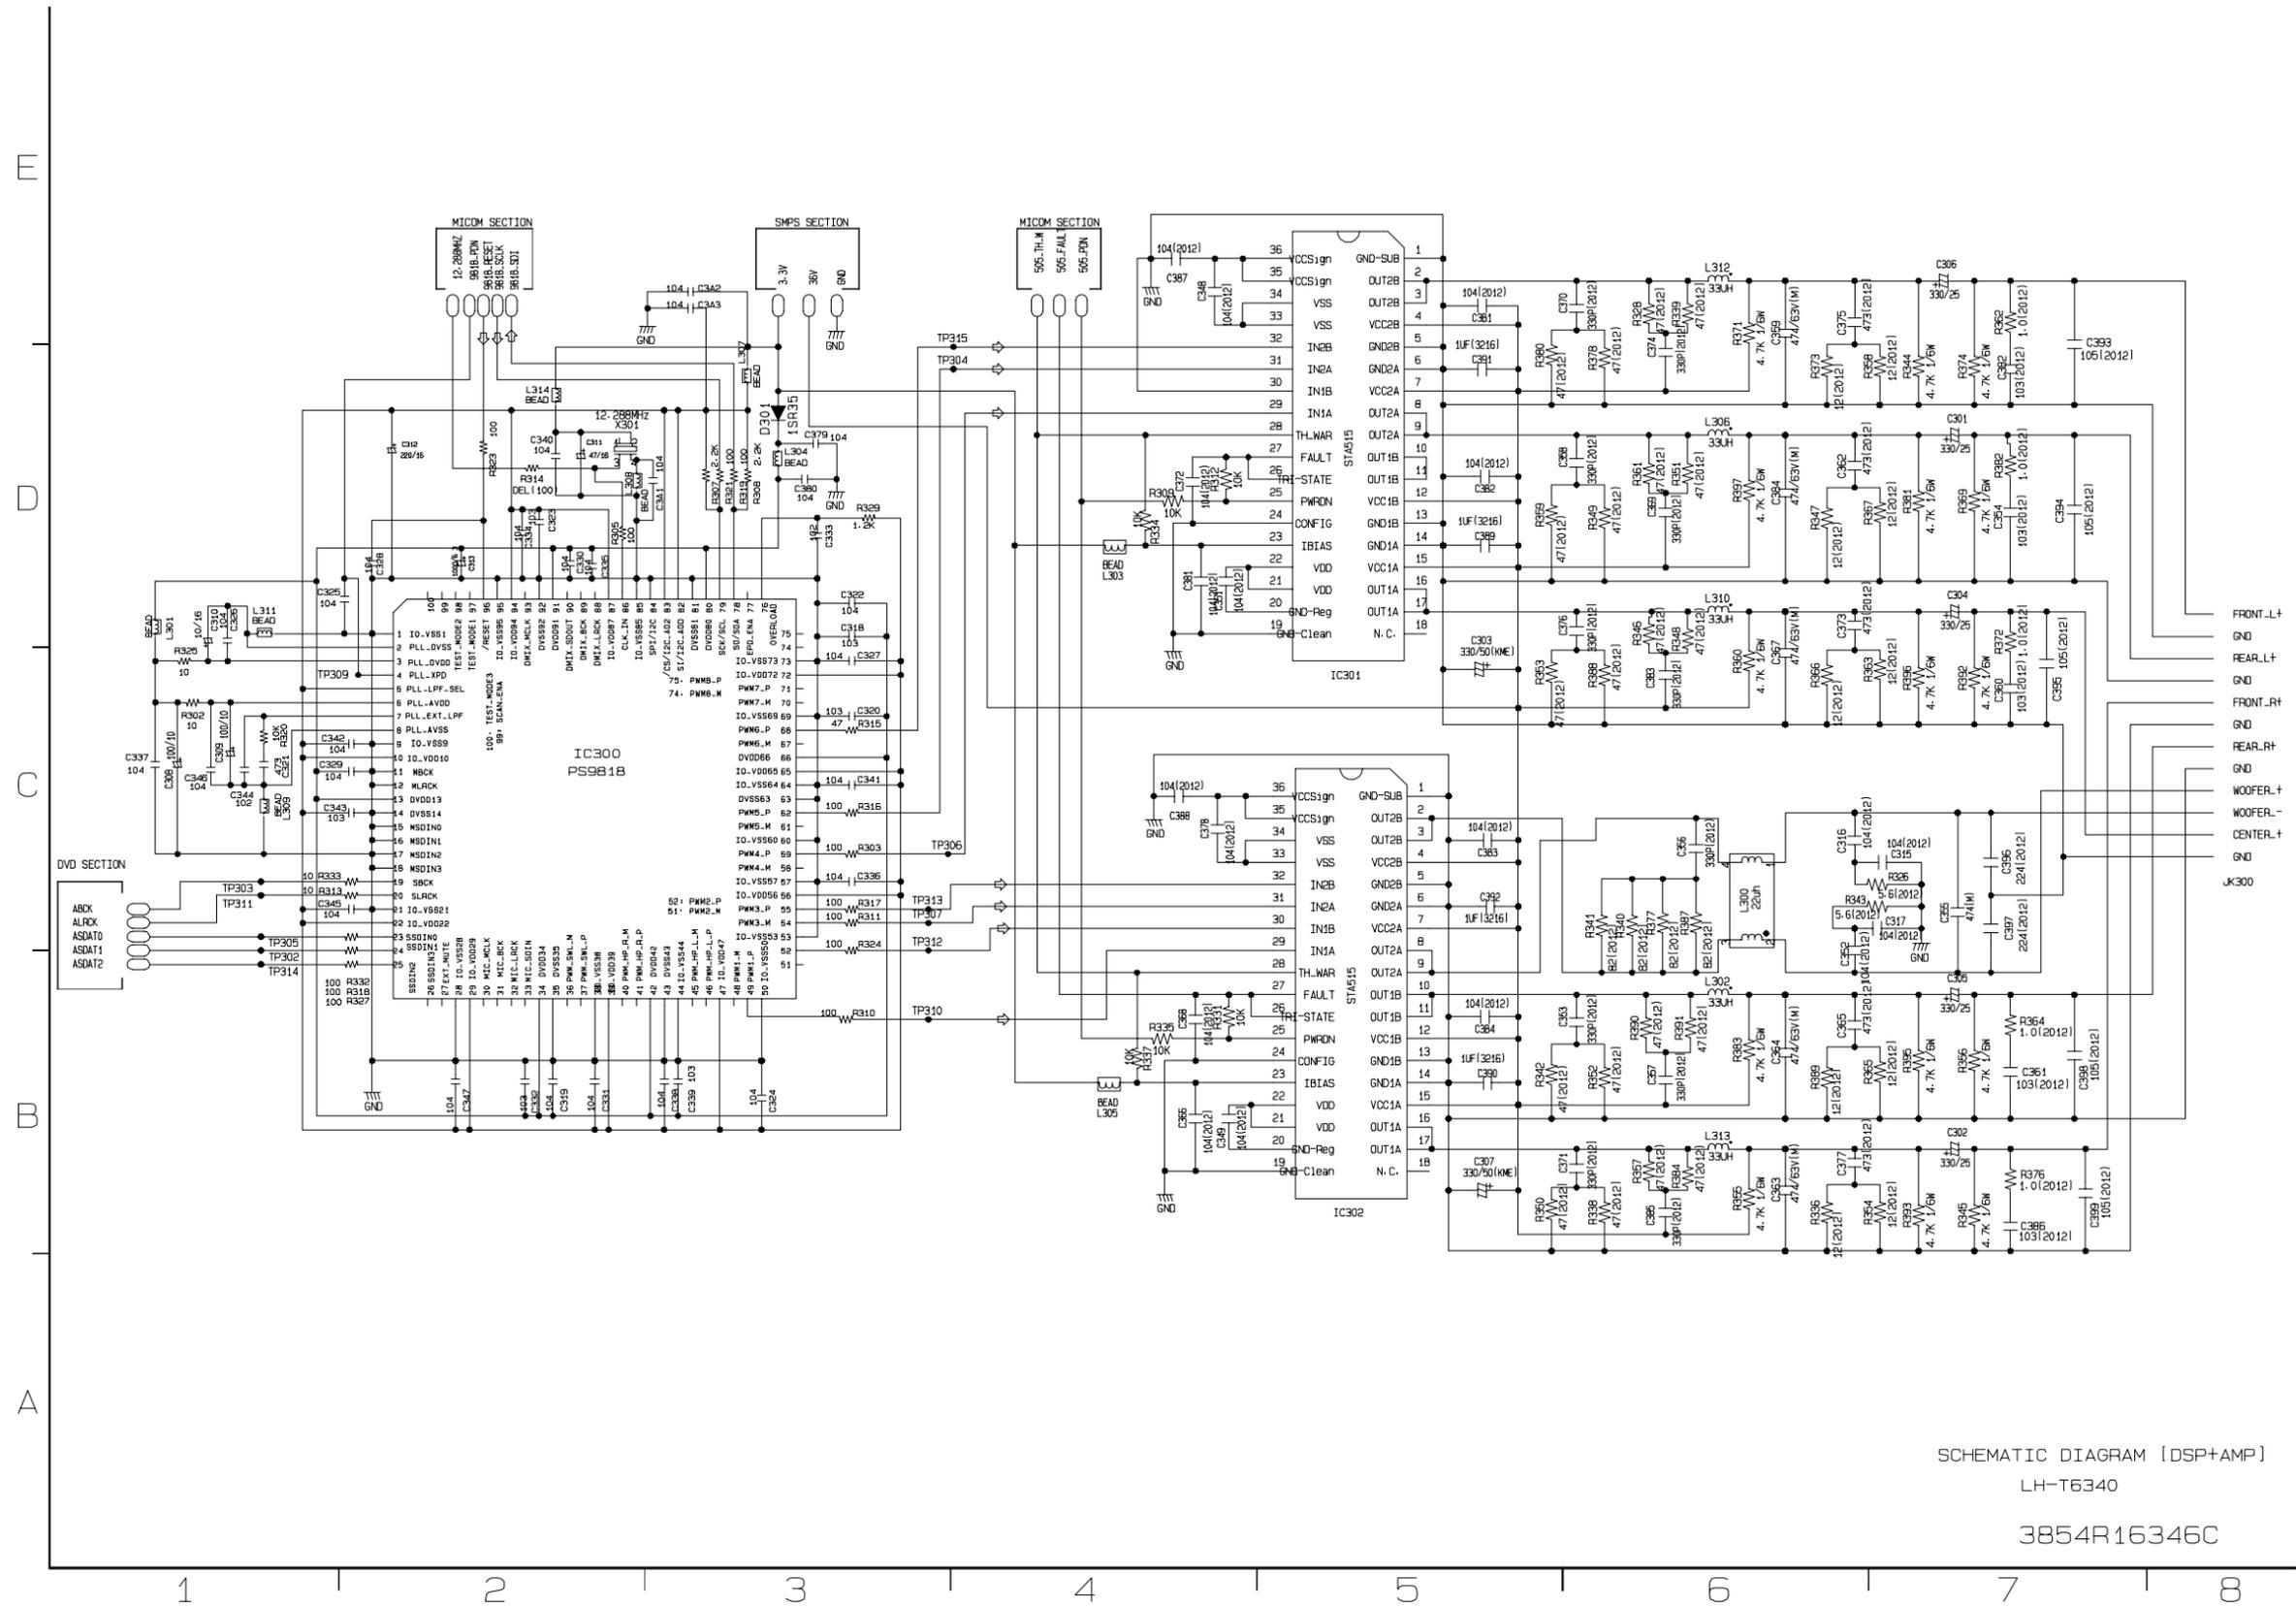

SCHEMATIC DIAGRAM [DSP+AMP]
LH-T6340
3854R16346C


• SMPS-NARROW&WIDE SCHEMATIC DIAGRAM

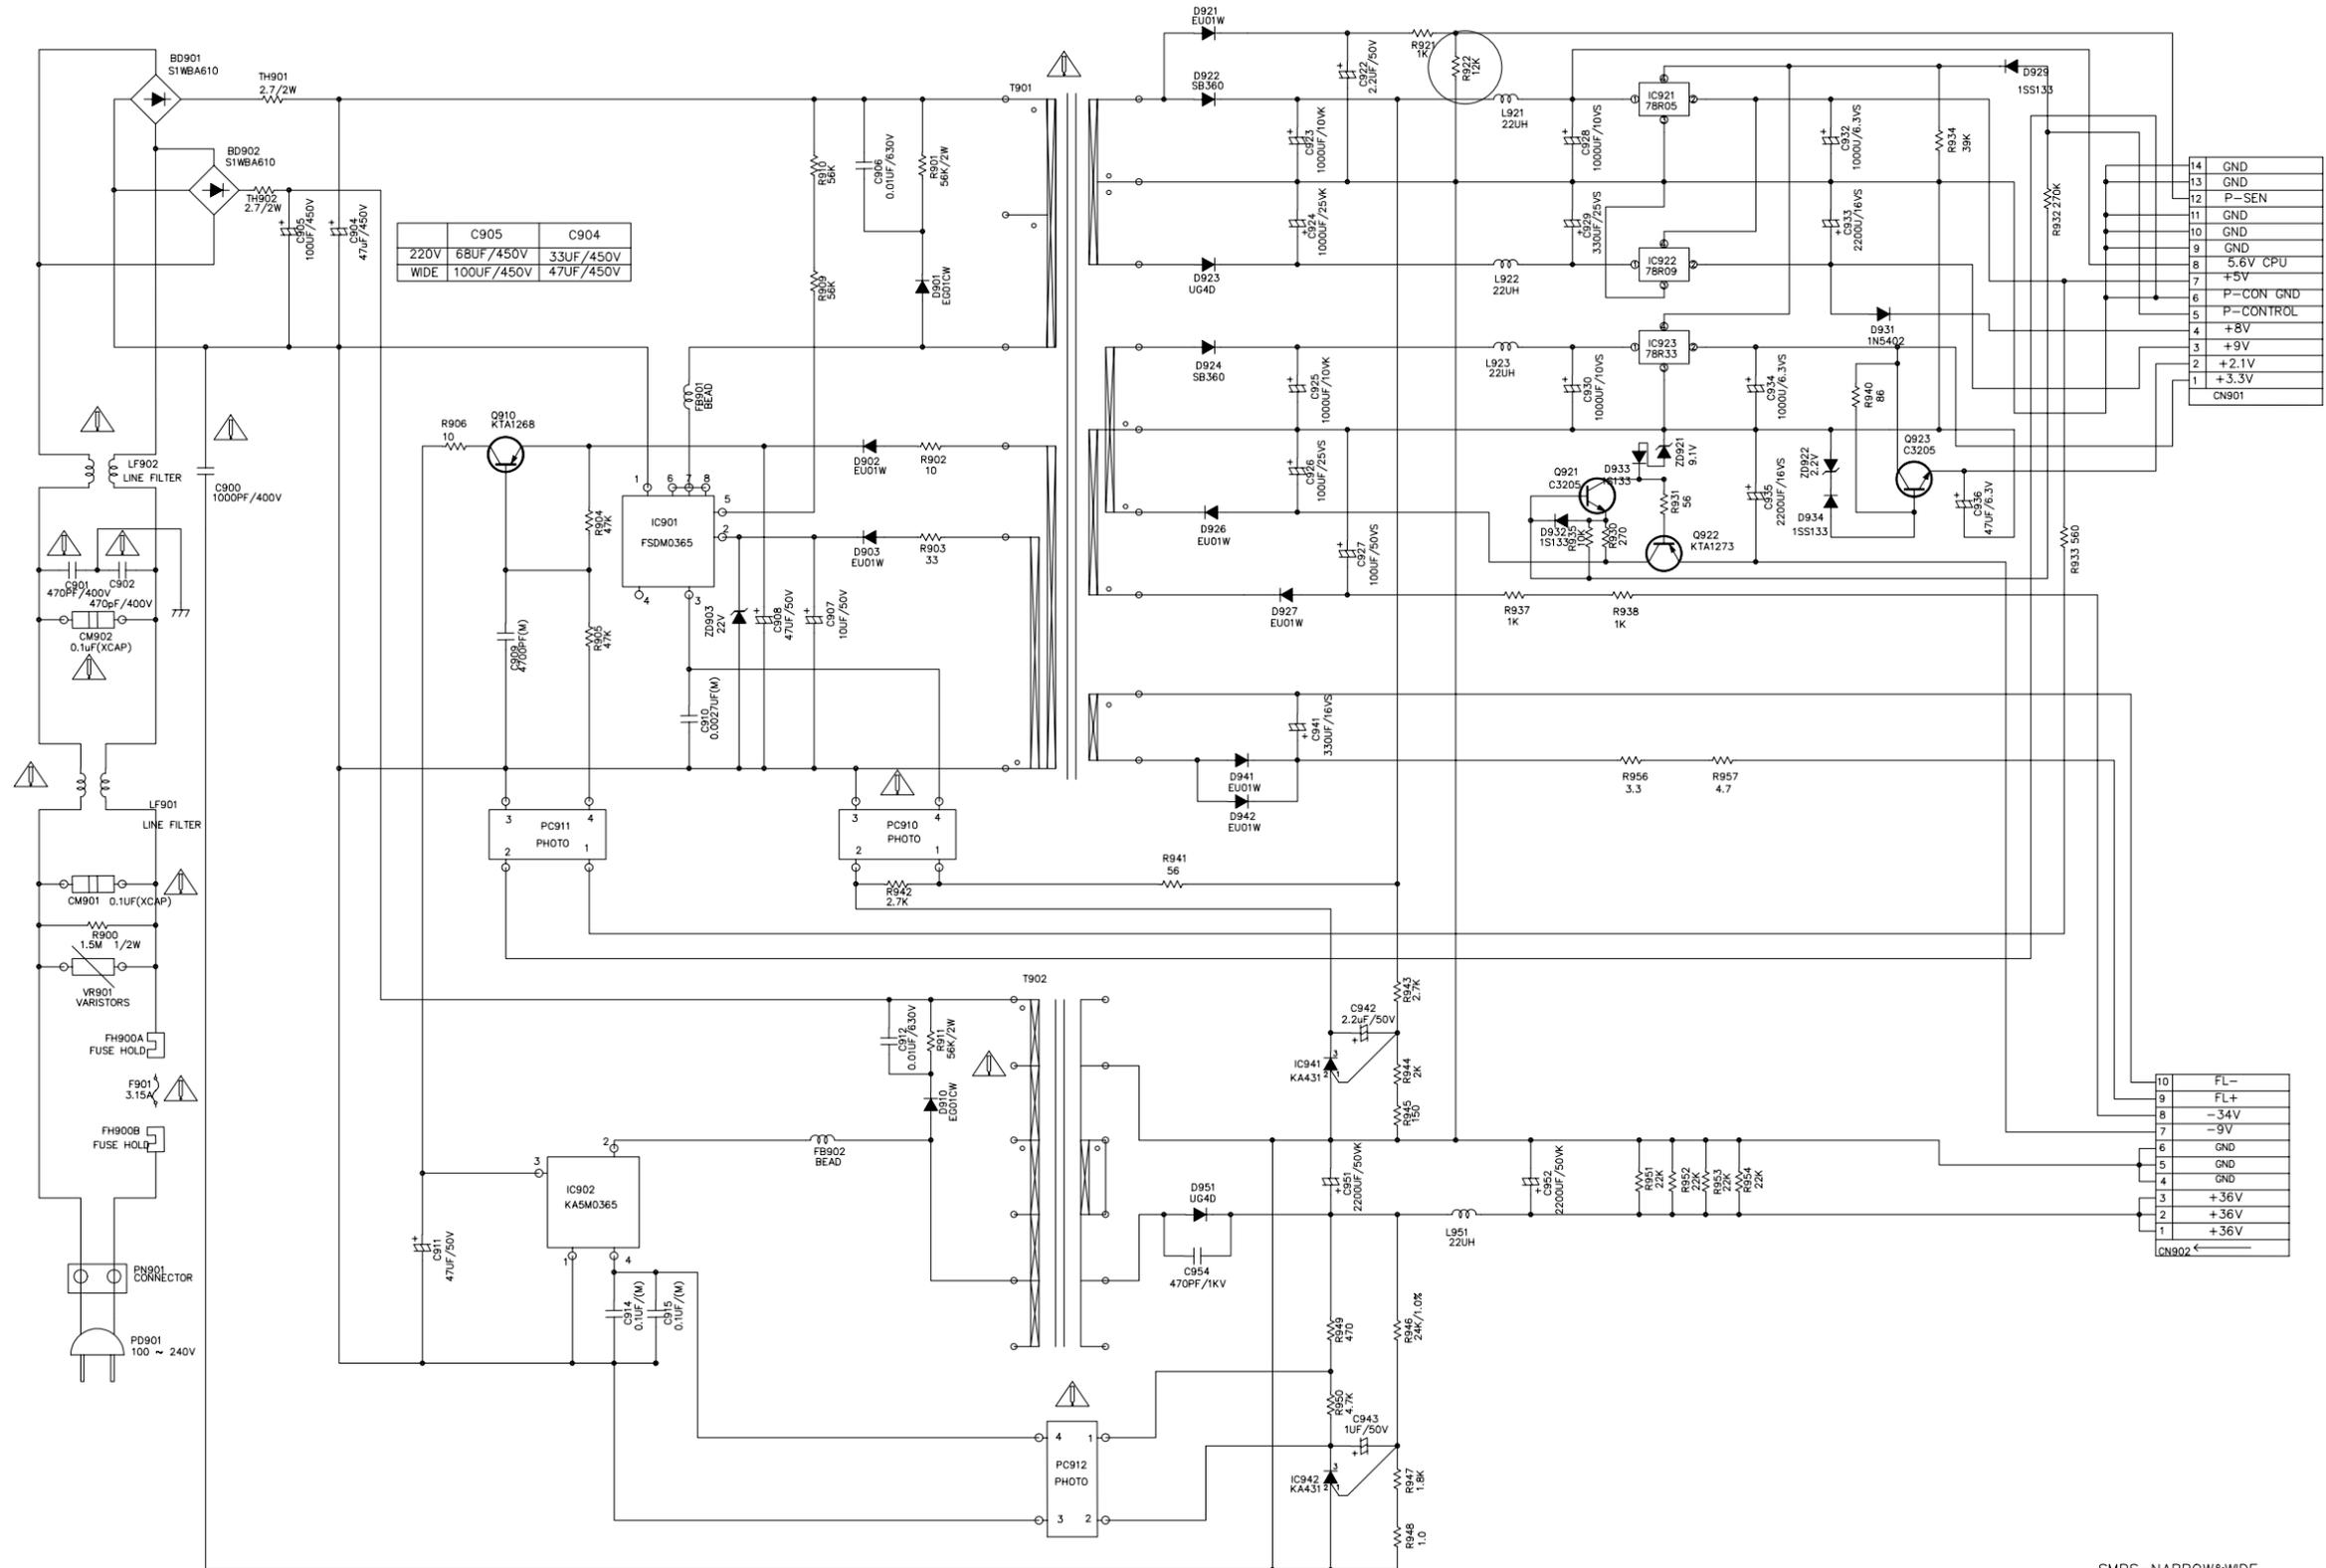

14	GND
13	GND
12	P-SEN
11	GND
10	GND
9	GND
8	5.6V CPU
7	+5V
6	P-CON GND
5	P-CONTROL
4	+8V
3	+9V
2	+2.1V
1	+3.3V
	CN901

10	FL-
9	FL+
8	-34V
7	-9V
6	GND
5	GND
4	GND
3	+36V
2	+36V
1	+36V
	CN902

WIRING DIAGRAM

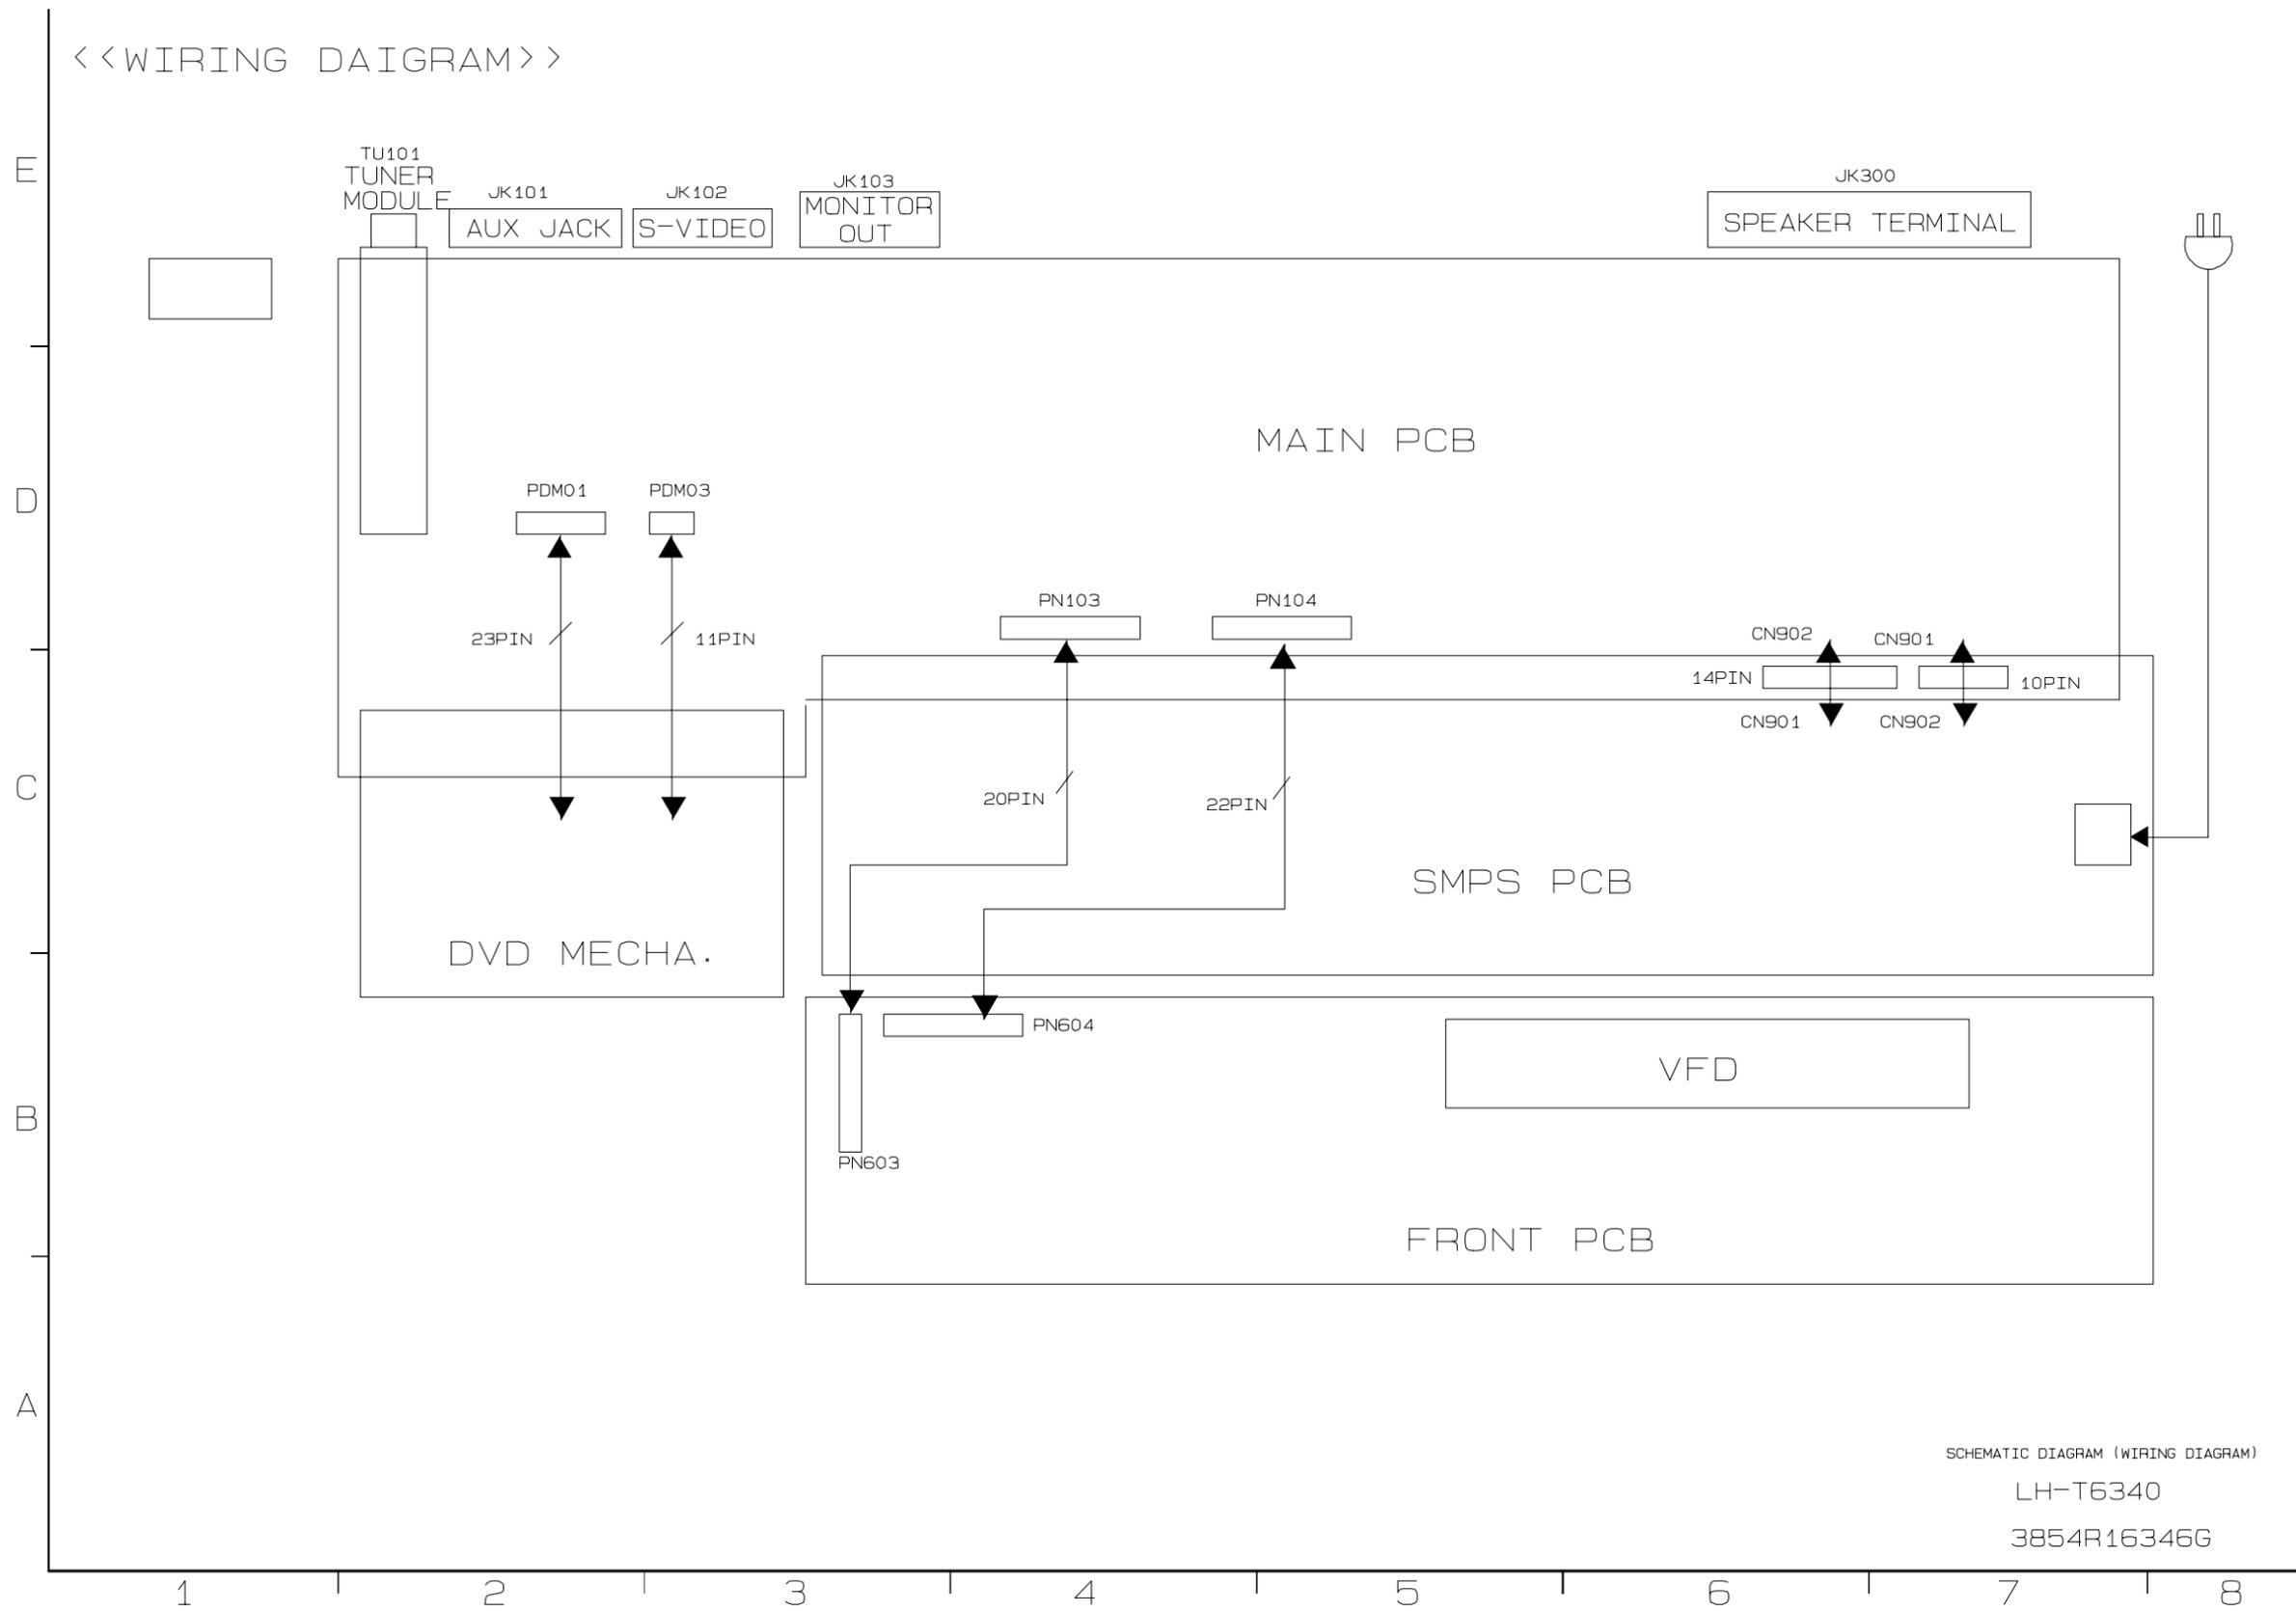


SCHEMATIC DIAGRAM (WIRING DIAGRAM)

LH-T6340


3854R16346G

PRINTED CIRCUIT BOARD DIAGRAMS


MAIN/DVD P.C. BOARD DIAGRAM (BOTTOM)

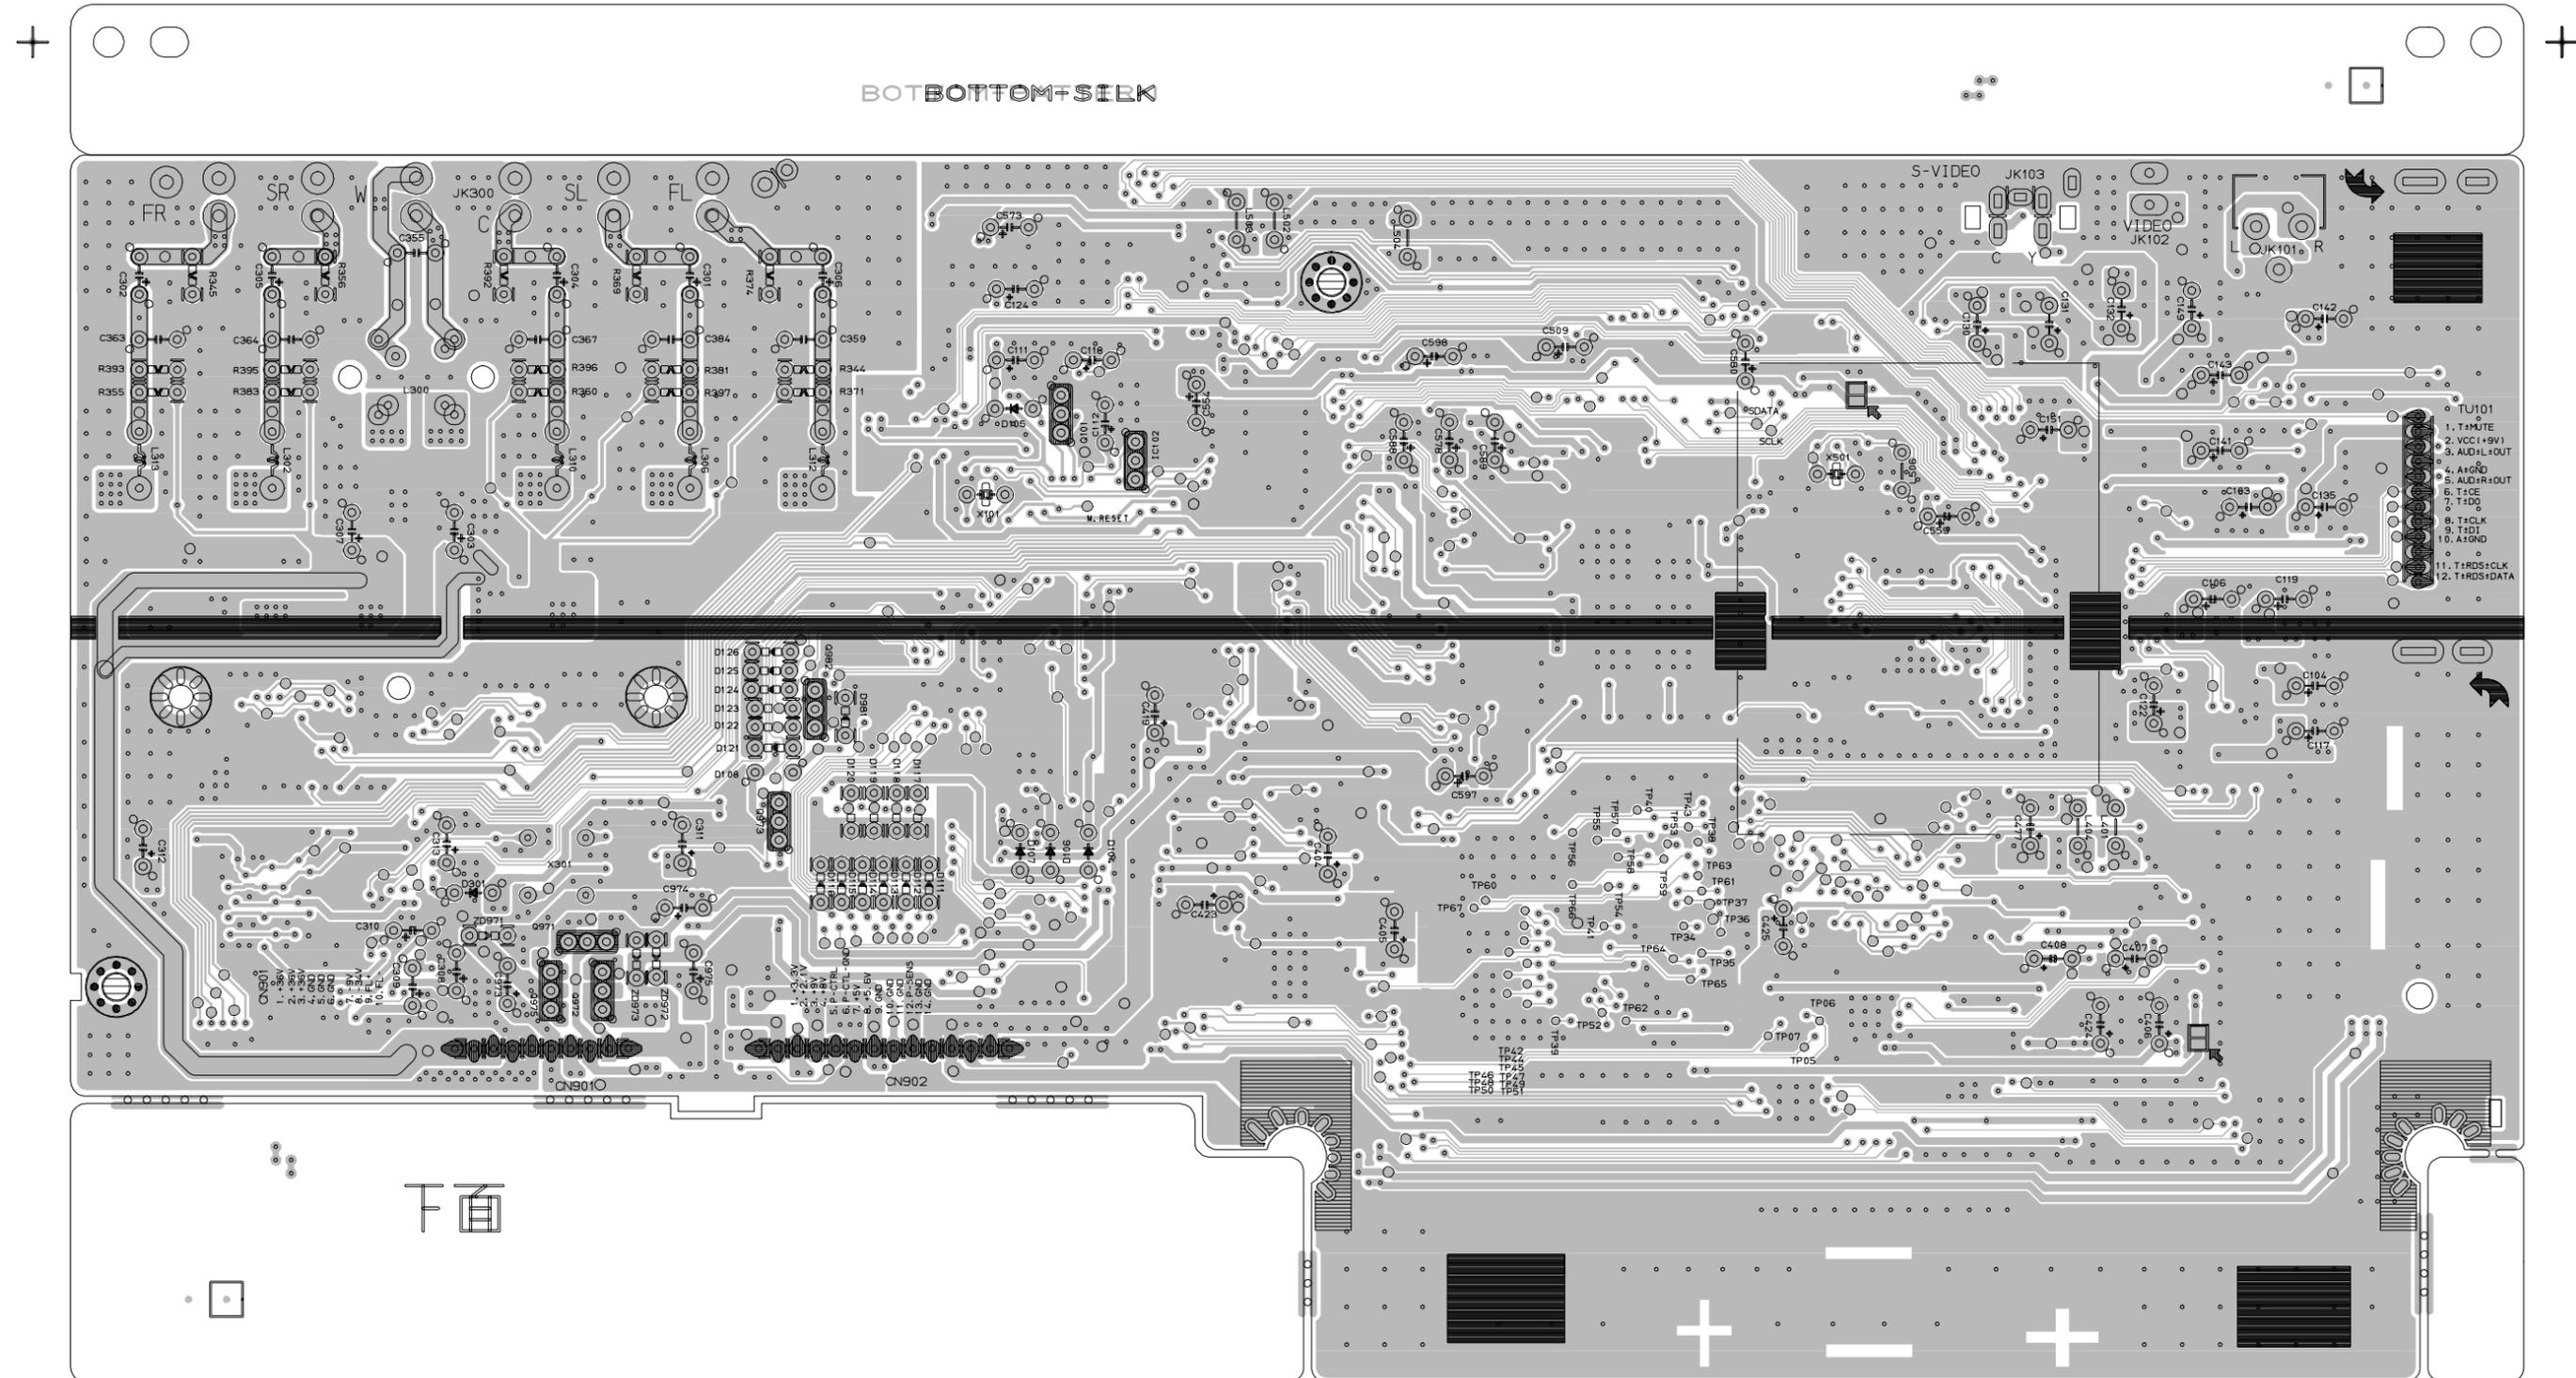


• MAIN/DVD P.C. BOARD DIAGRAM (TOP)

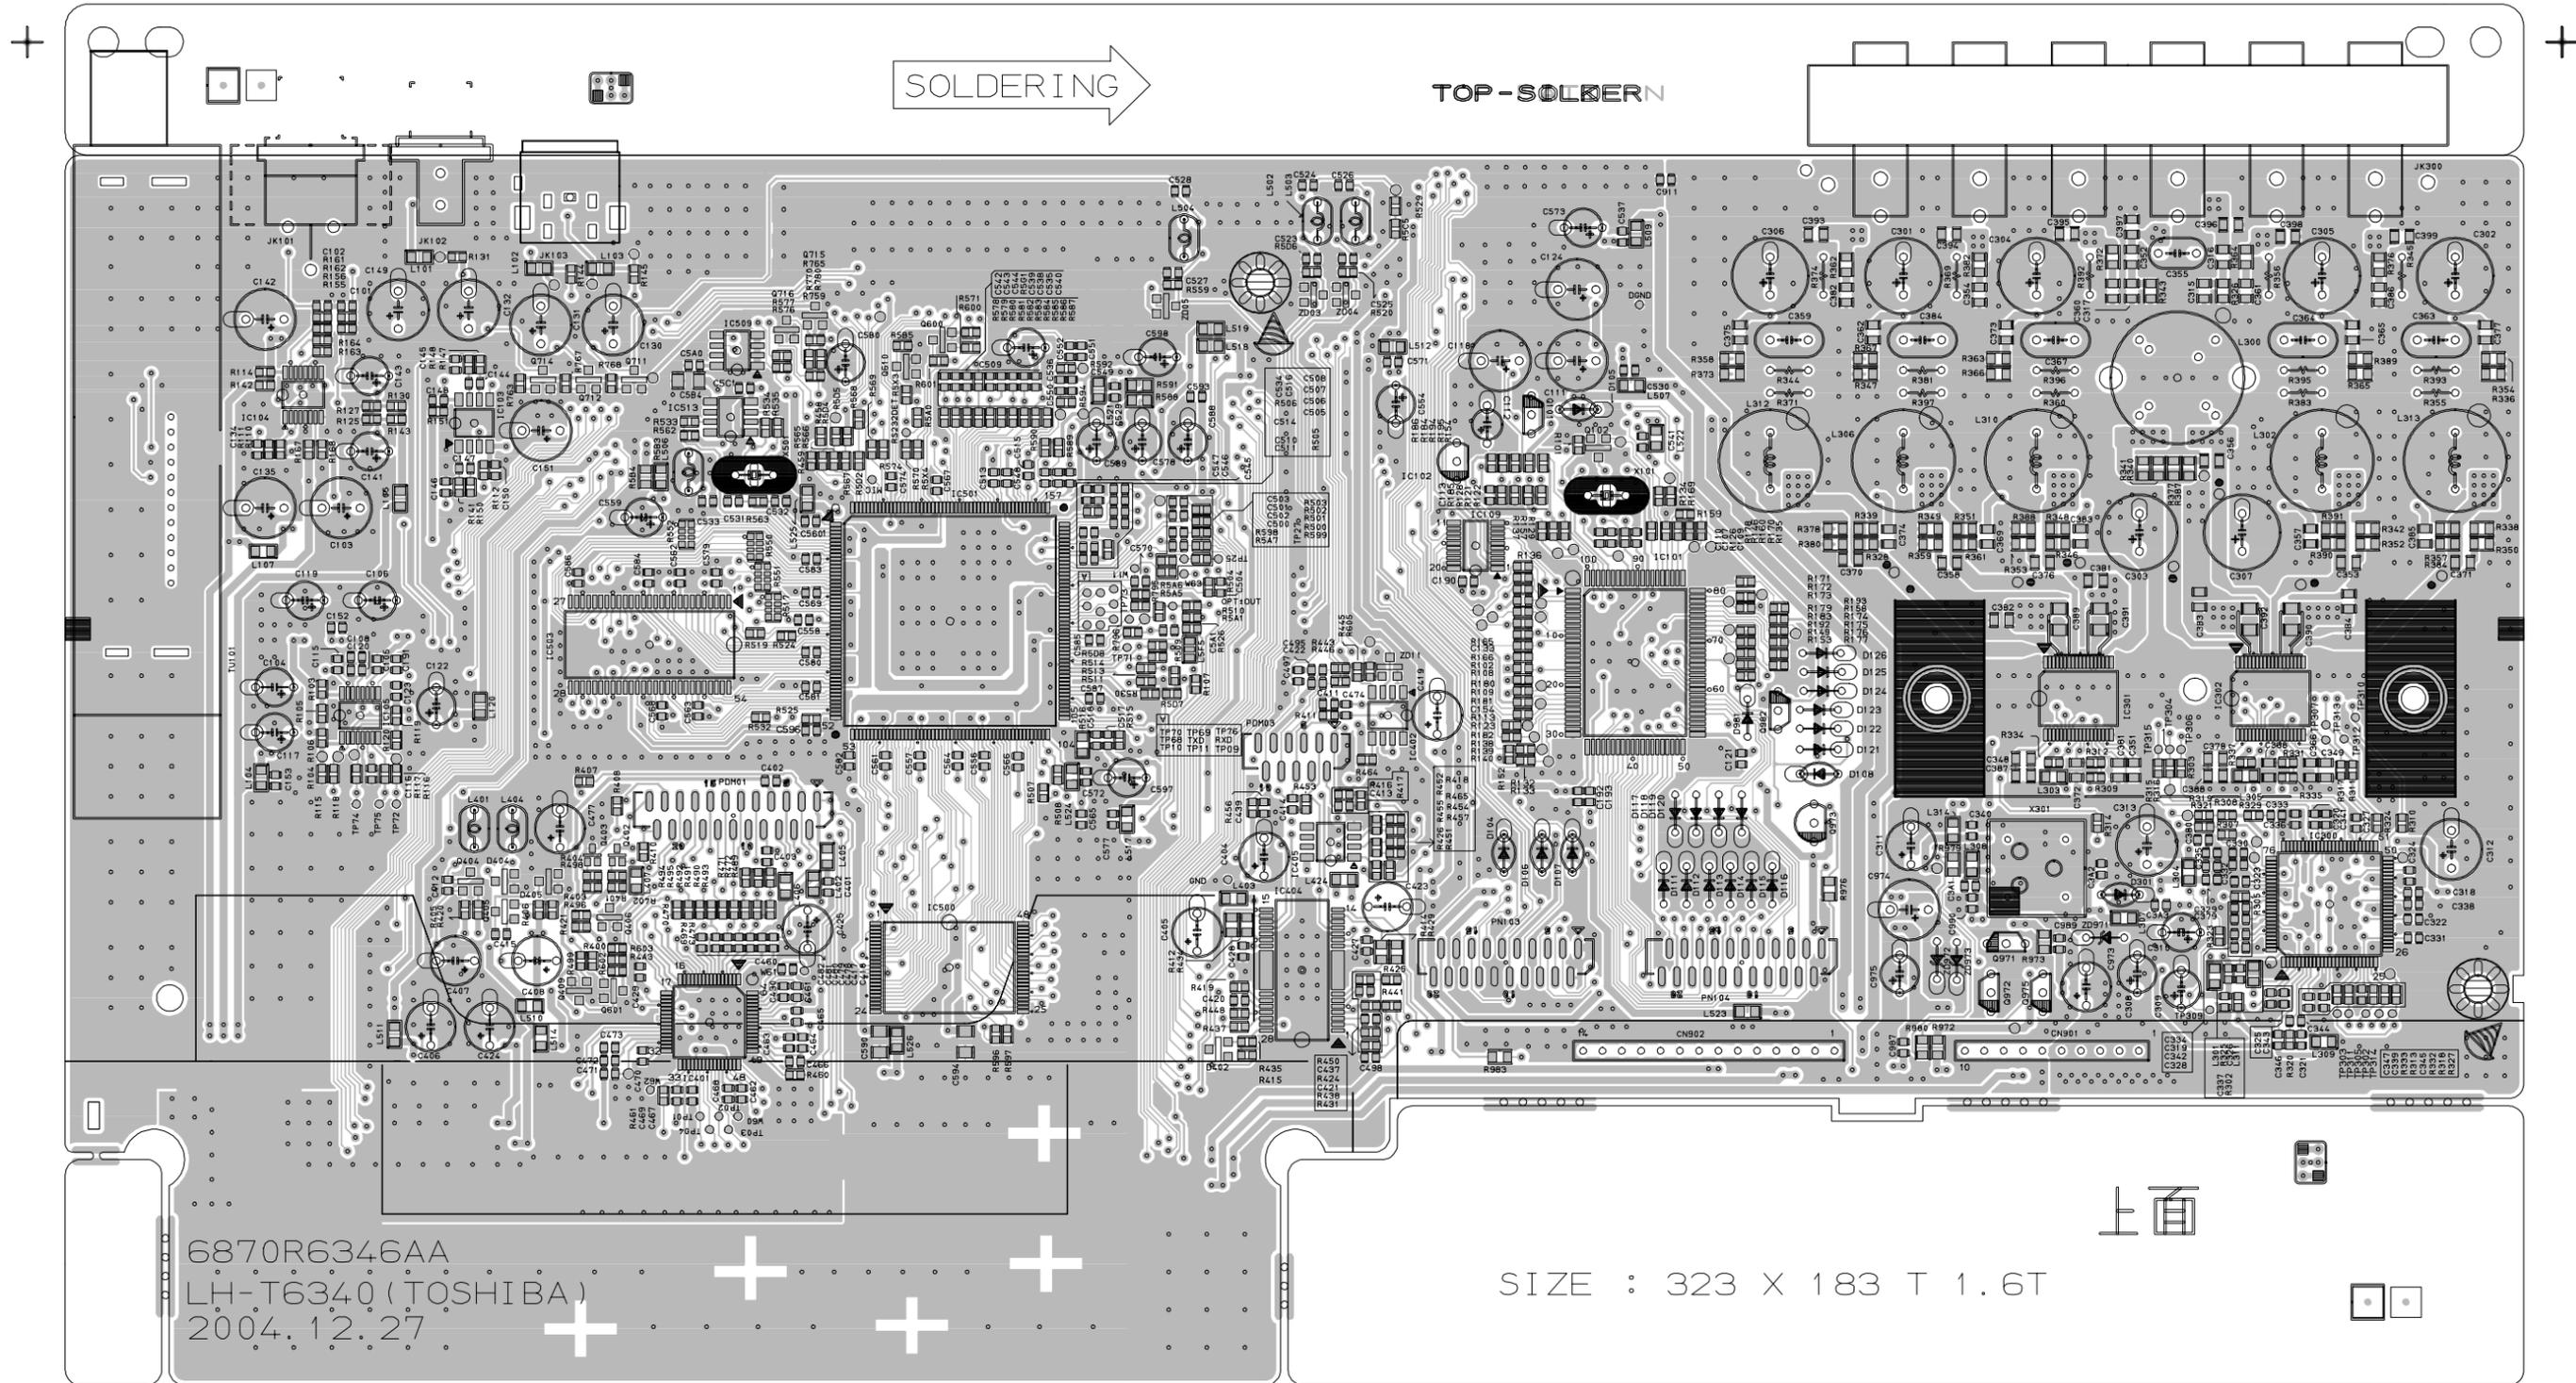


• FRONT P.C. BOARD (TOP)

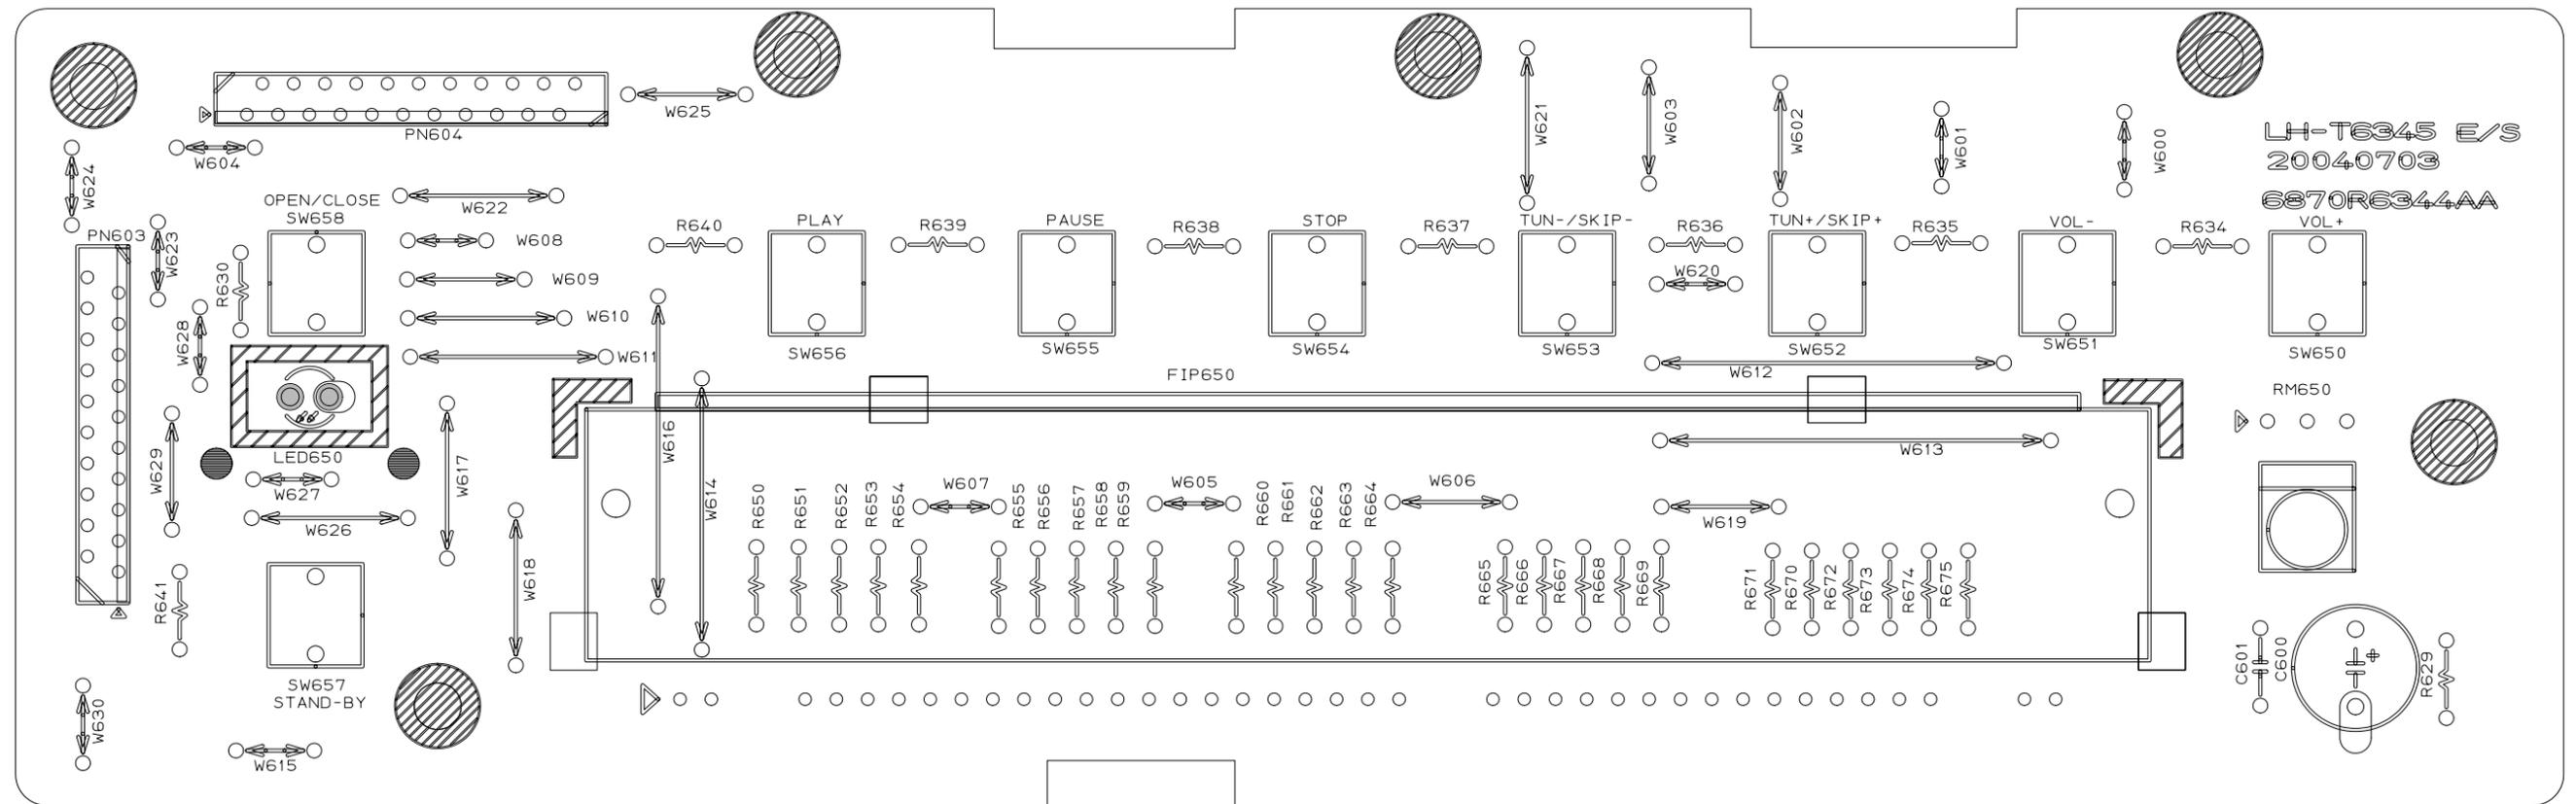

• FRONT P.C. BOARD (BOTTOM)

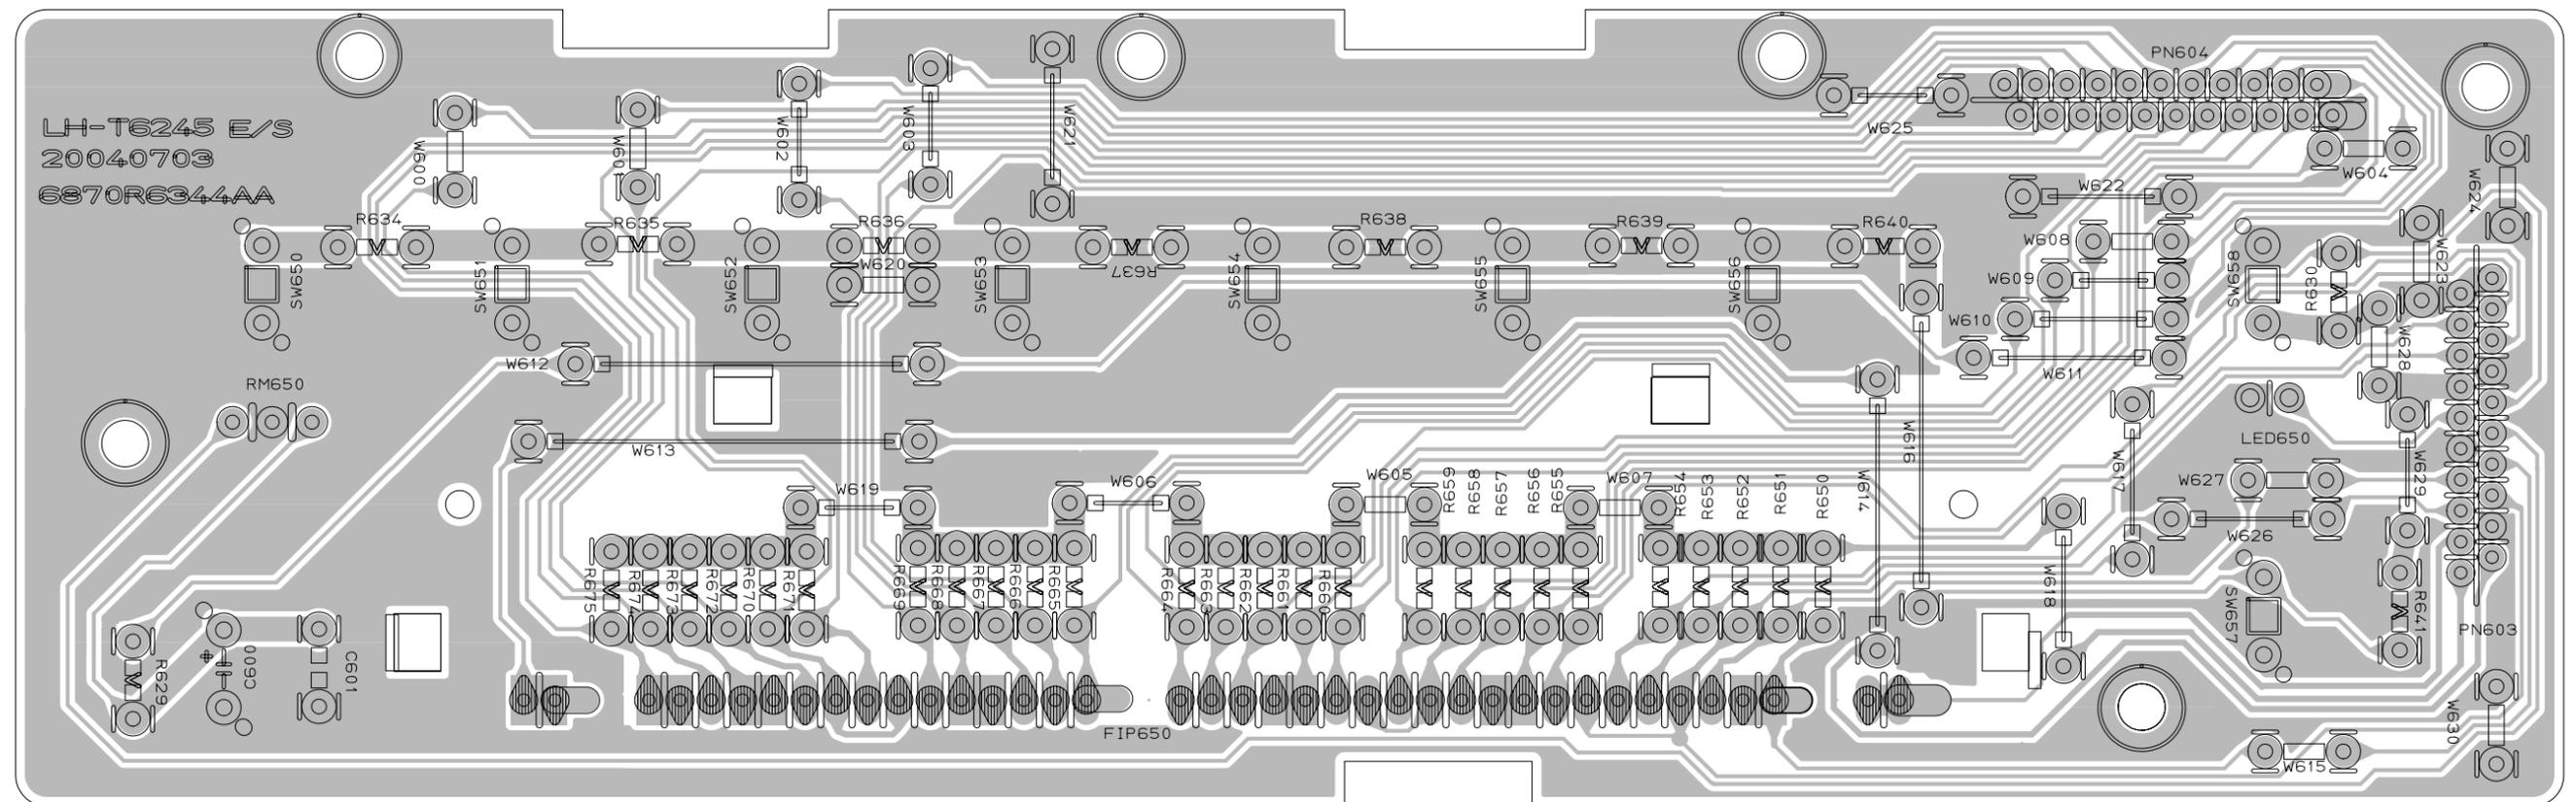


• SMPS P.C. BOARD

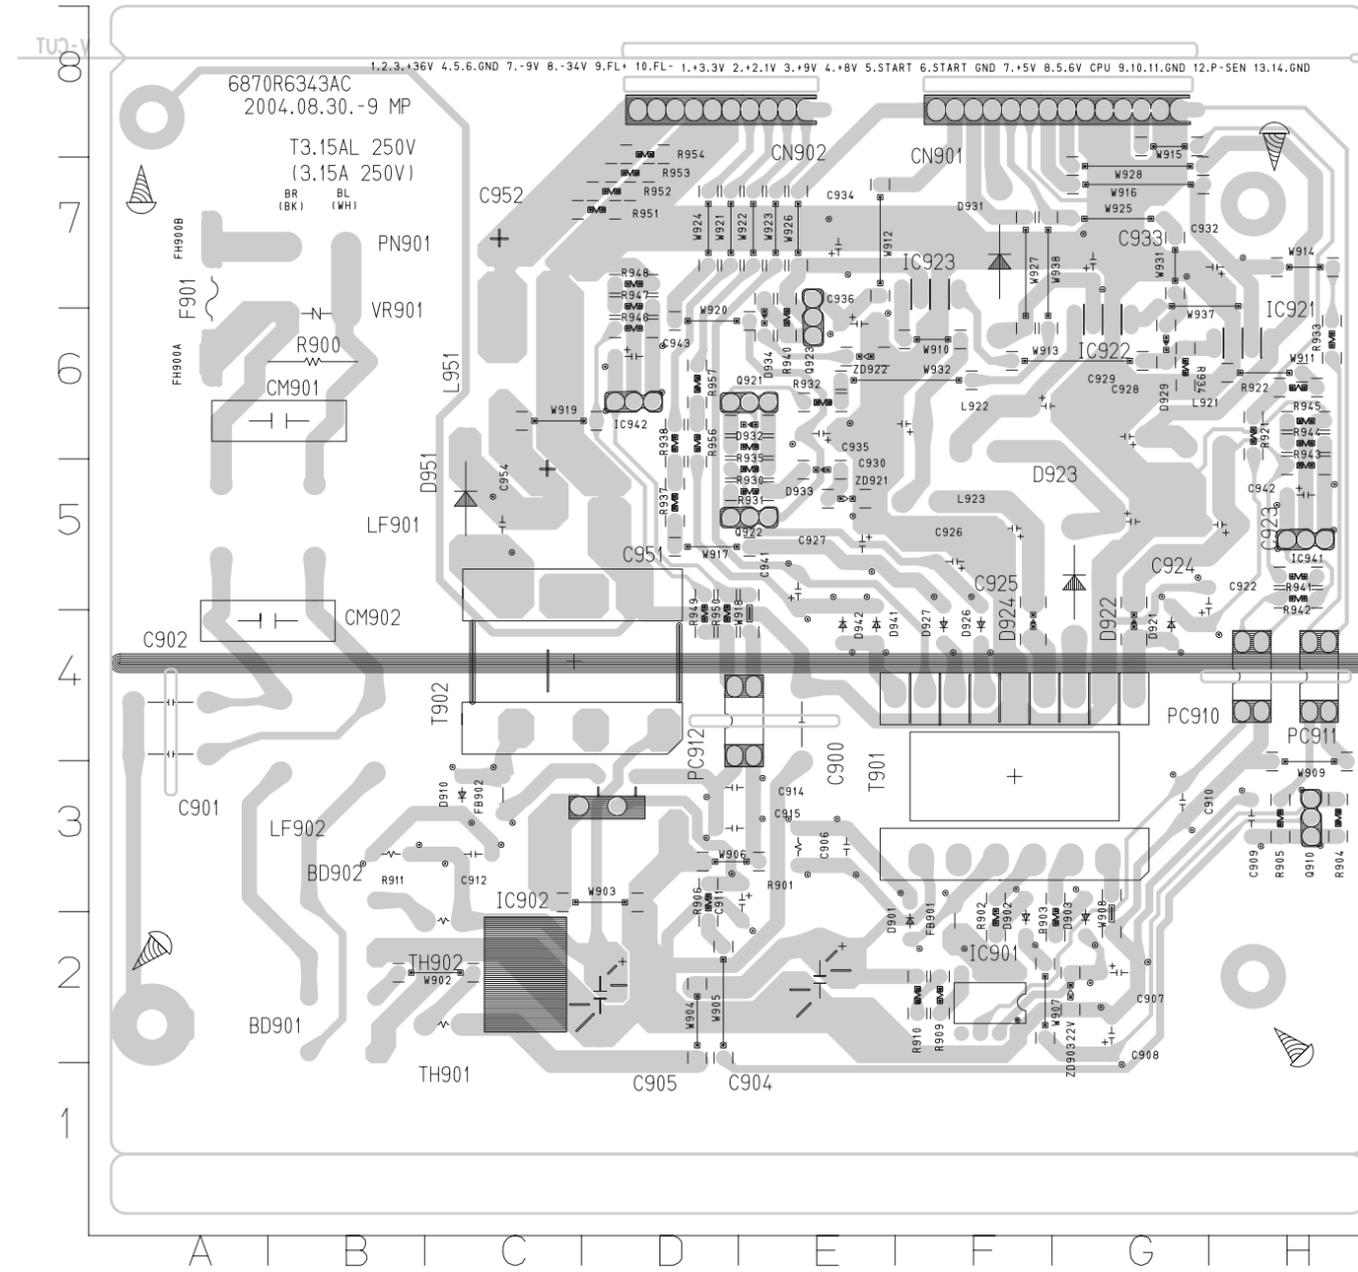



SECTION 3. DVD PART


TROUBLESHOOTING GUIDE


1. Test & debug flow

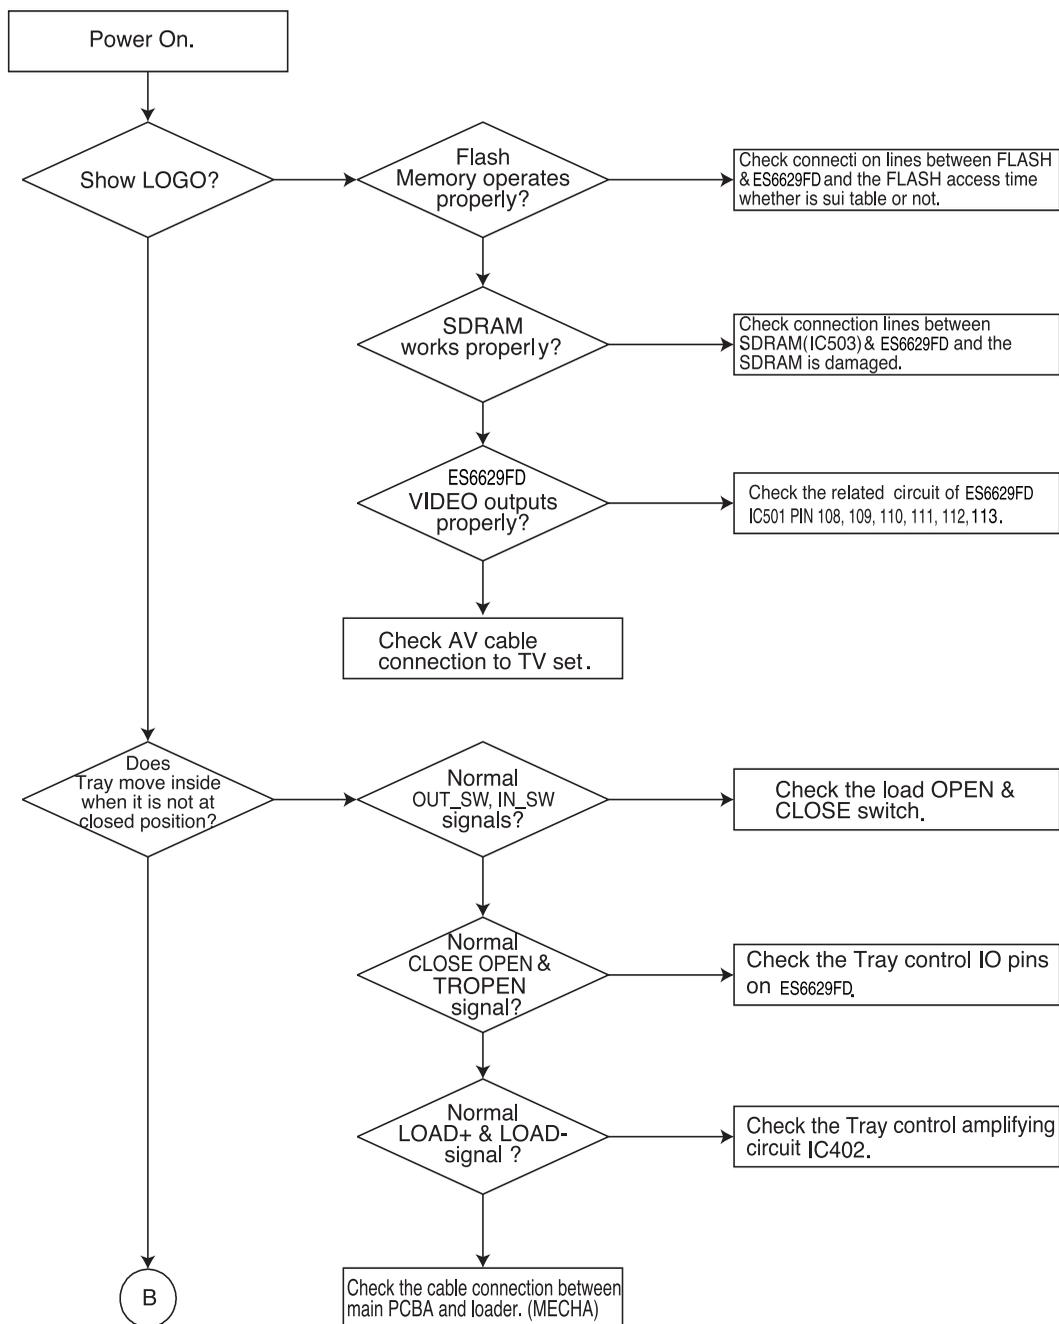

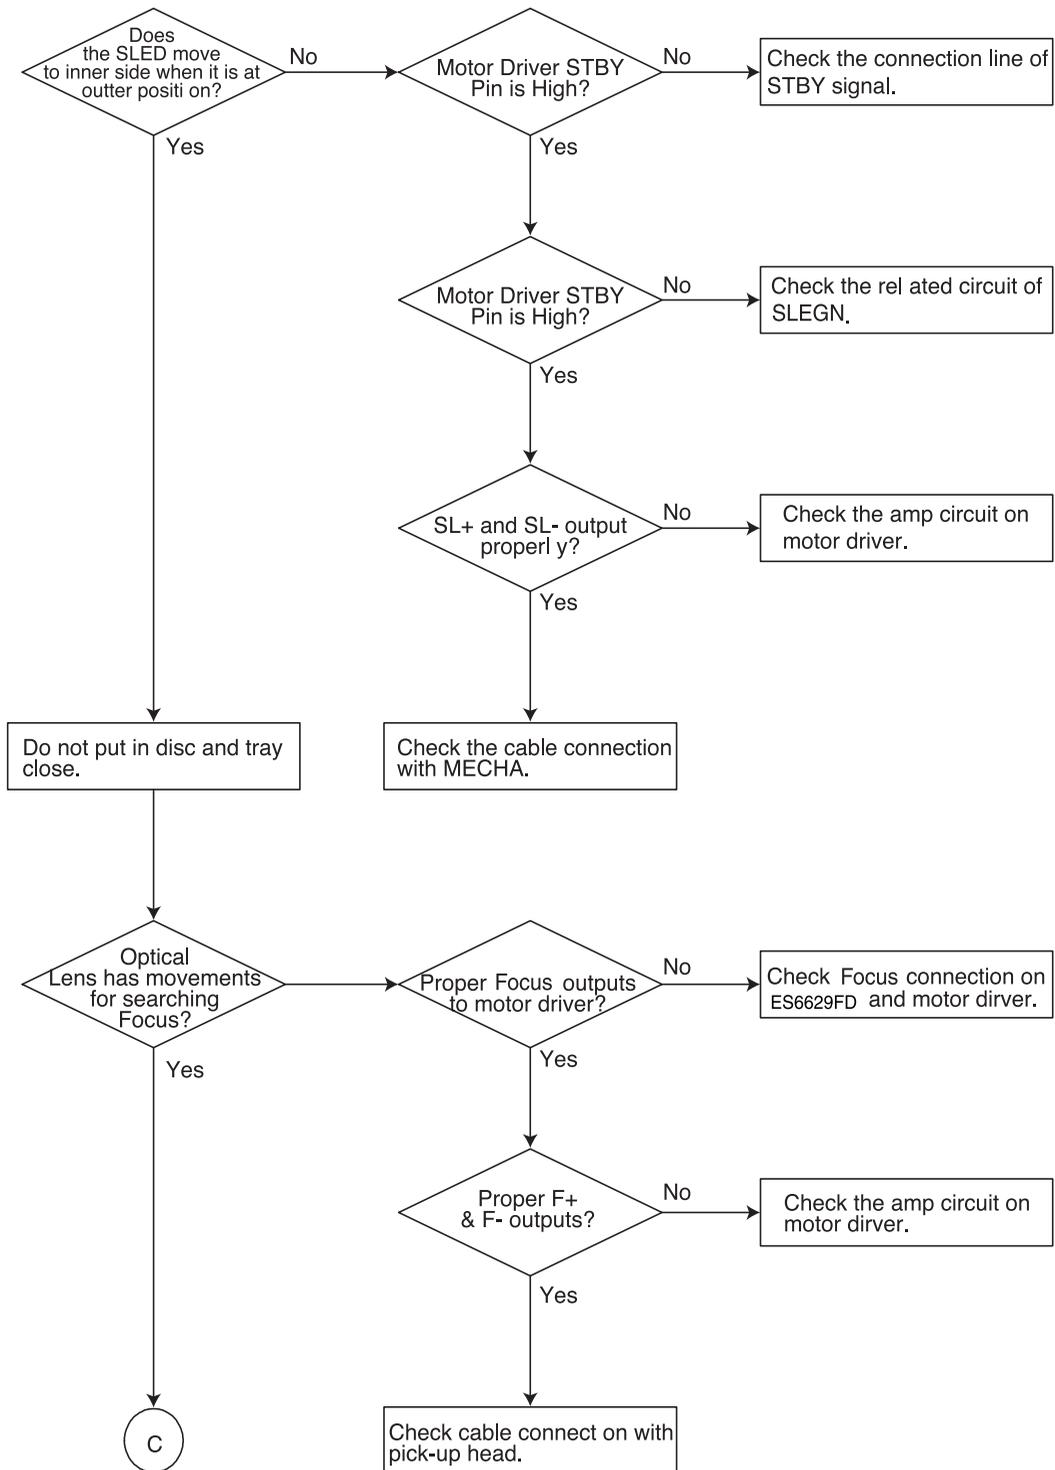

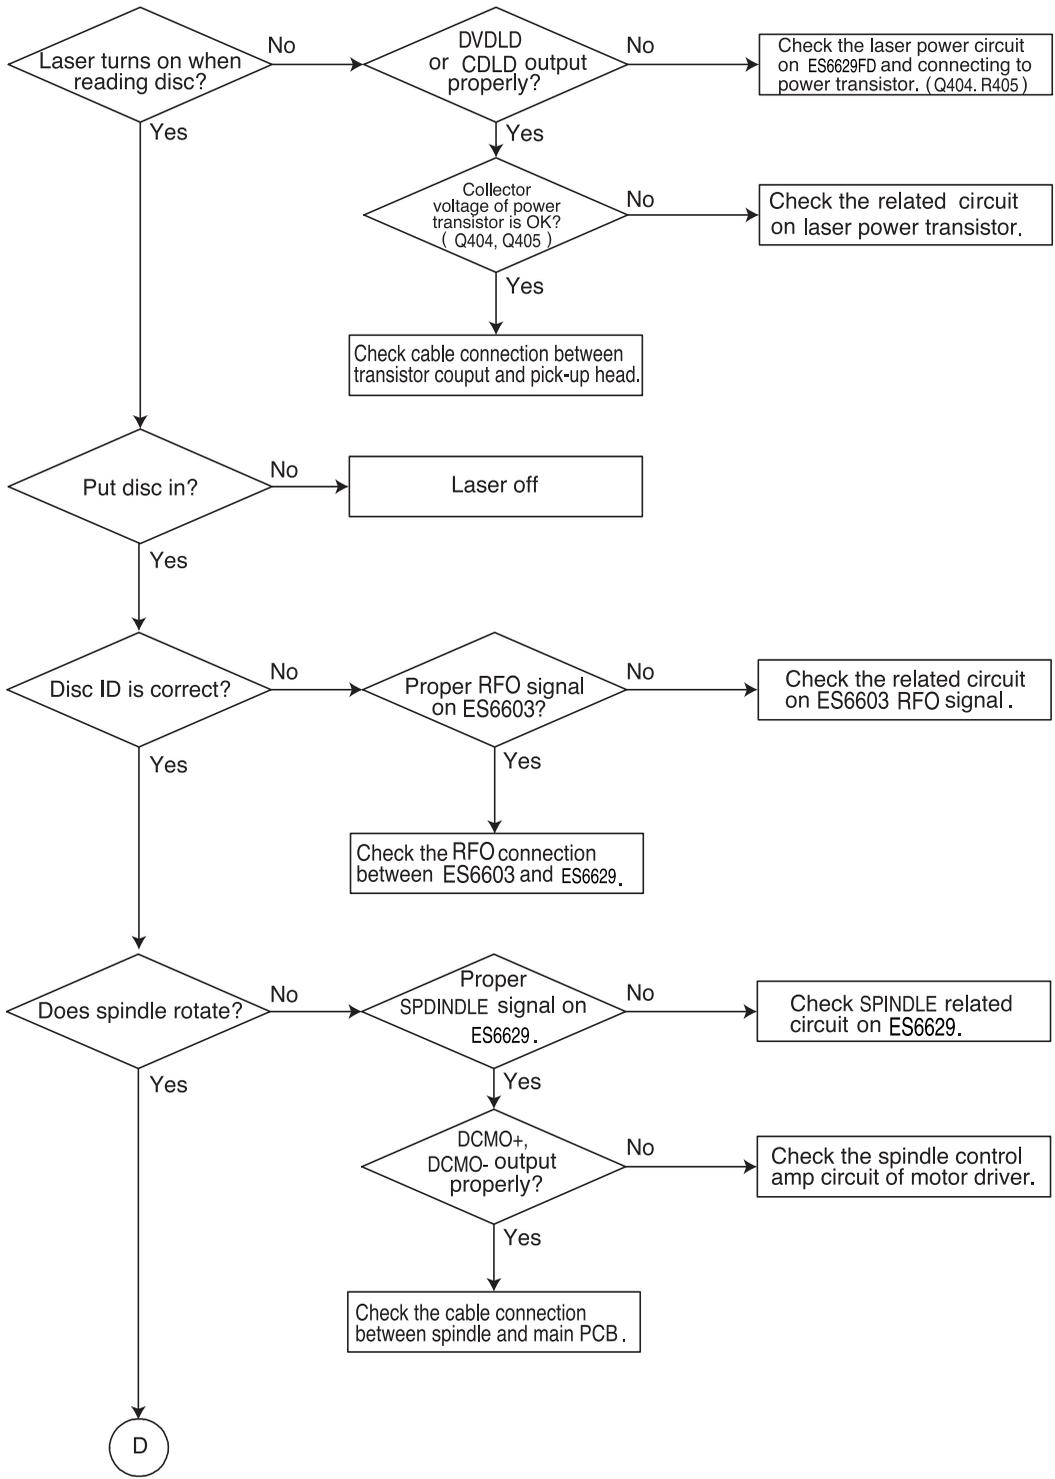


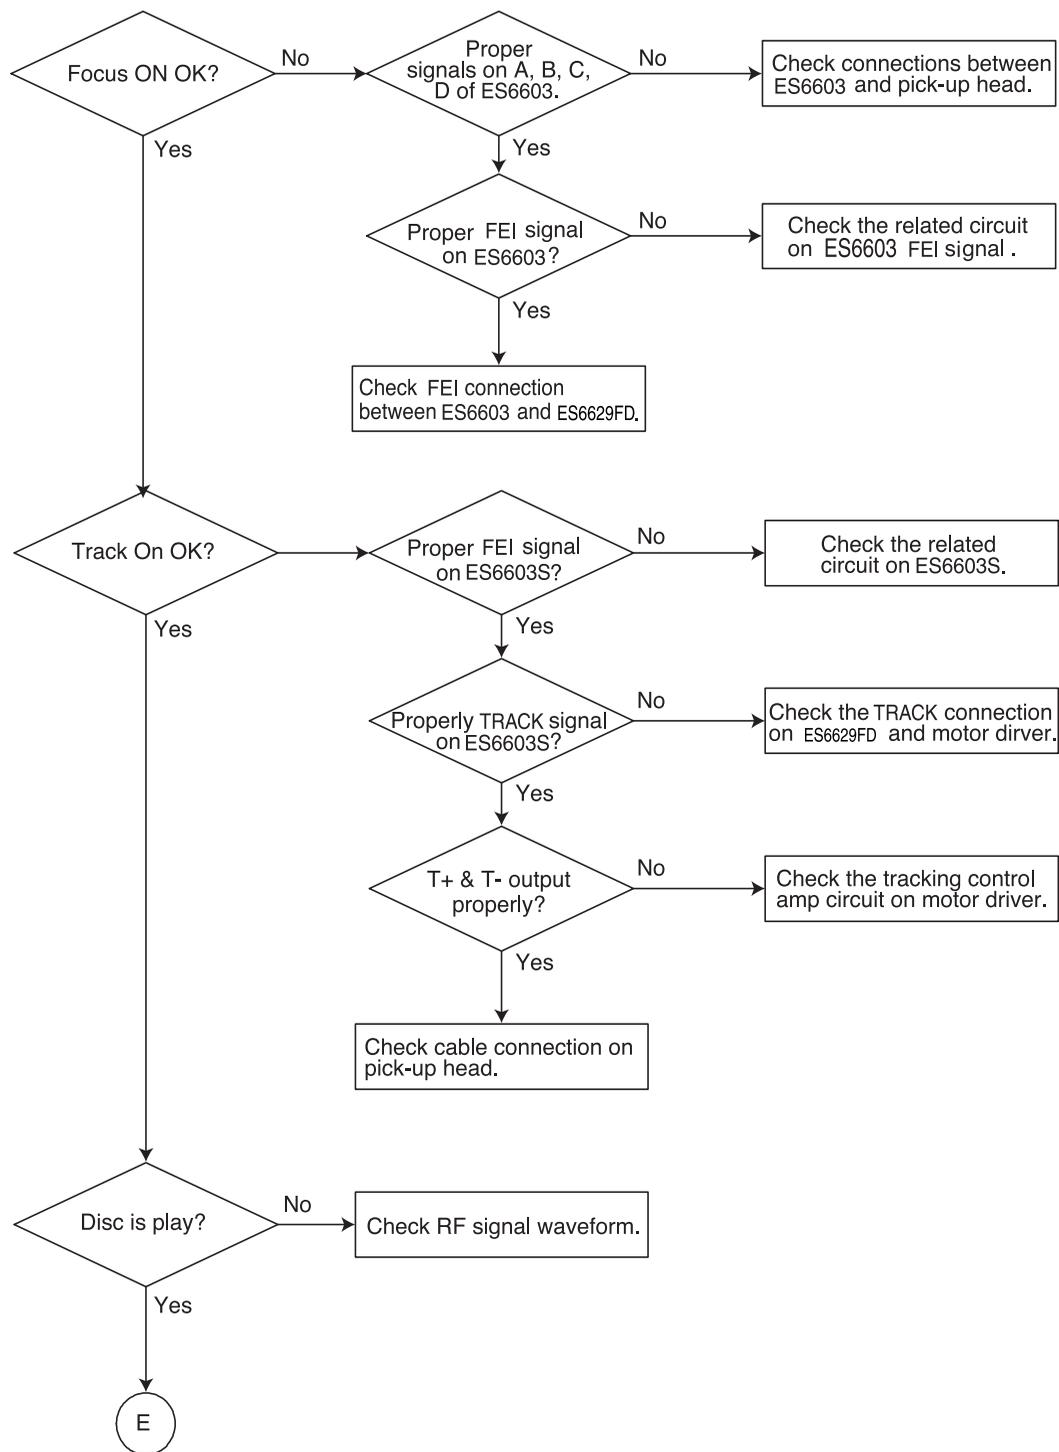

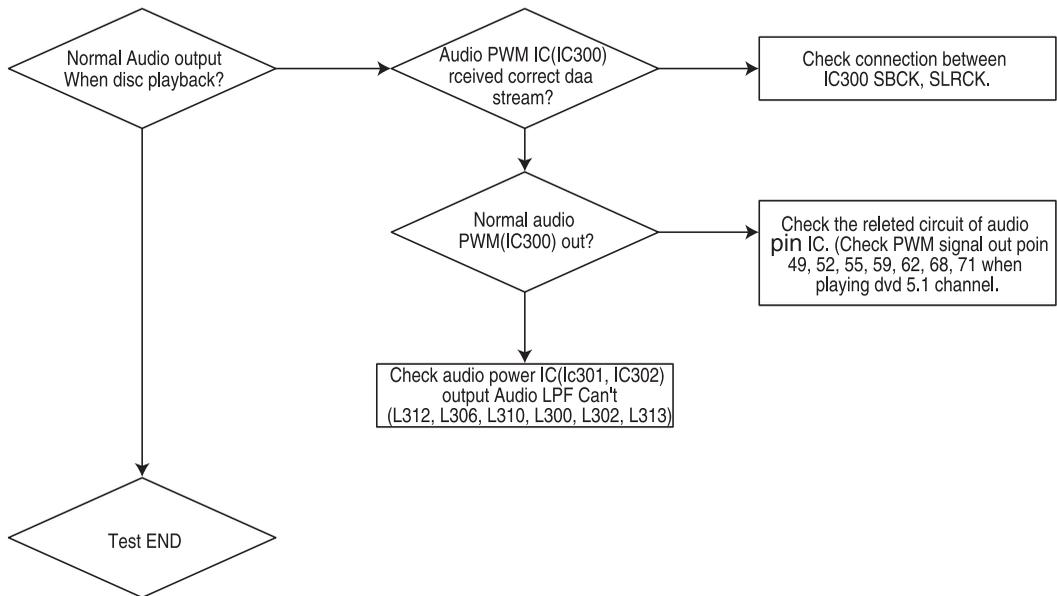


DVD SCHEMATIC DIAGRAMS

DVD MPEG & DSP SCHEMATIC DIAGRAM

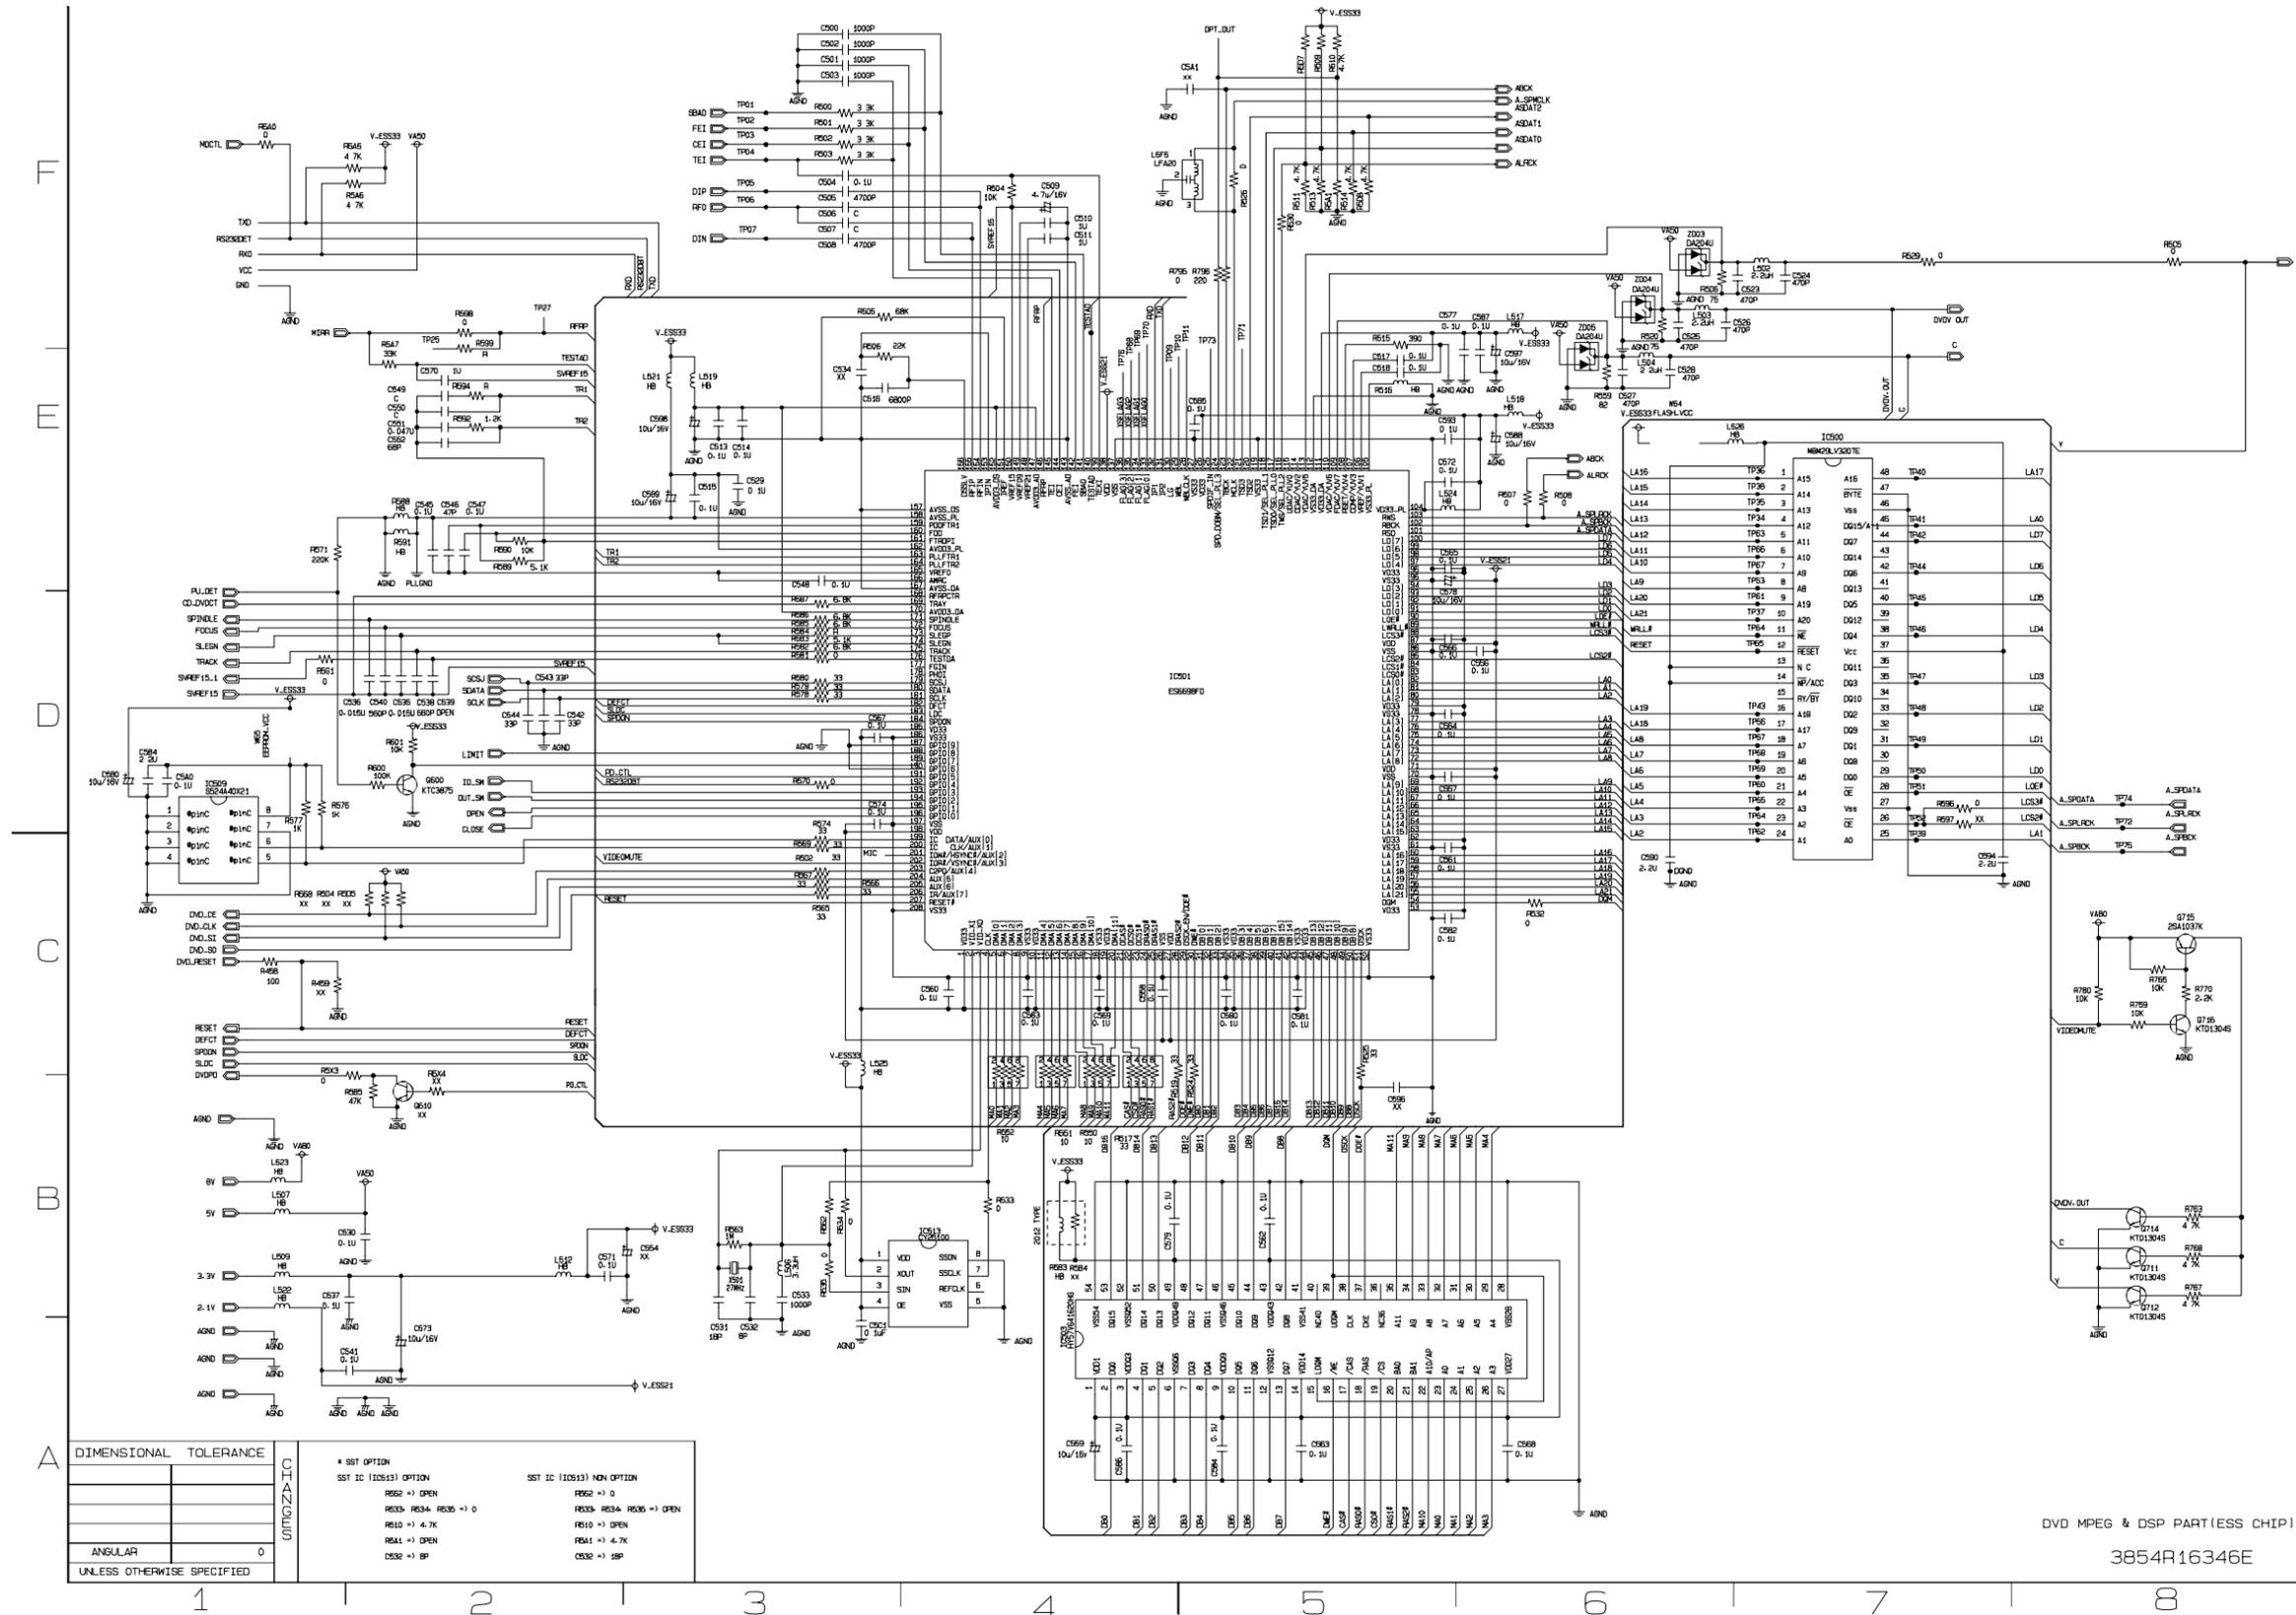

DVD RF SERVO SCHEMATIC DIAGRAM

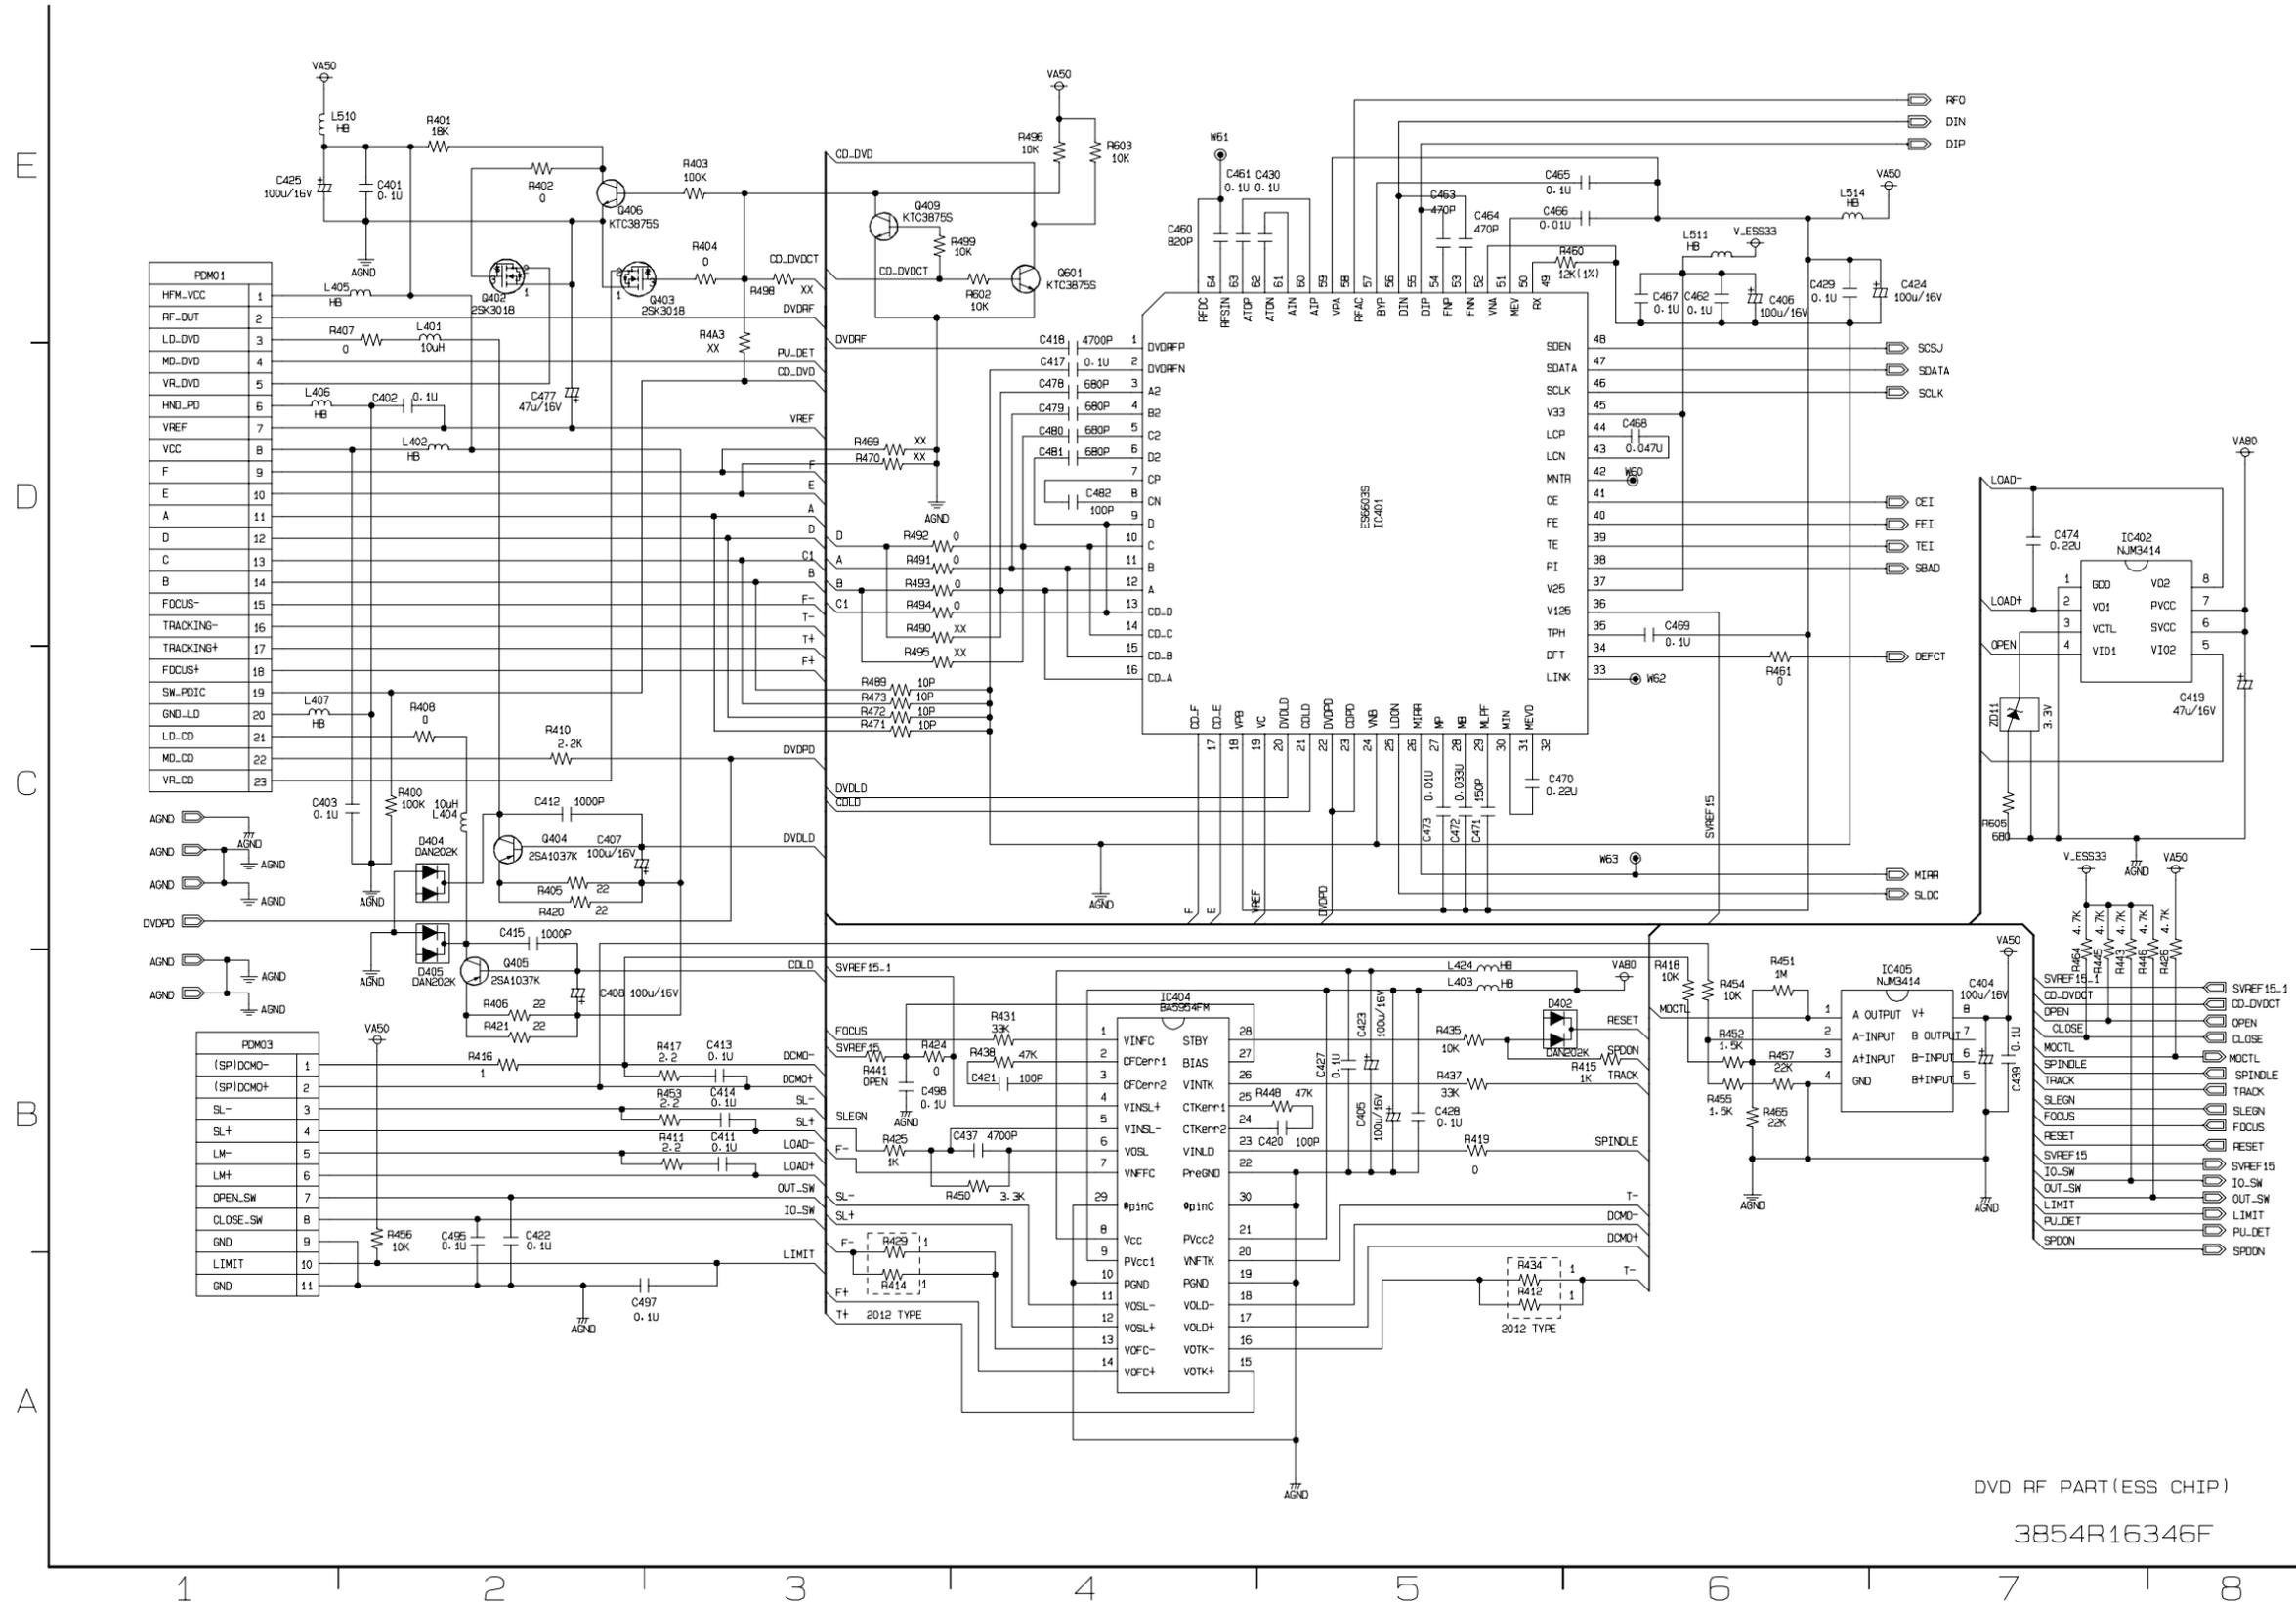


DVD RF PART (ESS CHIP)

3854R16346F


SECTION 4. EXPLODED VIEWS

□ CABINET AND MAIN FRAME SECTION

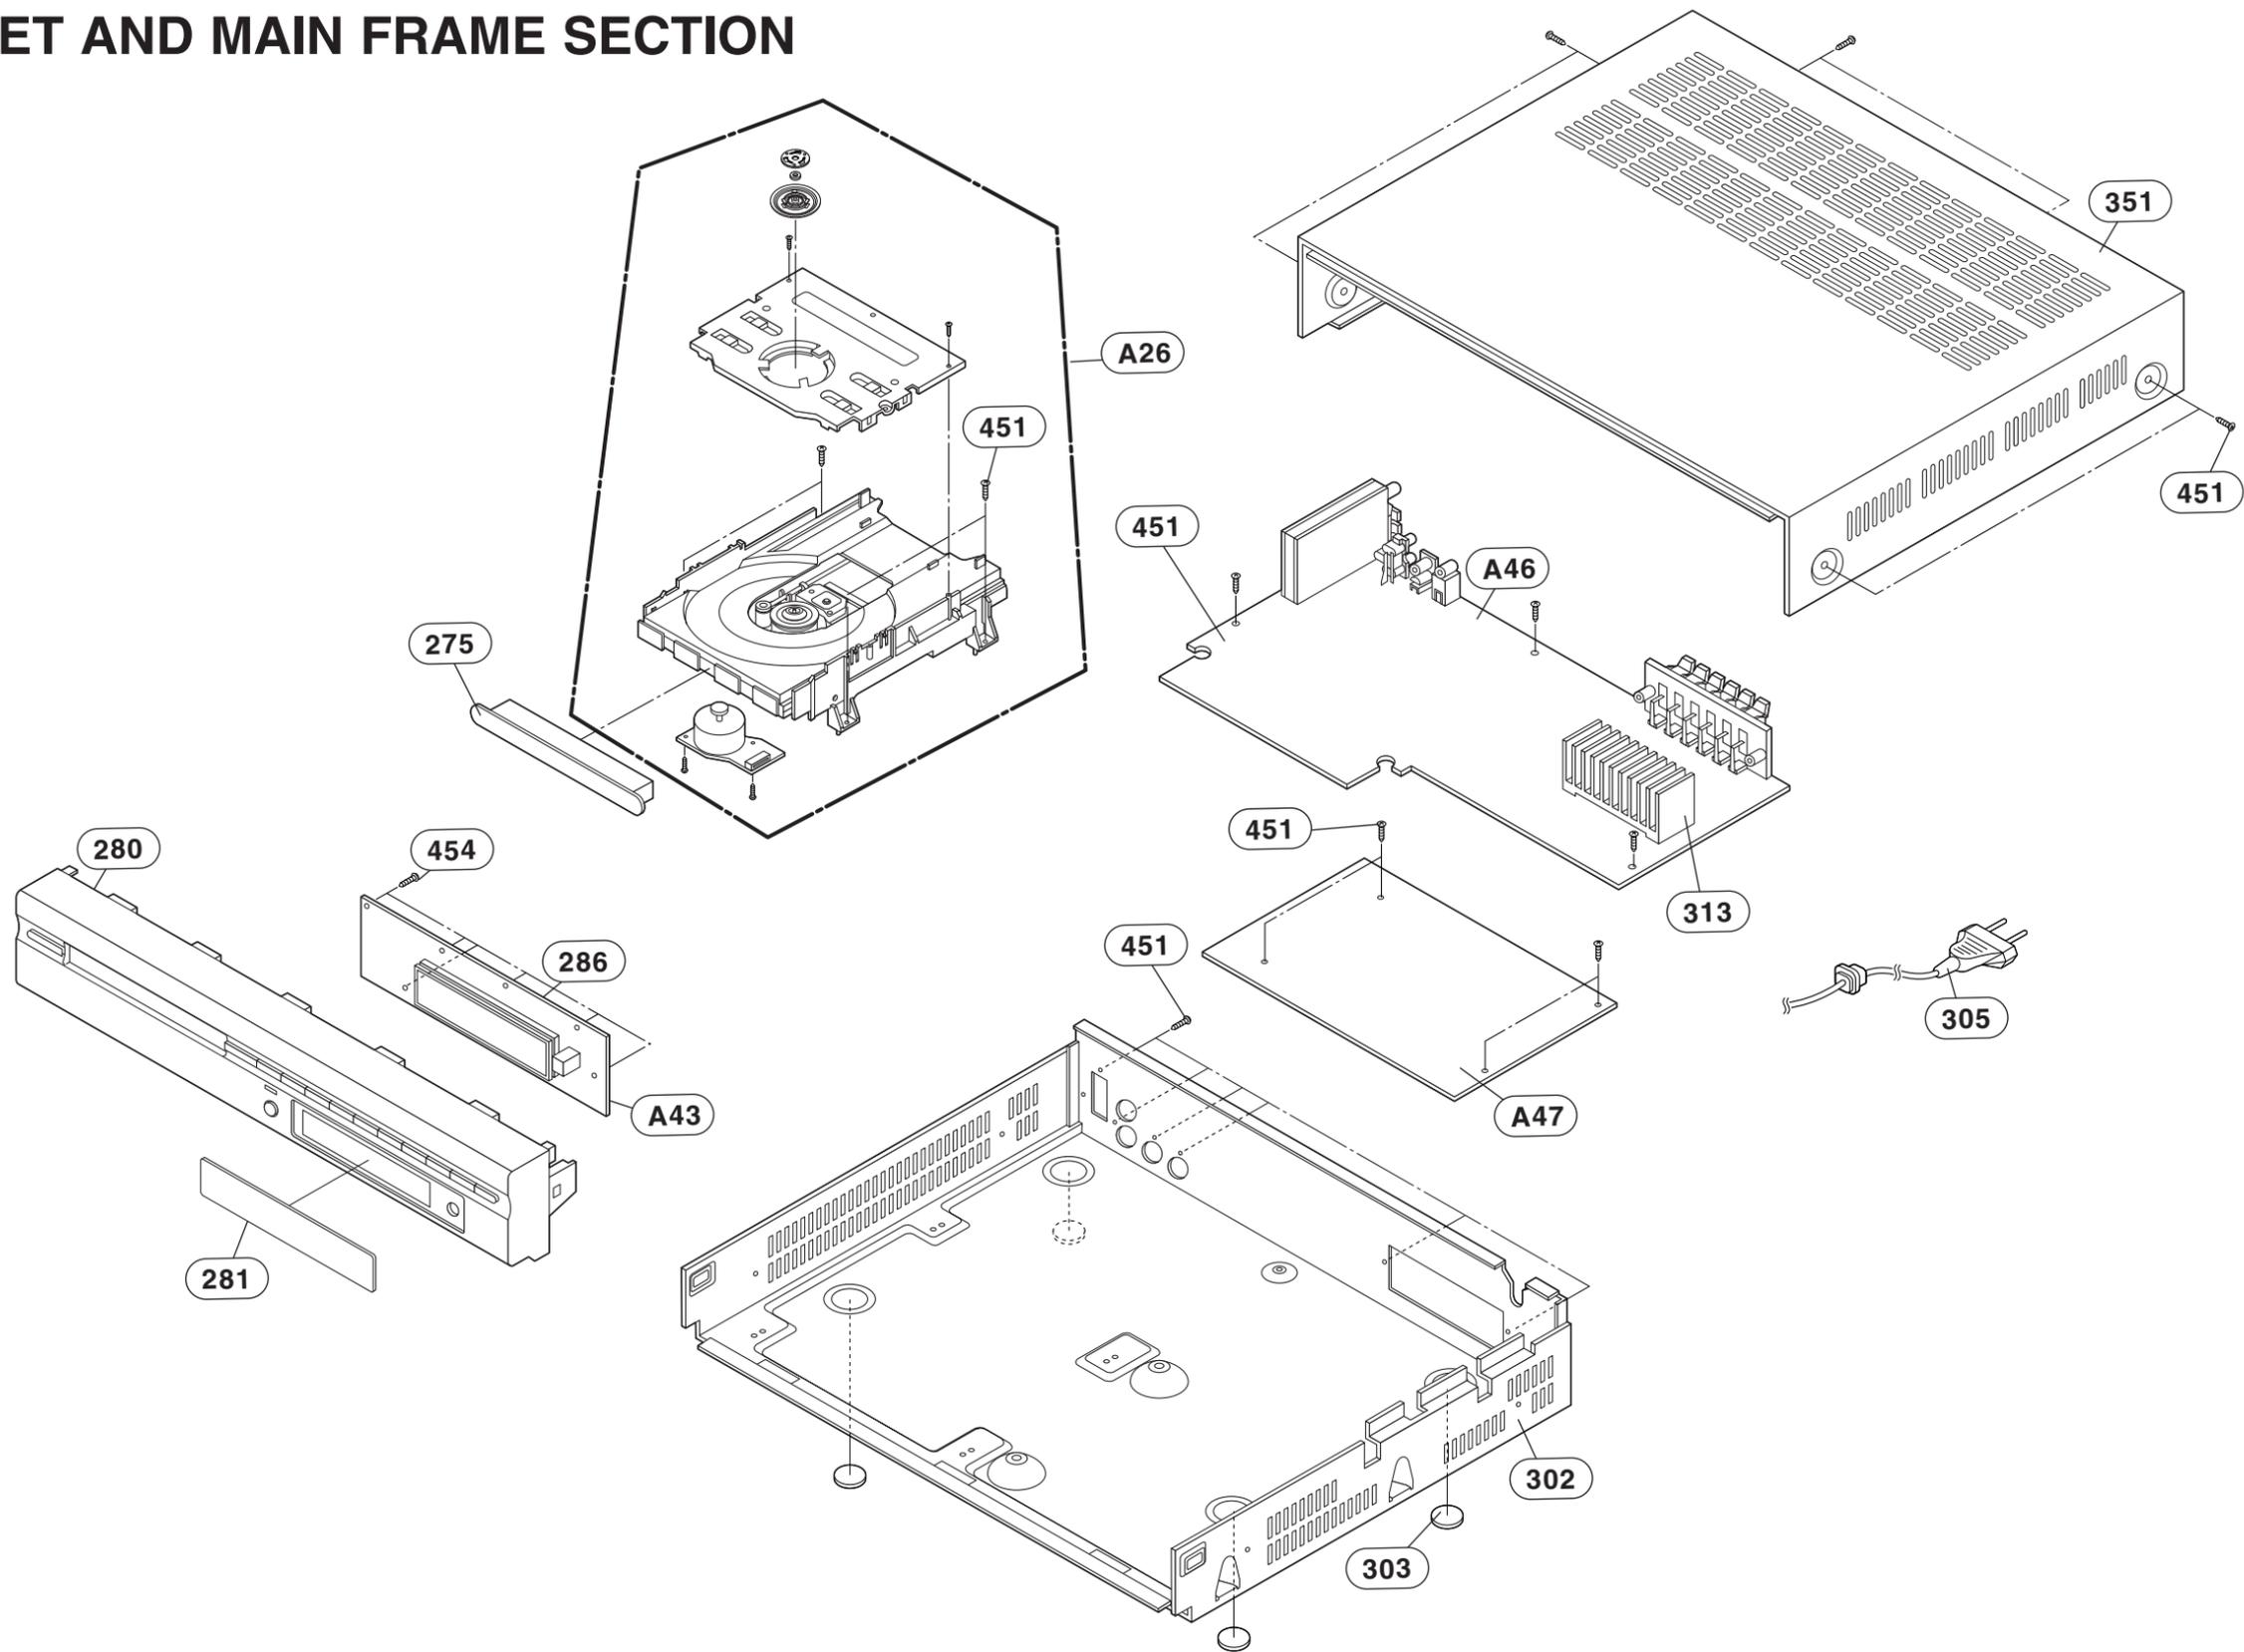

SECTION 5. SPEAKER SECTION

□ MODEL : LHS-T6347T

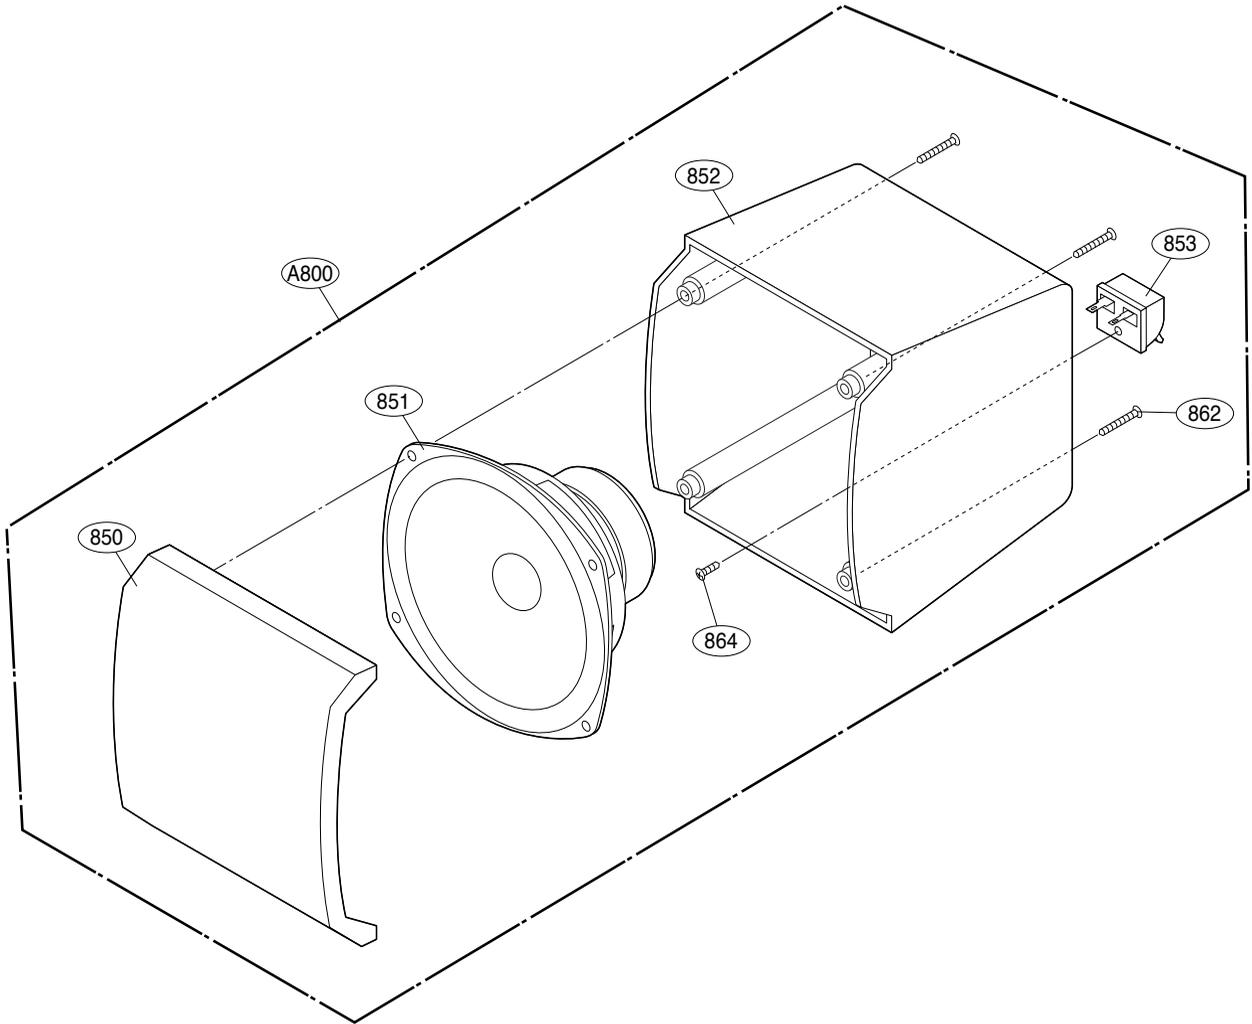

□ MODEL : LHS-T6347W

