



# SERVICE MANUAL

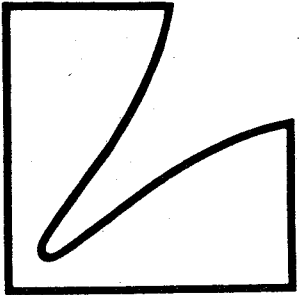

DUO-BETA CIRCUIT STEREO  
INTEGRATED AMPLIFIER

# L-205


SH-100-43017

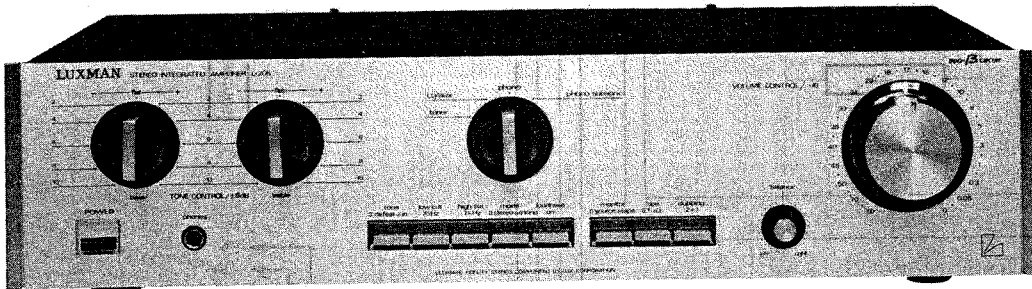


# Contents

Block Diagram . . . . .	1
Adjustment Procedures . . . . .	2
Packing Material Parts List . . . . .	2
Exploded View . . . . .	3
Exploded View Parts List . . . . .	4,5
Pre Main Amp PCB . . . . .	6
Tone Control PCB . . . . .	7
Function SW PCB . . . . .	7
VR Control PCB . . . . .	7
AV Input Terminal PCB . . . . .	7
Destination's Parts List . . . . .	7
Pre Main Amp PCB Parts List . . . . .	8,9
Tone Control PCB Parts List . . . . .	9
Function SW PCB Parts List . . . . .	9
VR Control PCB Parts List . . . . .	9
AV Input Terminal PCB Parts List . . . . .	9
IC Handling Guide . . . . .	10
Schematic Diagram . . . . .	11
Specifications . . . . .	12

## Block Diagram

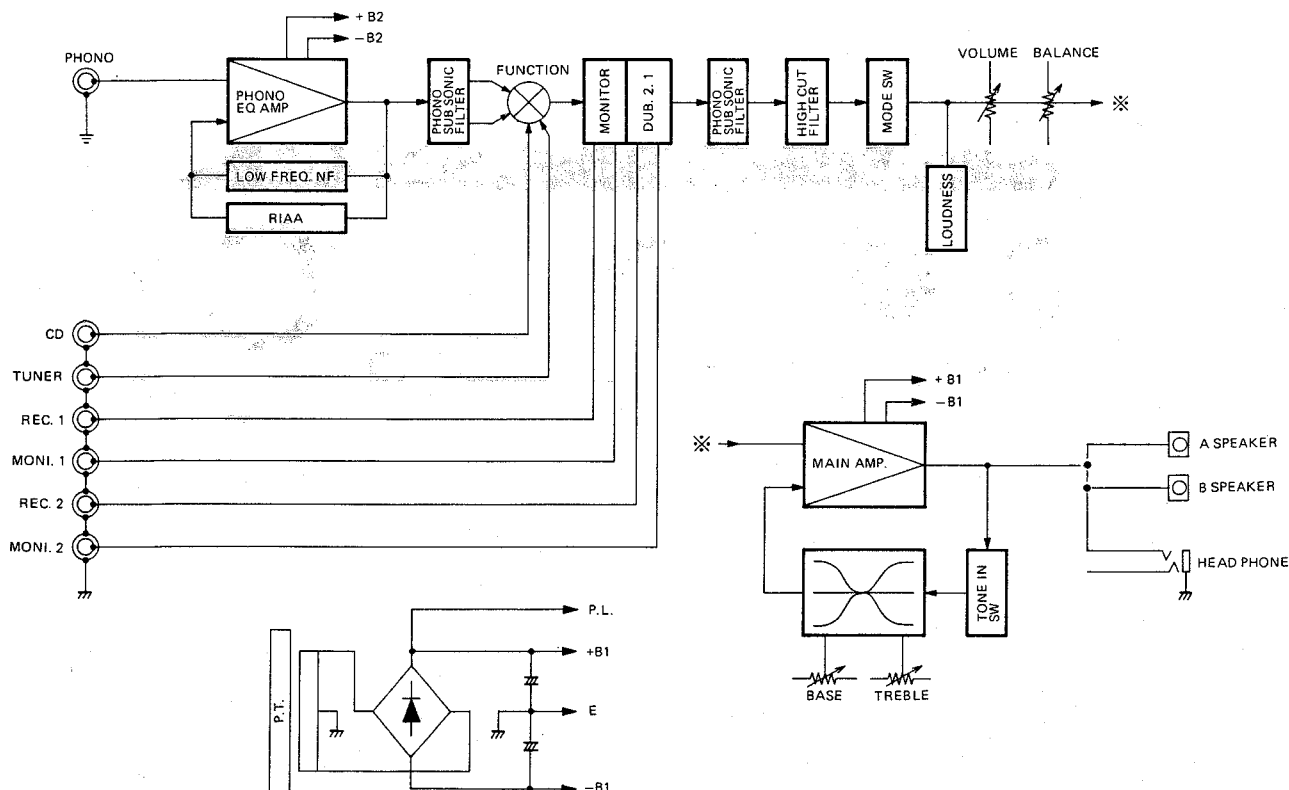


## Adjustment Procedures

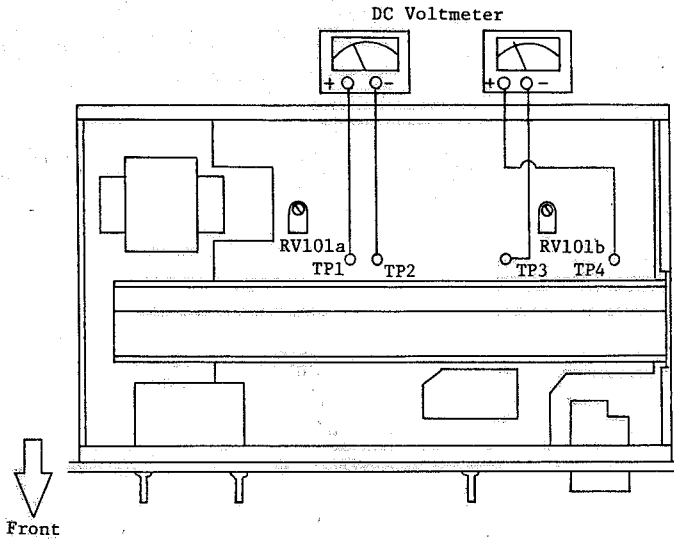

### Bias (Idle) Current Adjustment

1. Connect a DC Voltmeter in between TP1 and TP2 on L-ch and or TP4 and TP3 on R-ch, Making TP1 and TP4 positive respectively.
2. Adjust the RV101a and RV101b to obtain  $15\text{mV} \pm 5\text{mV}$  reading on the meter.

## Packing Material Parts List

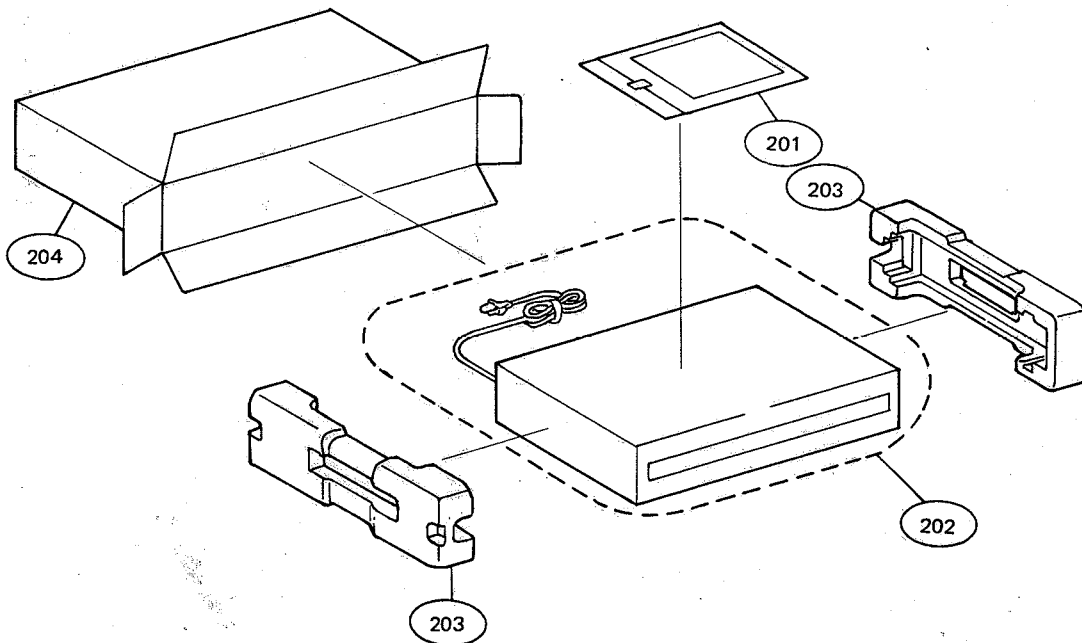


### Packing Material Parts List

Index	Symbol No.	Stock No.	Description	Remarks
	201	68P65432F35	Owner's Manual	
	202	56B63425F11	S, Poly 620x480	
	203	56C56637F01	Packing Tray	
	204	56S60482F36	Carton, Packing	

# Exploded View

L-205

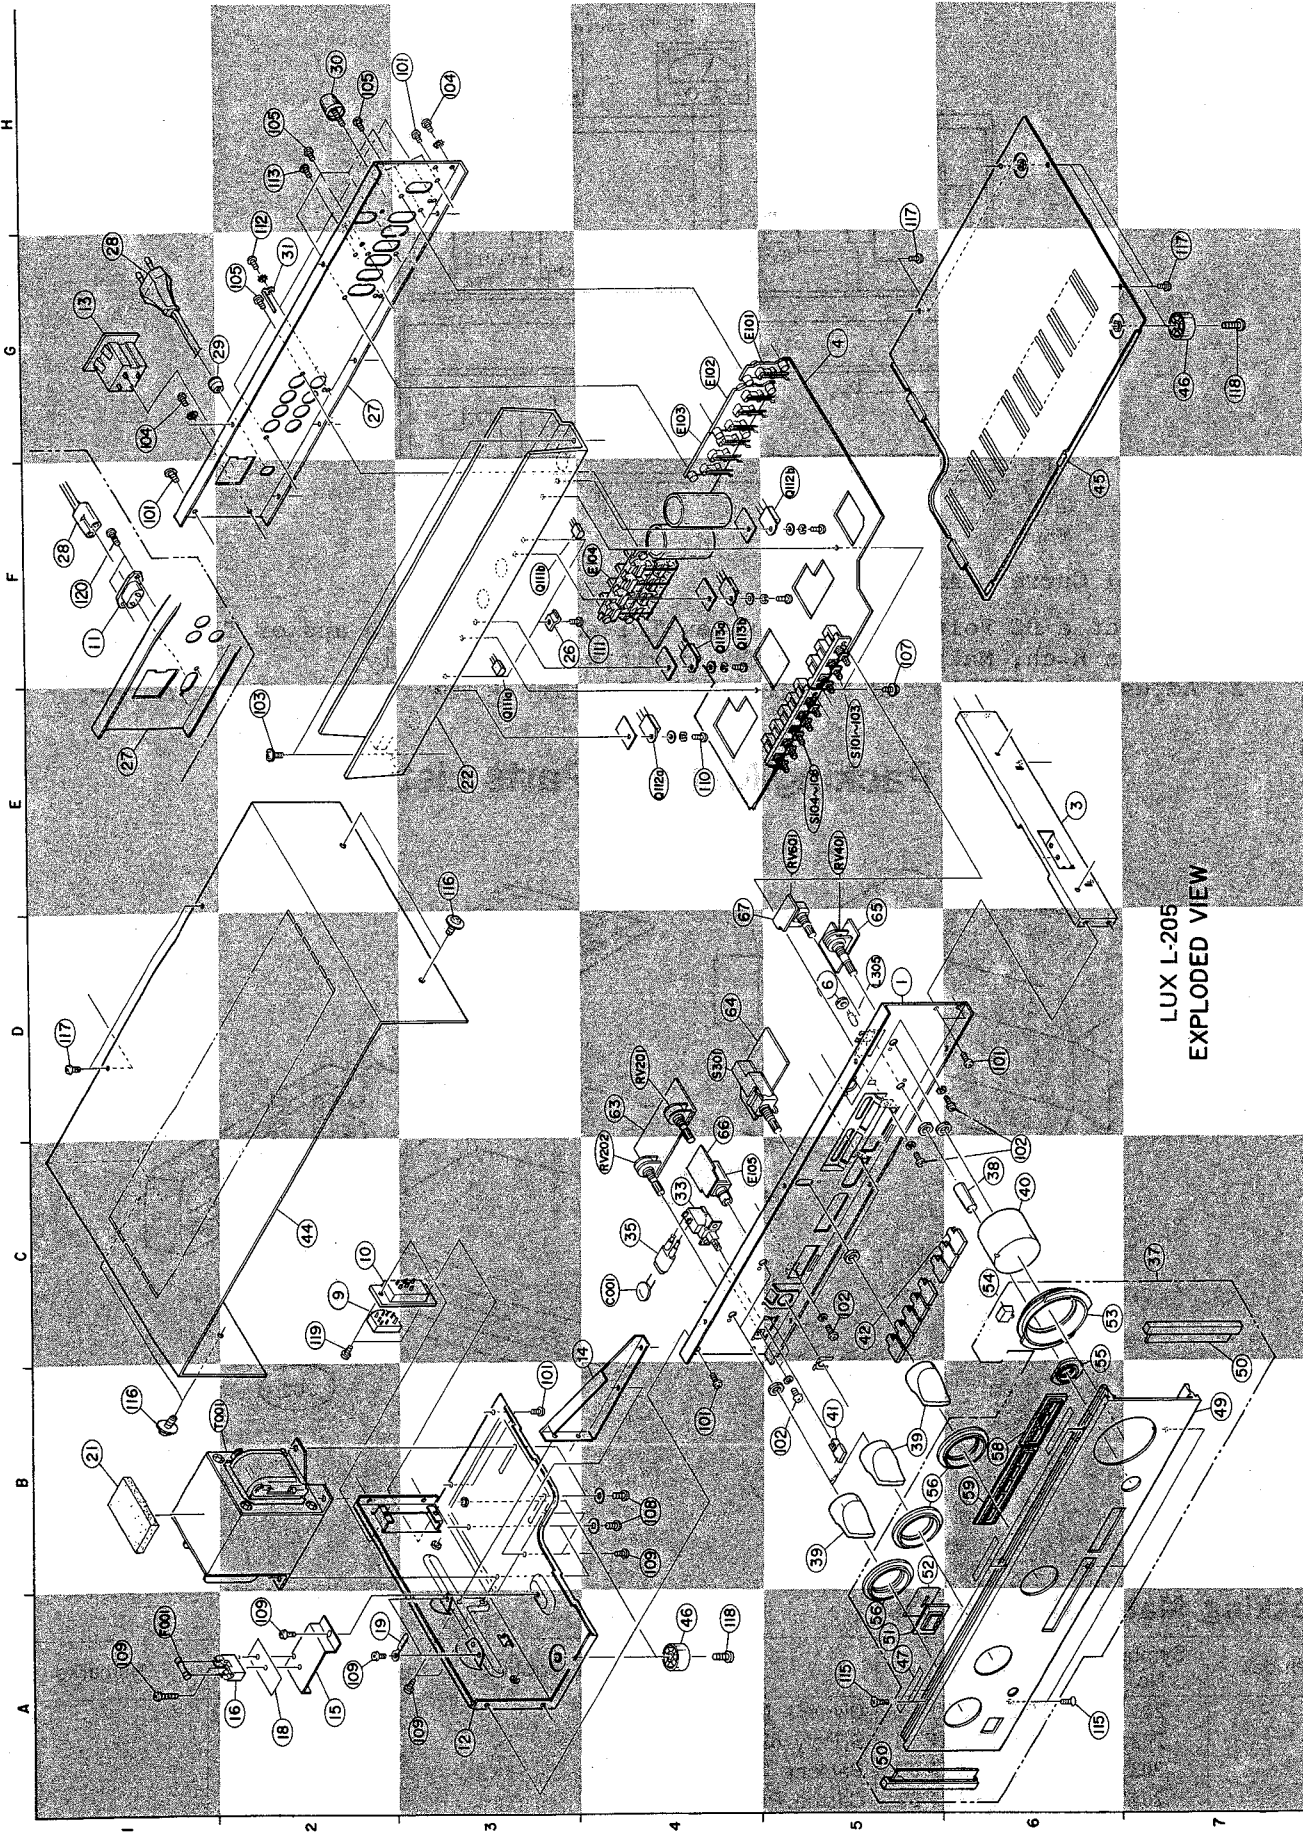

LUX L-205  
EXPLODED VIEW

# Exploded View Parts List

Note : ※The parts whose parts numbers are not entered will not be supplied.


Index	Symbol No.	Stock No.	Description	Remarks
D5	1	※	Chassis Front	
E6	3	※	Bracket, R	
G5	4	※	Ass'y Pre M/A PCB	
D5	6	43A62016F02	Bushing, UZ1077-2	
C2	9	09T51830F01	Plug, Switch P-2120	AK, AG
C2	10	09T51831F01	Socket, Switch M-1615	AK, AG
F1	11	09T67078F01	Inlet, 2P	AK, AG
A3	12	※	Bracket, Trans	
G1	13	09T57066F01	AC, Outlet S2-724B-04	UP
C4	14	※	Bracket, Trans	
A2	15	※	Bracket, Fuse	
A2	16	09T51074F01	Fuse Holder	
		09T51828F01	Fuse Holder X-N1157	UP
A2	18	※	Spacer, Fuse	
A2	19	29C41045P01	Lug, Wrap Around	
	20	※	Cushion, Rubber	
B1	21	※	Spacer, 60x34	
E3	22	07C60750F01	Heat Sink	
F3	26	※	Support, Tr	
E1, G2	27	15D56636F19	Cover, Rear	SK, SD
		15D56636F25	Cover, Rear	AK, AG
		15D56636F27	Cover, Rear	UP
F1, G1	28	28T43182P02	Plug, AC Cord	SK, SD
		30T67077F01	Cord Set	AK
		30T67359F01	Cord Set	AG
		28T55335P02	Plug, AC Cord	UP
G2	29	43B41625J02	Support, Cord	SK, UP
H2	30	29T66964F01	Terminal, GND	
G2	31	※	Lug, Wrap Around	
C4	33	40T45561F02	Switch Power (SDLIP)	
C4	35	※	Bush, Cap	
C7	37	01V66800F47	Ass'y Panel Front	
C6	38	36A66510F01	Knob, Rotary VR A	
		36A66510F02	Knob, Rotary VR A	UP
B5	39	36B66511F01	Knob, Rotary VR B	
		36B66511F03	Knob, Rotary VR B	UP
C6	40	36B66512F01	Knob, Rotary VR C	
		36B66512F03	Knob, Rotary VR C	UP
B5	41	36A56639F02	Knob, Push 1171	
C5	42	36A66836F02	Knob, Push	
C2	44	15C56629F02	Cover, Top	
F6	45	※	Cover, Bottom	
A4, G7	46	75A52969F01	Pad, Trann-leg	
A5	47	※	Insulator, 50x5	
B7	49	64D66508F01	Panel, Front	
A5, B7	50	07B56624F03	Frame, Panel Side	
A5	51	61A56641F01	Crystal, Indicator	
B5	52	43A56628F01	Spacer, Power	
C6	53	07B56643F01	Frame, Knob 1140	
C6	54	61A61746F01	Lens 1020-WG1020	
C6	55	07A56645F01	Frame, Knob 1156	
A5, B5	56	07A56648F01	Frame, Knob	
B6	58	07B56646F01	Frame, Knob 1154	
B6	59	07C56647F01	Frame, Knob 1155	
D4	63	※	Ass'y, Tone Control PCB	
D4	64	※	Ass'y, Function SW PCB	

L-205


Index	Symbol No.	Stock No.	Description	Remarks
D5	65	※	Ass'y,VR Control PCB	
D4	66	※	Ass'y,HD Phone PCB	
D4	67	※	Ass'y,Balance Control PCB	
B3,B4	101	03S44205G02	Screw,T-Tite M3x6	
B5,C5	102	03C40014G04	Screw,MCH M3x6	
E2	103	03C42723U02	Screw,CUP M3x8	
G1,H3	104	03S40036U18	Screw,T-Tite M3x8 T.L.	
G2,H2	105	03S40012G41	Screw,Tapping M3x8	
E5	107	03S40018G02	Screw,Tapping M3x8	
B4	108	03S40036U01	Screw,T-Tite M4x8	
A1,A2	109	03S44205G02	Screw,T-Tite M3x6	
E4	110	03C40121T15	Screw,MCH M3x12	
F4	111	03S40012G28	Screw,Tapping M3x8	
H2	112	03S40036U18	Screw,T-Tite M3x8 T.L.	
A5,A6	115	03S40012G55	Screw,Tapping M3x8	
B1,E3	116	03S40036U01	Screw,T-Tite M4x8	
D1,G7	117	03S44205G02	Screw,T-Tite M3x6	
A4,G7	118	03S44205G25	Screw,T-Tite M4x10	
C2	119	03S44205G03	Screw,T-Tite M3x8	AK,AG
F1	120	03S40012G98	Screw,Tapping M3x8 Flat	AK,AG
D4	RV201	18T56663F01	Volume 50KCx2	
C4	RV202	18T56663F01	Volume 50KCx2	
E5	RV401	18T68333F01	Volume 10KBx2	
E5	RV601	18T56666F01	Volume 250KW	
G4	E101	09T57203F01	Plate,Phono 2P	
G4	E102	09T57203F02	Plate,Phono 6P	
G4	E103	09T57203F02	Plate,Phono 6P	
F4	E104	09T51101F01	Terminal,SP	
C4	E105	09T55174F01	Jack Mic	
E5	S101-103	40T56653F01	Switch,Push SUN 33	
E5	S104-110	40T56652F01	Switch,Push SUN 53	
D4	S301	40T56664F01	Switch,Rotary SRZ	
B2	T1	25T60748F01	Trans Power	SK,SD
		25T67304F01	Trans Power	AK,AG
		25T67305F01	Trans Power	UP
A1	F1	65T42077U16	Fuse Semko T-1A	
		65T52486F09	Fuse MF61NM 3-125	UP
D5	L305	65T66752F01	Lamp,Pilot	
E3,F3	Q111a,b	48T47682F02	Transistor 2SC1845 FA	
E4,F5	Q112a,b	48T57130F03	Transistor 2SC3180 O,R	
F4	Q113a,b	48T57129F03	Transistor 2SA1263 O,R	
C4	C1	08T57437F09	Capacitor (Ac) 0.01uF	

# PCB


## Pre Main Amp PCB

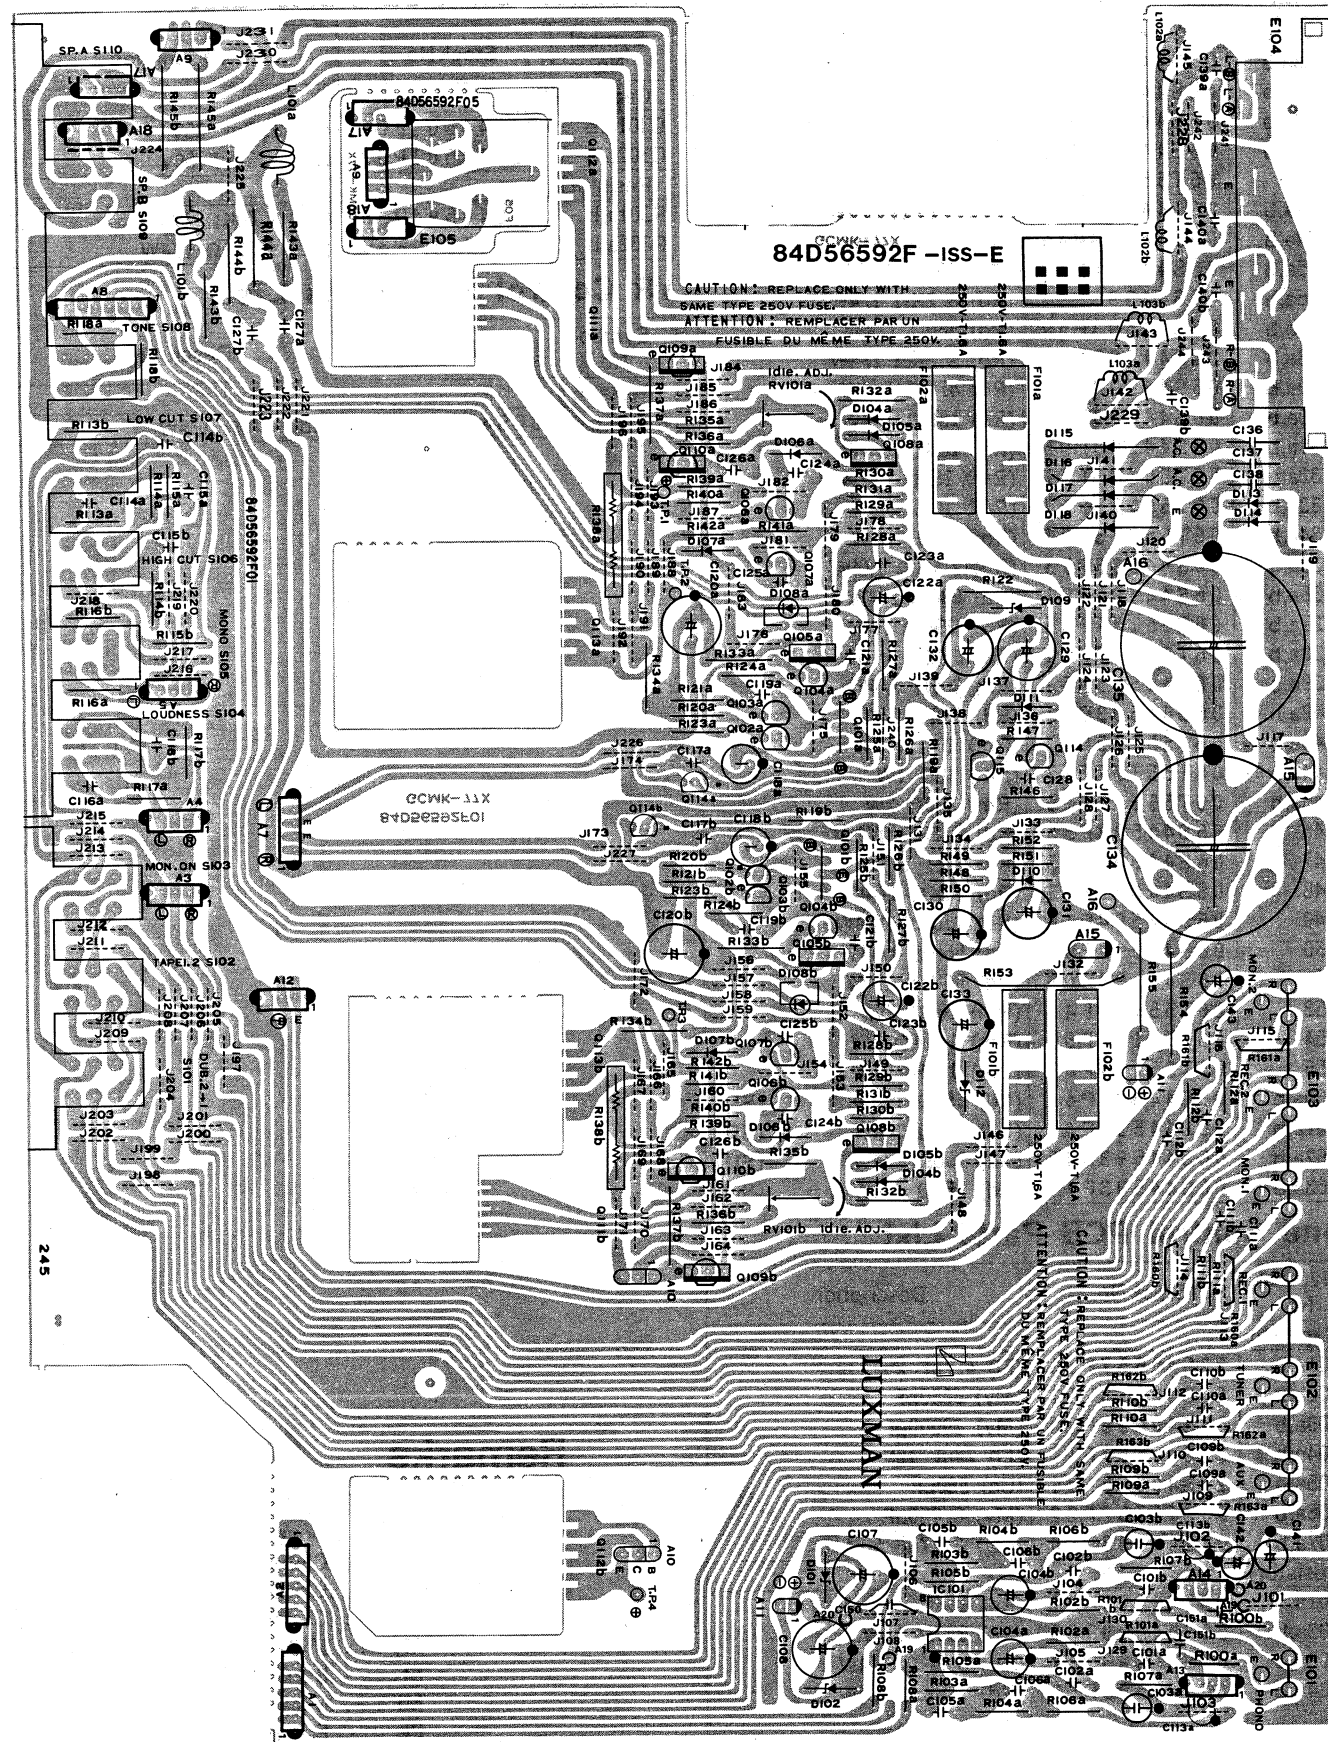


## Tone Control PCB

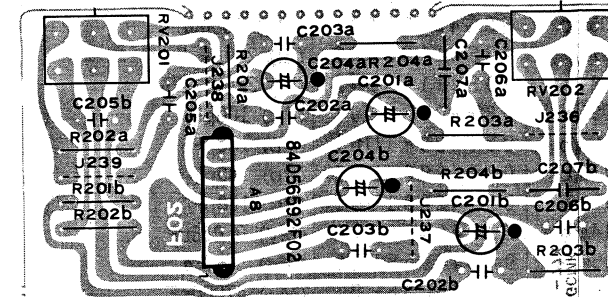


## Function SW PCB

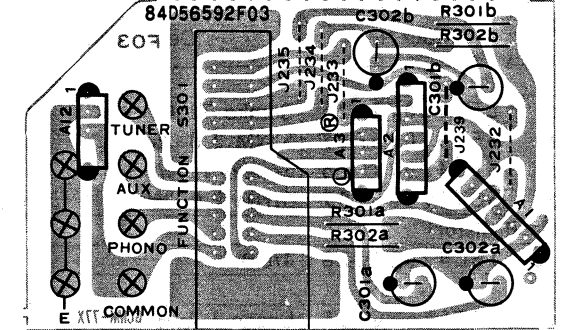

## VR Control PCB

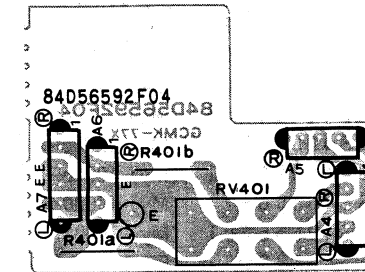

## AV Input Terminal PCB

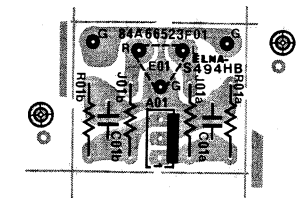

## Destination's Parts List

Symbol No.	Description	SK 220V Europe	SD 220V W. Germany	AK 220V Europe Other's	AG 240V Australia England	UP 120V Canada
9	Plug, SW P-2120	None Use	None Use	09T51830F01	09T51830F01	None Use
10	Socket, SW M-1615	None Use	None Use	09T51831F01	09T51831F01	None Use
11	Inlet, 2P	None Use	None Use	09T67078F01	09T67078F01	None Use
13	Outlet, AC	None Use	None Use	None Use	None Use	09T57066F01
16	Holder, Fuse	09T51074F01	09T51074F01	09T51074F01	09T51074F01	09T51074F01
27	Cover, Rear	15D56636F19	15D56636F19	15D56636F25	15D56636F25	15D56636F27
28	AC Cord	28T43182P02	28T43182P02	30T67077F01	30T67359F01	28T55335P02
29	Support, Cord	43B41625J02	43B41625J02	None Use	None Use	43B41625J02
38	Knob, Rotary A	36A66510F01	36A66510F01	36A66510F01	36A66510F01	36A66510F02
39	Knob, Rotary B	36B66511F01	36B66511F01	36B66511F01	36B66511F01	36B66511F03
40	Knob, Rotary C	36B66512F01	36B66512F01	36B66512F01	36B66512F01	36B66512F03
119	Screw	None Use	None Use	03S44205G03	03S44205G03	None Use
120	Screw	None Use	None Use	03S40012G98	03S40012G98	None Use
T001	Trans, Power	25T60748F01	25T60748F01	25T67304F01	25T67304F01	25T67305F01
F001	Fuse	65T42077U16	65T42077U16	65T42077U16	65T42077U16	65T52486F09
F101a, b	Fuse	65T42077U25	65T42077U25	65T42077U25	65T42077U25	65T57086F07
F102a, b	Fuse	65T42077U25	65T42077U25	65T42077U25	65T42077U25	65T57086F07
L102a, b	Choke Coil	None Use	None Use	None Use	None Use	None Use
L103a, b	Choke Coil	None Use	None Use	None Use	None Use	None Use
C101a, b	Capacitor	08T42081U01	08T42081U13	08T42081U01	08T42081U01	08T42081U01
C102a, b	Capacitor	None Use	08S40805F11	None Use	None Use	None Use
C109a, b	Capacitor	None Use	08T42081U01	None Use	None Use	None Use
C110a, b	Capacitor	None Use	08T42081U01	None Use	None Use	None Use
C111a, b	Capacitor	None Use	08T42081U01	None Use	None Use	None Use
C112a, b	Capacitor	None Use	08T42081U01	None Use	None Use	None Use
C136	Capacitor	None Use	08S44505P61	None Use	None Use	None Use
C137	Capacitor	None Use	08S44505P61	None Use	None Use	None Use
C138	Capacitor	None Use	08S44505P61	None Use	None Use	None Use
C139a, b	Capacitor	None Use	08S40656F13	None Use	None Use	None Use
C140a, b	Capacitor	None Use	08S40656F13	None Use	None Use	None Use
R101a, b	Resistor	None Use	06S44593P45	None Use	None Use	None Use
R160a, b	Resistor	None Use	06S44593P45	None Use	None Use	None Use
R161a, b	Resistor	None Use	06S44503P45	None Use	None Use	None Use
R162a, b	Resistor	None Use	06S44593P45	None Use	None Use	None Use
R163a, b	Resistor	None Use	06S44593P45	None Use	None Use	None Use

**Pre Main Amp PCB Parts List**

Table with columns: Symbol No., Stock No., Description. Includes sections for (Fuse), (Variable Resistor), (Coil), (IC), (Transistor & FET), (Diode & Zener & LED), and (Capacitor).

Table with columns: Symbol No., Stock No., Description. Continuation of PCB parts list with various electronic components.

**Function SW PCB Parts List**

Table with columns: Symbol No., Stock No., Description. Lists parts for the Function SW PCB.

**VR Control PCB Parts List**

Table with columns: Symbol No., Stock No., Description. Lists parts for the VR Control PCB.

Table with columns: Symbol No., Stock No., Description. Lists a wide range of electronic components.

**Tone Control PCB Parts List**

Table with columns: Symbol No., Stock No., Description. Lists parts for the Tone Control PCB.


**Remarks**

Resistor : Rd . . . Carbon
Rf . . . Frame Proof
Rc . . . Cement
Capacitor : El. . . . Electrolytic
Ce . . . Ceramic
My . . . Mylar
St. . . . Styrol
Mi . . . Mica
Pp . . . Polypropylene




## IC Handling Guide


NJM204-3D-D  
IC101  
(Stock No. 51T52153F01)

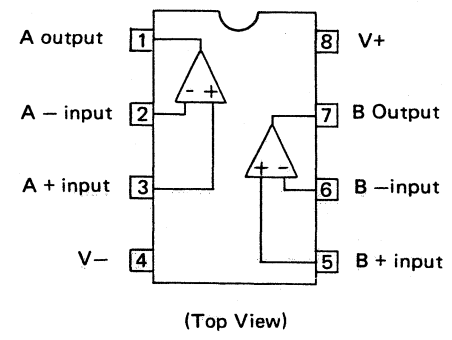

TR, 2SA979G  
Q101a,b  
(Stock No. 48T53430F01)

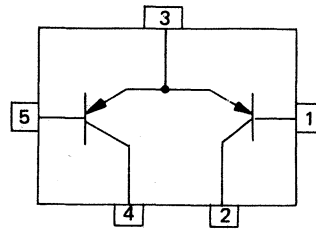


# Schematic Diagram

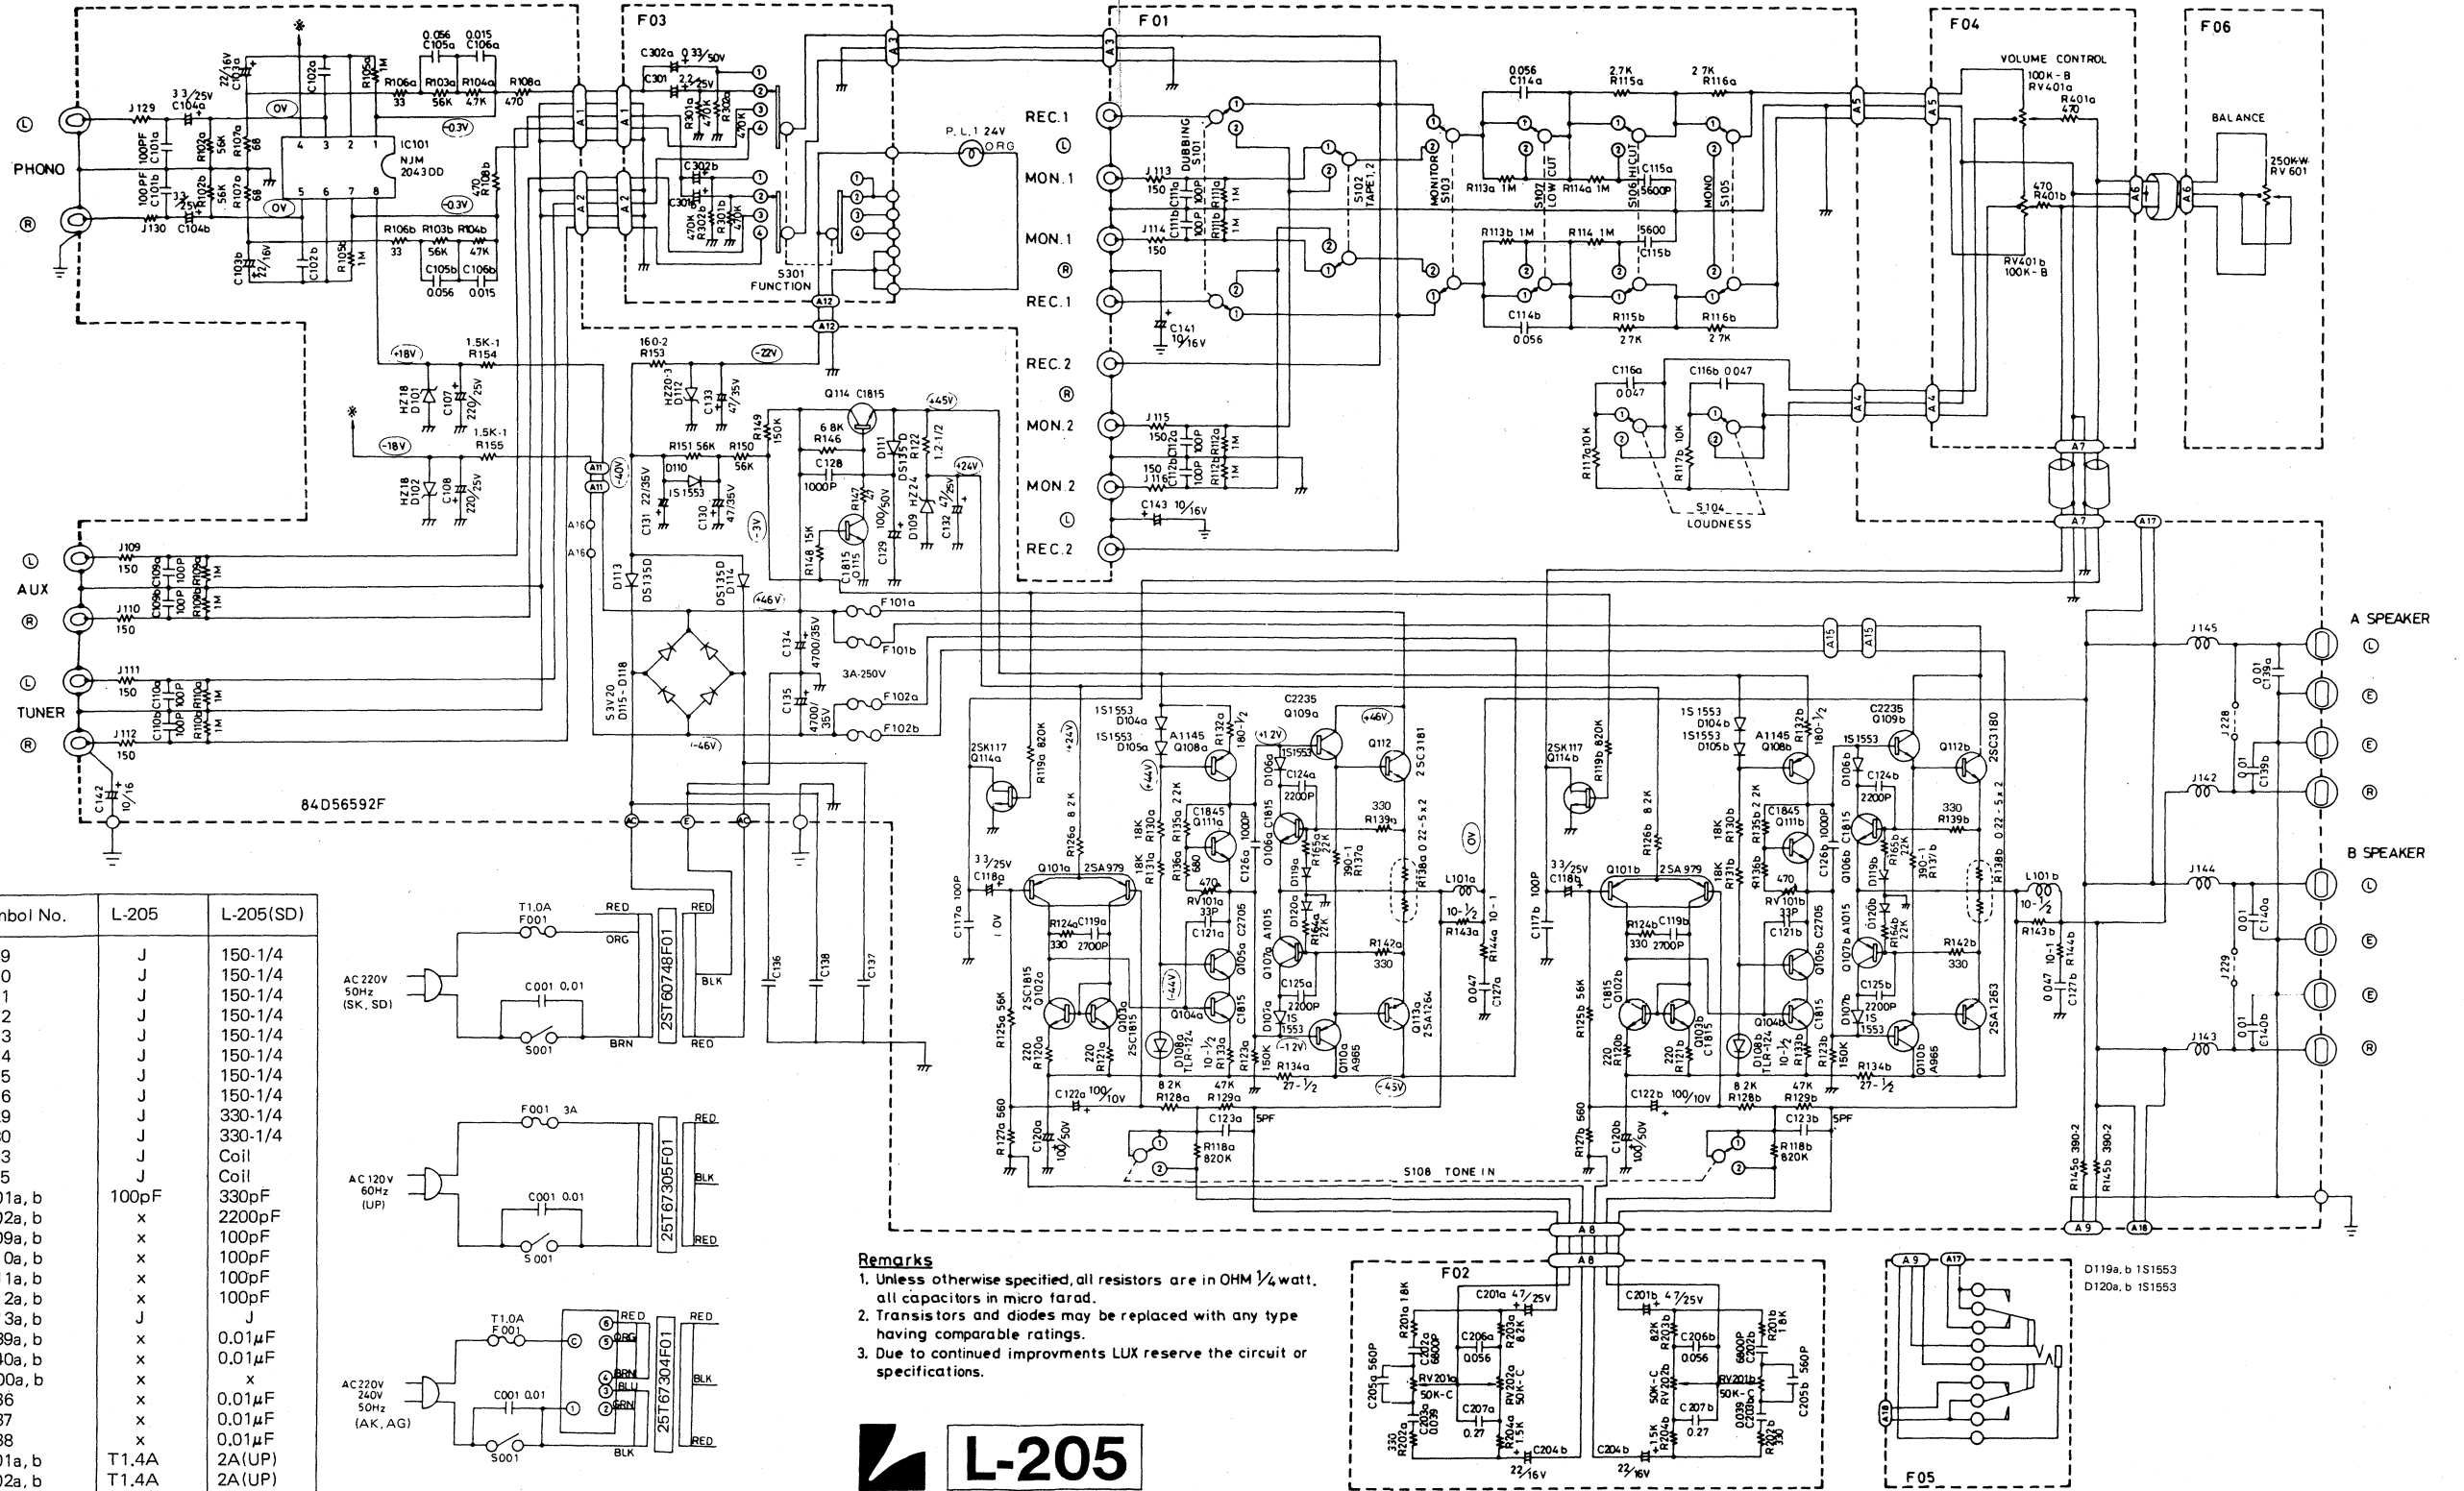

Symbol No.	L-205	L-205(SD)
J109	J	150-1/4
J110	J	150-1/4
J111	J	150-1/4
J112	J	150-1/4
J113	J	150-1/4
J114	J	150-1/4
J115	J	150-1/4
J116	J	150-1/4
J129	J	330-1/4
J130	J	330-1/4
J143	J	Coil
J145	J	Coil
C101a, b	100pF	330pF
C102a, b	x	2200pF
C109a, b	x	100pF
C110a, b	x	100pF
C111a, b	x	100pF
C112a, b	x	100pF
C113a, b	J	J
C139a, b	x	0.01μF
C140a, b	x	0.01μF
R100a, b	x	x
C136	x	0.01μF
C137	x	0.01μF
C138	x	0.01μF
F101a, b	T1.4A	2A(UP)
F102a, b	T1.4A	2A(UP)

### Remarks

 1. Unless otherwise specified, all resistors are in OHM 1/4 watt, all capacitors in micro farad.
2. Transistors and diodes may be replaced with any type having comparable ratings.
3. Due to continued improvements LUX reserve the circuit or specifications.



# Specifications

Power Output:		
8 ohms, 1KHz		40Wx2
Distortion:		0.02%
Input Sensitivity/Impedance:		
Phono MM		1.8mV/50K ohms
Tuner, Monitor		160mV/40K ohms
CD/Aux		160mV/40K ohms
S/N ratio:		
Phono MM (IHF-A weighted, 5mV, Input short)		90dB
Tuner, Monitor (IHF-A weighted)		107dB
CD/Aux		107dB
Residual Noise:		0.5mV
Filter:		
Low cut		70Hz(-6dB/oct)
Phono Subsonic		15Hz(-6dB/oct)
Phono MM Overload:		130mV
Frequency Response:		
Phono MM		20Hz~20KHz ( $\pm 0.5$ dB)
Tuner, Monitor		10Hz~100KHz (+0, -1.5dB)
CD/Aux		10Hz~100KHz (+0, -1.5dB)
Tone Control:		
Treble		$\pm 8$ dB at 10KHz
Bass		$\pm 8$ dB at 100Hz
Loudness (Volume: -3dB)		+8dB at 100Hz
Dimensions:		453(W)x317(D)x111(H) mm (17.8"x12.5"x4.4")
Weight:		
Net		5.4 Kgs
Gross		6.6 Kgs
Power Consumption:		120V 2A (CSA rated)

Specifications and appearance design subject to change without notice.