




CLASS 1  
LASER PRODUCT

MVD4540

# SERVICE MANUAL

---

DVD VIDEO PLAYER & VHS VIDEO CASSETTE RECORDER

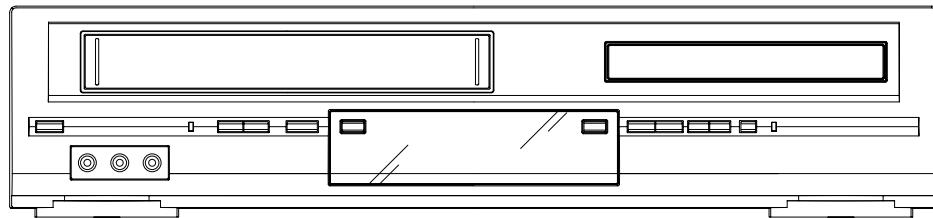


ORIGINAL  
MFR'S VERSION A

## IMPORTANT WARNING

### CAUTION:

DVD PLAYER IS A CLASS 1 LASER PRODUCT. HOWEVER THIS PLAYER USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED.

THE FOLLOWING CAUTION LABEL IS LOCATED ON THE REAR PANEL OF THE PLAYER.

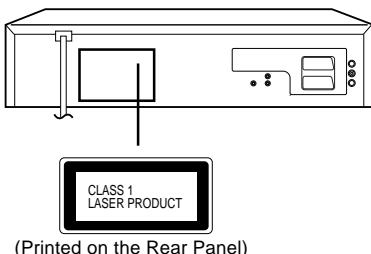

WHEN THIS PLAYER IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS PLAYER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a mark, the designated parts must be used.

### 3. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 4. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## — TAPE REMOVAL METHOD AT NO POWER SUPPLY —

1. Remove the Top Cabinet, Front Cabinet and DVD Block and the Fig. 1 below can be seen.  
**(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Remove one screw of the Loading Motor from the insert hole for screw driver and remove the Loading Motor.
3. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape.  
**(Refer to Fig. 2)**
4. Rotate the Clutch Ass'y either of the directions to wind the Video Tape in the Cassette Case.
5. Repeat the above step 3~4. Then take out the Video Cassette from the Deck Chassis. Be careful not to scratch on the tape.

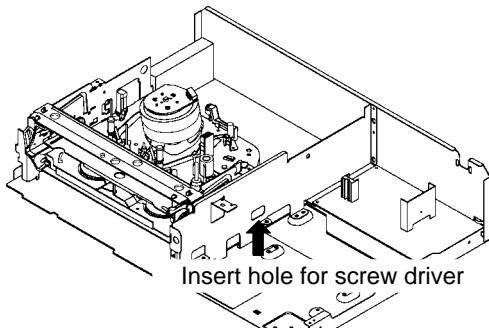


Fig. 1

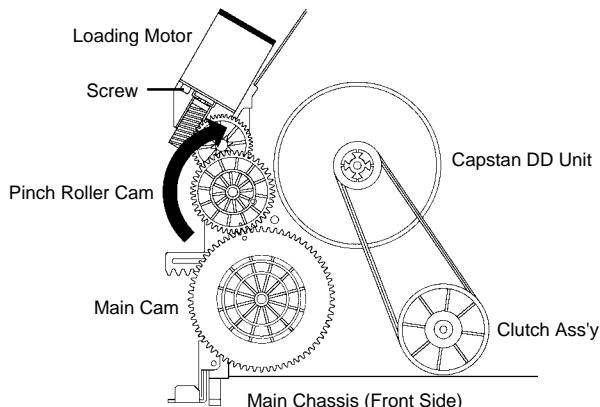


Fig. 2

## — DISC REMOVAL METHOD AT NO POWER SUPPLY —

1. Remove the Top Cabinet and Front Cabinet. **(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Rotate the gear of Deck CD section in the direction of the arrow by hand, remove the disc from Deck CD. **(Refer to Fig. 3)**

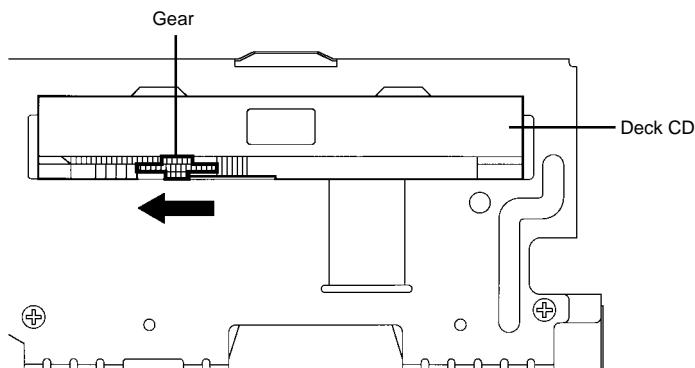


Fig. 3

## PARENTAL CONTROL - RATING LEVEL 4-DIGIT SECURITY CODE CANCELLATION

If the stored 4-digit security code in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Connect the set to TV Monitor.
2. Turn on the power, and set to the DVD stop mode.
3. Press the SET UP button to display the DVD menu.
4. Press the SET +/- button to select the "Operation" menu.
5. Press the CH UP/DOWN button to select the Parental Lock, then press the ENTER button.
6. Press the CH UP/DOWN button to select the ON or OFF, then press the ENTER button.
7. Press the STOP button four times on the remote control, then press the ENTER button.  
The 4-digit security code is cleared.
8. Press the SET UP button to disappear the DVD menu.

## TABLE OF CONTENTS

<b>IMPORTANT WARNING .....</b>	A1-1
<b>SERVICING NOTICES ON CHECKING .....</b>	A1-1
<b>HOW TO ORDER PARTS .....</b>	A1-1
<b>TAPE REMOVAL METHOD AT NO POWER SUPPLY .....</b>	A1-2
<b>DISC REMOVAL METHOD AT NO POWER SUPPLY .....</b>	A1-2
<b>PARENTAL CONTROL-RATING LEVEL .....</b>	A1-2
<b>TABLE OF CONTENTS .....</b>	A2-1
<b>GENERAL SPECIFICATIONS .....</b>	A3-1~A3-5
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS .....	B1-1, B1-2
2. REMOVAL OF VCR DECK PARTS .....	B2-1~B2-6
3. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....	B3-1, B3-2
<b>KEY TO ABBREVIATIONS .....</b>	C1-1, C1-2
<b>SERVICE MODE LIST .....</b>	C2-1
<b>PREVENTIVE CHECKS AND SERVICE INTERVALS .....</b>	C3-1, C3-2
<b>WHEN REPLACING EEPROM (MEMORY) IC .....</b>	C4-1
<b>SERVICING FIXTURES AND TOOLS .....</b>	D1-1
<b>PREPARATION FOR SERVICING .....</b>	D1-1
<b>MECHANICAL ADJUSTMENTS .....</b>	D2-1~D2-4
<b>ELECTRICAL ADJUSTMENTS .....</b>	D3-1, D3-2
<b>BLOCK DIAGRAMS</b>	
DVD .....	E-1, E-2
Y/C/AUDIO/CCD/HEAD AMP .....	E-3, E-4
SYSTEM CONTROL .....	E-5, E-6
REGULATOR .....	E-7, E-8
DISPLAY/OPERATION .....	E-9, E-10
HI-FI/DEMODULATOR .....	E-11, E-12
TUNER/JACK .....	E-13, E-14
DVD/HDD IN/OUT .....	E-15, E-16
POWER .....	E-17, E-18
<b>PRINTED CIRCUIT BOARDS</b>	
DVD MT .....	F-1, F-2
VCR MT .....	F-3~F-6
POWER/OPERATION .....	F-7, F-8
<b>SCHEMATIC DIAGRAMS</b>	
READ CHANNEL .....	G-1, G-2
DSP .....	G-3, G-4
MPEG .....	G-5, G-6
MEMORY .....	G-7, G-8
AUDIO/VIDEO .....	G-9, G-10
SYSCON1 .....	G-11, G-12
Y/C/AUDIO/CCD/HEAD AMP .....	G-13, G-14
VCR SYSCON .....	G-15, G-16
TUNER/JACK .....	G-17, G-18
REGULATOR .....	G-19, G-20
DISPLAY .....	G-21, G-22
HI-FI/DEMODULATOR .....	G-23, G-24
DVD/HDD IN/OUT .....	G-25, G-26
POWER .....	G-27, G-28
OPERATION .....	G-29, G-30
<b>INTERCONNECTION DIAGRAM .....</b>	G-31, G-32
<b>WAVEFORMS .....</b>	
<b>MECHANICAL EXPLODED VIEW .....</b>	I1-1
<b>CHASSIS EXPLODED VIEWS .....</b>	I2-1, I2-2
<b>MECHANICAL REPLACEMENT PARTS LIST .....</b>	J1-1
<b>CHASSIS REPLACEMENT PARTS LIST .....</b>	J2-1
<b>ELECTRICAL REPLACEMENT PARTS LIST .....</b>	J3-1~J3-3

# GENERAL SPECIFICATIONS

<b>G-1</b>	<b>Outline of the product</b>		DVD VIDEO PLAYER & VHS Player / Recorder																																														
G-2	<b>DVD System</b> <table> <tr> <td>Color System</td> <td>NTSC</td> </tr> <tr> <td>Disc</td> <td>DVD, CD-DA, CD-R/RW</td> </tr> <tr> <td>Disc Diameter</td> <td>120 mm , 80 mm</td> </tr> <tr> <td>Deck</td> <td>Disc Loading System Motor</td> </tr> <tr> <td>Pick up</td> <td>Front Disc Loding 3 Motors</td> </tr> <tr> <td>Playback time (Max)</td> <td>1-Lens 2-Beams System</td> </tr> <tr> <td></td> <td>135min (4.7GB) 245min (8.5GB)</td> </tr> <tr> <td></td> <td>CD VIDEO CD</td> </tr> <tr> <td>Search speed</td> <td>74min --min</td> </tr> <tr> <td></td> <td>Fwd 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD)</td> </tr> <tr> <td></td> <td>Actual 2-70 times (DVD) 4-12times (CD)</td> </tr> <tr> <td></td> <td>Rev 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD)</td> </tr> <tr> <td></td> <td>Actual 2-70 times (DVD) 4-16times (CD)</td> </tr> <tr> <td>Slow speed</td> <td>Fwd 1/8-1/2 times 1/7-1/2 times (DVD)</td> </tr> <tr> <td></td> <td>Actual Rev --</td> </tr> <tr> <td></td> <td>Actual --</td> </tr> </table>		Color System	NTSC	Disc	DVD, CD-DA, CD-R/RW	Disc Diameter	120 mm , 80 mm	Deck	Disc Loading System Motor	Pick up	Front Disc Loding 3 Motors	Playback time (Max)	1-Lens 2-Beams System		135min (4.7GB) 245min (8.5GB)		CD VIDEO CD	Search speed	74min --min		Fwd 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD)		Actual 2-70 times (DVD) 4-12times (CD)		Rev 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD)		Actual 2-70 times (DVD) 4-16times (CD)	Slow speed	Fwd 1/8-1/2 times 1/7-1/2 times (DVD)		Actual Rev --		Actual --															
Color System	NTSC																																																
Disc	DVD, CD-DA, CD-R/RW																																																
Disc Diameter	120 mm , 80 mm																																																
Deck	Disc Loading System Motor																																																
Pick up	Front Disc Loding 3 Motors																																																
Playback time (Max)	1-Lens 2-Beams System																																																
	135min (4.7GB) 245min (8.5GB)																																																
	CD VIDEO CD																																																
Search speed	74min --min																																																
	Fwd 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD)																																																
	Actual 2-70 times (DVD) 4-12times (CD)																																																
	Rev 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD)																																																
	Actual 2-70 times (DVD) 4-16times (CD)																																																
Slow speed	Fwd 1/8-1/2 times 1/7-1/2 times (DVD)																																																
	Actual Rev --																																																
	Actual --																																																
G-3	<b>VCR System</b> <table> <tr> <td>System</td> <td>VHS Player / Recorder</td> </tr> <tr> <td>Video System</td> <td>NTSC</td> </tr> <tr> <td>Hi-Fi STEREO</td> <td>Yes</td> </tr> <tr> <td>NTSC PB(PAL60Hz)</td> <td>No</td> </tr> <tr> <td>Deck</td> <td>OVD-7 Front 3</td> </tr> <tr> <td>Heads</td> <td>DECK Loading System Motor</td> </tr> <tr> <td></td> <td>4Head</td> </tr> <tr> <td></td> <td>FM Audio Head</td> </tr> <tr> <td></td> <td>2Head</td> </tr> <tr> <td></td> <td>Audio /Control</td> </tr> <tr> <td></td> <td>Mono/Yes</td> </tr> <tr> <td></td> <td>Erase(Full Track Erase)</td> </tr> <tr> <td></td> <td>Yes</td> </tr> <tr> <td>Tape Speed</td> <td>Rec PAL NTSC</td> </tr> <tr> <td></td> <td>- SP/SLP</td> </tr> <tr> <td>Play</td> <td>PAL NTSC</td> </tr> <tr> <td></td> <td>- SP/LP/SLP</td> </tr> <tr> <td>Fast Forward / Rewind Time (Approx.) at 25oC</td> <td>FF:1'48"/REW:1'48"</td> </tr> <tr> <td></td> <td>with Cassette T-120</td> </tr> <tr> <td>Forward/Reverse</td> <td>NTSC or PAL-M</td> </tr> <tr> <td>Picture Search</td> <td>PAL or SECAM</td> </tr> <tr> <td>Frame Advance</td> <td>SP/LP/SLP = 3x,5x / 7x,9x / 9x,15x</td> </tr> <tr> <td>Slow Speed</td> <td>-</td> </tr> </table>		System	VHS Player / Recorder	Video System	NTSC	Hi-Fi STEREO	Yes	NTSC PB(PAL60Hz)	No	Deck	OVD-7 Front 3	Heads	DECK Loading System Motor		4Head		FM Audio Head		2Head		Audio /Control		Mono/Yes		Erase(Full Track Erase)		Yes	Tape Speed	Rec PAL NTSC		- SP/SLP	Play	PAL NTSC		- SP/LP/SLP	Fast Forward / Rewind Time (Approx.) at 25oC	FF:1'48"/REW:1'48"		with Cassette T-120	Forward/Reverse	NTSC or PAL-M	Picture Search	PAL or SECAM	Frame Advance	SP/LP/SLP = 3x,5x / 7x,9x / 9x,15x	Slow Speed	-	
System	VHS Player / Recorder																																																
Video System	NTSC																																																
Hi-Fi STEREO	Yes																																																
NTSC PB(PAL60Hz)	No																																																
Deck	OVD-7 Front 3																																																
Heads	DECK Loading System Motor																																																
	4Head																																																
	FM Audio Head																																																
	2Head																																																
	Audio /Control																																																
	Mono/Yes																																																
	Erase(Full Track Erase)																																																
	Yes																																																
Tape Speed	Rec PAL NTSC																																																
	- SP/SLP																																																
Play	PAL NTSC																																																
	- SP/LP/SLP																																																
Fast Forward / Rewind Time (Approx.) at 25oC	FF:1'48"/REW:1'48"																																																
	with Cassette T-120																																																
Forward/Reverse	NTSC or PAL-M																																																
Picture Search	PAL or SECAM																																																
Frame Advance	SP/LP/SLP = 3x,5x / 7x,9x / 9x,15x																																																
Slow Speed	-																																																
G-4	<b>Tuning System</b> <table> <tr> <td>Broadcasting System</td> <td>US System M</td> </tr> <tr> <td>Tuner and Receive CH</td> <td>1Tuner</td> </tr> <tr> <td>System</td> <td>US(w/CATV)</td> </tr> <tr> <td>Destination</td> <td>F-Synth</td> </tr> <tr> <td>Tuning System</td> <td>VHF/UHF 75 OHM</td> </tr> <tr> <td>Input Impedance</td> <td>2-69,4A,A-5~A-1,A-I, J~ W, W+1-W+84</td> </tr> <tr> <td>CH Coverage</td> <td></td> </tr> <tr> <td>Intermediate Frequency</td> <td>45.75 MHz 41.25 MHz 4.50 MHz</td> </tr> <tr> <td>Picture(FP) Sound(FS) FP-FS</td> <td></td> </tr> <tr> <td>Preset CH</td> <td>-</td> </tr> <tr> <td>RF Converter Output</td> <td>Yes</td> </tr> <tr> <td>Channel</td> <td>3 or 4 ch</td> </tr> <tr> <td>Level/Impedance</td> <td>66 dBu / 75 Ohm</td> </tr> <tr> <td>Sound Selector</td> <td>No</td> </tr> <tr> <td>Stereo/Dual TV Sound</td> <td>US-ST</td> </tr> <tr> <td>Tuner Sound Muting</td> <td>Yes</td> </tr> </table>		Broadcasting System	US System M	Tuner and Receive CH	1Tuner	System	US(w/CATV)	Destination	F-Synth	Tuning System	VHF/UHF 75 OHM	Input Impedance	2-69,4A,A-5~A-1,A-I, J~ W, W+1-W+84	CH Coverage		Intermediate Frequency	45.75 MHz 41.25 MHz 4.50 MHz	Picture(FP) Sound(FS) FP-FS		Preset CH	-	RF Converter Output	Yes	Channel	3 or 4 ch	Level/Impedance	66 dBu / 75 Ohm	Sound Selector	No	Stereo/Dual TV Sound	US-ST	Tuner Sound Muting	Yes															
Broadcasting System	US System M																																																
Tuner and Receive CH	1Tuner																																																
System	US(w/CATV)																																																
Destination	F-Synth																																																
Tuning System	VHF/UHF 75 OHM																																																
Input Impedance	2-69,4A,A-5~A-1,A-I, J~ W, W+1-W+84																																																
CH Coverage																																																	
Intermediate Frequency	45.75 MHz 41.25 MHz 4.50 MHz																																																
Picture(FP) Sound(FS) FP-FS																																																	
Preset CH	-																																																
RF Converter Output	Yes																																																
Channel	3 or 4 ch																																																
Level/Impedance	66 dBu / 75 Ohm																																																
Sound Selector	No																																																
Stereo/Dual TV Sound	US-ST																																																
Tuner Sound Muting	Yes																																																
G-5	<b>Power</b> <table> <tr> <td>Power Source</td> <td>AC DC</td> </tr> <tr> <td></td> <td>120V 60Hz -</td> </tr> <tr> <td>Power Consumption</td> <td>20 W at 120V 60Hz</td> </tr> <tr> <td>Stand by Per Year</td> <td>3 W at 120V 60Hz</td> </tr> <tr> <td></td> <td>-- W</td> </tr> <tr> <td>Protector</td> <td>Power Fuse</td> </tr> <tr> <td></td> <td>Yes</td> </tr> </table>		Power Source	AC DC		120V 60Hz -	Power Consumption	20 W at 120V 60Hz	Stand by Per Year	3 W at 120V 60Hz		-- W	Protector	Power Fuse		Yes																																	
Power Source	AC DC																																																
	120V 60Hz -																																																
Power Consumption	20 W at 120V 60Hz																																																
Stand by Per Year	3 W at 120V 60Hz																																																
	-- W																																																
Protector	Power Fuse																																																
	Yes																																																
G-6	<b>Regulation</b> <table> <tr> <td>Safety</td> <td>UL</td> </tr> <tr> <td>Radiation</td> <td>FCC</td> </tr> <tr> <td>Laser</td> <td>DHHS</td> </tr> </table>		Safety	UL	Radiation	FCC	Laser	DHHS																																									
Safety	UL																																																
Radiation	FCC																																																
Laser	DHHS																																																
G-7	<b>Temperature</b> <table> <tr> <td>Operation</td> <td>5°C - 40°C</td> </tr> <tr> <td>Storage</td> <td>-20°C - 60°C</td> </tr> </table>		Operation	5°C - 40°C	Storage	-20°C - 60°C																																											
Operation	5°C - 40°C																																																
Storage	-20°C - 60°C																																																
G-8	<b>Operating Humidity</b> <table> <tr> <td></td> <td>Less than 80% RH</td> </tr> </table>			Less than 80% RH																																													
	Less than 80% RH																																																
G-9	<b>Signal</b> <table> <tr> <td>Video Signal</td> <td>Output Level S/N Ratio (Weighted)</td> </tr> <tr> <td></td> <td>1 V p-p/75 ohm (DVD,VCR) 65 dB(DVD) 50 dB(VCR)</td> </tr> <tr> <td>RGB Signal</td> <td>Horizontal Resolution Output Level</td> </tr> <tr> <td></td> <td>500 Lines (DVD) 230 Lines(VCR Mode) -</td> </tr> <tr> <td>Audio Signal</td> <td>Input Level Microphone Input Level Line</td> </tr> <tr> <td>(0dB=0.775Vrms)</td> <td>-8 dBm/ 50k ohm(VCR) -8 dBm/ 1k ohm(DVD,VCR)</td> </tr> <tr> <td></td> <td>Digital Output Level S/N Ratio at (Weighted)</td> </tr> <tr> <td></td> <td>0.5 V p-p / 75 ohm(DVD) 90dB(DVD), 42dB(VCR at SP)</td> </tr> </table>		Video Signal	Output Level S/N Ratio (Weighted)		1 V p-p/75 ohm (DVD,VCR) 65 dB(DVD) 50 dB(VCR)	RGB Signal	Horizontal Resolution Output Level		500 Lines (DVD) 230 Lines(VCR Mode) -	Audio Signal	Input Level Microphone Input Level Line	(0dB=0.775Vrms)	-8 dBm/ 50k ohm(VCR) -8 dBm/ 1k ohm(DVD,VCR)		Digital Output Level S/N Ratio at (Weighted)		0.5 V p-p / 75 ohm(DVD) 90dB(DVD), 42dB(VCR at SP)																															
Video Signal	Output Level S/N Ratio (Weighted)																																																
	1 V p-p/75 ohm (DVD,VCR) 65 dB(DVD) 50 dB(VCR)																																																
RGB Signal	Horizontal Resolution Output Level																																																
	500 Lines (DVD) 230 Lines(VCR Mode) -																																																
Audio Signal	Input Level Microphone Input Level Line																																																
(0dB=0.775Vrms)	-8 dBm/ 50k ohm(VCR) -8 dBm/ 1k ohm(DVD,VCR)																																																
	Digital Output Level S/N Ratio at (Weighted)																																																
	0.5 V p-p / 75 ohm(DVD) 90dB(DVD), 42dB(VCR at SP)																																																

## GENERAL SPECIFICATIONS

		Harmonic Distortion (1KHz) <u>Typical</u>	0.008% (1KHz) (DVD) , 1.5% (1KHz) (VCR)
		Frequency Response : DVD Mode at DVD DVD Mode at VIDEO CD DVD Mode at CD VCR Mode at SP VCR Mode at LP VCR Mode at SLP	4 Hz - 22 KHz - 4 Hz - 20 KHz 100Hz - 10 KHz - 100Hz - 4 KHz
		Hi-Fi Audio Signal	Dynamic Range : More than 90dB Frequency Response 20Hz ~20kHz Wow And Flutter : Less than 0.01 %Wrms Channel Separation : More than 60 dB Harmonic Distortion : Less than 0.01
G-10	On Screen Display (DVD)	Menu	Yes
		Menu Type	Icon
		Picture	Yes
		TV Shape	Yes
		Output Sound	Yes
		Audio Out Select	Yes
		Dynamic Range Control	Yes
		Karaoke Vocal	Yes
		Language	Yes
		On-Screen Language	Yes
		Disc Menu Language	Yes
		Audio Language	Yes
		Subtitle Language	Yes
		Display	Yes
		On-Screen Displays	Yes
		Background	Yes
		Screen Saver	Yes
		Operational	Yes
		Pause/Still	Yes
		Parental Lock	Yes
		Title Stop	Yes
		PBC	No
		Initial Setup	Yes
		On-Screen Language	Yes
		TV Shape	Yes
		Audio Out Select	Yes
		Open	Yes
		Close	Yes
		No disc	Yes
		Reading	Yes
		Play	Yes
		Still/Pause	Yes
		Stop	Yes
		Prohibit Mark	Yes
		Step	Yes
		Skip+	Yes
		Skip-	Yes
		Random	Yes
		Repeat	Yes
		A-B Repeat	Yes
		Slow+	Yes
		Slow-	No
		Search+	Yes
		Search-	Yes
		Resume	Yes
		Title No.	Yes
		Chapter No.	Yes
		Track No.	Yes
		Time	Yes
		Sub Title No.	Yes
		Angle No.	Yes
		Audio No.	Yes
		Zoom	Yes
		Enter	Yes
		Exit	Yes
		Bit Rate	Yes
		Memory	Yes
	On Screen Display(VCR)	Menu	Yes
		Menu Type	Character
		Timer Rec Set	Yes
		Auto Repeat On/Off	Yes
		SAP On/Off	Yes
		Surround On/Off	No
		CH Set-Up	Yes
		TV/CATV	Yes
		Auto CH Memory	Yes
		Add/Delete	Yes
		Guide CH	No
		System Set Up	Yes
		Clock Set	Yes (Calendar 12H)
		Language	Yes

# GENERAL SPECIFICATIONS

	No Noise Back Ground	Yes	
	Auto Clock	Yes	
	Standard Time	Yes	
	Daylight Saving Time	Yes	
	G-CODE(or SHOWVIEW or PLUSCODE)No. Entry	No	
	Stereo, Audio Output,SAP	Yes	
	Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In/Repeat (Symbol Mark)	Yes	
	CH/AV	Yes	
	Clock	Yes	
	Repeat	Yes	
	Pin Code	No	
	Tape Counter	Yes	
	Index	Yes	
	Hotel Lock	No	
	Tape Speed	Yes	
	ATR / Manual Tracking	Yes	
	Hi-Fi	Yes	
G-11	OSD Language	DVD OSD VCR OSD	Eng Fre Spa Eng Fre Spa
G-12	Clock,Timer and Timer Back-up	Calendar Timer Events One Touch Recording OTPB Valid Time Timer Back-up (at Power Off Mode)	1990/1/1 ~ 2081/12/31 8 Program/ 1 Month 5 Hours(30,60,90,120,180,240,300) No 5sec
G-13	Display	DISPLAY  DISPLAY type Clock/Counter,CH,Timer Rec,OTR, Play Rec,FF(Cue),Rew(Rev),Stop,ATR,Eject  VCR DVD CD Clock  AM PM Counter VCR DVD CD Counter Remain Play Stop Rec FF / Cue REW /Review Pause/Still OTR T-Rec Chapter TITLE TRACK Repeat Hi-Fi SP LP SLP CH RF Output CH Eject Tape In	Yes  LED Module (Green, "Rec" & Timer symbol = Red)  No  Yes Yes Yes Yes (12h) Yes No Yes (hour:min) Yes (hour:min) Yes (min:sec)  No Yes No Yes No No Yes No No Yes No No No No No Yes No Yes Yes
G-14	Remote Control	Unit Glow in Dark Remocon Power Source Voltage(D.C) UM size x pcs Total Keys Keys Power DISPLAY/CALL 1 2 3 4 5 6 7 8 9 0 Input Select UP/CH+ DOWN/CH- LEFT/ SET- / TRACKING- RIGHT/ SET+ / TRACKING+ VCR/DVD TV/VCR DVD MENU	RC-ET No 3V UM-4 x 2 pcs 45 Key Yes

# GENERAL SPECIFICATIONS

			TITLE	Yes
			SET UP MENU/VCR MENU	Yes
			SELECT/ENTER	Yes
			CLEAR/CANCEL	Yes
			RETURN	Yes
			PLAY	Yes
			STOP	Yes
			PAUSE/STILL	Yes
			FF(Cue)/SEARCH+	Yes
			REW(Review)/SEARCH-	Yes
			REC/OTR	Yes
			SKIP+ / INDEX+	Yes
			SKIP- / INDEX-	Yes
			AUDIO / AUDIO SELECT	Yes
			ANGLE/COUNTER RESET	Yes
			SUB TITLE/ATR	Yes
			PLAY MODE/SPEED	Yes
			T-REC	Yes
			CLOCK / COUNTER	Yes
			MEMORY/ZERO RETURN	Yes
			ZOOM	Yes
			REPEAT A-B	Yes
			SLOW(Forward)	Yes
			MARKER	No
			OPEN/CLOSE	Yes
			EJECT	Yes
G-15	Features (DVD)		Auto Power Off	No
			Parental Lock	Yes
			Video CD Playback	No
			MP3 Playback	Yes
		Digital Out	Dolby Digital	Yes
			PCM	Yes
			DTS	Yes
			MPEG1,MPEG2	Yes
		Down Mix Out	(Dolby Digital, MPEG1,MPEG2)	Yes
		Self Diagnostic		No
		Spatializer (N-2-2)		No
		Screen Saver		Yes
G-15	Features (VCR)		Auto Head Cleaning	Yes
			Auto Tracking	Yes
			HQ (VHS Standard High Quality)	Yes
			Auto Power On, Auto Play, Auto Rewind, Auto Eject	Yes
			Auto Power Off	No
			Forward/Reverse Picture Search	Yes
			VIDEO PLUS+(SHOWVIEW,G-CODE)	No
			One Touch Playback	No
			Auto CH Memory	Yes
			AREA CODE	No
			Auto Clock Set	Yes
			Index Search	Yes
			SQPB	No
			CATV	Yes
			Energy Star	No
			MTS(SAP)	Yes
			CM Skip(30sec x 6 Times)	No
			Power On Memory	No
			Surround	No
G-16	Accessories	Owner's Manual	Language w/Guarantee Card	English /Spanish No
		Remote Control Unit		Yes
		Guarantee Card		Yes
		Registration Card		No
		Warning Sheet		No
		Service Station List		No
		Important Tag		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery	UM size x pcs	No
				--
		AC Cord		No
		AV Cord	Yes (1.2m)	
		75 Ohm Coaxial Cable	Yes (0.9m)	
		S-Video Cable		No
		21pin cable		No
G-17	Interface	800 No Sticker		No
		Toll Free Insert Sheet		No
		Safety Tip		No
		Switch	Front	Power Play Eject (VCR) Stop Rec/OTR Open/Close (DVD) CH +
				Yes Yes Yes Yes Yes Yes Yes

## GENERAL SPECIFICATIONS


		CH -	Yes
		FF/ Search(>>)	Yes
		Rew/Search(<<)	Yes
		Still/Pause	No
		Shuttle(Search/REV/FWD)	No
		DVD/VCR	Yes
		Main Power SW	No
	Rear	Attenuator	No
		Video/RGB Selector	No
		RF Out(Slide SW)	Yes (3ch/4ch)
		Main Power SW	No
Volume		Phones Volume	No
		Mic Volume	No
		Echo Volume	No
		Rec/OTR	No
Terminals	Front	Video In	RCA x1(Yellow)
		Audio In	RCA x 2(Stereo, White/Red)
	Rear	Video Output	RCA x1(Yellow) S-Video x 1(DVD Signal Only) Component x1 (RCA 3pin,DVD Signal Only)
		Audio Output	RCA x 4(Stereo, White/Red) Coaxial x 1 (Digital Audio,DVD Signal Only)
		Optical Out (Option)	Yes (Digital Audio,DVD Signal Only)
		Video Input (Option)	No
		Audio Input (Option)	No
		RF Input / Output	Yes
		Euro Scart	No
		AC Inlet	No
Indicator	LED	Power	No
		Rec	No
		T-Rec	No
		TV/VCR	No
		DVD	Yes (RED)
		VCR	Yes (RED)
		Surround	No
		Level Meter	No
G-18	Set Size	Approx.	W x D x H (mm)
			430 x 314.5 x 99
G-19	Weight	Net (Approx.)	4.5 kg( 9.9lbs)
		Gross (Approx.)	5.5 kg( 12.1lbs)
G-20	Carton	Master Carton	No
		Content	--- Sets
		Material	--- / ---
		Dimensions W x D x H(mm)	---
		Description of Origin	---
	Gift Box		Yes
		Material	Dbule / White
		W/Color Photo Label	No
		Dimensions W x D x H(mm)	500 x 430 x 180
		Design	As Per BUYER's
	Drop Test	Description of Origin	Yes
			Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
		Height (cm)	80 cm
		Container Stuffing	1,595 Sets/40' container
G-21	Cabinet Material	Cabinet Front	PS 94V2 or More / DE CABROM

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS


### 1-1: TOP CABINET AND FRONT CABINET (Refer to Fig. 1-1)

1. Remove the 5 screws (1).
2. Remove the Top Cabinet in the direction of arrow (A).
3. Disconnect the following connector: (CP651).
4. Unlock the 8 supports (2).
5. Remove the Front Cabinet in the direction of arrow (B).
6. Remove the 3 screws (3).
7. Remove the Operation PCB in the direction of arrow (C).

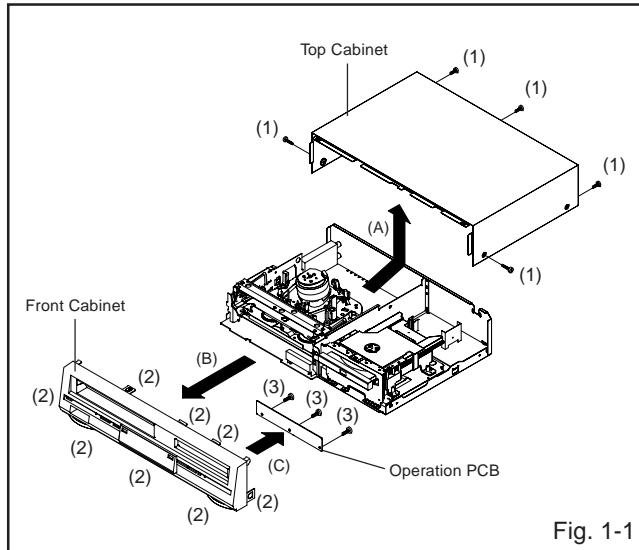


### 1-2: FLAP (Refer to Fig. 1-2)

1. Open Flap to 90° and flex in direction of arrow (A), at the same time slide in direction of arrow (B).
2. Then lift in direction of arrow (C).

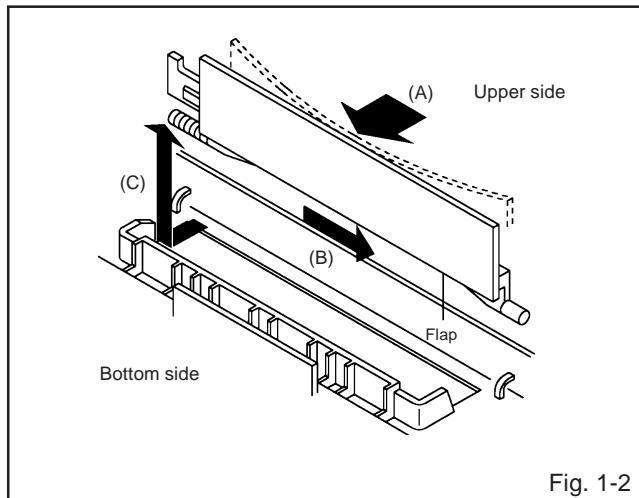


### 1-3: VCR DECK (Refer to Fig. 1-3)

1. Unlock the 2 supports (1) and remove the Top Holder.
2. Remove the 3 screws (2).
3. Disconnect the following connectors: (CP101, CP102, CP103 and CP3001).
4. Remove the AC Head Cover and VCR Deck in the direction of arrow.

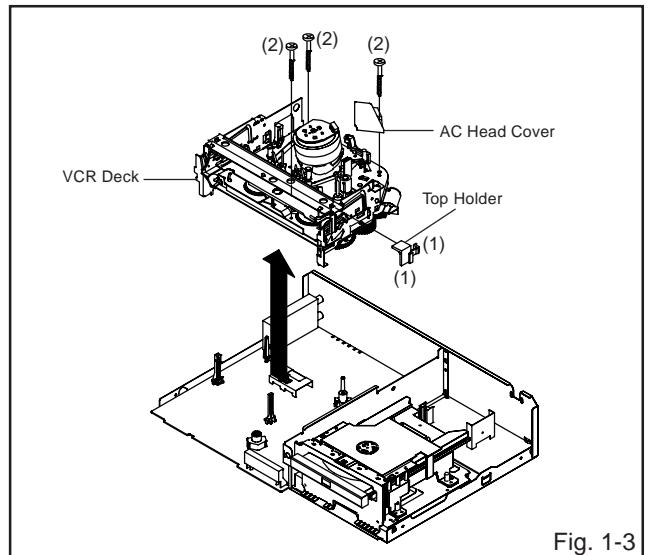

### 1-4: VCR PCB (Refer to Fig. 1-4)


1. Remove the screw (1).
2. Remove the 7 screws (2).
3. Disconnect the following connectors: (CP1701, CP8001 and CP8002).
4. Remove the VCR PCB in the direction of arrow.

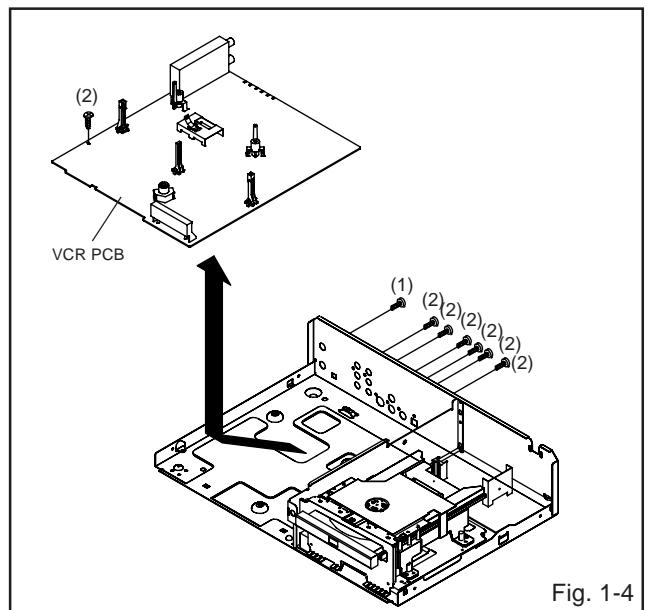

## DISASSEMBLY INSTRUCTIONS

### 1-5: DECK CD AND DVD PCB (Refer to Fig. 1-5)

1. Make the short circuit on the position as shown **Fig. 1-5** using a soldering. If you remove the Deck CD with no soldering, the Laser may be damaged.
2. Disconnect the following connector: (CP503).
3. Remove the 4 screws (1).
4. Remove the Deck Angle in the direction of arrow (A).
5. Remove the 2 screws (2).
6. Remove the Front-DVD Shield in the direction of arrow (B).
7. Remove the 4 screws (3).
8. Disconnect the following connectors: (CP2601, CP2602 and CP2603).
9. Remove the Deck CD in the direction of arrow (C).
10. Remove the 4 screws (4).
11. Remove the DVD PCB in the direction of arrow (D).

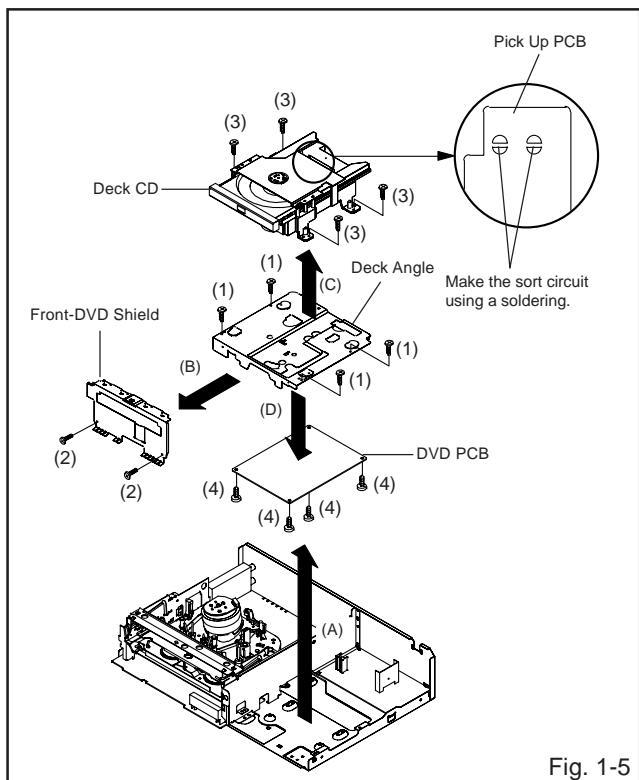


### NOTE

When the installation of the Deck CD, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.

### 1-6: POWER PCB (Refer to Fig. 1-6)

1. Remove the 3 screws (1).
2. Remove the Power PCB in the direction of arrow.

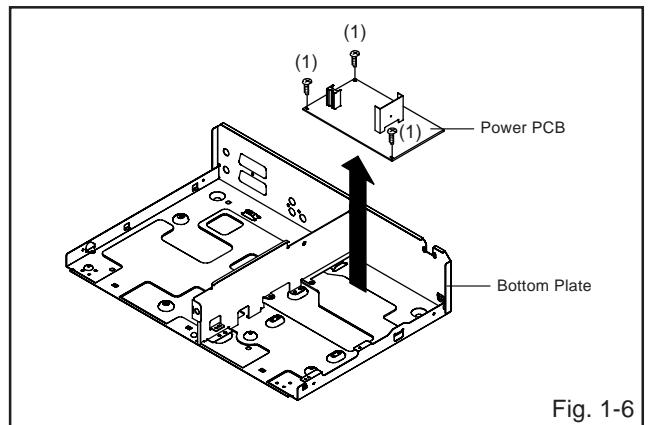

# DISASSEMBLY INSTRUCTIONS


## 2. REMOVAL OF VCR DECK PARTS

### 2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports (1).
2. Slide the 2 supports (2) and remove the Top Bracket.


#### NOTE

1. After the installation of the Top Bracket, bend the support (1) so that the Top Bracket is fixed.

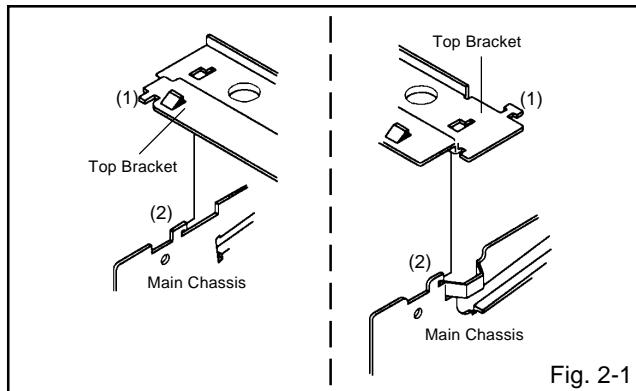


### 2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

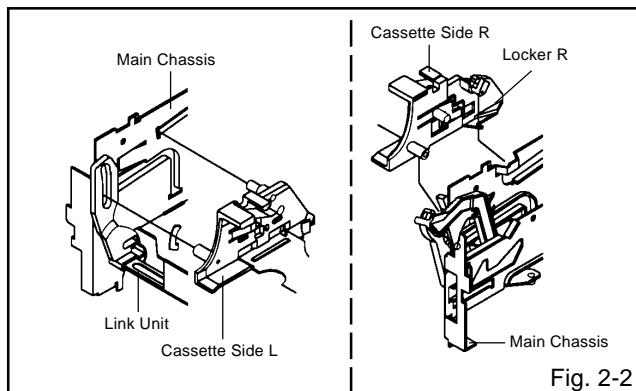


### 2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports (1) and then remove the Cassette Side L/R.
3. Unlock the support (2) and then remove the Locker R.

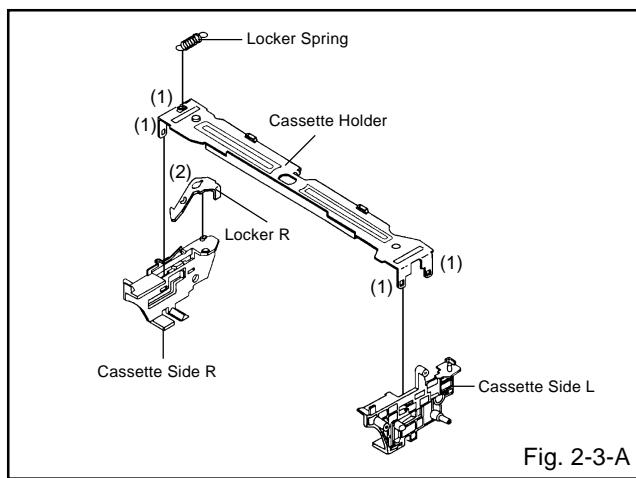


#### NOTE

1. In case of the Locker R installation, check if the two positions of Fig.2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

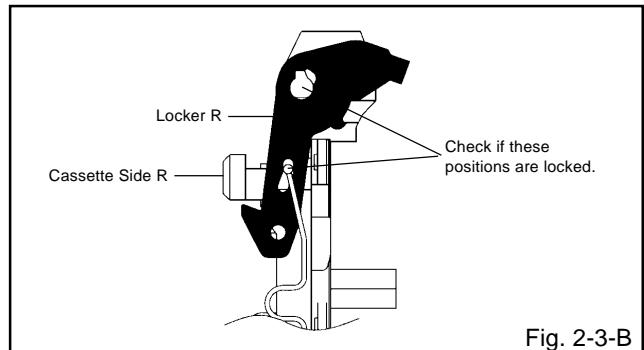


### 2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support (1).
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

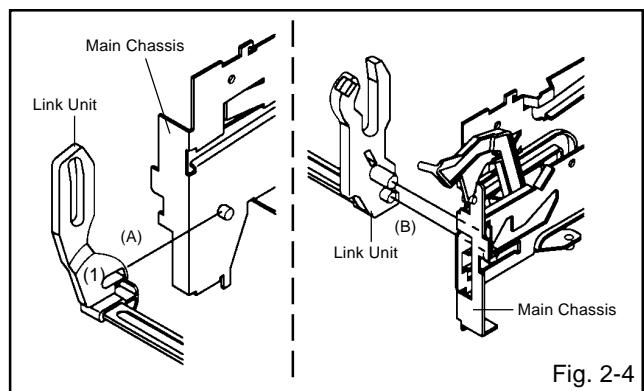

### 2-5: LINK LEVER/FLAP LEVER (Refer to Fig. 2-5)


1. Extend the support (1).
2. Remove the Link Lever.
3. Remove the Flap Lever.

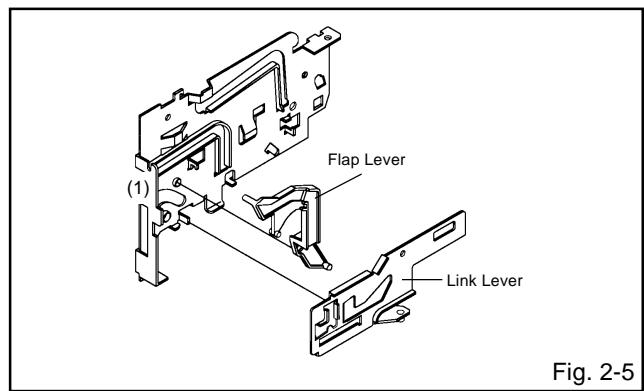

# DISASSEMBLY INSTRUCTIONS



## 2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw (1).
2. Remove the Loading Motor.
3. Remove the Worm.

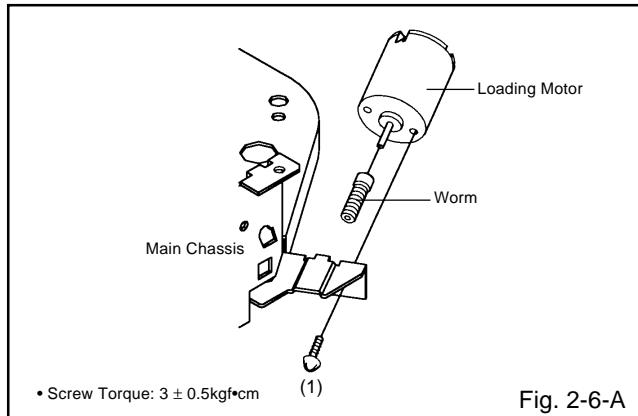



### NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.
2. In case of the Loading Motor installation, hook the wire on the Cassette Opener as shown Fig. 2-6-C.

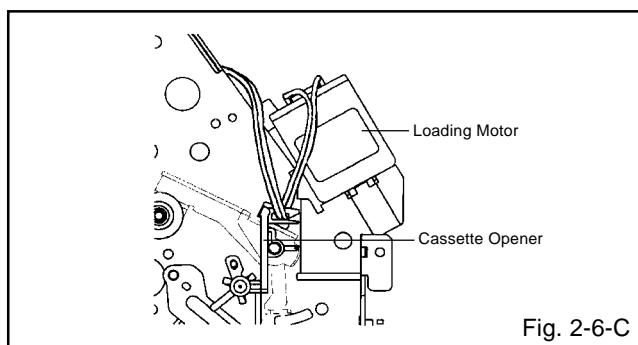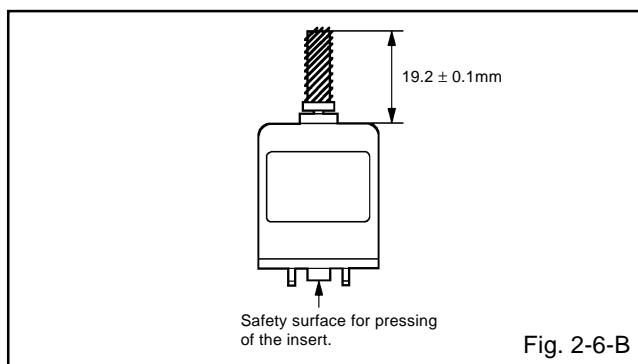




## 2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Ass'y.
2. Remove the Tension Spring.
3. Unlock the 2 supports (1) and remove the Tension Band.
4. Unlock the support (2) and remove the Tension Arm Ass'y.
5. Unlock the support (3) and remove the Tension Connect.
6. Float the hook (4) and turn it clockwise then remove the Tension Holder.

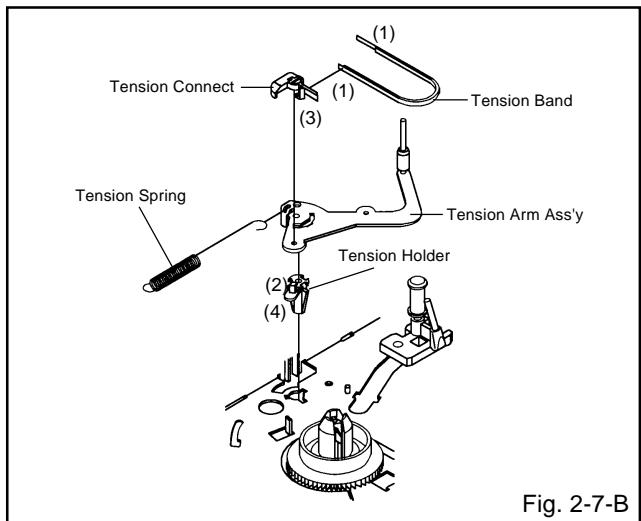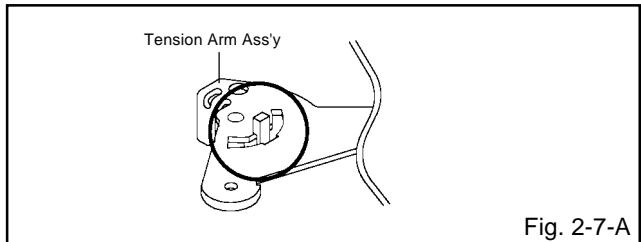

### NOTE


1. In case of the Tension Band installation, note the direction of the installation. (Refer to Fig. 2-7-C)
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

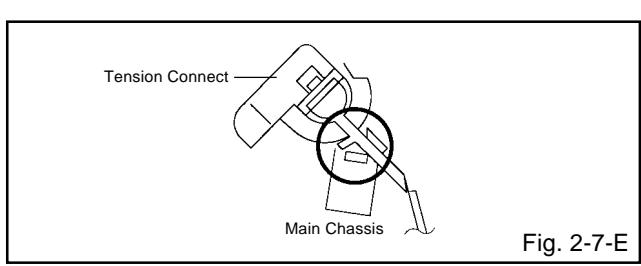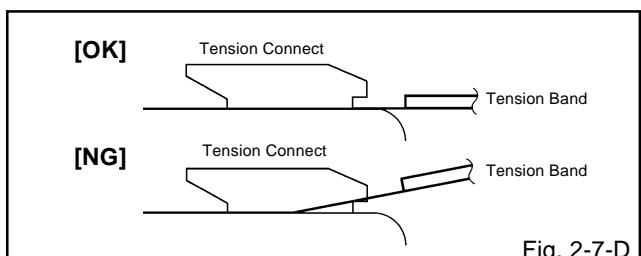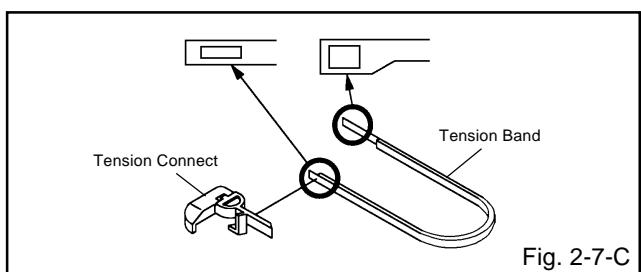

# DISASSEMBLY INSTRUCTIONS


## 2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports (1) and remove the T Brake Band.

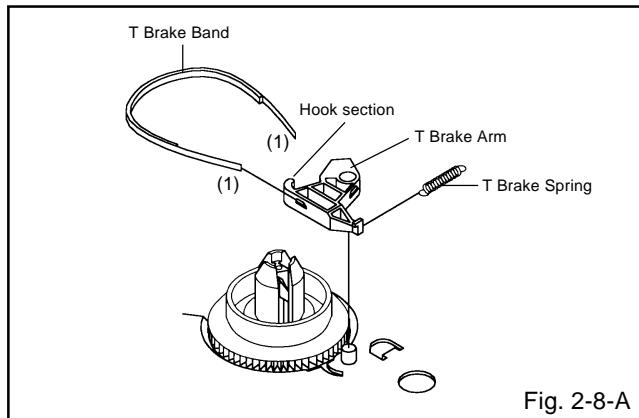

### NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

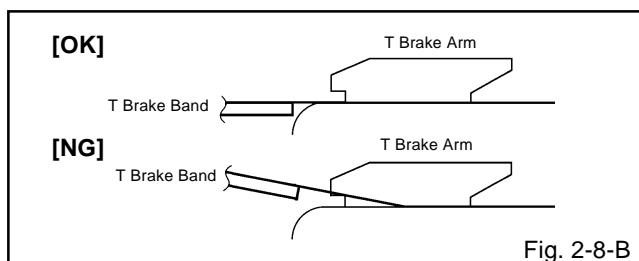


## 2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers (1).
3. Remove the Idler Arm Ass'y and Idler Gear.



### NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) (Refer to Fig. 2-9-A) Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it (FG-84M). (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. (Refer to MECHANICAL ADJUSTMENT)

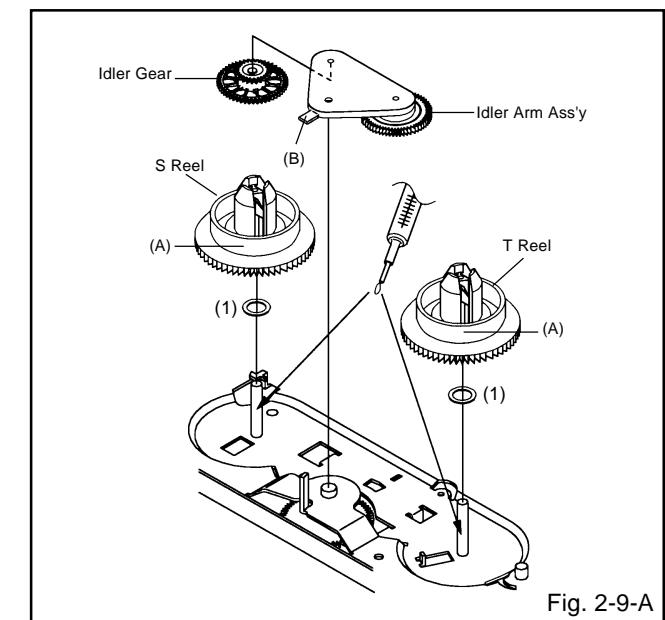

### NOTE


1. In case of the S Reel and T Reel installation, check if the correct parts are installed. (Refer to Fig. 2-9-B)
2. In case of the Idler Arm Ass'y installation, install correctly as Fig. 2-9-C. And also set it so that the section "B" of Fig. 2-9-A is placed under the Main Chassis tab.

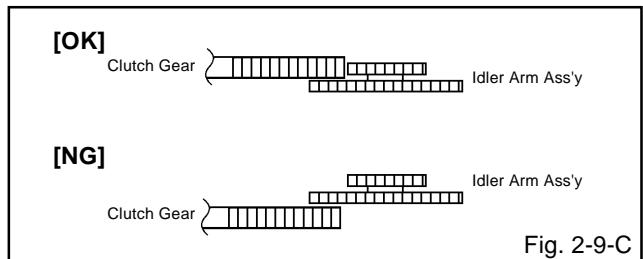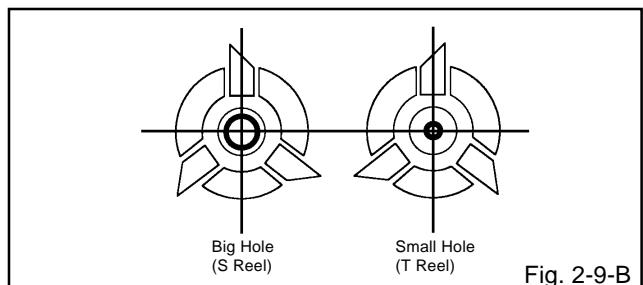

# DISASSEMBLY INSTRUCTIONS


## 2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/ P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support (1) and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Ass'y.

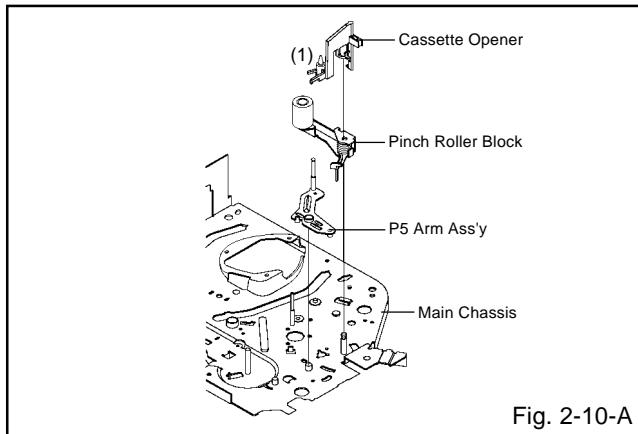

### NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.


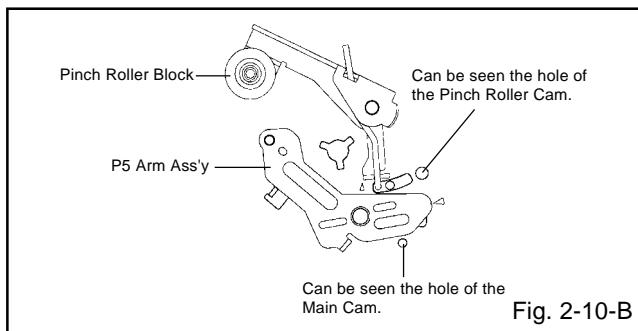


## 2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw (1).
2. Remove the A/C Head Base.
3. Remove the 3 screws (2).
4. Remove the A/C Head and A/C Head Spring.


### NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

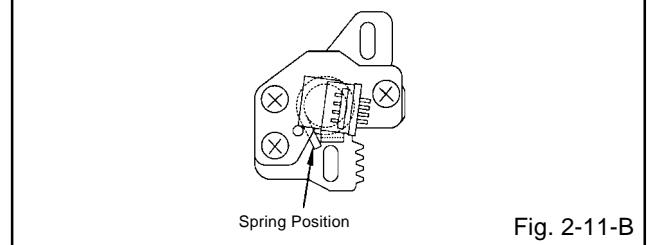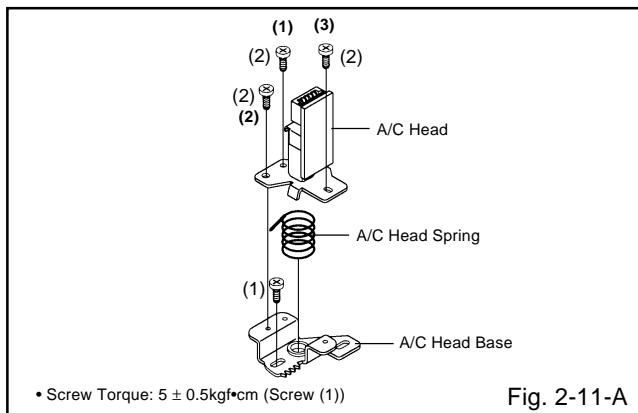

## 2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw (1).
2. Remove the FE Head.

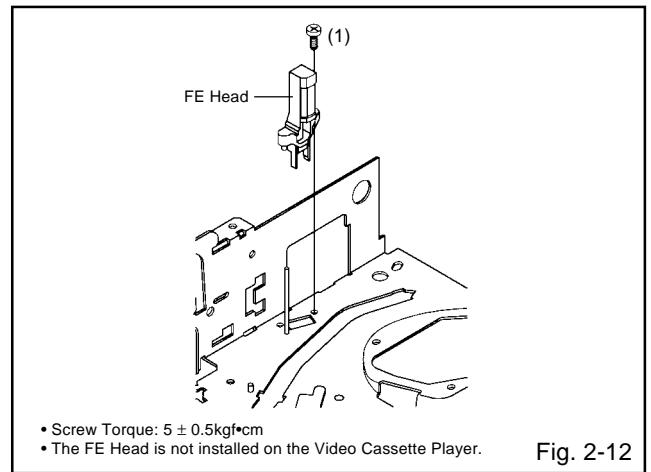


## 2-13: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Unlock the support (1) and remove the AHC Ass'y.
2. Disconnect the following connector: (CD2001)
3. Remove the 3 screws (2).
4. Remove the Cylinder Unit Ass'y.

### NOTE

1. When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

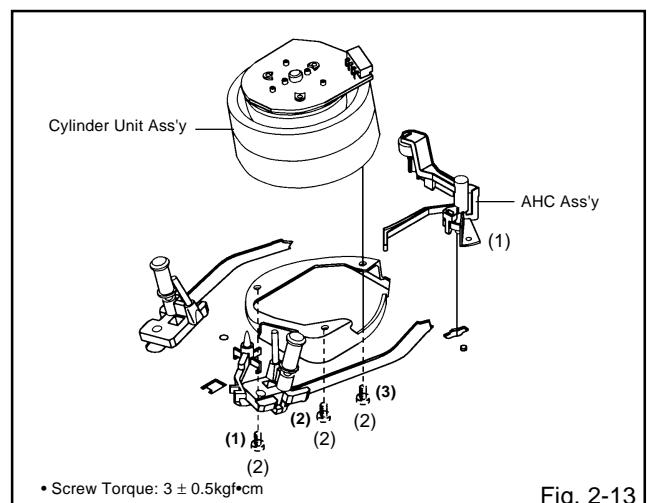

# DISASSEMBLY INSTRUCTIONS

## 2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A)

1. Remove the Capstan Belt.
2. Remove the 3 screws (1).
3. Remove the Capstan DD Unit.

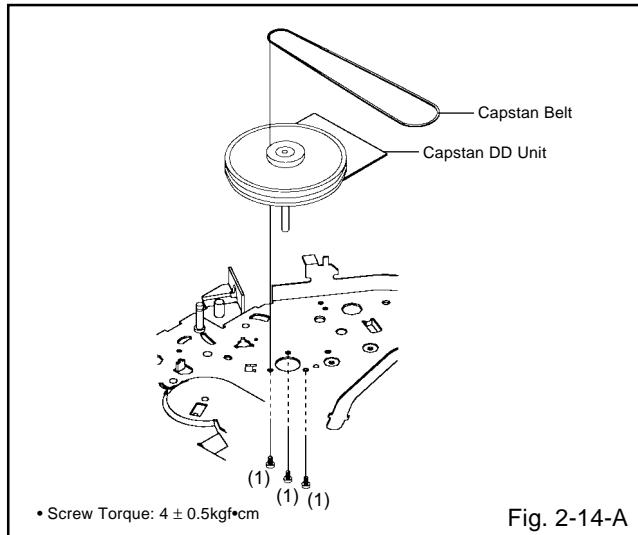


Fig. 2-14-A

### NOTE

1. In case of the Capstan DD Unit installation, apply the silicon bond (TSE3843-W) on the position Fig. 2-14-B correctly. (If no silicon bond applied, abnormal noise will be heard on the deck operation.)

(Refer to Fig. 2-14-B, C)

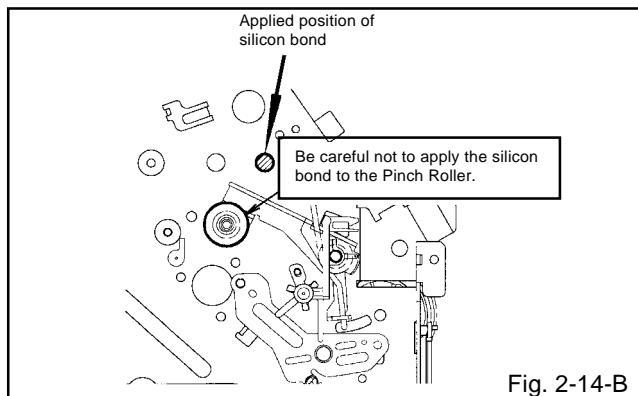


Fig. 2-14-B

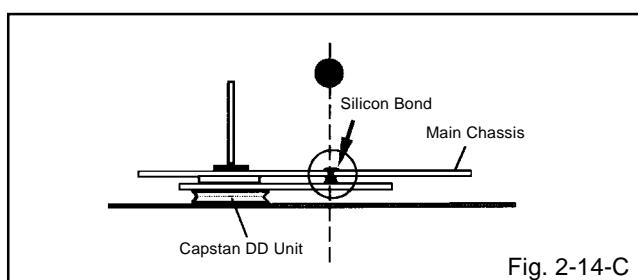


Fig. 2-14-C

## 2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring (1), then remove the Main Cam.
2. Remove the E-Ring (2), then remove the Pinch Roller Cam and Joint Gear.

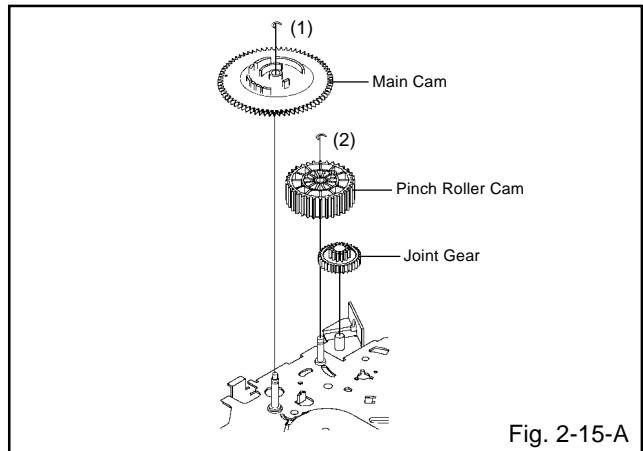


Fig. 2-15-A

### NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. (Refer to Fig. 2-15-B)

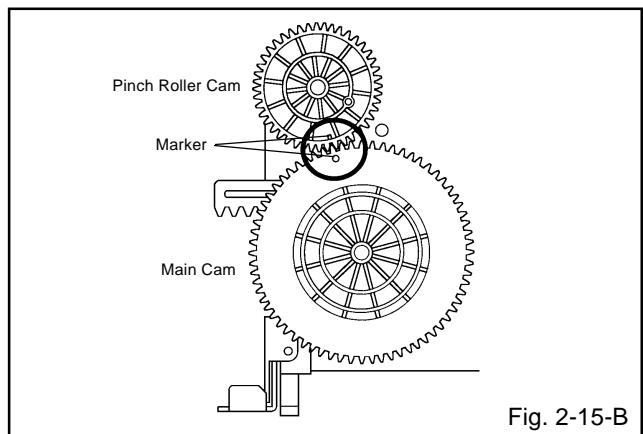


Fig. 2-15-B

## 2-16: LOADING GEAR S/T UNIT (Refer to Fig. 2-16-A)

1. Remove the E-Ring (1) and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Unit and Loading Arm T Unit.


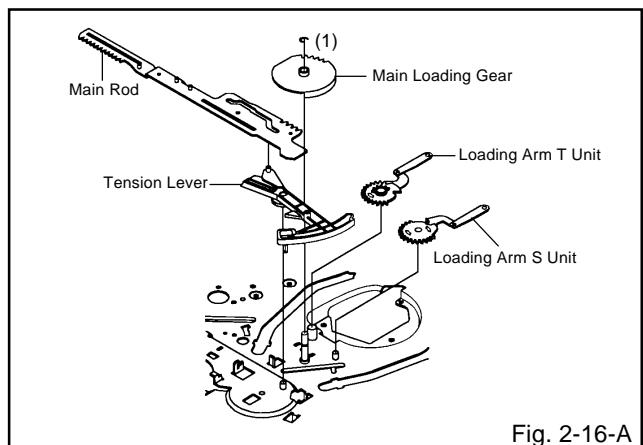


Fig. 2-16-A

## DISASSEMBLY INSTRUCTIONS


### NOTE

- When you install the Loading Arm S Unit, Loading Arm T Unit and Main Loading Gear, align each marker. (Refer to Fig. 2-16-B)

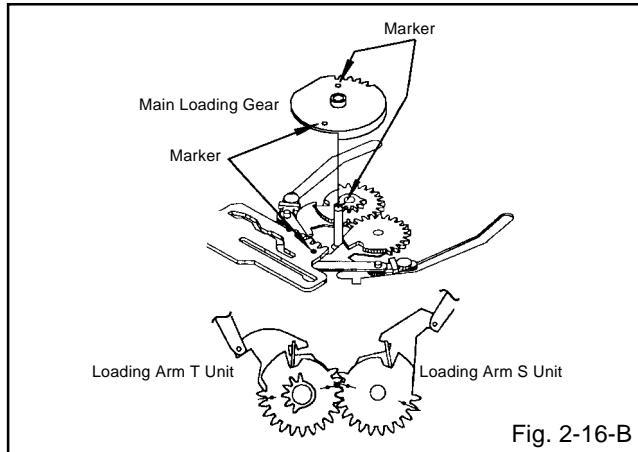


### 2-17: CLUTCH ASS'Y/RING SPRING/CLUTCH LEVER/CLUTCH GEAR (Refer to Fig. 2-17-A)

- Remove the Polyslider Washer (1).
- Remove the Clutch Ass'y and Ring Spring.
- Remove the Clutch Lever.
- Remove the Coupling Gear, Coupling Spring and Clutch Gear.

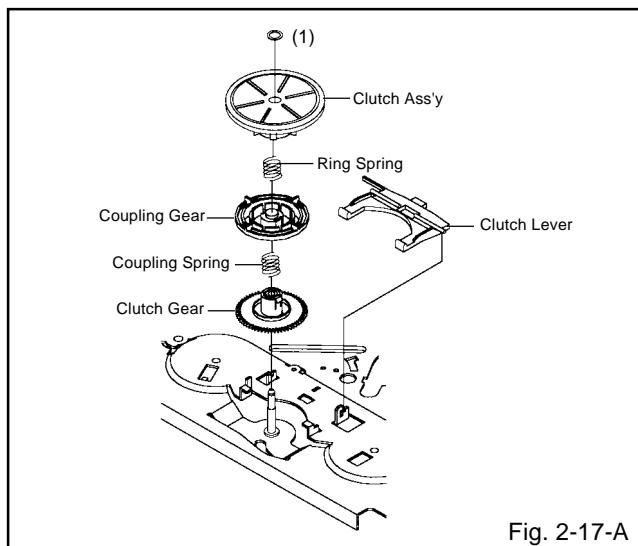


### NOTE

- In case of the Clutch Ass'y installation, install it with inserting the spring of the Clutch Ass'y into the dent of the Coupling Gear. (Refer to Fig. 2-17-B)

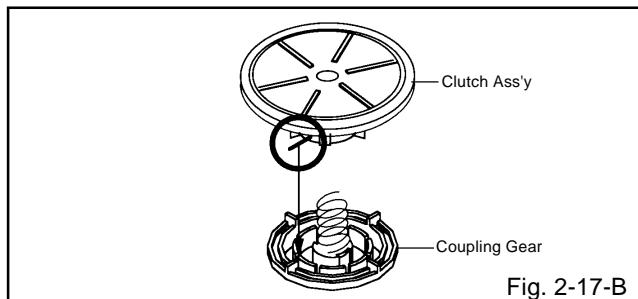



### 2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A)

- Remove the P4 Cap.
- Unlock the support (1) and remove the Cassette Guide Post.
- Remove the Inclined Base S Unit and Inclined Base T Unit.

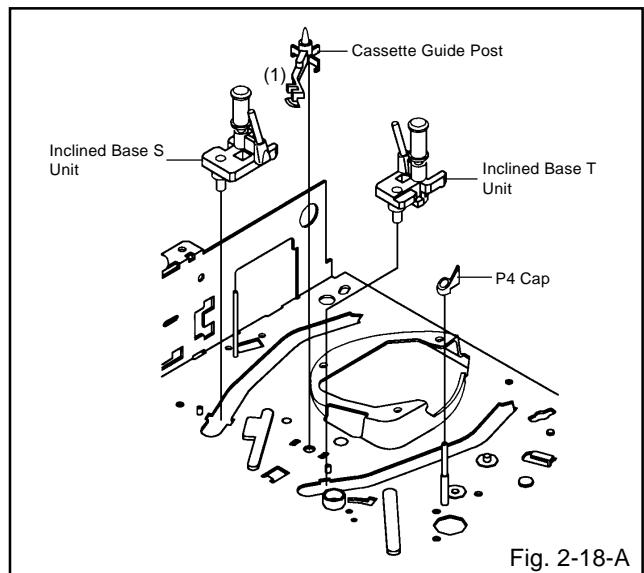

### NOTE

- Do not touch the roller of Guide Roller.
- In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
- In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

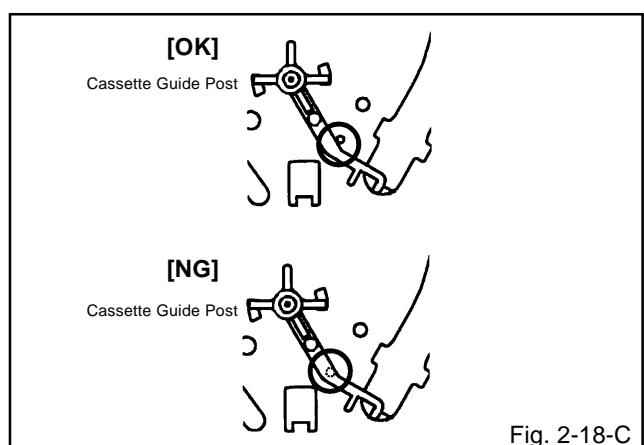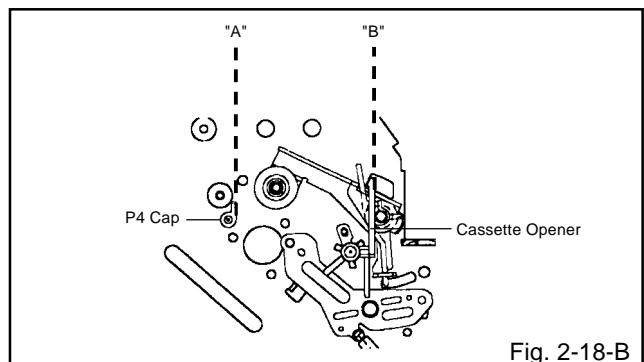

## DISASSEMBLY INSTRUCTIONS


### 3. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

#### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 3-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

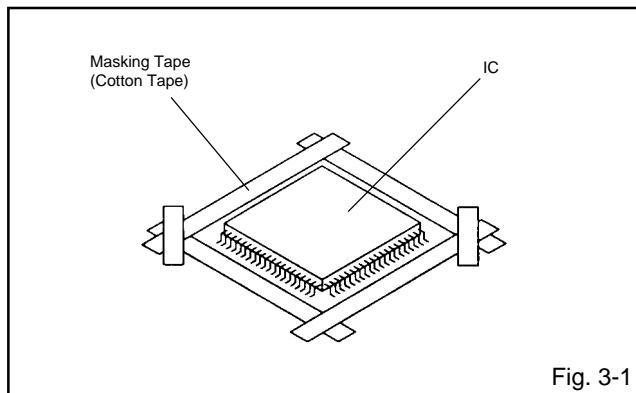

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 3-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

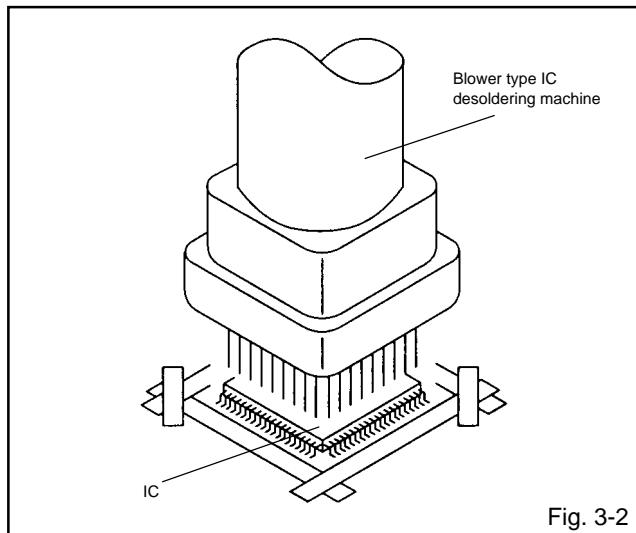

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 3-3.)

#### NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

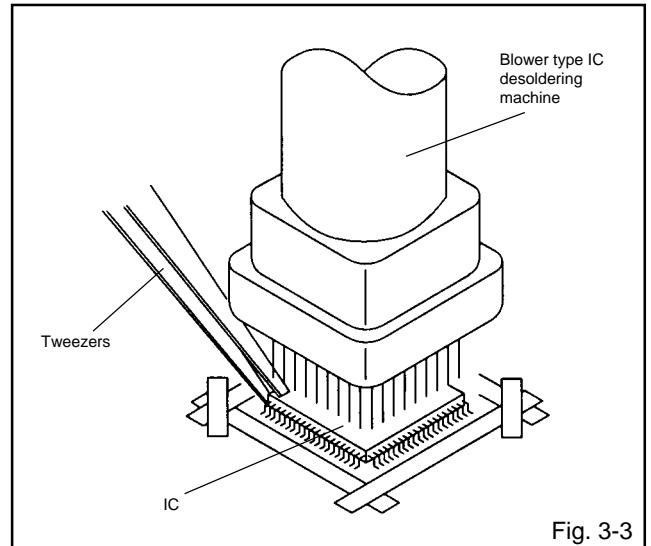

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 3-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

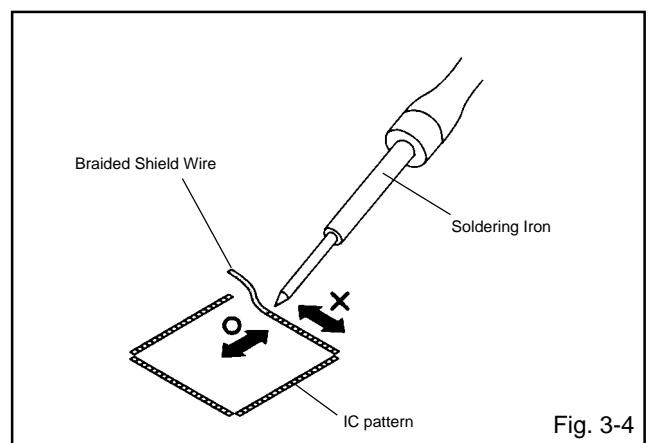


# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 3-5.)

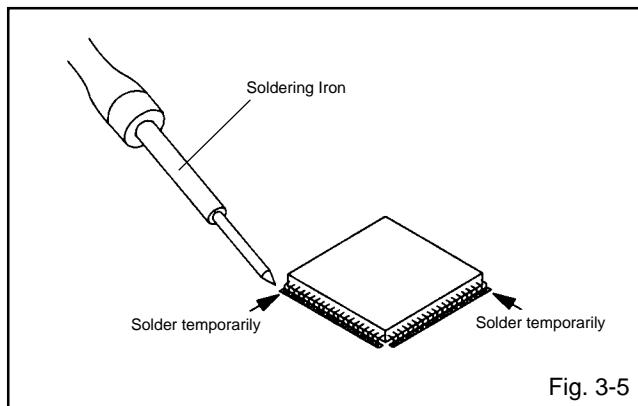


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 3-6.)

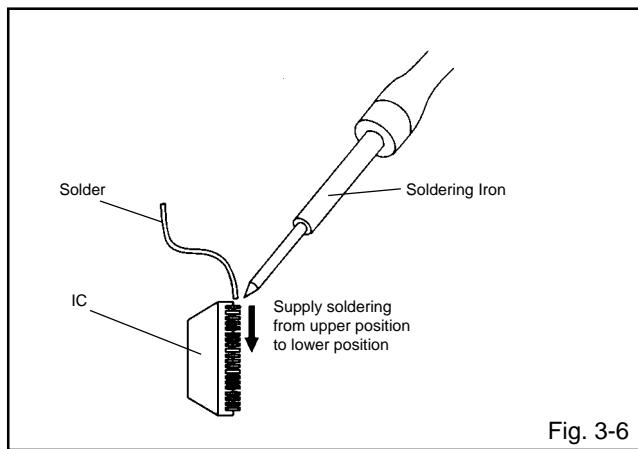

3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 3-7.)

### NOTE

Do not absorb the solder to excess.

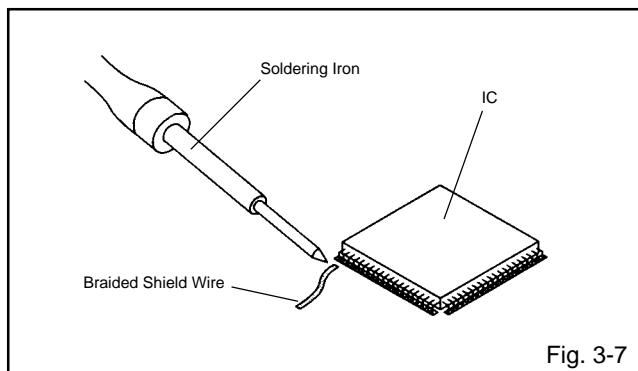

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 3-8.)

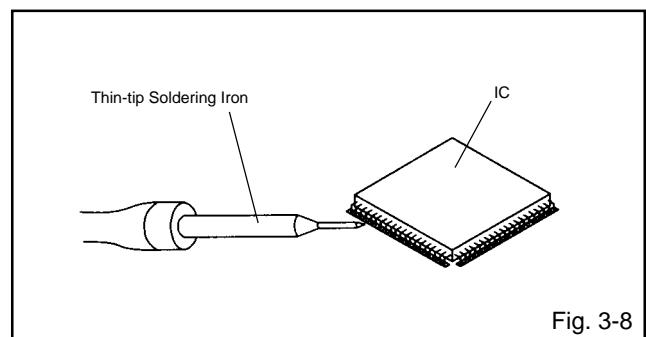


Fig. 3-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

## KEY TO ABBREVIATIONS

<b>A</b>	<b>A/C</b>	: Audio/Control	<b>H.SW</b>	: Head Switch
	<b>ACC</b>	: Automatic Color Control	<b>Hz</b>	: Hertz
	<b>AE</b>	: Audio Erase	<b>I</b>	: Integrated Circuit
	<b>AFC</b>	: Automatic Frequency Control	<b>IF</b>	: Intermediate Frequency
	<b>AFT</b>	: Automatic Fine Tuning	<b>IND</b>	: Indicator
	<b>AFT DET</b>	: Automatic Fine Tuning Detect	<b>INV</b>	: Inverter
	<b>AGC</b>	: Automatic Gain Control	<b>K</b>	: Killer
	<b>AMP</b>	: Amplifier	<b>L</b>	: Left
	<b>ANT</b>	: Antenna	<b>LED</b>	: Light Emitting Diode
	<b>A.PB</b>	: Audio Playback	<b>LIMIT AMP</b>	: Limiter Amplifier
	<b>APC</b>	: Automatic Phase Control	<b>LM, LDM</b>	: Loading Motor
	<b>ASSY</b>	: Assembly	<b>LP</b>	: Long Play
	<b>AT</b>	: All Time	<b>L.P.F</b>	: Low Pass Filter
	<b>AUTO</b>	: Automatic	<b>LUMI.</b>	: Luminance
	<b>A/V</b>	: Audio/Video	<b>M</b>	: Motor
<b>B</b>	<b>BGP</b>	: Burst Gate Pulse	<b>MAX</b>	: Maximum
	<b>BOT</b>	: Beginning of Tape	<b>MINI</b>	: Minimum
	<b>BPF</b>	: Bandpass Filter	<b>MIX</b>	: Mixer, mixing
	<b>BRAKE SOL</b>	: Brake Solenoid	<b>MM</b>	: Monostable Multivibrator
	<b>BUFF</b>	: Buffer	<b>MOD</b>	: Modulator, Modulation
	<b>B/W</b>	: Black and White	<b>MPX</b>	: Multiplexer, Multiplex
<b>C</b>	<b>C</b>	: Capacitance, Collector	<b>MS SW</b>	: Mecha State Switch
	<b>CASE</b>	: Cassette	<b>N</b>	: Non Connection
	<b>CAP</b>	: Capstan	<b>NC</b>	: Noise Reduction
	<b>CARR</b>	: Carrier	<b>NR</b>	: Oscillator
	<b>CH</b>	: Channel	<b>O</b>	: Operation
	<b>CLK</b>	: Clock	<b>OSC</b>	: Playback
	<b>CLOCK (SY-SE)</b>	: Clock (Syscon to Servo)	<b>P</b>	: Playback Control
	<b>COMB</b>	: Combination, Comb Filter	<b>PB</b>	: Playback-Chrominance
	<b>CONV</b>	: Converter	<b>PB CTL</b>	: Playback-Luminance
	<b>CPM</b>	: Capstan Motor	<b>PB-C</b>	: Printed Circuit Board
	<b>CTL</b>	: Control	<b>PB-Y</b>	: Power Control
	<b>CYL</b>	: Cylinder	<b>PCB</b>	: Phase Detector
	<b>CYL-M</b>	: Cylinder-Motor	<b>P. CON</b>	: Pulse Generator
	<b>CYL SENS</b>	: Cylinder-Sensor	<b>PD</b>	: Peak-to Peak
<b>D</b>	<b>DATA (SY-CE)</b>	: Data (Syscon to Servo)	<b>R</b>	: Right
	<b>dB</b>	: Decibel	<b>REC</b>	: Recording
	<b>DC</b>	: Direct Current	<b>REC-C</b>	: Recording-Chrominance
	<b>DD Unit</b>	: Direct Drive Motor Unit	<b>REC-Y</b>	: Recording-Luminance
	<b>DEMOD</b>	: Demodulator	<b>REEL BRK</b>	: Reel Brake
	<b>DET</b>	: Detector	<b>REEL S</b>	: Reel Sensor
	<b>DEV</b>	: Deviation	<b>REF</b>	: Reference
<b>E</b>	<b>E</b>	: Emitter	<b>REG</b>	: Regulated, Regulator
	<b>EF</b>	: Emitter Follower	<b>REW</b>	: Rewind
	<b>EMPH</b>	: Emphasis	<b>REV, RVS</b>	: Reverse
	<b>ENC</b>	: Encoder	<b>RF</b>	: Radio Frequency
	<b>ENV</b>	: Envelope	<b>RMC</b>	: Remote Control
	<b>EOT</b>	: End of Tape	<b>RY</b>	: Relay
	<b>EQ</b>	: Equalizer	<b>S</b>	: Serial Clock
	<b>EXT</b>	: External	<b>S. CLK</b>	: Sensor Common
<b>F</b>	<b>F</b>	: Fuse	<b>S. COM</b>	: Serial Data
	<b>FBC</b>	: Feed Back Clamp	<b>S. DATA</b>	: Segment
	<b>FE</b>	: Full Erase	<b>SEG</b>	: Select, Selector
	<b>FF</b>	: Fast Forward, Flipflop	<b>SEL</b>	: Sensor
	<b>FG</b>	: Frequency Generator	<b>SENS</b>	: Search Mode
	<b>FL SW</b>	: Front Loading Switch	<b>SER</b>	: Serial Input
	<b>FM</b>	: Frequency Modulation	<b>SI</b>	: Sound Intermediate Frequency
	<b>FSC</b>	: Frequency Sub Carrier	<b>SIF</b>	: Serial Output
	<b>FWD</b>	: Forward	<b>SO</b>	: Solenoid
<b>G</b>	<b>GEN</b>	: Generator	<b>SOL</b>	: Standard Play
	<b>GND</b>	: Ground	<b>SP</b>	: Serial Strobe
<b>H</b>	<b>H.P.F</b>	: High Pass Filter	<b>STB</b>	: Switch
			<b>SW</b>	

## KEY TO ABBREVIATIONS

<b>S</b>	<b>SYNC</b>	: Synchronization
	<b>SYNC SEP</b>	: Sync Separator, Separation
<b>T</b>	<b>TR</b>	: Transistor
	<b>TRAC</b>	: Tracking
	<b>TRICK PB</b>	: Trick Playback
	<b>TP</b>	: Test Point
<b>U</b>	<b>UNREG</b>	: Unregulated
<b>V</b>	<b>V</b>	: Volt
	<b>VCO</b>	: Voltage Controlled Oscillator
	<b>VIF</b>	: Video Intermediate Frequency
	<b>VP</b>	: Vertical Pulse, Voltage Display
	<b>V.PB</b>	: Video Playback
	<b>VR</b>	: Variable Resistor
	<b>V.REC</b>	: Video Recording
	<b>VSF</b>	: Visual Search Fast Forward
	<b>VSR</b>	: Visual Search Rewind
	<b>VSS</b>	: Voltage Super Source
	<b>V-SYNC</b>	: Vertical-Synchronization
	<b>VT</b>	: Voltage Tuning
<b>X</b>	<b>XiTAL</b>	: Crystal
<b>Y</b>	<b>Y/C</b>	: Luminance/Chrominance

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter to the SERVICE MODE function, press and hold both buttons simultaneously on the main unit or on the main unit and on the remote control for more than a standard time (second).

<b>Set Key</b>	<b>Set Key</b>	<b>Standard Time (seconds)</b>	<b>Operations</b>
CH UP	FF	2	<p>PLAY/REC total hours are displayed on the screen. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED).</p> <p>Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".</p>
CH UP	STOP	2	<p>Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).</p>
CH UP	PLAY	2	<p>Initialization of the factory on VCR. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the clock setting, the channel setting, and PLAY/REC total hours.</p>
CH DOWN	POWER	2	<p>VCR operation mode at no connection of DVD. Refer to the "PREPARATION FOR SERVICING" NOTE: Although the DVD is connected, the DVD mode cannot be selected.</p>

<b>Set Key</b>	<b>Remocon Key</b>	<b>Standard Time (seconds)</b>	<b>Operations</b>
REC	8	2	<p>Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.</p>

<b>Method</b>	<b>Operations</b>
Press the ATR button on the remote control for more than 2 seconds during PLAY.	<p>Adjusting of the Tracking to the center position. Refer to the "MECHANICAL ADJUSTMENT" (GUIDE ROLLER) and "ELECTRICAL ADJUSTMENT" (PG SHIFTER).</p>
Make the short circuit between the test point of SERVICE and the GND.	<p>The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape. Refer to the "PREPARATION FOR SERVICING"</p>

## PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage.

Parts replacing time does not mean the life span for individual parts.

Also, long term storage or misuse may cause transformation and aging of rubber parts.

The following list means standard hours, so the checking hours depends on the conditions.

Parts Name \ Time	500 hours	1,000 hours	1,500 hours	2,000 hours	2,500 hours	Notes
Audio Control Head	■	■	■	●	●	
Full Erase Head (Recorder only)	■	■	■	●	●	Clean those parts in contact with the tape.
Capstan Belt		●	●	●	●	
Pinch Roller	■	●	●	●	●	Clean the rubber, and parts which the rubber touches.
Capstan DD Unit		●	●	●	●	
Loading Motor					●	
Tension Band		●	●	●	●	
T Brake Band		●	●	●	●	
Clutch Ass'y		●	●	●	●	
Idler Arm Ass'y		●	●	●	●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	Replace when rolling becomes abnormal.
Cylinder Unit	■	●	●	●	●	Clean the Head

■ : Clean

● : Check it and if necessary, replace it.


## CONFIRMATION OF HOURS USED

PLAY/REC total hours can be checked on the screen.

Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

1. Connect the set to TV Monitor.
2. Turn on the POWER.
3. Press both CH UP button on the set and the FF button on the set for more than 2 seconds.
4. After the confirmation of using hours, turn off the power.

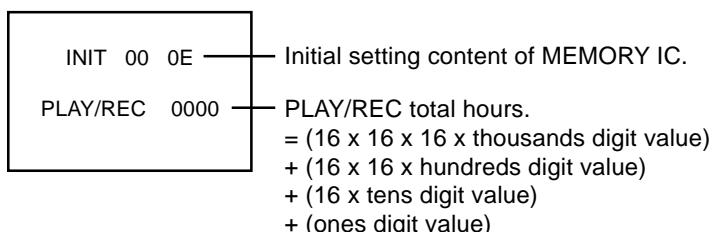

## PREVENTIVE CHECKS AND SERVICE INTERVALS


### CLEANING

#### NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

#### 1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. (Refer to the figure below.)

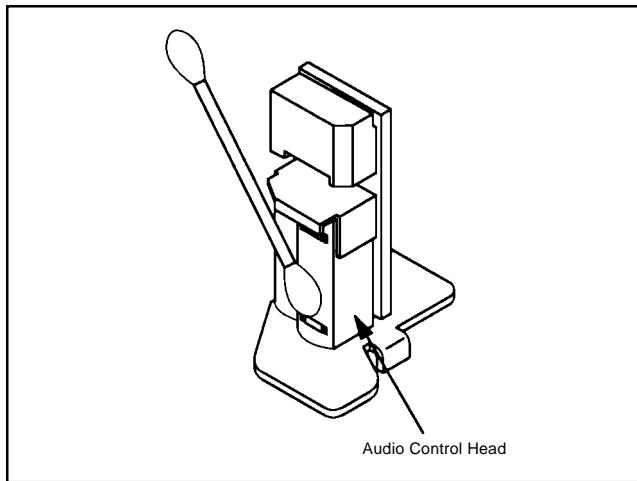

#### 2. TAPE RUNNING SYSTEM


When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

#### 3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). (Refer to the figure below.)

#### NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head. Use the chamois one by one.

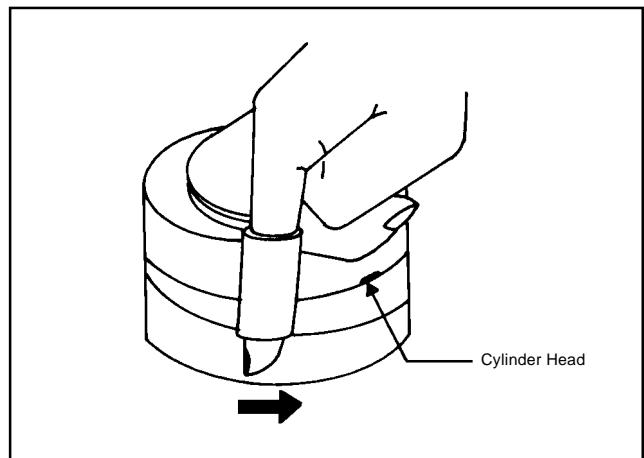

## WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

**NOTE: No need setting for afterINI 2E.**

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	0E	00	D8	10	64	64	4A	E6	0B	2F	86	2F	0A	08	0A	0F
10	AF	97	95	8A	B0	55	31	04	88	A5	9F	3A	00	10	BF	00
20	29	01	15	77	61	31	29	04	00	00	00	00	A2	B0	02	---

Table 1

1. Connect the set to TV Monitor.
2. Turn on the POWER.
3. Press both CH UP button on the set and the FF button on the set for more than 2 seconds.  
ADDRESS and DATA will appear on TV Monitor as Fig 1.

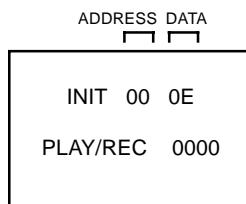
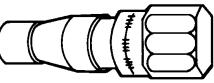
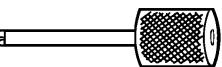
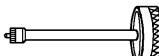
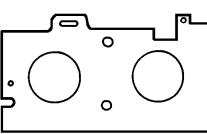
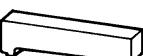
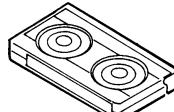
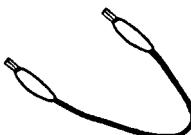
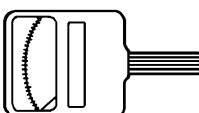


Fig. 1

4. ADDRESS is now selected and should "blink". Using the SET + or - button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
5. Press ENTER to select DATA. When DATA is selected, it will "blink".
6. Again, step through the DATA using SET + or - button until required DATA value has been selected.
7. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
8. Repeat steps 4 to 7 until all data has been checked.
9. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.  
The unit will now have the correct DATA for the new MEMORY IC.

## SERVICING FIXTURES AND TOOLS

(For 2 heads model) VHS Alignment Tape JG001 (VN2S-LI6 <sup>3</sup> ) JG001A (VN2S-CO1 <sup>3</sup> ) JG001Q (VN2S-LI6 <sup>3</sup> H) JG001T (VN2S-X6 <sup>3</sup> ) 	(For 4 heads model) VHS Alignment Tape JG001B (VN1S-LI6 <sup>3</sup> ) JG001I (VN1S-CO1 <sup>3</sup> ) JG001P (VN1S-LI6 <sup>3</sup> H) JG001S (VN1S-X6 <sup>3</sup> ) 	JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm) 	JG005 Post Adjustment Screwdriver Part No. SV-TG0-030-000 (small) 
JG153 X Value Adjustment Screwdriver 	JG022 Master Plane 	JG024A Reel Disk Height Adjustment Jig 	JG100A Torque Tape (VHT-063) 
JG154 Cable 	Tentelometer 		

Ref. No.	Part No.	Parts Name	Remarks
JG001	APJG001000	VHS Alignment Tape	Monoscope, 6KHz (For 2 heads model)
JG001A	APJG001A00	VHS Alignment Tape	Color Bar, 1KHz (For 2 heads model)
JG001Q	APJG001Q00	VHS Alignment Tape	Hi-Fi Audio (For 2 heads model)
JG001T	APJG001T00	VHS Alignment Tape	X Value Adjustment (For 2 heads model)
JG001B	APJG001B00	VHS Alignment Tape	Monoscope, 6KHz (For 4 heads model)
JG001I	APJG001I00	VHS Alignment Tape	Color Bar, 1KHz (For 4 heads model)
JG001P	APJG001P00	VHS Alignment Tape	Hi-Fi Audio (For 4 heads model)
JG001S	APJG001S00	VHS Alignment Tape	X Value Adjustment (For 4 heads model)
JG002B	APJG002B00	Adapter	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	APJG002E00	Dial Torque Gauge (10~90gf•cm)	Brake Torque (T Reel Ass'y)
JG002F	APJG002F00	Dial Torque Gauge (60~600gf•cm)	VSR Torque, Brake Torque (S Reel)
JG005	APJG005000	Post Adjustment Screwdriver	Guide Roller Adjustment
JG153	APJG153000	X Value Adjustment Screwdriver	X Value Adjustment
JG022	APJG022000	Master Plane	Reel Disk Height Adjustment
JG024A	APJG024A00	Reel Disk Height Adjustment Jig	Reel Disk Height Adjustment
JG100A	APJG100A00	Torque Tape (VHT-063)	Playback Torque, Back Tension Torque During Playback
JG154	APJG154000	Cable	Used to connect the test point of SERVICE and GROUND

## PREPARATION FOR SERVICING

### How to use the Servicing Fixture

- While pressing the POWER button on the set for more than 2 seconds, press the CH DOWN button on the set simultaneously at the Power OFF. Although the DVD is connected, the DVD mode cannot be selected.
- Short circuit between **TP3001** and **Ground** with the cable JG154.  
(The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape.)
- In case of using a cassette tape, press the STOP/EJECT button to insert or eject a cassette tape.  
Turn on the power and re-check the cable before checking the trouble points.

When you servicing with connection of DVD, perform the operations above step 2 to step 3.

# MECHANICAL ADJUSTMENTS



## 1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)



### 1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

1. Turn on the power and set to the STOP mode.
2. Set the master plane (**JG022**) and reel disk height adjustment jig (**JG024A**) on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
3. While turning the reel and confirm the following points. Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig (**JG024A**) and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to  $10(+2, -0)$ mm.
4. Adjust the other reel in the same way.

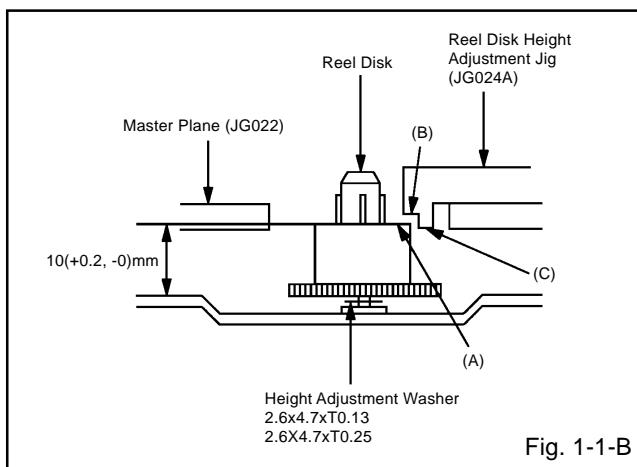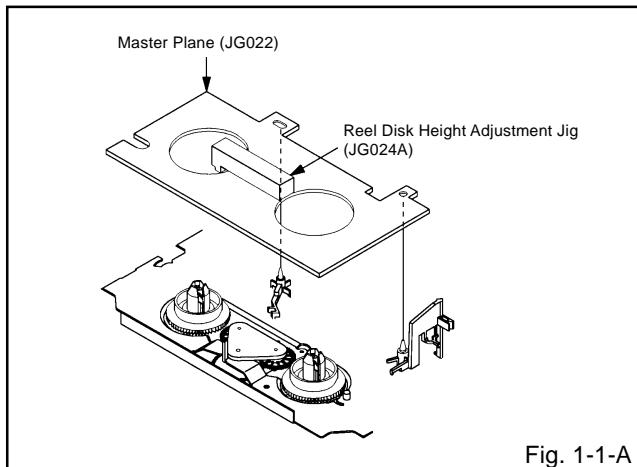

### 1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

1. Set to the PLAY mode.
2. Adjust the adjusting section for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
3. While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

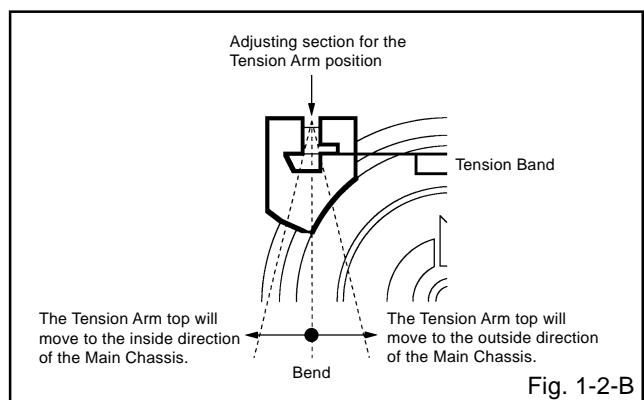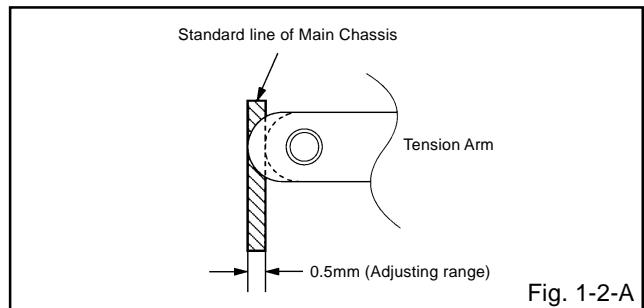


### 1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

1. Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
2. Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates  $20 \pm 2$ gf in the beginning of playback.

#### USING A CASSETTE TYPE TORQUE TAPE (**JG100A**)

1. After confirmation and adjustment of Tension Post position (**Refer to item 1-2**), load the cassette type torque tape (**JG100A**) and set to the PLAY mode.
2. Confirm that the right meter of the torque tape indicates  $50\sim90$ gf•cm during playback in SP mode.
3. Confirm that the left meter of the torque tape indicates  $25\sim40$ gf•cm during playback in SP mode.

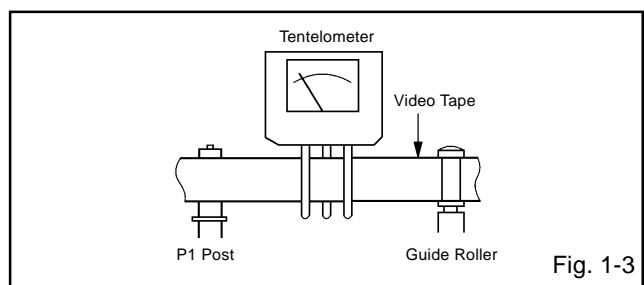

# MECHANICAL ADJUSTMENTS

## 1-4: CONFIRMATION OF VSR TORQUE

- Install the Torque Gauge (**JG002F**) and Adapter (**JG002B**) on the S Reel. Set to the Picture Search (Rewind) mode. (Refer to Fig. 1-4-B)
- Then, confirm that it indicates 120~180gf·cm.

### NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.



## 1-5: CONFIRMATION OF REEL BRAKE TORQUE

### (S Reel Brake) (Refer to Fig. 1-4-B)

- Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
- Move the Idler Assý from the S Reel.
- Install the Torque Gauge (**JG002F**) and Adapter (**JG002B**) on the S Reel. Turn the Torque Gauge (**JG002F**) clockwise.
- Then, confirm that it indicates 60~100gf·cm.

### (T Reel Brake) (Refer to Fig. 1-4-B)

- Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
- Move the Idler Assý from the T Reel.
- Install the Torque Gauge (**JG002E**) and Adapter (**JG002B**) on the T reel. Turn the Torque Gauge (**JG002E**) counterclockwise.
- Then, confirm that it indicates 30~50gf·cm.

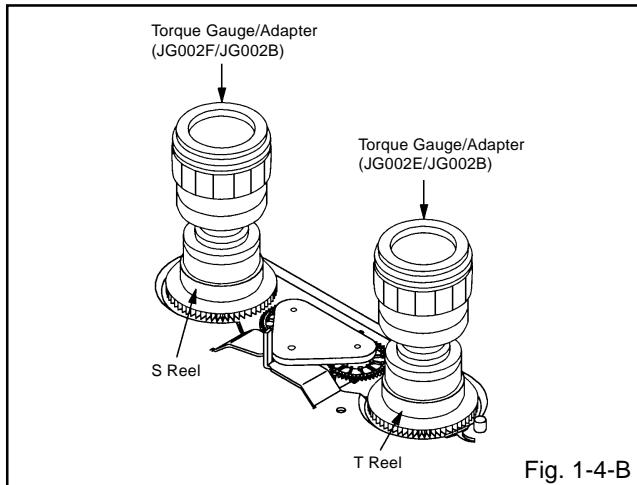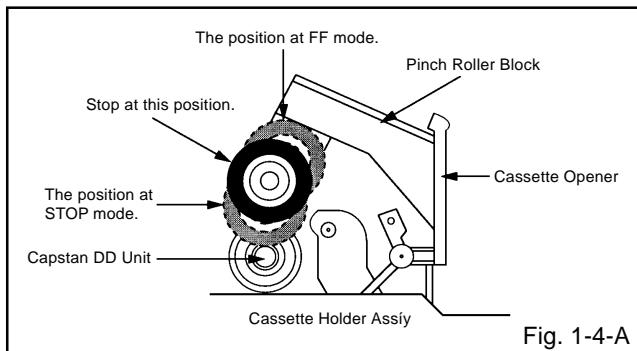

### NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Assý/Clutch Assý
1-5	S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Assý T Reel side: T Reel/T Brake Band/T Brake Spring/T Brake Arm

## 2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM



Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

### 2-1: GUIDE ROLLER

- Playback the VHS Alignment Tape (**JG001 or JG001B**). (Refer to SERVICING FIXTURE AND TOOLS)
- Connect CH-1 of the oscilloscope to **TP101 (Envelope)** and CH-2 to **TP3002 (SW Pulse)**.
- Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
- Trigger with SW Pulse and observe the envelope. (Refer to Fig. 2-1-A)
- When observing the envelope, adjust the Adjusting Driver (**JG005**) slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
- Adjust so that the A : B ratio is better than 3 : 2 as shown in **Fig. 2-1-B**, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
- Adjust the PG shifter during playback. (Refer to the ELECTRICAL ADJUSTMENTS)

### NOTE

After adjustment, confirm and adjust A/C head. (Refer to item 2-2)

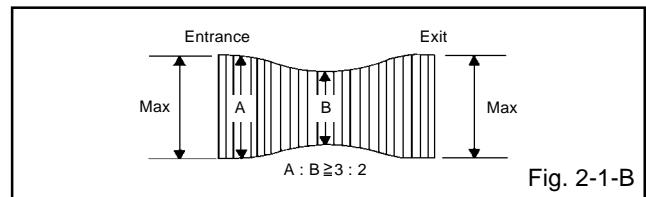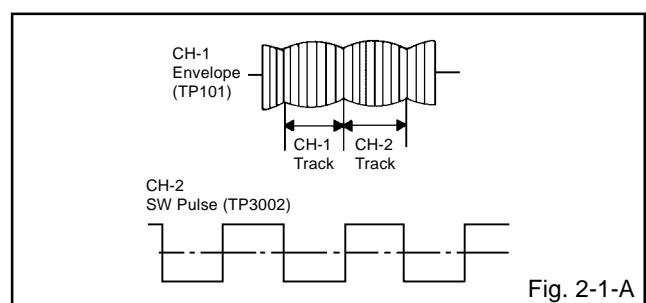

## MECHANICAL ADJUSTMENTS

### 2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ CONTROL HEAD

When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape (**JG001 or JG001B**). **(Refer to SERVICING FIXTURE AND TOOLS)**
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Post as shown in **Fig. 2-2-A**.
  - a) When the reflected picture is distorted, turn the screw (1) clockwise until the distortion is disappeared.
  - b) When the reflected picture is not distorted, turn the screw (1) counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw (2) to set the audio level to maximum.
4. Confirm that the bottom of the Audio/ Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
  - c) When the height is not correct, turn the screw (3) to adjust the height. Then, adjust the 1~3 again.

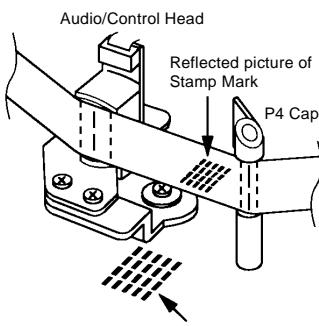


Fig. 2-2-A

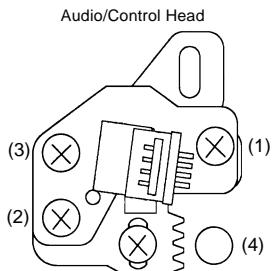


Fig. 2-2-B

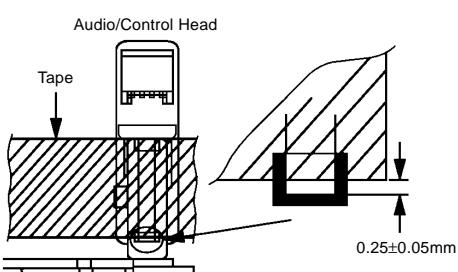


Fig. 2-2-C

### 2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk. **(Refer to item 1-1)**
2. Confirm and adjust the position of the Tension Post. **(Refer to item 1-2)**
3. Adjust the Guide Roller. **(Refer to item 2-1)**
4. Confirm and adjust the Audio/Control Head. **(Refer to item 2-2)**
5. Connect CH-1 of the oscilloscope to **TP3002**, CH-2 to **TP101** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape (**JG001S or JG001T**). **(Refer to SERVICING FIXTURE AND TOOLS)**
7. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver (**JG153**) to the (4) of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-3**.

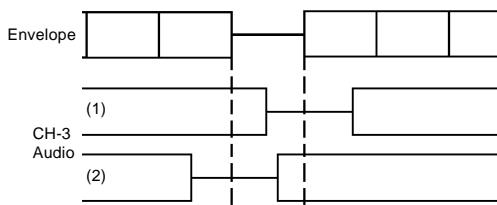



Fig. 2-3

### 2-4: CONFIRM HI-FI AUDIO (Hi-Fi model only)

1. Connect CH-1 of the oscilloscope to **TP3002** and CH-2 to the **Hi-Fi Audio Out Jack**.
2. Playback the VHS Alignment Tape (**JG001P or JG001Q**). **(Refer to SERVICING FIXTURE AND TOOLS)**
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the Tracking Up button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
5. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
6. Press the Tracking Down button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
7. If the difference are more than 3 steps, set the X Value adjustment driver (**JG153**) to (4) of **Fig. 2-2-B**. Change the X Value and adjust it so that the value becomes within 2 steps.

## MECHANICAL ADJUSTMENTS

### 3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

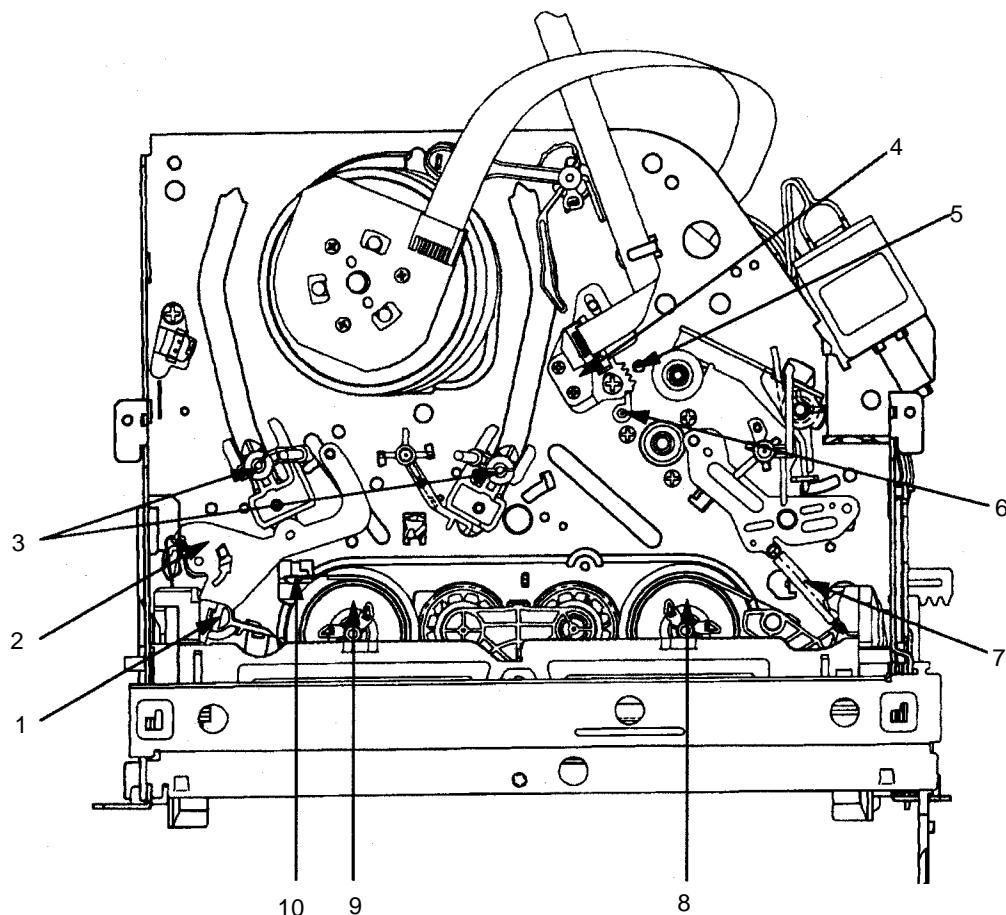

- |                                   |  |
|-----------------------------------|--|
| 1. Tension Connect                | 6. P4 Post   |
| 2. Tension Arm                    | 7. T Brake Spring                                  |
| 3. Guide Roller                   | 8. T Reel  |
| 4. Audio/Control Head             | 9. S Reel  |
| 5. X value adjustment driver hole | 10. Adjusting section for the Tension Arm position |

# ELECTRICAL ADJUSTMENTS

Read and perform this adjustment when repairing the circuits or replacing electrical parts or PCB assemblies.

## 1. BASIC ADJUSTMENT

### CAUTION

When you exchange IC and Transistor for a heat sink, apply the silicon grease (**YG6260M**) on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

### 1-1: PG SHIFTER

#### CONDITIONS

MODE-PLAYBACK

Input Signal-Alignment Tape (**JG001P**)

#### INSTRUCTIONS

1. Connect CH-1 on the oscilloscope to **TP3002** and CH-2 to **TP8001**.
2. Playback the alignment tape. (**JG001P**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press both CH UP button on the set and the STOP button on the set for more than 2 seconds.

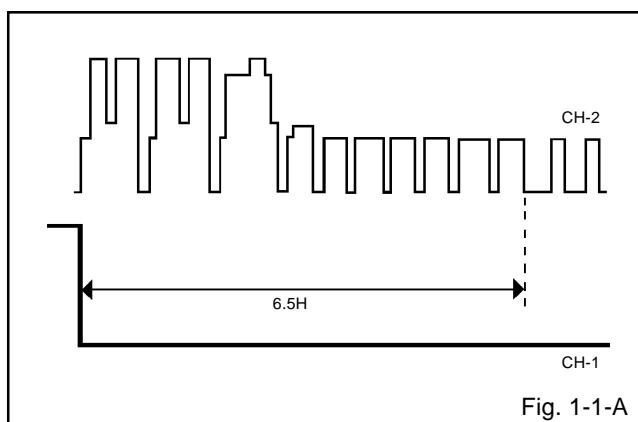


Fig. 1-1-A


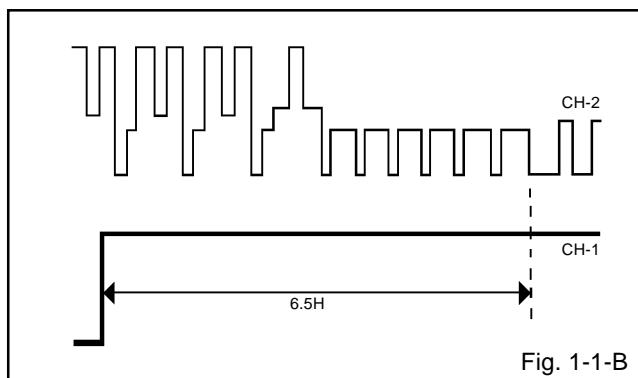



Fig. 1-1-B

## ELECTRICAL ADJUSTMENTS

### 2. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

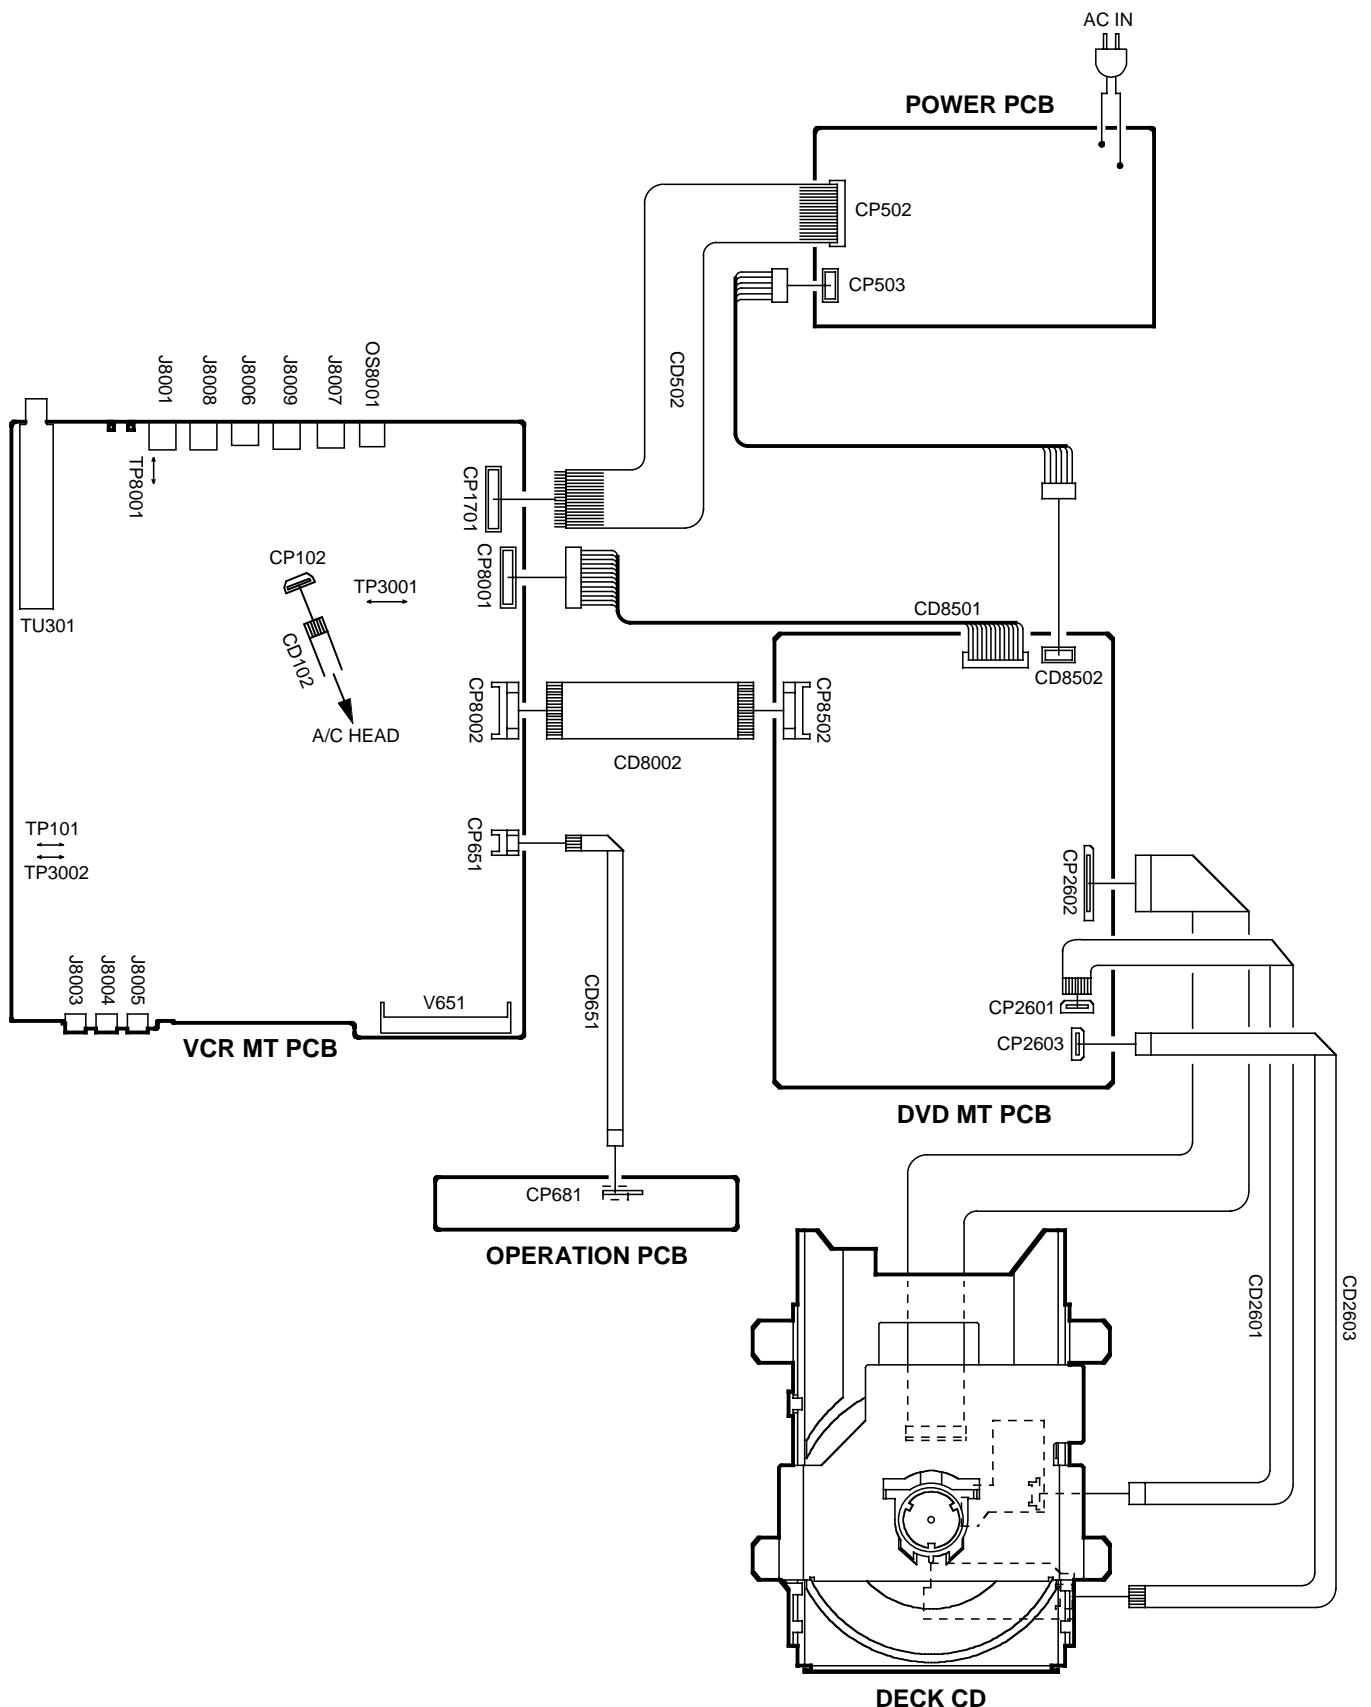


## DVD BLOCK DIAGRAM

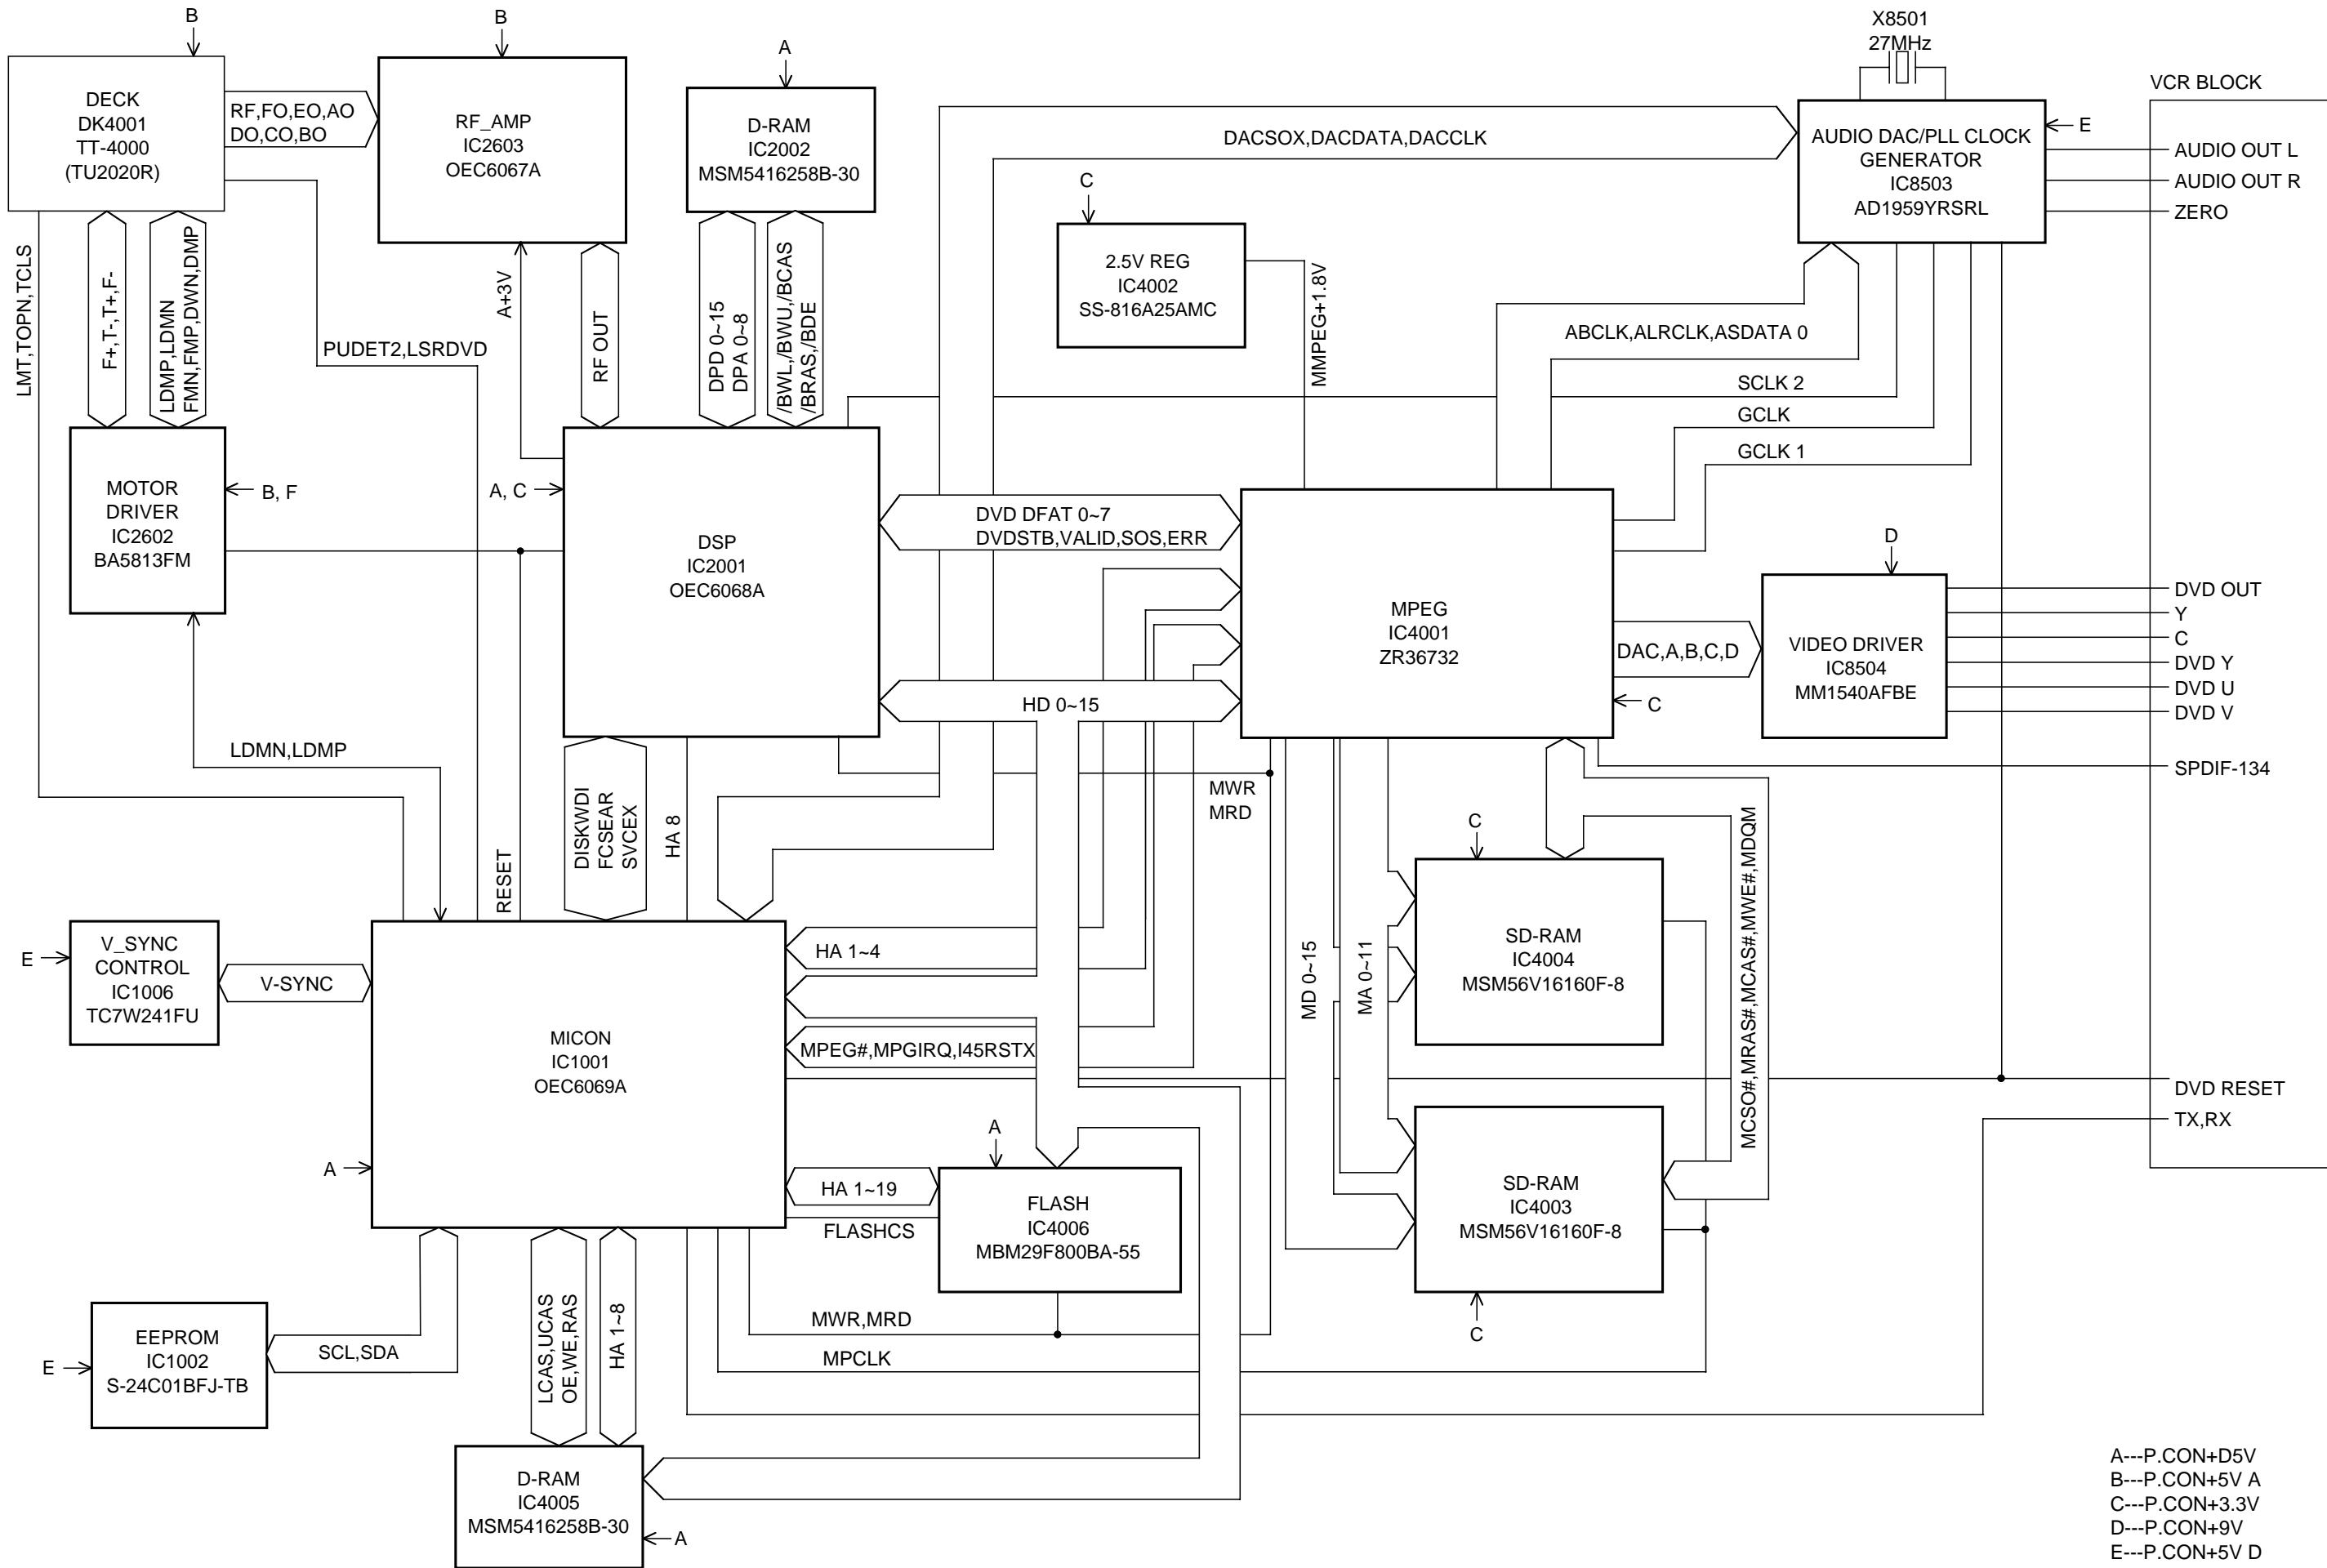


A---P.CON+D5V  
 B---P.CON+5V A  
 C---P.CON+3.3V  
 D---P.CON+9V  
 E---P.CON+5V D  
 F---P.CON+9V A


# Y/C/AUDIO/CCD/HEAD AMP BLOCK DIAGRAM

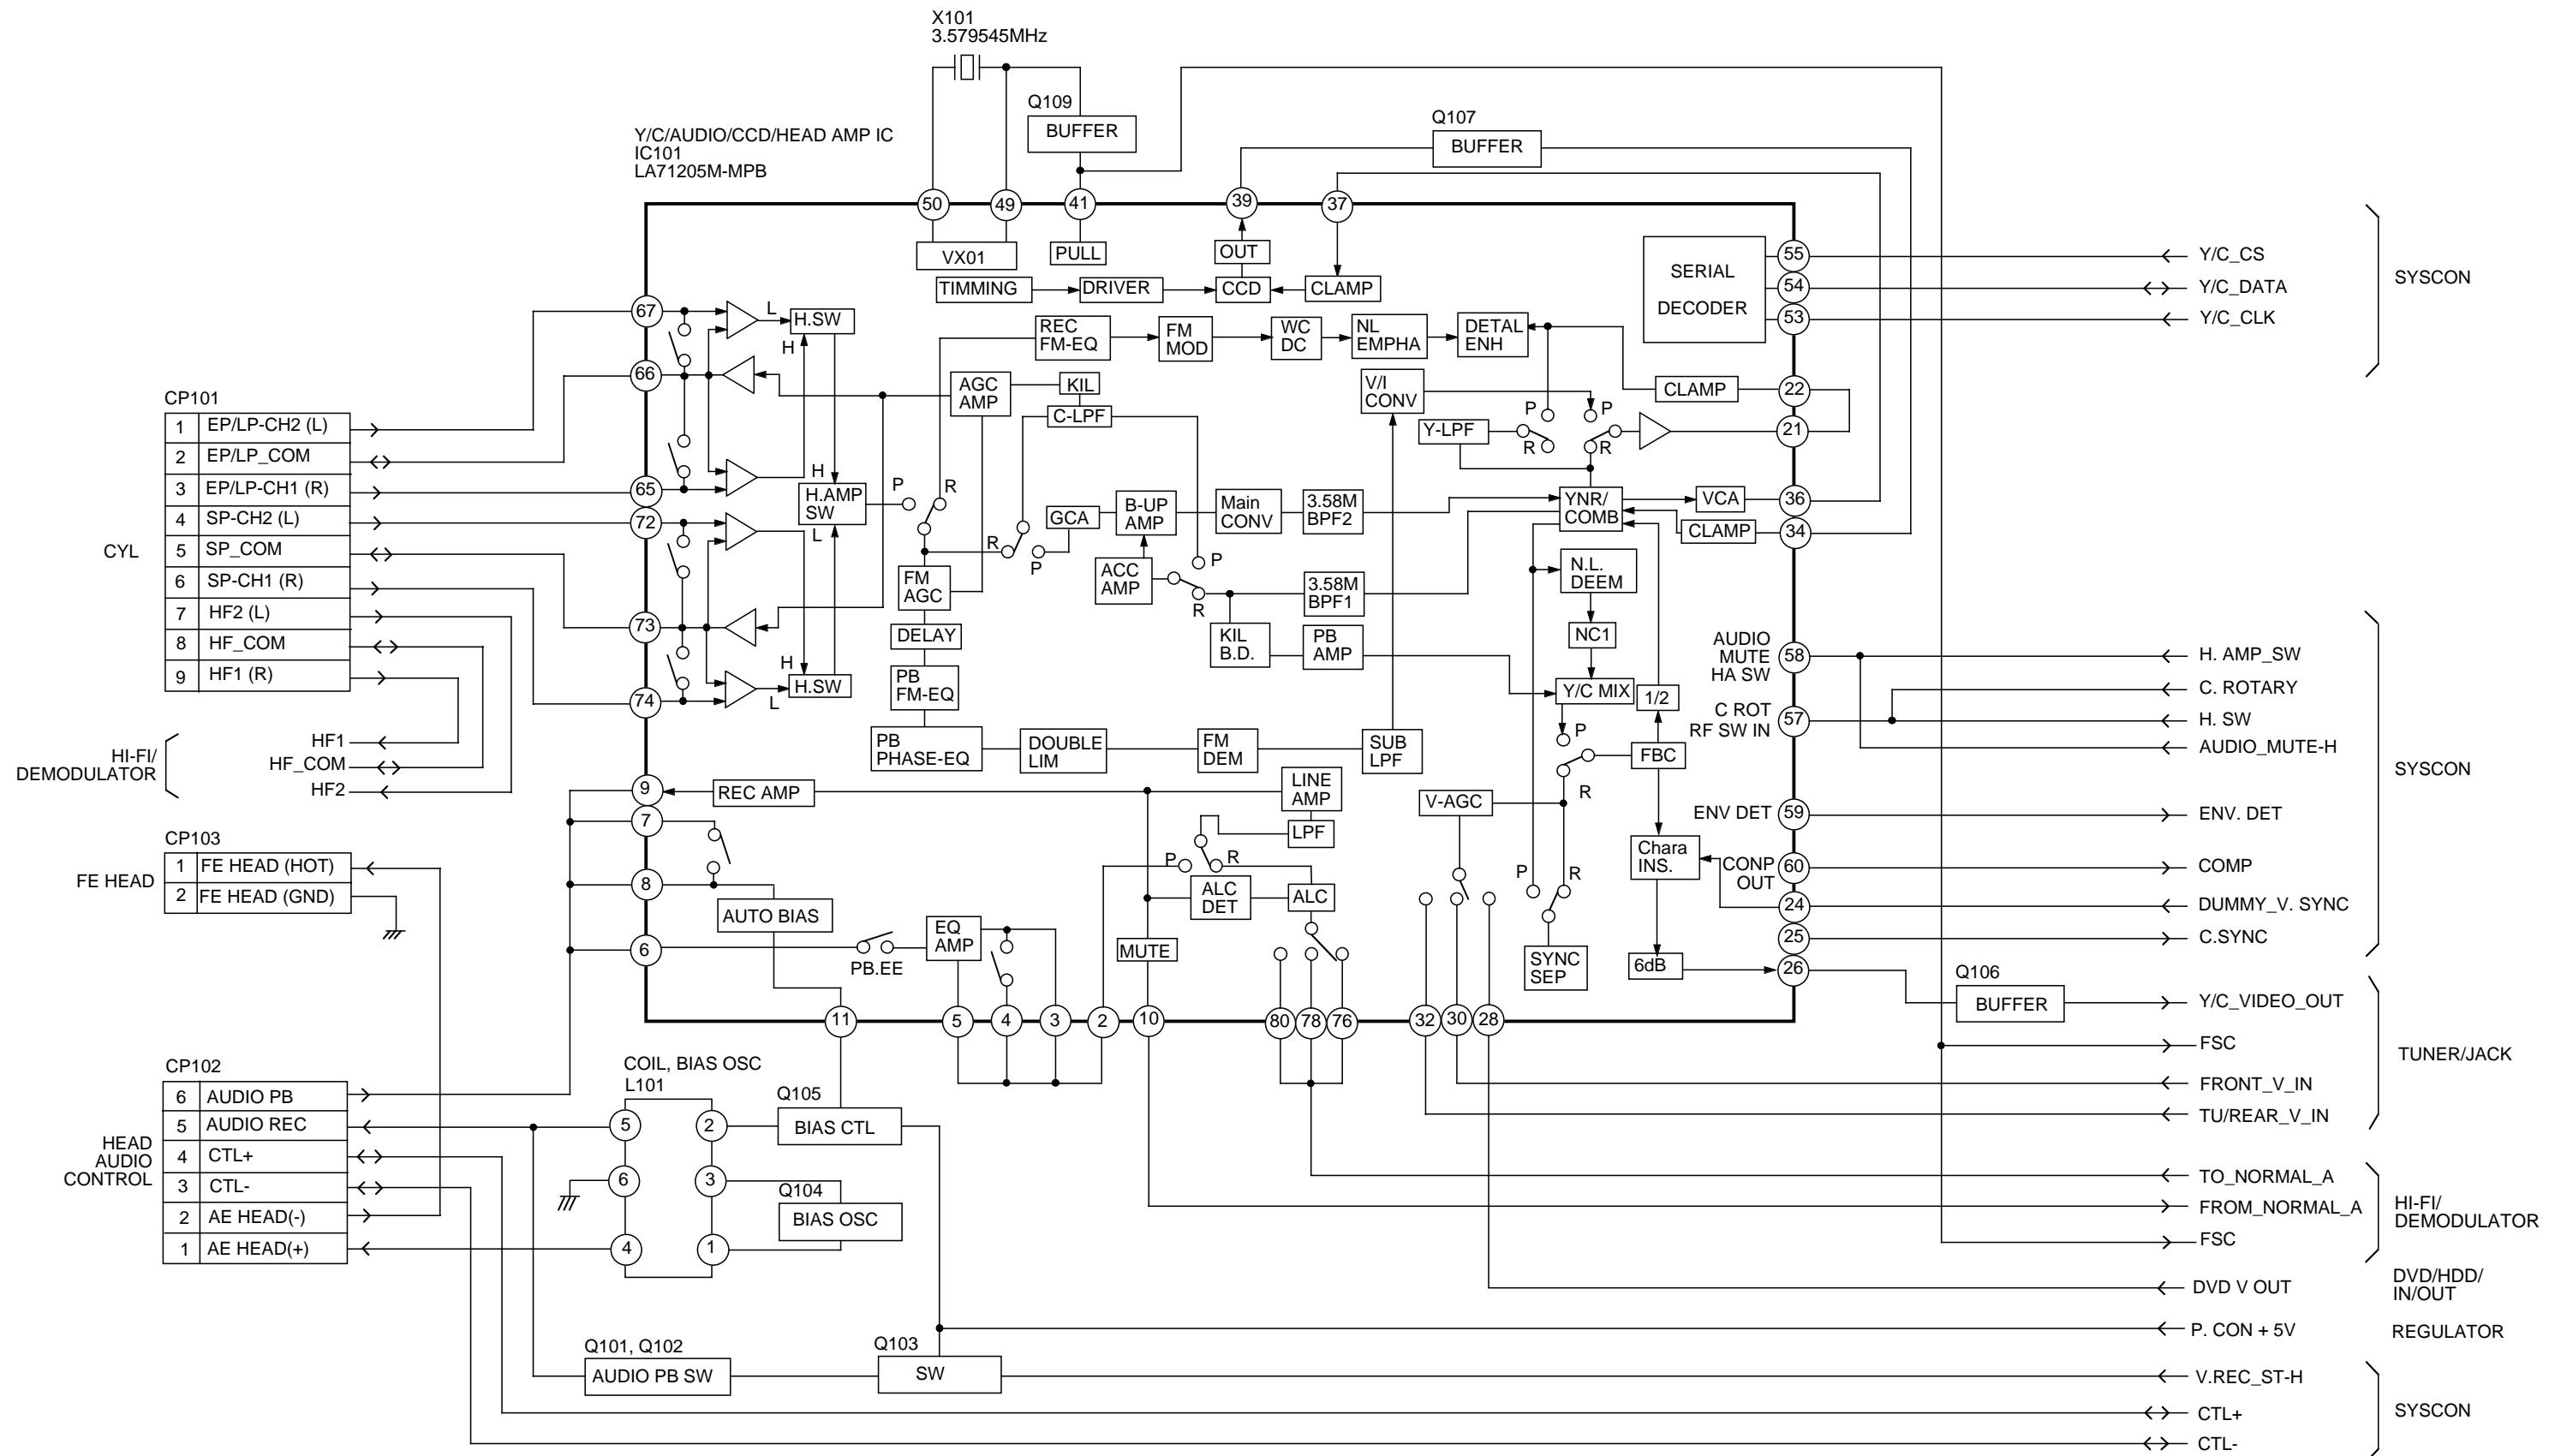


## SYSTEM CONTROL BLOCK DIAGRAM

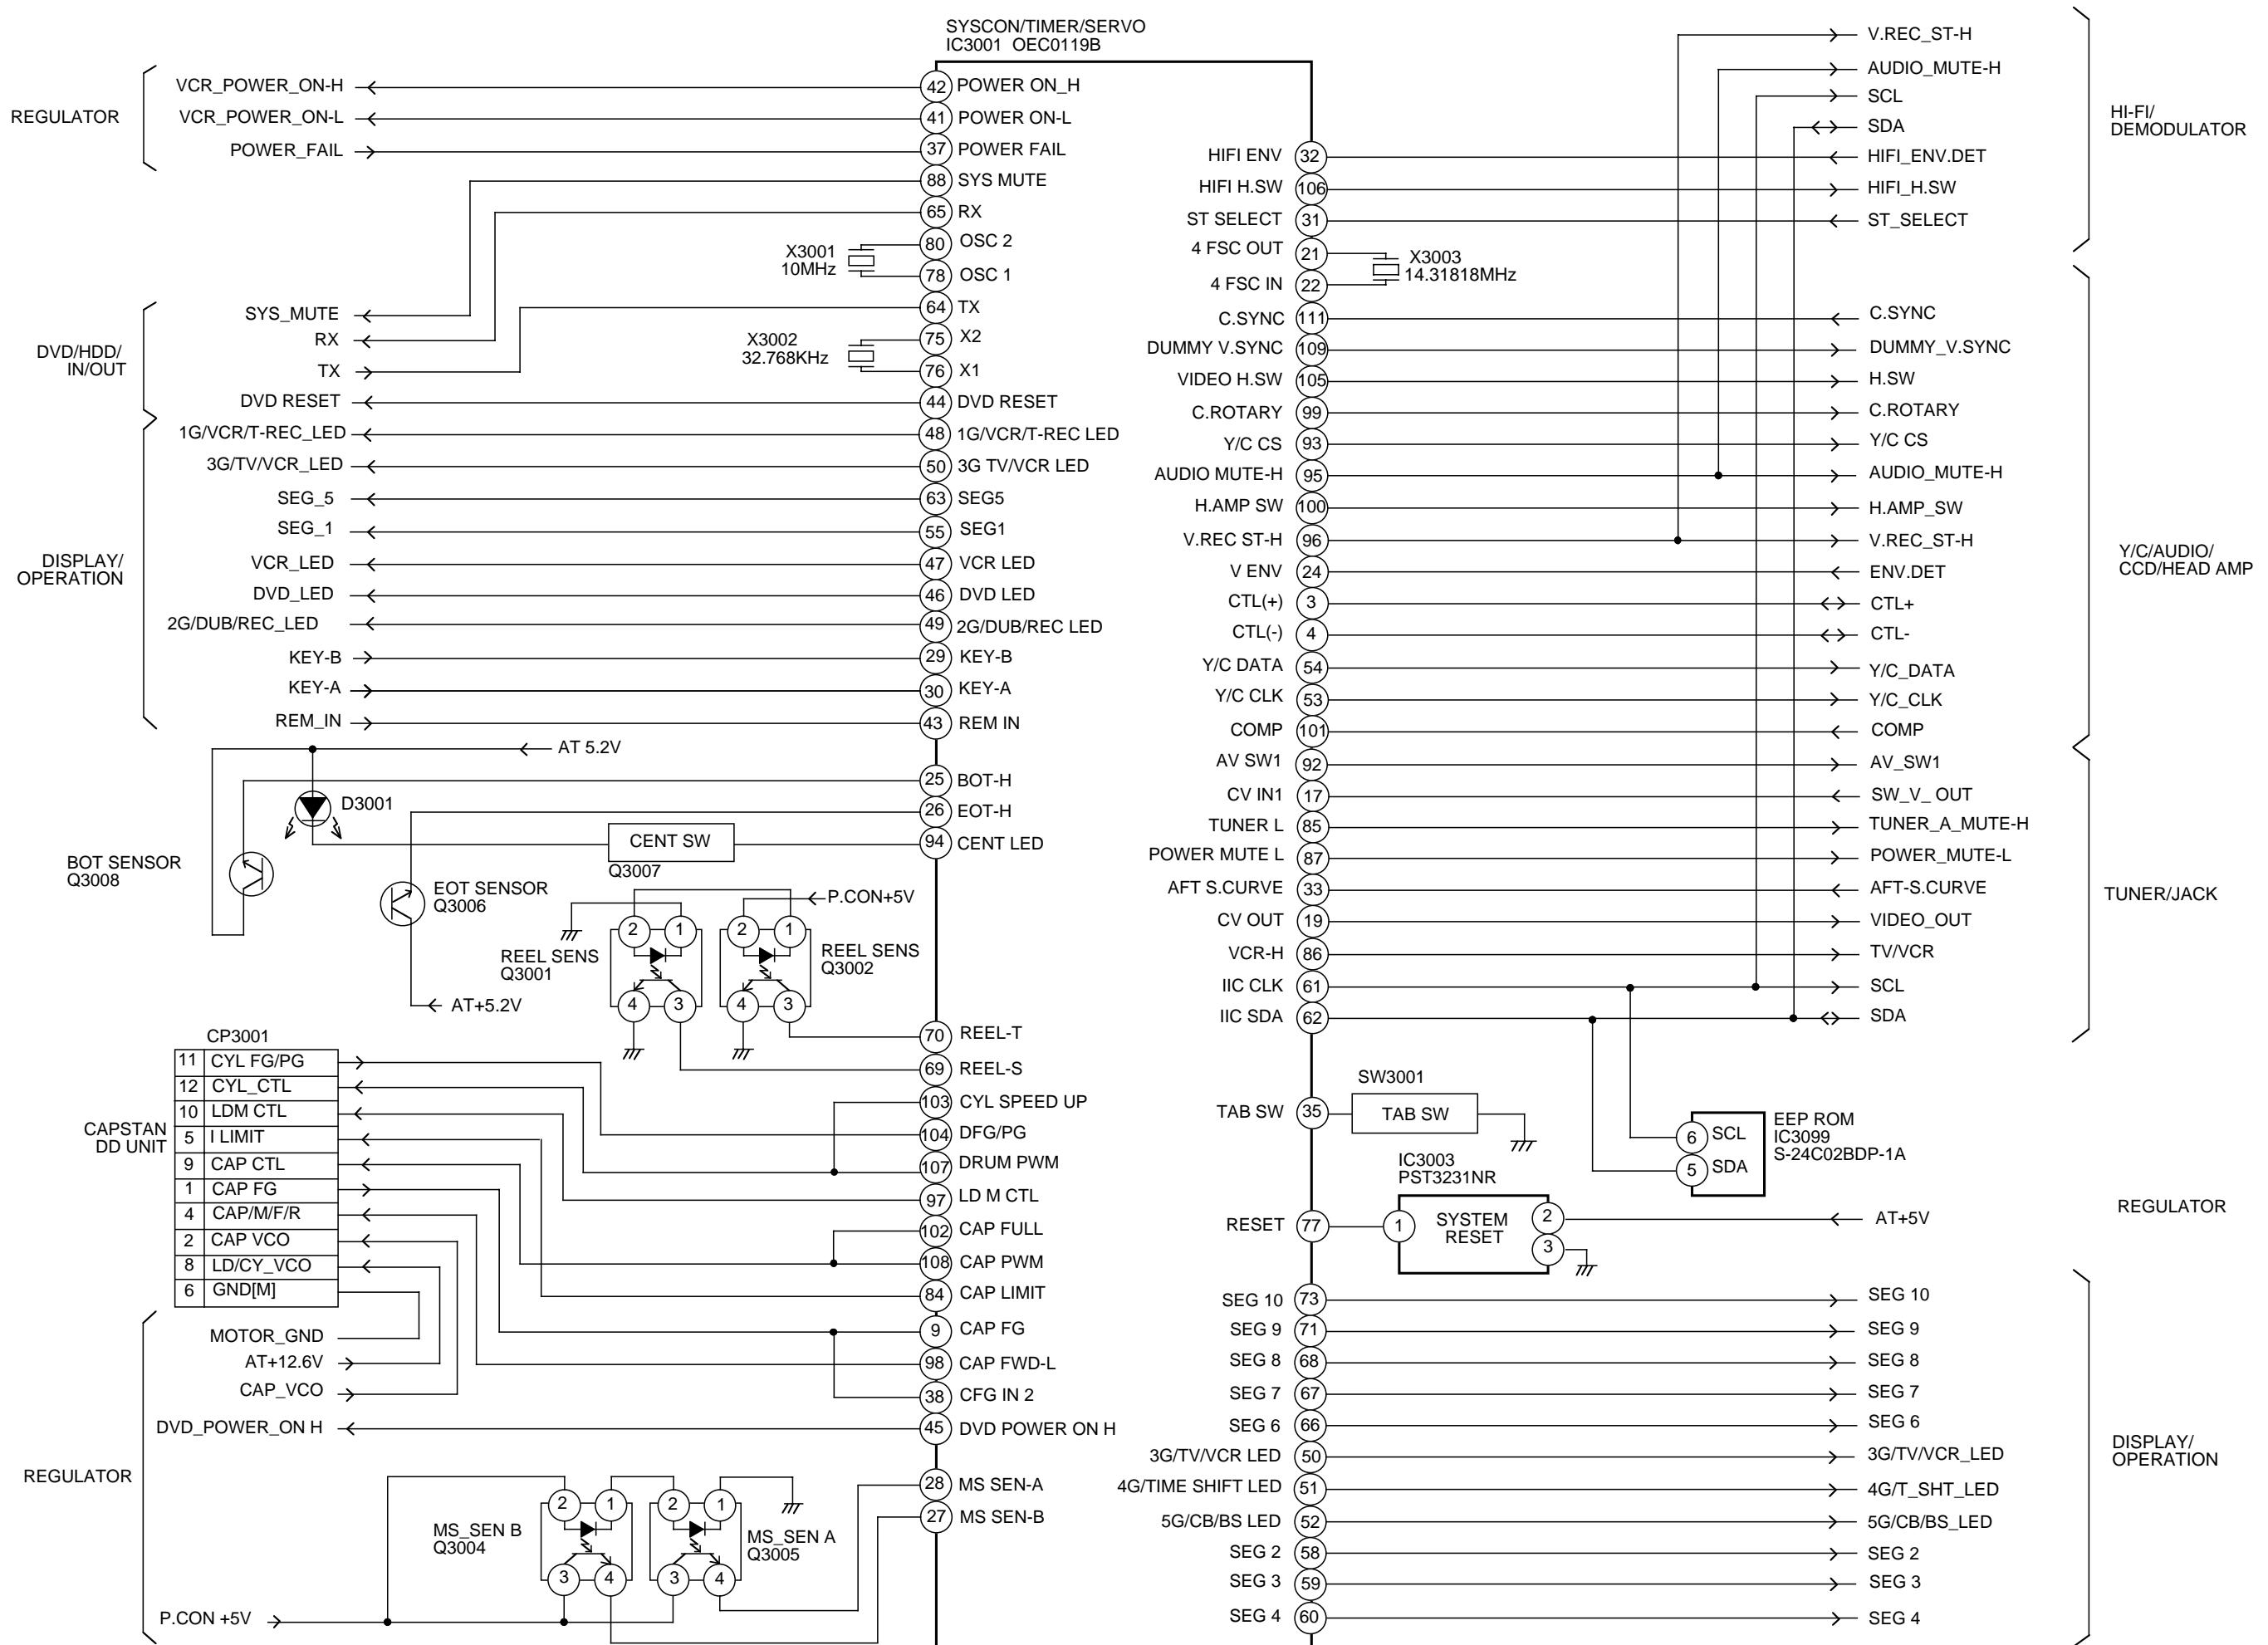


## REGULATOR BLOCK DIAGRAM

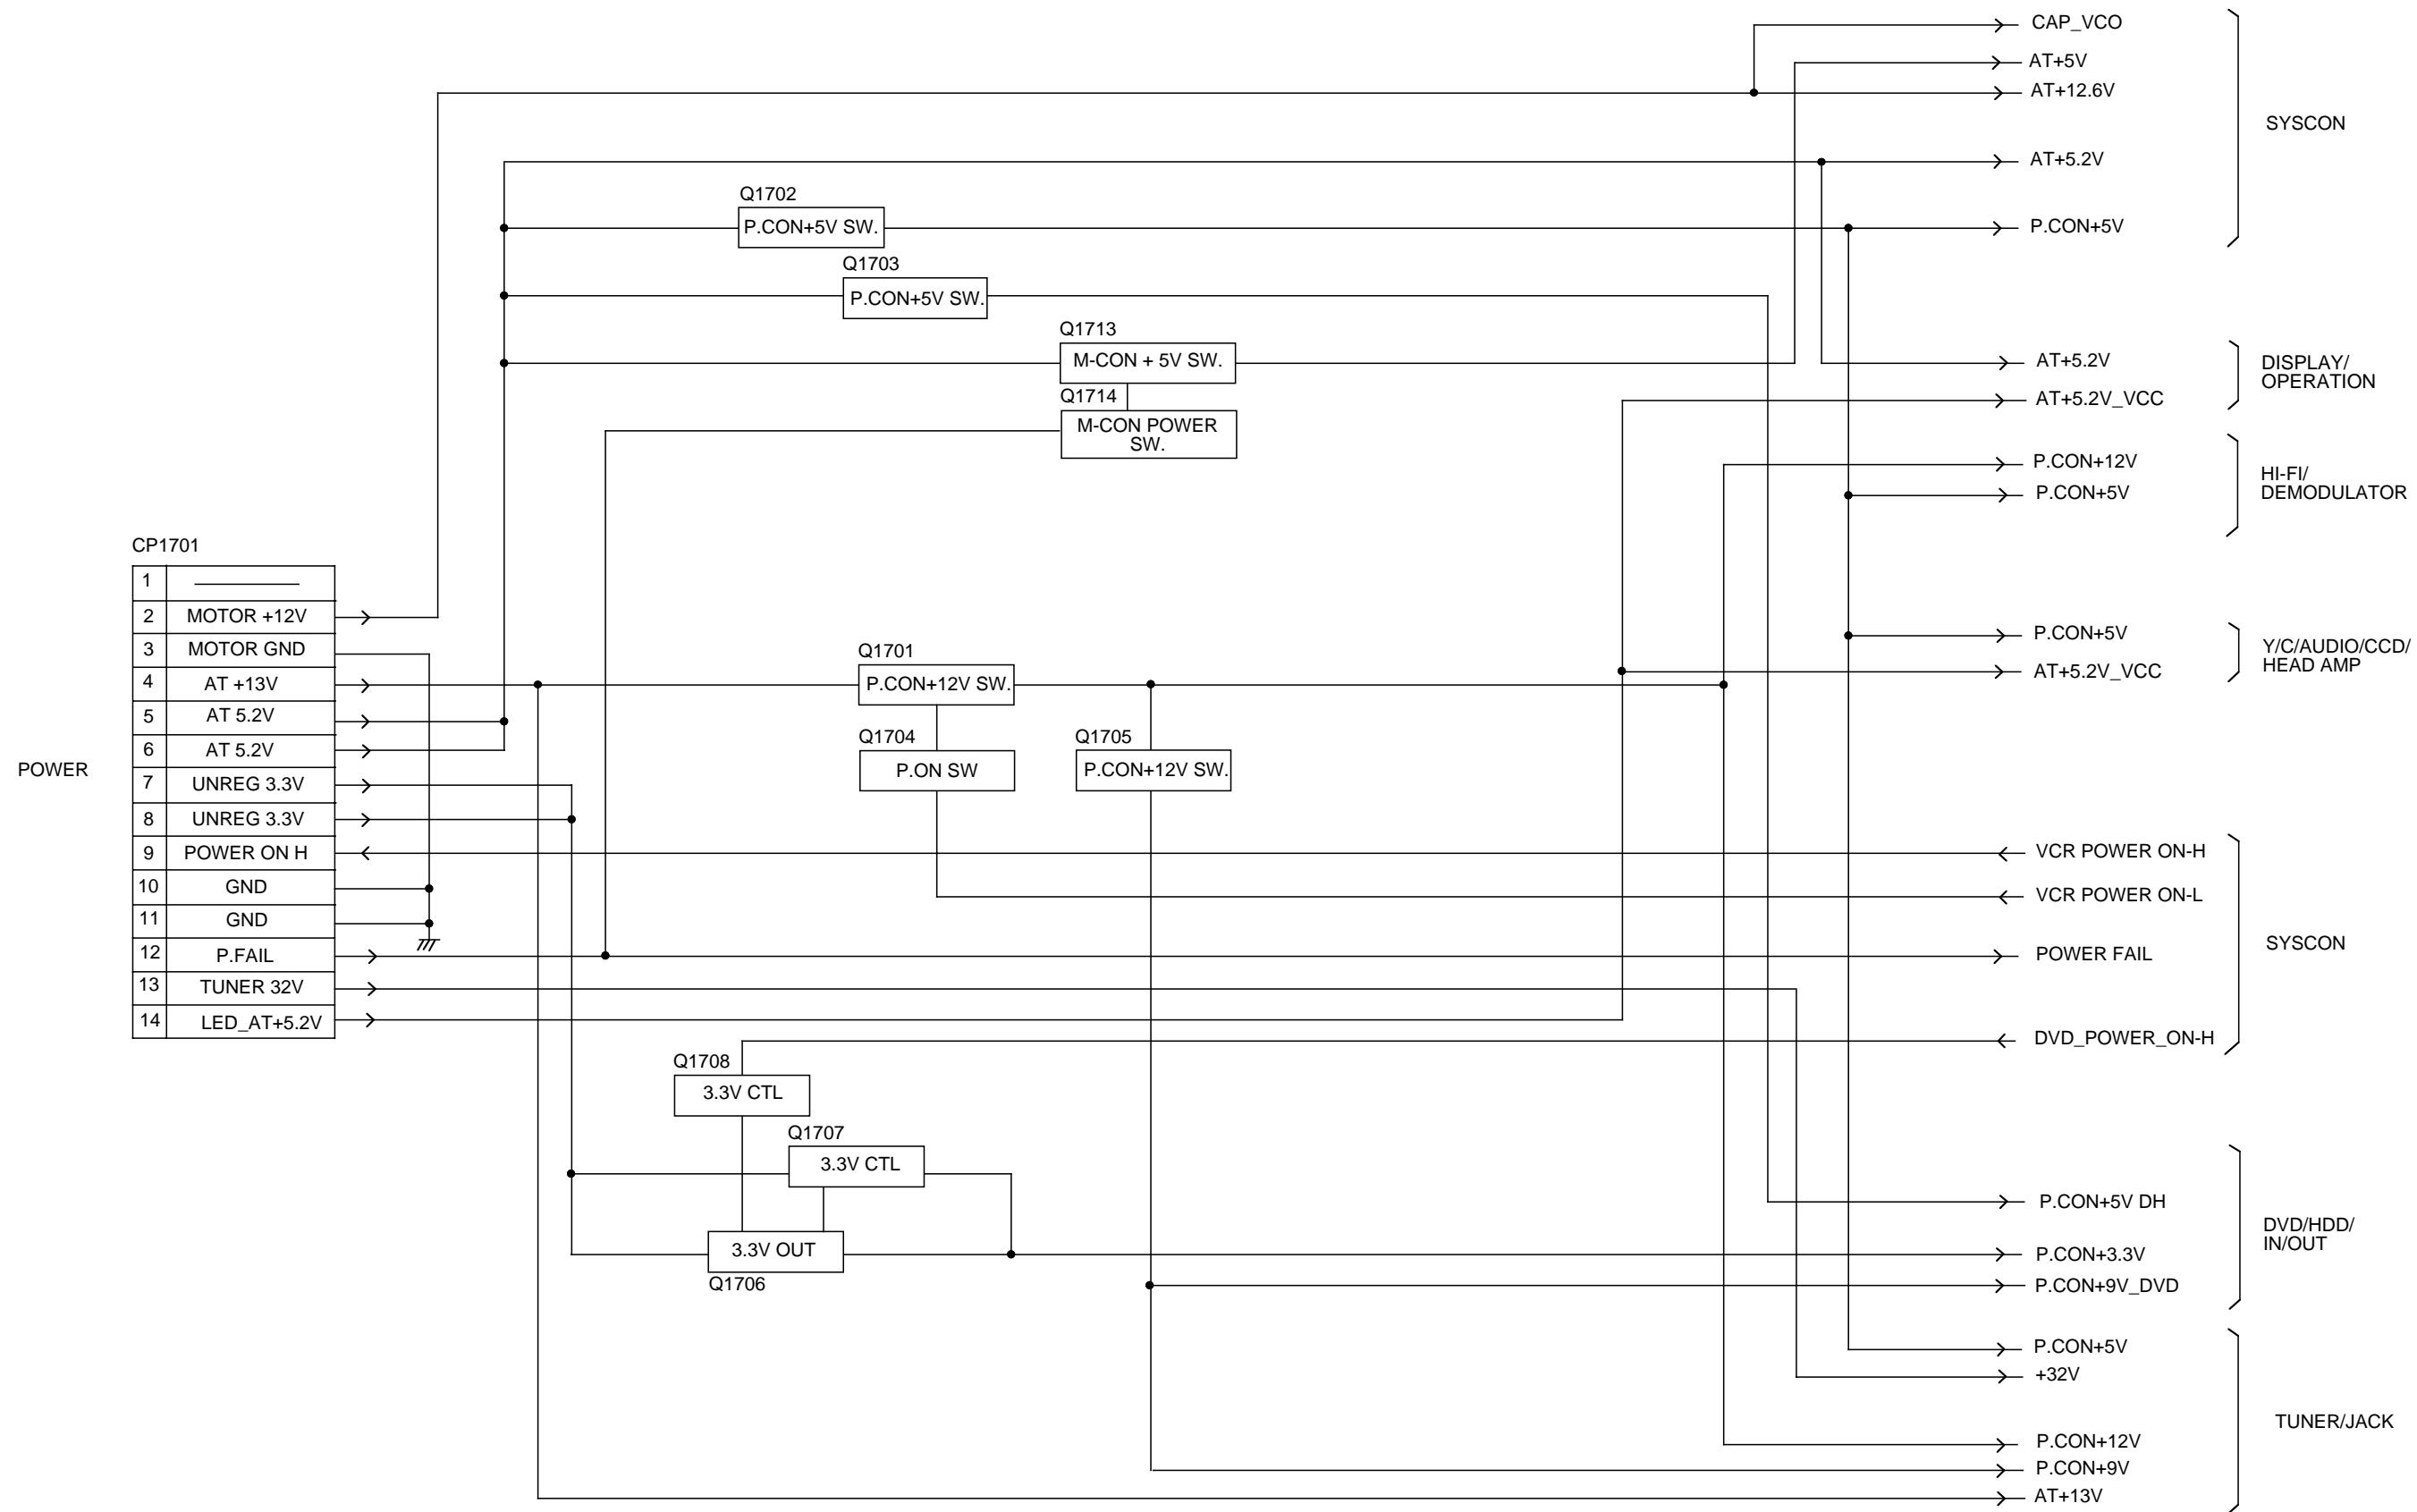


## DISPLAY/OPERATION BLOCK DIAGRAM

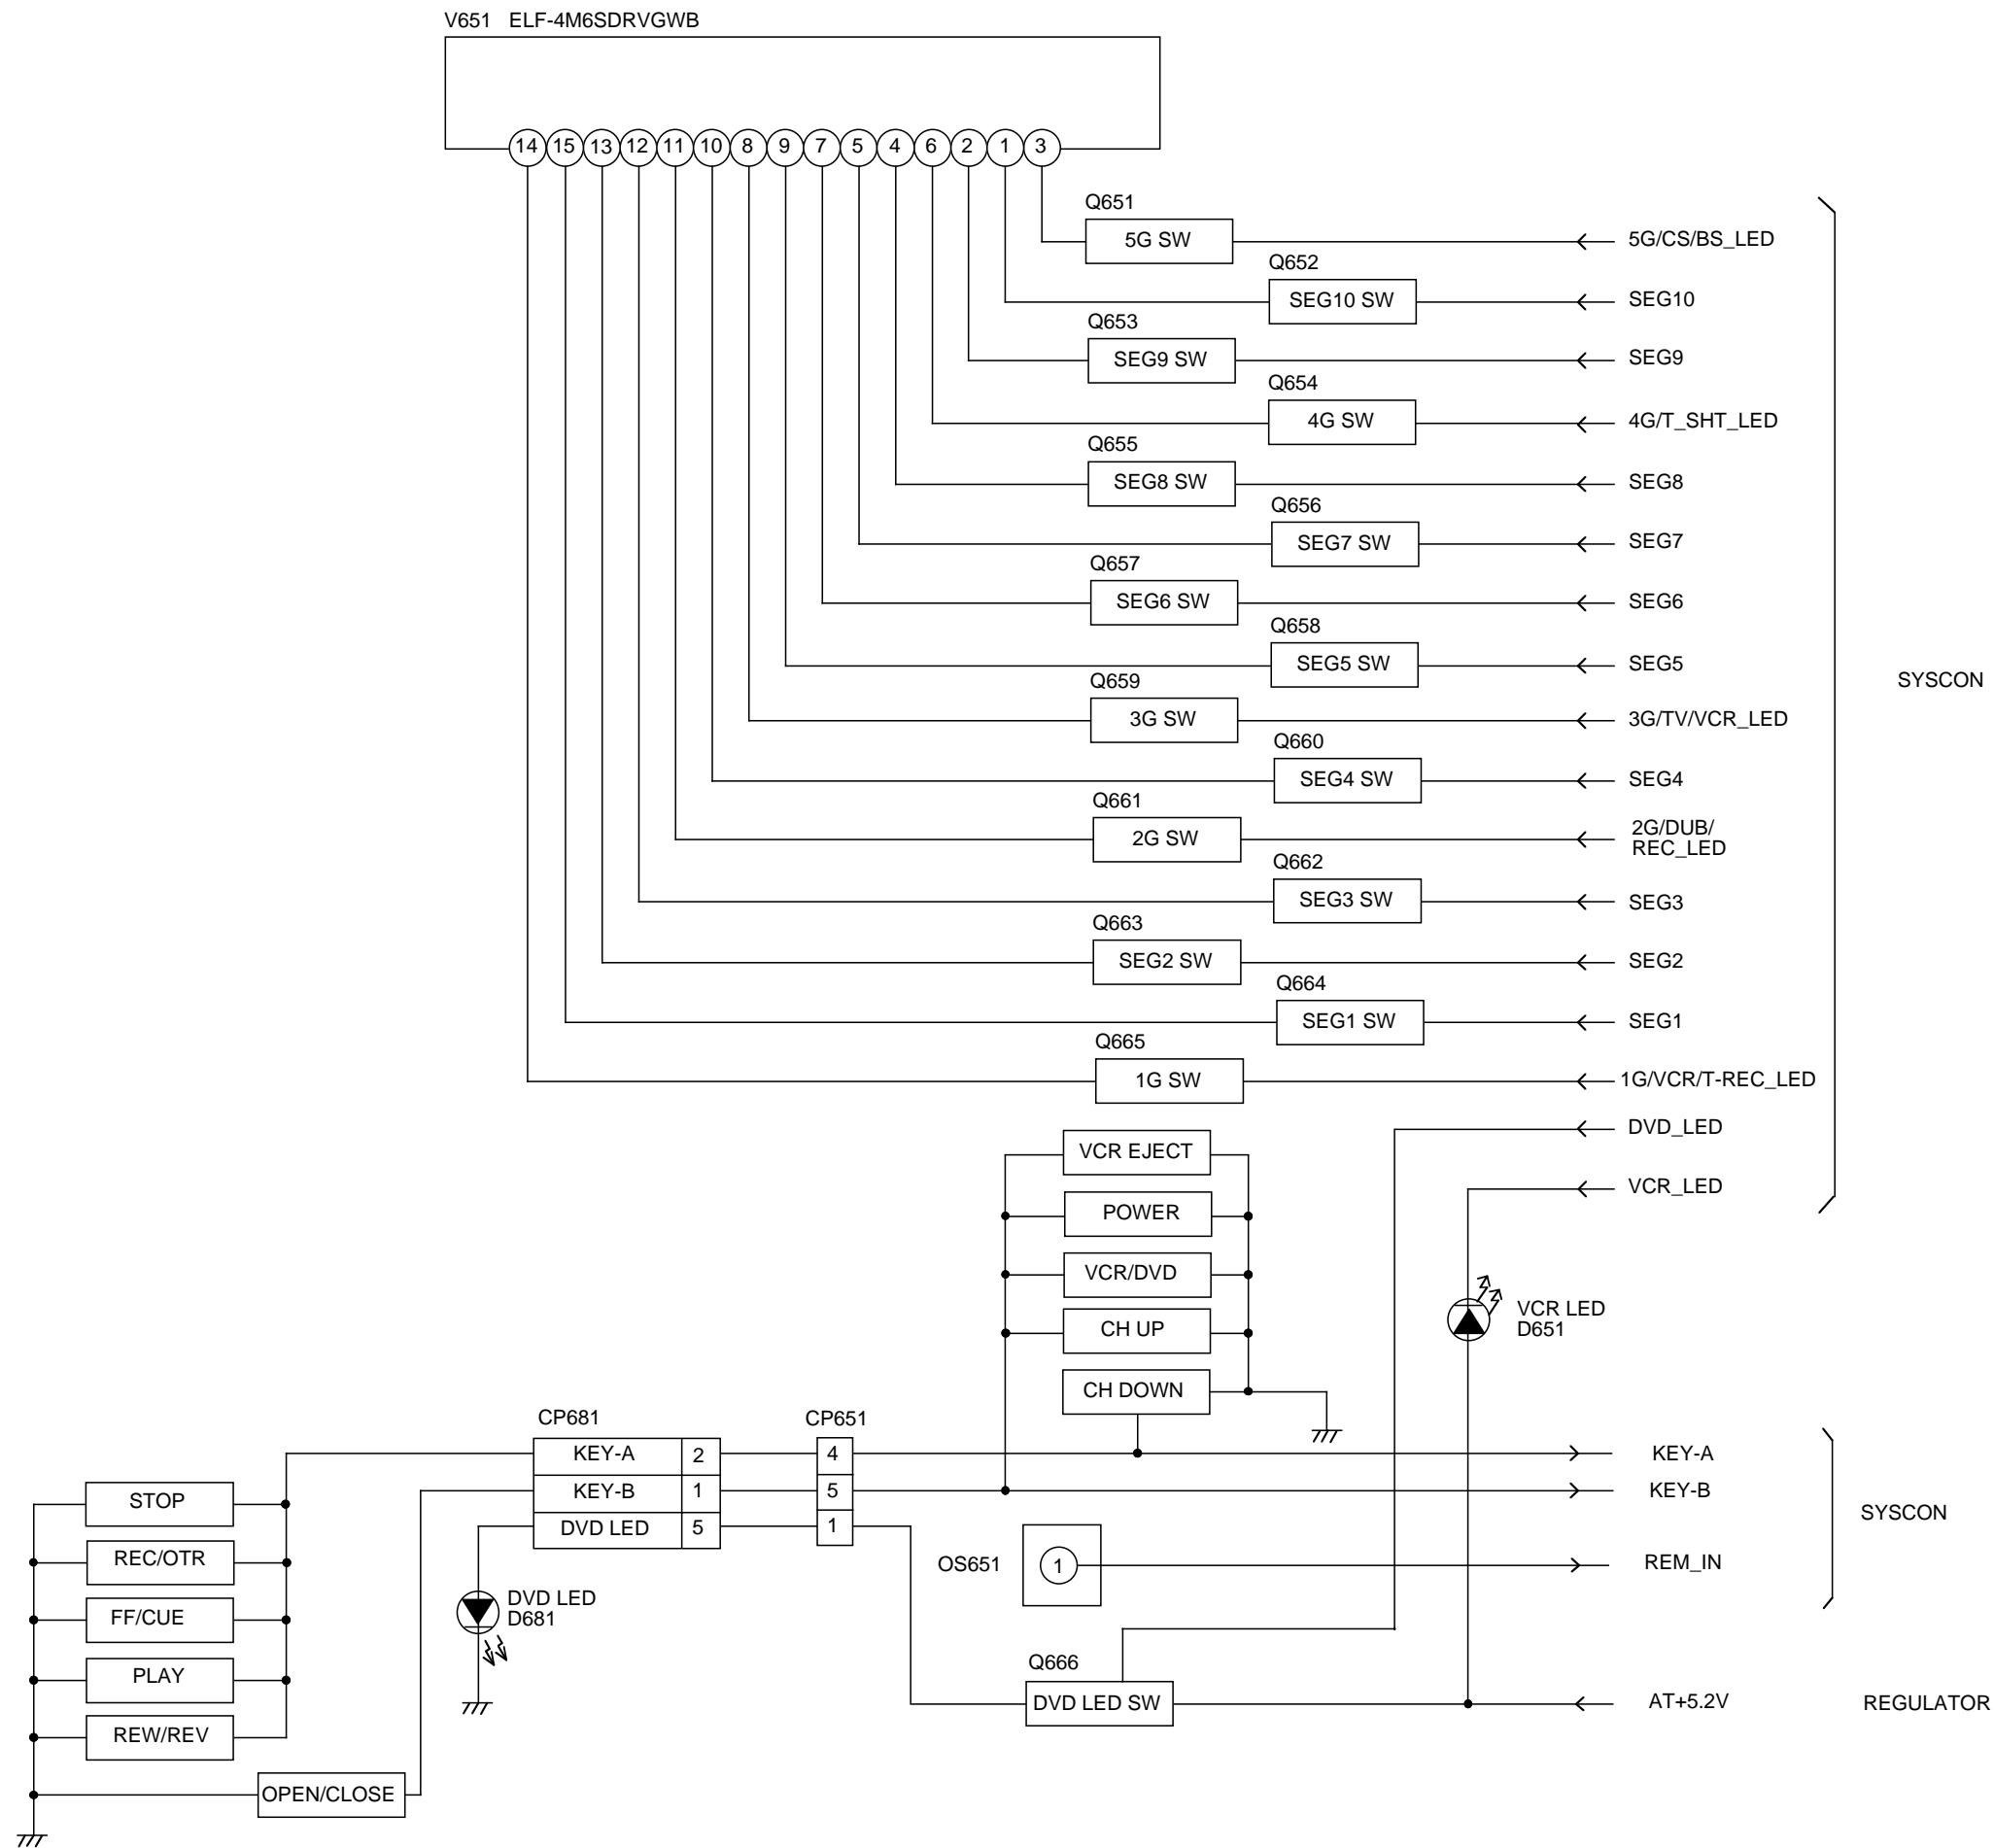


## HI-FI/DEMODULATOR BLOCK DIAGRAM

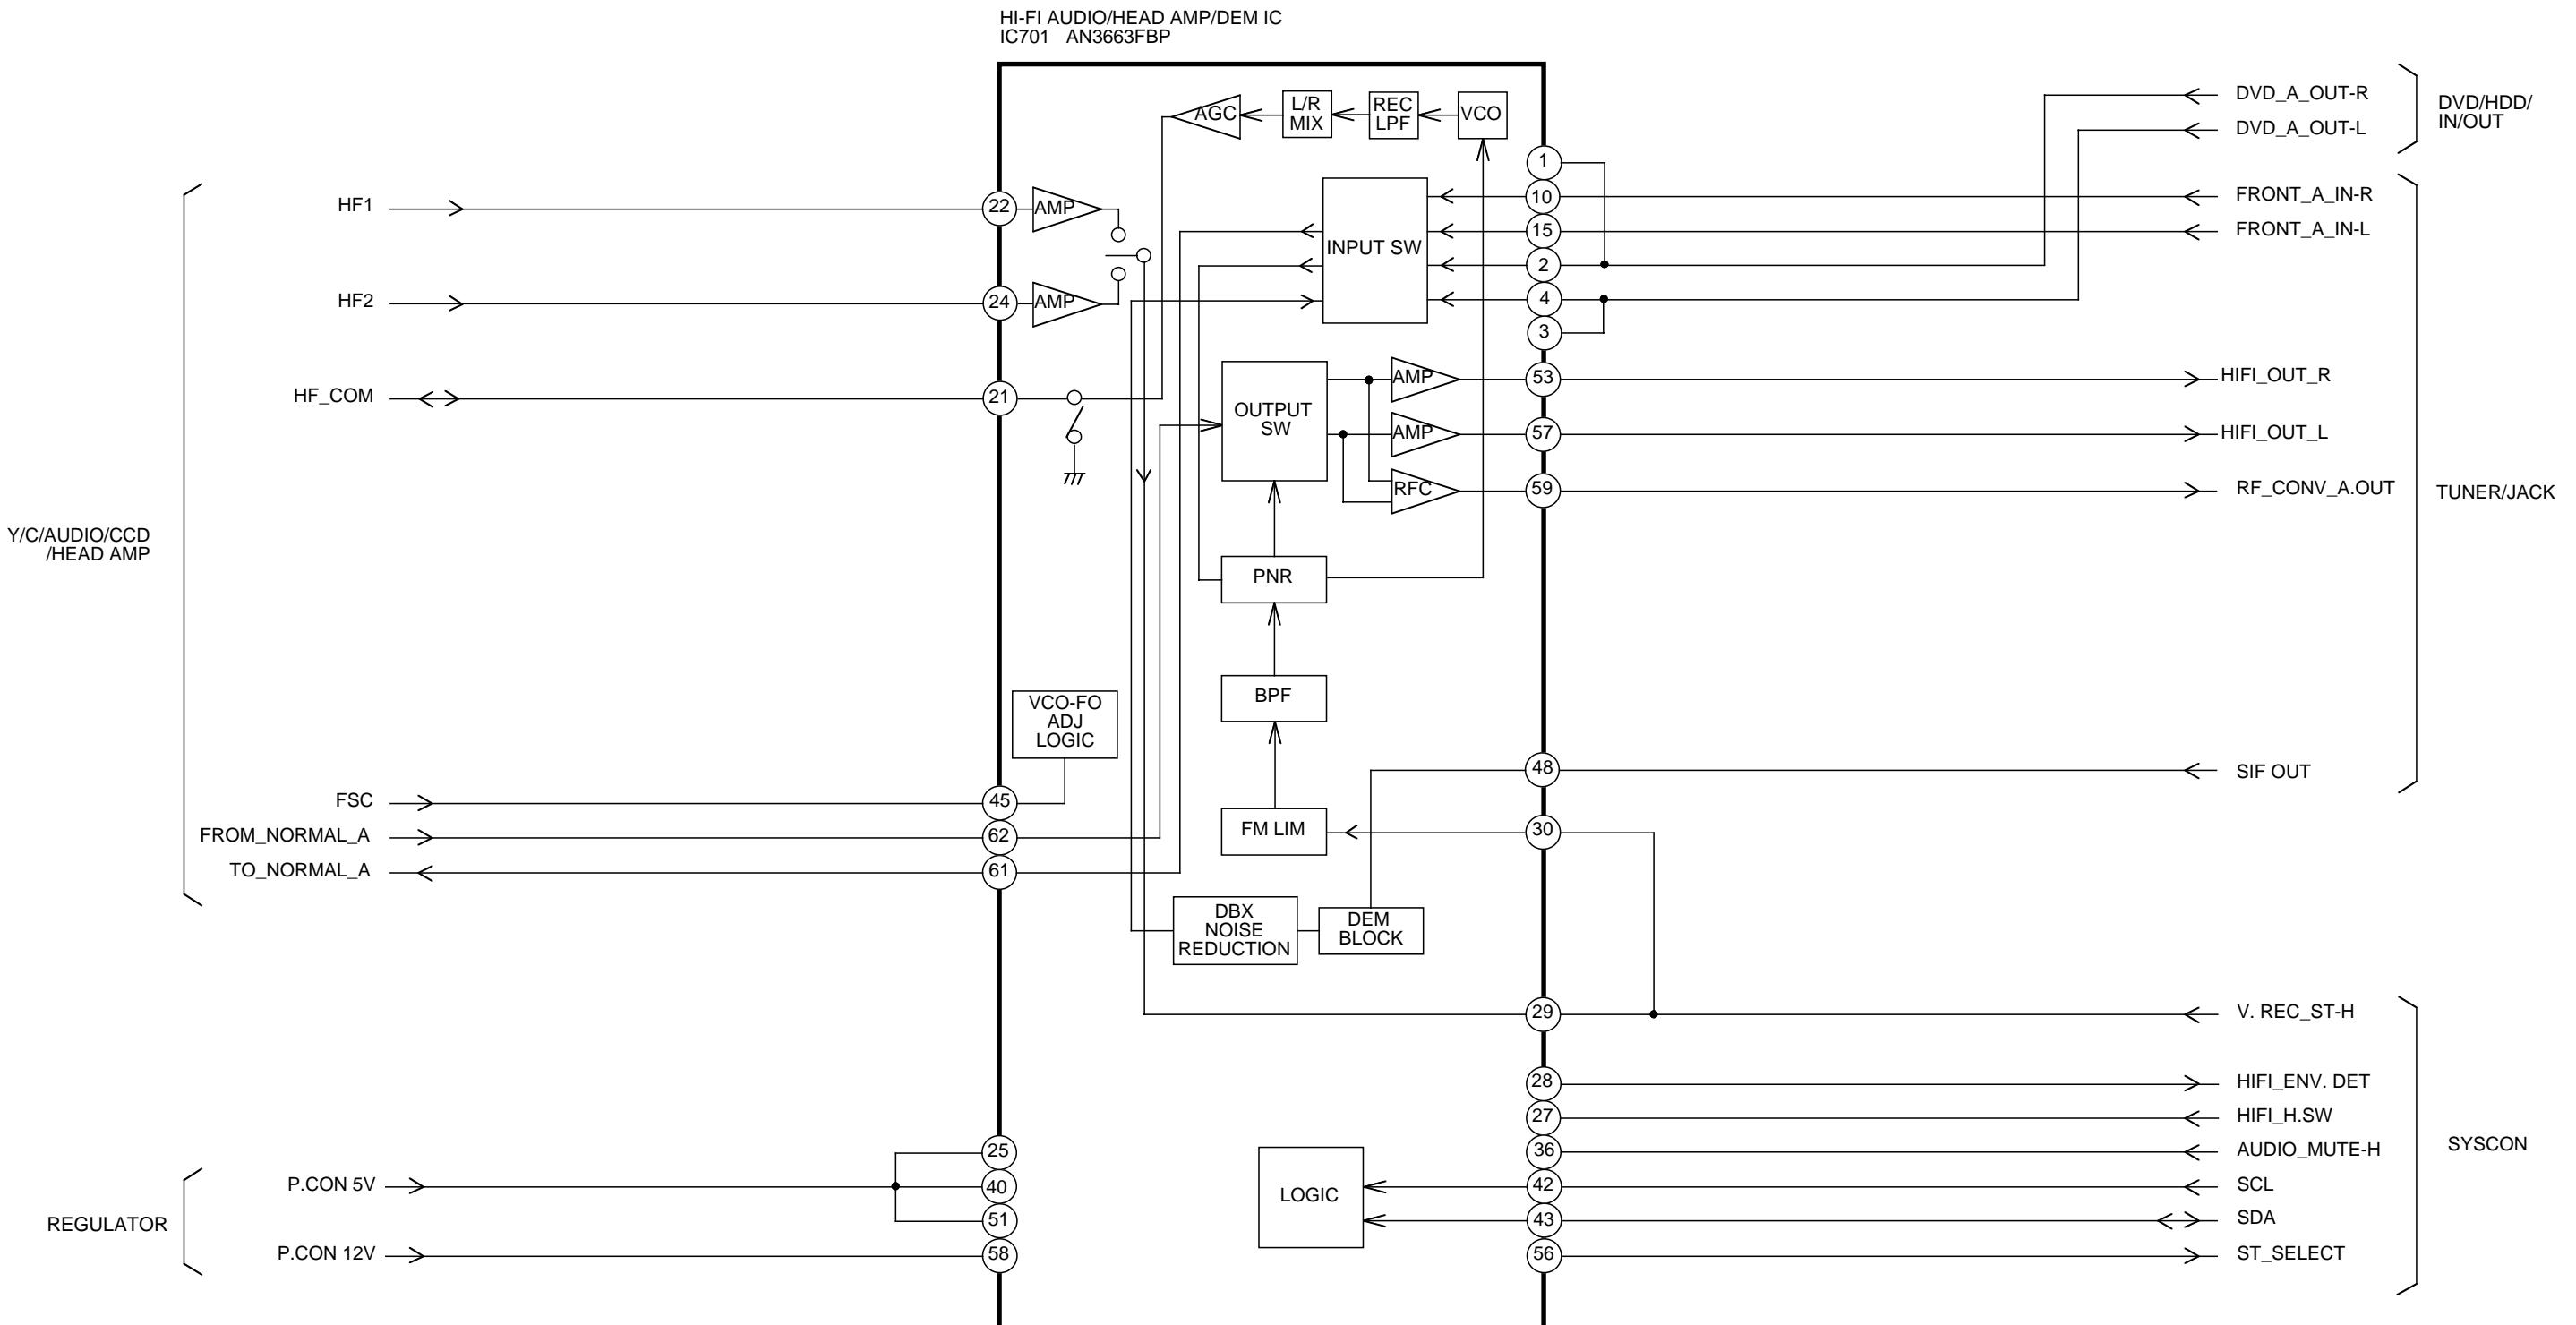


## **TUNER/JACK BLOCK DIAGRAM**

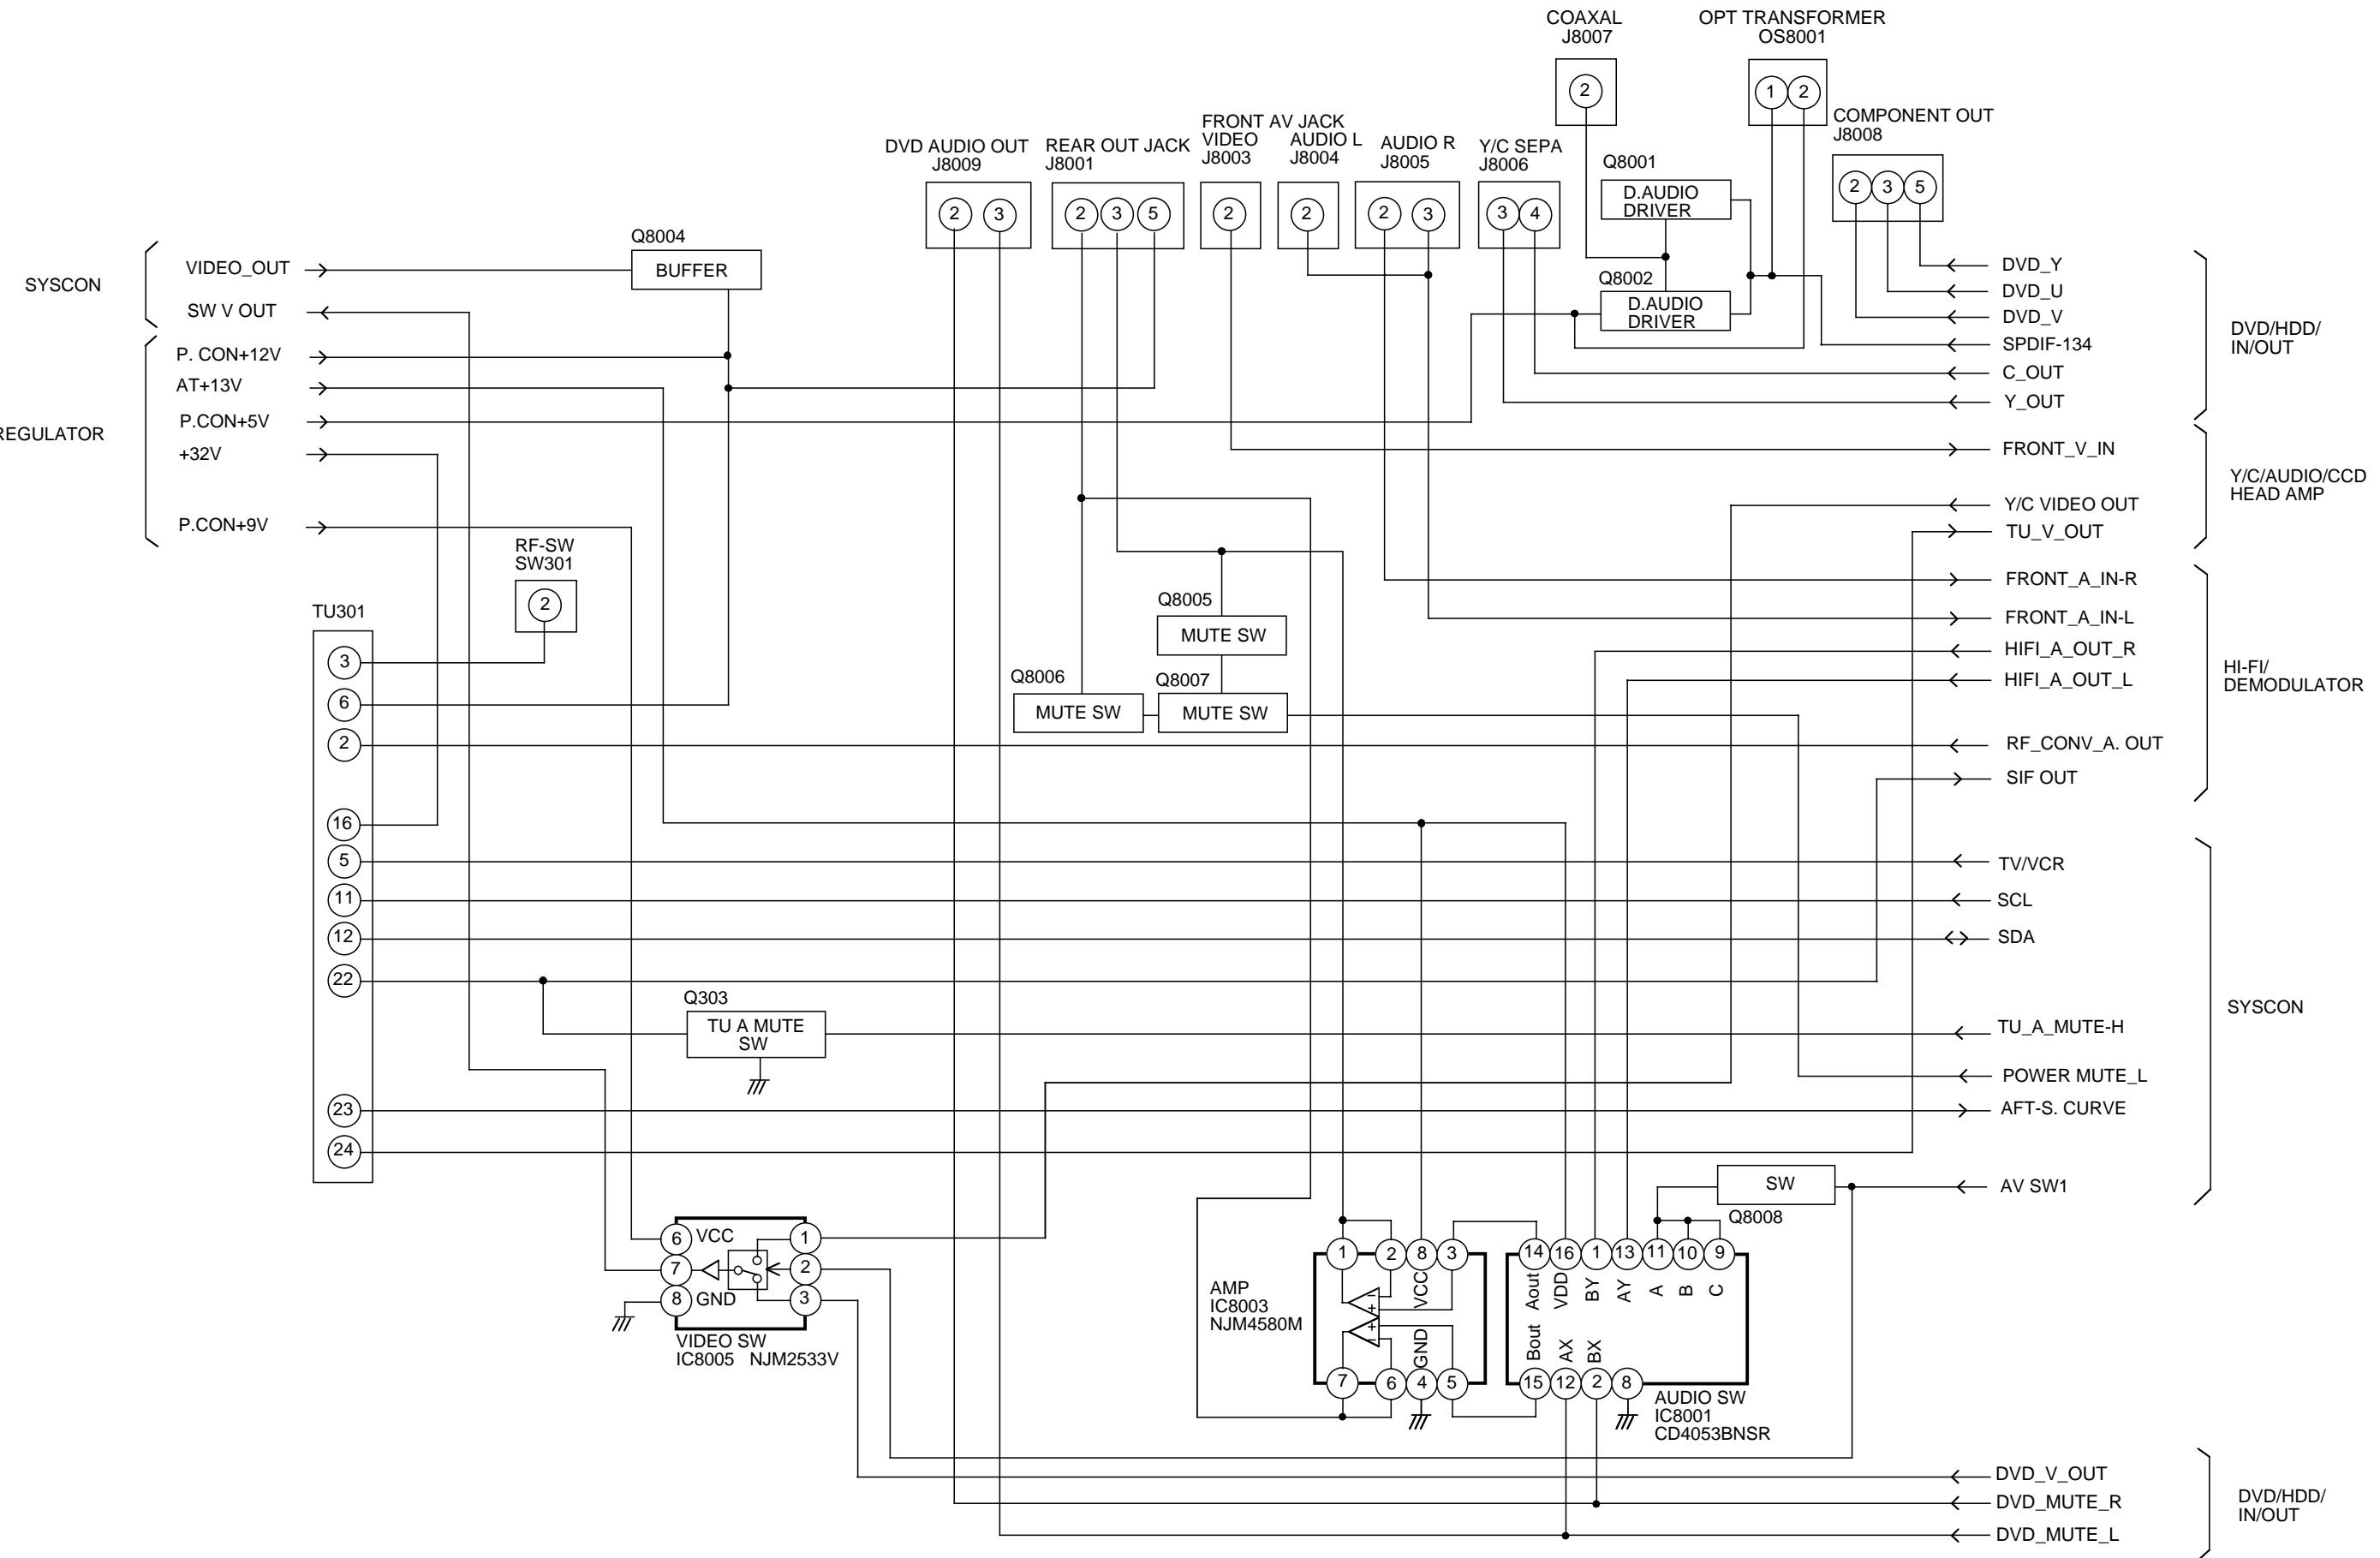

## DVD/HDD IN/OUT BLOCK DIAGRAM

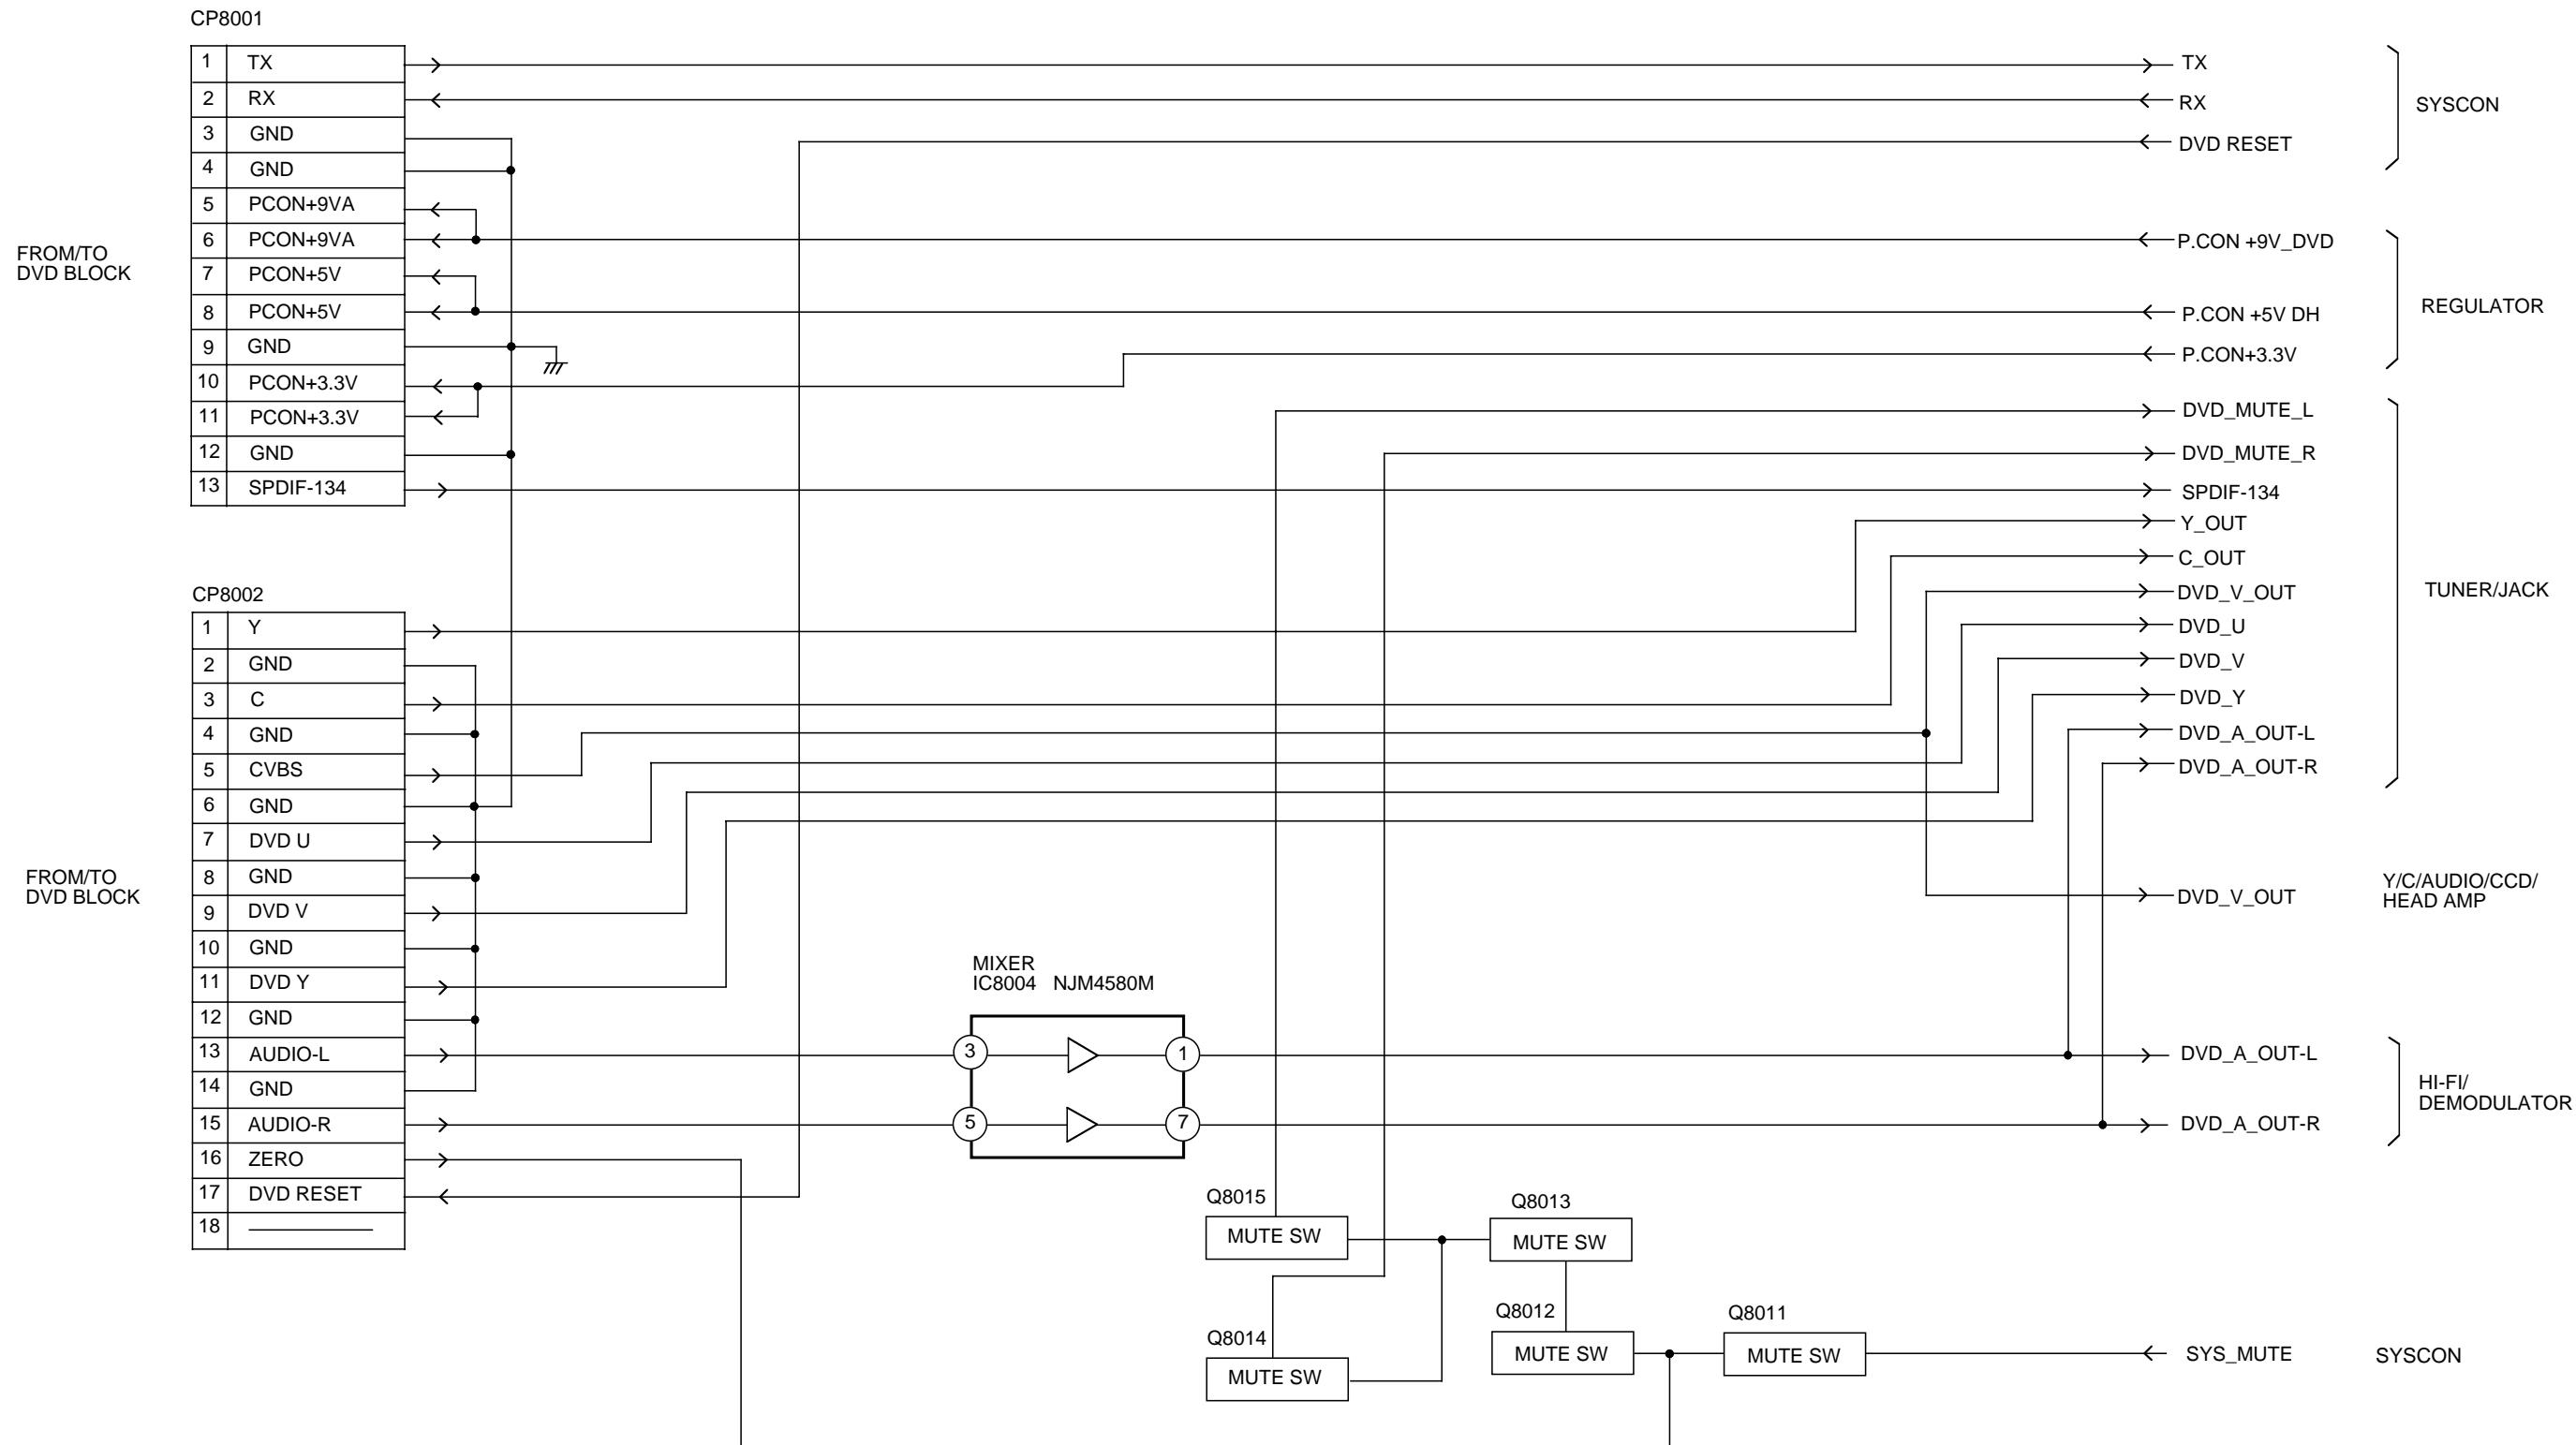


## POWER BLOCK DIAGRAM

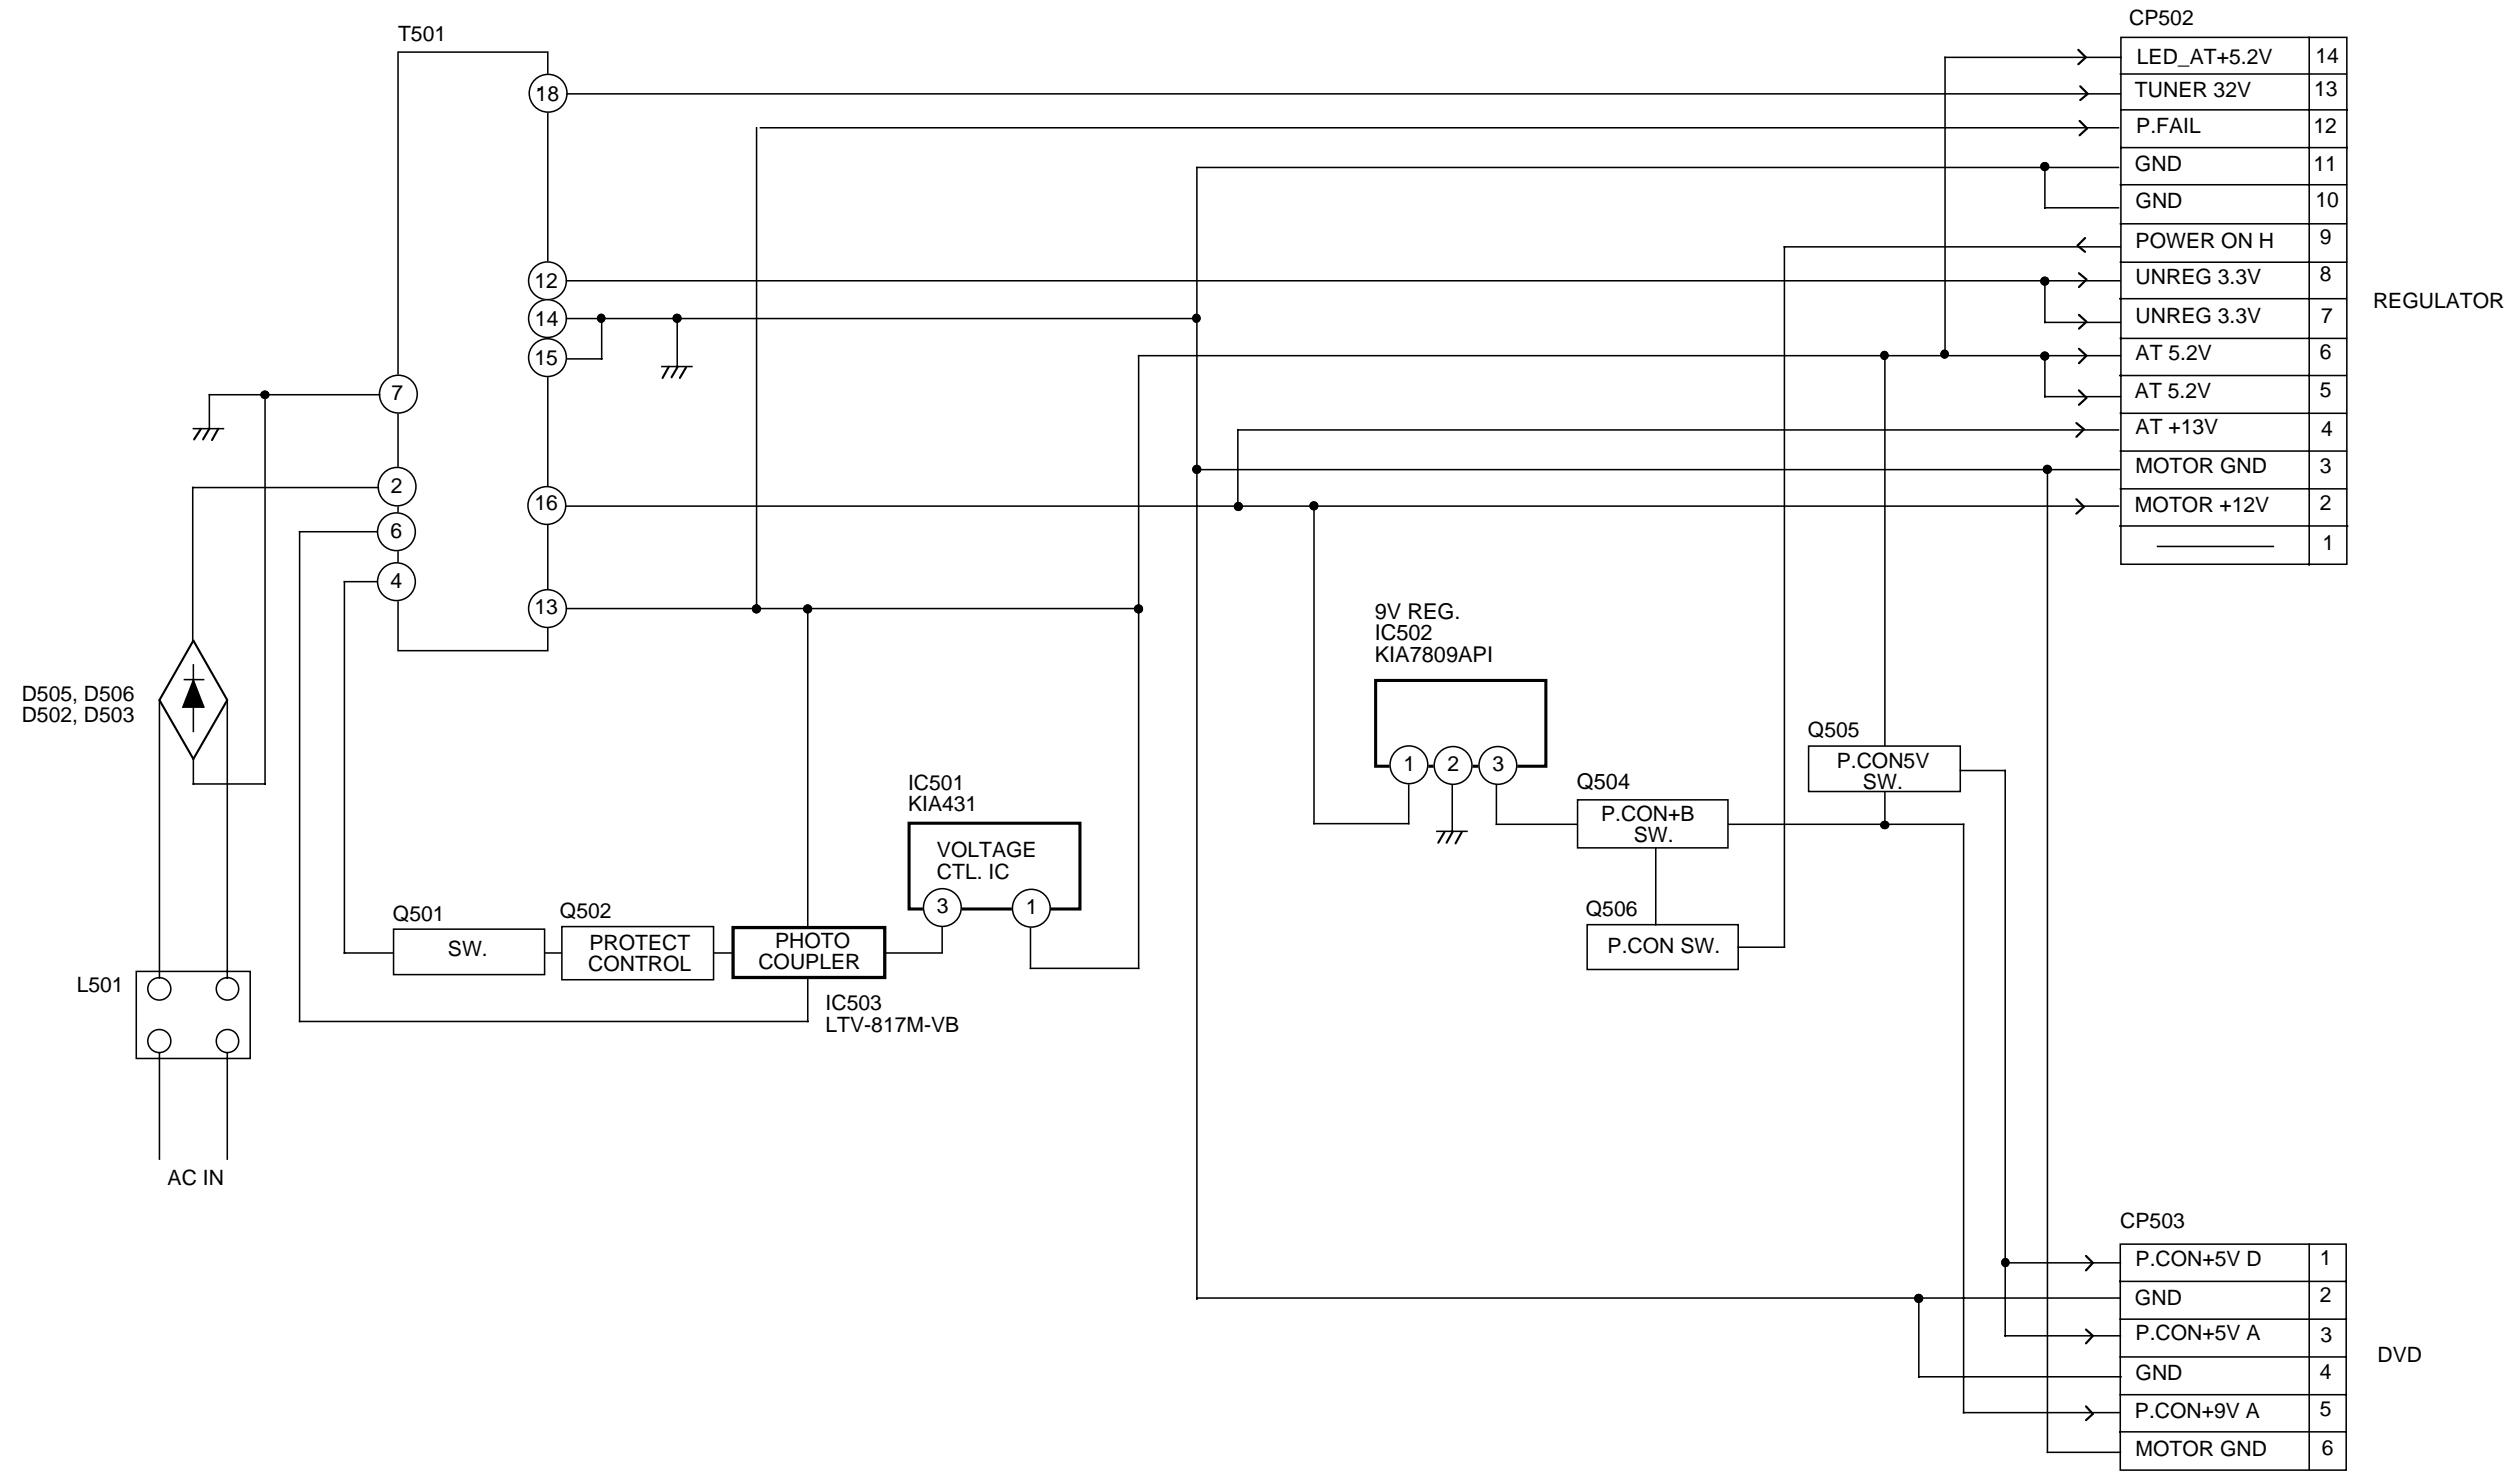


# PRINTED CIRCUIT BOARDS


DVD MT (TOP SIDE)

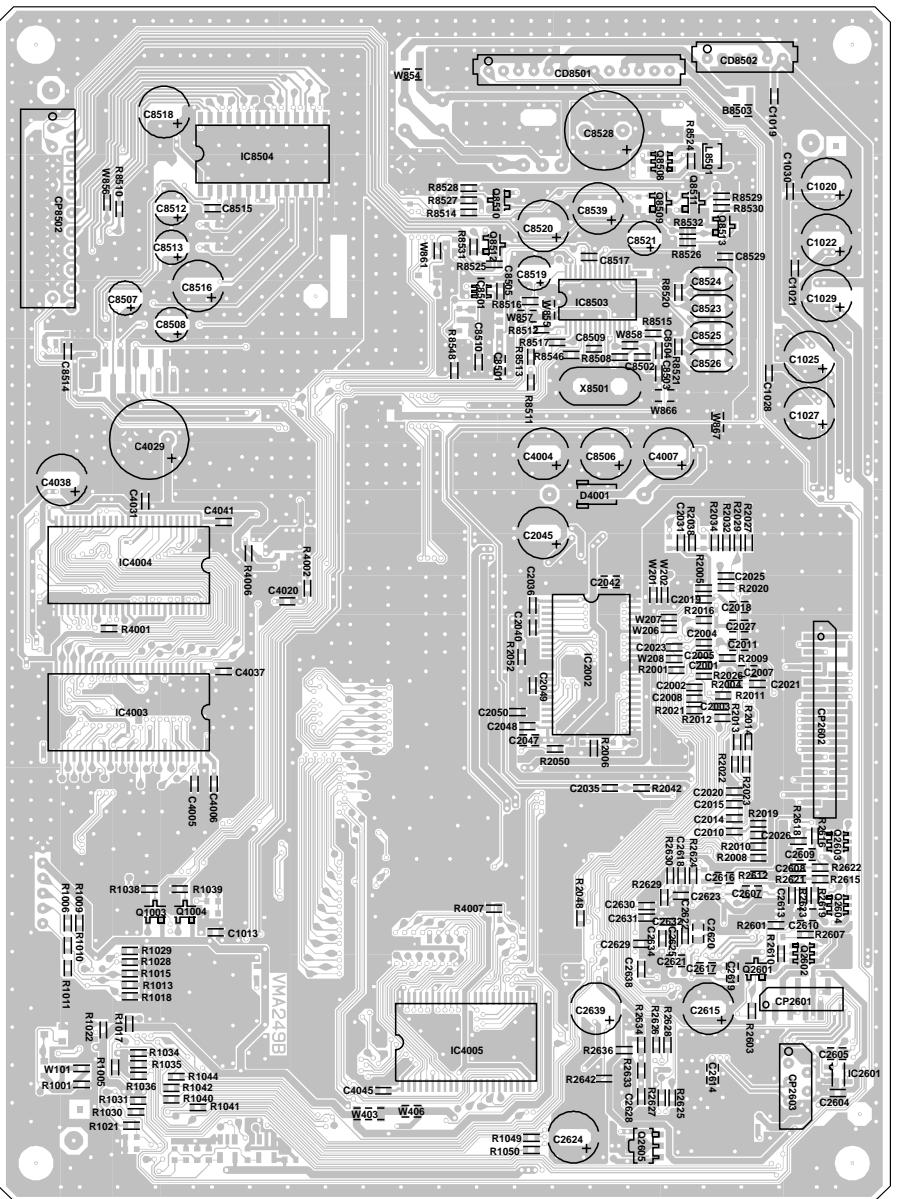


DVD MT (BOTTOM SIDE)

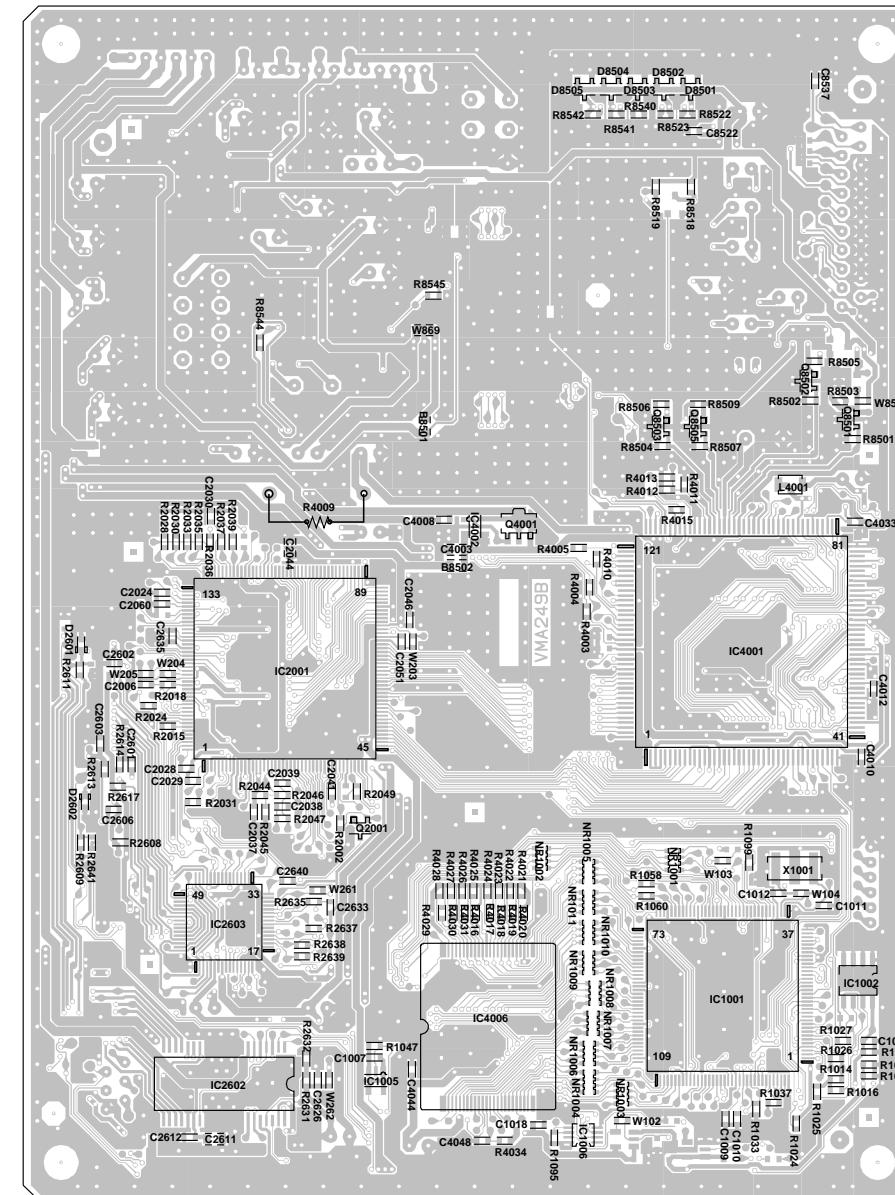

**PRINTED CIRCUIT BOARDS  
VCR MT (INSERTED PARTS)  
SOLDER SIDE**

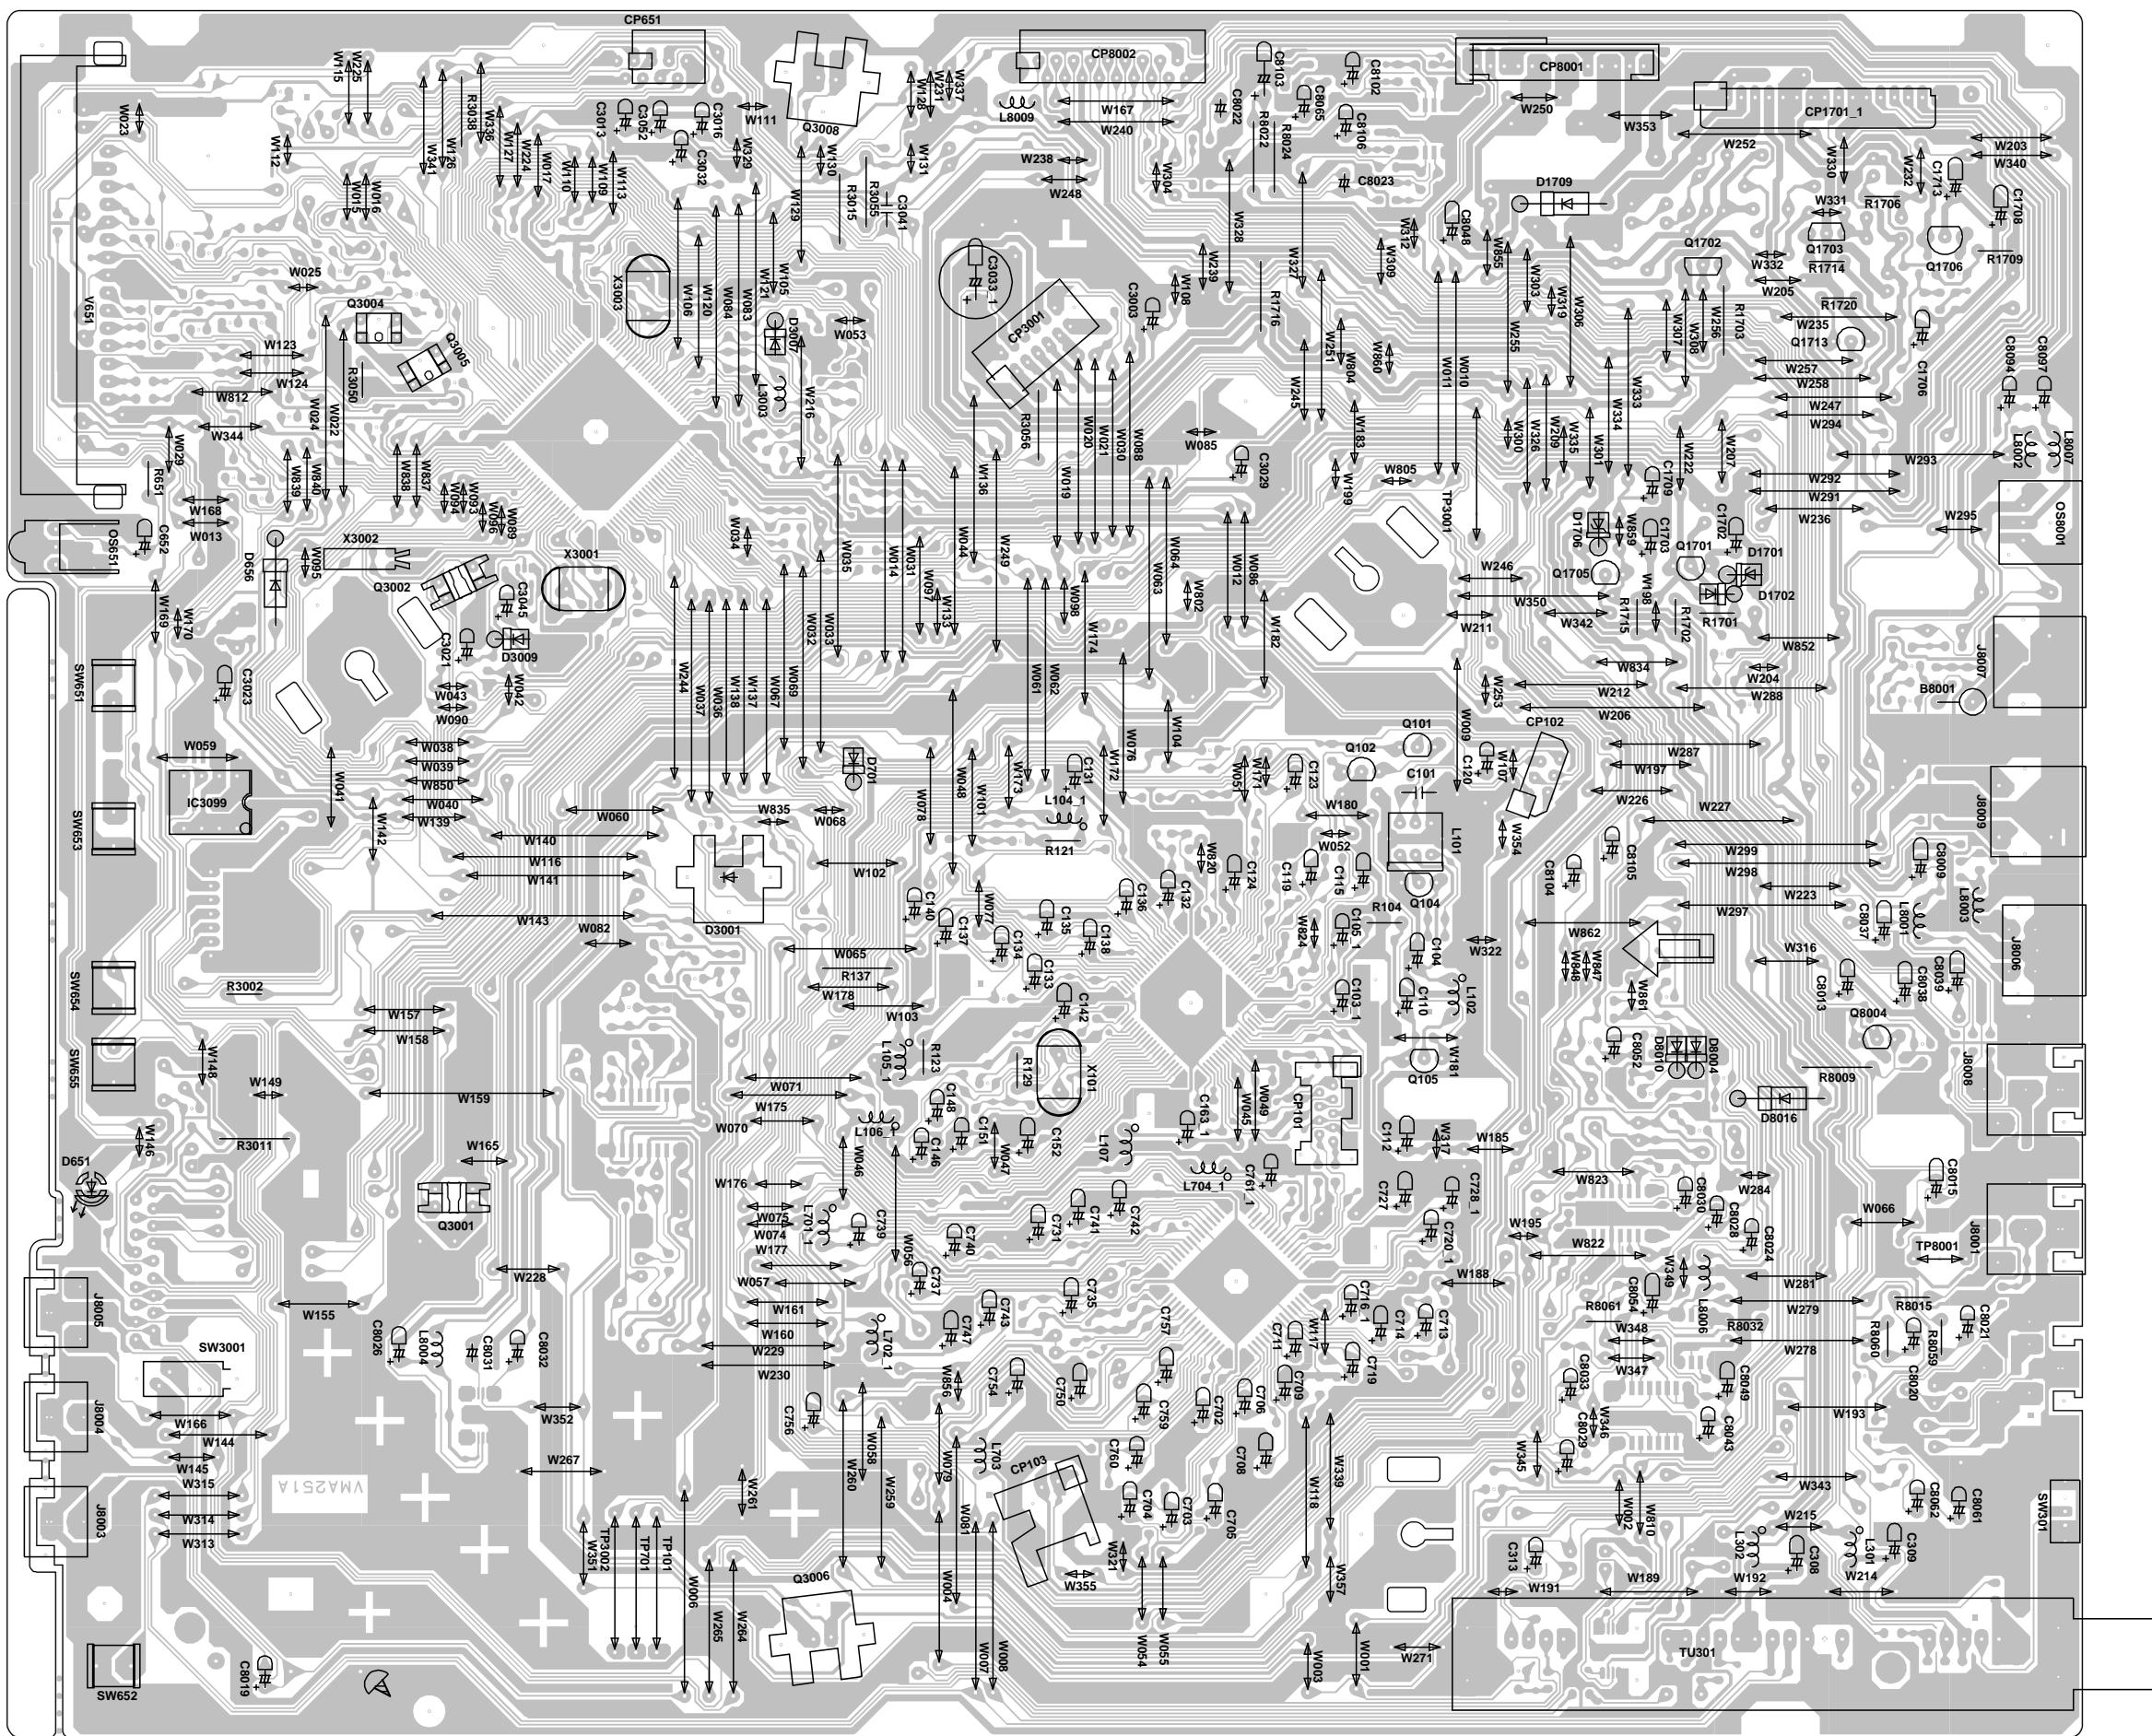


**PRINTED CIRCUIT BOARDS  
VCR MT (CHIP MOUNTED PARTS)  
SOLDER SIDE**

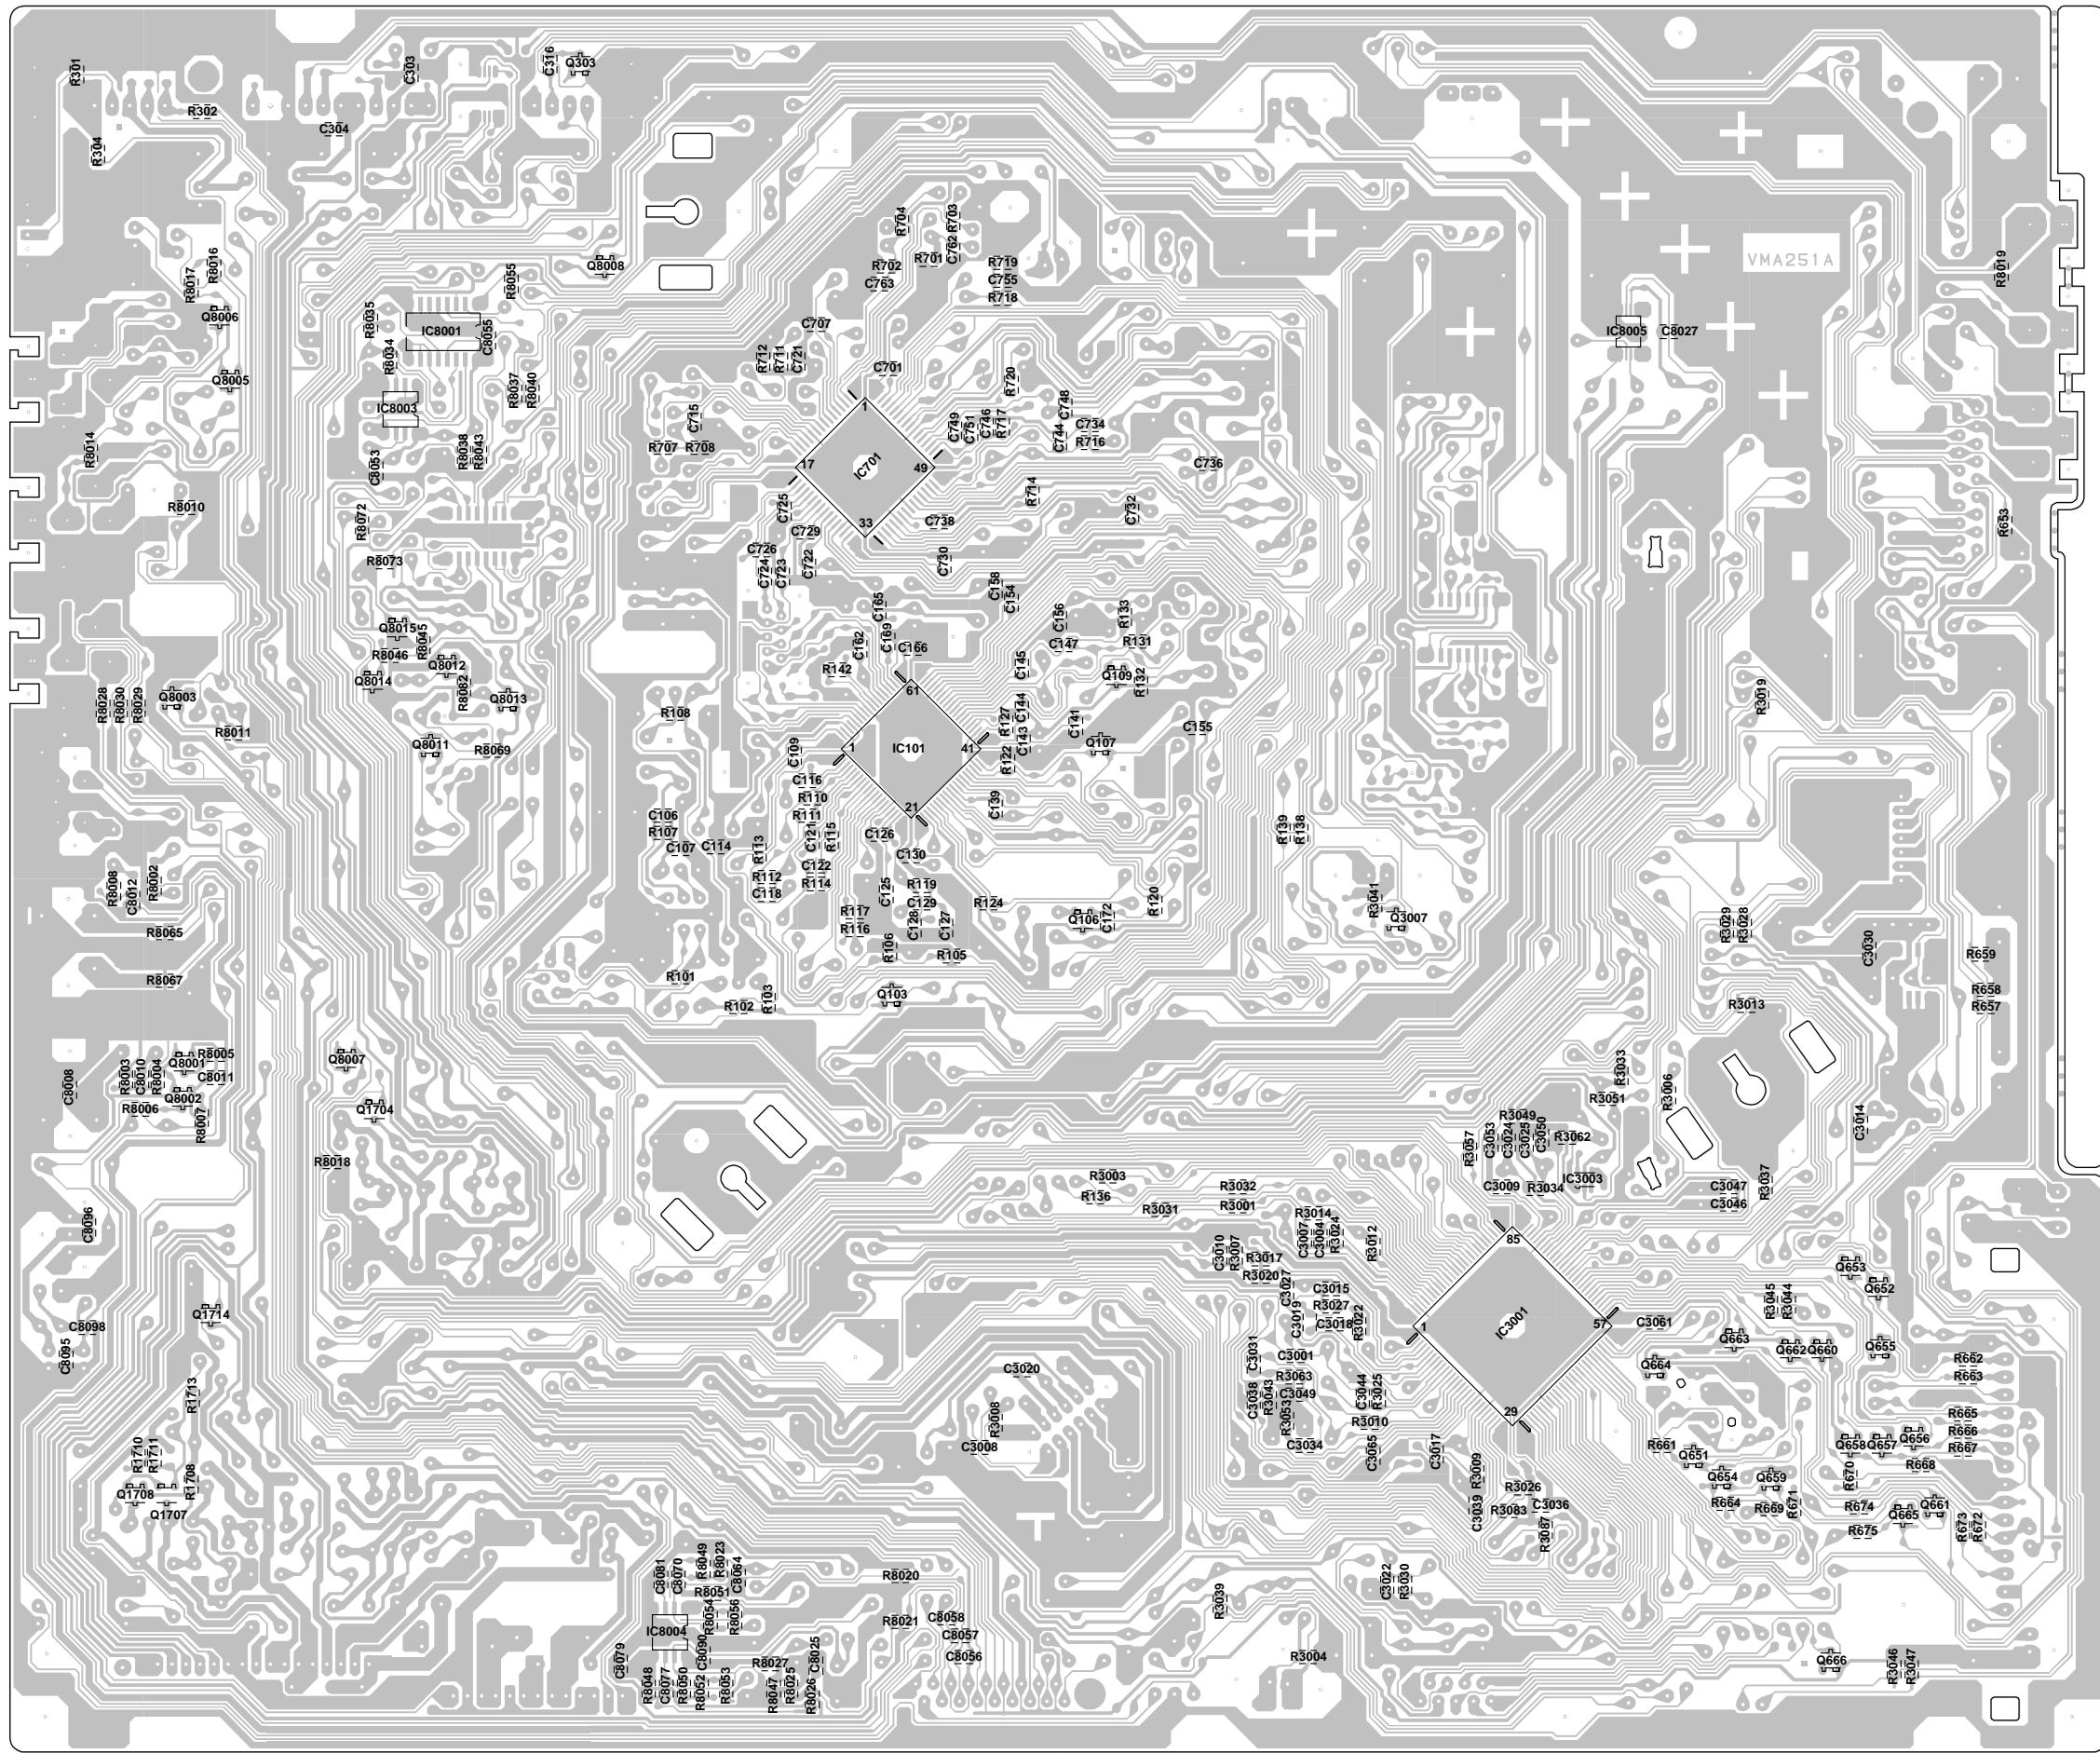


# **PRINTED CIRCUIT BOARDS**

## **POWER/OPERATION**


### **SOLDER SIDE**

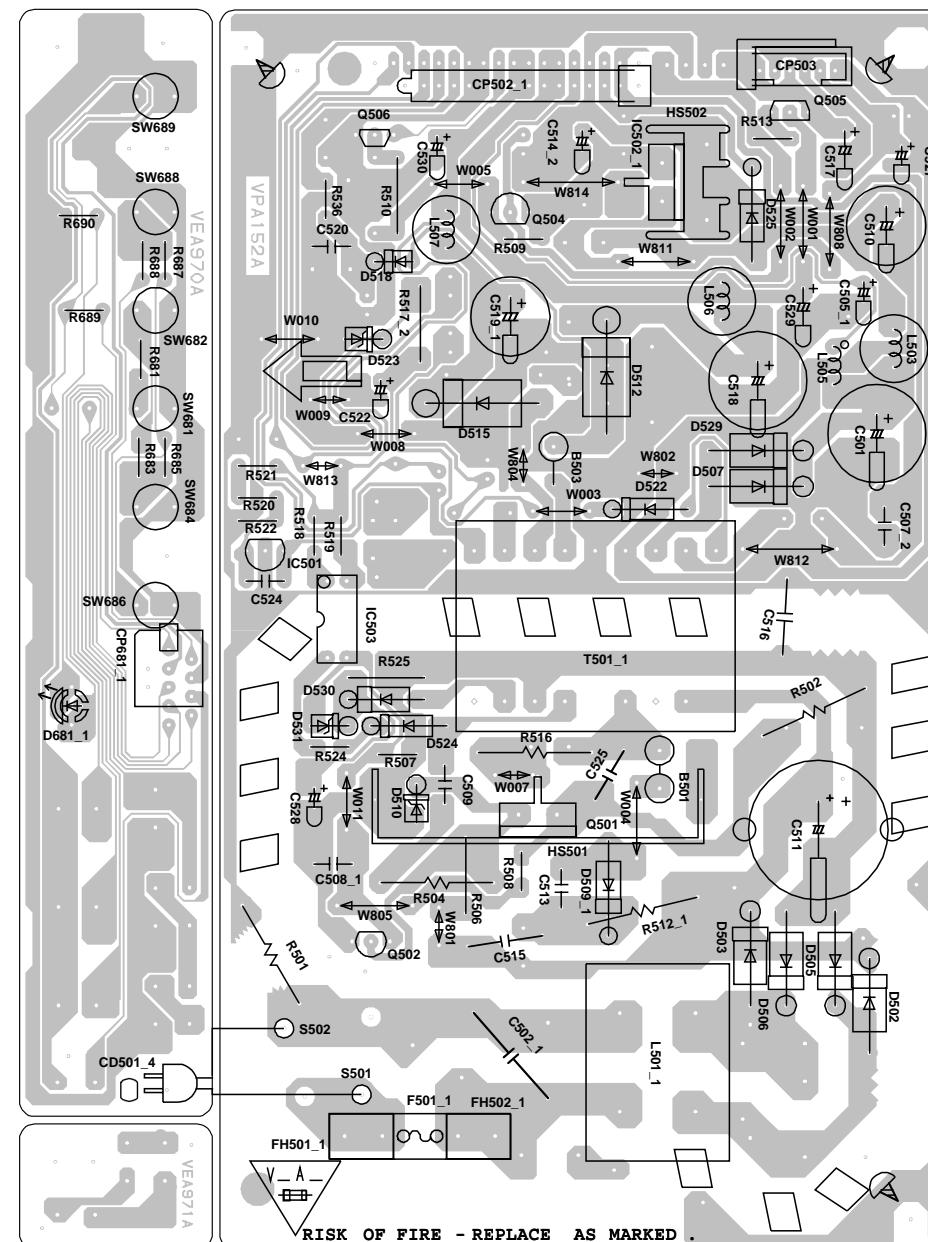


# READ CHANNEL SCHEMATIC DIAGRAM (DVD MAIN PCB)

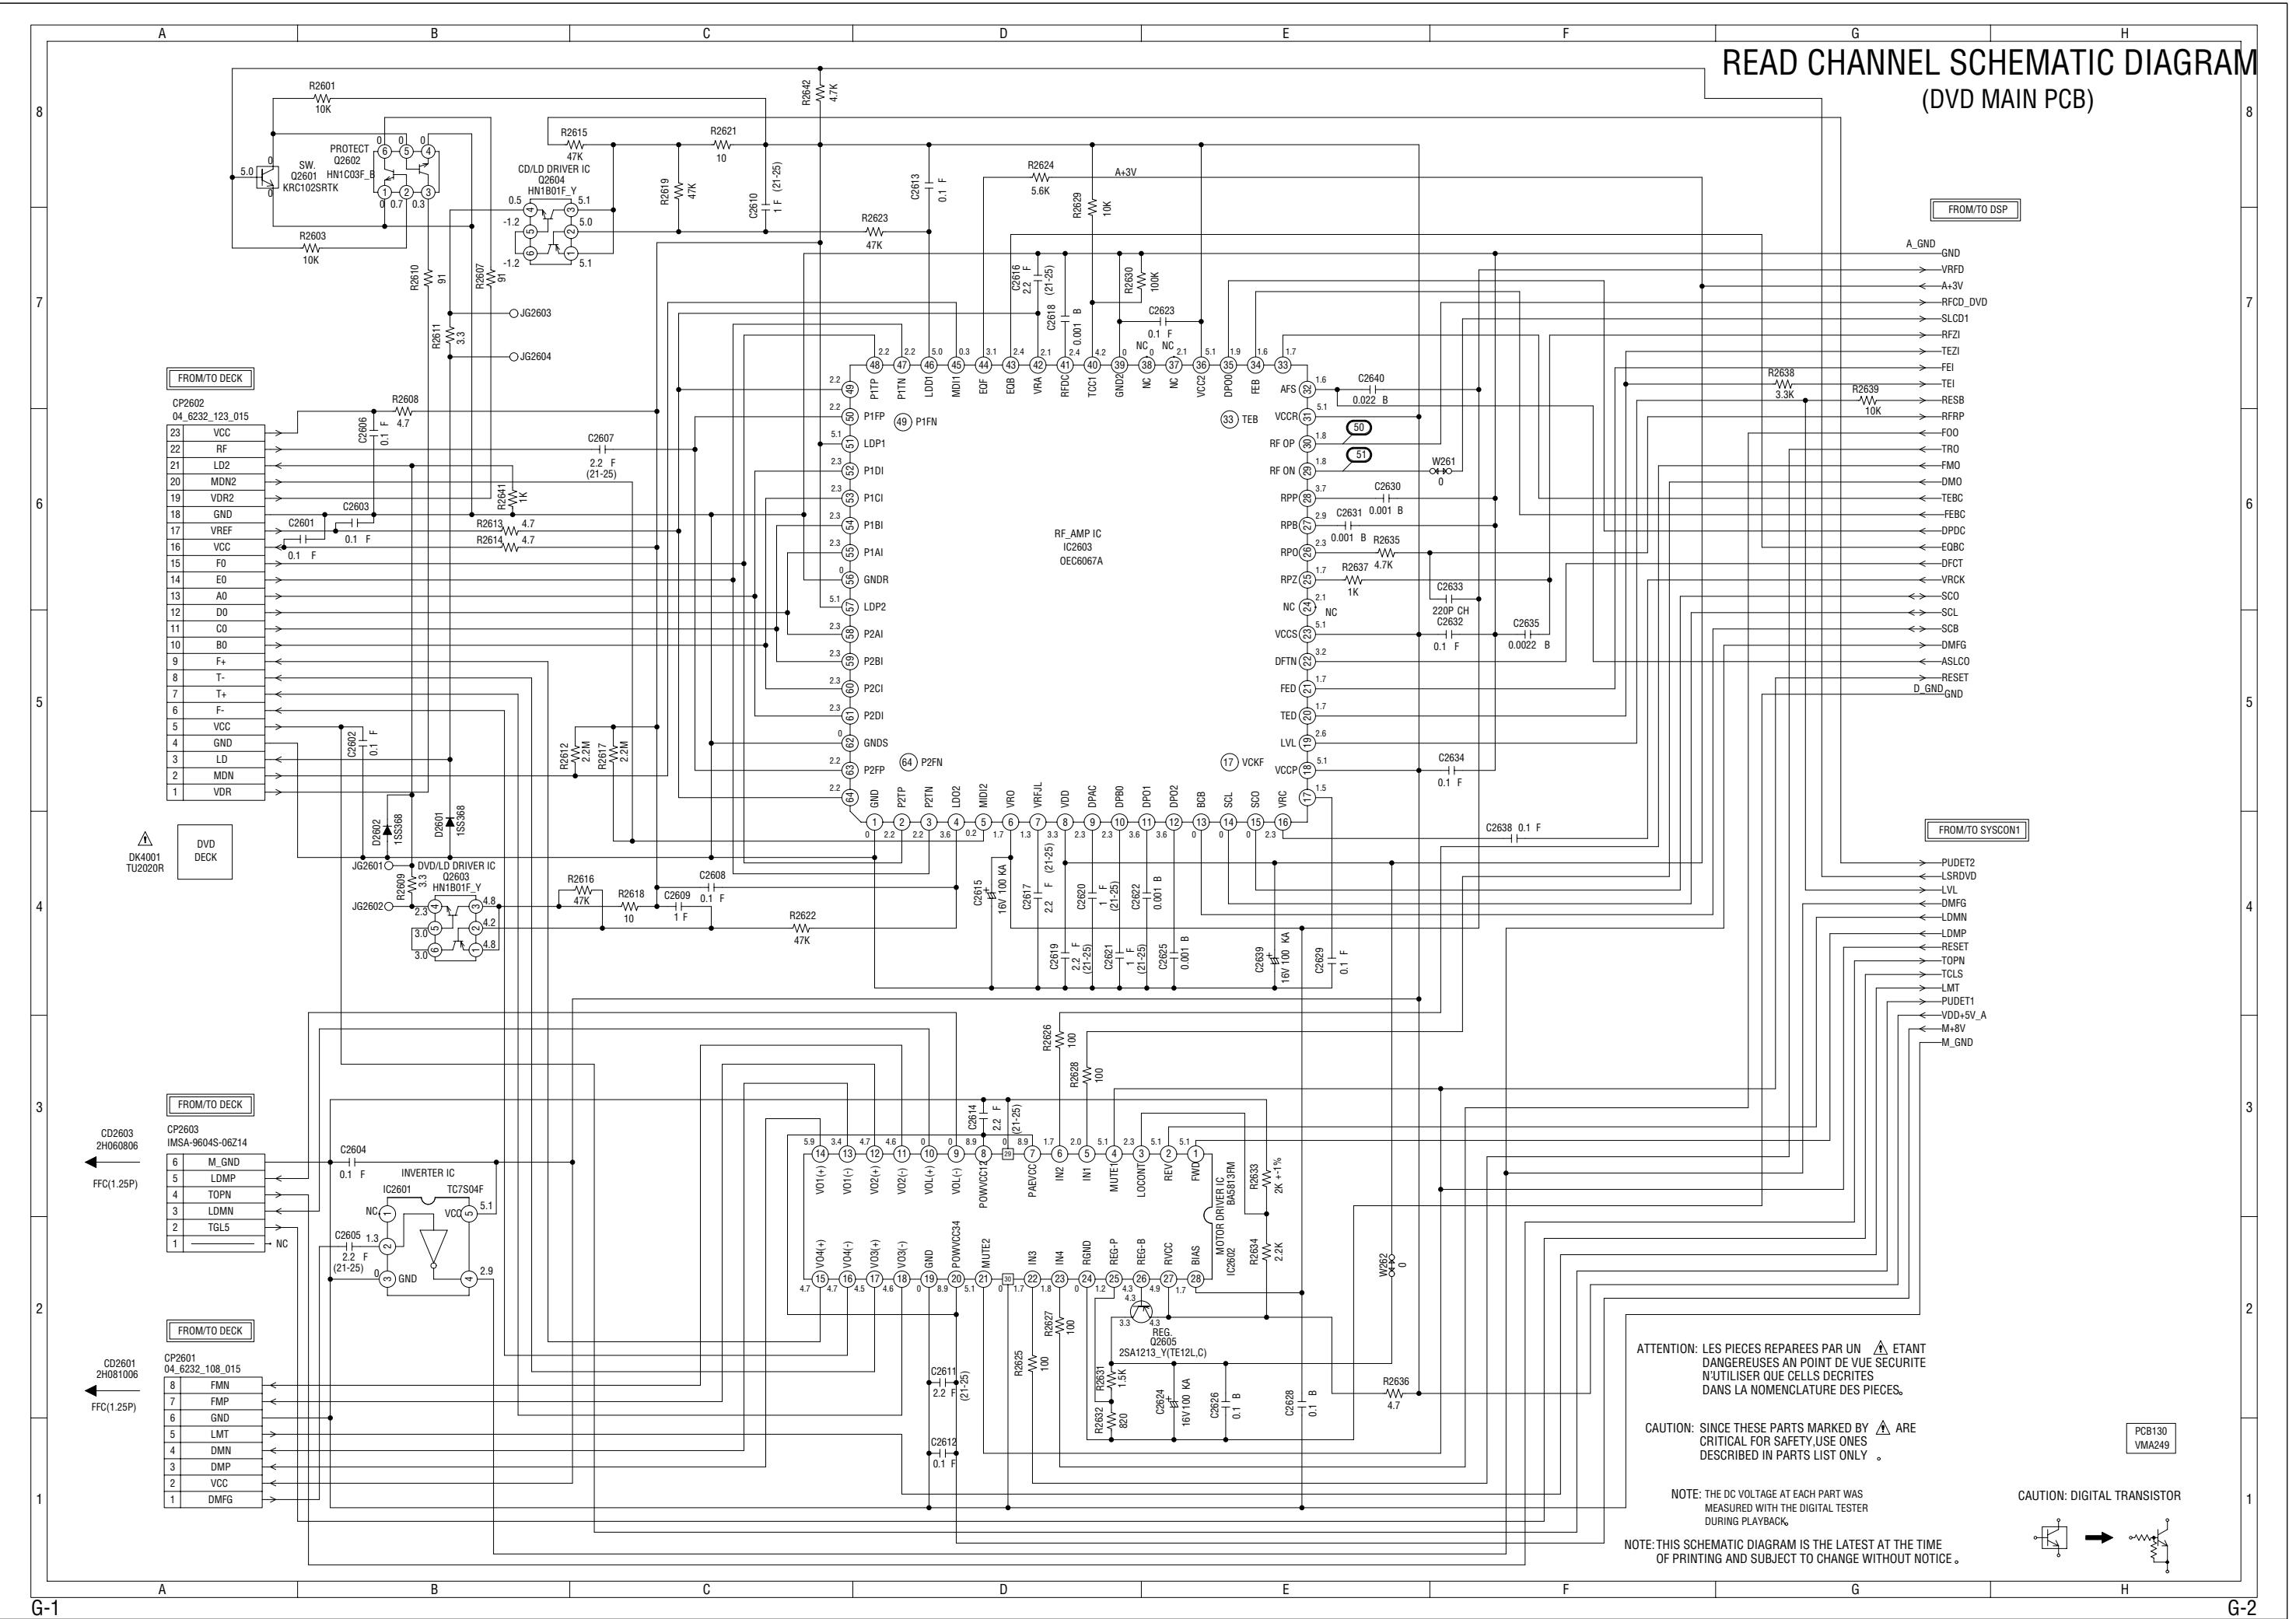


# DSP SCHEMATIC DIAGRAM (DVD MAIN PCB)

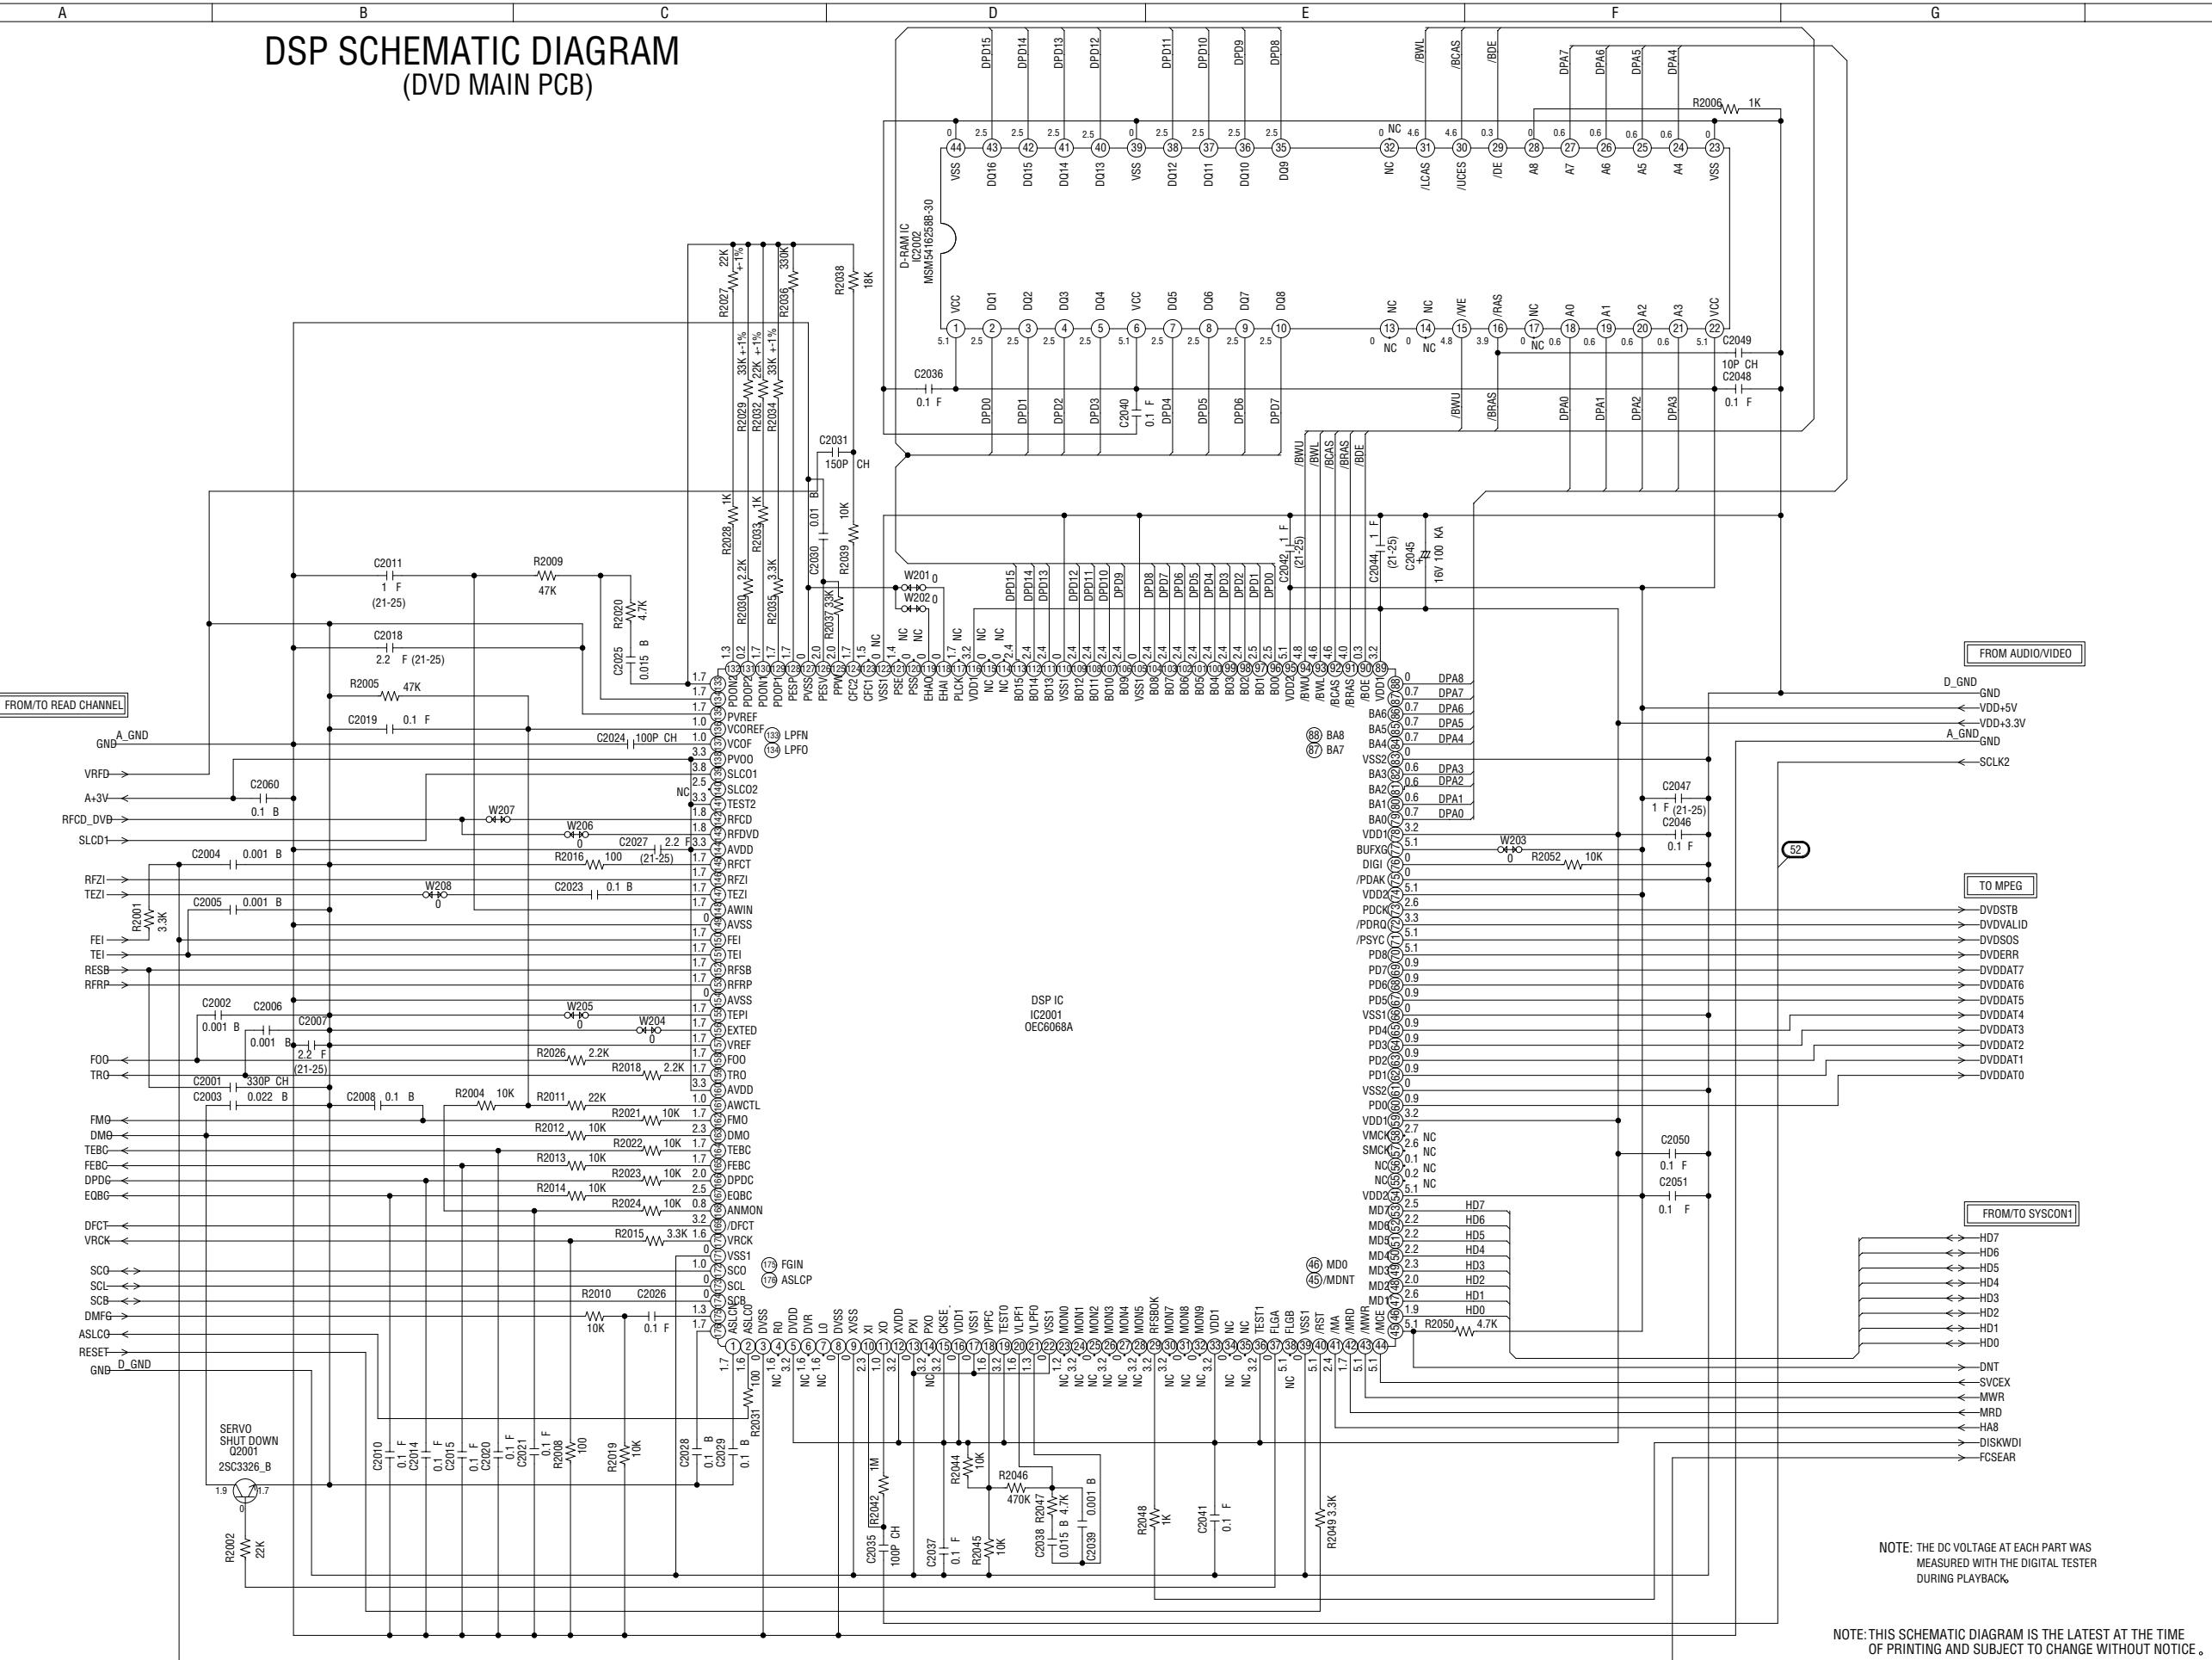


## MPEG SCHEMATIC DIAGRAM (DVD MAIN PCB)

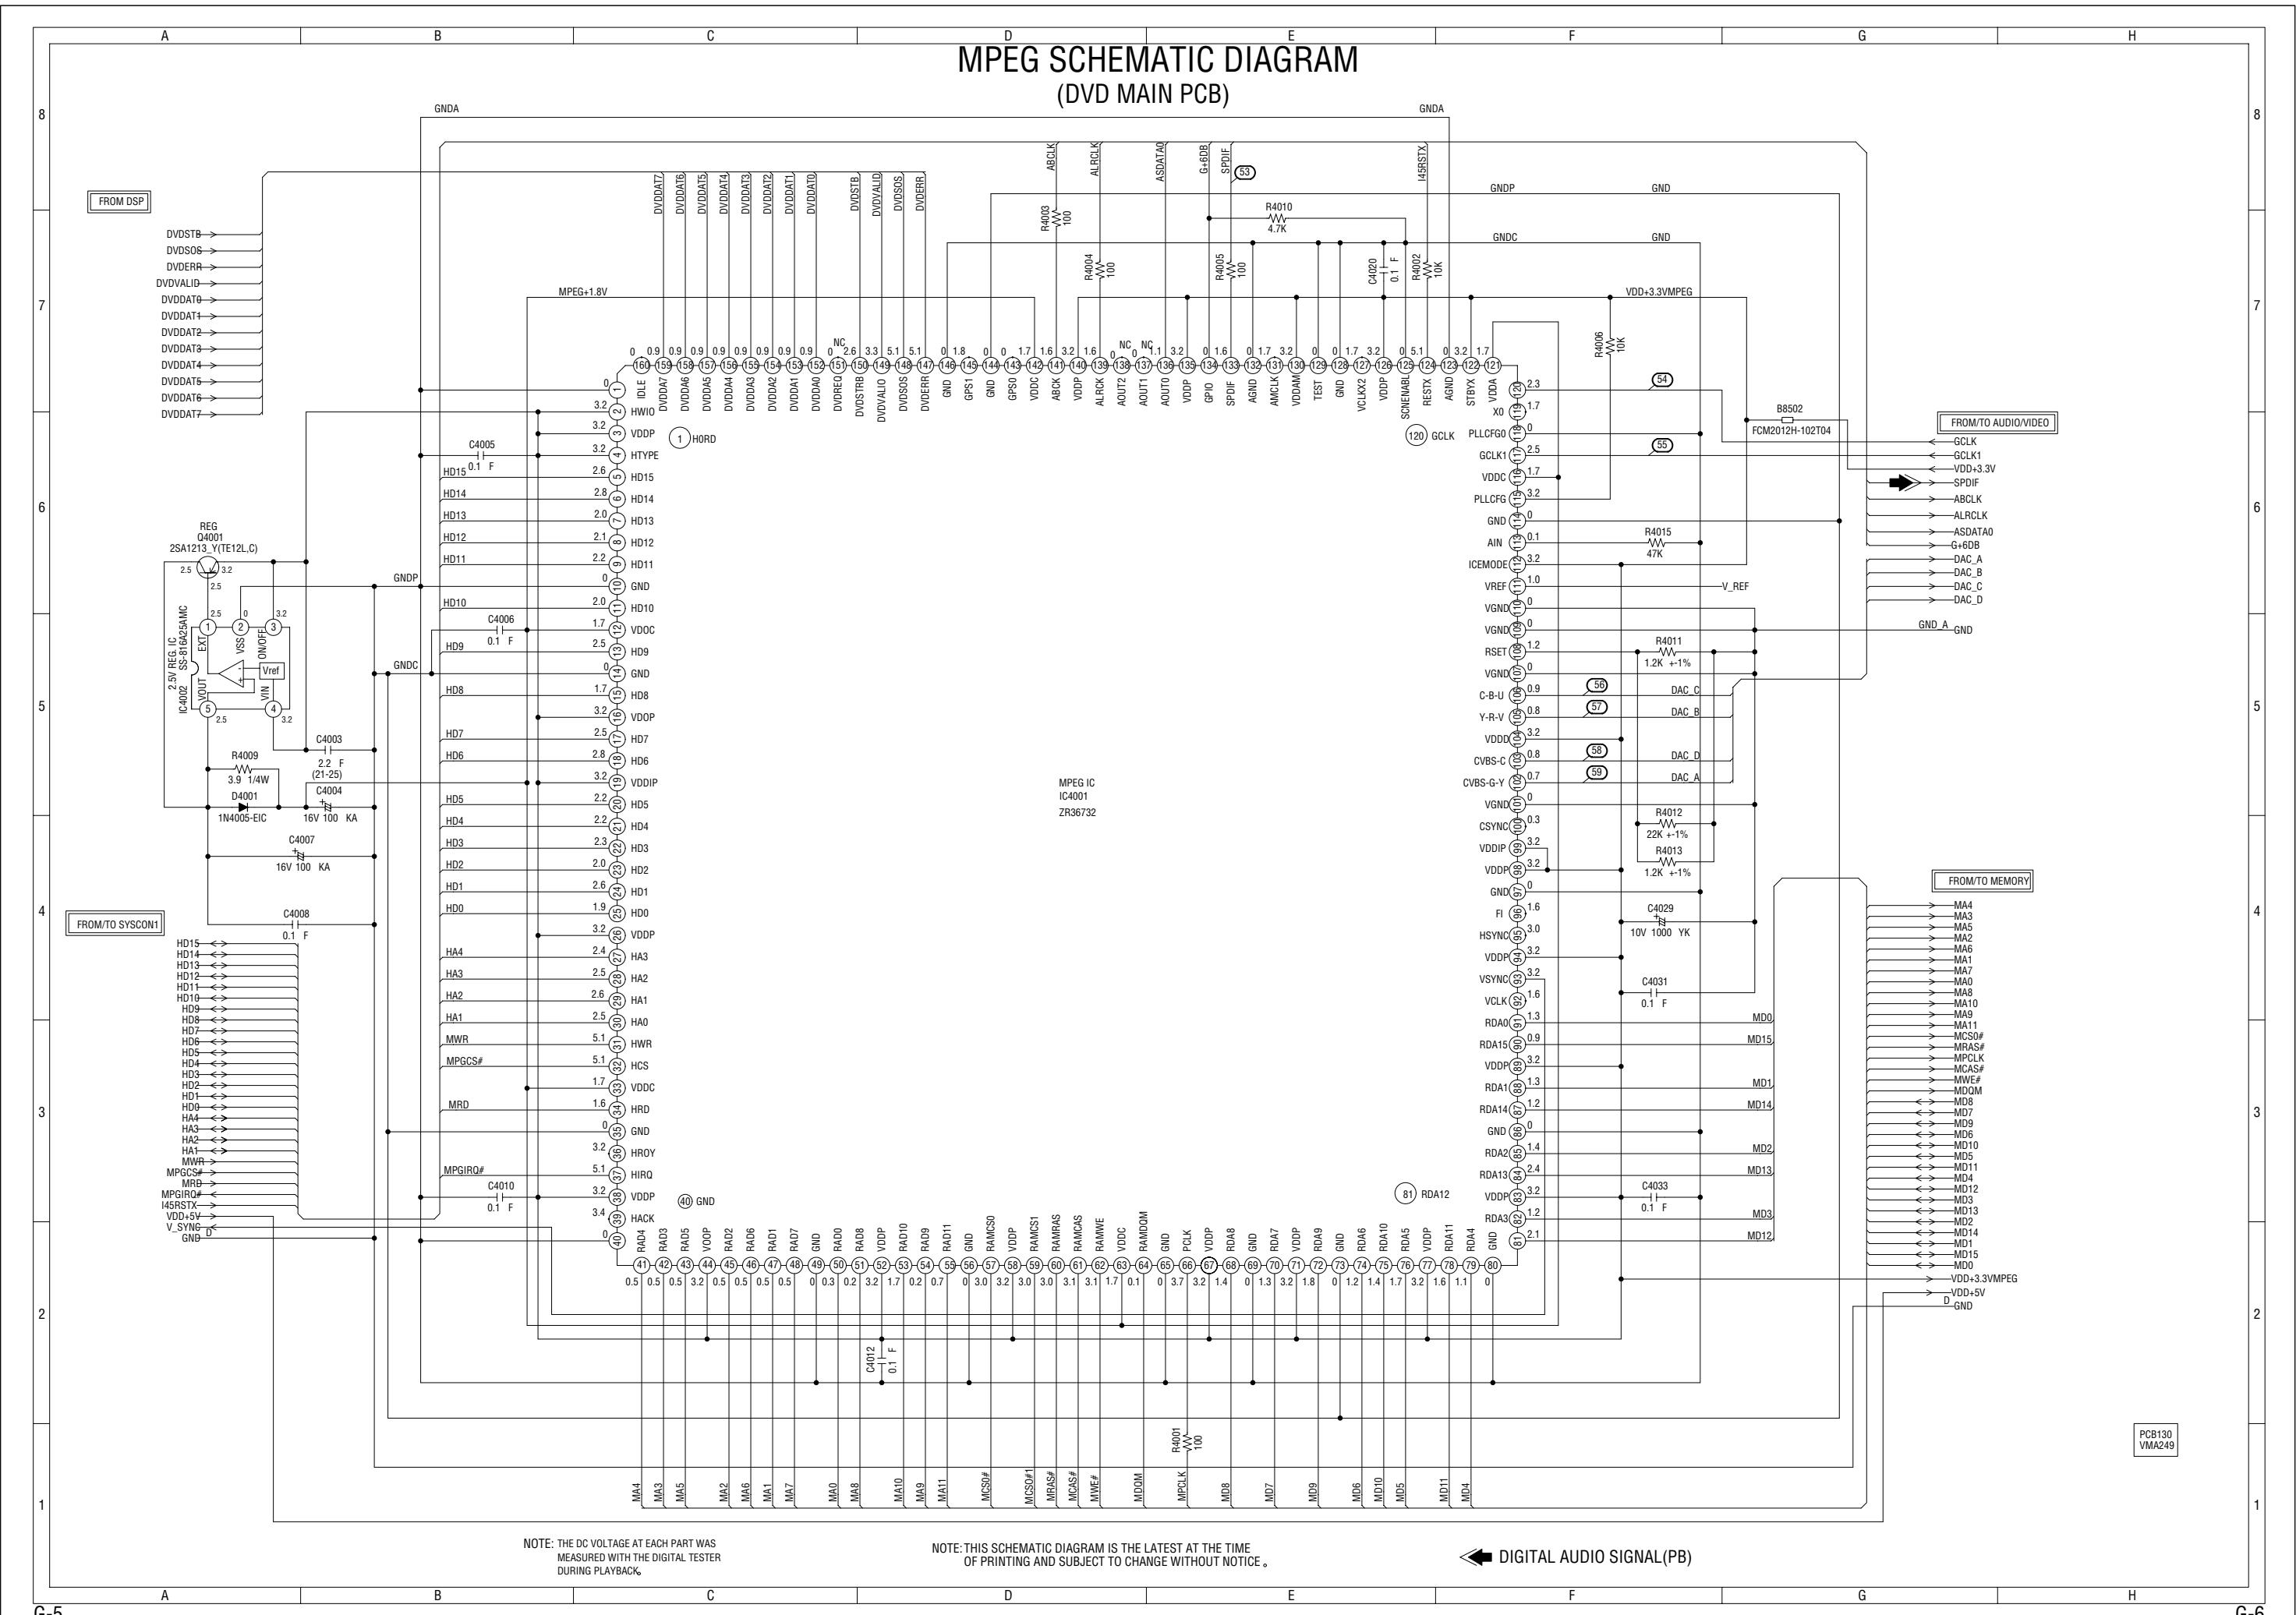


# MEMORY SCHEMATIC DIAGRAM (DVD MAIN PCB)

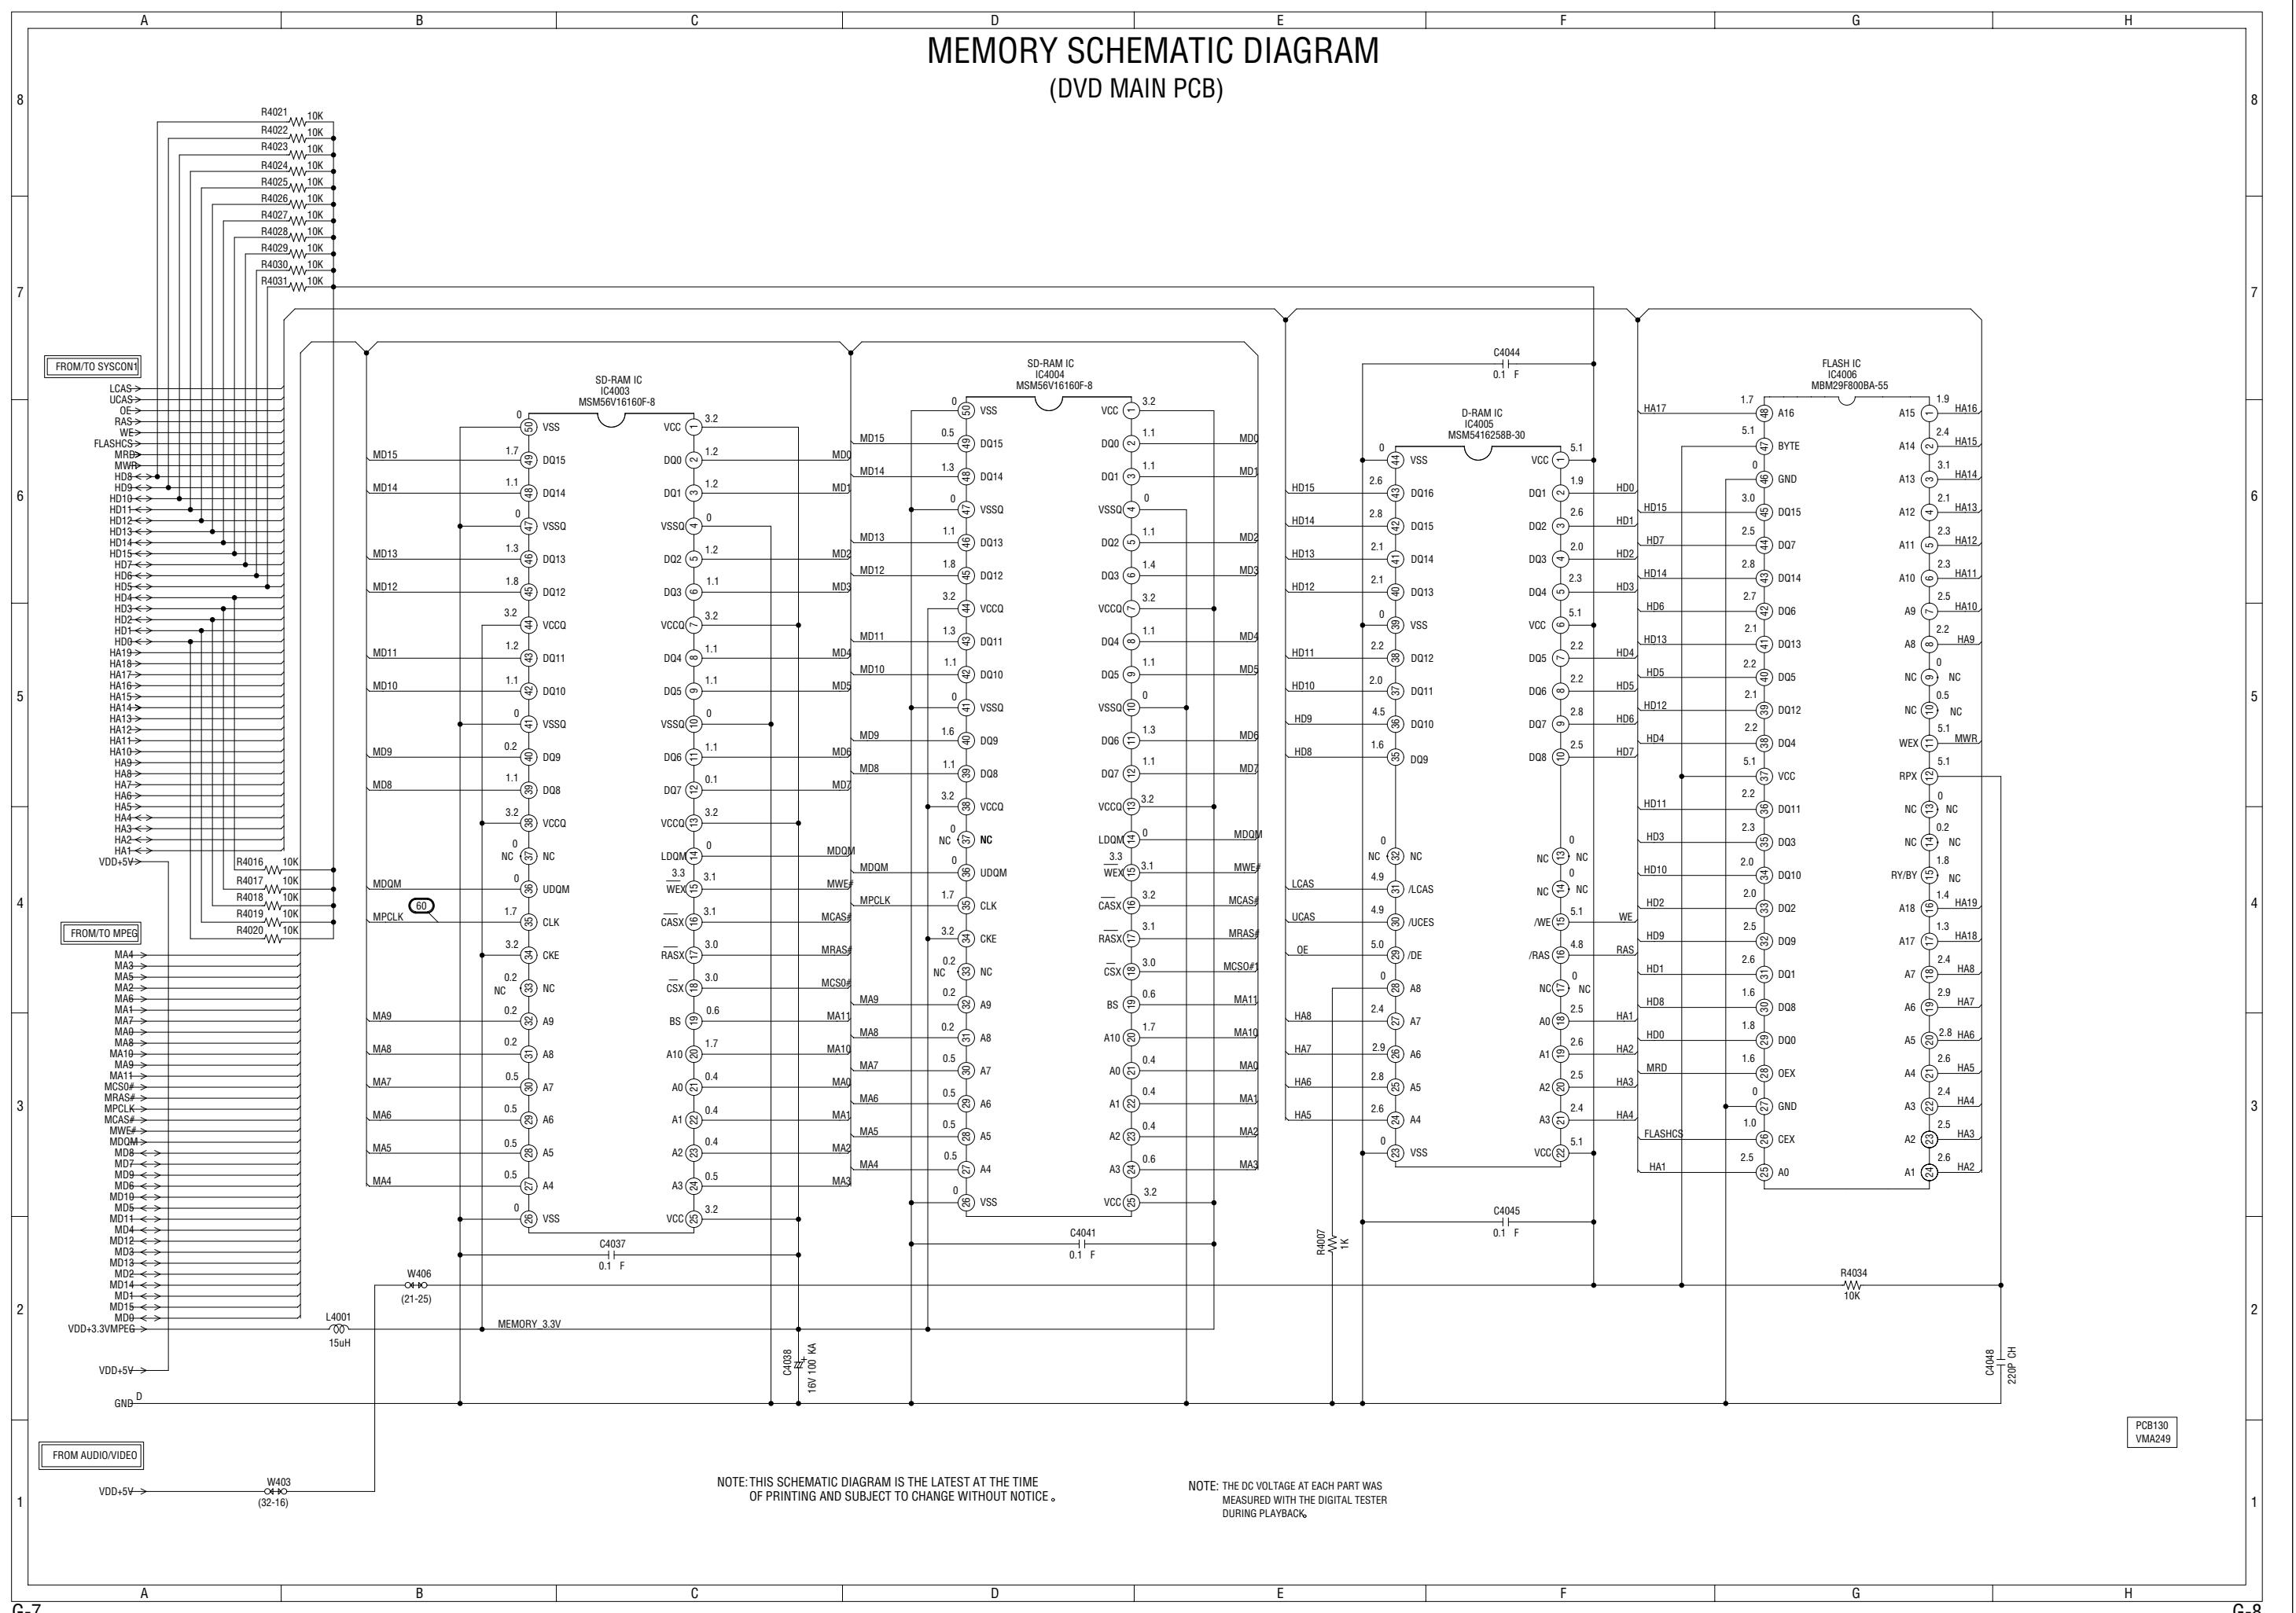


# AUDIO/VIDEO SCHEMATIC DIAGRAM (DVD MAIN PCB)

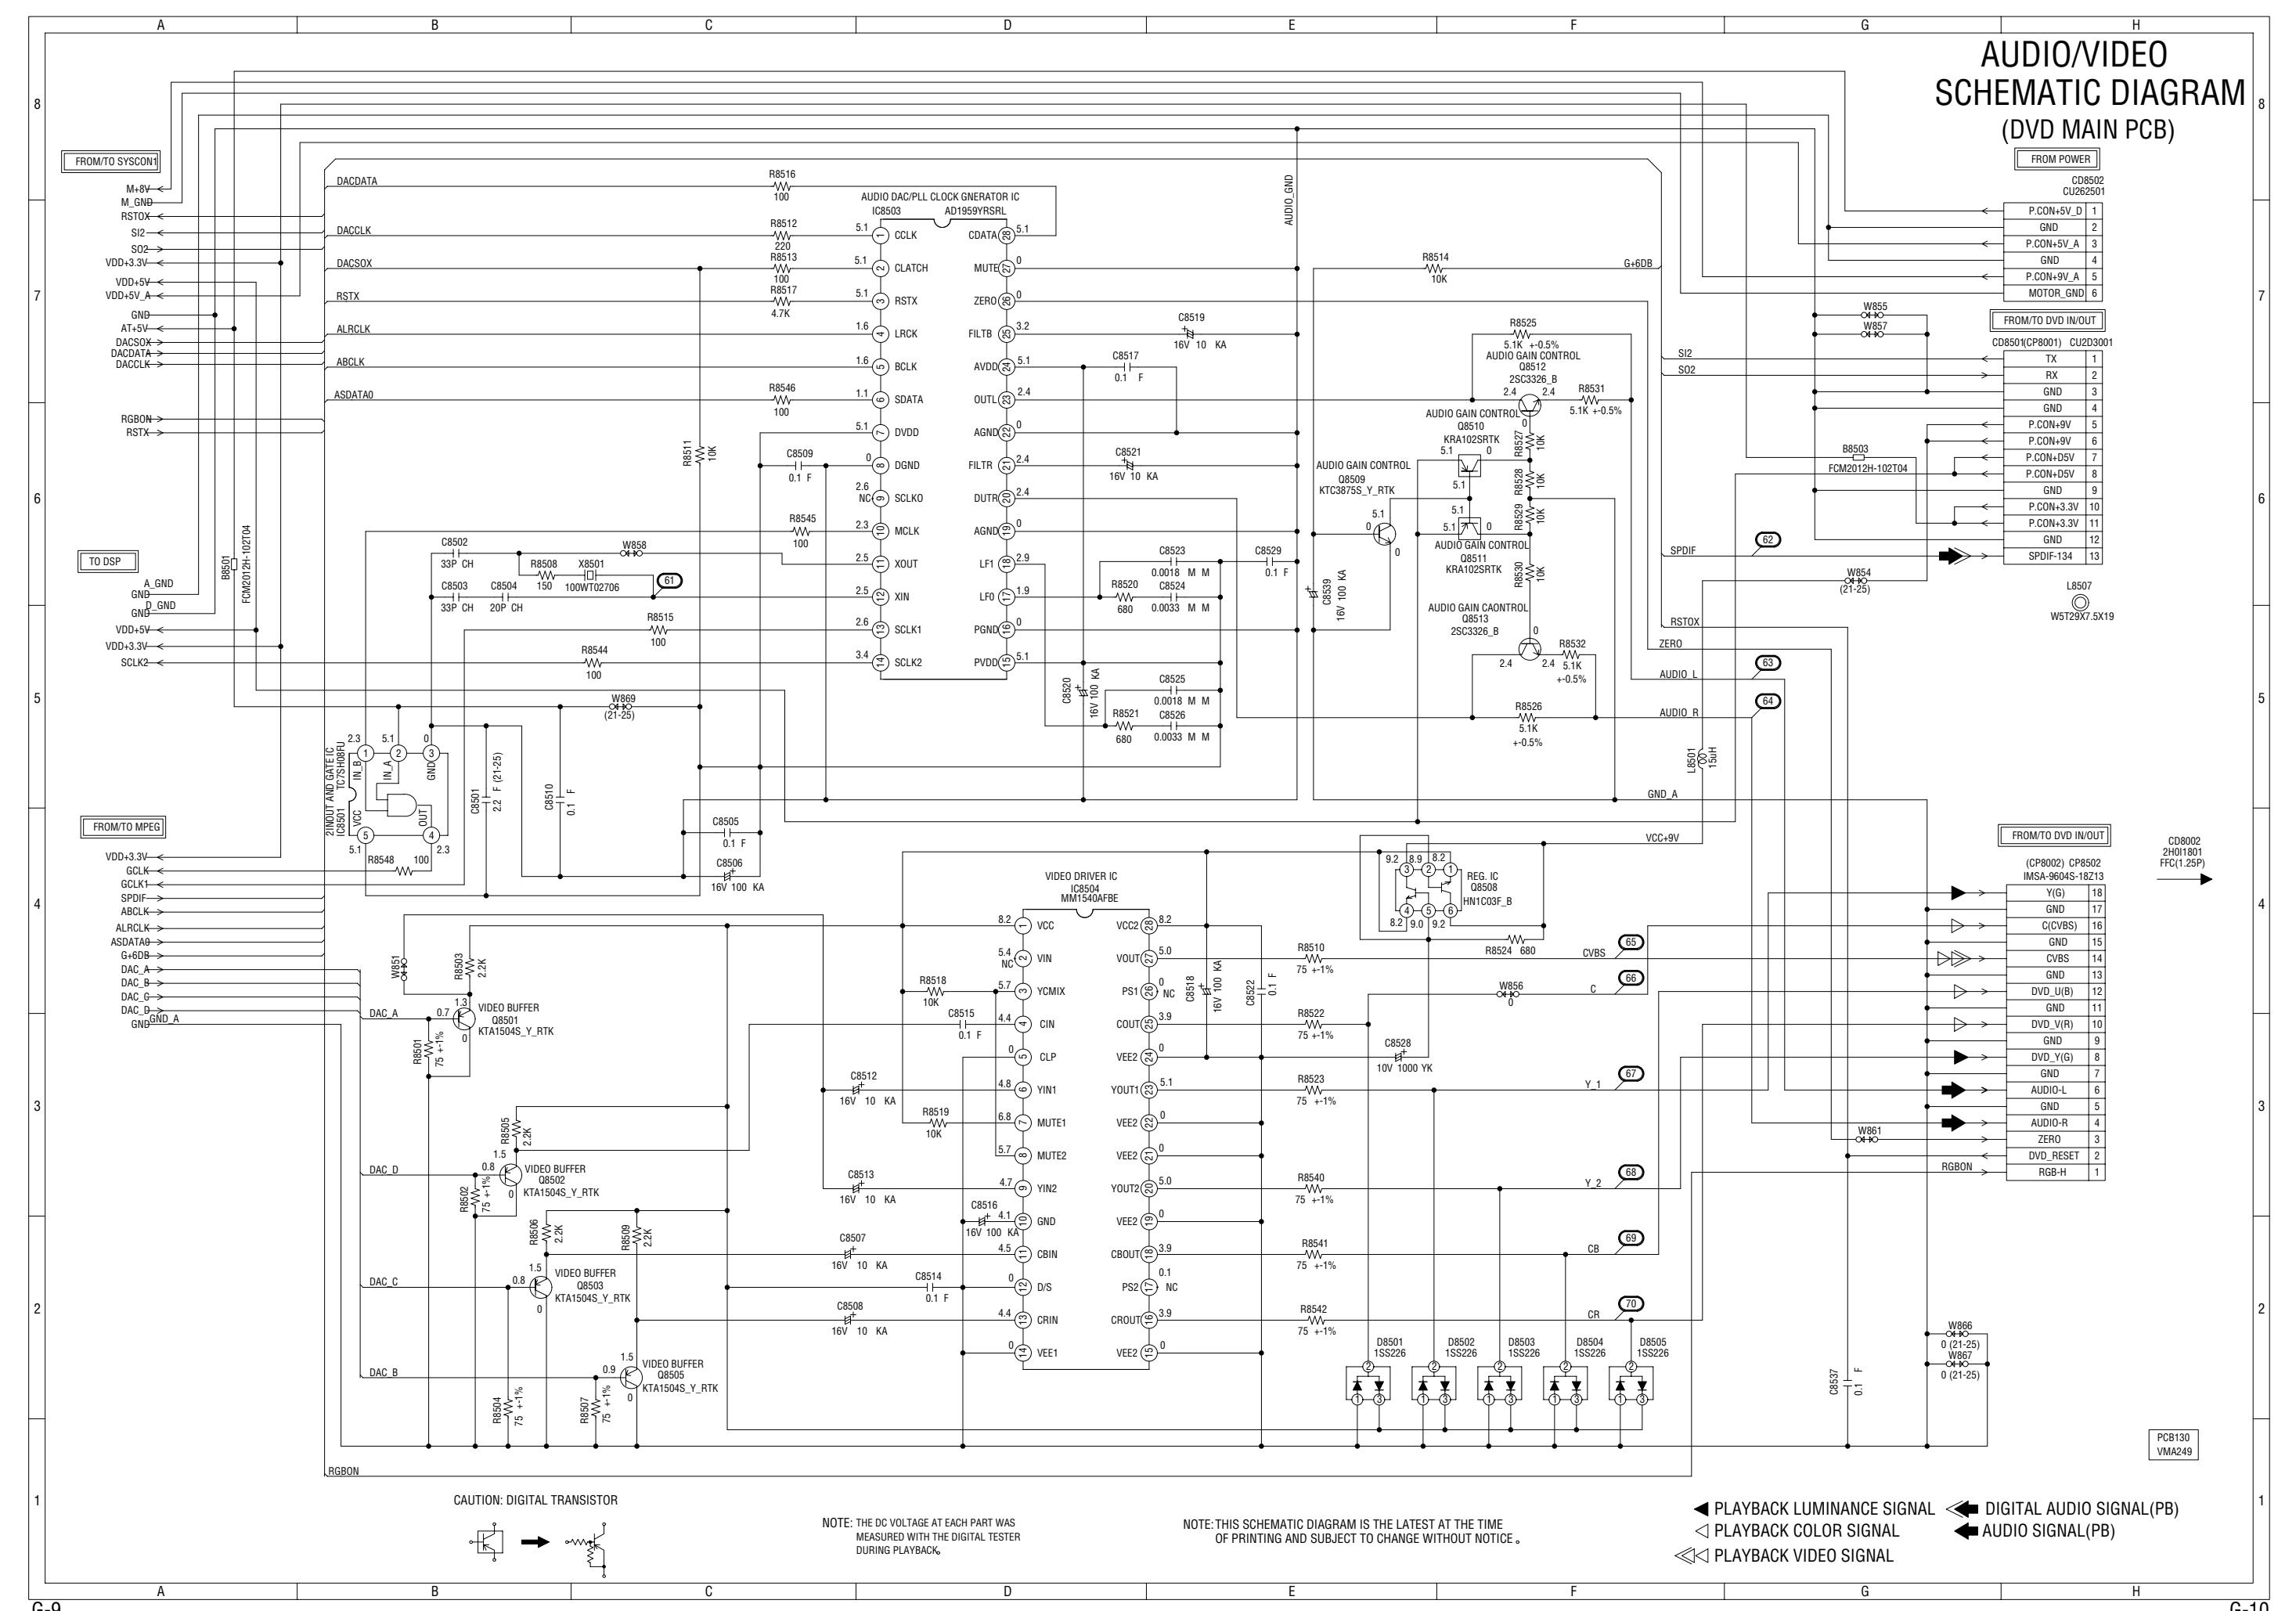


# SYSCON1 SCHEMATIC DIAGRAM (DVD MAIN PCB)

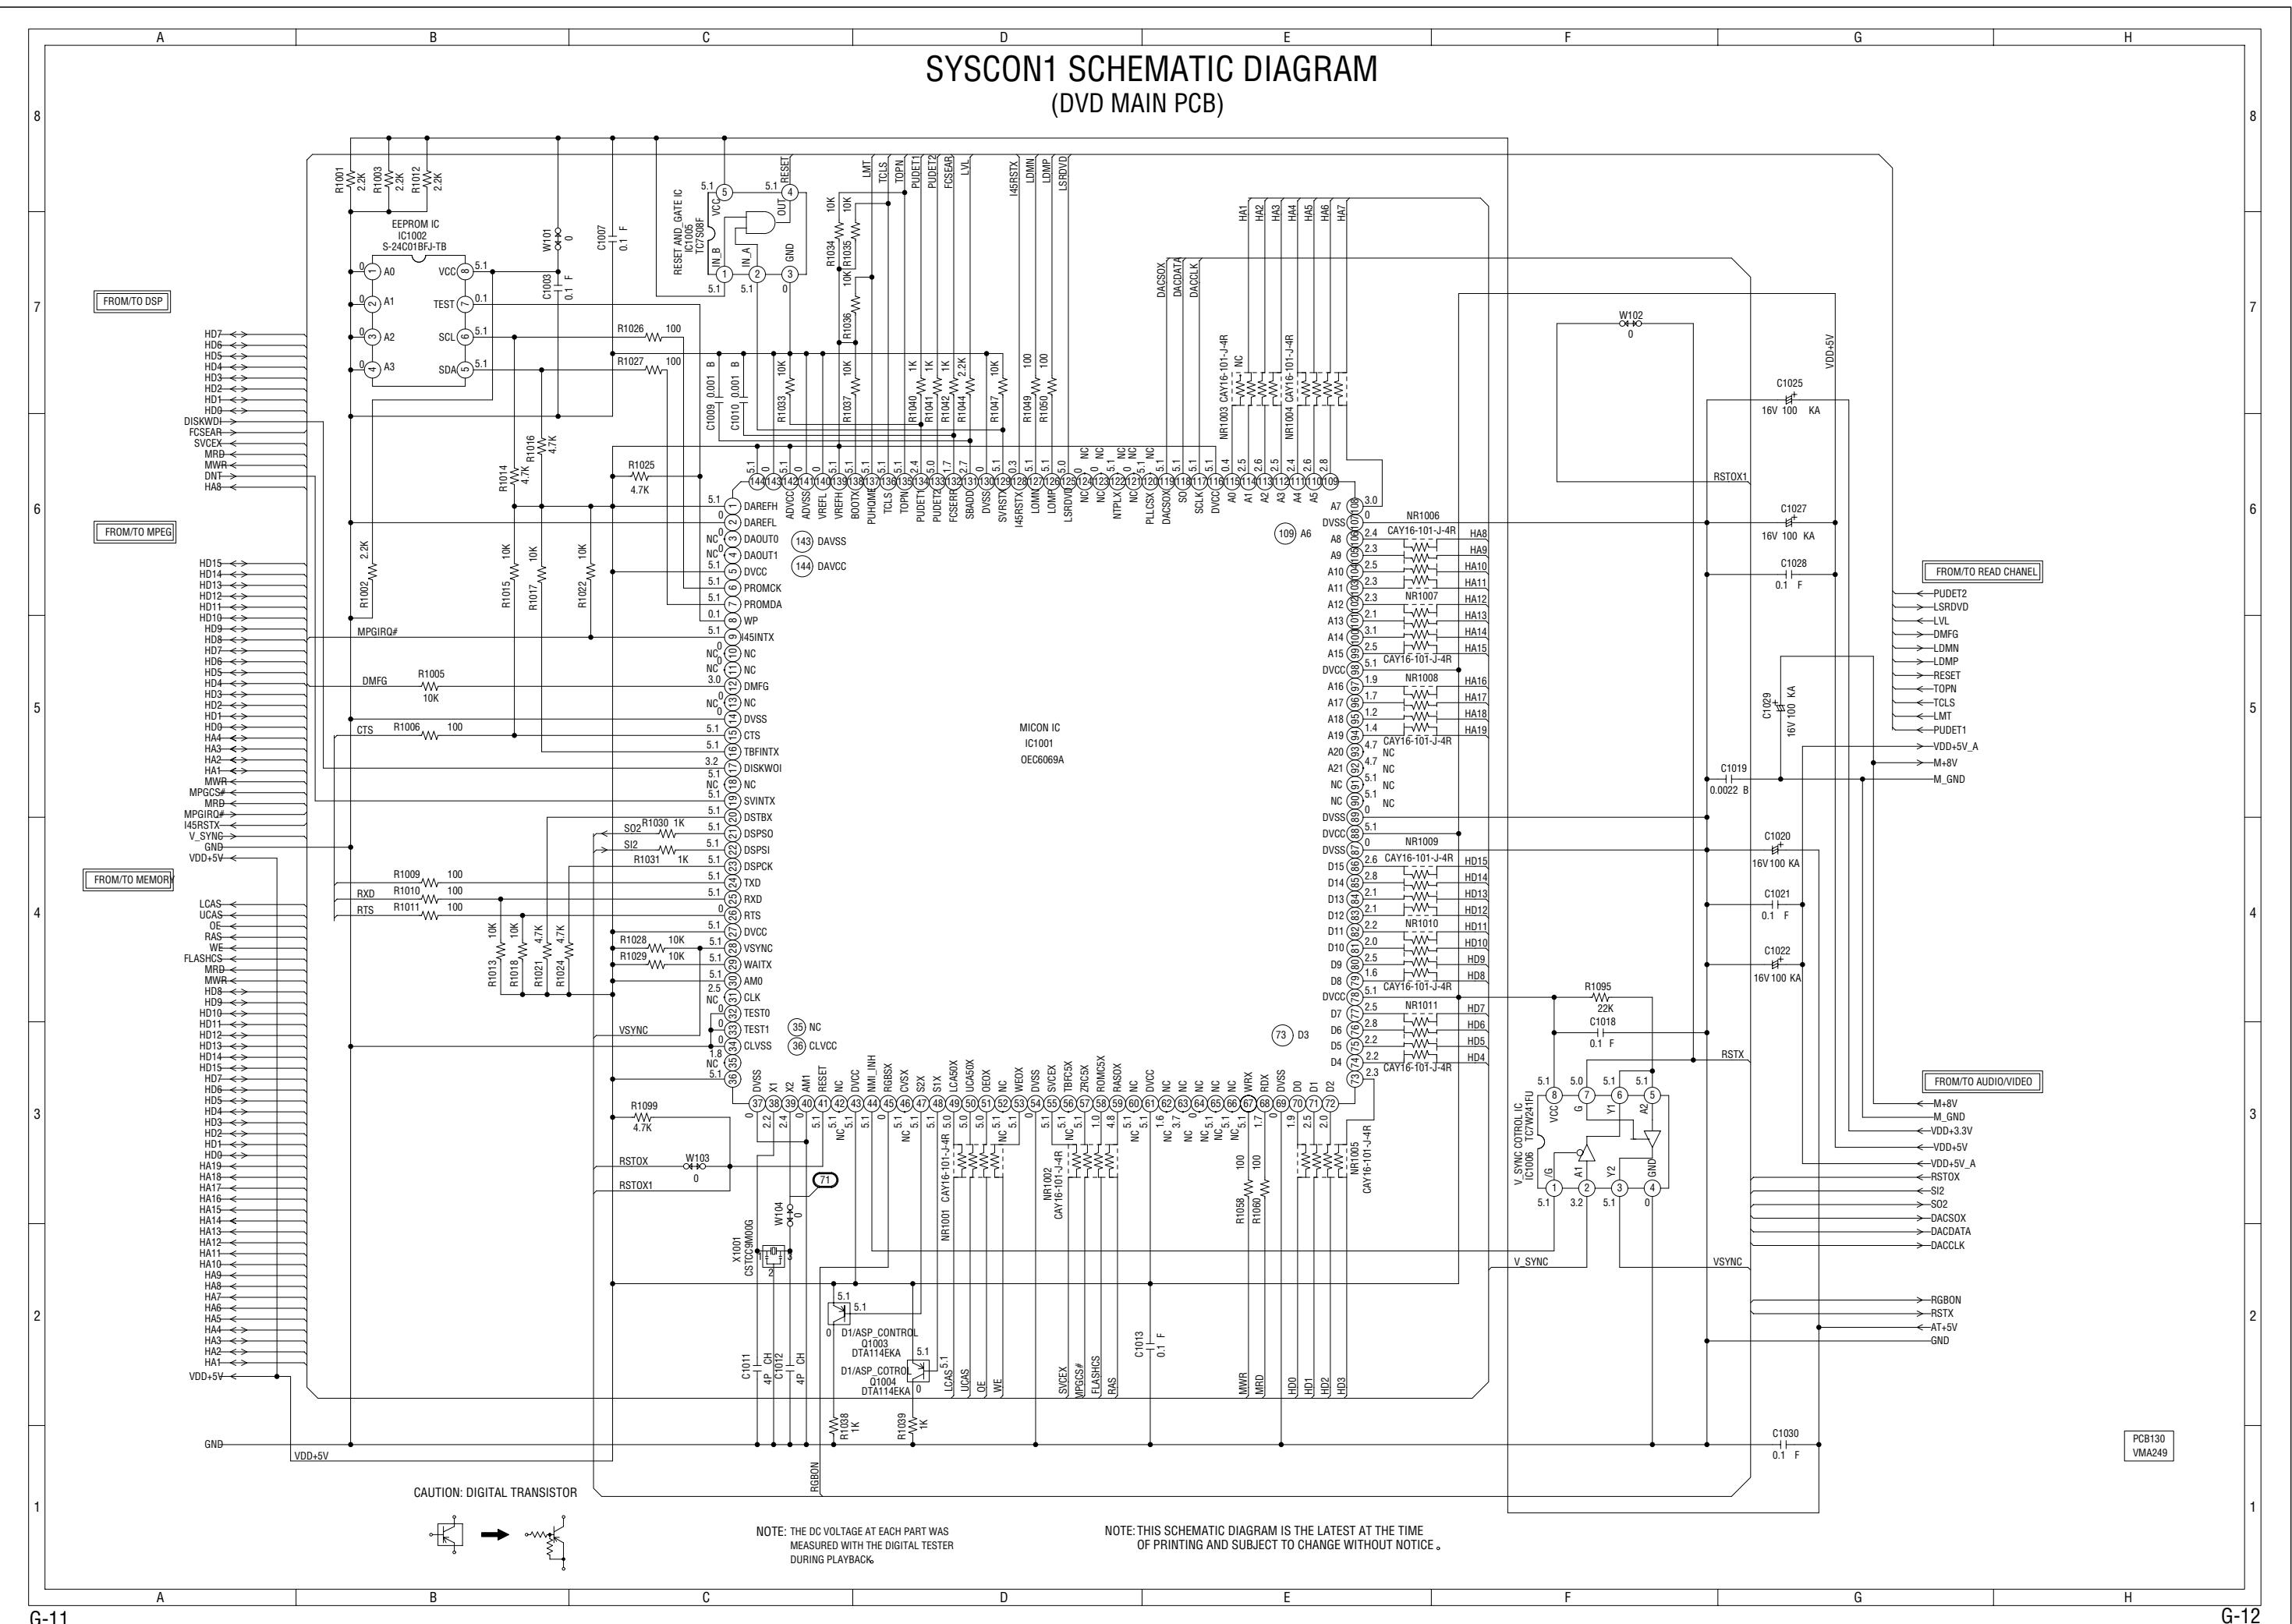


**Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM**  
(VCR MAIN PCB)

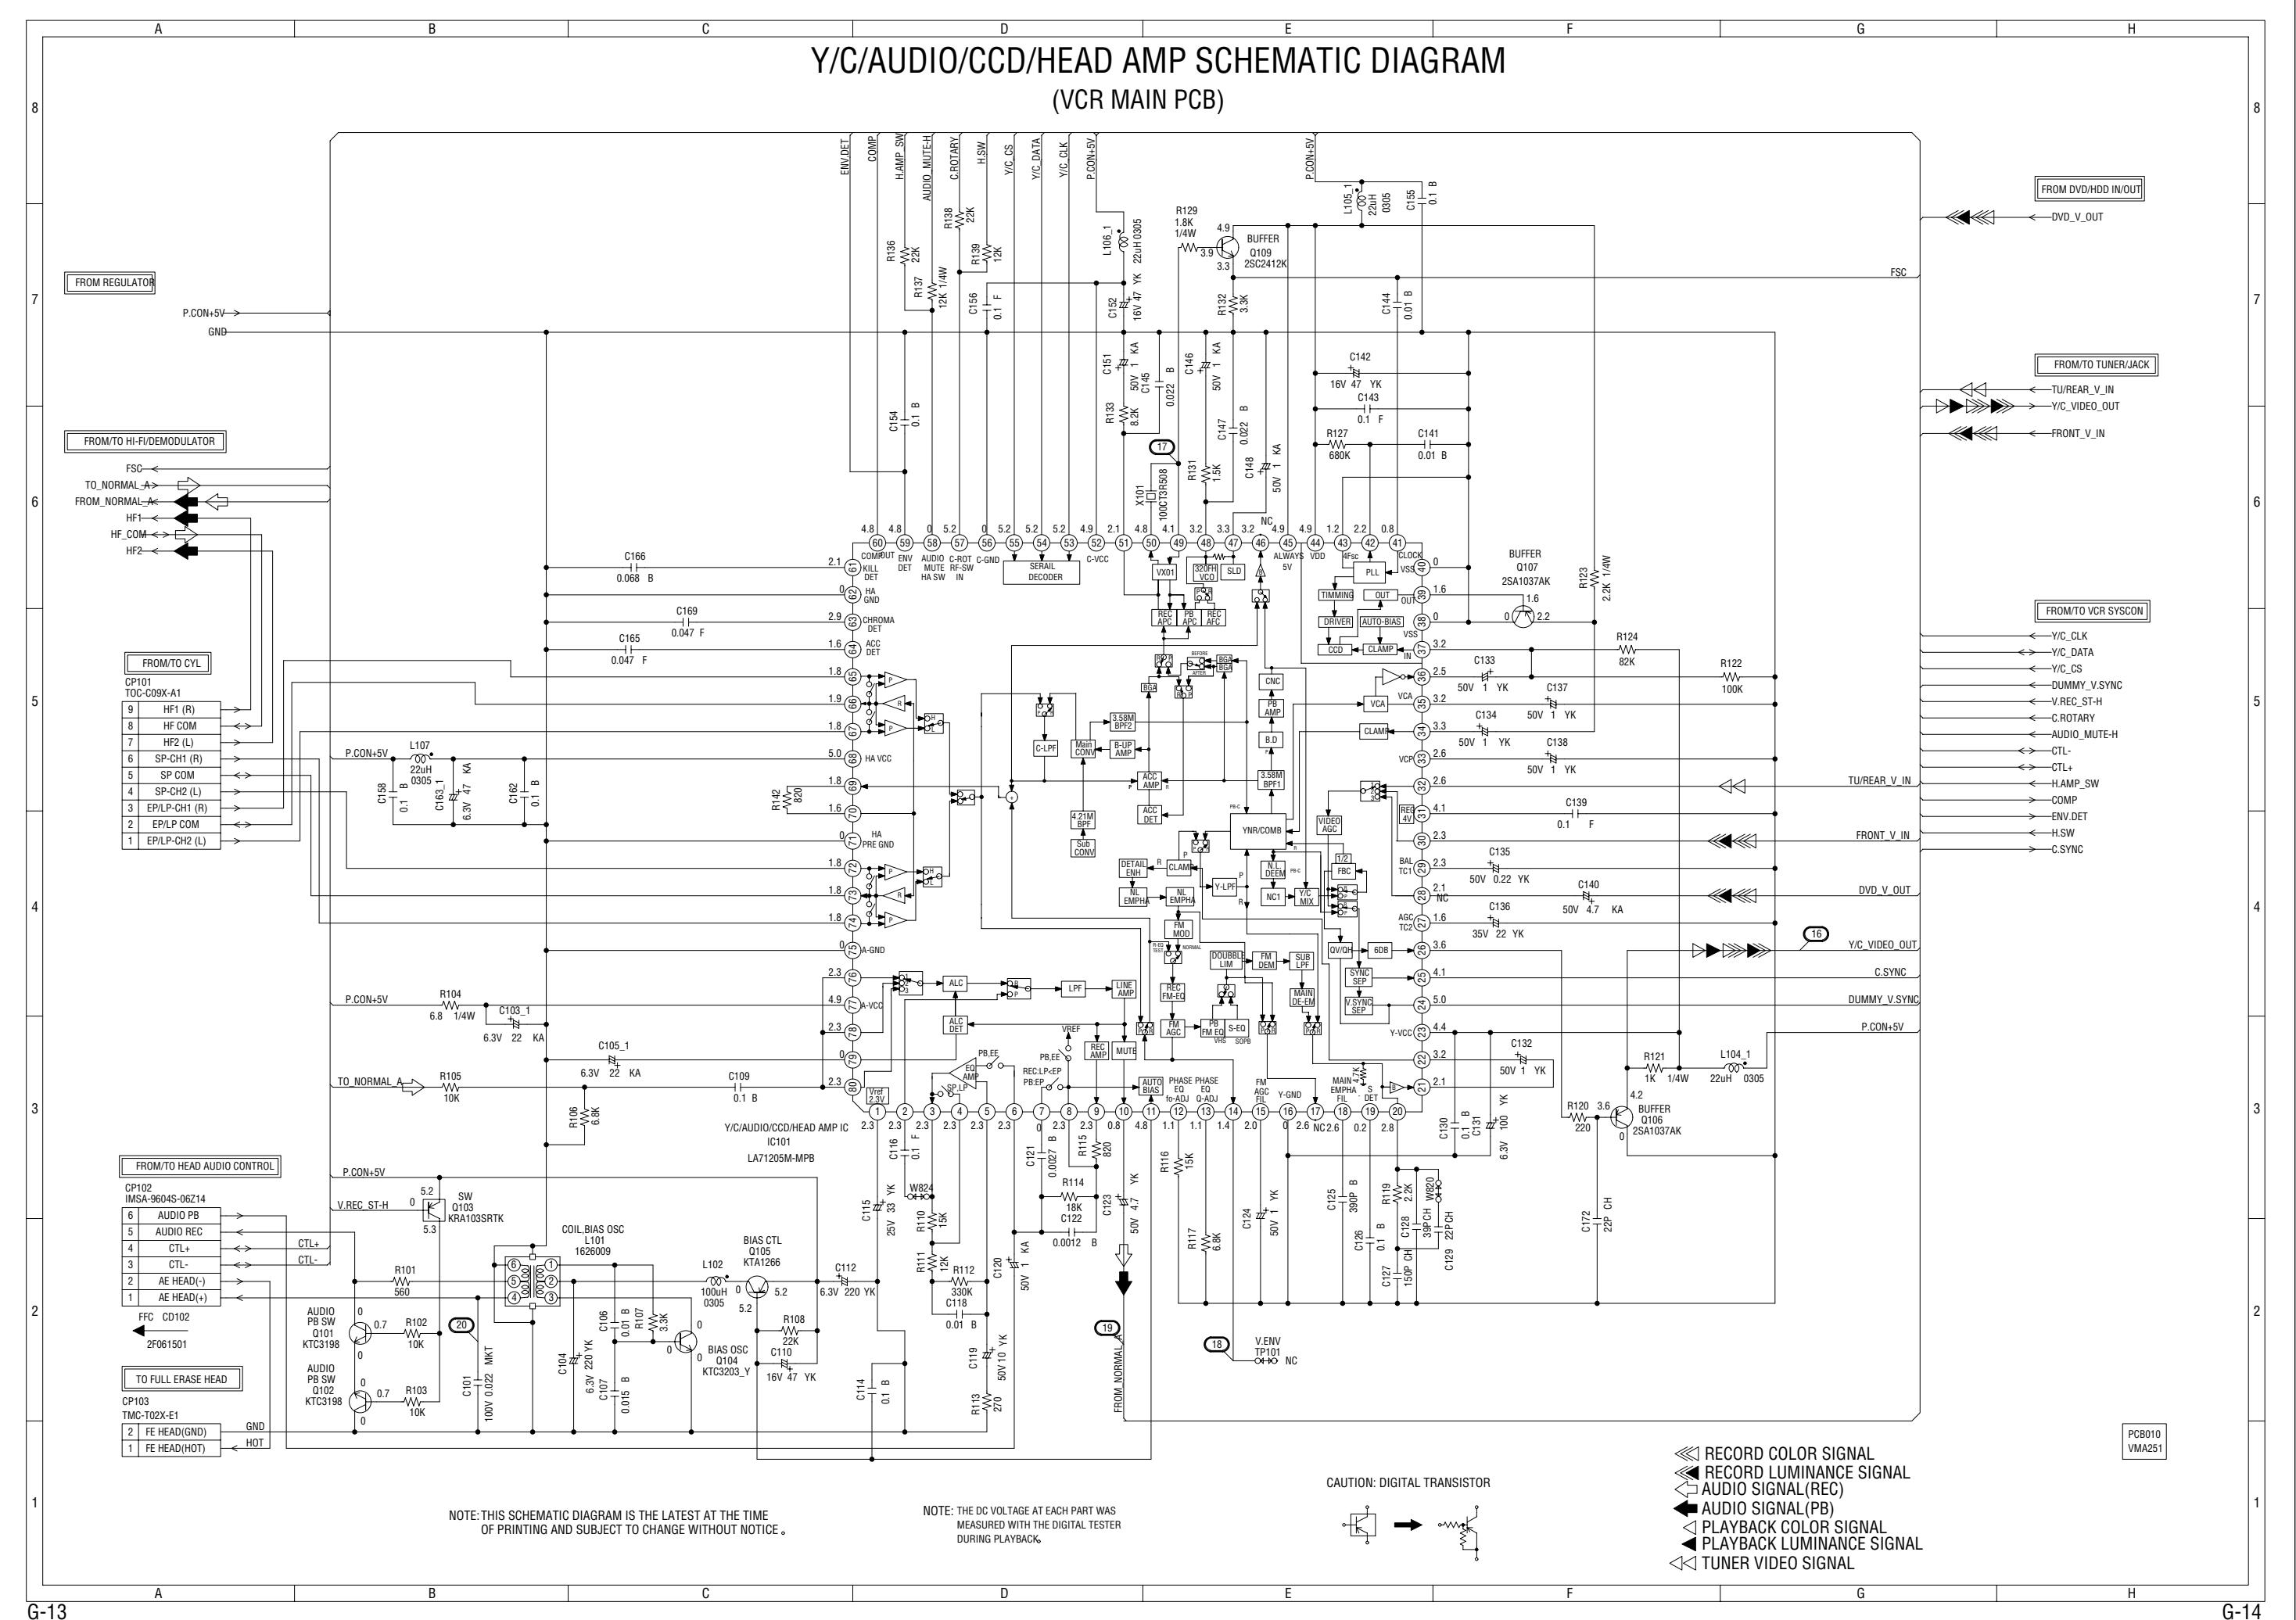


# VCR SYSCON SCHEMATIC DIAGRAM(VCR MAIN PCB)

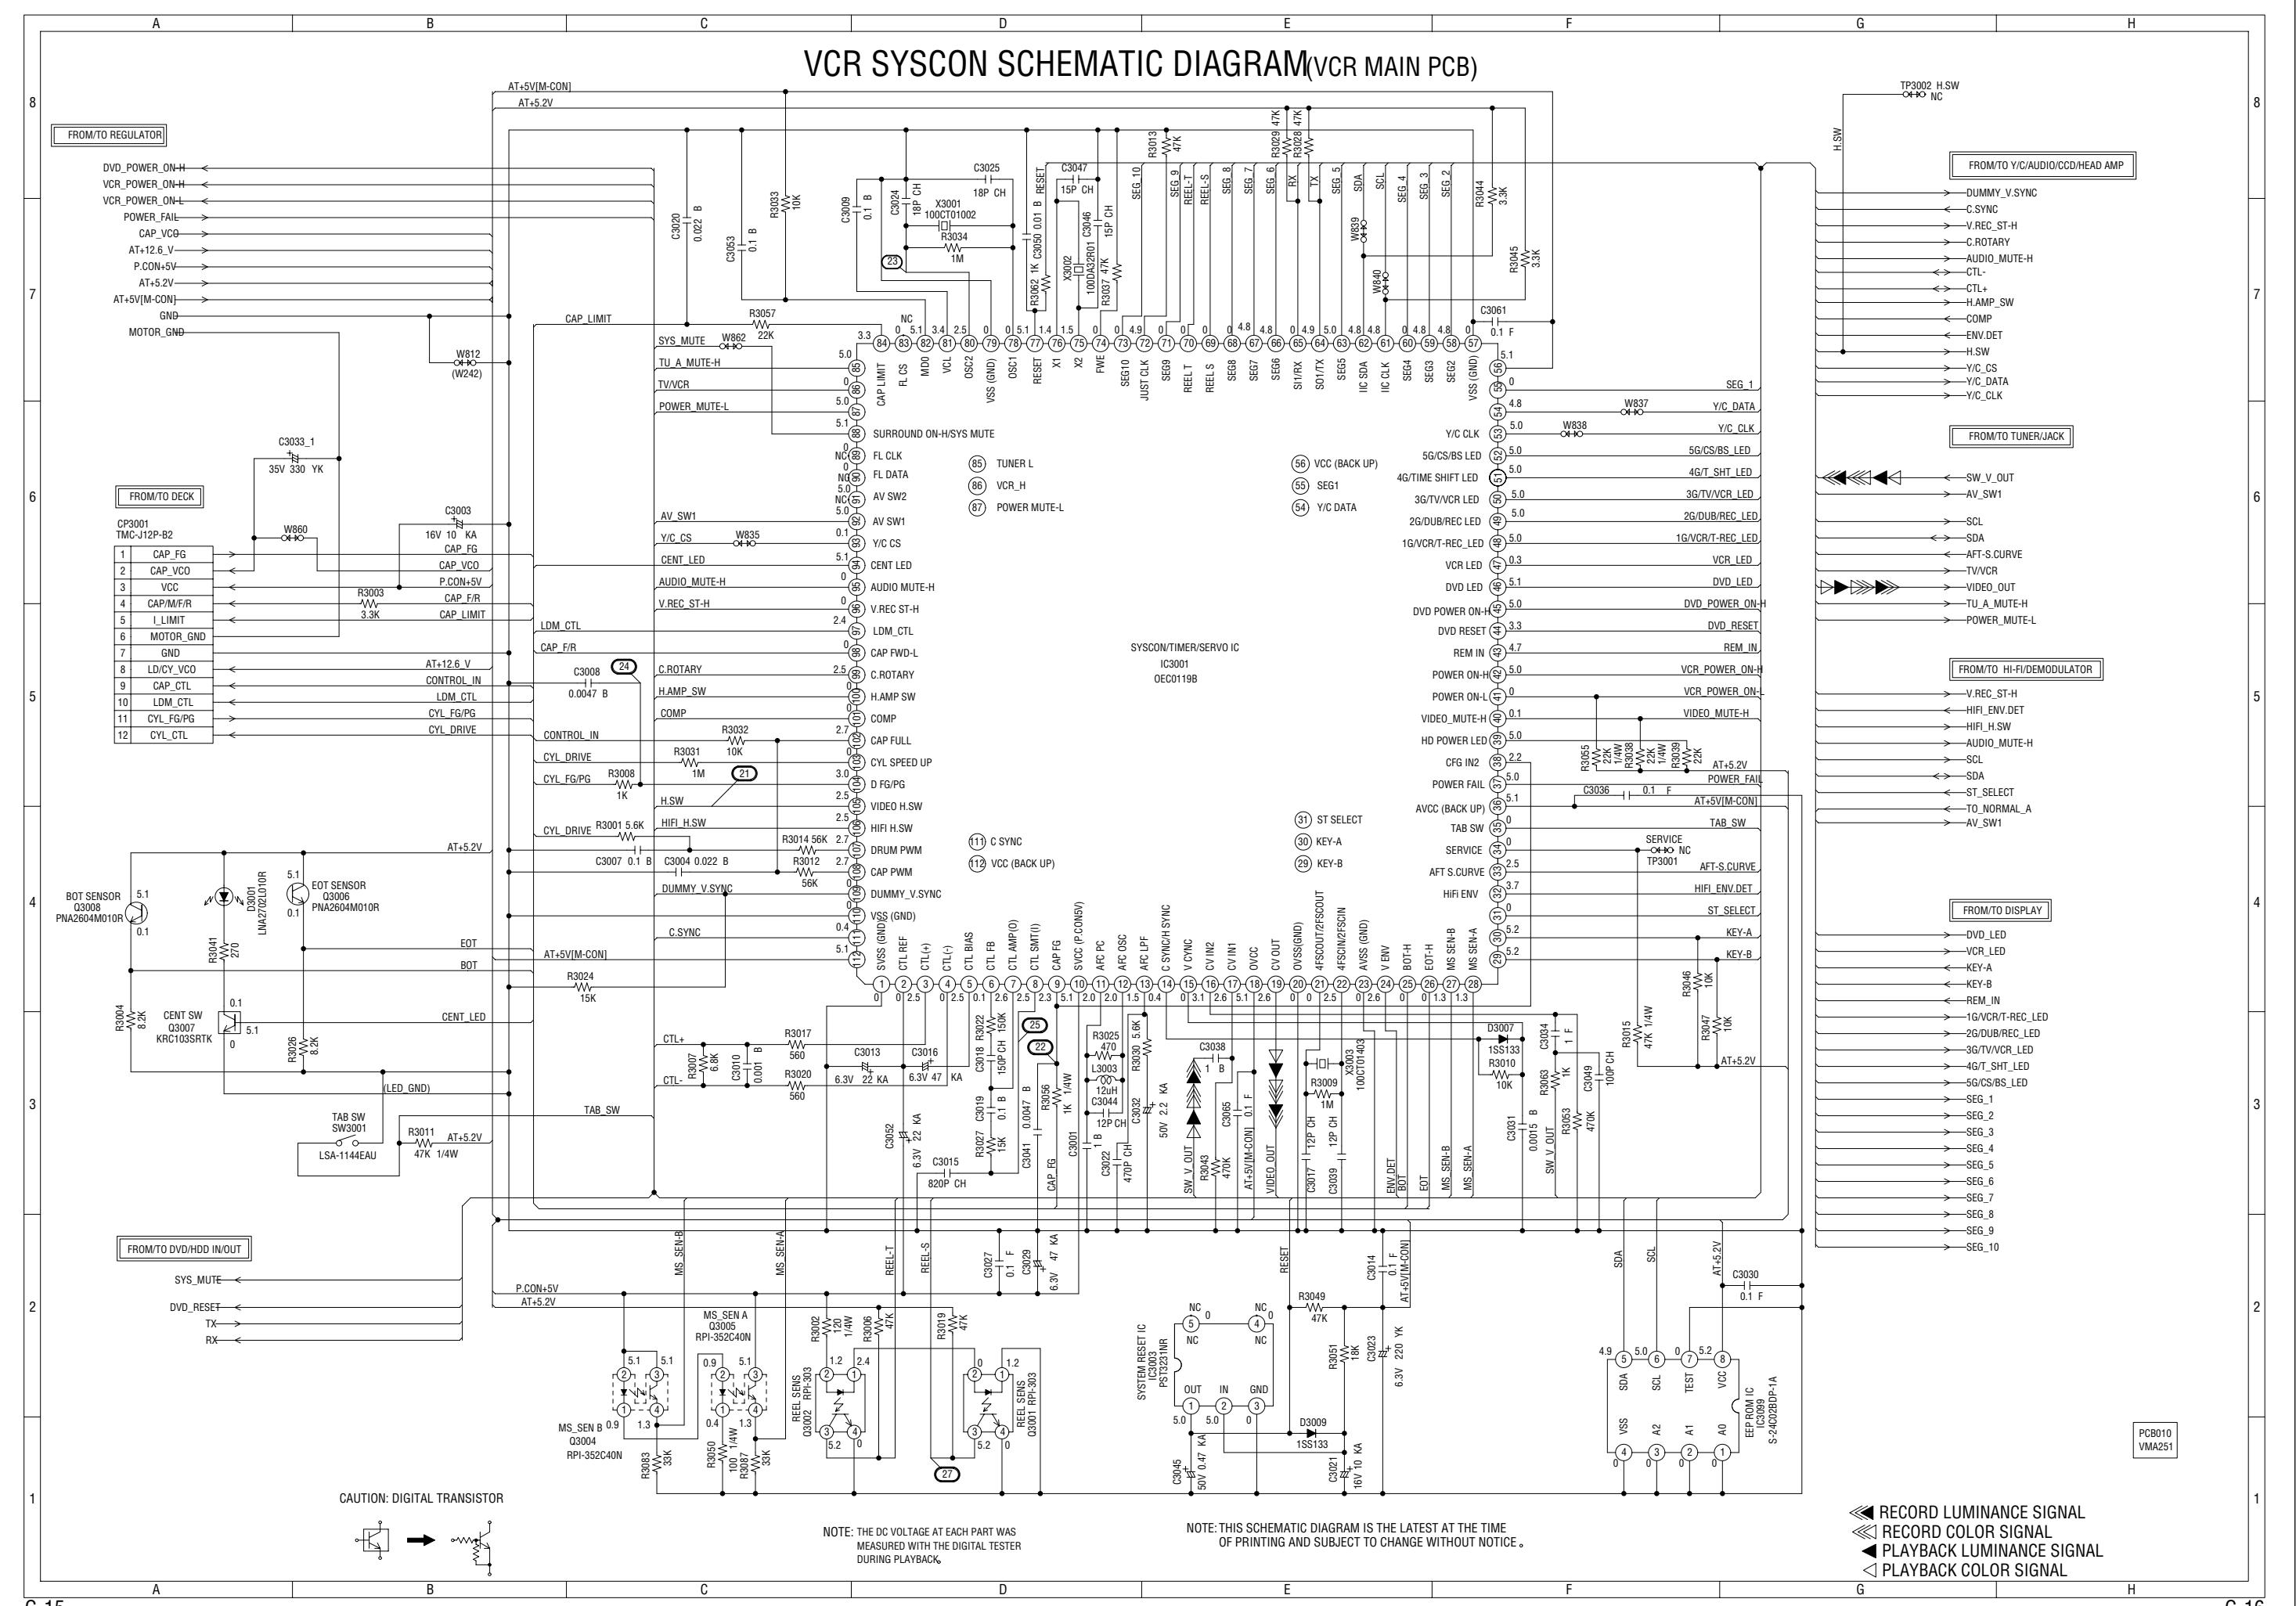

# TUNER/JACK SCHEMATIC DIAGRAM (VCR MAIN PCB)

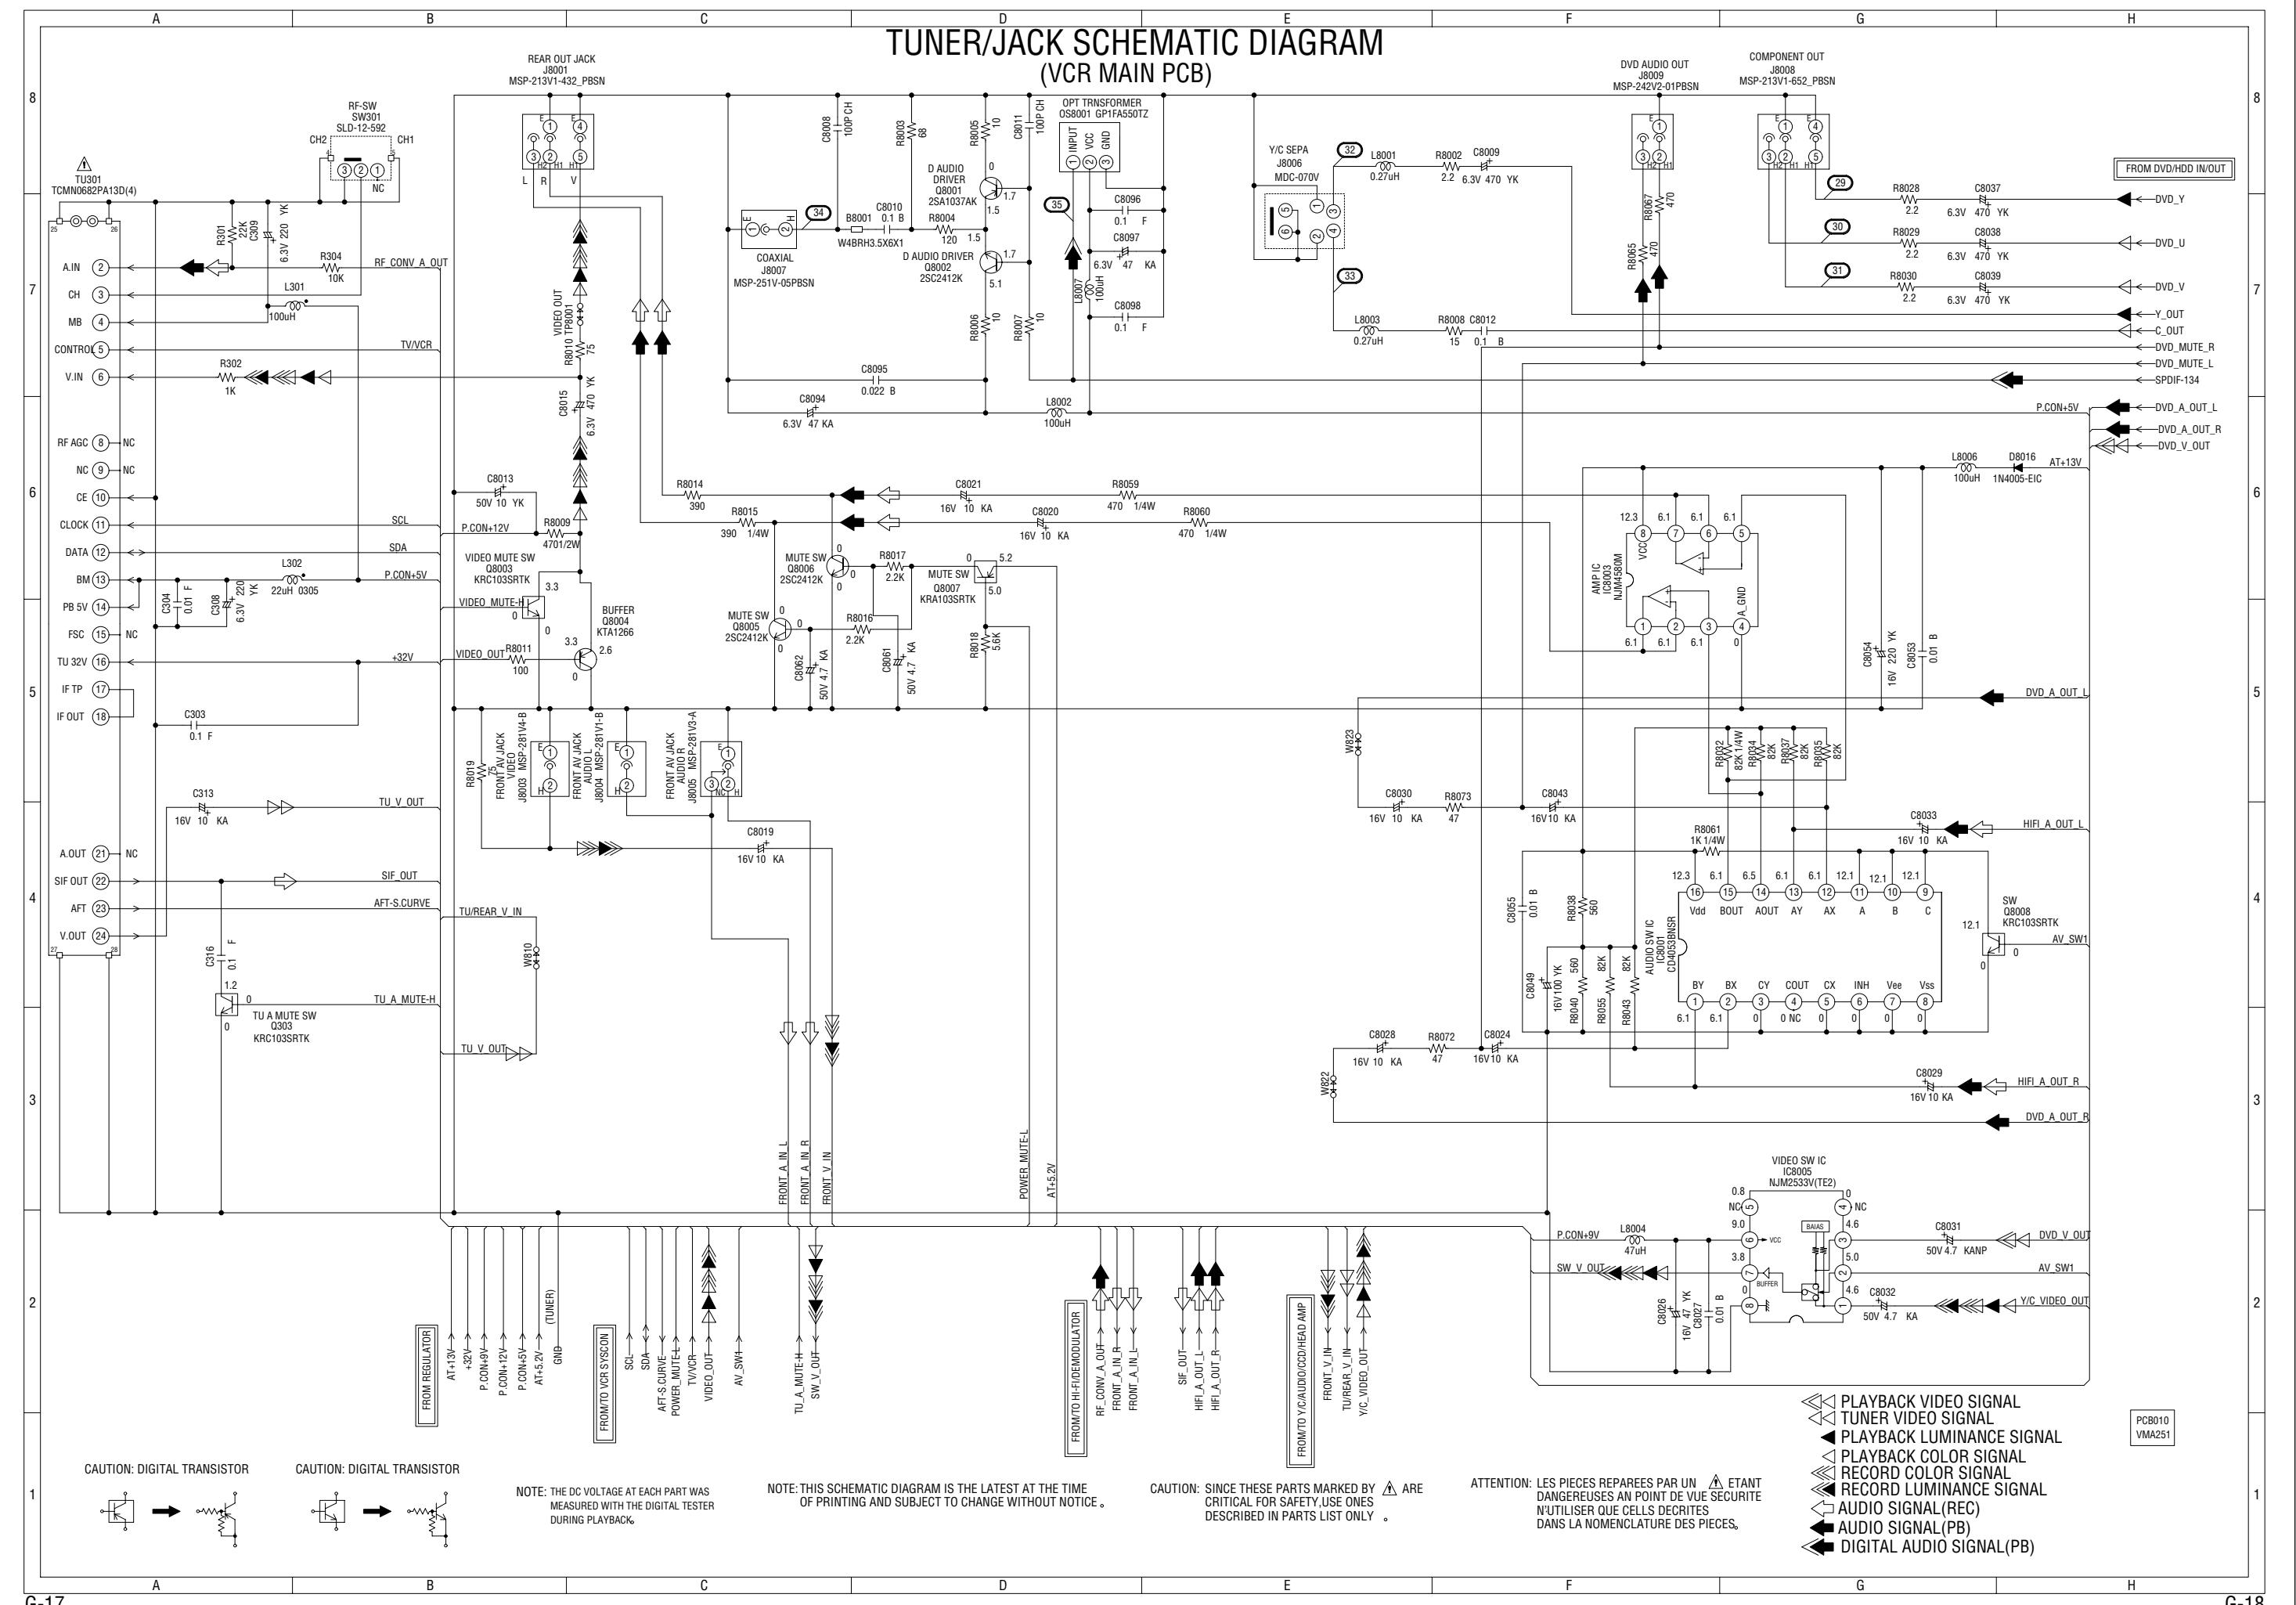

# REGULATOR SCHEMATIC DIAGRAM (VCR MAIN PCB)

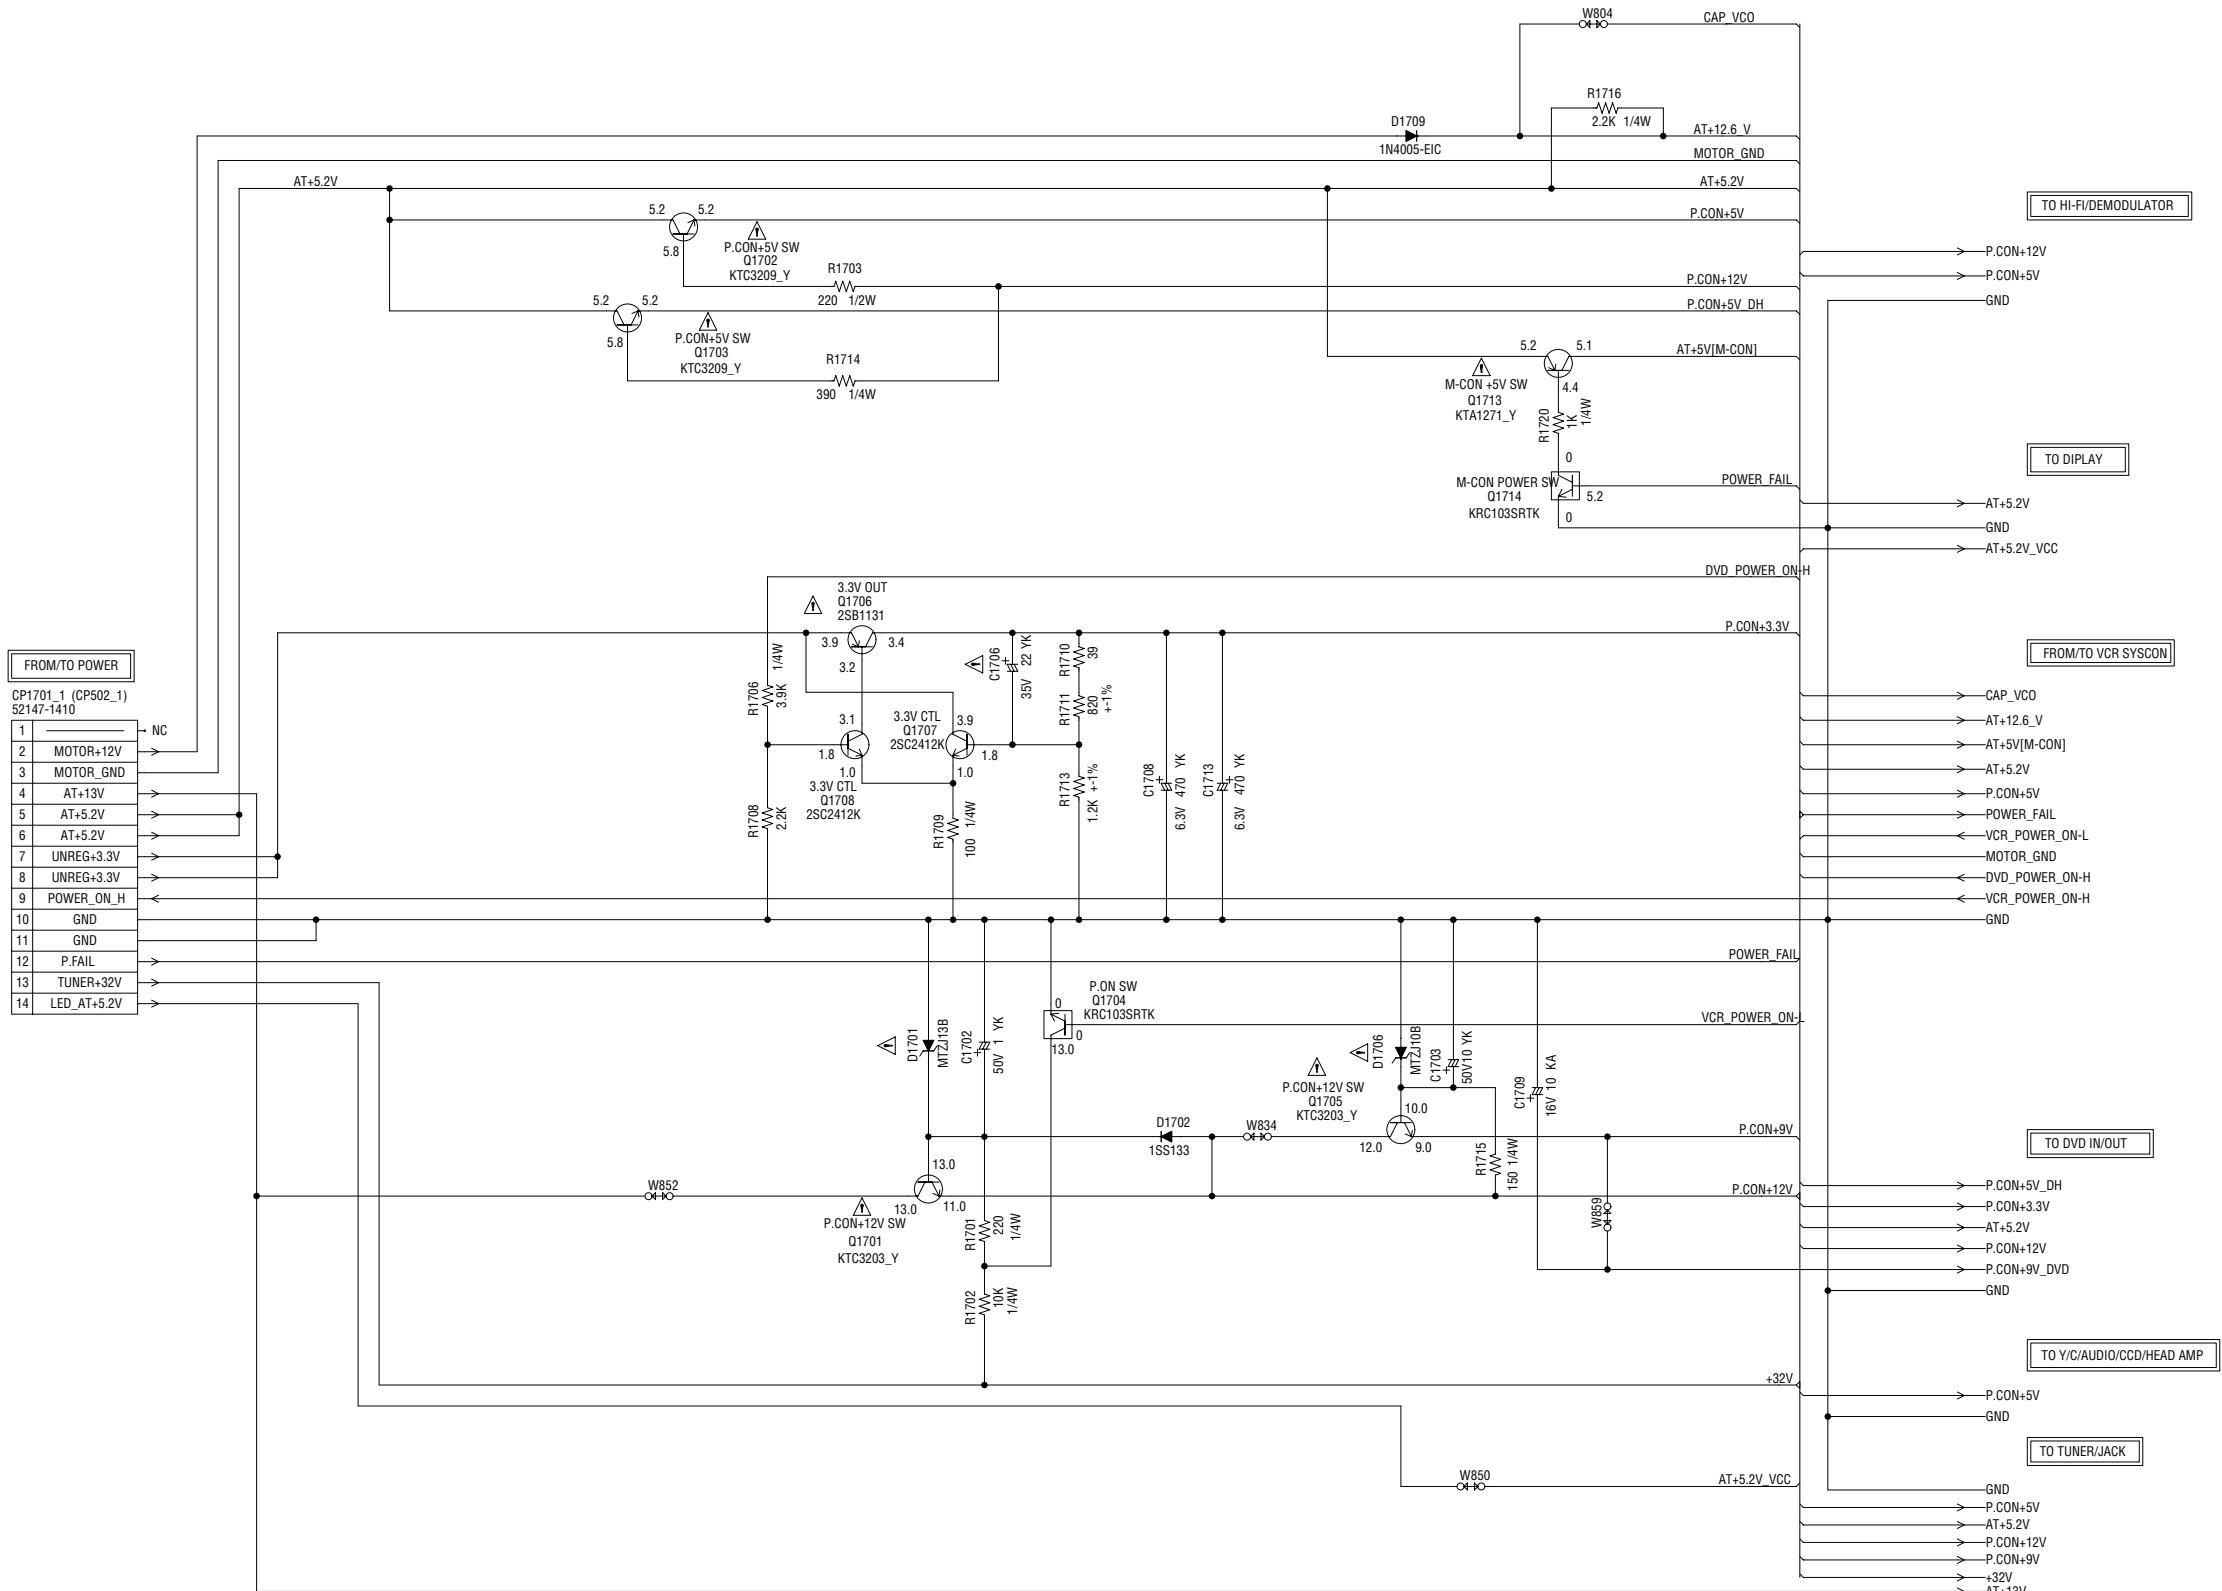


NOTE: THE DC VOLTAGE AT EACH PART WAS  
MEASURED WITH THE DIGITAL TESTER  
DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


ATTENTION: LES PIECES REPARÉES PAR UN ETANT  
DANGEREUSES AU POINT DE VUE SÉCURITÉ,  
N'UTILISER QUE CELLES DÉCRITES  
DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE  
CRITICAL FOR SAFETY, USE ONES  
DESCRIBED IN PARTS LIST ONLY.


PCB010  
VMA251

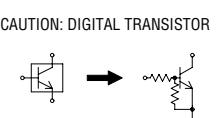

# DISPLAY SCHEMATIC DIAGRAM (VCR MAIN PCB)

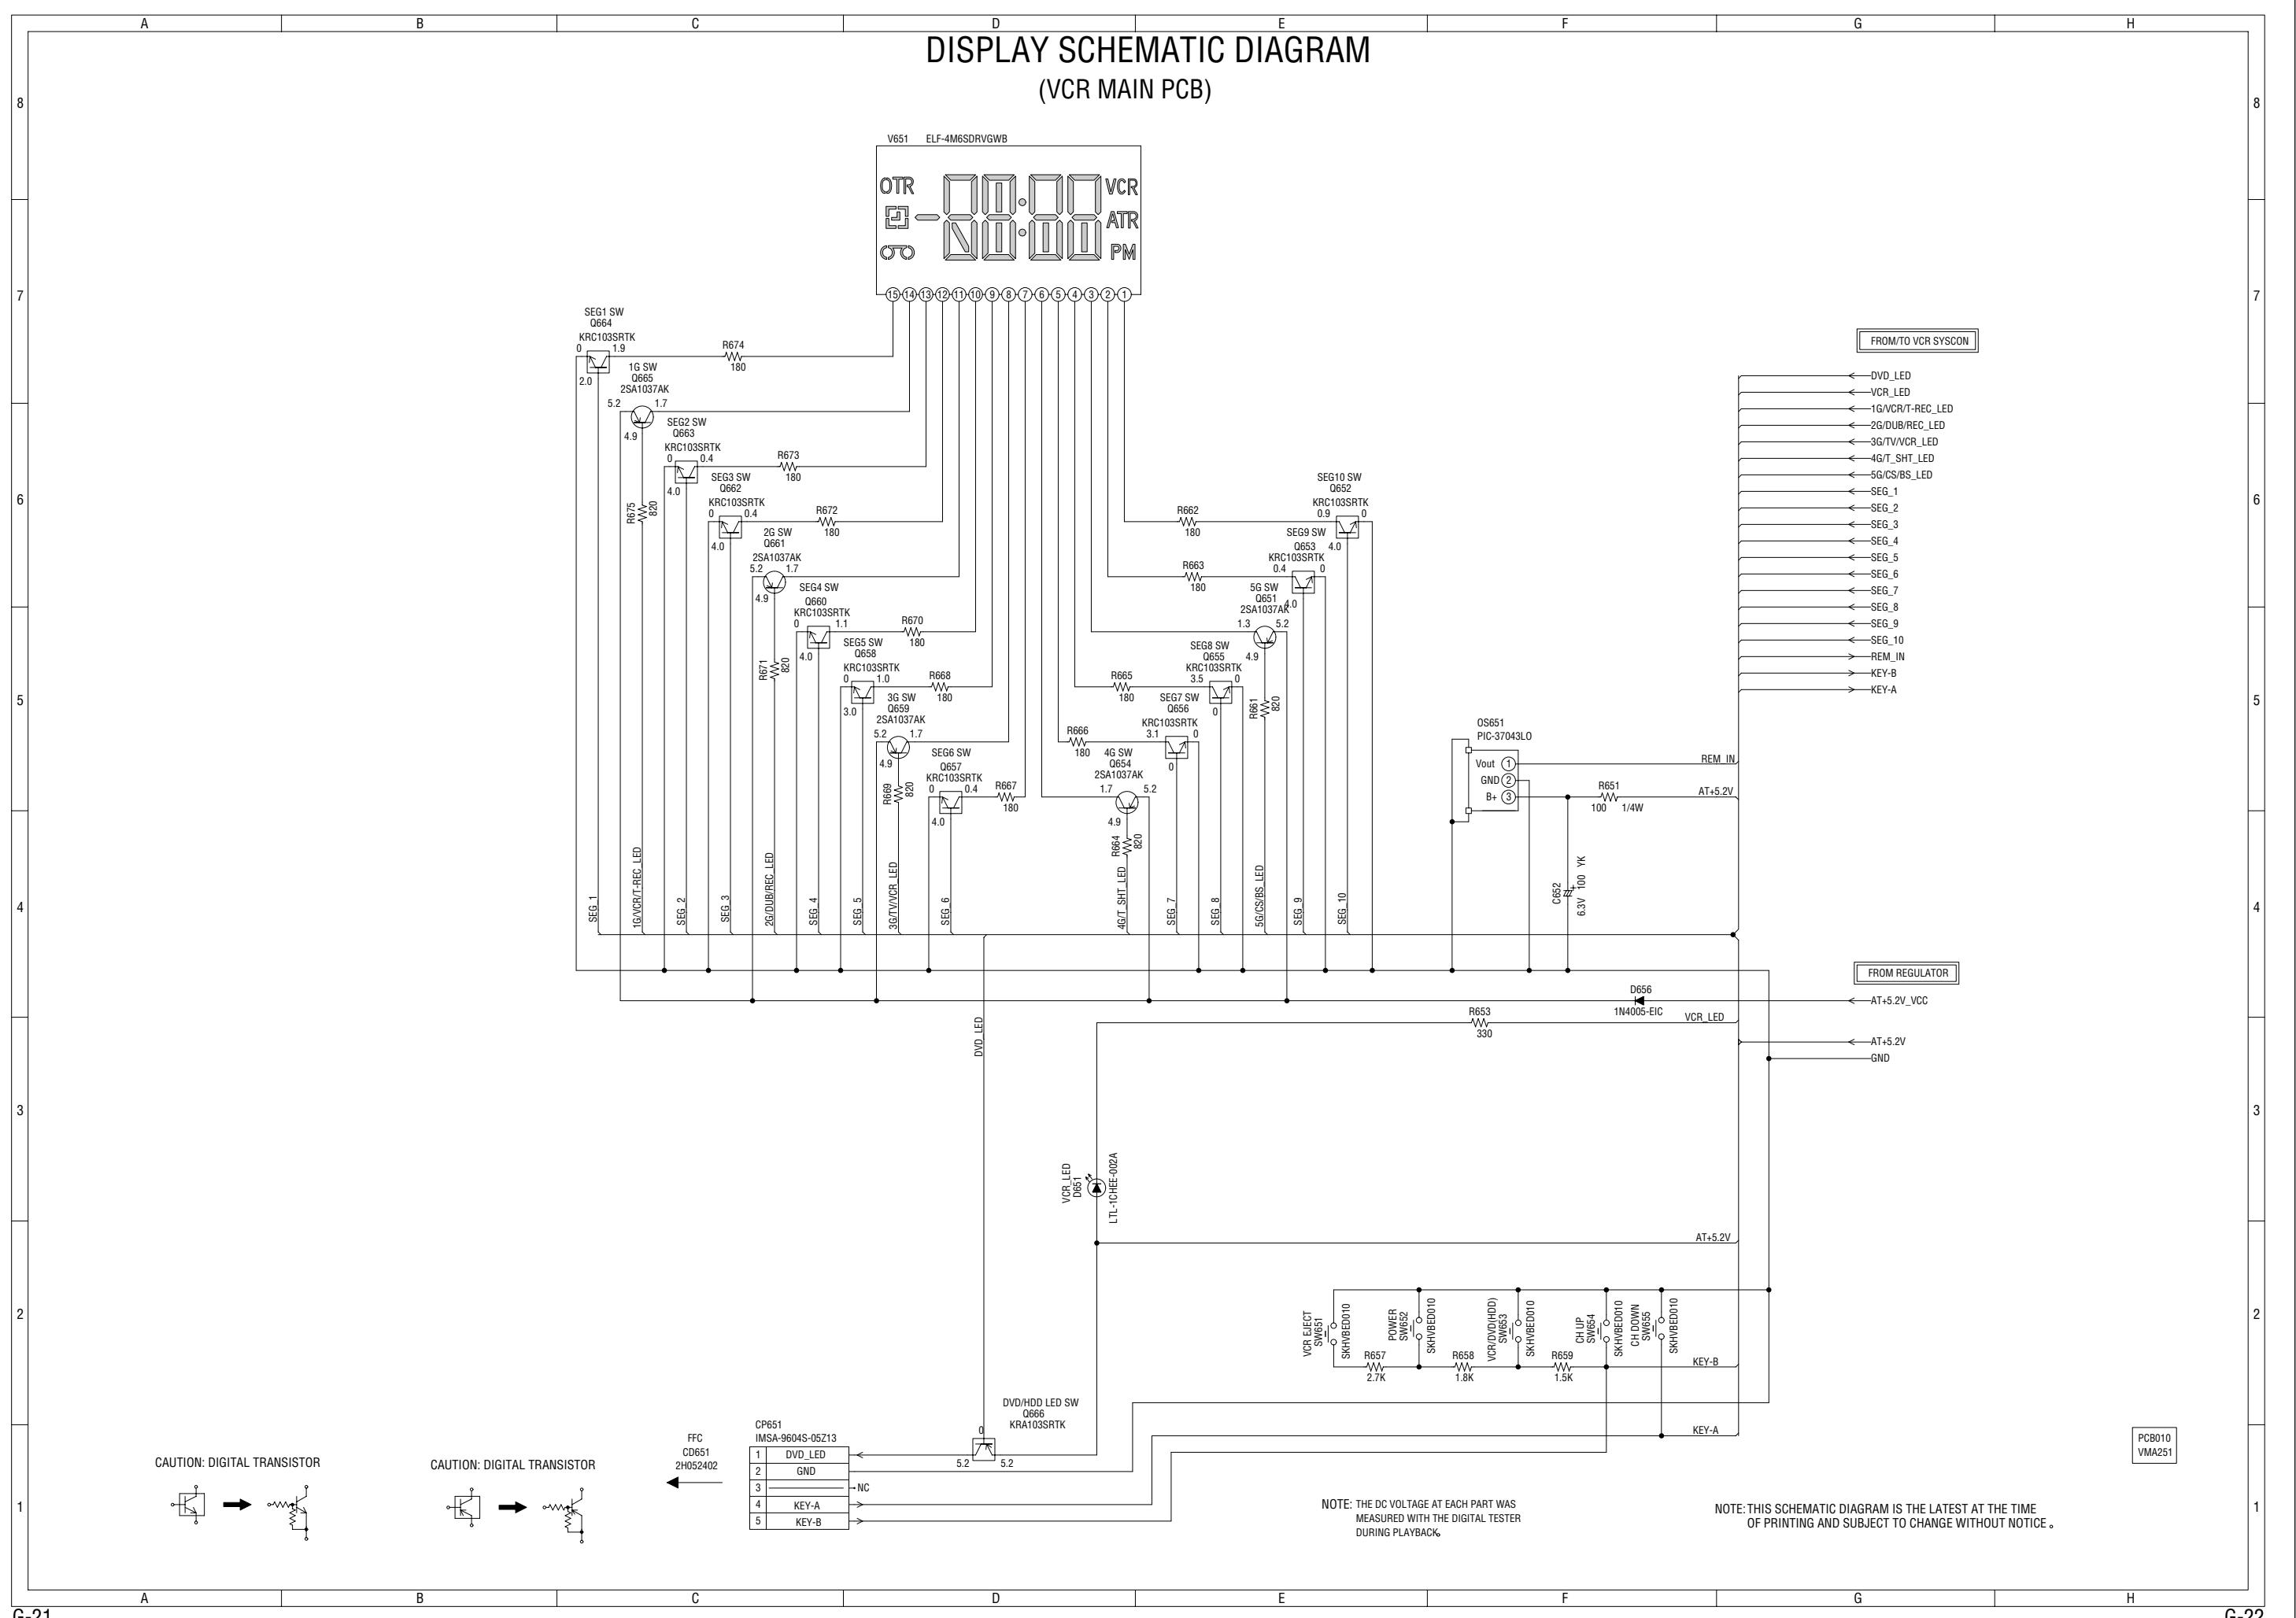

# HI-FI/DEMODULATOR SCHEMATIC DIAGRAM (VCR MAIN PCB)

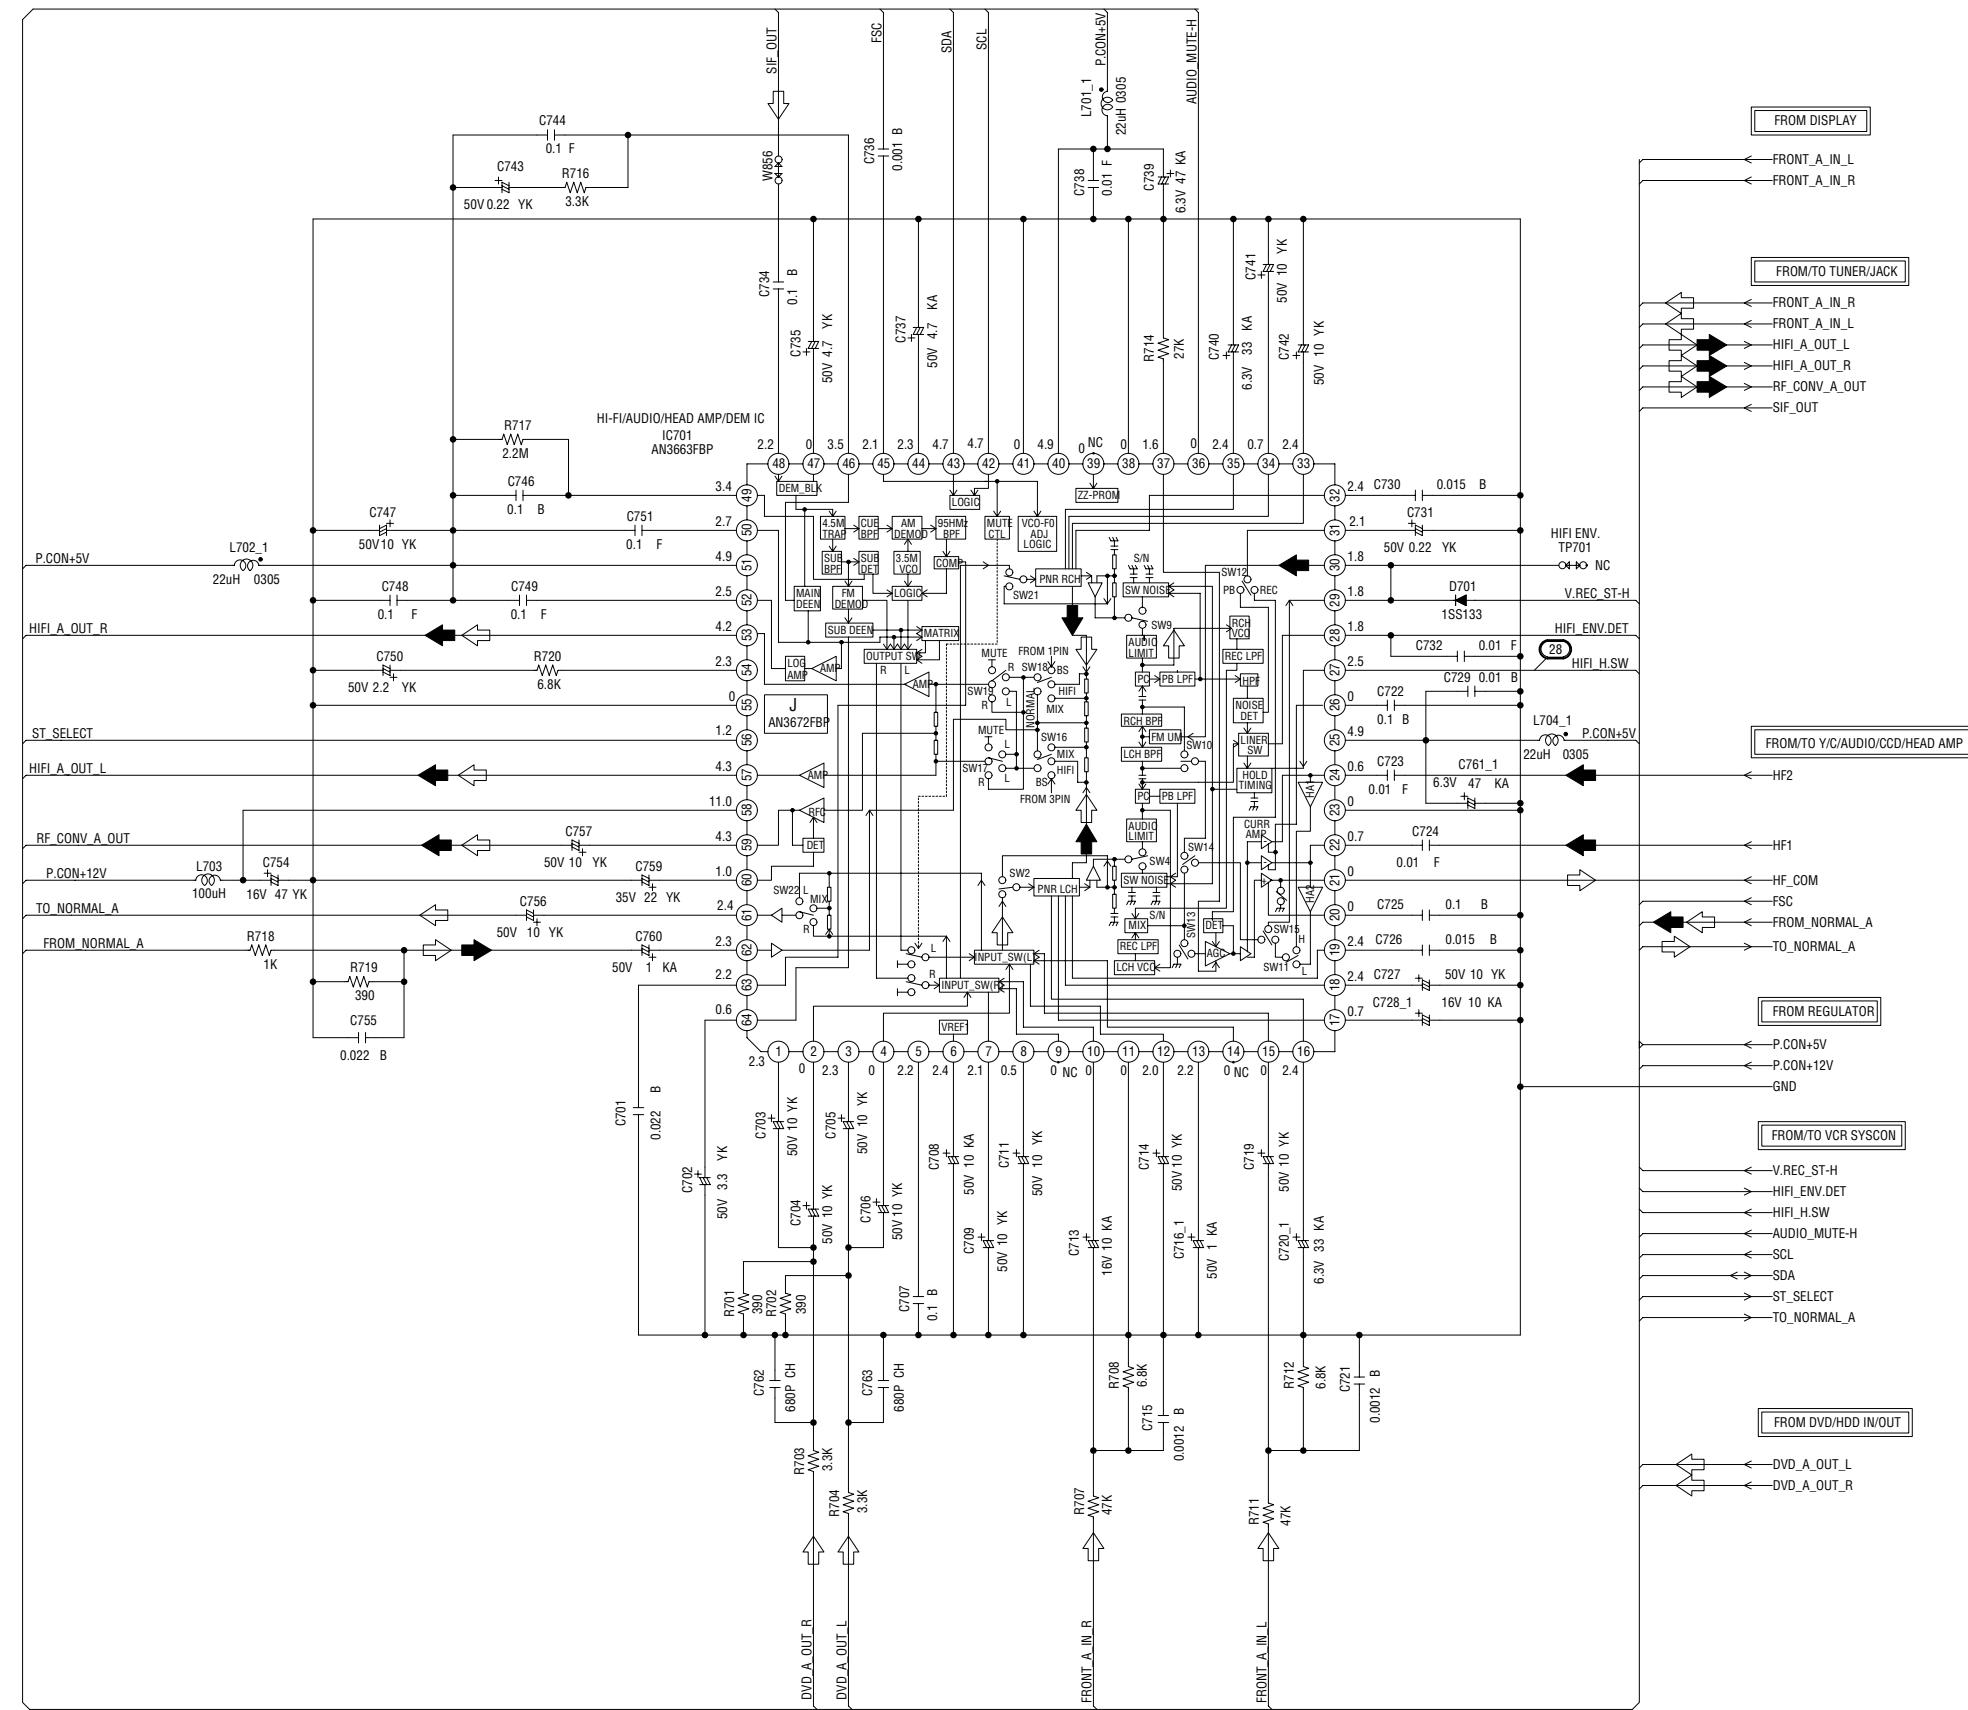


NOTE: THE DC VOLTAGE AT EACH PART WAS  
MEASURED WITH THE DIGITAL TESTER  
DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


← AUDIO SIGNAL(REC)  
← AUDIO SIGNAL(PB)

# DVD/HDD IN/OUT SCHEMATIC DIAGRAM

(VCR MAIN PCB)

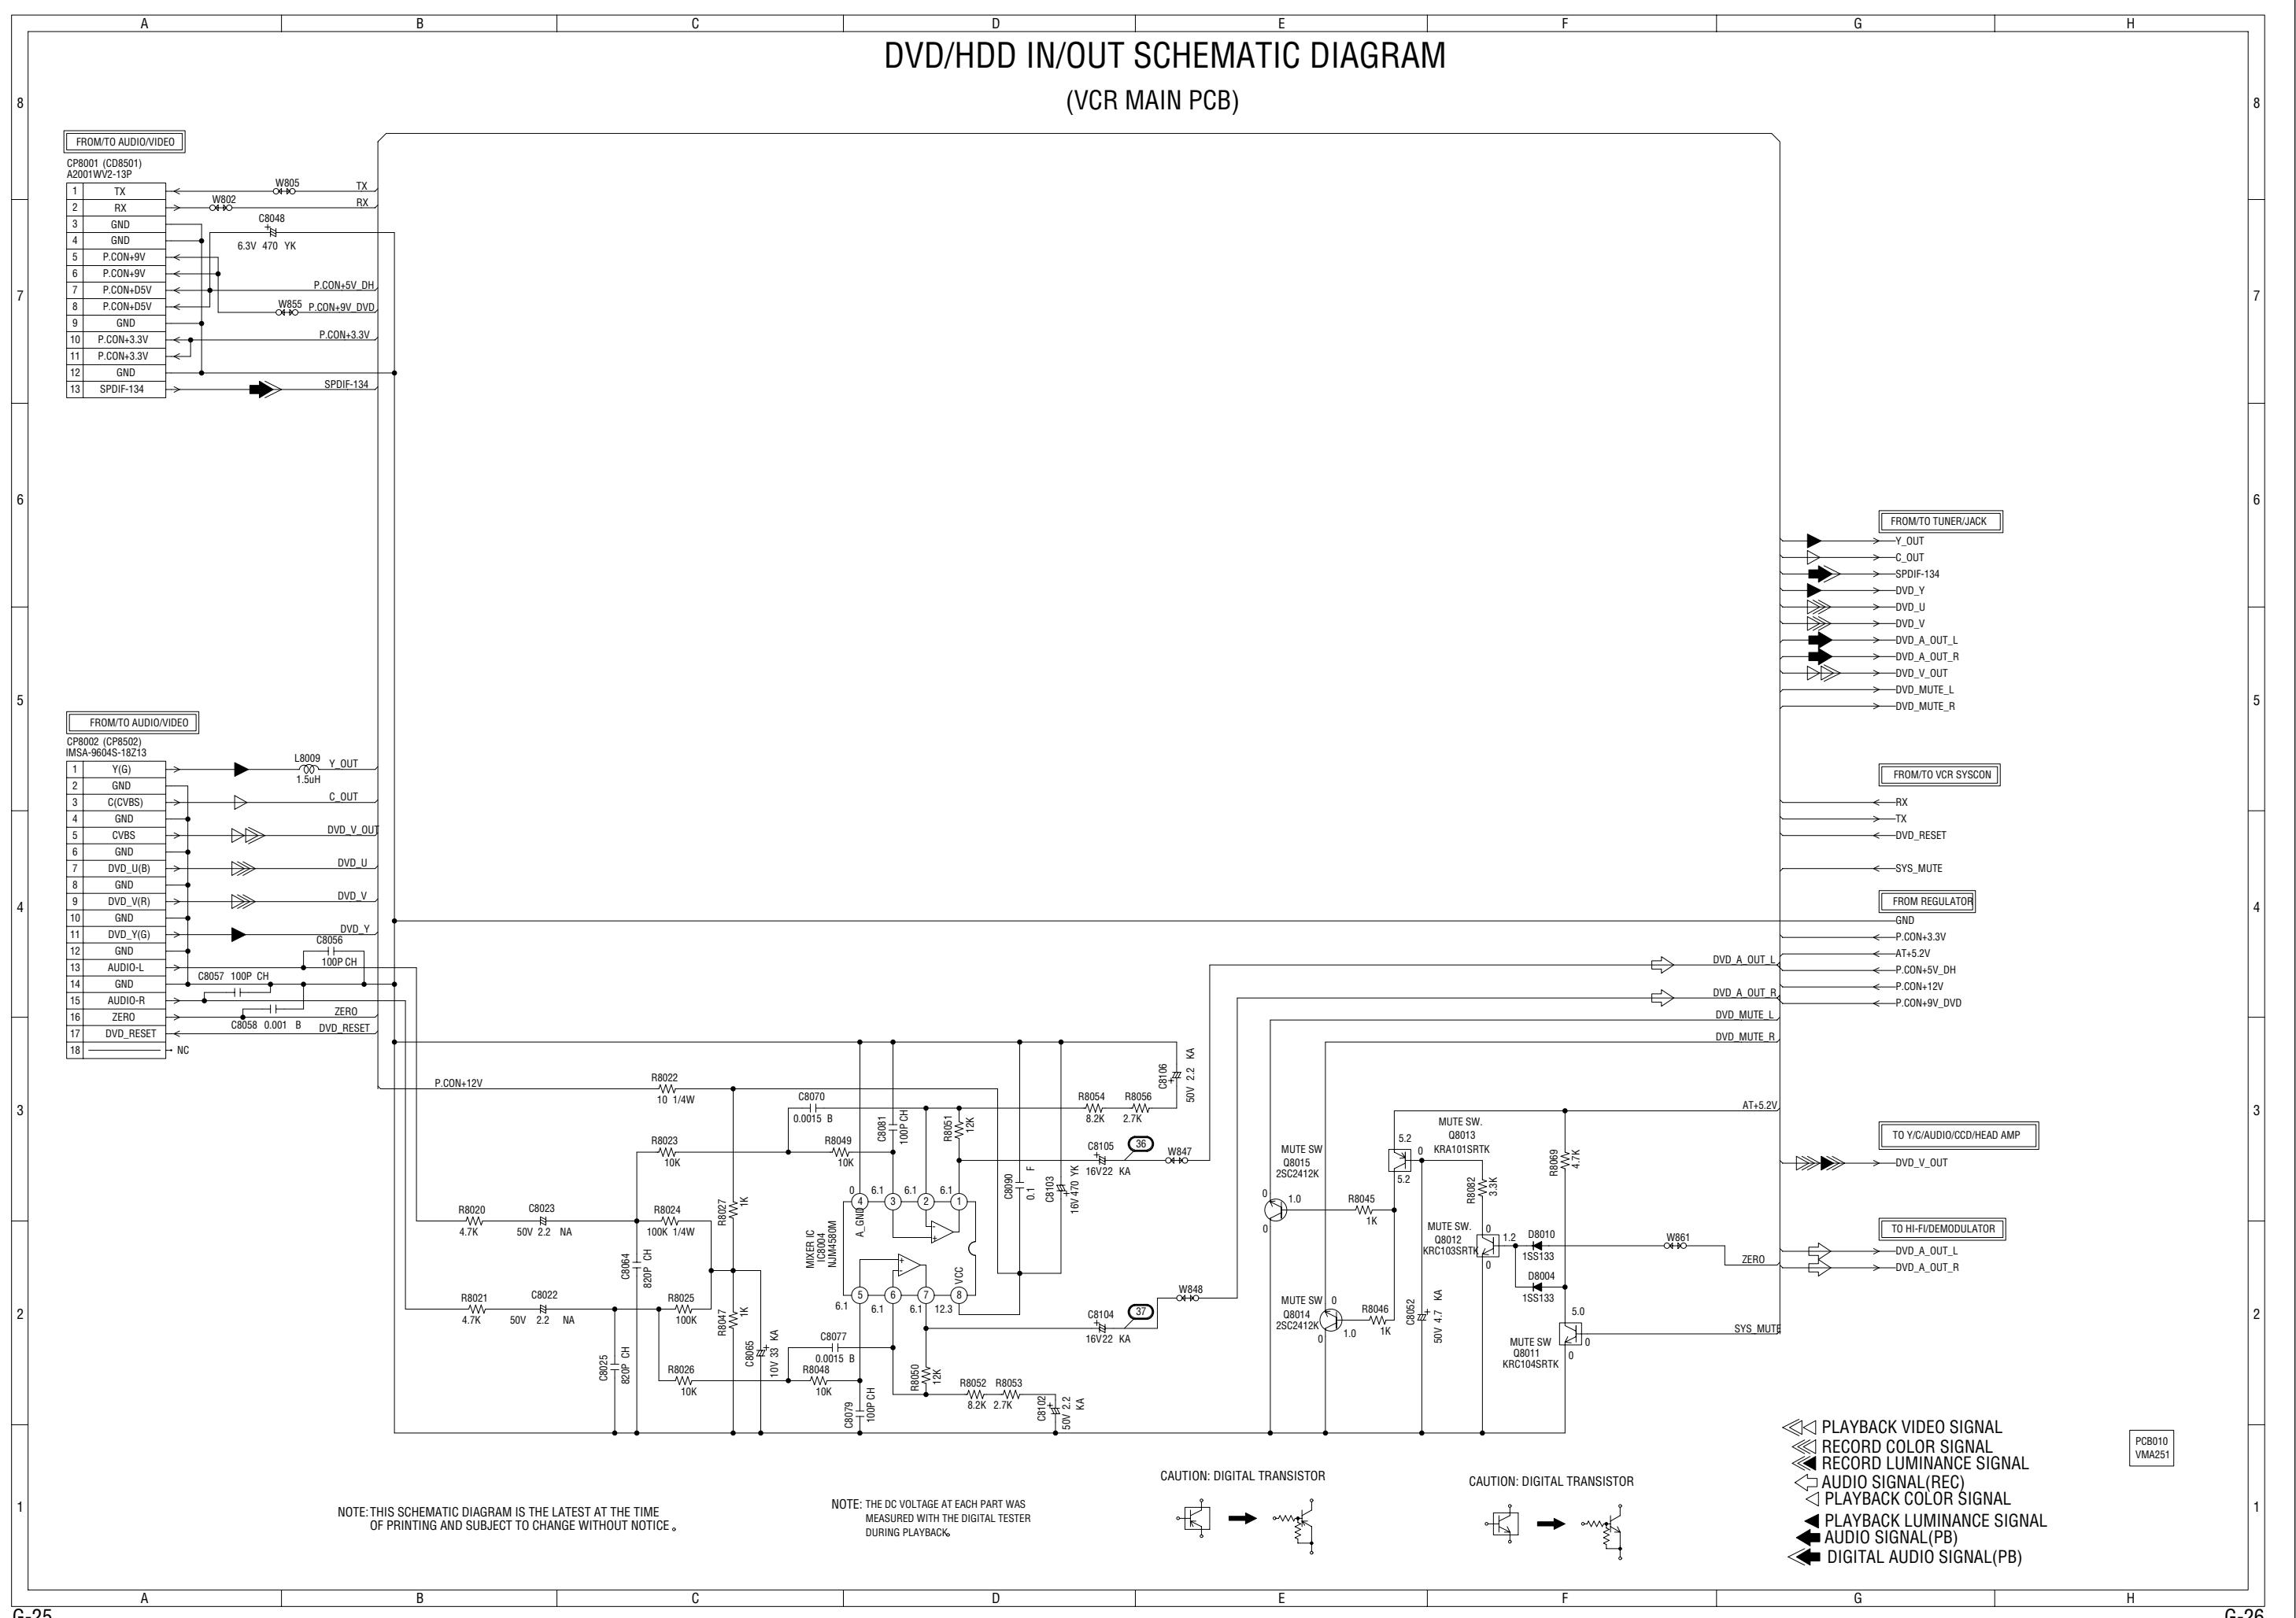

# POWER SCHEMATIC DIAGRAM (POWER PCB)

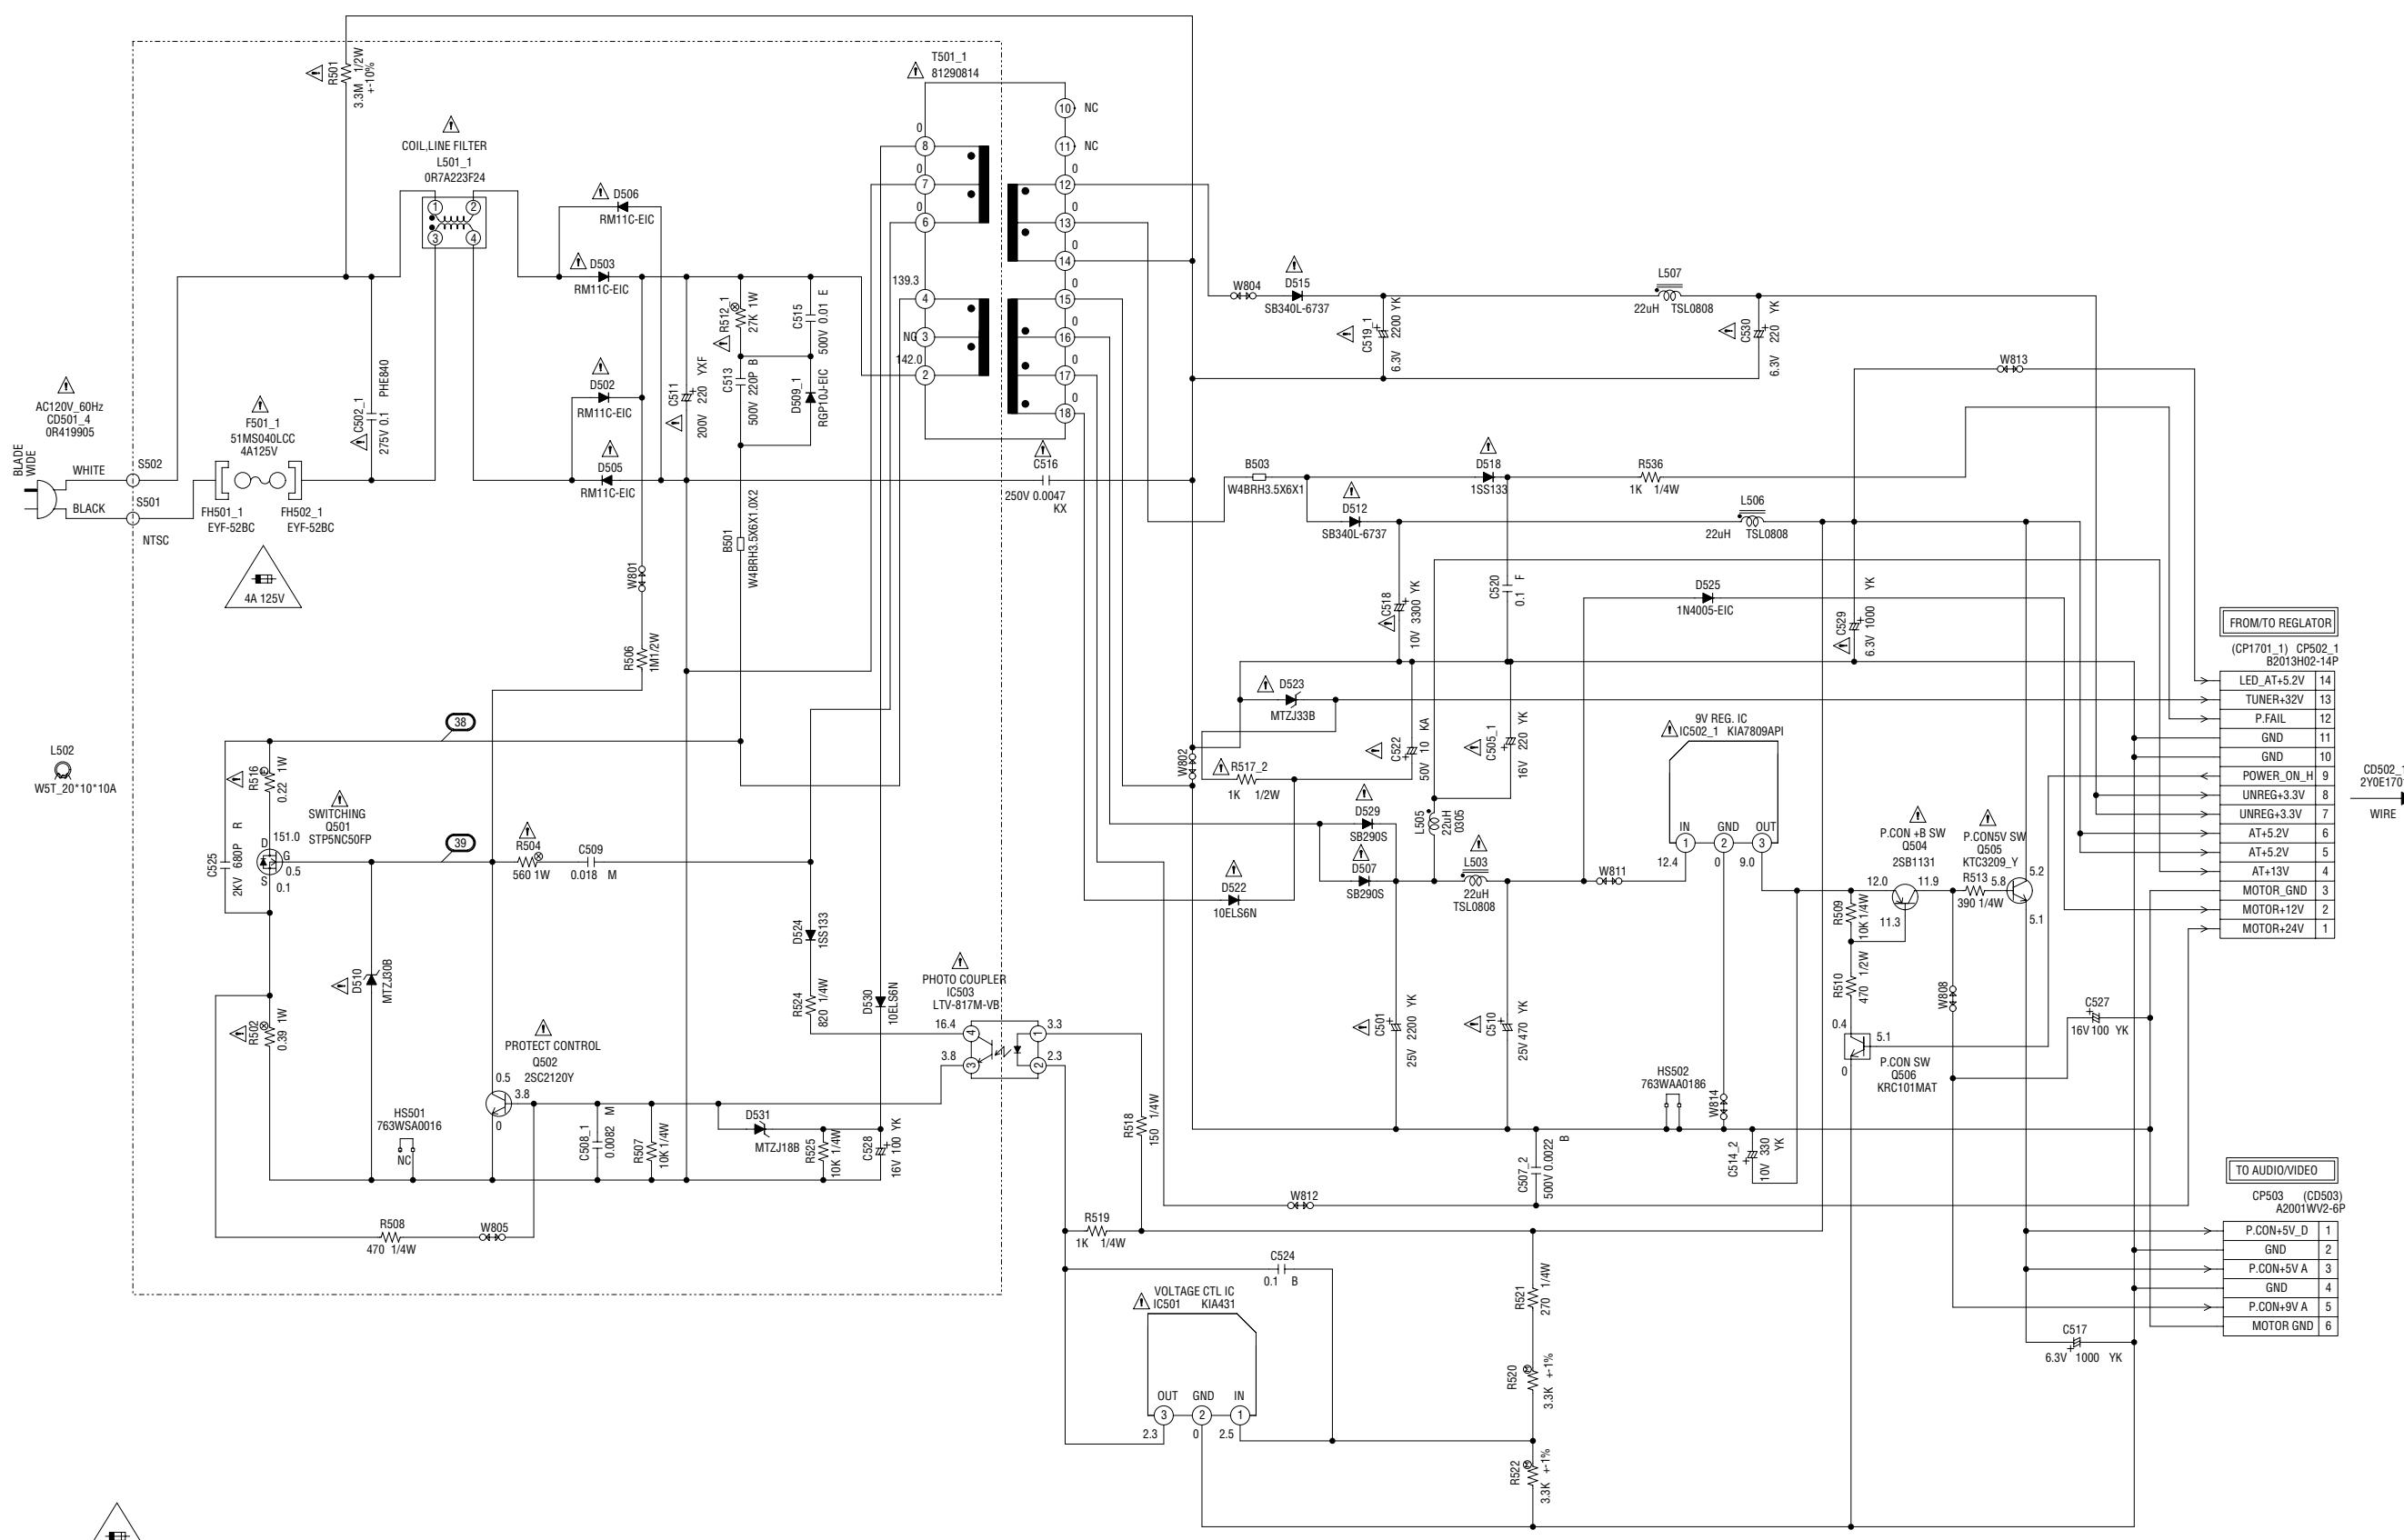

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,  
REPLACE ONLY WITH THE SAME TYPE FUSE 4A 125V(F501).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEINIE  
N'UTILISER QUE DES FUSIBLE DE MEME TYPE 4A 125V(F501).


CAUTION: SINCE THESE PARTS MARKED BY ARE  
CRITICAL FOR SAFETY, USE ONES  
DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPERES PAR UN ETANT  
DANGEREUSES AU POINT DE VUE SECURITE  
N'UTILISER QUE CELLES DECrites  
DANS LA NOMENCLATURE DES PIECES.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS  
MEASURED WITH THE DIGITAL TESTER  
DURING PLAYBACK.

CAUTION: DIGITAL TRANSISTOR

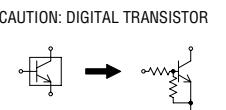

PCB240  
VPA152


**OPERATION SCHEMATIC DIAGRAM**  
**(OPERATION PCB)**

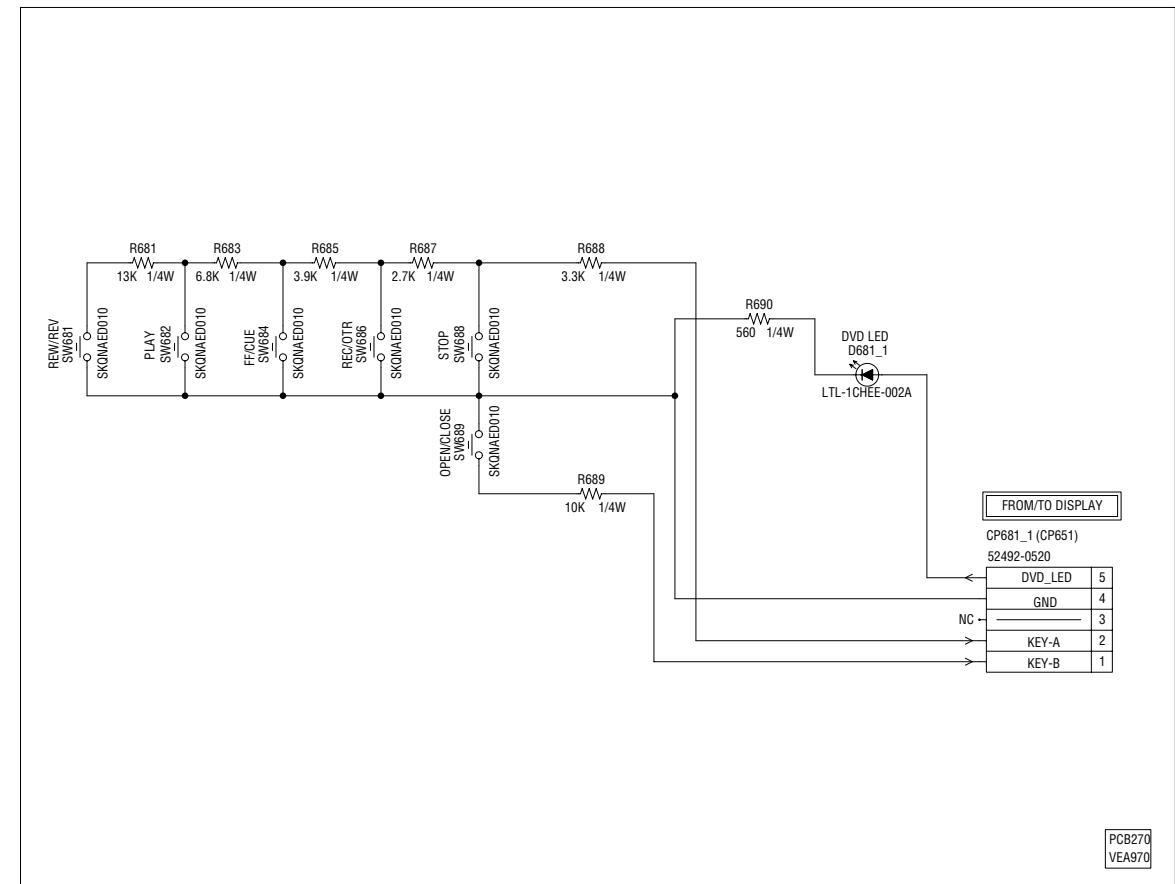

NOTE: THE DC VOLTAGE AT EACH PART WAS  
 MEASURED WITH THE DIGITAL TESTER  
 DURING PLAYBACK.



NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
 OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

# INTERCONNECTION DIAGRAM



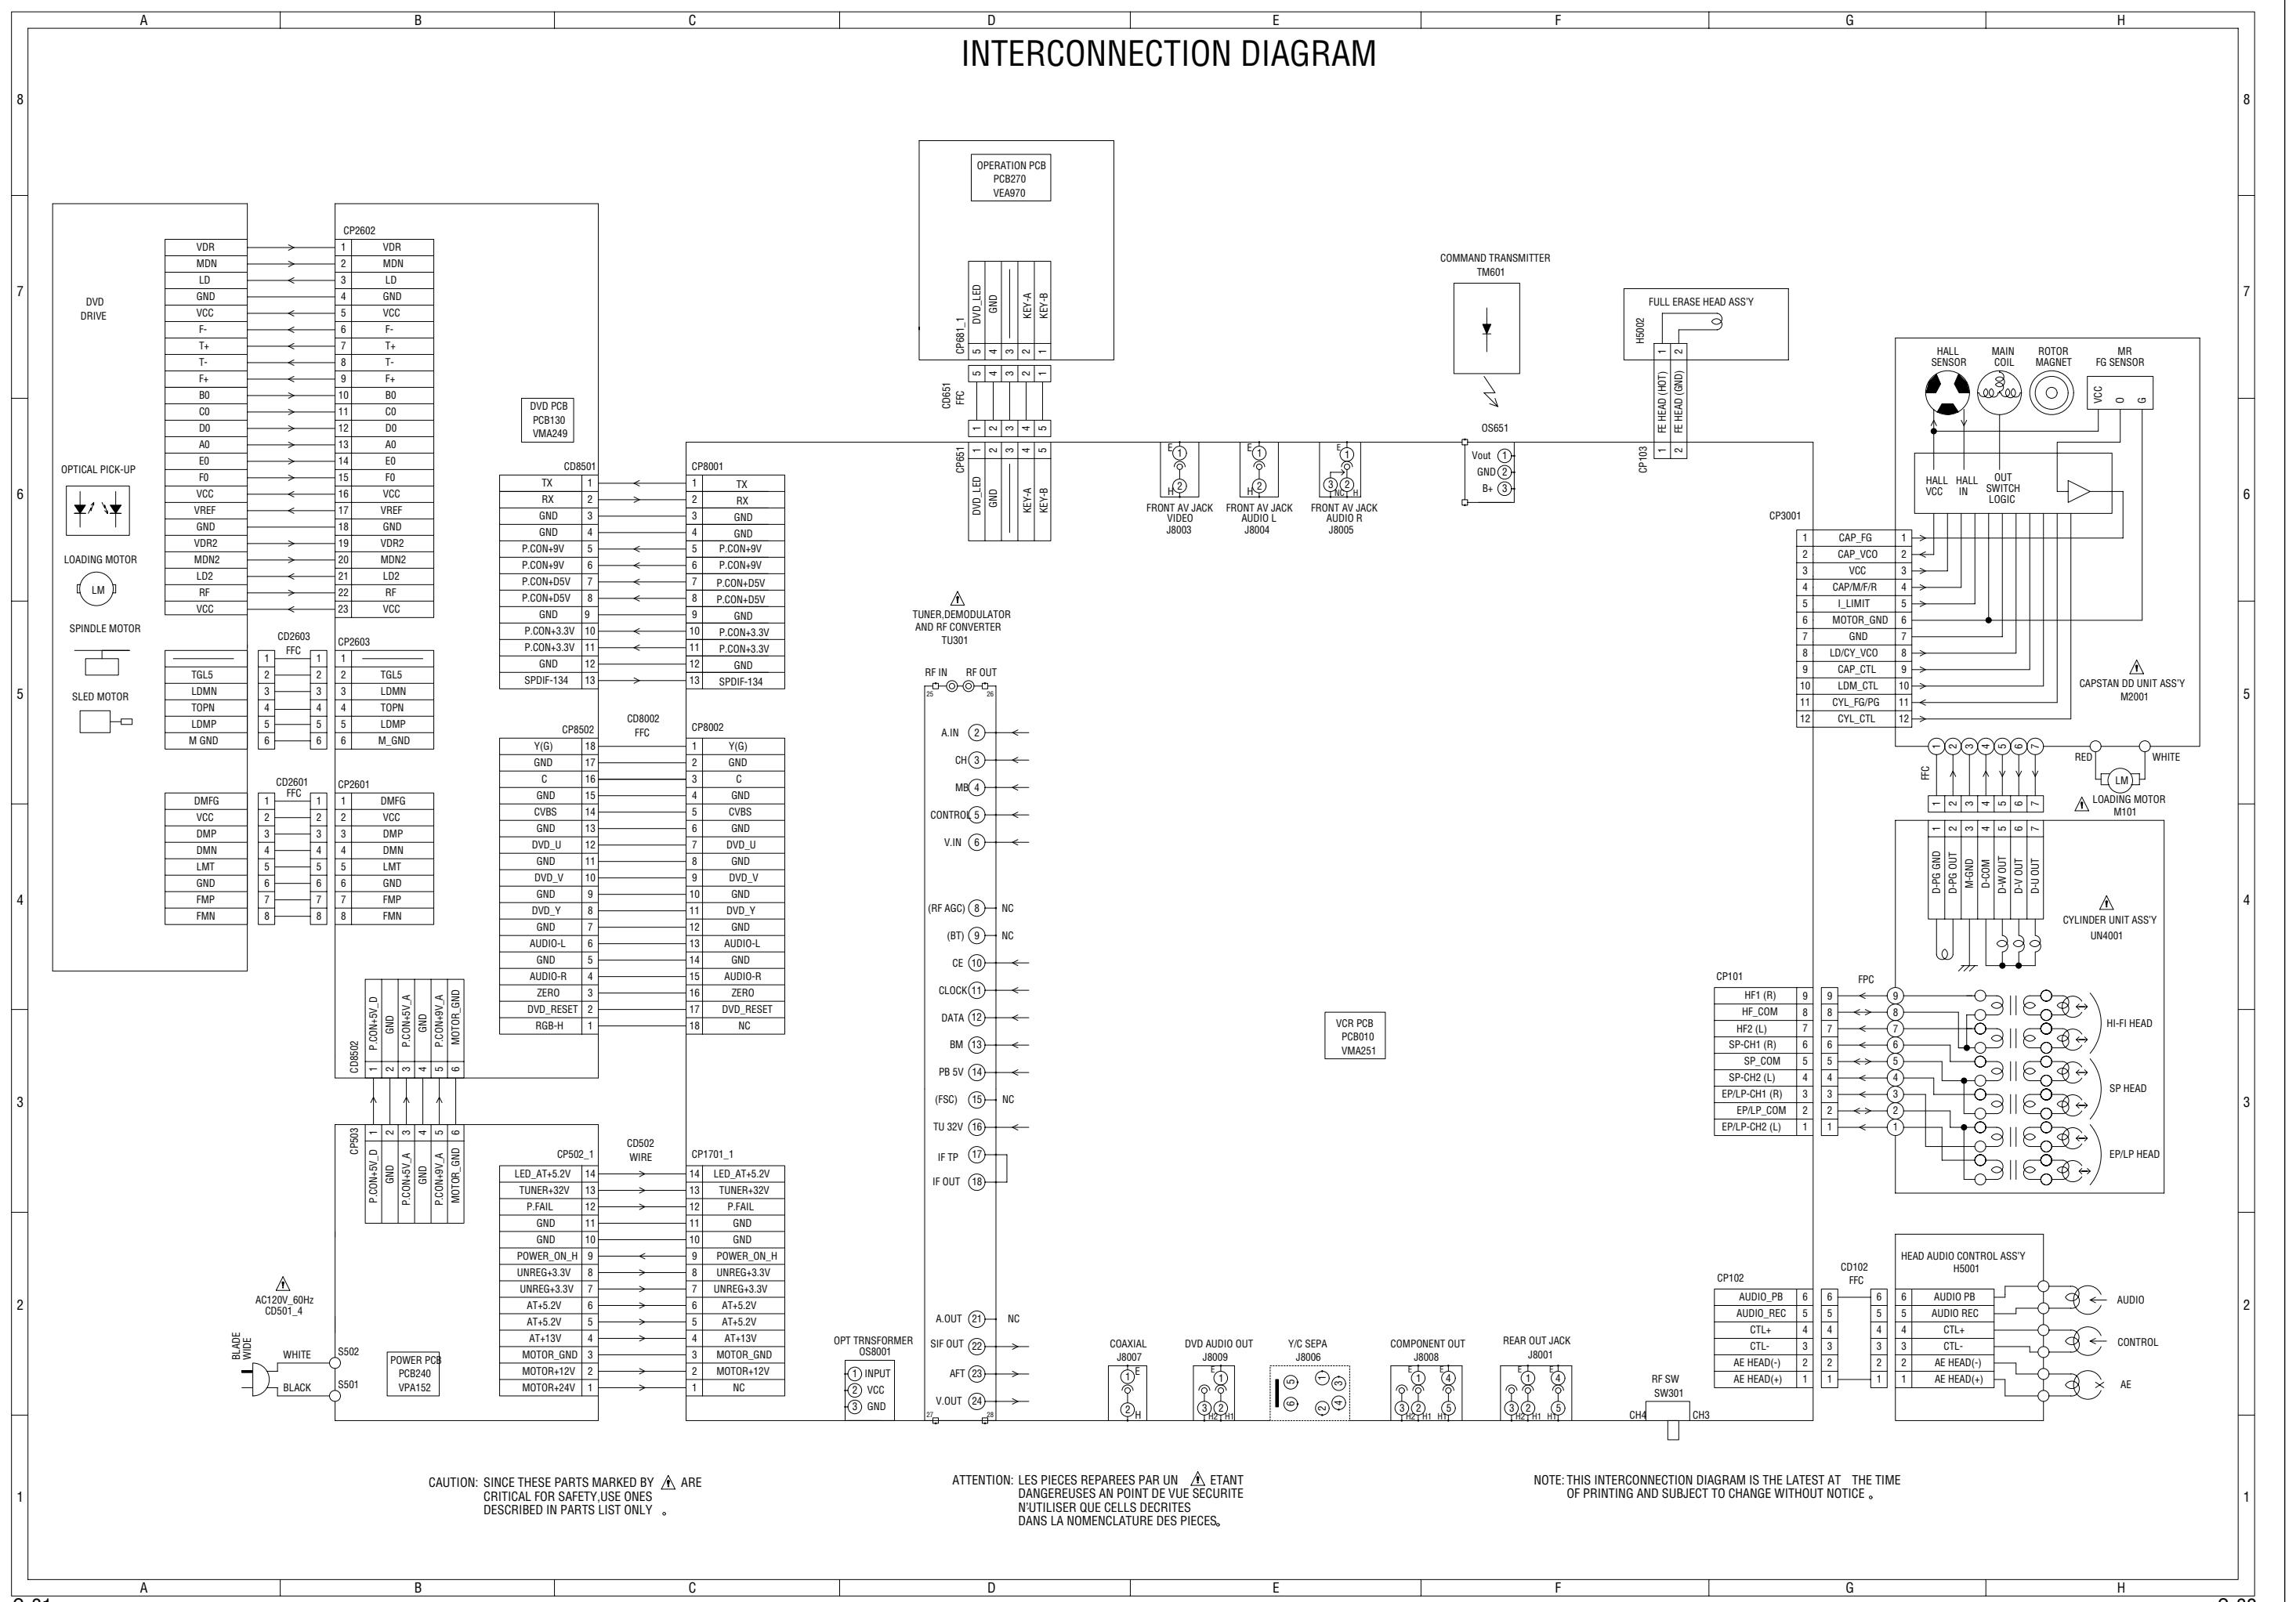


## WAVEFORMS










### Y/C/AUDIO/CCD/HEAD AMP

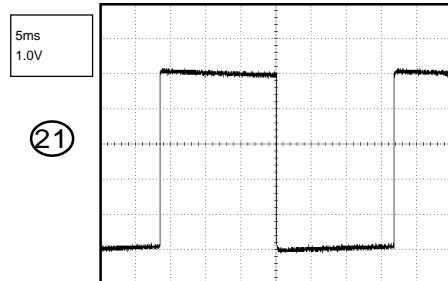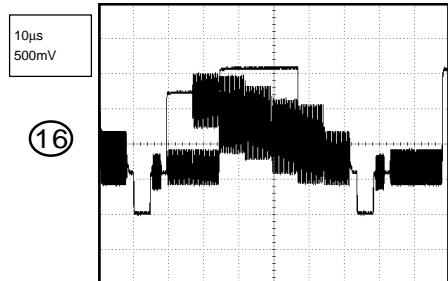

### HI-FI/DEMODULATOR

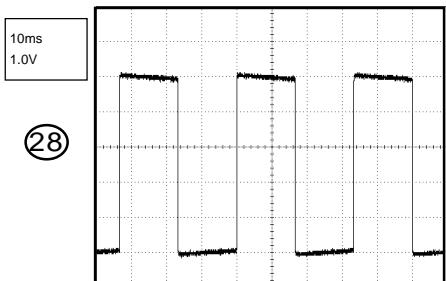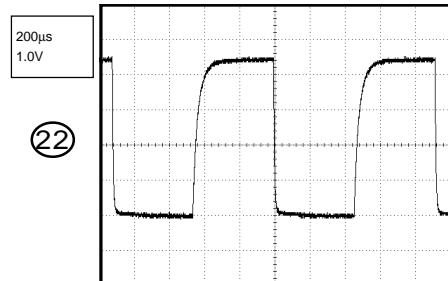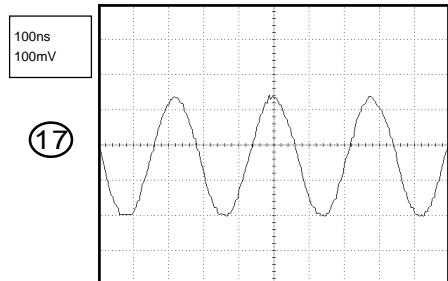




### TUNER/JACK

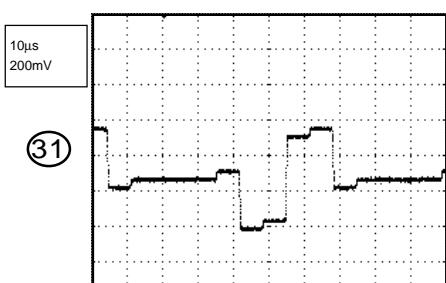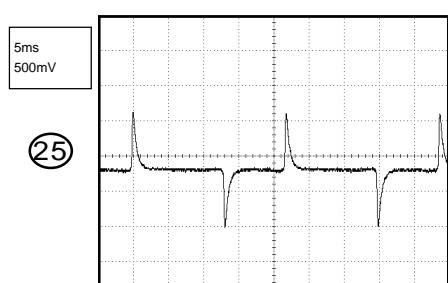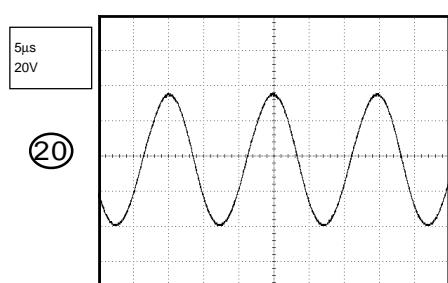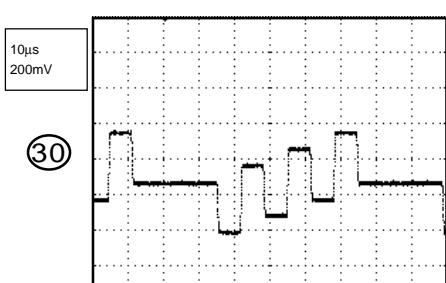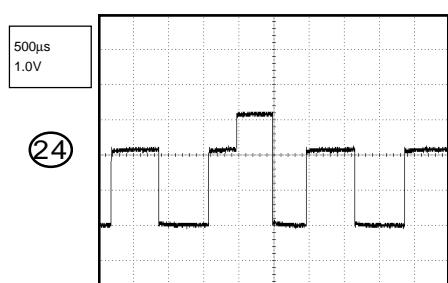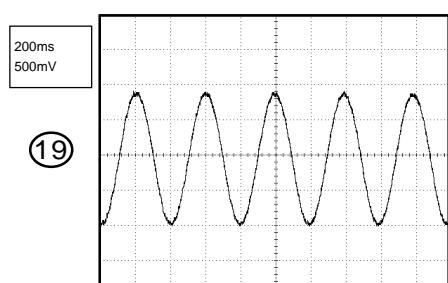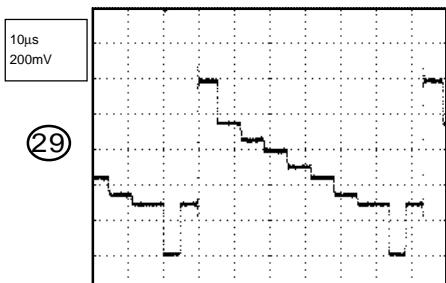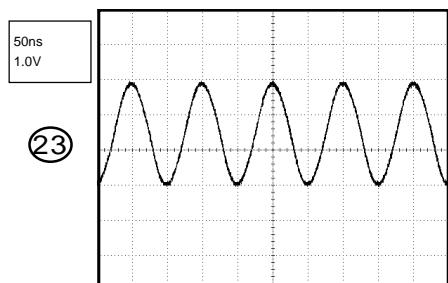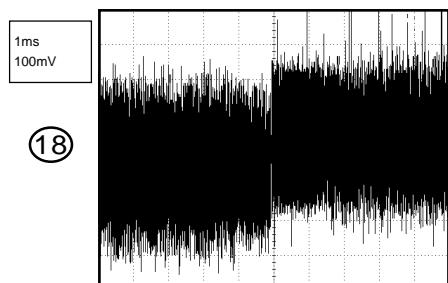




**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# WAVEFORMS




## DSP

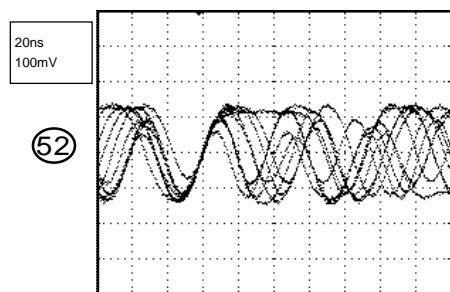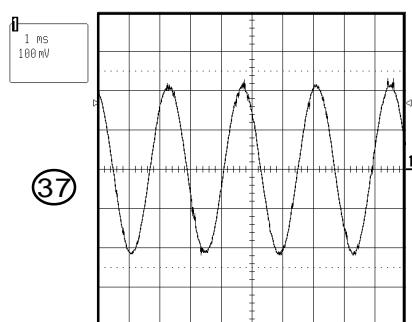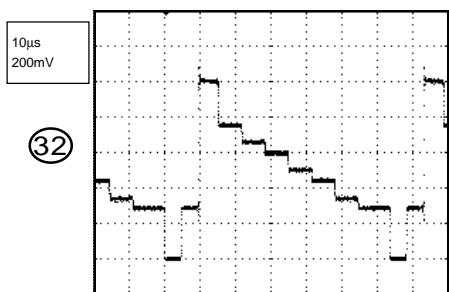




## POWER

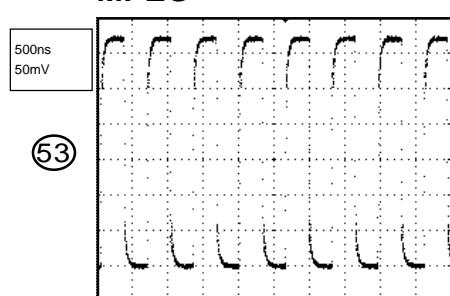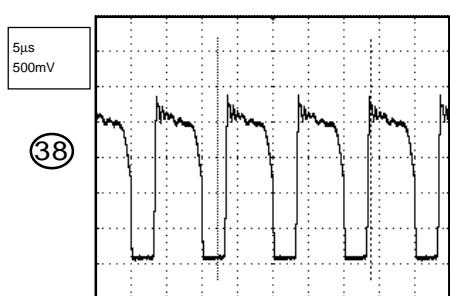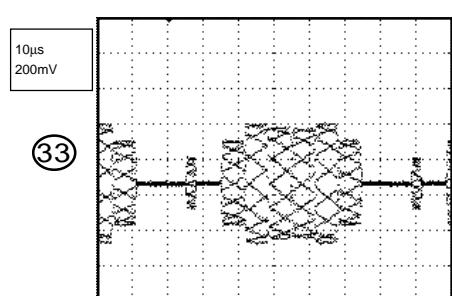




## MPEG

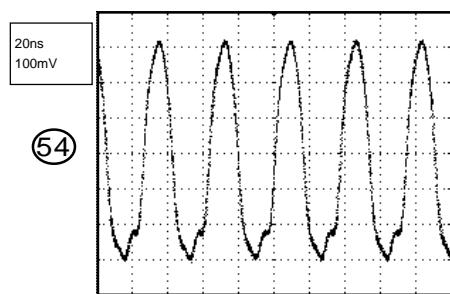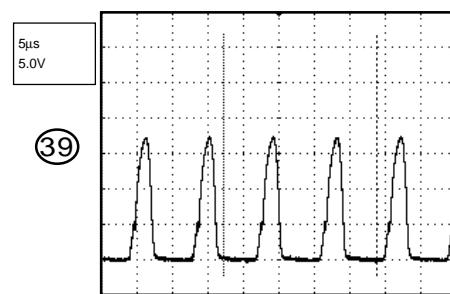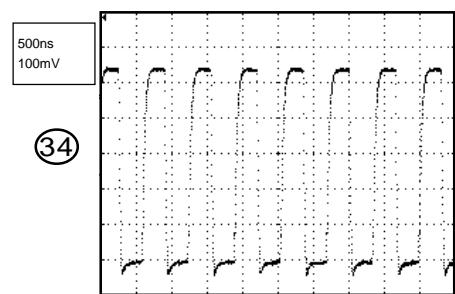

## READ CHANNEL







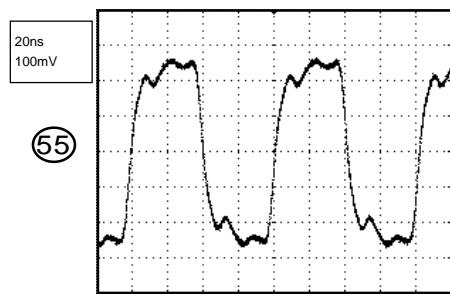
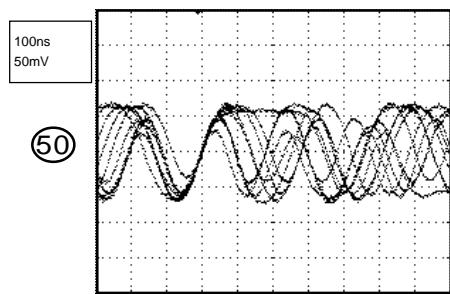
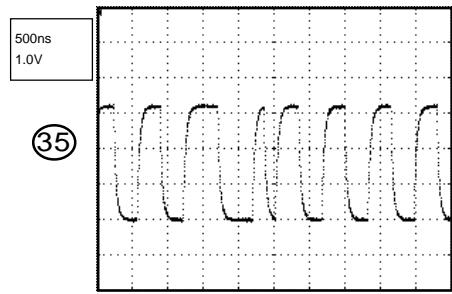


## DVD/HDD IN/OUT

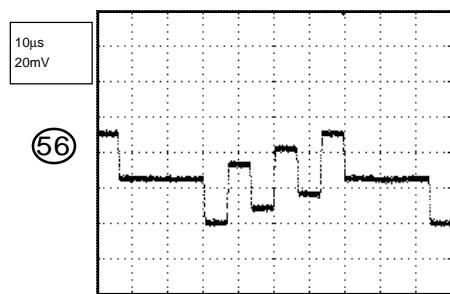
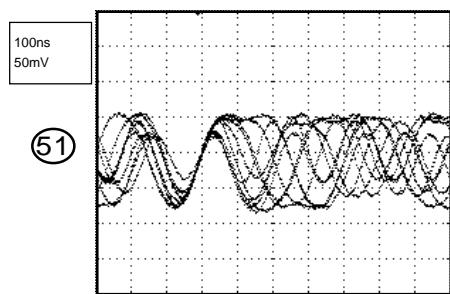
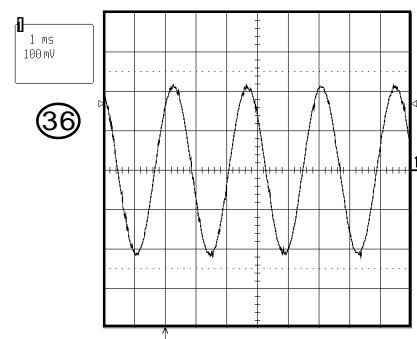


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.




## WAVEFORMS

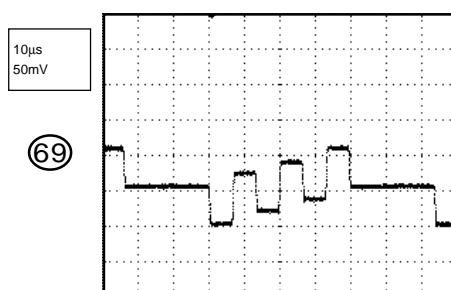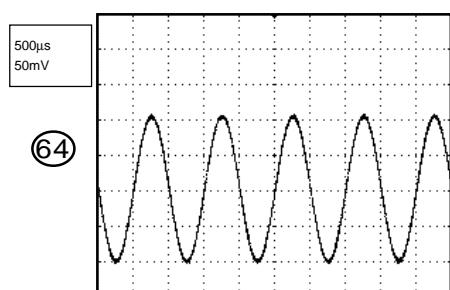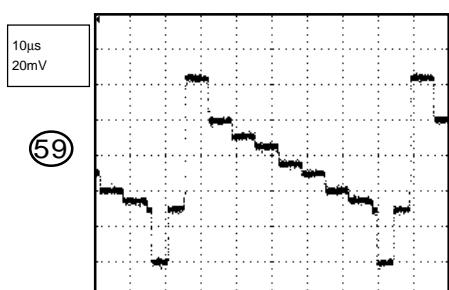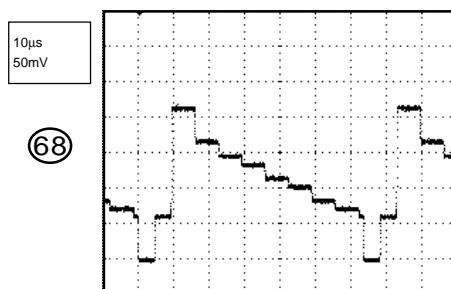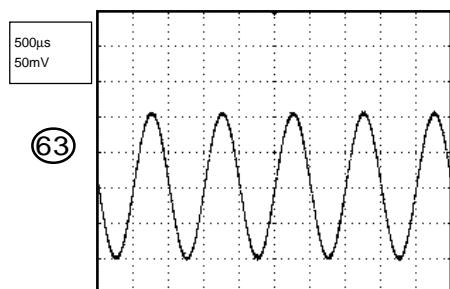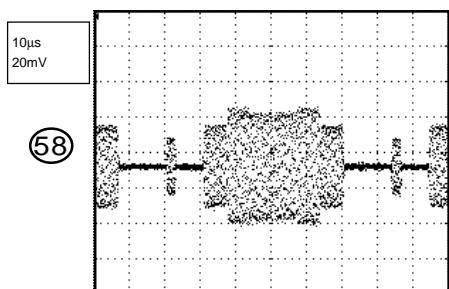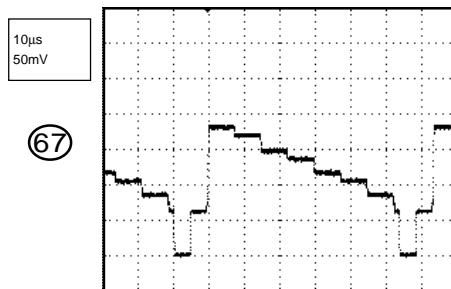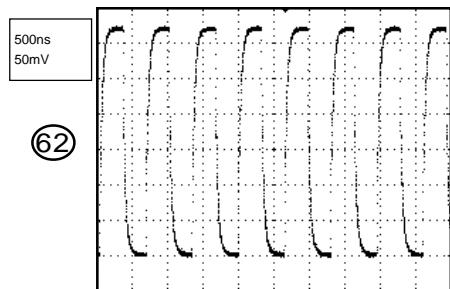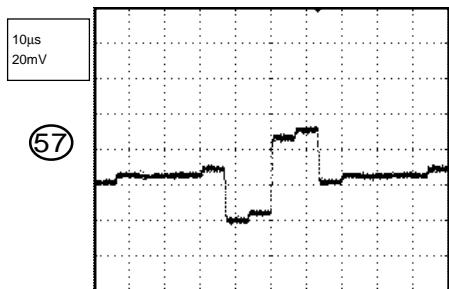

### MEMORY

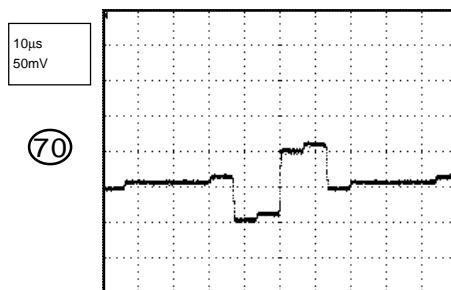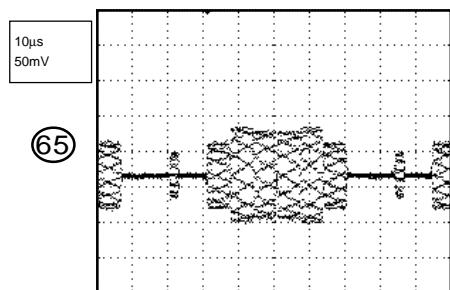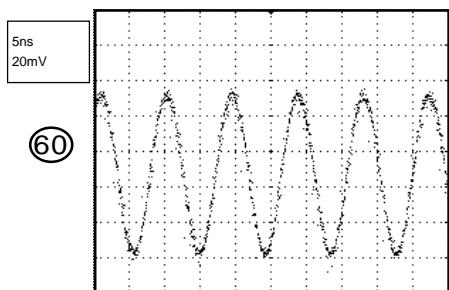


### AUDIO/VIDEO

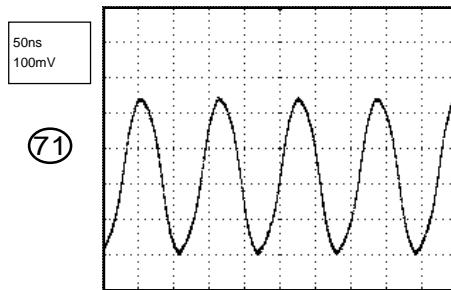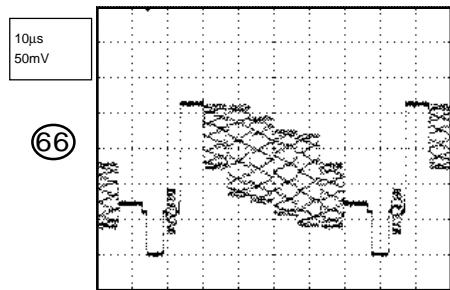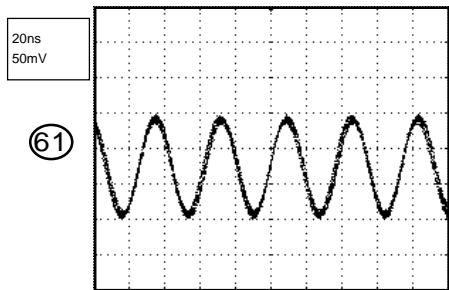


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# MECHANICAL EXPLODED VIEW

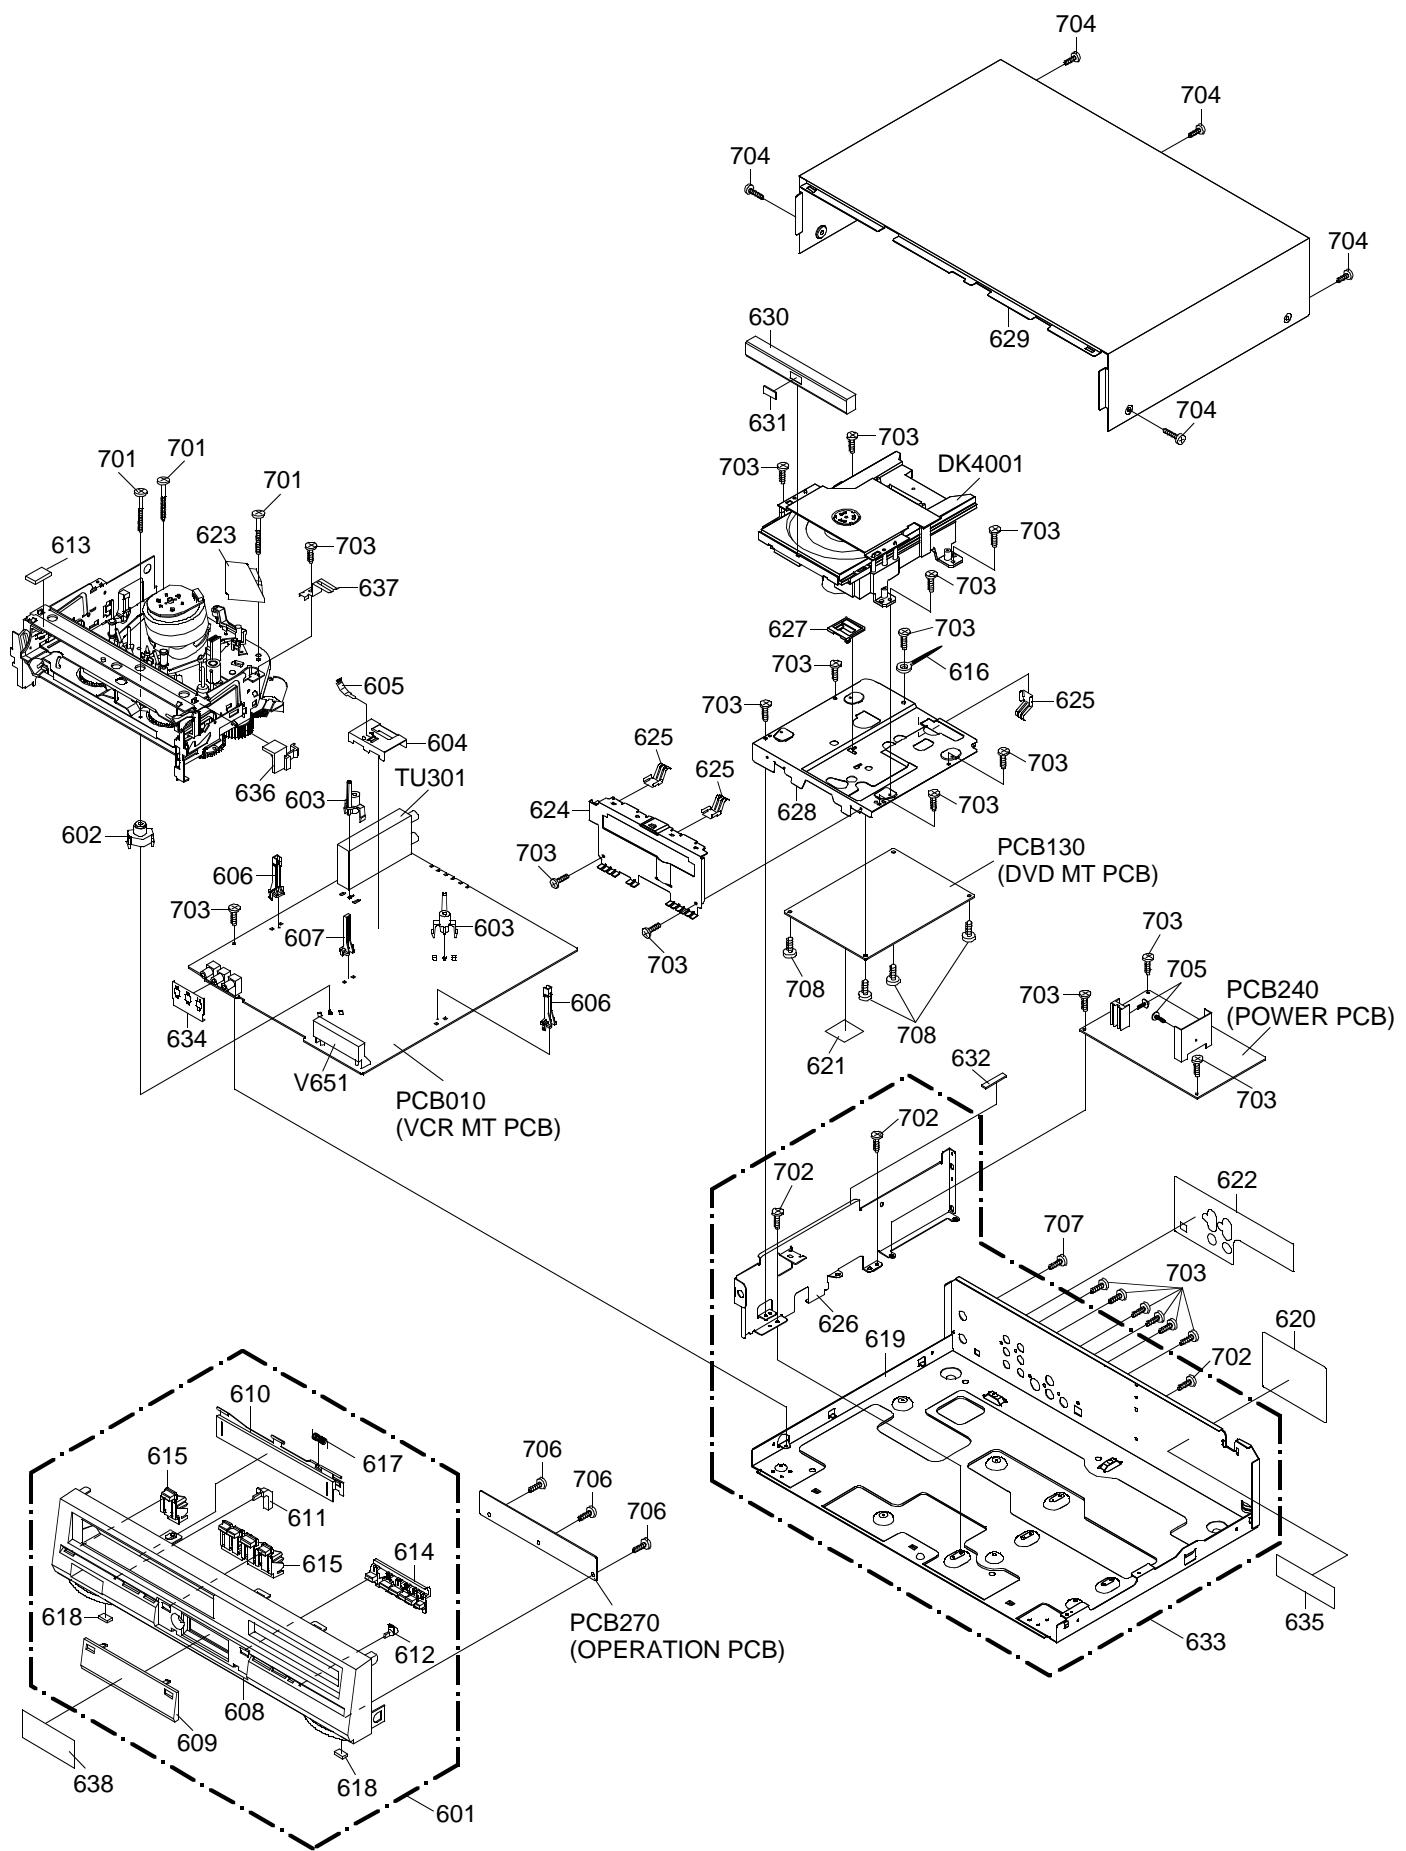


## CHASSIS EXPLODED VIEW (TOP VIEW)

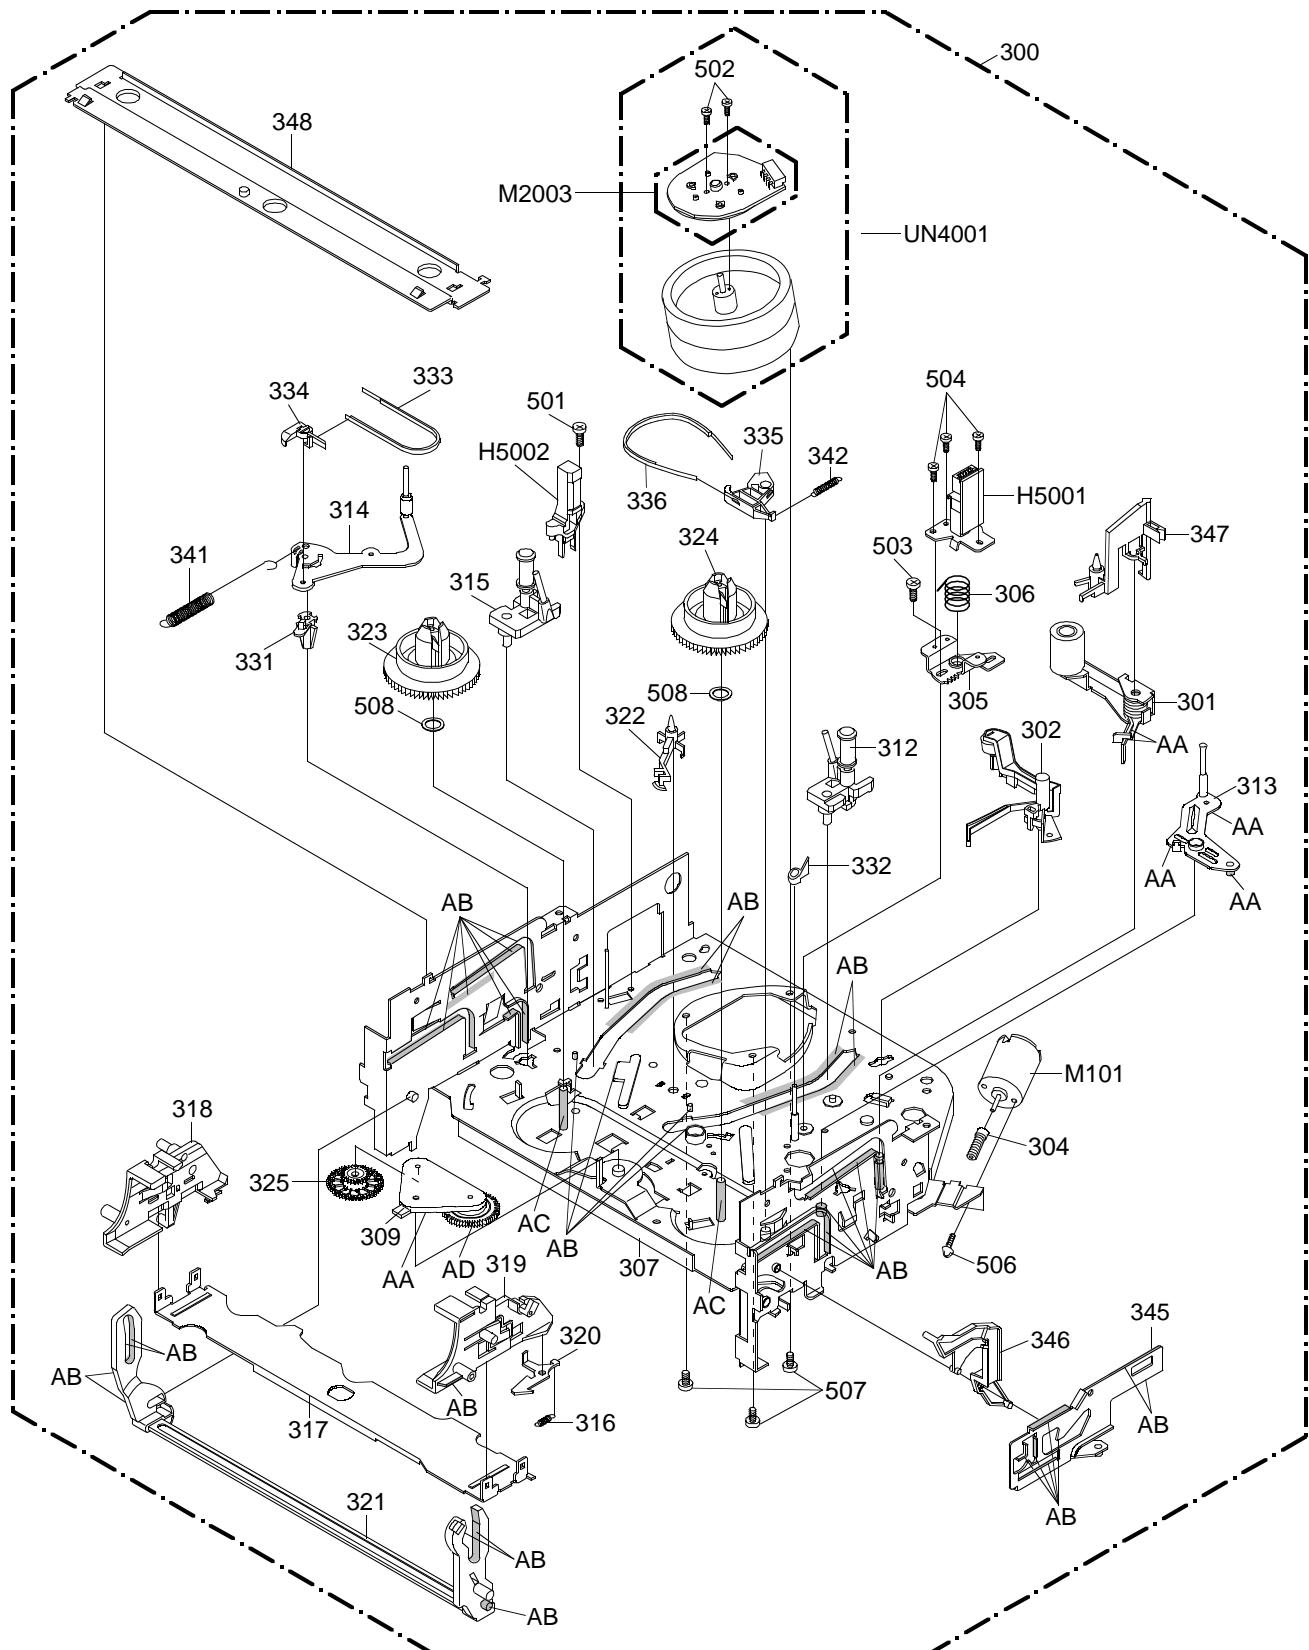

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	MG-33	AB
	FG-84M	AC
	FL-721	AD

**NOTE:** Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

## CHASSIS EXPLODED VIEW (BOTTOM VIEW)

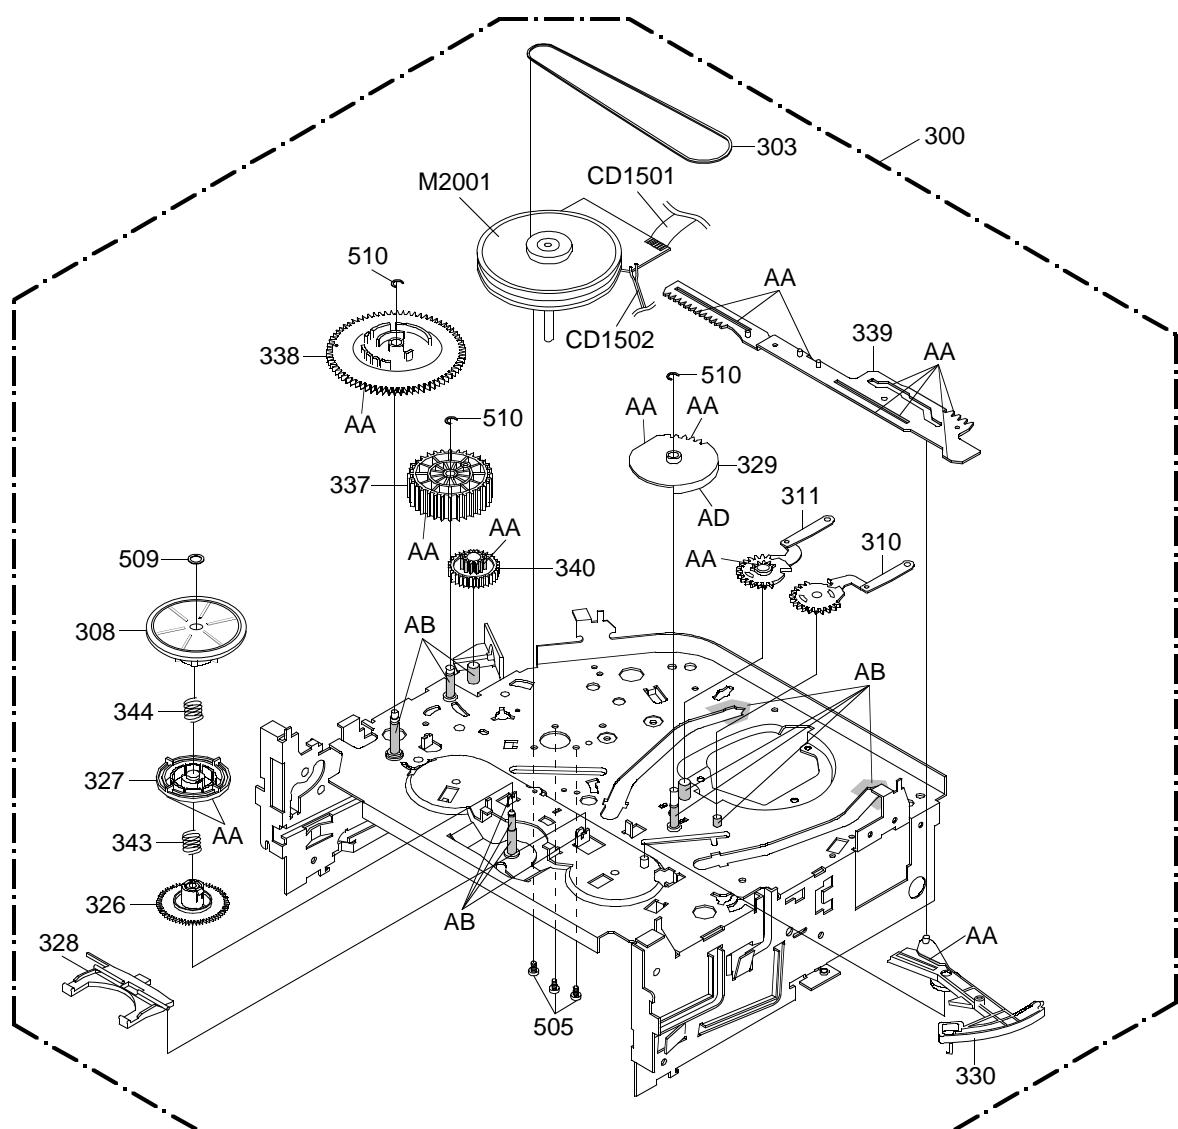

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	MG-33	AB
	FG-84M	AC
	FL-721	AD

**NOTE:** Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

## MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION		
601	A2A795C720	CABINET,FRONT ASSY		
602	701WPA0686	HOLDER,DECK		
603	701WPA0751	HOLDER,DECK		
604	752WSA0230	SHIELD,CASE HEAD AMP		
605	753WUAA006	SPRING,EARTH HEAD AMP		
606	85OP700036	HOLDER EOT SENSOR		
607	85OP700037	HOLDER,LED		
608	701WPJB727	CABINET,FRONT		
609	711WPD0612	PLATE,DISPLAY		
610	712WPJB438	FLAP		
611	713WPA0193	GLASS,LED-VCR		
612	713WPA0194	GLASS,LED-DVD		
613	800WFAA013	CUSHION,LEG		
614	735WPBA360	BUTTON,FRAME-DVD		
615	735WPBA361	BUTTON,FRAME-VCR		
616	8995034000	CORD CLIP UL CO.		
617	743WKA0042	SPRING,FLAP		
618	800WFA0051	CUSHION,LEG		
619	702WSA0109	PLATE,BOTTOM		
620	722A08A117	SHEET,RATING		
621	7230007461	SHEET,IC		
622	7230007399	SHEET,JACK		
623	752WSA0275	COVER,AC HEAD		
624	753WSA0151	SHIELD,FRONT-DVD		
625	753WUA0060	SPRING,EARTH		
626	761WSA0082	ANGLE,CENTER		
627	761WPA0244	HOLDER,FFC		
628	761WSA0089	ANGLE,DECK		
629	702WSB0065	CABINET,TOP		
630	712WPB0105	PLATE,TRAY-FRONT		
631	7235630001	SHEET,DVD(NEW)		
632	800WFA0055	CUSHION 20x5xT1		
633	A2A795C730	CABINET BOTTOM ASS'Y		
634	752WSA0280	SHIELD,3-PIN		
635	7260000332	SHEET,CAUTION		
636	701WPA0781	HOLDER,TOP		
637	753WUA0062	SPRING,EARTH-TOP		
638	723000A698	SHEET,DISPLAY		
701	8109130B94	SCREW,TAP TITE(B)R	PAN	3x29
702	8109230704	SCREW,TAP TITE(B) R	BIND	3x7
703	8109230804	SCREW,TAP TITE(B)	BIND	3x8
704	8109K30601	SCREW,TAP TITE(B)	BIND(3D)	3x6
705	8109I30A04	SCREW,TAP TITE(B)	WH7	3x10
706	8110226804	SCREW,TAP TITE(P)	BIND	2.6x8
707	8107230404	SCREW,TAP TITE(S)	BIND	3x4
708	8109I30804	SCREW,TAP TITE(B)	WH7	3x8
---	791WHA0100	GIFT,SHEET		
---	792WHA0358	PACKAGE,BACK		
---	792WHA0359	PACKAGE,FRONT		
---	793WCDB294	GIFT BOX		
---	795WCA0662	PAD,DVD/VR 155x250		
---	JB5U0200	POLYBAG,INSTRUCTION		
---	J2A77001	INSTRUCTION BOOK		
---	J3J81702	WARRANTY SHEET		
---	A2A770D975	INSTRUCTION BOOK KIT		

# CHASSIS REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	A2A301A420A	DECK ASSY	501	8107226804	SCREW,TAP TITE(S) BIND
		A2A301A420A	502	8107226504	SCREW,TAP TITE(S) BIND
301	850A400234	PINCH ROLLER BLOCK	503	8107226404	SCREW,TAP TITE(S) BIND
302	850A500026	AHC ASS'Y	504	8102120604	SCREW,PAN
303	85OP200290	BELT,CAPSTAN (S)	505	8109126604	SCREW,TAP TITE(B) PAN
304	85OP600581	WORM	506	810A130404	SCREW/WASHER(A)
305	85OP500083	BASE,AC HEAD	507	810A126504	SCREW/WASHER(A)
306	85OP800324	SPRING,AC HEAD	508	82Q264713N	POLYSLIDER WASHER
307	850A000459	MAIN CHASSIS ASS'Y	509	82P184505N	POLYSLIDER WASHER(CUT)
308	850A200089	CLUTCH ASS'Y	510	83ETW30000	E-RING
309	850A200090	ARM IDLER ASS'Y			3.0
310	850A300065	LOADING ARM S UNIT	CD1501	122H071603	CORD JUMPER
311	850A300066	LOADING ARM T UNIT	CD1502	122Y021902	CORD JUMPER
312	850A400223	INCLINED BASE T UNIT 3S	H5001	1523D91034	HEAD (AUDIO CONTROL)
313	850A400232	P5 ARM ASS'Y 2	H5002	1543D02013	HEAD (FULL ERASE)
314	850A400235	TENSION ARM ASS'Y 2	△ M101	1596P98001	MOTOR (LOADING)
315	850A400231	INCLINED BASE S UNIT	△ M2001	1510S98036	CAPSTAN DD UNIT
316	85OP800358	SPRING,LOCKER	M2003	1589S11017	MICRO MOTOR
317	85OP900736	CASS,HOLDER	△ UN4001	A2A301A500	CYLINDER UNIT ASS'Y
318	85OP900748	CASS,SIDE L			A2A301A500
319	85OP900749	CASS,SIDE R			
320	85OP900739	LOCKER,R			
321	850A900228	LINK UNIT			
322	85OP000496	POST,CASS GUIDE			
323	85OP200316	REEL,S (S)			
324	85OP200317	REEL,T (S)			
325	85OP200308	GEAR,IDLER			
326	85OP200311	GEAR,CLUTCH			
327	85OP200312	GEAR,COUPLING			
328	85OP200313	LEVER,CLUTCH			
329	85OP300194	GEAR,MAIN LOADING			
330	85OP400490	LEVER,TENSION			
331	85OP400492	HOLDER,TENSION			
332	85OP400520	CAP,P4			
333	85OP400539	BAND,TENSION			
334	85OP400533	CONNECT,TENSION			
335	85OP600573	ARM,BRAKE T			
336	85OP600583	BAND,BRAKE T			
337	85OP600577	CAM,PINCH ROLLER			
338	85OP600578	CAM,MAIN			
339	85OP600579	ROD,MAIN			
340	85OP600582	GEAR,JOINT			
341	85OP800322	SPRING,TENSION			
342	85OP800360	SPRING,BRAKE T			
343	85OP800355	SPRING,COUPLING			
344	85OP800356	SPRING,RING			
345	85OP900750	LEVER,LINK 2			
346	85OP900744	LEVER,FLAP			
347	85OP900745	CASS,OPENER			
348	85OP900746	BRACKET,TOP 3V			

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION		REF. NO.	PART NO.	DESCRIPTION	
RESISTORS				ICS			
△ R501	R0G3K2335K	RC	3.3M OHM 1/2W	IC2603	I05FR1323F	IC	OEC6067A
△ R502	R3X181R39J	R,METAL OXIDE	0.39 OHM 1W	IC3001	I54F50119B	IC	OEC0119B
△ R504	R3X181561J	R,METAL OXIDE	560 OHM 1W	IC3003	I9UF032310	IC	PST3231NR
△ R512	R3X181273J	R,METAL OXIDE	27K OHM 1W	IC3099	A2A770D015	IC	S-24C02BDP-1A
△ R516	R63581R22J	R,FUSE	0.22 OHM 1W	IC4001	ICQF067320	IC	ZR36732
△ R517	R002T2102J	RC	1K OHM 1/2W	IC4002	I5HF96A250	IC	S-816A25AMC-BAA-T2
R4009	R002T43R9J	RC	3.9 OHM 1/4W	IC4003	I59J0160FB	IC	MSM56V16160F-8
CAPACITORS				IC4004	I59J0160FB	IC	MSM56V16160F-8
△ C501	E02L03222M	CE	2200 UF 25V	IC4005	I59J0258B3	IC	MSM5416258B-30
△ C502	P2472B104M	CMP	0.1 UF 275V PHE840	IC4006	I5QJ0F8125	IC	MBM29F800BA-55PFTN-SFK-12
△ C505	E02LU2221M	CE	220 UF 16V	IC8001	I5CF040530	IC	CD4053BNR
△ C507	C0JTB05H3K	CC	0.0022UF 500V B	IC8003	I0QF045800	IC	NJM4580M
△ C510	E02LT3471M	CE	470 UF 25V	IC8004	I0QF045800	IC	NJM4580M
△ C511	E62NFC221M	CE	220 UF 200V	IC8005	I0QF02533V	IC	NJM2533(TE2)
C515	C0JFE0514M	CC	0.01 UF 500V E	IC8501	I55F0H08F0	IC	TC7SH08FU(TE85L)
△ C516	CB3930MQ3M	CC	0.0047UF 250V	IC8503	I1BF019590	IC	AD1959YRSRL
△ C518	E02LF1332M	CE	3300 UF 10V	IC8504	I0UFG540A0	IC	MM1540AFBE
△ C519	E02LT0222M	CE	2200 UF 6.3V	TRANSISTORS			
△ C522	E50HU5100M	CE	10 UF 50V	Q101	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
C525	C03L0R7U2K	CC	680 PF 2KV R	Q102	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
△ C529	E02LT0102M	CE	1000 UF 6.3V	Q103	TPAAC05002	COMPOUND TRANSISTOR	KRA103SRTK
△ C530	E02LU0221M	CE	220 UF 6.3V	Q104	TCAT032034	TRANSISTOR, SILICON	KTC3203_Y-AT
△ C1706	E02LU4220M	CE	22 UF 35V	Q105	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
DIODES				Q106	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
△ D502	D2WTRM11C0	DIODE SILICON	RM11C-EIC	Q107	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
△ D503	D2WTRM11C0	DIODE SILICON	RM11C-EIC	Q109	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S
△ D505	D2WTRM11C0	DIODE SILICON	RM11C-EIC	Q303	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
△ D506	D2WTRM11C0	DIODE SILICON	RM11C-EIC	△ Q501	TJXG5NC500	FET	STP5NC50FP
△ D507	D2WXB290S0	DIODE SILICON	SB290S	△ Q502	TC5T021204	TRANSISTOR,SILICON	2SC2120Y(TPE2)
D509	D2WXGP10J0	DIODE RECTIFIER	RGP10J-EIC	△ Q504	TB3T011310	TRANSISTOR SILICON	2SB1131(S,T)-AE
D510	D97U03001B	DIODE,ZENER	MTZJ30B T-77	△ Q505	TCAT03209Y	TRANSISTOR SILICON	KTC3209_Y-AT
△ D512	D2LKB340L0	DIODE SCHOTTKY	SB340L-6737	Q506	TNATA03002	COMPOUND TRANSISTOR	KRC101MAT
△ D515	D2LKB340L0	DIODE SCHOTTKY	SB340L-6737	Q561	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
D518	D1VT001330	DIODE,SILICON	1SS133T-77	Q652	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
△ D522	D28TELS6N6	DIODE RECTIFER	10ELS6N-TA1B2	Q653	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D523	D97U03301B	DIODE,ZENER	MTZJ33B T-77	Q654	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
D524	D1VT001330	DIODE,SILICON	1SS133T-77	Q655	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D525	D2WXN40050	DIODE SILICON	1N4005-EIC	Q656	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
△ D529	D2WXB290S0	DIODE SILICON	SB290S	Q657	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D530	D28TELS6N6	DIODE RECTIFER	10ELS6N-TA1B2	Q658	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D531	D97U01801B	DIODE,ZENER	MTZJ18B T-77	Q659	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
D651	0021E2Q140	LED	LTL-1CHEE-002A	Q660	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D656	D2WXN40050	DIODE SILICON	1N4005-EIC	Q661	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
D681	0021E2Q140	LED	LTL-1CHEE-002A	Q662	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D701	D1VT001330	DIODE,SILICON	1SS133T-77	Q663	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D1701	D97U01301B	DIODE,ZENER	MTZJ13B T-77	Q664	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D1702	D1VT001330	DIODE,SILICON	1SS133T-77	Q665	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
D1706	D97U01001B	DIODE,ZENER	MTZJ10B T-77	Q666	TPAAC05002	COMPOUND TRANSISTOR	KRA103SRTK
D1709	D2WXN40050	DIODE SILICON	1N4005-EIC	Q1003	TPYJB05001	COMPOUND TRANSISTOR	DTA114EKAT146
D2601	DD5R003680	DIODE SILICON	1SS368(TPH3)	Q1004	TPYJB05001	COMPOUND TRANSISTOR	DTA114EKAT146
D2602	DD5R003680	DIODE SILICON	1SS368(TPH3)	△ Q1701	TCAT032034	TRANSISTOR, SILICON	KTC3203_Y-AT
D3001	0010100320	INFRARED LED	LNA2702L010R	△ Q1702	TCAT03209Y	TRANSISTOR SILICON	KTC3209_Y-AT
D3007	D1VT001330	DIODE,SILICON	1SS133T-77	△ Q1703	TCAT03209Y	TRANSISTOR SILICON	KTC3209_Y-AT
D3009	D1VT001330	DIODE,SILICON	1SS133T-77	Q1704	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D4001	D2WXN40050	DIODE SILICON	1N4005-EIC	Q1705	TCAT032034	TRANSISTOR, SILICON	KTC3203_Y-AT
D8004	D1VT001330	DIODE,SILICON	1SS133T-77	△ Q1706	TB3T011310	TRANSISTOR SILICON	2SB1131(S,T)-AE
D8010	D1VT001330	DIODE,SILICON	1SS133T-77	Q1707	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S
D8016	D2WXN40050	DIODE SILICON	1N4005-EIC	Q1708	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S
D8501	DD5R002260	DIODE SILICON	1SS226(TE85L)	△ Q1713	TAAT012714	TRANSISTOR, SILICON	KTA1271_Y-AT
D8502	DD5R002260	DIODE SILICON	1SS226(TE85L)	Q1714	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
D8503	DD5R002260	DIODE SILICON	1SS226(TE85L)	Q2001	T85A03326B	TRANSISTOR SILICON	2SC3326_B(TE85L)
D8504	DD5R002260	DIODE SILICON	1SS226(TE85L)	Q2601	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
D8505	DD5R002260	DIODE SILICON	1SS226(TE85L)	Q2602	TS5M000037	COMPOUND TRANSISTOR	HN1C03F_B(TE85L)
ICS				Q2603	TS5M000036	COMPOUND TRANSISTOR	HN1B01F_Y(TE85L)
IC101	I03F3205M0	IC	LA71205M-MPB	Q2604	TS5M000036	COMPOUND TRANSISTOR	HN1B01F_Y(TE85L)
△ IC501	I1KJ9A4310	IC	KIA431	Q2605	T65A01213Y	TRANSISTOR SILICON	2SA1213_Y(TE12L,C)
△ IC502	I1KA97809A	IC	KIA7809API	Q3001	0002700690	PHOTO COUPLER	RPI-303
△ IC503	0002E00610	PHOTO COUPLER	LTV-817M-VB	Q3002	0002700690	PHOTO COUPLER	RPI-303
IC701	I01F63FBP0	IC	AN3663FBP	Q3004	0002700680	PHOTO COUPLER	RPI-352C40N
IC1001	I5K50251AF	IC	OEC6069A	Q3005	0002700680	PHOTO COUPLER	RPI-352C40N
IC1002	I5HJ001BF0	IC	S-24C01BFJ-TB	Q3006	0000100380	PHOTO TRANSISTOR	PNA2604M010R
IC1005	I55F07S08F	IC	TC7S08F-TE85L	Q3007	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
IC1006	I55F0W2410	IC	TC7W241FU-TE12L	Q3008	0000100380	PHOTO TRANSISTOR	PNA2604M010R
IC2001	I05F094A03	IC	OEC6068A	Q4001	T65A01213Y	TRANSISTOR SILICON	2SA1213_Y(TE12L,C)
IC2002	I59J0258B3	IC	MSM5416258B-30	Q8001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
IC2601	I55F07S04F	IC	TC7S04F(TE85L)	Q8002	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S
IC2602	I07FV58130	IC	BA5813FM	Q8003	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION		REF. NO.	PART NO.	DESCRIPTION	
TRANSISTORS				P.C.BOARD ASSEMBLIES			
Q8004	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	PCB130	A2A707C130	PCB ASS'Y	VMA249B
Q8005	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S	PCB240	A2A701A240	PCB ASS'Y	VPA152A
Q8006	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S	PCB270	A2A701A270	PCB ASS'Y	VEA970A
MISCELLANEOUS							
Q8008	TNAAC05002	COMPOUND TRANSISTOR	KRA103SRTK	B501	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
Q8011	TNAAD05001	COMPOUND TRANSISTOR	KRC104SRTK	B503	024HT03564	CORE,BEADS	W4BRH3.5X6X1
Q8012	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK	B8001	024HT03564	CORE,BEADS	W4BRH3.5X6X1
Q8013	TPAAC05001	COMPOUND TRANSISTOR	KRA101SRTK	B8501	024HC31022	CORE,BEADS	FCM2012H-102T04
Q8014	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S	B8502	024HC31022	CORE,BEADS	FCM2012H-102T04
Q8015	T8YJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S	B8503	024HC31022	CORE,BEADS	FCM2012H-102T04
Q8501	TAAC1504SY	TRANSISTOR SILICON	KTA1504S_Y_RTK	CD102	122F061501	CORD JUMPER	2F061501
Q8502	TAAC1504SY	TRANSISTOR SILICON	KTA1504S_Y_RTK	△ CD501	120R419905	CORD AC BUSH	0R419905
Q8503	TAAC1504SY	TRANSISTOR SILICON	KTA1504S_Y_RTK	CD502	122Y0E1701	CORD JUMPER	2Y0E1701
Q8505	TAAC1504SY	TRANSISTOR SILICON	KTA1504S_Y_RTK	CD651	122H052402	CORD JUMPER	2H052402
Q8508	TS5M000037	COMPOUND TRANSISTOR	HN1C03F_B(TE85L)	CP101	0697290620	CONNECTOR PCB SIDE	TOC-C09X-A1
Q8509	TCAA3875SY	TRANSISTOR SILICON	KTC3875S_Y_RTK	CP102	069J760029	CONNECTOR PCB SIDE	IMSA-9604S-06Z14
Q8510	TPAAB05001	COMPOUND TRANSISTOR	KRA102SRTK	CP103	0697120320	CONNECTOR PCB SIDE	TMC-T02X-E1
Q8511	TPAAB05001	COMPOUND TRANSISTOR	KRA102SRTK	CP502	067U014019	WIRE HOLDER	B2013H02-14P
Q8512	T85A03326B	TRANSISTOR SILICON	2SC3326_B(TE85L)	CP503	069S260629	CONNECTOR PCB SIDE	A2001WV2-6P
Q8513	T85A03326B	TRANSISTOR SILICON	2SC3326_B(TE85L)	CP651	069J750019	CONNECTOR PCB SIDE	IMSA-9604S-05Z13
COILS & TRANSFORMERS				CP681	069R750499	CONNECTOR PCB SIDE	52492-0520
L101	031626009R	COIL,BIAS OSC	1626009	CD2601	122H081006	CORD JUMPER	2H081006
L102	02167F101J	COIL	100 UH	CD2603	122H060806	CORD JUMPER	2H060806
L104	02167F220J	COIL	22 UH	CD6002	06CQL02006	CABLE	SI-C108-40
L105	02167F220J	COIL	22 UH	CD6003	06CQBA2001	CORD,RCA PIN	SI-B-701-2
L106	02167F220J	COIL	22 UH	CD8002	122H011801	CORD JUMPER	2H011801
L107	02167F220J	COIL	22 UH	CD8501	06CU2D3001	CORD CONNECTOR	CU2D3001
L301	021673101K	COIL	100 UH	CD8502	06CU262501	CORD CONNECTOR	CU262501
L302	02167F220J	COIL	22 UH	CP1701	069R2E0589	CONNECTOR PCB SIDE	52147-1410
△ L501	029T0000A1	COIL,LINE FILTER	0R7A223F24	CP2601	069EV8T020	CONNECTOR PCB SIDE	04_6232_108_015
L502	02AHB0A04A	CORE,FERRITE	W5T_20*10*10A	CP2602	069EVNT020	CONNECTOR PCB SIDE	04_6232_123_015
△ L503	02167E220K	COIL	R9 22 UH	CP2603	069J760029	CONNECTOR PCB SIDE	IMSA-9604S-06Z14
L505	02167F220J	COIL	22 UH	CP3001	06972C0010	CONNECTOR PCB SIDE	TMC-J12P-B2
L506	02167E220K	COIL	R9 22 UH	CP8001	069S2D0629	CONNECTOR PCB SIDE	A2001WV2-13P
△ L507	02167E220K	COIL	R9 22 UH	CP8002	069J7I0019	CONNECTOR PCB SIDE	IMSA-9604S-18Z13
L701	02167F220J	COIL	22 UH	CP8502	069J7I0019	CONNECTOR PCB SIDE	IMSA-9604S-18Z13
L702	02167F220J	COIL	22 UH	CUS131	800WFAA006	CUSHION A	
L703	0216A6101K	COIL	100 UH	CUS811	800WFAA006	CUSHION A	
L704	02167F220J	COIL	22 UH	△ DK4001	169J00010A	DECK CD	TU2020R
L3003	021LA6120K	COIL	12 UH		169J00017A	DECK CD	TU2120R
L4001	0216S3150K	COIL	15 UH	△ F501	081PC04004	FUSE	51MS040LCC
L8001	021LA6R27M	COIL	0.27 UH	FH501	06710T0006	HOLDER,FUSE	EYF-52BC
L8002	0216A6101K	COIL	100 UH	FH502	06710T0006	HOLDER,FUSE	EYF-52BC
L8003	021LA6R27M	COIL	0.27 UH	NR1001	110N4101M3	R,NETWORK	CAY16-101-J-4R
L8004	021LA6470K	COIL	47 UH	NR1002	110N4101M3	R,NETWORK	CAY16-101-J-4R
L8006	021LA6101K	COIL	100 UH	NR1003	110N4101M3	R,NETWORK	CAY16-101-J-4R
L8007	0216A6101K	COIL	100 UH	NR1004	110N4101M3	R,NETWORK	CAY16-101-J-4R
L8009	021LA61R5J	COIL	1.5 UH	NR1005	110N4101M3	R,NETWORK	CAY16-101-J-4R
L8501	0216S3150K	COIL	15 UH	NR1006	110N4101M3	R,NETWORK	CAY16-101-J-4R
L8507	02AHB9A972	CORE,FERRITE	W5T29X7.5X19	NR1007	110N4101M3	R,NETWORK	CAY16-101-J-4R
△ T501	0481290814	TRANSFORMER,SWITCHING	81290814	NR1008	110N4101M3	R,NETWORK	CAY16-101-J-4R
JACKS				NR1009	110N4101M3	R,NETWORK	CAY16-101-J-4R
J8001	060J411018	RCA JACK	MSP-213V1-432 PBSN	NR1010	110N4101M3	R,NETWORK	CAY16-101-J-4R
J8003	060J401079	RCA JACK	MSP-281V4-B	NR1011	110N4101M3	R,NETWORK	CAY16-101-J-4R
J8004	060J401080	RCA JACK	MSP-281V1-B	OS651	077Q037001	REMOTE RECEIVER	PIC-37043LO
J8005	060J421023	RCA JACK	MSP-281V3-A	OS8001	07A9000004	OPTICAL DEVICE	GP1FA550TZ
J8006	063D700005	JACK	MDC-070V	TM601	076R0ET020	TRANSMITTER	R25-1782
J8007	060J401082	RCA JACK	MSP-251V-05PBSN		07660ET020	TRANSMITTER	SBKM00031A
J8008	060J411024	RCA JACK	MSP-213V1-652 PBSN		0162K00027	RF UNIT	TCMN0682PA13D(4)
J8009	060J411020	RCA JACK	MSP-242V2-01PBSN	△ TU301	0404F94003	LED DISPLAY	ELF-4M6SDRVGWB
SWITCHES				V651	X101	CRYSTAL	HC-49/U
SW301	0510S21041	SWITCH SLIDE	SLD-12-592	X1001	100CT3R508	CRYSTAL	HC-49/U-S
SW651	0504201T31	SWITCH,TACT	SKHVBED010	X3001	100CT00901	CERAMIC OSCILLATOR	CSTCC9M00G53-R0
SW652	0504201T31	SWITCH,TACT	SKHVBED010	X3002	100CT01002	CRYSTAL	HC-49/U-S
SW653	0504201T31	SWITCH,TACT	SKHVBED010	X3003	100DA32R01	CRYSTAL	DT-26
SW654	0504201T31	SWITCH,TACT	SKHVBED010	X8501	100CT01403	CRYSTAL	HC-49/U-S
SW655	0504201T31	SWITCH,TACT	SKHVBED010		100WT02706	CRYSTAL	HC-49/U-S
SW681	0504201T32	SWITCH,TACT	SKQNAED010				
SW682	0504201T32	SWITCH,TACT	SKQNAED010				
SW684	0504201T32	SWITCH,TACT	SKQNAED010				
SW686	0504201T32	SWITCH,TACT	SKQNAED010				
SW688	0504201T32	SWITCH,TACT	SKQNAED010				
SW689	0504201T32	SWITCH,TACT	SKQNAED010				
SW3001	0508S11001	SWITCH (LEAF)	LSA-1144EAU				
	0508A11001	SWITCH(LEAF)	MXS01350MVP0				
P.C.BOARD ASSEMBLIES							
PCB010	A2A795C010	PCB ASS'Y	VMA251A				

## ELECTRICAL REPLACEMENT PARTS LIST

### RESISTOR

RC..... CARBON RESISTOR

### CAPACITORS

CC..... CERAMIC CAPACITOR

CE..... ALUMI ELECTROLYTIC CAPACITOR

CP..... POLYESTER CAPACITOR

CPP..... POLYPROPYLENE CAPACITOR

CPL..... PLASTIC CAPACITOR

CMP..... METAL POLYESTER CAPACITOR

CMPL..... METAL PLASTIC CAPACITOR

CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M2A7-95C
O/R NO.	W242013