

**HILBERINK**  
**Electronics-Acoustics**  
 P.O. Box 4217  
 6202 WB MAASTRICHT  
 The Netherlands

# AUDIO SONIC

**MODEL NF-718**  
 7-WATT ALL TRANSISTOR  
 STEREOPHONIC AMPLIFIER





## TECHNICAL SPECIFICATIONS

- Output Power: 3.5 watts per channel
- Output Impedance: 8 - 16 ohms
- Input Level: -15 db (1 kc)
- Input Impedance: 10,000 ohms
- Harmonic Distortion: less than 3% at 3 watts per channel
- Hum & Noise Level: better than -40 db
- Frequency Response: 50 - 15,000 c/s  $\pm 3$  db
- Mode Switch Function: STEREO-REVERSE-MONAUROURAL
- Power Supply: 220V AC 50/60 c/s
- Transistor: 8-transistor
- Dimension: 8 $\frac{1}{2}$ " width, 3" height, 5 $\frac{5}{16}$ " depth

SOLID STATE CIRCUITRY, CONSISTING OF 8 TRANSISTORS.

CUSTOM MADE OILED-WALNUT CABINET ENHANCED WITH SOLID ALUMINUM KNOBS AND BRUSHED ALUMINUM CONTROL PANEL.

MANUFACTURED UNDER MOST ADVANCED ENGINEERING WITH MOST WANTED FEATURES FOR HI-FI LISTENING PLEASURE.

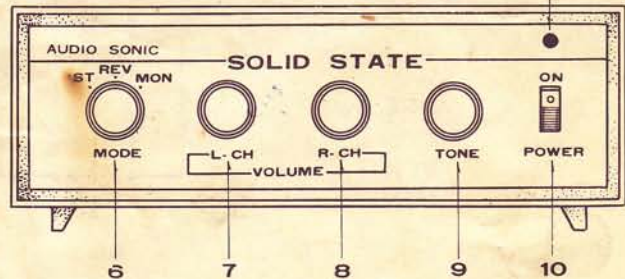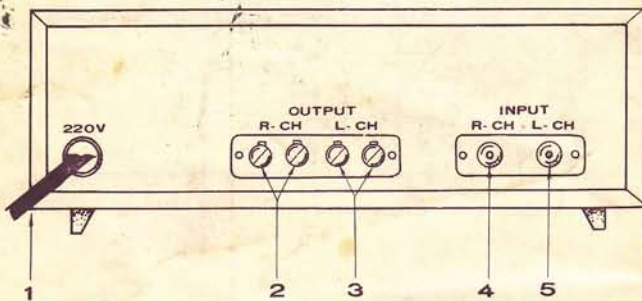

1	AC line cord	6	Mode switch
2	Right channel output	7	Left channel volume control
3	Left channel output	8	Right channel volume control
4	Right channel input	9	Tone control
5	Left channel input	10	Power switch
		11	Pilot lamp

# INSTALLATION

1. Connect your speakers to the output terminal strips on the back respectively.


CAUTION: Make sure that the wires are tightly connected and not short-circuited.

2. Connect your phono turntable to the input jacks located on the back.  
The NF-718 is designed to operate with crystal phono cartridge.

3. Make sure of the both volume control at minimum position (turned counterclockwise) and power switch is off position, prior to plugging the AC cord into wall outlet.

CAUTION: Do not apply power to the unit until all speaker connections have been well made. When applying power, be sure that the volume control is set on minimum.

# SCHEMATIC DIAGRAM

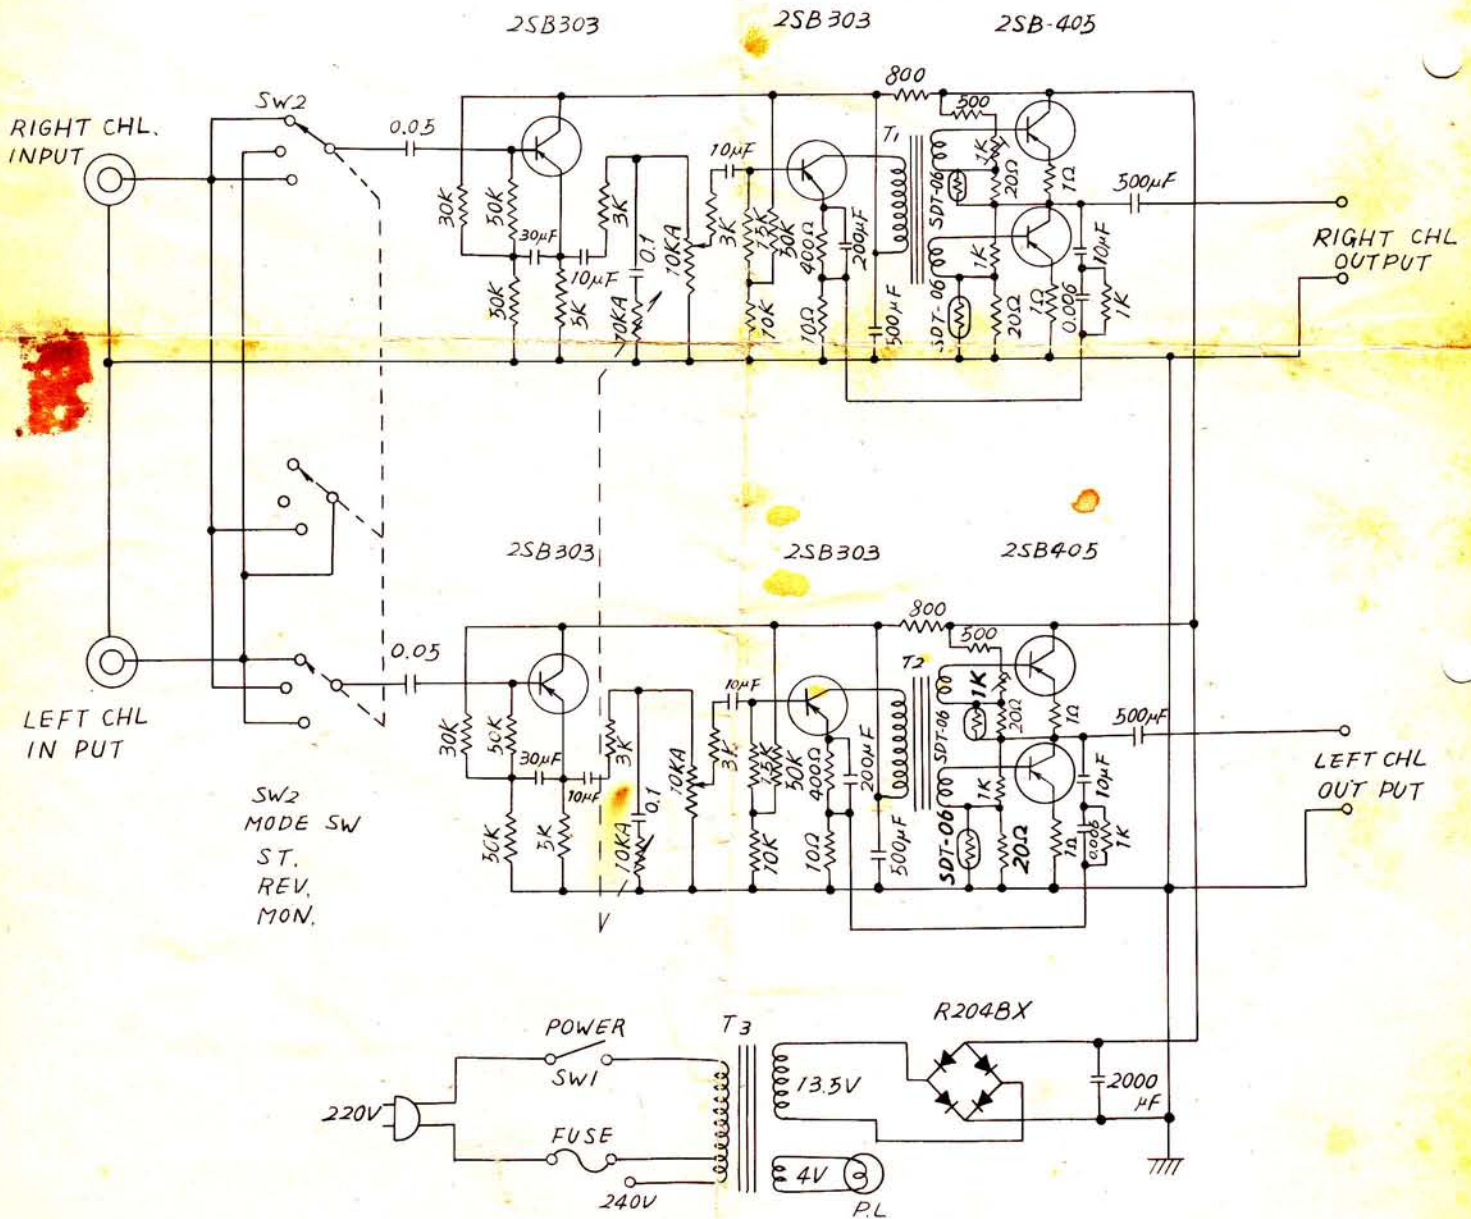

AUDIO SONIC  
NF-718