
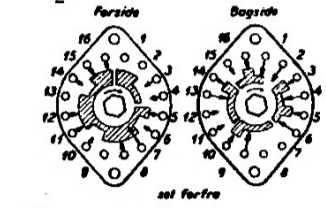


Magnavox Air Prince 47U

NF - 444 kHz

Jævnspændinger maalt
i Forhold til Chassis
Følsomheder maalt for
50 mW output

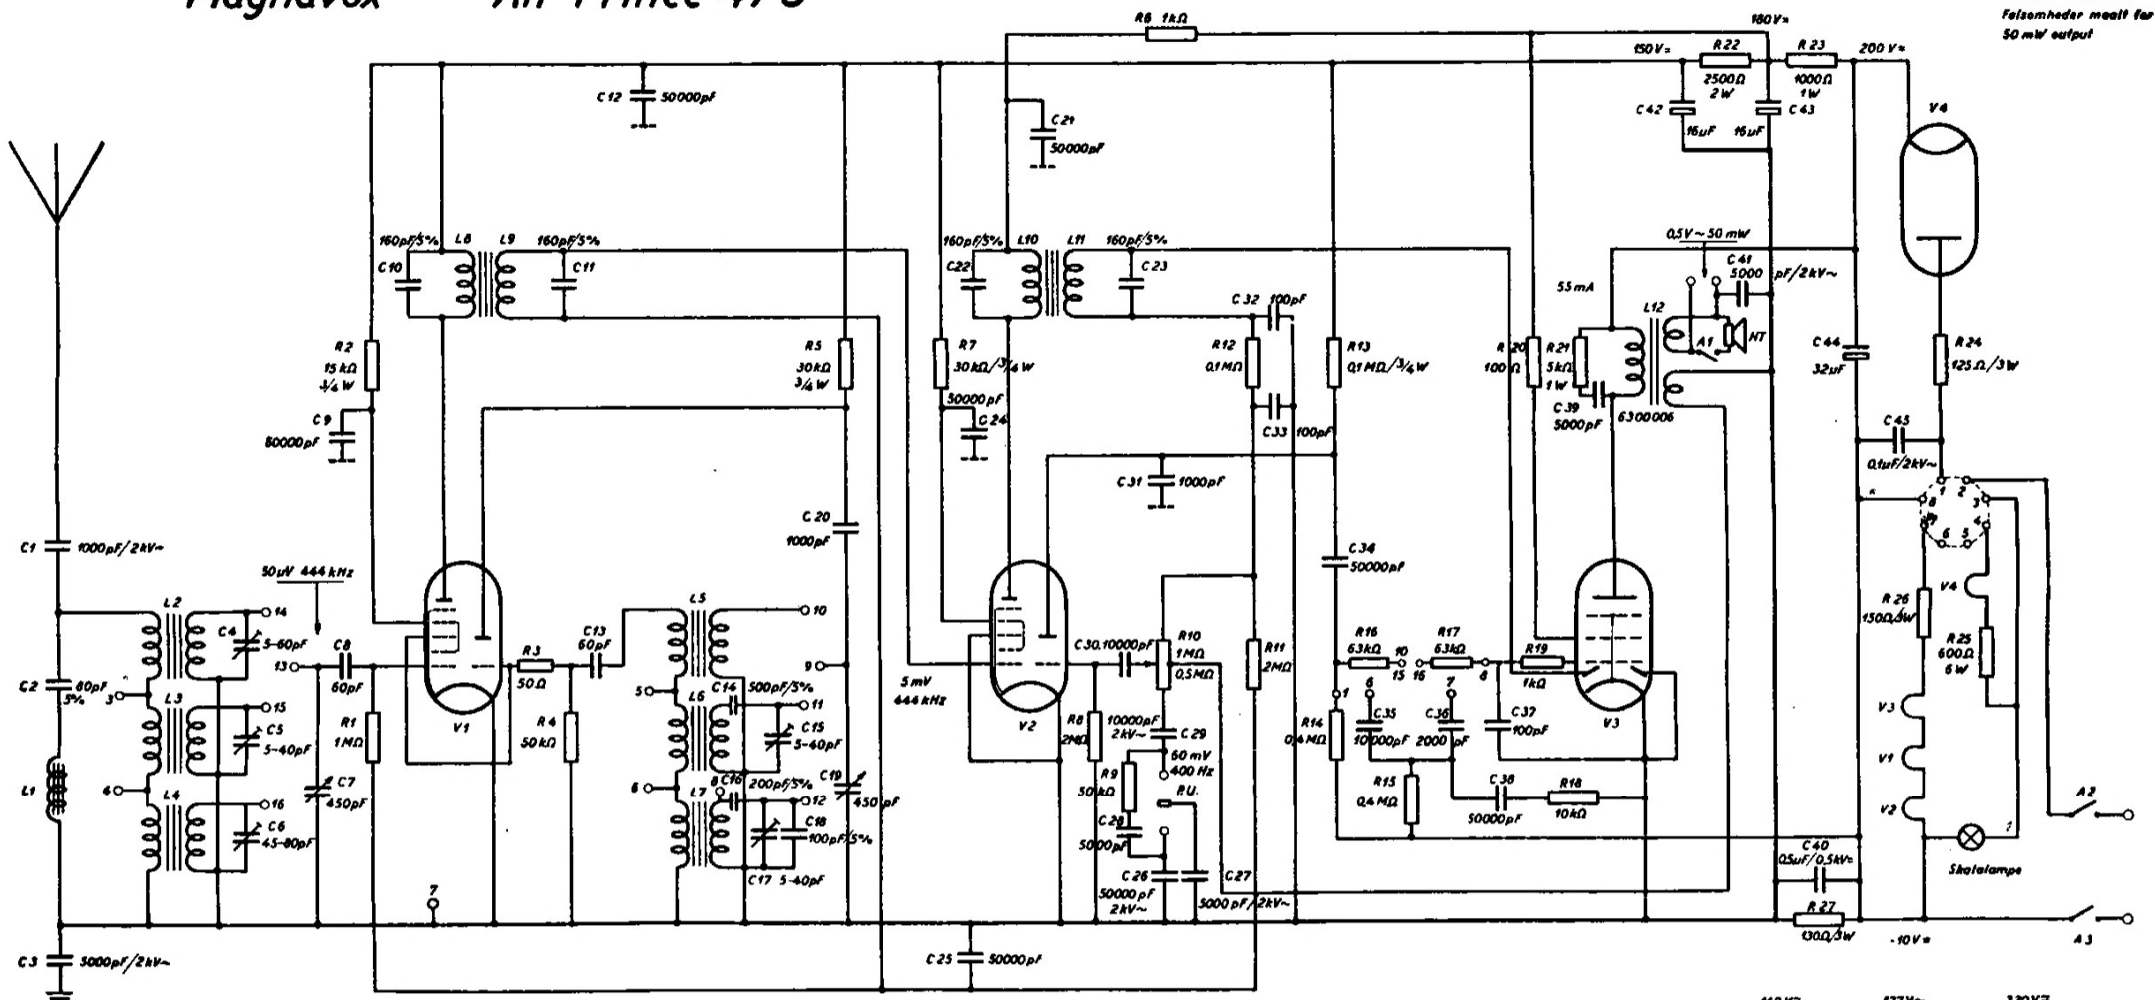


Balgetændeomskifter

Område	Forbindelse
KB	3-4-5-6-7-8-11-12-15-16, 9-10, 13-14.
MB	4-6-7-8-10-12-14-16, 9-11, 13-15.
LB	7-10-11-14-15, 3-4, 5-6, 9-12, 13-16.

Tæneomskifter

Stilling Nr	Forbindelse
I	6-7-8, 15-16
II	6-7-8, 16-1
III	6-7-8-10, 16-1
IV	7-8, 15-16
V	7-8-10,
VI	7-8-10, 16-1
VII	8-10,

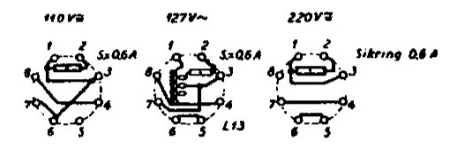

A/S ELTRA