



TRANSISTOR CONNECTION (BOTTOM VIEW)

H001-008
 H401-404
 H409-412
 H501-506
 H501-504
 H601-610
 H802-805

E: EMITTER C: COLLECTOR B: BASE

H801 HT403314 A 2S0331C.D.E.F
 H802-805 HT309452 A 2SC945 Qor R
 H804,807,809,810 HD2000413 S18-01-02
 H808 HD3002309 WZ071
 H811 HV0000110 RV

TUNER TAPE 2 DISCRETE
 PHONO AUX MONO MARI-MATRIX
 SELECTOR POSITION MODE POSITION
 REMOTE LOCAL
 REMOTE CONTROL POSITION

ALL SWITCHES VIEWED FROM FRONT AND SHOWN IN EXTREME CLOCKWISE POSITION 5001 PHONO, 5002 MONO, AND 5003 REMOTE