


Service Manual

CD4000/N4G, /K4G

CD4000

CD Player

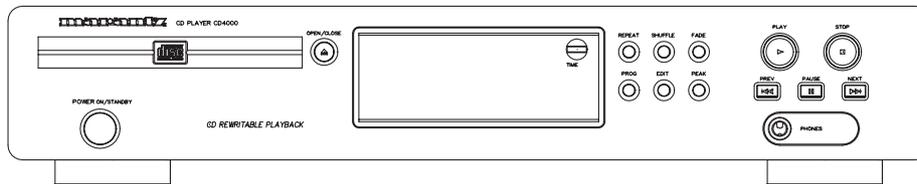

REMARK : This service manual explains the differences between the CD4000/N1B, N2B,K1B,K2B and the CD4000/N4G,K4G.

All other information is described in the service manual of the model CD4000 (code number: 3120 785 00040). The dispatch of the parts for after sales service has to be referred to these service manuals, with the first priority.

For this reason, please use this service manual with referring to the model CD4000 service manual without fail.

The change parts are the following. Other parts are the same.

POS.NO	VERS. COLOR	DESCRIPTION	PART NO.(PCS)
0101	/N4G,/K4G	CABINET FRONT	3139 118 16650
0102	/N4G,/K4G	BUTTON SET,PLAY STOP	3139 118 10170
0103	/N4G,/K4G	COVER DOOR,CD	3139 118 10180
0105	/N4G,/K4G	BUTTON,POWER	3139 118 10190
0106	/N4G,/K4G	BUTTON,OPEN/CLOSE	3139 118 10200
0110	/N4G,/K4G	BADGE, MARANTZ	nsp
0111	/N4G,/K4G	BUTTON,SET PROGRAM	3139 118 10220
0112	/N4G,/K4G	BADGE,COMPACT DISC	3139 118 10390
0126	/N4G,/K4G	TOP/REAR COVER	nsp
0129	/N4G,/K4G	PLATE (EARTH CONTACT)	nsp
0283	/N4G,/K4G	SCREW(TOP,SIDE)	nsp

Please use this service manual with referring to the user guide (D.F.U) without fail.

marantz®

CD4000

272W855030 AO
3120 785 22840
First Issue:2002.02