

Service Manual

DV3100F/N1B/T1B

DVD Player



REMARK : This service manual explains the electrical differences between the DV3100/N2B/T2B (**DV3100**) and the DV3100F/N1B/T1B (**DV3100 OSE**). All other information is described in the service manual of the model DV3100/N2B/T2B (Code number : **3120 785 22630**) and DV3100/N1B/T1B (Code number : **3120 785 22450**). The dispatch of the parts for after sales service has to be referred to these service manuals, with the first priority. For this reason, please use these service manuals with referring to the models DV3100/N2B/T2B and DV3100/N1B/T1B service manual without fail.

The DV3100 OSE is equal to the DV3100/N2B/T2B except the following electrical changes (mechanical changes are not listed):

Position No.	Service code	Description
IC402	4822 209 91175	NJM2114

marantz®

DV3100 OSE