



Service Bulletin

No. : MZ02-023

Date: December 4, 2006

Model: SR4200

Subject: Pop noise from speaker

Symptom: 1.) Pop noise appears from speaker between tracks (blank part between track) of CD playback. 2.) Clicking noise appears from surround speaker during DTS playback with DVD player.

Solution: Replace the MPU (IC71).

Parts:

Ref#	Description	Part Number
IC71	MPU	*HC108300R

Serial Number Range:

This solution has already been applied in the production after the serial number as below and later.

SR4200/U1B: MZ0102xx007051 and after.

CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility is will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.