



Service Bulletin

No.: MZ09-127

Date: November 30, 2009

Model: UD8004

Subject: Software update

Countermeasure is applicable only upon claim from the customer.

Symptom: 1) Unit does not turn on when push the POWER button twice after set the setting of "Power save mode" to "quick mode".

- 2) The unit can not connect to Ethernet with proxy condition.
- 3) When play a disk (BD-R/RE) which is recorded by SHARP BD recorder BD-HDW20, only "katakana (ex. アイウ...)" of a title recorded in BD-R/RE is not displayed.
- 4) After completed "firmware update", following symptom occurs.
- a. The following sentences appear and the network cannot be connected.
- "Network problem. Make sure that the connection and network setting are correct".
- b. The tray cannot be opened. While pressing open button, the window displays "open/close/loading" very quickly.
- 5) The version of SACD FPGA is not indicated, and unit might be not updating the firmware correctly.
- 6) The LPCM 192kHz or DolbyTrue HD 192kHz of Blu-ray Disc are reproduced when unit is connected to TV with HDMI connection. The output audio signal is changed to noise.
- 7) The synchronization of the image of the wallpaper is disturbed when pushing the SOURCE button without SD card.

Solution: The firmware has been updated.

CONFIDENTIALITY NOTICE:

Updating the firmware.

Please do not use a Proxy for updating in the Network environment! If customer uses the Proxy setting, the unit won't update the firmware properly *For update procedures, please see manual.

*Please do not turn off the Power of the unit during the update operation.

Confirmation of the version:

- 1) Press the "OPEN/CLOSE" button and open the Disc Tray.
- 2) Remove the Disc from the Tray.
- 3) Please confirm! "NO DISC" on the FL Display.
- 4) While pushing the "PLAY" and "OPEN/CLOSE" button, turn on the power of unit.
- 5) Plug in AC CORD.
- 6) The indication of "PLAY" and "PAUSE" will be displayed on FL Display.
- 7) Please confirm! "NO DISC" on the FL Display, and wait 10 seconds.
- 8) Press the buttons on the remote control in the order of "3", "2", "6" and "5".
- 9) The version of the firmware will be indicated on the FL Display.
- 10) The firmware list will also be shown on connected TV (GUI).
- 11) Push the "**UP**" button of cursor button, version of the each firmware will be indicated on the FL Display.

| | Name | Version |
|---|------|---------------------------|
| 1 | Sys | Ver000102 |
| 2 | B/E | Ver000102 |
| 3 | F/E | Ver000203 |
| 4 | SA | Ver000100 or Ver000200 |

| | Name | Version |
|---|------|----------------------|
| 5 | DSP | Ver000100 |
| 6 | AS | Ver000900 |
| 7 | NC | Ver I200908260916 |

Serial Number Range:

We will apply the above modification to production models with the following serial numbers.

*******000481 ~