



SERVICE MANUAL

MAR 15 1989

3220PE
3020e

INTEGRATED AMPLIFIERS

ALIGNMENT METHOD

AUDIO SECTION 3220PE/3020e

IMPORTANT

Speaker impedance switch should be in 8 ohm position while adjust center voltage and idling current.

INITIAL ADJUSTMENT (No load connected)

A. CENTER VOLTAGE

1. Connector DC millivoltmeter to L channel output terminal.
2. Turn on and adjust to 0 V+/-30mV with R411(100 ohm). Connect DC millivoltmeter to R channel output terminal and adjust R412 to 0 V+/-30mV.

B. IDLING CURRENT

1. Remove solder short across R455 and R456.
2. Connect DC millivoltmeter across R455 (1 ohm) (output transistor's collector resistor) and adjust R443 for 26-30mV reading on meter. Repeat adjustment with R444, connecting meter across R456 (1 ohm).
3. Leave power on for minimum 5 minutes.


FINAL ADJUSTMENT

C. CENTER VOLTAGE


1. Repeat step A about.

D. IDLING CURRENT


1. Repeat step B and adjust with R443, R444 for 30mV reading on meter.
2. After the alignment is finished, 1 ohm resistor R455, R456 is shorted by solder short.

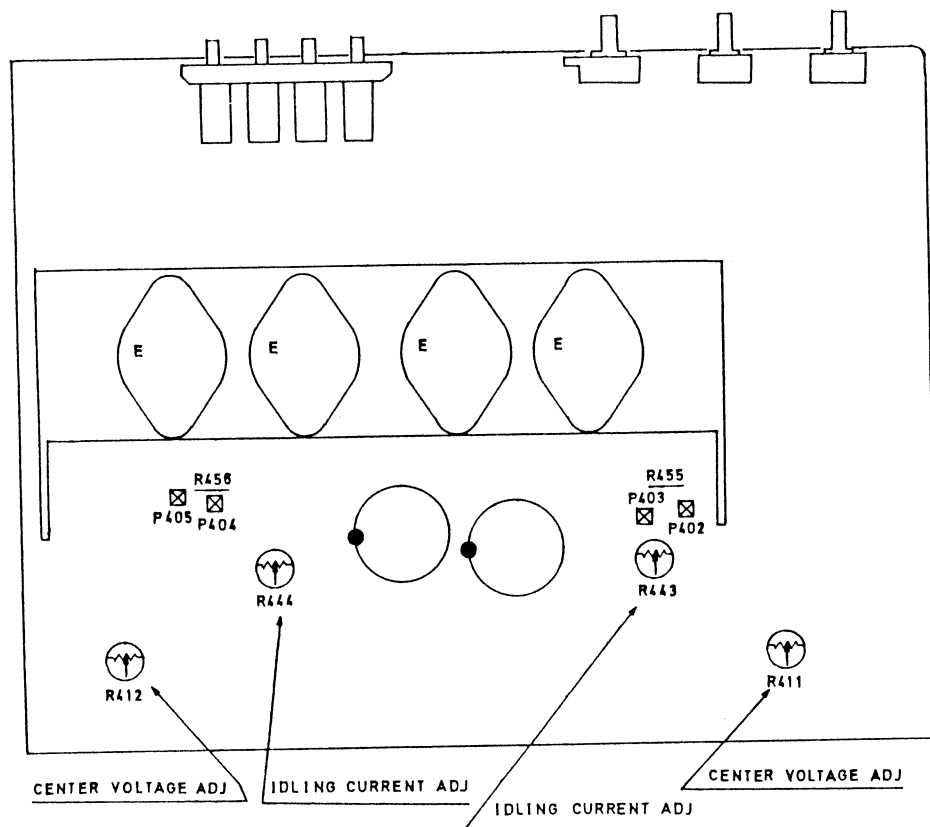

SCHEMATIC DIAGRAM NAD3020e AMPLIFIER

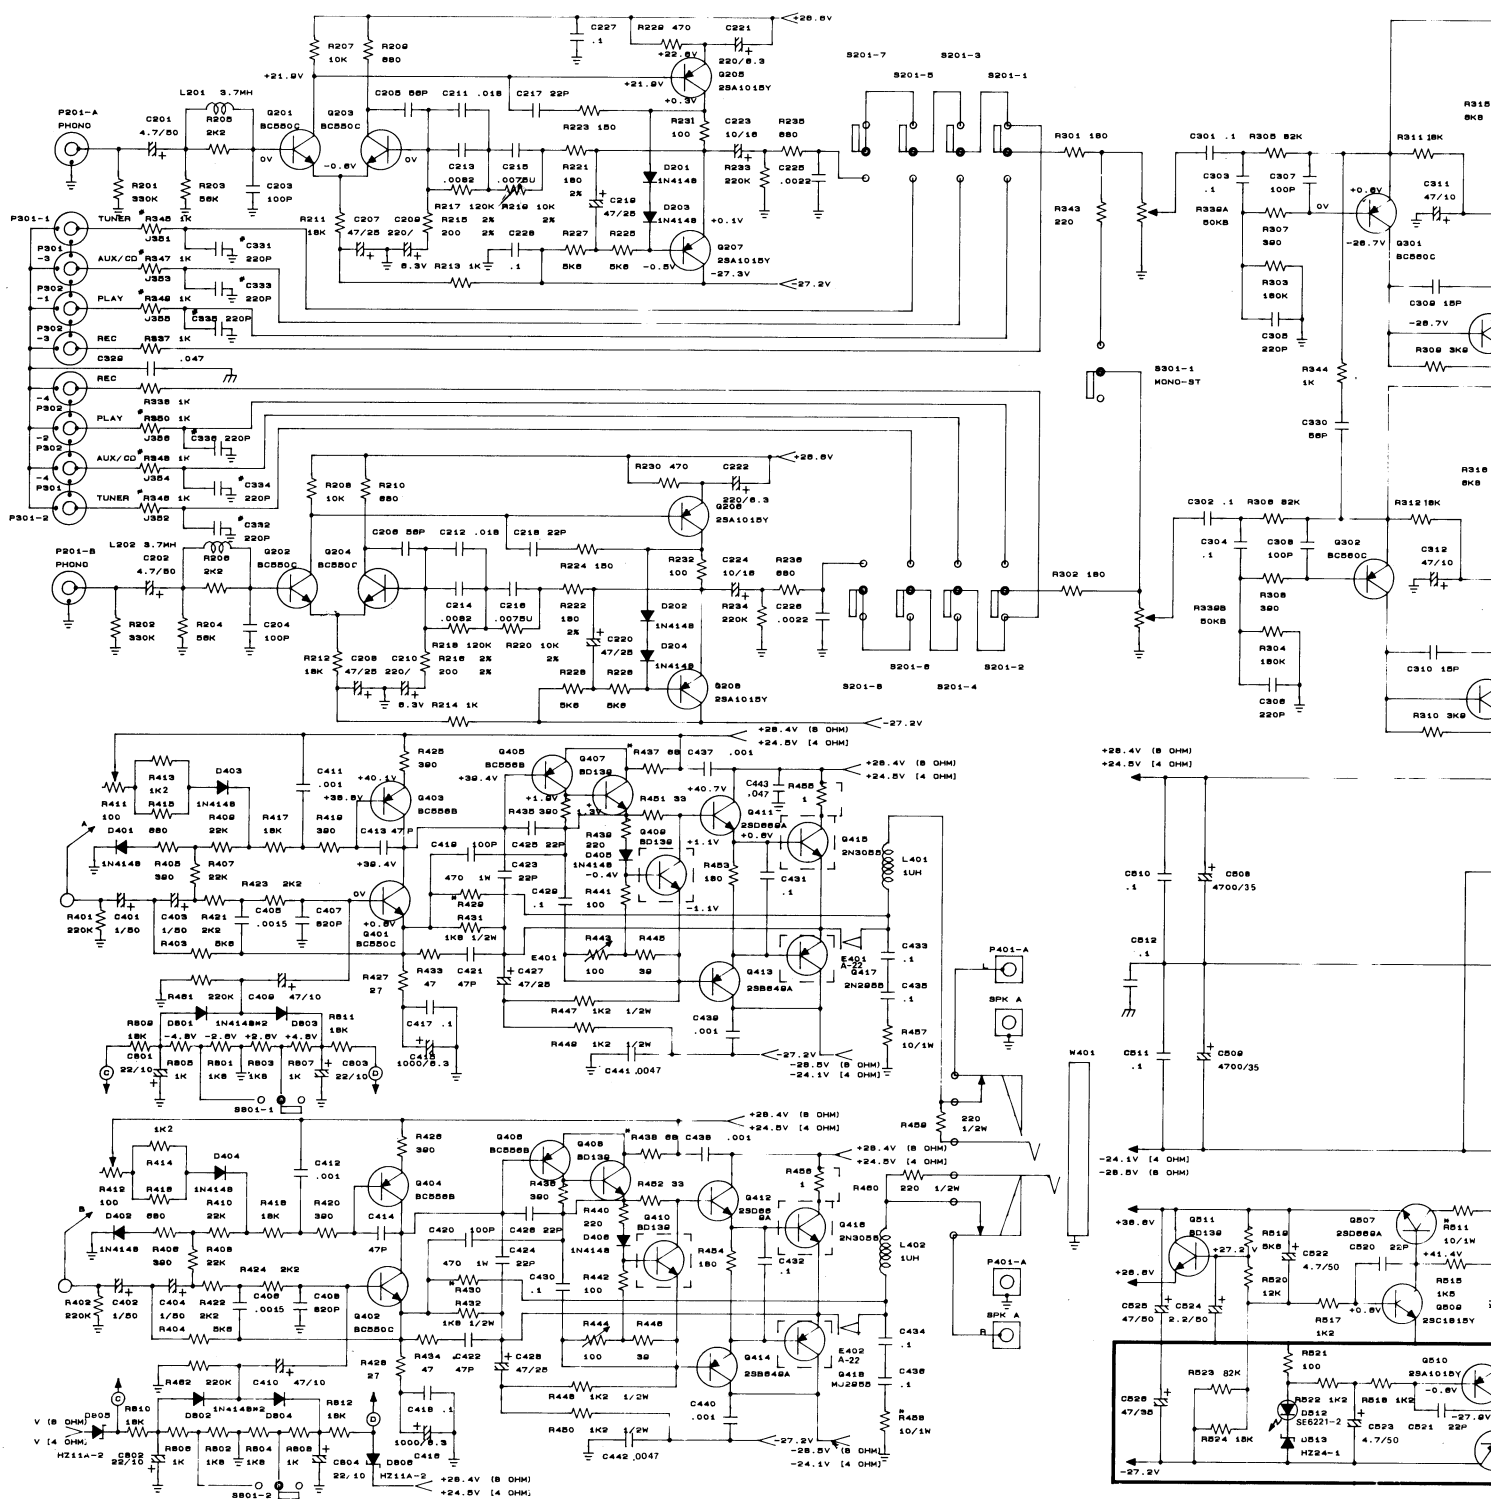

PLIFIER

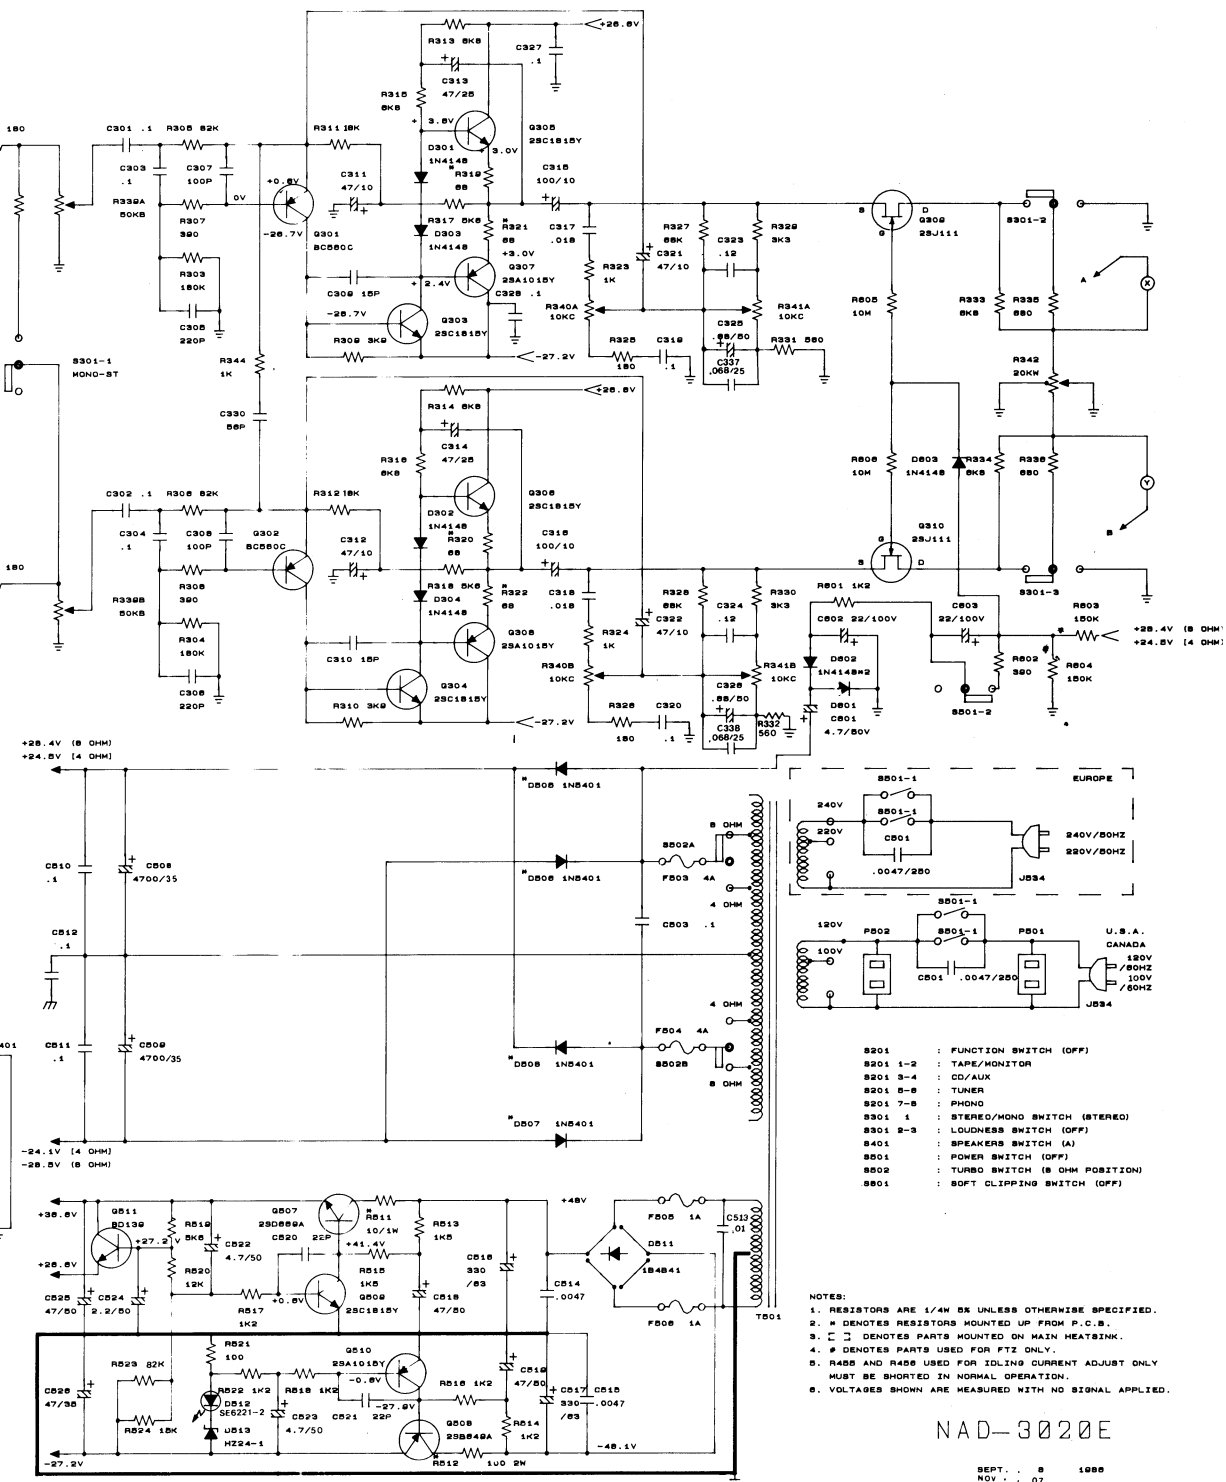

2N3055
MJ2955

BD139
2SB669
2SD649

	
2SJ111	BC550C BC556B BC560C



2SA950
2SA1015
2SC1815
2SC2120

```

$201      : FUNCTION SWITCH (OFF)
$201 1-2  : TAPE/MONITOR
$201 3-4  : CD/AUX
$201 5-6  : TUNER
$201 7-8  : PHONO
$301 1     : STEREO/MONO SWITCH (STEREO)
$301 2-3  : LOUDNESS SWITCH (OFF)
$401      : SPEAKERS SWITCH (A)
$501      : POWER SWITCH (OFF)
$502      : TURBO SWITCH (8 OHM POSITION)
$801      : SOFT CLIPPING SWITCH (OFF)

```


NOTES:

1. RESISTORS ARE 1/4W 5% UNLESS OTHERWISE SPECIFIED.
2. * DENOTES RESISTORS MOUNTED UP FROM P.C.B.
3. □ DENOTES PARTS MOUNTED ON MAIN HEATSINK.
4. # DENOTES PARTS USED FOR FTZ ONLY.
5. R455 AND R456 USED FOR IDLING CURRENT ADJUST ONLY MUST BE SHORTED IN NORMAL OPERATION.
6. VOLTAGES SHOWN ARE MEASURED WITH NO SIGNAL APPLIED



NAD-3020E

SEPT. , 8 1986
NOV : : 07

SCHEMATIC DIAGRAM NAD3220PE AMPLIFIER

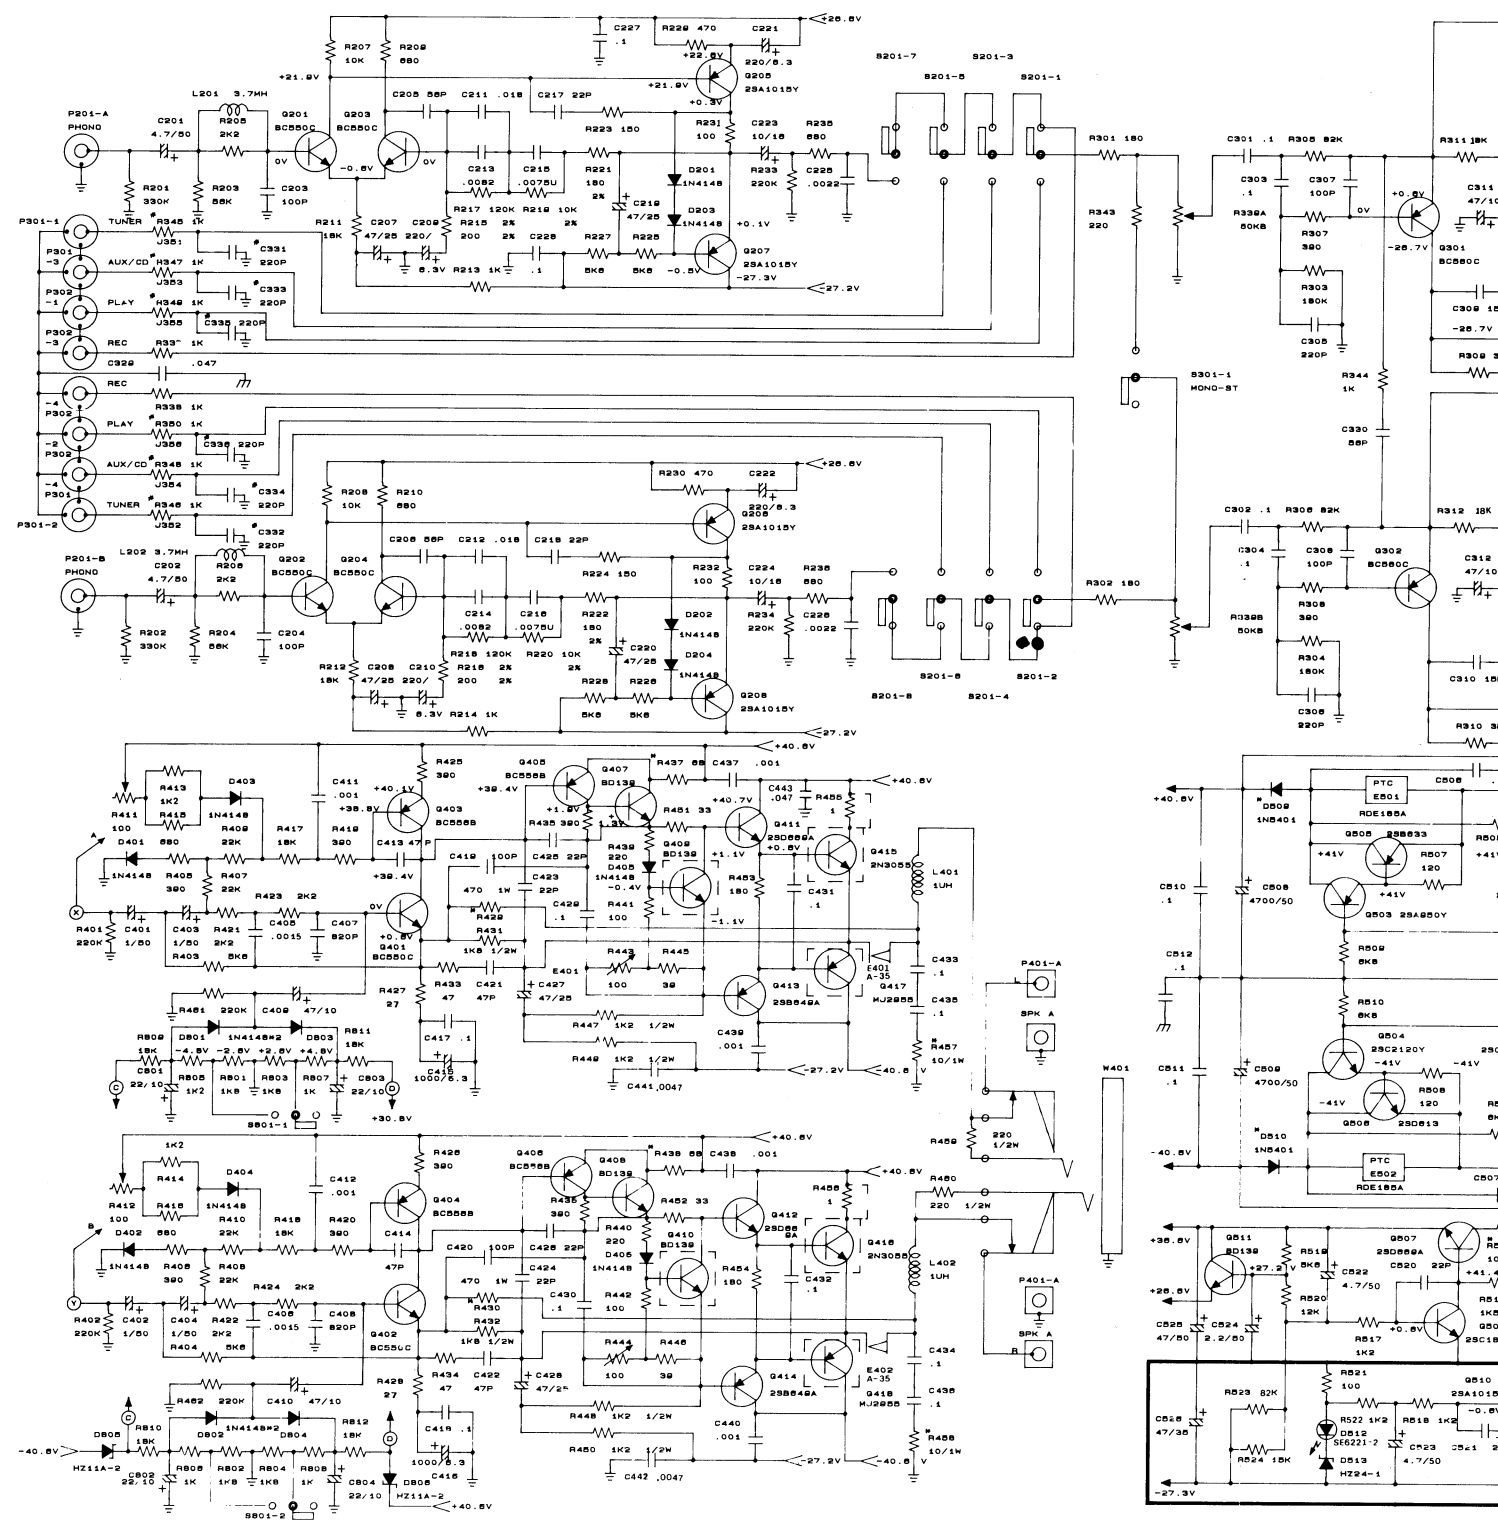

AMPLIFIER

 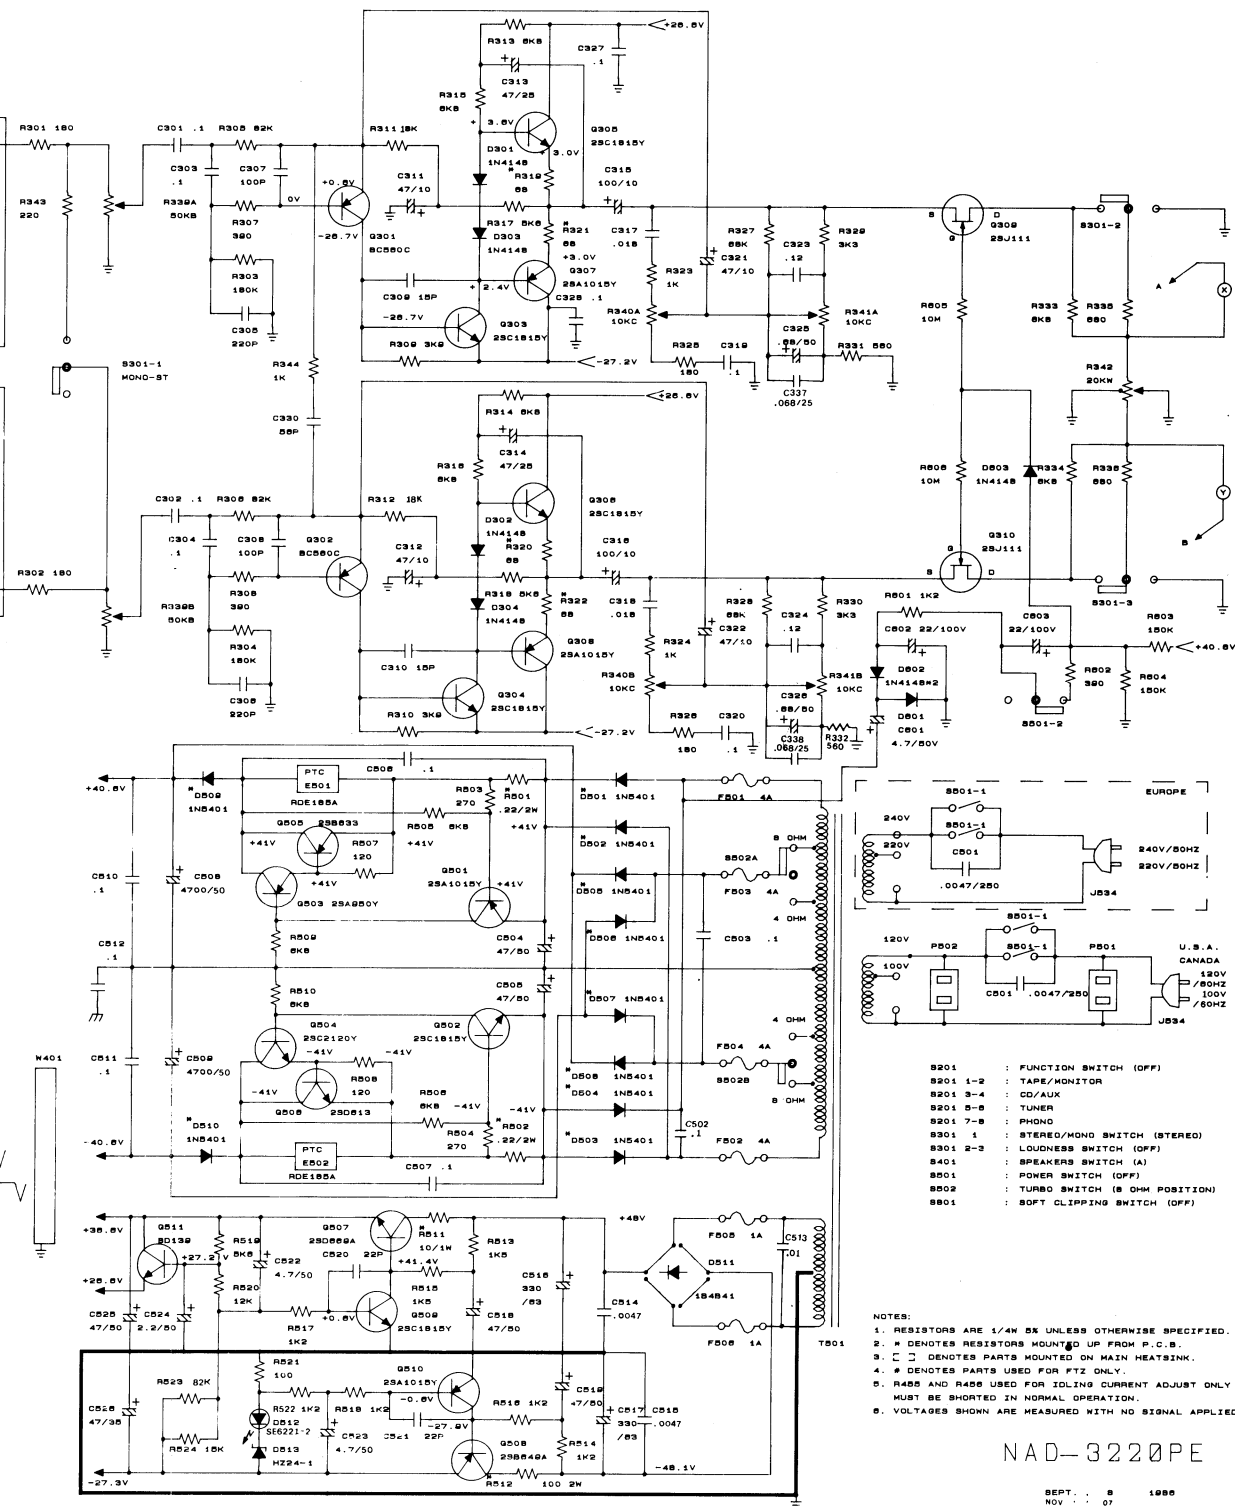

2N3055
MJ2955



2SD669
2SD649
2SA496
BD139




2SJ111



BC550C
BC556B
BC560C



 2SA950
2SA1015
2SC1815
2SC1210



2SD633
2SD613

- S201 : FUNCTION SWITCH (OFF)
- S201 1-2 : TAPE/MONITOR
- S201 3-4 : CD/AUX
- S201 5-6 : TUNER
- S201 7-8 : PHONO
- S201 1 : STEREO/MONO SWITCH (STEREO)
- S201 2-3 : LOUDNESS SWITCH (OFF)
- S401 : SPEAKERS SWITCH (A)
- S801 : POWER SWITCH (OFF)
- S802 : TURBO SWITCH (8 OHM POSITION)
- S801 : SOFT CLIPPING SWITCH (OFF)

NOTES:
 1. RESISTORS ARE 1/4W 5% UNLESS OTHERWISE SPECIFIED.
 2. * DENOTES RESISTORS MOUNTED UP FROM P.C.B.
 3. C DENOTES PARTS MOUNTED ON MAIN HEATSINK.
 4. # DENOTES PARTS USED FOR FTZ ONLY.
 5. R455 AND R456 USED FOR IDLING CURRENT ADJUST ONLY MUST BE SHORTED IN NORMAL OPERATION.
 6. VOLTAGES SHOWN ARE MEASURED WITH NO SIGNAL APPLIED.

NAD-3220PE

SEPT. : 8 1988
NOV. : 07