


SCHEMATIC DIAGRAM NAD3020i AMPLIFIER

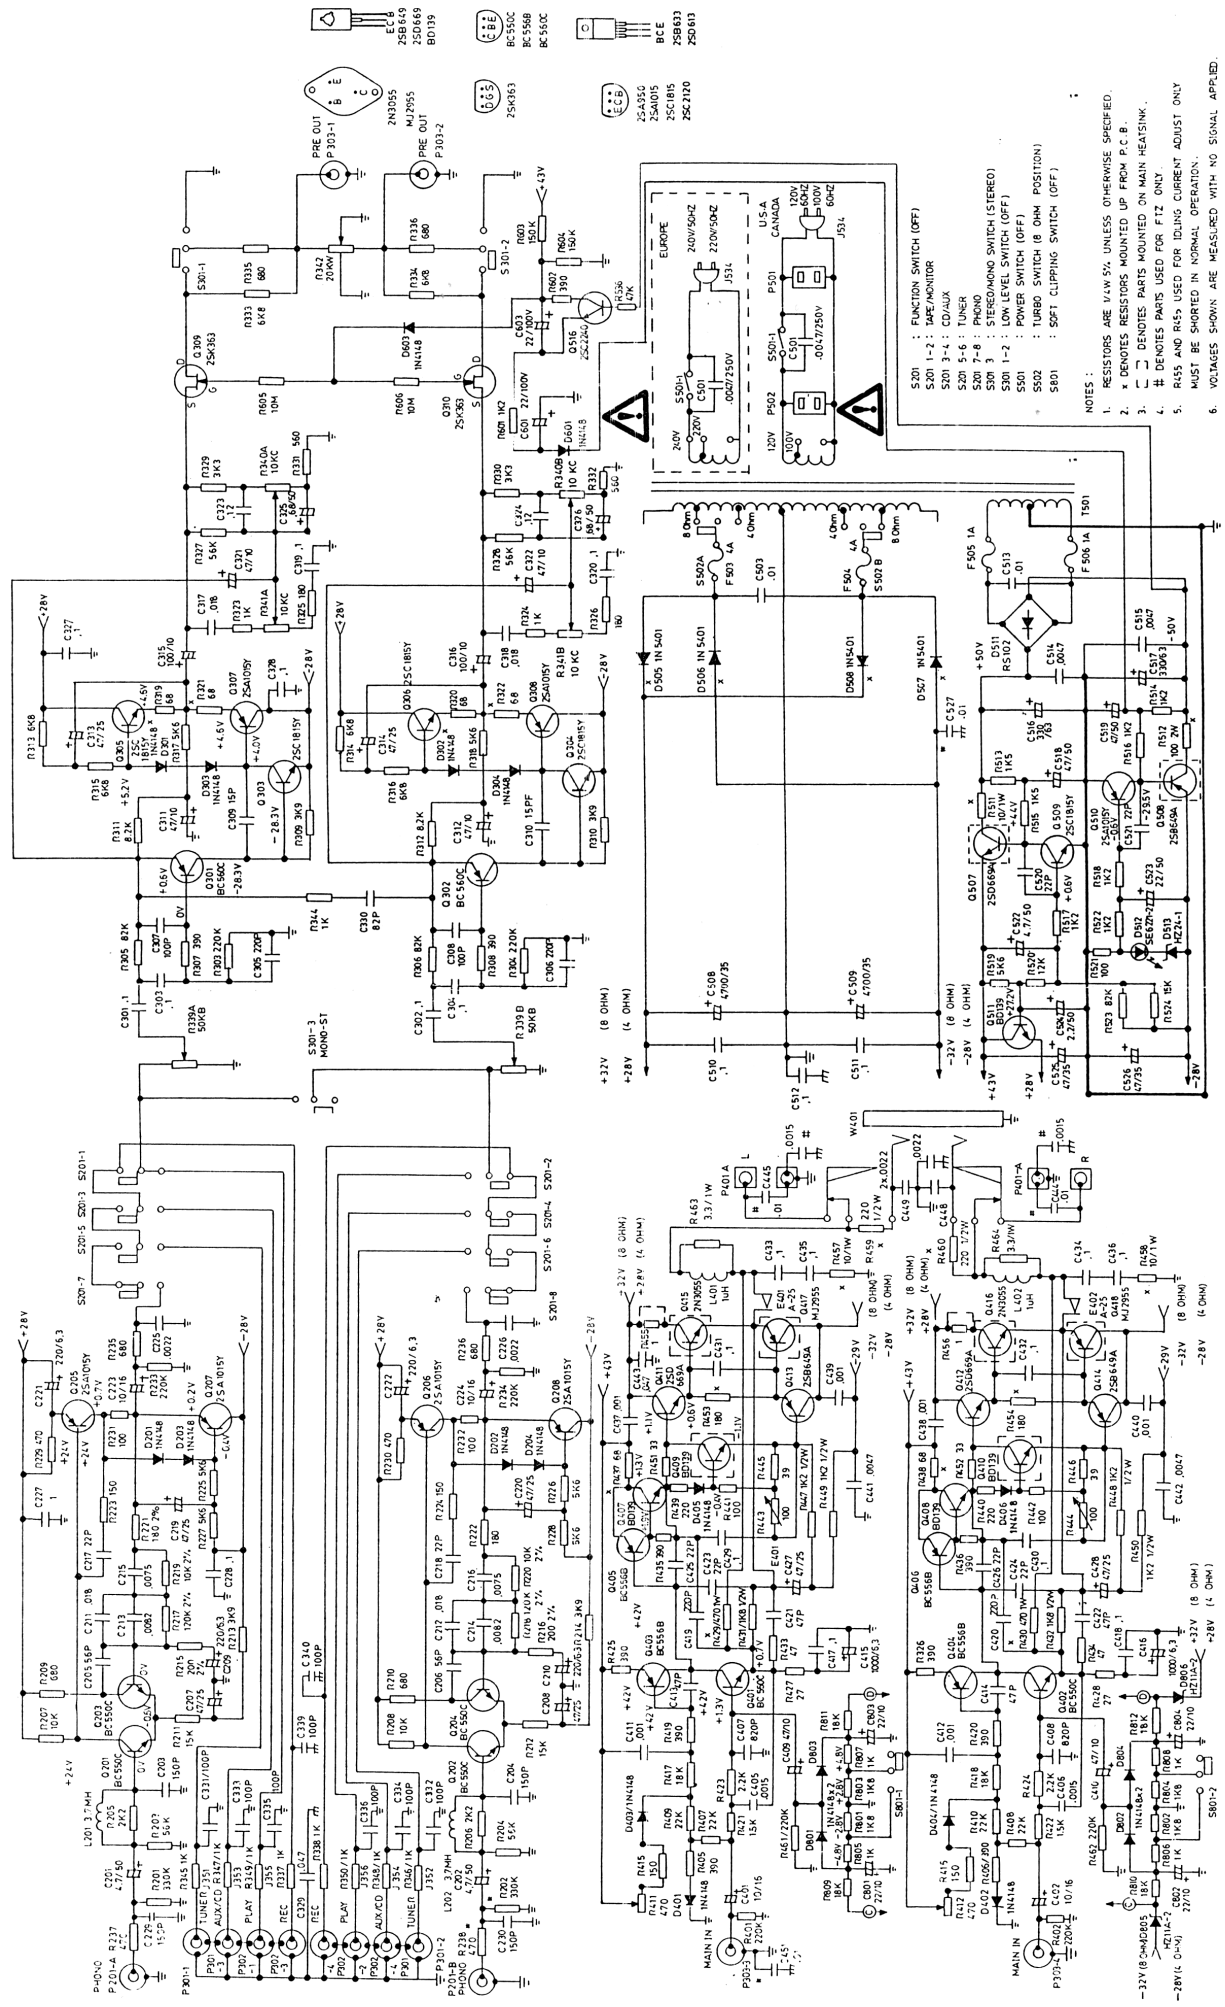

- NOTES:
- RESISTORS ARE 1/4W 5%, UNLESS OTHERWISE SPECIFIED.
 - IC DENOTES RESISTORS MOUNTED UP FROM P.C.B.
 - ⊗ DENOTES PARTS MOUNTED ON MAIN HEATSINK.
 - ⊚ DENOTES PARTS USED FOR FIT ONLY.
 - R455 AND R455 USED FOR IDLING CURRENT ADJUST ONLY. MUST BE SHORTED IN NORMAL OPERATION.
 - VOLTAGES SHOWN ARE MEASURED WITH NO SIGNAL APPLIED.

- Legend:
- S201 : FUNCTION SWITCH (OFF)
 - S201 1-2 : TAP/MONITOR
 - S201 3-4 : CD/AUX
 - S201 5-6 : TUNER
 - S201 7-8 : PHONO
 - S201 1-2 : STEREO/MONO SWITCH (STEREO)
 - S201 1-2 : LOW LEVEL SWITCH (OFF)
 - S201 : POWER SWITCH (OFF)
 - S202 : TURBO SWITCH (8 OHM POSITION)
 - S201 : SOFT CLIPPING SWITCH (OFF)

- Component List:
- 2N3955
 - 2SB619
 - 2SD669
 - BD139
 - 2SK383
 - 2SA495C
 - 2SA405
 - 2SC1815
 - 2SC2120
 - 2SD1720
 - 2SD183