
Region Setting

The above model is delivered factory set to R2. To change the region code to your area please perform the following. This applies to units with serial number last four digits ending 0000 to 3000.

1. Turn on unit and remove disc.
 2. Press the “Pause “ button on the remote control.
 3. Press the numeric buttons: 3 1 4 1 5 9
 4. VFL shows ‘CODE- - ‘
 - * 5. Enter the code for your and press “Enter” button .
 6. Turn off power.
-

For serial numbers last four digits ending 3001 and up perform the following,

1. Turn on unit and remove disc.
2. Press the “Pause” button on the remote control.
3. Press the numeric buttons: 2 5 8 0 7 9
4. VFL shows ‘CODE- -‘
- * 5. Enter the code for your area and press “Pause” button.
6. Turn off power.

*** NOTE: In both cases perform step 5 as quick as possible for the unit to accept command.**

Contact:

**NAD Electronics International
633 Granite Court
Pickering, ON Canada L1K 3K1
Voice: 905-831-0799 FAX 905-837-6357
www.nadelectronics.com**