



Service Manual

Nakamichi 480Z

2 Head Cassette Deck



CONTENTS

1. General	3
2. Removal Procedures	4
2. 1. Cassette Case Cover Ass'y	4
2. 2. Top Cover Ass'y	4
2. 3. Bottom Cover Ass'y	4
2. 4. Front Panel Ass'y	5
2. 5. Headphone Jack Ass'y	5
2. 6. Mechanism Ass'y	5
2. 7. Level Indicator Ass'y, Lamp P.C.B. Ass'y and Indicator P.C.B. Ass'y	5
2. 8. Logic P.C.B. Ass'y, Headphone Switch P.C.B. Ass'y and MPX Filter Switch P.C.B. Ass'y	5
2. 9. Main P.C.B. Ass'y	6
2. 10. Control Switch Holder Ass'y	6
2. 11. Switch P.C.B. Ass'y	6
2. 12. Volume P.C.B. Ass'y and Control Switch P.C.B. Ass'y	6
2. 13. Rear Panel Ass'y, Power Transformer and Power Switch	8
2. 14. Cassette Case Ass'y and Cover Plate Ass'y	8
2. 15. Tape Counter Ass'y	8
2. 16. Capstan Motor Ass'y and Flywheel Ass'y	8
2. 17. Sub Mechanism Chassis Ass'y	9
2. 18. Control Motor Ass'y and Reel Motor Ass'y	9
2. 19. Cam Control Volume	9
2. 20. Reel Hub Ass'y and Idler Ass'y	9
2. 21. Cam Drive Gear and Control Cam	10
2. 22. Head Mount Base Ass'y	10
2. 23. Pressure Roller Ass'y and Erase Head	10
2. 24. Record/Playback Head Ass'y	10
3. Measurement Instruments	11
4. Mechanical Adjustments	11
4. 1. Mechanism Control Cam Adjustment	11
4. 2. Tape Speed Adjustment	12
4. 3. Record/Playback Head Tilt Adjustment	13
4. 4. Head Base Stroke Adjustment	14
4. 5. Tape Guides Adjustment and Erase Head Stroke Adjustment	14
4. 6. Erase Head Height and Tilt Adjustment	15
4. 7. Back Tension Adjustment	15
4. 8. Record/Playback Head Height Adjustment and Azimuth Alignment	16
4. 9. Tape Travelling Adjustment	17
4. 10. Record Switch Linkage Adjustment	17
4. 11. Flywheel Holder Adjustment	18
4. 12. Eject Wire Adjustment	18
4. 13. Lubrication	18
5. Parts Location for Electrical Adjustment	19
6. Electrical Adjustments and Measurements	20
6. 1. Adjustment and Measurement Instructions	20
6. 2. Playback Frequency Response Adjustment	23
6. 3. Dolby NR Circuit Check	24
7. Mounting Diagrams and Parts List	25
7. 1. Main P.C.B. Ass'y	25
7. 2. Volume P.C.B. Ass'y	31
7. 3. Lamp P.C.B. Ass'y	31
7. 4. MPX Filter Switch P.C.B. Ass'y	31
7. 5. Headphone Switch P.C.B. Ass'y	31
7. 6. Bias Tune Volume P.C.B. Ass'y	31
7. 7. Indicator P.C.B. Ass'y	31
7. 8. Switch P.C.B. Ass'y	31
7. 9. Shut-off P.C.B. Ass'y	32

7. 10.	Control P.C.B. Ass'y	32
7. 11.	Control Switch P.C.B. Ass'y	32
7. 12.	Logic P.C.B. Ass'y	33
8.	Mechanism Ass'y and Parts List	37
8. 1.	Synthesis	37
8. 2.	Front Panel Ass'y (A01)	39
8. 3.	Synthesis Mechanism Ass'y (A02)	39
8. 4.	Meter Escutcheon Ass'y (B01)	41
8. 5.	Control Switch Holder Ass'y (B02)	41
8. 6.	Headphone Jack Ass'y (B03)	42
8. 7.	Mechanism Ass'y 480Z (B04)	43
8. 8.	Chassis Ass'y (B05)	44
8. 9.	Flywheel Holder Ass'y (C01)	44
8. 10.	Sub Mechanism Chassis Ass'y (C02)	45
8. 11.	Main Mechanism Chassis Ass'y (C03)	46
8. 12.	Rear Panel Ass'y (D01)	47
8. 13.	Capstan Motor Ass'y (E01)	48
8. 14.	Reel Motor Ass'y (F01)	48
8. 15.	Control Motor Ass'y (F02)	48
8. 16.	Head Mount Base Ass'y (G01)	48
8. 17.	Supply Pressure Roller Ass'y (G02)	48
8. 18.	Take-up Pressure Roller Ass'y (G03)	49
8. 19.	Head Base Ass'y C (G04)	49
8. 20.	Cassette Case Holder L Ass'y (G05)	49
8. 21.	Cassette Case Holder R Ass'y (G06)	49
8. 22.	Auto Shut-off Ass'y (G07)	49
8. 23.	Pneumatic Damper Ass'y (G08)	49
8. 24.	RP-9E Record/Playback Head Ass'y (H01)	50
9.	Overall Timing Chart	51
10.	Eq. Amp. Frequency Response	52
10. 1.	Playback Frequency Response	52
10. 2.	Record Current Frequency Response	52
11.	Wiring Diagram	53
12.	Block Diagrams	55
12. 1.	Amplifier Section	55
12. 2.	Mechanism Control Section	56
13.	Schematic Diagrams	57
13. 1.	IC Block Diagram	57
13. 2.	Attention to Servicemen	57
13. 3.	Mechanism Control Section	58
13. 4.	Amplifier Section	60
14.	Specifications	62

480Z

1. GENERAL

1.1. Control Functions

The Nakamichi 480Z control functions are shown below:

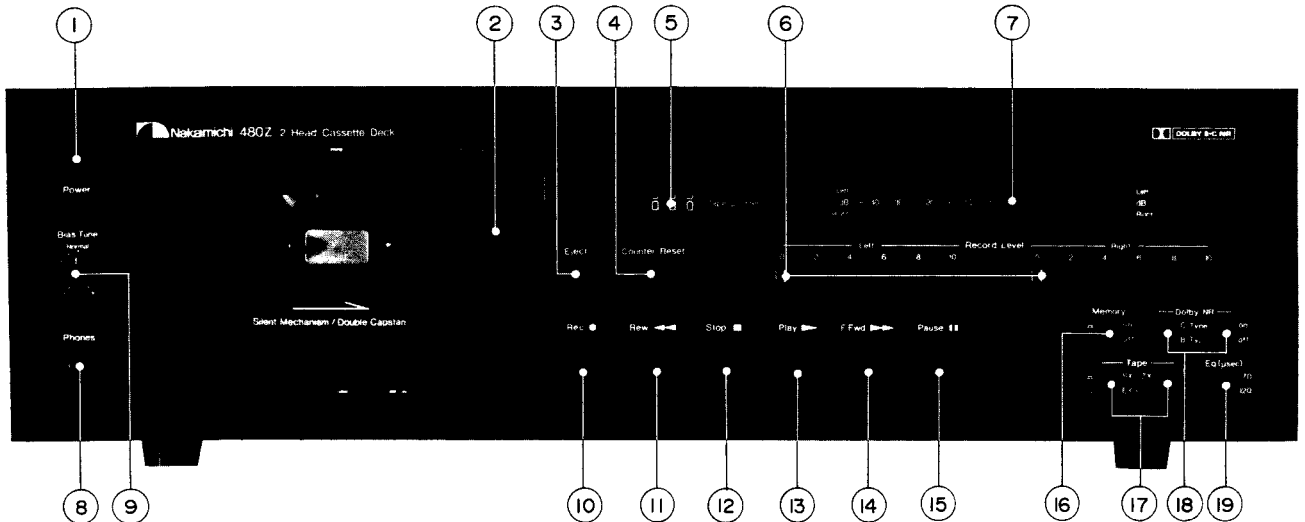


Fig. 1.1 Front View

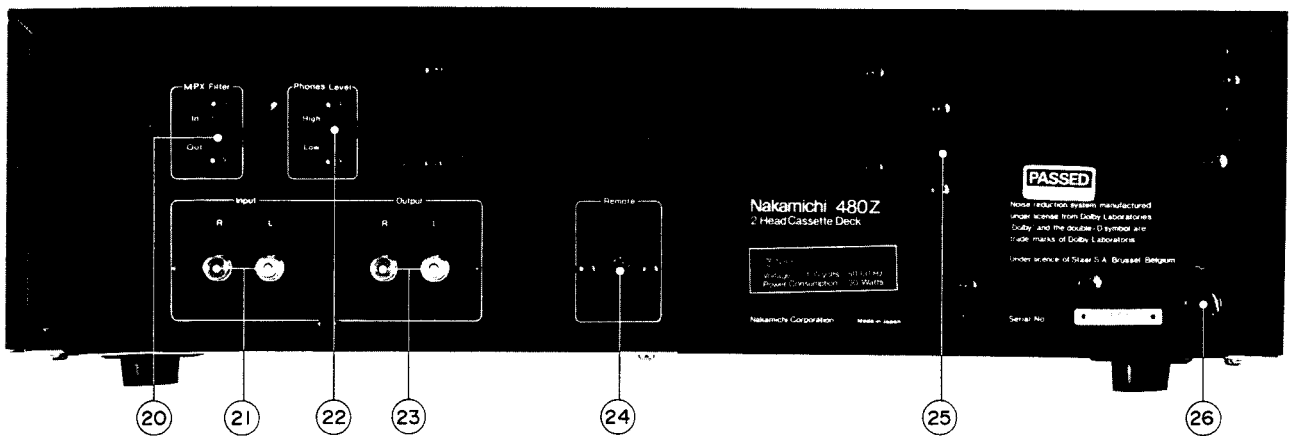


Fig. 1.2 Rear View

- | | | |
|-------------------------|--------------------------|-----------------------------|
| 1. Power Switch | 10. Record Button | 19. Eq. Switch |
| 2. Cassette Lid | 11. Rewind Button | 20. MPX Filter Switch |
| 3. Eject Button | 12. Stop Button | 21. Input Jacks |
| 4. Counter Reset Button | 13. Play Button | 22. Headphone Level Switch |
| 5. Tape Counter | 14. Fast-Forward Button | 23. Output Jacks |
| 6. Input Level Controls | 15. Pause Button | 24. Remote Control Socket |
| 7. Peak Level Meters | 16. Tape Memory Switch | 25. Voltage Selector Switch |
| 8. Headphone Jack | 17. Tape Selector Switch | 26. Power Cord |
| 9. Bias Tune Control | 18. Dolby NR Switch | |

1.2. Voltage Selector

Voltage Selector is installed on the rear panel for Other Version of the Nakamichi 480Z. This voltage selector can select either 120 V or 220-240 V at customer's disposal.

2. REMOVAL PROCEDURES

2.1. Cassette Case Cover Ass'y

Refer to Fig. 2.1.

- (1) Press the Eject Button to open the Cassette Case Ass'y.
- (2) Pull out F01 (Cassette Case Cover Ass'y) upwardly.

2.2. Top Cover Ass'y

Refer to Fig. 2.1.

- (1) Remove F02 and F03, then disassemble F04 (Top Cover Ass'y).

2.3. Bottom Cover Ass'y

Refer to Fig. 2.1.

- (1) Remove F05, then disassemble F06 (Bottom Cover Ass'y).

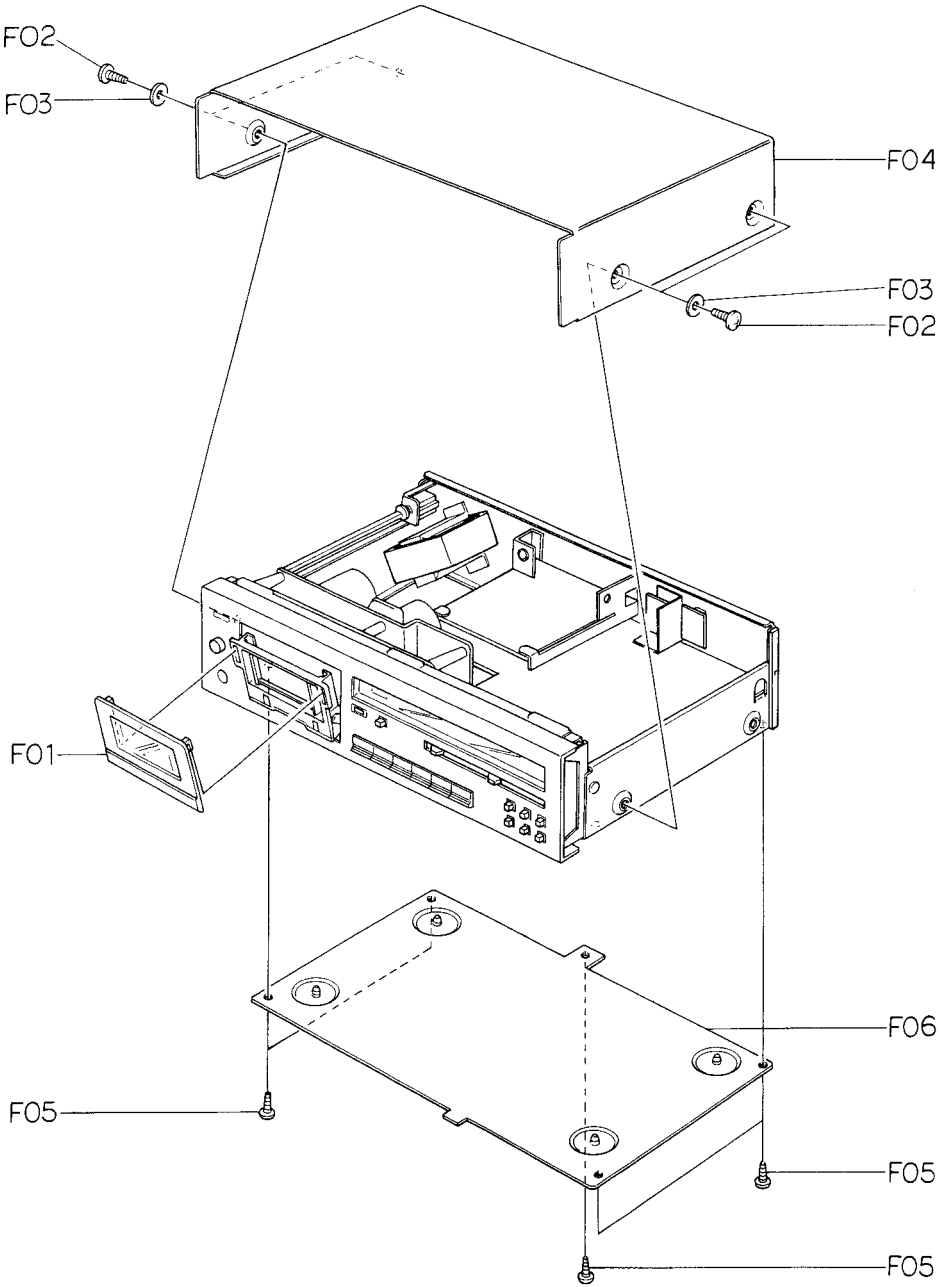


Fig. 2.1

2.4. Front Panel Ass'y

Refer to Fig. 2.2.

- (1) Refer to Fig. 2.1. Remove Top Cover Ass'y and Bottom Cover Ass'y referring to items 2.2 and 2.3.
- (2) Pull out F01 (Volume Knobs) and F02 (Bias Tune Volume Knob).
- (3) Remove F03 (Power Switch Joint Bar) by releasing the self-interlocking pin of the Power Switch Joint Bar from Power Switch, and turn F03 (Power Switch Joint Bar) by 90° either clockwise or counterclockwise, then disassemble F03 (Power Switch Joint Bar) from the Power Switch Knob Ass'y.
- (4) Remove F04, then disassemble F05 (Front Panel Ass'y).

2.5. Headphone Jack Ass'y

Refer to Fig. 2.2.

- (1) Remove Front Panel Ass'y referring to item 2.4.
- (2) Remove F06, then disassemble F07 (Headphone Jack Ass'y).
- (3) Remove F08 and F09, then disassemble F10 (Bias Tune Volume P.C.B. Ass'y).
- (4) Remove F11 and F12, then disassemble F13 (Headphone Jack).

2.6. Mechanism Ass'y

Refer to Fig. 2.2.

- (1) Remove Front Panel Ass'y referring to item 2.4.
- (2) Remove F14 and F15, then disassemble F16 (Mechanism Ass'y including 5 connectors and Record Switch Linkage).

2.7. Level Indicator Ass'y, Lamp P.C.B. Ass'y and Indicator P.C.B. Ass'y

Refer to Fig. 2.2.

- (1) Remove Front Panel Ass'y referring to item 2.4.
- (2) Remove F17 (Level Indicator Ass'y) by releasing self-interlocking pins of Level Indicator Ass'y.
- (3) Remove F18, then disassemble F19 (Lamp P.C.B. Ass'y).
- (4) Remove F20, then disassemble F21 (Shield Case).
- (5) Remove F22, then disassemble F23 (Indicator P.C.B. Ass'y).

2.8. Logic P.C.B. Ass'y, Headphone Switch P.C.B. Ass'y and MPX Filter Switch P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.1. Remove Top Cover Ass'y referring to item 2.2.

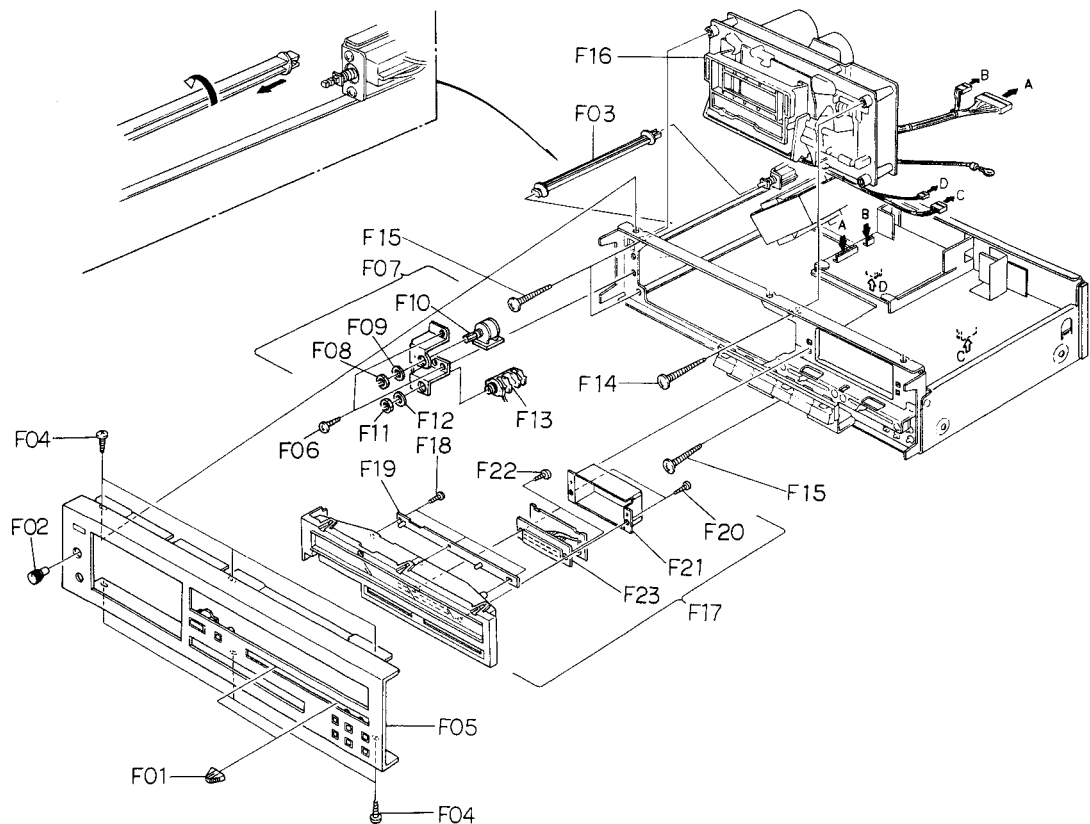


Fig. 2.2

- (2) Remove F01 and F02, then disassemble F03 (Logic P.C.B. Ass'y).
- (3) Remove F04, then disassemble F05 (Headphone Switch P.C.B. Ass'y and Shield Case).
- (4) Remove F06, then disassemble F07 (MPX Filter Switch P.C.B. Ass'y).

2.9. Main P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y, Logic P.C.B. Ass'y and Headphone Switch P.C.B. Ass'y referring to items 2.4 and 2.8.
- (2) Remove 2 connectors and the wires connected by wrapping from the F13 (Main P.C.B. Ass'y).
- (3) Remove F08, F09, F10, F11, F12 and the Record Switch Linkage from the Wire Holder of Record Switch, then disassemble F13 (Main P.C.B. Ass'y).

2.10. Control Switch Holder Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Level Indicator Ass'y referring to item 2.7.

- (2) Remove F14, then disassemble F15 (Control Switch Holder Ass'y).

2.11. Switch P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.4.
- (2) Remove F16, then disassemble F17 (Switch P.C.B. Ass'y).

2.12. Volume P.C.B. Ass'y and Control Switch P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Remove Control Switch Holder Ass'y referring to item 2.10.
- (2) Remove F18, then disassemble F19 (Volume P.C.B. Ass'y).
- (3) Remove F20, then disassemble F21 (Control Button Spring).
- (4) Remove F22 (Control Button Shaft), then disassemble F23 (Control Buttons).
- (5) Remove F24, then disassemble F25 (Control Switch P.C.B. Ass'y).

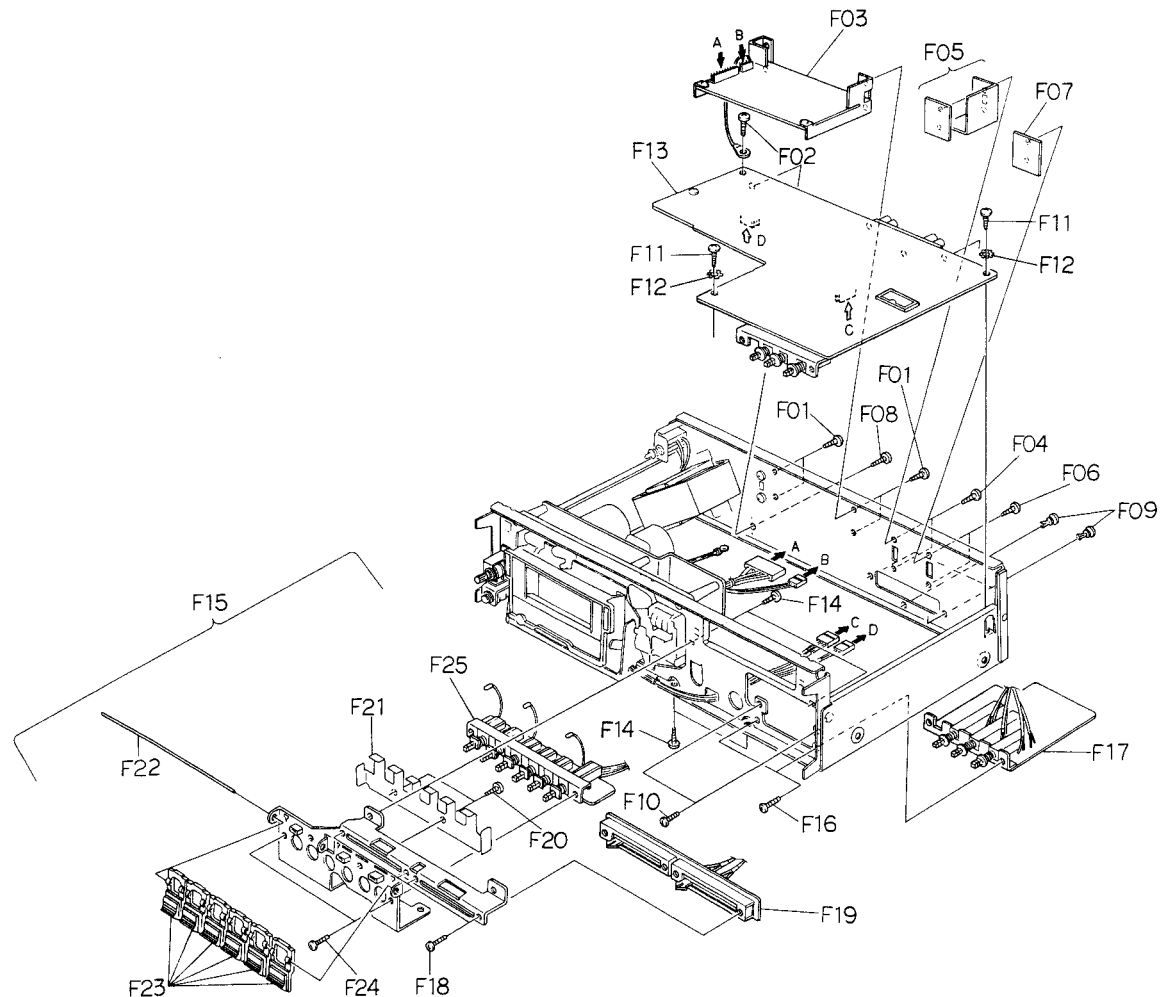


Fig. 2.3

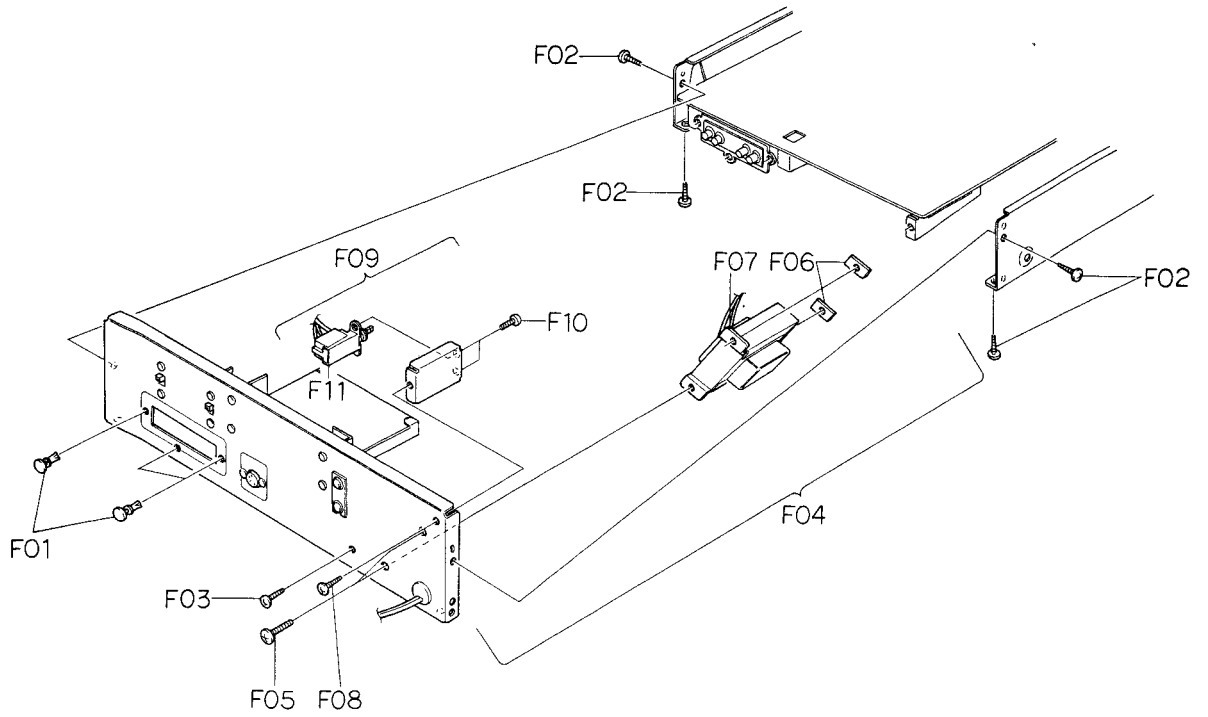


Fig. 2.4

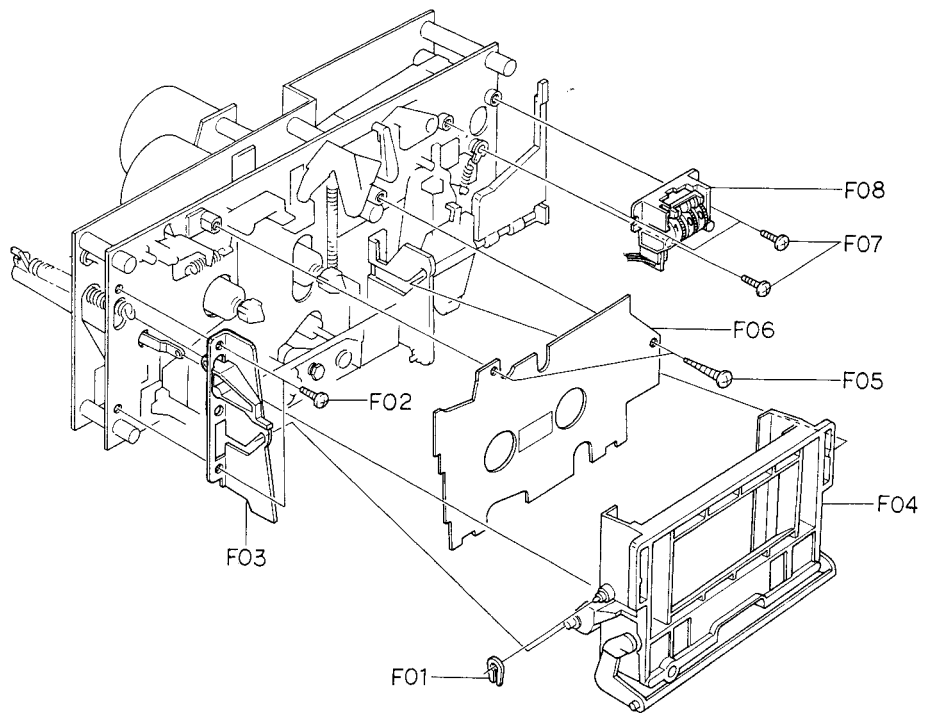


Fig. 2.5

2.13. Rear Panel Ass'y, Power Transformer and Power Switch

Refer to Fig. 2.4.

- (1) Refer to Fig. 2.1. Remove Top Cover Ass'y and Bottom Cover Ass'y referring to items 2.2 and 2.3.
- (2) Remove F01, F02 and F03, then disassemble F04 (Rear Panel Ass'y).
- (3) Remove F05 and F06, then disassemble F07 (Power Transformer).
- (4) Remove Power Switch Joint Bar by releasing the self-interlocking pin of the Power Switch Joint Bar from Power Switch and F08, then disassemble F09 (Power Switch Holder Ass'y).
- (5) Remove F10, then disassemble F11 (Power Switch).

2.14. Cassette Case Ass'y and Cover Plate Ass'y

Refer to Fig. 2.5.

- (1) Refer to Fig. 2.2. Remove Mechanism Ass'y referring to item 2.6.
- (2) Press the Eject Button to open the Cassette Case Ass'y.
- (3) Remove F01, then disassemble the piston of the Pneumatic Damper Ass'y.
- (4) Remove F02 and F03 (Cassette Case Holder L Ass'y), then disassemble F04 (Cassette Case Ass'y).
- (5) Remove F05, then disassemble F06 (Cover Plate Ass'y).

2.15. Tape Counter Ass'y

Refer to Fig. 2.5.

- (1) Refer to Fig. 2.2. Remove Level Indicator Ass'y referring to item 2.7.
- (2) Remove F07, then disassemble F08 (Tape Counter Ass'y).

2.16. Capstan Motor Ass'y and Flywheel Ass'y

Refer to Fig. 2.6.

- (1) Refer to Fig. 2.2. Remove Mechanism Ass'y referring to item 2.6.
- (2) Remove F01 and F02, then disassemble F03 (Flywheel Holder Ass'y) and F08 (Capstan Belt).
- (3) Remove F04, then disassemble F05 (Capstan Motor Ass'y).
- (4) Remove F06, then disassemble F07 (Control P.C.B. Ass'y).
- (5) Remove F09 (Supply Flywheel Ass'y), then disassemble F10 (Take-up Flywheel Ass'y).
- (6) After removing both Flywheel Assemblies, disassemble F11 (Thrust Washer 3 mm), F12 (Thrust Washer 2.6 mm), F13 (Flange Thrust Caps) and F14 (Flange Thrust Springs).

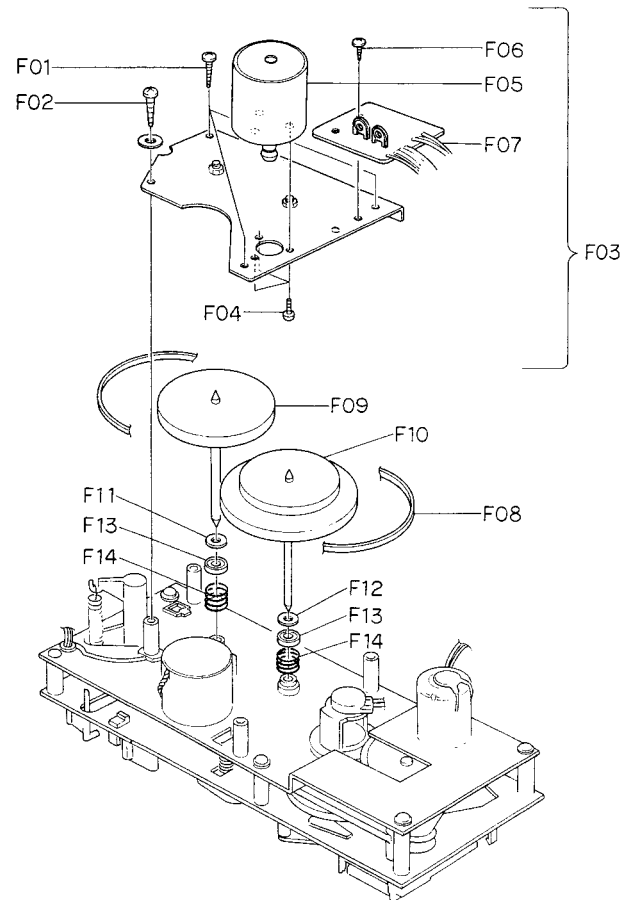


Fig. 2.6

2.17. Sub Mechanism Chassis Ass'y

Refer to Fig. 2.7.

- (1) Refer to Fig. 2.6. Remove Flywheel Assemblies referring to item 2.16.
- (2) Remove F01 and F02, then disassemble F03 (Sub Mechanism Chassis Ass'y).

2.18. Control Motor Ass'y and Reel Motor Ass'y

Refer to Fig. 2.7.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.17.
- (2) Remove F04, then disassemble F05 (Control Motor Ass'y).
- (3) Remove F06, then disassemble F07 (Reel Motor Ass'y).

2.19. Cam Control Volume

Refer to Fig. 2.7.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.17.
- (2) Remove F08, then disassemble F09 (Volume Coupler).
- (3) Remove F10, then disassemble F11 (Cam Control Volume).

2.20. Reel Hub Ass'y and Idler Ass'y

Refer to Fig. 2.7.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.17.
- (2) Remove F12 (Reel Hub Heads), then disassemble F13 (Reel Hub B Assemblies), F14 (Reel Hub Take-up

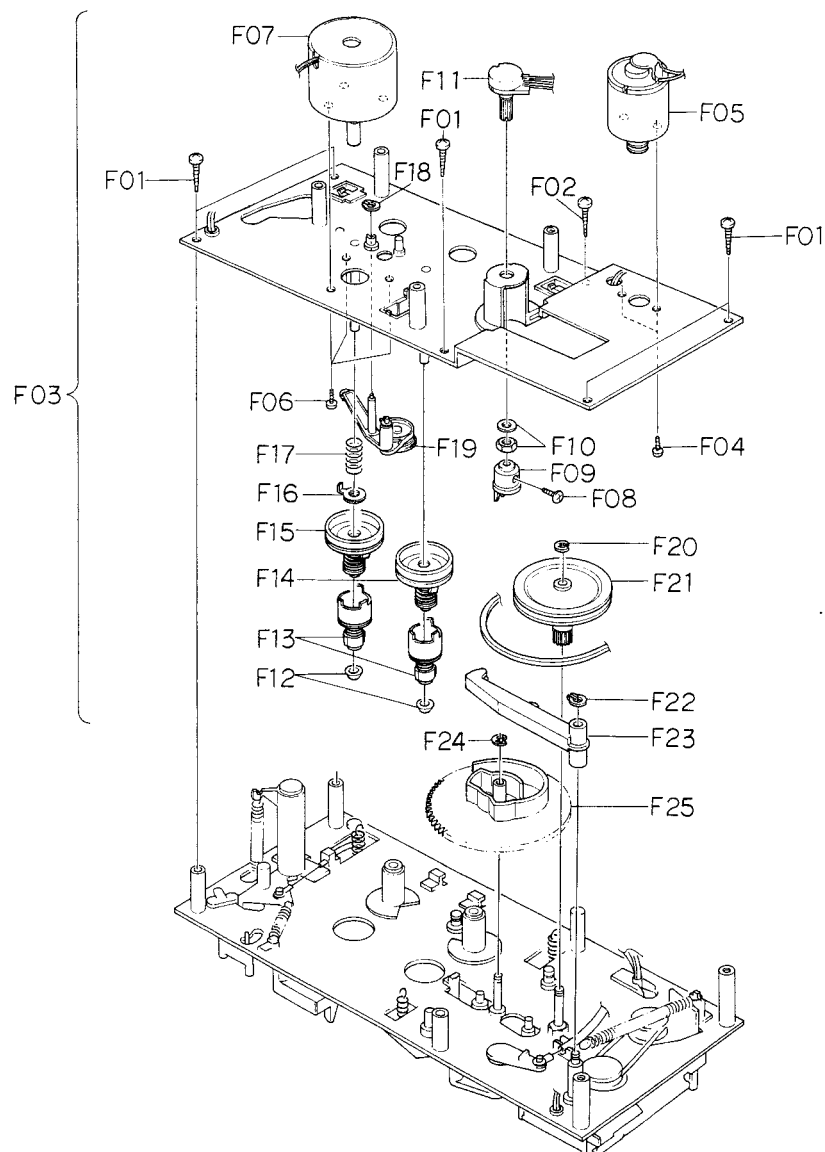


Fig. 2.7

Ass'y), F15 (Reel Hub Supply Ass'y), F16 (Back Tension Ass'y) and F17 (Back Tension Spring).

- (3) Remove F18, then disassemble F19 (Idler Ass'y).

2.21. Cam Drive Gear and Control Cam

Refer to Fig. 2.7.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.17.
- (2) Remove F20, then disassemble F21 (Cam Drive Gear).
- (3) Remove F22, then disassemble F23 (Counter-Load Arm Ass'y).
- (4) Remove F24, then disassemble F25 (Control Cam).

2.22. Head Mount Base Ass'y

Refer to Fig. 2.8.

- (1) Refer to Fig. 2.5. Remove Cassette Case Ass'y referring to item 2.14.
- (2) Remove F01, then disassemble F02 (Head Mount Base Ass'y).

2.23. Pressure Roller Ass'y and Erase Head

Refer to Fig. 2.8.

- (1) Remove Head Mount Base Ass'y referring to item 2.22.
- (2) Remove F03 and a washer, then disassemble F04 (Supply Pressure Roller Ass'y).
- (3) Remove F05, then disassemble F06 (Erase Head).
- (4) Remove F07 and a washer, then disassemble F08 (Take-up Pressure Roller Ass'y).

2.24. Record/Playback Head Ass'y

Refer to Fig. 2.8.

- (1) Remove Head Mount Base Ass'y referring to item 2.22.
- (2) Turn F09 by 90° by pushing it, then disassemble F10 (Record/Playback Head Ass'y).

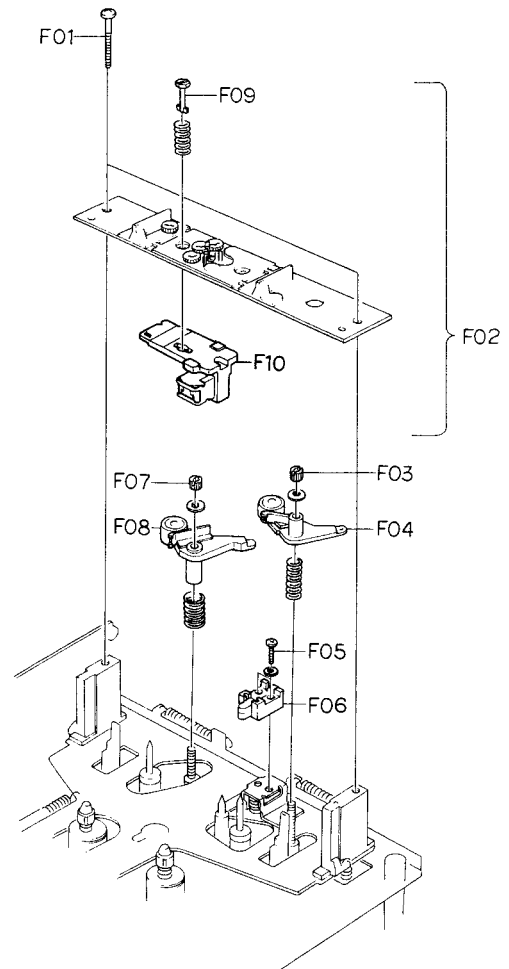


Fig. 2.8

3. MEASUREMENT INSTRUMENTS

- (1) Audio Generator (20 Hz – 200 kHz)
- (2) AC Millivolt Meter (with dB measures)
- (3) Oscilloscope (DC – 5 MHz)
- (4) Distortion Meter
- (5) Speed & Wow/Flutter Meter
- (6) Frequency Counter (DC – 1 MHz)
- (7) Ohm Meter
- (8) DC Volt Meter
- (9) AC Volt Meter
- (10) Torque Gauge (DA09013A)
- (11) 15 kHz Azimuth Tape (DA09004A)
- (12) 3 kHz Speed & Wow/Flutter Tape (DA09006A)
- (13) 1 kHz Track Alignment Tape (DA09007A)
- (14) 400 Hz Level Tape (DA09005A)
- (15) 20 kHz PB Frequency Response Tape (DA09001A)
- (16) 15 kHz PB Frequency Response Tape (DA09002A)
- (17) 10 kHz PB Frequency Response Tape (DA09003A)
- (18) Reference EXII Tape (DA09066A)
- (19) Reference SX Tape (DA09025A)
- (20) Reference ZX Tape (DA09037A)
- (21) Tilt Check Gauge M-9036 (DA09036A)
- (22) Stroke Check Gauge M-9038 (DA09038A)
- (23) EH Tilt Check Gauge M-9040 (DA09040A)
- (24) EH Stroke Check Gauge M-9051 (DA09051A)
- (25) Back Tension Gauge (DA09055A)
- (26) Tension Arm Adjustment Cassette (DA09056A)
- (27) Audio Analyzer T-100
(including Distortion, Wow/Flutter, Speed, Oscillator and dB meters)

Note: (10) – (27) are the products of Nakamichi Corporation.

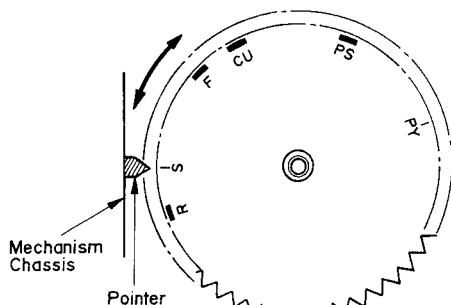


Fig. 4.1

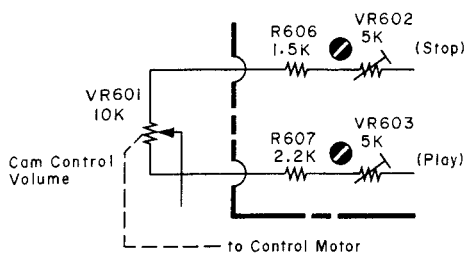


Fig. 4.2

4. MECHANICAL ADJUSTMENTS

4.1. Mechanism Control Cam Adjustment

Before adjustment, disassemble the Front Panel Ass'y then remove the Cover Plate Ass'y referring to items 2.4 and 2.14.

(1) Offset Adjustment of Control Motor Driver

(a) Refer to Figs. 4.1 and 4.2.

Adjust VR602 and VR603 on the Control P.C.B. Ass'y to locate approximately at the middle of the variable range. Then turn ON the Power switch.

VR602 (for cam position stop)

VR603 (for cam position play)

(b) Press the Stop button to set the N-480Z in Stop mode. Adjust VR602 (for stop) so that the "S" mark on the Cam corresponds to the pointer on the mechanism chassis.

(c) Press the Play button to set the N-480Z in Playback mode.

(Cam will rotate, and the position marked with "PY" comes to the pointer.)

Adjust VR603 (for play) so that the "PY" mark on the Cam corresponds to the pointer.

(d) Repeat above (b) and (c) 2 – 3 times so that the "S" and "PY" marks on the Cam correspond to the pointer accurately in Stop and Playback modes respectively.

(This adjustment is required because the position adjusted by one volume will be slightly changed when the other volume is adjusted.)

(e) Set the N-480Z in F.F., Pause, or Record mode by pressing each button and check to insure that the pointer is in a range of "F", "PS", or "R" mark respectively.

(f) If out of the range, precise adjustment for each position according to "(2) Offset Fine Adjustment of Control Motor Driver" will be required.

(2) Offset Fine Adjustment of Control Motor Driver

Adjust only if a satisfactory result is not obtained in "(1) Offset Adjustment of Control Motor Driver". This adjustment is made by changing the value of the fixed resistors on the Logic P.C.B. Ass'y.

Note: The value of voltage is typical value.

(a) Observation Point of Reference Voltage

Observe the each voltage at the sliding contact of the Cam Control Volume VR601 (10 kΩ) in Stop, Fast (F.F. or Rew.), Pause, Record and Playback modes.

Note: When Record and Play buttons are pressed to set the N-480Z in Record mode, the Cam is first set to the record position in a short period of time then stays at the play position. Therefore to keep the Cam at the record position, following procedure is required:

Short both leads of capacitor C417 (2.2 μF) on the Logic P.C.B. with a jumper wire, then press the Record and Play buttons.

(b) Reference Voltage

Reference voltage at the sliding contact of VR601 (Cam Control Volume) in each mode is as follows:

Mode	Reference Voltage (Typical Value)
Record	16 V
Stop	15 V
Fast (F.F./Rew.)	13.5 V
Pause	10 V
Play	7.5 V

Adjustment ranges for the reference voltages:

- Record: $1 \text{ V } \begin{matrix} +0.4 \text{ V} \\ -0.2 \text{ V} \end{matrix}$
- Fast (F.F./Rew.): $1.5 \text{ V } \pm 0.25 \text{ V}$
- Pause: $2.5 \text{ V } \pm 0.4 \text{ V}$

(c) Resistors for Adjustment

Mode	Ref. No.	Typical Value
Stop	R466, R464	9.1 k Ω (F), 15 k Ω (F)
Fast (F.F./Rew.)	R463	56 k Ω
Pause	R410	680 k Ω
Play	R411	120 k Ω
Record	R494	150 k Ω

(d) Adjustment Procedures

- 1) Press the Stop button to set the N-480Z in Stop mode. Adjust the value of R466 and R464 to obtain 15 V (± 0.6 V) at the sliding contact of VR601.

Note: When R466 and R464 are adjusted, the reference voltage in Fast (F.F. or Rew.) mode is changed. Therefore, re-check of the reference voltage in Fast (F.F. or Rew.) mode is required. If the reference voltage is out of the range, readjustment of R463 according to next step 2) is necessary.

- 2) Set the N-480Z in F.F. mode, then adjust the value of R463 so that the voltage of VR601 will become lower by 1.5 V (± 0.25 V) than in Stop mode.
- 3) Press the Pause button to set the N-480Z in Pause mode. Adjust the value of R410 to obtain 10 V ($+0.4$, -0.15 V) at the sliding contact of VR601.
- 4) Set the N-480Z in Playback mode, then adjust the value of R411 so that the voltage of VR601 will become lower by 2.5 V (± 0.4 V) than in Pause mode.
- 5) Short both leads of capacitor C417 with a jumper wire. Set the N-480Z in Record mode, then adjust the value of R494 so that the voltage of VR601 will become higher by 1 V ($+0.4$, -0.2 V) than in Stop mode.

Note: Remove the short of C417 after completion of adjustment.

(3) Cam Timing Adjustment

- (a) Remove the wires from the Control Motor terminals to set the motor open.
- (b) Without loading a cassette tape and with pressing the record protecting switch with your finger tip, press

the Record and Play buttons to set the N-480Z in Record mode.

- (c) Turn the Cam and bring the "PY" mark toward the pointer by hand. Reel Motor will rotate before the "PY" mark reaches the pointer. Adjust the value of R452 so that the voltage at the sliding contact of VR601 becomes 9.7 V (± 0.3 V) when Reel Motor starts rotation.
- (d) Observe the mute signal at the Q424 collector. Turn the Cam referring to above step (c) and check to insure that the voltage at the sliding contact of VR601 is 9.5 V (± 0.3 V) when mute is released (mute signal changes from H to L). (This voltage is determined by the adjustment of R452 in above step (c).)
- (e) Observe the (Play + Pause)-Position signal at the Q418 collector. Turn the Cam referring to above step (c) and adjust the value of R445 to obtain 11.2 V (± 0.4 V) at the sliding contact of VR601 when (Play + Pause)-Position signal changes from L to H (bias oscillation will begin).
- (f) Upon completion of above adjustment, re-connect wires to the motor terminals.

4.2. Tape Speed Adjustment

- (1) Remove the Top Cover Ass'y referring to item 2.1.
- (2) Connect a Frequency Counter to the Output Jack.
- (3) Load a 3 kHz Speed Wow/Flutter Tape (DA09006A) and play it back.
- (4) Referring to Fig. 4.3, adjust the Tape Speed Adjustment Volume (VR501) incorporated in the Capstan Motor to obtain 3,000 Hz on the Frequency Counter.
 - CCW: Motor drives slowly.
 - CW: Motor drives fast.

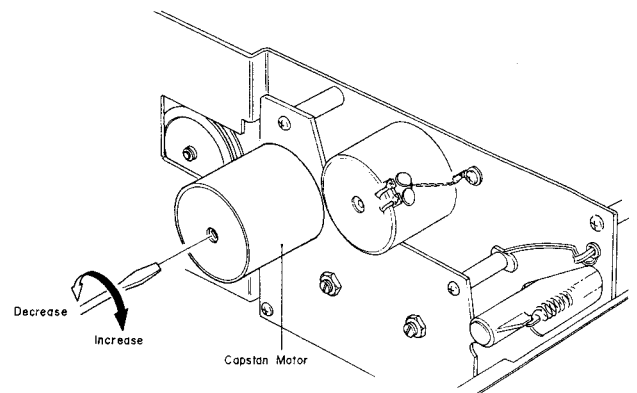


Fig. 4.3

4.3. Record/Playback Head Tilt Adjustment

Note: On items 4.3 – 4.8, refer to Fig. 4.4 flow chart. Refer to Figs. 4.5 and 4.6.

- (1) Load a Tilt Check Gauge M-9036 (DA09036A) in the N-480Z.
- (2) Clip the grounding terminal of the Tilt Check Gauge with one end of the cord with clip, and the chassis of the N-480Z with the other end.
- (3) Remove the Height Gear.
- (4) Set the N-480Z in Play mode. Check to insure whether the Beacon "Upper" or "Lower" is illuminating. In order not to give damages onto the record/playback head surface, push the slide knob of the Gauge to the direction of an arrow mark, then return it to the original place to be in contact with record/playback head surface after Play mode is securely locked.
- (5) Check to insure freedom from contact between the Gauge and pad lifter.
- (6) Beacon "Lower" will light on when height adjustment screw turned clockwise but "Upper" when counterclockwise. Adjust so that both "Upper" and "Lower" will light on even when you move the slide knob to the direction of an arrow mark and then return it to the original place.
- (7) Set the N-480Z in Stop mode and fit the serrated Height Gear. Then set the N-480Z again in Play mode and insure 2 Beacons "Upper" and "Lower" are illuminating.
If not, (3) through (6) will have to be repeated till satisfactory results are obtained.

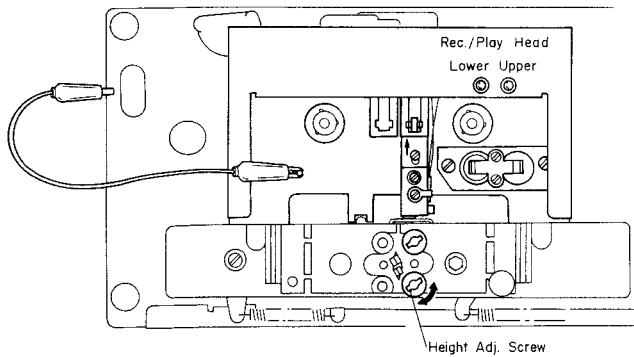


Fig. 4.5

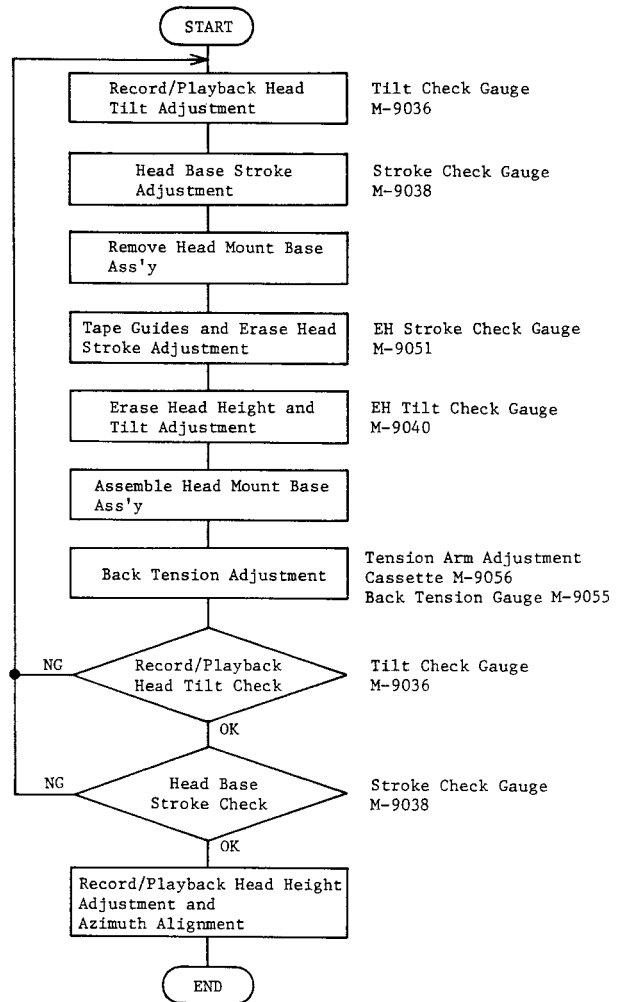


Fig. 4.4

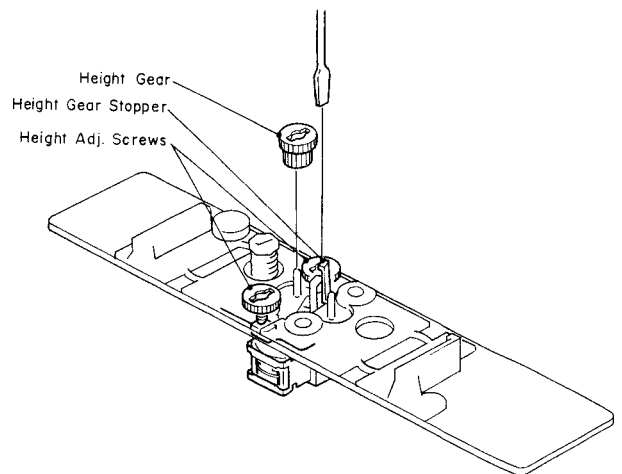


Fig. 4.6

4.4. Head Base Stroke Adjustment

Refer to Fig. 4.7.

Note: Before you conduct "Head Base Stroke Adjustment", adjust with a "Tilt Check Gauge" to insure freedom from tilt on the record/playback head.

- (1) Load a Stroke Check Gauge M-9038 (DA09038A) in the N-480Z.
- (2) Set the N-480Z in Play mode.
- (3) Check to insure whether the "P" pointer on the Stroke Indicator locates between 2 lines as marked on the Stroke Check Plate.
- (4) If the record/playback head stroke is noted to be misaligned, adjustment can be made by moving the stroke adjuster assembled in the head base assembly (either forwardly or backwardly).

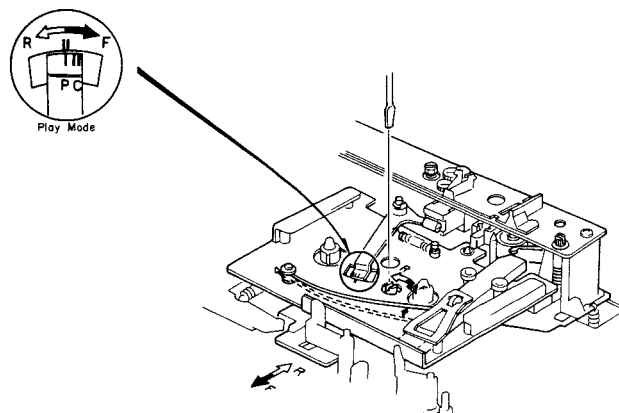


Fig. 4.7

4.5. Tape Guides Adjustment and Erase Head Stroke Adjustment

Remove Head Mount Base Ass'y referring to item 2.22. Refer to Figs. 4.8 and 4.9.

(1) Supply Tape Guide Height Adjustment

- (a) Load an EH Stroke Check Gauge M-9051 (DA0-9051A) in the N-480Z.
- (b) Set the N-480Z in Play mode.
- (c) Slide the Supply Tape Guide Check Bar down against the supply tape guide, thus check can be made on supply tape guide height.
- (d) If the supply tape guide is misaligned, the Supply Tape Guide Check Bar will not come into the supply tape guide. If such is noted, turn to adjust the height adjustment nut A till the Supply Tape Guide Check Bar is accepted by the supply tape guide.
- (e) If the above are insured, set the N-480Z in Pause mode, then in Play mode to see whether adjustments are appropriately made. If not, (b) through (e) will have to be repeated till satisfactory results are obtained.

(2) Take-up Tape Guide Height Adjustment

- (a) Load an EH Stroke Check Gauge M-9051 (DA0-9051A) in the N-480Z.
- (b) Set the N-480Z in Play mode.
- (c) Slide the Take-up Tape Guide Check Bar down against the take-up tape guide, thus check can be made on take-up tape guide height.
- (d) If the take-up tape guide is misaligned, the Take-up Tape Guide Check Bar will not come into the take-up tape guide. If such is noted, turn to adjust the height adjustment nut C till the Take-up Tape Guide Check Bar is accepted by the take-up tape guide.
- (e) If the above are insured, set the N-480Z in Pause mode, then in Play mode to see whether adjustments are appropriately made. If not, (b) through (e) will have to be repeated till satisfactory results are obtained.

(3) Erase Head Stroke Adjustment

- (a) Load an EH Stroke Check Gauge M-9051 (DA0-9051A) in the N-480Z.
- (b) Set the N-480Z in Play mode, thus check can be made on erase head stroke through the EH Stroke Indicator.
- (c) Check to insure whether the erase head surface is aligned with red line on the EH Stroke Indicator. If not, adjust the erase head stroke by loosening 2 screws B that assemble erase head and erase head plate.
- (d) After completion of adjustment, 2 pcs. of screws shall be locked with lock tight paint.

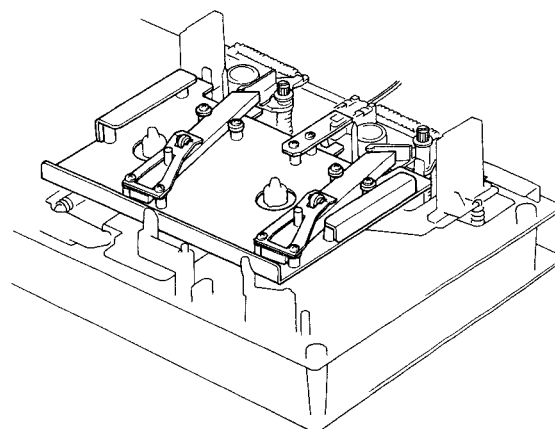


Fig. 4.8

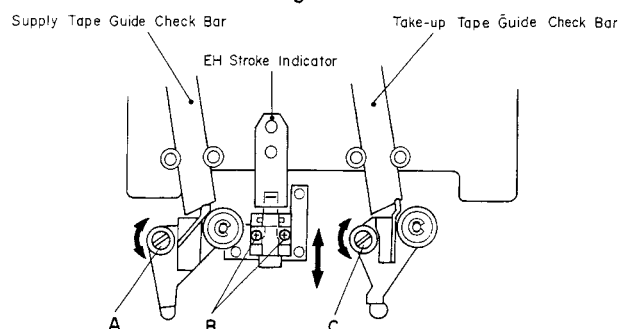


Fig. 4.9

4.6. Erase Head Height and Tilt Adjustment

Refer to Figs. 4.10 and 4.11.

- (1) Remove Head Mount Base Ass'y referring to item 2.22.
- (2) Load an EH Tilt Check Gauge M-9040 (DA09040A) in the N-480Z.
- (3) Set the N-480Z in Stop mode.
- (4) Check to insure whether one of the 3 Beacons is illuminating. Look down the mirror as shown by an arrow mark and slowly turn the Screw "Height" counterclockwise (or clockwise) so that the two horizontal lines on the mirror will become superposed on the line (in different color) of the erase head, and check to insure whether Beacon "1" is illuminating.
- (5) Turn Screw "Tilt" counterclockwise (or clockwise) to light on Beacon "2". Excessive turning will cause the Beacon "1" to light off. Adjustments of Screw "Tilt" will therefore be conducted till both of the Beacons "1" and "2" illuminate.
- (6) Turn Screw "Azimuth" counterclockwise (or clockwise) to light on Beacon "3". Excessive turning will cause either Beacon "1" or "2" to light off, and therefore adjust Screw "Azimuth" until all of the 3 Beacons "1", "2" and "3" illuminate.
- (7) Check to insure whether the horizontal line on the mirror corresponds to that on the erase head. If not, (4) through (7) will have to be repeated till satisfactory results are obtained.
- (8) After completion of adjustment, 3 pcs. of screws shall be locked with lock tight paint.

Note: Before use of this gauge, check to insure freedom from dust or dirt, or overflow in the groove of the erase head surface.

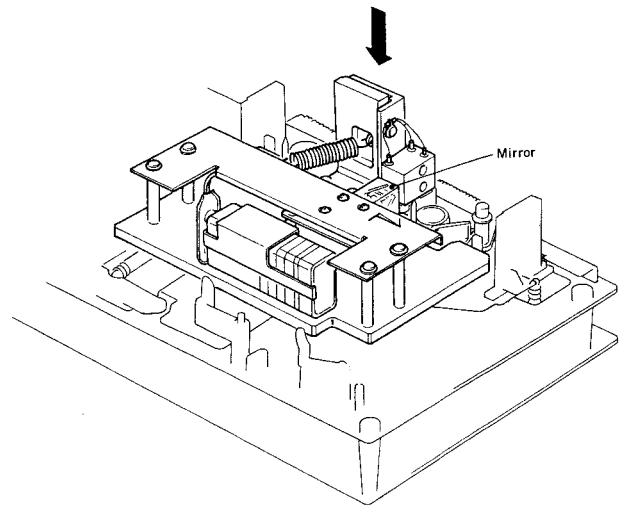


Fig. 4.10

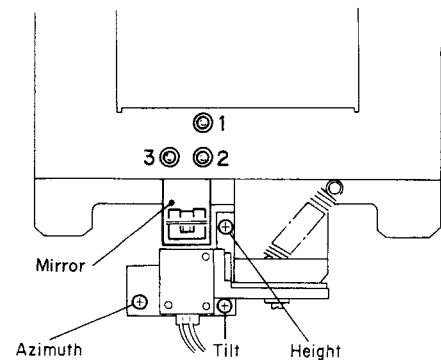


Fig. 4.11

4.7. Back Tension Adjustment

Refer to Figs. 4.12 – 4.14.

- (1) Load a Tension Arm Adjustment Cassette (DA09056A) in the N-480Z referring to Fig. 4.12.
- (2) Set the N-480Z in Play mode.
- (3) Bend the Back Tension Arm with pliers so that the gap between the Cassette Holding Spring assembled on the Head Base Ass'y and the Back Tension Arm becomes 0.5 mm as shown in Fig. 4.13. Do not bend the top of the Back Tension Arm.
- (4) Load the Back Tension Gauge (DA09055A) in the N-480Z.
- (5) Set the N-480Z in Play mode and read the torque value of Back Tension Gauge.

If the value is in a range of 6 g-cm to 10 g-cm, adjustment is not necessary. If not, change the installation point of the Back Tension Spring as shown in Fig. 4.14, and obtain the torque of 7 g-cm to 9 g-cm range.

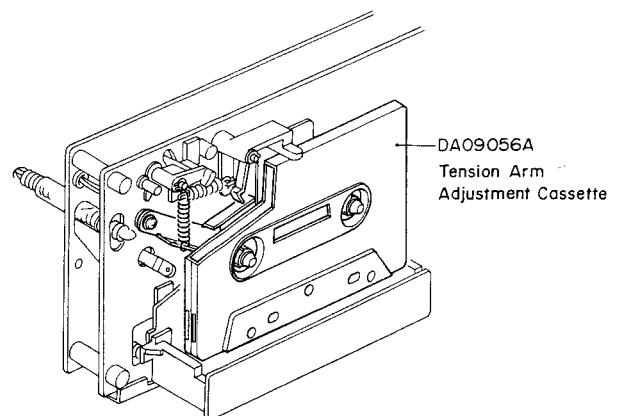


Fig. 4.12

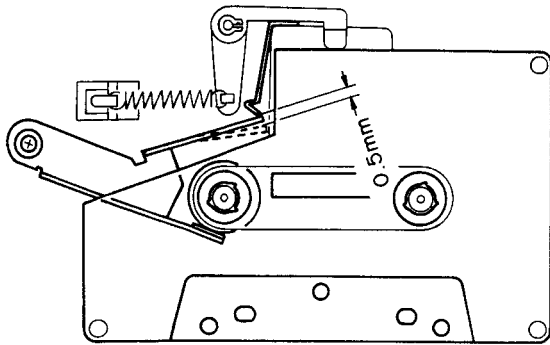


Fig. 4.13

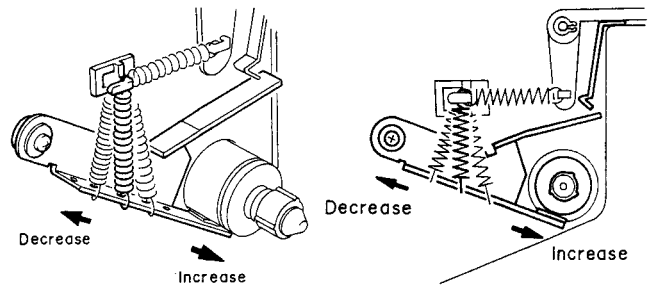


Fig. 4.14

4.8. Record/Playback Head Height Adjustment and Azimuth Alignment

Refer to Fig. 4.15.

- (1) Connect a VTVM to the Output Jacks.
- (2) Load a 1 kHz Track Alignment Tape (DA09007A) in the N-480Z.
- (3) Set the N-480Z in Play mode.
- (4) Turn the Height Gear until the outputs of both channels become minimum.
- (5) Load a 15 kHz Azimuth Tape (DA09004A) in the N-480Z.
- (6) Set the N-480Z in Play mode.
- (7) Turn the Azimuth Alignment Screw until the outputs of both channels become maximum.
- (8) Repeat (2) through (7) one or two times to obtain optimum performance.

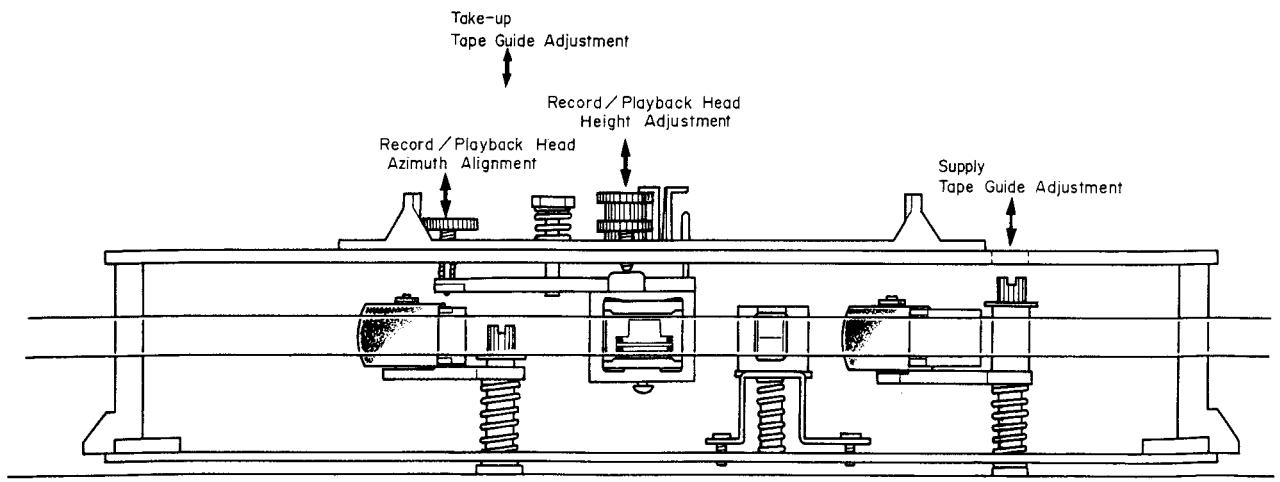


Fig. 4.15

4.9. Tape Travelling Adjustment

The adjustment shall be made with a modified version of the current type EXII C-90 as shown in Fig. 4.16 (error will be made if a previous type Tape Travelling Cassette (DA09011A) should be used for this purpose).

While modifying an EXII C-90, the tape guides in the cassette housing shall be kept protected to avoid tilt. Check shall be made in the following procedures:

- (1) An EXII C-90 tape thus modified shall be loaded onto the N-480Z.
- (2) Release the back-tension (rotate the Supply Reel and feed out some length of tape) and set the N-480Z in Play mode.
- (3) In this juncture, check to insure whether the tape is free from waving or slippage from the tape guide.
- (4) When the modified EXII C-90 is played back, check to insure whether the tape is freedom from waving from head surface or at pressure rollers.
- (5) If either of waving or slippage from the tape guide should be noted, adjustments of "4.3. Record/Playback Head Tilt Adjustment", "4.4. Head Base Stroke Adjustment", "4.5. Tape Guides Adjustment and Erase Head Stroke Adjustment", "4.6. Erase Head Height and Tilt Adjustment", "4.7. Back Tension Adjustment", "4.8. Record/Playback Head Height Adjustment and Azimuth Alignment", etc. will be required.

As a case may be, the said waving or slippage may have been caused from defective supply Pressure Roller Ass'y or Take-up Pressure Roller Ass'y without parallel contact with capstans. If such are noted, the Pressure Roller Assemblies will have to be replaced.

Further, excessively weak take-up torque or strong take-up torque may cause defective tape travelling.

The N-480Z is intended to be an adjustment-free Model, however if the similar matters as above should be noted, please replace the Reel Hub Ass'y to obtain appropriate take-up torque.

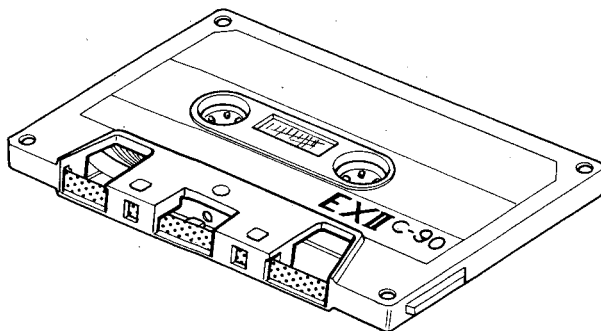


Fig. 4.16

4.10. Record Switch Linkage Adjustment

- (1) Set the N-480Z in Stop mode.
- (2) Loosen the screw of the Record Spring Holder, and shift the Record Spring Holder in order to remove the looseness of the Linkage Wire as shown in Fig. 4.17. Then tighten the screws for fixing the Record Spring Holder. (In this case, the Record Switch should be positioned at play side. If on the record position, it will be defective.)
- (3) Set the N-480Z in Record and Pause mode. Check to insure that the gap between the top of the wire and the Record Spring Holder is approx. 1 mm as shown in Fig. 4.18. (Check that the Record Switch is in record position.)
- (4) Upon completion of the above adjustments, apply a quantity of lock tight paint.

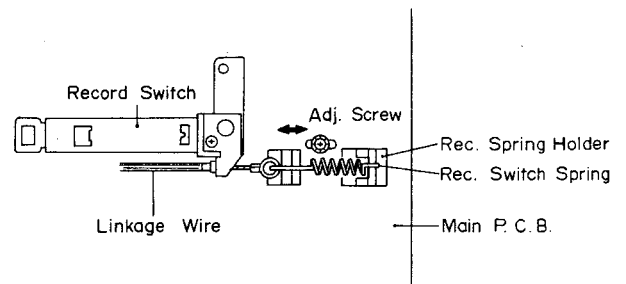


Fig. 4.17

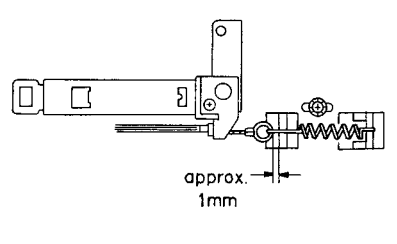


Fig. 4.18

4.11. Flywheel Holder Adjustment

(1) Refer to Fig. 4.19.

Tighten the Thrust Screws until the gap between the Flywheel Assemblies and Thrust Screws becomes minimized when both of the Capstan Shafts are moved backwardly and forwardly (the Thrust Springs between the Capstan Flanges and Flywheel Thrust Caps are in a flat state).

Excessive tightening of the Thrust Screws however will give damages on the Flywheel Assemblies, to which careful attention is invited.

- (2) Return the Thrust Screws by 1/2 turn.
- (3) Fixing the Thrust Screws with a screwdriver, lock the Lock Nut.
- (4) Apply a quantity of lock tight paint to the Thrust Screws.

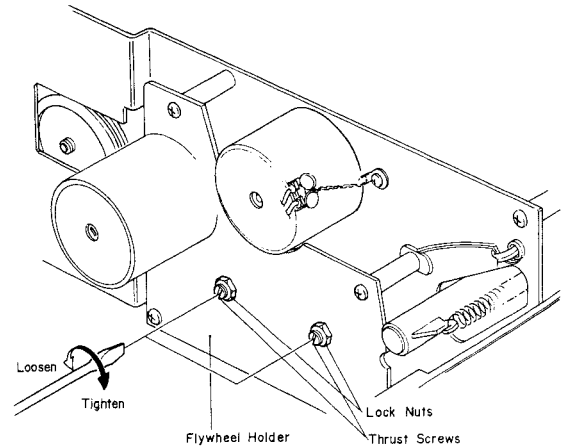


Fig. 4.19

4.12. Eject Wire Adjustment

- (1) Referring to Fig. 4.20, insert a 1.5 mm spacer between the Eject Arm and Eject Stopper by turning the Eject Arm in the illustrated direction, then set the N-480Z in Playback mode.
- (2) With pushing the Eject Arm by hand, loosen the screw and then pull the Eject Wire in the direction of the arrow until it stops as shown in Fig. 4.21.
- (3) Tighten the screw, then apply a quantity of lock tight paint.

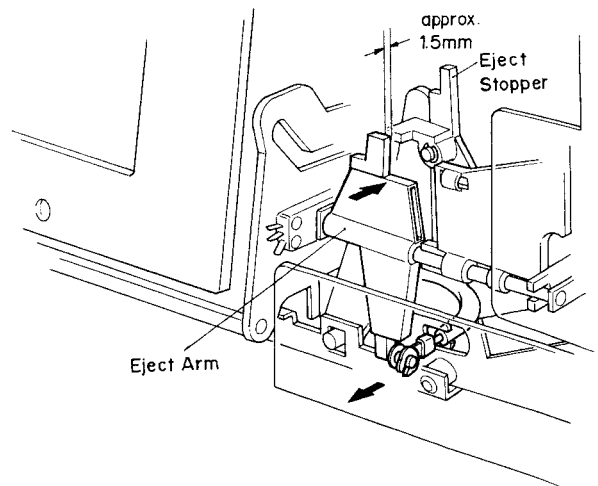


Fig. 4.20

4.13. Lubrication

N-480Z is a lubrication-free cassette deck except when parts are replaced. Apply the following lubricant for each replaced part:

- (1) LAUNA #100
 - Capstan Shaft
 - Pressure Roller Shaft
 - Thrust Cap
- (2) FLOIL GB-TS-1
 - Reel Hub Shaft
 - Thrust portion on the Capstan Shaft

FLOIL GB-TS-1, made by Kanto Chemicals Co., Ltd. in Japan.

We suggest that you use the above or equivalent type. If unavailable please contact Kanto Chemicals Co., Ltd., 2-7 Kanda Suda-cho Chiyoda-ku, Tokyo 101 Japan.
- (3) Silicon Oil #3000 CST
 - Air Damper Piston

Note: Excessive lubrication may cause defective damper action as the 0.2ϕ hole at the end of the cylinder may be filled with oil.

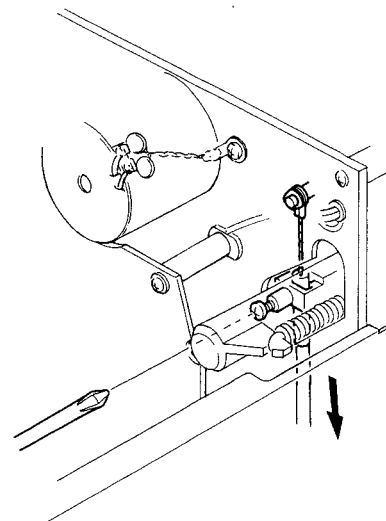


Fig. 4.21

5. PARTS LOCATION FOR ELECTRICAL ADJUSTMENT

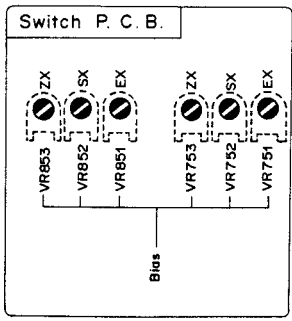
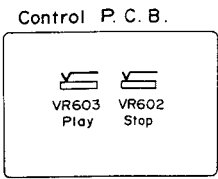
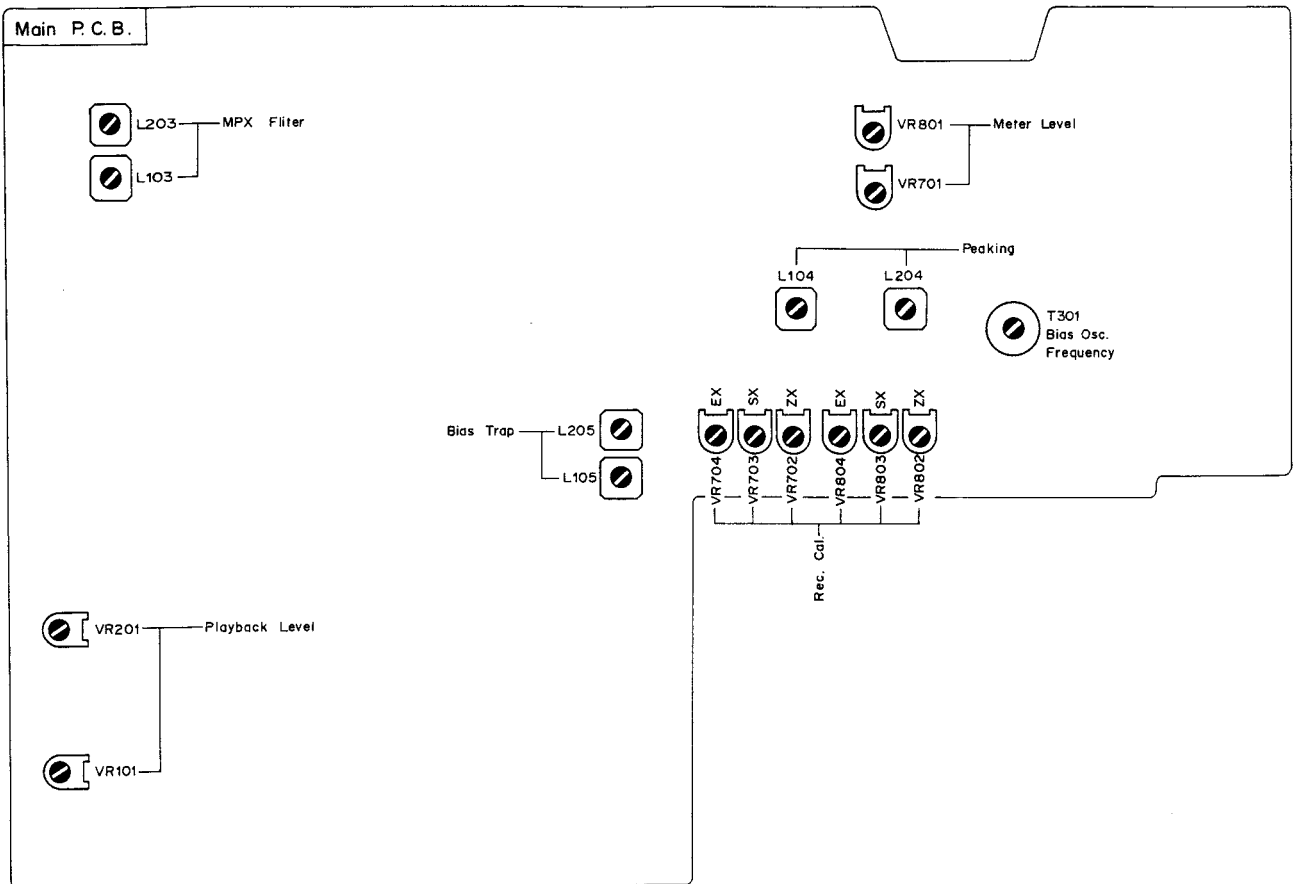


Fig. 5

6. ELECTRICAL ADJUSTMENTS AND MEASUREMENTS

6.1. Adjustment and Measurement Instructions

Note: Electrical adjustment should be performed after mechanical adjustment is completed.

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
1	Tape Speed Adjustment	3 kHz Speed and Wow/Flutter Tape (DA09006A)	Frequency Counter to Output Jacks	Playback Eq. SW – 70 μ s	Capstan Motor Governor P.C.B. VR501	Adjust VR501 to obtain 3 kHz \pm 0.5%. (VR501 is incorporated in the capstan motor.)
2	Meter Level Calibration	400 Hz to Input Jacks	VTVM to TP101, TP201 on Main P.C.B.	Record, Pause	Main P.C.B. VR701, VR801	1. Feed in 400 Hz, then adjust the Input Level controls to obtain 90 mV -0.4 dB on the VTVM. 2. Adjust VR701 (VR801) so that the 0 dB segment of the level meter starts illuminating. 3. Adjust the Input Level controls to obtain 90 mV on the VTVM, then decrease the generator output level by 20 dB. 4. Check to insure that the segment for -20 dB illuminates.
3	MPX Filter Adjustment	19 kHz \pm 100 Hz to Input Jacks	VTVM to Output Jacks	Record, Pause MPX SW – OUT/IN	Main P.C.B. L103, L203	1. Adjust the Input Level controls to obtain 600 mV on the VTVM. 2. Set the MPX Filter switch to IN, then adjust L103 (L203) to obtain the minimum reading on the VTVM (minimum reading will be less than -30 dB).
4	Record/Playback Head Track Alignment	1 kHz Track Alignment Tape (DA09007A)	VTVM to Output Jacks	Playback ZX SW – OUT SX/EX SW – SX Eq. SW – 70 μ s Dolby NR SW – OFF MPX SW – OUT	Height Gear	Adjust the Height Gear to obtain minimum readings of both channels on the VTVM. Refer to "Record/Playback Head Height Adjustment and Azimuth Alignment" in item 4.8.
5	Record/Playback Head Azimuth Alignment	15 kHz Azimuth Tape (DA09004A)	VTVM to Output Jacks	Same as above	Record/Playback Head Azimuth Alignment Screw	Adjust the Record/Playback Head Azimuth Alignment Screw to obtain maximum readings of both channels on the VTVM. Refer to "Record/Playback Head Height Adjustment and Azimuth Alignment" in item 4.8. Note: Repeat steps 4 and 5 one or two times to obtain optimum performance.
6	Playback Level Calibration	400 Hz Level Tape (DA09005A)	VTVM to TP101, TP201 on Main P.C.B.	Same as above	Main P.C.B. VR101, VR201	Adjust VR101 (VR201) to obtain 90 mV on the VTVM.
7	Playback Frequency Response Adjustment	400 Hz Level Tape (DA09005A) 10 kHz PB Frequency Tape (DA09003A) 15 kHz PB Frequency Tape (DA09002A) 20 kHz PB Frequency Tape (DA09001A)	VTVM to Output Jacks	Same as above	Main P.C.B. R111, R211 R110, R210	1. Load a 400 Hz level tape and play it back. 2. Load 10 kHz, 15 kHz and 20 kHz PB frequency response tapes and adjust the record/playback head azimuth to obtain maximum levels on the VTVM with each tape. 3. Read the maximum levels with each tape and check to insure that the levels against the 400 Hz level tape are within the following ranges. If not, obtain satisfactory results by shorting R111 (R211) or R110 (R210). 10 kHz (-20 dB) 0 dB to $+2$ dB 15 kHz (-20 dB) 0 dB to $+3$ dB 20 kHz (-20 dB) 0 dB to $+4$ dB Check to insure that the difference in level between 10 kHz (-20 dB) and 20 kHz (-20 dB) is less than 2 dB. 4. Conduct step 5 "Record/Playback Head Azimuth Alignment". 5. If above is not sufficient, refer to "Playback Frequency Response Adjustment" in item 6.2.

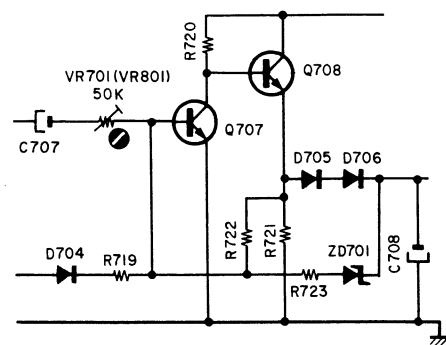


Fig. 6.1
2. Meter Level

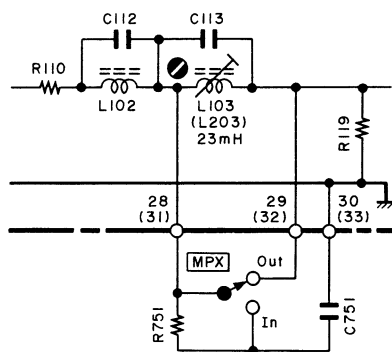


Fig. 6.2
3. MPX Filter

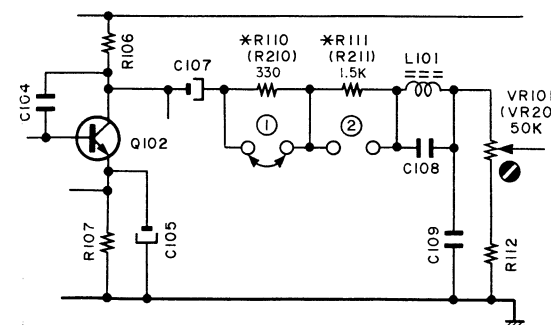


Fig. 6.3
6. Playback Level
7. Playback Frequency Response

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
8	Bias Oscillation Frequency and Erase Current Adjustment	External 0.1 Ω Resistor in series to Erase Head	VTVM and Frequency Counter across the 0.1 Ω Resistor	Record, Pause ZX SW – IN Eq. SW – 70 μ s Dolby NR SW – OFF MPX SW – OUT	Main P.C.B. T301 R307, R308	<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Adjust T301 to obtain 105 kHz on the frequency counter. 3. Check the erase current by the VTVM. Erase current will be in a range of 310 mA to 400 mA (typically approx. 350 mA). If erase current is not sufficient, increase it by shorting R307 or R308. 4. After completion of the erase current adjustment, re-check the bias oscillation frequency.
9	Record Amplifier Equalizer Adjustment	21 kHz (–20 dB) to Input Jacks	VTVM to CN3-1, CN3-3 on Main P.C.B.	Same as above	Main P.C.B. L104, L204	<ol style="list-style-type: none"> 1. Remove the bias-cut-jumper from the dip side of the Main P.C.B. 2. Adjust L104 (L204) to obtain peak reading at 21 kHz on the VTVM. 3. Re-solder the bias-cut-jumper.
10	Bias Trap Adjustment	Remove input signals	Same as above	Same as above	Main P.C.B. L105, L205	<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Adjust L105 (L205) to obtain the maximum reading on the VTVM.
11	Record Level Calibration and Recording Bias Current Adjustment	400 Hz (0 dB), 400 Hz (–20 dB), 10 kHz (–20 dB) and 18 kHz (–20 dB) to Input Jacks	VTVM to TP101, TP201 on Main P.C.B. and VTVM to CN3-1, CN3-3 on Main P.C.B. and VTVM and Distortion Meter to Output Jacks	Record and Playback: ZX SW – IN/OUT SX/EX SW – SX/EX Eq. SW – 70 μ s (ZX/SX) 120 μ s (EX) Dolby NR SW – ON, C-Type/ B-Type/ OFF MPX SW – OUT	Main P.C.B. (Record Level) ZX: VR702, VR802 SX: VR703, VR803 EX: VR704, VR804 Switch P.C.B. (Bias Current) ZX: VR753, VR853 SX: VR752, VR852 EX: VR751, VR851	<p>Adjustment should be made in the order of ZX, SX and EX.</p> <ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Set the Dolby NR switch to C-Type. 3. Connect the VTVM to TP101 (TP201) on the Main P.C.B. 4. Set the N-480Z in Record/Pause mode. 5. Feed in 400 Hz, then adjust the Input Level controls to obtain 90 mV (0 dB) on the VTVM. 6. Load a reference ZX tape (DA09037A), reference SX tape (DA09025A) and reference EXII tape (DA09066A). 7. Adjust Record Cal. VR702 (VR802) for ZX, VR703 (VR803) for SX and VR704 (VR804) for EXII to center position. 8. Connect the VTVM to CN3-1 (CN3-3) on the Main P.C.B. Adjust Bias VR753 (VR853) for ZX, VR752 (VR852) for SX and VR751 (VR851) for EXII to obtain the following bias current in Record/Pause mode (the VTVM is connected across a 10-ohm resistor). ZX: approx. 1 mA SX: approx. 0.6 mA EXII: approx. 0.3 mA 9. Connect the VTVM to the Output Jacks. 10. Feed in 400 Hz (–20 dB) and 18 kHz (–20 dB), then record, rewind and play them back. Adjust Bias VR753 (VR853) for ZX, VR752 (VR852) for SX and VR751 (VR851) for EXII to obtain the same playback levels at 400 Hz (–20 dB) and 18 kHz (–20 dB) on the VTVM. 11. Feed in 400 Hz (0 dB), then record, rewind and play it back. Adjust Record Cal. VR702 (VR802) for ZX, VR703 (VR803) for SX and VR704 (VR804) for EXII to obtain 0 dB on the VTVM. 12. Repeat above 10 and 11 two or three times to obtain optimum performance. 13. Set the Dolby NR switch to OFF. 14. Feed in 400 Hz (–20 dB), 10 kHz (–20 dB) and 18 kHz (–20 dB), then record, rewind and play them back. Check to insure that the playback levels are within –20 dB \pm3 dB against the levels in Dolby NR C-Type. 15. Set the Dolby NR switch to B-Type. 16. Feed in 10 kHz (–20 dB) and 18 kHz (–20 dB), then record, rewind and play them back. Check to insure that the levels are within –20 dB \pm2 dB against the levels in Dolby NR OFF. 17. Check to insure whether the total harmonic distortion is less than 1.0% for ZX tape and 1.2% for SX and EXII tapes. 18. If above is not sufficient, repeat 10 to 17 till satisfactory results are obtained.

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
12	Overall Frequency Response Adjustment	400 Hz (0 dB) and 20 Hz to 18 kHz (-20 dB) to Input Jacks	VTVM to Output Jacks	Record and Playback ZX SW - IN/OUT SX/EX SW - SX/EX Eq. SW - 70 μs (ZX/SX) 120 μs (EX) Dolby NR SW - OFF MPX SW - OUT	Main P.C.B. L104, L204	<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Set the N-480Z in Record/Pause mode. 3. Feed in 400 Hz, then set the Input Level controls to obtain 0 dB (600 mV) on the VTVM. 4. Decrease the generator output control by 20 dB. 5. Feed in 20 Hz to 18 kHz (-20 dB) and record and play it back, then check to insure whether the output levels are within -20 dB ±4 dB. 6. If above is not sufficient, adjust L104 (L204) to obtain approx. -20 dB on the VTVM, then conduct step 13 "Record Level Calibration and Recording Bias Current Adjustment". 7. If above is not sufficient, precise re-adjustment of step 7 "Playback Frequency Response", replacement of Record/Playback Head or check on item 4.9 "Tape Travelling Adjustment" will be required.
13	Crosstalk Measurement	1 kHz to Input Jacks	1 kHz Band Pass Filter and VTVM to Output Jacks	Record and Playback ZX SW - OUT SX/EX SW - SX Eq. SW - 70 μs Dolby NR SW - OFF MPX SW - OUT		<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Erase the tape with bulk eraser. 3. Adjust the Input Level controls to obtain 0 dB on the VTVM, and record the signals on the reference SX tape (DA09025A). 4. Turn the cassette tape the other way round and play it back. 5. Measure the difference between 3 and 4.
14	Channel Separation Measurement	1 kHz to Input Jacks	Same as above	Same as above		<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Erase the tape with bulk eraser. 3. Adjust L ch (R ch) Input Level control to obtain 0 dB on the VTVM, and close R ch (L ch) Input Level control. 4. Record and play it back, then measure the R ch (L ch) level.
15	Erase Measurement	100 Hz to Input Jacks	100 Hz Band Pass Filter and VTVM to Output Jacks	Record and Playback ZX SW - IN Eq. SW - 70 μs Dolby NR SW - OFF MPX SW - OUT		<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Erase the Tape with bulk eraser. 3. Adjust the Input Level controls to obtain 0 dB on the VTVM, and record the signals on the reference ZX tape (DA09037A). 4. Rewind the tape, close Input Level controls, and then record again. 5. Rewind the tape, play it back, and then measure the difference between 3 and 4.

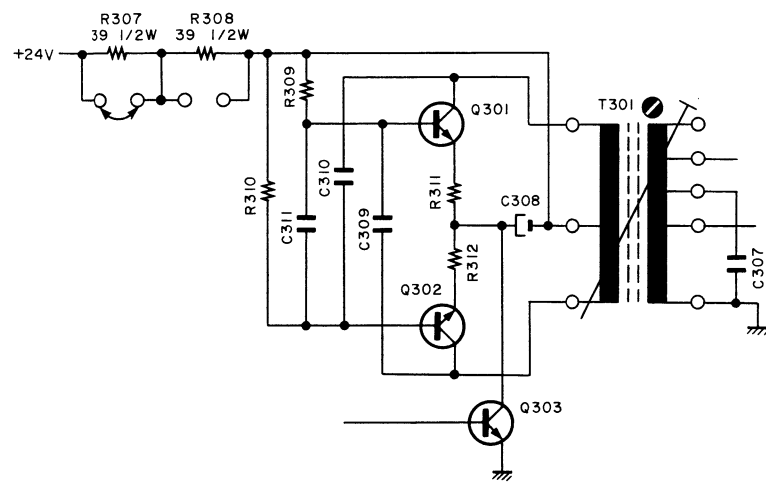


Fig. 6.4
8. Bias Oscillation Frequency and Erase Current

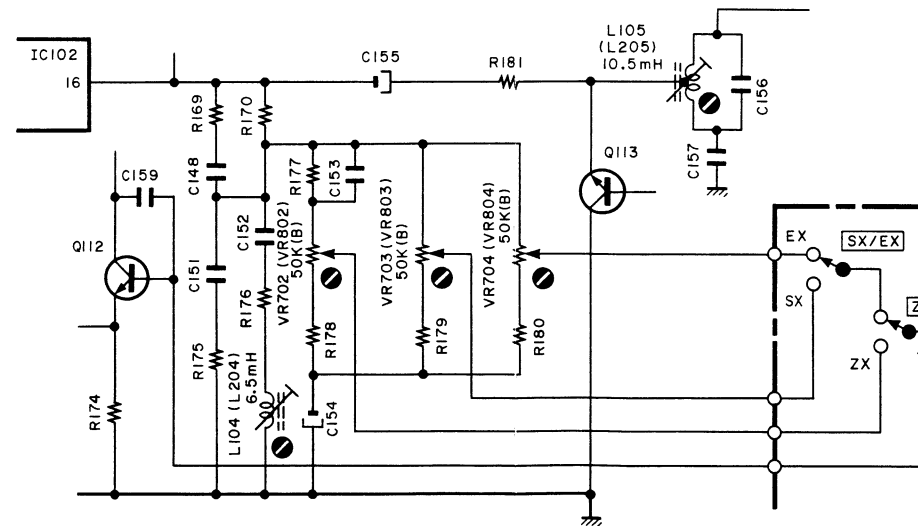


Fig. 6.5
9. Record Amplifier Equalizer
10. Bias Trap
11. Record Level
12. Overall Frequency Response

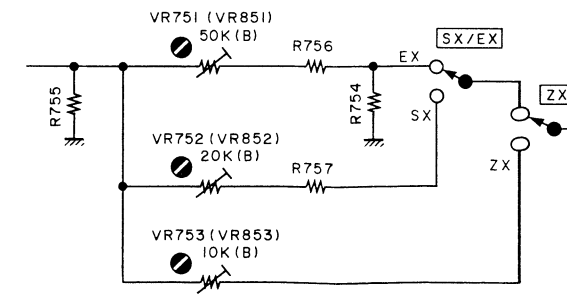


Fig. 6.6
11. Recording Bias Current

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
16	Signal to Noise Ratio Measurement	400 Hz to Input Jacks	IHF-A Curve Filter, Distortion Meter and VTVM to Output Jacks	Record and Playback ZX SW – IN Eq. SW – 70 μ s Dolby NR SW – ON B-Type/C-Type MPX SW – OUT		<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Set the Dolby NR switch to B-Type/C-Type. 3. Feed in 400 Hz and record, and play it back. 4. Adjust the Input Level controls to obtain 3% total harmonic distortion in playback mode. 5. Close the Input Level controls then record. 6. After rewind, play back and check the output level difference between 4 and 5. <p>Note: The filter of IHF-A curve shall be used in the measurements.</p>
17	Total Harmonic Distortion Measurement	400 Hz to Input Jacks	VTVM and Distortion Meter to Output Jacks	Record and Playback ZX SW – IN/OUT SX/EX SW – SX/EX Eq. SW – 70 μ s (ZX, SX) 120 μ s (EX) Dolby NR SW – OFF MPX SW – OUT		<ol style="list-style-type: none"> 1. Set the Bias Tune Volume to center position. 2. Adjust the Input Level controls to obtain 0 dB on the VTVM. 3. Record and play it back. 4. Read the distortion meter and check to insure that the distortion is as follows: EXII 1.2% or less SX 1.2% or less ZX 1.0% or less
18	Wow/Flutter Measurement	3 kHz Speed and Wow/Flutter Tape (DA09006A)	Wow/Flutter Meter to Output Jacks	Playback Eq. SW – 70 μ s		Play back and read the wow/flutter meter.

6.2. Playback Frequency Response Adjustment

Fig. 6.7 shows a playback equalization curve and Fig. 6.8 is the playback amp. circuit for adjustment.

(1) Level Adjustment (for middle frequency response)

This adjustment will be required if playback level is not sufficient when 10 kHz PB frequency response tape is played back as referred to step 7 in 6.1 "Adjustment and Measurement Instructions".

Playback equalization level is varied by the modification of R108 (R208) and R109 (R209) on the Main P.C.B. Following are the details for level modifications:

- Approx. +1 dB R108 (R208): 4.3K
R109 (R209): 3.0K
- 0 dB R108 (R208): 3.9K
R109 (R209): 2.7K
- Approx. -1 dB R108 (R208): 3.6K
R109 (R209): 2.4K

(2) Peaking Adjustment (for high frequency response)

This adjustment will be required if playback level is not sufficient when 20 kHz PB frequency response tape is played back as referred to step 7 in 6.1 "Adjustment and Measurement Instructions".

Peaking portion compensates the gap loss of the playback head. Peaking level is varied by the short circuit of R110 (R210) or R111 (R211) as illustrated in Fig. 6.7.

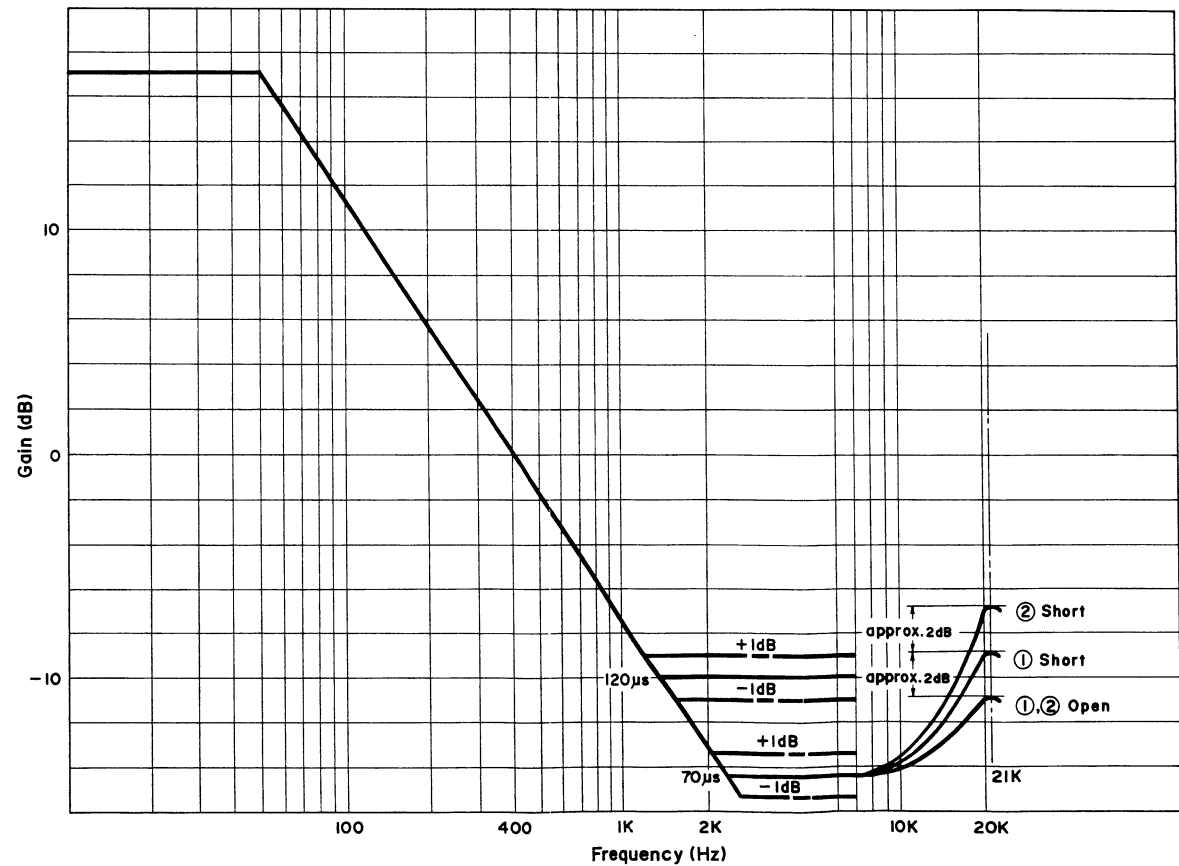


Fig. 6.7 Playback Equalization Curve

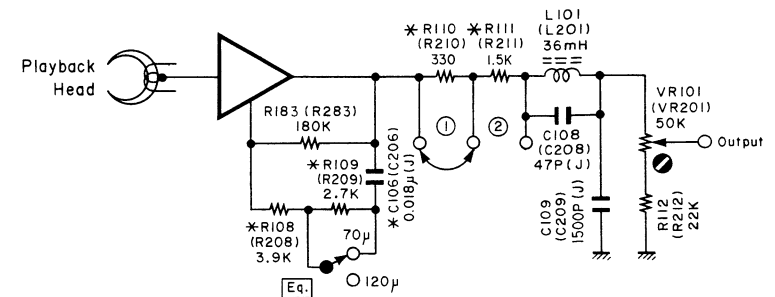


Fig. 6.8 Playback Amp.

6.3. Dolby NR Circuit Check

Dolby NR circuit incorporates a Dolby NR IC (μ A7300-PC) which has no adjustment point.

Perform the following checks and make sure that the IC operates accurately, i.e. accuracy of frequency response through IC.

6.3.1. Dolby NR B-Type Circuit Check

(1) Playback Dolby NR Circuit

Signal Source: 1.4 kHz to negative side of C115 (C215) on Main P.C.B. (Positive side is connected to IC101-9 (IC201-9)).

Output Connection: VTVM to test point TP101 (TP201) on Main P.C.B.

Mode: Stop
Dolby NR SW – ON, B-Type/
OFF

- (a) Connect a VTVM to TP101 (TP201) on the Main P.C.B.
- (b) Set the Dolby NR switch to B-Type. Feed in 1.4 kHz and adjust the generator output control to obtain 9 mV on the VTVM.
- (c) Set the Dolby NR switch to OFF. Check to insure that the reading is +3.2 dB \pm 1.5 dB on the VTVM.

(2) Record Dolby NR Circuit

Signal Source: 1.4 kHz to Input Jacks
Output Connection: VTVM to test point TP101 (TP201) and IC102-14 (IC202-14) on Main P.C.B.

Mode: Record/Pause
Dolby NR SW – ON, B-Type/
OFF

- (a) Connect a VTVM to TP101 (TP201) on the Main P.C.B.
- (b) Feed in 1.4 kHz and adjust the Input level controls to obtain 9 mV/2.85 mV on the VTVM.
- (c) Remove the VTVM from TP101 (TP201) and reconnect it to IC102-14 (IC202-14).
- (d) Check to insure that the reading at IC102-14 (IC202-14) corresponds to the following with Dolby NR switch OFF and B-Type.

Input Level at TP101 (TP201)	Level at IC102-14 (IC202-14)	
	Dolby NR OFF	Dolby NR B-Type
9 mV	0 dB	+3.2 dB \pm 1.5 dB
2.85 mV	0 dB	+8.2 dB \pm 1.5 dB

6.3.2. Dolby NR C-Type Circuit Check

(1) Playback Dolby NR Circuit

Signal Source: 1.4 kHz to negative side of C115 (C215) on Main P.C.B. (Positive side is connected to IC101-9 (IC201-9)).

Output Connection: VTVM to test point TP101 (TP201) on Main P.C.B.

Mode: Stop
Dolby NR SW – ON, C-Type/
OFF

- (a) Connect a VTVM to TP101 (TP201) on the Main P.C.B.
- (b) Set the Dolby NR switch to C-Type. Feed in 1.4 kHz and adjust the generator output control to obtain 9 mV on the VTVM.
- (c) Set the Dolby NR switch to OFF. Check to insure that the reading is +6.5 dB \pm 1.5 dB on the VTVM.

(2) Record Dolby NR Circuit

Signal Source: 1.4 kHz to Input Jacks
Output Connection: VTVM to test point TP101 (TP201) and IC102-14 (IC202-14) on Main P.C.B.

Mode: Record/Pause
Dolby NR SW – ON, C-Type/
OFF

- (a) Connect a VTVM to TP101 (TP201) on the Main P.C.B.
- (b) Feed in 1.4 kHz and adjust the Input level controls to obtain 9 mV/2.85 mV on the VTVM.
- (c) Remove the VTVM from TP101 (TP201) and reconnect it to IC102-14 (IC202-14).
- (d) Check to insure that the reading at IC102-14 (IC202-14) corresponds to the following with Dolby NR switch OFF and C-Type.

Input Level at TP101 (TP201)	Level at IC102-14 (IC202-14)	
	Dolby NR OFF	Dolby NR C-Type
9 mV	0 dB	+6.5 dB \pm 1.5 dB
2.85 mV	0 dB	+11.4 dB \pm 1.5 dB

7. MOUNTING DIAGRAMS AND PARTS LIST

Note: Mounting diagram shows a dip side view of the printed circuit board.

7.1. Main P.C.B. Ass'y

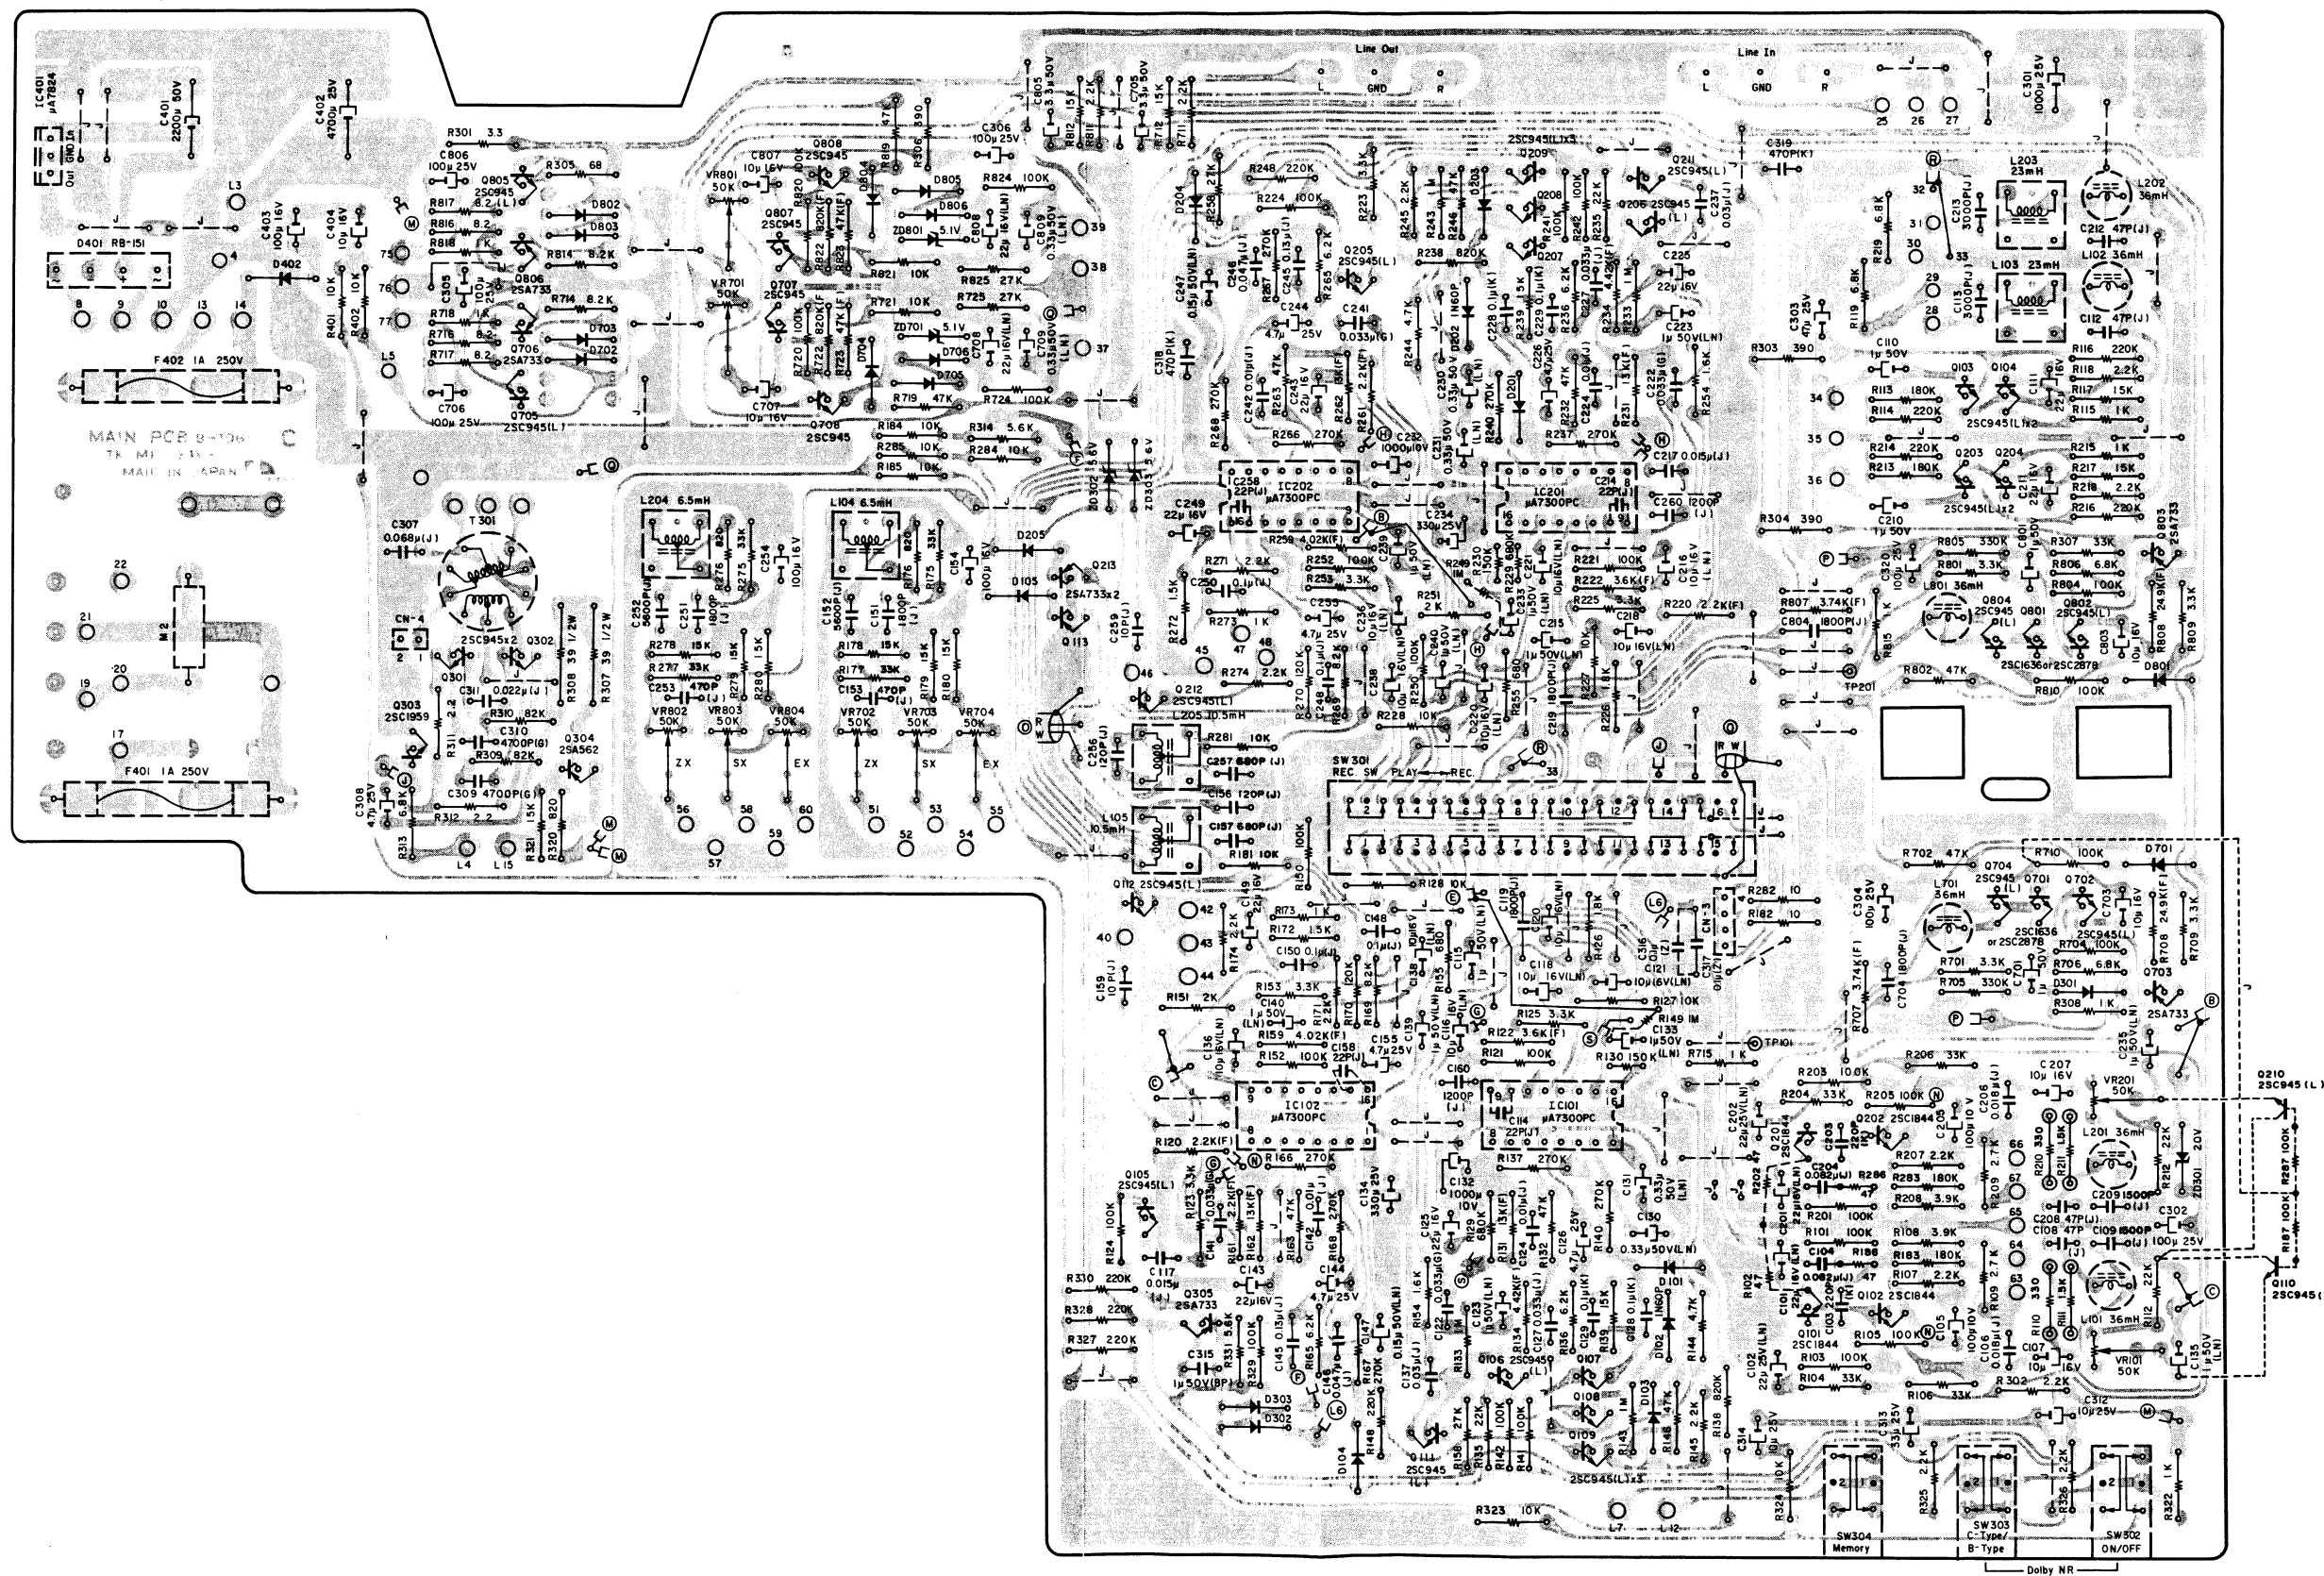


Fig. 7.1.1 Serial No.: A30811680 –
Serial No.: A30910200 –

Note: Diode is 1SS53 unless otherwise specified.

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	
IC101,102 201,202 Q105-109 111 205-209 211 Q305 ZD302,303 D101,103 104,201 203,204 D102,202 R120,161 220,261 R121,124 141,142 150,152 221,224 241,242 250,252 329 R122,222 R123,125 153,223 225,253 R126,226 R127,128 227,228 323,324 R129,229 R130,230 R131,162 231,262 R132,146 163,232 246,263 R133,143 149,233 243,249 R134,234 R135,235 R136,165 236,265 R137,140 166,167 168,237 240,266 267,268 R138,238 R139,239 R144,244 R145,245 325,326	BA04320A	Main P.C.B. Ass'y (U.S.A. & Canada)	R148,248	OB05625A	Carbon Resistor 220K ERD-25T J	R102,186	OB01706A	Carbon Resistor 47 ERD-25T J	C316,317	OB09292A	Ceramic Capacitor 0.1μ 50V Z	ZD701,801	OB06058A	Zener Diode	
	BA04319A	Main P.C.B. Ass'y (Japan)	327,328			202,286						D704,705	OB06181A	Silicon Diode	
	BA04351A	Main P.C.B. Ass'y (220V Class 2)	330			R104,106	OB05509A	Carbon Resistor 33K ERD-25T J		-- Line Amp. --		706,804			
	BA04352A	Main P.C.B. Ass'y (UK & Australia)	R151,251	OB09301A	Carbon Resistor 2K ERD-25T J	204,206						805,806			
	BA04353A	Main P.C.B. Ass'y (Others)	R154,254	OB09565A	Carbon Resistor 1.6K ERD-25T J	R105,205	OB09330A	Carbon Resistor 100K ERD-25TS J	Q103,104	OB01872A	Transistor 2SC945 (L)	VR701,801	OB07237A	Semi-fixed Volume	
		Serial Nos.: A30805969 - A30811679	R155,255	OB05794A	Carbon Resistor 680 ERD-25T J	R107,207	OB05622A	Carbon Resistor 2.2K ERD-25T J	203,204			R306	OB09383A	Fail Safe Type Resistor	
		Serial Nos.: A30902974 - A30910199	R158,258	OB05743A	Carbon Resistor 27K ERD-25T J	302			702,704			R719,819	OB05641A	Carbon Resistor	
	-- Dolby NR --		R159,259	OB09423A	Metal Film Resistor 4.02K SN14K2E F	R108,208	OB05675A	Carbon Resistor 3.9K ERD-25T J	705,802			820,824	OB01889A	Carbon Resistor	
			R322	OB01857A	Carbon Resistor 1K ERD-25T J	R109,209	OB05629A	Carbon Resistor 2.7K ERD-25T J	804,805	Q701,801	OB06299A	Transistor 2SC2878 (2SC1636)	R721,821	OB01888A	Carbon Resistor
			R331	OB01887A	Carbon Resistor 5.6K ERD-25T J	R110,210	OB05577A	Carbon Resistor 330 ERD-25T J	803,806	Q703,706	OB06013A	Transistor 2SA733	R722,822	OB09197A	Metal Film Resistor
			C114,158	OB09279A	Ceramic Capacitor 22P 50V J	R111,211	OB05698A	Carbon Resistor 1.5K ERD-25T J	803,806			R723,823	OB09451A	Metal Film Resistor	
			214,258			R112,212	OB05615A	Carbon Resistor 22K ERD-25T J	D301,701	OB06181A	Silicon Diode 1SS53	R725,825	OB05743A	Carbon Resistor	
			C115,123	OB09223A	Electrolytic Capacitor 1μ 50V (LN)	R182,282	OB05936A	Carbon Resistor 10 ERD-25T J	702,703			C306	OB01272A	Electrolytic Capacitor	
			133,135			R183,283	OB05640A	Carbon Resistor 180K ERD-25T J	801,802			C707,807	OB01412A	Electrolytic Capacitor	
			139,140			C101,201	OB09137A	Electrolytic Capacitor 22μ 16V (LN)	803			C708,808	OB09137A	Electrolytic Capacitor	
			215,223			C102,202	OB09376A	Electrolytic Capacitor 22μ 25V (LN)	L102,202	OB03919B	Inductor 36mH	C709,809	OB09385A	Electrolytic Capacitor	
			233,235			C103,203	OB09283A	Ceramic Capacitor 220P 50V K	701,801				-- Bias Osc. --		
			239,240			C104,204	OB09594A	Mylar Capacitor 0.082μ 50V J	L103,203	OB03563A	19 kHz Coil 23mH				
			C116,118	OB09148A	Electrolytic Capacitor 10μ 16V (LN)	C105,205	OB05885A	Electrolytic Capacitor 100μ 10V	R113,213	OB05640A	Carbon Resistor 180K ERD-25T J	Q301,302	OB06100A	Transistor	
			120,121			C106,206	OB05832A	Mylar Capacitor 0.018μ 50V J	R114,116	OB05625A	Carbon Resistor 220K ERD-25T J	Q303	OB06179A	Transistor	
			136,138			C107,207	OB01412A	Electrolytic Capacitor 10μ 16V	214,216			Q304	OB06202A	Transistor	
			216,218			C108,208	OB09242A	Mica Capacitor 47P 50V J	R115,215	OB01857A	Carbon Resistor 1K ERD-25T J	T301	OB06613A	Osc. Coil	
			220,221			C109,209	OB05653A	Mylar Capacitor 1500P 50V J	308,715			R307,308	OB09296A	Fail Safe Type Resistor	
			236,238			C302	OB01272A	Electrolytic Capacitor 100μ 25V	718,815			R309,310	OB05668A	Carbon Resistor	
			C117,217	OB05557A	Mylar Capacitor 0.015μ 50V J		-- Rec. Amp. --		818			R311,312	OB09212A	Fail Safe Type Resistor	
			C119,219	OB09590A	PP Capacitor 1800P 100V J	Q112,212	OB01872A	Transistor 2SC945 (L)	R117,217	OB01683A	Carbon Resistor 15K ERD-25T J	R313	OB01682A	Carbon Resistor	
			C122,141	OB09240A	PP Capacitor 0.033μ 100V G	Q113,213	OB06013A	Transistor 2SA733	R118,218	OB05622A	Carbon Resistor 2.2K ERD-25T J	R320	OB01680A	Carbon Resistor	
			222,241			D105,205	OB06181A	Silicon Diode 1SS53	711,811			R321	OB01683A	Carbon Resistor	
			C124,142	OB09591A	PP Capacitor 0.01μ 100V J	L104,105	OB00068A	Trap Coil 10.5mH	R119,219	OB01682A	Carbon Resistor 6.8K ERD-25T J	C307	OB09254A	PP Capacitor	
			224,242			204,205			706,806			C308	OB01402A	Electrolytic Capacitor	
			C125,143	OB01862A	Electrolytic Capacitor 22μ 16V	VR702,703	OB07237A	Semi-fixed Volume 50K	R303,304	OB09383A	Fail Safe Type Resistor 390 RDF-25S J	C309,310	OB09191A	PP Capacitor	
			225,243			704,802			R305	OB09306A	Fail Safe Type Resistor 68 RDF-25S J	C311	OB09405A	PP Capacitor	
			C127,227	OB05583A	Mylar Capacitor 0.033μ 50V J	803,804			R307	OB05509A	Carbon Resistor 33K ERD-25T J		OB09405A	PP Capacitor	
			C128,129	OB01603A	Mylar Capacitor 0.1μ 50V K				R701,709	OB01681A	Carbon Resistor 3.3K ERD-25T J		0J04417A	Osc. Coil	
			228,229			R169,269	OB01856A	Carbon Resistor 8.2K ERD-25T J	801,809				-- Power Supply --		
			C130,131	OB09385A	Electrolytic Capacitor 0.33μ 50V (LN)	R170,270	OB05621A	Carbon Resistor 120K ERD-25T J	R702,802	OB05641A	Carbon Resistor 47K ERD-25T J	IC401	OB06237A	Regulator	
			230,231			R171,174	OB05622A	Carbon Resistor 2.2K ERD-25T J	R704,710	OB01889A	Carbon Resistor 100K ERD-25T J	D401	OB06183A	Diode Bridge	
			C132,232	OB05852A	Electrolytic Capacitor 1000μ 10V	271,274			804,810			D402	OB06181A	Silicon Diode	
			C134,234	OB05793A	Electrolytic Capacitor 330μ 25V	R172,272	OB05698A	Carbon Resistor 1.5K ERD-25T J	R705,805	OB05627A	Carbon Resistor 330K ERD-25T J	R301	OB09339A	Fail Safe Type Resistor	
			C137,237	OB09594A	Mylar Capacitor 0.03μ 50V J	R173,273	OB01857A	Carbon Resistor 1K ERD-25T J	R707,807	OB09573A	Metal Film Resistor 3.74K SN14K2E F	R401,402	OB01888A	Carbon Resistor	
			C145,245	OB09566A	Mylar Capacitor 0.13μ 50V J	R175,177	OB05509A	Carbon Resistor 33K ERD-25T J	R708,808	OB09587A	Metal Film Resistor 24.9K SN14K2E F	C301	OB01870A	Electrolytic Capacitor	
			C146,246	OB05796A	Mylar Capacitor 0.047μ 50V J	275,277			R714,814	OB01856A	Carbon Resistor 8.2K ERD-25T J	C319	OB09286A	Ceramic Capacitor	
			C147,247	OB09570A	Electrolytic Capacitor 0.15μ 50V (LN)	R176,276	OB01680A	Carbon Resistor 820 ERD-25T J	R716,717	OB09331A	Fail Safe Type Resistor 8.2RDF-25S J	C401	OB09336A	Electrolytic Capacitor	
			C160,260	OB05687A	Mylar Capacitor 1200P 50V J	R178,179	OB01683A	Carbon Resistor 15K ERD-25T J	816,817			C402	OB09250A	Electrolytic Capacitor	
			C312,314	OB01674A	Electrolytic Capacitor 10μ 25V	180,278			C110,210	OB01405A	Electrolytic Capacitor 1μ 50V	C403	OB01400A	Electrolytic Capacitor	
			C313	OB09251A	Electrolytic Capacitor 33μ 25V	279,280			701,801			C404	OB01412A	Electrolytic Capacitor	
			C315	OB09187A	Electrolytic Capacitor 1μ 50V (BP)	R181,184	OB01888A	Carbon Resistor 10K ERD-25T J	C111,211	OB01862A	Electrolytic Capacitor 22μ 16V		-- Miscellaneous --		
			C318	OB09286A	Ceramic Capacitor 470P 50V K	185,281			C112,212	OB09242A	Mica Capacitor 47P 50V J				
				OB08714A	IC Socket 16P (4 pcs.)	284,285			C113,213	OB09262A	PP Capacitor 3000P 100V J	F401,402	OB07961B	Main P.C. Fuse 1A (U.S.)	
				-- PB Eq. Amp. --					C303	OB01409A	Electrolytic Capacitor 47μ 25V		OB08374A	Fuse 1A (Japan)	
			Q101,102	OB06119A	Transistor 2SC1844	R314	OB01887A	Carbon Resistor 5.6K ERD-25T J	C304,305	OB01272A	Electrolytic Capacitor 100μ 25V				
			201,202			C148,150	OB01780A	Mylar Capacitor 0.1μ 50V J	320,706				F401,402	OB08686A	Fuse 1A (Japan)
			Q110,210	OB01872A	Transistor 2SC945 (L)	248,250			806						
			ZD301	OB06239A	Zener Diode 20V RD20EBB2	C149,249	OB01862A	Electrolytic Capacitor 22μ 16V	C703,803	OB01412A	Electrolytic Capacitor 10μ 16V	F401	OB08275A	Fuse T 1/2 (220V)	
			L101,201	OB03919B	Inductor 36mH	C151,251	OB01913A	Mylar Capacitor 1800P 50V J	C704,804	OB09590A	PP Capacitor 1800P 100V J				
			VR101,201	OB07237A	Semi-fixed Volume 50K	C152,252	OB05659A	Mylar Capacitor 5600P 50V J	C705,805	OB01863A	Electrolytic Capacitor 3.3μ 50V				
			R101,103	OB01889A	Carbon Resistor 100K ERD-25T J	C153,253	OB09270A	PP Capacitor 470P 100V J					F402	OB08457A	Fuse T 5C (220V)
			187,201			C154,254	OB01400A	Electrolytic Capacitor 100μ 16V							
			203,287			C155,255	OB01402A	Electrolytic Capacitor 4.7μ 25V							
						C156,256	OB09486A	Mica Capacitor 120P 50V J					M2	OB08342A	Spark Kill
						C157,257	OB09235A	PP Capacitor 680P 100V J	Q707,708	OB06100A	Transistor 2SC945 (A)				
						C159,259	OB09277A	Ceramic Capacitor 10P 50V J	807,808						

on	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
220K ERD-25T J	R102,186	OB01706A	Carbon Resistor 47 ERD-25T J	C316,317	OB09292A	Ceramic Capacitor 0.1μ 50V Z	ZD701,801	OB06058A	Zener Diode 5.1V YZ051	M2	OB08363A	Spark Killer (Japan)
	202,286						D704,705	OB06181A	Silicon Diode 1SS53	M2,3	OB08445A	Spark Killer (220V Class 2)
	R104,106	OB05509A	Carbon Resistor 33K ERD-25T J			-- Line Amp. --	706,804			M2	OB08240U	Spark Killer (UK, Australia & Others)
2K ERD-25T J	204,206						805,806				OB08654A	4P-T Post (1 pce.)
1.6K ERD-25T J	R105,205	OB09330A	Carbon Resistor 100K ERD-25T J	Q103,104	OB01872A	Transistor 2SC945 (L)	VR701,801	OB07237A	Semi-fixed Volume 50K		OB08656A	2P-T Post (1 pce.)
680 ERD-25T J				203,204			R306	OB09383A	Fail Safe Type Resistor 390 RDF-25S J		OB08675A	Pin Jack (1 pce.)
27K ERD-25T J	R107,207	OB05622A	Carbon Resistor 2.2K ERD-25T J	702,704			R719,819	OB05641A	Carbon Resistor 47K ERD-25T J		OB07303A	Push Switch (1 pce.)
4.02K SN14K2E F	302			705,802			R720,724	OB01889A	Carbon Resistor 100K ERD-25T J		OB08676A	Heat Sink (1 pce.)
1K ERD-25T J	R108,208	OB05675A	Carbon Resistor 3.9K ERD-25T J	804,805			820,824				OB07388A	Record Switch (1 pce.)
5.6K ERD-25T J	R109,209	OB05629A	Carbon Resistor 2.7K ERD-25T J	Q701,801	OB06299A	Transistor 2SC2878 (2SC1636)	R721,821	OB01888A	Carbon Resistor 10K ERD-25T J		OM03782A	Fuse Label 1Ax250V (U.S.A., Canada, Japan & Others) (2 pcs.)
22P 50V J	R110,210	OB05577A	Carbon Resistor 330 ERD-25T J	Q703,706	(OB06070A)		R722,822	OB09197A	Metal Film Resistor 820K SN14K2E F			
	R111,211	OB05698A	Carbon Resistor 1.5K ERD-25T J	803,806	OB06013A	Transistor 2SA733	R723,823	OB09451A	Metal Film Resistor 47K SN14K2E F		OM04082B	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.)
or 1μ 50V (LN)	R112,212	OB05615A	Carbon Resistor 22K ERD-25T J	D301,701	OB06181A	Silicon Diode 1SS53	R725,825	OB05743A	Carbon Resistor 27K ERD-25T J		OM04096C	Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.)
	R182,282	OB05936A	Carbon Resistor 10 ERD-25T J	702,703			C306	OB01272A	Electrolytic Capacitor 100μ 25V			
	R183,283	OB05640A	Carbon Resistor 180K ERD-25T J	801,802			C707,807	OB01412A	Electrolytic Capacitor 10μ 16V		OB08349A	Fuse Clip (220V Class 2, UK & Australia) (4 pcs.)
	C101,201	OB09137A	Electrolytic Capacitor 22μ 16V (LN)	803			C708,808	OB09137A	Electrolytic Capacitor 22μ 16V (LN)		OE00612A	Screw M3x6 Philips Pan Head (2A) (2 pcs.)
	C102,202	OB09376A	Electrolytic Capacitor 22μ 25V (LN)	L102,202	OB03919B	Inductor 36mH	C709,809	OB09385A	Electrolytic Capacitor 0.33μ 50V (LN)			
or 10μ 16V (LN)	C103,203	OB09283A	Ceramic Capacitor 220P 50V K	701,801					-- Bias Osc. --		OE00831A	BT Screw M3x10 Philips Pan Head (1 pce.)
	C104,204	OB09594A	Mylar Capacitor 0.082μ 50V J	L103,203	OB03563A	19 kHz Coil 23mH	Q301,302	OB06100A	Transistor 2SC945 (A)			
	C105,205	OB05885A	Electrolytic Capacitor 100μ 10V	R113,213	OB05640A	Carbon Resistor 180K ERD-25T J	Q303	OB06179A	Transistor 2SC1959 (Y)		OE00854A	BT Screw M2.6x4 Philips Pan Head (Chromate) (1 pce.)
	C106,206	OB05832A	Mylar Capacitor 0.018μ 50V J	R114,116	OB05625A	Carbon Resistor 220K ERD-25T J	Q304	OB06202A	Transistor 2SA562 (Y)		OE00857A	BT Screw M3x6 Philips Binding Head (2 pcs.)
	C107,207	OB01412A	Electrolytic Capacitor 10μ 16V	214,216			T301	OB06613A	Osc. Coil			
	C108,208	OB09242A	Mica Capacitor 47P 50V J	R115,215	OB01857A	Carbon Resistor 1K ERD-25T J	R307,308	OB09296A	Fail Safe Type Resistor 39 RSF-1/2B J		JA03856A	Record Head A Ass'y (1 pce.)
	C109,209	OB05653A	Mylar Capacitor 1500P 50V J	308,715			R309,310	OB05668A	Carbon Resistor 82K ERD-25T J		0J04396A	Record Holder B (1 pce.)
0.015μ 50V J	C302	OB01272A	Electrolytic Capacitor 100μ 25V	718,815			R311,312	OB09212A	Fail Safe Type Resistor 2.2RDF-25S J		0J04397A	Record Stud A (1 pce.)
1800P 100V J				818			R313	OB01682A	Carbon Resistor 6.8K ERD-25T J		0J04398A	Record Spring (1 pce.)
0.033μ 100V G		-- Rec. Amp. --		R117,217	OB01683A	Carbon Resistor 15K ERD-25T J	R320	OB01680A	Carbon Resistor 820 ERD-25T J		OB08570C	Record Spring Holder (1 pce.)
				712,812			R321	OB01683A	Carbon Resistor 15K ERD-25T J		OE00172A	Washer 3mm Toothed Lock (1 pce.)
0.01μ 100V J	Q112,212	OB01872A	Transistor 2SC945 (L)	R118,218	OB05622A	Carbon Resistor 2.2K ERD-25T J	R322	OB01683A	Carbon Resistor 15K ERD-25T J		OE00222A	E-Ring 2mm (1 pce.)
	Q113,213	OB06013A	Transistor 2SA733	711,811			C307	OB09254A	PP Capacitor 0.068μ 100V J		OE00581A	Spring Washer 3mm (1 pce.)
or 22μ 16V	D105,205	OB06181A	Silicon Diode 1SS53	R119,219	OB01682A	Carbon Resistor 6.8K ERD-25T J	C308	OB01402A	Electrolytic Capacitor 4.7μ 25V		OE00507A	Nut Hex. M3 (2 pcs.)
or 4.7μ 25V	302,303			706,806			C309,310	OB09191A	PP Capacitor 4700P 100V G			
	L104,105	OB00068A	Trap Coil 10.5mH	R303,304	OB09383A	Fail Safe Type Resistor 390 RDF-25S J	C311	OB09405A	PP Capacitor 0.022μ 100V J			
	204,205			R305	OB09306A	Fail Safe Type Resistor 68 RDF-25S J		0J04417A	Osc. Coil Shield Plate (1 pce.)			
0.033μ 50V J	VR702,703	OB07237A	Semi-fixed Volume 50K	R307	OB05509A	Carbon Resistor 33K ERD-25T J			-- Power Supply --			
0.1μ 50V K	704,802			R701,709	OB01681A	Carbon Resistor 3.3K ERD-25T J						
	803,804			801,809								
or 0.33μ 50V (LN)	R169,269	OB01856A	Carbon Resistor 8.2K ERD-25T J	R702,802	OB05641A	Carbon Resistor 47K ERD-25T J	IC401	OB06237A	Regulator IC +12V μA7824			
	R170,270	OB05621A	Carbon Resistor 120K ERD-25T J	R704,710	OB01889A	Carbon Resistor 100K ERD-25T J	D401	OB06183A	Diode Bridge RB151			
or 100μ 10V	R171,174	OB05622A	Carbon Resistor 2.2K ERD-25T J	804,810			D402	OB06181A	Silicon Diode 1SS53			
or 330μ 25V	271,274			R705,805	OB05627A	Carbon Resistor 330K ERD-25T J	R301	OB09339A	Fail Safe Type Resistor 3.3RDF-25S J			
0.03μ 50V J	R172,272	OB05698A	Carbon Resistor 1.5K ERD-25T J	R707,807	OB09573A	Metal Film Resistor 3.74K SN14K2E F	R401,402	OB01888A	Carbon Resistor 10K ERD-25T J			
0.13μ 50V J	R173,273	OB01857A	Carbon Resistor 1K ERD-25T J	R708,808	OB09587A	Metal Film Resistor 24.9K SN14K2E F	C301	OB01870A	Electrolytic Capacitor 1000μ 25V			
0.047μ 50V J	R175,177	OB05509A	Carbon Resistor 33K ERD-25T J	R714,814	OB01856A	Carbon Resistor 8.2K ERD-25T J	C319	OB09286A	Ceramic Capacitor 470P 50V K			
or 0.15μ 50V (LN)	275,277			R716,717	OB09331A	Fail Safe Type Resistor 8.2RDF-25S J	C401	OB09336A	Electrolytic Capacitor 2200μ 50V			
1200P 50V J	R176,276	OB01680A	Carbon Resistor 820 ERD-25T J	816,817			C402	OB09250A	Electrolytic Capacitor 4700P 25V			
or 10μ 25V	R178,179	OB01683A	Carbon Resistor 15K ERD-25T J	C110,210	OB01405A	Electrolytic Capacitor 1μ 50V	C403	OB01400A	Electrolytic Capacitor 100μ 16V			
or 33μ 25V	180,278			701,801			C404	OB01412A	Electrolytic Capacitor 10μ 16V			
or 1μ 50V (BP)	279,280			C111,211	OB01862A	Electrolytic Capacitor 22μ 16V			-- Miscellaneous --			
470P 50V K	R181,184	OB01888A	Carbon Resistor 10K ERD-25T J	C112,212	OB09242A	Mica Capacitor 47P 50V J						
(4 pcs.)	185,281			C113,213	OB09262A	PP Capacitor 3000P 100V J						
	284,285			C303	OB01409A	Electrolytic Capacitor 47μ 25V						
	R314	OB01887A	Carbon Resistor 5.6K ERD-25T J	C304,305	OB01272A	Electrolytic Capacitor 100μ 25V						
2SC1844	C148,150	OB01780A	Mylar Capacitor 0.1μ 50V J	320,706			F401,402	OB07961B	Main P.C.B.			
	248,250			806				OB08374A	Fuse 1A 250V (U.S.A., Canada & Others)			
	C149,249	OB01862A	Electrolytic Capacitor 22μ 16V	C703,803	OB01412A	Electrolytic Capacitor 10μ 16V	F401,402	OB08686A	Fuse 1A 250V (Japan)			
2SC945 (L)	C151,251	OB01913A	Mylar Capacitor 1800P 50V J	C704,804	OB09590A	PP Capacitor 1800P 100V J	F401	OB08275A	Fuse T 125mA 250V (220V Class 2, UK & Australia)			
RD20EBB2	C152,252	OB05659A	Mylar Capacitor 5600P 50V J	C705,805	OB01863A	Electrolytic Capacitor 3.3μ 50V	F402	OB08457A	Fuse T 500mA 250V (220V Class 2, UK & Australia)			
36mH	C153,253	OB09270A	PP Capacitor 470P 100V J				M2	OB08342A	Spark Killer (U.S.A. & Canada)			
50K	C154,254	OB01400A	Electrolytic Capacitor 100μ 16V									
100K ERD-25T J	C155,255	OB01402A	Electrolytic Capacitor 4.7μ 25V	Q707,708	OB06100A	Transistor 2SC945 (A)						
	C156,256	OB09486A	Mica Capacitor 120P 50V J	807,808								
	C157,257	OB09235A	PP Capacitor 680P 100V J									
	C159,259	OB09277A	Ceramic Capacitor 10P 50V J									

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	
	BA04320A	Main P.C.B. Ass'y (U.S.A. & Canada)	R148,248	OB05625A	Carbon Resistor 220K ERD-25T J	R102,186	OB01706A	Carbon Resistor 47 ERD-25T J	C316,317	OB09292A	Ceramic Capacitor 0.1μ 50V Z	ZD701,801	OB06058A	Zener Dio	
	BA04319A	Main P.C.B. Ass'y (Japan)	327,328			202,286						D704,705	OB06181A	Silicon Di	
	BA04351A	Main P.C.B. Ass'y (220V Class 2)	330			R104,106	OB05509A	Carbon Resistor 33K ERD-25T J		-- Line Amp. --		706,804			
	BA04352A	Main P.C.B. Ass'y (UK & Australia)	R151,251	OB09301A	Carbon Resistor 2K ERD-25T J	204,206						805,806			
	BA04353A	Main P.C.B. Ass'y (Others)	R154,254	OB09565A	Carbon Resistor 1.6K ERD-25T J	R105,205	OB09330A	Carbon Resistor 100K ERD-25TS J	Q103,104	OB01872A	Transistor 2SC945 (L)	VR701,801	OB07237A	Semi-fixe	
		Serial No.: A30811680 --	R155,255	OB05794A	Carbon Resistor 680 ERD-25T J	R107,207		(Noiseless)	203,204			R306	OB09383A	Fail Safe	
		Serial No.: A30910200 --	R158,258	OB05743A	Carbon Resistor 27K ERD-25T J	302	OB05622A	Carbon Resistor 2.2K ERD-25T J	702,704			R719,819	OB05641A	Carbon R	
	-- Dolby NR --		R159,259	OB09423A	Metal Film Resistor 4.02K SN14K2E F	R108,208			705,802			R720,724	OB01889A	Carbon R	
			R322	OB01857A	Carbon Resistor 1K ERD-25T J	R109,209	OB05675A	Carbon Resistor 3.9K ERD-25T J	804,805			820,824			
			R331	OB01887A	Carbon Resistor 5.6K ERD-25T J	R110,210	OB05629A	Carbon Resistor 2.7K ERD-25T J	Q701,801	OB06299A	Transistor 2SC2878	R721,821	OB01888A	Carbon R	
IC101,102	OB06200A	IC μA7300PC	C114,158	OB09279A	Ceramic Capacitor 22P 50V J	R110,210	OB05577A	Carbon Resistor 330 ERD-25T J	(OB06070A)	OB06013A	Transistor (2SC1636)	R722,822	OB09197A	Metal Filr	
201,202			214,258			R111,211	OB05698A	Carbon Resistor 1.5K ERD-25T J	Q703,706			R723,823	OB09451A	Metal Filr	
Q105-109	OB01872A	Transistor 2SC945 (L)	C115,123	OB09223A	Electrolytic Capacitor 1μ 50V (LN)	R112,212	OB05615A	Carbon Resistor 22K ERD-25T J	803,806			R725,825	OB05743A	Carbon R	
111		(12 pcs.)	133,135			R182,282	OB05936A	Carbon Resistor 10 ERD-25T J	D301,701	OB06181A	Silicon Diode 1SS53	C306	OB01272A	Electrolyt	
205-209			139,140			R183,283	OB05640A	Carbon Resistor 180K ERD-25T J	702,703			C707,807	OB01412A	Electrolyt	
211			215,223			C101,201	OB09137A	Electrolytic Capacitor 22μ 16V (LN)	801,802			C708,808	OB09137A	Electrolyt	
Q305	OB06013A	Transistor 2SA733	233,235			C102,202	OB09376A	Electrolytic Capacitor 22μ 25V (LN)	803			C709,809	OB09385A	Electrolyt	
ZD302,303	OB06268A	Zener Diode 5.6V RD5.6EB3	239,240			C103,203	OB09283A	Ceramic Capacitor 220P 50V K	L102,202	OB03919B	Inductor 36mH				
D101,103	OB01909A	Silicon Diode 1S1555	C116,118	OB09148A	Electrolytic Capacitor 10μ 16V (LN)	C104,204	OB09594A	Mylar Capacitor 0.082μ 50V J	701,801				-- Bias Osc. --		
104,201			120,121			C105,205	OB05885A	Electrolytic Capacitor 100μ 10V	L103,203	OB03563A	19 kHz Coil 23mH				
203,204			136,138			C106,206	OB05832A	Mylar Capacitor 0.018μ 50V J	R113,213	OB05640A	Carbon Resistor 180K ERD-25T J	Q301,302	OB06100A	Transistor	
D102,202	OB00030A	Germanium Diode 1N60P	216,218			C107,207	OB01412A	Electrolytic Capacitor 10μ 16V	R114,116	OB05625A	Carbon Resistor 220K ERD-25T J	Q303	OB06179A	Transistor	
R120,161	OB09420A	Metal Film Resistor 2.2K SN14K2E F	220,221			C108,208	OB09242A	Mica Capacitor 47P 50V J	214,216			Q304	OB06202A	Transistor	
220,261			236,238			C109,209	OB05653A	Mylar Capacitor 1500P 50V J	R115,215			T301	OB06613A	Osc. Coil	
R121,124	OB01889A	Carbon Resistor 100K ERD-25T J	C117,217	OB05557A	Mylar Capacitor 0.015μ 50V J	C302	OB01272A	Electrolytic Capacitor 100μ 25V	308,715	OB01857A	Carbon Resistor 1K ERD-25T J	R307,308	OB09296A	Fail Safe	
141,142			C119,219	OB09590A	PP Capacitor 1800P 100V J				718,815			R309,310	OB05668A	Carbon R	
150,152			C122,141	OB09240A	PP Capacitor 0.033μ 100V G		-- Rec. Amp. --		818			R311,312	OB09212A	Fail Safe	
221,224			222,241						R117,217	OB01683A	Carbon Resistor 15K ERD-25T J	R313	OB01682A	Carbon R	
241,242			C124,142	OB09591A	PP Capacitor 0.01μ 100V J	Q112,212	OB01872A	Transistor 2SC945 (L)	712,812			R320	OB01680A	Carbon R	
250,252			224,242			Q113,213	OB06013A	Transistor 2SA733	R118,218	OB05622A	Carbon Resistor 2.2K ERD-25T J	R321	OB01683A	Carbon R	
329			C125,143	OB01862A	Electrolytic Capacitor 22μ 16V	D105,205	OB06181A	Silicon Diode 1SS53	711,811			C307	OB09254A	PP Capaci	
R122,222	OB09568A	Metal Film Resistor 3.6K SN14K2E F	225,243			302,303			R119,219	OB01682A	Carbon Resistor 6.8K ERD-25T J	C308	OB01402A	Electrolyt	
R123,125	OB01681A	Carbon Resistor 3.3K ERD-25T J	C126,144	OB01402A	Electrolytic Capacitor 4.7μ 25V	L104,105	OB00068A	Trap Coil 10.5mH	706,806			C309,310	OB09191A	PP Capaci	
153,223			226,244			204,205			R303,304	OB09383A	Fail Safe Type Resistor 390 RDF-25S J	C311	OB09405A	PP Capaci	
225,253			C127,227	OB05583A	Mylar Capacitor 0.033μ 50V J	VR702,703	OB07237A	Semi-fixed Volume 50K	R305	OB09306A	Fail Safe Type Resistor 68 RDF-25S J		OB09405A	PP Capaci	
R126,226	OB05614A	Carbon Resistor 1.8K ERD-25T J	C128,129	OB01603A	Mylar Capacitor 0.1μ 50V K	704,802			R307	OB05509A	Carbon Resistor 33K ERD-25T J		OB09405A	PP Capaci	
R127,128	OB01888A	Carbon Resistor 10K ERD-25T J	C128,129			803,804			R701,709	OB01681A	Carbon Resistor 3.3K ERD-25T J		OB09405A	PP Capaci	
227,228			C130,131	OB09385A	Electrolytic Capacitor 0.33μ 50V (LN)	R169,269	OB01856A	Carbon Resistor 8.2K ERD-25T J	801,809				-- Power Supply --		
323,324			230,231			R170,270	OB05621A	Carbon Resistor 120K ERD-25T J	R702,802	OB05641A	Carbon Resistor 47K ERD-25T J	IC401	OB06237A	Regulator	
R129,229	OB09335A	Carbon Resistor 680K ERD-25T J	C132,232	OB05852A	Electrolytic Capacitor 1000μ 10V	R171,174	OB05622A	Carbon Resistor 2.2K ERD-25T J	R704,710	OB01889A	Carbon Resistor 100K ERD-25T J	D401	OB06183A	Diode Bri	
R130,230	OB05626A	Carbon Resistor 150K ERD-25T J	C134,234	OB05793A	Electrolytic Capacitor 330μ 25V	271,274			804,810			D402	OB06181A	Silicon Di	
R131,162	OB09557A	Metal Film Resistor 13K SN14K2E F	C137,237	OB09594A	Mylar Capacitor 0.03μ 50V J	R172,272	OB05698A	Carbon Resistor 1.5K ERD-25T J	R705,805	OB05627A	Carbon Resistor 330K ERD-25T J	R301	OB09339A	Fail Safe	
231,262			C145,245	OB09566A	Mylar Capacitor 0.13μ 50V J	R173,273	OB01857A	Carbon Resistor 1K ERD-25T J	R707,807	OB09573A	Metal Film Resistor 3.74K SN14K2E F	R401,402	OB01888A	Carbon R	
R132,146	OB05641A	Carbon Resistor 47K ERD-25T J	C146,246	OB05796A	Mylar Capacitor 0.047μ 50V J	R175,177	OB05509A	Carbon Resistor 33K ERD-25T J	R708,808	OB09587A	Metal Film Resistor 24.9K SN14K2E F	C301	OB01870A	Electrolyt	
163,232			C147,247	OB09570A	Electrolytic Capacitor 0.15μ 50V (LN)	275,277			R714,814	OB01856A	Carbon Resistor 8.2K ERD-25T J	C319	OB09286A	Ceramic C	
246,263			C160,260	OB05687A	Mylar Capacitor 1200P 50V J	R176,276	OB01680A	Carbon Resistor 820 ERD-25T J	R716,717	OB09331A	Fail Safe Type Resistor 8.2RDF-25S J	C401	OB09336A	Electrolyt	
R133,143	OB05776A	Carbon Resistor 1M ERD-25T J	C312,314	OB01674A	Electrolytic Capacitor 10μ 25V	R178,179	OB01683A	Carbon Resistor 15K ERD-25T J	816,817			C402	OB09250A	Electrolyt	
149,233			C313	OB09251A	Electrolytic Capacitor 33μ 25V	180,278			C110,210	OB01405A	Electrolytic Capacitor 1μ 50V	C403	OB01400A	Electrolyt	
243,249			C315	OB09187A	Electrolytic Capacitor 1μ 50V (BP)	279,280			701,801			C404	OB01412A	Electrolyt	
R134,234	OB09558A	Metal Film Resistor 4.42K SN14K2E F	C318	OB09286A	Ceramic Capacitor 470P 50V K	R181,184	OB01888A	Carbon Resistor 10K ERD-25T J	C111,211	OB01862A	Electrolytic Capacitor 22μ 16V				
R135,235	OB05615A	Carbon Resistor 22K ERD-25T J		OB08714A	IC Socket 16P (4 pcs.)	185,281			C112,212	OB09242A	Mica Capacitor 47P 50V J				
R136,165	OB09271A	Carbon Resistor 6.2K ERD-25T J				284,285			C113,213	OB09262A	PP Capacitor 3000P 100V J				
236,265				-- PB Eq. Amp. --					C303	OB01409A	Electrolytic Capacitor 47μ 25V				
R137,140	OB05620A	Carbon Resistor 270K ERD-25T J							C304,305	OB01272A	Electrolytic Capacitor 100μ 25V	F401,402	OB07961C	Main P.C.	
166,167			Q101,102	OB06119A	Transistor 2SC1844	C148,150	OB01887A	Carbon Resistor 5.6K ERD-25T J	320,706					OB08374A	Fuse 1A (U.S.A
168,237			201,202			C149,249	OB01780A	Mylar Capacitor 0.1μ 50V J	806						(Japar
240,266			Q110,210	OB01872A	Transistor 2SC945 (L)	C151,251	OB01862A	Electrolytic Capacitor 22μ 16V	C703,803	OB01412A	Electrolytic Capacitor 10μ 16V	F401,402	OB08686A	Fuse 1A (
267,268			ZD301	OB06239A	Zener Diode 20V RD20EBB2	C152,252	OB01913A	Mylar Capacitor 1800P 50V J	C704,804	OB09590A	PP Capacitor 1800P 100V J	F401	OB08275A	Fuse T 12	
R138,238	OB09320A	Carbon Resistor 820K ERD-25T J	L101,201	OB03919B	Inductor 36mH	C153,253	OB09270A	PP Capacitor 470P 100V J	C705,805	OB01863A	Electrolytic Capacitor 3.3μ 50V			(220V	
R139,239	OB01683A	Carbon Resistor 15K ERD-25T J	VR101,201	OB07237A	Semi-fixed Volume 50K	C154,254	OB01400A	Electrolytic Capacitor 100μ 16V				F402	OB08457A	Fuse T 5C	
R144,244	OB01846A	Carbon Resistor 4.7K ERD-25T J	R101,103	OB01889A	Carbon Resistor 100K ERD-25T J	C155,255	OB01402A	Electrolytic Capacitor 4.7μ 25V						(220V	
R145,245	OB05622A	Carbon Resistor 2.2K ERD-25T J	187,201			C156,256	OB09486A	Mica Capacitor 120P 50V J				M2	OB08342A	Spark Kil	
325,326			203,287			C157,257	OB09235A	PP Capacitor 680P 100V J	Q707,708	OB06100A	Transistor 2SC945 (A)				
						C159,259	OB09277A	Ceramic Capacitor 10P 50V J	807,808						

Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
istor 220K ERD-25T J	R102,186	0B01706A	Carbon Resistor 47 ERD-25T J	C316,317	0B09292A	Ceramic Capacitor 0.1μ 50V Z	ZD701,801	0B06058A	Zener Diode 5.1V YZ051	M2	0B08363A	Spark Killer (Japan)
	202,286						D704,705	0B06181A	Silicon Diode 1SS53	M2,3	0B08445A	Spark Killer (220V Class 2)
	R104,106	0B05509A	Carbon Resistor 33K ERD-25T J				706,804			M2	0B08240U	Spark Killer (UK, Australia & Others)
istor 2K ERD-25T J	204,206						805,806				0B08654A	4P-T Post (1 pce.)
istor 1.6K ERD-25T J	R105,205	0B09330A	Carbon Resistor 100K ERD-25TS J	Q103,104	0B01872A	Transistor 2SC945 (L)	VR701,801	0B07237A	Semi-fixed Volume 50K		0B08656A	2P-T Post (1 pce.)
istor 680 ERD-25T J			(Noiseless)	203,204			R306	0B09383A	Fail Safe Type Resistor 390 RDF-25S J		0B08675A	Pin Jack (1 pce.)
istor 27K ERD-25T J	R107,207	0B05622A	Carbon Resistor 2.2K ERD-25T J	702,704			R719,819	0B05641A	Carbon Resistor 47K ERD-25T J		0B07303A	Push Switch (1 pce.)
Resistor 4.02K SN14K2E F	302			705,802			R720,724	0B01889A	Carbon Resistor 100K ERD-25T J		0B08676A	Heat Sink (1 pce.)
istor 1K ERD-25T J	R108,208	0B05675A	Carbon Resistor 3.9K ERD-25T J	804,805			820,824				0B07388A	Record Switch (1 pce.)
istor 5.6K ERD-25T J	R109,209	0B05629A	Carbon Resistor 2.7K ERD-25T J	Q701,801	0B06299A	Transistor 2SC2878 (2SC1636)	R721,821	0B01888A	Carbon Resistor 10K ERD-25T J		0M03782A	Fuse Label 1Ax250V (U.S.A., Canada, Japan & Others) (2 pcs.)
pacitor 22P 50V J	R110,210	0B05577A	Carbon Resistor 330 ERD-25T J		(0B06070A)		R722,822	0B09197A	Metal Film Resistor 820K SN14K2E F		0M04082B	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.)
	R111,211	0B05698A	Carbon Resistor 1.5K ERD-25T J	Q703,706	0B06013A	Transistor 2SA733	R723,823	0B09451A	Metal Film Resistor 47K SN14K2E F			
c Capacitor 1μ 50V (LN)	R112,212	0B05615A	Carbon Resistor 22K ERD-25T J	803,806			R725,825	0B05743A	Carbon Resistor 27K ERD-25T J		0M04096C	Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.)
	R182,282	0B05936A	Carbon Resistor 10 ERD-25T J	D301,701			C306	0B01272A	Electrolytic Capacitor 100μ 25V		0B08349A	Fuse Clip (220V Class 2, UK & Australia) (4 pcs.)
	R183,283	0B05640A	Carbon Resistor 180K ERD-25T J	702,703	0B06181A	Silicon Diode 1SS53	C707,807	0B01412A	Electrolytic Capacitor 10μ 16V			
c Capacitor 10μ 16V (LN)	C101,201	0B09137A	Electrolytic Capacitor 22μ 16V (LN)	801,802			C708,808	0B09137A	Electrolytic Capacitor 22μ 16V (LN)		0E00612A	Screw M3x6 Philips Pan Head (2A) (2 pcs.)
	C102,202	0B09376A	Electrolytic Capacitor 22μ 25V (LN)	803			C709,809	0B09385A	Electrolytic Capacitor 0.33μ 50V (LN)			
	C103,203	0B09283A	Ceramic Capacitor 220P 50V K	L102,202	0B03919B	Inductor 36mH					0E00831A	BT Screw M3x10 Philips Pan Head (1 pce.)
	C104,204	0B09594A	Mylar Capacitor 0.082μ 50V J	701,801							0E00854A	BT Screw M2.6x4 Philips Pan Head (Chromate) (1 pce.)
	C105,205	0B05885A	Electrolytic Capacitor 100μ 10V	L103,203	0B03563A	19 kHz Coil 23mH	Q301,302	0B06100A	Transistor 2SC945 (A)		0E00857A	BT Screw M3x6 Philips Binding Head (2 pcs.)
	C106,206	0B05832A	Mylar Capacitor 0.018μ 50V J	R113,213	0B05640A	Carbon Resistor 180K ERD-25T J	Q303	0B06179A	Transistor 2SC1959 (Y)		JA03856A	Record Head A Ass'y (1 pce.)
	C107,207	0B01412A	Electrolytic Capacitor 10μ 16V	R114,116	0B05625A	Carbon Resistor 220K ERD-25T J	Q304	0B06202A	Transistor 2SA562 (Y)		0J04396A	Record Holder B (1 pce.)
	C108,208	0B09242A	Mica Capacitor 47P 50V J	214,216			R307,308	0B06613A	Osc. Coil		0J04397A	Record Stud A (1 pce.)
	C109,209	0B05653A	Mylar Capacitor 1500P 50V J	R115,215	0B01857A	Carbon Resistor 1K ERD-25T J	R309,310	0B09296A	Fail Safe Type Resistor 39 RSF-1/2B J		0J04398A	Record Spring (1 pce.)
	C302	0B01272A	Electrolytic Capacitor 100μ 25V	308,715			R311,312	0B09212A	Fail Safe Type Resistor 2.2RDF-25S J		0B08570C	Record Spring Holder (1 pce.)
istor 0.015μ 50V J				718,815			R313	0B01682A	Carbon Resistor 6.8K ERD-25T J		0E00172A	Washer 3mm Toothed Lock (1 pce.)
or 1800P 100V J				818			R320	0B01680A	Carbon Resistor 820 ERD-25T J		0E00222A	E-Ring 2mm (1 pce.)
or 0.033μ 100V G				R117,217	0B01683A	Carbon Resistor 15K ERD-25T J	R321	0B01683A	Carbon Resistor 15K ERD-25T J		0E00581A	Spring Washer 3mm (1 pce.)
				712,812			R322	0B09254A	PP Capacitor 0.068μ 100V J		0E00507A	Nut Hex. M3 (2 pcs.)
or 0.01μ 100V J	Q112,212	0B01872A	Transistor 2SC945 (L)	R118,218	0B05622A	Carbon Resistor 2.2K ERD-25T J	R323	0B09212A	Fail Safe Type Resistor 2.2RDF-25S J			
	Q113,213	0B06013A	Transistor 2SA733	711,811			R324	0B01402A	Electrolytic Capacitor 4.7μ 25V			
c Capacitor 22μ 16V	D105,205	0B06181A	Silicon Diode 1SS53	R119,219	0B01682A	Carbon Resistor 6.8K ERD-25T J	R325	0B09191A	PP Capacitor 4700P 100V G			
	302,303			R119,219			R326	0B09405A	PP Capacitor 0.022μ 100V J			
c Capacitor 4.7μ 25V	L104,105	0B00068A	Trap Coil 10.5mH	706,806			R327	0J04417A	Osc. Coil Shield Plate (1 pce.)			
	204,205			R303,304	0B09383A	Fail Safe Type Resistor 390 RDF-25S J	R328					
istor 0.033μ 50V J	VR702,703	0B07237A	Semi-fixed Volume 50K	R305	0B09306A	Fail Safe Type Resistor 68 RDF-25S J	R329					
istor 0.1μ 50V K	704,802			R307	0B05509A	Carbon Resistor 33K ERD-25T J	R330					
	803,804			R701,709	0B01681A	Carbon Resistor 3.3K ERD-25T J	R331					
c Capacitor 0.33μ 50V (LN)	R169,269	0B01856A	Carbon Resistor 8.2K ERD-25T J	801,809			R332					
	R170,270	0B05621A	Carbon Resistor 120K ERD-25T J	R702,802	0B05641A	Carbon Resistor 47K ERD-25T J	R333					
c Capacitor 1000μ 10V	R171,174	0B05622A	Carbon Resistor 2.2K ERD-25T J	R704,710	0B01889A	Carbon Resistor 100K ERD-25T J	R334					
c Capacitor 330μ 25V	271,274			804,810			R335					
istor 0.03μ 50V J	R172,272	0B05698A	Carbon Resistor 1.5K ERD-25T J	R705,805	0B05627A	Carbon Resistor 330K ERD-25T J	R336					
istor 0.13μ 50V J	R173,273	0B01857A	Carbon Resistor 1K ERD-25T J	R707,807	0B09573A	Metal Film Resistor 3.74K SN14K2E F	R337					
istor 0.047μ 50V J	R175,177	0B05509A	Carbon Resistor 33K ERD-25T J	R708,808	0B09587A	Metal Film Resistor 24.9K SN14K2E F	R338					
c Capacitor 0.15μ 50V (LN)	275,277			R714,814	0B01856A	Carbon Resistor 8.2K ERD-25T J	R339					
istor 1200P 50V J	R176,276	0B01680A	Carbon Resistor 820 ERD-25T J	R716,717	0B09331A	Fail Safe Type Resistor 8.2RDF-25S J	R340					
c Capacitor 10μ 25V	R178,179	0B01683A	Carbon Resistor 15K ERD-25T J	816,817			R341					
c Capacitor 33μ 25V	180,278			C110,210	0B01405A	Electrolytic Capacitor 1μ 50V	R342					
c Capacitor 1μ 50V (BP)	279,280			701,801			R343					
pacitor 470P 50V K	R181,184	0B01888A	Carbon Resistor 10K ERD-25T J	C111,211	0B01862A	Electrolytic Capacitor 22μ 16V	R344					
6P (4 pcs.)	185,281			C112,212	0B09242A	Mica Capacitor 47P 50V J	R345					
	284,285			C113,213	0B09262A	PP Capacitor 3000P 100V J	R346					
	R314	0B01887A	Carbon Resistor 5.6K ERD-25T J	C303	0B01409A	Electrolytic Capacitor 47μ 25V	R347					
	C148,150	0B01780A	Mylar Capacitor 0.1μ 50V J	C304,305	0B01272A	Electrolytic Capacitor 100μ 25V	R348					
	248,250			320,706			R349					
	C149,249	0B01862A	Electrolytic Capacitor 22μ 16V	806			R350					
	C151,251	0B01913A	Mylar Capacitor 1800P 50V J	C703,803	0B01412A	Electrolytic Capacitor 10μ 16V	R351					
e 20V RD20EBB2	C152,252	0B05659A	Mylar Capacitor 5600P 50V J	C704,804	0B09590A	PP Capacitor 1800P 100V J	R352					
36mH	C153,253	0B09270A	PP Capacitor 470P 100V J	C705,805	0B01863A	Electrolytic Capacitor 3.3μ 50V	R353					
Volume 50K	C154,254	0B01400A	Electrolytic Capacitor 100μ 16V				R354					
istor 100K ERD-25T J	C155,255	0B01402A	Electrolytic Capacitor 4.7μ 25V				R355					
	C156,256	0B09486A	Mica Capacitor 120P 50V J				R356					
	C157,257	0B09235A	PP Capacitor 680P 100V J	Q707,708	0B06100A	Transistor 2SC945 (A)	R357					
	C159,259	0B09277A	Ceramic Capacitor 10P 50V J	807,808			R358					

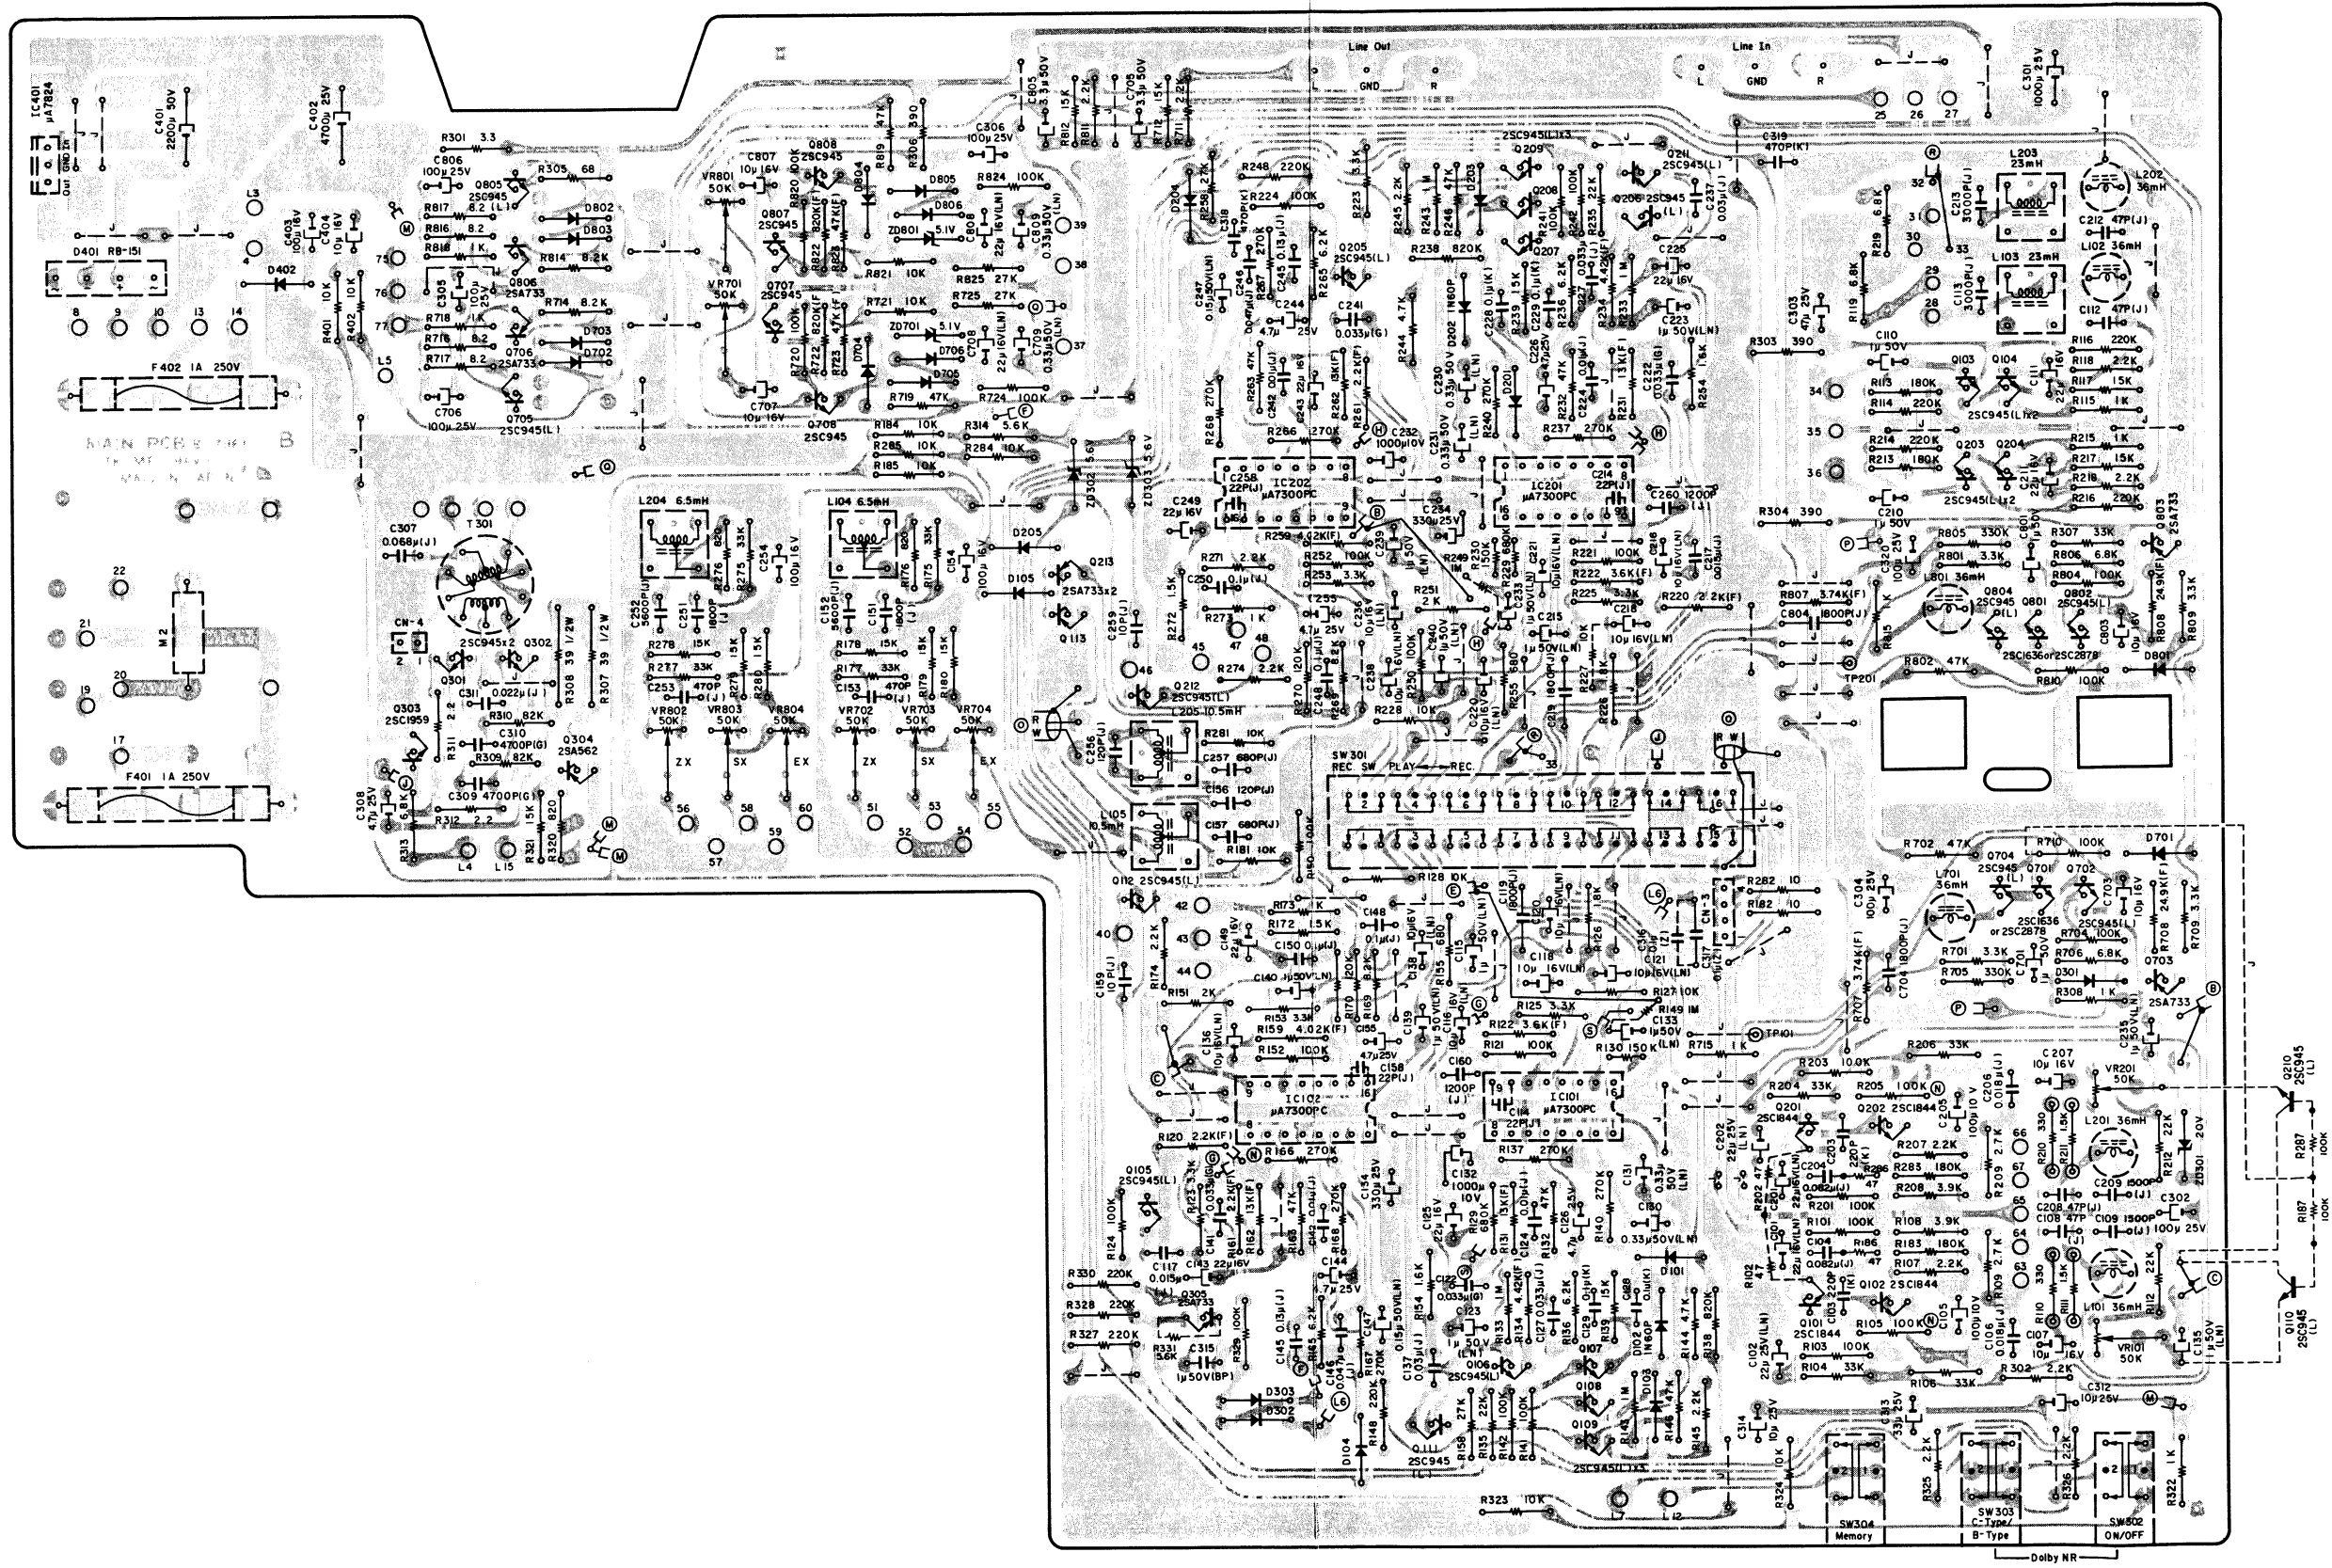


Fig. 7.1.2 Serial Nos.: A30805969 – A30811679
 Serial Nos.: A30902974 – A30910199

Note: Diode is 1SS53 unless otherwise specified.

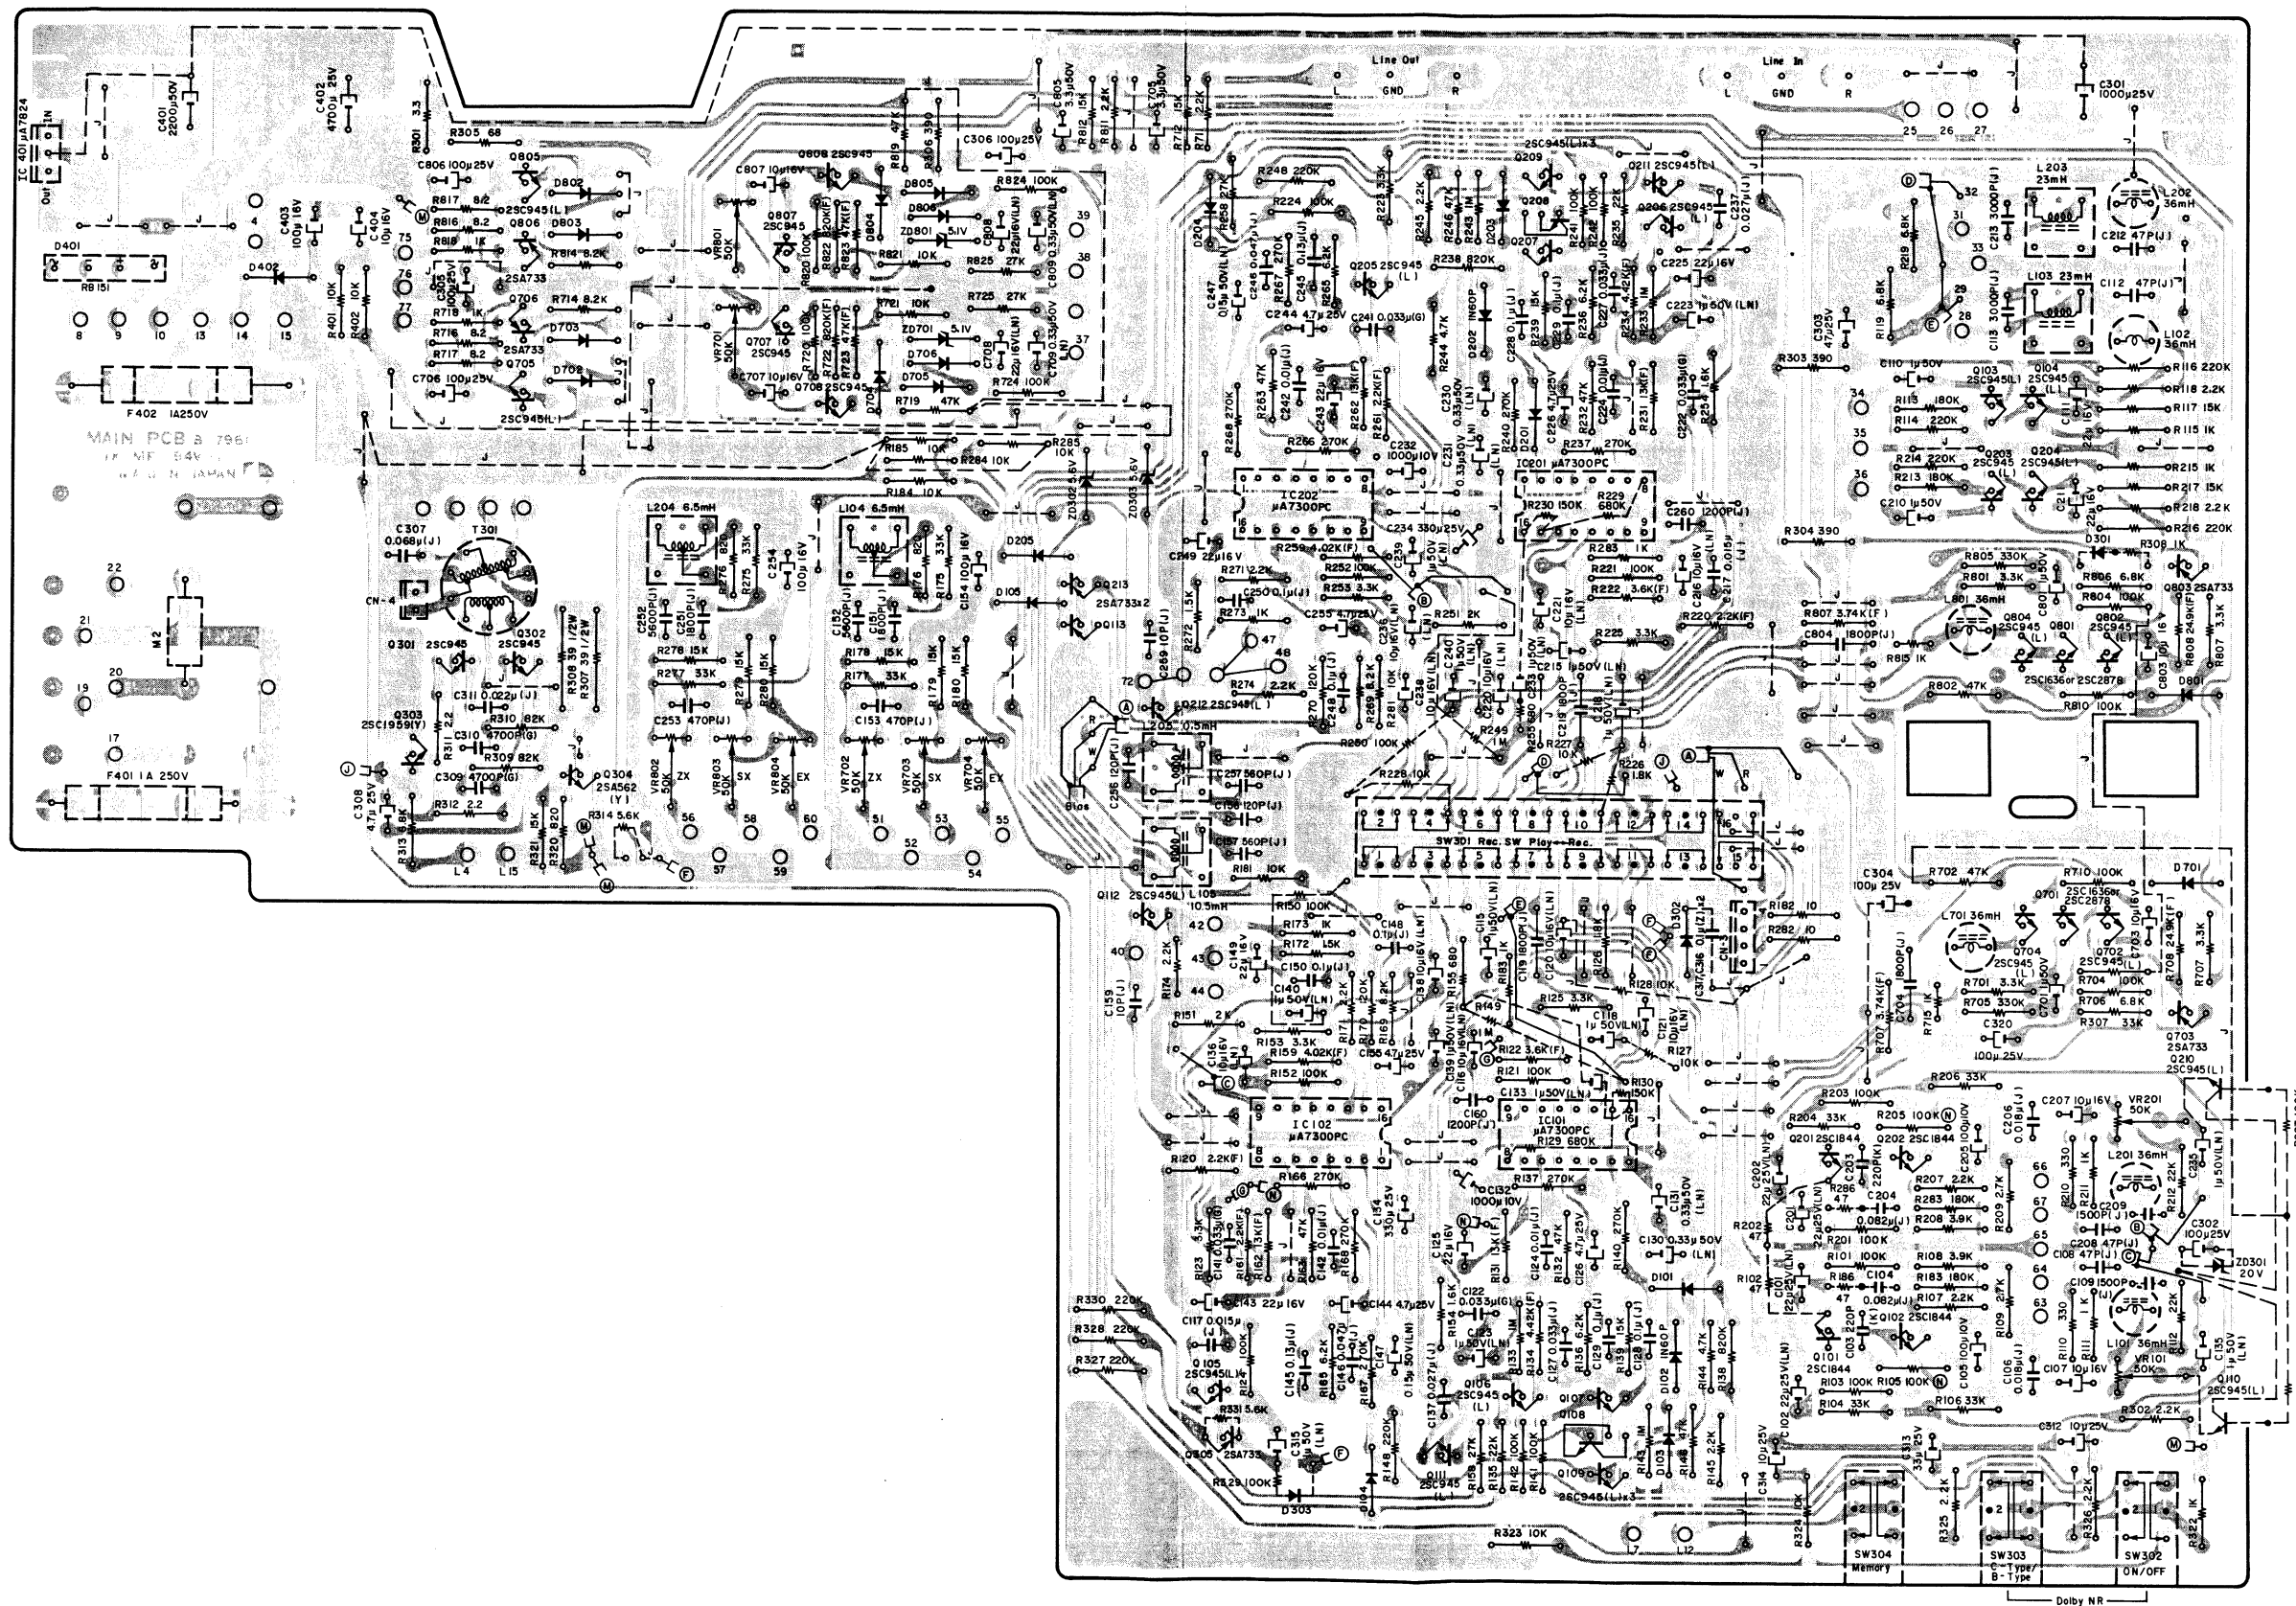


Fig. 7.1.3 Serial Nos.: A30801001 – A30805968
Serial Nos.: A30901001 – A30902973

Note: Diode is 1SS53 unless otherwise specified.

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	BA04320A	Main P.C.B. Ass'y (U.S.A. & Canada)	R148,248	OB05625A	Carbon Resistor 220K ERD-25T J	R104,106	OB05509A	Carbon Resistor 33K ERD-25T J		-- Line Amp. --	ZD701,801	OB06058A	Zener Diode	
	BA04319A	Main P.C.B. Ass'y (Japan)	327,328			204,206					D704,705	OB06181A	Silicon Diode	
	BA04351A	Main P.C.B. Ass'y (220V Class 2)	330			R105,205	OB09330A	Carbon Resistor 100K ERD-25TS J	Q103,104	OB01872A	Transistor 2SC945 (L)			
	BA04352A	Main P.C.B. Ass'y (UK & Australia)	R151,251	OB09301A	Carbon Resistor 2K ERD-25T J	R107,207	OB05622A	Carbon Resistor 2.2K ERD-25T J	203,204			706,804		
	BA04353A	Main P.C.B. Ass'y (Others)	R154,254	OB09565A	Carbon Resistor 1.6K ERD-25T J	302			702,704			805,806	OB07237A	Semi-fixed Volume
		Serial Nos.: A30801001 - A30805968	R155,255	OB05794A	Carbon Resistor 680 ERD-25T J	R108,208	OB05675A	Carbon Resistor 3.9K ERD-25T J	705,802			VR701,801	OB09383A	Fail Safe Ty
		Serial Nos.: A30901001 - A30902973	R158,258	OB05743A	Carbon Resistor 27K ERD-25T J	R109,209	OB05629A	Carbon Resistor 2.7K ERD-25T J	804,805			R306	OB05641A	Carbon Resistor
			R159,259	OB09423A	Metal Film Resistor 4.02K SN14K2E F	R110,210	OB05577A	Carbon Resistor 330 ERD-25T J	Q701,801	OB06299A	Transistor 2SC2878 (2SC1636)	R719,819	OB01889A	Carbon Resistor
			R183,283	OB01857A	Carbon Resistor 1K ERD-25T J	R111,211	OB01857A	Carbon Resistor 1K ERD-25T J	Q703,706	OB06013A	Transistor 2SA733	R720,724		
			322			R112,212	OB05615A	Carbon Resistor 22K ERD-25T J	803,806			820,824	OB01888A	Carbon Resistor
IC101,102	OB06200A	IC μ A7300PC	R331	OB01887A	Carbon Resistor 5.6K ERD-25T J	R112,212	OB05615A	Carbon Resistor 22K ERD-25T J	803,806			R721,821	OB09197A	Metal Film Resistor
201,202			C115,118	OB09223A	Electrolytic Capacitor 1 μ 50V (LN)	R182,282	OB05936A	Carbon Resistor 10 ERD-25T J	D301,701	OB06181A	Silicon Diode 1SS53	R722,822	OB09451A	Metal Film Resistor
Q105-109	OB01872A	Transistor 2SC945 (L)	123,133			R183,283	OB05640A	Carbon Resistor 180K ERD-25T J	702,703			R725,825	OB05743A	Carbon Resistor
111		(12 pcs.)	135,139			C101,201	OB09137A	Electrolytic Capacitor 22 μ 16V (LN)	801,802			C306	OB01272A	Electrolytic
205-209			140,215			C102,202	OB09376A	Electrolytic Capacitor 22 μ 25V (LN)	803			C707,807	OB01412A	Electrolytic
211			218,223			C103,203	OB09283A	Ceramic Capacitor 220P 50V K	L102,202	OB03919B	Inductor 36mH	C708,808	OB09137A	Electrolytic
Q305	OB06013A	Transistor 2SA733	233,235			C104,204	OB09594A	Mylar Capacitor 0.082 μ 50V J	701,801			C709,809	OB09385A	Electrolytic
ZD302,303	OB06268A	Zener Diode 5.6V RD5.6EB3	239,240			C105,205	OB05885A	Electrolytic Capacitor 100 μ 10V	L103,203	OB03563A	19 kHz Coil 23mH			
D101,103	OB01909A	Silicon Diode 1S1555	315			C106,206	OB05832A	Mylar Capacitor 0.018 μ 50V J	R113,213	OB05640A	Carbon Resistor 180K ERD-25T J			
104,201			C116,120	OB09148A	Electrolytic Capacitor 10 μ 16V (LN)	C107,207	OB01412A	Electrolytic Capacitor 10 μ 16V	R114,116	OB05625A	Carbon Resistor 220K ERD-25T J			
203,204			121,136			C108,208	OB09242A	Mica Capacitor 47P 50V J	214,216			Q301,302	OB06100A	Transistor
D102,202	OB00030A	Germanium Diode 1N60P	138,216			C109,209	OB05653A	Mylar Capacitor 1500P 50V J	R115,215	OB01857A	Carbon Resistor 1K ERD-25T J	Q303	OB06179A	Transistor
R120,161	OB09420A	Metal Film Resistor 2.2K SN14K2E F	220,221			C302	OB01272A	Electrolytic Capacitor 100 μ 25V	308,715			Q304	OB06202A	Transistor
220,261			236,238						718,815			T301	OB06613A	Osc. Coil
R121,124	OB01889A	Carbon Resistor 100K ERD-25T J	C117,217	OB05557A	Mylar Capacitor 0.015 μ 50V J				818			R307,308	OB09296A	Fail Safe Ty
141,142			C119,219	OB09590A	PP Capacitor 1800P 100V J				R117,217	OB01683A	Carbon Resistor 15K ERD-25T J	R309,310	OB05668A	Carbon Resistor
150,152			C122,141	OB09240A	PP Capacitor 0.033 μ 100V G	Q112,212	OB01872A	Transistor 2SC945 (L)	712,812			R311,312	OB09212A	Fail Safe Ty
221,224			222,241			Q113,213	OB06013A	Transistor 2SA733	R118,218	OB05622A	Carbon Resistor 2.2K ERD-25T J	R313	OB01682A	Carbon Resistor
241,242			C124,142	OB09591A	PP Capacitor 0.01 μ 100V J	D105,205	OB06181A	Silicon Diode 1SS53	711,811			R320	OB01680A	Carbon Resistor
250,252			224,242			302,303			R119,219	OB01682A	Carbon Resistor 6.8K ERD-25T J	R321	OB01683A	Carbon Resistor
329			C125,143	OB01862A	Electrolytic Capacitor 22 μ 16V	L104,105	OB00068A	Trap Coil 10.5mH	706,806			C307	OB09254A	PP Capacitor
R122,222	OB09568A	Metal Film Resistor 3.6K SN14K2E F	225,243			204,205			R303,304	OB09383A	Fail Safe Type Resistor 390 RDF-25S J	C308	OB01402A	Electrolytic
R123,125	OB01681A	Carbon Resistor 3.3K ERD-25T J	C126,144	OB01402A	Electrolytic Capacitor 4.7 μ 25V	VR702,703	OB07237A	Semi-fixed Volume 50K	R305	OB09306A	Fail Safe Type Resistor 68 RDF-25S J	C309,310	OB09191A	PP Capacitor
153,223			226,244			704,802			R307	OB05509A	Carbon Resistor 33K ERD-25T J	C311	OB09405A	PP Capacitor
225,253			C127,227	OB05583A	Mylar Capacitor 0.033 μ 50V J	803,804			R701,709	OB01681A	Carbon Resistor 3.3K ERD-25T J		OB04417A	Osc. Coil Sh
R126,226	OB05614A	Carbon Resistor 1.8K ERD-25T J	C128,129	OB01603A	Mylar Capacitor 0.1 μ 50V K	R169,269	OB01856A	Carbon Resistor 8.2K ERD-25T J	801,809					
R127,128	OB01888A	Carbon Resistor 10K ERD-25T J	C128,229			R170,270	OB05621A	Carbon Resistor 120K ERD-25T J	R702,802	OB05641A	Carbon Resistor 47K ERD-25T J			
227,228			C130,131	OB09385A	Electrolytic Capacitor 0.33 μ 50V (LN)	R171,174	OB05622A	Carbon Resistor 2.2K ERD-25T J	R704,710	OB01889A	Carbon Resistor 100K ERD-25T J			
323,324			230,231			271,274			804,810					
R129,229	OB09335A	Carbon Resistor 680K ERD-25T J	C132,232	OB05852A	Electrolytic Capacitor 1000 μ 10V	R172,272	OB05698A	Carbon Resistor 1.5K ERD-25T J	R705,805	OB05627A	Carbon Resistor 330K ERD-25T J	IC401	OB06237A	Regulator IC
R130,230	OB05626A	Carbon Resistor 150K ERD-25T J	C134,234	OB05793A	Electrolytic Capacitor 330 μ 25V	R173,273	OB01857A	Carbon Resistor 1K ERD-25T J	R707,807	OB09573A	Metal Film Resistor 3.74K SN14K2E F	D401	OB06183A	Diode Bridg
R131,162	OB09557A	Metal Film Resistor 13K SN14K2E F	C137,237	OB09045A	Mylar Capacitor 0.027 μ 50V J	R175,177	OB05509A	Carbon Resistor 33K ERD-25T J	R708,808	OB09587A	Metal Film Resistor 24.9K SN14K2E F	D402	OB06181A	Silicon Diode
231,262			C145,245	OB09566A	Mylar Capacitor 0.13 μ 50V J	275,277			R714,814	OB01856A	Carbon Resistor 8.2K ERD-25T J	R301	OB09339A	Fail Safe Ty
R132,146	OB05641A	Carbon Resistor 47K ERD-25T J	C146,246	OB05796A	Mylar Capacitor 0.047 μ 50V J	R176,276	OB01680A	Carbon Resistor 820 ERD-25T J	R716,717	OB09331A	Fail Safe Type Resistor 8.2RDF-25S J	R401,402	OB01888A	Carbon Resistor
163,232			C147,247	OB09570A	Electrolytic Capacitor 0.15 μ 50V (LN)	R178,179	OB01683A	Carbon Resistor 15K ERD-25T J	816,817			C301	OB01870A	Electrolytic
246,263			C160,260	OB05687A	Mylar Capacitor 1200P 50V J	180,278			C110,210	OB01405A	Electrolytic Capacitor 1 μ 50V	C401	OB09336A	Electrolytic
R133,143	OB05776A	Carbon Resistor 1M ERD-25T J	C312,314	OB01674A	Electrolytic Capacitor 10 μ 25V	279,280			701,801			C402	OB09250A	Electrolytic
243,249			C313	OB09251A	Electrolytic Capacitor 33 μ 25V	R181,184	OB01888A	Carbon Resistor 10K ERD-25T J	C111,211	OB01862A	Electrolytic Capacitor 22 μ 16V	C403	OB01400A	Electrolytic
R134,234	OB09558A	Metal Film Resistor 4.42K SN14K2E F	OB08714A	IC Socket 16P (4 pcs.)		185,281			C112,212	OB09242A	Mica Capacitor 47P 50V J	C404	OB01412A	Electrolytic
R135,235	OB05615A	Carbon Resistor 22K ERD-25T J				284,285			C113,213	OB09262A	PP Capacitor 3000P 100V J			
R136,165	OB09271A	Carbon Resistor 6.2K ERD-25T J				R314	OB01887A	Carbon Resistor 5.6K ERD-25T J	C303	OB01409A	Electrolytic Capacitor 47 μ 25V			
236,265			Q101,102	OB06119A	Transistor 2SC1844	C148,150	OB01780A	Mylar Capacitor 0.1 μ 50V J	C304,305	OB01272A	Electrolytic Capacitor 100 μ 25V			
R137,140	OB05620A	Carbon Resistor 270K ERD-25T J	201,202			248,250			320,706			F401,402	OB07961A	Main P.C.B.
166,167			Q110,210	OB01872A	Transistor 2SC945 (L)	C149,249	OB01862A	Electrolytic Capacitor 22 μ 16V	806				OB08374A	Fuse 1A 25V (U.S.A.,
168,237			ZD301	OB06239A	Zener Diode 20V RD20EBB2	C151,251	OB01913A	Mylar Capacitor 1800P 50V J	C703,803	OB01412A	Electrolytic Capacitor 10 μ 16V	F401,402	OB08686A	Fuse 1A 25V (Japan)
240,266			L101,201	OB03919B	Inductor 36mH	C152,252	OB05659A	Mylar Capacitor 5600P 50V J	C704,804	OB09590A	PP Capacitor 1800P 100V J	F401	OB08275A	Fuse T 125V (220V C
267,268			VR101,201	OB07237A	Semi-fixed Volume 50K	C153,253	OB09270A	PP Capacitor 470P 100V J	C705,805	OB01863A	Electrolytic Capacitor 3.3 μ 50V			
R138,238	OB09320A	Carbon Resistor 820K ERD-25T J	R101,103	OB01889A	Carbon Resistor 100K ERD-25T J	C154,254	OB01400A	Electrolytic Capacitor 100 μ 16V				F402	OB08457A	Fuse T 500V (220V C
R139,239	OB01683A	Carbon Resistor 15K ERD-25T J	187,201			C155,255	OB01402A	Electrolytic Capacitor 4.7 μ 25V						
R144,244	OB01846A	Carbon Resistor 4.7K ERD-25T J	203,287			C156,256	OB09486A	Mica Capacitor 120P 50V J	Q707,708	OB06100A	Transistor 2SC945 (A)	M2	OB08342A	Spark Killer
R145,245	OB05622A	Carbon Resistor 2.2K ERD-25T J	R102,186	OB01706A	Carbon Resistor 47 ERD-25T J	C157,257	OB09323A	PP Capacitor 560P 100V J	807,808					
325,326			202,286			C159,259	OB09277A	Ceramic Capacitor 10P 50V J						
						C316,317	OB09292A	Ceramic Capacitor 0.1 μ 50V Z						

Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description			
Carbon Resistor 220K ERD-25T J	R104,106 204,206 R105,205	OB05509A	Carbon Resistor 33K ERD-25T J			-- Line Amp. --	ZD701,801 D704,705 706,804 805,806 VR701,801	OB06058A OB06181A	Zener Diode 5.1V YZ051 Silicon Diode 1SS53	M2 M2,3 M2	OB08363A OB08445A OB08240U OB08654A OB08656A OB08675A OB07303A OB08676A OB07388A OM03782A	Spark Killer (Japan) Spark Killer (220V Class 2) Spark Killer (UK, Australia & Others) 4P-T Post (1 pce.) 2P-T Post (1 pce.) Pin Jack (1 pce.) Push Switch (1 pce.) Heat Sink (1 pce.) Record Switch (1 pce.) Fuse Label 1Ax250V (U.S.A., Canada, Japan & Others) (2 pcs.)			
Carbon Resistor 2K ERD-25T J	R107,207	OB05622A	Carbon Resistor 100K ERD-25TS J (Noiseless)	Q103,104 203,204 702,704 705,802 804,805	OB01872A	Transistor 2SC945 (L)	R306 R719,819 R720,724 820,824 R721,821 R722,822 R723,823 R725,825 C306 C707,807 C708,808 C709,809	OB07237A OB09383A OB05641A OB01889A	Semi-fixed Volume 50K Fail Safe Type Resistor 390 RDF-25S J Carbon Resistor 47K ERD-25T J Carbon Resistor 100K ERD-25T J		OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)	OM04082B OM04096C OB08349A OE00612A OE00831A	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.) Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.) Fuse Clip (220V Class 2, UK & Australia) (4 pcs.) Screw M3x6 Philips Pan Head (2A) (2 pcs.) BT Screw M3x10 Philips Pan Head (1 pce.)	
Carbon Resistor 1.6K ERD-25T J	R111,211	OB05675A	Carbon Resistor 2.2K ERD-25T J	Q701,801	OB06299A (OB06070A)	Transistor 2SC2878 (2SC1636)	R307 R719,819 R720,724 820,824 R721,821 R722,822 R723,823 R725,825 C306 C707,807 C708,808 C709,809	OB05641A OB01889A	Carbon Resistor 47K ERD-25T J Carbon Resistor 100K ERD-25T J		OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)	OM04082B OM04096C OB08349A OE00612A OE00831A	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.) Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.) Fuse Clip (220V Class 2, UK & Australia) (4 pcs.) Screw M3x6 Philips Pan Head (2A) (2 pcs.) BT Screw M3x10 Philips Pan Head (1 pce.)	
Carbon Resistor 680 ERD-25T J	R111,211	OB01857A	Carbon Resistor 1K ERD-25T J	Q703,706 803,806	OB06013A	Transistor 2SA733	R721,821 R722,822 R723,823 R725,825 C306 C707,807 C708,808 C709,809	OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)		OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)	OM04082B OM04096C OB08349A OE00612A OE00831A	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.) Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.) Fuse Clip (220V Class 2, UK & Australia) (4 pcs.) Screw M3x6 Philips Pan Head (2A) (2 pcs.) BT Screw M3x10 Philips Pan Head (1 pce.)	
Carbon Resistor 27K ERD-25T J	R108,208	OB05675A	Carbon Resistor 3.9K ERD-25T J	Q703,706 803,806	OB06013A	Transistor 2SA733	R721,821 R722,822 R723,823 R725,825 C306 C707,807 C708,808 C709,809	OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)		OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)	OM04082B OM04096C OB08349A OE00612A OE00831A	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.) Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.) Fuse Clip (220V Class 2, UK & Australia) (4 pcs.) Screw M3x6 Philips Pan Head (2A) (2 pcs.) BT Screw M3x10 Philips Pan Head (1 pce.)	
Metal Film Resistor 4.02K SN14K2E F	R109,209	OB05629A	Carbon Resistor 2.7K ERD-25T J	Q701,801	OB06299A (OB06070A)	Transistor 2SC2878 (2SC1636)	R307 R719,819 R720,724 820,824 R721,821 R722,822 R723,823 R725,825 C306 C707,807 C708,808 C709,809	OB05641A OB01889A	Carbon Resistor 47K ERD-25T J Carbon Resistor 100K ERD-25T J		OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)	OM04082B OM04096C OB08349A OE00612A OE00831A	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.) Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.) Fuse Clip (220V Class 2, UK & Australia) (4 pcs.) Screw M3x6 Philips Pan Head (2A) (2 pcs.) BT Screw M3x10 Philips Pan Head (1 pce.)	
Carbon Resistor 1K ERD-25T J	R110,210	OB05577A	Carbon Resistor 330 ERD-25T J	Q701,801	OB06299A (OB06070A)	Transistor 2SC2878 (2SC1636)	R307 R719,819 R720,724 820,824 R721,821 R722,822 R723,823 R725,825 C306 C707,807 C708,808 C709,809	OB05641A OB01889A	Carbon Resistor 47K ERD-25T J Carbon Resistor 100K ERD-25T J		OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)	OM04082B OM04096C OB08349A OE00612A OE00831A	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.) Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.) Fuse Clip (220V Class 2, UK & Australia) (4 pcs.) Screw M3x6 Philips Pan Head (2A) (2 pcs.) BT Screw M3x10 Philips Pan Head (1 pce.)	
Carbon Resistor 5.6K ERD-25T J	R112,212	OB05615A	Carbon Resistor 22K ERD-25T J	Q703,706 803,806	OB06013A	Transistor 2SA733	R721,821 R722,822 R723,823 R725,825 C306 C707,807 C708,808 C709,809	OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)		OB01888A OB09197A OB09451A OB05743A OB01272A OB01412A OB09137A OB09385A	Carbon Resistor 10K ERD-25T J Metal Film Resistor 820K SN14K2E F Metal Film Resistor 47K SN14K2E F Carbon Resistor 27K ERD-25T J Electrolytic Capacitor 100µ 25V Electrolytic Capacitor 10µ 16V Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 0.33µ 50V (LN)	OM04082B OM04096C OB08349A OE00612A OE00831A	Fuse Label T 125mA (220V Class 2, UK & Australia) (1 pce.) Fuse Label T 500mA (220V Class 2, UK & Australia) (1 pce.) Fuse Clip (220V Class 2, UK & Australia) (4 pcs.) Screw M3x6 Philips Pan Head (2A) (2 pcs.) BT Screw M3x10 Philips Pan Head (1 pce.)	
Electrolytic Capacitor 1µ 50V (LN)	R182,282 R183,283 C101,201 C102,202 C103,203 C104,204 C105,205 C106,206 C107,207 C108,208 C109,209 C302	OB05936A OB05640A OB09137A OB09376A OB09283A OB09594A OB05885A OB05832A OB01412A OB09242A OB05653A OB01272A	Electrolytic Capacitor 22µ 16V (LN) Electrolytic Capacitor 22µ 25V (LN) Ceramic Capacitor 220P 50V K Mylar Capacitor 0.082µ 50V J Electrolytic Capacitor 100µ 10V Mylar Capacitor 0.018µ 50V J Electrolytic Capacitor 10µ 16V Mica Capacitor 47P 50V J Mylar Capacitor 1500P 50V J Electrolytic Capacitor 100µ 25V	R182,282 R183,283 C101,201 C102,202 C103,203 C104,204 C105,205 C106,206 C107,207 C108,208 C109,209 C302	OB05936A OB05640A OB09137A OB09376A OB09283A OB09594A OB05885A OB05832A OB01412A OB09242A OB05653A OB01272A										
Electrolytic Capacitor 10µ 16V (LN)	R111,211 C107,207 C108,208 C109,209 C302	OB01857A OB01412A OB09242A OB05653A OB01272A	Electrolytic Capacitor 10µ 16V Mica Capacitor 47P 50V J Mylar Capacitor 1500P 50V J Electrolytic Capacitor 100µ 25V	R111,211 C107,207 C108,208 C109,209 C302	OB01857A OB01412A OB09242A OB05653A OB01272A										
Electrolytic Capacitor 0.015µ 50V J	Q112,212	OB01872A	Transistor 2SC945 (L)	R117,217	OB01683A	Carbon Resistor 15K ERD-25T J	R117,217	OB01683A	Carbon Resistor 15K ERD-25T J						
Electrolytic Capacitor 1800P 100V J	Q113,213	OB06013A	Transistor 2SA733	R118,218	OB05622A	Carbon Resistor 2.2K ERD-25T J	R118,218	OB05622A	Carbon Resistor 2.2K ERD-25T J						
Electrolytic Capacitor 0.033µ 100V G	D105,205 302,303	OB06181A	Silicon Diode 1SS53	711,811 R119,219	OB01682A	Carbon Resistor 6.8K ERD-25T J	711,811 R119,219	OB01682A	Carbon Resistor 6.8K ERD-25T J						
Electrolytic Capacitor 0.01µ 100V J	L104,105 204,205	OB00068A	Trap Coil 10.5mH	706,806 R303,304	OB09383A	Fail Safe Type Resistor 390 RDF-25S J	706,806 R303,304	OB09383A	Fail Safe Type Resistor 390 RDF-25S J						
Electrolytic Capacitor 22µ 16V	VR702,703	OB07237A	Semi-fixed Volume 50K	R305	OB09306A	Fail Safe Type Resistor 68 RDF-25S J	R305	OB09306A	Fail Safe Type Resistor 68 RDF-25S J						
Electrolytic Capacitor 4.7µ 25V	704,802 803,804			R307 R701,709	OB05509A OB01681A	Carbon Resistor 33K ERD-25T J Carbon Resistor 3.3K ERD-25T J	R307 R701,709	OB05509A OB01681A	Carbon Resistor 33K ERD-25T J Carbon Resistor 3.3K ERD-25T J						
Electrolytic Capacitor 0.033µ 50V J	R169,269	OB01856A	Carbon Resistor 8.2K ERD-25T J	801,809	OB05641A	Carbon Resistor 47K ERD-25T J	801,809	OB05641A	Carbon Resistor 47K ERD-25T J						
Electrolytic Capacitor 0.1µ 50V K	R170,270	OB05621A	Carbon Resistor 120K ERD-25T J	R702,802	OB01889A	Carbon Resistor 100K ERD-25T J	R702,802	OB01889A	Carbon Resistor 100K ERD-25T J						
Electrolytic Capacitor 0.33µ 50V (LN)	R171,174 271,272	OB05622A	Carbon Resistor 2.2K ERD-25T J	R704,710 804,810	OB05627A	Carbon Resistor 330K ERD-25T J	R704,710 804,810	OB05627A	Carbon Resistor 330K ERD-25T J						
Electrolytic Capacitor 1000µ 10V	R172,272	OB05698A	Carbon Resistor 1.5K ERD-25T J	R705,805	OB09573A	Metal Film Resistor 3.74K SN14K2E F	R705,805	OB09573A	Metal Film Resistor 3.74K SN14K2E F						
Electrolytic Capacitor 330µ 25V	R173,273	OB01857A	Carbon Resistor 1K ERD-25T J	R707,807	OB09587A	Metal Film Resistor 24.9K SN14K2E F	R707,807	OB09587A	Metal Film Resistor 24.9K SN14K2E F						
Electrolytic Capacitor 0.027µ 50V J	R175,177	OB05509A	Carbon Resistor 33K ERD-25T J	R708,808	OB01856A	Carbon Resistor 8.2K ERD-25T J	R708,808	OB01856A	Carbon Resistor 8.2K ERD-25T J						
Electrolytic Capacitor 0.13µ 50V J	R175,177	OB05509A	Carbon Resistor 33K ERD-25T J	R714,814	OB09331A	Fail Safe Type Resistor 8.2RDF-25S J	R714,814	OB09331A	Fail Safe Type Resistor 8.2RDF-25S J						
Electrolytic Capacitor 0.047µ 50V J	R176,276	OB01680A	Carbon Resistor 820 ERD-25T J	R716,717			R716,717								
Electrolytic Capacitor 0.15µ 50V (LN)	R178,179	OB01683A	Carbon Resistor 15K ERD-25T J	816,817			816,817								
Electrolytic Capacitor 1200P 50V J	180,278			C110,210	OB01405A	Electrolytic Capacitor 1µ 50V	C110,210	OB01405A	Electrolytic Capacitor 1µ 50V						
Electrolytic Capacitor 10µ 25V	279,280			701,801	OB01862A	Electrolytic Capacitor 22µ 16V	701,801	OB01862A	Electrolytic Capacitor 22µ 16V						
Electrolytic Capacitor 33µ 25V	R181,184	OB01888A	Carbon Resistor 10K ERD-25T J	C111,211	OB09242A	Mica Capacitor 47P 50V J	C111,211	OB09242A	Mica Capacitor 47P 50V J						
Socket 16P (4 pcs.)	185,281 284,285			C112,212 C113,213	OB09262A	PP Capacitor 3000P 100V J	C112,212 C113,213	OB09262A	PP Capacitor 3000P 100V J						
Resistor 2SC1844	R314	OB01887A	Carbon Resistor 5.6K ERD-25T J	C303	OB01409A	Electrolytic Capacitor 47µ 25V	C303	OB01409A	Electrolytic Capacitor 47µ 25V						
Resistor 2SC945 (L)	C148,150 248,250	OB01780A	Mylar Capacitor 0.1µ 50V J	C304,305	OB01272A	Electrolytic Capacitor 100µ 25V	C304,305	OB01272A	Electrolytic Capacitor 100µ 25V						
Diode 20V RD20EBB2	C149,249	OB01862A	Electrolytic Capacitor 22µ 16V	806			806								
Inductor 36mH	C151,251	OB01913A	Mylar Capacitor 1800P 50V J	C703,803	OB01412A	Electrolytic Capacitor 10µ 16V	C703,803	OB01412A	Electrolytic Capacitor 10µ 16V						
Semi-fixed Volume 50K	C152,252	OB05659A	Mylar Capacitor 5600P 50V J	C704,804	OB09590A	PP Capacitor 1800P 100V J	C704,804	OB09590A	PP Capacitor 1800P 100V J						
Carbon Resistor 100K ERD-25T J	C153,253	OB09270A	PP Capacitor 470P 100V J	C705,805	OB01863A	Electrolytic Capacitor 3.3µ 50V	C705,805	OB01863A	Electrolytic Capacitor 3.3µ 50V						
Carbon Resistor 47 ERD-25T J	C154,254	OB01400A	Electrolytic Capacitor 100µ 16V												
Carbon Resistor 27K ERD-25T J	C155,255	OB01402A	Electrolytic Capacitor 4.7µ 25V												
Carbon Resistor 1K ERD-25T J	C156,256	OB09486A	Mica Capacitor 120P 50V J												
Carbon Resistor 47 ERD-25T J	C157,257	OB09323A	PP Capacitor 560P 100V J	Q707,708	OB06100A	Transistor 2SC945 (A)	Q707,708	OB06100A	Transistor 2SC945 (A)						
Carbon Resistor 47 ERD-25T J	C159,259														

7.2. Volume P.C.B. Ass'y

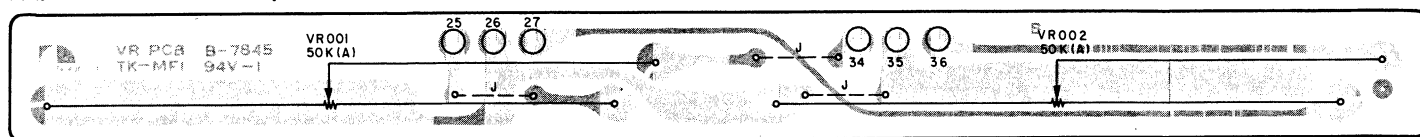


Fig. 7.2

7.3. Lamp P.C.B. Ass'y

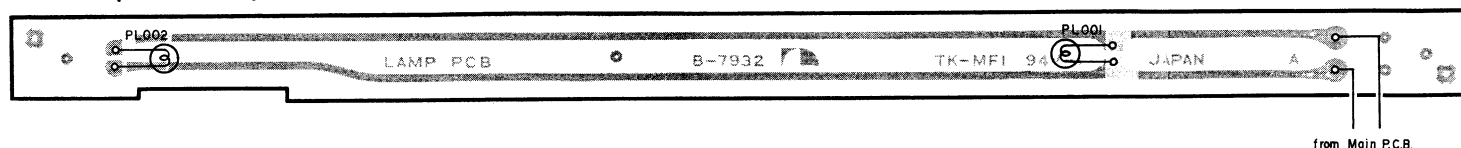


Fig. 7.3

7.4. MPX Filter Switch P.C.B. Ass'y

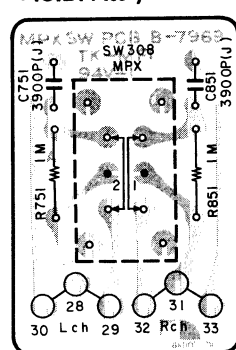


Fig. 7.4

7.5. Headphone Switch P.C.B. Ass'y

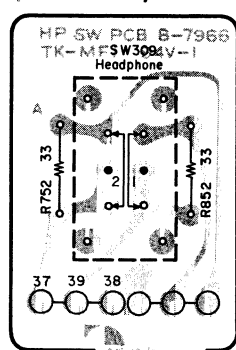


Fig. 7.5

7.6. Bias Tune Volume P.C.B. Ass'y

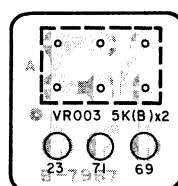


Fig. 7.6

7.7. Indicator P.C.B. Ass'y

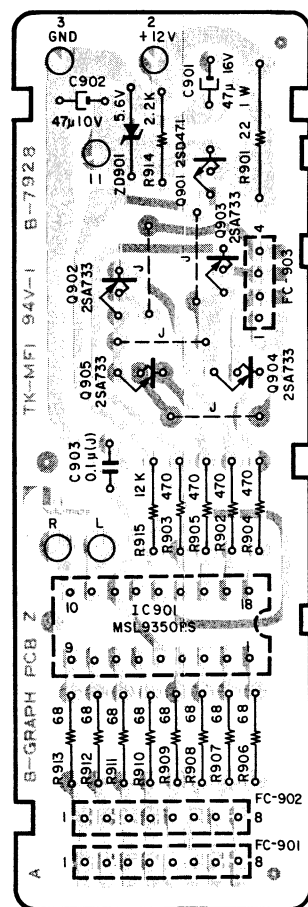


Fig. 7.7

7.8. Switch P.C.B. Ass'y

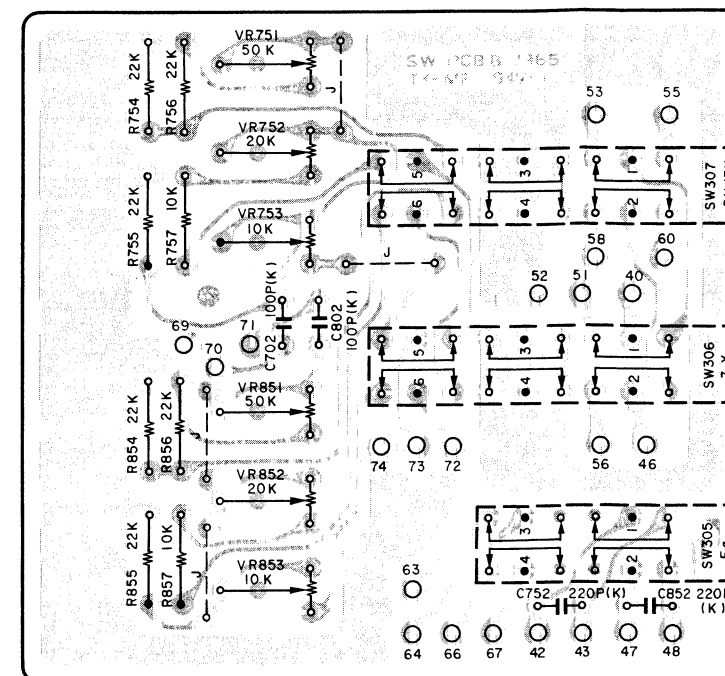


Fig. 7.8.1 Serial No.: A30805969 -
Serial No.: A30902974 -



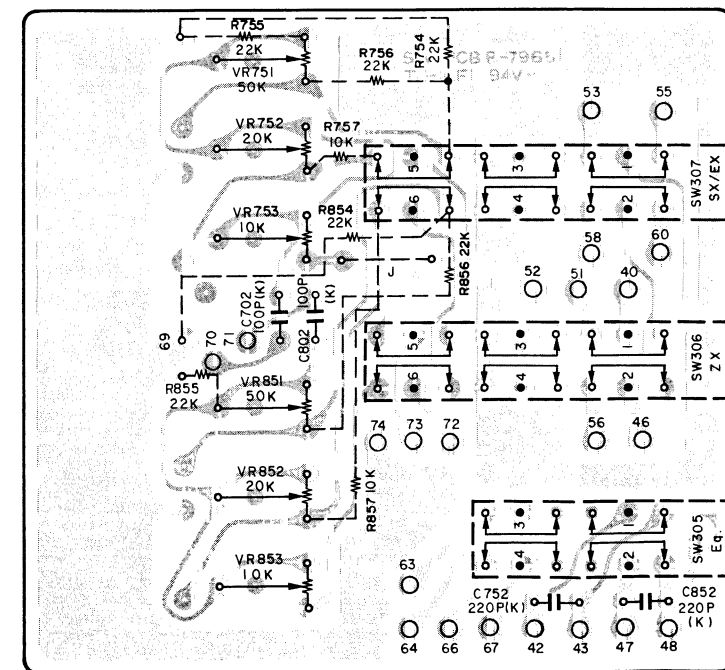


Fig. 7.8.2 Serial Nos.: A30801001 - A30805968
Serial Nos.: A30901001 - A30902973

Schematic Ref. No.	Part No.	
VR001,002	BA04114A	Volume P
	0B07845B 0B07298A	Volume P Slide Vol
PL001,002	BA04416A	Lamp P.C
	0B07932A 0B08674A	Lamp P.C Lamp
R751,851 C751,851 SW308	BA04402A	MPX Filte
	0B07956A 0B05776A 0B01804A 0B07369A	MPX Filte Carbon R Mylar Cap Slide Swit
	BA04420A	Headphor
R752,852 SW309	0B07966A 0B01713A 0B07369A	Headphor Carbon R Slide Swit
	BA04372A	Bias Tune
VR003	0B07967A 0B07355A	Bias Tune Volume
	BA04313A	Indicator
IC901	0B07928A 0B06284A	Indicator IC
	Q901 0B06066A 0B06013A	Transisto Transisto
Q902,903 904,905	0B06268A 0B09378A 0B05576A	Zener Dic Fail Safe Carbon R
	0B01704A	Carbon R
ZD901	0B05622A 0B09263A	Carbon R Carbon R
	0B01403A	Electroly
R901	0B01836A	Electroly
R902,903 904,905	0B01780A	Mylar Cap
R906,907 908,909 910,911 912,913	0B05236A 0B05251A 0B05252A 0B06291A	8P Flat C 8P Flat C 4P Flat C Indicator
R914		Carbon R
R915		Carbon R
C901		Electroly
C902		Electroly
C903		Mylar Cap
FC901		8P Flat C
FC902		8P Flat C
FC903		4P Flat C

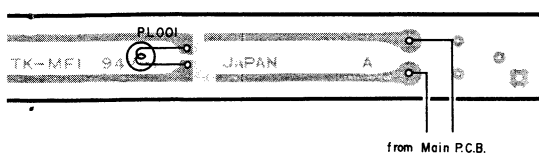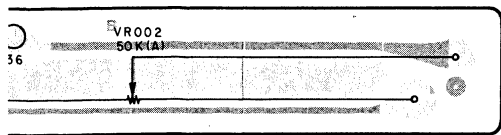

7.7. Indicator P.C.B. Ass'y

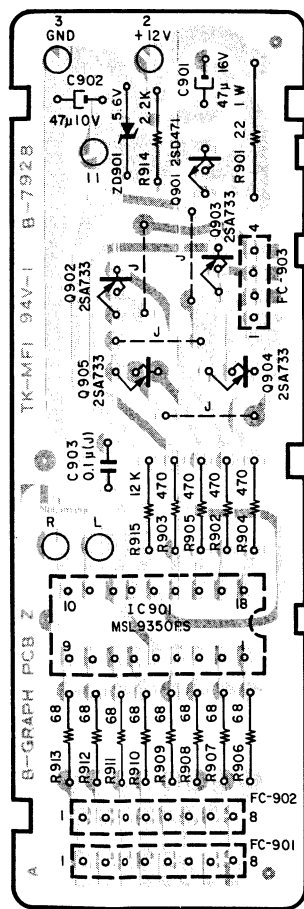


Fig. 7.7

7.8. Switch P.C.B. Ass'y

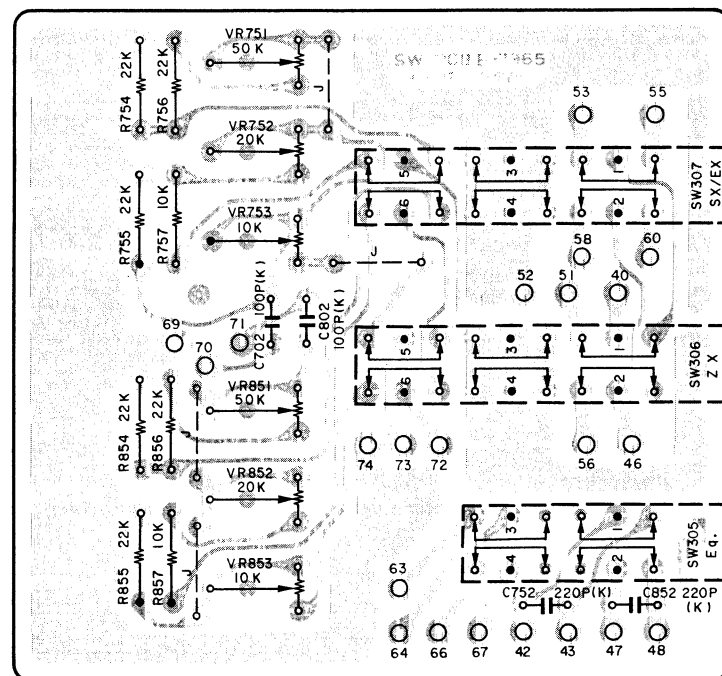


Fig. 7.8.1 Serial No.: A30805969 -
Serial No.: A30902974 -

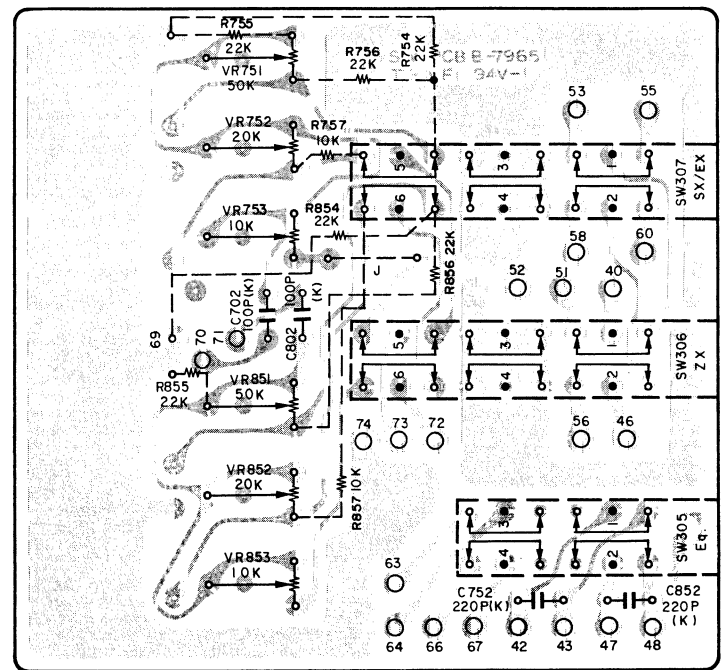


Fig. 7.8.2 Serial Nos.: A30801001 - A30805968
Serial Nos.: A30901001 - A30902973

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
VR001,002	BA04114A	Volume P.C.B. Ass'y	VR751,851 VR752,852 VR753,853	BA04430A	Switch P.C.B. Ass'y
	OB07845B OB07298A	Volume P.C.B. Slide Volume 50K (A)		OB07965A OB07237A OB07261A OB07236A OB05615A	Switch P.C.B. Semi-fixed Volume 50K Semi-fixed Volume 20K Semi-fixed Volume 10K Carbon Resistor 22K ERD-25T J
PL001,002	BA04416A	Lamp P.C.B. Ass'y	R754,755 756,854 855,856	OB01888A OB09282A OB09283A OB07302A	Carbon Resistor 10K ERD-25T J Ceramic Capacitor 100P 50V K Ceramic Capacitor 220P 50V K Push Switch (1 pce.)
	OB07932A OB08674A	Lamp P.C.B. Lamp 5V 200mA	R757,857 C702,802 C752,852		
R751,851 C751,851 SW308	BA04402A	MPX Filter Switch P.C.B. Ass'y	Q449 Q450 D470 R602 R603 R604 R605 C453 PL407	BA04070A	Shut-off P.C.B. Ass'y
	OB07956A OB05776A OB01804A OB07369A	MPX Filter Switch P.C.B. Carbon Resistor 1M ERD-25T J Mylar Capacitor 3900P 50V J Slide Switch 22S			
R752,852 SW309	BA04420A	Headphone Switch P.C.B. Ass'y	OB07839A OB01872A OB06228A OB06181A OB01888A OB05671A OB05615A OB09215A OB01405A OB08552A	BA04126A	Control P.C.B. Ass'y
	OB07966A OB01713A OB07369A	Headphone Switch P.C.B. Carbon Resistor 33 ERD-25T J Slide Switch 22S			
VR003	BA04372A	Bias Tune Volume P.C.B. Ass'y	VR602,603 R606 R607	OB07849B OB09059A OB05698A OB05622A	Control P.C.B. Semi-fixed Volume 5K Carbon Resistor 1.5K ERD-25T J Carbon Resistor 2.2K ERD-25T J
	OB07967A OB07355A	Bias Tune Volume P.C.B. Volume 5K (B) x 2			
IC901 Q901 Q902,903 Q904,905 ZD901 R901 R902,903 R904,905 R906,907 908,909 910,911 912,913 R914 R915 C901 C902 C903 FC901 FC902 FC903	BA04313A	Indicator P.C.B. Ass'y	D601 R608,609 R610,611 612 C605,606 PL601,602 603	BA04424A	Control Switch P.C.B. Ass'y
	OB07928A OB06284A OB06066A OB06013A OB06268A OB09378A OB05576A OB01704A OB05622A OB09263A OB01403A OB01836A OB01780A OB05236A OB05251A OB05252A OB06291A	Indicator P.C.B. IC MSL9350RS Transistor 2SD471 Transistor 2SA733 Zener Diode 5.6V RD5.6EB3 Fail Safe Type Resistor 22 RSF-1B J Carbon Resistor 470 ERD-25T J Carbon Resistor 68 ERD-25T J Carbon Resistor 2.2K ERD-25T J Carbon Resistor 12K ERD-25T J Electrolytic Capacitor 47μ 16V Electrolytic Capacitor 47μ 10V Mylar Capacitor 0.1μ 50V J 8P Flat Cable 8P Flat Cable 80mm 4P Flat Cable 35mm Indicator SEL8806N (1 pce.)			

7.9. Shut-off P.C.B. Ass'y

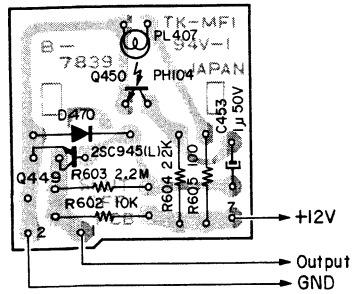


Fig. 7.9

Note: Diode is 1SS53 unless otherwise specified.

7.10. Control P.C.B. Ass'y

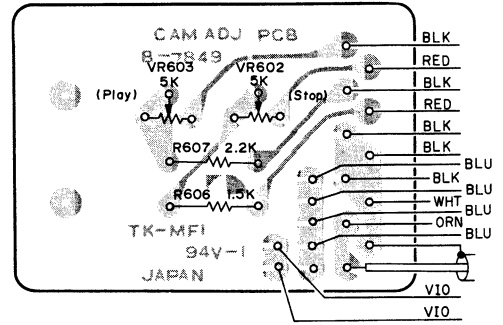


Fig. 7.10

7.11. Control Switch P.C.B. Ass'y

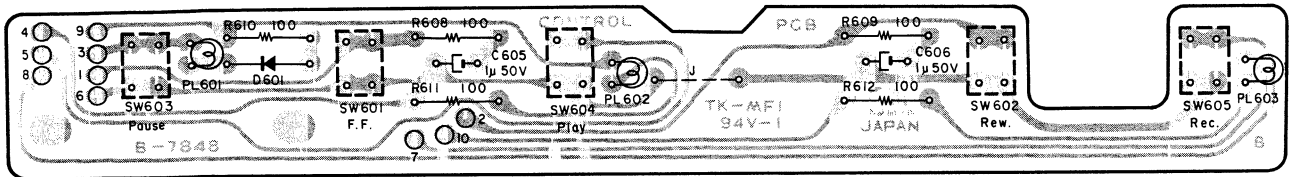


Fig. 7.11

Note: Diode is 1SS53 unless otherwise specified.

7.12. Logic P.C.B. Ass'y

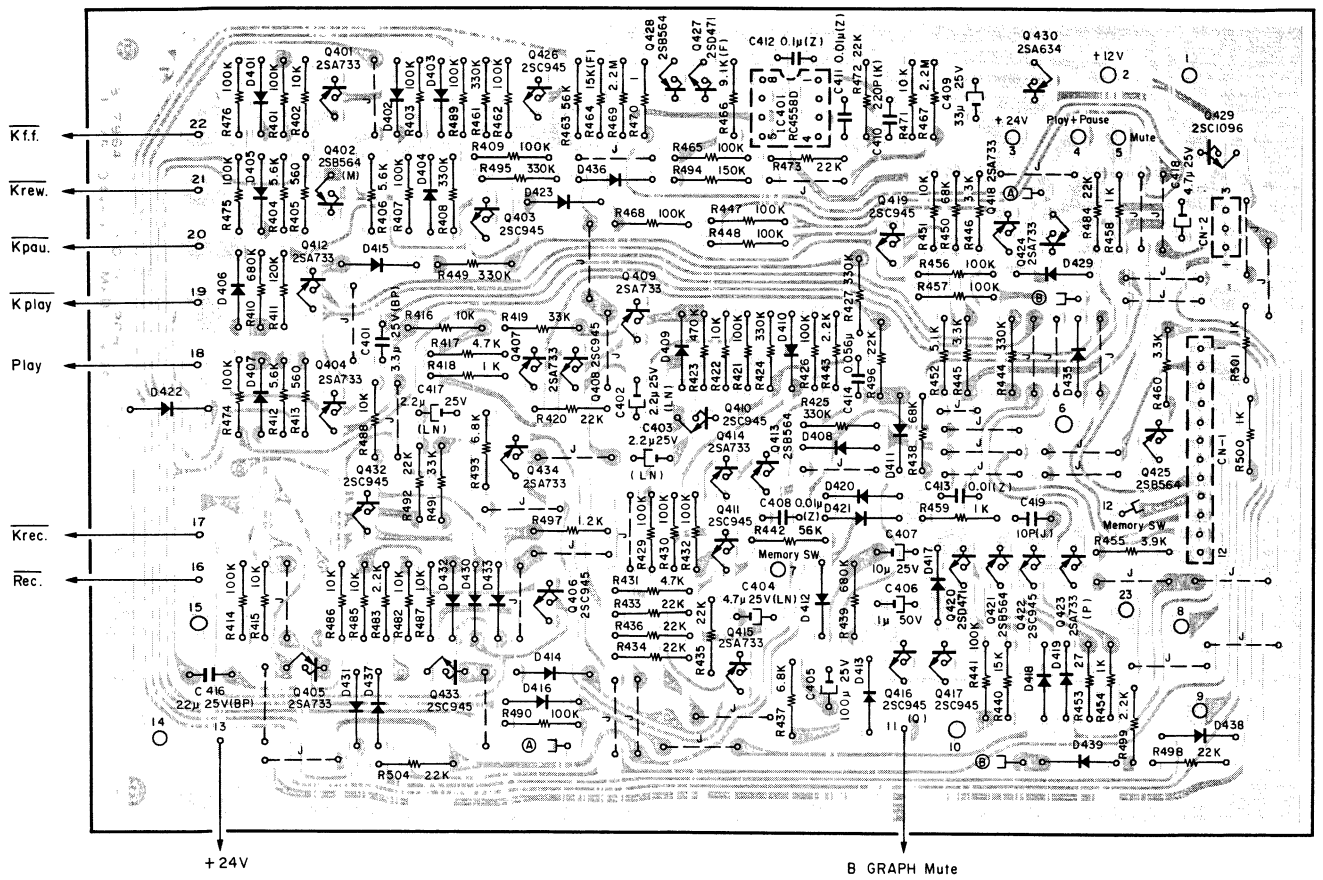


Fig. 7.12.1 Serial No.: A30808688 –
Serial No.: A30908913 –

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	BA04512A	Logic P.C.B. Ass'y Serial No.: A30808688 – Serial No.: A30908913 –	R420,433 434,435 436,472 473,484 492,496 498,504	OB05615A	Carbon Resistor 22K ERD-25T J
IC401	OB07964C	Logic P.C.B.	R423	OB01684A	Carbon Resistor 470K ERD-25T J
Q401,404 405,407 409,412 414,415 418,424 434	OB06124B OB06013A	IC RC4558D Transistor 2SA733	R437,493 R438,450 R440 R442,463 R443,483 499	OB01682A OB05692A OB01683A OB05508A OB05622A	Carbon Resistor 6.8K ERD-25T J Carbon Resistor 68K ERD-25T J Carbon Resistor 15K ERD-25T J Carbon Resistor 56K ERD-25T J Carbon Resistor 2.2K ERD-25T J
Q402 Q403,406 408,410 411,417 419,422 426,432 433	OB06332A OB06100A	Transistor 2SB564 (M) Transistor 2SC945 (A)	R445,446 460 R452 R453 R455 R464 R466 R467,469	OB01681A OB09314A OB09384A OB05675A OB09340A OB09328A OB05671A	Carbon Resistor 3.3K ERD-25T J Carbon Resistor 5.1K ERD-25T J Fail Safe Type Resistor 27 RDF-25S J Carbon Resistor 3.9K ERD-25T J Metal Film Resistor 15K SN14K2E F Metal Film Resistor 9.1K SN14K2E F Carbon Resistor 2.2M ERD-25T J
Q413,425 428 Q416 Q420,427 Q421 Q423 Q429 Q430	OB06069A OB06251A OB06066A OB06252A OB06155A OB06020A OB06012A	Transistor 2SB564 Transistor 2SC945 (Q) Transistor 2SD471 Transistor 2SB564 (K) Transistor 2SA733 (P) Transistor 2SC1096 Transistor 2SA634	C401 C402,403 417 C404 C405 C406 C407 C408,411 413 C409 C410 C412 C414 C416 C418 C419	OB09345A OB09332A OB09333A OB01272A OB01405A OB01674A OB09290A OB09251A OB09283A OB09292A OB01676A OB09368A OB01402A OB09277A	Electrolytic Capacitor 3.3μ 25V (BP) Electrolytic Capacitor 2.2μ 25V (LN) Electrolytic Capacitor 4.7μ 25V (LN) Electrolytic Capacitor 100μ 25V Electrolytic Capacitor 1μ 50V Electrolytic Capacitor 10μ 25V Ceramic Capacitor 0.01μ 50V Z Electrolytic Capacitor 33μ 25V Ceramic Capacitor 220P 50V K Ceramic Capacitor 0.1μ 50V Z Mylar Capacitor 0.056μ 50V Electrolytic Capacitor 22μ 25V (BP) Electrolytic Capacitor 4.7μ 25V Ceramic Capacitor 10P 50V J
D401-423 429-433 435-439 R401,403 407,409 414,421 426,429 430,432 441,447 448,456 457,462 465,468 474,475 476,489 490	OB06181A	Silicon Diode 1SS53 (33 pcs.)	CN1 CN2	OB08681A OB08653A	12P-T Post 3P-T Post
R402,415 416,422 451,471 482,485 486,487 488	OB01889A	Carbon Resistor 100K ERD-25T J		OB08606A OB08607A OE00507A OE00607A	Transistor Mica TO-202 (1 pce.) Transistor Bushing TO-202 (1 pce.) Nut Hex. M3 (1 pce.) Screw M3x8 Philips Pan Head (3A) (1 pce.)
R404,406 412 R405,413 R408,424 425,427 444,449 461,495	OB01887A OB05575A OB05627A	Carbon Resistor 5.6K ERD-25T J Carbon Resistor 560 ERD-25T J Carbon Resistor 330K ERD-25T J		OE00857A	BT Screw M3x6 Philips Binding Head (4 pcs.)
R410,439 R411 R417,431 R418,454 458,459 500,501 R419,491	OB09335A OB05621A OB01846A OB01857A OB05509A	Carbon Resistor 680K ERD-25T J Carbon Resistor 120K ERD-25T J Carbon Resistor 4.7K ERD-25T J Carbon Resistor 1K ERD-25T J Carbon Resistor 33K ERD-25T J		OJ04349A OJ04350A	P.C.B. Holder L (1 pce.) P.C.B. Holder R (1 pce.)

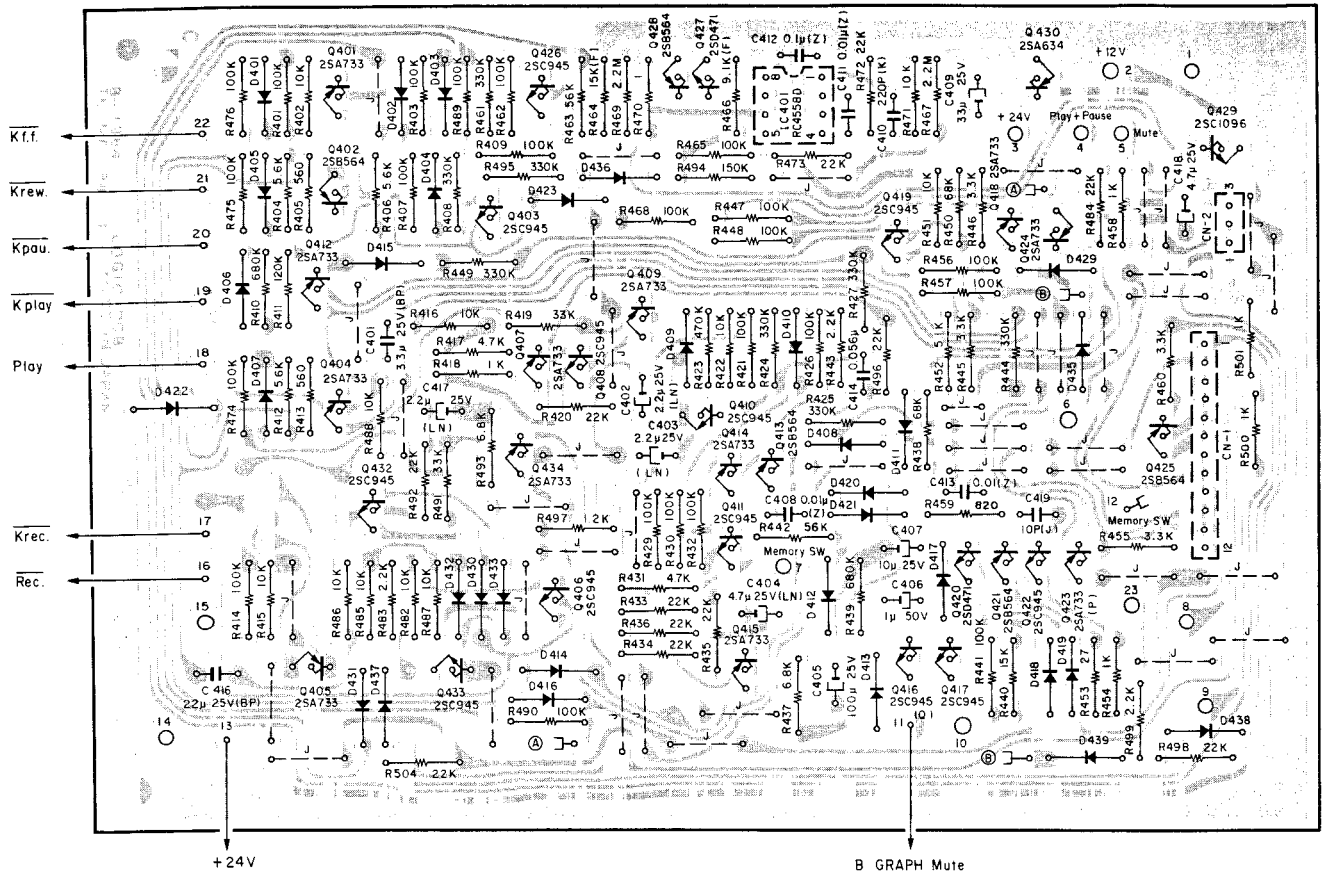


Fig. 7.12.2 Serial Nos.: A30801001 – A30808687
Serial Nos.: A30901001 – A30908912

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	BA04512A	Logic P.C.B. Ass'y Serial Nos.: A30801001 – A30808687 Serial Nos.: A30901001 – A30908912	R420,433 434,435 436,472 473,484 492,496 498,504	0B05615A	Carbon Resistor 22K ERD-25T J
IC401	0B07964C	Logic P.C.B.	R423	0B01684A	Carbon Resistor 470K ERD-25T J
Q401,404	0B06124B	IC RC4558D	R437,493	0B01682A	Carbon Resistor 6.8K ERD-25T J
405,407	0B06013A	Transistor 2SA733	R438,450	0B05692A	Carbon Resistor 68K ERD-25T J
409,412			R440	0B01683A	Carbon Resistor 15K ERD-25T J
414,415			R442,463	0B05508A	Carbon Resistor 56K ERD-25T J
418,424			R443,483	0B05622A	Carbon Resistor 2.2K ERD-25T J
434			499		
Q402,413	0B06069A	Transistor 2SB564	R445,446	0B01681A	Carbon Resistor 3.3K ERD-25T J
425,428			455,460		
Q403,406	0B06100A	Transistor 2SC945 (A)	R452	0B09314A	Carbon Resistor 5.1K ERD-25T J
408,410			R453	0B09384A	Fail Safe Type Resistor 27 RDF-25S J
411,417			R459	0B01680A	Carbon Resistor 820 ERD-25T J
419,422			R464	0B09340A	Metal Film Resistor 15K SN14K2E F
426,432			R466	0B09328A	Metal Film Resistor 9.1K SN14K2E F
433			R467,469	0B05671A	Carbon Resistor 2.2M ERD-25T J
Q416	0B06251A	Transistor 2SC945 (Q)	R470	0B09214A	Fail Safe Type Resistor 1 RDF-25S J
Q420,427	0B06066A	Transistor 2SD471	R494	0B05626A	Carbon Resistor 150K ERD-25T J
Q421	0B06252A	Transistor 2SB564 (K)	R497	0B05623A	Carbon Resistor 1.2K ERD-25T J
Q423	0B06155A	Transistor 2SA733 (P)	C401	0B09345A	Electrolytic Capacitor 3.3 μ 25V (BP)
Q429	0B06020A	Transistor 2SC1096	C402,403	0B09332A	Electrolytic Capacitor 2.2 μ 25V (LN)
Q430	0B06012A	Transistor 2SA634	417		
D401-423	0B06181A	Silicon Diode 1SS53 (33 pcs.)	C404	0B09333A	Electrolytic Capacitor 4.7 μ 25V (LN)
429-433			C405	0B01272A	Electrolytic Capacitor 100 μ 25V
435-439			C406	0B01405A	Electrolytic Capacitor 1 μ 50V
R401,403	0B01889A	Carbon Resistor 100K ERD-25T J	C407	0B01674A	Electrolytic Capacitor 10 μ 25V
407,409			C408,411	0B09290A	Ceramic Capacitor 0.01 μ 50V Z
414,421			413		
426,429			C409	0B09251A	Electrolytic Capacitor 33 μ 25V
430,432			C410	0B09283A	Ceramic Capacitor 220P 50V K
441,447			C412	0B09292A	Ceramic Capacitor 0.1 μ 50V Z
448,456			C414	0B01676A	Mylar Capacitor 0.056 μ 50V
457,462			C416	0B09368A	Electrolytic Capacitor 22 μ 25V (BP)
465,468			C418	0B01402A	Electrolytic Capacitor 4.7 μ 25V
474,475			C419	0B09277A	Ceramic Capacitor 10P 50V J
476,489			CN1	0B08681A	12P-T Post
490			CN2	0B08653A	3P-T Post
R402,415	0B01888A	Carbon Resistor 10K ERD-25T J		0B08606A	Transistor Mica TO-202 (1 pce.)
416,422				0B08607A	Transistor Bushing TO-202 (1 pce.)
451,471				0E00507A	Nut Hex. M3 (1 pce.)
482,485				0E00510A	Screw M3x8 Philips Pan Head (2A) (1 pce.)
486,487					
488				0E00857A	BT Screw M3x6 Philips Binding Head (4 pcs.)
R404,406	0B01887A	Carbon Resistor 5.6K ERD-25T J		0J04349A	P.C.B. Holder L (1 pce.)
412				0J04350A	P.C.B. Holder R (1 pce.)
R405,413	0B05575A	Carbon Resistor 560 ERD-25T J			
R408,424	0B05627A	Carbon Resistor 330K ERD-25T J			
425,427					
444,449					
461,495					
R410,439	0B09335A	Carbon Resistor 680K ERD-25T J			
R411	0B05621A	Carbon Resistor 120K ERD-25T J			
R417,431	0B01846A	Carbon Resistor 4.7K ERD-25T J			
R418,454	0B01857A	Carbon Resistor 1K ERD-25T J			
458,500					
501					
R419,491	0B05509A	Carbon Resistor 33K ERD-25T J			

8. MECHANISM ASS'Y AND PARTS LIST

8.1. Synthesis

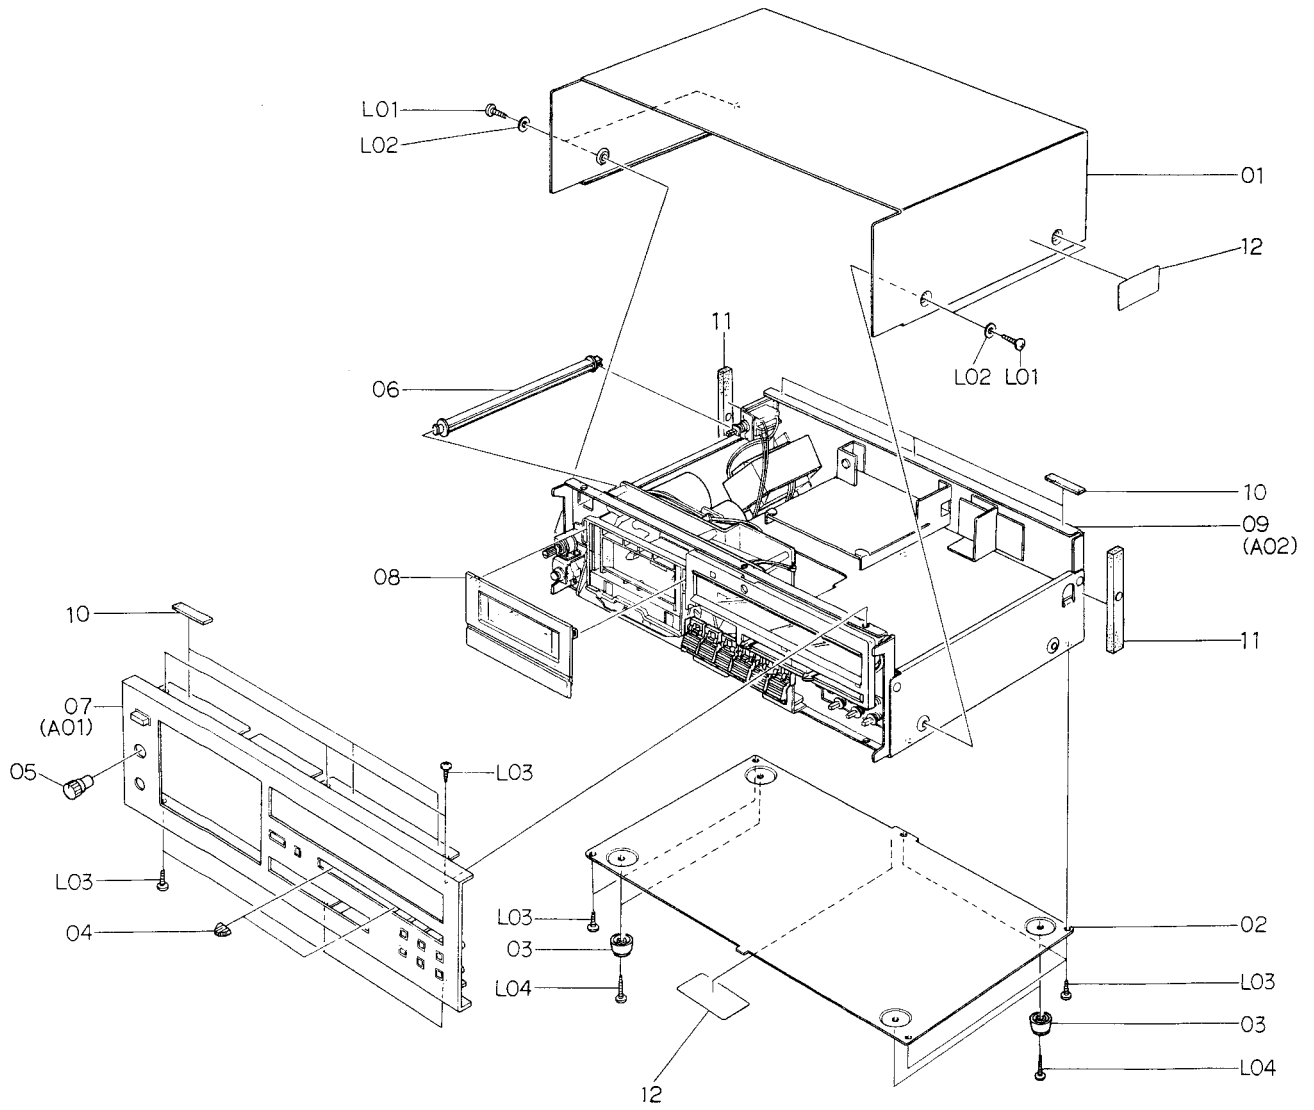


Fig. 8.1

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
	HA04095A	Synthesis (U.S.A. & Canada) (Silver)	1		HA04095A	Synthesis (U.S.A. & Canada) (Silver)	1
	HA04 101A	Synthesis (U.S.A. & Canada) (Black)	1		HA04101A	Synthesis (U.S.A. & Canada) (Black)	1
	HA04096A	Synthesis (Japan) (Silver)	1		HA04096A	Synthesis (Japan) (Silver)	1
	HA04 102A	Synthesis (Japan) (Black)	1		HA04102A	Synthesis (Japan) (Black)	1
	HA04099A	Synthesis (220V Class 2) (Silver)	1		HA04099A	Synthesis (220V Class 2) (Silver)	1
	HA04 105A	Synthesis (220V Class 2) (Black)	1		HA04105A	Synthesis (220V Class 2) (Black)	1
	HA04094A	Synthesis (UK) (Silver)	1		HA04094A	Synthesis (UK) (Silver)	1
	HA04 100A	Synthesis (UK) (Black)	1		HA04100A	Synthesis (UK) (Black)	1
	HA04998A	Synthesis (Australia) (Silver)	1		HA04998A	Synthesis (Australia) (Silver)	1
	HA04 104A	Synthesis (Australia) (Black)	1		HA04104A	Synthesis (Australia) (Black)	1
	HA04097A	Synthesis (Others) (Silver)	1		HA04097A	Synthesis (Others) (Silver)	1
	HA04 103A	Synthesis (Others) (Black)	1		HA04103A	Synthesis (Others) (Black)	1
		Serial No.:				Serial Nos.:	
		A30808688 –				A30801001 – A30808687	
		A30908913 –				A30901001 – A30908912	
01	0H03768A	Top Cover	1	01	0H03768A	Top Cover	1
02	0H03769B	Bottom Cover	1	02	0H03769B	Bottom Cover	1
03	0J03564A	Leg T-H	4	03	0J03564A	Leg T-H	4
04	0H03780A	Volume Knob (Silver)	2	04	0H03780A	Volume Knob (Silver)	2
	0H03794B	Volume Knob (Black)	2		0H03794B	Volume Knob (Black)	2
05	0H03923A	Bias Adjustment Knob (Silver)	1	05	0H03923A	Bias Adjustment Knob (Silver)	1
	0H03924A	Bias Adjustment Knob (Black)	1		0H03924A	Bias Adjustment Knob (Black)	1
06	0J04066C	Power Switch Joint Bar	1	06	0J04066C	Power Switch Joint Bar	1
07	HA04090A	Front Panel Ass'y (Silver)	1	07	HA04090A	Front Panel Ass'y (Silver)	1
	HA04091A	Front Panel Ass'y (Black)	1		HA04091A	Front Panel Ass'y (Black)	1
08	HA03848A	Cassette Case Cover Ass'y (Silver)	1	08	HA03848A	Cassette Case Cover Ass'y (Silver)	1
	HA03872A	Cassette Case Cover Ass'y (Black)	1		HA03872A	Cassette Case Cover Ass'y (Black)	1
09	JA03802B	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Silver)	1	09	JA03802A	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Silver)	1
	JA03834B	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Black)	1		JA03834A	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Black)	1
	JA03803B	Synthesis Mechanism Ass'y (Japan) (Silver)	1		JA03803A	Synthesis Mechanism Ass'y (Japan) (Silver)	1
	JA03835B	Synthesis Mechanism Ass'y (Japan) (Black)	1		JA03835A	Synthesis Mechanism Ass'y (Japan) (Black)	1
	JA03806B	Synthesis Mechanism Ass'y (220V Class 2) (Silver)	1		JA03806A	Synthesis Mechanism Ass'y (220V Class 2) (Silver)	1
	JA03838B	Synthesis Mechanism Ass'y (220V Class 2) (Black)	1		JA03838A	Synthesis Mechanism Ass'y (220V Class 2) (Black)	1
	JA03801B	Synthesis Mechanism Ass'y (UK) (Silver)	1		JA03801A	Synthesis Mechanism Ass'y (UK) (Silver)	1
	JA03833B	Synthesis Mechanism Ass'y (UK) (Black)	1		JA03833A	Synthesis Mechanism Ass'y (UK) (Black)	1
	JA03805B	Synthesis Mechanism Ass'y (Australia) (Silver)	1		JA03805A	Synthesis Mechanism Ass'y (Australia) (Silver)	1
	JA03837B	Synthesis Mechanism Ass'y (Australia) (Black)	1		JA03837A	Synthesis Mechanism Ass'y (Australia) (Black)	1
	JA03804B	Synthesis Mechanism Ass'y (Others) (Silver)	1		JA03804A	Synthesis Mechanism Ass'y (Others) (Silver)	1
	JA03936B	Synthesis Mechanism Ass'y (Others) (Black)	1		JA03936A	Synthesis Mechanism Ass'y (Others) (Black)	1
10	0H03781A	Cushion A	6	10	0H03781A	Cushion A	6
11	0H03995A	Cushion B	2	11	0H03995A	Cushion B	2
12	0M04101B	Caution Label	2	12	0M04101B	Caution Label	2
L01	0E00858A	BT Screw M4x6 Philips Binding Head (Black Chromate)	4	L01	0E00858A	BT Screw M4x6 Philips Binding Head (Black Chromate)	4
L02	0E00736A	Washer 4mm (Black Chromate)	4	L02	0E00736A	Washer 4mm (Black Chromate)	4
L03	0E00857A	BT Screw M3x6 Philips Binding Head	11	L03	0E00857A	BT Screw M3x6 Philips Binding Head	11
L04	0E00865A	BT Screw M3x10 Philips Binding Head	4	L04	0E00865A	BT Screw M3x10 Philips Binding Head	4

8.2. Front Panel Ass'y (A01)

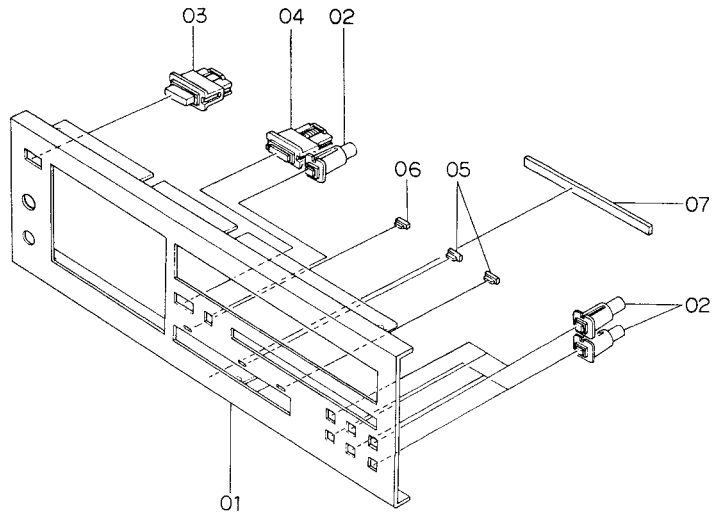


Fig. 8.2

8.3. Synthesis Mechanism Ass'y (A02)

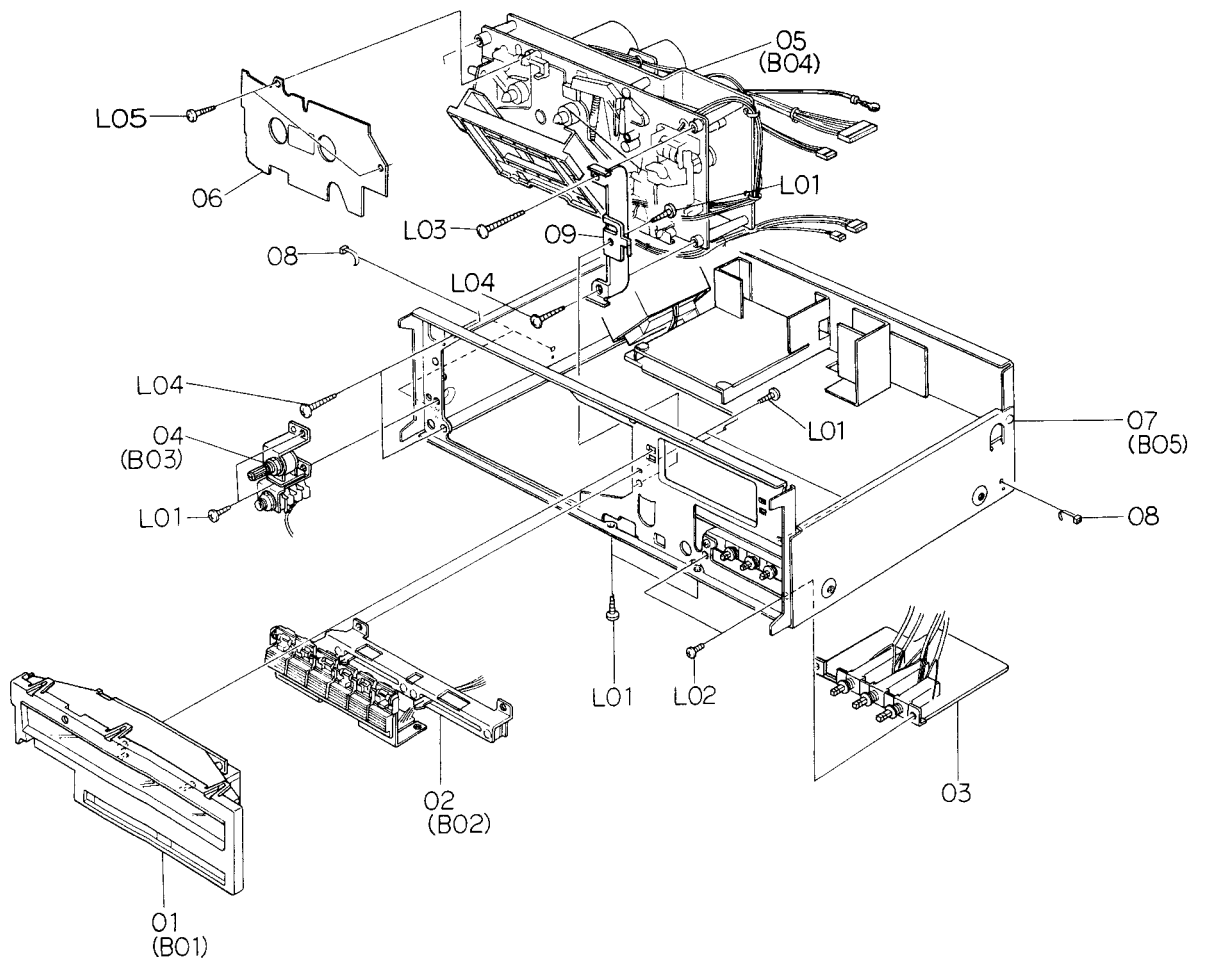


Fig. 8.3

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty	
A01	HA04090A	Front Panel Ass'y (Silver)	1	09	0J04130B	Mechanism Bracket	1	
	HA04091A	Front Panel Ass'y (Black)	1	L01	0E00857A	BT Screw M3x6 Philips Binding Head	7	
		Serial No.:		L02	0E00502A	Screw M3x5 Philips Pan Head	2	
		A308.901001 -		L03	0E00924A	BT Screw M4x16 Philips Binding Head (Chromate)	1	
	01	0H03932A	Front Panel (Silver)	1	L04	0E00944A	BT Screw M4x15 Philips Binding Head (Black Chromate)	3
		0H03933A	Front Panel (Black)	1	L05	0E00832A	BT Screw M3x14 Philips Pan Head	2
	02	HA03852A	Push Button Ass'y C (Silver)	1	A02	JA03802A	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Silver)	1
		HA03873A	Push Button Ass'y C (Black)	1		JA03834A	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Black)	1
	03	HA03853A	Push Button Ass'y D (Silver)	1		JA03803A	Synthesis Mechanism Ass'y (Japan) (Silver)	1
		HA03874A	Push Button Ass'y D (Black)	1		JA03835A	Synthesis Mechanism Ass'y (Japan) (Black)	1
	04	HA03854A	Eject Button Ass'y (Silver)	1		JA03806A	Synthesis Mechanism Ass'y (220V Class 2) (Silver)	1
		HA03875A	Eject Button Ass'y (Black)	1		JA03838A	Synthesis Mechanism Ass'y (220V Class 2) (Black)	1
	05	0H03744B	Green Lens	2		JA03801A	Synthesis Mechanism Ass'y (UK) (Silver)	1
	06	0H03745B	Orange Lens	1		JA03833A	Synthesis Mechanism Ass'y (UK) (Black)	1
07	0J04094A	Control Button Pad	1	JA03805A		Synthesis Mechanism Ass'y (Australia) (Silver)	1	
-	0J04081A	Adhesive Tape 55x6	5	JA03837A		Synthesis Mechanism Ass'y (Australia) (Black)	1	
-	0J04082A	Adhesive Tape 30x6	2	JA03804A		Synthesis Mechanism Ass'y (Others) (Silver)	1	
				JA03836A		Synthesis Mechanism Ass'y (Others) (Black)	1	
				Serial Nos.:				
						A30801001 - A30808687		
					A30901001 - A30908912			
A02	JA03802B	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Silver)	1	01	HA04089A	Meter Escutcheon Ass'y	1	
	JA03834B	Synthesis Mechanism Ass'y (U.S.A. & Canada) (Black)	1	02	JA03849A	Control Switch Holder Ass'y (Silver)	1	
	JA03803B	Synthesis Mechanism Ass'y (Japan) (Silver)	1		JA03850A	Control Switch Holder Ass'y (Black)	1	
	JA03835B	Synthesis Mechanism Ass'y (Japan) (Black)	1	03	BA04430A	Switch P.C.B. Ass'y	1	
	JA03806B	Synthesis Mechanism Ass'y (220V Class 2) (Silver)	1	04	JA03782A	Headphone Jack Ass'y	1	
	JA03838B	Synthesis Mechanism Ass'y (220V Class 2) (Black)	1	05	CA08266A	Mechanism Ass'y 480Z	1	
	JA03801B	Synthesis Mechanism Ass'y (UK) (Silver)	1	06	CA08276A	Cover Plate Ass'y	1	
	JA03833B	Synthesis Mechanism Ass'y (UK) (Black)	1	07	JA03784A	Chassis Ass'y (U.S.A. & Canada)	1	
	JA03805B	Synthesis Mechanism Ass'y (Australia) (Silver)	1		JA03785A	Chassis Ass'y (Japan)	1	
	JA03837B	Synthesis Mechanism Ass'y (Australia) (Black)	1		JA03788A	Chassis Ass'y (220V Class 2)	1	
	JA03804B	Synthesis Mechanism Ass'y (Others) (Silver)	1		JA03783A	Chassis Ass'y (UK)	1	
	JA03836B	Synthesis Mechanism Ass'y (Others) (Black)	1		JA03787A	Chassis Ass'y (Australia)	1	
		Serial No.:			JA03786A	Chassis Ass'y (Others)	1	
		A30808688 -		08	0B08515A	Insu-Lock	18	
		A30908913 -		09	0J04130B	Mechanism Bracket	1	
01	HA04089A	Meter Escutcheon Ass'y	1	L01	0E00857A	BT Screw M3x6 Philips Binding Head	7	
02	JA03849A	Control Switch Holder Ass'y (Silver)	1	L02	0E00502A	Screw M3x5 Philips Pan Head	2	
	JA03850A	Control Switch Holder Ass'y (Black)	1	L03	0E00924A	BT Screw M4x16 Philips Binding Head (Chromate)	1	
03	BA04430A	Switch P.C.B. Ass'y	1	L04	0E00867A	BT Screw M4x15 Philips Binding Head	3	
04	JA03782A	Headphone Jack Ass'y	1	L05	0E00832A	BT Screw M3x14 Philips Pan Head	2	
05	CA08312A	Mechanism Ass'y 480Z	1					
06	CA08276A	Cover Plate Ass'y	1					
07	JA03784B	Chassis Ass'y (U.S.A. & Canada)	1					
	JA03785B	Chassis Ass'y (Japan)	1					
	JA03788B	Chassis Ass'y (220V Class 2)	1					
	JA03783B	Chassis Ass'y (UK)	1					
	JA03787B	Chassis Ass'y (Australia)	1					
	JA03786B	Chassis Ass'y (Others)	1					
08	0B08515A	Insu-Lock	18					

8.4. Meter Escutcheon Ass'y (B01)

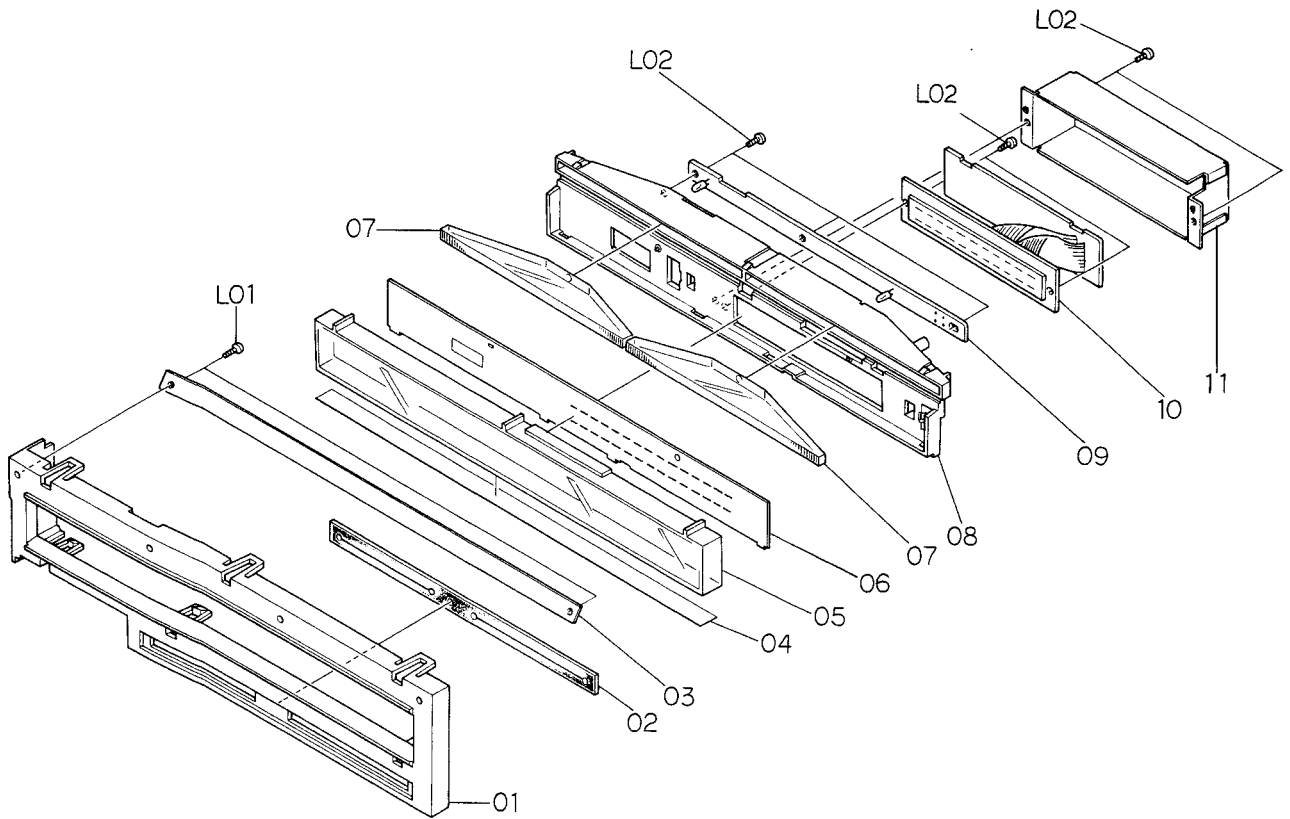


Fig. 8.4

8.5. Control Switch Holder Ass'y (B02)

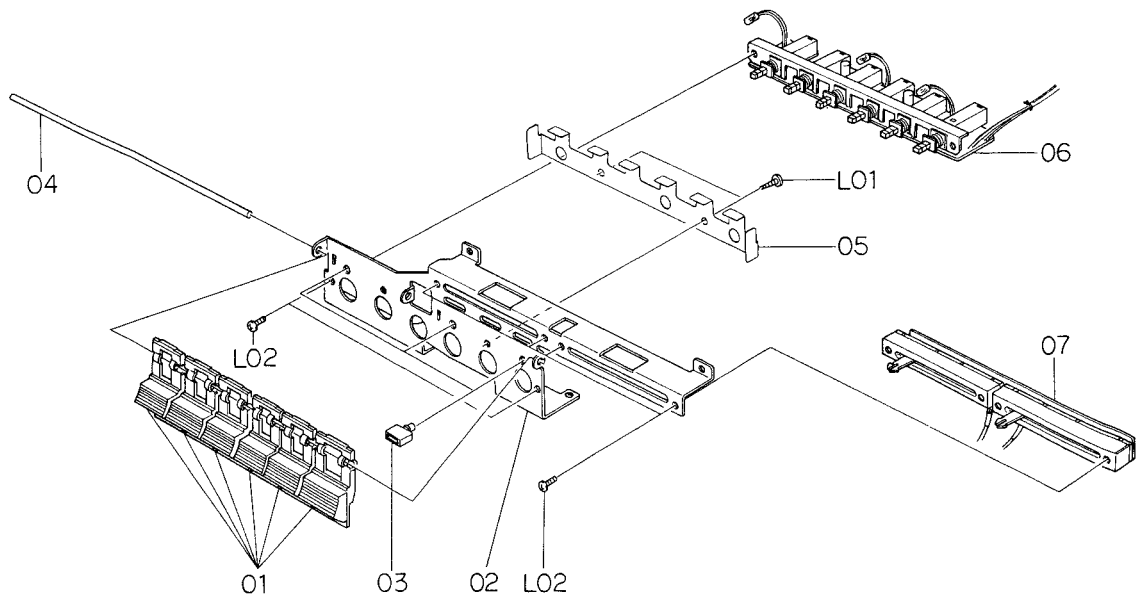


Fig. 8.5

8.6. Headphone Jack Ass'y (B03)

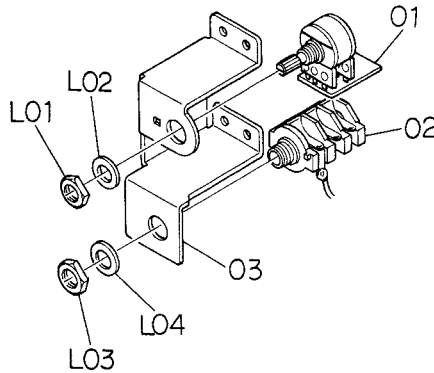


Fig. 8.6

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
B01	HA04089A	Meter Escutcheon Ass'y Serial No.: A308.901001 -	1	B03	JA03782A	Headphone Jack Ass'y Serial No.: A308.901001 -	1
01	0H03931A	Meter Escutcheon	1	01	BA04372A	Bias Tune Volume P.C.B. Ass'y	1
02	0H03786B	Volume Cover	1	02	0B08511A	Headphone Jack	1
03	0H03926A	Mirror	1	03	0J04299A	Headphone Jack Holder	1
04	0H03928A	Light Intercepting Seal	1	L01	-	Bias Tune Volume Nut	(1)
05	0H03929A	Meter Cover	1	L02	-	Bias Tune Volume Washer	(1)
06	0H03927B	Meter Scale	1	L03	-	Headphone Jack Nut	(1)
07	0H03925A	Lamp House	2	L04	-	Headphone Jack Washer	(1)
08	0H03930B	Meter Base	1				
09	BA04416A	Lamp P.C.B. Ass'y	1				
10	BA04313A	Indicator P.C.B. Ass'y	1				
11	0J04298A	Shield Case	1				
L01	0E00855A	BT Screw M2x6 Philips Binding Head	2				
L02	0E00841A	BT Screw M2x4 Philips Pan Head	7				
B02	JA03849A	Control Switch Holder Ass'y (Silver)	1				
	JA03850A	Control Switch Holder Ass'y (Black) Serial No.: A308.901001 -	1				
01	0H03772C	Control Button (Silver)	6				
	0H03793A	Control Button (Black)	6				
02	0J04355A	Control Switch Holder	1				
03	0J04356A	Lamp Cover	3				
04	0J04073A	Control Button Shaft	1				
05	0J04357A	Control Button Spring	1				
06	BA04424A	Control Switch P.C.B. Ass'y	1				
07	BA04114A	Volume P.C.B. Ass'y	1				
L01	0E00857A	BT Screw M3x6 Philips Binding Head	2				
L02	0E00502A	Screw M3x5 Philips Pan Head	6				
L03	0E00117A	Washer 2mm	2				

8.7. Mechanism Ass'y 480Z (B04)

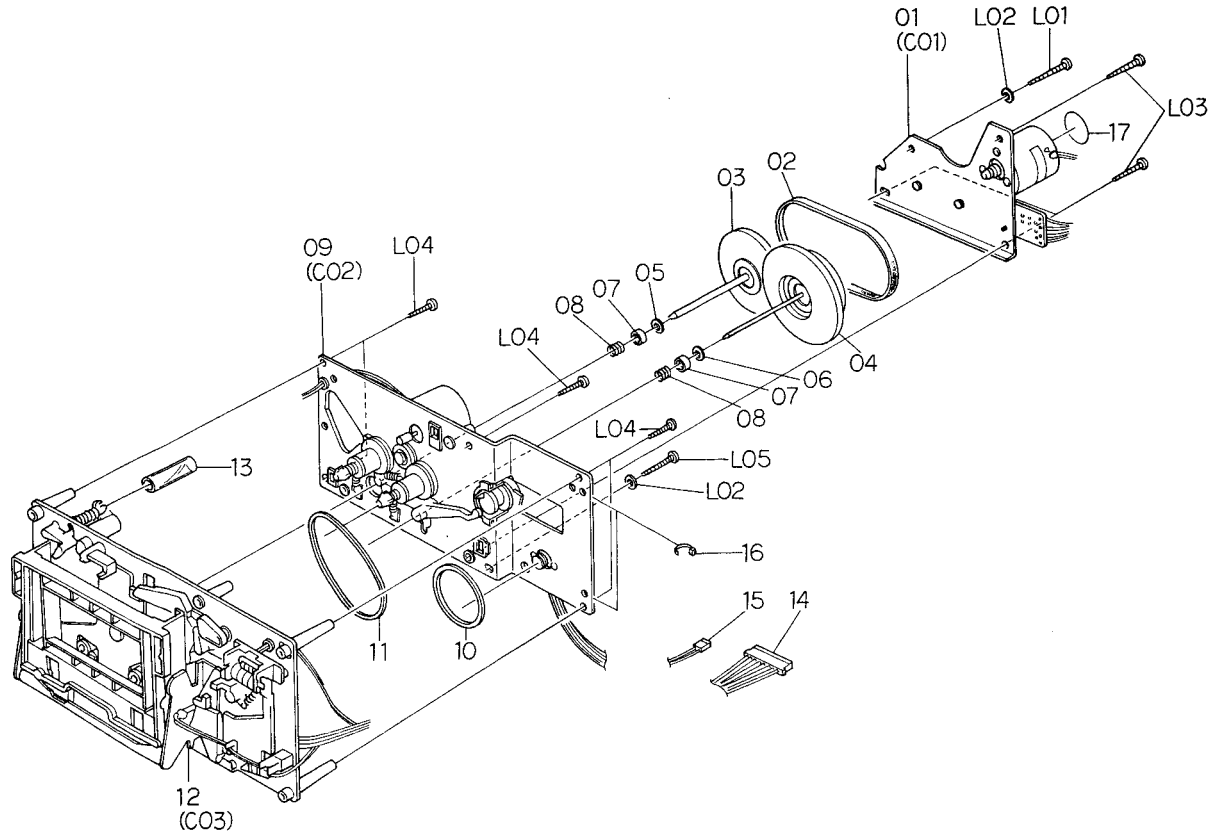


Fig. 8.7

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
B04	CA08312A	Mechanism Ass'y 480Z Serial No.: A30808688 - A30908913 -	1	B04	CA08266A	Mechanism Ass'y 480Z Serial Nos.: A30801001 - A30808687 A30901001 - A30908912	1
01	CA08109B	Flywheel Holder Ass'y	1	01	CA08109B	Flywheel Holder Ass'y	1
02	0C08096C	Capstan Belt	1	02	0C08096C	Capstan Belt	1
03	CA08169A	Supply Flywheel E Ass'y	1	03	CA08169A	Supply Flywheel E Ass'y	1
04	CA08107A	Take-up Flywheel B Ass'y	1	04	CA08107A	Take-up Flywheel B Ass'y	1
05	0C08021B	Thrust Washer 3.1mm	1	05	0C08021B	Thrust Washer 3.1mm	1
06	0C08020B	Thrust Washer 2.6mm	1	06	0C08020B	Thrust Washer 2.6mm	1
07	0C08243A	Flange Thrust Cap	2	07	0C08243A	Flange Thrust Cap	2
08	0C08244A	Flange Thrust Spring	2	08	0C08244A	Flange Thrust Spring	2
09	CA08315A	Sub Mechanism Chassis Ass'y	1	09	CA08232A	Sub Mechanism Chassis Ass'y	1
10	0C08098B	Counter Belt B	1	10	0C08098B	Counter Belt B	1
11	0C08099B	Control Motor Belt	1	11	0C08099B	Control Motor Belt	1
12	CA08269A	Main Mechanism Chassis Ass'y	1	12	CA08269A	Main Mechanism Chassis Ass'y	1
13	0C08151A	Lid Arm Spring Tube	1	13	0C08151A	Lid Arm Spring Tube	1
14	0B08671B	12P-H Connector	1	14	0B08671B	12P-H Connector	1
15	0B08672B	3P-H Connector	1	15	0B08672A	3P-H Connector	1
16	0B08515A	Insu-Lock	9	16	0B08515A	Insu-Lock	9
17	0M03902A	Motor Label	1	17	0M03902A	Motor Label	1
L01	0E00834A	BT Screw M3x30 Philips Pan Head	1	L01	0E00834A	BT Screw M3x30 Philips Pan Head	1
L02	0E00178A	Washer 3mm	2	L02	0E00178A	Washer 3mm	2
L03	0E00833A	BT Screw M3x20 Philips Pan Head	3	L03	0E00833A	BT Screw M3x20 Philips Pan Head	3
L04	0E00883A	BT Screw M3x18 Philips Pan Head	5	L04	0E00883A	BT Screw M3x18 Philips Pan Head	5
L05	0E00835A	BT Screw M3x25 Philips Pan Head	1	L05	0E00835A	BT Screw M3x25 Philips Pan Head	1

8.8. Chassis Ass'y (B05)

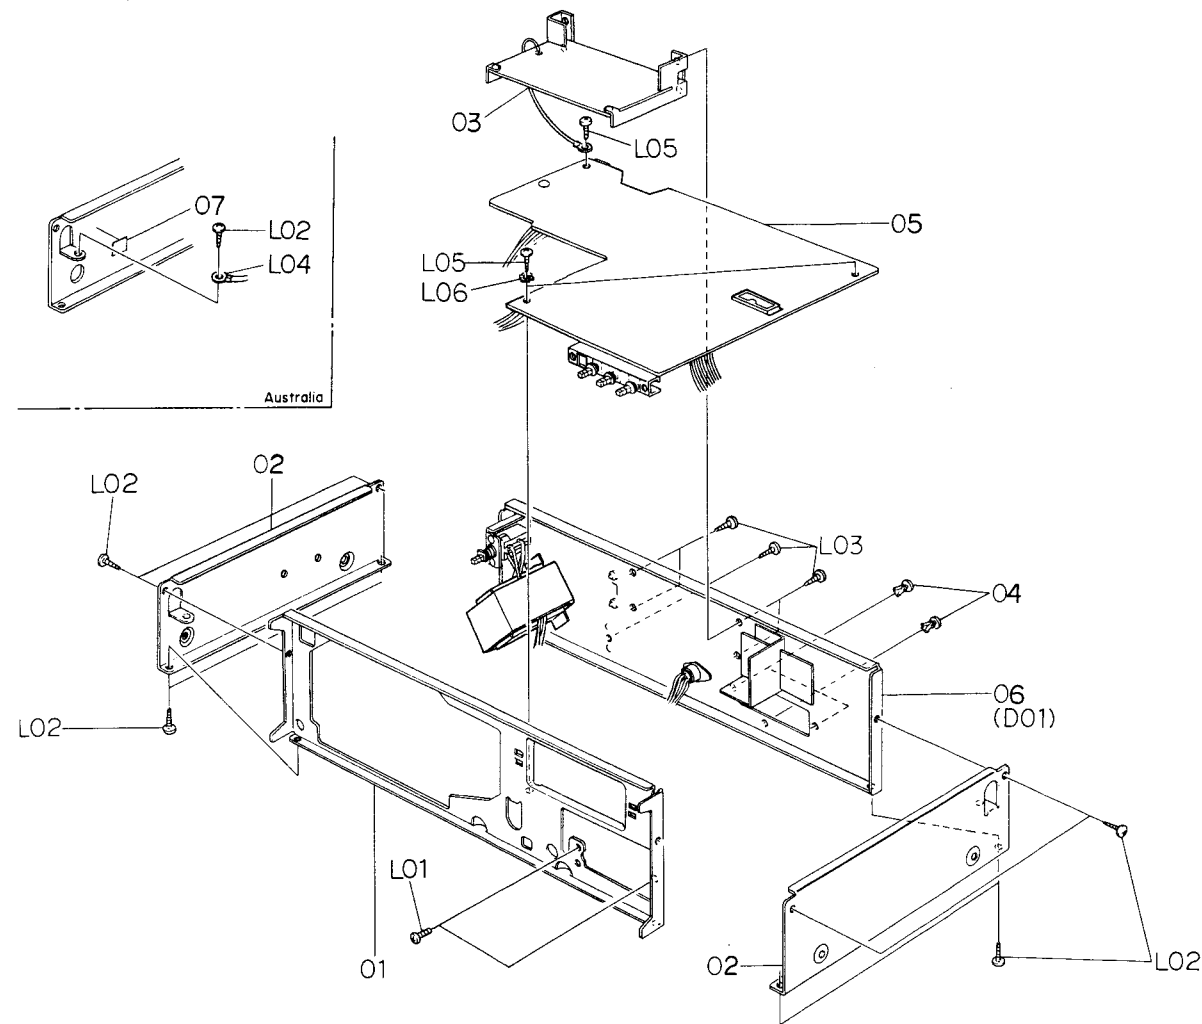


Fig. 8.8

8.9. Flywheel Holder Ass'y (C01)

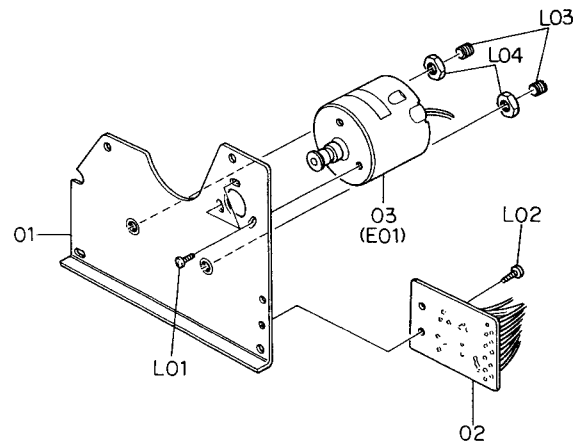


Fig. 8.9

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
B05	JA03784B	Chassis Ass'y (U.S.A. & Canada)	1	B05	JA03784A	Chassis Ass'y (U.S.A. & Canada)	1
	JA03785B	Chassis Ass'y (Japan)	1		JA03785A	Chassis Ass'y (Japan)	1
	JA03788B	Chassis Ass'y (220V Class 2)	1		JA03788A	Chassis Ass'y (220V Class 2)	1
	JA03783B	Chassis Ass'y (UK)	1		JA03783A	Chassis Ass'y (UK)	1
	JA03787B	Chassis Ass'y (Australia)	1		JA03787A	Chassis Ass'y (Australia)	1
	JA03786B	Chassis Ass'y (Others)	1		JA03786A	Chassis Ass'y (Others)	1
		Serial No.:				Serial Nos.:	
		A30808688 -				A30801001 - A30808687	
		A30908913 -				A30901001 - A30908912	
01	OJ04300A	Front Chassis	1	01	OJ04300A	Front Chassis	1
02	OJ04069C	Side Chassis	2	02	OJ04069C	Side Chassis	2
03	BA04512A	Logic P.C.B. Ass'y	1	03	BA04414A	Logic P.C.B. Ass'y	1
04	0B08720A	Plastic Rivet	3	04	0B08720A	Plastic Rivet	3
05	BA04320A	Main P.C.B. Ass'y (U.S.A. & Canada)	1	05	BA04320A	Main P.C.B. Ass'y (U.S.A. & Canada)	1
	BA04319A	Main P.C.B. Ass'y (Japan)	1		BA04319A	Main P.C.B. Ass'y (Japan)	1
	BA04351A	Main P.C.B. Ass'y (220V Class 2)	1		BA04351A	Main P.C.B. Ass'y (220V Class 2)	1
	BA04253A	Main P.C.B. Ass'y (UK)	1		BA04253A	Main P.C.B. Ass'y (UK)	1
	BA04352A	Main P.C.B. Ass'y (Australia)	1		BA04352A	Main P.C.B. Ass'y (Australia)	1
	BA04353A	Main P.C.B. Ass'y (Others)	1		BA04353A	Main P.C.B. Ass'y (Others)	1
06	HA04078A	Rear Panel Ass'y (U.S.A. & Canada)	1	06	HA04078A	Rear Panel Ass'y (U.S.A. & Canada)	1
	HA04079A	Rear Panel Ass'y (Japan)	1		HA04079A	Rear Panel Ass'y (Japan)	1
	HA04082A	Rear Panel Ass'y (220V Class 2)	1		HA04082A	Rear Panel Ass'y (220V Class 2)	1
	HA04077A	Rear Panel Ass'y (UK)	1		HA04077A	Rear Panel Ass'y (UK)	1
	HA04081A	Rear Panel Ass'y (Australia)	1		HA04081A	Rear Panel Ass'y (Australia)	1
	HA04080A	Rear Panel Ass'y (Others)	1		HA04080A	Rear Panel Ass'y (Others)	1
*07	0M03700A	Earth Mark Label	1	*07	0M03700A	Earth Mark Label	1
L01	0E00502A	Screw M3x5 Philips Pan Head	2	L01	0E00502A	Screw M3x5 Philips Pan Head	2
*L02	0E00857A	BT Screw M3x6 Philips Binding Head	8	*L02	0E00857A	BT Screw M3x6 Philips Binding Head	8
L03	0E00860A	BT Screw M3x6 Philips Binding Head (Black Chromate)	5	L03	0E00860A	BT Screw M3x6 Philips Binding Head (Black Chromate)	5
*L04	0E00037A	Earth Lug B-5	1	*L04	0E00037A	Earth Lug B-5	1
L05	0E00868A	BT Screw M3x8 Philips Binding Head	3	L05	0E00868A	BT Screw M3x8 Philips Binding Head	3
L06	0E00172A	Washer 3mm Toothed Lock	2	L06	0E00172A	Washer 3mm Toothed Lock	2
		*: Depends on the versions.				*: Depends on the versions.	
				C01	CA08109B	Flywheel Holder Ass'y Serial No.:	1
						A308.901001 -	
				01	0C08013I	Flywheel Holder	1
				02	BA04126A	Control P.C.B. Ass'y	1
				03	CA08118B	Capstan Motor Ass'y	1
				L01	0E00226A	Screw M2.6x4 Philips Pan Head	3
				L02	0E00834A	BT Screw M3x5 Philips Pan Head	1
				L03	0C08068C	Thrust Screw	2
				L04	0C03857A	Lock Nut	2

8.10. Sub Mechanism Chassis Ass'y (C02)

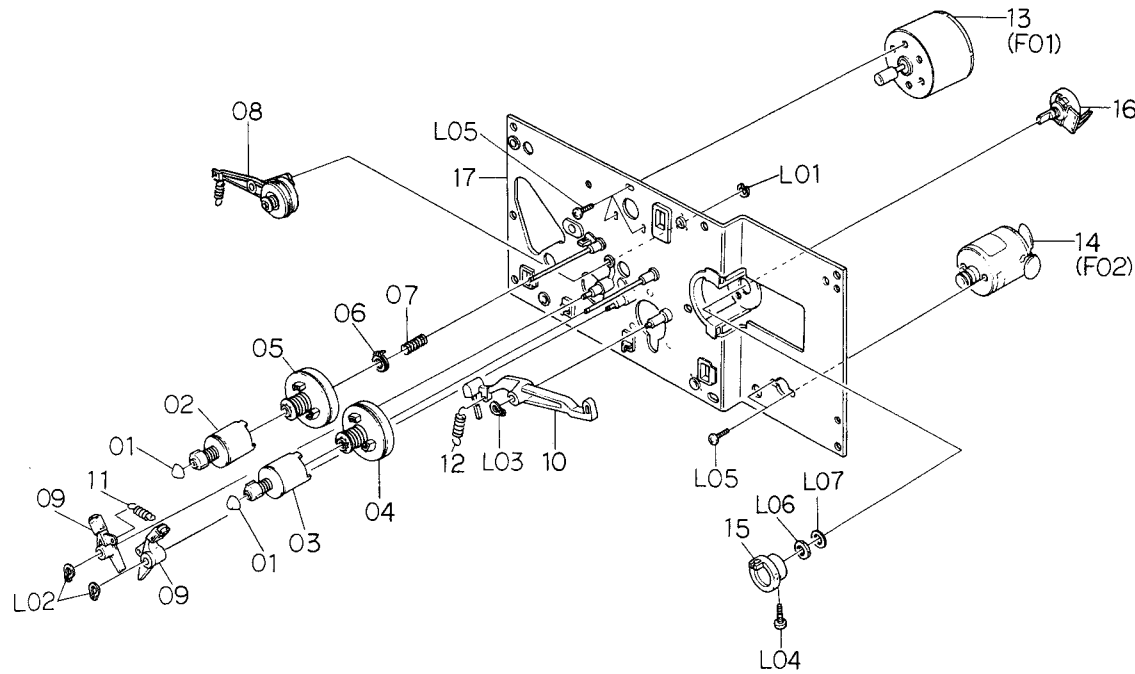


Fig. 8.10.1 Serial No.: A30808688 –
Serial No.: A30908913 –

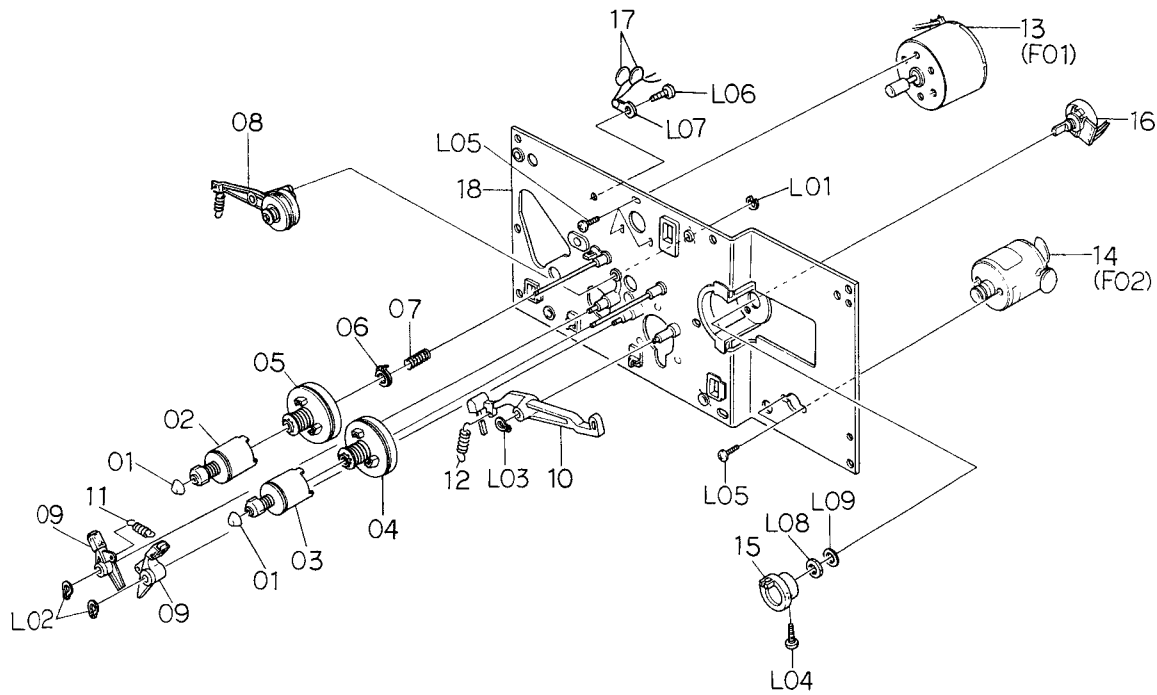


Fig. 8.10.2 Serial Nos.: A30801001 – A30808687
Serial Nos.: A30901001 – A30908912

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty		
C02	CA08315A	Sub Mechanism Chassis Ass'y Serial No.: A30808688 – A30908913 –	1	L07	0E00037A	Earth Lug B-5	1		
				L08	–	Volume Nut	(1)		
				L09	–	Volume Washer	(1)		
				C03	CA08269A	Main Mechanism Chassis Ass'y Serial No.: A308.901001 –	1		
	01	0C08039B	Reel Hub Head		2	01	CA08141A	Cassette Case Holder L Ass'y	1
	02	CA08197A	Reel Hub B Supply Ass'y		1	02	CA08022A	Cassette Case Holder R Ass'y	1
	03	CA08038B	Reel Hub B Take-up Ass'y		1	03	CA08111A	Cassette Case Ass'y	1
	04	CA08037A	Reel hub Take-up Ass'y		1	04	CA08120A	Head Mount Base Ass'y	1
	05	CA08064A	Reel hub Supply Ass'y		1	05	0C08121A	Take-up Pressure Roller Spring	1
	06	CA08039A	Back Tension Ass'y		1	06	0C08250A	Supply Pressure Roller Spring	1
	07	0C08269A	Back Tension Spring		1	07	CA08053B	Supply Pressure Roller Ass'y	1
	08	CA08193A	Idler Arm Ass'y		1	08	0C08122B	Supply Pressure Roller Thrust Spring	1
	09	CA08042A	Brake Arm Ass'y		2	09	CA08079B	Take-up Pressure Roller Ass'y	1
	10	0C08030C	Brake Drive Arm		1	10	0C08183B	Take-up Pressure Roller Thrust Spring	1
	11	0C08129A	Brake Arm Spring		1				
	12	0C08128A	Brake Drive Arm Spring		1	11	CA08121A	Head Base Ass'y C	1
	13	CA08242A	Reel Motor Ass'y		1	12	0C08182A	Pressure Roller Drive Bar	1
14	CA08124A	Control Motor Ass'y	1		13	0C08086B	Head Base Roller	3	
15	0C08053B	Volume Coupler	1		14	0C08050B	Record Sensor	1	
16	0B07240A	Volume Control 10K (B)	1		15	0C08051E	Cassette Hold Arm	1	
17	CA08194A	Sub Chassis Ass'y	1	16	0C08120A	Cassette Hold Arm Spring	1		
L01	0E00698A	E-Ring 2.5mm	1	17	CA08196A	Back Tension Arm Ass'y	1		
L02	0E00837A	Stopper Ring 3mm	2	18	0C08254A	Sleeve	1		
L03	0E00838A	Stopper Ring 4mm	1	19	CA08027A	Head Base Drive Arm Ass'y	1		
L04	0E00859A	BT Screw M2.6x6 Philips Binding Head	1	20	0C08143C	Head Base Drive Arm Spring	1		
L05	0E00226A	Screw M2.6x4 Philips Pan Head	5	21	CA08025A	Record Arm Ass'y	1		
L06	–	Volume Nut	(1)	22	0C08038D	Record Trigger	1		
L07	–	Volume Washer	(1)	23	0C08112A	Flip-Flop Spring	1		
C02	CA08232A	Sub Mechanism Chassis Ass'y Serial Nos.: A30801001 – A30808687 A30901001 – A30908912	1	24	CA08026A	Pressure Roller Drive Arm Ass'y	1		
				25	0C08071D	Counter Reset Arm	1		
				26	0C08124B	Eject Linkage Wire	1		
	01	0C08039B	Reel Hub Head	2	27	0C08057E	Eject Arm	1	
	02	CA08197A	Reel Hub B Supply Ass'y	1	28	0C08078B	Arm Shaft	1	
	03	CA08038B	Reel Hub B Take-up Ass'y	1	29	CA08237A	Auto Shut-off Ass'y	1	
	04	CA08037A	Reel hub Take-up Ass'y	1	30	CA08020A	Counter Ass'y	1	
	05	CA08064A	Reel hub Supply Ass'y	1	31	0C08097B	Counter Belt A	1	
	06	CA08039A	Back Tension Ass'y	1	32	0C08067C	Eject Stopper	1	
	07	0C08269A	Back Tension Spring	1	33	0C08134C	Eject Stopper Spring	1	
	08	CA08193A	Idler Arm Ass'y	1	34	0C08119A	Record Protector	1	
	09	CA08042A	Brake Arm Ass'y	2	35	0C08194C	Damper Lock Arm	1	
	10	0C08030C	Brake Drive Arm	1	36	0C08153A	Damper Arm Spring Tube	1	
	11	0C08129A	Brake Arm Spring	1	37	0C08116A	Record Arm Spring	2	
	12	0C08128A	Brake Drive Arm Spring	1	38	CA08030A	Pneumatic Damper Ass'y	1	
	13	CA08117B	Reel Motor Ass'y	1	39	CA08023A	Supply Capstan Flange Ass'y	1	
	14	CA08124A	Control Motor Ass'y	1	40	CA08024A	Take-up Capstan Flange Ass'y	1	
15	0C08053B	Volume Coupler	1	41	0C08186A	Cam Drive Gear	1		
16	0B07240A	Volume Control 10K (B)	1	42	0C08029H	Control Cam	1		
17	0B09290A	Ceramic Capacitor 0.01μ 50V Z	2	43	0C08152A	Counter-Load Arm Spring Tube	1		
18	CA08194A	Sub Chassis Ass'y	1	44	0C08117A	Counter-Load Arm Spring	1		
L01	0E00698A	E-Ring 2.5mm	1	45	CA08028A	Counter-Load Arm Ass'y	1		
L02	0E00837A	Stopper Ring 3mm	2	46	0C08123B	Record Switch Linkage Wire	1		
L03	0E00838A	Stopper Ring 4mm	1	47	0C08037E	Record Arm B	1		
L04	0E00859A	BT Screw M2.6x6 Philips Binding Head	1	48	CA08183A	Main Chassis Ass'y	1		
L05	0E00226A	Screw M2.6x4 Philips Pan Head	5	L01	0E00837A	Stopper Ring 3mm	13		
L06	0E00843A	BT Screw M2.6x4 Philips Pan Head	1	L02	0E00834A	BT Screw M3x30 Philips Pan Head	2		
				L03	0E00831A	BT Screw M3x10 Philips Pan Head	4		

8.11. Main Mechanism Chassis Ass'y (C03)

Schematic Ref. No.	Part No.	Description	Q'ty
L04	0E00254A	Washer 3.1mm Plastics	2
L05	0E00222A	E-Ring 2mm	2
L06	0E00839A	Stopper Ring 2.5mm	2
L07	0E00876A	BT Screw M2.6x8 Philips Pan Head	11
L08	0C08060B	Height Adjustment Nut	2
L09	0E00142A	Washer 2.6mm	2
L10	0E00879A	BT Screw M2x15 Philips Pan Head	1
L11	0E00838A	Stopper Ring 4mm	3
L12	0E00846A	BT Screw M3x8 Philips Pan Head	3
L13	0E00895A	Earth Lug 3mm	2
L14	0E00859A	BT Screw M2.6x6 Philips Binding Head	1
L15	0C08255A	Washer 2.6mm	1

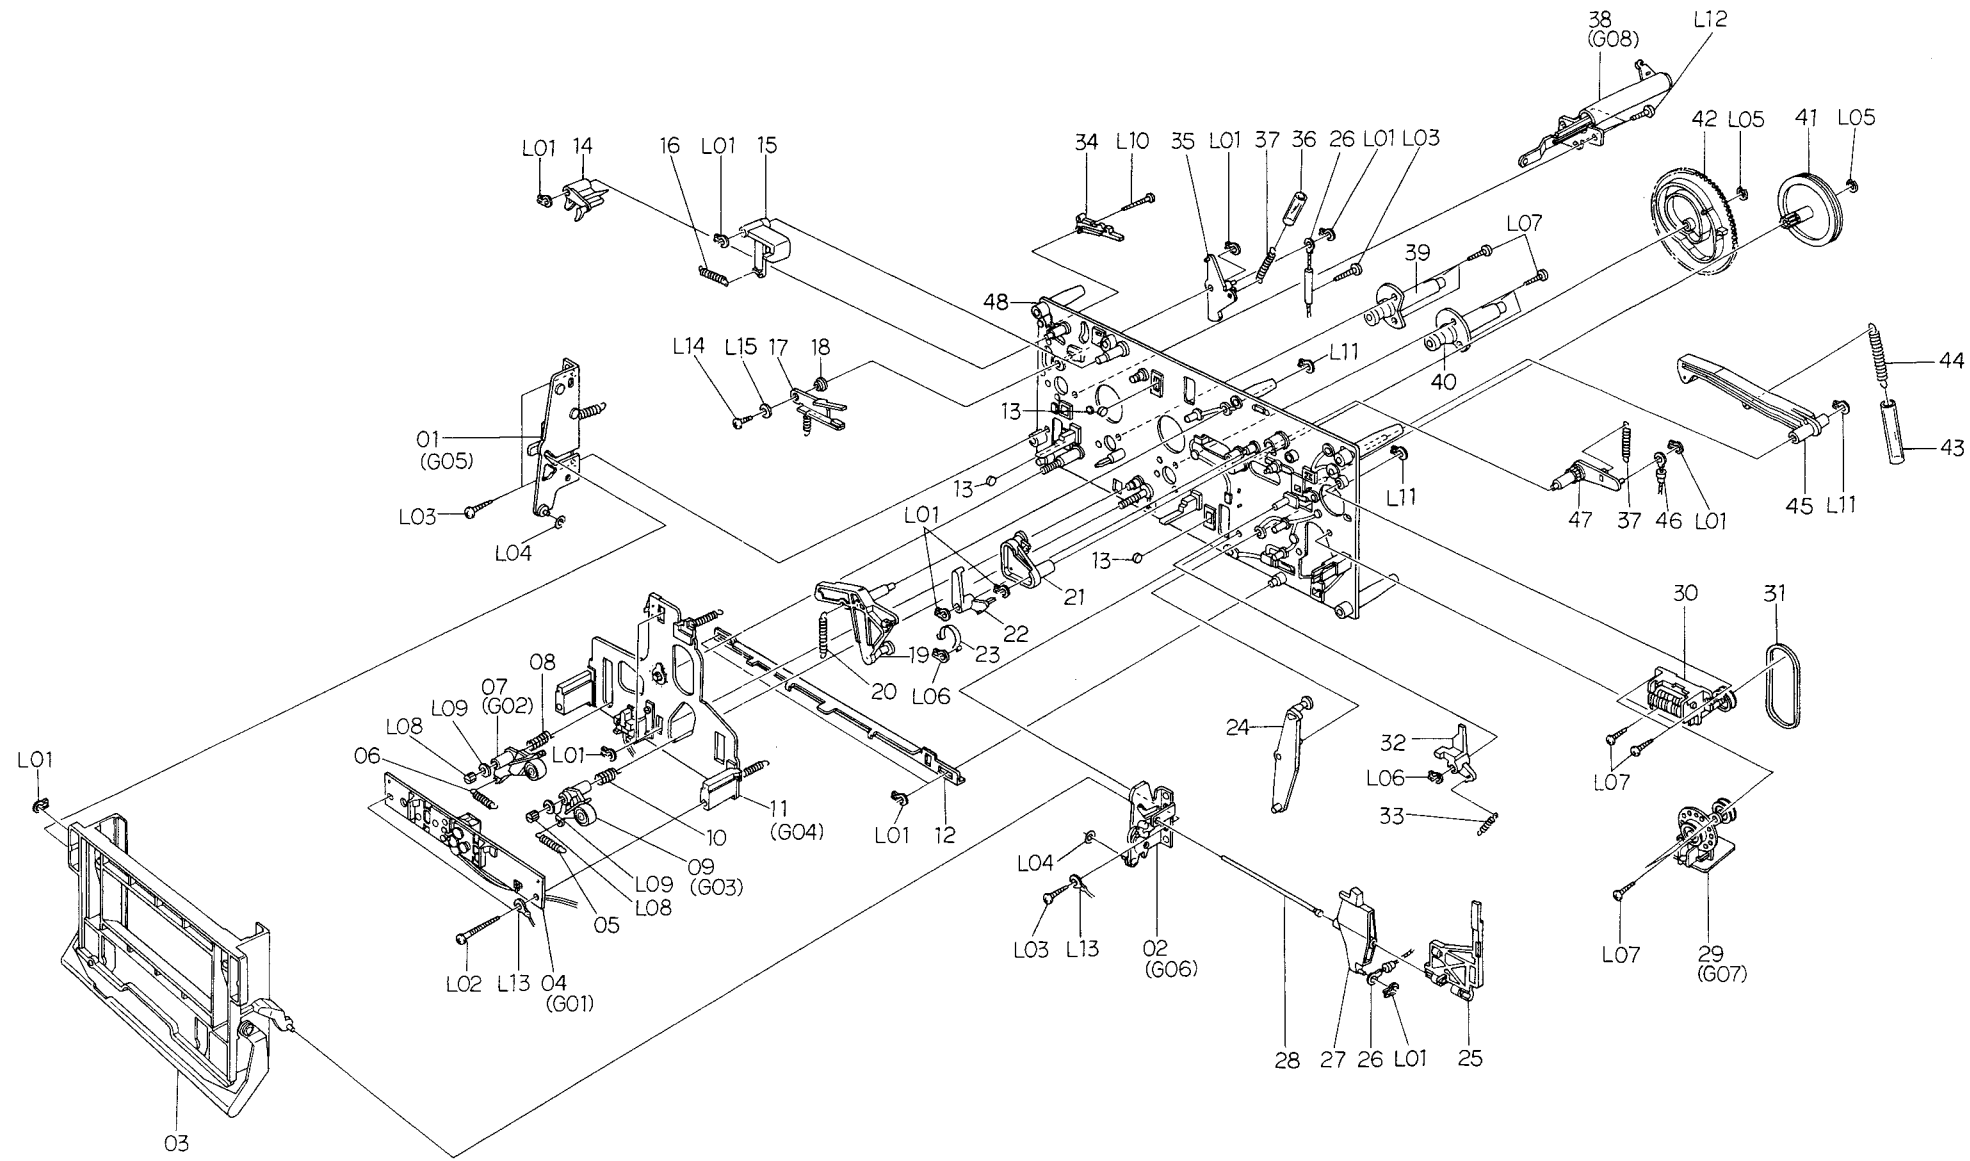


Fig. 8.11

8.12. Rear Panel Ass'y (D01)

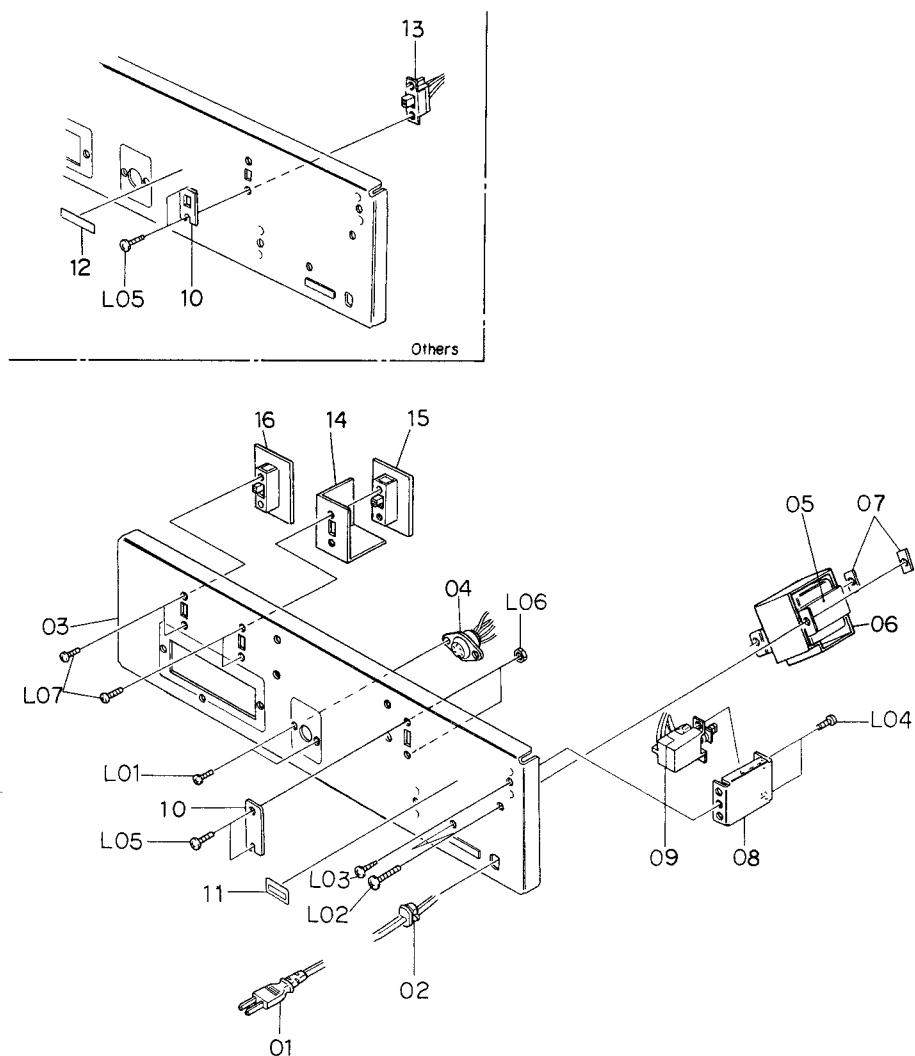


Fig. 8.12

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty				
D01	HA04078A	Rear Panel Ass'y (U.S.A. & Canada)	1	L03	0E00860A	BT Screw M3x6 Philips Binding Head (Black Chromate)	1				
	HA04079A	Rear Panel Ass'y (Japan)	1	L04	0E00502A	Screw M3x5 Philips Pan Head	2				
	HA04082A	Rear Panel Ass'y (220V Class 2)	1	L05	0E00593A	Screw M3x6 Philips Binding Head (Bronze)	2				
	HA04077A	Rear Panel Ass'y (UK)	1	L06	0E00507A	Nut Hex. M3	2				
	HA04081A	Rear Panel Ass'y (Australia)	1	L07	0E00945A	Screw M2.6x4 Philips Binding Head (Black Chromate)	4				
	HA04080A	Rear Panel Ass'y (Others) Serial No.: A308.901001 -	1	-	0J03644A	Chobert Rivet	2				
01	0B08533A	Power Cord (U.S.A., Canada & Others)	1	E01	CA08118B	Capstan Motor Ass'y Serial No.: A308.901001 -	1				
	0B08219U	Power Cord (Japan)	1								
	0B08093U	Power Cord (220V Class 2)	1								
02	0B08348A	Power Cord (UK)	1	01	0C08219A	Capstan Motor	1				
	0B08666A	Power Cord (Australia)	1								
	0B08037U	Cord Bushing (U.S.A., Canada, Japan, 220V Class 2 & Others)	1								
03	0B08351A	Cord Bushing 4K-4 (UK)	1	02	0C08212C	Motor Pulley	1				
	0B08325U	Cord Bushing (Australia)	1								
	0H03936A	Rear Panel	1								
04	0B08687A	6P DIN Socket	1	03	0M04077A	Motor Seal	1				
	0B06652A	Power Transformer (U.S.A. & Canada)	1								
	0B06653B	Power Transformer (Japan)	1								
05	0B06673A	Power Transformer (220V Class 2 & UK)	1	F01	CA08242A	Reel Motor Ass'y Serial No.: A30808688 - A30908913 -	1				
	0B06656B	Power Transformer (Australia)	1								
	0B06654B	Power Transformer (Others)	1								
06	0J04426B	Power Transformer Shield Cover	1	01	0C08272A	Reel Motor	1				
	0C01162B	Bolt Receptacle Plate	1								
	0J04076A	Power Switch Holder	1								
07	0B07299A	Power Switch (U.S.A. & Canada)	1	02	0C08063F	Reel Motor Pulley	1				
	0B07301A	Power Switch (Japan)	1								
	0B07252A	Power Switch (220V Class 2, UK, Australia & Others)	1								
08	0J03663C	Switch Cover (U.S.A., Canada, Japan, 220V Class 2, UK & Australia)	1	F02	CA08124A	Control Motor Ass'y Serial No.: A308.901001 -	1				
	0M03946A	Voltage Selector Lock Plate C (Others)	1								
	0M03551B	Pass Label	1								
09	0M03794A	Voltage Label 100V (Japan)	1	01	0C08137A	Control Motor	1				
	0M03796A	Voltage Label 220V (220V Class 2)	1								
	0M03797A	Voltage Label 240V (UK & Australia)	1								
10	0M03955A	Voltage Label 120V/220-240V (Others)	1	02	0C08064A	Control Motor Pulley	1				
	0B07092U	Voltage Selector (Others)	1								
	0J04389A	Headphone Switch Shield Plate	1								
11	BA04420A	Headphone Switch P.C.B. Ass'y	1	03	0B09292A	Ceramic Capacitor 0.1μ 50V Z	2				
	BA04402A	MPX Filter Switch P.C.B. Ass'y	1								
	0M03905A	UL Label	1								
12	0M04214A	Serial Number Plate	1	04	0M03985A	Control Motor Label	1				
	0M04097B	Fuse Caution Label (U.S.A. & Canada)	1								
	0M03844B	Power Cord Label (UK)	1								
L01	0E00714A	Screw M2.6x6 Philips Binding Head (Bronze)	2	05	0M03988A	Motor Seal B	1				
	0E00756A	Screw M4x8 Philips Binding Head (Bronze)	2								
L02	0E00756A	Screw M4x8 Philips Binding Head (Bronze)	2	G01	CA08310A	Head Mount Base Ass'y Serial No.: A308.901001 -	1				
								01	0C08028C	Head Height Adjustment Gear	1
								02	0C08027E	Head Height Adjustment Screw	2
								03	0C08026D	Azimuth Alignment Screw	1
								04	0C08161B	Spring Stopper	1
								05	0C08131C	Head Plate Spring	1
								06	CA08083C	Head Mount Base Sub Ass'y	1
07	CA08311A	RP-9E Record/Playback Head Ass'y	1								

8.13. Capstan Motor Ass'y (E01)

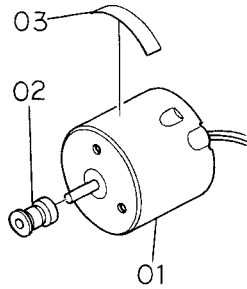


Fig. 8.13

8.14. Reel Motor Ass'y (F01)

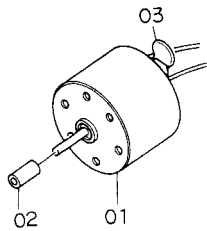


Fig. 8.14.1

Serial No.: A30808688 –
Serial No.: A30908913 –

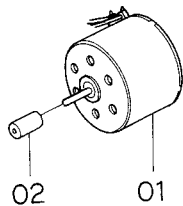


Fig. 8.14.2

Serial Nos.: A30801001 – A30808687
Serial Nos.: A30901001 – A30908912

8.15. Control Motor Ass'y (F02)

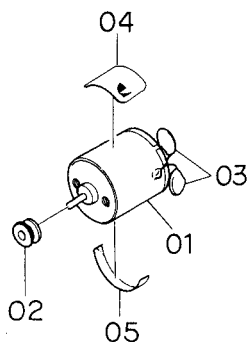


Fig. 8.15

8.16. Head Mount Base Ass'y (G01)

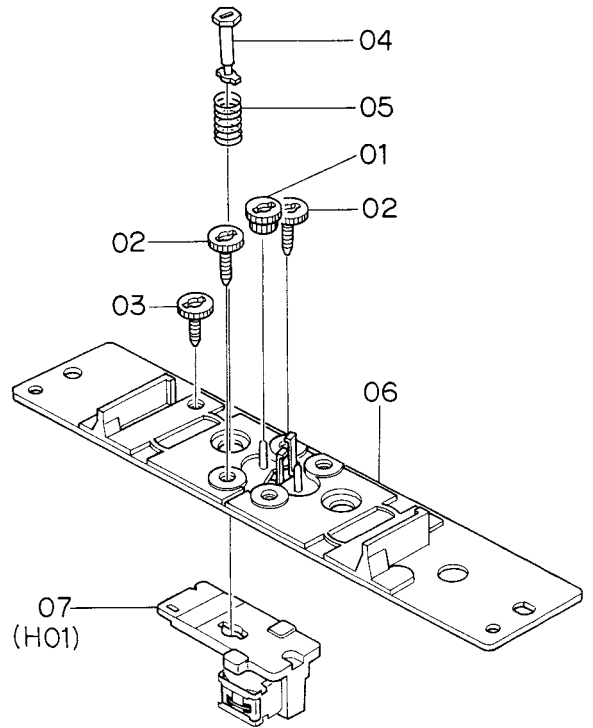


Fig. 8.16

8.17. Supply Pressure Roller Ass'y (G02)

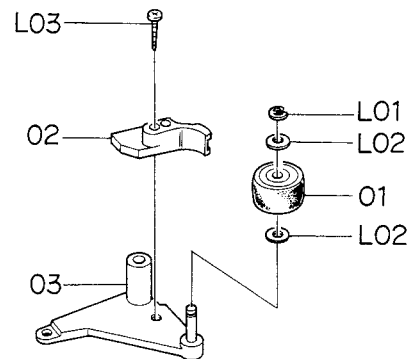


Fig. 8.17

Schematic Ref. No.	Part No.	Description	Q'ty
G02	CA08053B	Supply Pressure Roller Ass'y Serial No.: A308.901001 –	1
01	0C08164G	Pressure Roller	1
02	0C08189C	Supply Tape Guide	1
03	CA08061A	Supply Pressure Roller Arm Ass'y	1
L01	0E00042A	E-Ring 1.5mm	1
L02	0C08024A	Washer 2mm	2
L03	0E00788A	BT Screw M2x8 Philips Pan Head	1

8.18. Take-up Pressure Roller Ass'y (G03)

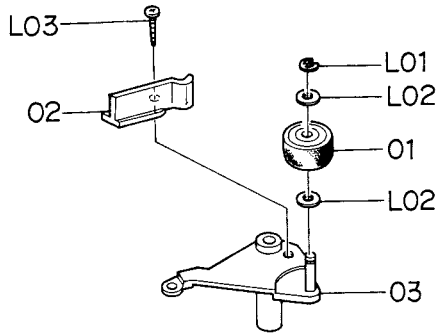


Fig. 8.18

8.19. Head Base Ass'y C (G04)

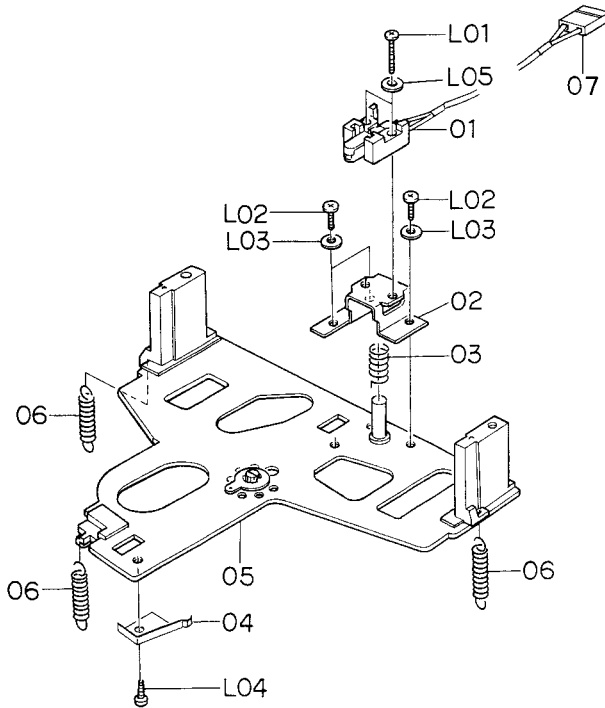


Fig. 8.19

8.20. Cassette Case Holder L Ass'y (G05)

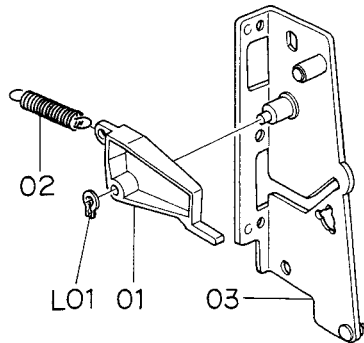


Fig. 8.20

8.21. Cassette Case Holder R Ass'y (G06)

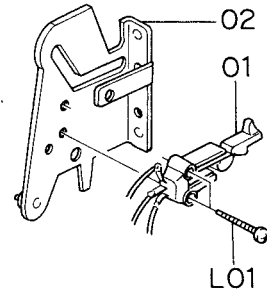


Fig. 8.21

8.22. Auto Shut-off Ass'y (G07)

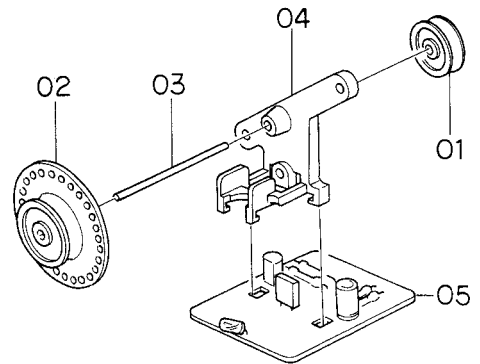


Fig. 8.22

8.23. Pneumatic Damper Ass'y (G08)

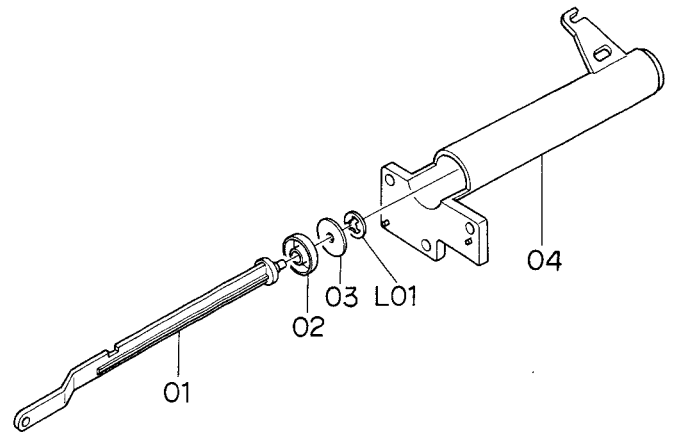


Fig. 8.23

8.24. RP-9E Record/Playback Head Ass'y (H01)

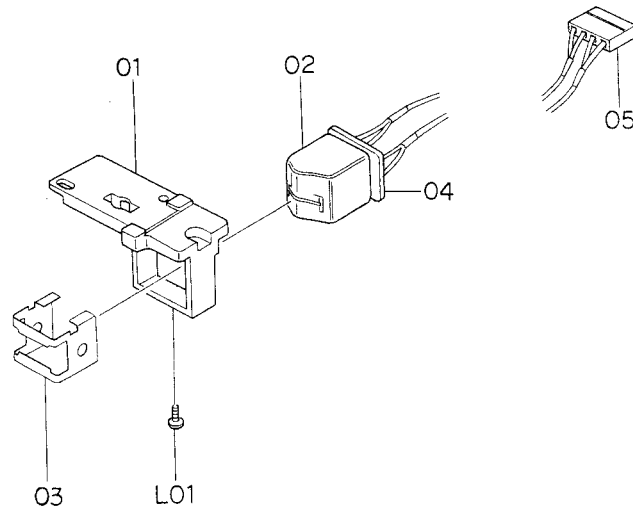


Fig. 8.24

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
G03	CA08079B	Take-up Pressure Roller Ass'y Serial No.: A308.901001 -	1	G06	CA08022A	Cassette Case Holder R Ass'y Serial No.: A308.901001 -	1
01	0C08164G	Pressure Roller	1	01	0C08133A	Eject Sensor	1
02	0C08181C	Take-up Tape Guide	1	02	CA08044A	Cassette Case Holder R Sub Ass'y	1
03	CA08073B	Take-up Pressure Roller Arm Ass'y	1	L01	0E00840A	BT Screw M2x8 Philips Pan Head	2
L01	0E00042A	E-Ring 1.5mm	1	G07	CA08237A	Auto Shut-off Ass'y Serial No.: A308.901001 -	1
L02	0C08024A	Washer 2mm	2	01	0C08047A	Shut-off Pulley A	1
L03	0E00788A	BT Screw M2x8 Philips Pan Head	1	02	0C08206B	Shut-off Pulley B	1
G04	CA08121A	Head Base Ass'y C Serial No.: A308.901001 -	1	03	0C08088B	Shut-off Pulley Shaft	1
01	GA02017A	E-8L Erase Head	1	04	0C08207B	Shut-off Pulley Holder	1
02	0C08158D	EH Hold Plate	1	05	BA04070A	Shut-off P.C.B. Ass'y	1
03	0C08166A	EH Hold Plate Spring	1	G08	CA08030A	Pneumatic Damper Ass'y Serial No.: A308.901001 -	1
04	0C08174D	Cassette Hold Spring	1	01	0C08058C	Damper Piston	1
05	CA08003Q	Head Base Ass'y	1	02	0C08102C	Damper Ring	1
06	0C08175A	Head Base L Spring	3	03	0C08010C	Damper Plate	1
07	0B08679D	2P-H Connector	1	04	0C08059D	Sylinder	1
L01	0E00951A	Screw M1.7x7 Philips Pan Head	2	L01	0E00874A	Stopper Ring CS 2mm	1
L02	0E00909A	Screw M2x6 Philips Pan Head	3	H01	CA08311A	RP-9E Record/Playback Head Ass'y Serial No.: A308.901001 -	1
L03	0E00117A	Washer 2mm	3	01	0C08217A	Head Plate	1
L04	0E00853A	BT Screw M2x3 Philips Pan Head	1	02	0G01294A	RP-9E Record/Playback Head	1
L05	0E00952A	Washer 1.7mm	2	03	0C08216B	Pad Lifter 9E	1
G05	CA08141A	Cassette Case Holder L Ass'y Serial No.: A308.901001 -	1	04	0B07857A	Head Terminal P.C.B.	1
01	0C08073C	Lid Arm A	1	05	0B08678C	4P-H Connector	1
02	0C08114A	Lid Arm Spring	1	L01	0E00887A	Screw M1.7x4 Philips Pan Head	1
03	CA08090F	Cassette Case Holder L Sub Ass'y	1				
L01	0E00837A	Stopper Ring 3mm	1				

9. OVERALL TIMING CHART

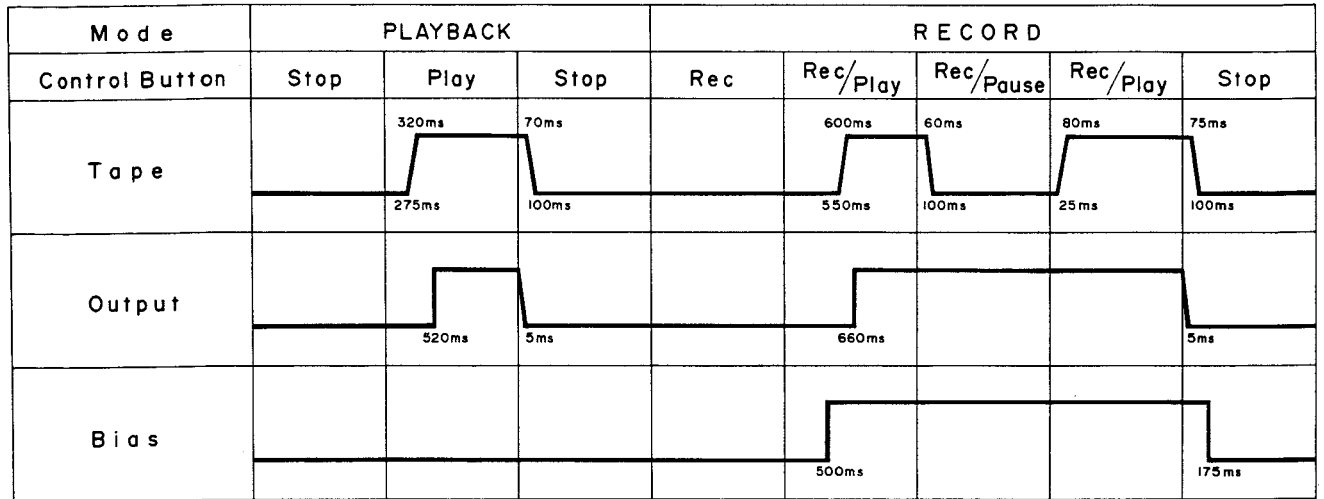


Fig. 9

10. EQ. AMP. FREQUENCY RESPONSE

10.1. Playback Frequency Response

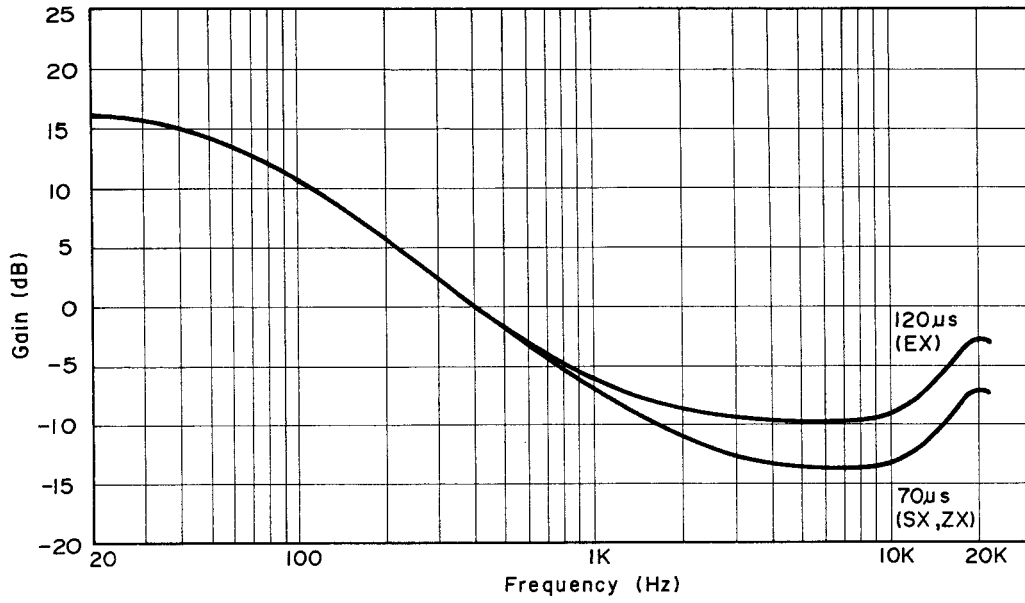


Fig. 10.1

10.2. Record Current Frequency Response


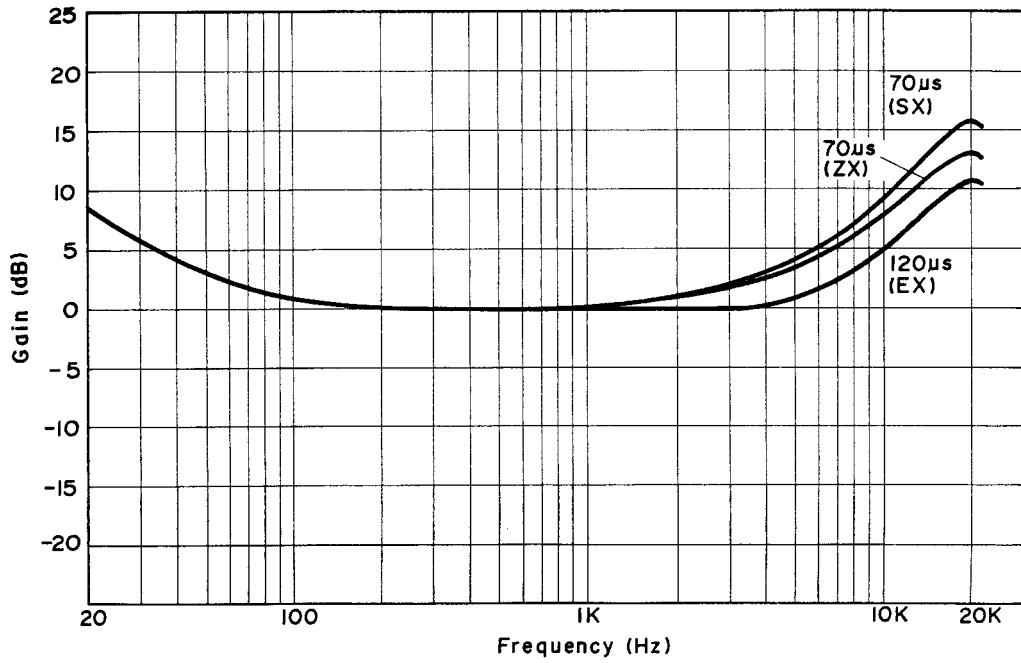


Fig. 10.2

11. WIRING DIAGRAM

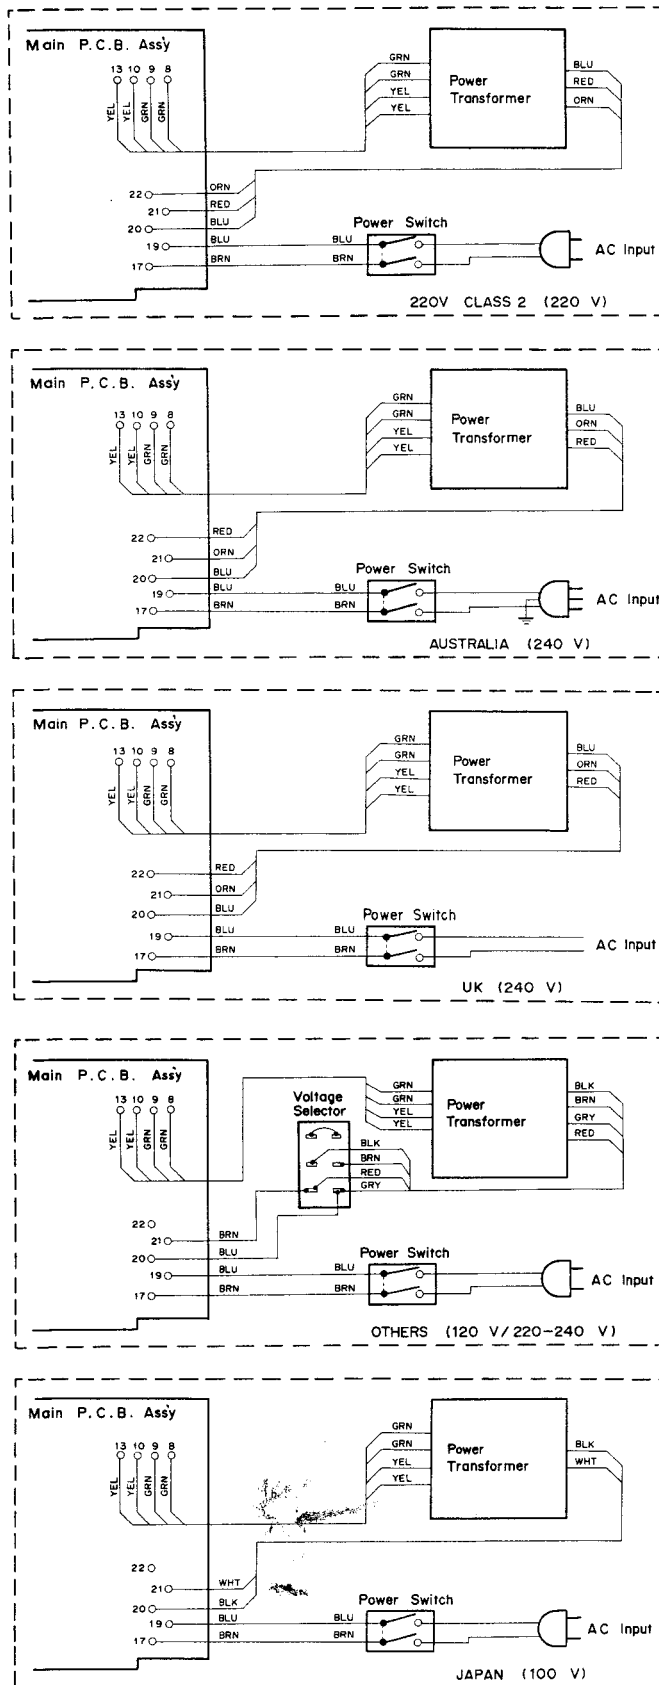

Notes: 1. Table of wire colors

- BLK — Black
- BLU — Blue
- ORN — Orange
- GRY — Gray
- GRN — Green
- RED — Red
- BRN — Brown
- YEL — Yellow
- WHT — White
- VIO — Violet

2. Component side view of the P.C.B. is illustrated unless otherwise specified.

Fig. 11.1

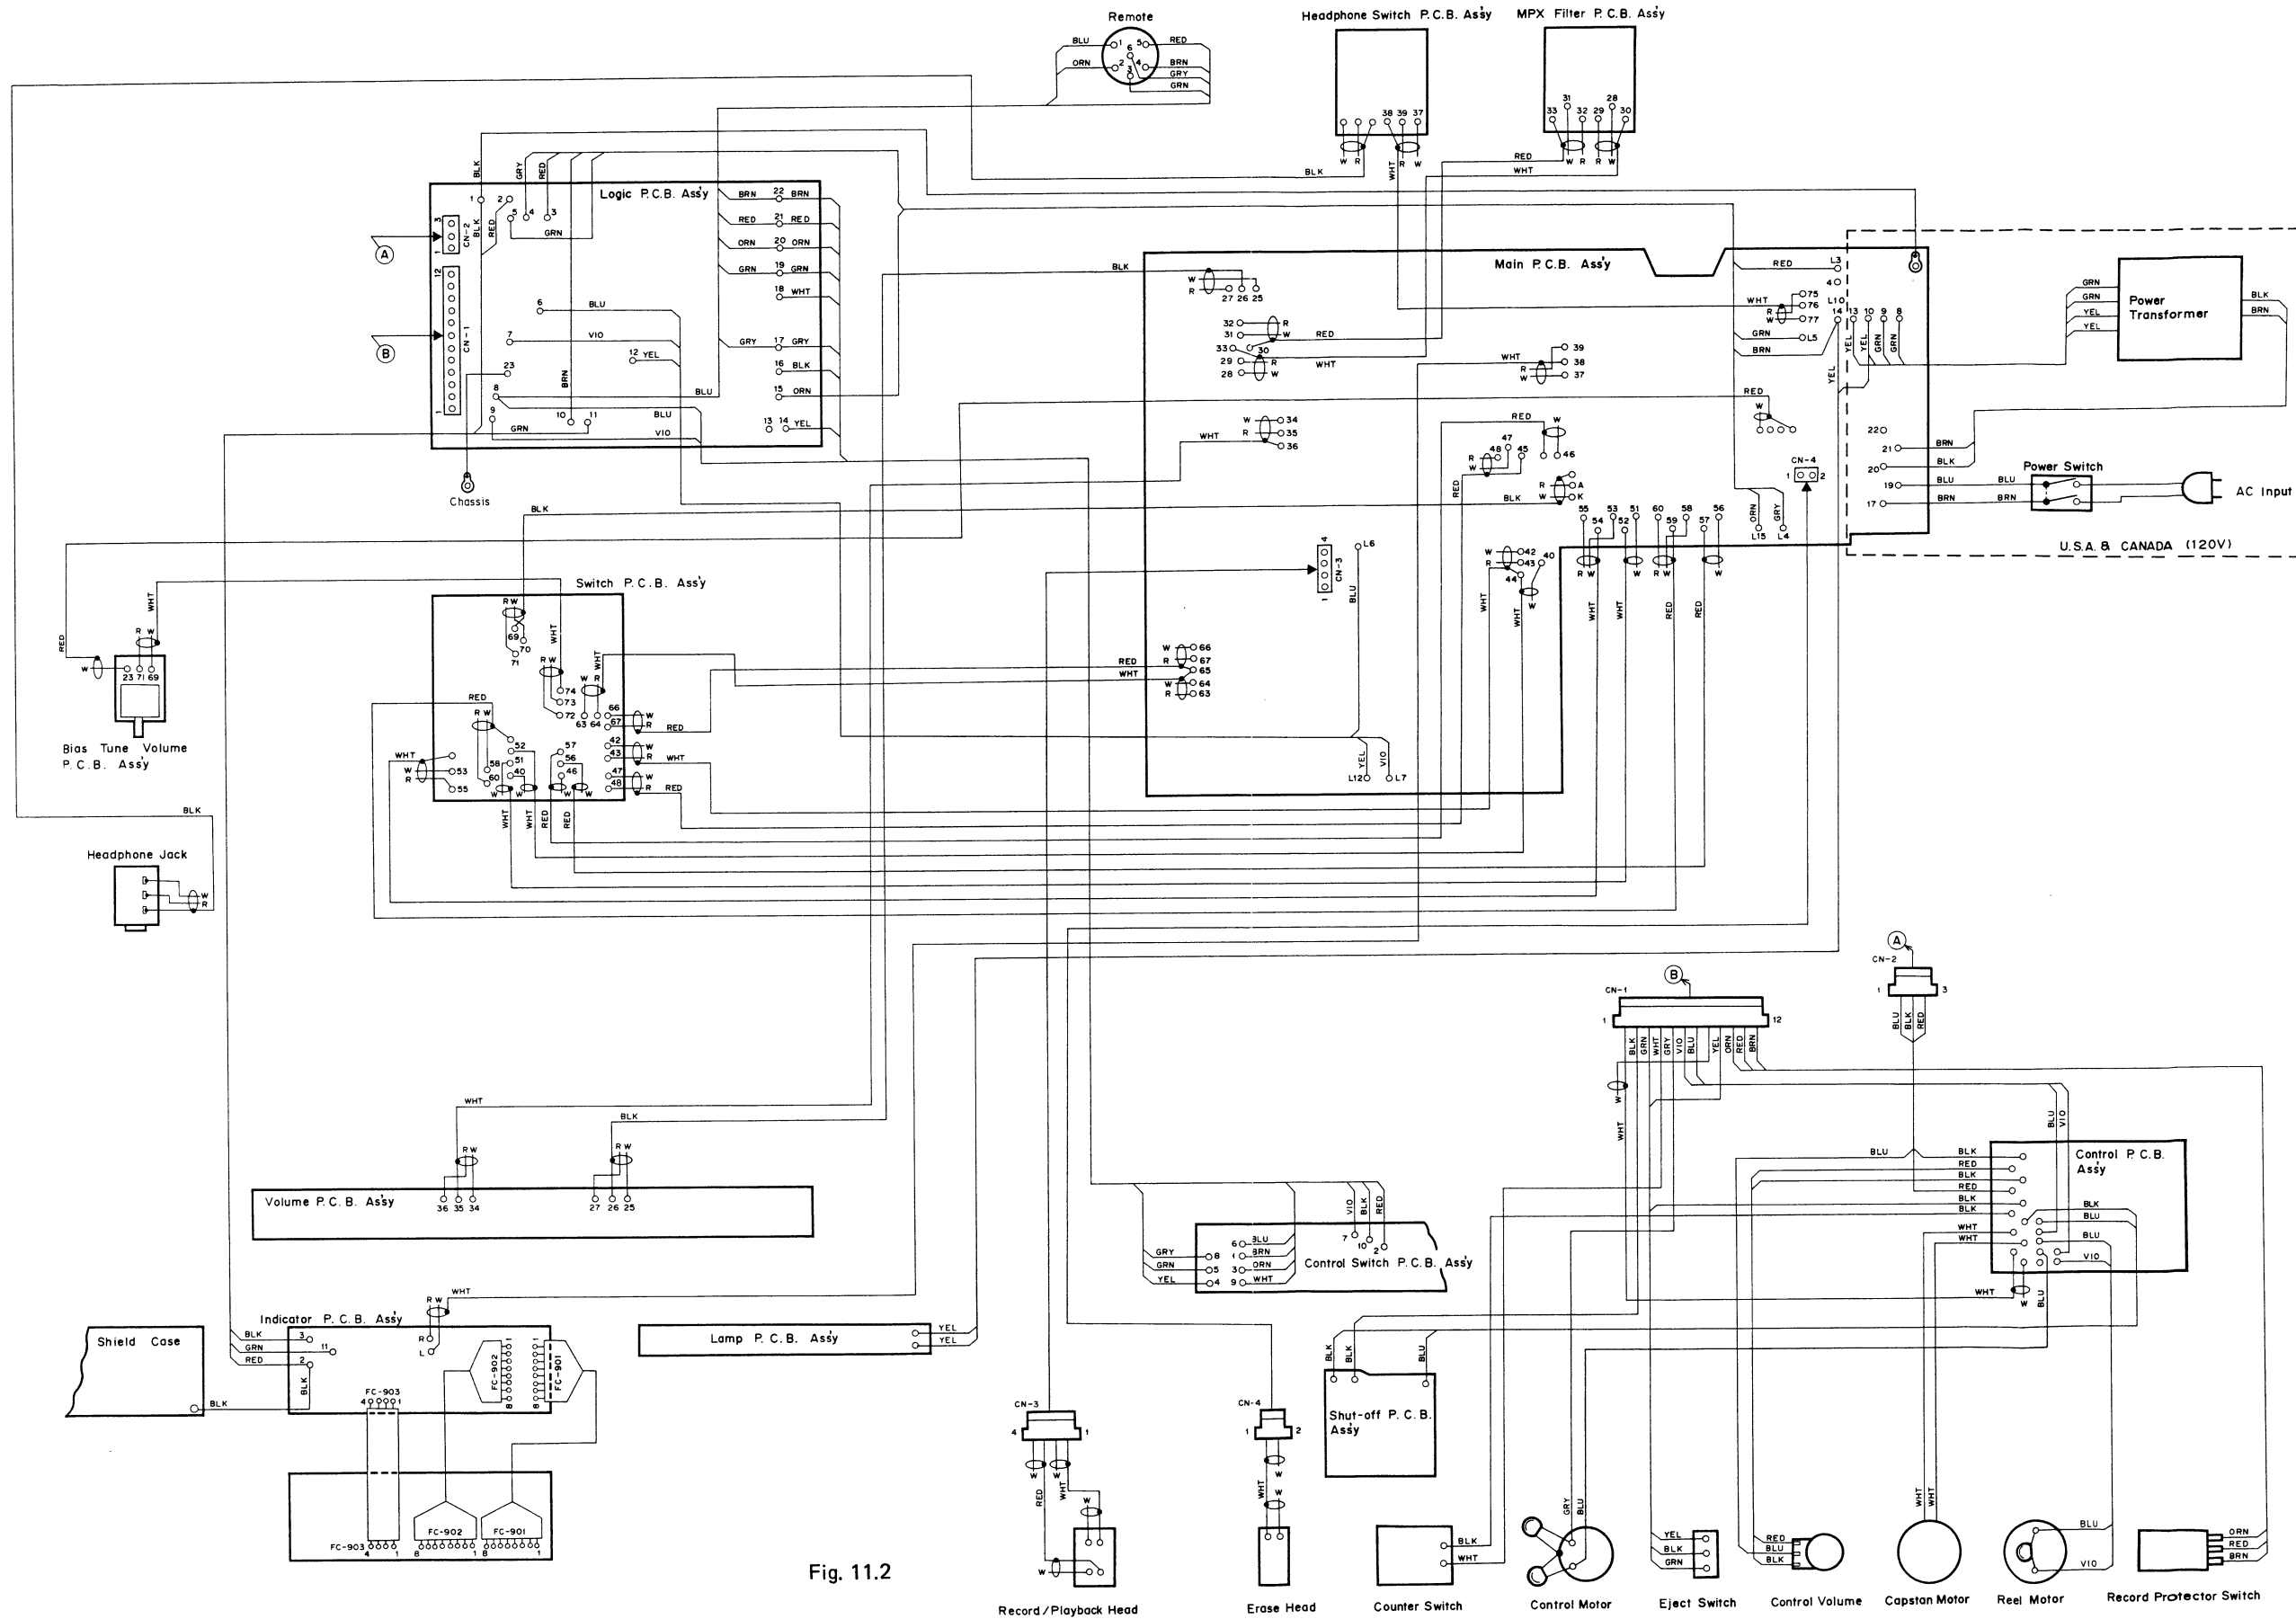


Fig. 11.2

12. BLOCK DIAGRAMS

12.1. Amplifier Section

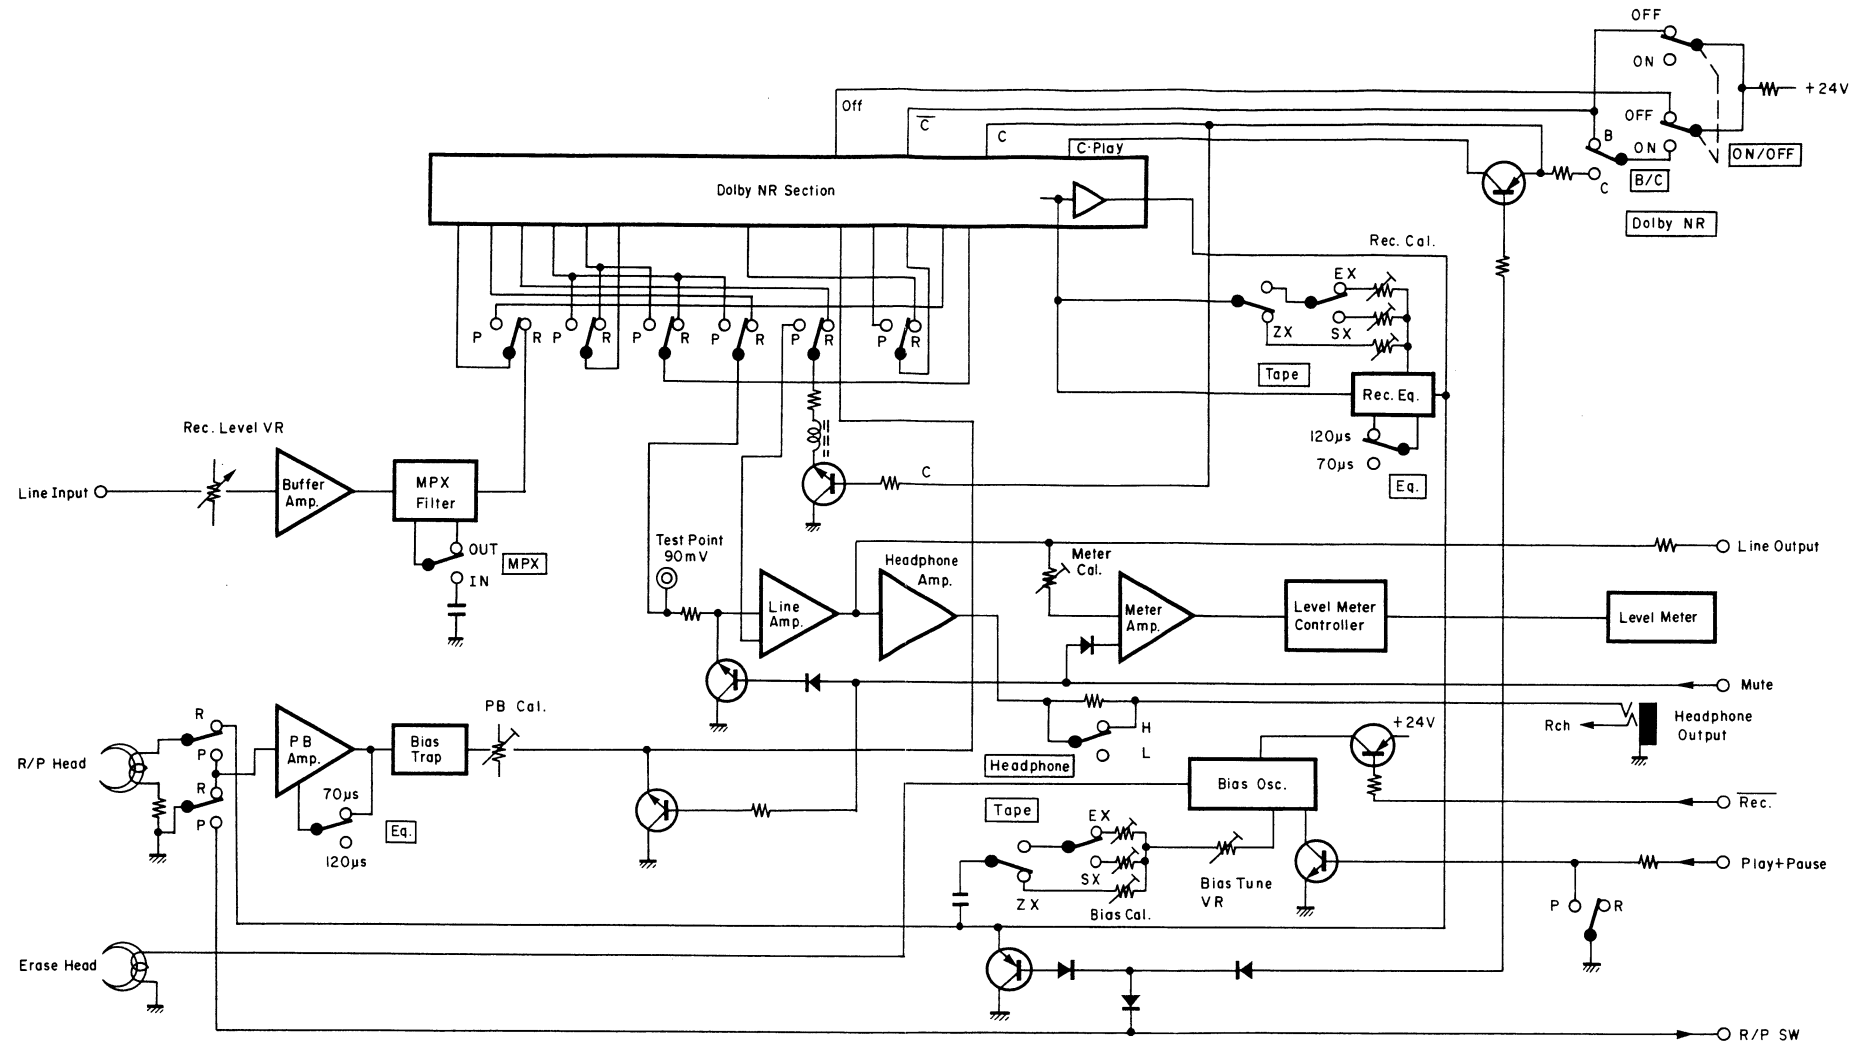


Fig. 12.1

12.2. Mechanism Control Section

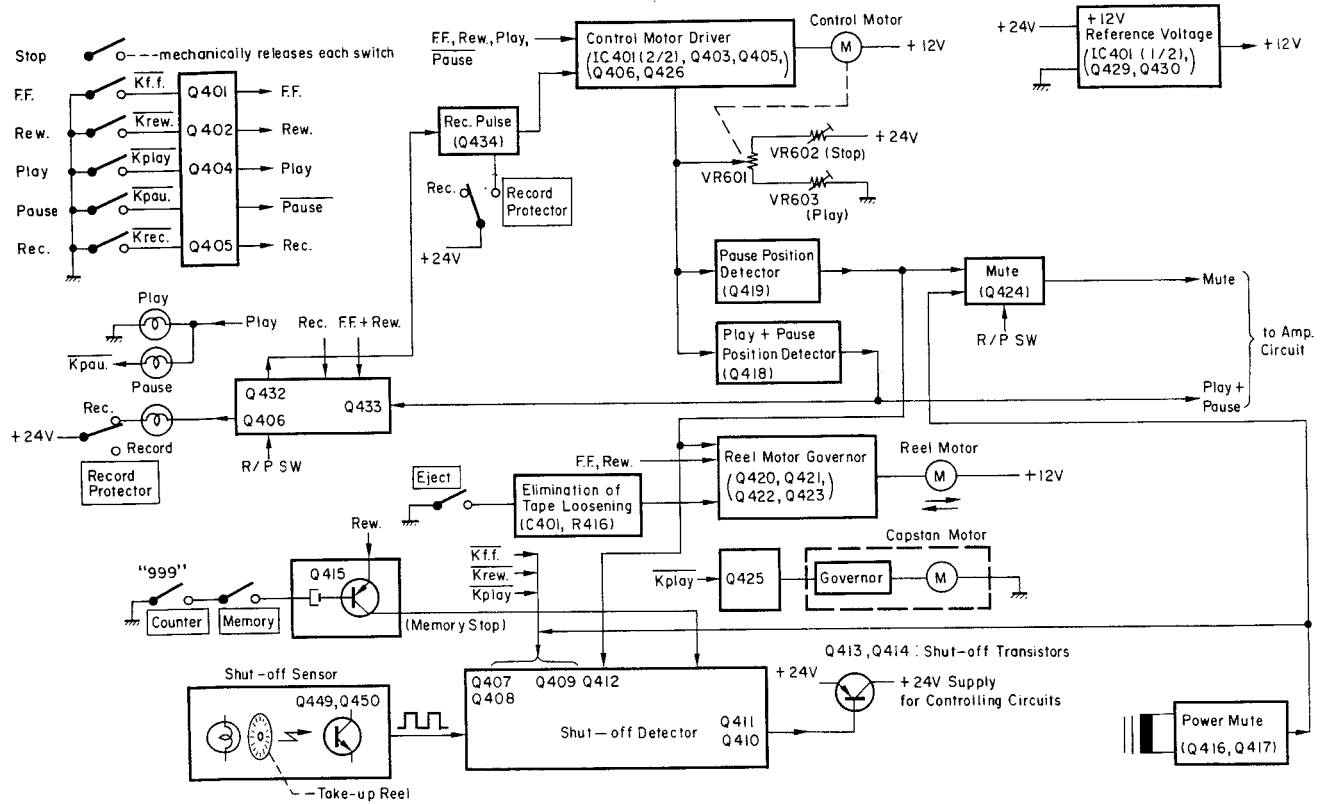


Fig. 12.2

13. SCHEMATIC DIAGRAMS

13.1. IC Block Diagrams

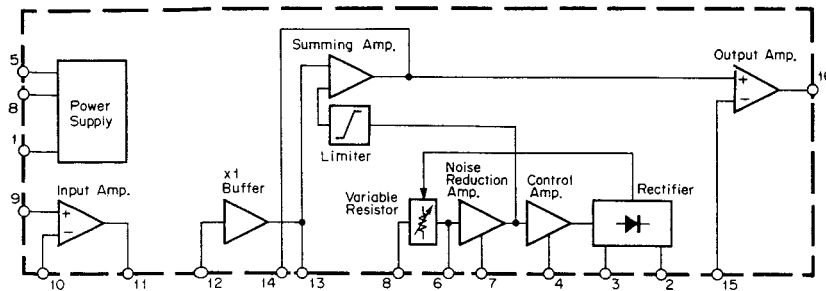


Fig. 13.1 Dolby NR IC μ A7300PC

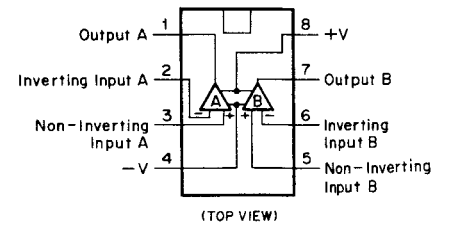


Fig. 13.2 Operational Amp. IC 4558

13.2. Attention to Servicemen

(1) Parts Replacement

Following parts shall be replaced with the specified ones.
Refer to the parts list.

(a) Power Supply Circuit

Power Cord
Power Transformer T1
Power Switch SW1

(b) Main P.C.B. Ass'y

F401, 402
M2, 3
D401
IC401
R301, 303, 304, 305, 306, 307, 308, 311, 312
716, 717, 816, 817

(c) Logic P.C.B. Ass'y

O402, 413, 420, 421, 425, 427, 428, 429, 430
R453, 470

(d) Control Switch P.C.B. Ass'y

R610, 611, 612
PL601, 602, 603

(e) Shut-off P.C.B. Ass'y

R605
PL407

(f) Lamp P.C.B. Ass'y

PL001, 002

(g) Indicator P.C.B. Ass'y

R901

(2) Insulation Check

Before returning the repaired N-480Z to a customer, check to insure that the exposed part is accurately insulated from the AC line by measuring the leakage current or the insulation resistance between them.

13.3. Mechanism Control Section

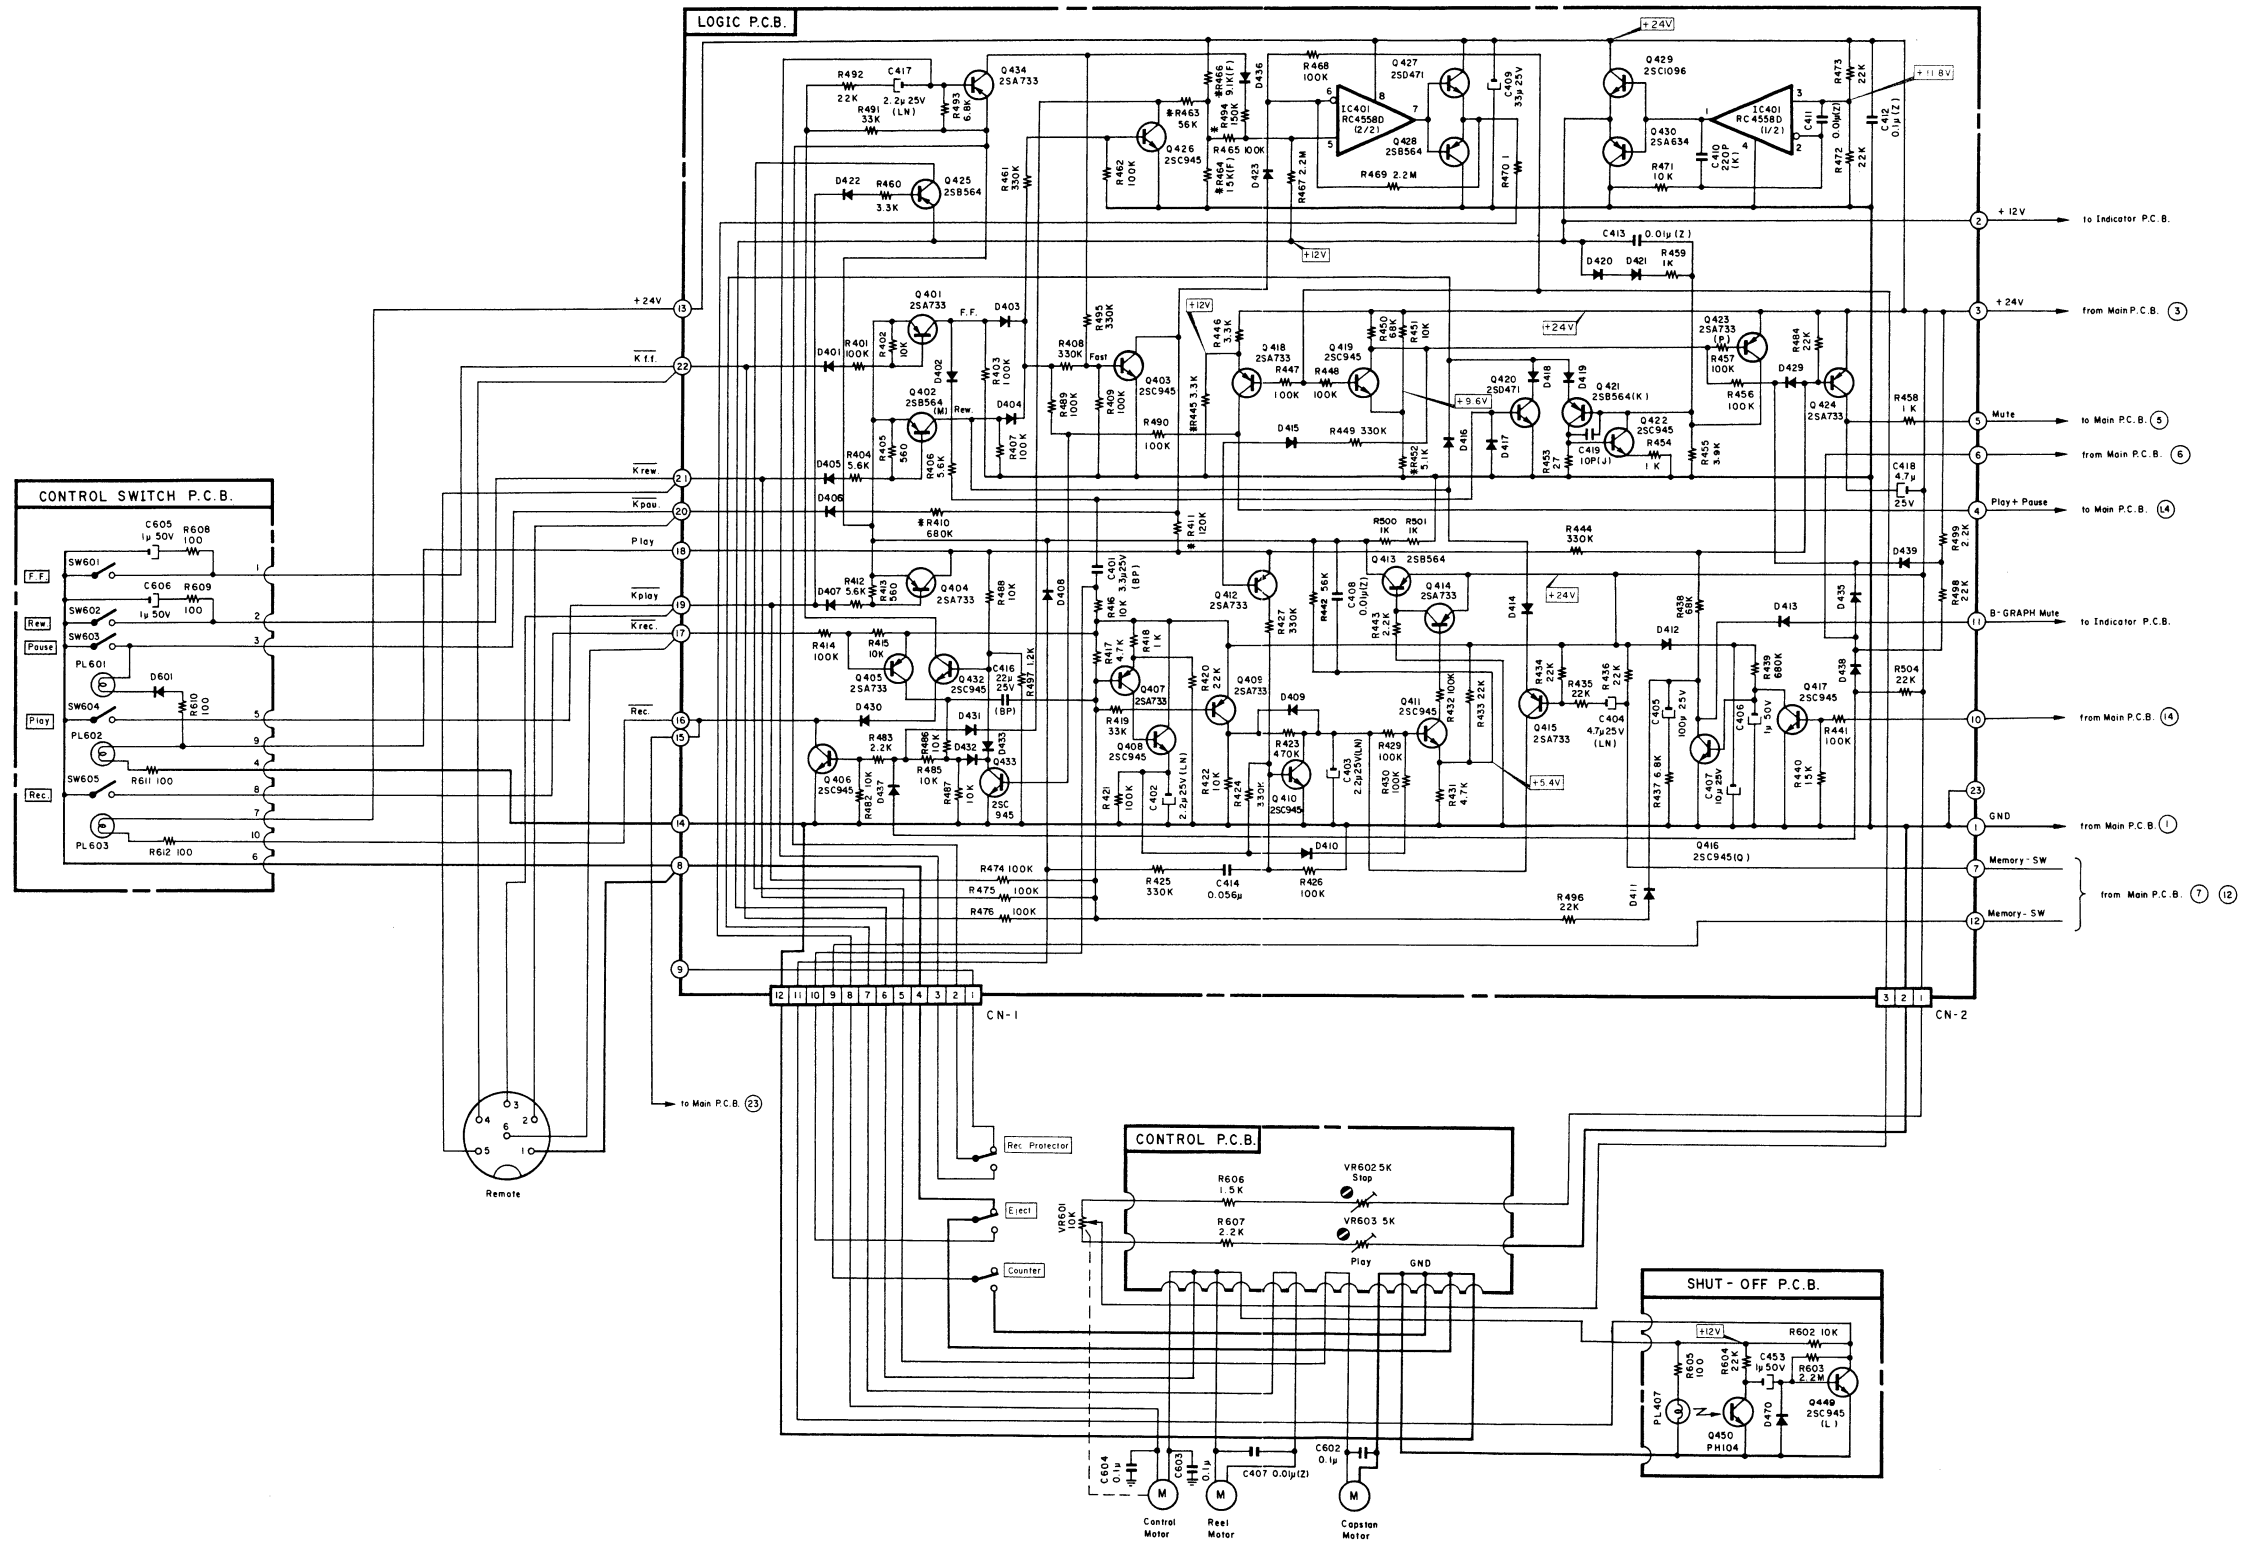


Fig. 13.3.1 Serial No.: A30808688 –
Serial No.: A30908913 –

Notes: 1. Diode is 1S553, 1S953, or 1S1555 unless otherwise specified.
2. Resistor and capacitor marked with * show typical value.

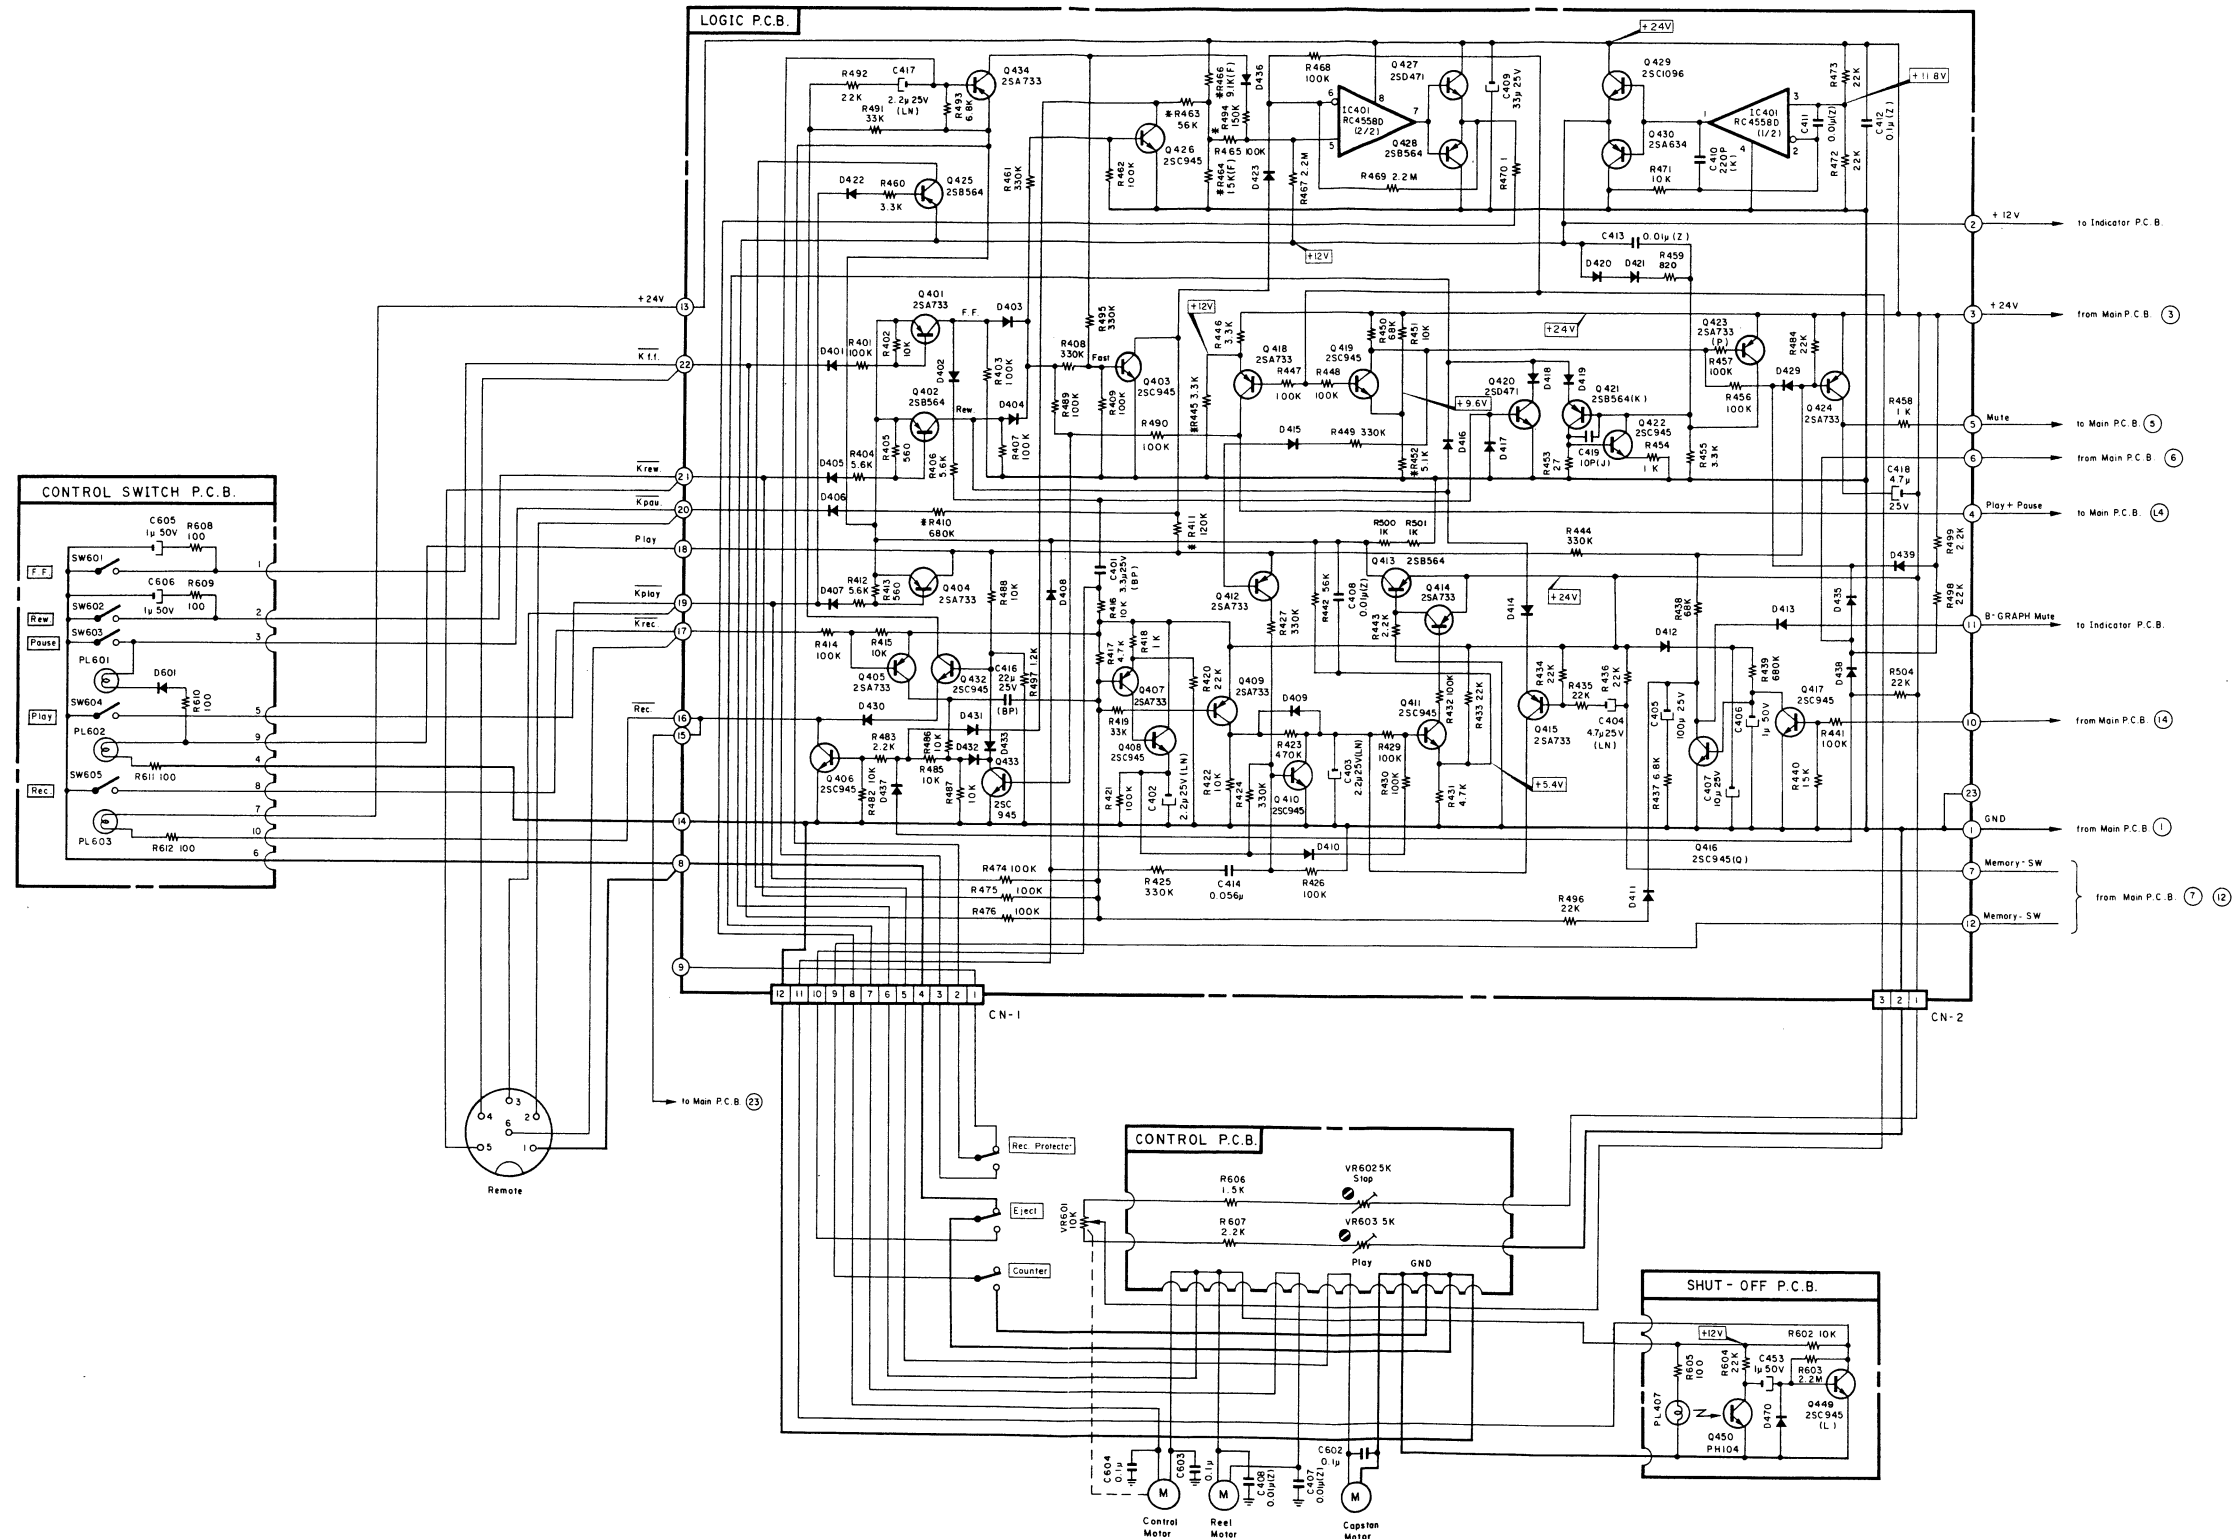


Fig. 13.3.2 Serial Nos.: A30801001 – A30808687
Serial Nos.: A30901001 – A30908912

Notes: 1. Diode is 1SS53, 1S953, or 1S1555 unless otherwise specified.
2. Resistor and capacitor marked with * show typical value.

13.4. Amplifier Section




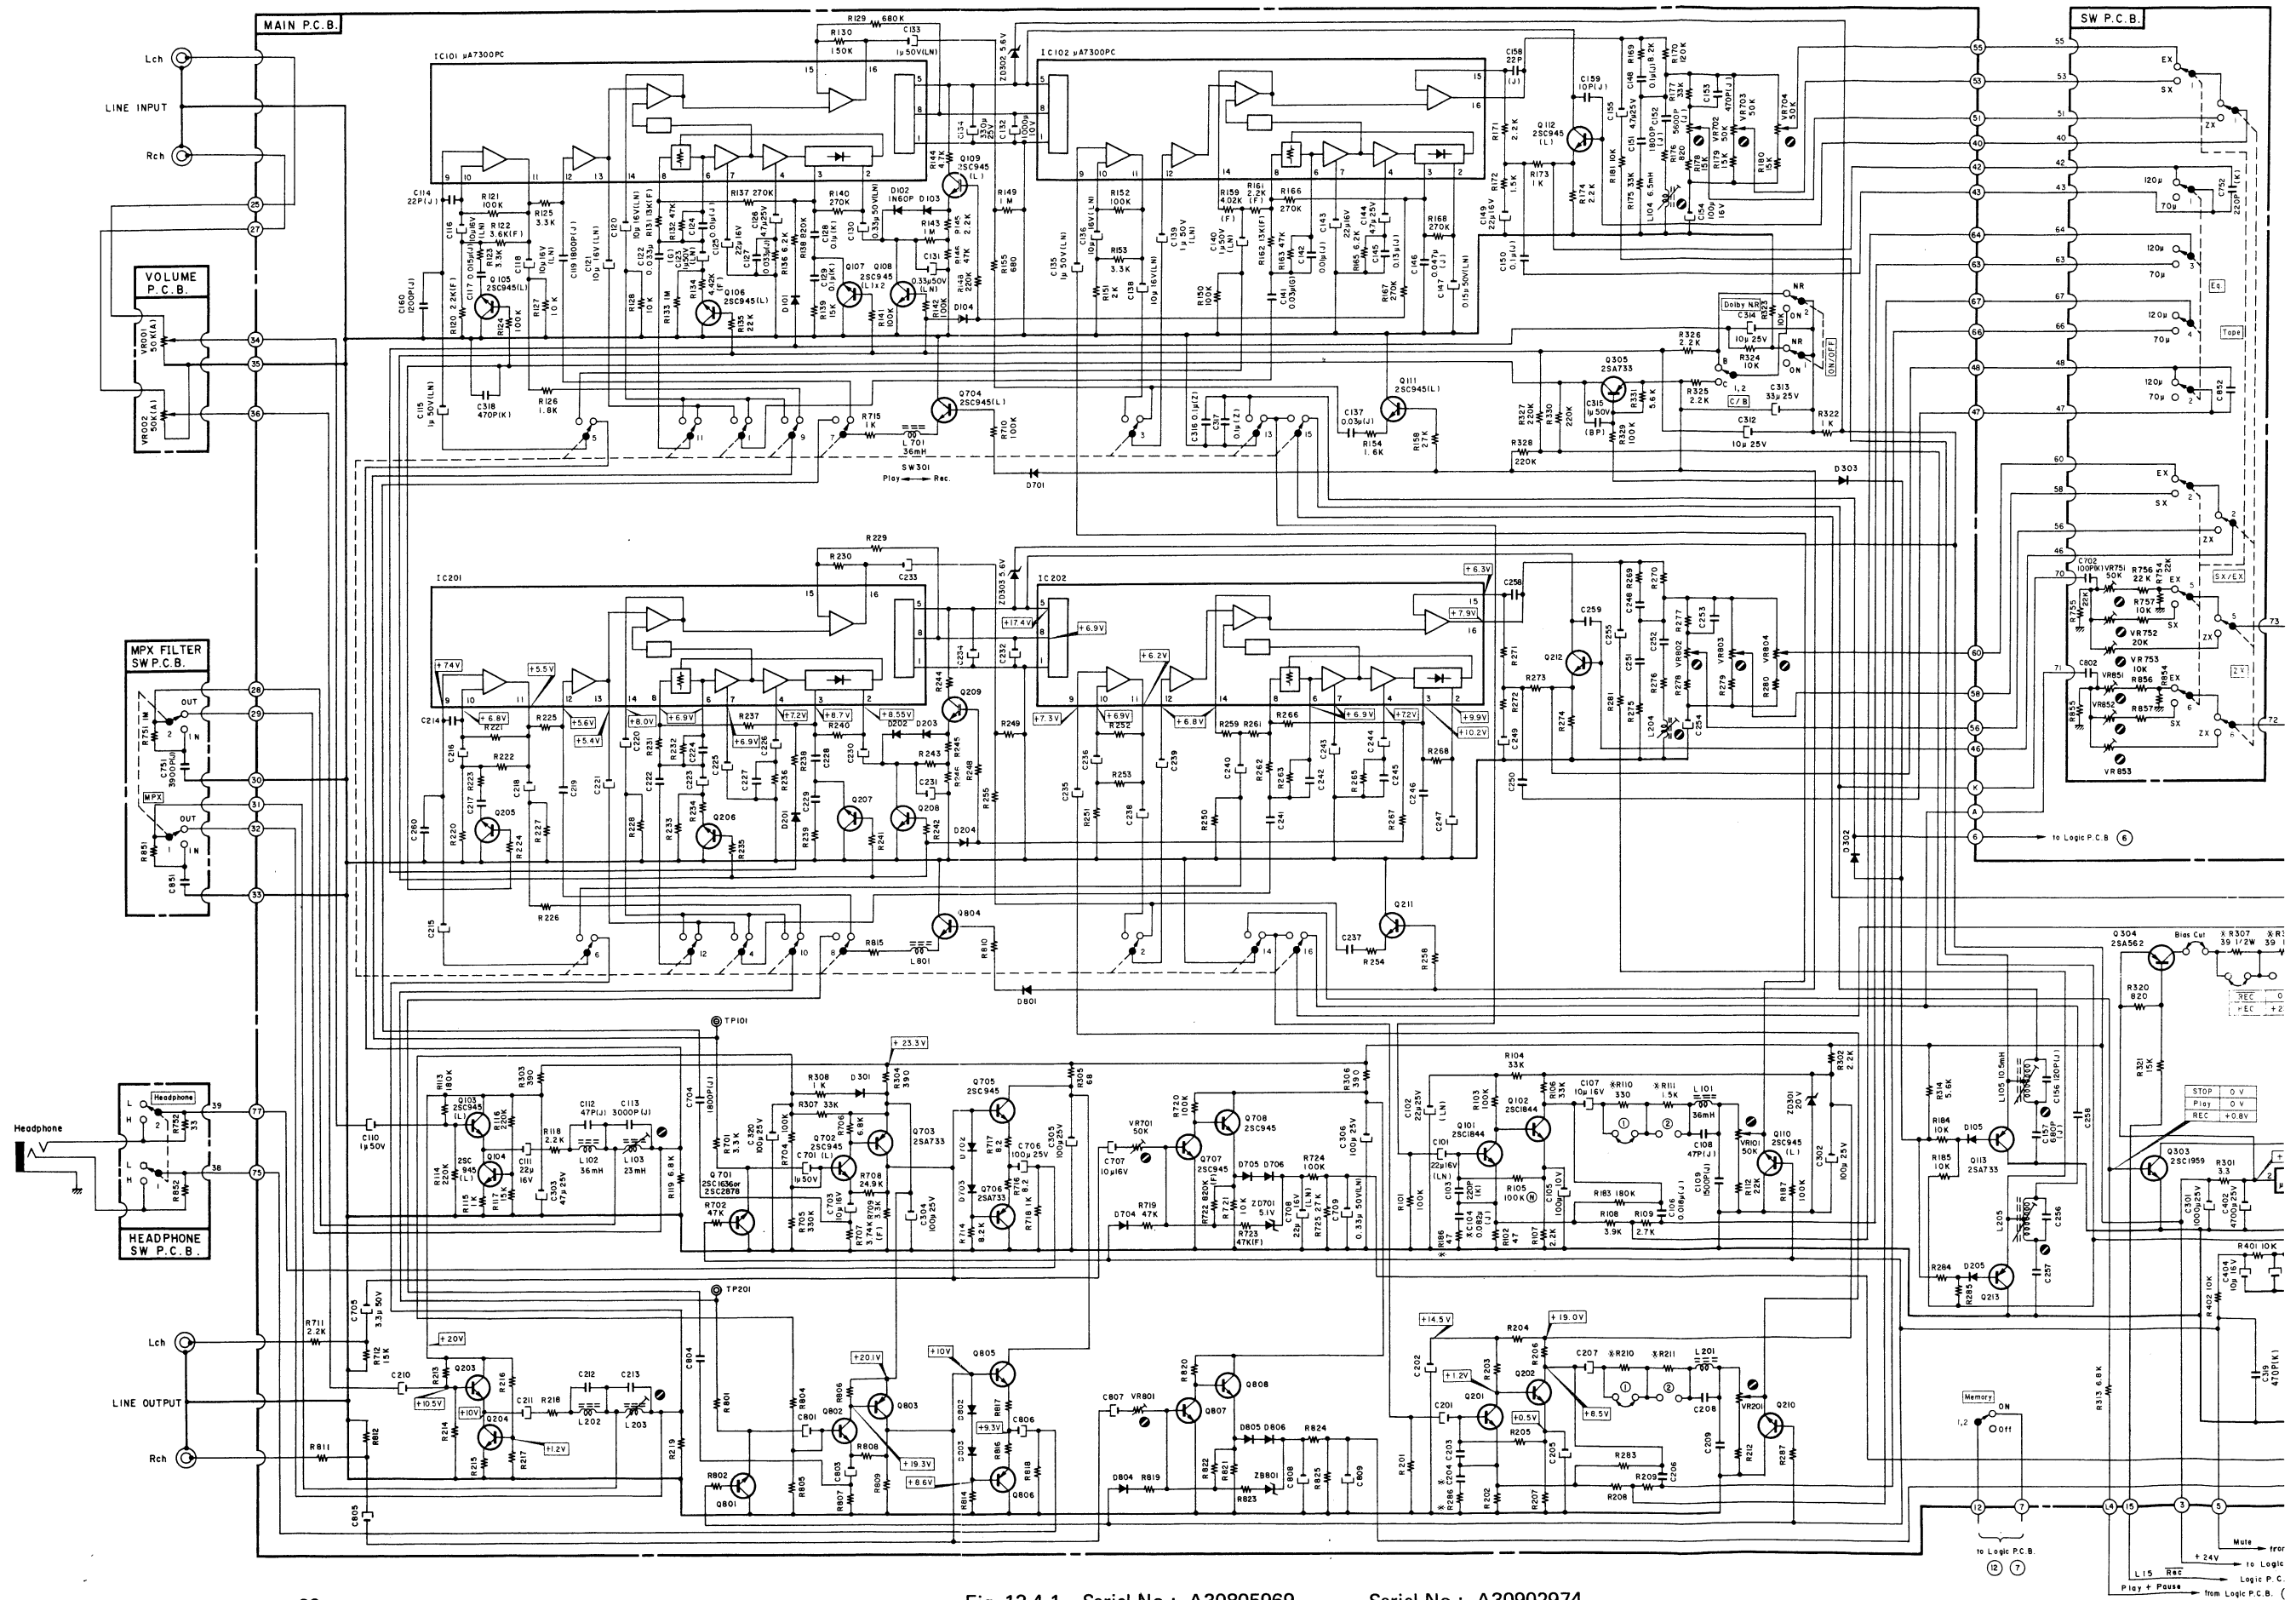


Fig. 13.4.1 Serial No.: A30805969 – Serial No.: A30902974 –

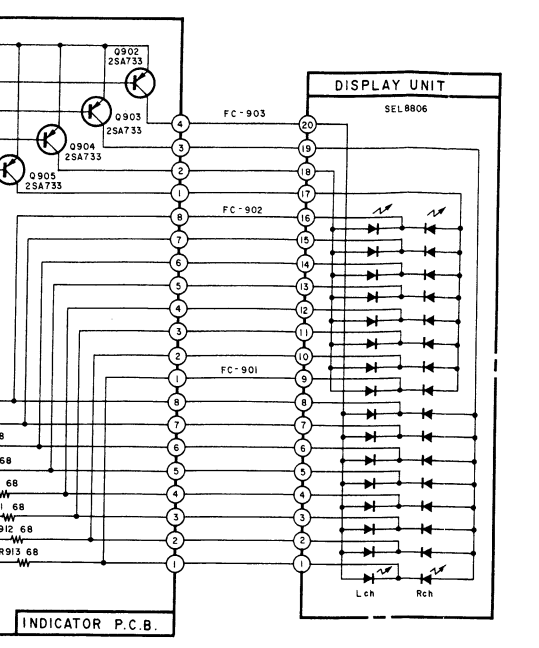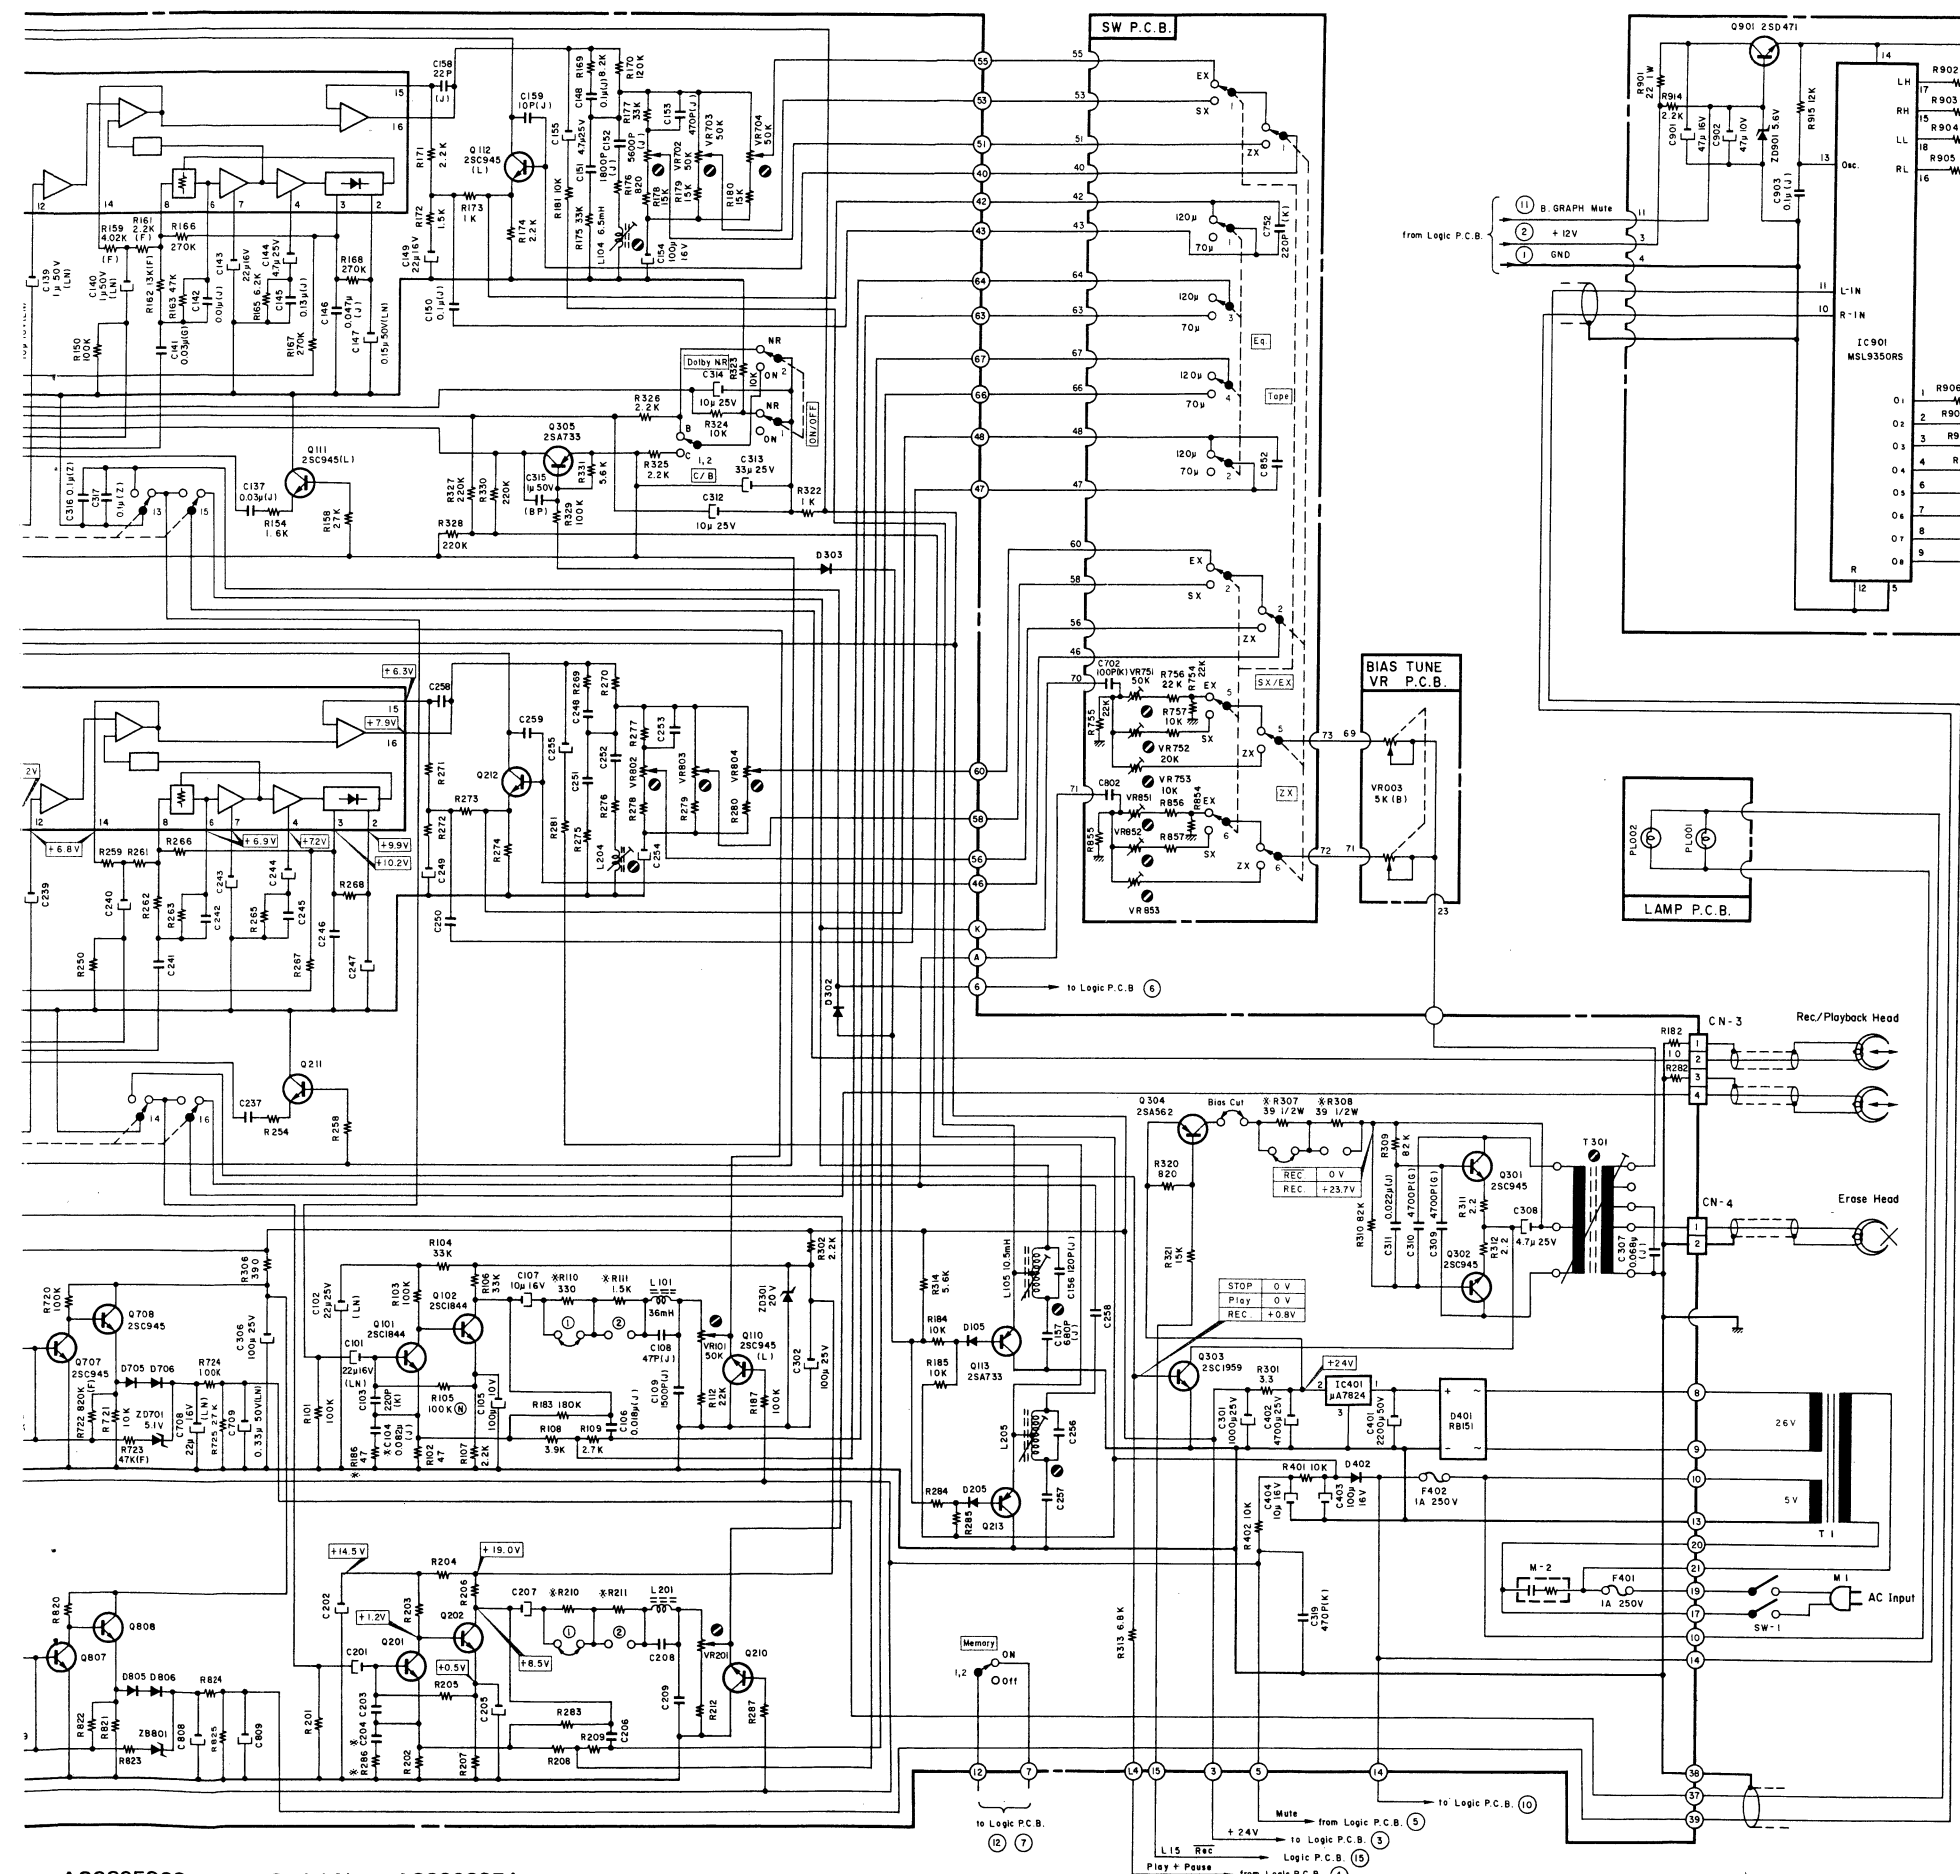

Switch Chart	
Description	Schematic Ref. Number
Record/Play	SW 301
Dolby NR ON/OFF	SW 302
Dolby NR C/B - Type	SW 303
Memory	SW 304
Eq.	SW 305
ZX	SW 306
SX/EX	SW 307
MPX	SW 308
Headphone	SW 309

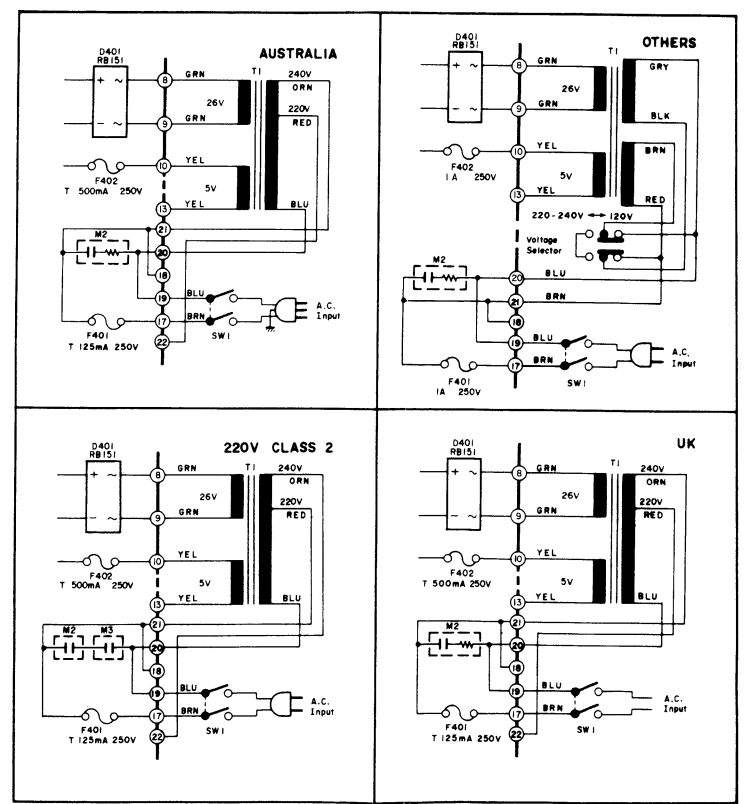

Notes: 1. Diode is 1SS53, 1S953, or 1S1555 unless otherwise specified.
 2. Resistor and capacitor marked with * show typical value.




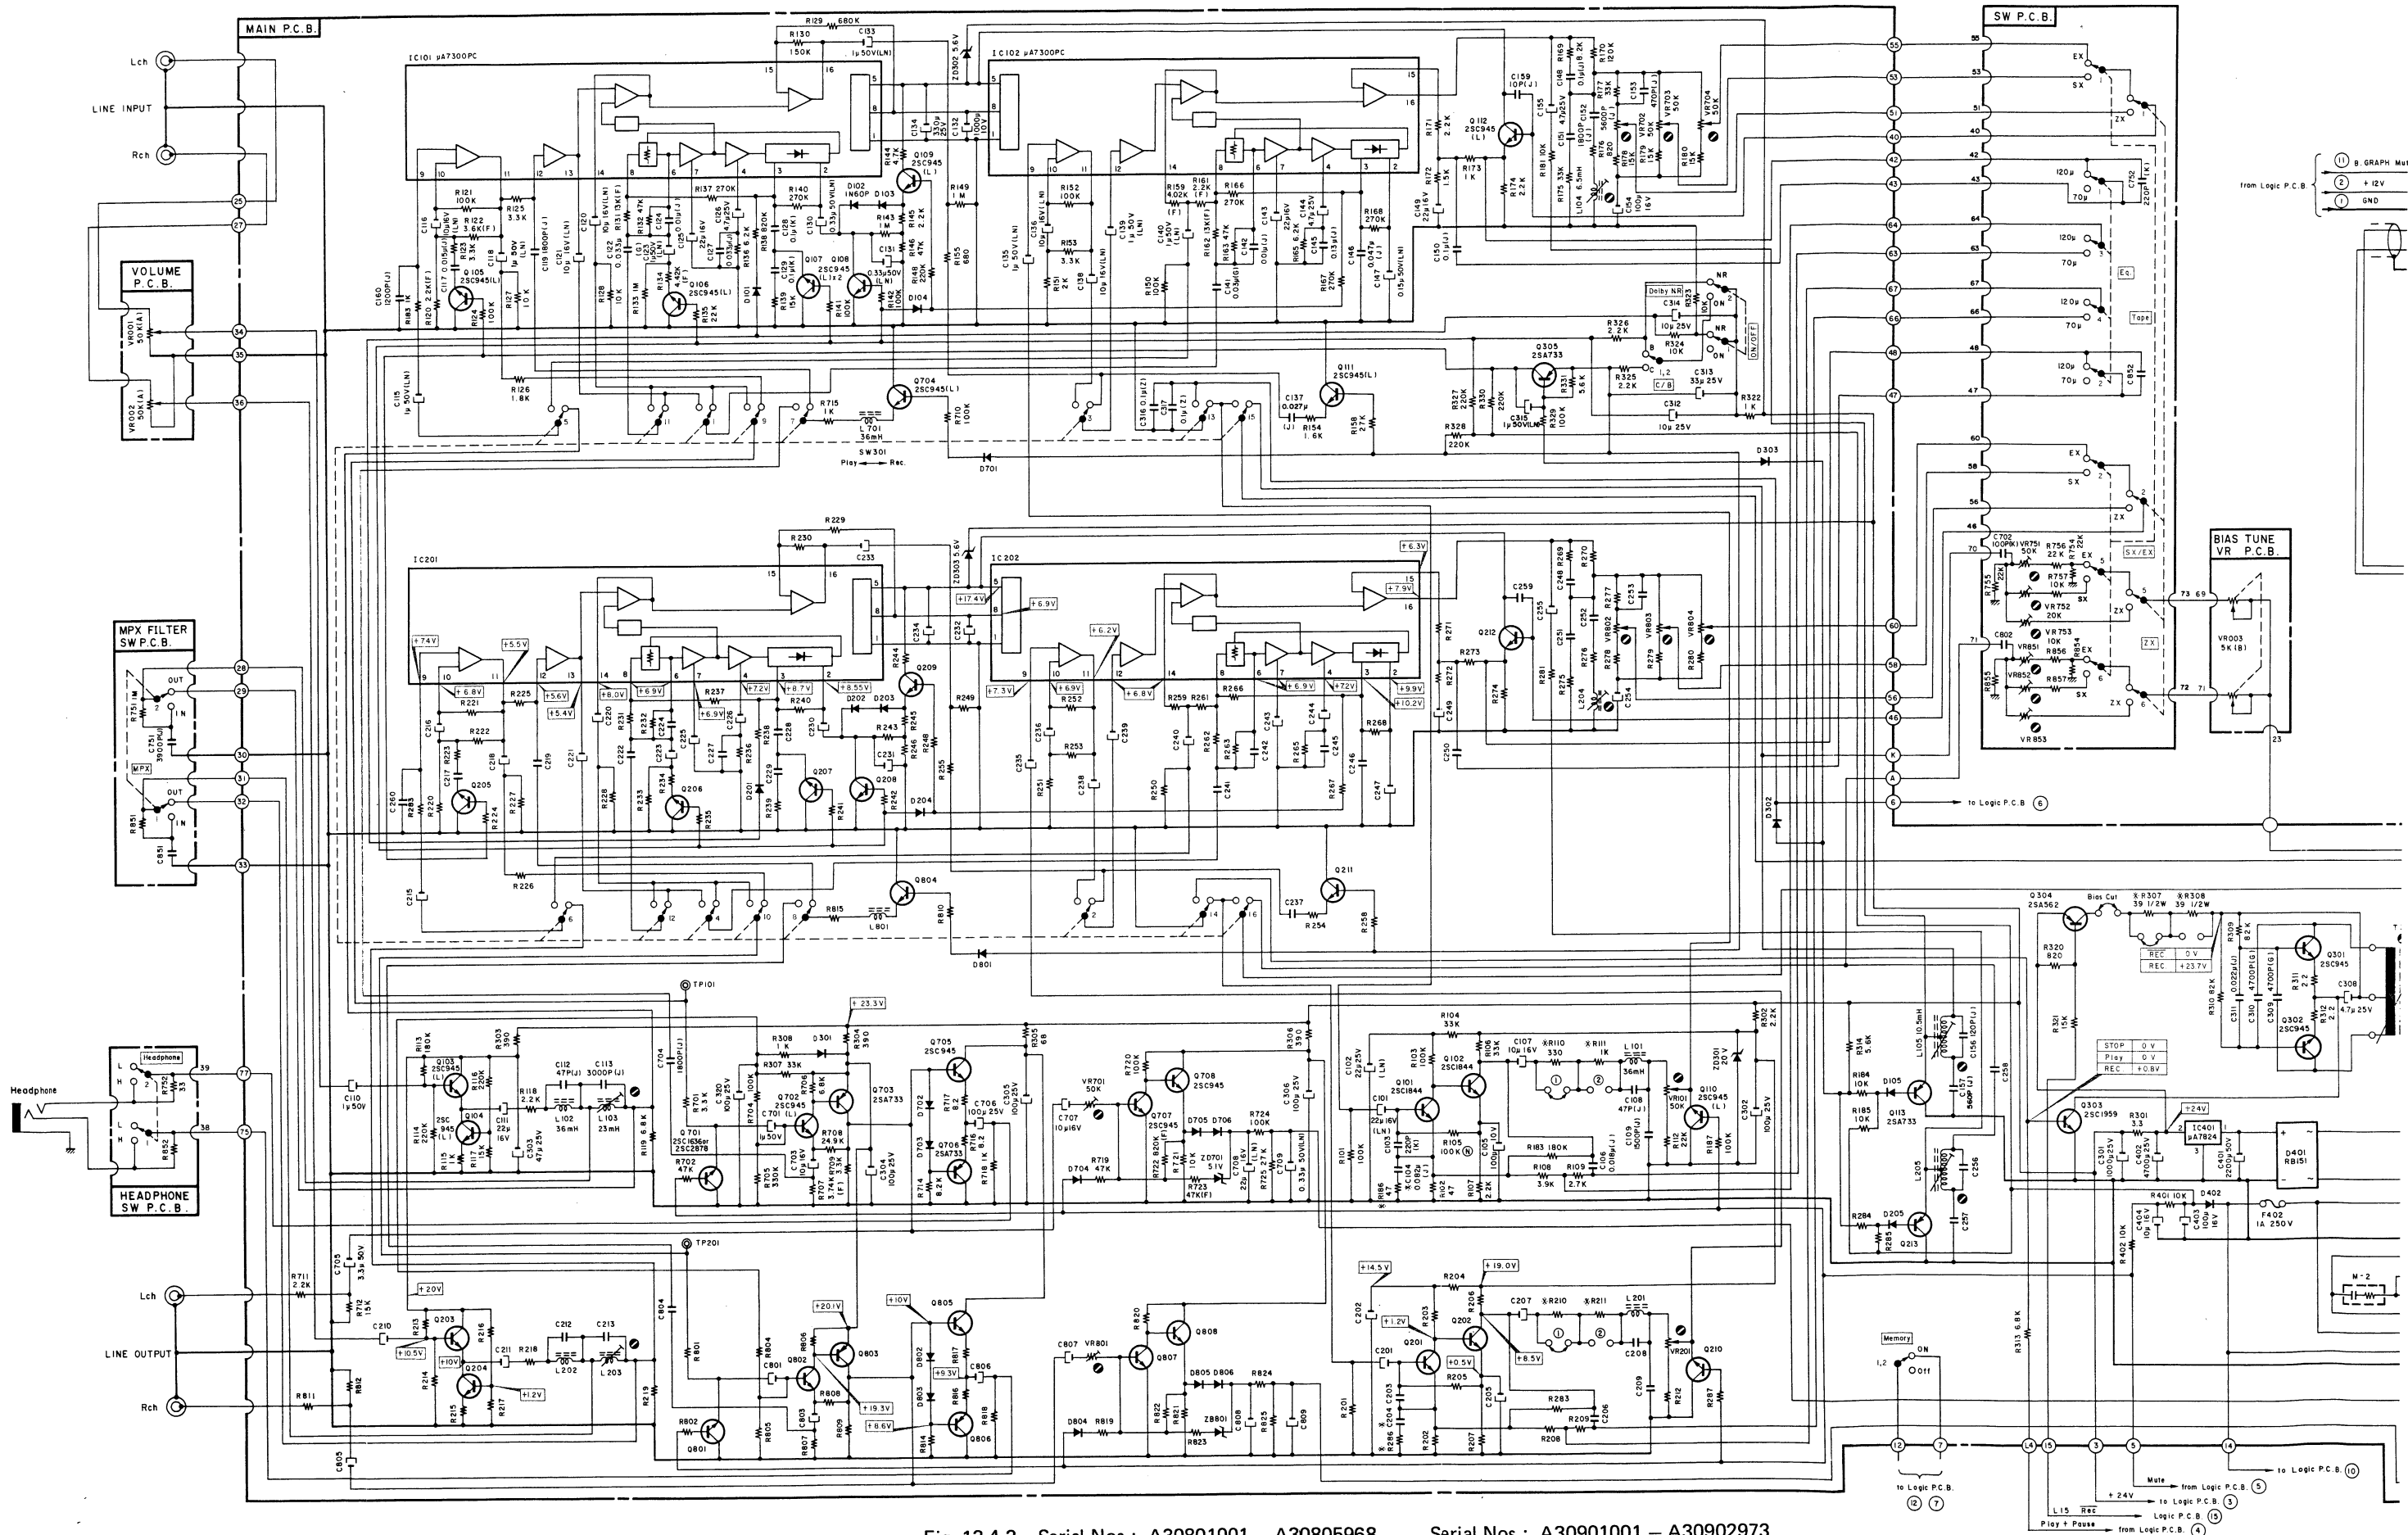


Fig. 13.4.2 Serial Nos.: A30801001 – A30805968 Serial Nos.: A30901001 – A30902973

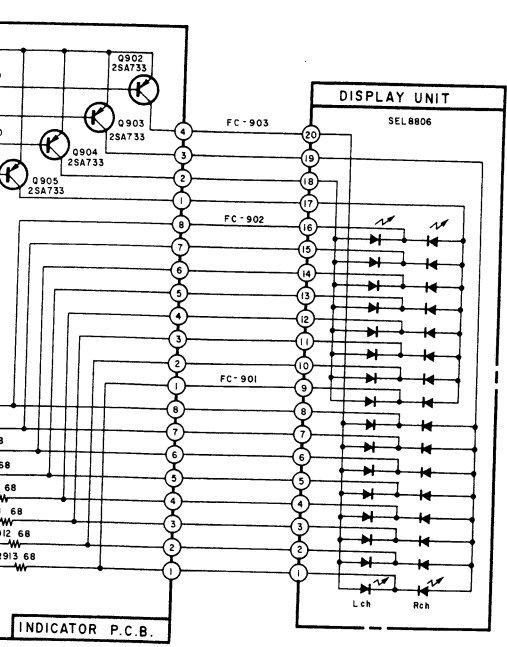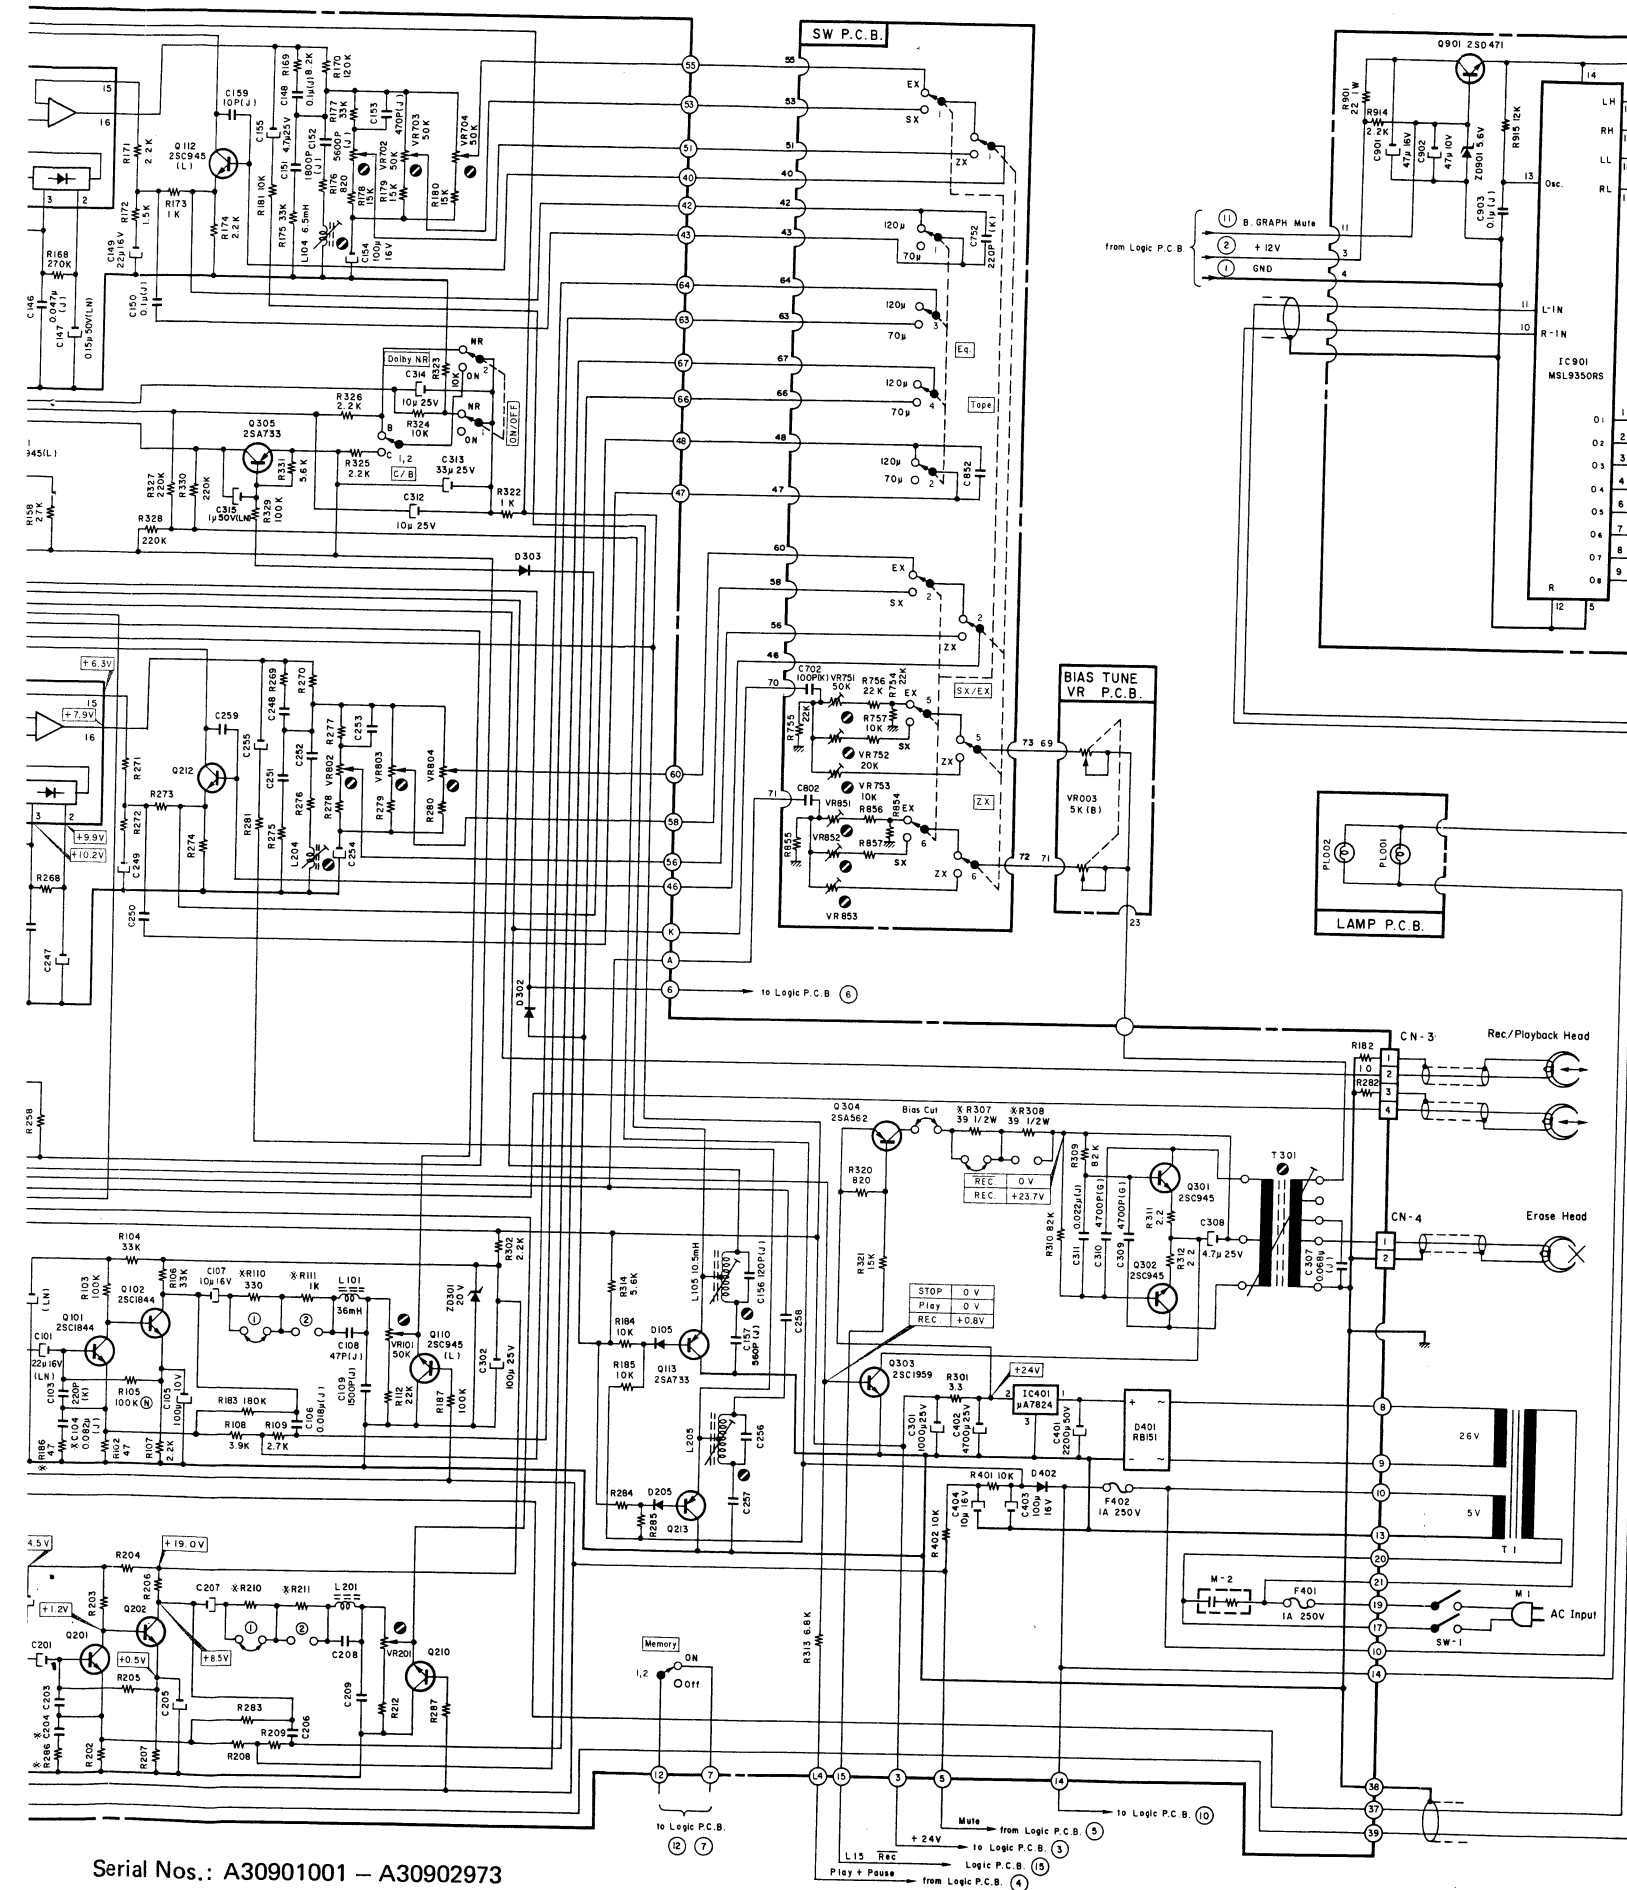

Switch Chart	
Description	Schematic Ref. Number
Record / Play	SW301
Dolby NR ON/OFF	SW302
Dolby NR C/B - Type	SW303
Memory	SW304
Eq.	SW305
ZX	SW306
SX/EX	SW307
MPX	SW308
Headphone	SW309

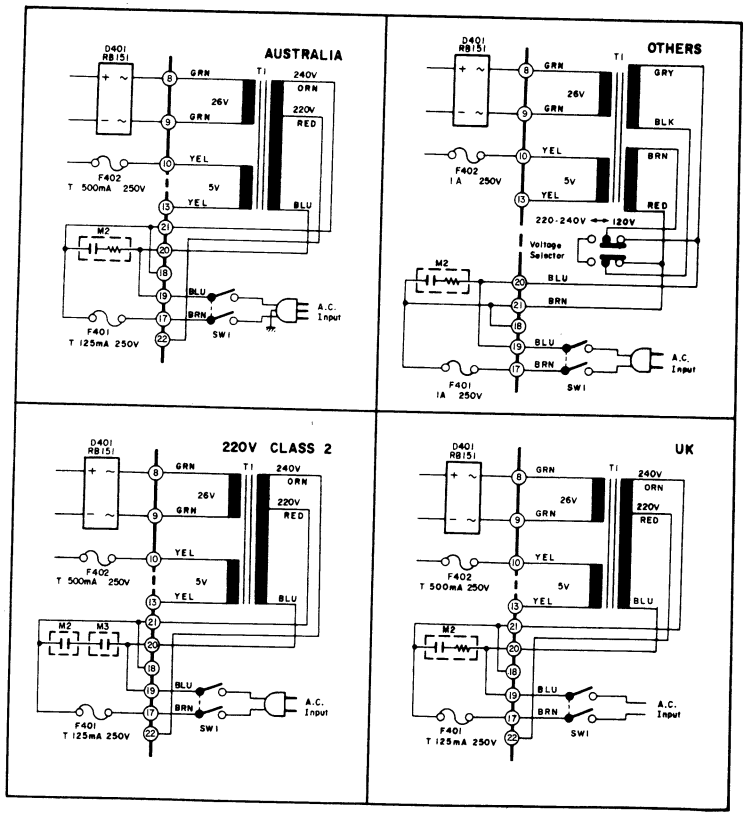

Notes: 1. Diode is 1SS53, 1S953, or 1S1555 unless otherwise specified.
 2. Resistor and capacitor marked with * show typical value.

Serial Nos.: A30901001 - A30902973

14. SPECIFICATIONS

Power Source	100, 120, 120/220-240, 220 or 240 V AC; 50/60 Hz (according to country of sale)
Power Consumption	30 W max.
Tape Speed	1-7/8 ips (4.8 cm/sec) ±0.5%
Wow and Flutter	Less than 0.11% WTD Peak, 0.06% WTD rms
Frequency Response	20–20,000 Hz (–20 dB Rec. Level)
Signal to Noise Ratio	Dolby C-Type NR on <70 μs ZX Tape> Better than 68 dB at 400 Hz, 3% THD, IHF A-wtd rms Dolby B-Type NR on <70 μs ZX Tape> Better than 62 dB at 400 Hz, 3% THD, IHF A-wtd rms
Total Harmonic Distortion	Less than 1.0% at 400 Hz, 0 dB (ZX Tape) Less than 1.2% at 400 Hz, 0 dB (SX, EXII Tapes)
Erasure	Better than 60 dB below saturation level at 1 kHz
Separation	Better than 36 dB at 1 kHz, 0 dB
Crosstalk	Better than 60 dB at 1 kHz, 0 dB
Bias Frequency	105 kHz
Input	50 mV, 30 k ohms
Output Level	600 mV (400 Hz, 0 dB) 2.2 k ohms
Headphone	10 mW (400 Hz, 0 dB, phones level: High) 8 Ω
Dimensions	450 (W) x 135 (H) x 289 (D) mm 17-23/32 (W) x 5-5/16 (H) x 11-3/8 (D) inches
Approximate Weight	6.4 kg, 14 lb. 2 oz

- Specifications and appearance design are subject to change for further improvement without notice.
- Dolby NR under license from Dolby Laboratories Licensing Corporation.
- The word "DOLBY" and the Double-D-Symbol are trademarks of Dolby Laboratories Licensing Corporation.