



Service Manual

Nakamichi

CA-5_{II}

CA-5A_{II}

CA-5E_{II}

CA-50_{II}

Control Amplifier



CONTENTS

1.	General	1
2.	Removal Procedures	3
2. 1.	Top Cover Ass'y	3
2. 2.	Side Panel R and Side Panel L	3
2. 3.	Main P.C.B. Ass'y	3
2. 4.	Front Panel Ass'y	4
2. 5.	Front Chassis and Tone Switch P.C.B. Ass'y	4
3.	Parts Location for Electrical Adjustment	5
4.	Electrical Adjustments	5
5.	Mechanism Ass'y and Parts List	6
5. 1.	Synthesis	6
5. 2.	Chassis Ass'y (A01)	7
5. 3.	Front Panel Ass'y (A02)	9
5. 4.	Rear Panel Ass'y (B01)	9
5. 5.	Main Chassis Ass'y (B02)	11
6.	Mounting Diagrams and Parts List	12
6. 1.	Power Switch P.C.B. Ass'y	12
6. 2.	Power LED P.C.B. Ass'y	12
6. 3.	Tone Switch P.C.B. Ass'y	12
6. 4.	Pin Jack P.C.B. A Ass'y	13
6. 5.	Pin Jack P.C.B. B Ass'y	13
6. 6.	Pin Jack P.C.B. C Ass'y	13
6. 7.	Load Switch P.C.B. Ass'y	14
6. 8.	Volume P.C.B. Ass'y	14
6. 9.	Tone Control P.C.B. Ass'y	14
6. 10.	Main P.C.B. Ass'y	15
7.	Schematic Diagram	17
8.	Wiring Diagram	19
9.	Block Diagram	21
10.	Specifications	22

1. GENERAL

1.1. Voltage Selector

Voltage selector is installed on the rear panel of the Nakamichi CA-5II (Other version).
This voltage selector can select either 120 V or 220-240 V at customer's disposal.

1.2. Package Ass'y, Accessory Ass'y and Parts List

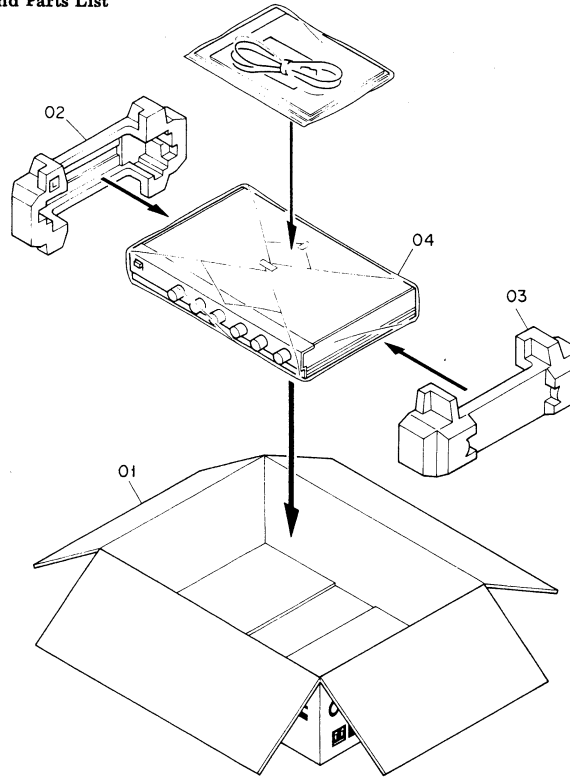


Fig. 1

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
01	FA03627A	Package Ass'y (CA-5II (Other & Saudi Arabia))	1		0D04449A	Important Notice Card	1
	FA03628A	Package Ass'y (CA-5II (Australia))	1		0D04766A	Catalogue (CA-5AII (U.S.A.))	1
	FA03632A	Package Ass'y (CA-5AII (U.S.A.))	1		0D04797A	Warranty Card (CA-5AII (Canada))	1
	FA03625A	Package Ass'y (CA-5AII (Canada))	1		0D04788A	Owner's Manual (Japanese)	1
	FA03629A	Package Ass'y (CA-5EII (Europe, Germany & Switzerland))	1		0D04789A	Owner's Manual (English, German, French))	1
	FA03624A	Package Ass'y (CA-5EII (UK))	1		0D04790A	Owner's Manual (English)	1
	FA03626A	Package Ass'y (CA-50II (Japan))	1		0D04791A	Supplement for Resistor Kits (CA-5II (Australia) & CA-5AII (U.S.A.))	1
	OF04081A	Carton Box CA-5II	1		0D04792A	Supplement for Resistor Kits (CA-5II (Other & Saudi Arabia), CA-5AII (Canada) & CA-5EII))	1
	OF04082A	Carton Box CA-5AII	1		0D04793A	Supplement for Resistor Kits (CA-50II)	1
	OF04079A	Carton Box CA-5EII	1		0D04794A	Price Card (CA-50II)	1
	OF04080A	Carton Box CA-50II	1		0D04796A	Tape Catalogue (CA-5AII (U.S.A.))	1
	02	OF03863A	Packing L		0F03887A	Power Cord Band (CA-5II (Saudi Arabia))	1
	03	OF03864B	Packing R		DA03873A	Warranty Card Ass'y (CA-5AII (U.S.A.), for 1st Version)	1
	04	OF03684A	Poly-Bag		0D04797A	Warranty Card Ass'y (CA-5AII (U.S.A.), for 2nd Version)	1
	—	0D04047A	User's Pack (CA-50II)		DA04116A	Resistor Kits (Except for CA-50II (Consisting of the followings:))	2
	—	0D04616A	Amp. Warranty Card (CA-50II)		(0B20417A)	RK 3.16 1/2W F	(1)
	—	0M03457A	Voltage Label 240V (CA-5II (Australia) & CA-5EII (UK))		(0B20418A)	RK 11.5 1/2W F	(1)
	—	0M03642A	Voltage Label 220/240V (CA-5II (Other & Saudi Arabia))		(0B20419A)	RK 26.1 1/2W F	(1)
	—	0M05060A	Point of Sale Label (CA-50II)		(0B20420A)	RK 42.2 1/2W F	(1)
	DA04109A	Accessory Ass'y (CA-5II (Other))	1		(0B20421A)	RK 100 1/2W G	(1)
	DA04110A	Accessory Ass'y (CA-5II (Australia))	1		(0D04212A)	Poly-Bag	(1)
	DA04118A	Accessory Ass'y (CA-5II (Saudi Arabia))	1		DA04117A	Resistor Kits (CA-50II (Consisting of the followings:))	2
	DA04114A	Accessory Ass'y (CA-5AII (U.S.A.))	1		(0B20164A)	RK 3.16 1/2W G	(1)
	DA04107A	Accessory Ass'y (CA-5AII (Canada))	1		(0B20169A)	RK 11.5 1/2W G	(1)
	DA04111A	Accessory Ass'y (CA-5EII (Europe, Germany & Switzerland))	1		(0B20186A)	RK 26.1 1/2W G	(1)
	DA04106A	Accessory Ass'y (CA-5EII (UK))	1		(0B20196A)	RK 42.2 1/2W G	(1)
	DA04108A	Accessory Ass'y (CA-50II)	1		(0B20214A)	RK 100 1/2W G	(1)
	OB90229A	Power Cord (CA-5II (Saudi Arabia))	1		(0D04212A)	Poly-Bag	(1)
	OB90222A	Power Cord (CA-5AII (U.S.A.))	1				
	OD03092B	Poly-Bag for Accessory	1				

2. REMOVAL PROCEDURES

2.1. Top Cover Ass'y

Refer to Fig. 2.1.

- (1) Unfasten F01 (M4x8 Hex. Socket Head Screws) by using a wrench and remove F02 (Top Cover Ass'y).

2.2. Side Panel R and Side Panel L

Refer to Fig. 2.2.

- (1) Remove the Top Cover Ass'y referring to item 2.1.
- (2) Unfasten F01, F02 and F03, and pull the front part of F04 (Side Panel R) to the right, then pull F04 (Side Panel R) forward to remove it.
- (3) Unfasten F05, F06 and F07, and pull the front part of F08 (Side Panel L) to the left, then pull F08 (Side Panel L) forward to remove it.

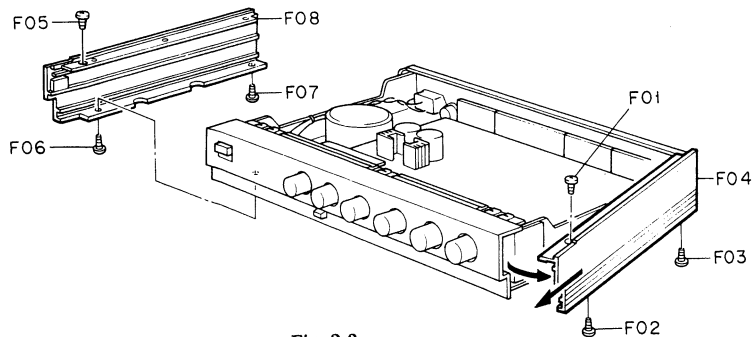


Fig. 2.2

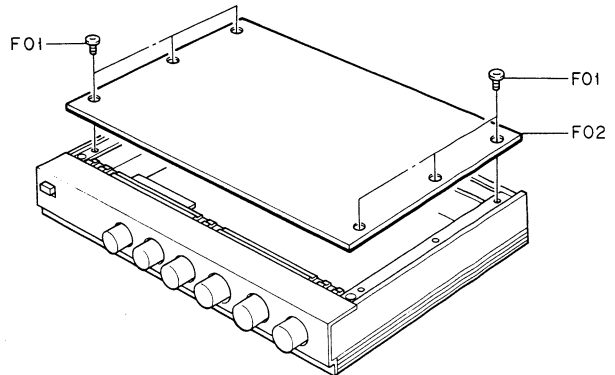


Fig. 2.1

2.3. Main P.C.B. Ass'y

Refer to Figs. 2.3.1 and 2.3.2.

- (1) Remove the Side Panel R and Side Panel L referring to item 2.2.
- (2) Unfasten F01, F02, F03 and F04.
- (3) Cut F05 (Insu-Lock) with pliers.
- (4) Lift F06 to gain access to the Main P.C.B. Ass'y.

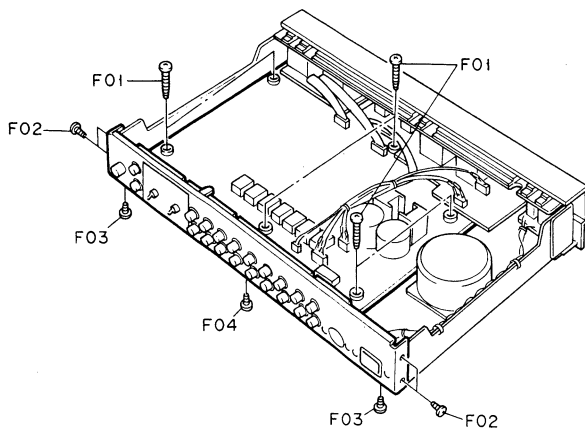


Fig. 2.3.1

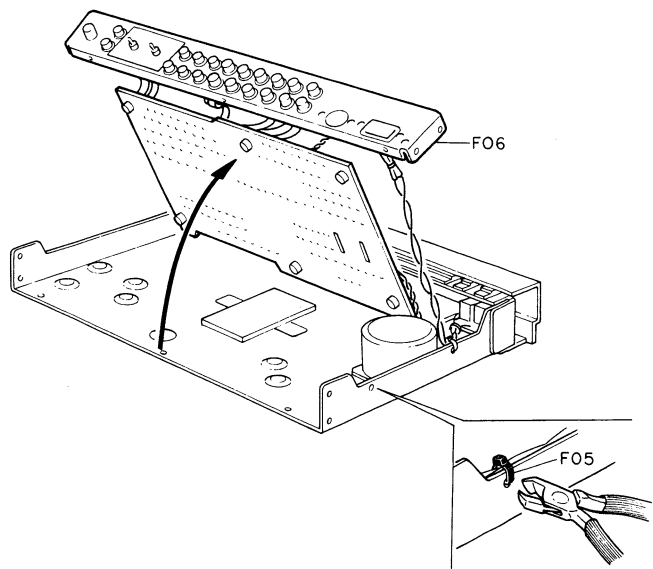


Fig. 2.3.2

2.4. Front Panel Ass'y

Refer to Fig. 2.4.

- (1) Remove the Side Panel R and Side Panel L referring to item 2.2.
- (2) Pull out F01 and unfasten F02, F03, F04 and F05.
- (3) Disconnect F06 and remove F07 (Front Panel Ass'y).

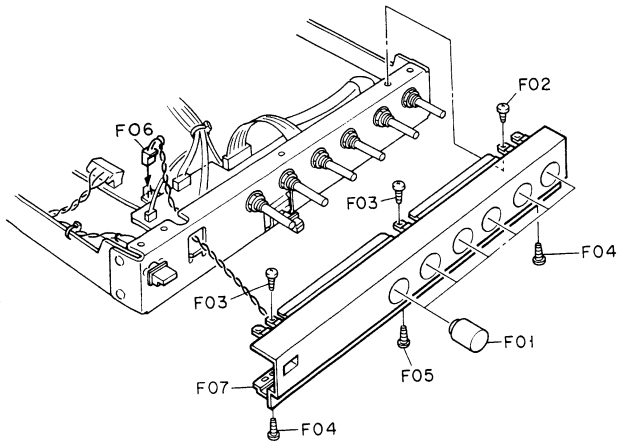


Fig. 2.4

2.5. Front Chassis and Tone Switch P.C.B. Ass'y

Refer to Figs. 2.5.1 and 2.5.2.

- (1) Remove the Front Panel Ass'y referring to item 2.4.
- (2) Unfasten F01, F02 and F03.
- (3) Remove F04 (Front Chassis), pull out F05, unfasten F06, and disassemble F07 (Tone Switch P.C.B. Ass'y).

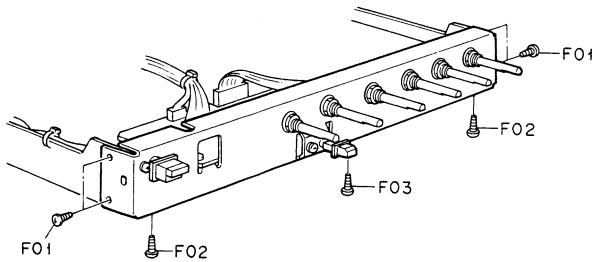


Fig. 2.5.1

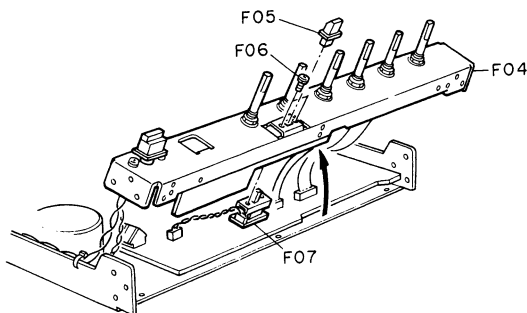


Fig. 2.5.2

3. PARTS LOCATION FOR ELECTRICAL ADJUSTMENT

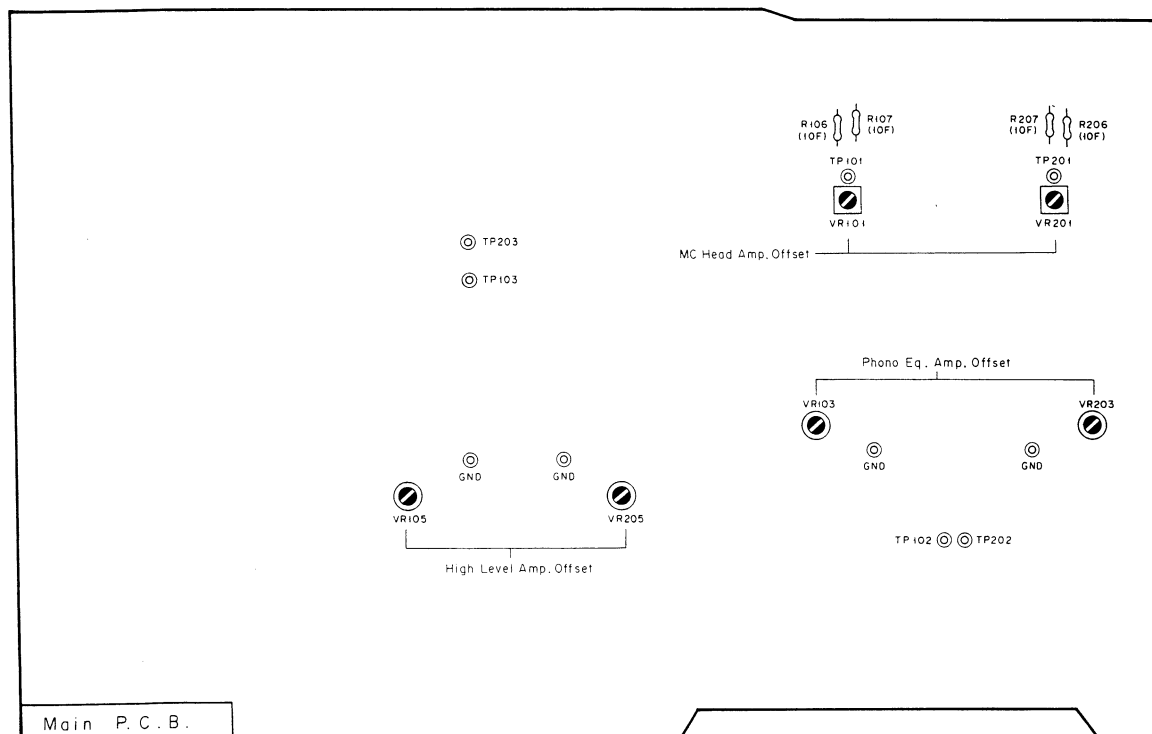


Fig. 3

4. ELECTRICAL ADJUSTMENTS

STEP	ITEM	OUTPUT CONNECTION	MODE	ADJUST-MENT	REMARKS
1	Preliminary Step		Output Level - Min. Input Selector - Phono Tone Switch - OFF Cartridge Selector - MM		1. Set the Control Amplifier as indicated in the MODE. 2. Remove all input/output signal cables from the Control Amplifier. 3. Turn ON the power and, with the Top Cover Ass'y installed, allow two minutes before adjusting. 4. Remove the Top Cover Ass'y referring to item 2.1.
2	MC Head Amp. Offset Adjustment	DC Voltmeter between TP101 (TP201) and GND on Main P.C.B.	Same as above	Main P.C.B. VR101 VR201 R107, R207 R106, R206	1. Adjust VR101 (VR201) to obtain 0 V $\pm$ 2 mV on the DC voltmeter. 2. If satisfactory result is not obtained, short-circuit resistor R107 (R207) or R106 (R206) and re-adjust VR101 (VR201) once. R107 (R207): When reading in 1. exceeds 0 V +2 mV. R106 (R206): When reading in 1. is below 0 V -2 mV.
3	Phono Eq. Amp. Offset Adjustment	DC Voltmeter between TP102 (TP202) and GND on Main P.C.B.	Same as above	Main P.C.B. VR103 VR203	Adjust VR103 (VR203) to obtain 0 V $\pm$ 1 mV on the DC voltmeter.
4	High Level Amp. Offset Adjustment	DC Voltmeter between TP103 (TP203) and GND on Main P.C.B.	Same as above	Main P.C.B. VR105 VR205	Adjust VR105 (VR205) to obtain 0 V $\pm$ 1 mV on the DC voltmeter.

5. MECHANISM ASS'Y AND PARTS LIST

5.1. Synthesis

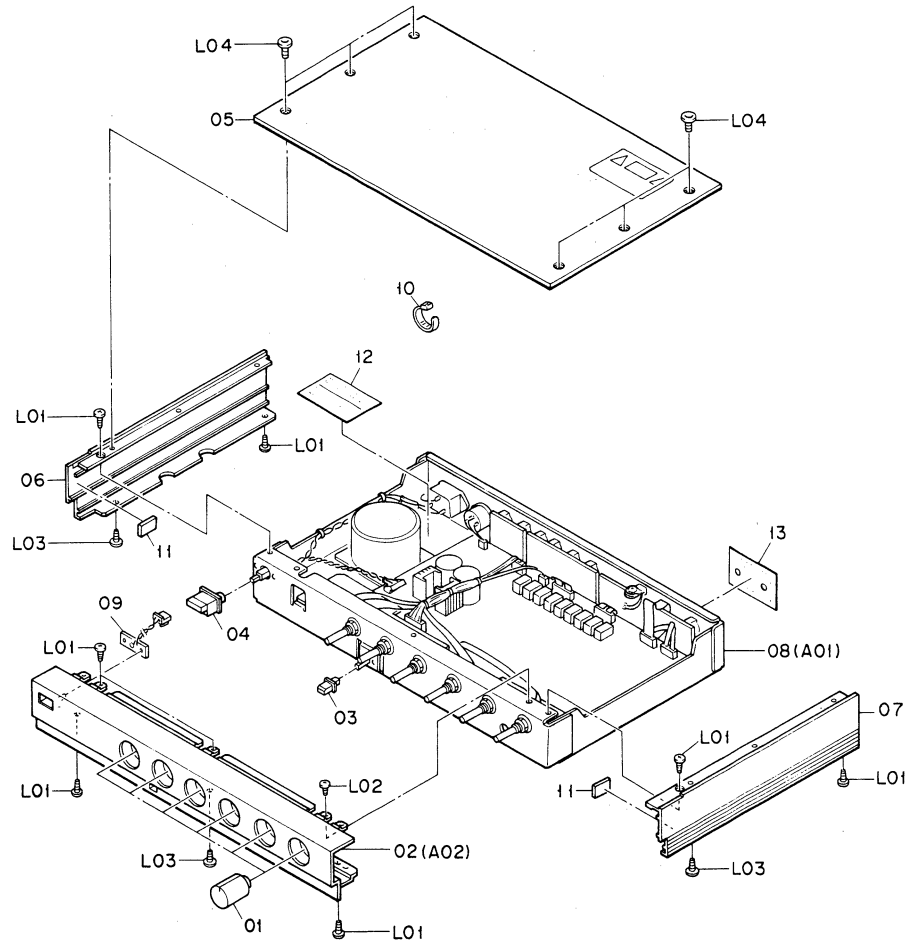


Fig. 5.1

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
5.1. Synthesis							
		Synthesis Serial No.: B10801001 -		09	JA04320A	Chassis Ass'y (CA-5II (UK))	1
				10	JA04322A	Chassis Ass'y (CA-50II)	1
				11	BA06995A	Power LED P.C.B. Ass'y	1
				12	OB08515A	Insu-Lock BK-1	1
				13	0J05355A	BS Damper S 12x20	2
01	HA05126A	AFT Knob Ass'y	6		0M05062A	Fuse Caution (CA-5AII (Canada))	1
02	HA05325A	Front Panel Ass'y (CA-5II (Other, Australia & Saudi Arabia) & CA-5AII (Canada))	1		0M05072A	Caution Sheet (Except for CA-50II)	1
	HA05324A	Front Panel Ass'y (CA-5AII (U.S.A.))	1	L01	0M05073A	Caution Sheet (CA-50II)	1
	HA05326A	Front Panel Ass'y (CA-5EII)	1		OE00921A	BT3x8 @ Binding (Black Chromate)	8
	HA05327A	Front Panel Ass'y (CA-50II)	1	L02	OE03013A	BT3x5 @ Binding	1
03	OH04643A	Push Button	1	L03	OE03366A	BT3x8 @ Binding Projected	3
04	HA04799B	Power Switch Button Ass'y	1	L04	OE03431A	M4x8 Hex. Socket Head	6
05	HA05336A	Top Cover Ass'y (Consisting of the followings:)	1	—	0M03797A	Voltage Seal 240V (CA-5II (Australia) & CA-5EII (UK))	1
	(OH05153A)	Top Cover	(1)	—	0M03844B	Power Cord Label (CA-5EII (UK))	2
	(OJ05354A)	BS Damper TPJ	(1)	—	0M03917A	Production Date Seal (CA-5AII (U.S.A.))	1
	(OJ05409A)	Top Cover Cushion	(2)	—	0M04660A	Voltage Seal (CA-5II (Other & Saudi Arabia))	1
	(OJ05421A)	BS Damper F 20x20	(2)	—	0M05051A	Serial Number Seal	1
	(OM04377B)	Caution Sheet	(1)	—	0M05052A	FTZ Label (CA-5EII (Germany))	1
06	OH05150A	Side Panel L	1	—	0M05064A	EP Approval Label I (CA-5EII (Switzerland))	1
07	OH05151C	Side Panel R	1	—	0M05093A	EP Approval Label J (CA-5EII (Europe & Germany))	1
08	JA04326A	Chassis Ass'y (CA-5II (Other))	1	—	MA01001A	F. Code Label Ass'y	1
	JA04327A	Chassis Ass'y (CA-5II (Australia))	1	—	MA01002A	Multi-Label Ass'y (CA-50II)	1
	JA04325A	Chassis Ass'y (CA-5II (Saudi Arabia))	1	—	MA01003A	US Label Ass'y (CA-5AII (U.S.A.))	1
	JA04324A	Chassis Ass'y (CA-5AII (U.S.A.))	1				
	JA04323A	Chassis Ass'y (CA-5AII (Canada))	1				
	JA04321A	Chassis Ass'y (CA-5EII (Europe & Germany))	1				
	JA04328A	Chassis Ass'y (CA-5EII (Switzerland))	1				

5.2. Chassis Ass'y (A01)

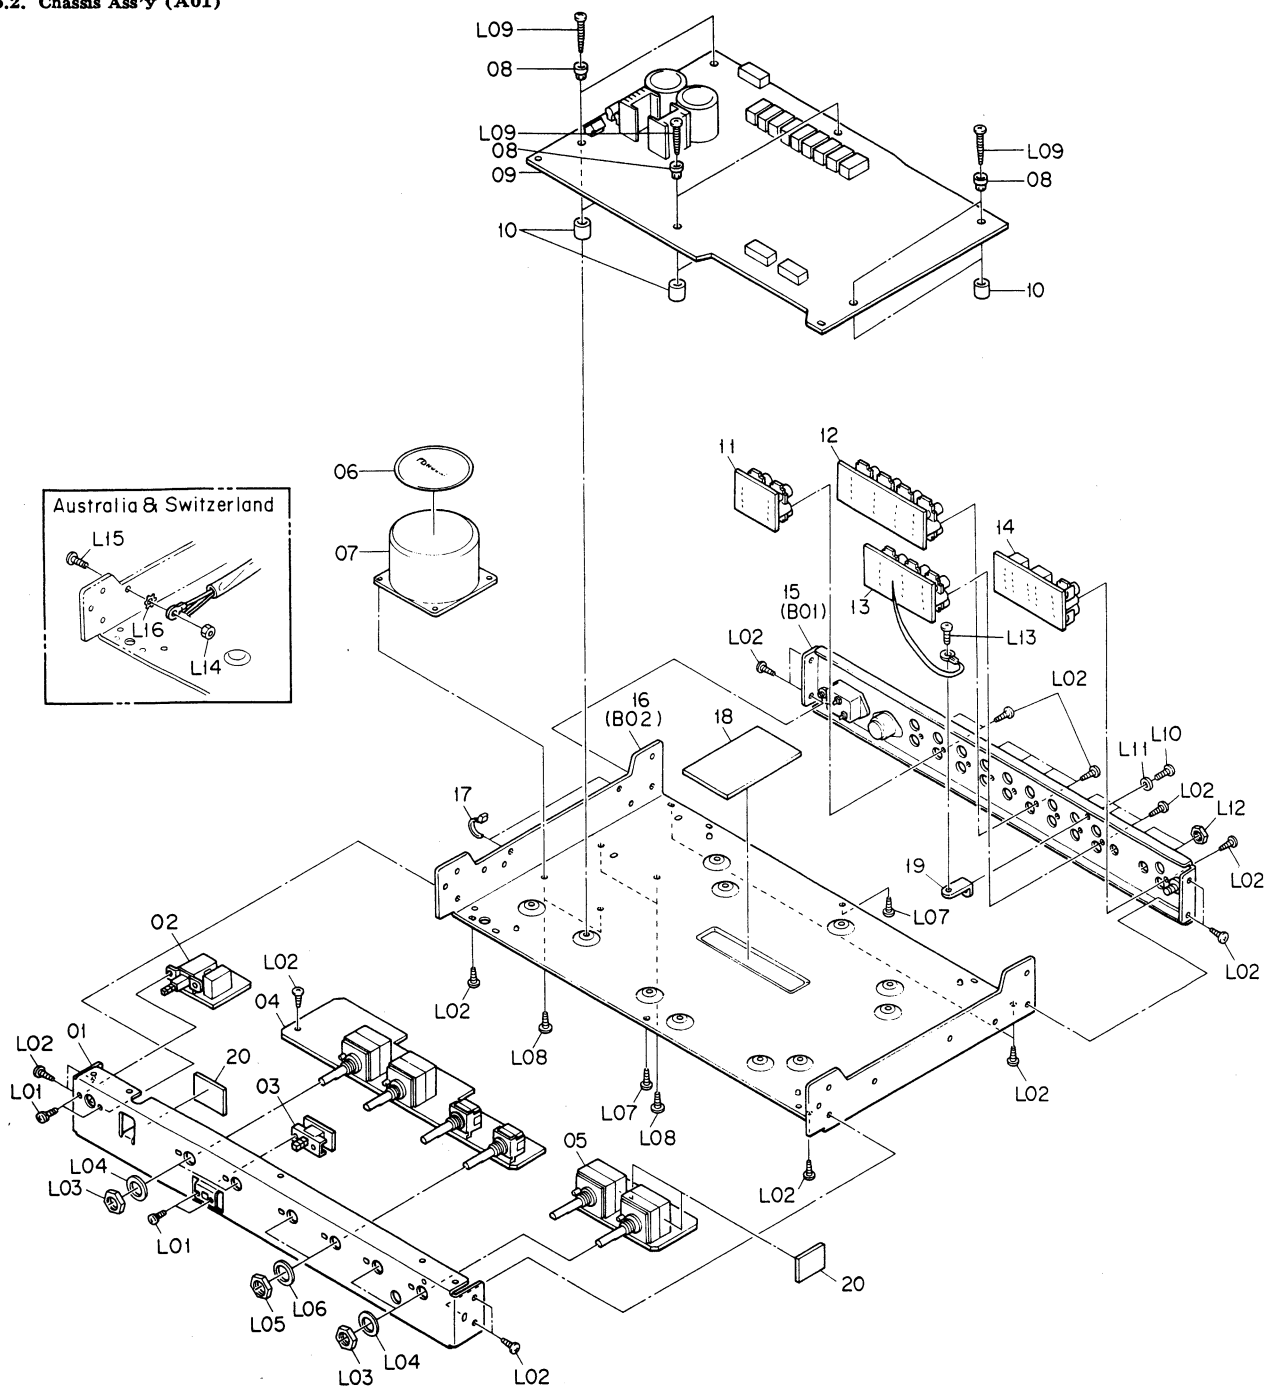


Fig. 5.2

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
5.2. Chassis Ass'y (A01)				L03	—	Nut for Volume	(4)
A01	JA04326A	Chassis Ass'y (CA-5II (Other))	1	L04	—	Washer for Volume	(4)
	JA04327A	Chassis Ass'y (CA-5II (Australia))	1	L05	—	Nut for Function Switch	(2)
	JA04325A	Chassis Ass'y (CA-5II (Saudi Arabia))	1	L06	—	Washer for Function Switch	(2)
	JA04324A	Chassis Ass'y (CA-5AII (U.S.A.))	1	L07	OE03366A	BT3x8 @ Binding Projected (Black Chromate)	2
	JA04323A	Chassis Ass'y (CA-5AII (Canada))	1	L08	OE00915A	BT4x8 @ Binding (Black Chromate)	4
	JA04321A	Chassis Ass'y (CA-5EII (Europe & Germany))	1	L09	OE03294A	BT3x18 @ Binding (Black Chromate)	6
	JA04328A	Chassis Ass'y (CA-5EII (Switzerland))	1	L10	OE00594A	M3x8 @ Binding	1
	JA04320A	Chassis Ass'y (CA-5EII (UK))	1	L11	OE03406A	Washer 3.2x5.7x1.2 (Copper Black Chromate)	1
	JA04322A	Chassis Ass'y (CA-50II) Serial No.: B10801001 -	1	L12	—	Nut for Load Switch	(2)
				L13	OE03395A	M3x8 @ Binding (Copper)	1
01	OJ05408B	Front Chassis	1	L14	OE00756A	M4x8 @ Binding (CA-5II (Australia) & CA-5EII (Switzerland))	1
02	BA06994A	Power Switch P.C.B. Ass'y (CA-5AII)	1	L15	OE00669A	Nut Hex. M4 (CA-5II (Australia) & CA-5EII (Switzerland))	1
	BA07139A	Power Switch P.C.B. Ass'y (CA-5II (Other))	1	L16	OE00078A	Washer 4mm Toothed Lock (CA-5II (Australia) & CA-5EII (Switzerland))	1
	BA07140A	Power Switch P.C.B. Ass'y (CA-5II (Australia & Saudi Arabia) & CA-5EII)	1	—	OM03700A	Earth Mark Label (CA-5II (Australia) & CA-5EII (Switzerland))	1
	BA07141A	Power Switch P.C.B. Ass'y (CA-50II)	1				
03	BA06991A	Tone Switch P.C.B. Ass'y	1				
04	BA06992A	Tone Control P.C.B. Ass'y	1				
05	BA06993A	Volume P.C.B. Ass'y	1				
06	OM04860A	Power Transformer Label	1				
07	OB50107A	Power Transformer (CA-5II (Other & Saudi Arabia))	1				
	OB50103A	Power Transformer (CA-5II (Australia) & CA-5EII (UK))	1				
	OB50106A	Power Transformer (CA-5AII)	1				
	OB50104A	Power Transformer (CA-5EII (Europe, Germany & Switzerland))	1				
	OB50105A	Power Transformer (CA-50II)	1				
08	OJ05019A	Coller Bushing A	6				
09	BA06986A	Main P.C.B. Ass'y (CA-5II (Other) & CA-5AII)	1				
	BA07124A	Main P.C.B. Ass'y (CA-5EII (Germany))	1				
	BA07123A	Main P.C.B. Ass'y (CA-5II (Australia & Saudi Arabia) & CA-5EII (Europe, Switzerland & UK))	1				
	BA07125A	Main P.C.B. Ass'y (CA-50II)	1				
10	OJ05020A	Coller Bushing B	6				
11	BA06989A	Pin Jack P.C.B. C Ass'y	1				
12	BA06988A	Pin Jack P.C.B. B Ass'y (Except CA-5EII (Germany))	1				
	BA07127A	Pin Jack P.C.B. B Ass'y (CA-5EII (Germany))	1				
	BA06987A	Pin Jack P.C.B. A Ass'y (Except CA-5EII (Germany))	1				
13	BA07126A	Pin Jack P.C.B. A Ass'y (CA-5EII (Germany))	1				
	BA06990A	Load Switch P.C.B. Ass'y (Except CA-5EII (Germany))	1				
14	BA07128A	Load Switch P.C.B. Ass'y (CA-5EII (Germany))	1				
	HA05334A	Rear Panel Ass'y (CA-5II (Other))	1				
15	HA05332A	Rear Panel Ass'y (CA-5II (Australia))	1				
	HA05346A	Rear Panel Ass'y (CA-5II (Saudi Arabia))	1				
	HA05329A	Rear Panel Ass'y (CA-5AII (U.S.A.))	1				
	HA05330A	Rear Panel Ass'y (CA-5AII (Canada))	1				
	HA05331A	Rear Panel Ass'y (CA-5EII (Europe & Germany))	1				
	HA05337A	Rear Panel Ass'y (CA-5EII (Switzerland))	1				
	HA05333A	Rear Panel Ass'y (CA-5EII (UK))	1				
	HA05328A	Rear Panel Ass'y (CA-50II)	1				
16	HA05335A	Main Chassis Ass'y	1				
17	OB08515A	Insu-Lock BK-1 (CA-5II (Other & Australia), CA-5AII (Canada) & CA-5EII & CA-50II)	7				
	OB08515A	Insu-Lock BK-1 (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	8				
18	OJ05354A	BS Damper TPJ	1				
19	OJ05246A	Ground Bracket	1				
20	OJ05421A	BS Damper F 20x20	3				
L01	OE00612A	M3x6 @ Pan (2A)	4				
L02	OE00921A	BT3x8 @ Binding (Black Chromate)	23				

5.3. Front Panel Ass'y (A02)

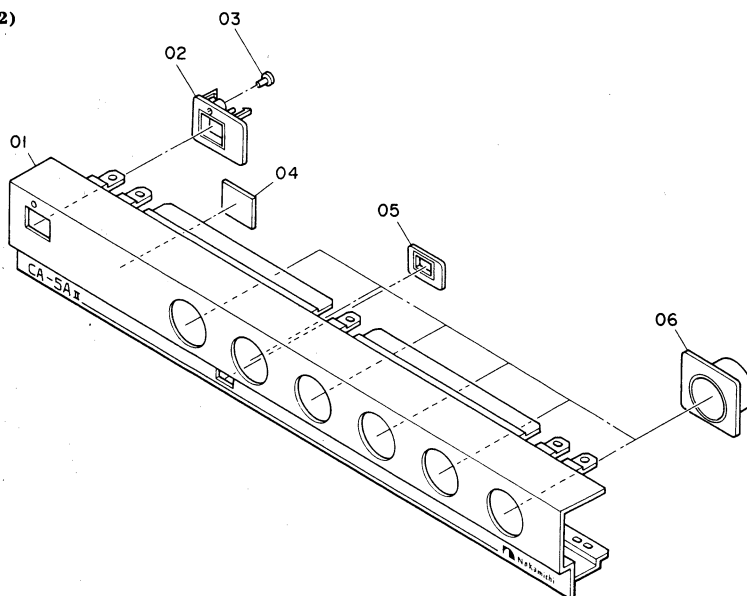


Fig. 5.3

5.4. Rear Panel Ass'y (B01)

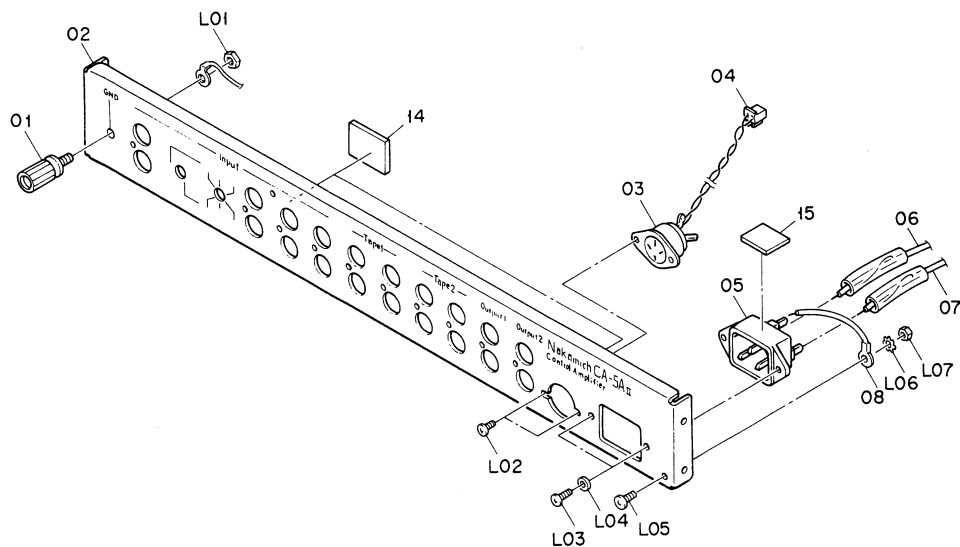
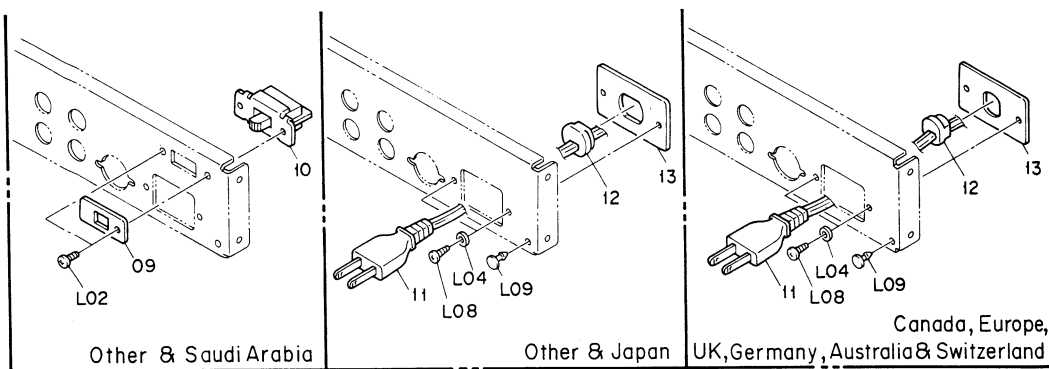


Fig. 5.4

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
5.3. Front Panel Ass'y (A02)				14	0J05355A	BS Damper S 12x20	2
A02	HA05325A	Front Panel Ass'y (CA-5II & CA-5AII (Canada))	1	15	0J05355A	BS Damper S 12x20 (CA-5II Saudi Arabia) & CA-5AII (U.S.A.))	1
	HA05324A	Front Panel Ass'y (CA-5AII (U.S.A.))	1	L01	—	Nut for Ground Terminal	(1)
	HA05326A	Front Panel Ass'y (CA-5EII)	1	L02	0E00985A	M3x6 @ Binding (Black Chromate) (CA-5II (Australia), CA-5AII, CA-5EII & CA-50II)	2
	HA05327A	Front Panel Ass'y (CA-50II) Serial No.: B10801001 -	1		0E00985A	M3x6 @ Binding (Black Chromate) (CA-5II (Other & Saudi Arabia))	4
01	OH05156A	Front Panel (CA-5II & CA-5AII (Canada))	1	L03	0E00594A	M3x8 @ Binding (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	2
	OH05155A	Front Panel (CA-5AII (U.S.A.))	1	L04	0E03406A	Washer 3.2x5.7x1.2 (Copper Black Chromate)	2
	OH05157A	Front Panel (CA-5EII)	1	L05	0E00756A	M4x8 @ Binding (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	1
	OH05158A	Front Panel (CA-50II)	1	L06	0E00078A	Washer 4mm Toothing Lock (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	1
02	0J05218A	Power Button Guide	1	L07	0E00669A	Nut Hex, M4 (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	1
03	OH04639B	Lens	1	L08	0E00921A	BT3x8 @ Binding (Black Chromate) (CA-5II (Other & Australia) & CA-5AII (Canada) & CA-5EII & CA-50II)	2
04	0J05421A	BS Damper F 20x20	1	L09	0J05108A	Hole Plug (CA-5II (Other & Australia), CA-5AII (Canada), CA-5EII & CA-50II)	1
05	OH05154A	Push Button Guide	1	—	0M03700A	Earth Mark Label (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	1
06	OH04648B	Volume Knob Holder	6				
5.4. Rear Panel Ass'y (B01)							
B01	HA05334A	Rear Panel Ass'y (CA-5II (Other))	1				
	HA05332A	Rear Panel Ass'y (CA-5II (Australia))	1				
	HA05346A	Rear Panel Ass'y (CA-5II (Saudi Arabia))	1				
	HA05329A	Rear Panel Ass'y (CA-5AII (U.S.A.))	1				
	HA05330A	Rear Panel Ass'y (CA-5AII (Canada))	1				
	HA05331A	Rear Panel Ass'y (CA-5EII (Europe & Germany))	1				
	HA05337A	Rear Panel Ass'y (CA-5EII (Switzerland))	1				
	HA05333A	Rear Panel Ass'y (CA-5EII (UK))	1				
01	HA05328A	Rear Panel Ass'y (CA-50II) Serial No.: B10801001 -	1				
	OB81685A	Ground Terminal T5435	1				
	OH05164B	Rear Panel (CA-5II (Other & Saudi Arabia))	1				
	OH05161B	Rear Panel (CA-5II (Australia))	1				
	OH05160B	Rear Panel (CA-5AII (U.S.A.))	1				
	OH05223A	Rear Panel (CA-5AII (Canada))	1				
	OH05162B	Rear Panel (CA-5EII)	1				
	OH05159B	Rear Panel (CA-50II)	1				
03	OB81372A	DIN Socket 3P	1				
04	OB83108A	2P Connector	1				
05	OB90087A	AC Inlet NC-173 (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	1				
06	OB83153A	AC Cord (White) (CA-5II (Saudi Arabia))	2				
	OB83153A	AC Cord (White) (CA-5AII (U.S.A.))	1				
07	OB83154A	AC Cord (Black) (CA-5II (Saudi Arabia))	2				
	OB83154A	AC Cord (Black) (CA-5AII (U.S.A.))	1				
08	OB80101A	Ground Cable with Lug Terminal (CA-5II (Saudi Arabia) & CA-5AII (U.S.A.))	1				
09	0M03948A	Voltage Selector Lock Plate (CA-5II (Other & Saudi Arabia))	1				
10	OB07092U	Voltage Selector ESD396 (CA-5II (Other & Saudi Arabia))	1				
11	OB80085A	Power Cord (OFC) (CA-5II (Other) & CA-50II)	1				
	OB80133B	Power Cord SA (CA-5II (Australia))	1				
	OB80131A	Power Cord (OFC) (CA-5AII (Canada))	1				
	OB80124A	Power Cord VDE (CA-5EII (Europe & Germany))	1				
	OB80132B	Power Cord SV (CA-5EII (Switzerland))	1				
	OB80134A	Power Cord BS (CA-5EII (UK))	1				
12	OB90186A	Cord Bushing SR-33-1 (SPT-3) (CA-5II (Other) & CA-50II)	1				
	OB90157A	Cord Bushing SR-6N-4 18/2 (CA-5II (Australia), CA-5AII (Canada) & CA-5EII)	1				
13	OH05181A	Bushing Holder (CA-5II (Other) & CA-50II)	1				
	OH04772A	Bushing Holder (CA-5II (Australia), CA-5AII (Canada) & CA-5EII)	1				

5.5. Main Chassis Ass'y (B02)

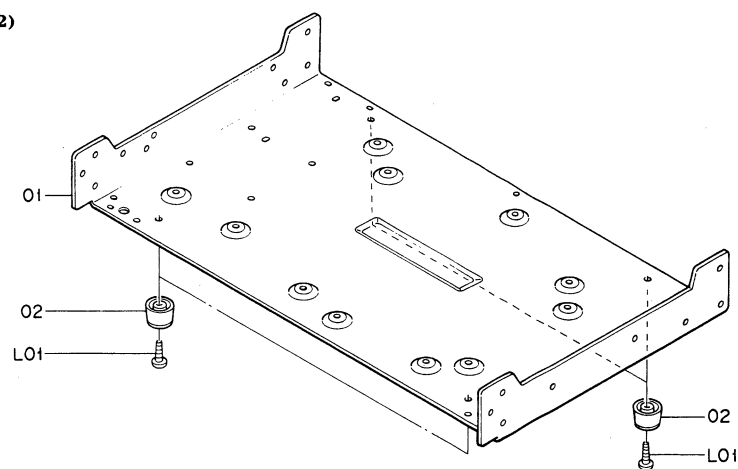


Fig. 5.5

Schematic Ref. No.	Part No.	Description	Q'ty
5.5. Main Chassis Ass'y (B02)			
B02	HA05335A	Main Chassis Ass'y Serial No.: B10801001 -	1
01	0H05152A	Main Chassis	1
02	0J05162A	Leg T-S	4
L01	0E00888A	BT3x12 ⊕ Binding	4

6. MOUNTING DIAGRAMS AND PARTS LIST

- Notes: 1. Mounting diagram shows a dip side view of the printed circuit board.
 2. Diode is 1SS53, 1S1555, or 1SS176 unless otherwise specified.
 3. Following transistors are interchangeable with each other.
 2SC945, 2SC536SP, 2SC2458, 2SC2785
 4. Abbreviation for part name:
 TR — Transistor, SiD — Silicon Diode, ZD — Zener Diode
 RK — Carbon Resistor, RM — Metal Film Resistor, RF — Fail Safe Type Resistor
 CE — Electrolytic Capacitor, CML — Mylar Capacitor, CC — Ceramic Capacitor, CPP — PP Capacitor,
 CMM — Metalized Mylar Capacitor, CSP — Polystyrene Capacitor, C — Mica Capacitor

6.1. Power Switch P.C.B. Ass'y

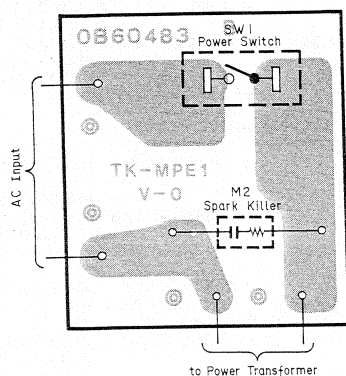


Fig. 6.1

6.2. Power LED P.C.B. Ass'y

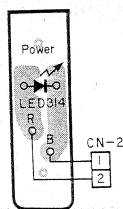


Fig. 6.2

6.3. Tone Switch P.C.B. Ass'y

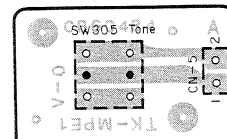


Fig. 6.3

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
6.1. Power Switch P.C.B. Ass'y			6.2. Power LED P.C.B. Ass'y		
SW1 M2 M2 M2	BA06994A	Power Switch P.C.B. Ass'y (CA-5AII)	LED814 CN2	BA06995A	Power LED P.C.B. Ass'y
	BA07139A	Power Switch P.C.B. Ass'y (CA-5II (Other))		0B60485A	Power LED P.C.B.
	BA07140A	Power Switch P.C.B. Ass'y (CA-5II (Australia & Saudi Arabia) & CA-5EII)		0B12215A	LED SLP202C Green
	BA07141A	Power Switch P.C.B. Ass'y (CA-50II)	6.3. Tone Switch P.C.B. Ass'y		
	0B60483B	Power Switch P.C.B. Power Switch SDL1P	SW305 CN5	BA06991A	Tone Switch P.C.B. Ass'y
	0B71006A	Spark Killer XE-473 (CA-5II & CA-5EII)		0B60484A	Tone Switch P.C.B.
	0B90232A	Spark Killer ECQ-JC187C (CA-5AII)		0B70118A	Push Switch
	0B08342A	Spark Killer 120033 (CA-50II)		0B83106A	2P Connector
	0B08363A	Insu-Lock SKB8080x1.9 (4)			
	0B90019A	Eyelet 2x3 (CA-5II (Australia & Saudi Arabia) & CA-5EII)			
	0E00752A	(2)			

6.4. Pin Jack P.C.B. A Ass'y

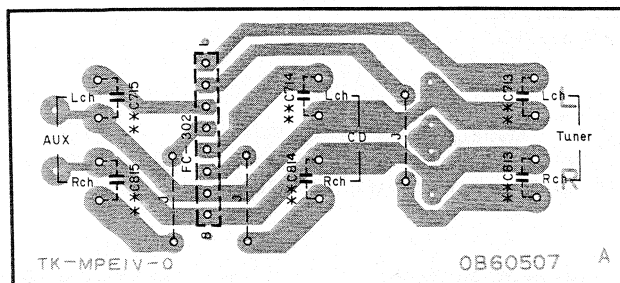


Fig. 6.4 **: CA-5EII (Germany) only.

6.5. Pin Jack P.C.B. B Ass'y

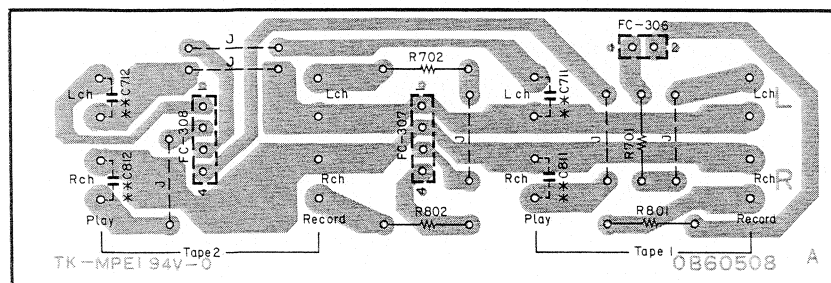


Fig. 6.5 **: CA-5EII (Germany) only.

6.6. Pin Jack P.C.B. C Ass'y

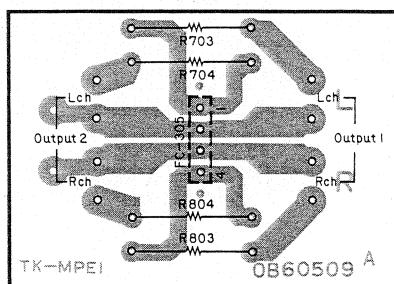


Fig. 6.6

Schematic Ref. No.	Part No.	Description
6.4. Pin Jack P.C.B. Ass'y		
	BA06987A	Pin Jack P.C.B. A Ass'y (Except CA-5EII (Germany))
	BA07126A	Pin Jack P.C.B. A Ass'y (CA-5EII (Germany))
C713	OB60507A OB41816A	Pin Jack P.C.B. A CSP 220P 160V J (CA-5EII (Germany))
C714,715	OB41754A	CSP 150P 160V J (CA-5EII (Germany))
C813	OB41816A	CSP 220P 160V J (CA-5EII (Germany))
C814,815	OB41754A	CSP 150P 160V J (CA-5EII (Germany))
FC302	OB81019A OB81374A	8P Dip Mate WH8D-1 2P Pin Jack (3)
6.5. Pin Jack P.C.B. B Ass'y		
	BA06988A	Pin Jack P.C.B. B Ass'y (Except CA-5EII (Germany))
	BA07127A	Pin Jack P.C.B. B Ass'y (CA-5EII (Germany))
R701,702 R801,802 C711,712	OB60508A OB09491A OB09491A OB09844A	Pin Jack P.C.B. B RM 1K 1/4W F RM 1K 1/4W F CML 1000P 50V J (CA-5EII (Germany))
C811,812	OB09844A	CML 1000P 50V J (CA-5EII (Germany))
FC306 FC307,308	OB81002A OB81011A OB81374A	2P Dip Mate WH2D-1 4P Dip Mate WH4D-1 2P Pin Jack (4)
6.6. Pin Jack P.C.B. C Ass'y		
	BA06989A	Pin Jack P.C.B. C Ass'y
R703,704 R803,804 FC305	OB60509A OB20422A OB20422A OB81011A OB81374A	Pin Jack P.C.B. C RK 470 1/2W G RK 470 1/2W G 4P Dip Mate WH4D-1 2P Pin Jack (2)
6.7. Load Switch P.C.B. Ass'y		
	BA06990A	Load Switch P.C.B. Ass'y (Except CA-5EII (Germany))
	BA07128A	Load Switch P.C.B. Ass'y (CA-5EII (Germany))
L701	OB60510B OB51265A	Load Switch P.C.B. Coil 30μH (CA-5EII (Germany))
L702	OB51266A	Coil 48μH (CA-5EII (Germany))
L801	OB51265A	Coil 30μH (CA-5EII (Germany))
L802	OB51266A	Coil 48μH (CA-5EII (Germany))
C701	OB41764A	CSP 100P 160V J
C702	OB41765A	CSP 200P 160V J
C709	OB41823A	CMM 0.01μ 50V J
C710	OB41764A	CSP 100P 160V J (CA-5EII (Germany))
C801	OB41764A	CSP 100P 160V J
C802	OB41765A	CSP 200P 160V J
C809	OB41823A	CMM 0.01μ 50V J
C810	OB41764A	CSP 100P 160V J (CA-5EII (Germany))
SW301	OB70120A	Toggle Switch 8J4022
SW302	OB70119A	Toggle Switch 8J4012
FC101	OB81014A	7P Dip Mate WH7D-1
FC201	OB81014A OB81374A OJ05414B	7P Dip Mate WH7D-1 2P Pin Jack (1) Spacer (1)

6.7. Load Switch P.C.B. Ass'y

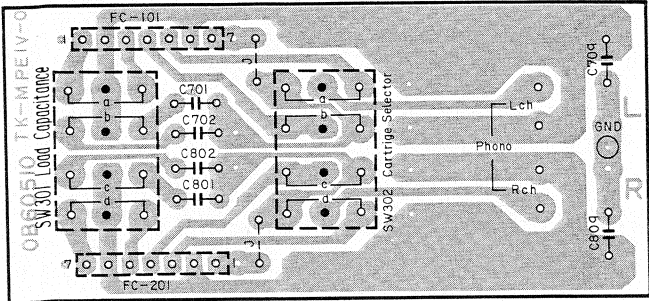


Fig. 6.7.1 Except for CA-5EII (Germany)

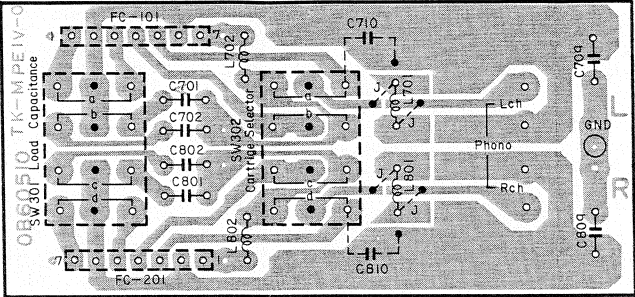


Fig. 6.7.2 For CA-5EII (Germany)

6.8. Volume P.C.B. Ass'y

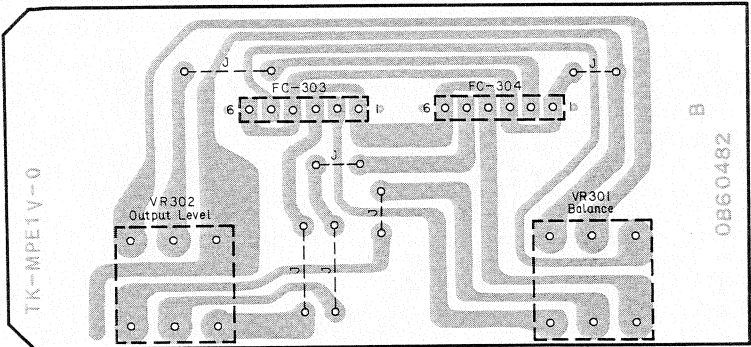


Fig. 6.8

6.9. Tone Control P.C.B. Ass'y


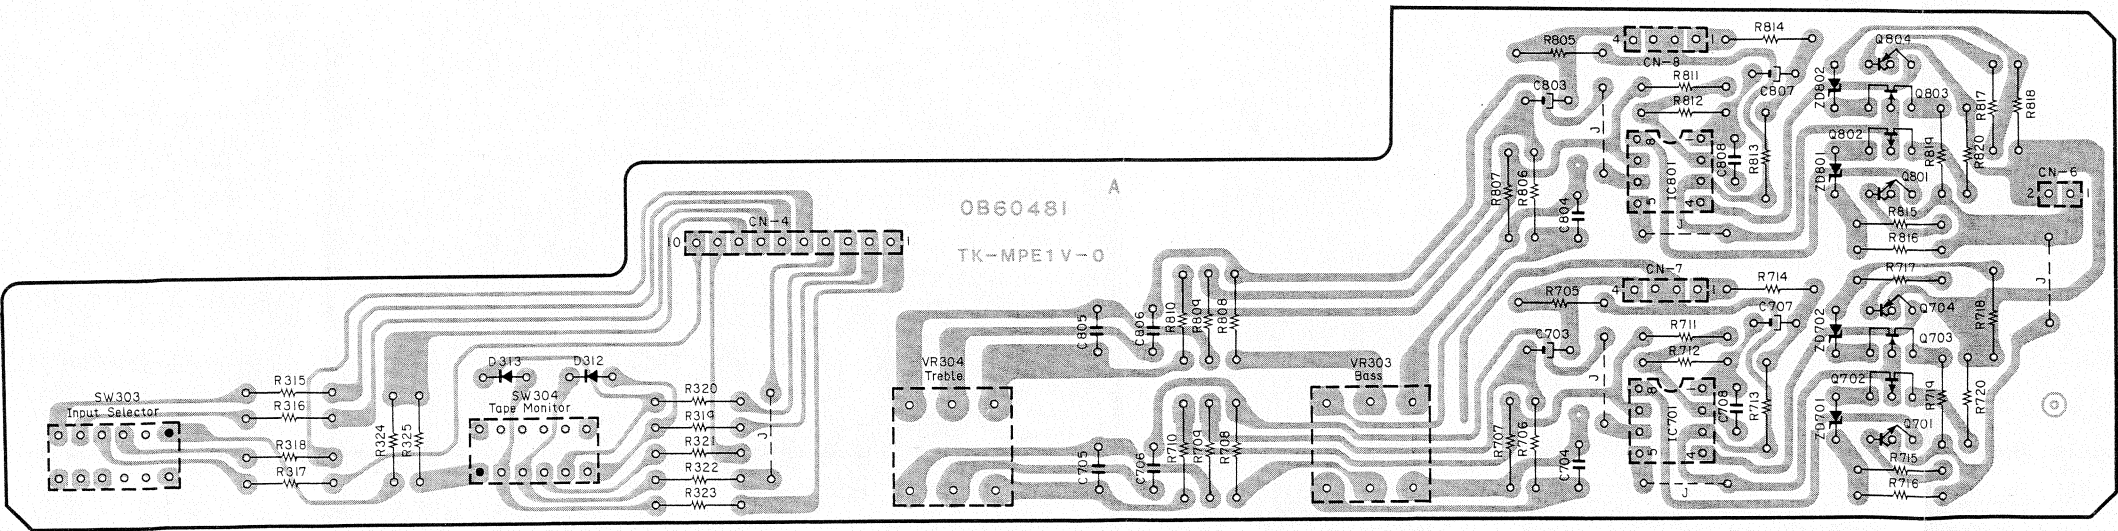


Fig. 6.9

Schematic Ref. No.	Part No.	Description
6.8. Volume P.C.B. Ass'y		
VR301 VR302 FC303,304	BA06993A	Volume P.C.B. Ass'y
	OB60482B	Volume P.C.B.
	OB30083A	VR 20Kx2
	OB30084A	VR 50Kx2
	OB81013A	6P Dip Mate
6.9. Tone Control P.C.B. Ass'y		
	BA06992A	Tone Control P.C.B. Ass'y
	OB60481A	Tone Control P.C.B.
	OB11204A	IC NJM5532DD
	OB11204A	IC NJM5532DD
IC701	OB06142A	TR 2SC2240 (BL)
Q701	OB10169A	FET 2SJ74 (BL)
Q702	OB10112A	FET 2SK170 (BL)
Q703	OB10050A	TR 2SA970 (BL)
Q704	OB06142A	TR 2SC2240 (BL)
Q801	OB10169A	FET 2SJ74 (BL)
Q802	OB10112A	FET 2SK170 (BL)
Q803	OB10050A	TR 2SA970 (BL)
Q804	OB10050A	TR 2SA970 (BL)
ZD701,702	OB12183A	ZD 16V
	RD16JS-T1B2	16V
	RD16JS-T1B2	16V
ZD801,802	OB12183A	ZD 16V
	RD16JS-T1B2	16V
	RD16JS-T1B2	16V
D312,313	OB06398A	SiD 1SS176
VR303	OB30081A	VR 20Kx2
VR304	OB30082A	VR 100Kx2
R315,316	OB05776A	RK 1M 1/4W J
R317,318	OB05776A	RK 1M 1/4W J
R319,320	OB05776A	RK 1M 1/4W J
R321,322	OB05776A	RK 1M 1/4W J
R323	OB05776A	RK 1M 1/4W J
R324,325	OB05625A	RK 220K 1/4W J
R705	OB09305A	RM 100K 1/4W F
R706,707	OB22669A	RM 7.50K 1/4W F
R708	OB25489A	RM 16.2K 1/4W F
R709,710	OB22669A	RM 7.50K 1/4W F
R711,712	OB09491A	RM 1K 1/4W F
R713	OB09305A	RM 100K 1/4W F
R714	OB22567A	RM 100 1/4W F
R715	OB09547A	RM 2.21K 1/4W F
R716	OB22729A	RM 10.0K 1/4W F
R717	OB09547A	RM 2.21K 1/4W F
R718	OB22729A	RM 10.0K 1/4W F
R719,720	OB09427A	RM 5.62K 1/4W F
R805	OB09305A	RM 100K 1/4W F
R806,807	OB22669A	RM 7.50K 1/4W F
R808	OB25489A	RM 16.2K 1/4W F
R809,810	OB22669A	RM 7.50K 1/4W F
R811,812	OB09491A	RM 1K 1/4W F
R813	OB09305A	RM 100K 1/4W F
R814	OB22567A	RM 100 1/4W F
R815	OB09547A	RM 2.21K 1/4W F
R816	OB22729A	RM 10.0K 1/4W F
R817	OB09547A	RM 2.21K 1/4W F
R818	OB22729A	RM 10.0K 1/4W F
R819,820	OB09427A	RM 5.62K 1/4W F
C703	OB40376A	CE 10μ 16V (LN)
C704	OB41819A	CMM 0.18μ 50V
C705	OB41816A	CSP 220P 160V J
C706	OB41817A	CSP 510P 160V J
C707	OB40376A	CE 10μ 16V (LN)
C708	OB41817A	CSP 510P 160V J
C803	OB40376A	CE 10μ 16V (LN)
C804	OB41819A	CMM 0.18μ 50V J
C805	OB41816A	CSP 220P 160V J
C806	OB41817A	CSP 510P 160V J
C807	OB40376A	CE 10μ 16V (LN)
C808	OB41817A	CSP 510P 160V J
SW303	OB70047A	Rotary Switch 4P
SW304	OB70117A	Rotary Switch 5P
CN4	OB83105A	10P Connector
CN6	OB83107A	2P Connector Ass'y
CN7	OB83103A	Tone L Cord Ass'y
CN8	OB83104A	Tone R Cord Ass'y

6.10. Main P.C.B. Ass'y



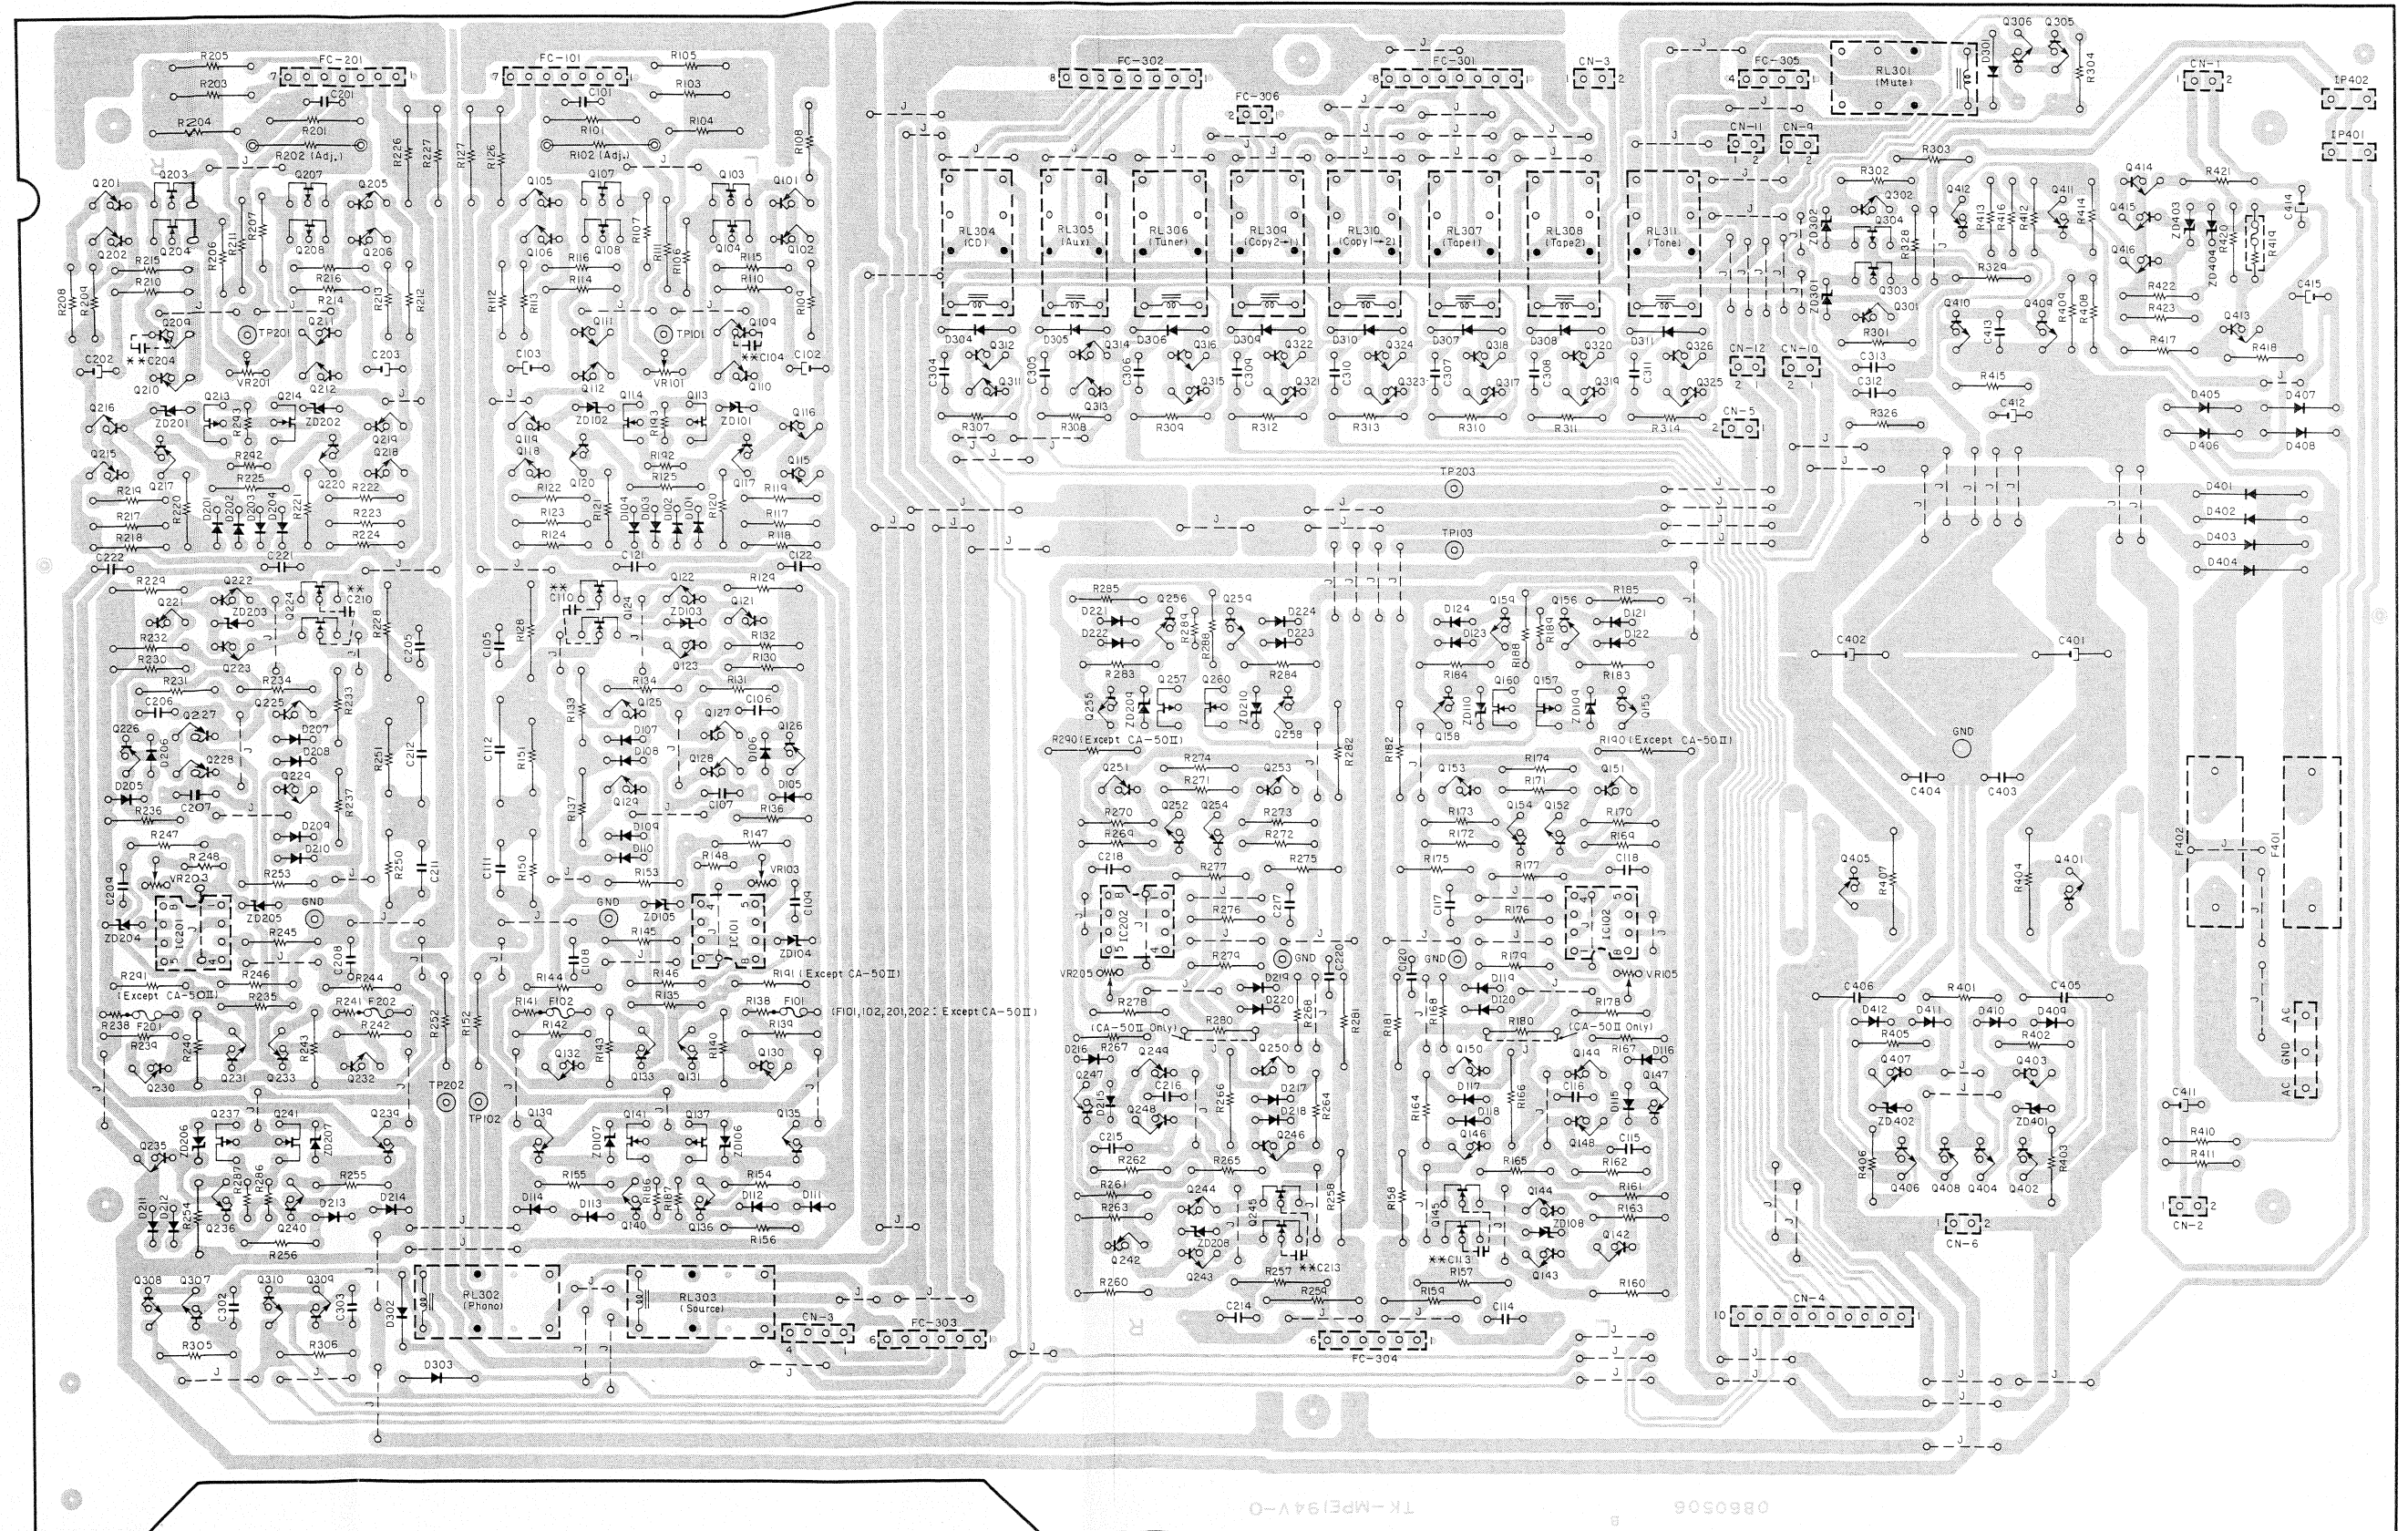


** : CA-5EII (Germany) only.


Fig. 6.10

Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
— Line Amp. —		R181	OB20287A	RK 3.32K 1/2W G	R406	OB22567A	RM 100 1/4W F	RL309,310	OB90279A	Relay DS2Y-S-DC24V
OB11253A	IC μ PC811C	R182	OB20214A	RK 100 1/2W G	R407	OB24109A	RF 2.2 1/2W J	RL311	OB90279A	Relay DS2Y-S-DC24V
OB11253A	IC μ PC811C	R183,184	OB22642A	RM 221 1/4W F	C401,402	OB40456A	CE 3900 μ 50V			
OB10050A	TR 2SA970 (BL)	R185	OB09305A	RM 100K 1/4W F	C403,404	OB41196A	CSP 470P 160V J	R301,302	OB01888A	RK 10K 1/4W J
OB06142A	TR 2SC2240 (BL)	R188	OB09585A	RM 2.10K 1/4W F	C405,406	OB41715A	CML 0.47 μ 100V K	R303,304	OB05776A	RK 1M 1/4W J
OB06257A	FET 2SK240 (GR,BL,V)	R189	OB22263A	RM 2.10K 1/4W F	F401,402	OB90226A	Fuse 1.6A 250V (CA-5II (Other), CA-5AII & CA-50II)	R305,306	OB01889A	RK 100K 1/4W J
		R190	OB20432A	RK 13K 1/2W J (Except CA-50II)				R307,308	OB01889A	RK 100K 1/4W J
OB06142A	TR 2SC2240 (BL)	R257	OB20214A	RK 100 1/2W G				R309,310	OB01889A	RK 100K 1/4W J
OB10050A	TR 2SA970 (BL)	R258	OB20158A	RK 274 1/2W F	F401,402	OB90282A	Fuse T800mA (CA-5II (Australia & Saudi Arabia) & CA-5EII)	R311,312	OB01889A	RK 100K 1/4W J
OB10050A	TR 2SA970 (BL)	R259	OB20352A	RK 75K 1/2W G				R313,314	OB01889A	RK 100K 1/4W J
OB06142A	TR 2SC2240 (BL)	R260	OB09492A	RM 1.62K 1/4W F				R326	OB05776A	RK 1M 1/4W J
OB10204A	TR 2SA1145 (O,Y)	R261	OB09491A	RM 1K 1/4W F		0M05061A	Fuse Label (CA-5II (Australia & Saudi Arabia) & CA-5EII) (1)	R328,329	OB01887A	RK 5.6K 1/4W J
OB06142A	TR 2SC2240 (BL)	R262	OB22643A	RM 47.5 1/4W F (Except CA-50II)				C302,303	OB41823A	CMM 0.01 μ 50V J
OB10205A	TR 2SC2705 (O,Y)							C304,305	OB41823A	CMM 0.01 μ 50V J
OB10050A	TR 2SA970 (BL)	R262	OB22567A	RM 100 1/4W F (CA-50II)				C306,307	OB41823A	CMM 0.01 μ 50V J
OB10215A	TR 2SC1627A							C308,309	OB41823A	CMM 0.01 μ 50V J
OB10050A	TR 2SA970 (BL)	R263	OB09492A	RM 1.62K 1/4W F		OB83117A	3P Terminal S-430 (1)	C310	OB41823A	CMM 0.01 μ 50V J
OB10169A	FET 2SJ74 (BL)	R264	OB22757A	RM 158 1/4W F				C311	OB41400A	CPP 390P 50V J
OB10214A	TR 2SA817A	R265	OB09446A	RM 33.2K 14W F		OE03395A	M3x8 Φ Binding (Copper) (2)	C312,313	OB41820A	CMM 0.1 μ 50V J
OB06142A	TR 2SC2240 (BL)	R266	OB20431A	RK 1.6K 1/2W J		OJ05410A	Heat Sink SDA (2)		— Miscellaneous —	
OB10112A	FET 2SK170 (BL)	R267	OB22567A	RM 100 1/4W F		— Mute —		TP101,102	OB60506B	Main P.C.B.
OB10050A	TR 2SA970 (BL)	R268	OB22705A	RM 226 1/4W F					OB81117A	1P Test Pin RT-01T-1.0B
OB06142A	TR 2SC2240 (BL)	R269,270	OB09760A	RM 332 1/4W F				TP103	OB81117A	1P Test Pin RT-01T-1.0B
OB06257A	FET 2SK240 (GR,BL,V)	R271,272	OB09760A	RM 332 1/4W F	Q409,410	OB06142A	TR 2SC2240 (BL)	TP201,202	OB81117A	1P Test Pin RT-01T-1.0B
OB06142A	TR 2SC2240 (BL)	R273,274	OB09760A	RM 332 1/4W F	Q411,412	OB10050A	TR 2SA970 (BL)	TP203	OB81117A	1P Test Pin RT-01T-1.0B
OB10050A	TR 2SA970 (BL)	R275,276	OB09502A	RM 1M 1/4W F	Q413,414	OB06142A	TR 2SC2240 (BL)			
OB10050A	TR 2SA970 (BL)	R277	OB09756A	RM 330K 1/4W F	Q415,416	OB06142A	TR 2SC2240 (BL)			
OB06142A	TR 2SC2240 (BL)	R278	OB09523A	RM 13.7K 1/4W F (Except CA-50II)	ZD403	OB12174A	ZD 12V RD12JS-T1B2			
OB10204A	TR 2SA1145 (O,Y)		OB20331A	RK 27.4K 1/2W G (CA-50II)	ZD404	OB12196A	ZD 24V RD24JS-T1B3	CN1,2	OB81223A	2P-T Post WHT
OB06142A	TR 2SC2240 (BL)	R279	OB09230A	RM 1.5K 1/4W F				CN3	OB83149A	Monitor Cord Ass'y
OB10205A	TR 2SC2705 (O,Y)	R280	OB09523A	RM 13.7K 1/4W F (Except CA-50II)	D405,406	OB12252A	SiD S5500D	CN4	OB81255A	10P-T Post WHT
OB10050A	TR 2SA970 (BL)				D407,408	OB12252A	SiD S5500D	CN5	OB81223A	2P-T Post WHT
OB10215A	TR 2SC1627A				R408	OB05776A	RK 1M 1/4W J	CN6	OB81224A	2P-T Post BLK
OB10050A	TR 2SA970 (BL)	R281	OB20287A	RK 3.32K 1/2W G	R409	OB05776A	RK 1M 1/4W J	CN9,10	OB81770A	2P-T Post
OB10169A	FET 2SJ74 (BL)	R282	OB20214A	RK 100 1/2W G	R410,411	OB05623A	RK 1.2K 1/4W J	CN11,12	OB81770A	2P-T Post
OB10214A	TR 2SA817A	R283,284	OB22642A	RM 221 1/4W F	R412	OB05776A	RK 1M 1/4W J	FC101,201	OB81014A	7P Dip Mate WH7D-1
OB06142A	TR 2SC2240 (BL)	R285	OB09305A	RM 100K 1/4W F	R413	OB01889A	RK 100K 1/4W J	FC301,302	OB81019A	8P Dip Mate WH8D-1
OB10112A	FET 2SK170 (BL)	R288	OB09585A	RM 2.10K 1/4W F	R414	OB05640A	RK 180K 1/4W J	FC303,304	OB81013A	6P Dip Mate WH6D-1
OB12168A	ZD 10V RD10JS-T1B2	R289	OB22263A	RM 2.10K 1/4W F	R415	OB01857A	RK 1K 1/4W J	FC305	OB81011A	4P Dip Mate WH4D-1
		R290	OB20432A	RK 13K 1/2W J (Except CA-50II)	R416	OB05776A	RK 1M 1/4W J	FC306	OB81002A	2P Dip Mate WH2D-1
OB12183A	ZD 16V RD16JS-T1B2	C113	OB41764A	CSP 100P 160V J (CA-5EII (Germany))	R417,418	OB05615A	RK 22K 1/4W J		OB81117A	1P Test Pin RT-01T-1.0B (8)
OB12168A	ZD 10V RD10JS-T1B2				R419	OB24152A	Fuse Resistor 150 1/6W		OB90277A	Fuse Clip UL (CA-5II (Other), CA-5AII & CA-50II) (4)
OB12183A	ZD 16V RD16JS-T1B2	C114	OB41816A	CSP 220P 160V J	R420	OB01679A	RK 100 1/4W J		OB90278A	Fuse Clip EP (CA-5II (Australia & Saudi Arabia) & CA-5EII) (4)
		C115	OB41718A	CSP 4700P 160V J	R421	OB09216A	RF 10 1/4W J			
OB06398A	SiD 1SS176	C116	OB41764A	CSP 100P 160V J (Except CA-50II)	R422	OB01888A	RK 10K 1/4W J			
OB06398A	SiD 1SS176		OB41765A	CSP 200P 160V J (CA-50II)	R423	OB05509A	RK 33K 1/4W J			
OB06398A	SiD 1SS176	C117	OB41822A	CMM 0.47 μ 50V J	C411,412	OB40398A	CE 10 μ 25V (LN)			
OB06398A	SiD 1SS176	C118	OB41821A	CMM 0.22 μ 50V J	C413	OB41821A	CMM 0.22 μ 50V J			
OB06398A	SiD 1SS176	C120	OB41754A	CSP 150P 160V J	C414	OB40467A	CE 47 μ 25V (LN)			
OB06398A	SiD 1SS176	C213	OB41764A	CSP 100P 160V J (CA-5EII (Germany))	C415	OB40469A	CE 47 μ 50V (LN)			
OB06398A	SiD 1SS176									
OB06398A	SiD 1SS176									
OB32023A	Semi VR 22K H0621A	C214	OB41816A	CSP 220P 160V J	IP401,402	OB11248A	IC Protector ICP-N5-T104	FC101(1/2)	OB83111A	Ribbon Cable 3P-100
OB32023A	Semi VR 22K H0621A	C215	OB41718A	CSP 4700P 160V J	Q301	OB06451A	TR 2SB1015 (Y)	FC101(2/2)	OB83113A	Ribbon Cable 4P 100
		C216	OB41764A	CSP 100P 160V J (Except CA-50II)	Q302	OB06452A	TR 2SD1406 (Y)	FC201(1/2)	OB83112A	Ribbon Cable 3P-130
OB20214A	RK 100 1/2W G		OB41765A	CSP 200P 160V J (CA-50II)	Q303	OB10112A	FET 2SK170 (BL)	FC201(2/2)	OB83114A	Ribbon Cable 4P-130
OB20158A	RK 274 1/2W F	C216			Q304	OB10169A	FET 2SJ74 (BL)	FC301(1/2)	OB83113A	Ribbon Cable 4P-100
OB20352A	RK 75K 1/2W G				Q305,306	OB01872A	TR 2SC945 (L)	FC301(2/2)	OB83114A	Ribbon Cable 4P-130
OB09492A	RM 1.62K 1/4W F	C217	OB41822A	CMM 0.47 μ 50V J	Q307,308	OB01872A	TR 2SC945 (L)	FC302(1/2)	OB83113A	Ribbon Cable 4P-100
OB09491A	RM 1K 1/4W F	C218	OB41821A	CMM 0.22 μ 50V J	Q309,310	OB01872A	TR 2SC945 (L)	FC302(2/2)	OB83113A	Ribbon Cable 4P-100
OB22643A	RM 47.5 1/4W F (Except CA-50II)	C220	OB41754A	CSP 150P 160V J	Q311,312	OB01872A	TR 2SC945 (L)	FC303	OB83115A	Ribbon Cable 6P-140
			— DC Supply —		Q313,314	OB01872A	TR 2SC945 (L)	FC304	OB83116A	Ribbon Cable 6P-200
OB22567A	RM 100 1/4W F (CA-50II)				Q315,316	OB01872A	TR 2SC945 (L)	FC305	OB83114A	Ribbon Cable 4P 130
					Q317,318	OB01872A	TR 2SC945 (L)	FC306	OB83110A	Ribbon Cable 2P-140
OB09492A	RM 1.62K 1/4W F	Q401	OB10172A	TR 2SC3179	Q319,320	OB01872A	TR 2SC945 (L)		OB83150A	Phono Ground Cord (1)
OB22757A	RM 158 1/4W F	Q402	OB10050A	TR 2SA970 (BL)	Q321,322	OB01872A	TR 2SC945 (L)		OB83151A	Line Ground Cord (1)
OB09446A	RM 33.2K 1/4W F	Q403,404	OB06142A	TR 2SC2240 (BL)	Q323,324	OB01872A	TR 2SC945 (L)			
OB20431A	RK 1.6K 1/2W J	Q405	OB10171A	TR 2SA1262	Q325,326	OB01872A	TR 2SC945 (L)			
OB22567A	RM 100 1/4W F	Q406	OB06142A	TR 2SC2240 (BL)	ZD301,302	OB12174A	ZD 12V RD12JS-T1B2			
OB22705A	RM 226 1/4W F	Q407	OB10050A	TR 2SA970 (BL)						
OB09760A	RM 332 1/4W F	Q408	OB10050A	TR 2SA970 (BL)	D301,302	OB06181A	SiD 1SS53			
OB09760A	RM 332 1/4W F	ZD401,402	OB12200A	ZD 30V RD30JS-T1B1	D303,304	OB06181A	SiD 1SS53			
OB09760A	RM 332 1/4W F				D305,306	OB06181A	SiD 1SS53			
OB09760A	RM 332 1/4W F	D401,402			D307,308	OB06181A	SiD 1SS53			
OB09502A	RM 1M 1/4W F	D403,404	OB12102A	SiD 10DF2	D309,310	OB06181A	SiD 1SS53			
OB09756A	RM 330K 1/4W F	D409,410	OB12102A	SiD 10DF2	D311	OB06181A	SiD 1SS53			
OB09523A	RM 13.7K 1/4W F (Except CA-50II)	D411,412	OB06398A	SiD 1SS176	RL301,302	OB90279A	Relay DS2Y-S-DC24V			
		R401	OB09305A	RM 100K 1/4W F			Relay DS2Y-S-DC24V			
OB20331A	RK 27.4K 1/2W G (CA-50II)	R402	OB09760A	RM 332 1/4W F	RL303,304	OB90279A	Relay DS2Y-S-DC24V			
		R403	OB22567A	RM 100 1/4W F			Relay DS2Y-S-DC24V			
OB09230A	RM 1.5K 1/4W F	R404	OB24109A	RF 2.2 1/2W J	RL305,306	OB90279A	Relay DS2Y-S-DC24V			
OB09523A	RM 13.7K 1/4W F (Except CA-50II)	R405	OB09760A	RM 332 1/4W F	RL307,308	OB90279A	Relay DS2Y-S-DC24V			

7. SCHEMATIC DIAGRAM

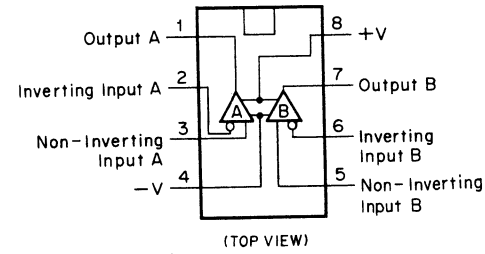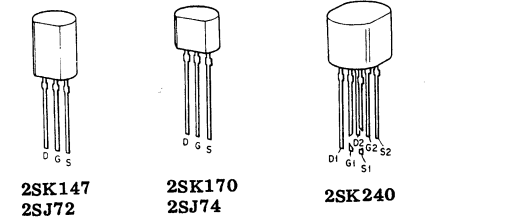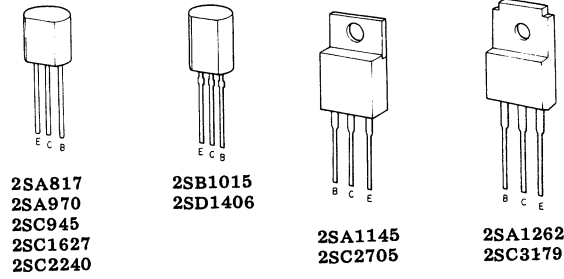

Operational Amp. IC NJM5532DD

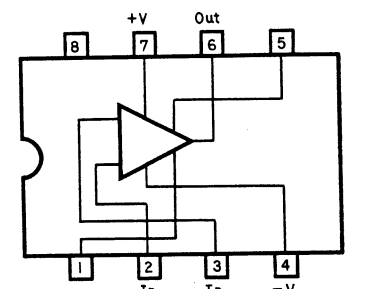

Operational Amp. IC μPC811C

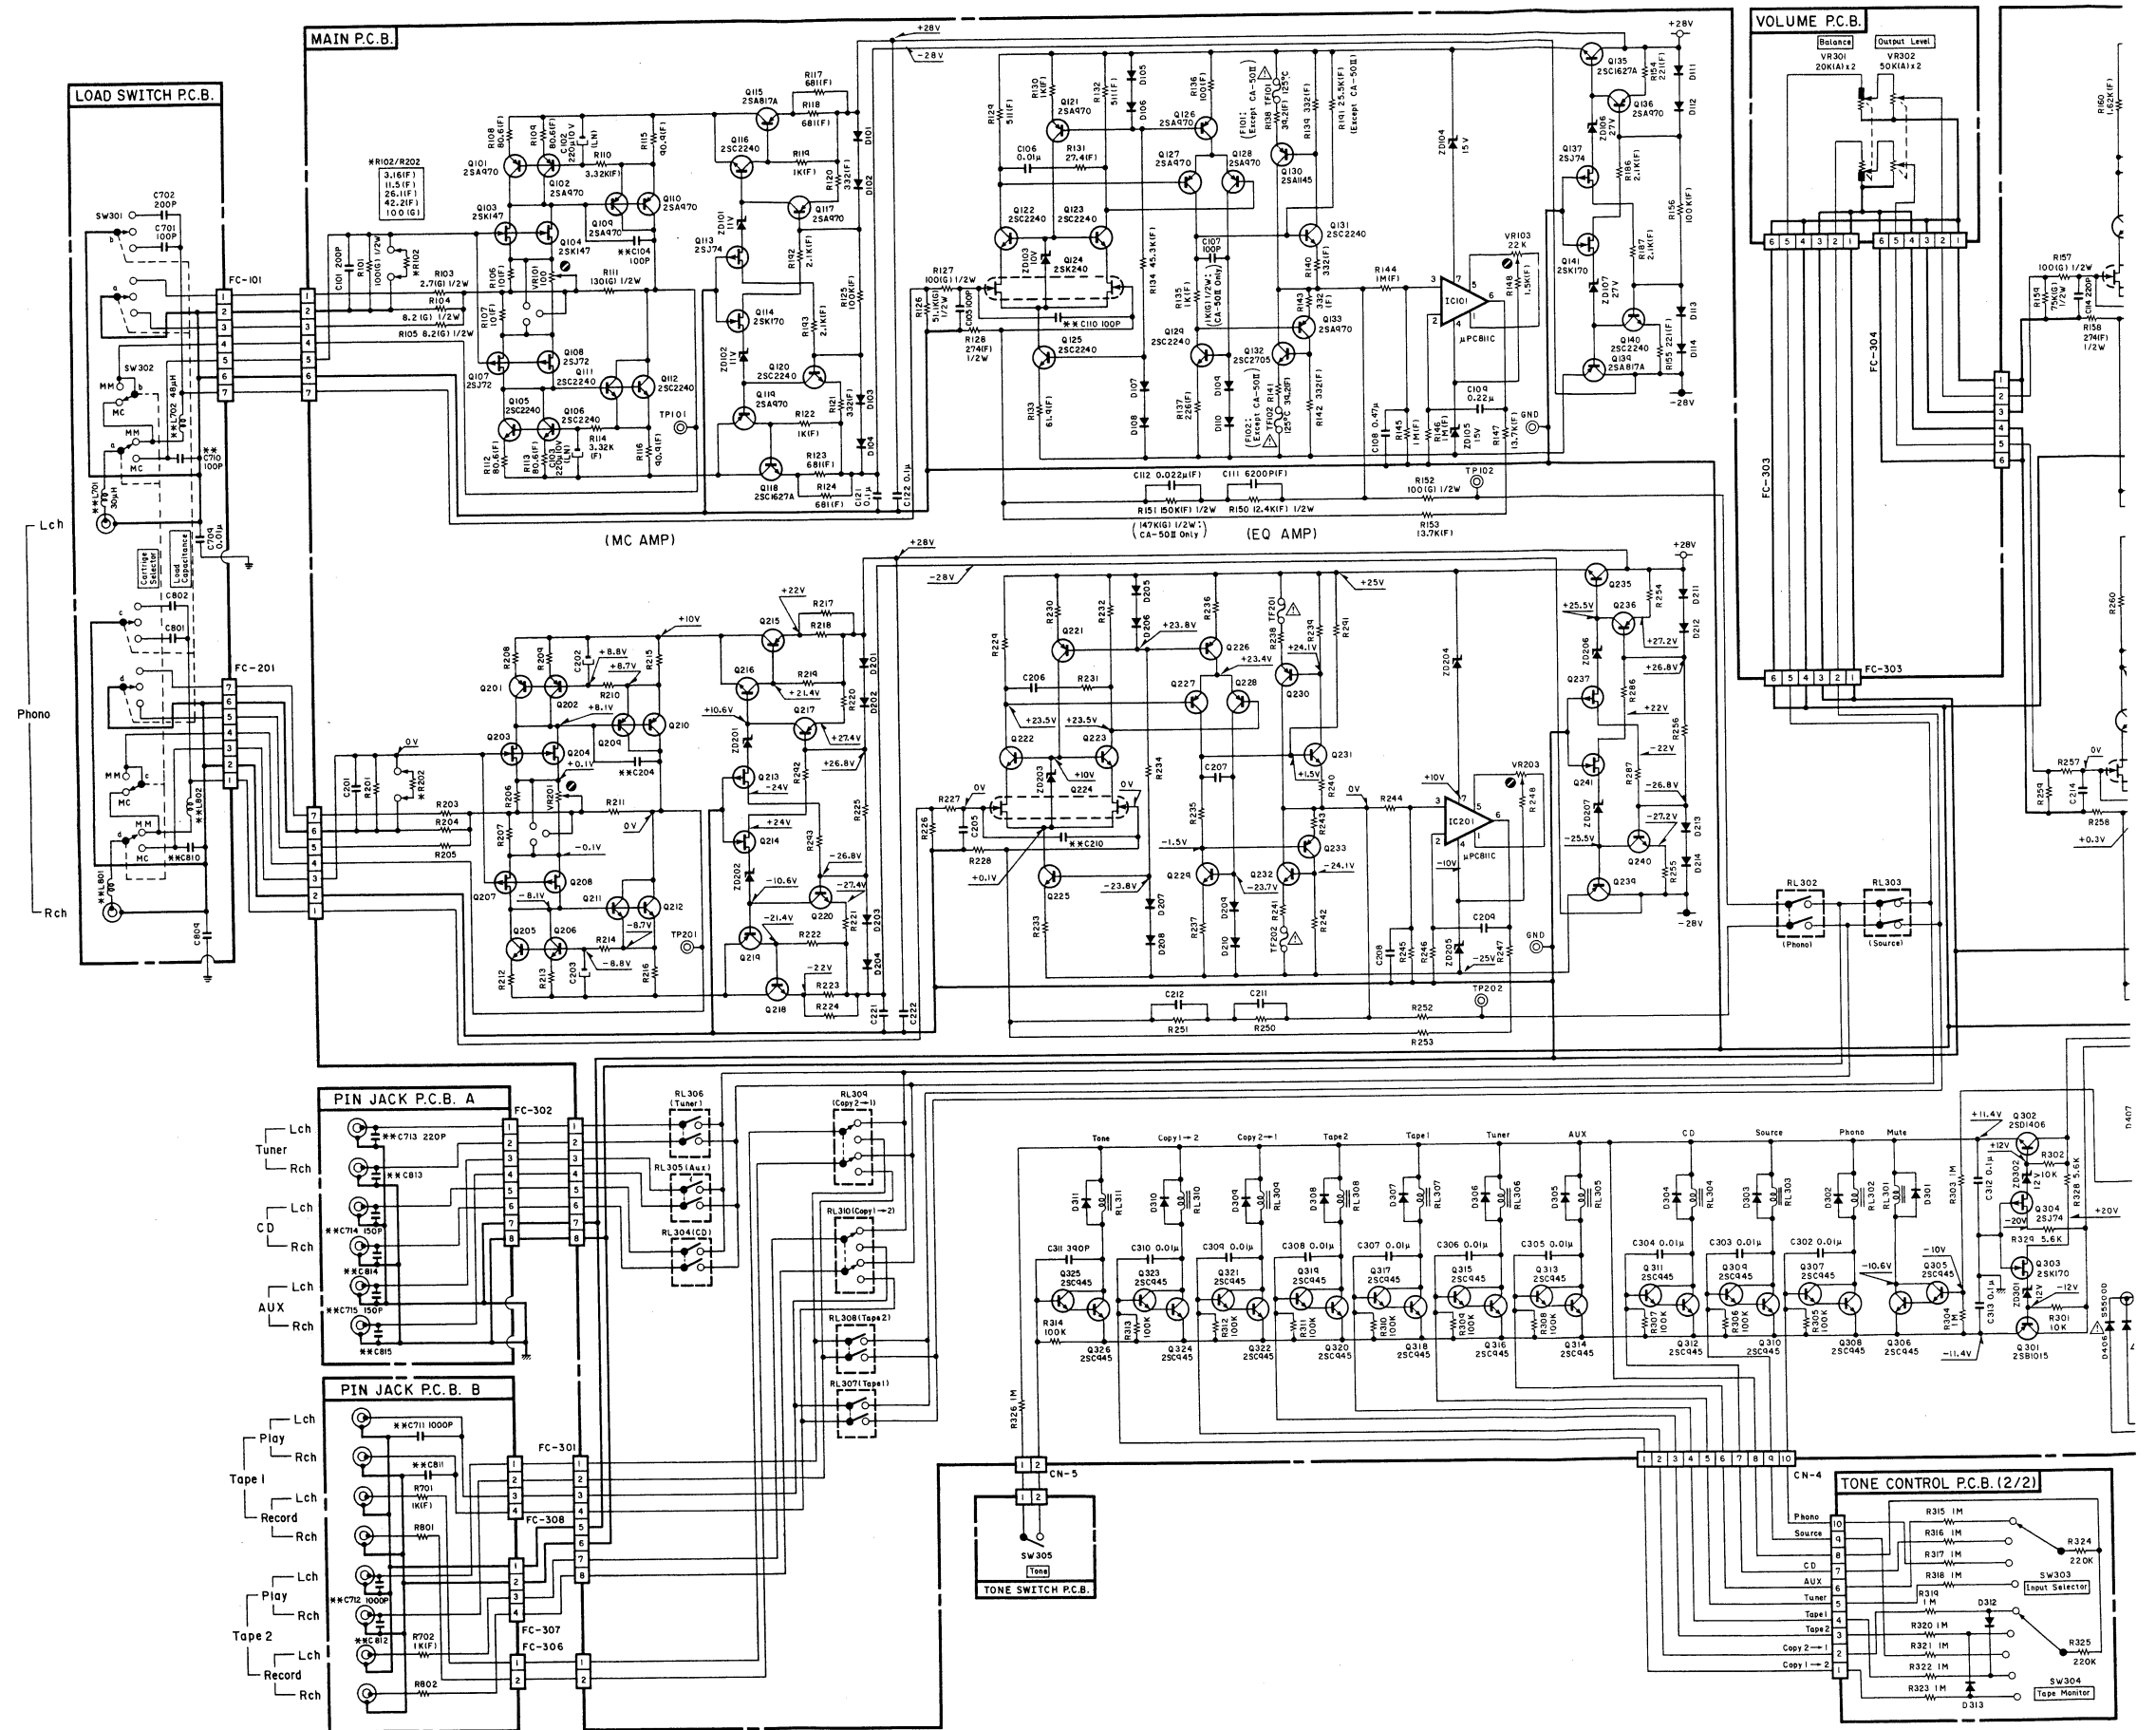


Fig. 7.1

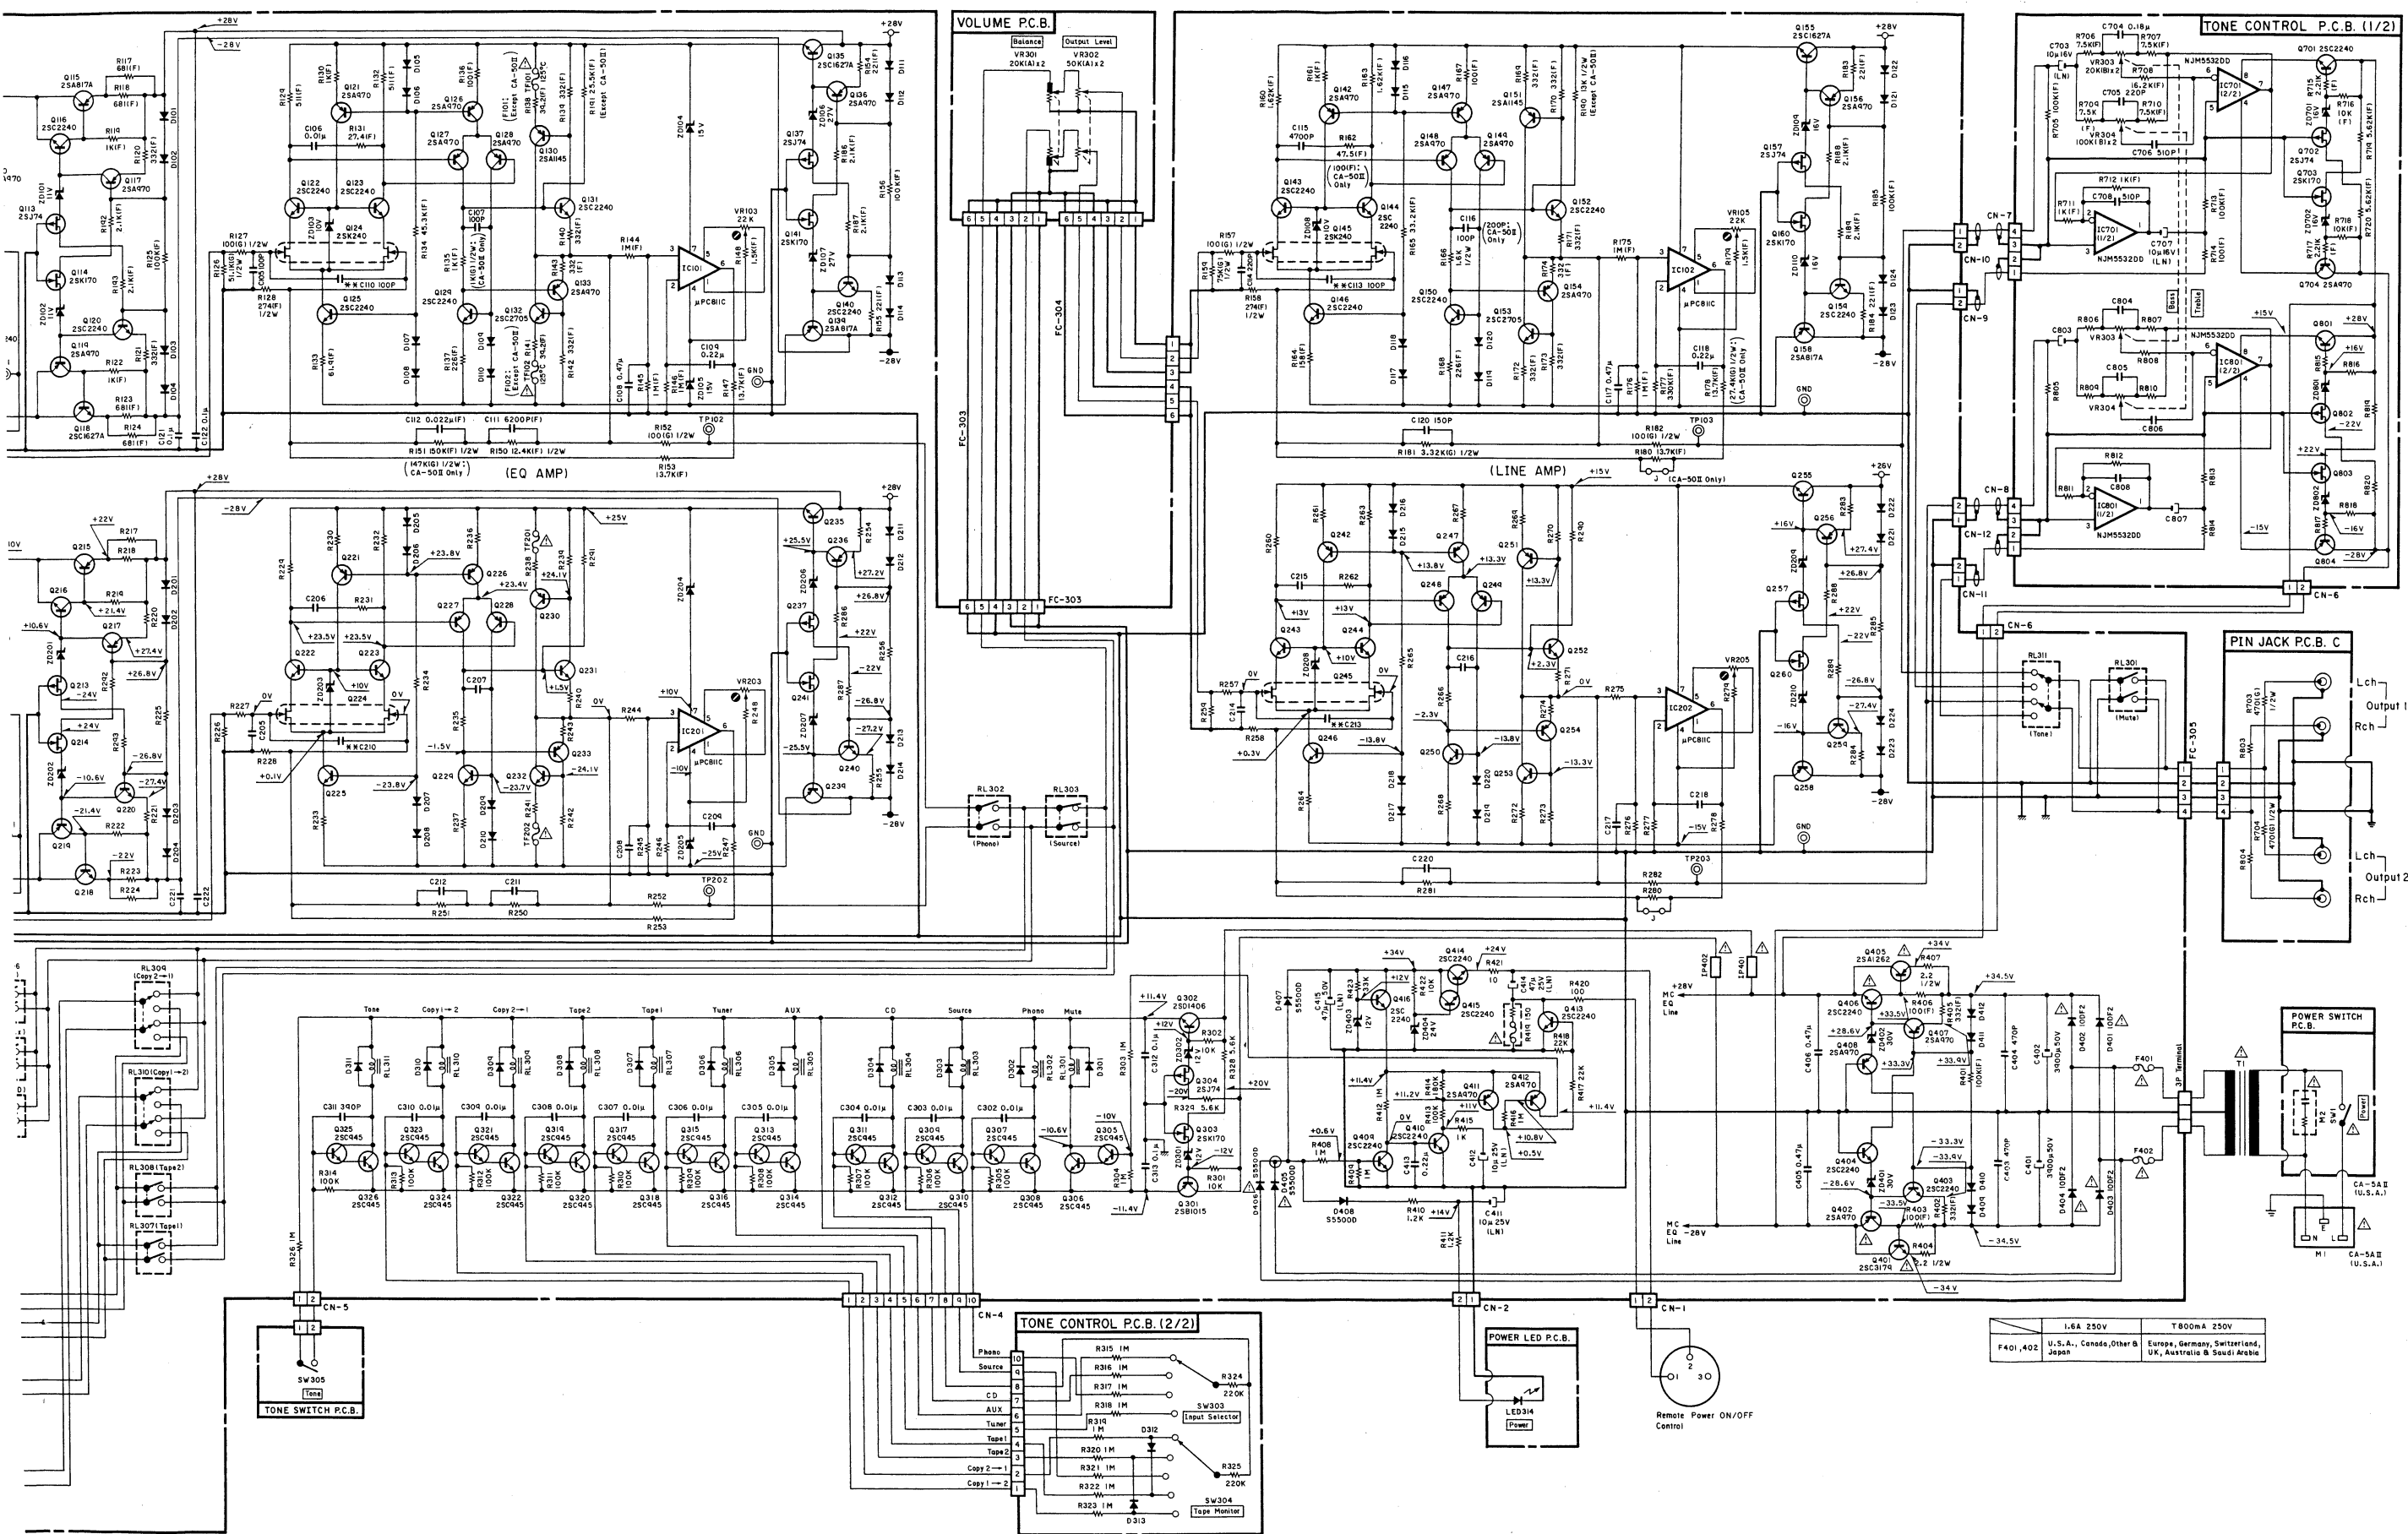


Fig. 7.1

- Notes: 1. Diode is 1SS53, 1S1555, or 1SS176 unless otherwise specified.
 2. Resistor and capacitor marked with * show typical value.
 3. Parts marked with ** are mounted only for CA-5EII (Germany).
 4. 2SC945, 2SC536SP, 2SC2458 and 2SC2785 are interchangeable with each other.

WARNING:

Parts marked with the symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer. It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.

CAUTION:

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamp, or if the resistance from chassis to either side of the power cord is less than 240 k ohms, the unit is defective.

WARNING — DO NOT return the unit to the customer until the problem is located and corrected.

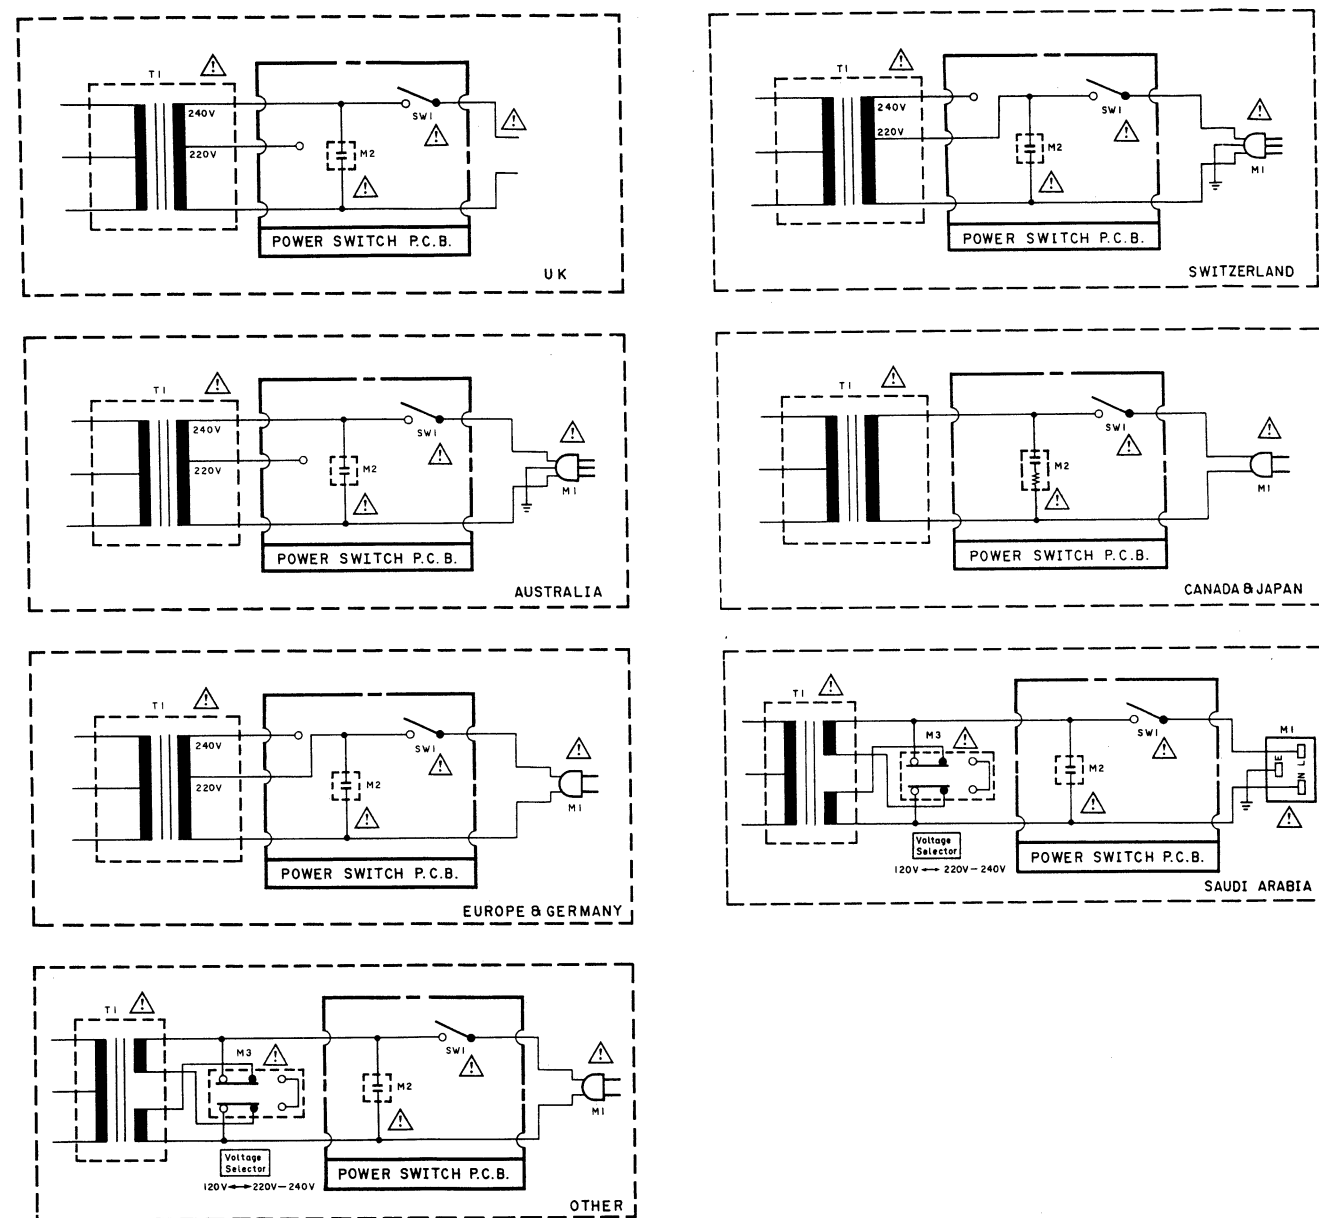


Fig. 7.2

8. WIRING DIAGRAM

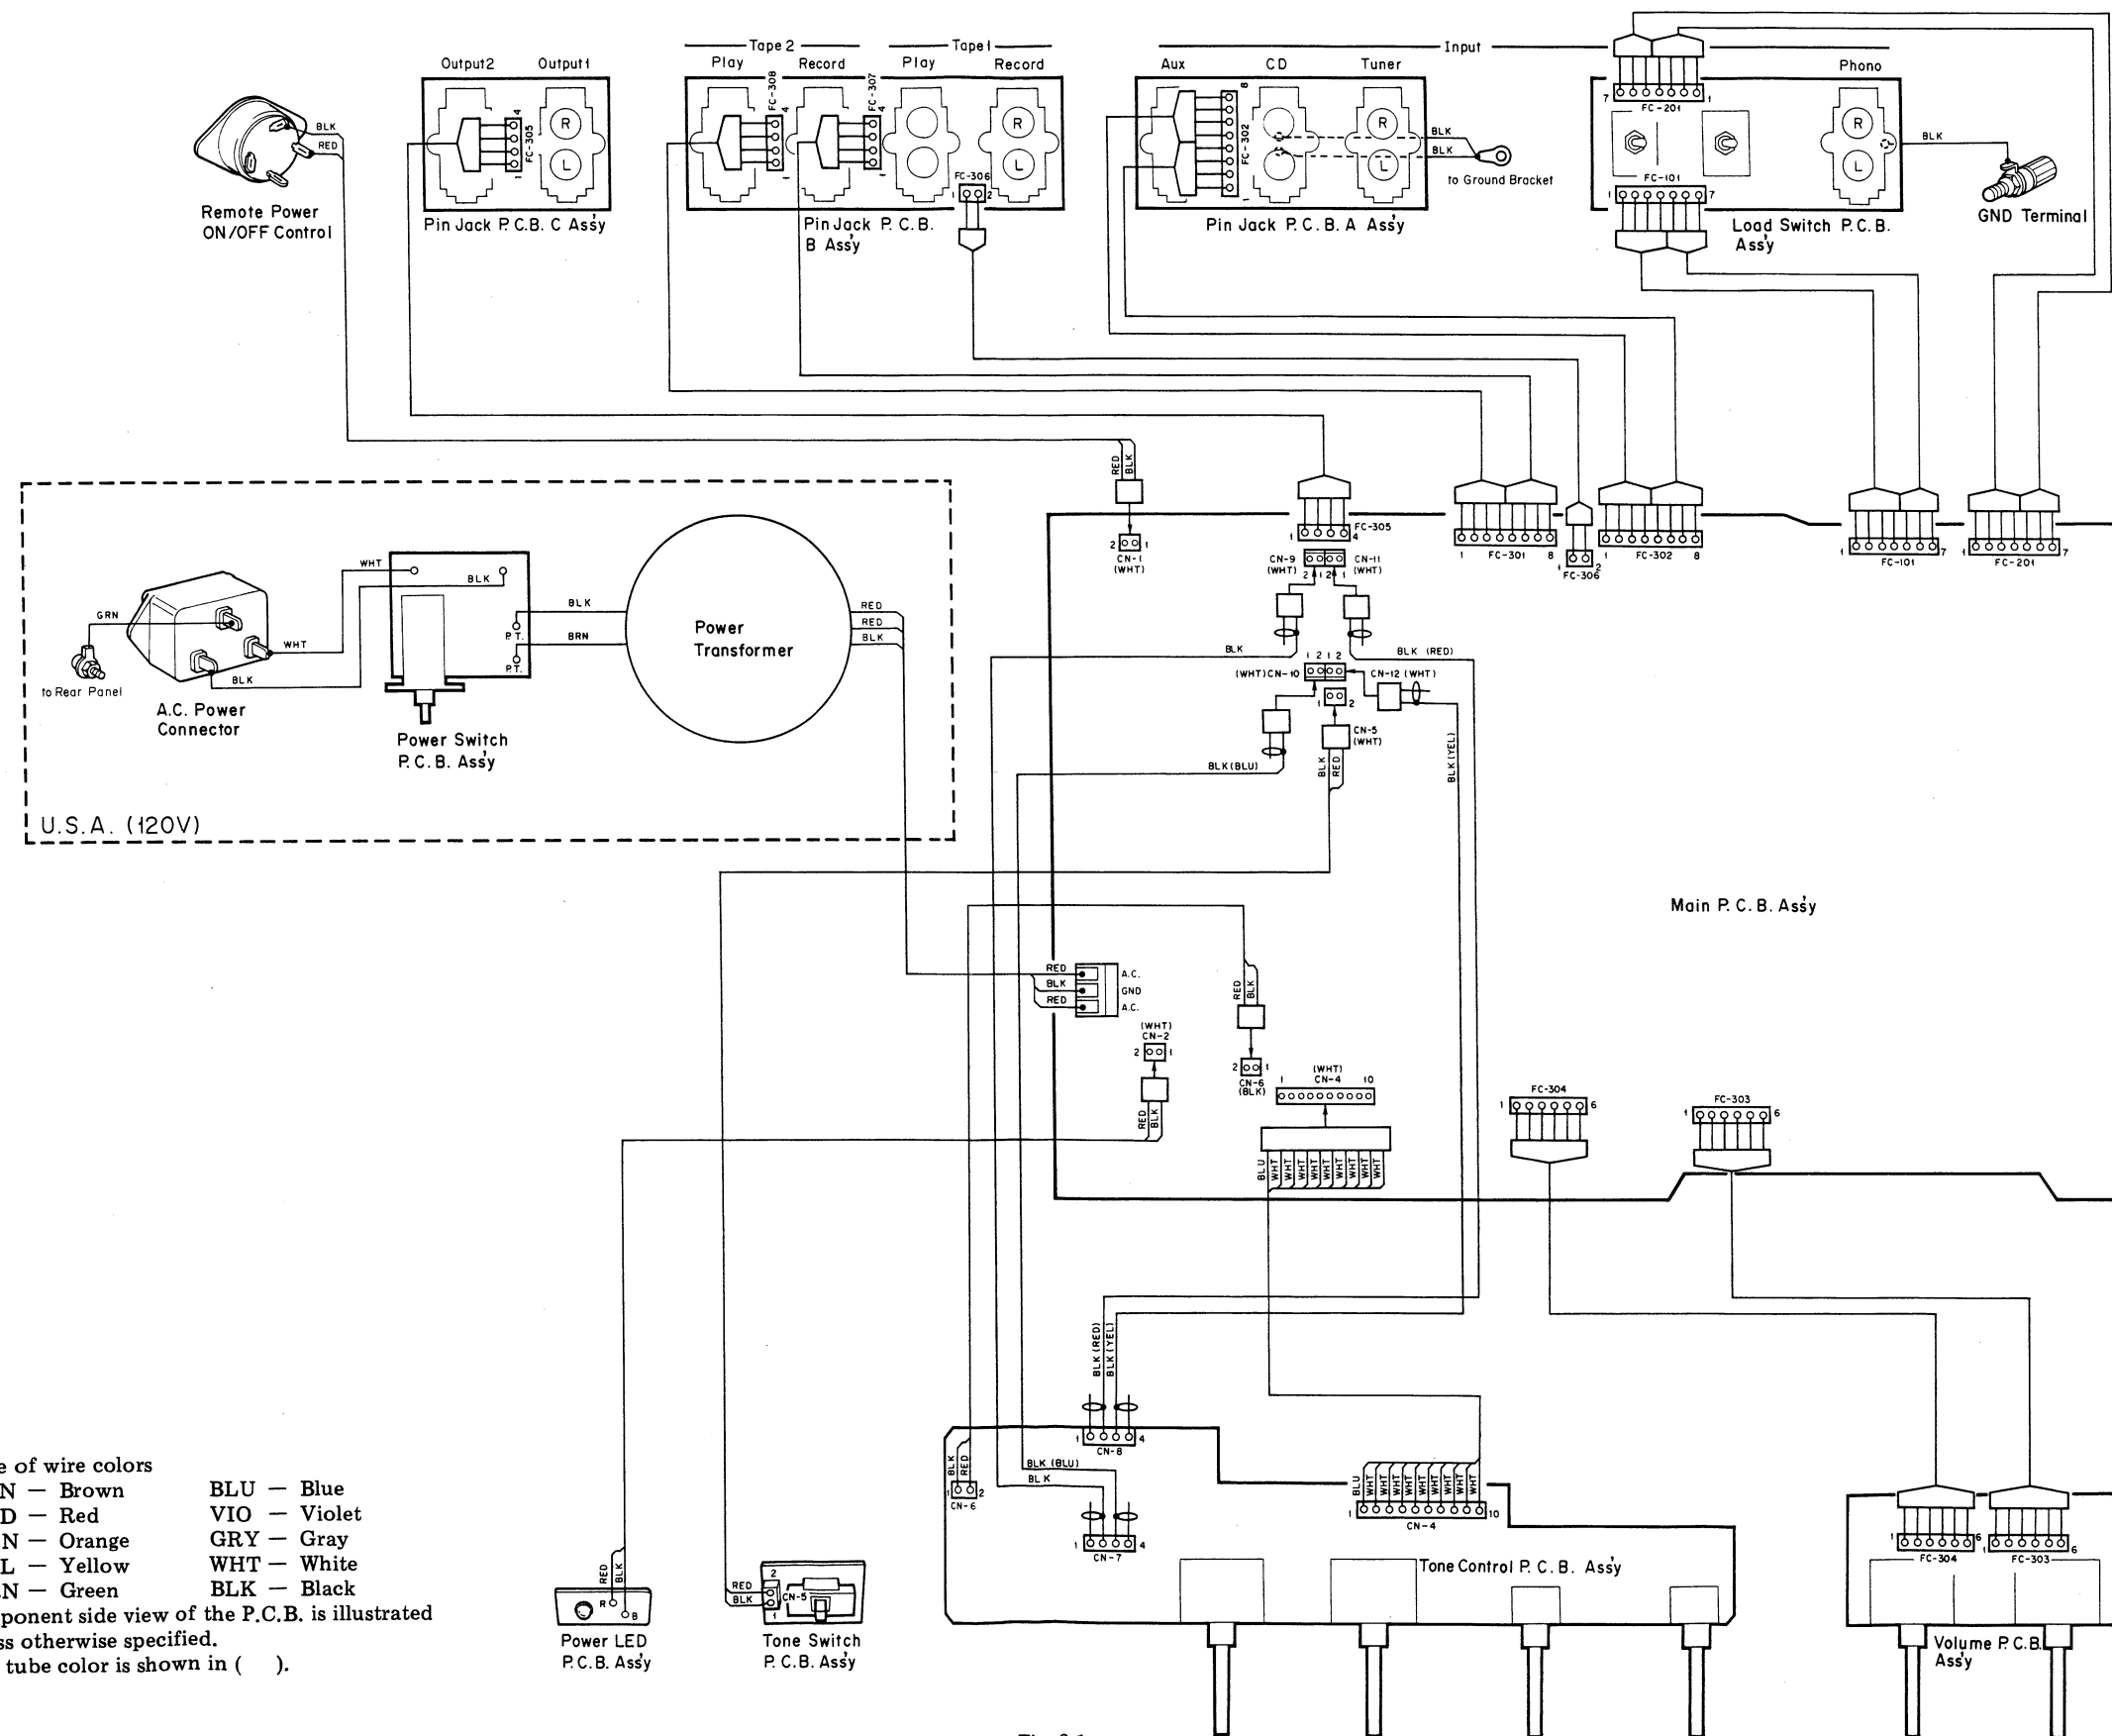


Fig. 8.1

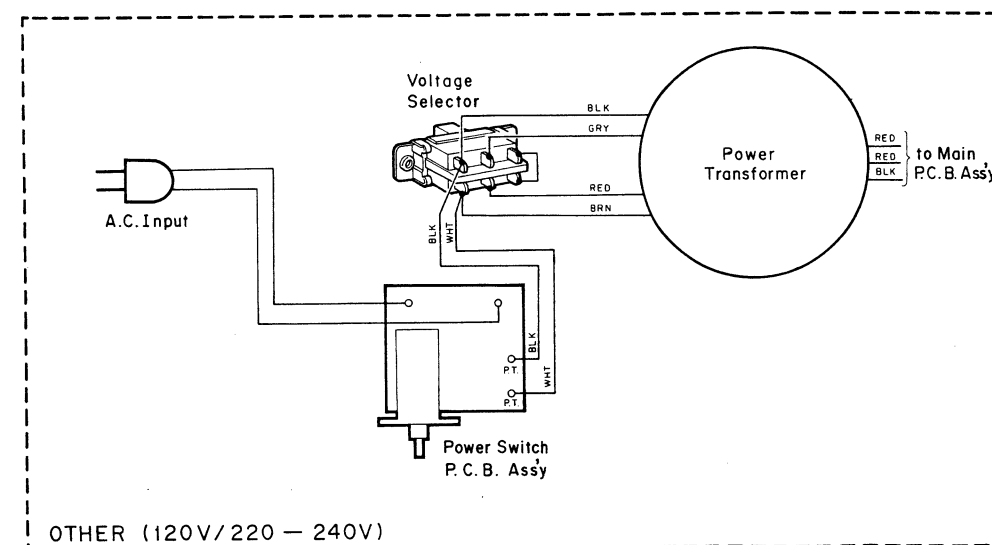
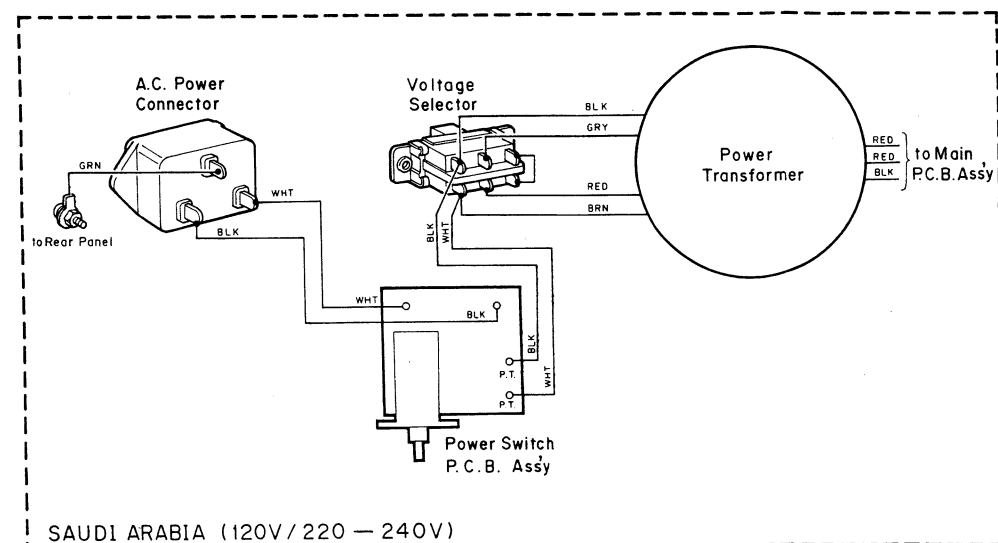
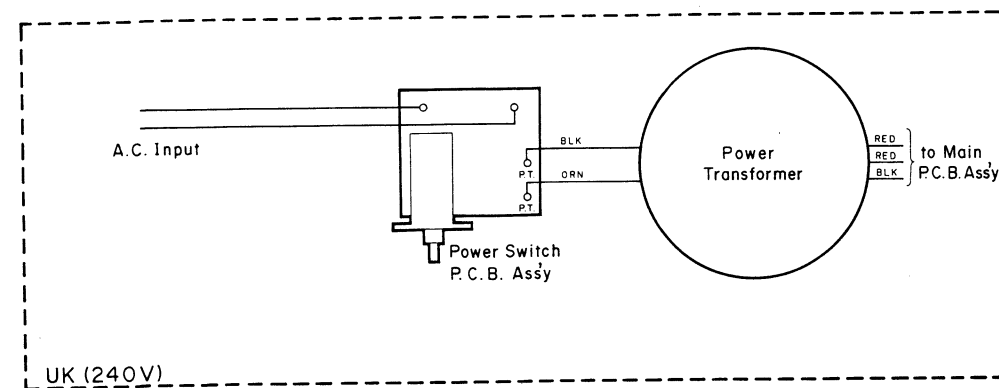
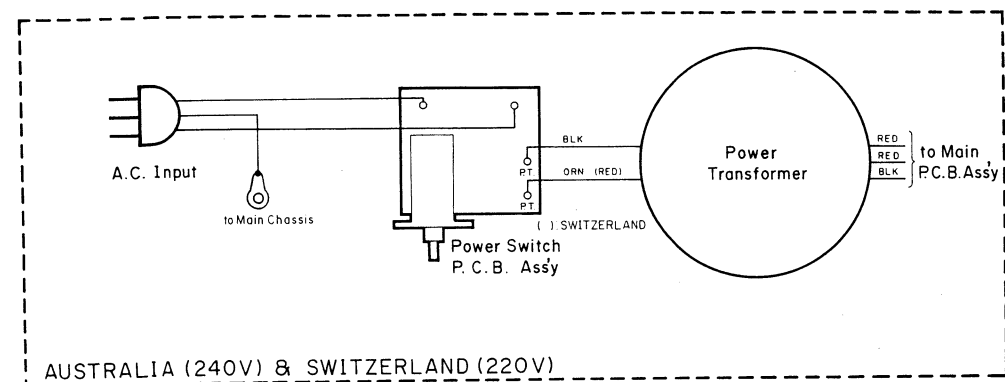
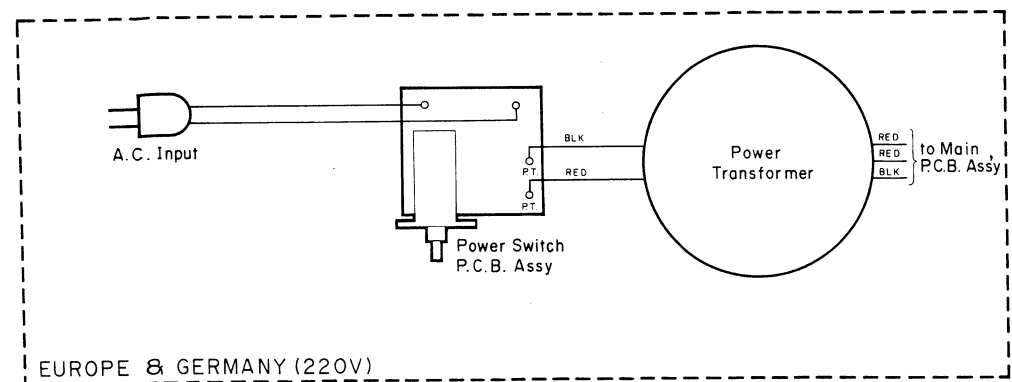
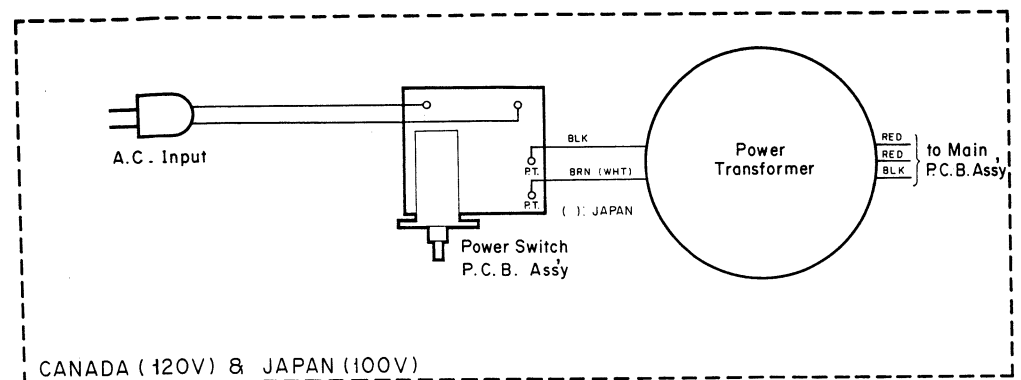


Fig. 8.2

9. BLOCK DIAGRAM

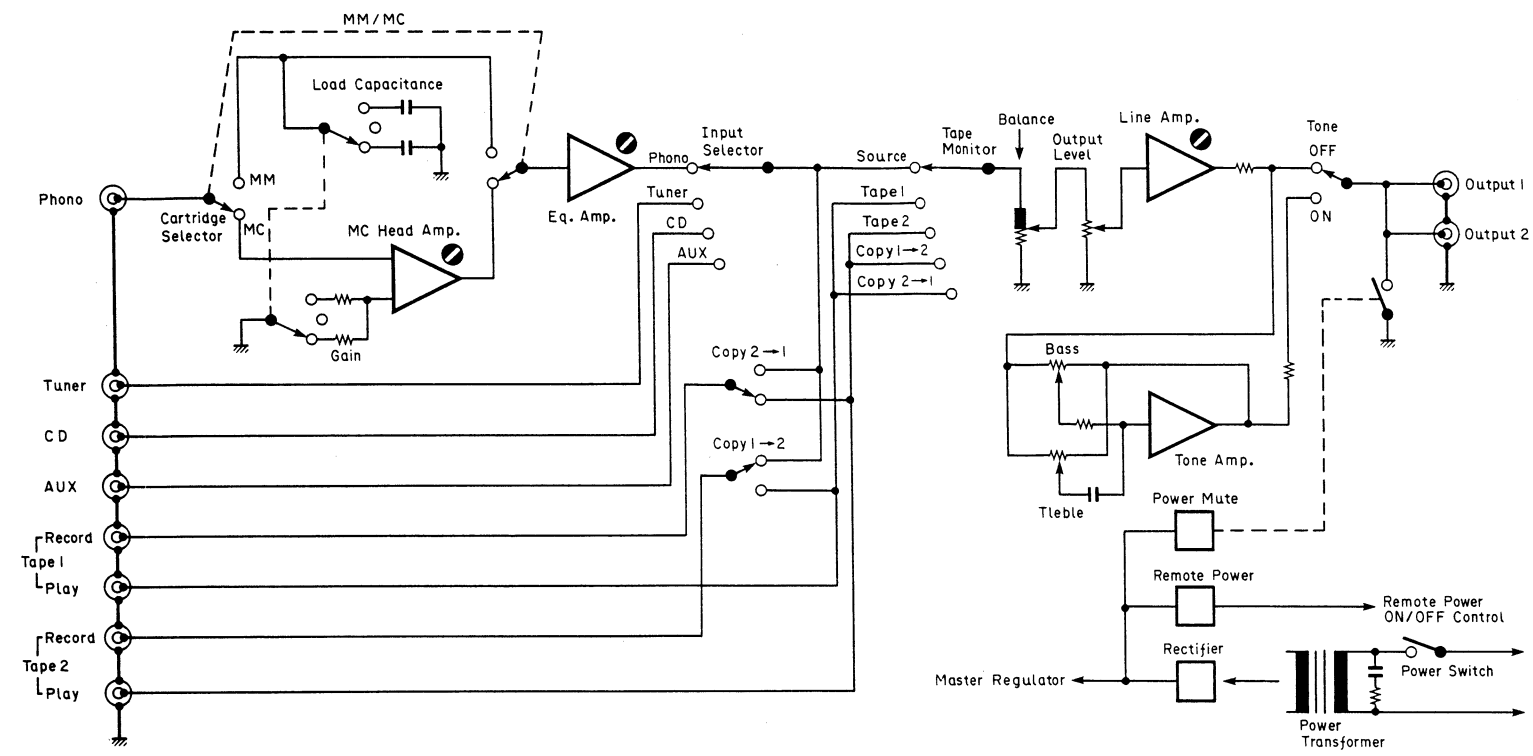


Fig. 9

10. SPECIFICATIONS

Input Sensitivity/Impedance

Phono MC (36 dB Gain)	45 μ V/100 ohms
(30 dB Gain)	85 μ V/100 ohms
(24 dB Gain)	165 μ V/100 ohms
Phono MM	2.5 mV/50 kohms
Tuner/CD/Aux/Tape	150 mV/12.5 kohms

Input Sensitivity (New IHF)

Phono MC (36 dB Gain)	11.3 μ V
(30 dB Gain)	21.3 μ V
(24 dB Gain)	41.3 μ V
Phono MM	0.63 mV
Tuner/CD/Aux/Tape	37.5 mV

Maximum Input Level (1 kHz, Non-Clipping Level, New IHF)

Phono MC (36 dB Gain)	4.5 mV
(30 dB Gain)	8.5 mV
(24 dB Gain)	16.5 mV
Phono MM	270 mV

Output Level/Impedance

Pre Out	2 V/1 kohms
Rec Out	150 mV/1 kohms

Maximum Output Level (20—20,000 Hz, 1% THD, Pre Out, New IHF)

. 7 V

Total Harmonic Distortion (20—20,000 Hz)

Phono MC to Rec Out, 1 V	
(36 dB Gain)	Less than 0.005%
(24 dB Gain)	Less than 0.004%
Phono MM to Rec Out, 1 V	Less than 0.002%
Tuner/CD/Aux/Tape to Pre Out, 2 V	
.	Less than 0.002%

Frequency Response

Tuner/CD/Aux/Tape	1—100,000 Hz +0, —3 dB
	1—20,000 Hz +0, —2 dB

RIAA Deviation

Phono MC	20—20,000 Hz $\pm$ 0.3 dB
Phono MM	20—20,000 Hz $\pm$ 0.25 dB

Signal to Noise Ratio (IHF A-WTD)

Phono MC (0.5 mV Input, 0.5 V Pre Out, Input Shorted)	
(36 dB Gain)	Better than 81 dB
(30 dB Gain)	Better than 80 dB
(24 dB Gain)	Better than 78 dB
Phono MM (5 mV Input, 0.5 V Pre Out, Input Shorted)	
.	Better than 88 dB
Tuner/CD/Aux/Tape (0.5 V Input, 0.5 V Pre Out, Input Shorted)	
.	Better than 95 dB

Stereo Separation (100 Hz/1 kHz/10 kHz)

Phono MC (0.5 mV Input, 1 V Pre Out, Input Shorted)	
(36 dB Gain)	93/85/65 dB
(24 dB Gain)	90/84/64 dB
Phono MM (5 mV Input, 1 V Pre Out, Input Shorted)	
.	100/84/64 dB
Tuner/CD/Aux/Tape (0.5 V Input, 1 V Pre Out, Input Shorted)	
.	110/95/75 dB

Tone Control Characteristics

Bass	20 Hz $\pm$ 10 dB
Treble	20 kHz $\pm$ 10 dB

Remote Power On/Off Control Output

. 24 V DC

Power Source 120, 120/220—240, 220 or 240 V AC;
50/60 Hz (According to country of sale)

Power Consumption 23 W max.

Dimensions 435 (W) x 63 (H) x 287 (D) mm
17-1/8 (W) x 2-1/2 (H) x 11-5/16 (D) inches

Approximate Weight 5.1 kg, 11 lbs. 4oz.

- Specifications and design are subject to change for further improvement without notice.

Service Manual

Nakamichi

CA-5_{II}, CA-5A_{II}, CA-5E_{II}, CA-50_{II}

Nakamichi Corporation/Tokyo Office
Nakamichi America Corporation
Nakamichi Canada
Nakamichi GmbH

Shinjuku Daiichi Seimei Bldg., 2-7-1 Nishishinjuku, Shinjuku-ku, Tokyo 163 Phone: (03) 342-4461 Telex: 2324721 (NAKAM J)
19701 South Vermont Ave., Torrance, CA 90502 Phone: (213) 538-8150
276 South West, Marine Drive, Vancouver, B.C. V5X 2R4 Phone: (604) 324-7535
Stephanienstrasse 6, 4000 Düsseldorf 1 Phone: (0211) 359036

CA-5EII/CA-5AII/CA-5II Load Impedance Alteration Abschlußimpedanz-Anpassung des CA-5EII/CA-5AII/CA-5II Modification de l'impédance de charge du CA-5EII/CA-5AII/CA-5II

- For Dealers Only
- Nur für Händler
- Pour les distributeurs uniquement

The plastic bags contain five resistors each for the left and right channels. The load impedance when an MC-type cartridge is used can be altered by installing these resistors on the printed circuit boards in the CA-5EII/CA-5AII/CA-5II. (The load impedance is factory-set to 100 ohms.)

When wishing to make this alteration, contact your dealer. Never attempt to install the resistors yourself, as opening the unit involves a considerable risk of electric shock.

Die Plastiktüten enthalten je fünf Widerstände für rechten und linken Kanal. Bei Verwendung eines MC-Tonabnehmers kann die Lastimpedanz bei Bedarf durch Anbringen der Widerstände auf den Platinen des CA-5EII/CA-5AII/CA-5II verändert werden. (Die ab Werk eingestellte Impedanz beträgt 100 Ohm.) **Diese Anpassung darf nur durch autorisierte Händler durchgeführt werden, da bei Eingriffen in das Gerät Stromschlaggefahr besteht.**

Les sacs en plastique contiennent chacun cinq résistances pour les canaux gauche et droit. Lors de l'utilisation d'une tête de lecture à bobine mobile, l'impédance de charge peut être modifiée en installant ces résistances sur les circuits imprimés du CA-5EII/CA-5AII/CA-5II. (L'impédance de charge est réglée sur 100 ohms à la sortie de l'usine.)

Lorsque vous désirez effectuer cette modification, contactez votre distributeur. Ne jamais essayer d'installer les résistances par vous-même car l'ouverture de cet appareil peut entraîner de forts risques d'électrocution.

■ Procedure for installing resistors

Two resistors (one each for left and right channel) must be soldered to the circuit boards, as shown in the illustration. Be sure to turn the power OFF and unplug the power cord before opening the unit.

- Select the resistors for the desired load impedance according to their color codes, as indicated in the table on the reverse side.
- Trim the resistor leads as shown on the reverse side. Then insert the leads into the gold-plated sockets on the input section of the MC head amplifier board and solder each resistor solidly in place. Make sure that equal resistor values are used for the two channels.
- The resistors may be mounted in either direction.

■ Einbau

Zwei Widerstände (je einer für rechten und linken Kanal) müssen an den dafür vorgesehenen Stellen auf die Schaltplatinen gelötet werden, wie in der Abbildung gezeigt.

- Wählen Sie die zur Erzielung der gewünschten Abschlußimpedanz erforderlichen Widerstände nach ihrer Farbkodierung aus, wie in der umseitigen Tabelle aufgeführt.
- Kürzen Sie die Anschlußdrähte der Widerstände, wie umseitig gezeigt, und stecken Sie die Drähte in die vergoldeten Ösen auf der Platine (Eingangsstufe des MC-Vorverstärkers). Löten Sie dann die Drähte gut an. Achten Sie darauf, gleiche Widerstandswerte für beide Kanäle zu verwenden.
- Die Ausrichtung der Widerstände ist beliebig.

■ Pour l'installation des résistances

Les 2 résistances (une pour le canal gauche et une pour le canal droit) doivent être soudées sur les panneaux des enceintes. Vérifier que le courant n'est pas allumé et que la prise d'alimentation soit débranchée avant d'ouvrir le couvercle de l'appareil.

- Choisir les résistances suivant l'impédance de charge désirée en vous aidant des couleurs servant de repères, comme indiqué sur le tableau ci-après.
- Régler le bout des résistances comme indiqué au dos. Insérer ensuite les bouts dans les supports dorés dans la section d'entrée du pré-amplificateur et souder chaque résistance solidement à leur place. Vérifier que les résistances utilisées pour les deux courants soient de valeur égale.
- Les résistances peuvent être montées dans n'importe quel sens.


Desired load impedance Gewünschte Abschlußimpedanz Impédance de charge désirée	50 Ω	30 Ω	20 Ω	10 Ω	3 Ω
Resistor to install Einzulötender Widerstand Résistances à installer	100 Ω	42.2 Ω	26.1 Ω	11.5 Ω	3.16 Ω

How to read the color code

Farbkennzeichnung


Comment lire les couleurs servant de repères

 Indicates the tolerance
Bezeichnet die Toleranz
Indique la tolérance



	1st stripe 1. Ring 1ère raie	2nd stripe 2. Ring 2ème raie	3rd stripe 3. Ring 3ème raie	4th stripe 4. Ring 4ème raie
100 Ω	Brown braun Marron	Black schwarz Noire	Brown braun Marron	—
42.2 Ω	Yellow gelb Jaune	Red rot Rouge	Red rot Rouge	Gold gold Dorée
26.1 Ω	Red rot Rouge	Blue blau Bleue	Brown braun Marron	Gold gold Dorée
11.5 Ω	Brown braun Marron	Brown braun Marron	Green grün Verte	Gold gold Dorée
3.16 Ω	Orange orange Orangée	Brown braun Marron	Blue blau Bleue	Silver silbern Argentée

 Approx. 20 mm
ca. 20 mm
Approximativement 20 mm




Trim the resistor leads.
Anschlußdrähte kürzen.
régler les bouts de résistance.

MC head amp input section

Eingangsstufe des MC-Vorverstärkers section d'entrée de l'amplificateur MC

Solder solidly in place.
Gut einlöten.
solder solidement à leur place

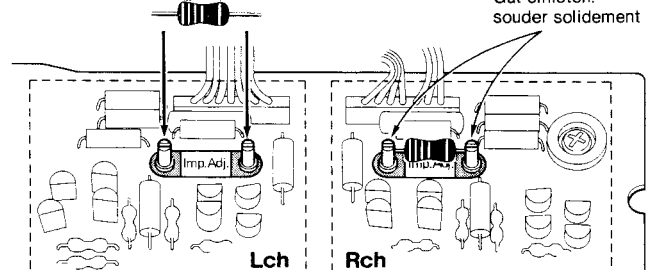


2

Be sure to unplug the power cord.
Unbedingt Netzstecker ziehen.
Bien s'assurer de débrancher le cordon d'alimentation.

1

Switch Power OFF.
Gerät ausschalten.
Mettre l'appareil hors tension.

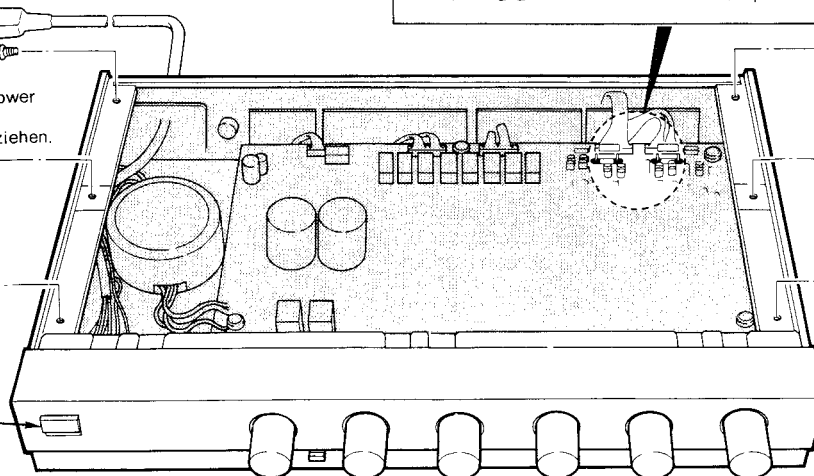

Hex wrench (2 mm)
Sechskantschlüssel (2 mm)
clé six pans de 2 mm

3

Remove six screws and take off the top cover.
Sechs Schrauben entfernen und obere Abdeckung abnehmen.
dévissier les 6 vis et soulever le couvercle