


ONKYO SERVICE MANUAL

QUARTZ SYNTHESIZED TUNER AMPLIFIER MODELS TX-860/TX-860M

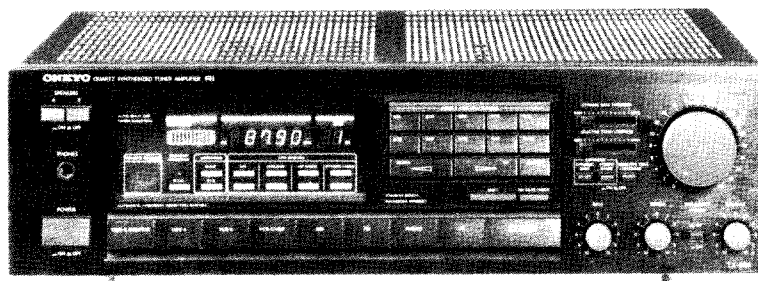

Black model

BHUD, BHUDN, MBHUDN	120V AC, 60Hz
BHUG	220V AC, 50Hz
BHUW	120/220V AC, 50/60Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications	2
Service procedures	3
Exploded view	4
Parts list	5
Block diagram -120V model-	6
Block diagram -220V model-	8
Connection diagram of microprocessor	10
Block diagram of IC	11
Adjustment procedures	18
Pc board view/parts list	
Display/preamp./speaker	21
AM/FM tuner and selector circuit	25
Power amplifier	30
Other pc boards	33
Schematic diagram	
120V model -Tuner-	23
120V model -Amp.-	27
Other models -Tuner-	31
Other models -Amp.-	35
Disassembling procedures	37
Packing view	38

ONKYO

AUDIO COMPONENTS

SPECIFICATIONS

AMPLIFIER SECTION

Power output:	70 watts per channel, min, RMS, at 8ohms, both channels driven, from 20Hz to 20kHz, with no more than 0.04% total harmonic distortion.
Musical Power Output:	2×180 watts at 4 ohms, 1kHz (DIN) 2×120 watts at 8 ohms, 1kHz (DIN)
Continuous Power Output:	2×105 watts at 4 ohms, 1kHz (DIN) 2×77 watts at 8 ohms, 1kHz (DIN)
Total Harmonic Distortion:	0.04% at rated power 0.04% at 1 watts output
IM Distortion:	0.04% at rated power 0.04% at 1 watts output
Damping Factor:	40 at 8 ohms
Frequency Response:	20-30,000Hz ±1dB
RIAA Diviation:	20-20,000Hz ±0.8dB
Sensitivity and Impedance:	Phono: 2.5mV/50 kohms CD: 150mV/50 kohms Tape Play: 150mV/50 kohms Tape Rec: 150mV/3.5 kohms
Phono Overload(MM):	120mV RMS at 1kHz, 0.04% THD.
Signal-to-Noise Ratio:	Phono: 85dB(at 10mV input, A weighted) 75dB(IHF A-202) CD/Tape: 95dB(A weighted) 80dB(IHF A-202)
Tone controls:	Bass: ±10dB at 100Hz Treble: ±10dB at 10kHz

TUNER SECTION

FM:

	-220V/ Worldwide models-	-120V model-
Tuning Range:	87.50-108.00MHz(50kHz steps) 87.50-108.00MHz(50kHz steps) or 87.9-107.9kHz(200kHz steps) (Worldwide model)	87.9-107.9kHz(200kHz steps)
Usable Sensitivity:	Mono: 11.2dBf, 1.0 μ V, 75ohms 0.9 μ V(S/N 26dB, 40kHz Dev.) 75ohms DIN Stereo: 18.0dBf, 2.2 μ V, 75ohms 23 μ V(S/N 46dB, 40kHz Dev.) 75ohms DIN	Mono: 10.8dBf, 1.9 μ V Stereo: 17.2dBf, 4.0 μ V
50dB Quieting Sensitivity:	Mono: 18.0dBf, 2.2 μ V, 75ohms Stereo: 37.2dBf, 20 μ V, 75ohms	Mono: 17.2dBf, 4.0 μ V Stereo: 37.2dBf, 40 μ V
Capture Ratio:	1.5dB	1.5dB
Image Rejection Ratio:	85dB	40dB
IF Rejection Ratio:	90dB	90dB
Signal-to-Noise Ratio:	Mono: 73dB Stereo: 67dB	Mono: 73dB Stereo: 67dB
Alternate Channel Attenuation:		55dB
Selectivity:	50dB DIN(±300kHz, 40kHz dev.)	50dB
AM suppression Ratio:	50dB	50dB
Harmonic Distortion:	Mono: 0.15% Stereo: 0.25%	Mono: 0.15% Stereo: 0.25%
Frequency Response:	30-15,000Hz ±1.5dB	30-15,000Hz ±1.5dB
Stereo Separation:	45dB at 1kHz 30dB at 100-10,000Hz	45dB at 1kHz 30dB at 100-10,000Hz
Muting Level:	17.2dBf, 4.0 μ V	17.2dBf, 4.0 μ V
AM:		
Tuning Range:	522-1611kHz(9kHz steps) 522-1611kHz(9kHz steps) or 530-1620kHz(10kHz steps) (Worldwide model)	530-1620kHz(10kHz steps)
Usable Sensitivity:	30 μ V	30 μ V
Image Rejection Ratio:	40dB	40dB
IF Rejection Ratio:	40dB	40dB
Signal-to-Noise Ratio:	40dB	40dB
Harmonic Distortion:	0.7%	0.7%

GENERAL

Dimensions(W×H ×D):	435×130×351mm 17-1/8" ×5-1/8" ×13-13/16"
Weight:	8.8kg., 19.4lbs.

Specifications and features are subject to change without notice.

SERVICE PROCEDURES

1. Replacing the fuses

For continued protection against fire hazard, replace only with same type and same rating fuse.

D (120V) model

Circuit no.	Part no.	Description
F901	252050	5 A (ST-6), Primary

G (220V) model

Circuit no.	Part no.	Description
F902	252075	2.5A-SE-EAK, Primary
F903	252075	2.5A-SE-EAK, AC outlet (Only 220V model)

W (Worldwide) model

Circuit no.	Part no.	Description
F901	252050	5A (ST-6), Primary
F902	252075	2.5A-SE-EAK, Primary

2. Change of FM/AM band step.

With the exception of the models below, a BAND STEP selector switch is not provided.

(FM)

MODEL	BAND STEP	D717, J753	R119
UD	200kHz→50kHz	Additional	15kΩ→24kΩ
UG/UQ	50kHz→200kHz	Eliminated	24kΩ→15kΩ

(AM)

BAND STEP	D716, J754
10kHz→ 9kHz	Additional
9kHz→10kHz	Eliminated

In D716/7 1SS133 (Part No. 223163) is used. In J753/4, a jumper lead must be inserted. R119, with the muting amplitude determined, is on the back panel side of FM/AM tuner and selector circuit printed circuit board assembly test points TP-1 and TP-2.


— Worldwide model —

Worldwide models are equipped with a step band selector switch. This switch is located on the back panel. This switch is set to 50kHz (FM) and 9kHz (AM) at the factory, but may have to be reset to 200kHz and 10kHz depending on the area where the unit is used.

	De-emphasis	FM step	AM step
Europe:	50 μsec	50kHz	9kHz
U.S.A.:	75 μsec	200kHz	10kHz

3. Memory preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in

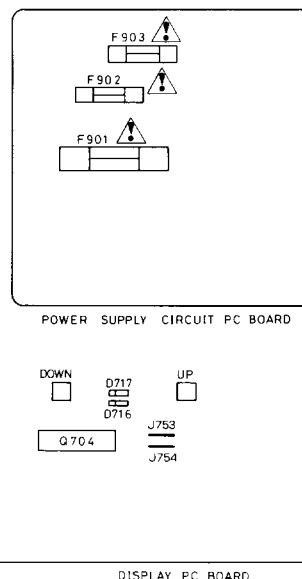

and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory the power switch must be turned on and off a few times each month to keep the back-up system operative. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

4. Safety-check out

(Only U.S.A. model)

After correcting the original service problem perform the following safety check before releasing the set to the customer.

Connect the insulating-resistance tester between the plug of power supply cord and terminal GND on the back panel. Specifications: 3.3 Mohm ±10% at 500V.

5. Change of voltage

Worldwide models are equipped with a voltage selector to conform with local power supplies. This switch is located on the back panel. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on.

This switch is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with the screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on.



PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
A1	27100163-1	Chassis	P901	253123, 253136, 253140 or 253146	△ AS-UC-6 #18, Power supply cord <D>	U7	1A156582-3	NAAF-3282-3, Volume pc board ass'y <D>
A2	27121255	Back panel <D>						
	27121255-1	Back panel <G>						
	27121255-2	Back panel <W>						
A3	27141261A	Bracket LH						
A4	27141262	Bracket RH				U8	1A156574-1	NAAF-3574-1, Volume pc board ass'y <G/W>
A5	27160225	Radiator						
A7	27141263	Bracket SH	P902	25050341	△ NSCT-4P168T, AC outlet <D>		1A156583-3	NAAF-3283-3, Preamplifier pc board ass'y <D>
A8	27141264	Bracket H	P902, P903	25050337	△ NSCT-2P164, AC outlet <G/W>		1A156583-3A	NAAF-3283-3A, Preamplifier pc board ass'y <G/W>
A9	27190644	Holder, dial plate	Q521, Q522	2501653, 2501654 or 2501655	2SC3856(O), 2SC3856(Y) or 2SC3856(P), Power amplifier transistor	U9	1A156584-3	NAAF-3284-3, Switch pc board ass'y
A10	27273098B	Joint, power				U10	1A156585-3	NADIS-3285-3, Volume indicator pc board ass'y <D>
A11	28133224	Back plate						
A12	28130255	Dial plate	Q523, Q524	2501663, 2501664 or 2501665	2SA1492(O), 2SA1492(Y) or 2SA1492(P), Power amplifier transistor		1A156575-1	NADIS-3575-1, Volume indicator pc board ass'y <G/W>
A13	27270147	Spacer <G/W>				U11	1A156586-3	NAETC-3286-3, Video terminal pc board ass'y <D>
A14	870048	3 × 8 × 0.8t, Nylon washer <G/W>						
A15	27300750	△ Strain relief						
A17	27190524	Holder	S903	25065123	△ NSS-1258P, Voltage selector switch <W>		1A156586-3A	NAETC-3286-3A, Video terminal pc board ass'y <G/W>
A18	834430088	3TTS+8B(BC), Tapping screw				U12	1A156587-3	NAPS-3287-3, Power supply circuit pc board ass'y <D>
A19	831130088	3TTW+8B, Tapping screw	T901	2300432	△ NPT-1033D, Power transformer <D>			
A20	830440089	4TTC+8C(BC), Tapping screw		2300304	△ NPT-992G, Power transformer <G>		1A156587-3A	NAPS-3287-3A, Power supply circuit pc board ass'y <G>
A21	834430108	3TTS+10B(BC), Tapping screw		2300305	△ NPT-992DG, Power transformer <W>			
A23	82143006	3P+6FN(BC), Pan head screw	U1	1A156576-3	NAAR-3276-3, FM/AM tuner and selector circuit pc board ass'y <D>		1A156587-3B	NAPS-3287-3B, Power supply circuit pc board ass'y <W>
A24	82142004	2P+4F(BC), Pan head screw						
A25	833430080	3TTP+8P(BC), Pan head screw		1A156576-3A	NAAR-3276-3A, FM/AM tuner and selector circuit pc board ass'y <G>	U14	1A073554-2	NAAF-3054-2, Equalizer amplifier pc board ass'y <D>
A32	27110491A	Front bracket ass'y					1A086554-3	NAAF-3054-3, Equalizer amplifier pc board ass'y <G/W>
A41	28184394	Top cover						
A42	834430088	3TTS+8B(BC), Tapping screw						
A51	1A156121	Front panel ass'y						
A55	833430080	3TTP+8P(BC), Tapping screw						
A57	28191466-1A	Clear plate	U2	1A156577-3	NAAF-3277-3, Power amplifier pc board ass'y			
A61	27175221A	Leg	U3	1A156578-3	NASW-3278-3, Speaker switch pc board ass'y			
A81	28323241-1A	Knob POWER	U4	1A156579-3	NAETC-3279-3, Speaker terminal pc board ass'y <D>			
A82	28323361	Knob SPEAKER A						
A83	28323363	Knob SPEAKER B						
A84	28323365B	Knob VOLUME						
A85	28323310	Knob TONE	U5	1A156579-3A	NAETC-3279-3A, Speaker terminal pc board ass'y <G/W>			
A86	28322925	Knob SLIDE						
A87	28323367	Knob PUSH						
A88	27190647	Holder SLIDE	U6	1A156581-3	NADIS-3281-3, Display pc board ass'y <D>			
A89	28323369	Knob PUSH						
F901	252050	△ 5A(ST-6), Primary fuse <D/W>						
F902	252075	△ 2.5A-SE-EAK, Primary fuse <G/W>						
F903	252075	△ 2.5A-SE-EAK, AC outlet fuse <G>						
P304	25060044	14 × 3mm, Terminal GROUND						

NOTE: <D>: Only 120V model
 <G>: Only 220V model
 <W>: Only Worldwide model

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.










CONNECTION VIEW OF MICROPROCESSOR

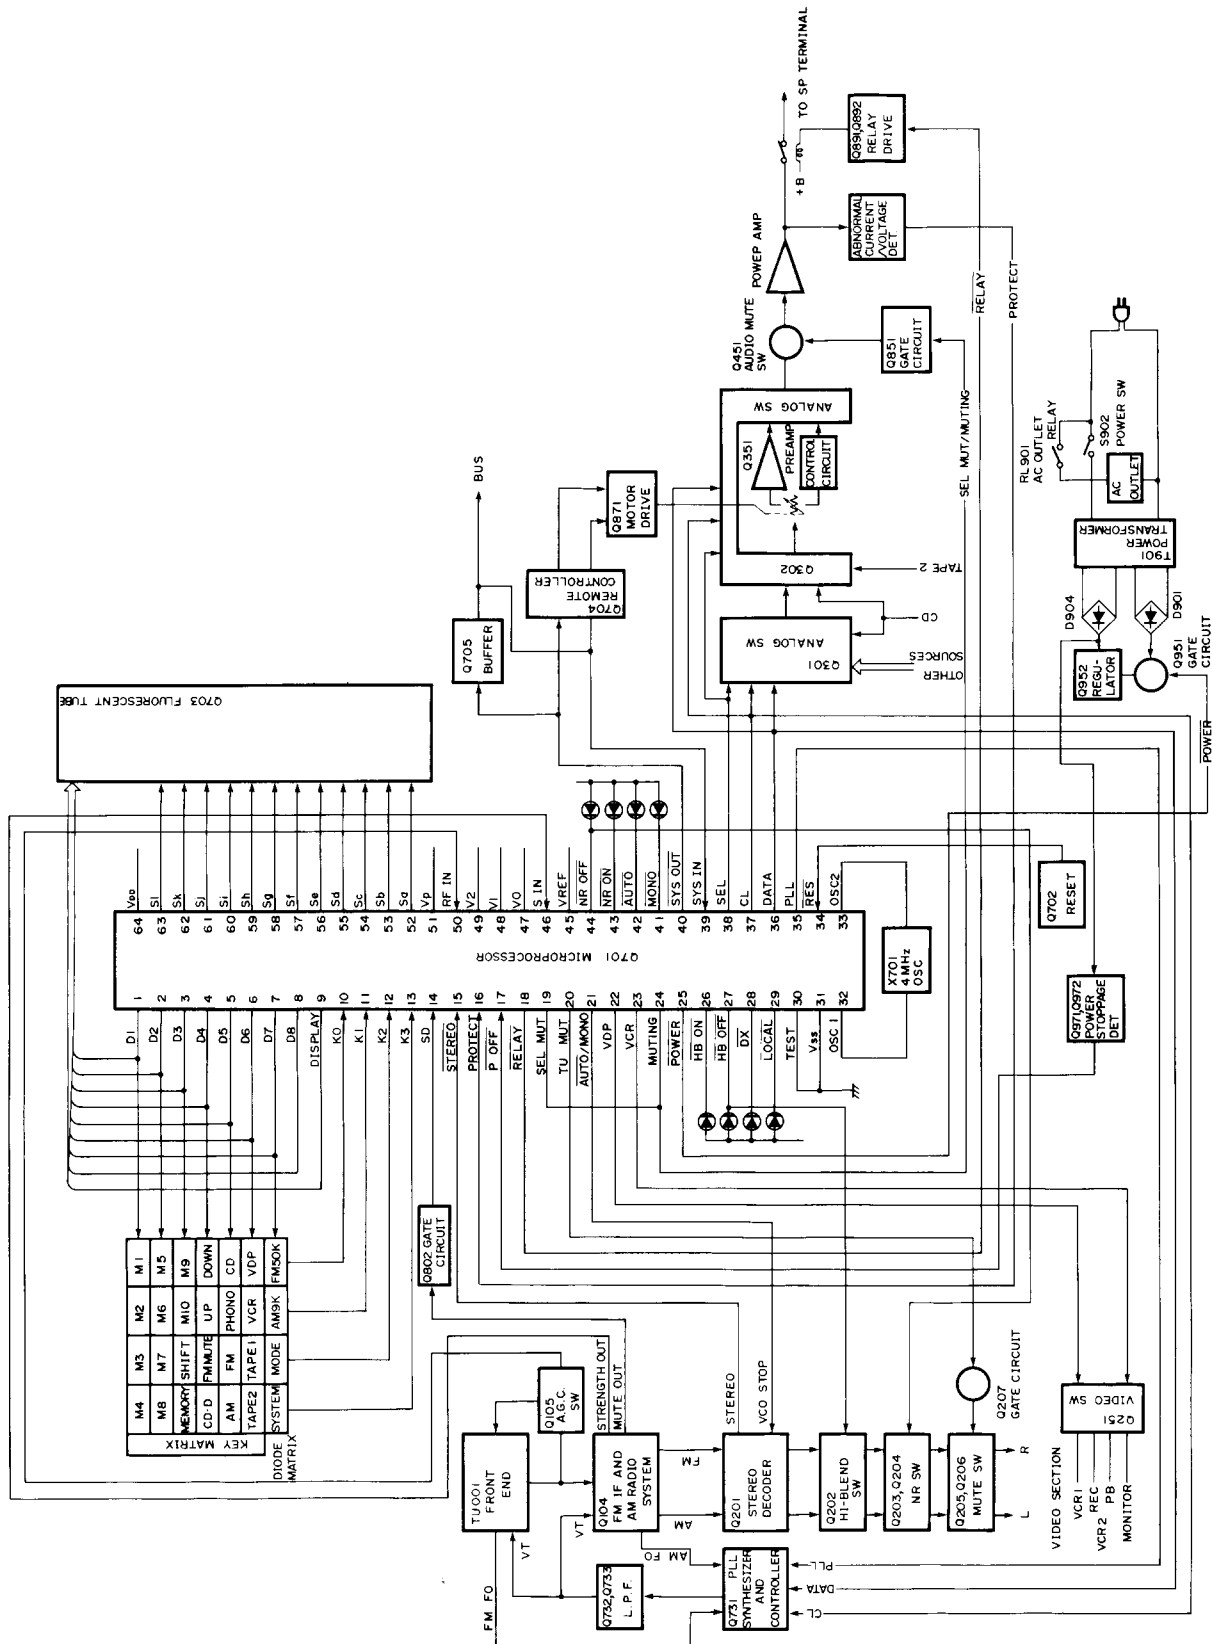

BLOCK DIAGRAM OF ICS

LC6568H-3643 (MICROPROCESSOR)

Terminal Descriptions

Pin No.	Terminal	Description
1	D1	These are the digit and key scan signal terminals. "H" when active.
2	D2	
3	D3	
4	D4	
5	D5	
6	D6	
7	D7	
8	D8	
9	DISPLAY	Display output terminal."H" when active.
10	K0	These are the input terminal for key return signal source and diode matrix."H" when active.
11	K1	
12	K2	
13	K3	
14	SD	Auto stop signal input terminal.Auto tuning stops when this terminal becomes the high level.
15	STEREO	This is the input terminal for detection of the stereo broadcast."L" when active.
16	PROTECT	This is the detection terminal for protection circuit.The speaker relay turns off when this terminal becomes the high level.
17	POWER OFF	This is the input terminal for detection of the stoppage of electric current."L" when the stoppage of electric current.
18	RELAY	This is the output terminal for control of the speaker relay."L" when active.
19	SEL MUTE	This is the muting output terminal when the selector key is operated."H" when active.
20	TU MUTE	This is the output terminal for muting control of tuner section."L" when active.
21	AUTO/MONO	This is the AUTO/MONO switching output terminal. "L" when AUTO.
22	VDP	These are the output terminal for control of video signal.
23	VCR	
24	MUTING	This is the output terminal for muting control. "H" when active.
25	POWER	This is the output terminal for power source.It is "H" for power on.
26	HB ON	This is the output terminal for indication of HI-BLEND ON. "L" when active.
27	HB OFF	This is the output terminal for indication of HI-BLEND OFF. "L" when active.
28	DX	This is the output terminal for indication of DX. "L" when active.
29	LOCAL	This is the output terminal for indication of LOCAL. "L" when active.
30	TEST	Test terminal.Connect to the ground.
31	Vss	Ground terminal.
32	OSC1	Connect to the 4.00MHz ceramic oscillator.
33	OSC2	
34	RES	This is the input terminal for reset. "L" when active
35	PLL	Connect to the terminal CE of PLL IC(LM7001).
36	DATA	This is the serial data output terminal.Connect to the terminal DATA of PLL IC and terminal DI of analog switches. (LC7821/LC7823)
37	CLOCK	This is the serial clock output terminal.Connect to the terminal CI of PLL IC and terminal CL of analog switches.
38	SEL	Connect to terminal SEL of analog switch(LC7821).
39	SYSTEM IN	This is the input terminal for system code. "H" when active.
40	SYSTEM OUT	This is the input terminal for system code. "L" when active.
41	MONO	This is the output terminal for indication of MONO. "L" when active.
42	AUTO	This is the output terminal for indication of AUTO. "L" when active.
43	NR ON	This is the output terminal for indication of NR ON. "L" when active.
44	NR OFF	This is the output terminal for indication of NR OFF. "L" when active.
45	VREF	This is the input terminal for comparator reference voltage.
46	S IN	This is the signal strength input terminal.
47	V0	This is the output terminal for comparator reference voltage.
48	V1	This is the output terminal for comparator reference voltage.
49	V2	This is the output terminal for comparator reference voltage.
50	RF IN	This is the input terminal for control of AGC. "H" when active.
51	VP	Pull-down resistor connection terminal of FIP controller/driver.

Pin No.	Terminal	Description
52	Sa	These are the output terminal for segment signal. “H” when active.
53	Sb	
54	Sc	
55	Sd	
56	Se	
57	Sf	
58	Sg	
59	Sh	
60	Si	
61	Sj	
62	Sk	
63	Sl	
64	VDD	This is the device power source terminal. At the time of operation, the supply is 5V. The internal data memory (RAM) is maintained by means of the super capacitor.

FM50K (FM band setting)


FM50K	Region	Frequency range	Channel space	Reference frequency	IF frequency
1	Europe	87.50 ~ 108.00 MHz	50 kHz	25 kHz	10.7 MHz
0	U.S.A.	87.9 ~ 107.9 MHz	200 kHz	25 kHz	10.7 MHz

AM9


AM9K	Region	Frequency range	Channel space	Reference frequency	IF frequency
1	Europe	522 ~ 1611 kHz	9 kHz	9 kHz	450 kHz
0	U.S.A.	530 ~ 1620 kHz	10 kHz	10 kHz	450 kHz

Connection of fluorescent tube and microprocessor**ANODE CONNECTION**



	8 G (D 8)	7 G (D 7)	6 G (D 6)	5 G (D 5)	4 G (D 4)	3 G (D 3)	2 G (D 2)	1 G (D 1)
a	SLEEP		a	a	a	a	a	a
b	CD DIRECT		b	b	b	b	b	b
c	MEMORY		c	c	c	c	c	c
d	11-20		d	d	d	d	d	d
e	1-10	FM FM MUTE	e	e	e	e	e	e
f	AUDIO MUTE	STEREO	f	f	f	f	f	f
g	—	AM	g	g	g	g	g	g
h	T-2 MONITOR	OFF	—	—	—	h	—	h
i	—	ON	i	—	i	—	—	i
j	—	MIN	j	—	—	—	—	j
k	—	kHz	—	—	k	k	—	k
l	—	MHZ	—	—	DP	—	—	CH
m	PRESET STATION	—	—	—	—	—	—	—
n	SIGNAL FREQUENCY / INPUT SELECTOR	—	—	—	—	—	—	—
o	—	SIGNAL STRENGTH	—	—	—	—	—	—
p	—		—	—	—	—	—	—

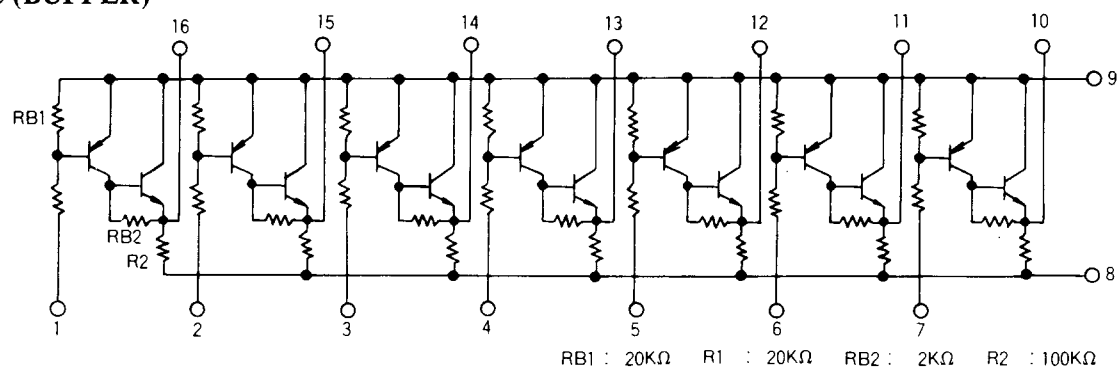μPA81C (BUFFER)

7-BT-95GK (FLUORESCENT TUBE)

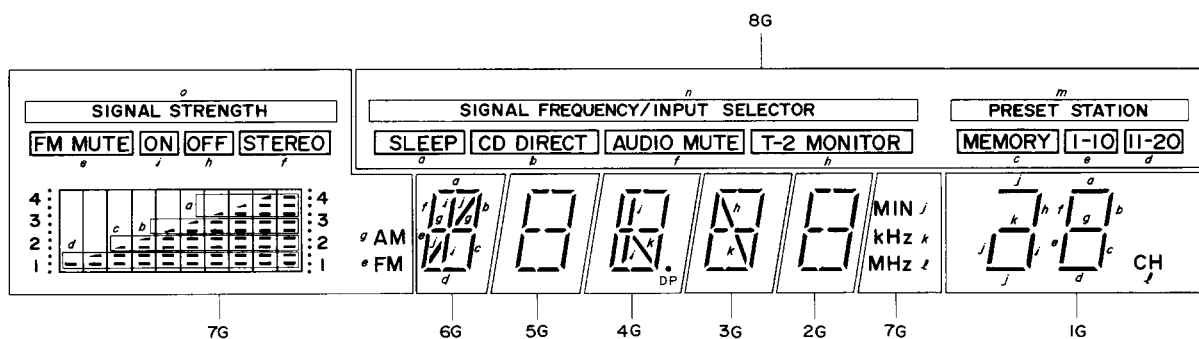


LC7823 (ANALOG SWITCH)

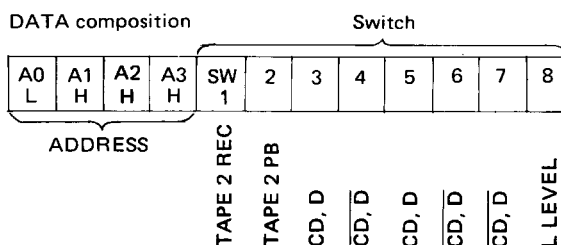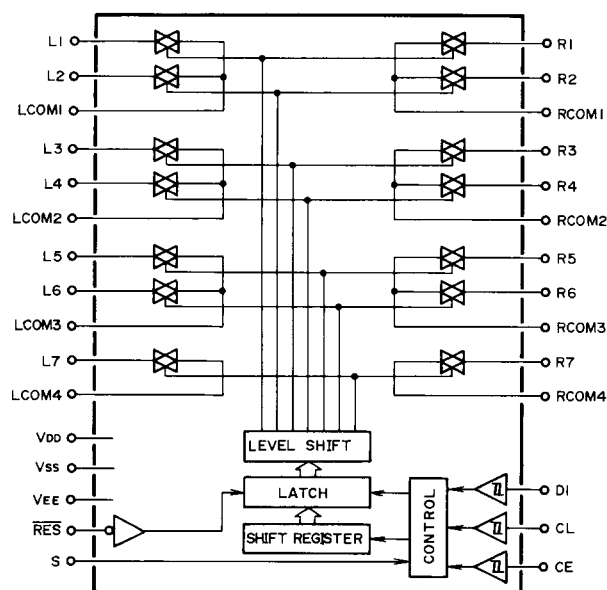


The source becomes ON when the bit of switch becomes high.

Pin No.	Terminal	Description	Pin No.	Terminal	Description
1 (L1)	TAPE 2 REC	Input/output terminals of audio signal of left channel. Control to the inside analog switch at the serial data.	16	Vss	Ground terminal.
2 (L2)	TAPE 2 PB		17	S	Selector terminal.
3	L COM 1		18	RES	Reset terminal. When power is turned ON, the condition of the analog switch is not determined, but when this terminal is "L", all analog switches are OFF.
4 (L3)	CD·D		19	VDD	Power supply terminal. (+15V)
5 (L4)	CD·D		20	R COM 4	Input/output terminals of audio signal of right channel. Control to the inside analog switch at the serial data.
6	L COM 2		21 (R7)	CD·D	
7 (L5)	CD·D		22	R COM 3	
8 (L6)	CD·D		23 (R6)	CD·D	
9	L COM 3		24 (R5)	CD·D	
10 (L7)	CD·D		25	R COM 2	
11	L COM 4		26 (R4)	CD·D	
12	VEE	Negative power supply terminal. (-15V)	27 (R3)	CD·D	
13	CE	Chip enable terminal. Connect to SEL terminal of LC6568H-3643.	28	R COM 1	
14	D1	Serial data input terminal. Connect to DATA terminal of LC6868H-3643.	29 (R2)	TAPE 2 PB	
15	CL	Serial clock input terminal. Connect to CLOCK terminal of LC6868H-3643.	30 (R1)	TAPE 2 REC	

LC7821 (Analog switch)

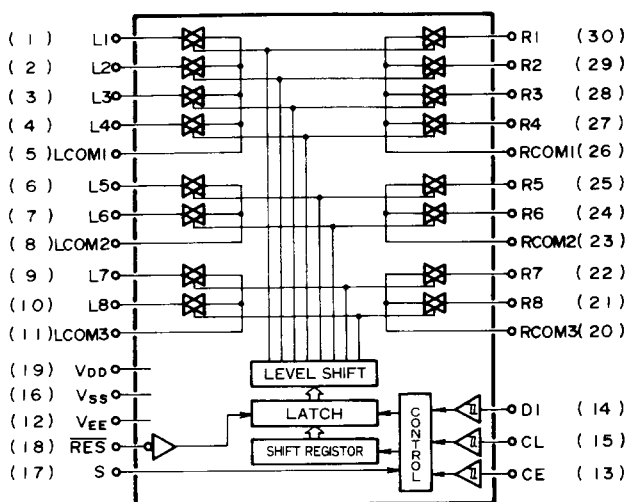


DATA composition

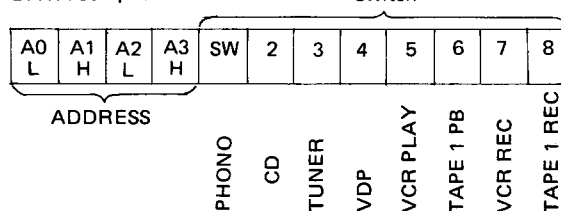


The source becomes ON when the bit of switch becomes high.

Pin No.	Terminal	Description	Pin No.	Terminal	Description
1	PHONO	Input/output terminals of audio signal of left channel. Control to the inside analog switch at the serial data.	16	Vss	Ground terminal.
2	CD		17	S	Selector terminal.
3	TUNER		18	RES	Reset terminal. When power is turned ON, the condition of the analog switch is not determined, but when this terminal is "L", all analog switches are OFF.
4	L COM 1		19	VDD	Power supply terminal. (+15V)
5	VDP		20	R COM 3	Input/output terminals of audio signal of right channel. Control to the inside analog switch at the serial data.
6	VCR PB		21	TAPE 1 REC	
7	TAPE 1 PB		22	VCR REC	
8	L COM 2		23	R COM 2	
9	VCR REC		24	TAPE 1 PB	
10	TAPE 1 REC		25	VCR P	
11	L COM 3		26	R COM 1	
12	Vss	Negative power supply terminal. (-15V)	27	VDP	
13	CE	Chip enable terminal. Connect to SEL terminal of LC6568H-3643.	28	TUNER	
14	D1	Serial data input terminal. Connect to DATA terminal of LC6868H-3643.	29	CD	
15	CL	Serial clock input terminal. Connect to CLOCK terminal of LC6868H-3643.	30	PHONO	

μPC1161C3 (FM stereo decoder)

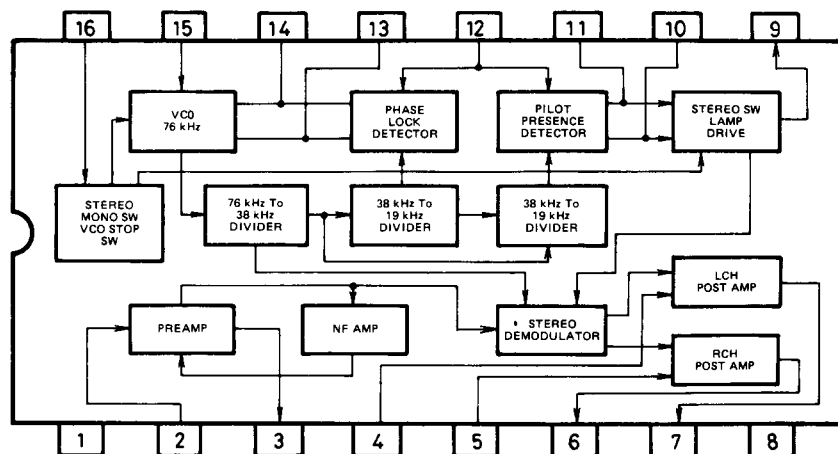




LM7001 (PLL SYNTHESIZER AND CONTROLLER)

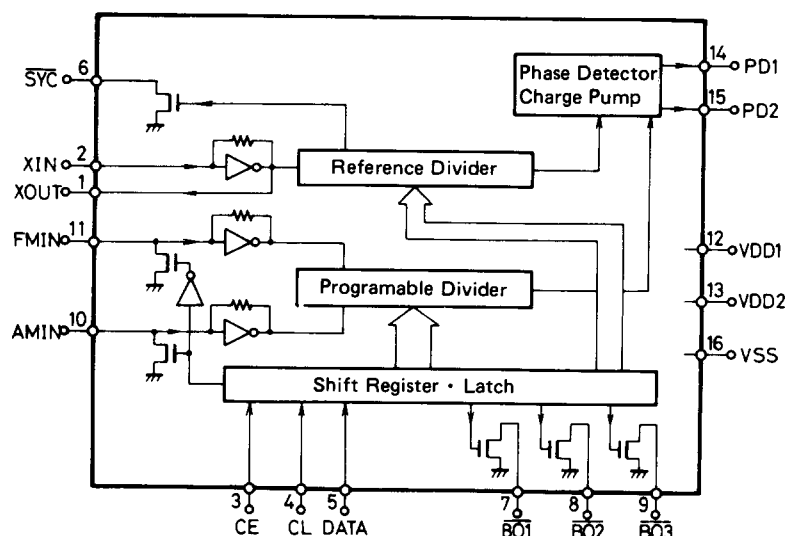

Pin No.	Terminal	Description
1	XOUT	Connect to the 7.2 MHz crystal oscillator.
2	XIN	
3	CE	Chip enable terminal. Connect to the PLL terminal of LC6568H-3643.
4	CL	Serial clock input terminal. Connect to the CLOCK terminal of LC6568H-3643.
5	DATA	Serial data input terminal. Connect to the DATA terminal of LC6568H-3643.
6	$\overline{\text{SYN}}$	Not used.
7	$\overline{\text{BO1}}$	Phono control signal output terminal. "L" when phono.
8	$\overline{\text{BO2}}$	FM control signal output terminal. "L" when FM.
9	$\overline{\text{BO3}}$	AM control signal output terminal. "L" when AM.
10	AMIN	AM local oscillator input terminal.
11	FMIN	FM local oscillator terminal.
12	VDD 1	Power supply terminal for back-up.
13	VDD 2	Power supply terminal.
14	PD1	Charge pump output of the phase detector which constitutes the PLL. High level is output when the divided local oscillator frequency is high than the reference frequency. In the opposite case, low level is output. Floating occurs when the frequencies matched. The output is applied to the variable capacitor diode in the local oscillator through the low pass filters.
15	PD2	
16	Vss	Ground terminal.

μPC4570C (OP AP)

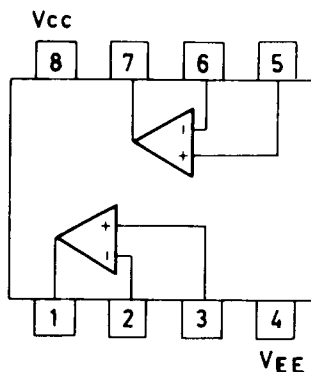

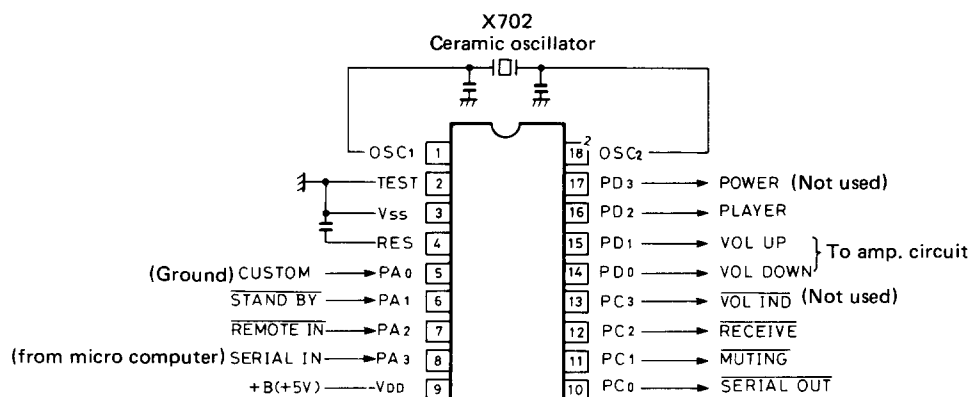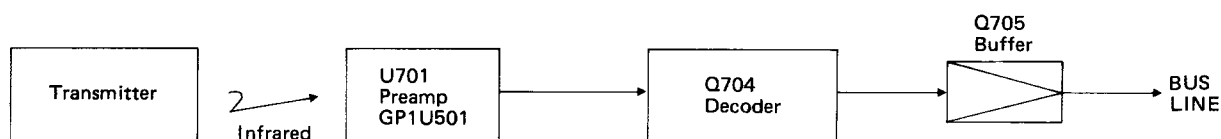LC6527C-3987 (REMOTE CONTROLLER)

Connection diagram

Terminal No.	Symbol	Terminal	Description
1 18	OSC1 OSC2	OSC	Connect to the 4MHz ceramic oscillator.
2	TEST	TEST	Test terminal. Connect to the ground.
3	V _{ss}	GND	Ground terminal.
4	$\overline{\text{RES}}$	$\overline{\text{RES}}$	Reset terminal.
5	PA0	CUSTOM	The custom code for decode is selected at this terminal. For U.S.A., the level is low.
6	PA1	$\overline{\text{STANDBY}}$	Terminal for STANDBY detection. During low input, only the POWER code is decoded.
7	PA2	$\overline{\text{REMOTE IN}}$	Signal input terminal for remote control preamp. Active low.
8	PA3	SERIAL IN	Serial data input terminal from microprocessor.
9	V _{DD}	+B	Power supply terminal.
10	PC0	$\overline{\text{SERIAL OUT}}$	Output at this terminal are the custom code (16 bit) remote control code input to REMOTE IN, data code (8 bit), and the serial code (12 bit) that has been converted corresponding to the decoded data code (8 bit).
11	PC1	$\overline{\text{MUTING}}$	At this terminal, the audio muting code that is input is inverted for each L/H. When power is ON, the level is high.
12	PC2	$\overline{\text{RECEIVE}}$	This is the display output for remote control reception. Output is low when decoded code is being received.
13	PC3	$\overline{\text{VOL IND}}$	During output of VOLUME UP/DOWN, a pulse ($\sqrt{\text{T}} \text{ } \overline{\text{T}} \text{ } \sqrt{\text{T}}$; T = 0.3ms) is output.
14	PD0	VOL DOWN	When the volume DOWN code is input, a high pulse of 120ms is output.
15	PD1	VOL UP	When the volume UP code is input, a high pulse of 120ms is output.
16	PD2	PLAYER	When the player PLAY/REJECT is input, a high pulse of 200ms is output.
17	PD3	POWER	The power code input inverts the L/H. Level is high for power being turned ON.

ADJUSTMENT PROCEDURES

Preparation

• Input

FM mono: 1kHz, 75kHz devi., 60dB/ μ V

FM stereo: 1kHz, L+R 67.5kHz devi.: Pilot signal 19kHz
7.5kHz devi.

AM: 400Hz, 30% mod.,

• Output

Connect the non-inductive type resistor of 8 ohms to the speaker terminal A of left and right channels unless otherwise noted.

• Standard knob position

TAPE MONITOR	SOURCE
VOLUME	Maximum
BASS/TREBLE/BALANCE	Center
VCR 2 MODE	STEREO
SPEAKER	A
SIMULATED STEREO	OFF
DYNAMIC BASS EXPANDER	OFF
STEREO IMAGE EXPANDER	OFF
SELECTIVE TONE CONTROL	OFF


Amplifier section

1. Idling current adjustment

Connect the DC voltmeter to the terminals IID and VCT on the power amplifier pc board.

Adjust the semi-fixed resistors R533 and R534 so that the indication of voltmeter is $7.5 \pm 1.5\text{mV}$.


Notes: VOLUME Maximum, Open load,
Adjust after switching on for 5 minutes.

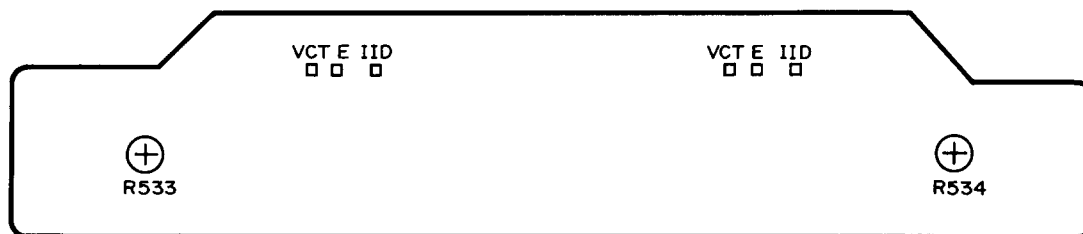

Power amplifier pc board

Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Turning dial setting	Output indicator	Adjustment	Adjust for	Remarks
FM IF	1		99.1MHz	—	99.1MHz	DC voltmeter	L101	0V ± 20mV	Mode switch: MONO Repeat the steps 1 and 3 until no further adjustment is necessary
	2	Fig. 1	1kHz, 75kHz devi. 65dBf (60dB)			AC voltmeter	IF on the front end	Maximum	
	3					Distortion analyzer	L102	Minimum	
Stereo modulator level	1		99.1MHz 17.2dBf (12dB) Ext. modulation	L + R : 1kHz 67.5kHz devi.	99.1MHz	Stereo indicator	R101	Light on	Mode switch: STEREO
	2	Fig. 3	99.1MHz 16.2dBf (11dB) Ext. modulation	Pilot signal 19kHz 7.5kHz devi.				Light off	
VCO		Fig. 2	99.1MHz 1kHz, 75kHz devi. 65dBf (60dB)	—	99.1MHz	Frequency counter	R201	19kHz ± 10Hz	
Stereo distortion		Fig. 3	99.1MHz 65dBf (60dB) Ext. modulation	L or Rch. 1kHz	99.1MHz	Distortion analyzer	IF on the front end	Minimum	Don't turn more than ± 180°
		Fig. 3	99.1MHz 65dBf (60dB) Ext. modulation	Lch. 1kHz Rch. 1kHz	99.1MHz	Rch. AC voltmeter Lch. AC voltmeter	R202	Minimum Minimum	Maximum and same separation
Blend level		Fig. 3	99.1MHz 35.2dBf (30dB) 1kHz, 75kHz devi.	—	99.1MHz	Hi-blend indicator	R102	Light off	

Item	AM SG output	Tuned frequency	Output indicator	Adjustment point	Adjust for
		530kHz [522kHz] (531kHz)	Digital DC voltmeter	OSC on RF block	1.3V ± 0.1V
	600kHz (603kHz) 400Hz 30% mod. 60dB/m	600kHz (603kHz)	AC voltmeter	RF on RF block	Maximum
	1000kHz (999kHz) 400Hz 30% mod. 60dB/m	1000kHz (999kHz)	AC voltmeter	L152	Maximum
	Same as above	1000kHz (999kHz)	First signal indicator	R151	Light on

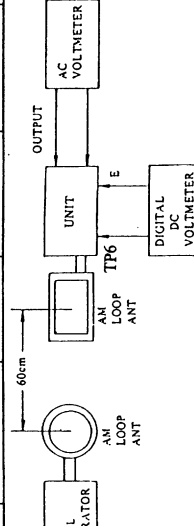

[] : 10kHz step model
() : W model
() : 9kHz step model

FM/AM tuner and selector switch pc board


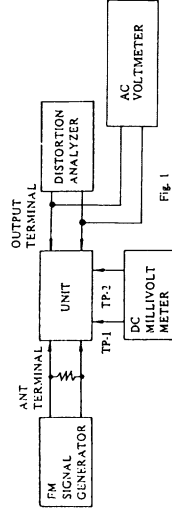


Fig. 1

 

Use the high impedance probe. (10:1)

Fig. 2

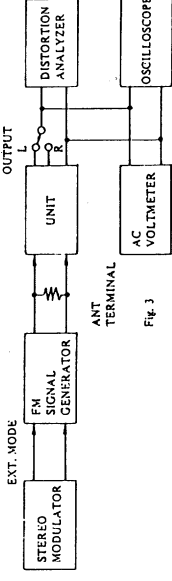


Fig. 3

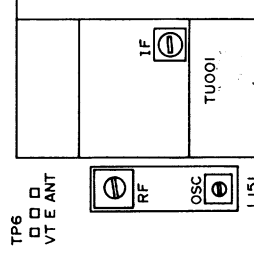


Fig. 1


Reference specifications
FM Tuned voltage

87.9MHz 2.0 ± 0.5V
107.9MHz 7.7 ± 0.5V (120V model)
87.5MHz 2.0 ± 0.5V
108.0MHz 7.7 ± 0.5V (Other models)

Auto stop level
AM: Less than 66dB/m
FM: Less than 17dBu

AM Tuned voltage


530kHz 1.3 ± 0.5V
1620kHz 8.0 ± 0.5V (120V model)
522kHz 1.3 ± 0.5V
1611kHz 8.0 ± 0.5V (Other models)

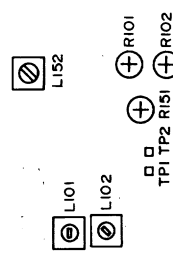

TP6
VT E ANT
RF
OSC
L151
L152
L101
L102
R101
R102
TP1 TP2 RI51
TP2

R201
R202
E TP4

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

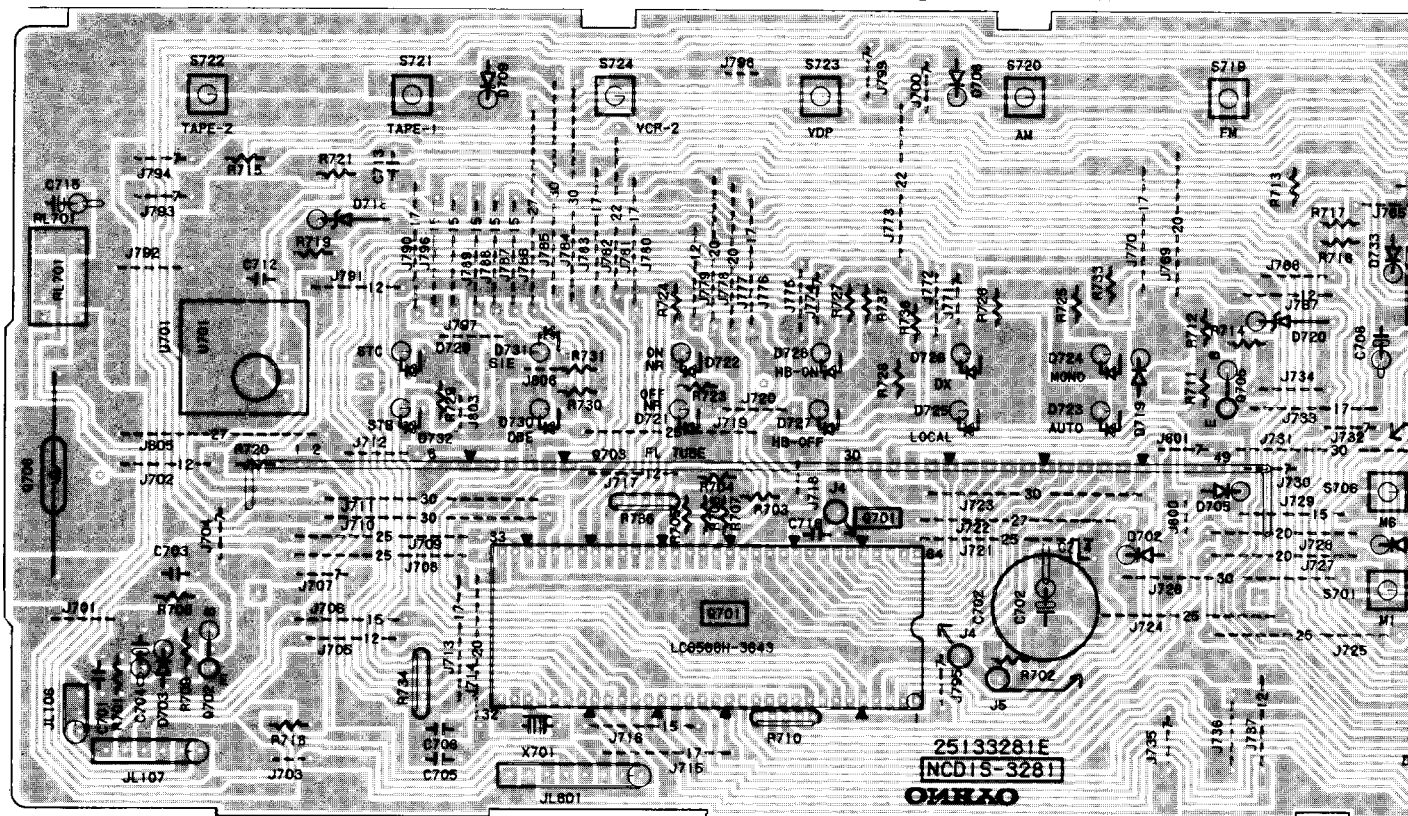


DISPLAY PC BOARD

PRINTED CIRCUIT BOARD-PARTS LIST


DISPLAY PC BOARD(NADIS-3281-3/3A/3B)

CIRCUIT NO.	PART NO.	DESCRIPTION
		D726,D728 D732
U701	24130001 or 24130003	GP1U501S or GP1U501XS
Q701	22240153	LC6568H-3643
Q704	22240243	LC6527C-3987
		Transistors
Q702	2211255, 2212485 or 2210746	2SC1815(GR), JC501(Q) or 2SC945A(P)
Q705	2211455, 2212495 or 2210803	2SA1015(GR), JA101(Q) or 2SA733(P)
		Fluorescent tube
Q703	212054	7-BT-95GK
		Lamp
Q706	210064B	6.3V,0.25A
		Diodes
D702-D715	223163	1SS133
D716,D717	223163	1SS133 <G/W>
D718	224650822, 224150822 or 224450822	HZ8.2EB2, 05AZ8.2Y or MTZ8.2B
D719	223163	1SS133
D720	224150562, 224650562 or 224450562	05AZ5.6Y, HZ5.6EB2 or MTZ5.6B
D733-D736	223163	1SS133
		L.E.Ds
D721,D723	225137CG,	SEL2413ECG.
D725,D727	225137DG or	SEL2413EDG or
D729-D731	224137DY	SEL2413EDY
D722,D724	225142	SEL2913K
		225142 225141 SEL2913K SEL2213C
		Osc. elements
X701	3010099	CSA4.00MG,Ceramic
X702	3010150	CST4.00MGW
		Capacitors
C702	3020027 or 3000051	0.047F,5.5V or 0.047F,5.5V,Super
C704	354780109	1 μ F,50V,Elect.
C707,C715	354782299	0.22 μ F,50V,Elect.
C708	354741009	10 μ F,16V,Elect.
		Resistors
R710	49163473404	47kohm $\times$ 4, 1/10W,Network
R734,R735	49163104404	100kohm $\times$ 4, 1/10W,Network
		Switches
S701-S724	25035548	NPS-111-S510
S725	25065286	NSS-22112,Band <W>
		Relay
RL701	25065298	NRL-1P1A-DC12-40
		Holder
	27190643	L.E.D
		SPEAKER SWITCH PC BOARD(NASW-3278-3)
		CIRCUIT NO. PART NO. DESCRIPTION
R549,R550	442520474	4.7ohm,1/2W,Metal oxide film resistors
R551,R552	441623914	390ohm,1W,Metal oxide film resis- tors
S502,S503	25035517	NPS-222-L479,Push switch
P503	25045187	HLJ-0541-01-010,Stereo headphone terminal
L501,L502	231001	S-1.3B,Coils

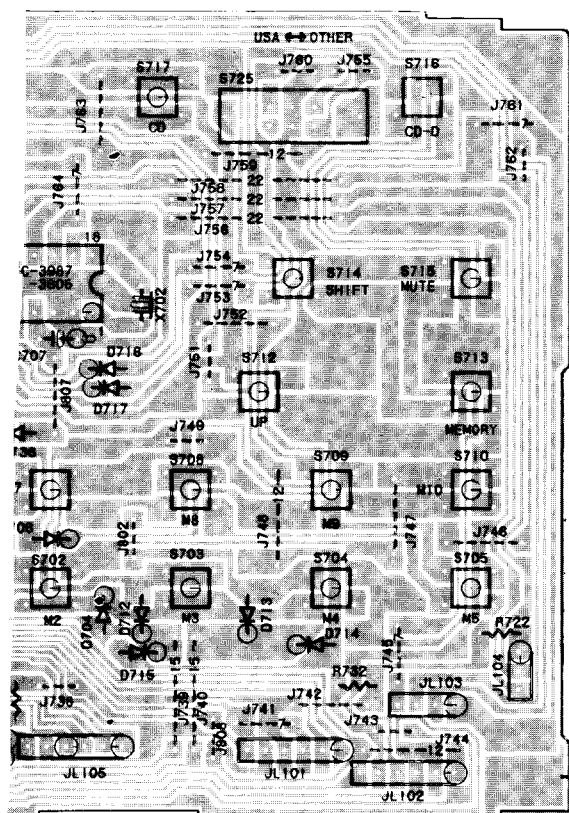


PREAMPLIFIER PC BOARD(NAAF-3283-3/3A)


CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q352	222579 or	NJM4560D or
	222570	NJM4560DX
Q353	222465 or	NJM4558DX
	222502	NJM4558D or
Transistors		
Q851	2212600	DTA124ES
Q853	221281	DTC114YS
Diodes		
D351	224650623,	HZ6.2EB3,
	224450623 or	MTZ6.2C or
	224150623	05AZ6.2Z
D352,D353	223163	1SS133
Capacitors		
C359,C360	354780229	2.2 μ F,50V,Elect.
C363,C364	354741009	10 μ F,16V,Elect.
C367,C368	352983396	0.33 μ F,50V,Non-polar elect.
C373,C374	354780229	2.2 μ F,50V,Elect.
C375-C378	354781099	0.1 μ F,50V,Elect.
C389	354780229	2.2 μ F,50V,Elect.
C390,C392	354781099	0.1 μ F,50V,Elect.
C393,C851	354780339	3.3 μ F,50V,Elect.
Resistors		
R371,R372	5104216	N14RLC50KC22Z, Variable,Bass
R379,R380	5104216	N14RLC50KC22Z, Variable,Treble
R451	5104225	N11RGLC250KW22Z, Variable,Bal- ance
Switch		
S354	25035590	NPS-122-L552

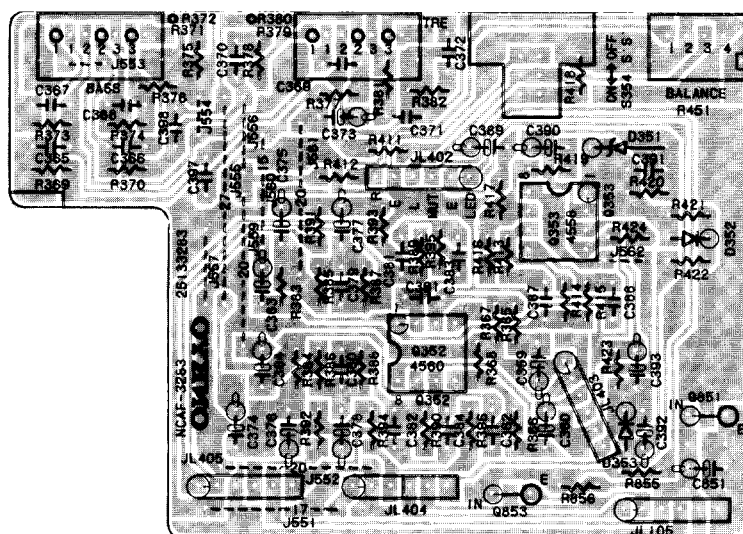

PREAMPLIFIER PC BOARD

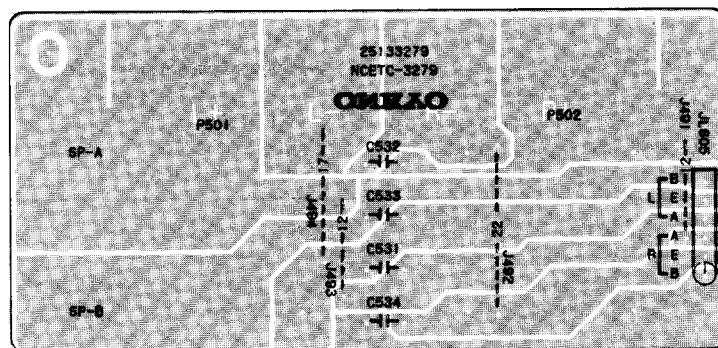

SPEAKER TERMINAL PC BOARD

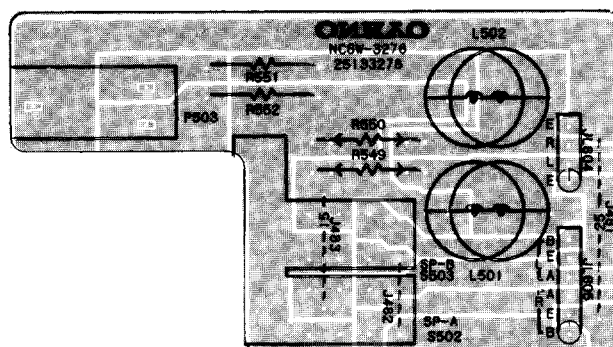

SPEAKER SWITCH PC BOARD


SPEAKER TERMINAL PC BOARD(NAETC-3279-3/3A)

CIRCUIT NO.	PART NO.	DESCRIPTION
P501,P502	25060110 or	NTM-4PDMN 44 or
	25060039	NTM-4PDMN 10, Speaker terminal:

NOTE: <D>: Only 120V model
 <G>: Only 220V/240V models
 <W>: Only Worldwide model

SCHEMATIC DIAGRAM

— AMPLIFIER SECTION —
— 120V MODEL —

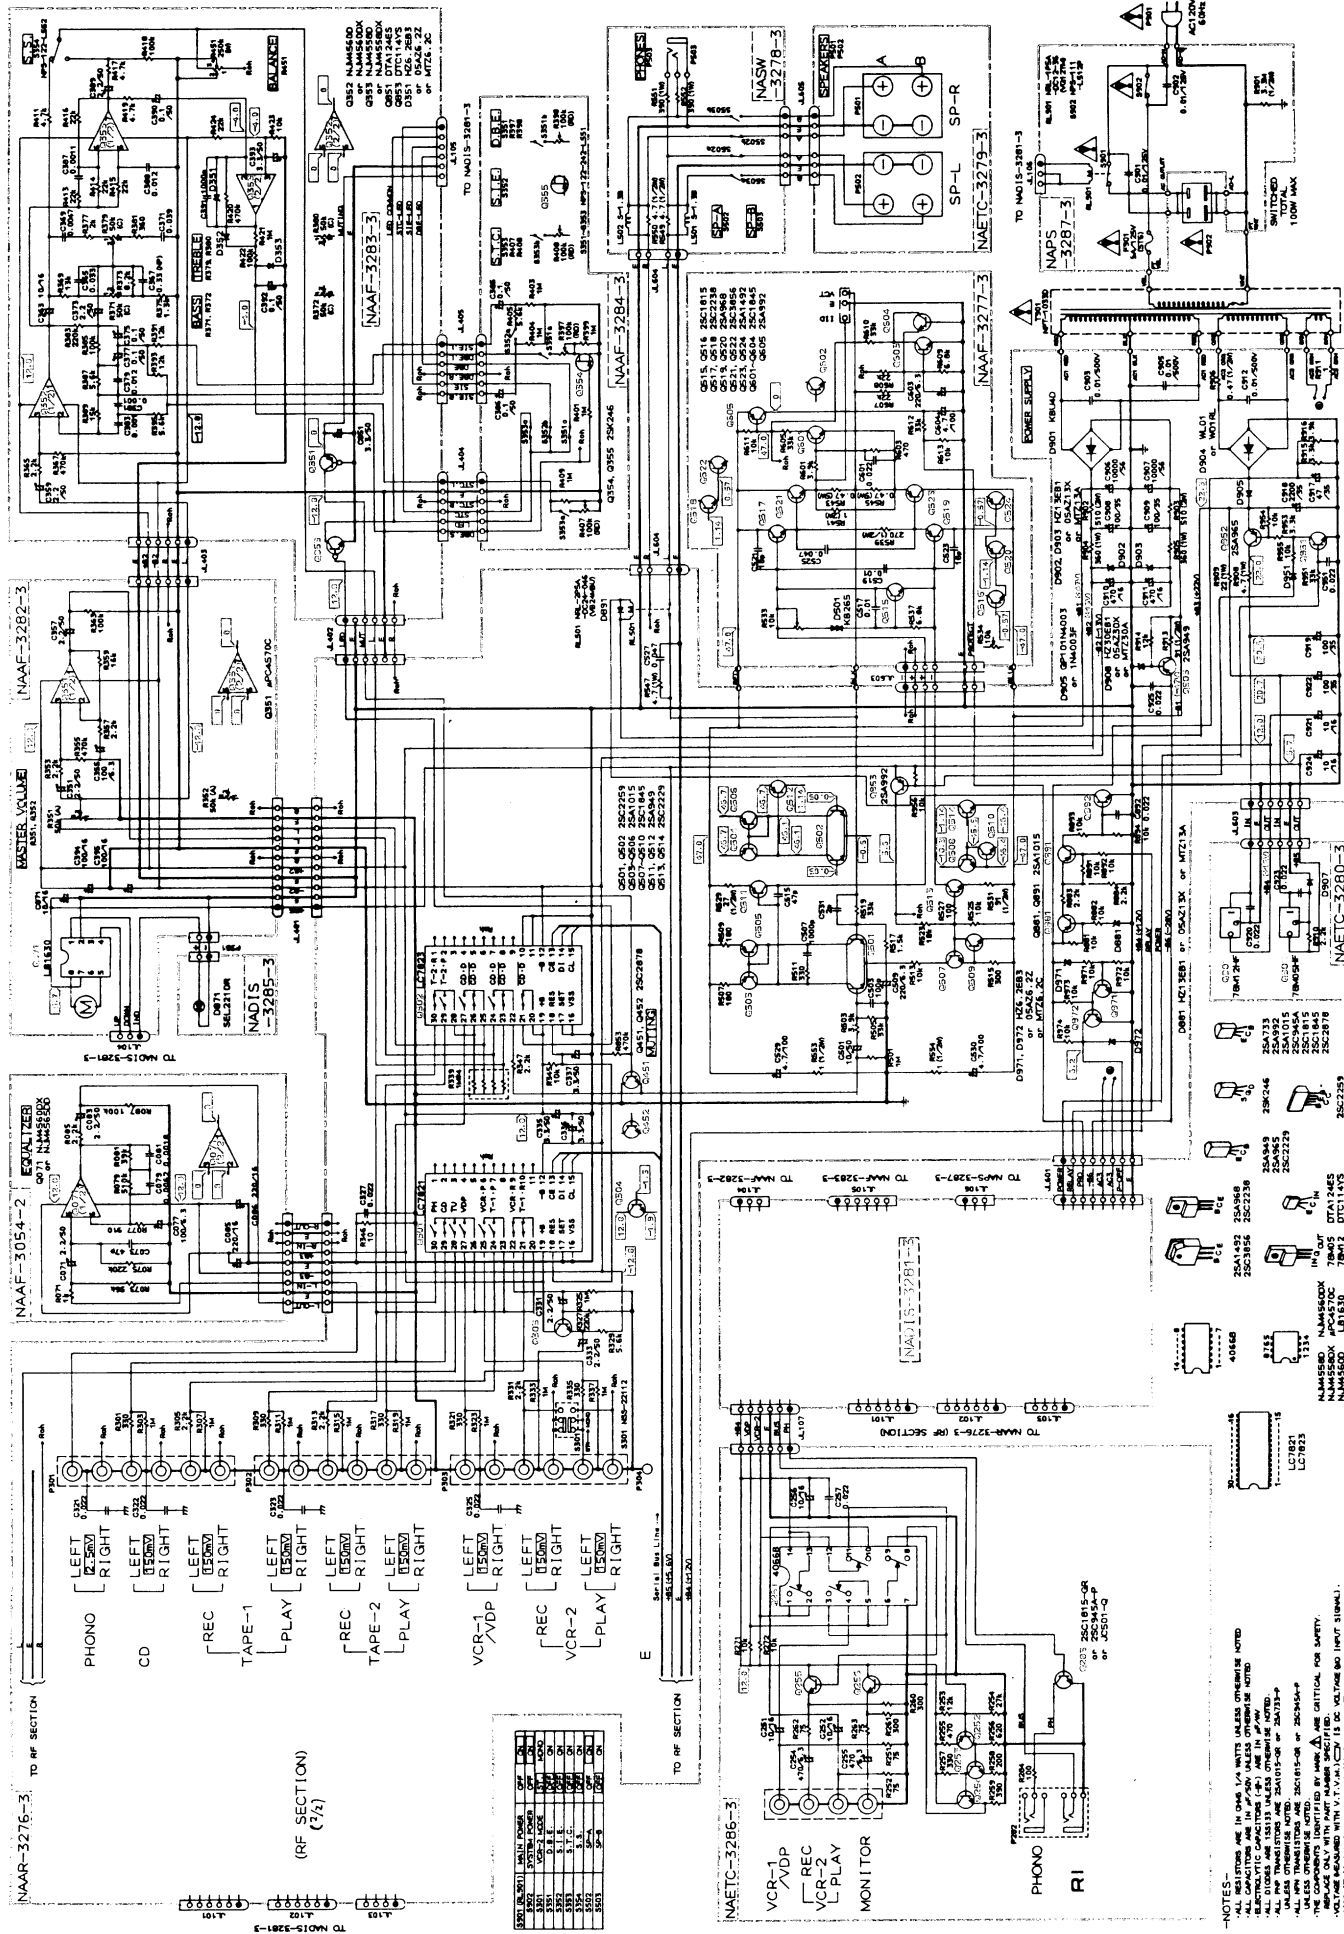

NOTES:
— ALL RESISTORS ARE IN OHMS UNLESS OTHERWISE NOTED
— ELECTROLYTIC CAPACITORS (E) ARE IN MICROFARADS
— ALL VOLTAGE RATINGS ARE IN VOLTS UNLESS OTHERWISE NOTED
— ALL CURRENT RATINGS ARE IN AMPS UNLESS OTHERWISE NOTED
— THE CATHODE IDENTIFICATION BY NUMBER IS CRITICAL FOR SAFETY.
— VOLUME IS SUBJECT TO CHANGE FOR IMPROVEMENT.

ONKYO CORPORATION


PRINTED CIRCUIT BOARD-PARTS LIST

FM/AM TUNER AND SELECTOR CIRCUIT PC BOARD(NAAR
-3276-3/3A/3B)

CIRCUIT NO.	PART NO.	DESCRIPTION
TU001	240070	TFFG1U116A <D>
	240081	TFFG3E141 <G/W>
ICs		
Q104	22240039	LA1266
Q201	222678	μ PC1161C3
Q301	22240079	LC7821
Q302	22240158	LC7823
Q731	22240090	LM7001
Transistors		
Q101	2212195	2SK241(GR) <G/W>
Q102	2211723	2SC1923(O)
Q103	2211723	2SC1923(O) <G/W>
Q105	2211255 or	2SC1815(GR) or
	2210746	2SC945A(P)
Q106,Q207	2211455	2SA1015(GR)
Q107	2212600	DTA124ES
Q202-Q204	2211945	2SK246(GR)
Q205,Q206	2211705 or	2SD655(E) or
	2212794	2SD1468(R)
Q303,Q304	2211255 or	2SC1815(GR) or
	2210746	2SC945A(P)
Q451,Q452	2212285 or	2SC2878(A) or
	2212286	2SC2878(B)
Q501,Q502	2211371 or	2SC2259(O-001) or
	2211372	2SC2259(O-002)
Q503-Q506	2211455	2SA1015(GR)
Q507-Q510	2211732 or	2SC1845(F) or
	2211733	2SC1845(E)
Q511,Q512	2211353 or	2SA949(O) or
	2211354	2SA949(Y)
Q513,Q514	2211633 or	2SC2229(O) or
	2211634	2SC2229(Y)
Q732	2212294	2SK108(D)
Q733	2211255 or	2SC1815(GR) or
Q802,Q892	2210746	2SC945A(P)
Q881,Q891	2211455	2SA1015(GR)
Q903	2211353 or	2SA949(O) or
	2211354	2SA949(Y)
Q951,Q971	2211255 or	2SC1815(GR) or
Q972	2210746	2SC945A(P)
Q952	2211643 or	2SA965(O) or
	2211644	2SA965(Y)
Q953	2211792 or	2SA992(F) or
	2211793	2SA992(E)
Diodes		
D101,D102	223132	1K60
D804	223163	1SS133
D891	223163	1SS133
D901	22380024	KBU4D
D902,D903	224151301,	05AZ13X.
	224451301 or	MTZ13A or
D881	224651301	HZ13EB1
D904	223862 or	WL01 or
	223890	W01RL
D905	223880 or	GP101N4003 or
	223896	1N4003F
D908	224153001,	05AZ30X.
	224453001 or	MTZ30A or
	224653001	HZ30EB1
D951	223163	1SS133
D971,D972	224650623,	HZ6.2EB3,
	224450623 or	MTZ6.2C or
	224150623	05AZ6.2Z
Transformers		
L101	233389	NFIF-4066

CIRCUIT NO.	PART NO.	DESCRIPTION
L102	233390	NFIF-4067
L152	232139	NMIF-4062
Coils		
L103	233383	NMC-6070 <G/W>
L104	233105	NCH-1005
L201,L202	233355A	NMC-4059
RF block		
L151	232148	NMRF-7050
Ceramic filters		
X101,X102	3010071	SFE10.7MA5 (RED) <D>
X101-X103	3010137	SFE10.7MMK <G/W>
X151	3010123	SFZ450JL
X152	3010076	BFU450C
X'tal		
X731	3010141	XTL-7.2M
Capacitors		
C001	354741009	10 μ F,16V,Elect.
C105	354742209	22 μ F,16V,Elect.
C106	354784799	0.47 μ F,50V,Elect.
C110	354741019	100 μ F,16V,Elect.
C111	354780109	1 μ F,50V,Elect.
C116	354780229	2.2 μ F,50V,Elect.
C151	354780339	3.3 μ F,50V,Elect.
C152	354741009	10 μ F,16V,Elect.
C153	354780479	4.7 μ F,50V,Elect.
C154,C157	354741009	10 μ F,16V,Elect.
C159	354782299	0.22 μ F,50V,Elect.
C201	354742209	22 μ F,16V,Elect.
C204	354744719	470 μ F,16V,Elect.
C207,C208	354741009	10 μ F,16V,Elect.
C209,C210	354780229	2.2 μ F,50V,Elect.
C215	354782299	0.22 μ F,50V,Elect.
C216	354780109	1 μ F,50V,Elect.
C217	354780339	3.3 μ F,50V,Elect.
C218	370134714	470pF $\pm$ 5%,100V,APS
C221	354784799	0.47 μ F,50V,Elect.
C331-C334	354780229	2.2 μ F,50V,Elect.
C335-C337	354780339	3.3 μ F,50V,Elect.
C501,C502	354781009	10 μ F,50V,Elect.
C509,C510	354722219	220 μ F, 6.3V,Elect.
C529,C530	354790479	4.7 μ F, 100V,Elect.
C733	354721019	100 μ F, 6.3V,Elect.
C737	354780479	4.7 μ F,50V,Elect.
C738	354782299	0.22 μ F,50V,Elect.
C806	354780109	1 μ F,50V,Elect.
C903,C905	335251039	0.01 μ F,500V,Ceramic
C906,C907	3504224	10000 μ F,56V,Elect.
C908,C909	354761019	100 μ F,35V,Elect.
C910,C911	354744719	470 μ F,16V,Elect.
C912	335251039	0.01 μ F,500V,Ceramic
C917	354764709	47 μ F,35V,Elect.
C918	354762229	2200 μ F,35V,Elect.
C919	354761019	100 μ F,35V,Elect.
C921,C924	354741009	10 μ F,16V,Elect.
C922	354761019	100 μ F,35V,Elect.
Resistors		
R101	5210067	N06HR33KBD,Semi-fixed
R102	5210072	N06HR220KBD,Semi-fixed
R151	5210064	N06HR10KBD,Semi-fixed
R201	5210062	N06HR4.7KBD,Semi-fixed
R202	5210072	N06HR220KBD,Semi-fixed
R339,R340	49163105404	1Mohm $\times$ 4,1/10W,Network
R529,R530	442522704	27ohm,1/2W,Metal oxide film
R531,R532	442529104	91ohm,1/2W,Metal oxide film

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

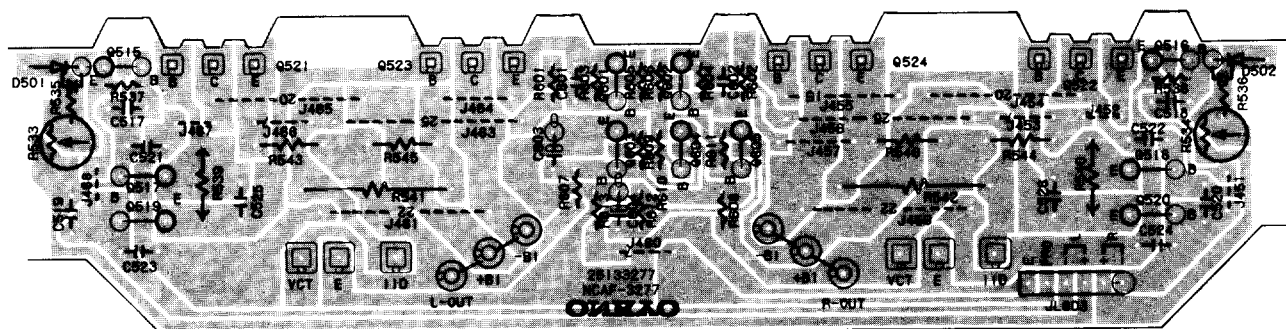

POWER AMPLIFIER PC BOARD

CIRCUIT NO.	PART NO.	DESCRIPTION
R547, R548	441620474	4.7ohm, 1W, Metal oxide film
R553, R554	442520104	1ohm, 1/2W, Metal oxide film
R902, R903	441725114	510ohm, 2W, Metal oxide film
R904, R905	441623614	360ohm, 1W, Metal oxide film <D>
	441623314	330ohm, 1W, Metal oxide film <G/W>
R906	442524794	0.47ohm, 1/2W, Metal oxide film
R908	441620474	4.7ohm, 1W, Metal oxide film
R909	441622204	22ohm, 1W, Metal oxide film
R913	442529104	91ohm, 1/2W, Metal oxide film
RL501	25065339	NRL-2P5A-DC24-046
	Terminals	
P001	25060085	NTM-4PDMN29, Antenna <D>
	25060087	NTM-2PDMN31, Antenna <G/W>
P301-P303	25045213	NPJ-6PDBL-92
	Switch	
S301	25065286	NPS-22112, VCR mode
	Sockets	
P101, P102	25050270	NSCT-6P98
P402, P602	25050270	NSCT-6P98
P103	25050268	NSCT-4P96
P401	25050275	NSCT-11P103
P601	25050272	NSCT-8P100
JL406	25050269	NSCT-5P97 <G/W>
	Radiator	
	27160166	

NOTE: <D>: Only 120V model
 <G>: Only 220V model
 <W>: Only Worldwide model

POWER AMPLIFIER PC BOARD(NAAF-3277-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q515, Q516	2211255	2SC1815(GR)
Q517, Q518	2200863 or 2200864	2SC2238(O) or 2SC2238(Y)
Q519, Q520	2200873 or 2200874	2SA968(O) or 2SA968(Y)
Q521, Q522 ☆	2201653, 2201654 or 2201655	2SC3856(O), 2SC3856(Y) or 2SC3856(P)
Q523, Q524 ☆	2201663, 2201664 or 2201665	2SA1492(O), 2SA1492(Y) or 2SA1492(P)


CAUTION: Replacement for transistor of mark ☆, if necessary, must be made from the same beta group (H_{FE}) as the original type.

Ex. 2SC3856(O) 2SA1492(O)

Same beta group

Q601-Q604	2211732 or 2211733	2SC1845(F) or 2SC1845(E)
Q605	2211792 or 2211793	2SA992(F) or 2SA992(E)
	Diodes	
D501, D502	4000120	KB265
	Capacitors	
C603	354722219	220 μ F, 6.3V, Elect.
C604	354790479	4.7 μ F, 100V, Elect.
	Resistors	
R533, R534	5210064	N06HR10KBD, Semi-fixed
R539, R540	442522714	270ohm, 1/2W, Metal oxide film
R541, R542	441720104	1ohm, 2W, Metal oxide film
R543-R546	4000080 or 4500022	0.47ohm, 5W, Metal plate
	Terminals	
	25060118	NTM-1S52, For leg of power transistor

- 120V MODEL -

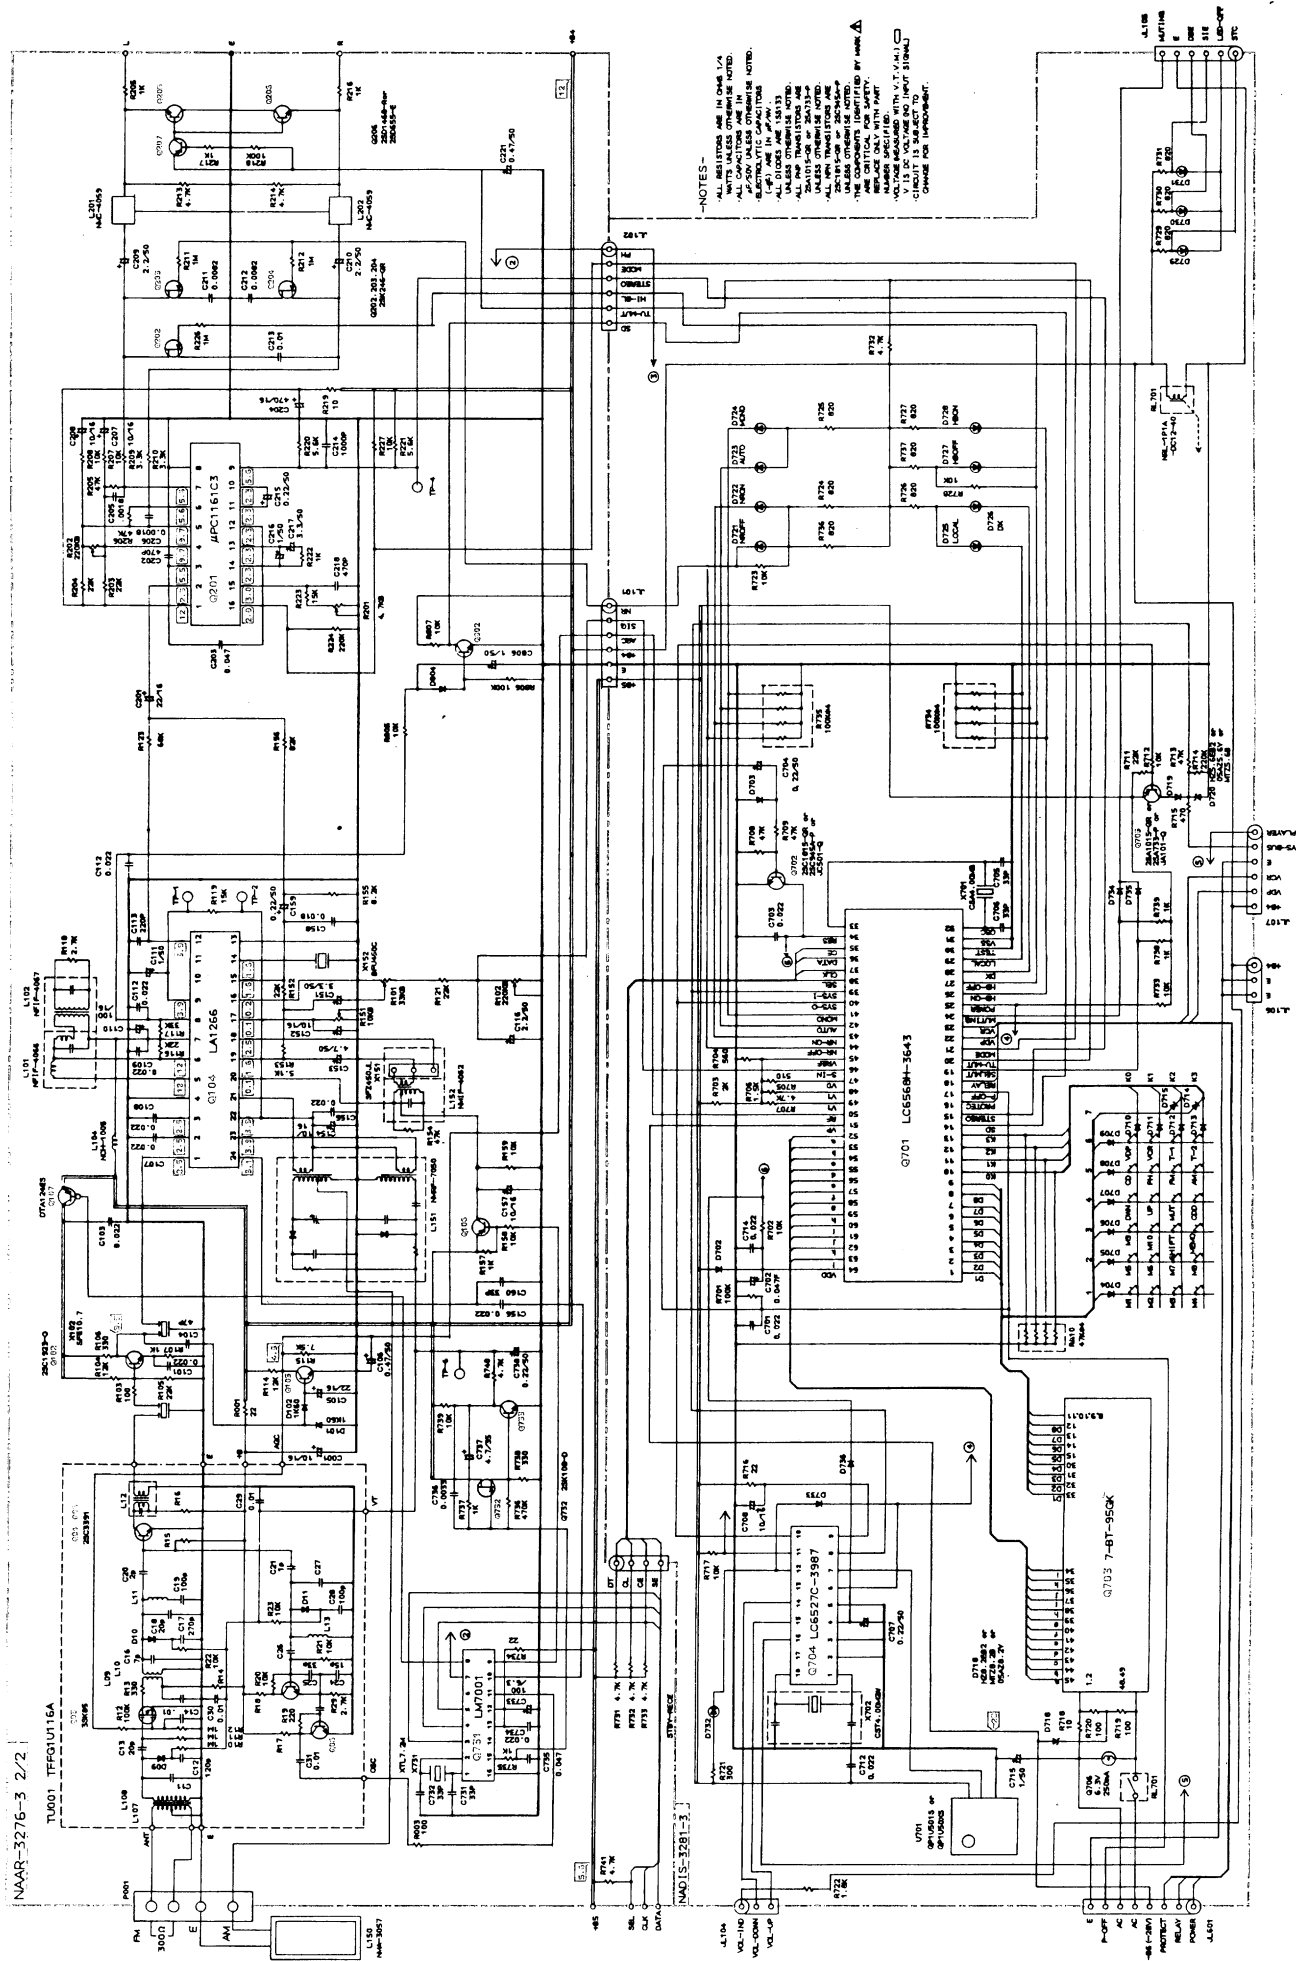

ALL RESISTORS ARE IN OHMS 1/4
UNLESS OTHERWISE NOTED.
ALL CAPACITORS ARE IN
PICOFARAD CAPACITORS
ELECTROLYTIC CAPACITORS
(-E) ARE IN μ FARAD
UNLESS OTHERWISE NOTED.
ALL PNP TRANSISTORS ARE
2N4015-50E OR 2N4015-50
UNLESS OTHERWISE NOTED.
ALL NPN TRANSISTORS ARE
2N4015-50E OR 2N4015-50
UNLESS OTHERWISE NOTED.
THE COMPONENTS IDENTIFIED BY MARK Δ
ARE CRITICAL FOR SAFETY.
ALL PARTS MUST BE
REPLACED ONLY WITH PART
NUMBERED WITH V.T.V.M. $\square$
V IS DC VOLTAGE AND INPUT SIGNAL
C IS CURRENT IS SUBJECT TO —

PRINTED CIRCUIT BOARD-PARTS LIST

VIDEO TERMINAL PC BOARD(NAETC-3286-3/3A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q251	222840661	4066B
	Transistors	
Q252	2211455 or 2210803	2SA1015(GR) or 2SA733(P)
Q253-Q256	2211255 or 2210746	2SC1815(GR) or 2SC945A(P)
Q283	2212485, 2211255 or 2210746	JC501(Q), 2SC1815(GR) or 2SC945A(P)<D>
	Capacitors	
C251, C252	354741009	10 μ F,16V,Elect.
C254, C255	354724719	470 μ F,6.3V,Elect.
C256	354741009	10 μ F,16V,Elect.
	Terminals	
P251	25045216	NPJ-4PDBL94
P282	25045172	HSJ1003-01-020

VOLUME PC BOARD(NAAF-3282-3/NAAF-3574-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q351	22240050	μ PC4570C,IC
Q871	222963	LB1630,IC
C351, C352	354780229	2.2 μ F,50V,Elect. capacitors
C355, C356	354721019	100 μ F,6.3V, Elect. capacitors
C357, C358	354780229	2.2 μ F,50V,Elect. capacitors
C394, C395	354741019	100 μ F,16V,Elect. capacitors
C871	354741009	10 μ F,16V,Elect. capacitor
R351, R352	5104234	N16RGM50KA30F,Variable resistor, Volume<D>
R351, R352	5144009C	N16RGL50KA50KB30F, Variable resistor, Volume<G/W>
R431, R432		
P351	2000635A	NSAS-4P591,Socket
JL403	25050270	NSCT-6P98,Socket
JL104	25050267	NSCT-3P65 Socket <G/W>

VOLUME INDICATOR PC BOARD(NADIS-3285-3/NADIS-3575-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
D871	225241 or 225242	SEL2210R-C or SEL2210R-D,LED
	27190545	Holder,LED

CONST. VOLTAGE CIRCUIT PC BOARD(NAETC-3280-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q901	222780125	NEC 78M12HF,IC
Q902	222780055	NEC 78M05HF,IC
D907	223163	1SS133,Diode

SWITCH PC BOARD(NAAF-3284-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q354, Q355	2211945	2SK246(GR)
	Capacitors	
C385, C386	354781099	0.1 μ F,50V,Elect.
	Resistors	
R397, R398	6182003	N25LGL100KRD10Z,Variable,D.B.E
R407, R408	6182003	N25LGL100KRD10Z,Variable,S.T.C
	Switches	
S351-S353	25035589	NPS-122-242-L551

EQUALIZER AMPLIFIER PC BOARD(NAAF-3054-2/3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q071	22240191 or 222570	NJM4565DD or NJM4560DX
	Elect. capacitors	
C071, C072	354780229	2.2 μ F,50V
C077, C078	354721019	100 μ F,6.3V
C083, C084	354780229	2.2 μ F,50V
C085, C086	354742219	220 μ F,16V
	Plug	
P071	25055334	NPLG-9P317

POWER SUPPLY CIRCUIT PC BOARD(NAPS-3287-3/3A/3B)

CIRCUIT NO.	PART NO.	DESCRIPTION
C901, C902	3500065A	Δ DE7150FZ103PAC400V/125V, Capacitor IS
R901	431523355	Δ 3.3Mohm,1/2W,Solid resistor <D>
S902	25035550	Δ NPS-111-L512P,Power
RL901	25065269	Δ NRL-1P5A-DC12-36,Relay <D>
	25065248	Δ NRL-1P15A-DC12-29,Relay <G/W>
F901a	250113	Δ SN5051,Fuseholders <D/W>
F901	252050	Δ 5A(ST-6),Primary fuse <D/W>
F902a	25050065	Δ YSH-403T,Fuseholders <G/W>
F902	252075	Δ 2.5A-SE-EAK,Primary fuse <G/W>
F903a	25050065	Δ YSH-403T,Fuseholders <G>
F903	252075	Δ 2.5A-SE-EAK,Fuse for AC outlet <G>
	29360626-1	Label, fuse <D>

NOTE: <D>: Only 120V model
<G>: Only 220V model
<W>: Only Worldwide model

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

DISASSEMBLING PROCEDURES

1. Top cover


Remove a screw (3TTS+8BQ(BC)) holding the top cover and the back panel.
Remove the four screws (3TTS+8B(BC)) holding the back panel and the chassis.

2. Front panel

Remove the top cover.
Remove the six screws (3TTP+8P(BC)) holding the front panel and the front basket.


3. Power amplifier pc board

Remove the top cover.
Remove the five screws A.
Cut the binder B.

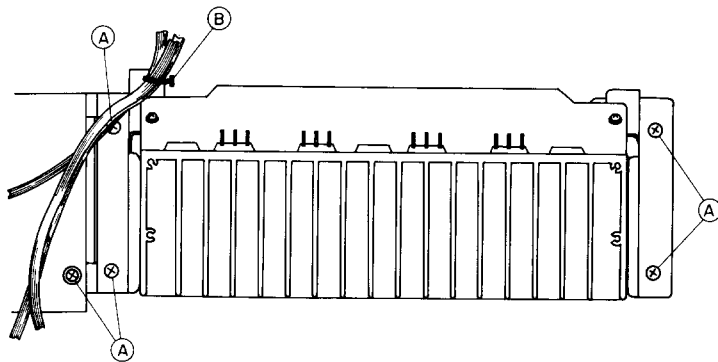


4. FM/AM tuner and selector switch pc board

Remove the top cover.
Remove the three screws C holding the pc board and chassis.
Remove the five screws D holding the back panel and chassis.
Remove the pc board from the two holders.

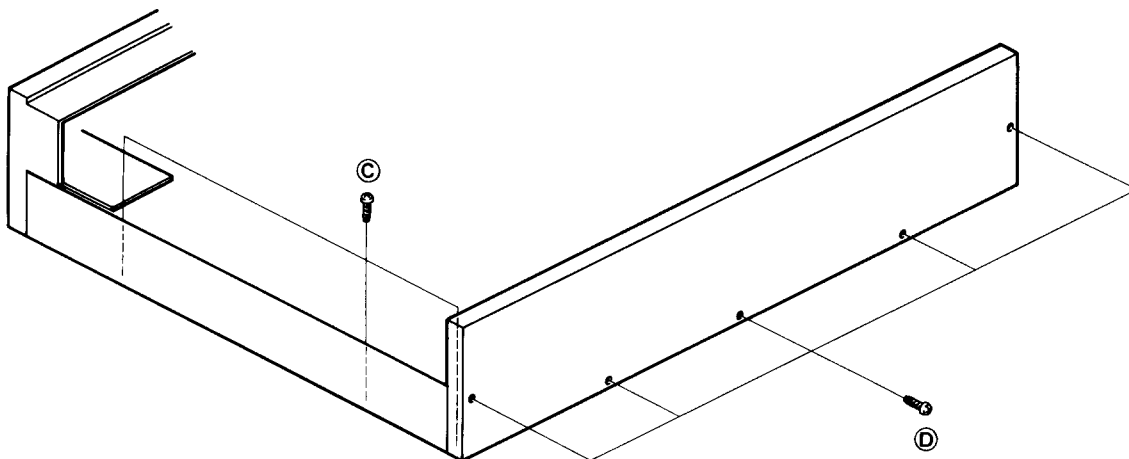

PACKING VIEW

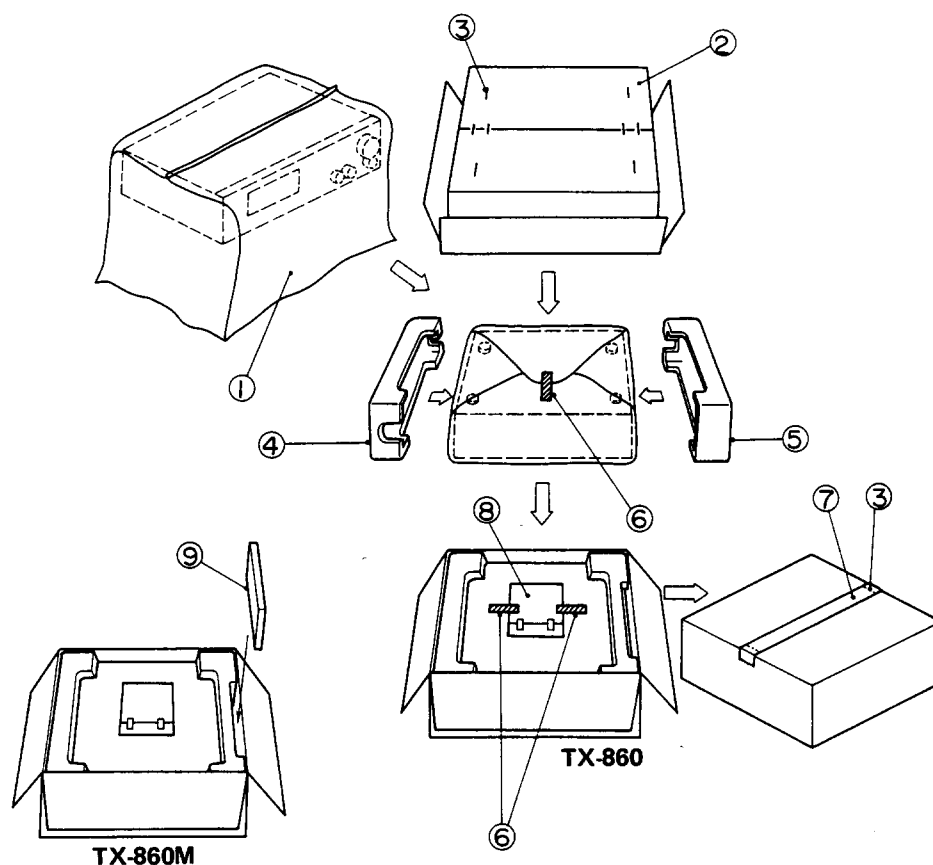

REF. NO.	PART NO.	DESCRIPTION
1	29100034	850×650mm, Poly-vinyl bag
2	29051911	Master carton box (TX-860)
	29051953	Master carton box (TX-860M)
3	282320	Sealing hook
4	29091263A	Pad R
5	29091262A	Pad L
6	261504	Adhesive tape
7	29110046	Damplon tape
8	Accessory bag ass'y	
	-120V model-	
	29341409	Instruction manual
	292064B	FM antenna
	232140	NMA-3057, AM loop antenna
	2010169	Connection cord for RI
	3010054	UM-3, Two batteries (TX-860)
		UM-3, Four batteries (TX-860M)
	24140151	RC-151S, Remote control transmitter (TX-860)
	29100097	250×350mm, Poly-vinyl bag
	29365019	Warranty card (U.S.A. model)
	29358002G	Service station list (U.S.A. model)
	-220V/240V models-	
	29341411	Instruction manual
	292092	FM antenna
	232140	NMA-3057, AM loop antenna
	2010169	Connection cord for RI
	3010124	UM-4, Two batteries
	24140149	RC-149S, Remote control transmitter
	29100097	250×350mm, Poly-vinyl bag
	25060123	FM adaptor (240V model)
	-Worldwide model-	
	29341411	Instruction manual
	292092	FM antenna
	232140	NMA-3057, AM loop antenna
	2010169	Connection cord for RI
	3010124	UM-4, Two batteries
	24140149	RC-149S, Remote control transmitter
	29100097	250×350mm, Poly-vinyl bag
	25060123	FM adaptor
	25055018	CV-K-1, Conversion plug
9	24140035	RC-AV20, Remote control transmitter (TX-860M)
	29341378	Instruction manual for remote control transmitter (Refer to the service manual of RC-AV20M)

ONKYO CORPORATION

International Division: No. 24 Mori Bldg., 23-5, Nishi-Shimbashi 3-chome, Minato-ku, TOKYO 105. JAPAN Telex: 242-3551 ONKYO J. Tel. 03-432-6981

ONKYO U.S.A CORPORATION

200 Williams Drive, Ramsey, N.J. 07446 Telex: 25-710-988-1033 Tel. 201-825-7950