

Service Manual

Portable Stereo CD System

COMPACT
disc
DIGITAL AUDIO

DIGITAL



Radio Cassette
RX-DS650

Color

(K)... Black Type

Area

Country Code	Area	Color
(E)	Continental Europe.	(K)
(EB)	Great Britain.	
(EG)	F.R. Germany & Italy.	

RX-FD55 MECHANISM SERIES (AR300)

■ SPECIFICATIONS

General:

Power Requirement: AC; 220V, 50Hz...(E, EG)
240V, 50Hz...(EB)
Battery; 15V (10 UM-1, R20/LR20 batteries)

Power Consumption: 45W (AC only)

Power Output: 60W...PMPO
30W...MPO

Speakers: 2-Woofer; 16cm (2.7Ω)
2-Tweeters; 2cm

Input: AUX; 200mV/47kΩ

Output: Speaker; 2.7~8Ω
Headphones; 32Ω, φ3.5

Dimensions (W×H×D): 702×229×218mm
Main unit; 349×229×217mm
Speaker box; 185×218×183mm

Weight: 6.8kg without batteries

CD Player Section:

Sampling Frequency: 44.1kHz

D-A Conversion: 16-bit linear

Beam Source: Semiconductor laser
(wavelength 780 nm)

No. of Channels: 2 channels, stereo

Frequency Response: 20~20,000Hz (+1/-1dB)

S/N Ratio: 75dB (1kHz)
Measure point: speaker out

Wow and Flutter: Unmeasurable

Radio Section:

Frequency Range: FM; 87.5~108MHz
LW; 148.5~285kHz
MW; 520~1610kHz

Intermediate Frequency: FM; 10.7MHz
AM; 459kHz

Sensitivity: FM; 4.5μV/50mW output
(-3dB Limit Sens)
LW; 224μV/m/50mW output
MW; 142μV/m/50mW output

Tape Section:

Frequency Response: 40~13,000Hz (with normal tape)
40~14,000Hz (with CrO₂ tape)

Tape Speed: 1-7/8 ips (4.8cm/s)

Track System: 4-track 2-channel, stereo

Recording System: AC bias


Erasing System: AC erase

Monitor System: Variable sound monitor

Weights and dimensions shown are approximate.
Design and specifications are subject to change without notice.

Panasonic

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

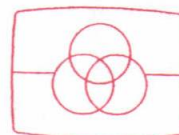

Free service manuals
Gratis schema's

Digitized by

www.freesevicemanuals.info

CONTENTS

	Page		Page
• PRECAUTION OF LASER DIODE	2	• BLOCK DIAGRAM	28~33
• LOCATION OF CONTROLS	3, 4	• MEASUREMENTS AND ADJUSTMENTS	34~40
• DISASSEMBLY INSTRUCTIONS	5~10	• INTERNAL CONNECTIONS OF LCD	40
• HANDLING PRECAUTIONS FOR OPTICAL PICKUP	11	• FUNCTIONS OF IC TERMINALS	41, 42
• INSTRUCTIONS FOR TRAVERSE OIL	11	• REPLACEMENT PARTS LIST	43~45, 49~54
• SCHEMATIC DIAGRAM	12~20	• CD PLAYER PARTS LOCATION	45
• PRINTED CIRCUIT BOARDS	21~24	• CABINET PARTS LOCATION	45, 46
• WIRING CONNECTION DIAGRAM	25, 26	• MECHANISM PARTS LOCATION	47, 48
• TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES	27		

PRECAUTION OF LASER DIODE

CAUTION: This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pick up lens.

Wave length: 780nm

Maximum output radiation power from pick up: 100μW/VDE

Laser radiation from the pick up lens is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

ACHTUNG: Dieses produkt enthält eine laserdiode. Im eingeschalteten zustand wird unsichtbare laserstrahlung von der lasereinheit abgestrahlt.


Wellenlänge: 780nm

Maximale strahlungsleistung der lasereinheit: 100μW/VDE


Die strahlung an der lasereinheit ist ungefährlich, wenn folgende punkte beachtet werden:

1. Die lasereinheit nicht zerlegen, da die strahlung an der freigelegten laserdiode gefährlich ist.
2. Den werkseitig justierten einstellregler der lasereinheit nicht verstellen.
3. Nicht mit optischen instrumenten in die fokussierlinse blicken.
4. Nicht über längere zeit in die fokussierlinse blicken.

ADVASEL: I dette a apparat anvendes laser.

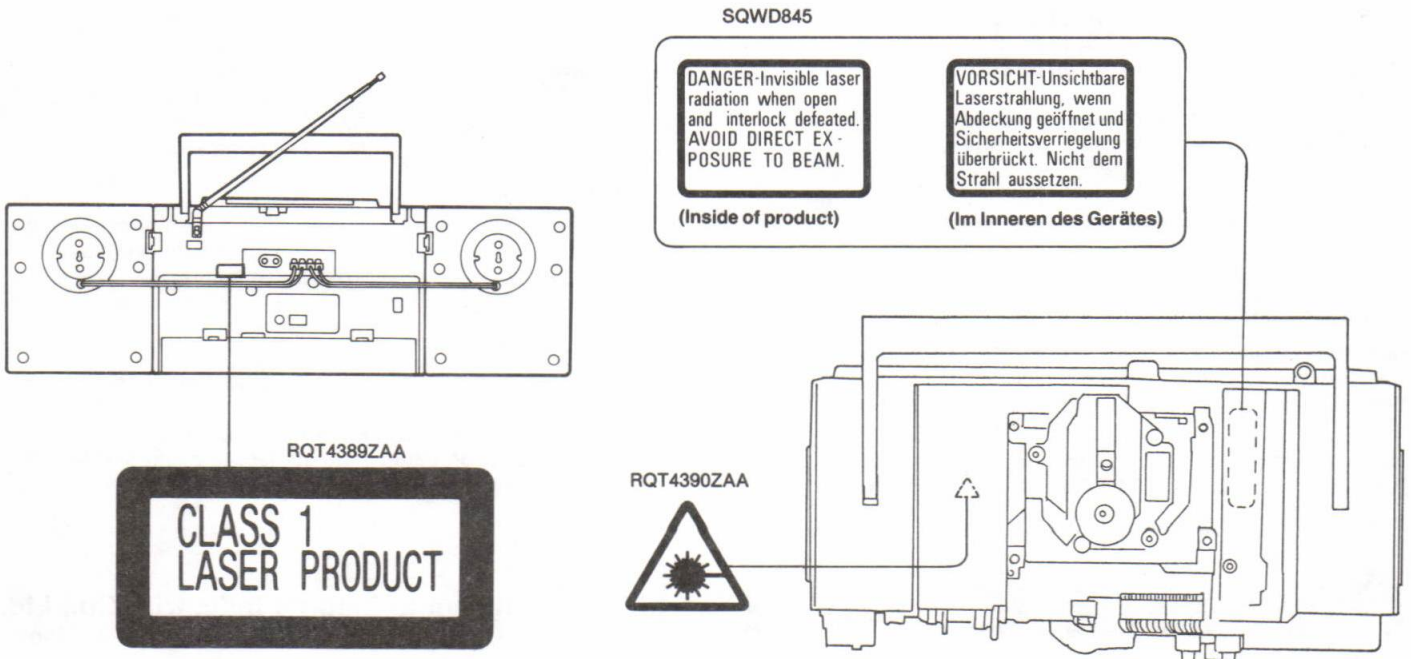


LOCATION OF CONTROLS

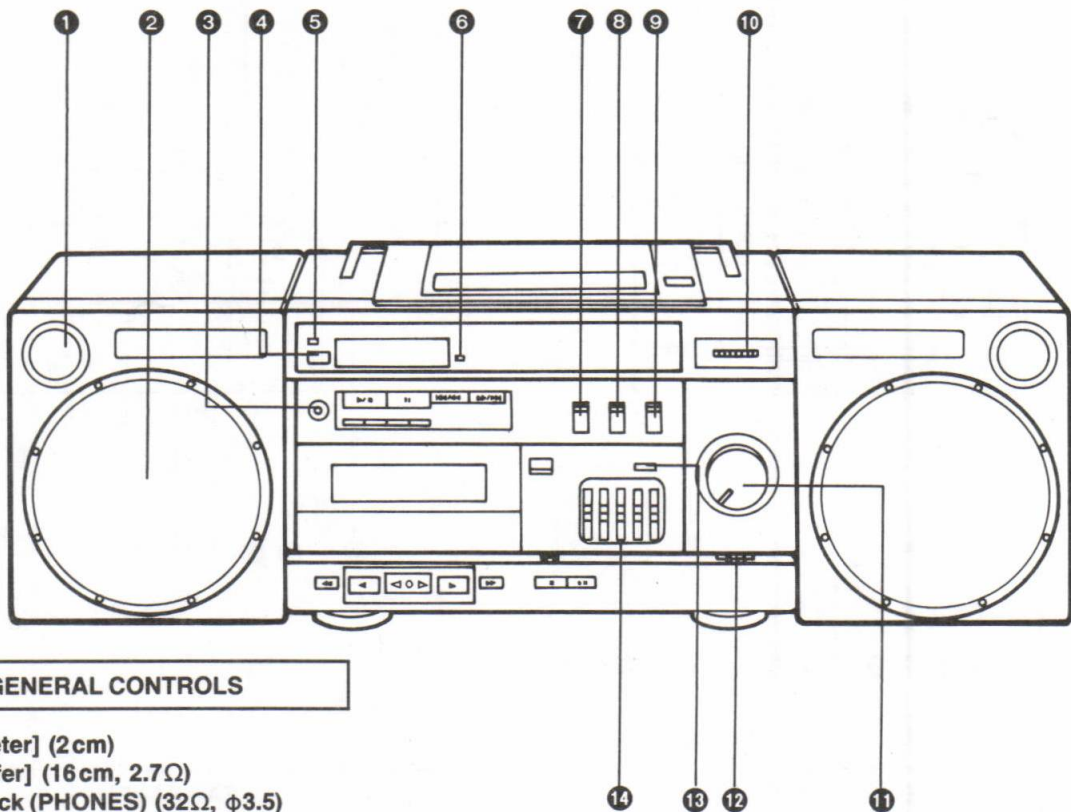

TUNER/GENERAL CONTROLS



- ① Speakers [Tweeter] (2 cm)
- ② Speakers [Woofer] (16 cm, 2.7Ω)
- ③ Headphones Jack (PHONES) (32Ω, φ3.5)
 - When using the headphones, avoid listening to sound at excessive volume levels, because it may injure your ears.
 - Speakers are automatically cut off when the headphones are connected.
- ④ Operation Switch (OPERATION)
- ⑤ Operation/Battery Check Indicator (OPR/BATT)
- ⑥ FM Stereo Indicator (FM STEREO)
- ⑦ Function Selector (SELECTOR)
- ⑧ FM Mode Selector/Beat Proof Switch (FM MODE/B.P)
- ⑨ Band Selector (BAND)
- ⑩ Tuning Control (TUNING)


- ⑪ Volume Control (VOLUME)
- ⑫ Balance Control (BALANCE)
- ⑬ XBS Switch (XBS)
- ⑭ Graphic Equalizer Controls (GRAPHIC EQUALIZER)

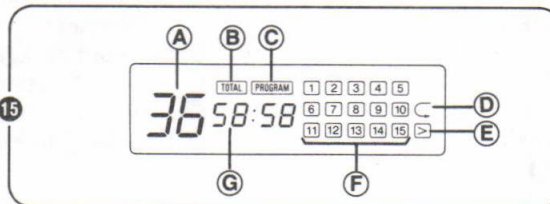

CD CONTROLS


- ⑮ Display Panel
 - A Track Display (TRACK)
 - B Total Indicator (TOTAL)
 - C Program Indicator (PROGRAM)
 - D Repeat Indicator (C)
 - E Multi Indicator (I>)
 - F Program Display
 - G Time Display
- ⑯ Disc Compartment
- ⑰ CD Eject Button (▲ [CD] EJECT)
- ⑱ Play/Stop Button (▶/■ PLAY/STOP)
- ⑲ Pause/Clear Button (|| PAUSE/CLEAR)
- ⑳ Skip/Search Button (◀◀/▶▶ SKIP/SEARCH)
- ㉑ Edit Pause Button (EDIT PAUSE)
- ㉒ Music Scan/Remaining Time Button (M.SCAN/REM TIME)
- ㉓ Memory/Recall Button (MEMORY/RECALL)
- ㉔ Repeat Button (REPEAT)

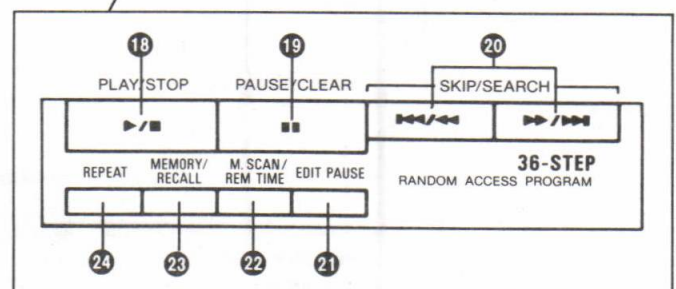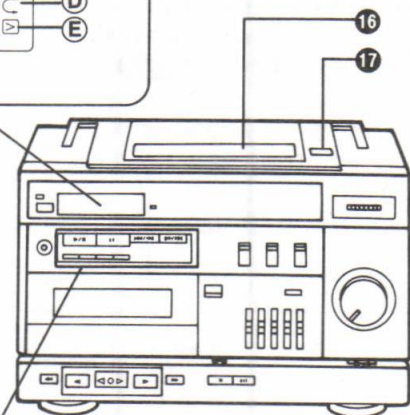

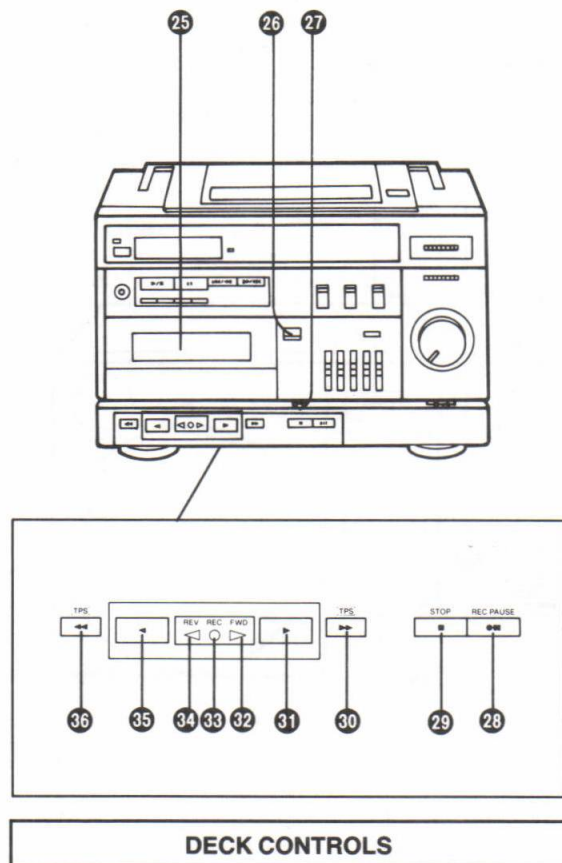

DECK CONTROLS



- 25 Cassette Compartment
- 26 Eject Button (▲ EJECT)
- 27 Reverse Mode Selector (REVERSE MODE)
- 28 Rec Pause Button (● || REC PAUSE)
- 29 Stop Button (■ STOP)
- 30 Fast/TPS Button (▶▶ TPS)
- 31 Forward Playback Button (▶)
- 32 Forward Indicator (FWD)
- 33 Recording Indicator (REC)
- 34 Reverse Indicator (REV)
- 35 Reverse Playback Button (◀)
- 36 Fast/TPS Button (◀◀ TPS)

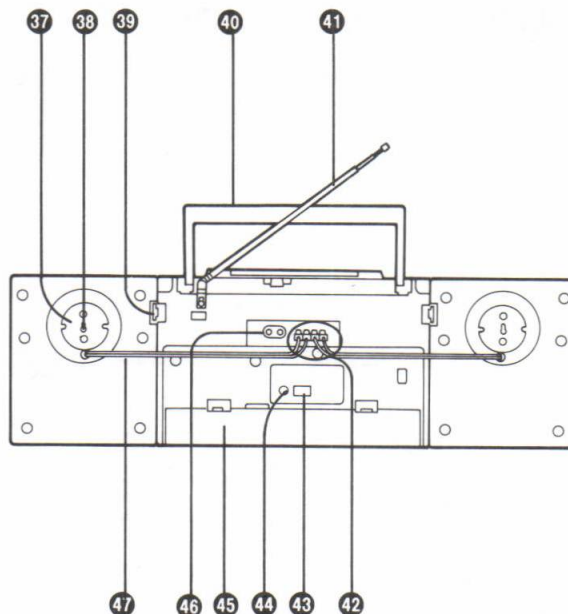

REAR PANEL


- 37 Speaker Cable Compartments
- 38 Speaker Wall Mounts
- 39 Speaker Release Levers (RELEASE)
- 40 Handle
- 41 Telescopic Antenna
- 42 Speaker Terminals [SPEAKER (IMP 2.7-8Ω)]
- 43 AC Socket (AC IN ~)
- 44 DC Input Jack [DC IN 13.2 V (12-15 V) ⊕ ⊖]
- 45 Battery Compartment
- 46 Auxiliary Input Jacks (AUX IN) (200mV/47kΩ)
- 47 Speaker Cables

Function Selector... "AUX"

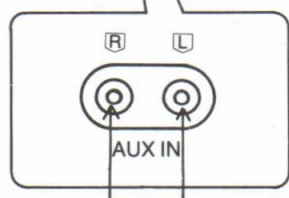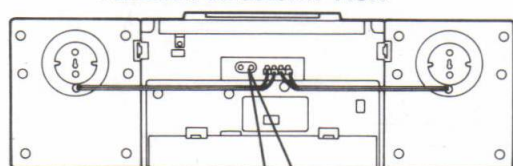

Connection cord
(not included)

Headphones
(EAH-S20 optional)

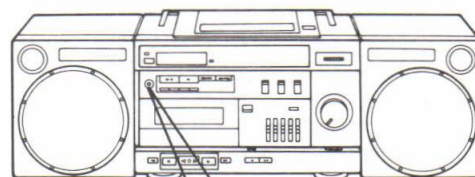

PHONES



Cassette Deck


DISASSEMBLY INSTRUCTIONS

Warning: This product uses a laser diodes. Refer to caution statements on page 2.

ACHTUNG:


- Die lasereinheit nicht zerlegen.
- Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

Ref. No. 1	Removal of the Front Cabinet
Procedure 1	

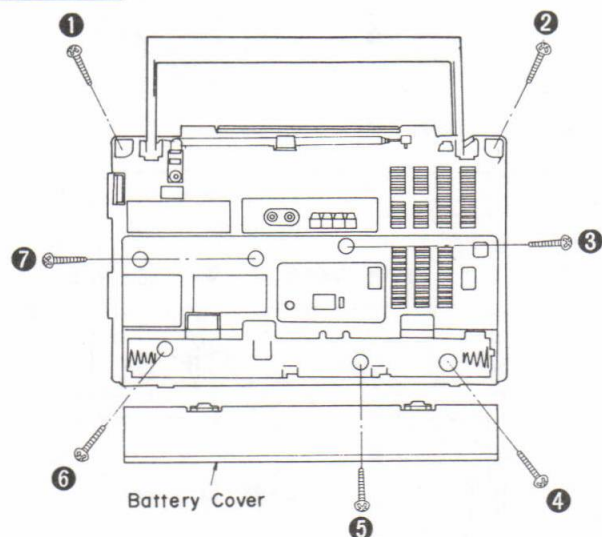

1. Remove the battery cover.
2. Remove the 7 screws (①~⑦).



Ref. No. 2	Removal of the Graphic Equalizer P.C.B.
Procedure 1→2	

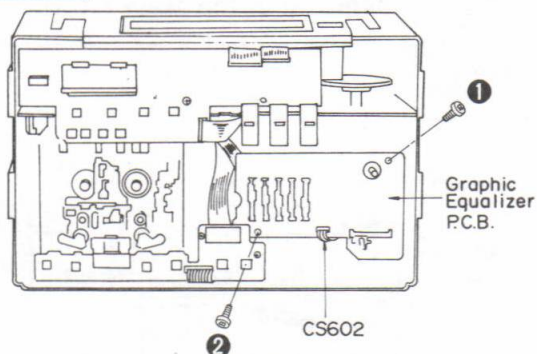


1. Remove the 2 screws (①, ②).
2. Remove the 1 flat cable (CS602), and then remove the graphic equalizer P.C.B.

How to remove the flat cable

Pull out the flat cable while pressing the connector.

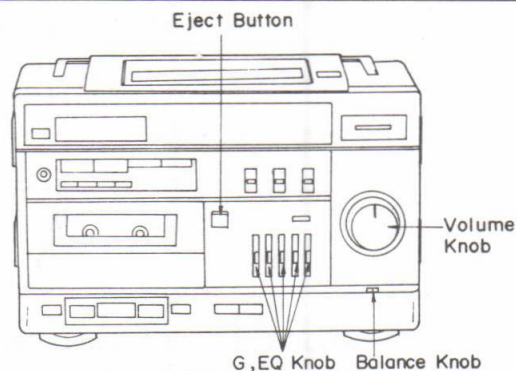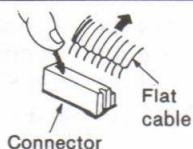


3. Remove the G. EQ knobs.
4. Remove the balance knob.
5. Remove the volume knob.
6. Push the eject button.






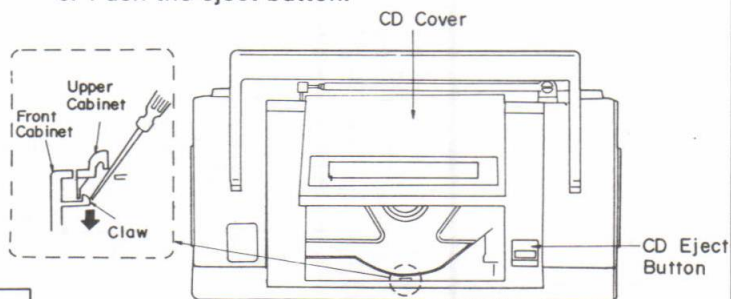








7. Push the CD eject button.
8. Push the claw, and then remove the front cabinet.







Ref. No. 3	Removal of the Mechanism Operation P.C.B.
Procedure 1→3	







1. Remove the 2 screws (①, ②).
2. Remove the 1 flat cable (CS601), and then remove the mechanism operation P.C.B.


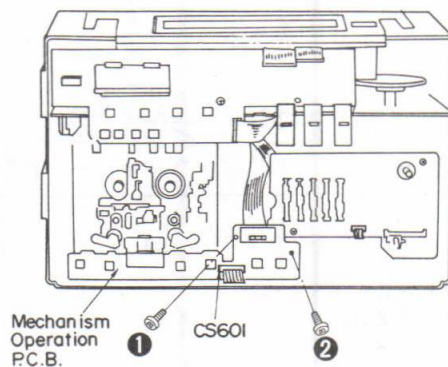


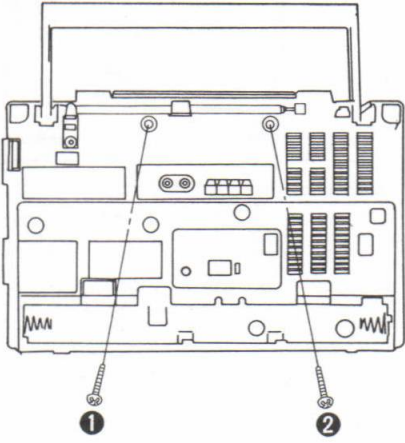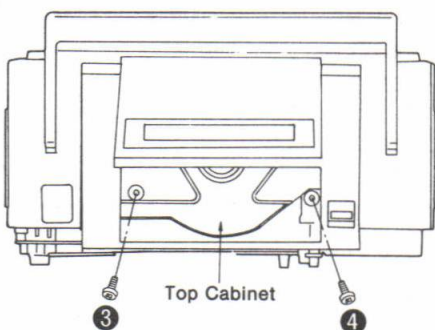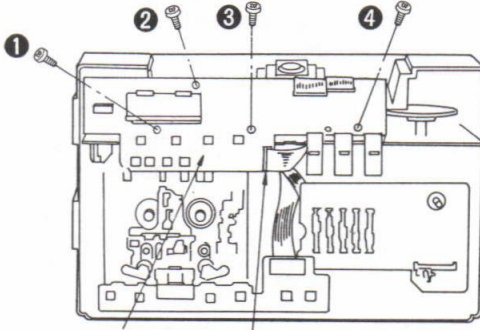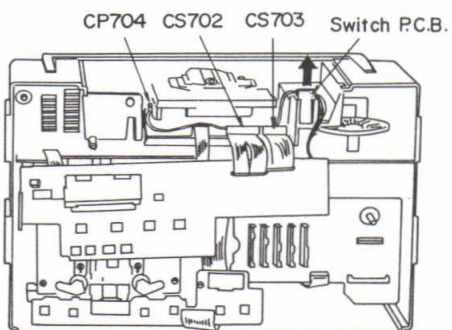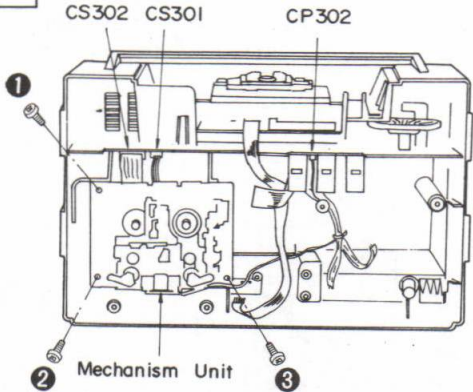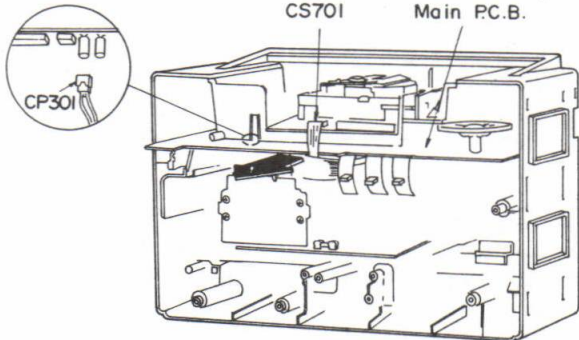Ref. No. 4	Removal of the Top Cabinet	Remove the 4 screws (①~④), and then remove the top cabinet.
Procedure 1→4		
Ref. No. 5	Removal of the CD Operation P.C.B. and CD Switch P.C.B.	
Procedure 1→4→5	 CD Operation P.C.B. CS603 1. Remove the 4 screws (①~④). 2. Remove the 3 flat cables (CS603, CS702, CS703), and then remove the CD operation P.C.B.	 3. Remove the 1 connector (CP704). 4. Remove the CD switch P.C.B. in the direction of the arrow.
Ref. No. 6	Removal of the Mechanism Unit	Ref. No. 7
Procedure 1→4→5→6	 1. Remove the 3 screws (①~③). 2. Remove the 2 flat cables (CS301, CS302). 3. Remove the 1 connector (CP302), and then remove the mechanism unit.	Procedure 1→4→5→6→7
		 1. Remove the 1 flat cable (CS701). 2. Remove the 1 connector (CP301). 3. Pull out the main P.C.B. in the direction of the arrow.

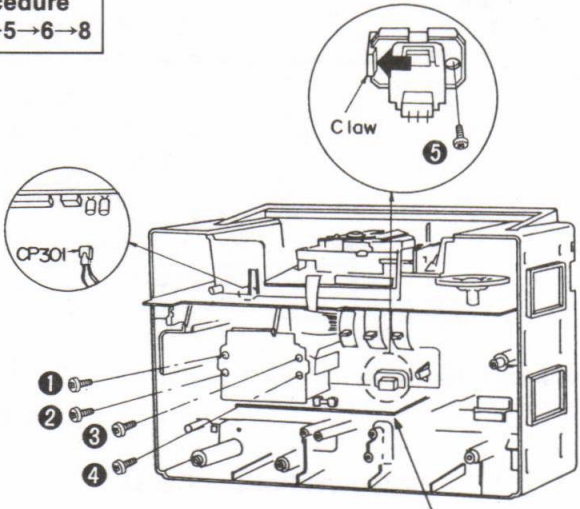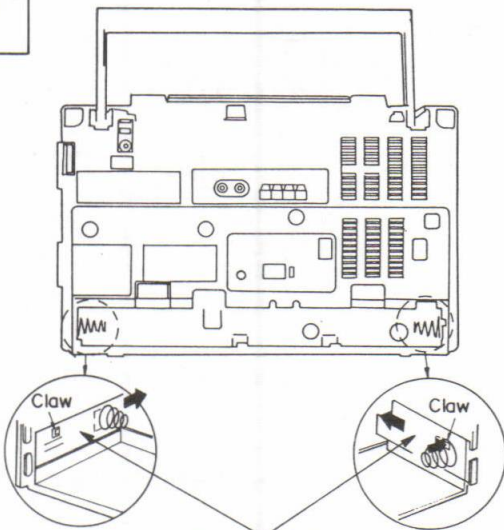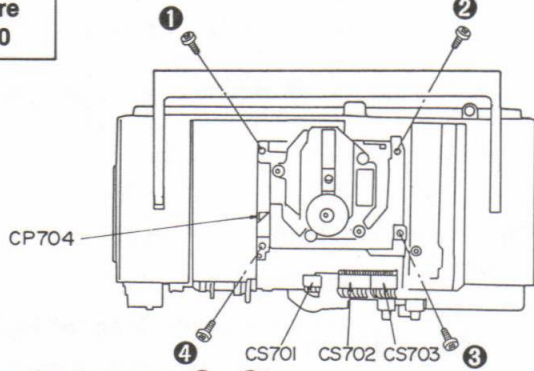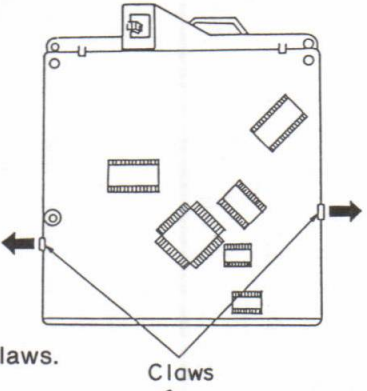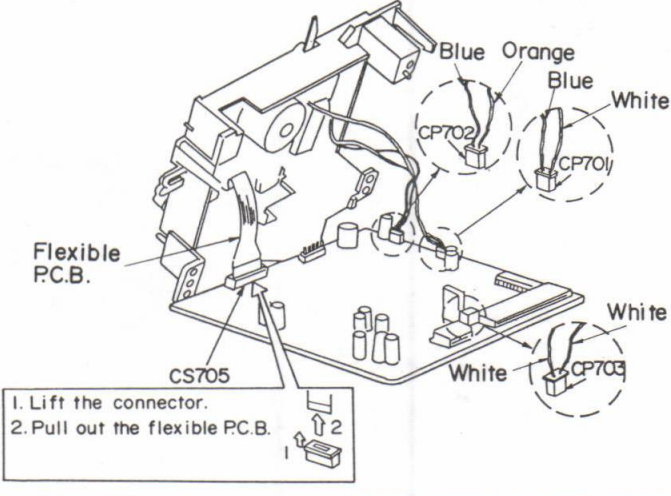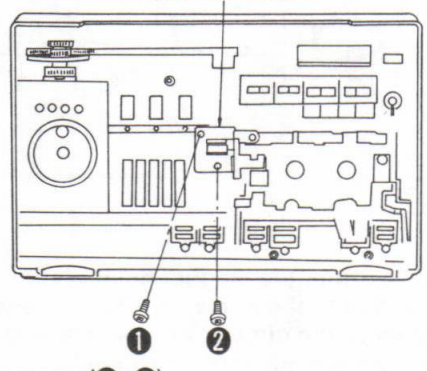
Ref. No. 8 Procedure 1→4→5→6→8	Removal of the Power Supply P.C.B.	Ref. No. 9 Procedure 1→9	Removal of the Battery P.C.B.
	 1. Remove the 5 screws (①~⑤). 2. Remove the 1 connector (CP301). 3. Release the 1 claw. 4. Pull out the power supply P.C.B. in the direction of the arrow.		 1. Release the 1 claw. 2. Pull out the battery P.C.B. in the direction of the arrow.
Ref. No. 10 Procedure 1→4→10	Removal of the CD Player Unit	Ref. No. 12 Procedure 1→4→10→12	Removal of the CD P.C.B.
	 1. Remove the 4 screws (①~④). 2. Remove the 1 connector (CP704). 3. Remove the 3 flat cables (CS701, CS702, CS703), and then remove the CD player unit.		 1. Release the 2 claws.
Ref. No. 11 Procedure 1→11	Removal of the Eject Lever Angle	 1. Lift the connector. 2. Pull out the flexible P.C.B. 2. Remove the 4 connectors (CP701, CP702, CP703, CS705). Note: Insert a shorting chip to the flexible P.C.B. so as to prevent damages to the laser diode by static electricity.	
• Remove the 2 screws (①, ②).			

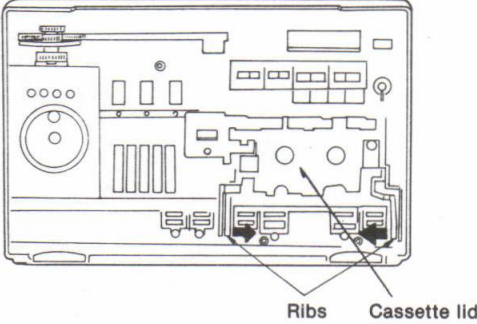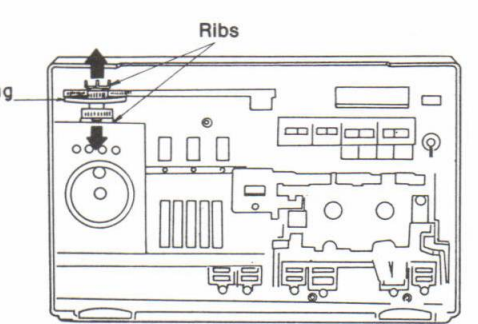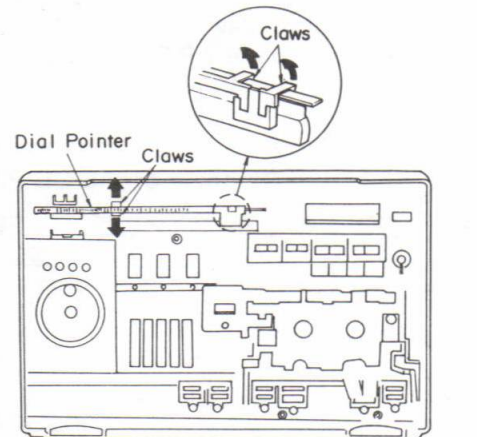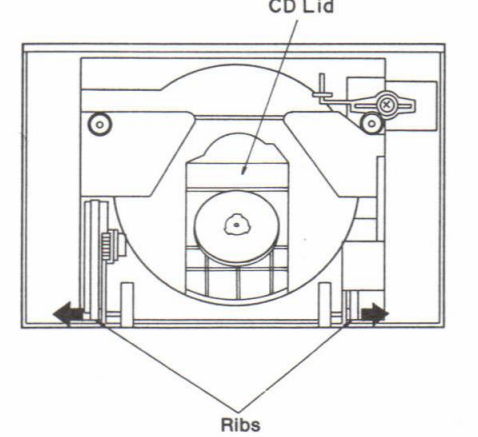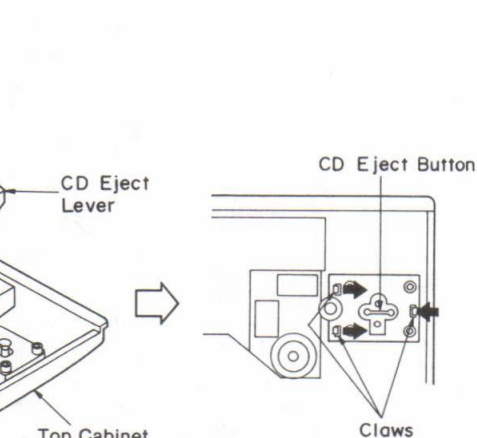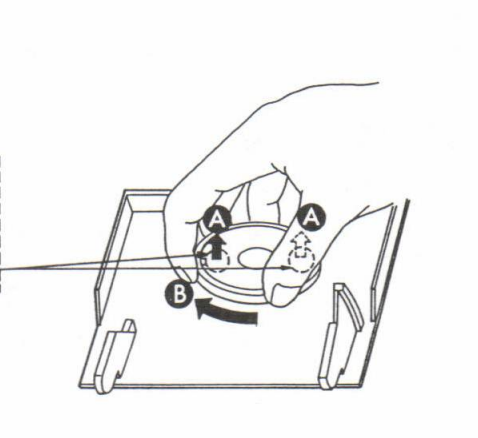Ref. No. 13	Removal of the Cassette Lid	Ref. No. 14	Removal of the Tuning Knob
Procedure 1→13	 Remove the ribs in the direction of the arrows.	Procedure 1→14	 Remove the ribs in the direction of the arrows.
Ref. No. 15	Removal of the Dial Pointer	Ref. No. 16	Removal of the CD Lid
Procedure 1→14→15	 Release the 4 claws.	Procedure 1→4→16	 Remove the ribs in the direction of the arrows.
Ref. No. 17	Removal of the CD Eject Button	Ref. No. 18	Removal of the Magnet Holder
Procedure 1→4→17	 - Remove the one screw, and remove the eject lever. - Release the 3 claws, and remove the CD eject button.	Procedure 1→4→16→18	 While lifting the magnet holder in the direction of the arrow A, rotate magnet holder in the direction of the arrow B and remove the magnet holder.

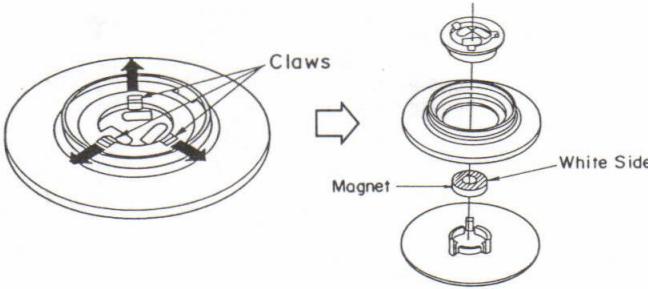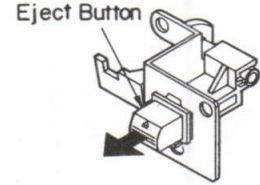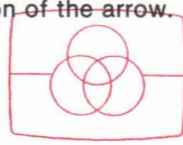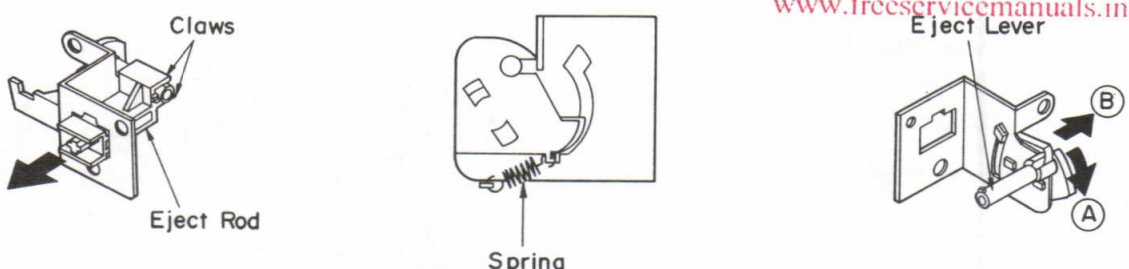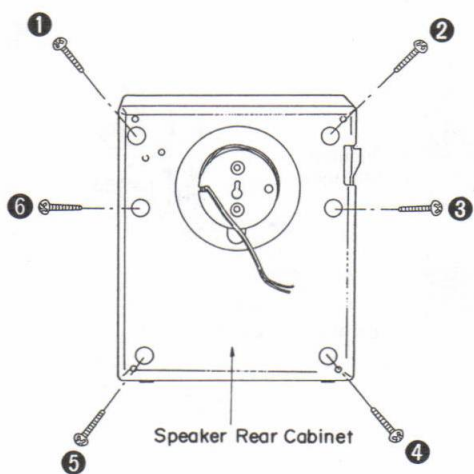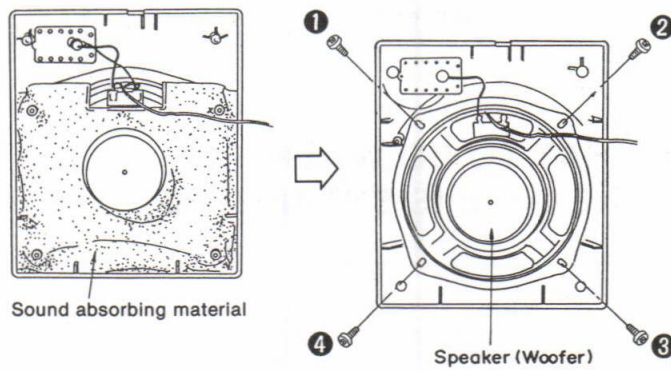
Ref. No. 19	Removal of the Magnet	Ref. No. 20	Removal of the Eject Rod, Eject Button and Eject Lever
Procedure 1→4→16→18→19	 • Remove the 3 claws, and remove the magnet.	Procedure 1→11→20	 1. Pull out the eject button in the direction of the arrow.  Free service manuals Gratis schema's Digitized by www.freесervicemanuals.info  2. Release the claws and remove the eject rod in the direction of the arrow. 3. Remove the spring. 4. Turn the eject lever in the direction of the arrow (A) and remove the eject lever in the direction of the arrow (B).
Ref. No. 21	Removal of the Speaker Rear Cabinet	Ref. No. 22	Removal of the Speaker (Woofer)
Procedure 21	 • Remove the 6 screws (1~6), and remove the speaker rear cabinet.	Procedure 21→22	 1. Remove the sound absorbing material. 2. Remove the 4 screws (1~4), and remove the speaker.

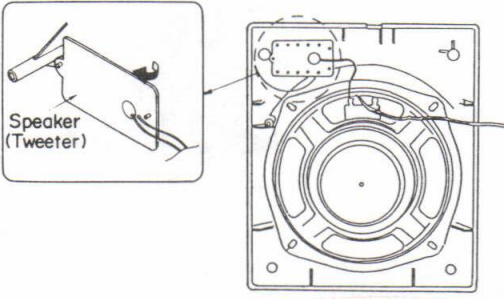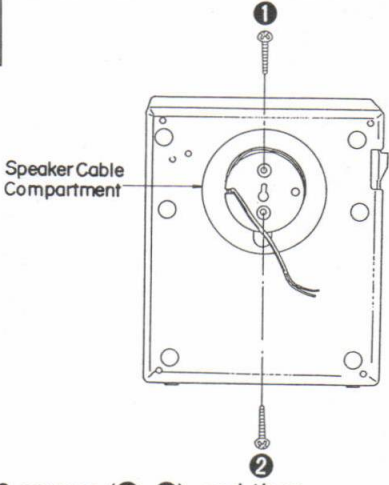Ref. No. 23	Removal of the Speaker (Tweeter)	Ref. No. 24	Removal of the Speaker Cable Compartment
Procedure 21→23	 Remove the tweeter in the direction of the arrow.	Procedure 24	 Remove the 2 screws (①, ②), and then remove the speaker cable compartment.

● DIAL SETTING POINT

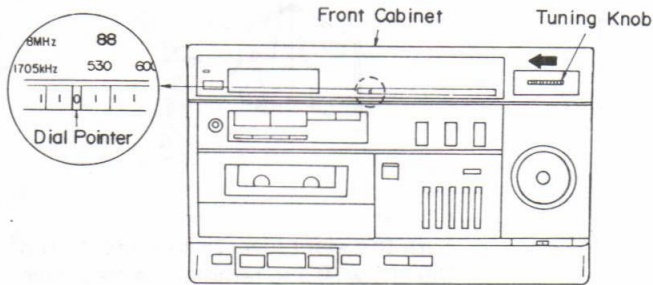


1. Turn the tuning knob to fully direction of arrow (→) and set the dial pointer at the position as shown in figure.

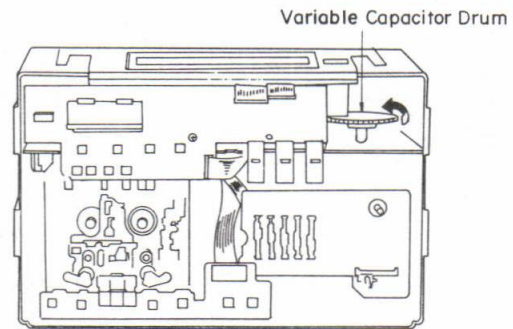


2. Turn the variable capacitor drum all the way in the direction of arrow.
3. Replace the front cabinet.

● REMOVAL OF SCREWS

- Use a screwdriver similar to the one in the figure.
- If you attach a bushing (part number: RHR109A) to the tip of the screwdriver as shown in the figure, the screwdriver tip will easily fit in the screw heads and you will be able to remove the screws with ease.

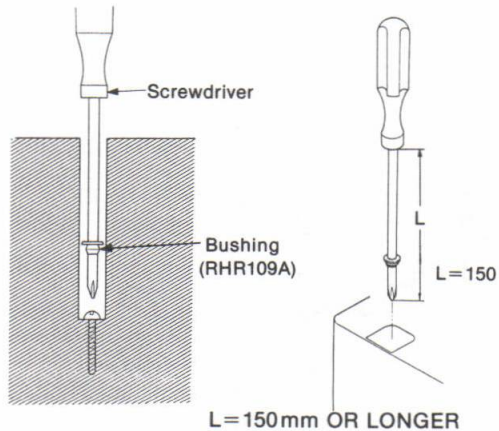

● WHAT TO DO WHEN THE TAPE IS ENTANGLED

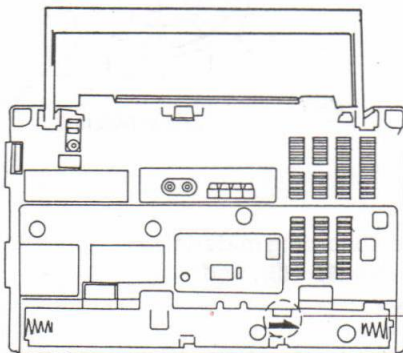


When the tape is caught in the pinch roller, etc. release the tape by turning the pulley on the motor with the screwdriver in the direction of the arrow.

HANDLING PRECAUTIONS FOR OPTICAL PICKUP

The laser diode in the optical pickup may break down due to potential difference caused by static electricity of clothes or human body.
So, be careful of electrostatic breakdown during repair of the optical pickup.



- **Handling of optical pickup**
 1. Do not subject the optical pickup to static electricity as it is extremely sensitive to electrical shock.
 2. To prevent the breakdown of the laser diode, an anti-static shorting pin is inserted into the flexible board. (FPC board)
When removing or connecting the short pin, finish the job in as short time as possible.
 3. Take care not to apply excessive stress to the flexible board. (FPC board)
 4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

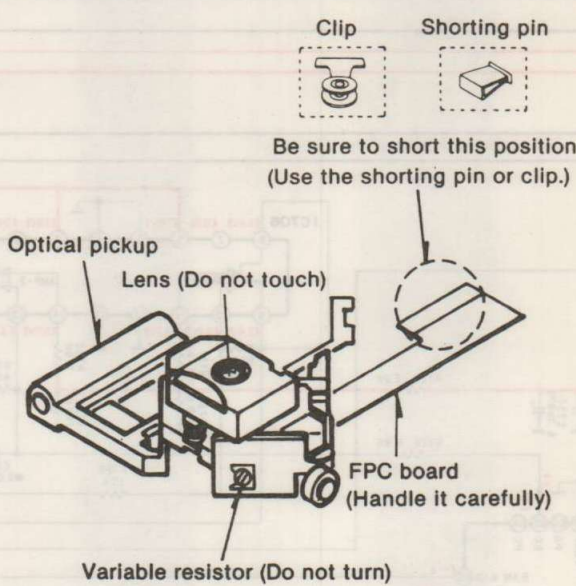

- **Grounding for electrostatic breakdown prevention**

1. Human body grounding
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.

Caution:
The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the optical pickup.

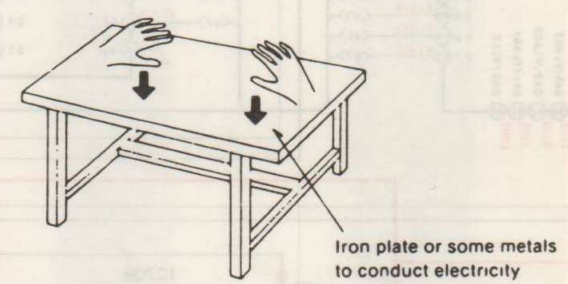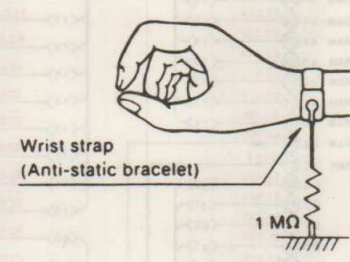


INSTRUCTIONS FOR TRAVERSE OIL (Part No. SZZ0L31)

The container contains 6g (approx. 3ml) of oil.
One application (one shaft) uses 0.05ml of oil.

How to Use

- (1) Remove the guide shaft in the traverse deck from the optical pickup and clean off any dust from the guide shaft.
- (2) Apply one drop of the SZZ0L31 to the tip of the guide shaft.
- (3) Hold the guide shaft so that its oiled end touches the optical pickup and insert it into the bearing while rotating it slowly.
- (4) After securing the guide shaft, move the optical pickup by hand several times to the left and right to distribute the oil on the guide shaft.

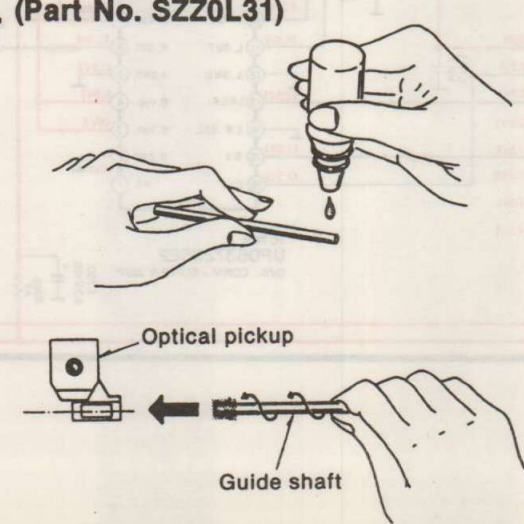


SCHEMATIC DIAGRAM (for CD Operation Circuit Section)

Notes:

1. S601 : Memory/Recall switch.
 2. S602 : Edit pause switch.
 3. S603 : Skip/Search switch (▶▶/▶▶▶).
 4. S604 : Play/Stop switch.
 5. S605 : Music scan/Remaining time switch.
 6. S606 : Skip/Search switch (◀◀/◀◀◀).
 7. S607 : Pause/Clear switch.
 8. S608 : Repeat switch.
 9. S609 : Power switch in "OFF" position. (CD lid close detection)
 10. S610 : Open/Close switch. (CD lid close detection)
 11. S611 : Laser ON/OFF switch.
 12. DC voltage measurements are taken with electronics voltmeter from negative terminal of battery.
- No mark: Playback, < >: FM, (): AM, (()): CD
< >: Voltage lines
- This schematic diagram may be modified at any time with the development of new technology.

A
B
C
D
E
F

A OPERATION (CD) SWITCH CIRCUIT

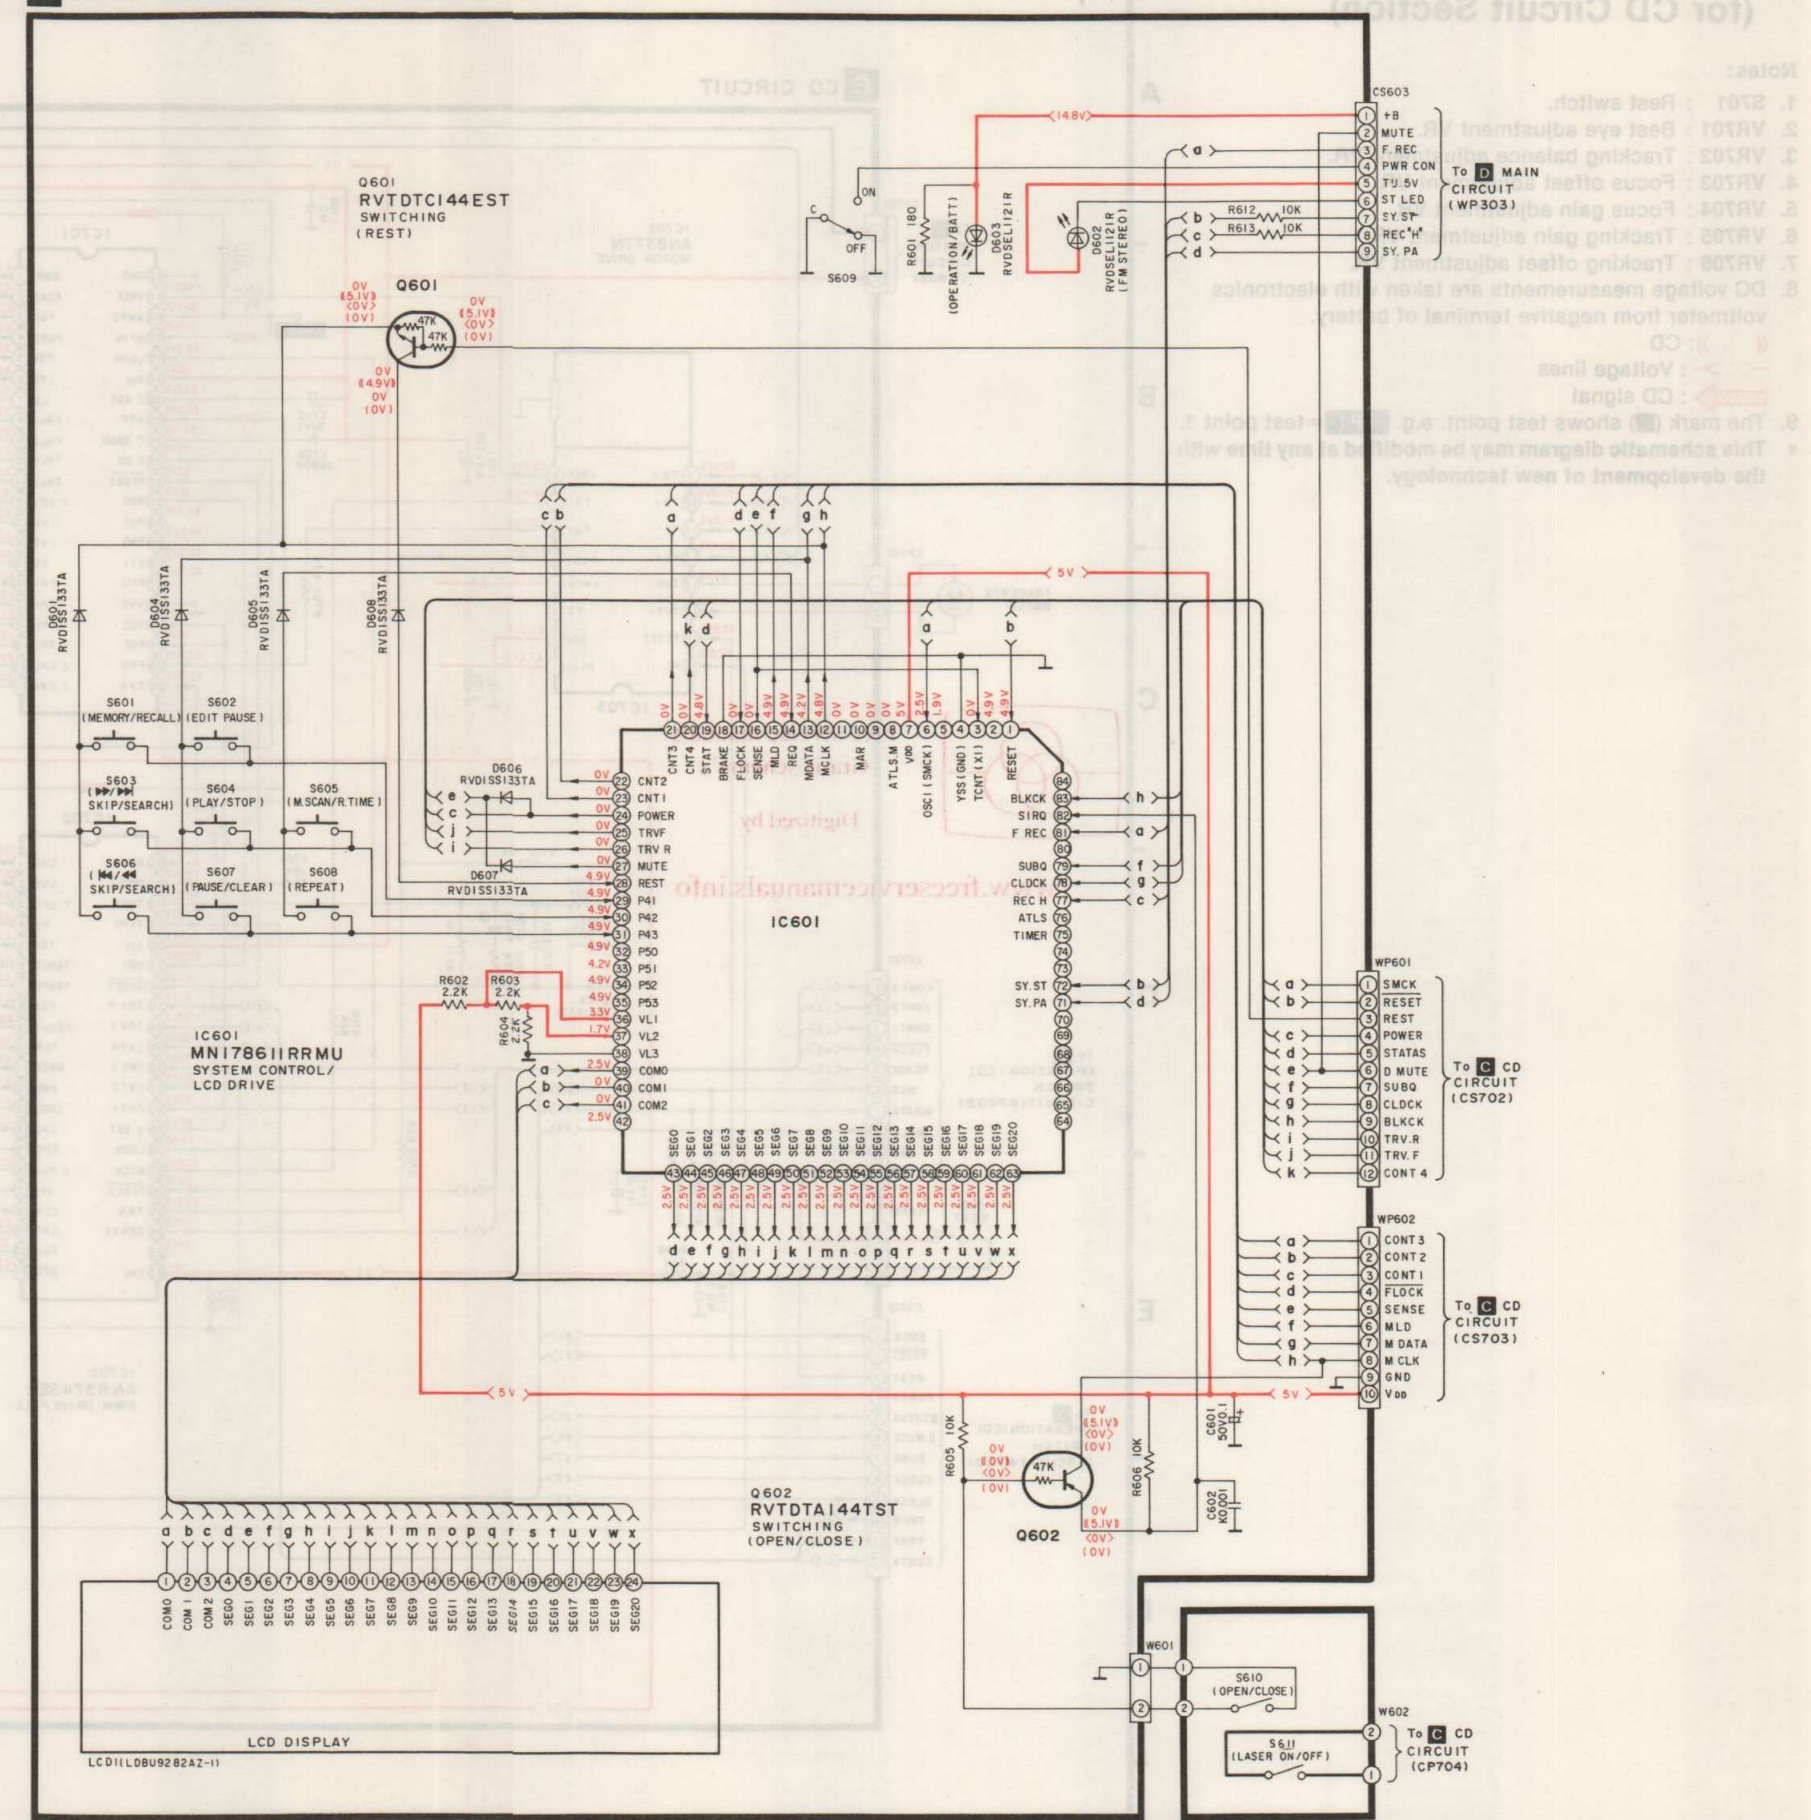

B SWITCH CIRCUIT

— 16 —

SCHEMATIC DIAGRAM (for Main, G. EQ, Mechanism and Power Supply Circuit Section)

Notes:

1. S1-1 ~ : Band selector switch in "FM" position.
S1-6 (F...FM, L...LW, M...MW)

2. S2 : FM mode/Beat proof switch in "STEREO/III" position.
(M/I...MONO/II, S/II...STEREO/III, S/III...STEREO/III)

3. S3 : AC/DC select switch in "AC" position.

4. S301-1 ~ : Function selector switch in "TAPE" position.

S301-4 (A...AUX, CD...CD, R...TUNER, T...TAPE)

5. S612 : Fast/TPS switch. (◀◀ TPS)

6. S613 : Reverse playback switch. (◀)

7. S614 : Forward playback switch. (▶)

8. S615 : Stop switch.

9. S616 : Fast/TPS switch. (▶▶ TPS)

10. S617 : Rec pause switch.

11. S618 : Reverse mode selector switch in "C" position.

(C) ...Auto-continuous, ...Auto-reverse, ...Non-reverse

12. S620 : XBS switch in "OFF" position.

13. S971 : Mode switch in "OFF" position.

14. S972 : Cassette half detection switch in "OFF" position.

15. S973 : Rev. Rec Inhibit switch in "OFF" position.

16. S974 : For. Rec Inhibit switch in "OFF" position.

17. S975 : ATS (CrO₂) switch in "OFF" position.

18. VR1 : FM MPX VCO adjustment VR.

19. VR301 : Rec bias voltage adjustment VR.

20. VR601 : Balance control VR.

21. VR602 : Graphic E.Q. (100Hz)/XBS level control VR.

22. VR603 : Graphic E.Q. (330Hz) control VR.

23. VR604 : Graphic E.Q. (1kHz) control VR.

24. VR605 : Graphic E.Q. (3.3kHz) control VR.

25. VR606 : Graphic E.Q. (10kHz) control VR.

26. VR607 : Volume control VR.

27. DC voltage measurements are taken with electronics

voltmeter from negative terminal of battery.

No mark: Playback, < : FM, > : AM,

[] : Recording, () : CD

FM signal

Playback signal

CD signal

Recording signal

Main signal

Voltage lines

28. Battery current: No signal (Radio) 330mA (VR MIN)

Maximum output (VR MAX)

Radio 1120mA

Tape (PLAY) 1530mA

CD Play 1850mA

Measurement instruction

(Radio: FM 60dB, 30% Mod.)

Tape: 315Hz, 0dB

29. The mark (■) shows test point. e.g. TP1 = test point 1.

30. Important safety notice.

Components identified by Δ mark have special


characteristics important for safety.


When replacing any of these components, use only

manufacturer's specified parts.


• This schematic diagram may be modified at any time with




















the development of new technology.

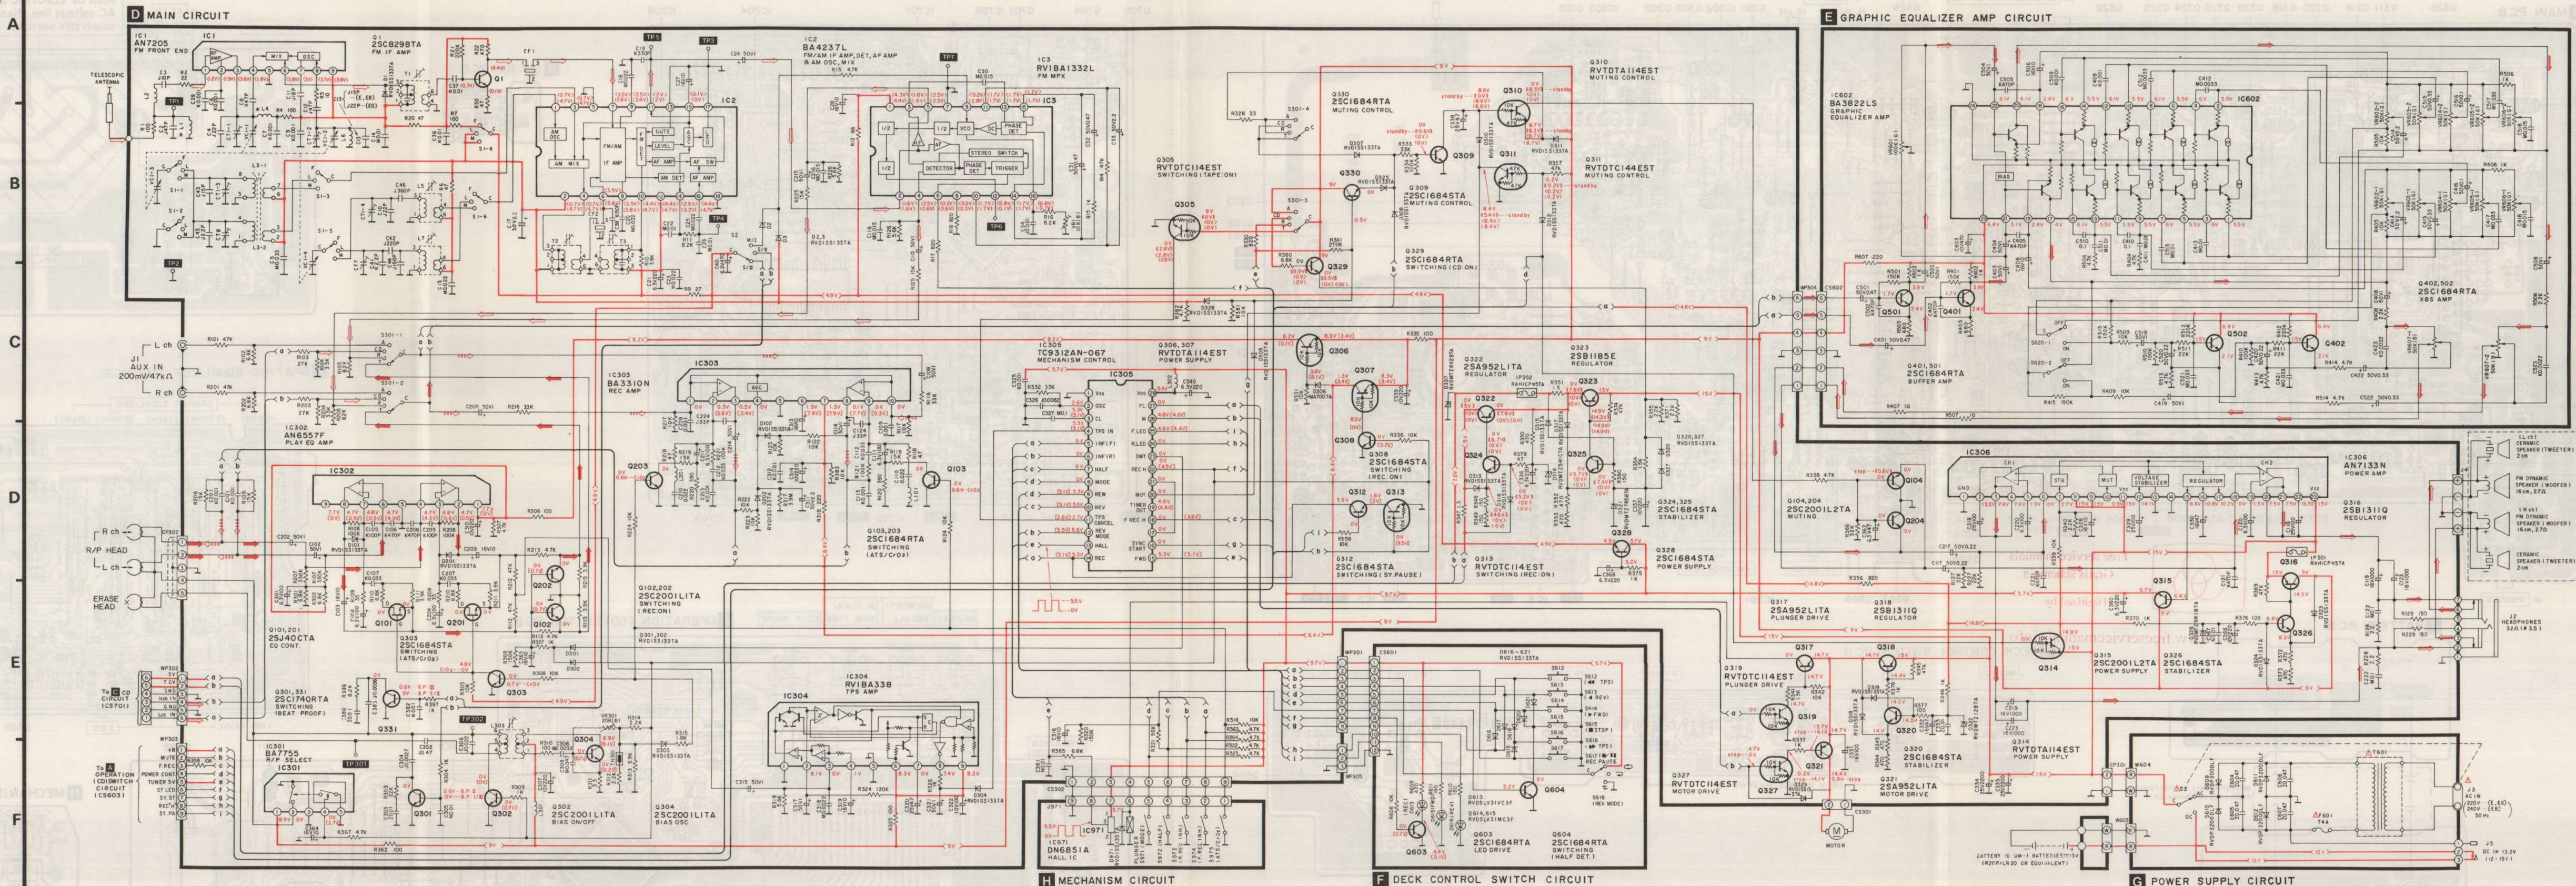


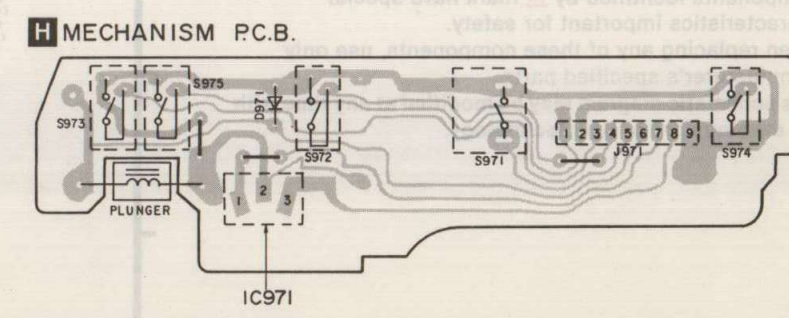

            ■ TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

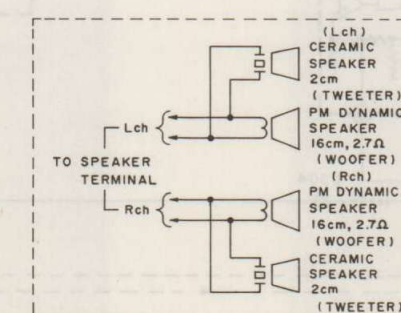


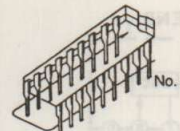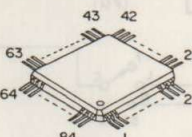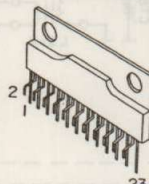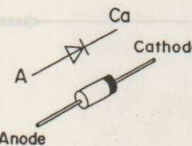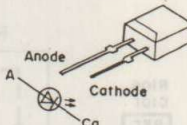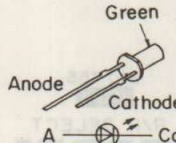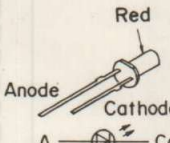 No.1	<table> <tr><td>AN8373SE2</td><td>42 Pin</td></tr> <tr><td>AN8374SE2</td><td>42 Pin</td></tr> <tr><td>LC3517BMLTP</td><td>24 Pin</td></tr> <tr><td>SM5807ESET</td><td>16 Pin</td></tr> <tr><td>UPD6372GSE2</td><td>16 Pin</td></tr> </table>	AN8373SE2	42 Pin	AN8374SE2	42 Pin	LC3517BMLTP	24 Pin	SM5807ESET	16 Pin	UPD6372GSE2	16 Pin	 No.1	<table> <tr><td>TA8410P</td><td>16 Pin</td></tr> <tr><td>TC9312AN-067</td><td>28 Pin</td></tr> </table>	TA8410P	16 Pin	TC9312AN-067	28 Pin	AN8377N 
AN8373SE2	42 Pin																	
AN8374SE2	42 Pin																	
LC3517BMLTP	24 Pin																	
SM5807ESET	16 Pin																	
UPD6372GSE2	16 Pin																	
TA8410P	16 Pin																	
TC9312AN-067	28 Pin																	
 No.1	<table> <tr><td>BA3310N</td><td>10 Pin</td></tr> <tr><td>BA7755</td><td>5 Pin</td></tr> <tr><td>RVIBA338</td><td>9 Pin</td></tr> </table>	BA3310N	10 Pin	BA7755	5 Pin	RVIBA338	9 Pin	MN6617, MN178611RRM0 	RVIBA1332L 	BA4237L 								
BA3310N	10 Pin																	
BA7755	5 Pin																	
RVIBA338	9 Pin																	
BA3822LS 	AN7205 	AN6557F 	AN7133N 	DN6851A 														
2SB1311Q 		2SA952L1TA, 2SC1684RTA, 2SC1684STA, 2SC1740RTA, 2SC2001L1TA, 2SC2001L2TA 2SC829BTA		RVTDTA114EST, RVTDTA144TST, RVTDTA144TST, RVTDTA144EST														
2SB1185E 	2SJ40CTA 	UN4110TA, UN4216TA, 2SA1309STA 	RVDP300DLF 	MA165TA, MA700TA, RVD1SS133TA 														
	RVDMTZ5R1CTA, RVDMTZ7R5BTA, RVDMTZ9R1BTA, RVDMTZ12BTA RVDMTZ8R2BTA	RVDSL121RT 	RVDSL31MC3F 	RVDSL31VC3F 														

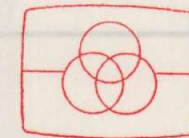

www.freeservicemanuals.info

AN8374SE2
IC702
DATA SLICE, PLL, FOCUS, TRACKING and TRAVERSE SERVO

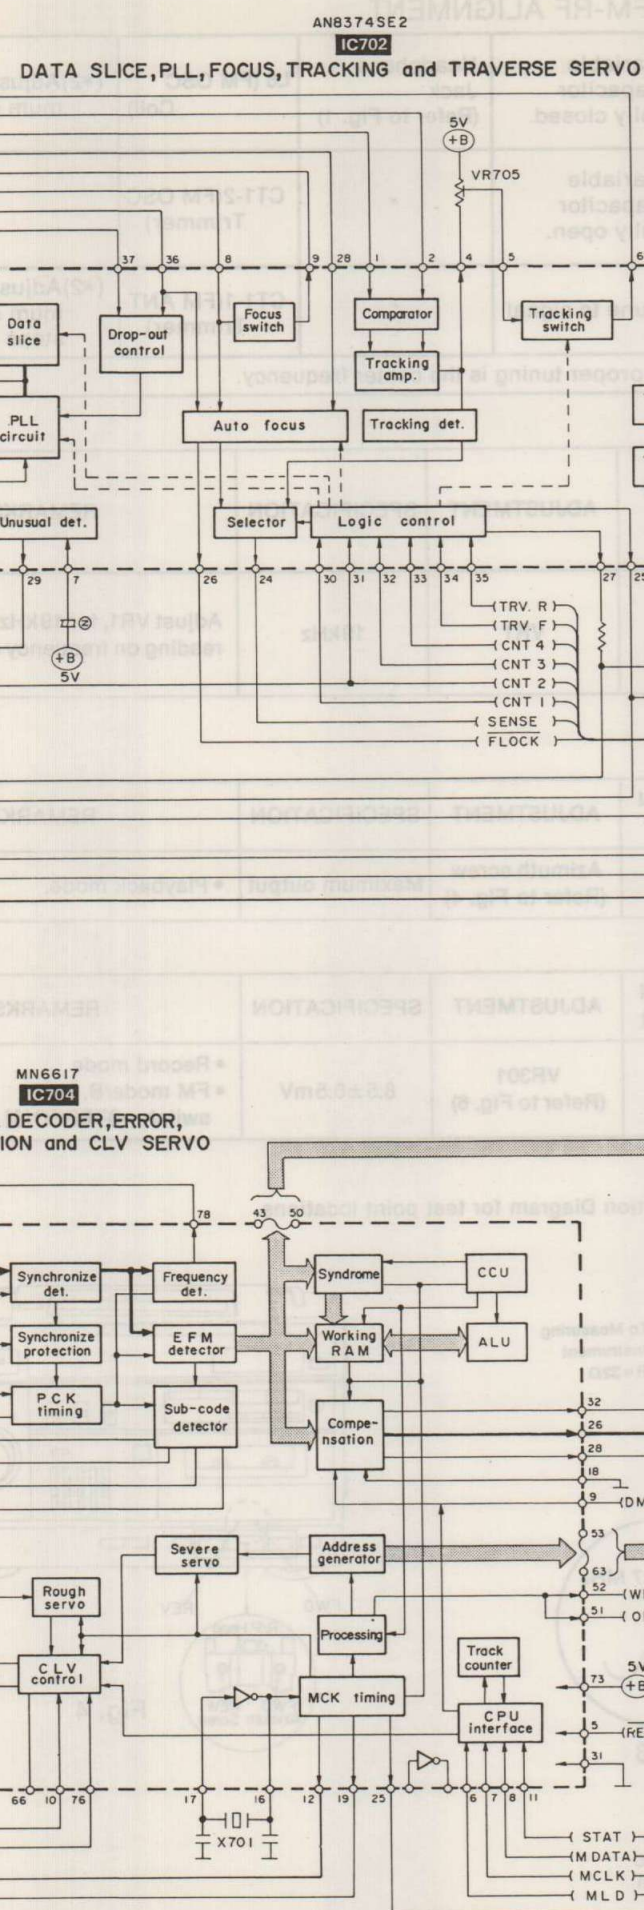

MEASUREMENTS AND ADJUSTMENTS

<TUNER SECTION>

■ ALIGNMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ADJUSTMENT					
1. Set volume control to maximum.				5. Set function selector to TUNER or TAPE.	
2. Set G. EQ control to center.				6. Set power source voltage to 15V DC.	
3. Set band switch to FM, MW or LW.				7. Output of signal generator should be no higher than necessary to obtain an output reading.	
4. Set FM mode selector to STEREO.					

■ LW and MW ALIGNMENT

BAND	SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	ELECTRONIC AC VOLTMETER or OSCILLOSCOPE	ADJUSTMENT	REMARKS	
	CONNECTIONS	FREQUENCY					
AM-IF ALIGNMENT							
1)	MW	Fashion a loop of several turns of wire and radiate the signal into loop ANT of the reciver.	459kHz 30% Mod. at 400Hz	Point of non-interference.(on/ about 600kHz)	Headphones Jack (Refer to Fig. 1)	T2 (AM IFT)	Adjust for maximum output.
LW-RF ALIGNMENT							
2)	LW	"	[E, EB] ... 136kHz [EG]...137kHz (f min)	Tuning capacitor fully closed.	"	L7 (LW OSC Coil)	"
3)	LW	"	297 kHz (f max)	Tuning capacitor fully open.	"	CT7 (LW OSC Trimmer)	"
4)	LW	"	145 kHz	Tune to signal.	"	(*)1 L3-2 (LW ANT Coil)	Adjust for maximum output.Adjust L3-2 by moving coil along ferrite core.
5)	LW	"	285 kHz	"	"	CT8 (LW ANT Trimmer)	Adjust for maximum output. Repeat steps (2)~(5).

(* 1) Fix antenna coil with wax after completing alignment.

MW-RF ALIGNMENT						
(6) MW	"	[E, EB] ... 511kHz [EG]...514kHz (f min)	Tuning capacitor fully closed.	"	L5 (MW OSC Coil)	Adjust for maximum output.
(7) MW	"	[E, EB]... 1,650kHz [EG]...1639kHz (f max)	Tuning capacitor fully open.	"	CT1-4 (MW OSC Trimmer)	"
(8) MW	"	550 kHz	Tune to signal.	"	(*)1 L3-1 (MW ANT Coil)	Adjust for maximum output. Adjust L3-1 by moving coil bobbin along ferrite core.
(9) MW	"	1,500 kHz	"	"	CT1-3 (MW ANT Trimmer)	Adjust for maximum output. Repeat steps (6)~(9).

(* 1) Fix antenna coil with wax after completing alignment.

■ FM ALIGNMENT

BAND	SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	ELECTRONIC AC VOLTMETER or OSCILLOSCOPE	ADJUSTMENT	REMARKS
	CONNECTIONS	FREQUENCY				
FM-IF ALIGNMENT						
(1) FM	High side thru. 0.001μF to test point TP4. Negative side to test point TP2.	10.7MHz	Point of noninterference.(on/ about 90 MHz)	Connect vert. amp.of scope to test point TP5. Negative side to test point TP3.	T1(FM 1st IFT)	Wave form is shown in Fig. 2.
(2) FM	"	"	"	"	T3(FM 2nd IFT)	Wave form is shown in Fig. 3.

FM-RF ALIGNMENT						
FM	Connect to test point TP1 through FM dummy antenna. Negative side to test point TP2 .	[E, EB] 86.2MHz [EG]...87.35MHz (f min)	Variable capacitor fully closed.	Headphones Jack (Refer to Fig. 1)	L6 (FM OSC Coil)	(*2)Adjust for maximum output.
FM		[E, EB] 109.2MHz [EG]...108.25MHz (f max)	Variable capacitor fully open.	"	CT1-2(FM OSC Trimmer)	"
FM		[E, EB].. 104MHz [EG] 106MHz	Tune to signal	"	CT1-1(FM ANT Trimmer)	(*2)Adjust for maximum output.Repeat steps (3)~(5).
(* 2) Three output responses will be present; proper tuning is the center frequency.						

■ FM-MPX VCO ADJUSTMENT

FM SIGNAL GENERATOR SOURCE CONNECTION	EQUIPMENT CONNECTION ELECTRONIC COUNTER	ADJUSTMENT	SPECIFICATION	REMARKS
98 MHz, 60 dB (CW) Connect to test point TP1 through FM dummy antenna. Negative side to TP2.	TP6 ... (+) TP7 ... (-)	VR1	19kHz	Adjust VR1, for 19kHz±50Hz reading on frequency counter.

<TAPE DECK SECTION>

■ HEAD AZIMUTH ADJUSTMENT

TEST TAPE	EQUIPMENT CONNECTION ELECTRONIC COUNTER	ADJUSTMENT	SPECIFICATION	REMARKS
QZZCFM (8kHz, -20dB)	Headphones Jack (32Ω) (Refer to Fig. 1)	Azimuth screw (Refer to Fig. 4)	Maximum output	• Playback mode.

■ REC BIAS VOLTAGE ADJUSTMENT

TEST TAPE	EQUIPMENT CONNECTION ELECTRONIC VOLTMETER	ADJUSTMENT	SPECIFICATION	REMARKS
Normal tape	TP302 ... (+) TP301 ... (-) (Refer to Fig. 5)	VR301 (Refer to Fig. 6)	8.5±0.5mV	• Record mode • FM mode/B. P switch→STEREO/II

■ ADJUSTMENT POINT

- Please refer to Circuit Board and Wiring Connection Diagram for test point locations.

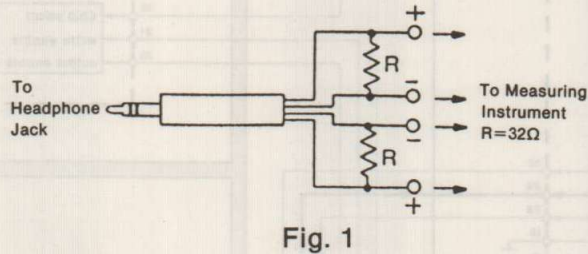


Fig. 1

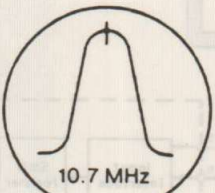


Fig. 2

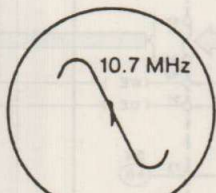


Fig. 3

 


Fig. 5

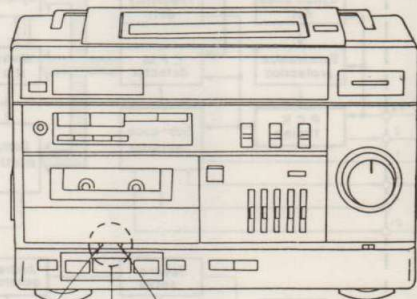


Fig. 4

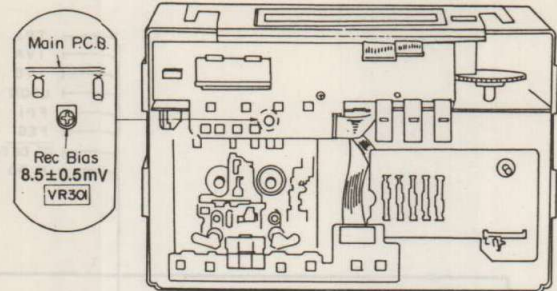


Fig. 6

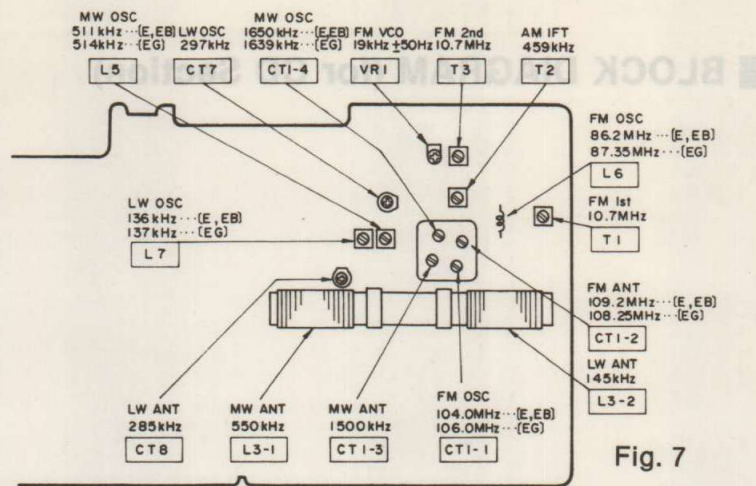


Fig. 7

<CD PLAYER SECTION>

Caution:

- It is very dangerous to look at or touch the laser beam. (Laser radiation is invisible.) With the unit turned "on", laser radiation is emitted from the pickup lens. Avoid exposure to the laser beam, especially when performing adjustments.

PREPARATION

1. Remove the cabinet(see Ref. No. 1 of the disassembly instructions).
2. Remove the 4 screws (1~4), and then remove the top cabinet. (See Fig. 8)
3. Remove the 4 screws (5~8), and then remove the CD operation P.C.B. (See Fig. 9)
4. Remove the 4 screws (9~12), and then remove the CD player unit. (See Fig. 10)
5. Install the removed CD player perpendicular to the rib on the cabinet. (See Fig. 11)
6. Remove the disc holder and magnet (see Ref No. 18, 19 of the disassembly instructions). (See Fig. 12)

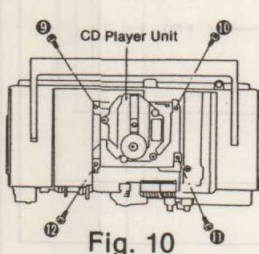


Fig. 10

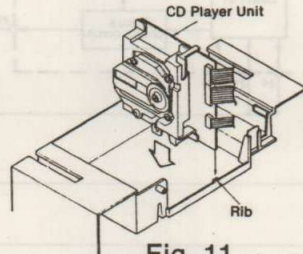


Fig. 11

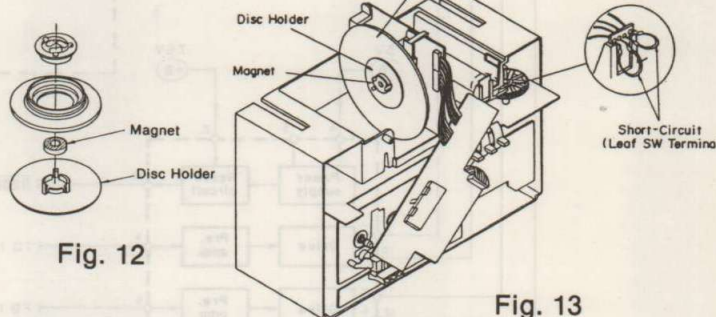


Fig. 12



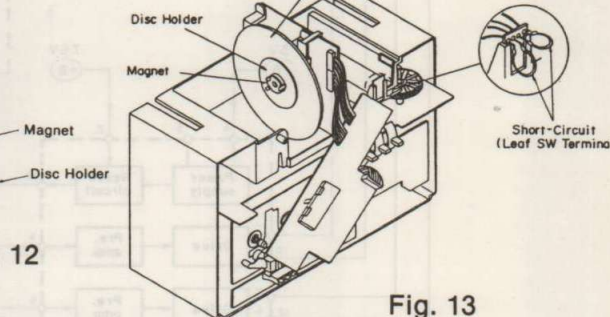


Fig. 13

ADJUSTMENT POINTS

- Please refer to Circuit Board and Wiring Connection Diagram for test point locations.

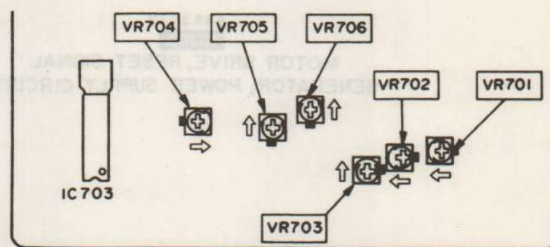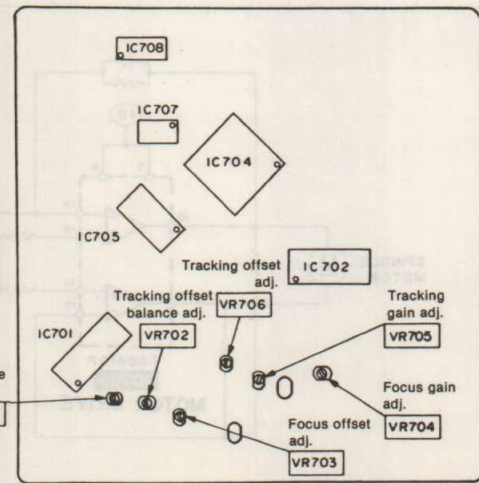


(Temporary VR setting if any of the trimmer VRs are replaced) or require readjustment, temporarily set them to the following positions.

ELECTRICAL ADJUSTMENTS**Equipment used**

- Servo gain adjuster (SZZP1017F)
- Test discs:
Test disc(SZZP1014F) old or new type
Inspection test disc (SZZP1054C)
Uneven disc (SZZP1056C)
Black band disc (SZZP1057C)

- Ordinary disc
- Two-channel oscilloscope (with trigger) of 30MHz or over
- Audio-frequency oscillator
- Conversion connector(SZZP1032F)

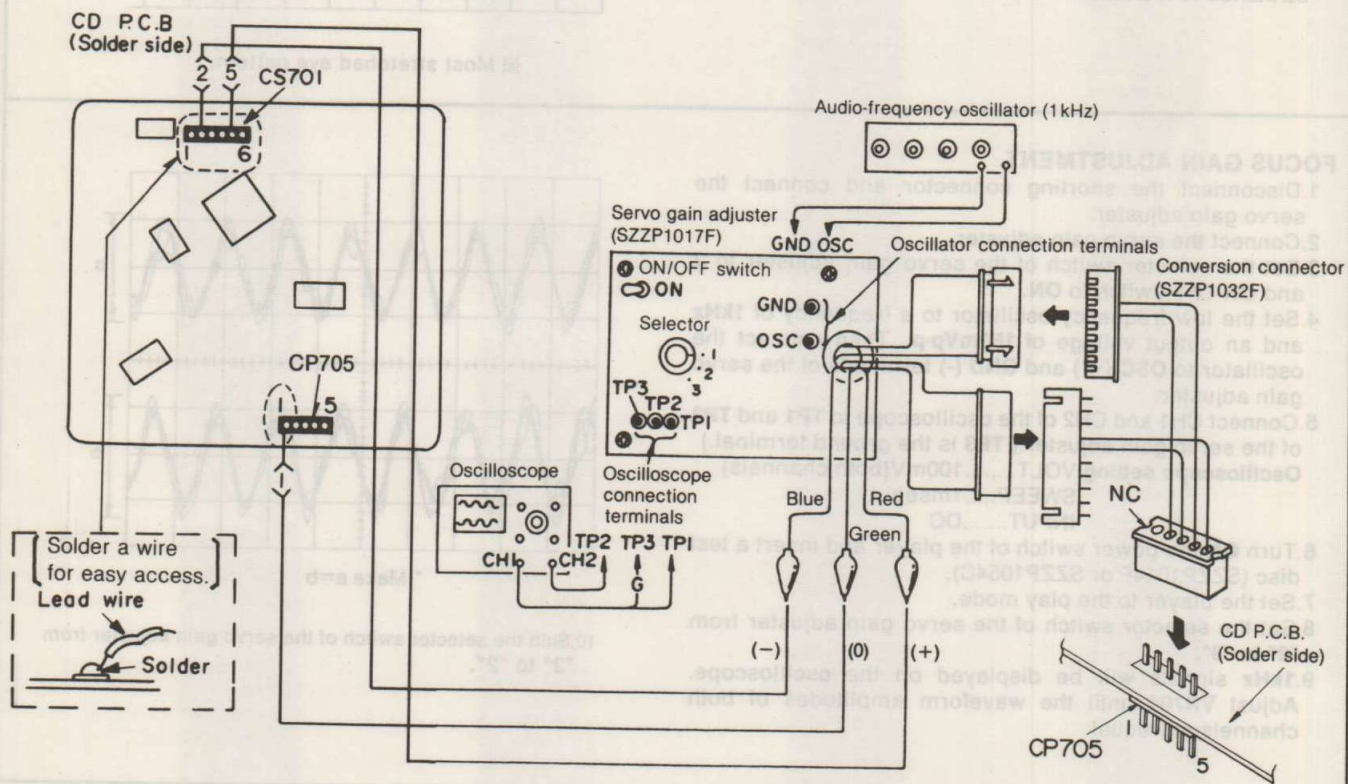Servo Gain Adjuster and Its Connection

Note : Before making adjustments, make sure that function selector is set to "CD".

Adjustment Procedures

Step 1: Best eye (PD balance) adjustment

Step 2: Connect the servo gain adjuster

Step 3: Focus gain adjustment

Step 4: Tracking gain adjustment

Step 5: Focus offset adjustment


Step 6: Tracking offset adjustment

Step 7: Tracking offset balance adjustment

Step 8: Check of play operation after adjustment

BEST EYE(PD BALANCE) ADJUSTMENT


1. Insert the shorting connector of CP705 in its original position.
2. Connect CH1 of the oscilloscope to **TP703 (+)** and **TP701 (-)** of the main P.C.B.
Oscilloscope setting: VOLT.....200mV
SWEEP.....0.5μsec.
INPUT.....AC
3. Turn **ON** the power switch of the player and insert a test disc (SZZP1014F or SZZP1054C).
4. Set the player to the play mode.
5. Adjust **VR701** so that the eye pattern of RF signal is stretched to maximum.

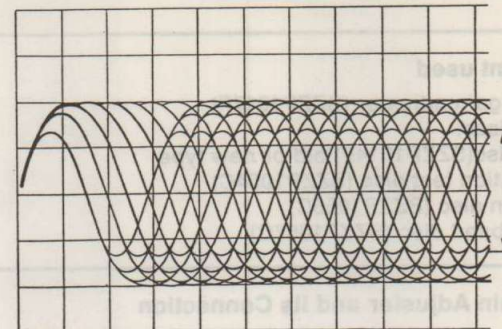

※ Most stretched eye pattern.

FOCUS GAIN ADJUSTMENT

1. Disconnect the shorting connector and connect the servo gain adjuster.
2. Connect the servo gain adjuster.
3. Set the selector switch of the servo gain adjuster to **2** and ON-OFF switch to **ON**.
4. Set the low frequency oscillator to a frequency of **1kHz** and an output voltage of **150mVp-p**. Then connect the oscillator to **OSC (+)** and **GND (-)** terminals of the servo gain adjuster.
5. Connect CH1 and CH2 of the oscilloscope to **TP1** and **TP2** of the servo gain adjuster. (**TP3** is the ground terminal.)
Oscilloscope setting: VOLT.....100mV(both channels)
SWEEP.....1msec.
INPUT.....DC
6. Turn **ON** the power switch of the player and insert a test disc (SZZP1014F or SZZP1054C).
7. Set the player to the play mode.
8. Set the selector switch of the servo gain adjuster from **"2" to "3"**.
9. **1kHz** signals will be displayed on the oscilloscope. Adjust **VR704** until the waveform amplitudes of both channels are equal.

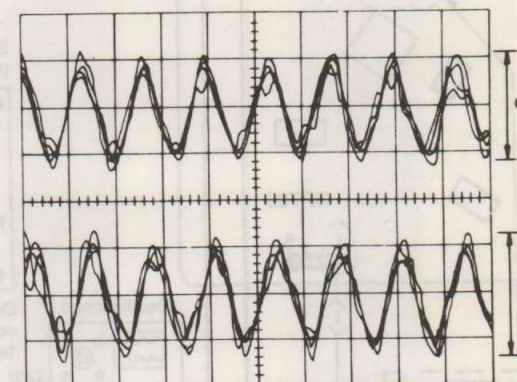


* Make a=b

10. Shift the selector switch of the servo gain adjuster from **"3" to "2"**.

TRACKING GAIN ADJUSTMENT

1. Oscilloscope setting and connections are same as above.
2. Set the low frequency oscillator to a frequency of **1kHz** and an output voltage of **150mVp-p**.
3. Turn **ON** the power switch of the player and insert the test disc (SZZP1014F or SZZP1054C).
4. Set the player to the play mode.
5. Set the selector switch of the servo gain adjuster from **"2" to "1"**.
6. **1kHz** signals will be displayed on the oscilloscope. Adjust **VR705** until the waveform amplitudes of both channels are equal.
7. Shift the selector switch of the servo gain adjuster from **"1" to "2"**.


Note: When indicated in the manual, set the rotary switch to **"2"** and the ON/OFF switch of the servo gain adjuster (SZZP1017F) to **"ON"**.

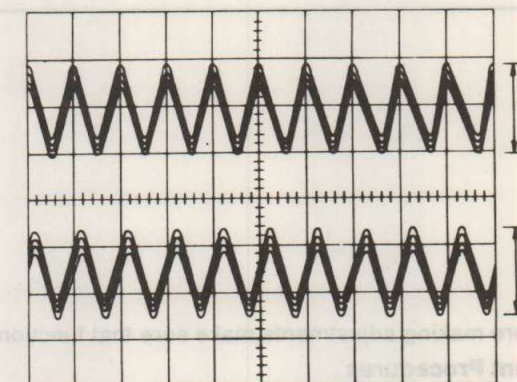

* Make a=b

FOCUS OFFSET ADJUSTMENT


1. Connect CH1 of the oscilloscope to **TP703 (+)** and **TP701 (-)** of the main P.C.B.
Connect CH2 of the oscilloscope to **TP705 (+)** and **TP701 (-)** of the main P.C.B.
Oscilloscope setting: VOLT.....100 mV(CH1),200 mV(CH2)
SWEEP..0.5msec.
INPUT....DC(CH1),AC(CH2)
MODE....NORM
(Triggering via CH2)
2. Turn **ON** the power switch of the player and insert the test disc (SZZP1057C).
3. Set the player to the play mode.
4. Check the waveform of CH1 and CH2 on the oscilloscope and adjust **VR703**, so that the waveform around the triggering point becomes as shown in the illustration.

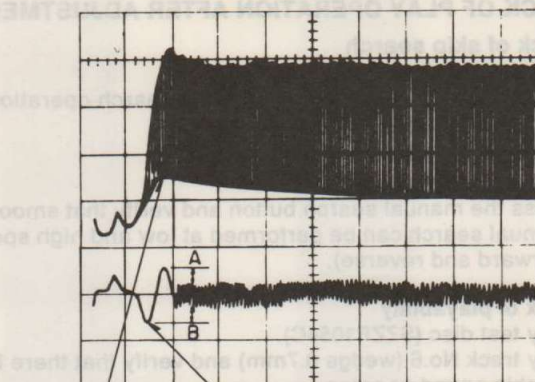

Smooth envelope Minimize the amplitude or make A=B

TRACKING OFFSET ADJUSTMENT


1. Connect CH1 of the oscilloscope to **TP703 (+)** and **TP701 (-)** of the main P.C.B.
Connect CH2 of the oscilloscope to **TP704 (+)** and **TP701 (-)** of the main P.C.B.
Oscilloscope setting: VOLT.....100 mV(CH1),200 mV(CH2)
SWEEP..1msec.
INPUT....DC(CH1),AC(CH2)
MODE....NORM
(Triggering via CH2)
2. Turn **ON** the power switch of the player and insert the test disc (SZZP1057C).
3. Set the player to the play mode.
4. Check the waveform of CH1 and CH2 on the oscilloscope and adjust **VR706**, so that the waveform around the triggering point becomes as shown in the illustration.

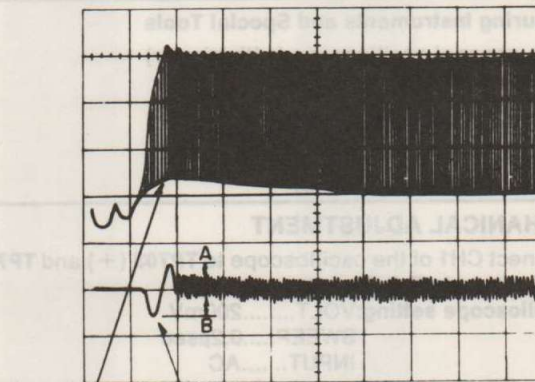

Smooth envelope Minimize the amplitude or make A=B

TRACKING OFFSET BALANCE ADJUSTMENT

1. Set the low frequency oscillator to a frequency of **1.0 kHz** and an output voltage of **150 mVp-p**. Then connect the oscillator to **OSC (+)** and **GND (-)** terminals of the servo gain adjuster.
2. Connect CH1 of the oscilloscope to **TP703 (+)** and **TP701 (-)** of the main P.C.B.
Oscilloscope setting: VOLT.....200mV
SWEEP.....0.5 mV
INPUT.....AC
3. Turn **ON** the power switch of the player and insert a test disc (SZZP1014F or SZZP1054C).
4. Set the player to the play mode.
5. Set the selector switch of the servo gain adjuster from **"2" to "1"**.
6. Adjust the **VR702** so that the section of the output of the waveform marked with ※ is balanced.
7. Shift the selector switch of the servo gain adjuster from **"1" to "2"**.
8. Turn **OFF** the power switch of the player.
9. Disconnect the servo gain adjuster.

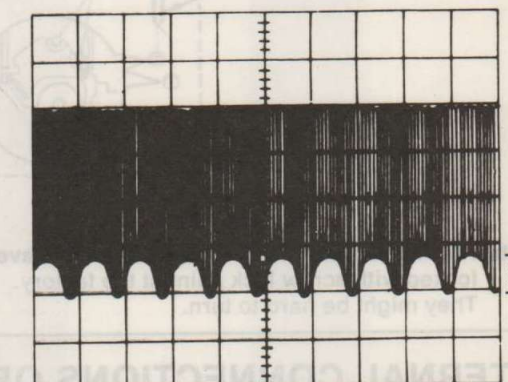

※ This section of the waveform must be balanced.

CHECK OF PLAY OPERATION AFTER ADJUSTMENT

Check of skip search

1. Play an ordinary disc.
2. Press the skip button and verify skip search operation (forward and reverse).

Check of manual search

1. Play an ordinary disc.
2. Press the manual search button and verify that smooth manual search can be performed at low and high speeds (forward and reverse).

Check of playability

1. Play test disc (SZZP1054C).
2. Play track No.6 (wedge 0.7mm) and verify that there is no skip sound or noise.

3. Play the track No.13 (black dot 0.7mm) and verify that there is no skip sound or noise.

Note: Never use the speakers to check playability; always use the headphones. Sounds output through the speakers will cause the unit cabinets to vibrate and this will prevent accurate checks of playability.

OPTICAL PICKUP ADJUSTMENTS

Measuring Instruments and Special Tools

- Two-channel oscilloscope (with trigger) of 30MHz or over
- Test discs
- Test disc (SZZP1014F) old or new type
- Inspection test disc (SZZP1054C)
- Uneven disc (SZZP1056C)

- Hexagonal wrench
- Screw lock paint (RZZ0L01)
- Feeler gauge (RZZ0297)
- Hexagonal wrench (SZZP1011C)

MECHANICAL ADJUSTMENT

1. Connect CH1 of the oscilloscope to TP703 (+) and TP701 (-) of the main P.C.B.

Oscilloscope setting: VOLT.....200mV
SWEEP.....0.2μsec
INPUT.....AC

2. Turn **ON** the power switch of the player and insert the test disc (SZZP1056C) and play Track No.5.
3. Using the manual search buttons, move the pickup so that the mechanical adjustment screws line up with the adjustment holes in the bottom panel.

4. Monitoring RF signal on the oscilloscope, adjust the two **adjusting screws** alternately with the 2mm hexagonal wrench so that the vertical fluctuation of RF signal is minimized and the eye pattern is most stretched.
5. Turn **OFF** the power switch of the player.
6. After adjustment, apply **screw lock paint (RZZ0L01)** to the adjusting screws.


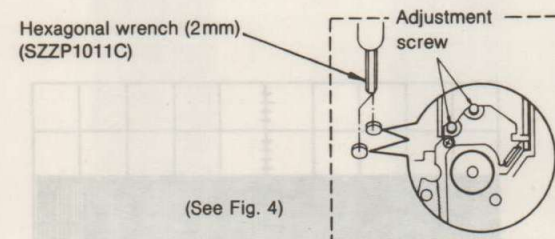



Fig. 3

Note: The mechanical adjustment screws have been locked with screw lock paint at the factory. They might be hard to turn.

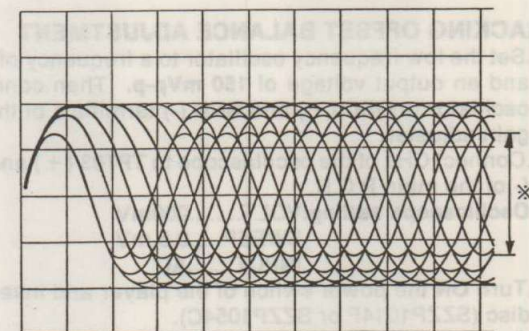

※ Most stretched eye pattern.

INTERNAL CONNECTIONS OF LCD (Liquid Crystal Display)

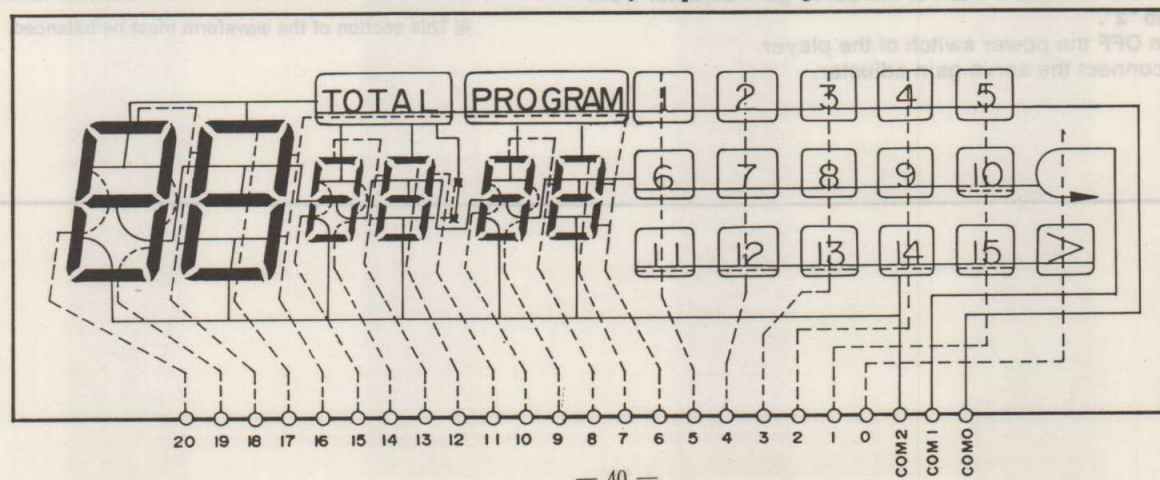

FUNCTIONS OF IC TERMINALS

• IC704: MN6617

(SIGNAL PROCESS)

Terminal No.	Terminal Symbol	I/O	Function
1	BLKCK	O	This terminal outputs a 75 Hz clock signal of sub-code block (data Q) to IC801 (pin 83).
2	CLOCK	O	This terminal outputs a 7.35 Hz clock signal of sub-code block (data Q) to IC801 (pin 78).
3	SUBQ	O	This terminal outputs a signal of sub-code block (data Q) to IC801 (pin 79).
4	CRC	—	—
5	RST	I	This is the terminal for resetting the system, e.g. when the unit is powered OFF, the circuit is reset by LOW level signals.
6	MLD	I	MCLK and MDATA signals are input to the terminal from IC801 (pin 15).
7	MCLK	I	This terminal receives 8 bit data reading clock signal from IC801 (pin 12).
8	MDATA	I	This IC receives a data signal input (8 bit) IC from IC801 (pin 13).
9	DMUTE	I	This terminal receives a "HI" level muting signal.
10	TRON	I	This terminal receives a tracking servo control signal. At a "LOW" level...the tracking servo is ON.
11	STAT	O	This terminal outputs data signals (CRC, STOP) to IC801 (pin 19).
12	SMCK	O	This terminal outputs a clock signal of 4.2336 MHz to IC801.
13	PMCK	—	—
14	ITC	I	This is the track counter input terminal, but it is not used in this unit. It is connected to a +5V power supply.
15	TEST	—	—
16	X2	O	These are the clock transmission terminals (16.9344 MHz).
17	X1	I	
18	SEL	I	This is the data output selection input terminal. At a "HI" level...parallel data output. At a "LOW" level...serial data output. *When connected, this unit is at a "HI" level.
19	LOG/WDCKS	—	—
20	RDG	—	—
21	DEMPH	O	This is the de-emphasis control output terminal. At a "HI" level...the de-emphasis control is set ON.
22	IPFLAG	—	—

Terminal No.	Terminal Symbol	I/O	Function
23	FLAG0	—	—
24	FLAG6	—	—
25	XCK	O	This terminal outputs a clock signal of 16.93 MHz to IC701 (pin 1).
26	DA15	O	These terminals output L and R signals to IC707 (pins 6 and 7.)
28	DA13	O	
31	GND	O	For ground connection.
32	DA10	O	These terminals output L and R signals to IC707 (pin 5).
27	DA14	—	—
29	DA12	—	—
30	DA11	—	—
33~42	DA9~DA0	—	—
43~50	D7~D0	I/O	These terminals input/output RAM data signals (16 K) to IC705.
51	RAMOE	O	This terminal outputs RAM OE control signals (16 K) to IC705.
52	RAMWE	O	This terminal outputs RAM WI control signals (16 K) to IC705.
53~63	RAMA0~RAMA10	O	These terminals output RAM address signals (16 K) to IC705.
64	PC	—	—
65	EC	O	This is the spindle motor control output terminal. The spindle motor operates at a "LOW" level.
66	FG	—	—
67~71	—	—	—
69, 73	VDD	I	To be connected to a +5V power supply.
72	PCK	I	This is the PLL extraction clock input terminal (f = 4.2336 MHz).
74	EFM	I	This terminal receives EFM input signals (PLL) from IC702 (pin 21).
75	SRF	I	This terminal receives EFM input signals (DSL) from IC702 (pin 19).
76	DO	I	This terminal receives a drop-out input signal from IC701 (pin 33). At a "HI" level...drop-out comes into effect.
77	CLVS	—	—
78	FPC	O	This terminal outputs a frequency comparison signal for PLL use to IC702 (pin 14).
79~84	—	—	—

• IC601: MN178611RRM0 (SYSTEM CONTROL/LCD DRIVE)

Terminal No.	Terminal Symbol	I/O	Function
1	RST	I	This terminal resets the microcomputer to its initial status, e.g. when the unit is powered OFF and at "LOW" level.
3	TCNT (X1)	I	This is the terminal for counting the numbers of tracks crossed on a disk.
4	Vss	—	For ground Connection
6	OSC1	I	This is the input terminal for the reception of the microcomputer's clock signal. This 4.2336-MHz signal from IC704 (pin 12) is input into this terminal.
7	VDD	I	To be connected to a +5V power supply.
10	MAR	O	When the unit is in ATLS operation, this terminal outputs a mute signal ("HI" level) which sets the unit in the mute operational mode.
11	MOTOR	O	During synchronized tape recording, this terminal outputs the start signal to activate the motor.
12	MCLK	O	This terminal outputs the clock signal required for reading 8-bit data to IC605 (pin 7) and IC704 (pin 4).
13	MDATA	O	This terminal outputs 8-bit data for the control of IC704.
14	REQ	I	When the S816 switch is set to ON, the CD unit will be set to the MUSIC SCANNER/REM TIME operational mode.
15	MLD	O	This terminal outputs MCLK and MDAT writing signals to IC605 and IC607.
16	SENSE	I	This terminal receives data on the number of disk tracks crossed from IC702 (pin 24).
17	FLOCK	I	This terminal receives a focus clock signal from IC702 (pin 26). When the focus goes into effect, this terminal receives a "Low" level input.
18	BRAKE	I	Input terminal for stopping or free-running the turntable when safety switch S820 is closed (disc holder cover open) during play. "High"...stop (brake on), "Low"...free run and stop
19	STATUS	I	This terminal receives data input (CRC, STOP) from IC704 (pin 11).
20~23	CNT1~4	O	These terminals output 4-bit data on operation on the CD Player unit to IC702 (pins 30-33). Data: PLAY, >>>, <<<, PAUSE and STOP

Terminal No.	Terminal Symbol	I/O	Function
24	POWER	I	This terminal receives a power consumption cut signal from IC703 (pin 16) when the unit is in the STOP mode. In the STOP mode...a "Low" level signal is input into this terminal.
25	TRV FWD	O	When the Traverse is moved outward, this terminal outputs a "HI" level signal to IC702 (pin 34).
26	TRV REV	O	When the Traverse is moved inward, this terminal outputs a "HI" level signal to IC702 (pin 35).
27	MUTE	O	This terminal outputs a mute signal.
28~31	P40~P43	I/O	These are the INPUT/OUTPUT scan terminals.
36~38	VL1~VL3	I	Power input terminals for the LCD driver.
39~41	COM0~COM2	O	Common output signal terminals for the LCD driver.
43~63	SEG0~SEG20	O	Segmental output signal terminals for the LCD driver.
75	TIMER	I	The timer operates after a "HI" level signal is input into this terminal when the CD unit is in the timer control playback mode.
76	ATLS	I	This is the input terminal for the automatic setting of the CD recording level. At a "Low" level the recording level will be set automatically.
77	REC H	I	Input terminal for detecting the cassette deck key status during CD play. "High"...standby for recording, "Low"...stop, play, etc.
78	CLOCK (SBTA)	I	This terminal receives a 7.35 kHz clock signal of sub-code block (data Q) from IC704 (pin 2).
79	SUBQ (SBTA)	I	A data Q sub-code signal from IC704 (pin 3) is input into this terminal.
82	IRQ1	I	This is the OPEN/CLOSE CD compartment cover input terminal. When the CD compartment cover is open, a "LOW" level signal is input into this terminal and the IC is reset to its initial status.
83	BLKCK (IRQ0)	I	A 75 BHz clock signal of sub-code block (data Q) is input into this terminal from IC704 (pin 1).

REPLACEMENT PARTS LIST

- Notes : * Important safety notice:
Components identified by  mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
* The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
Parts without these indications can be used for all areas.
*  Indicates in Remarks columns parts that are supplied by MESA.



Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS		36	RDP3612A-0	POINTER	
				37	RBC1413ZA-0	BUTTON, CASSETTE EJECT	
				38	RBT2832B-0	KNOB, TUNING	
1	1MCADS650ZA	SHIELD PLATE ASS'Y		39	EAS16P431A-G	SPEAKER	
2	RMC1257ZA	SHIELD PLATE		40	RYM2XCS750P	SP FRONT CAB. ASS'Y (R)	
3	RDG5840ZA	GEAR		40A	RYEXCS750P	TWEETER ASS'Y (R)	
4	XYN26+C6	SCREW		41	RJE297ZA	SPEAKER CORD	
5	XTN3+20CFZ	SCREW		42	XTV3+10G	SCREW	
6	XTV3+10CFZ	SCREW		43	XTV3+20GFY	SCREW	
7	RKK317YA-0	BATTERY COVER		44	RHG2152ZA	BUSH	
8	RBC1399ZA-0	BUTTON, XBS		45	RHR3401ZA	SOUND ABSORBING MATERIAL	
9	RBC1411ZA-0	BUTTON, POWER		46	RKF971ZA-0	SP. BOX (L)	
10	RBD567ZA-0	KNOB, GEQ/BAL		47	RKE651ZA-0	HANGER	
11	RBD572ZA-0	KNOB, REV MODE		48	RMV226ZA	HEAT SINK	
12	RBN783ZA-0	KNOB, VOLUME		49	XTV3+8F	SCREW	
13	RBS261ZA-0	KNOB, SELECTOR		50	RJW170YAA	SPRING	
14	RUL1136ZA	LEVER		51	RKF0081	CASSETTE LID ASS'Y	
16	RDG5782YC	GEAR		52	RDG5782YC	GEAR	
17	XTW3+10P	SCREW		53	RYM3XCS750P	SP FRONT CAB. ASS'Y (L)	
18	RKE653ZA-0	CHASSIS, CD		53A	RYEXCS750P	TWEETER ASS'Y (L)	
19	RBC1412ZA-0	BUTTON, CD EJECT		54	RKF971YA-0	SP BOX (R)	
20	XEARR175FA-Y	TELESCOPIC ANT		55	RJF28ZA	FUSE HOLDER	
22	RJC511ZBS	BATTERY SPRING		56	RMP289ZA	LED HOLDER	
23	XYN3+F12FY	SCREW		57	RMP290ZA	LED HOLDER	
24	XTV3+12G	SCREW		58	RME9036ZAA	LED HOLDER	
25	RKS0048	REAR CABINET ASS'Y	(E) 	59	WBB6GB-25MM	FLAT CABLE	
25	RKS0049	REAR CABINET ASS'Y	(EB) 	60	WBB6GB-20MM	FLAT CABLE	
25	RKS0050	REAR CABINET ASS'Y	(EG) 	61	WBB9GB-20MM	FLAT CABLE	
25A	RJT1140ZA	ANT. TERMINAL		62	WBB9GB-31MM	FLAT CABLE	
25B	RGT1397ZA-0	NAME PLATE	(E) 	63	WBB10KS-7MM	FLAT CABLE	
25B	RGT1397XA-0	NAME PLATE	(EG) 	64	WBB12KS-7MM	FLAT CABLE	
25B	RGT1397YA-0	NAME PLATE	(EB) 	67	WBB9GB-9MM	FLAT CABLE	
26	1KHADS650ZA	HANDLE ASS'Y		68	WBB2AB-17M	FLAT CABLE	
27	RJW217ZA	SPRING		69	RJP2G18ZA	PLUG (2P)	
28	RYF0049	CD LID ASS'Y		70	RJP5G35ZA	PLUG (5P)	
28A	RHR3400ZA	DISC HOLDER		71	RJS6T7ZA	SOCKET (6P)	
28B	RHM245ZA	MAGNET		72	RJS12T7ZA	SOCKET (12P)	
28C	RGX1807ZA-0	HOLDER		73	RJS10T7ZA	SOCKET (10P)	
28D	RME502ZA	CLAMPER		74	RJS16Q11ZA	SOCKET (16P)	
29	RUL1137ZA	ROD		75	RJP2G4YA	CONNECTOR (2P)	
30	RUL1138ZA	LEVER		76	RJP5G18ZA	CONNECTOR (5P)	
31	RUL1139ZA	LEVER		77	RJS2T5ZA	SOCKET (2P)	
32	RJS779ZA	SPRING		78	RJS9T7ZA	SOCKET (9P)	
33	RKM0067	FRONT CABINET ASS'Y		79	RJS12T4ZA	SOCKET (12P)	
34	RDG5962ZA	RACK		80	RJS6T4ZA	SOCKET (6P)	
35	XTV3+12G-M	SCREW		81	RJS9T4ZA	SOCKET (9P)	

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
84	RMC1254ZA	SHIELD PLATE		235	RUQ111ZA	SPRING	
85	RHM281YA	SHAFT		236	RJW145ZA	SPRING	
86	RJA849ZC	CHASSIS		237	1UB0090ZA	ROD	
87	XTV3+20G	SCREW		237A	RUB5122B	ROD	
88	WBB3GB-26MM	FLAT CABLE		238	RDG5773ZA	GEAR	
89	RJS780ZA	SPRING		239	RUQ112ZA	SPRING	
90	RJP2G17ZA	PLUG (2P)		240	RUS609ZC	TAPE PRESSURE SPRING	
		MECHANISM		241	RUB5142B	LEVER	
				242	RJW147ZA	SPRING	
				243	RUB515ZA	LEVER	
		CASSETTE DECK		244	RUB509ZA	LEVER	
201	RXQ0007	HEAD BLOCK (REC./PLAYBACK)		245	RDV100ZA	CAPSTAN BELT	
202	RJA793ZD	HEAD BASE		249	RHG3032ZA	RUBBER CUSHION	
203	RZLAR300A	ROD		250	RNL180ZB	DAMPER ARM	
203A	RJW143ZA	SPRING		251	2JSADS650ZA	LEAD WIRE ASS'Y	
204	1UB0089ZA	ARM		261	XTW2+6L	SCREW	
204A	RJW148ZA	SPRING		262	XTW2+8L	SCREW	
205	1DM0018ZA	REEL TABLE (R)		263	XTN26+7J	SCREW	
206	1DM0017ZA	REEL TABLE (F)		264	RHE5203ZA	SCREW	
207	RUB5022C	LEVER		265	XTW2+8S	SCREW	
208	RDG5772ZB	GEAR		266	XYC2+JF16	SCREW	
209	RUB508ZA	BRAKE ROD		267	QHQ1303	SCREW	
210	RUB5062B	LEVER		268	RJS9T7ZA	CONNECTOR (9P)	
211	1UB0088ZA	ARM (R)				TRAVERSE DECK	
211A	RJW141Z	SPRING		301	SISD25-2	TRAVERSE BASE	
212	1UB0087ZA	ARM (F)		352	SDGD67-E	MOTOR ASS'Y	
212A	RJW140ZB	SPRING		303	SIWD110-E	BRACKET	
213	RUB5072C	EJECT ROD (R)		304	SDGD62	GEAR	
214	RNL12D	DAMPER ARM		305	SHWD35-1	WASHER	
215	RUB5032C	MAIN LEVER		306	SUXD126-E	SHAFT	
216	RZAR300A	CHASSIS		309	SUWD120-3	SPRING	
217	RJW142ZA	SPRING		310	SIRD110-2	BRACKET	
218	RJD105Z	SPRING		311	SUWD121-1	SPRING	
219	RJW144ZA	SPRING		312	SOAD101A	OPTICAL PICK UP ASS'Y	
220	RJW139ZA	SPRING		313	SUXD27-1	SHAFT	
221	RFM173ZA	DC MOTOR		315	SHGD112	RUBBER	
222	1UE0015ZA	PLUNGER		316	SHGD113-1	RUBBER	
223	RUB428ZE	MOVING IRON CORE		317	XQN2+A2	SCREW	
224	RUL1030ZC	ANGLE		318	XQN17+C3FZ	SCREW	
225	RMD5014ZB	ANGLE		319	XQS2+A4FZT	SCREW	
226	RDG5927ZG	GEAR		320	SNSD38	SCREW	
227	1DWD037ZB	FLYWHEEL (F)		321	XTS2+8J	SCREW	
227A	RNW139ZA	WASHER		322	SJGD13-A	MOTOR	
228	1DWD038ZB	FLYWHEEL (R)		323	RJW183ZA	SPRING	
228A	RNW138Z	WASHER				ACCESSORIES	
229	1DG0006ZA	REEL TABLE GEAR					
230	RUB5132C	ARM					
231	1UB0091ZA	LEVER					
231A	RJW146ZA	SPRING		A1	RJA20ZD-K	POWER CORD	(E, EG) 
232	1DR0011ZA	MAIN PULLEY		A1	RJA86ZB-K	POWER CORD	(EB) 
233	RDV90ZB	BELT		A2	RFKXDS650-K	INST. MANUAL ASS'Y	(E) 
234	RDG5769ZA	REEL TABLE GEAR					


CABINET PARTS LOCATION (See parts list on page 43.)

Ref. No.	Part No.	Part Name & Description	Remarks
A2	RQX5255ZA	INST. MANUAL	(EG, EB) [M]
		PACKING MATERIAL	
P1	RPH655ZA	SHEET	[M]
P2	RPN9589ZA	CUSHION	[M]
P3	RPK2834ZA	GIFT BOX	[M]

CD PLAYER (TRAVERSE) PARTS LOCATION (See parts list on page 44.)

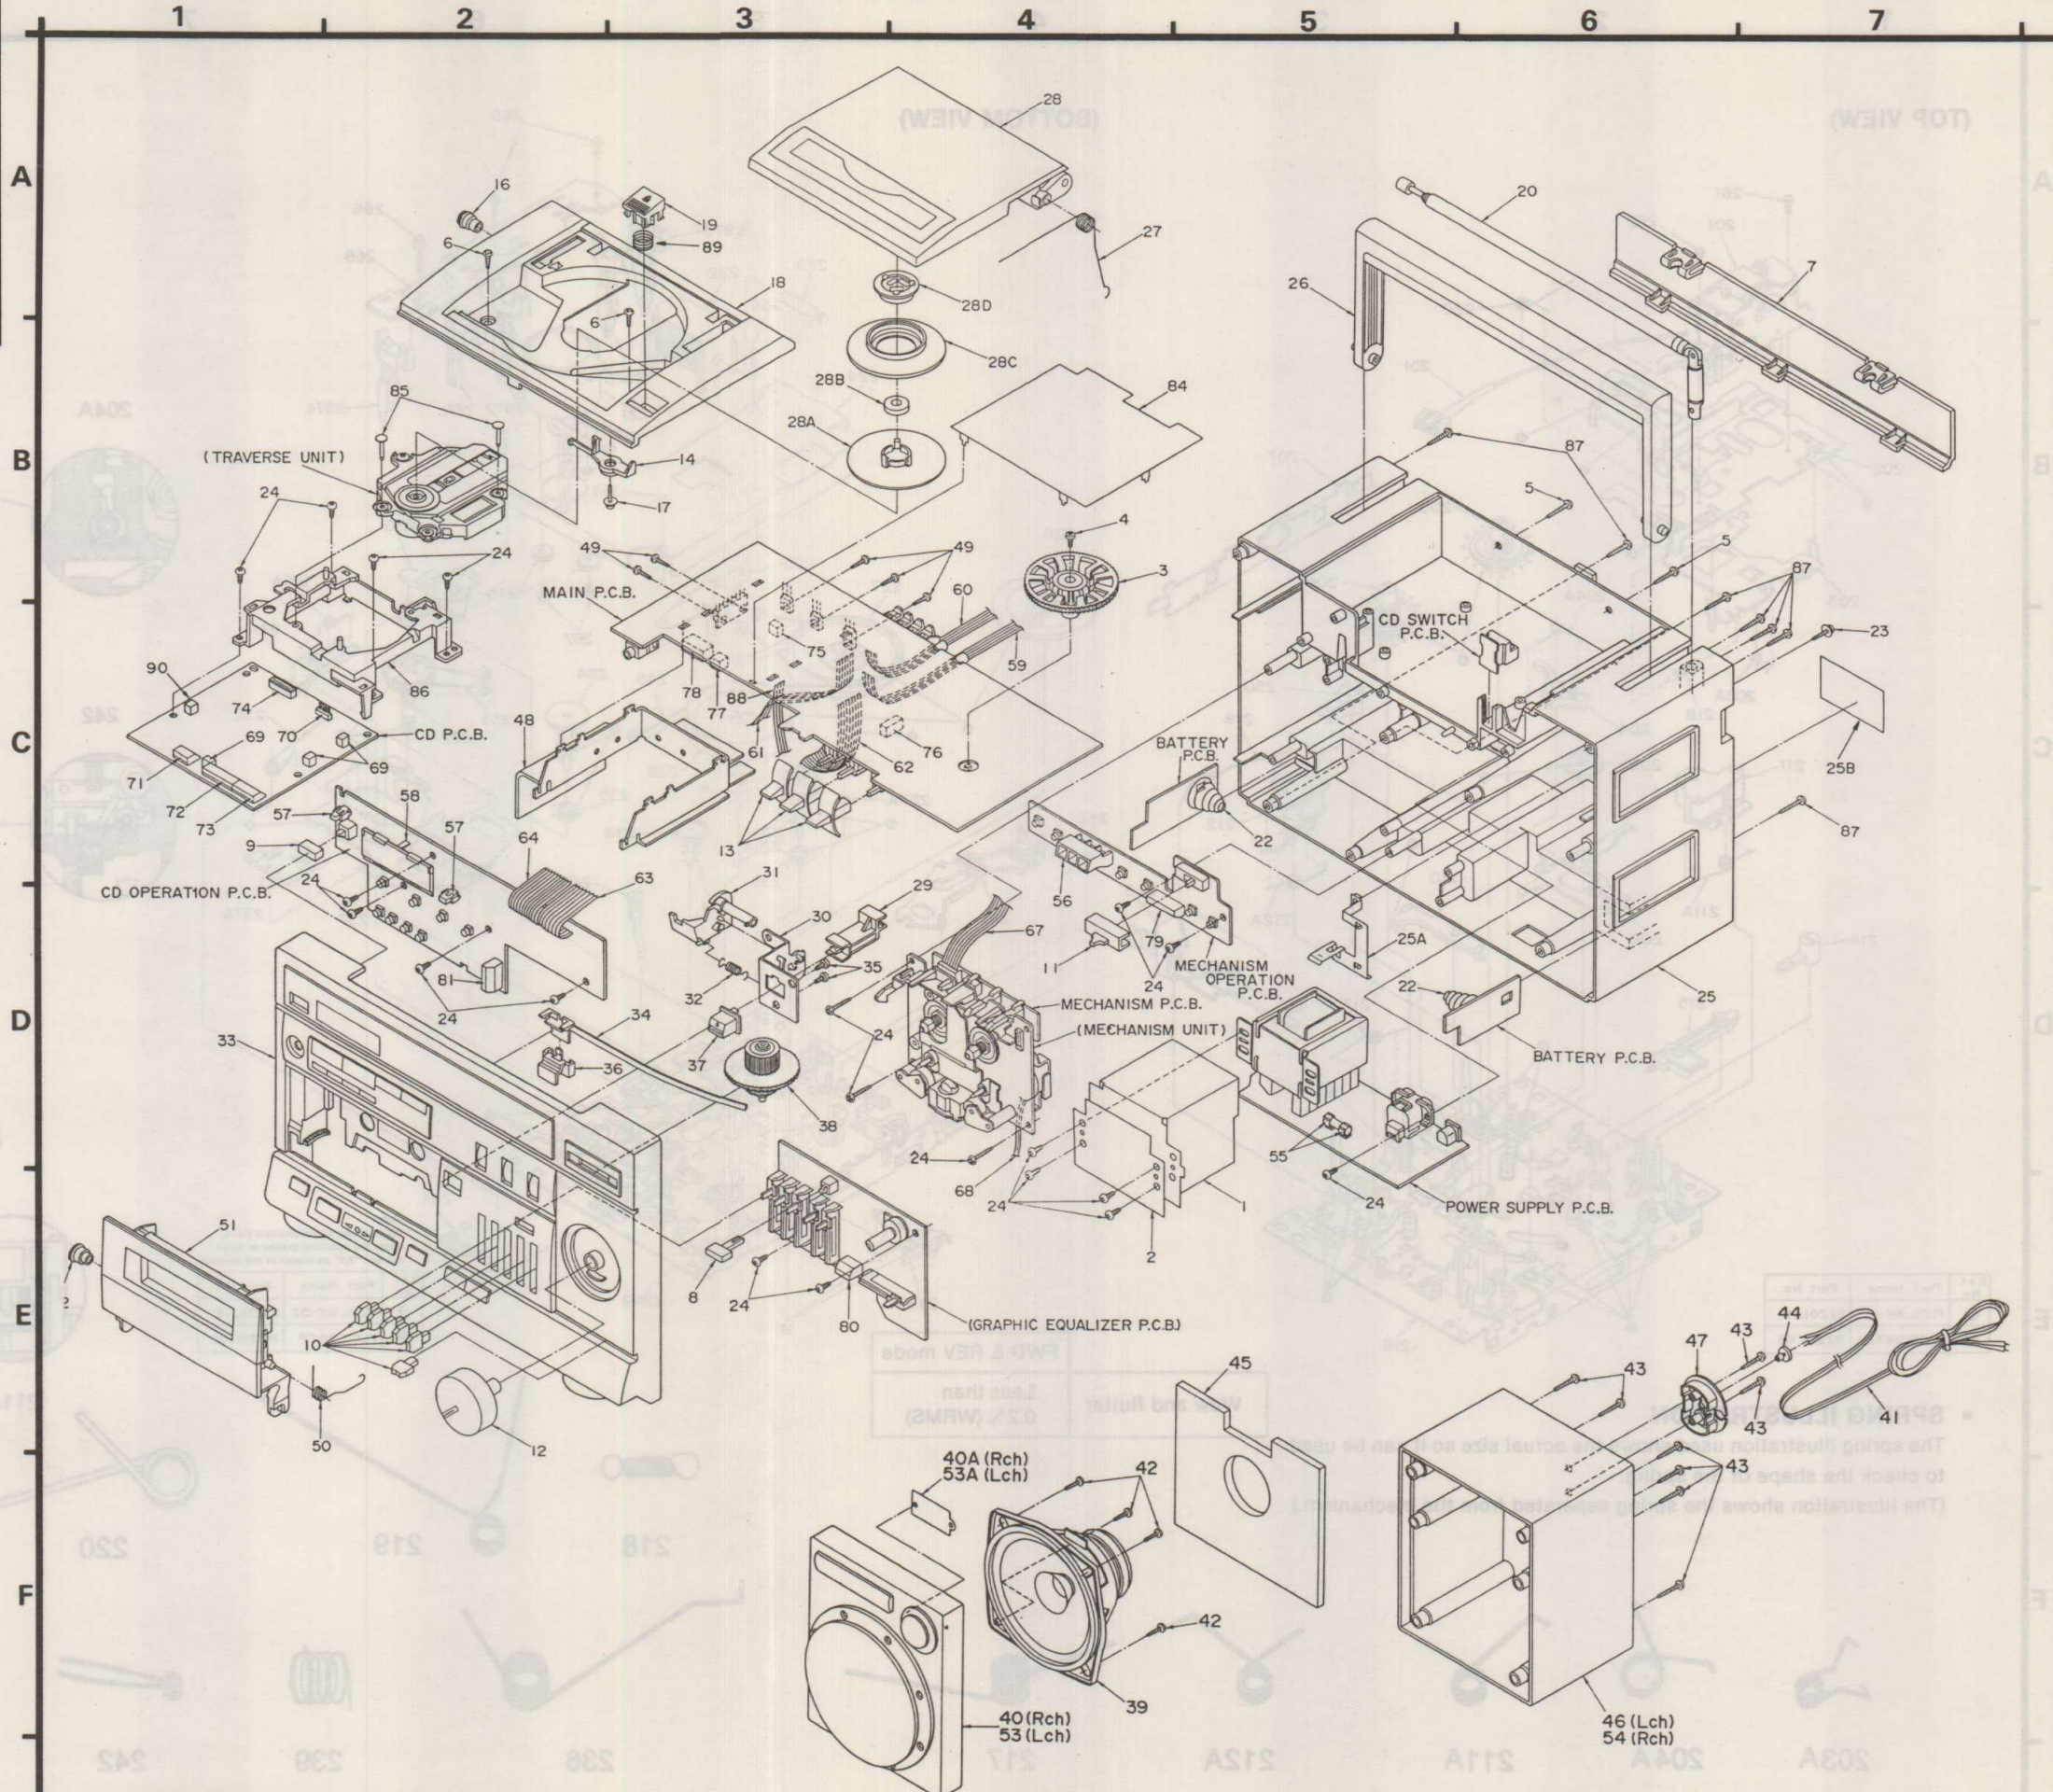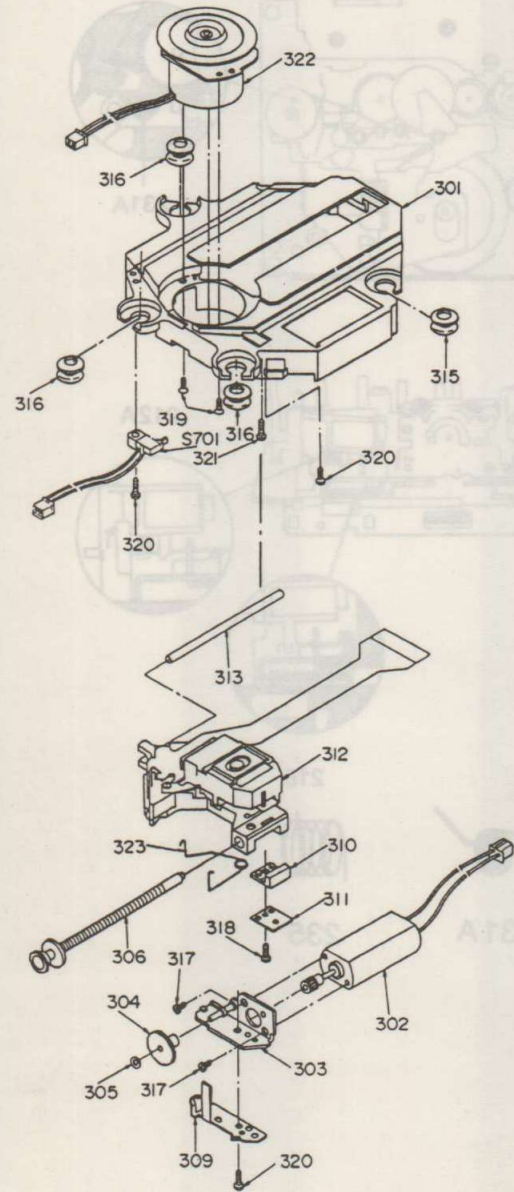

MECHANISM PARTS LOCATION (See parts list on page 44.)

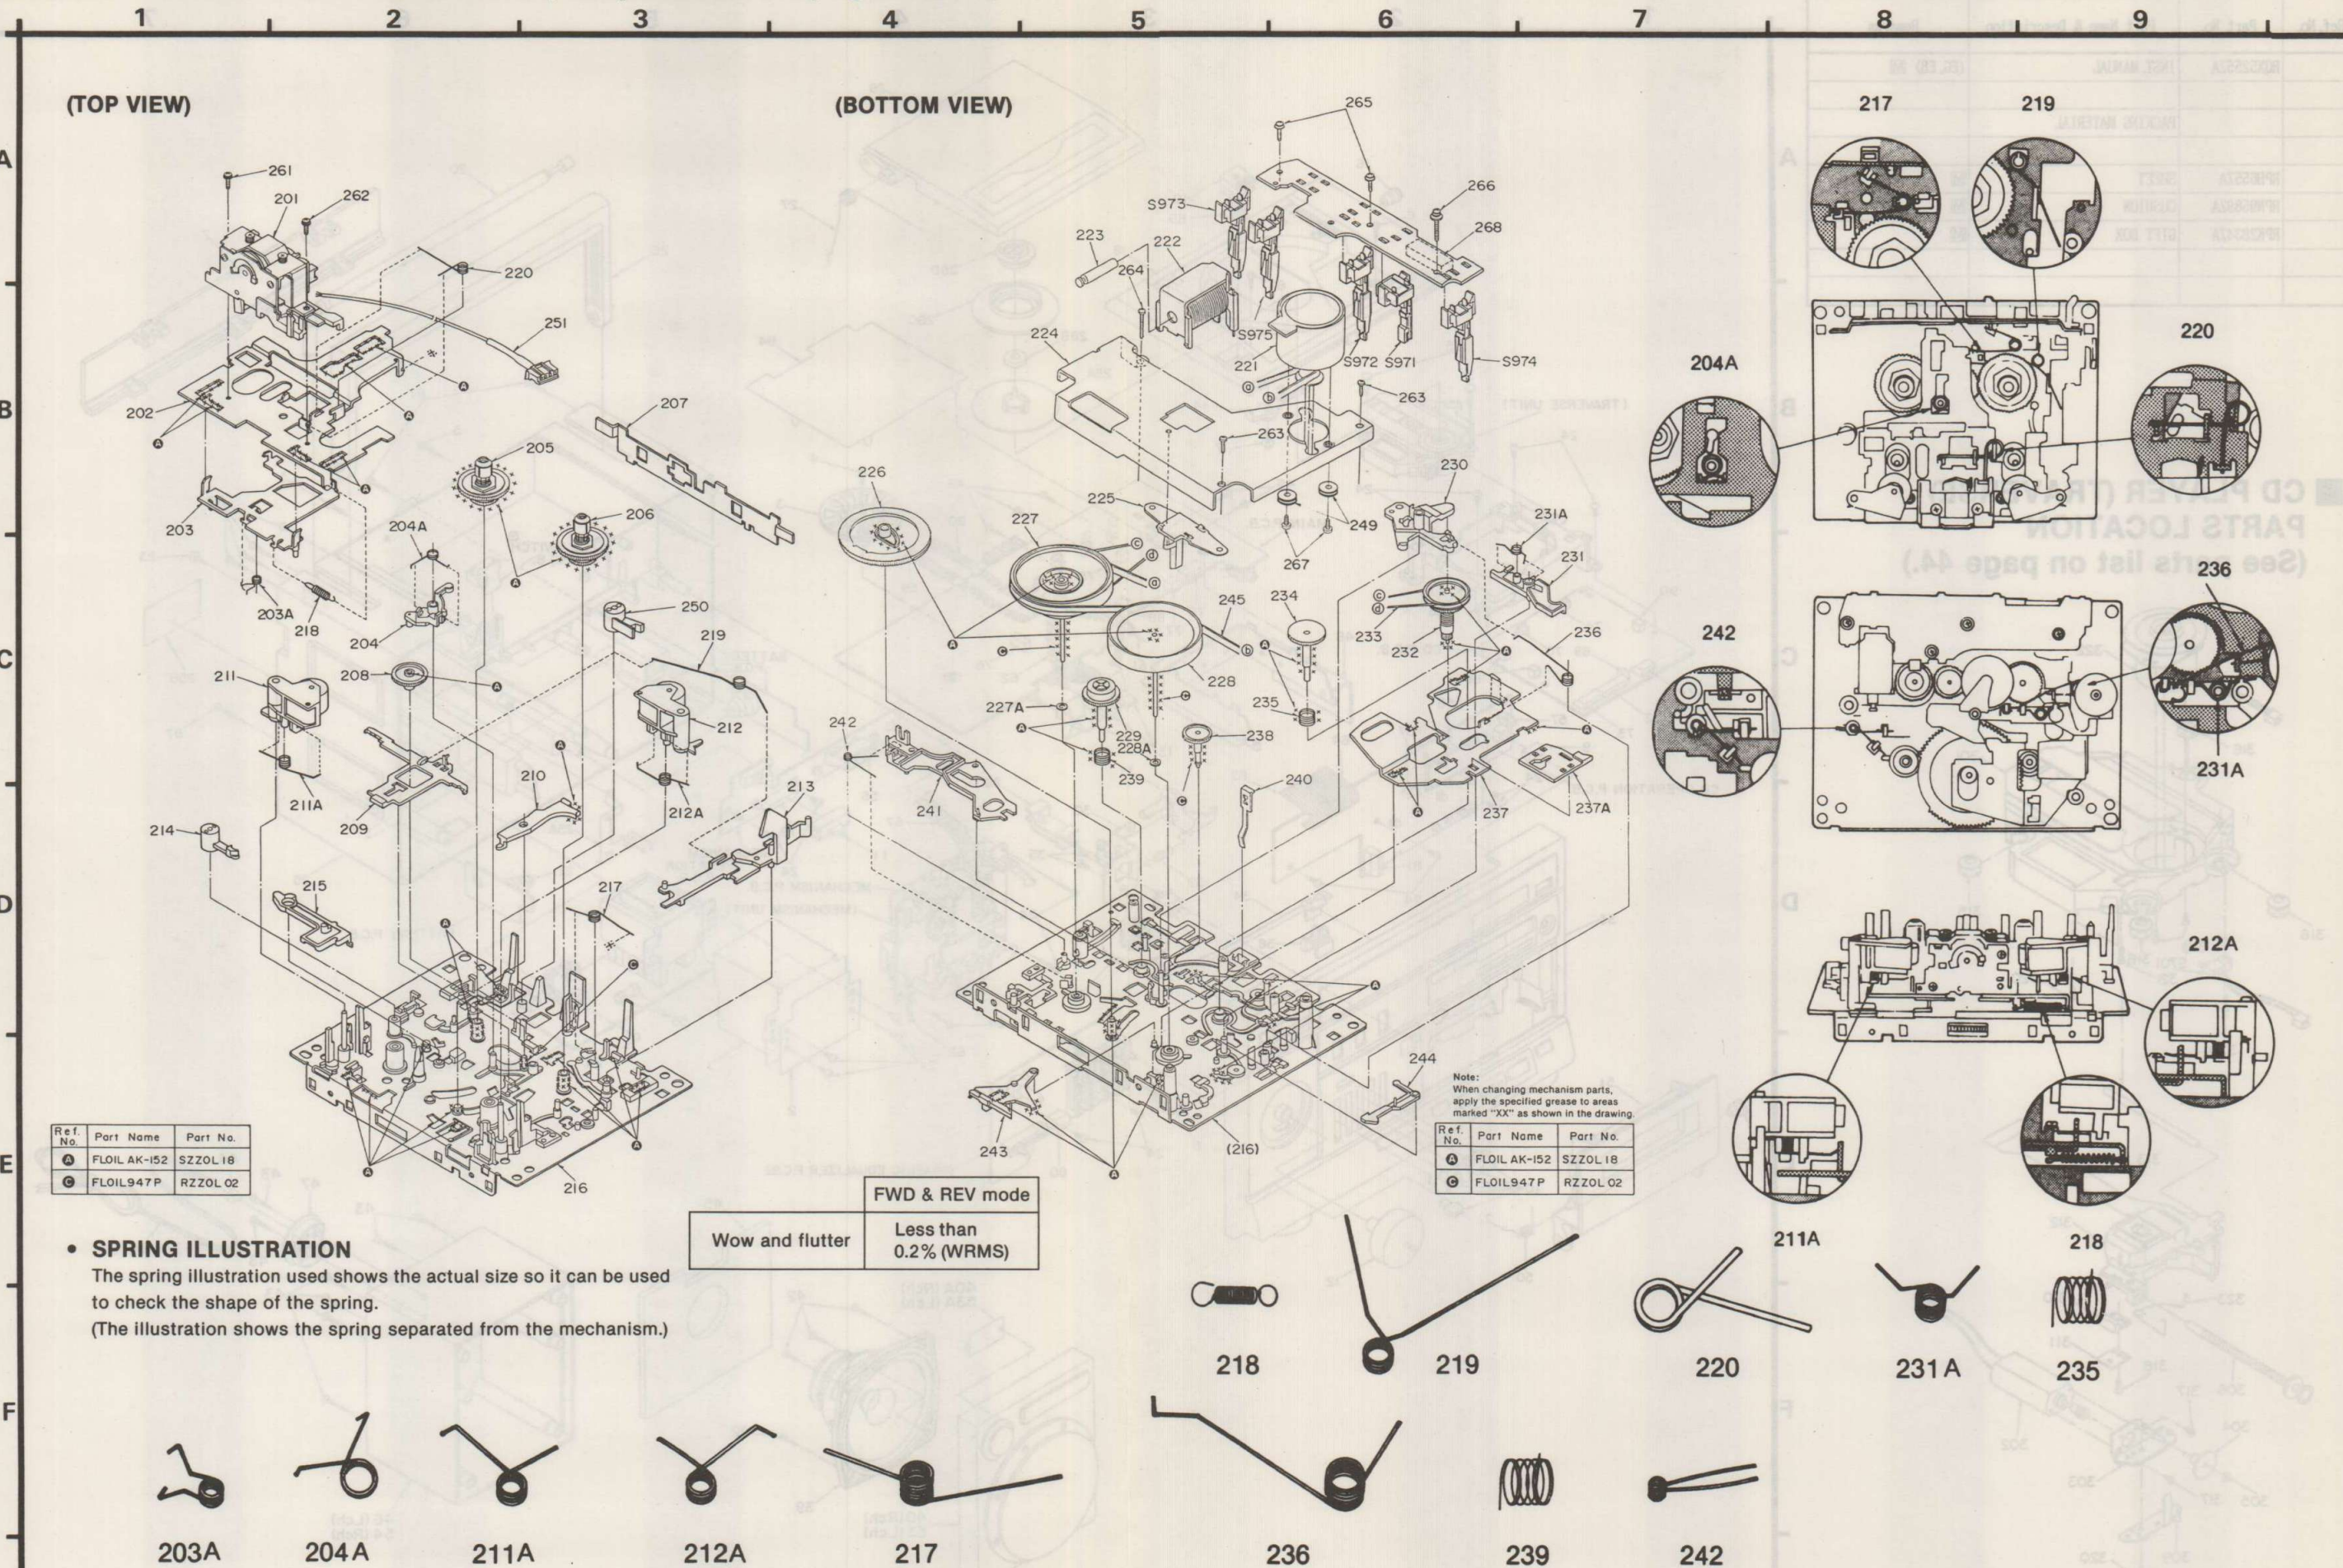

Notes : * Important safety notice:

Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

* The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.) Parts without these indications can be used for all areas.

* [M] Indicates in Remarks columns parts that are supplied by MESA.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUITS					
IC1	AN7205	I. C, FM FRONT END		Q314	RVTDA114EST	TRANSISTOR	
IC2	BA4237L	I. C, IF AMP		Q315	2SC2001L2TA	TRANSISTOR	
IC3	RVIBA1332L	I. C, FM MPX	[M]	Q316	2SB1311Q	TRANSISTOR	
IC301	BA7755	I. C, R/P SELECT		Q317	2SA952L1TA	TRANSISTOR	
IC302	AN6557F	I. C, EQ AMP		Q318	2SB1311Q	TRANSISTOR	
IC303	BA3310N	I. C, REC AMP		Q319	RVTDC114EST	TRANSISTOR	
IC304	RVIBA338	I. C, TPS AMP		Q320	2SC1684STA	TRANSISTOR	
IC305	TC9312AN-067	I. C, MECHANISM CON.		Q321, 322	2SA952L1TA	TRANSISTOR	
IC306	AN7133N	I. C, POWER AMP		Q323	2SB1185E	TRANSISTOR	
IC601	MN178611RMO	I. C, SYSTEM CONTROL	[M]	Q324-326	2SC1684STA	TRANSISTOR	
IC602	BA3822LS	I. C, G. EQ AMP		Q327	RVTDC114EST	TRANSISTOR	
IC701	AN8373SE2	I. C, CD SERVO SYSTEM		Q328	2SC1684STA	TRANSISTOR	
IC702	AN8374SE2	I. C, PWM DRIVE/PLL		Q329, 330	2SC1684RTA	TRANSISTOR	
IC703	AN8377N	I. C, MOTOR DRIVE		Q331	2SC1740RTA	TRANSISTOR	
IC704	MN6617	I. C, SIGNAL PROCESS		Q401, 402	2SC1684RTA	TRANSISTOR	
IC705	LC3517BMLTP	I. C, DE INTERLEAVE		Q501, 502	2SC1684RTA	TRANSISTOR	
IC706	TA8410P	I. C, MOTOR DRIVE		Q601	RVTDC144EST	TRANSISTOR	
IC707	SM5807ESET	I. C, DIGITAL FILTER		Q602	RVTDA144TST	TRANSISTOR	
IC708	UPD6372GSE2	I. C, D/A CONVERTER		Q603, 604	2SC1684RTA	TRANSISTOR	
IC971	DN6851A	I. C, HALL		Q701	2SA1309STA	TRANSISTOR	
		TRANSISTORS		Q703	UN4110TA	TRANSISTOR	
				Q704, 705	UN4216TA	TRANSISTOR	
						DIODES	
Q1	2SC829BTA	TRANSISTOR		D1-3	RVD1SS133TA	DIODE	
Q101	2SJ40CTA	TRANSISTOR		D101, 102	RVD1SS133TA	DIODE	
Q102	2SC2001L1TA	TRANSISTOR		D201, 202	RVD1SS133TA	DIODE	
Q103	2SC1684RTA	TRANSISTOR		D301-304	RVD1SS133TA	DIODE	
Q104	2SC2001L2TA	TRANSISTOR		D305	RVDMT25R1CTA	DIODE	
Q201	2SJ40CTA	TRANSISTOR		D306	MA700TA	DIODE	
Q202	2SC2001L1TA	TRANSISTOR		D307-313	RVD1SS133TA	DIODE	
Q203	2SC1684RTA	TRANSISTOR		D314	RVDMT25R1CTA	DIODE	
Q204	2SC2001L2TA	TRANSISTOR		D315-320	RVD1SS133TA	DIODE	
Q301	2SC1740RTA	TRANSISTOR		D321	RVDMT27R5BTA	DIODE	
Q302	2SC2001L1TA	TRANSISTOR		D322	RVDMT212BTA	DIODE	
Q303	2SC1684STA	TRANSISTOR		D323-325	RVD1SS133TA	DIODE	
Q304	2SC2001L1TA	TRANSISTOR		D326	RVDMT29R1BTA	DIODE	
Q305	RVTDC114EST	TRANSISTOR		D327-329	RVD1SS133TA	DIODE	
Q306, 307	RVTDA114EST	TRANSISTOR		D330	RVDMT28R2BTA	DIODE	
Q308, 309	2SC1684STA	TRANSISTOR		D601	RVD1SS133TA	DIODE	
Q310	RVTDC114EST	TRANSISTOR		D602, 603	RVDSEL1121RT	L. E. D	[M]
Q311	RVTDC144EST	TRANSISTOR		D604-608	RVD1SS133TA	DIODE	
Q312	2SC1684STA	TRANSISTOR		D609-612	RVP300DLF	DIODE	
Q313	RVTDC114EST	TRANSISTOR		D613	RVDLV31VC3F	L. E. D	
				D614, 615	RVDLV31MC3F	L. E. D	

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
D616-621	RVD1SS133TA	DIODE		S3	RJJA52C-H	JACK, W/SW (J3)	Δ
D707, 708	MA165TA	DIODE		S301	RST4D072A-A	SW, SELECTOR	[M]
D971	RVD1SS133TA	DIODE		S601	RSH1A100ZA-A	SW, MEMORY/RECALL	[M]
		VARIABLE RESISTORS		S602	RSH1A100ZA-A	SW, EDIT PAUSE	[M]
				S603	RSH1A100ZA-A	SW, SKIP/SEARCH	[M]
				S604	RSH1A100ZA-A	SW, PLAY/STOP	[M]
VR1	RVNCA14B1T-A	V. R, FM MPX VCO ADJ.	[M]	S605	RSH1A100ZA-A	SW, M. SCAN/REM TIME	[M]
VR301	RVNCA24B1T-A	V. R, REC BIAS ADJ.		S606	RSH1A100ZA-A	SW, SKIP/SEARCH	[M]
VR601	EWAGU3C14G15	V. R, BALANCE CONTROL	[M]	S607	RSH1A100ZA-A	SW, PAUSE/CLEAR	[M]
VR602-606	EWAGQ6C14G54	V. R, G. EQ CONTROL	[M]	S608	RSH1A100ZA-A	SW, REPEAT	[M]
VR607	EWCT5AF20B54	V. R, VOLUME CONTROL	[M]	S609	ESB6483	SW, POWER	[M]
VR701	EVNDXAA00B14	V. R, BEST EYE ADJ.		S610	RSH1A64ZA-U	SW, OPEN/CLOSE	
VR702	EVNDXAA00B24	V. R, TRACKING BAL. ADJ.		S611	RSH1A64ZA-U	SW, LASER ON/OFF	
VR703	EVNDXAA00B14	V. R, FOCUS OFFSET ADJ.		S612	RSH1A100ZA-A	SW, FAST/TPS	[M]
VR704	EVNDXAA00B14	V. R, FOCUS GAIN ADJ.		S613	RSH1A100ZA-A	SW, REV. PLAY	[M]
VR705	EVNDXAA00B14	V. R, TRACKING GAIN ADJ.		S614	RSH1A100ZA-A	SW, FOR PLAY	[M]
VR706	EVNDXAA00B14	V. R, TRACKING OFFSET ADJ.		S615	RSH1A100ZA-A	SW, STOP	[M]
		VARIABLE CAPACITORS		S616	RSH1A100ZA-A	SW, FAST/TPS	[M]
				S617	RSH1A100ZA-A	SW, REC. PAUSE	[M]
VC1	RCV4RC2V2K-A	V. C.	[M]	S618	RSS3A18YA-H	SW, REV. MODE	
		COILS AND TRANSFORMERS		S620	ESB6483	SW, XBS	[M]
				S701	SSH5-E	SW, REST	
				S971-975	RSH1A89ZA-U	SW, MECHANISM	
L2	RLQY30S1W-0	COIL	[M]			JACKS	
L3	RLF6W9-0	COIL, AM ANT.	[M]				
L5	RL02B108-M	COIL, AM OSC		J1	RJF1099YA	JACK, AUX IN	
L6	RLD4Y53-0	COIL, FM OSC	(E, EB)	J2	RJJD7S22A-C	JACK, H. P	
L6	RL04N233-0	COIL, FM OSC	(EG)	J3	RJJA52C-H	JACK, AC JACK W/SW (S3)	Δ
L7	RL01B13-M	COIL		J4	RJF1098ZA-H	JACK, SPEAKER	[M]
L101, 201	RLQZB272KT-D	COIL	[M]	J5	RJJB3ZD-C	JACK, DC IN	
L301, 302	RLQZB102KT-D	COIL				THERMISTOR	
L303	RL08R7-T	COIL	[M]				
T1	RL14B153-M	TRANSFORMER, FM 1FT		TH301	RRT202T-H	THERMISTOR	
T2	RL12B458-M	TRANSFORMER, AM 1FT				FUSE	
T3	RL14B153-M	TRANSFORMER, FM 1FT					
T601	RLT5L5G4B-X	POWER TRANSFORMER	(E, EG) Δ [M]				
T601	RLT5L5A4A-X	POWER TRANSFORMER	(EB) Δ [M]				
		FILTERS		F601	XBA2C40TBOK	FUSE	Δ
						OSCILLATOR	
CF1	RVF107WMZT	CERAMIC FILTER					
CF2	RVFSFU459B	CERAMIC FILTER		X701	RSX216M9M01T	OSCILLATOR	
		LCD				TRIMMERS	
LCD1	LDBU9282AZ-1	LCD, DISPLAY	[M]	CT7	RCVTZ20F	TRIMMER	
		SWITCHES		CT8	RCVTZ20F	TRIMMER	
						IC PROTECTORS	
S1	RST3F27ZA-A	SW, BAND	[M]				
S2	RST3B36ZA-A	SW, FM MODE/B. P.	[M]	IP301	RAHICPN5TA	IC PROTECTOR	
				IP302	RAHICPN5TA	IC PROTECTOR	

RESISTORS & CAPACITORS

Notes : * Capacity value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS						
R1	ERDS2TJ101T	1/4W 100	R201	ERDS2TJ473T	1/4W 47K	R325	ERDS2TJ101T	1/4W 100
R2	ERDS2TJ220T	1/4W 22	R202	ERDS2TJ682T	1/4W 6. 8K	R326, 327	ERDS2TJ102T	1/4W 1K
R4	ERDS2TJ101T	1/4W 100	R203	ERDS2TJ273T	1/4W 27K	R328	ERDS2TJ330T	1/4W 33
R5	ERDS2TJ100T	1/4W 10	R204	ERDS2TJ472T	1/4W 4. 7K	R330	ERDS2TJ821T	1/4W 820
R6	ERDS2TJ470T	1/4W 47	R205	ERDS2TJ822T	1/4W 8. 2K	R331	ERDS2TJ103T	1/4W 10K
R7	ERDS2TJ101T	1/4W 100	R206	ERDS2TJ153T	1/4W 15K	R332, 333	ERDS2TJ333T	1/4W 33K
R9	ERDS2TJ270T	1/4W 27	R207	ERDS2TJ334T	1/4W 330K	R334	ERDS2TJ104T	1/4W 100K
R10	ERDS2TJ392T	1/4W 3. 9K	R208	ERDS2TJ104T	1/4W 100K	R335	ERDS2TJ101T	1/4W 100
R11	ERDS2TJ822T	1/4W 8. 2K	R209	ERDS2TJ330T	1/4W 33	R336	ERDS2TJ103T	1/4W 10K
R12	ERDS2TJ680T	1/4W 68	R210	ERDS2TJ682T	1/4W 6. 8K	R337	ERDS2TJ102T	1/4W 1K
R13	ERDS2TJ472T	1/4W 4. 7K	R211	ERDS2TJ392T	1/4W 3. 9K	R338	ERDS2TJ472T	1/4W 4. 7K
R14	ERDS2TJ473T	1/4W 47K	R212	ERDS2TJ473T	1/4W 47K	R339	ERDS2TJ103T	1/4W 10K
R15	ERDS2TJ102T	1/4W 1K	R213	ERDS2TJ472T	1/4W 4. 7K	R340	ERDS2TJ222T	1/4W 2. 2K
R16	ERDS2TJ822T	1/4W 8. 2K	R215	ERDS2TJ392T	1/4W 3. 9K	R341	ERDS2TJ152T	1/4W 1. 5K
R17	ERDS2TJ821T	1/4W 820	R216	ERDS2TJ333T	1/4W 33K	R342	ERDS2TJ103T	1/4W 10K
R18	ERDS2TJ821T	1/4W 820	R217	ERDS2TJ103T	1/4W 10K	R343, 344	ERDS2TJ471T	1/4W 470
R20	ERDS2TJ470T	1/4W 47	R218	ERDS2TJ470T	1/4W 47	R345	ERDS2TJ473T	1/4W 47K
R21	ERDS2TJ224T	1/4W 220K	R219	ERDS2TJ152T	1/4W 1. 5K	R346	ERDS2TJ102T	1/4W 1K
R22	ERDS2TJ471T	1/4W 470	R220	ERDS2TJ391T	1/4W 390	R347	ERDS2TJ1R5T	1/4W 1. 5
R30	ERDS2TJ470T	1/4W 47	R221	ERDS2TJ104T	1/4W 100K	R348, 349	ERDS2TJ151T	1/4W 150
R101	ERDS2TJ473T	1/4W 47K	R222-224	ERDS2TJ103T	1/4W 10K	R350	ERDS2TJ471T	1/4W 470
R102	ERDS2TJ682T	1/4W 6. 8K	R225	ERDS2TJ153T	1/4W 15K	R351	ERDS2TJ1R5T	1/4W 1. 5
R103	ERDS2TJ273T	1/4W 27K	R226	ERDS2TJ562T	1/4W 5. 6K	R352, 353	ERDS2TJ471T	1/4W 470
R104	ERDS2TJ472T	1/4W 4. 7K	R227	ERDS2TJ223T	1/4W 22K	R354	ERDS2TJ152T	1/4W 1. 5K
R105	ERDS2TJ822T	1/4W 8. 2K	R228	ERDS2TJ2R2T	1/4W 2. 2	R355	ERDS2TJ222T	1/4W 2. 2K
R106	ERDS2TJ153T	1/4W 15K	R229	ERDS2TJ151T	1/4W 150	R356	ERDS2TJ821T	1/4W 820
R107	ERDS2TJ334T	1/4W 330K	R301	ERDS2TJ682T	1/4W 6. 8K	R357	ERDS2TJ473T	1/4W 47K
R108	ERDS2TJ104T	1/4W 100K	R302	ERDS2TJ682T	1/4W 6. 8K	R358, 359	ERDS2TJ103T	1/4W 10K
R109	ERDS2TJ330T	1/4W 33	R303	ERDS2TJ223T	1/4W 22K	R360	ERDS2TJ682T	1/4W 6. 8K
R110	ERDS2TJ682T	1/4W 6. 8K	R304	ERDS2TJ102T	1/4W 1K	R361	ERDS2TJ274T	1/4W 270K
R111	ERDS2TJ392T	1/4W 3. 9K	R305	ERDS2TJ103T	1/4W 10K	R362	ERDS2TJ101T	1/4W 100
R112	ERDS2TJ473T	1/4W 47K	R306	ERDS2TJ101T	1/4W 100	R363, 364	ERDS2TJ472T	1/4W 4. 7K
R113	ERDS2TJ472T	1/4W 4. 7K	R307	ERDS2TJ472T	1/4W 4. 7K	R365	ERDS2TJ682T	1/4W 6. 8K
R115	ERDS2TJ392T	1/4W 3. 9K	R308	ERDS2TJ103T	1/4W 10K	R366	ERDS2TJ333T	1/4W 33K
R116	ERDS2TJ333T	1/4W 33K	R309	ERDS2TJ102T	1/4W 1K	R367	ERDS2TJ472T	1/4W 4. 7K
R117	ERDS2TJ103T	1/4W 10K	R310	ERDS2TJ101T	1/4W 100	R368	ERDS2TJ103T	1/4W 10K
R118	ERDS2TJ470T	1/4W 47	R311	ERDS2TJ3R3T	1/4W 3. 3	R369	ERDS2TJ473T	1/4W 47K
R119	ERDS2TJ152T	1/4W 1. 5K	R312	ERDS2TJ222T	1/4W 2. 2K	R370	ERDS2TJ102T	1/4W 1K
R120	ERDS2TJ391T	1/4W 390	R313	ERDS2TJ392T	1/4W 3. 9K	R371	ERDS2TJ222T	1/4W 2. 2K
R121	ERDS2TJ104T	1/4W 100K	R314	ERDS2TJ222T	1/4W 2. 2K	R372, 373	ERDS2TJ471T	1/4W 470
R122-124	ERDS2TJ103T	1/4W 10K	R315	ERDS2TJ182T	1/4W 1. 8K	R374	ERDS2TJ473T	1/4W 47K
R125	ERDS2TJ153T	1/4W 15K	R316	ERDS2TJ103T	1/4W 10K	R375	ERDS2TJ102T	1/4W 1K
R126	ERDS2TJ562T	1/4W 5. 6K	R317	ERDS2TJ395	1/4W 3. 9M	R376, 377	ERDS2TJ101T	1/4W 100
R127	ERDS2TJ223T	1/4W 22K	R318	ERDS2TJ221T	1/4W 220	R378	ERDS2TJ102T	1/4W 1K
R128	ERDS2TJ2R2T	1/4W 2. 2	R319	ERDS2TJ562T	1/4W 5. 6K	R379	ERDS2TJ470T	1/4W 47
R129	ERDS2TJ151T	1/4W 150	R320	ERDS2TJ154T	1/4W 150K	R380	ERDS2TJ151T	1/4W 150
			R321	ERDS2TJ563T	1/4W 56K	R381	ERDS2TJ104T	1/4W 100K
			R322, 323	ERDS2TJ472T	1/4W 4. 7K	R382	ERDS2TJ472T	1/4W 4. 7K
			R324	ERDS2TJ104T	1/4W 100K	R383	ERDS2TJ103T	1/4W 10K


Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R397	ERDS2TJ102T	1/4W 1K	R712, 713	ERDS2TJ102T	1/4W 1K	C24	ECEA1HJ010B	50V 1
R401	ERDS2TJ154T	1/4W 150K	R715	ERDS2TJ222T	1/4W 2. 2K	C25	RCBS0J223MY	6. 3V 0. 022
R402	ERDS2TJ102T	1/4W 1K	R716	ERDS2TJ102T	1/4W 1K	C26	RCBS1C103MY	16V 0. 01
R403	ERDS2TJ681T	1/4W 680	R717	ERDS2TJ104T	1/4W 100K	C27	ECEA1CU100B	16V 10
R404	ERDS2TJ472T	1/4W 4. 7K	R720	ERDS2TJ120T	1/4W 12	C28	ECEA1CU100B	16V 10
R405	ERDS2TJ103T	1/4W 10K	R721	ERDS2TJ471T	1/4W 470	C30	RCBS0J153MY	6. 3V 0. 015
R406	ERDS2TJ102T	1/4W 1K	R722	ERDS2TJ222T	1/4W 2. 2K	C31	ECEA1HJ47B	50V 0. 47
R407	ERDS2TJ100T	1/4W 10	R723	ERDS2TJ682T	1/4W 6. 8K	C32	ECEA1HJ47B	50V 0. 47
R408	ERDS2TJ222T	1/4W 2. 2K	R725	ERDS2TJ103T	1/4W 10K	C33	ECEA1HJ2R2B	50V 2. 2
R409	ERDS2TJ103T	1/4W 10K	R726	ERDS2TJ562T	1/4W 5. 6K	C34	ECQP2A102JZT	100V 0. 001
R410	ERDS2TJ104T	1/4W 100K	R727	ERDS2TJ332T	1/4W 3. 3K	C36	RCBS1C103NY	16V 0. 01
R411	ERDS2TJ223T	1/4W 22K	R728	ERDS2TJ682T	1/4W 6. 8K	C37	RCBS1C103NY	16V 0. 01
R412	ERDS2TJ224T	1/4W 220K	R732	ERDS2TJ562T	1/4W 5. 6K	C38	RCBS1H151KBY	50V 150P
R413	ERDS2TJ472T	1/4W 4. 7K	R733	ERDS2TJ683T	1/4W 68K	C39	RCBS1H102KBY	50V 0. 001
R414	ERDS2TJ472T	1/4W 4. 7K	R735	ERDS2TJ332T	1/4W 3. 3K	C40	ECEA0JU471B	6. 3V 470
R415	ERDS2TJ154T	1/4W 150K	R736	ERDS2TJ472T	1/4W 4. 7K	C41	RCBS1H2R2KCY	50V 2. 2P
R501	ERDS2TJ154T	1/4W 150K	R737	ERDS2TJ102T	1/4W 1K	C42	ECQP2A221JZT	100V 220P
R502	ERDS2TJ102T	1/4W 1K	R738	ERDS2TJ104T	1/4W 100K	C43	RCBS1H150JCY	50V 15P
R503	ERDS2TJ681T	1/4W 680	R740	ERDS2TJ471T	1/4W 470	C44	ECQP2A151JZT	100V 150P
R504	ERDS2TJ472T	1/4W 4. 7K	R741	ERDS2TJ102T	1/4W 1K	C45	RCBS1H470JLY	50V 47P
R505	ERDS2TJ103T	1/4W 10K	R742	ERDS2TJ104T	1/4W 100K	C46	ECQP2A361JZT	100V 360P
R506	ERDS2TJ102T	1/4W 1K	R743	ERDS2TJ471T	1/4W 470	C101	RCBS1H102KBY	50V 0. 001
R507	ERDS2TJ100T	1/4W 10	R745	ERDS2TJ470T	1/4W 47	C102	ECEA1HJ010B	50V 1
R508	ERDS2TJ222T	1/4W 2. 2K	R746	ERDS2TJ223T	1/4W 22K	C103	ECEA1CU100B	16V 10
R509	ERDS2TJ103T	1/4W 10K	R747	ERDS2TJ561T	1/4W 560	C104	ECEA0JU101B	6. 3V 100
R510	ERDS2TJ104T	1/4W 100K	R748	ERDS2TJ222T	1/4W 2. 2K	C105	RCBS1H101KBY	50V 100P
R511	ERDS2TJ223T	1/4W 22K	R749	ERDS2TJ224T	1/4W 220K	C106	RCBS1H471KBY	50V 470P
R512	ERDS2TJ224T	1/4W 220K	R750-752	ERDS2TJ223T	1/4W 22K	C107	ECFT1C333KDY	16V 0. 033
R513	ERDS2TJ472T	1/4W 4. 7K	R755	ERDS2TJ223T	1/4W 22K	C108	ECEA1HJ010B	50V 1
R514	ERDS2TJ472T	1/4W 4. 7K			CAPACITORS	C109	RCBS1H102KBY	50V 0. 001
R515	ERDS2TJ154T	1/4W 150K				C110	ECFT1C223KDY	16V 0. 022
R601	ERDS2TJ181T	1/4W 180				C111	ECEA0JU101B	6. 3V 100
R602	ERDS2TJ222T	1/4W 2. 2K	C3	RCBS1H100JCY	50V 10P	C112	ECFT1C333KDY	16V 0. 033
R603	ERDS2TJ222T	1/4W 2. 2K	C4	RCBS1H220JCY	50V 22P	C113	RCBS1H102KBY	50V 0. 001
R604	ERDS2TJ222T	1/4W 2. 2K	C5	ECFT1C333MDY	16V 33	C114	ECEA1HJ010B	50V 1
R605	ERDS2TJ103T	1/4W 10K	C6	RCBS1H102KBY	50V 0. 001	C115	ECEA1HJ010B	50V 1
R606	ERDS2TJ103T	1/4W 10K	C7	RCBS1H102KBY	50V 0. 001	C116	RCBS0J153MY	6. 3V 0. 015
R607	ERDS2TJ221T	1/4W 220	C8	RCBS1H4R7KCY	50V 4. 7P	C117	ECEA1HJ2R2B	50V 0. 22
R608	ERDS2TJ103T	1/4W 10K	C9	RCBS1H102KBY	50V 0. 001	C118	ECEA1EU101B	25V 100
R609	ERDS2TJ471T	1/4W 470	C10	RCBS1H220JCY	50V 22P	C119	ECEA1CU102E	16V 0. 001
R610	ERDS2TJ181T	1/4W 180	C11	RCBS1H180JCY	50V 18P	C120	ECEA0JU101B	6. 3V 100
R611	ERDS2TJ181T	1/4W 180	C13	ECCD1H220KC	50V 22P (EG)	C121	RCBS1H471KBY	50V 470P
R612	ERDS2TJ103T	1/4W 10K	C13	RCBS1H150JCY	50V 15P (E, EB)	C122	ECQV1H104JZ3	50V 0. 1
R613	ERDS2TJ103T	1/4W 10K	C14	RCBS1C103MY	16V 0. 01	C123	ECEA1CU102E	16V 0. 001
R701	ERDS2TJ472T	1/4W 4. 7K	C15	RCBS0J223MY	6. 3V 0. 022	C124	RCBS1H330JLY	50V 33P
R702	ERDS2TJ103T	1/4W 10K	C17	ECEA1HJ2R2B	50V 2. 2	C201	RCBS1H102KBY	50V 0. 001
R705	ERDS2TJ103T	1/4W 10K	C18	RCBS0J223MY	6. 3V 0. 022	C202	ECEA1HJ010B	50V 1
R706	ERDS2TJ823T	1/4W 82K	C19	RCBS1H331KBY	50V 330P	C203	ECEA1CU100B	16V 10
R707	ERDS2TJ123T	1/4W 12K	C20	RCBS0J223MY	6. 3V 0. 022	C204	ECEA0JU101B	6. 3V 100
R708	ERDS2TJ683T	1/4W 68K	C21	ECEA0JU221B	6. 3V 220P	C205	RCBS1H101KBY	50V 100P
R710	ERDS2TJ333T	1/4W 33K	C22	RCBS1C103MY	16V 0. 01	C206	RCBS1H471KBY	50V 470P
R711	ERDS2TJ105T	1/4W 1M	C23	RCBS0J223MY	6. 3V 0. 022	C207	ECFT1C333KDY	16V 0. 033

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
C208	ECEA1HU010B	50V 1	C339	ECEA1AU221B	10V 220	C520	ECEA1HUR22B	50V 0.22
C209	RCBS1H102KBY	50V 0.001	C340	ECEA0JU221B	6.3V 220	C521	ECFT1C333MDY	16V 0.033
C210	ECFT1C223KDY	16V 0.022	C360	ECEA0JU221B	6.3V 220	C522	ECEA1HUR33B	50V 0.33
C211	ECEA0JU101B	6.3V 100	C361	RCBS1C103NYY	16V 0.01	C523	RCBS1C222MKY	16V 0.0022
C212	ECFT1C333KDY	16V 0.033	C362	ECEA0JU470B	6.3V 47	C601	ECEA1HUR1B	50V 0.1
C213	RCBS1H102KBY	50V 0.001	C363	ECEA1HU010B	50V 1	C602	RCBS1H102KBY	50V 0.001
C214	ECEA1HU010B	50V 1	C364	ECEA1CU100B	16V 10	C603	ECEA1AU471B	10V 470P
C215	ECEA1HU010B	50V 1	C366	ECEA1AU221B	10V 220	C604-607	ECKT1H103ZF	50V 0.01
C216	RCBS0J153MY	6.3V 0.015	C367	RCBS1C103NYY	16V 0.01	C701	ECEA0JU471B	6.3V 470
C217	ECEA1HUR22B	50V 0.22	C368	ECEA0JU221B	6.3V 220	C702	ECEA1AU221B	10V 220
C218	ECEA1EU101B	25V 100	C380	ECKT1H103ZF	50V 0.01	C703, 704	ECFT1C104MDY	16V 0.1
C219	ECEA1CU102E	16V 0.001	C382	RCBS1C103NYY	16V 0.01	C705	ECEA1CN100SB	16V 10
C220	ECEA0JU101B	6.3V 100	C383	ECQP2A562JZT	100V 0.0056	C706	ECFT1C104MDY	16V 0.1
C221	RCBS1H471KBY	50V 470P	C401	ECEA1HUR47B	50V 0.47	C707	ECEA0JU101B	6.3V 100
C222	ECQV1H104JZ3	50V 0.1	C402	RCBS1H471KBY	50V 470P	C708	RCBS1H681KBY	50V 680P
C223	ECEA1CU102E	16V 0.001	C403, 404	ECEA1HU010B	50V 1	C710	ECEA1HU010B	50V 1
C224	RCBS1H330JLY	50V 33P	C405	RCBS1H471KBY	50V 470P	C711	RCBS1H470JLY	50V 47P
C301	ECEA0JU101B	6.3V 100	C406	ECEA1CU100B	16V 10	C712, 713	ECEA1HU010B	50V 1
C302	ECQV1H474JZ3	50V 0.47	C408	ECEA1HU010B	50V 1	C715	ECFT1C333KDY	16V 0.033
C303	ECKT1H103ZF	50V 0.01	C409	RCBS1H102KBY	50V 0.001	C716	ECEA1HN010SB	50V 1
C304	ECQP2A272JZT	100V 0.0027	C410	ECFT1C104MDY	16V 0.1	C717	ECFT1C333KDY	16V 0.033
C305	RCBS1C103NYY	16V 0.01	C411	RCBS1C103MY	16V 0.01	C718	RCBS1H102KBY	50V 0.001
C306	ECQP2A223JZT	100V 0.022	C412	RCBS1C332MKY	16V 0.0033	C720	ECEA1HNR47SB	50V 0.47
C307	ECEA1AU221B	10V 220	C413	RCBS1C103MY	16V 0.01	C721	ECFT1C683MDY	16V 0.068
C308	RCBS1C332MKY	16V 0.0033	C414	ECEA1HU2R2B	50V 2.2	C722	ECEA1HNR47SB	50V 0.47
C309	ECFT1C473MDY	16V 0.047	C415	ECEA1HUR33B	50V 0.33	C723	ECEA1AN220SB	10V 22
C310	ECEA1AU221B	10V 220	C416	ECEA1HUR1B	50V 0.1	C725	ECFT1C104MDY	16V 0.1
C311	ECEA1HU2R2B	50V 2.2	C417	ECFT1C333MDY	16V 0.033	C726	ECQV1H334JZ3	50V 0.33
C312	RCBS1H102KBY	50V 0.001	C418	ECFT1C153MDY	16V 0.015	C727	ECQV1H474JZ3	50V 0.47
C313	ECEA1CU100B	16V 10	C419	ECEA1HU010B	50V 1	C728	ECEA1CU220B	16V 22
C314	ECEA1AU221B	10V 220	C420	ECEA1HUR22B	50V 0.22	C730	ECEA1CU220B	16V 22
C315	ECEA1HU010B	50V 1	C421	ECFT1C333MDY	16V 0.033	C733	RCBS1H390JLY	50V 39P
C316	ECEA1CU100B	16V 10	C422	ECEA1HUR33B	50V 0.33	C735	RCBS1H390JLY	50V 39P
C317	ECEA1HU010B	50V 1	C423	RCBS1C222MKY	16V 0.0022	C736	ECFT1C104MDY	16V 0.1
C318	RCBS1C222MKY	16V 0.0022	C501	ECEA1HUR47B	50V 0.47	C737	ECEA0JU471B	6.3V 470
C319	ECEA1CU100B	16V 10	C502	RCBS1H471KBY	50V 470P	C738	ECEA1CU100B	16V 10
C320	ECEA1EU4R7B	25V 4.7	C503	ECEA1HU010B	50V 1	C741	RCBS1C682MKY	16V 0.068
C321	ECEA1HU010B	50V 1	C504	ECEA1HU010B	50V 1	C742	ECEA0JU470B	6.3V 47
C322	ECEA1AU101B	10V 100	C505	RCBS1H471KBY	50V 470P	C743	RCBS1H104ZFY	50V 0.1
C325	RCBS1H102KBY	50V 0.001	C506	ECEA1CU100B	16V 10	C747	RCBS1C332MKY	16V 0.0033
C326	ECQP2A822JZT	100V 0.0082	C508	ECEA1HU010B	50V 1	C748	ECFT1C333KDY	16V 0.033
C327	ECFT1C104MDY	16V 0.1	C509	RCBS1H102KBY	50V 0.001	C750	ECEA0JU101B	6.3V 100
C328	ECEA1CU100B	16V 10	C510	ECFT1C104MDY	16V 0.1	C751	ECFT1C333KDY	16V 0.033
C329	ECEA1EU101B	25V 100	C511	RCBS1C103MY	16V 0.01	C752	ECEA1HUR33B	50V 0.33
C330	ECEA1AU470B	10V 47	C512	RCBS1C332MKY	16V 0.0033	C753, 755	ECEA1HUR47B	50V 0.47
C331	ECEA1CU101B	16V 100	C513	RCBS1C103MY	16V 0.01	C756	RCBS1C332MKY	16V 0.0033
C332	ECEA1CU470B	16V 47	C514	ECEA1HU2R2B	50V 2.2	C757	ECEA1CU100B	16V 10
C333	ECKT1H103ZF	50V 0.01	C515	ECEA1HUR33B	50V 0.33	C758	RCBS1H104ZFY	50V 0.1
C334, 335	ECEA1EU222E	25V 0.0022	C516	ECEA1HUR1B	50V 0.1	C760	ECFT1C104MDY	16V 0.1
C336	ECEA0JU221B	6.3V 220	C517	ECFT1C333MDY	16V 0.033	C761	ECEA0JU471B	6.3V 470
C337	ECEA1AU221B	10V 220	C518	ECFT1C153MDY	50V 0.015	C762	RCBS1H471KBY	50V 470P
C338	ECEA1EU4R7B	25V 4.7	C519	ECEA1HU010B	50V 1			

Portable Stereo CD System

RX-DS650

DEUTSCH

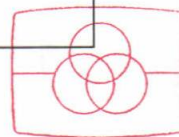Free service manuals
Gratis schema's

Digitized by

www.freeservicemanuals.info

■ MESSUNGEN UND ABGLEICHUNGEN

< EMPFANGSTEIL >

■ ABGLEICH-ANWEISUNGEN

VOR DEM ABGLEICH SORGFÄLTIG DURCHLESEN

- Lautstärkeregler auf Maximum stellen.
- Bandschalter auf UKW, MW oder LW stellen.
- UKW-Betriebsart/Interferenzen-Schalter auf STEREO/II oder STEREO/III stellen.
- Spannungsversorgung auf 15V Gleichstrom stellen.
- Der Ausgang des Signalgenerators sollte nur so hoch sein, wie zur Erzielung einer Ausgangsanzeige erforderlich.

■ LW- und MW-ABGLEICH

WELLEN- BEREICH	SIGNALGENERATOR oder WOBBELOSZILLATOR		STELLUNG DES ABSTIMMREGLERS	ELEKTRONISCHER WECHSELSTROM- VOLTMETER oder OSZILLOSKOP	EINSTELLWERT	BEMERKUNGEN
	ANSCHLÜSSE	FREQUENZ				
MW/LW-ZF-ABGLEICH						
MW	Aus einem Draht einige Schleifenwindungen bilden und das Signal in die Rahmenantenne des Empfängers abstrahlen.	459kHz 30% Mod. bei 400Hz	Abstimmungspunkt ohne Interferenz (etwa bei 600 kHz)	Kopfhörerbuchse (Siehe Abb. 1)	T2 (MW ZF-Abgleich)	Auf maximalen Ausgang einstellen.
LW-HF-ABGLEICH						
LW	"	[E, EB]...136 kHz [EG]...137 kHz (f minimum)	Abstimmungskondensator ganz geschlossen	"	L7 (LW-Oszillatorschule)	"
LW	"	297 kHz (f maximale)	Abstimmungskondensator ganz geöffnet	"	CT7 (LW-Oszillatortrimmer)	"
LW	"	145 kHz	Auf Signal abstimmen	"	(*1) L3-2 (LW-Antennenschule)	Auf maximalen Ausgang abstimmen. L3-2 durch Verschieben der Spule am Ferritkern einstellen.
LW	"	285 kHz	"	"	CT8 (LW-Antennentrimmer)	Auf maximalen Ausgang einstellen. Schritte (2) ~ (5) wiederholen.
(*1) Nach der Einstellung Antennenschule mit Wachs befestigen.						
MW-HF-ABGLEICH						
MW	"	[E, EB]...511 kHz [EG]...514 kHz (f minimum)	Abstimmungskondensator ganz geschlossen	"	L5 (MW-Oszillatorschule)	Auf maximalen Ausgang einstellen.
MW	"	[E, EB]...1,650 kHz [EG]...1,639 kHz (f maximale)	Abstimmungskondensator ganz geöffnet	"	CT1-4 (MW-Oszillatortrimmer)	"
MW	"	550 kHz	Auf Signal abstimmen	"	(*1) L3-1 (MW-Antennenschule)	Auf maximalen Ausgang abstimmen. L3-1 durch Verschieben der Spule am Ferritkern einstellen.
MW	"	1,500 kHz	"	"	CT1-3 (MW-Antennentrimmer)	Auf maximalen Ausgang einstellen. Schritte (6) ~ (9) wiederholen.
(*1) Nach der Einstellung Antennenschule mit Wachs befestigen.						

■ UKW-ABGLEICH

WELLEN- BEREICH	SIGNALGENERATOR oder WOBBELOSZILLATOR		STELLUNG DES ABSTIMMREGLERS	ELEKTRONISCHER WECHSELSTROM- VOLTMETER oder OSZILLOSKOP	EINSTELLWERT	BEMERKUNGEN
	ANSCHLÜSSE	FREQUENZ				
UKW-ZF-ABGLEICH						
UKW	Hohe Seite durch 0,001 µF an Testpunkt TP4 , negative Seite an Testpunkt TP2 .	10,7 MHz	Abstimmungspunkt ohne Interferenz (bei 90 MHz)	Vertikalamplitude des Oszilloskops an Testpunkt TP5 , negative Seite an Testpunkt TP3 anschießen.	T1 (UKW 1. ZF-Abgleich)	Wellenform ist in Abb. 2 gezeigt.
UKW	"	"	"	"	T3 (UKW 2. ZF-Abgleich)	Wellenform ist in Abb. 3 gezeigt.
UKW-HF-ABGLEICH						
UKW	Über künstliche UKW-Antenne an Testpunkt TP1 , negative Seite an Testpunkt TP2 anschießen.	[E, EB] ...86,2 MHz [EG]...87,35 MHz (f minimum)	Drehkondensator ganz geschlossen.	Kopfhörerbuchse (Siehe Abb. 1)	L6 (UKW- Oszillatorspule)	(*2) Auf maximalen Ausgang einstellen.
UKW		[E, EB] ...109,2 MHz [EG]...108,25 MHz (f maximale)	Drehkondensator ganz geöffnet.	"	CT1-2 (UKW- Oszillatortrimmer)	"
UKW		[E, EB]... 104 MHz [EG]... 106 MHz	Auf Signal abstimmen	"	CT1-1 (UKW- Antennentrimmer)	(*2) Auf maximalen Ausgang abstimmen. Schritte (3) ~ (5) wiederholen.
(*2) Drei Ausgangsfrequenzkurven sind vorhanden, die richtige Abstimmung ist die Mittenfrequenz.						

■ UKW-KANALTRENNUNG-ABGLEICH

UKW- SIGNALGENERATOR- QUELLENANSCHLUSS	ELEKTRONISCHER FREQUENZZÄHLER	ABGLEICHPUNKT (Siehe Abb. 1.)	EINSTELLWERT	BEMERKUNGEN
(6) 98 MHz, 60 dB (CW) Über künstliche UKW- Antenne an Testpunkt TP1, negative Seite an Testpunkt TP2 anschießen.	TP6 ... (+) TP7 ... (-)	VR1	19 kHz	UKW-Betriebsart/Interferenzen-Schalter → STEREO VR1 für Anzeige von 19 kHz (± 50 Hz) auf elektronischem Zähler einstellen.

< KASSETTENDECKTEIL >

■ ABGLEICH-ANWEISUNGEN

GEGENSTAND	TESTKASSETTE	MESSPUNKT	ABGLEICHPUNKT	VERFAHREN
Azimuth	QZZCFM (8 kHz, -20 dB)	Kopfhörerbuchse (Siehe Abb. 1)	Azimuth- Einstellschraube (Siehe Abb. 4)	Die Azimuth-Einstellschraube während wiederhol- ter Vorwärts- und Rückwärts-Wiedergabe so ein- stellen, daß der maximale Kopfazimuth-Abgleich erzielt wird, wobei beide Kanäle gleich sind. Dann die Einstellschraube mit Farbe sichern.
Vormagneti- sierungsstrom	Normalband verwenden.	TP302 ... (+) TP301 ... (-) (Siehe Abb. 5)	VR301 (Siehe Abb. 6)	Aufnahme-Betriebsart UKW-Betriebsart/Interferenzen-Schalter → STEREO/II • Normalband ... 8.5 mV ± 0.5 mV

■ CD-PLAYER-TEIL

Zur Beachtung:


- Es ist sehr gefährlich, in den Laserstrahl zu schauen oder diesen zu berühren. (Laser-Strahlung ist unsichtbar.)
- Wenn das Gerät eingeschaltet ist, wird Laser-

Strahlung von der Abtasterlinse abgegeben. Vermeiden Sie Kontakt mit dem Laserstrahl, insbesondere beim Durchführen von Abgleichungen.

ELEKTRISCHE EINSTELLUNG**Verwendete Geräte**

- Servo-Verstärkungs-Einsteller (SZZP1017F)
- Test-Discs:
 - Test-Disc (SZZP1014F) alte oder neue Ausführung
 - Prüf-Test-Disc (SZZP1054C)
 - Unebene Disc (SZZP1056C)
 - Schwarzband-Disc (SZZP1057C)
- Normale Disc
- Zweikanal-Oszilloskop (mit Auslöser) von 30 MHz oder mehr
- Niederfrequenz-Oszillator
- Zwischenstecker (SZZP1032F)

Hinweis: Vor den Einstellungen sicherstellen, daß der Funktionswähler auf "CD" steht.

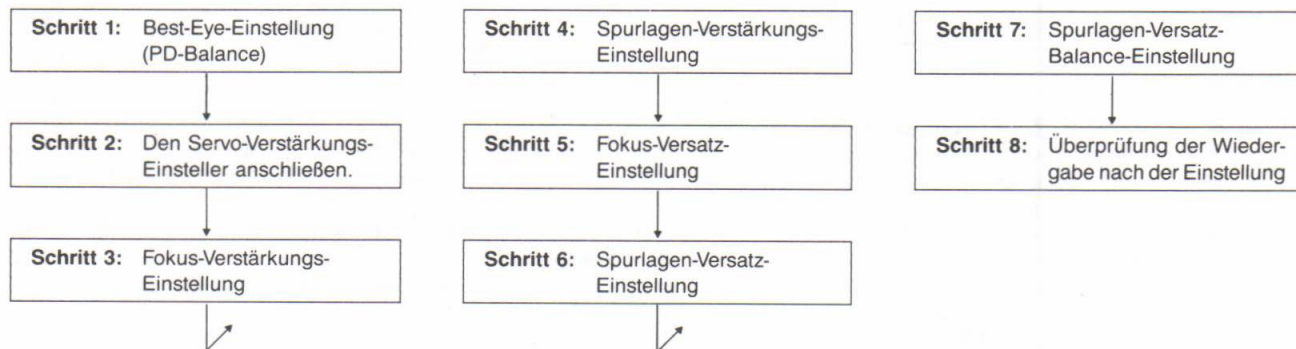Einstellverfahren**BEST-EYE-EINSTELLUNG (PD-BALANCE)**

1. Die Kurzschlußbrücke von CP705 in die ursprüngliche Position einstecken.
2. Kanal 1 des Oszilloskops an TP703 (+) und TP701 (-) der Haupt-Platine anschließen.
Oszilloskop-Einstellung: VOLT ... 200 mV
WOBBEL ... 0,5 μ sec.
EINGANG ... AC
3. Den Netzschalter des CD-Players einschalten und eine Test-Disc (SZZP1014F oder SZZP1054C) einsetzen.
4. Den CD-Player auf Wiedergabe schalten.
5. VR701 so einstellen, daß das Augenmuster des HF-Signals maximal gestreckt ist.

FOKUS-VERSTÄRKUNG-EINSTELLUNG

1. Die Kurzschlußbrücke abtrennen und den Servo-Verstärkungs-Einsteller anschließen.
2. Den Servo-Verstärkungs-Einsteller anschließen.
3. Den Wahlschalter des Servo-Verstärkungs-Einstellers auf 2 und den ON-OFF-Schalter auf ON stellen.
4. Den Niederfrequenz-Oszillator auf eine Frequenz von 1 kHz und eine Ausgangsspannung von 150 mV-s einstellen. Dann den Oszillator an die Klemmen OSC (+) und GND (-) des Servo-Verstärkungs-Einstellers anschließen.
5. Kanal 1 und Kanal 2 des Oszilloskops an TP1 und TP2 des Servo-Verstärkungs-Einstellers anschließen. (TP3 ist die Masseklemme.)
Oszilloskop-Einstellung: VOLT ... 100 mV (beide Kanäle)
WOBBEL ... 1 msec.
EINGANG ... DC
6. Den Netzschalter des CD-Players einschalten und eine Test-Disc (SZZP1014F oder SZZP1054C) einsetzen.
7. Den CD-Player auf Wiedergabe schalten.
8. Den Wahlschalter des Servo-Verstärkungs-Einstellers von "2" auf "3" stellen.
9. 1-kHz-Signale werden auf dem Oszilloskop angezeigt. VR704 so einstellen, daß die Wellenform-Amplituden beider Kanäle gleich werden.
10. Den Wahlschalter des Servo-Verstärkungs-Einstellers von "3" auf "2" stellen.

SPURLAGEN-VERSTÄRKUNG-EINSTELLUNG

1. Die Oszilloskop-Einstellungen und -Anschlüsse sind gleich wie oben.
 2. Den Niederfrequenz-Oszillator auf eine Frequenz von 1 kHz und eine Ausgangsspannung von 150 mV-s einstellen.
 3. Den Netzschalter des CD-Players einschalten und eine Test-Disc (SZZP1014F oder SZZP1054C) einsetzen.
 4. Den CD-Player auf Wiedergabe schalten.
 5. Den Wahlschalter des Servo-Verstärkungs-Einstellers von "2" auf "1" stellen.
 6. 1-kHz-Signale werden auf dem Oszilloskop angezeigt. VR705 so einstellen, daß die Wellenform-Amplituden beider Kanäle gleich werden.
 7. Den Wahlschalter des Servo-Verstärkungs-Einstellers von "1" auf "2" stellen.
- Hinweis: Wenn im Handbuch angegeben, den Drehschalter auf "2" stellen und den ON/OFF-Schalter des Servo-Verstärkungs-Einstellers (SZZP1017F) auf "ON" stellen.

FOKUS-VERSATZ-EINSTELLUNG

1. Kanal 1 des Oszilloskops an TP703 (+) und TP701 (–) der Haupt-Platine anschließen.
- Kanal 2 des Oszilloskops an TP705 (+) und TP701 (–) der Haupt-Platine anschließen.

Oszilloskop-Einstellung: VOLT ... 100 mV (Kanal 1), 200 mV (Kanal 2)

WOBBEL ... 0,5 msec.

EINGANG ... DC (Kanal 1),
AC (Kanal 2)

BETRIEBSART ... NORM
(Auslösung über Kanal 2)

2. Den Netzschalter des CD-Players einschalten und die Test-Disc (SZZP1057C) einsetzen.
3. Den CD-Player auf Wiedergabe schalten.
4. Die Wellenform von Kanal 1 und Kanal 2 auf dem Oszilloskop überprüfen und VR703 so einstellen, daß die Wellenform um den Auslösungspunkt wie abgebildet wird.

SPURLAGEN-VERSATZ-EINSTELLUNG

1. Kanal 1 des Oszilloskops an TP703 (+) und TP701 (–) der Haupt-Platine anschließen.
- Kanal 2 des Oszilloskops an TP704 (+) und TP701 (–) der Haupt-Platine anschließen.

Oszilloskop-Einstellung: VOLT ... 100 mV (Kanal 1), 200 mV (Kanal 2)

WOBBEL ... 1 msec.

EINGANG ... DC (Kanal 1),
AC (Kanal 2)

BETRIEBSART ... NORM
(Auslösung über Kanal 2)

2. Den Netzschalter des CD-Players einschalten und die Test-Disc (SZZP1057C) einsetzen.
3. Den CD-Player auf Wiedergabe schalten.
4. Die Wellenform von Kanal 1 und Kanal 2 auf dem Oszilloskop überprüfen und VR706 so einstellen, daß die Wellenform um den Auslösungspunkt wie abgebildet wird.

SPURLAGEN-VERSATZ-BALANCE-EINSTELLUNG

1. Den Niederfrequenz-Oszillator auf eine Frequenz von 1,1 kHz und eine Ausgangsspannung von 150 mV-s einstellen. Dann den Oszillator an die Klemmen OSC (+) und GND (–) des Servo-Verstärkungs-Einstellers anschließen.
2. Kanal 1 des Oszilloskops an TP703 (+) und TP701 (–) der Haupt-Platine anschließen.

Oszilloskop-Einstellung: VOLT ... 200 mV
WOBBEL ... 0,5 mV
EINGANG ... AC

3. Den Netzschalter des CD-Players einschalten und eine Test-Disc (SZZP1014F oder SZZP1054C) einsetzen.

4. Den CD-Player auf Wiedergabe schalten.
5. Den Wahlschalter des Servo-Verstärkungs-Einstellers von "2" auf "1" stellen.
6. VR702 so einstellen, daß die Ausgangs-Wellenform wie abgebildet wird.
7. Den Wahlschalter des Servo-Verstärkungs-Einstellers von "1" auf "2" stellen.
8. Den Netzschalter des CD-Players ausschalten.
9. Den Servo-Verstärkungs-Einsteller abtrennen.

ÜBERPRÜFUNG DER WIEDERGABE NACH DER EINSTELLUNG

Überprüfung des Überspring-Suchlaufs

1. Eine normale Disc wiedergeben.
2. Die Überspring-Taste drücken und den Überspring-Suchlauf (vorwärts und rückwärts) überprüfen.

Überprüfung des manuellen Suchlaufs.

1. Eine normale Disc wiedergeben.
2. Die Taste für manuellen Suchlauf drücken und überprüfen, ob einwandfreier manueller Suchlauf mit niedriger und hoher Geschwindigkeit (vorwärts und rückwärts) durchgeführt werden kann.

Überprüfung der Wiedergabe

1. Die Test-Disc (SZZP1054C) wiedergeben.
 2. Titel Nr. 6 (Keil 0,7 mm) wiedergeben und sicherstellen, daß keine Tonausfälle oder Geräusche vorhanden sind.
 3. Titel Nr. 13 (schwarzer Punkt 0,7 mm) wiedergeben und sicherstellen, daß keine Tonausfälle oder Geräusche vorhanden sind.
- Zur Beachtung: Für diese Überprüfung unbedingt Kopfhörer verwenden. Keinesfalls die Lautsprecher verwenden, weil damit keine korrekten Ergebnisse erhalten werden.

EINSTELLUNG DES OPTISCHEN ABTASTERS

Meßinstrumente und Spezialwerkzeuge

- Zweikanal-Oszilloskop (mit Auslöser) von 30 MHz oder mehr
- Test-Discs
Test-Disc (SZZP1014F) alte oder neue Ausführung
Prüf-Test-Disc (SZZP1054C)
Unebene Disc (SZZP1056C)

- Sechskantschlüssel
- Schrauben-Sicherungsfarbe (RZZ0L01)
- Fühlerlehre (RZZ0297)

MECHANISCHE EINSTELLUNG

1. Kanal 1 des Oszilloskops an TP703 (+) und TP701 (–) der Haupt-Platine anschließen.

Oszilloskop-Einstellung: VOLT ... 200 mV
WOBBEL ... 0,2 µsec.
EINGANG ... AC

2. Den Netzschalter des CD-Players einschalten, die Test-Disc (SZZP1056C) einsetzen und Titel Nr. 5 wiedergeben.
3. Mit den Tasten für manuellen Suchlauf den Abtaster so bewegen, daß die Schrauben für mechanische Einstellung mit den Einstellöffnungen in der Bodenplatte zusammenkommen.

4. Das HF-Signal auf dem Oszilloskop überwachen und die beiden Einstellschrauben abwechselnd mit dem 2 mm Sechskantschlüssel einstellen, so daß die vertikalen Schwankungen des HF-Signals minimal werden und das Augenmuster so gestreckt wie möglich ist.
5. Den Netzschalter des CD-Players ausschalten.
6. Nach der Einstellung Schrauben-Sicherungsfarbe (RZZ0L01) auf die Einstellschrauben auftragen.

Hinweis: Die Schrauben für mechanische Einstellung werden ab Werk mit Schrauben-Sicherungsfarbe versehen und sind daher eventuell schwer zu drehen.

FRANÇAIS

MESURES ET REGLAGES

< SECTION TUNER >

METHODE D'ALIGNEMENT

LIRE ATTENTIVEMENT CE QUI SUIT AVANT DE PROCEDER AUX ALIGNEMENTS

- Régler le potentiomètre de niveau de sortie au maximum.
- Placer le sélecteur de gamme sur FM, PO ou GO.
- Placer le sélecteur de mode FM/interrupteur de battement sur la position STEREO/II ou STEREO/III.
- Régler la tension d'alimentation à 15V CC.
- Le niveau de sortie du générateur de signaux ne doit pas être plus élevé qu'il n'est nécessaire pour obtenir une lecture.

ALIGNEMENTS PO et GO

GAMME	GENERATEUR DE SIGNAUX OU GENERATEUR DE BALAYAGE		POSITION DE L'AIGUILLE SUR LE CADRAN	VOLTMETRE ELECTRONIQUE CA OU OSCILLOSCOPE	REGLAGE	REMARQUES
	BRANCHEMENTS	FREQUENCE				
ALIGNEMENT DE LA FREQUENCE INTERMEDIAIRE AM						
(1)	PO	Confectionner une bobine de plusieurs tours de fil et placer cette bobine parcourue par le signal dans l'antenne du récepteur.	459kHz Taux de modulation : 30% à 400Hz	Position pour laquelle il n'y a pas d'interférence (environ 600 kHz)	Prise casque (Voir figure 1)	T2 (AM IFT) Régler pour obtenir une sortie maximum
ALIGNEMENT RF EN GO						
(2)	GO	"	[E, EB]...136kHz [EG]...137kHz (f minimum)	Condensateur d'accord complètement fermé	"	L7 (bobine oscillateur GO) "
(3)	GO	"	297kHz (f maximale)	Condensateur d'accord complètement ouvert	"	CT7 (trimmer oscillateur PO) "
(4)	GO	"	145 kHz	Accorder sur le signal	"	(*1) L3-2 (bobine antenne GO) Régler pour obtenir une sortie maximum en déplaçant L3-2 sur le noyau de ferrite.
(5)	GO	"	285 kHz	"	"	CT8 (trimmer antenne GO) Régler pour obtenir une sortie maximum. Répéter les étapes 2 à 5.
(*1) Fixer la bobine d'antenne à la cire après avoir achevé l'alignement						
ALIGNEMENT RF EN PO						
(6)	PO	"	[E, EB]...511kHz [EG]...514kHz (f minimum)	Condensateur d'accord complètement fermé	"	L5 (bobine oscillateur PO) Régler pour obtenir une sortie maximum.
(7)	PO	"	[E, EB]...1,650kHz [EG]...1,639kHz (f maximale)	Condensateur d'accord complètement ouvert	"	CT1-4 (trimmer oscillateur PO) "
(8)	PO	"	550 kHz	Accorder sur le signal	"	(*1) L3-1 (bobine antenne PO) Régler pour obtenir une sortie maximum en déplaçant L3-1 sur le noyau de ferrite.
(9)	PO	"	1.500 kHz	"	"	CT1-3 (trimmer antenne PO) Régler pour obtenir une sortie maximum. Répéter les étapes 6 à 9.
(*1) Fixer la bobine d'antenne à la cire après avoir achevé l'alignement.						

■ ALIGNEMENT FM

GAMME	GENERATEUR DE SIGNAUX OU GENERATEUR DE BALAYAGE		POSITION DE L'AIGUILLE SUR LE CADRAN	VOLTMETRE ELECTRONIQUE CA OU OSCILLOSCOPE	REGLAGE	REMARQUES
	BRANCHEMENTS	FREQUENCE				
ALIGNEMENT DE LA FREQUENCE INTERMEDIAIRE FM						
FM	Signal sur le point de test TP4 à travers un condensateur de 0,01µF pôle négatif sur le point de test TP2 .	10,7 MHz	Position pour laquelle il n'y a pas d'interférence (environ 90 MHz)	Brancher l'entrée du balayage vertical de l'oscilloscope sur le point de test TP5 , le pôle négatif étant relié au point de test TP3 .	T1 (1er transistor FI)	La forme d'onde est indiquée dans la Fig. 2
FM	"	"	"	"	T3 (2ème transistor FI)	La forme d'onde est indiquée dans la Fig. 3
ALIGNEMENT RF EN FM						
FM	Brancher sur le point de test TP1 , à travers une antenne fictive, le pôle négatif étant relié au point de test TP2 .	[E, EB] ...86,2MHz [EG]...87,35MHz (f minimum)	Condensateur d'accord complètement fermé.	Prise casque (Voir figure 1)	L6 (bobine oscillateur FM)	(*2) Régler pour obtenir une sortie maximum.
FM		[E, EB] ...109,2MHz [EG]...108,25MHz (f maximale)	Condensateur d'accord complètement ouvert.	"	CT1-2 (trimmer oscillateur FM)	"
FM		[E, EB] ... 104MHz [EG]... 106MHz	Accorder sur le signal	"	CT1-1 (trimmer antenne FM)	(*2) Régler pour obtenir une sortie maximum. Répéter les étapes 3 à 5.
(*2) Il y a trois sorties; la syntonisation adéquate est obtenue pour la fréquence centrale.						

REGLAGE DE LA SEPARATION

BRANCHEMENT DU GENERATEUR DE SIGNAUX FM	FREQUENCEMETRE ELECTRONIQUE	POINT DE REGLAGE (Voir figure 1.)	CARACTERIS- TIQUES	REMARQUES
(6) 98 MHz, 60dB (Porteuse pure). Brancher sur le point de test TP1 , à travers une antenne fictive FM, le pôle négatif étant relié au point de test TP2 .	TP6 ... (+) TP7 ... (-)	VR1	19 kHz	Sélecteur de mode FM/interrupteur de battement sur la position STEREO. Régler VR1 de sorte que le fréquencemètre électronique indique 19 kHz (± 50 Hz).

< SECTION MAGNETOPHONE >

■ METHODE DE REGLAGE

RUBRIQUE	BANDE D'ESSAI	POINT DE MESURE	POINT DE REGLAGE	PROCEDURE
Azimut	QZZCFM (8 kHz, -20 dB)	Prise casque (Voir figure 1)	Vis de réglage de l'azimut (Voir figure 4)	Régler la vis tout en faisant défiler la bande dans les deux sens (en lecture) pour obtenir un niveau maximum et identique dans les deux voies.
Courant de polarisation	Utiliser une bande normale	TP302 ... (+) TP301 ... (-) (Voir la figure 5)	VR301 (Voir la figure 6)	Mode enregistrement Sélecteur de mode FM/interrupteur de battement sur la position STEREO/II • Normale ... 8,5mV $\pm$ 0,5mV

■ SECTION CD


Attention:

- Il est dangereux de toucher ou de regarder le faisceau du laser dont la radiation est invisible. Dès que l'appareil est sous tension, une radiation laser est émise par le capteur; éviter d'être exposé à cette radiation au cours des réglages.

REGLAGES ELECTRIQUES**Appareillage requis**

- Dispositif de réglage du gain d'asservissement (SZZP1017F)
- Disques d'essai:
 - Disque d'essai (SZZP1014F) nouveau ou ancien modèle
 - Disque de contrôle (SZZP1054C)
 - Disque voilé (SZZP1056C)
 - Disque à zone noire (SZZP1057C)
- Disque ordinaire
- Oscilloscope double trace (avec déclenchement), 30 MHz ou mieux
- Générateur basse fréquence
- Connecteur d'adaptation (SZZP1032F)

Remarque: Avant de procéder aux réglages, s'assurer que le sélecteur de fonction est sur CD.

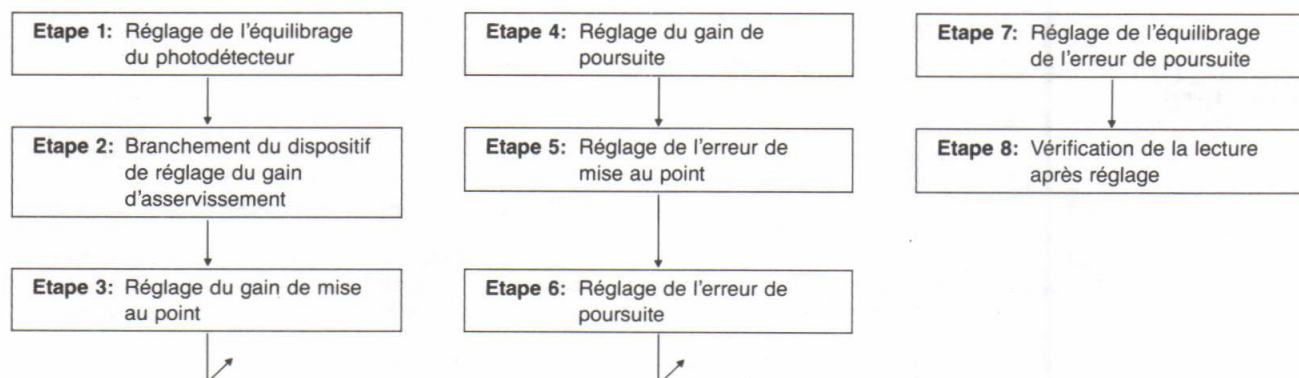Procédure de réglage**REGLAGE DE L'EQUILIBRAGE DU PHOTODETECTEUR**

1. Placer le connecteur de court-circuit de CP705 dans sa position d'origine.
2. Brancher CH1 de l'oscilloscope sur TP703 (+) et TP701 (-) du circuit imprimé principal.
Réglage de l'oscilloscope: Tension ... 200 mV
Balayage ... 0,5 μ s
Entrée ... CA
3. Placer l'interrupteur d'alimentation du lecteur sur la position ON et introduire un disque d'essai (SZZP1014F ou SZZP1054C).
4. Régler le lecteur pour la lecture.
5. Régler VR701 de sorte que la trace du signal radiofréquence soit aussi allongée que possible.

REGLAGE DU GAIN DE MISE AU POINT

1. Débrancher le connecteur de court-circuit.
2. Brancher le dispositif de réglage du gain d'asservissement.
3. Placer le sélecteur du dispositif de réglage du gain sur la position 2 et l'interrupteur ON/OFF sur la position ON.
4. Régler le générateur basse fréquence sur 1 kHz avec un niveau de sortie de 150mVc-c. Brancher ce générateur entre les bornes OSC (+) et GND (-) du dispositif de réglage du gain d'asservissement.
5. Brancher CH1 et CH2 de l'oscilloscope sur TP1 et TP2 du dispositif de réglage du gain. (TP3 est à la masse.)
Réglage de l'oscilloscope: Tension ... 100 mV (pour les deux traces)
Balayage ... 1 ms
Entrée ... CC
6. Placer l'interrupteur d'alimentation du lecteur sur la position ON et introduire un disque d'essai (SZZP1014F ou SZZP1054C).
7. Régler le lecteur pour la lecture.
8. Basculer le sélecteur du dispositif de réglage du gain d'asservissement de la position 2 à la position 3.
9. Les signaux 1 kHz apparaissent sur l'oscilloscope. Régler VR704 de sorte que l'amplitude des deux traces soit identique.
10. Basculer le sélecteur du dispositif de réglage du gain d'asservissement de la position 3 à la position 2.

REGLAGE DU GAIN DE POURSUITE

1. Les branchements et les réglages de l'oscilloscope sont les mêmes que ci-dessus.
 2. Régler le générateur basse fréquence sur 1 kHz avec un niveau de sortie de 150mVc-c.
 3. Placer l'interrupteur d'alimentation du lecteur sur la position ON et introduire un disque d'essai (SZZP1014F ou SZZP1054C).
 4. Régler le lecteur pour la lecture.
 5. Basculer le sélecteur du dispositif de réglage du gain d'asservissement de la position 2 à la position 1.
 6. Les signaux 1 kHz apparaissent sur l'oscilloscope. Régler VR705 de sorte que l'amplitude des deux traces soit identique.
 7. Basculer le sélecteur du dispositif de réglage du gain d'asservissement de la position 1 à la position 2.
- Remarque: Lorsque cela est indiqué, placer le commutateur rotatif sur 2 et l'interrupteur ON/OFF du dispositif de réglage du gain (SZZP1017F) sur la position ON.

REGLAGE DE L'ERREUR DE MISE AU POINT

1. Brancher CH1 de l'oscilloscope sur TP703 (+) et TP701 (-) du circuit imprimé principal.
Brancher CH2 de l'oscilloscope sur TP705 (+) et TP701 (-) du circuit imprimé principal.

Réglage de l'oscilloscope: Tension ... 100 mV (CH1), 200 mV (CH2)
Balayage ... 0,5 ms
Entrée ... CC (CH1), CA (CH2)
Mode ... Normal (déclenchement à partir de CH2)

2. Placer l'interrupteur d'alimentation du lecteur sur la position ON et introduire le disque d'essai (SZZP1057C).
3. Régler le lecteur pour la lecture.
4. Observer l'allure des signaux de CH1 et CH2 sur l'oscilloscope et régler VR703 de sorte que les traces au voisinage du point de déclenchement aient les formes de l'illustration.

REGLAGE DE L'ERREUR DE POURSUITE

1. Brancher CH1 de l'oscilloscope sur TP703 (+) et TP701 (-) du circuit imprimé principal.
Brancher CH2 de l'oscilloscope sur TP704 (+) et TP701 (-) du circuit imprimé principal.

Réglage de l'oscilloscope: Tension ... 100 mV (CH1), 200 mV (CH2)
Balayage ... 1 ms
Entrée ... CC (CH1), CA (CH2)
Mode ... Normal (déclenchement à partir de CH2)

2. Placer l'interrupteur d'alimentation du lecteur sur la position ON et introduire le disque d'essai (SZZP1057C).
3. Régler le lecteur pour la lecture.
4. Observer l'allure des signaux de CH1 et CH2 sur l'oscilloscope et régler VR706 de sorte que les traces au voisinage du point de déclenchement aient les formes de l'illustration.

REGLAGE DE L'EQUILIBRAGE DE L'ERREUR DE POURSUITE

1. Régler le générateur basse fréquence sur 1,1 kHz avec un niveau de sortie de 150 mVc-c. Brancher ce générateur entre les bornes OSC (+) et GND (-) du dispositif de réglage du gain d'asservissement.
2. Brancher CH1 de l'oscilloscope sur TP703 (+) et TP701 (-) du circuit imprimé principal.

Réglage de l'oscilloscope: Tension ... 200 mV
Balayage ... 0,5 ms
Entrée ... CA

3. Placer l'interrupteur d'alimentation du lecteur sur la position ON et introduire un disque d'essai (SZZP1014F ou SZZP1054C).

4. Régler le lecteur pour la lecture.
5. Basculer le sélecteur du dispositif de réglage du gain d'asservissement de la position 2 à la position 1.
6. Régler VR702 de sorte que l'allure du signal soit celle de l'illustration.
7. Basculer le sélecteur du dispositif de réglage du gain d'asservissement de la position 1 à la position 2.
8. Placer l'interrupteur d'alimentation du lecteur sur la position OFF.
9. Débrancher le dispositif de réglage du gain d'asservissement.

VERIFICATION DE LA LECTURE APRES REGLAGES**Vérification de la recherche**

1. Lire un disque ordinaire.
2. Appuyer sur la touche de saut et vérifier la recherche (dans les deux sens).

Vérification de la recherche manuelle

1. Lire un disque ordinaire.
2. Appuyer sur la touche de recherche manuelle et s'assurer que la recherche s'effectue sans à-coups à petite et grande vitesses (dans les deux sens).

Vérification de la lecture

1. Lire le disque d'essai (SZZP1054C).
2. Lire la piste No. 6 (triangle 0,7 mm) et s'assurer qu'il n'y a ni perte de son ni bruit.
3. Lire la piste No. 13 (point noir 0,7 mm) et s'assurer qu'il n'y a ni perte de son ni bruit.

Remarque: Pour cette vérification, utiliser un casque car les haut-parleurs ne donnent pas un résultat correct.

Vérification du capteur**Appareillage de mesure et outillage spécial**

- Oscilloscope double trace (avec déclenchement), 30 MHz ou mieux
- Disques d'essai:
Disque d'essai (SZZP1014F) nouveau ou ancien modèle
Disque de contrôle (SZZP1054C)
Disque voilé (SZZP1056C)

- Clé hexagonale
- Vernis de freinage (RZZ0L01)
- Jauge (RZZ0297)

REGLAGE MECANIQUE

1. Brancher CH1 de l'oscilloscope entre TP703 (+) et TP701 (-) du circuit imprimé principal.

Réglage de l'oscilloscope: Tension ... 200 mV
Balayage ... 0,2 μ s
Entrée ... CA

2. Placer l'interrupteur d'alimentation du lecteur sur la position ON et introduire le disque d'essai (SZZP1056C). Lire la piste No. 5.
3. Déplacer le capteur au moyen des touches de recherche manuelle de manière que les vis de réglage mécanique apparaissent dans les trous de la plaque de fond.

4. Tout en observant le signal radiofréquence sur l'oscilloscope, régler alternativement les deux vis au moyen de la clé hexagonale de 2 mm de sorte que les fluctuations verticales du signal soient minimales et que les traces soient aussi allongées que possible.
5. Placer l'interrupteur d'alimentation du lecteur sur la position OFF.
6. Le réglage terminé, appliquer une goutte de vernis de freinage (RZZ0L01) sur les vis.

Remarque: Les vis ayant été freinées, en usine, avec un vernis, il peut être difficile de les tourner.

Service Manual

Supplement

Portable Stereo CD System

COMPACT
disc
DIGITAL AUDIO

DIGITAL

Radio Cassette


RX-DS650

Colour

(K) ... Black Type

Please file and use this supplement manual together with the Service Manual as shown in the table below.

Model No.	Order No.
RX-DS650 (P, PC)	MD8905022C1
RX-DS650 (E, EB, EG)	MD8906029C2
RX-DS650 (GC)	MD8908049A3
RX-DS650 (GN)	MD8907038A3

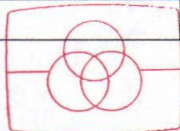

Gratis schema's

Digitized by

Area

Suffix for Model No.	Area	Colour
(P)	U.S.A.	(K)
(PC)	Canada.	
(E)	Europe.	
(EB)	Great Britain.	
(EG)	F.R. Germany & Italy.	
(GC)	Asia, Latin America, Middle Near East and Africa.	
(GN)	Oceania.	

Note:

www.freeservicemanuals.info

- The purpose of this supplement is to correct an error in the "Replacement Parts List". Please correct your service manual as follows.

CORRECTION

REPLACEMENT PARTS LIST

Note: [M] indicates parts that are supplied by MESA.

Ref. No.	Change of Part No.		Part Name & Description	Remarks
	ORIGINAL	➡ NEW		
CABINET AND CHASSIS				
30	RUL1138ZA	RUL1139ZA	LEVER	M
31	RUL1139ZA	RUL1138ZA	LEVER	M

Service Manual

Radio Cassette

RX-D550

Portable Stereo CD Player

Service Manual

Model: RX-D550
Type: Portable



Part Name	Part Number
Front Panel	101
Volume Knob	102
Play/Pause Button	103
Stop/Eject Button	104
Fast Forward Button	105
Reverse Button	106
Headset Jack	107
Headset	108
Speaker	109
Battery	110

These diagrams show the location of the parts and the way they are connected to the main unit.

Part Name	Part Number
CD Tray	201
CD Motor	202
CD Sensor	203
CD Clamp	204
CD Hub	205
CD Lens	206
CD Lens Motor	207
CD Lens Holder	208
CD Lens Cap	209
CD Lens Cap Motor	210

The parts of the unit are shown in the diagrams. The parts are numbered to show their location in the unit.

CORRECTION

REPLACEMENT PARTS LIST

Part Name Part Number

Part Name	Part Number
Front Panel	101
Volume Knob	102
Play/Pause Button	103
Stop/Eject Button	104
Fast Forward Button	105
Reverse Button	106
Headset Jack	107
Headset	108
Speaker	109
Battery	110

Service Manual

Supplement

Portable Stereo CD System


**DIGITAL**Radio Cassette
RX-DS650

Color

(K)... Black Type

Please file and use this supplement manual together with the Service Manual as shown in the table below.

Model No.	Order No.
RX-DS650 (P, PC)	MD8905022C1
RX-DS650 (E, EB, EG)	MD8906029C2
RX-DS650 (GC)	MD8908049A3
RX-DS650 (GN)	MD8907038A3

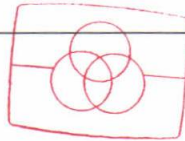Free service manuals
Gratis schema's

Digitized by

Area

Country Code	Area	Color
(P)	U.S.A.	(K)
(PC)	Canada.	
(E)	Continental Europe.	
(EB)	Great Britain.	
(EG)	F.R. Germany & Italy.	
(GC)	Asia/Latin America, Middle Near East/Africa.	
(GN)	Oceania.	

Note:

www.freesevicemanuals.info

- The purpose of this supplement is to correct an error in the "Replacement Parts List". Please correct your service manual as follows.

CORRECTION**REPLACEMENT PARTS LIST**

NOTE: [M] indicates parts that are supplied by MESA.

Ref. No.	Change of Part No.		Part Name & Description	Remarks
	ORIGINAL	➡ NEW		
CABINET AND CHASSIS				
28A	RHR3400ZA	RFKND5620PBK	DISC HOLDER	M
MECHANISM PARTS				
216	RZAU300A	RZUAR300A	CHASSIS	

National/Panasonic**MESA**Printed in Singapore
V901016000M/B

