Service Manual

AV Control Receiver



SA-XR45E SA-XR45EB SA-XR45EG

Color

(S) Silver Type

(K) Black Type

<u>Subject: Correction in Disassembly and Main component Replacement</u>
Procedures & Operational checks

Please use this supplement manual together with the service manual for Model No. [SA-XR45EEBEG-SK, Order No. MD0306234C2].

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

Page

© 2003 PANASONIC AVC Networks Singapore Pte. Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.


1 Disassembly and Main component Replacement Procedures and Operational check (Correction)

AFTER


Please refer to 8.1 Checking for the Main PCB and DSP PCB at page 10 and 11.

BEFORE

 Check the DSP P.C.B. (B side) and main P.C.B. as shown below.

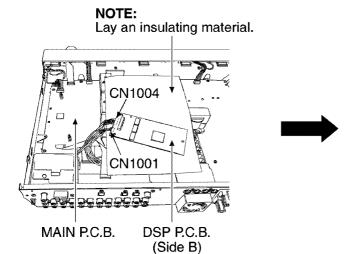

 Check the DSP P.C.B. (B side) and main P.C.B. as shown helow

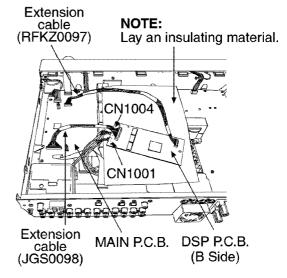

NOTE: Please use the following tools for checking of DSP P.C.B.

Extension cable	
CN1002	JGS0098 (26pin)
CN1003	RFKZ0097 (10pin)

2 FLE0309