

Service Manual

Compact Stereo System

Model No. **SC-HC57EG**

SC-HC57P

SC-HC57PC

SC-HC57PU

SC-HC57DBEB

SC-HC57DBGN

Product Color: (K)...Black Type

(W)...White Type (For EG only)

Subject : Schematic Diagram / Printed Circuit Board / Replacement Parts List
(Updates)

Please file and use this supplement manual together with the service manual for

Model No. SC-HC57P/PC-K Order No. PSG1202010CE

Model No. SC-HC57EG-K/W Order No. PSG1203006CE

Model No. SC-HC57PU-K Order No. PSG1203007CE

Model No. SC-HC57DBEBK, SC-HC57DBGNK Order No. PSG1203018CE

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

TABLE OF CONTENTS

	PAGE		PAGE
1 Notes	3	2.11. MAIN CIRCUIT (3/4) (For SC-HC57PU-K)	15
2 Schematic Diagram	5	2.12. MAIN CIRCUIT (4/4) (For SC-HC57PU-K)	16
2.1. MAIN CIRCUIT (1/4) (For SC-HC57P/PC-K)	5	2.13. MAIN CIRCUIT (1/4) (For SC-HC57DBEBK, SC-HC57DBGNK)	17
2.2. MAIN CIRCUIT (2/4) (For SC-HC57P/PC-K)	6	2.14. MAIN CIRCUIT (2/4) (For SC-HC57DBEBK, SC-HC57DBGNK)	18
2.3. MAIN CIRCUIT (3/4) (For SC-HC57P/PC-K)	7	2.15. MAIN CIRCUIT (3/4) (For SC-HC57DBEBK, SC-HC57DBGNK)	19
2.4. MAIN CIRCUIT (4/4) (For SC-HC57P/PC-K)	8	2.16. MAIN CIRCUIT (4/4) (For SC-HC57DBEBK, SC-HC57DBGNK)	20
2.5. MAIN CIRCUIT (1/4) (For SC-HC57EG-K/W)	9	3 Printed Circuit Board	21
2.6. MAIN CIRCUIT (2/4) (For SC-HC57EG-K/W)	10	3.1. MAIN P.C.B. (Side A) (For SC-HC57P/PC-K) ----	21
2.7. MAIN CIRCUIT (3/4) (For SC-HC57EG-K/W)	11		
2.8. MAIN CIRCUIT (4/4) (For SC-HC57EG-K/W)	12		
2.9. MAIN CIRCUIT (1/4) (For SC-HC57PU-K)	13		
2.10. MAIN CIRCUIT (2/4) (For SC-HC57PU-K)	14		

Panasonic®

© Panasonic Corporation 2012. All rights reserved.
Unauthorized copying and distribution is a violation of law.

3.2. MAIN P.C.B. (Side B) (For SC-HC57P/PC-K)-----	22
3.3. iPod & REMOTE SENSOR P.C.B. (For SC-HC57P/PC-K) -----	23
3.4. BUTTON & SMPS P.C.B. (For SC-HC57P/PC-K)-----	24
3.5. MAIN P.C.B. (Side A) (For SC-HC57EG-K/W)----	25
3.6. MAIN P.C.B. (Side B) (For SC-HC57EG-K/W)----	26
3.7. iPod & REMOTE SENSOR P.C.B. (For SC-HC57EG-K/W) -----	27
3.8. BUTTON & SMPS P.C.B. (For SC-HC57EG-K/W) -----	28
3.9. MAIN P.C.B. (Side A) (For SC-HC57PU-K) -----	29
3.10. MAIN P.C.B. (Side B) (For SC-HC57PU-K) -----	30
3.11. iPod & REMOTE SENSOR P.C.B. (For SC-HC57PU-K)-----	31
3.12. BUTTON & SMPS P.C.B. (For SC-HC57PU-K)-----	32
3.13. MAIN P.C.B. (Side A) (For SC-HC57DBEBK, SC-HC57DBGNK) -----	33
3.14. MAIN P.C.B. (Side B) (For SC-HC57DBEBK, SC-HC57DBGNK) -----	34
3.15. iPod & REMOTE SENSOR P.C.B. (For SC-HC57DBEBK, SC-HC57DBGNK)-----	35
3.16. BUTTON & SMPS P.C.B. (For SC-HC57DBEBK, SC-HC57DBGNK)-----	36
4 Replacement Parts List -----	37
4.1. Electrical Replacement Parts List-----	38

1 Notes


This supplement includes additional and revised contents to the original service manual for below sections:-

1. Update to Schematic Diagram.
 - (Main CIRCUIT)
2. Update to Printed Circuit Board.
 - (Main P.C.B. / iPod P.C.B. / REMOTE SENSOR P.C.B. / BUTTON P.C.B. & SMPS P.C.B.)
3. Update to Replacement Parts List.

2 Schematic Diagram

2.1. MAIN CIRCUIT (1/4) (For SC-HC57P/PC-K)

With reference to original service manual (section 15.4.) on page 119 for Model No. SC-HC57P/PC-K

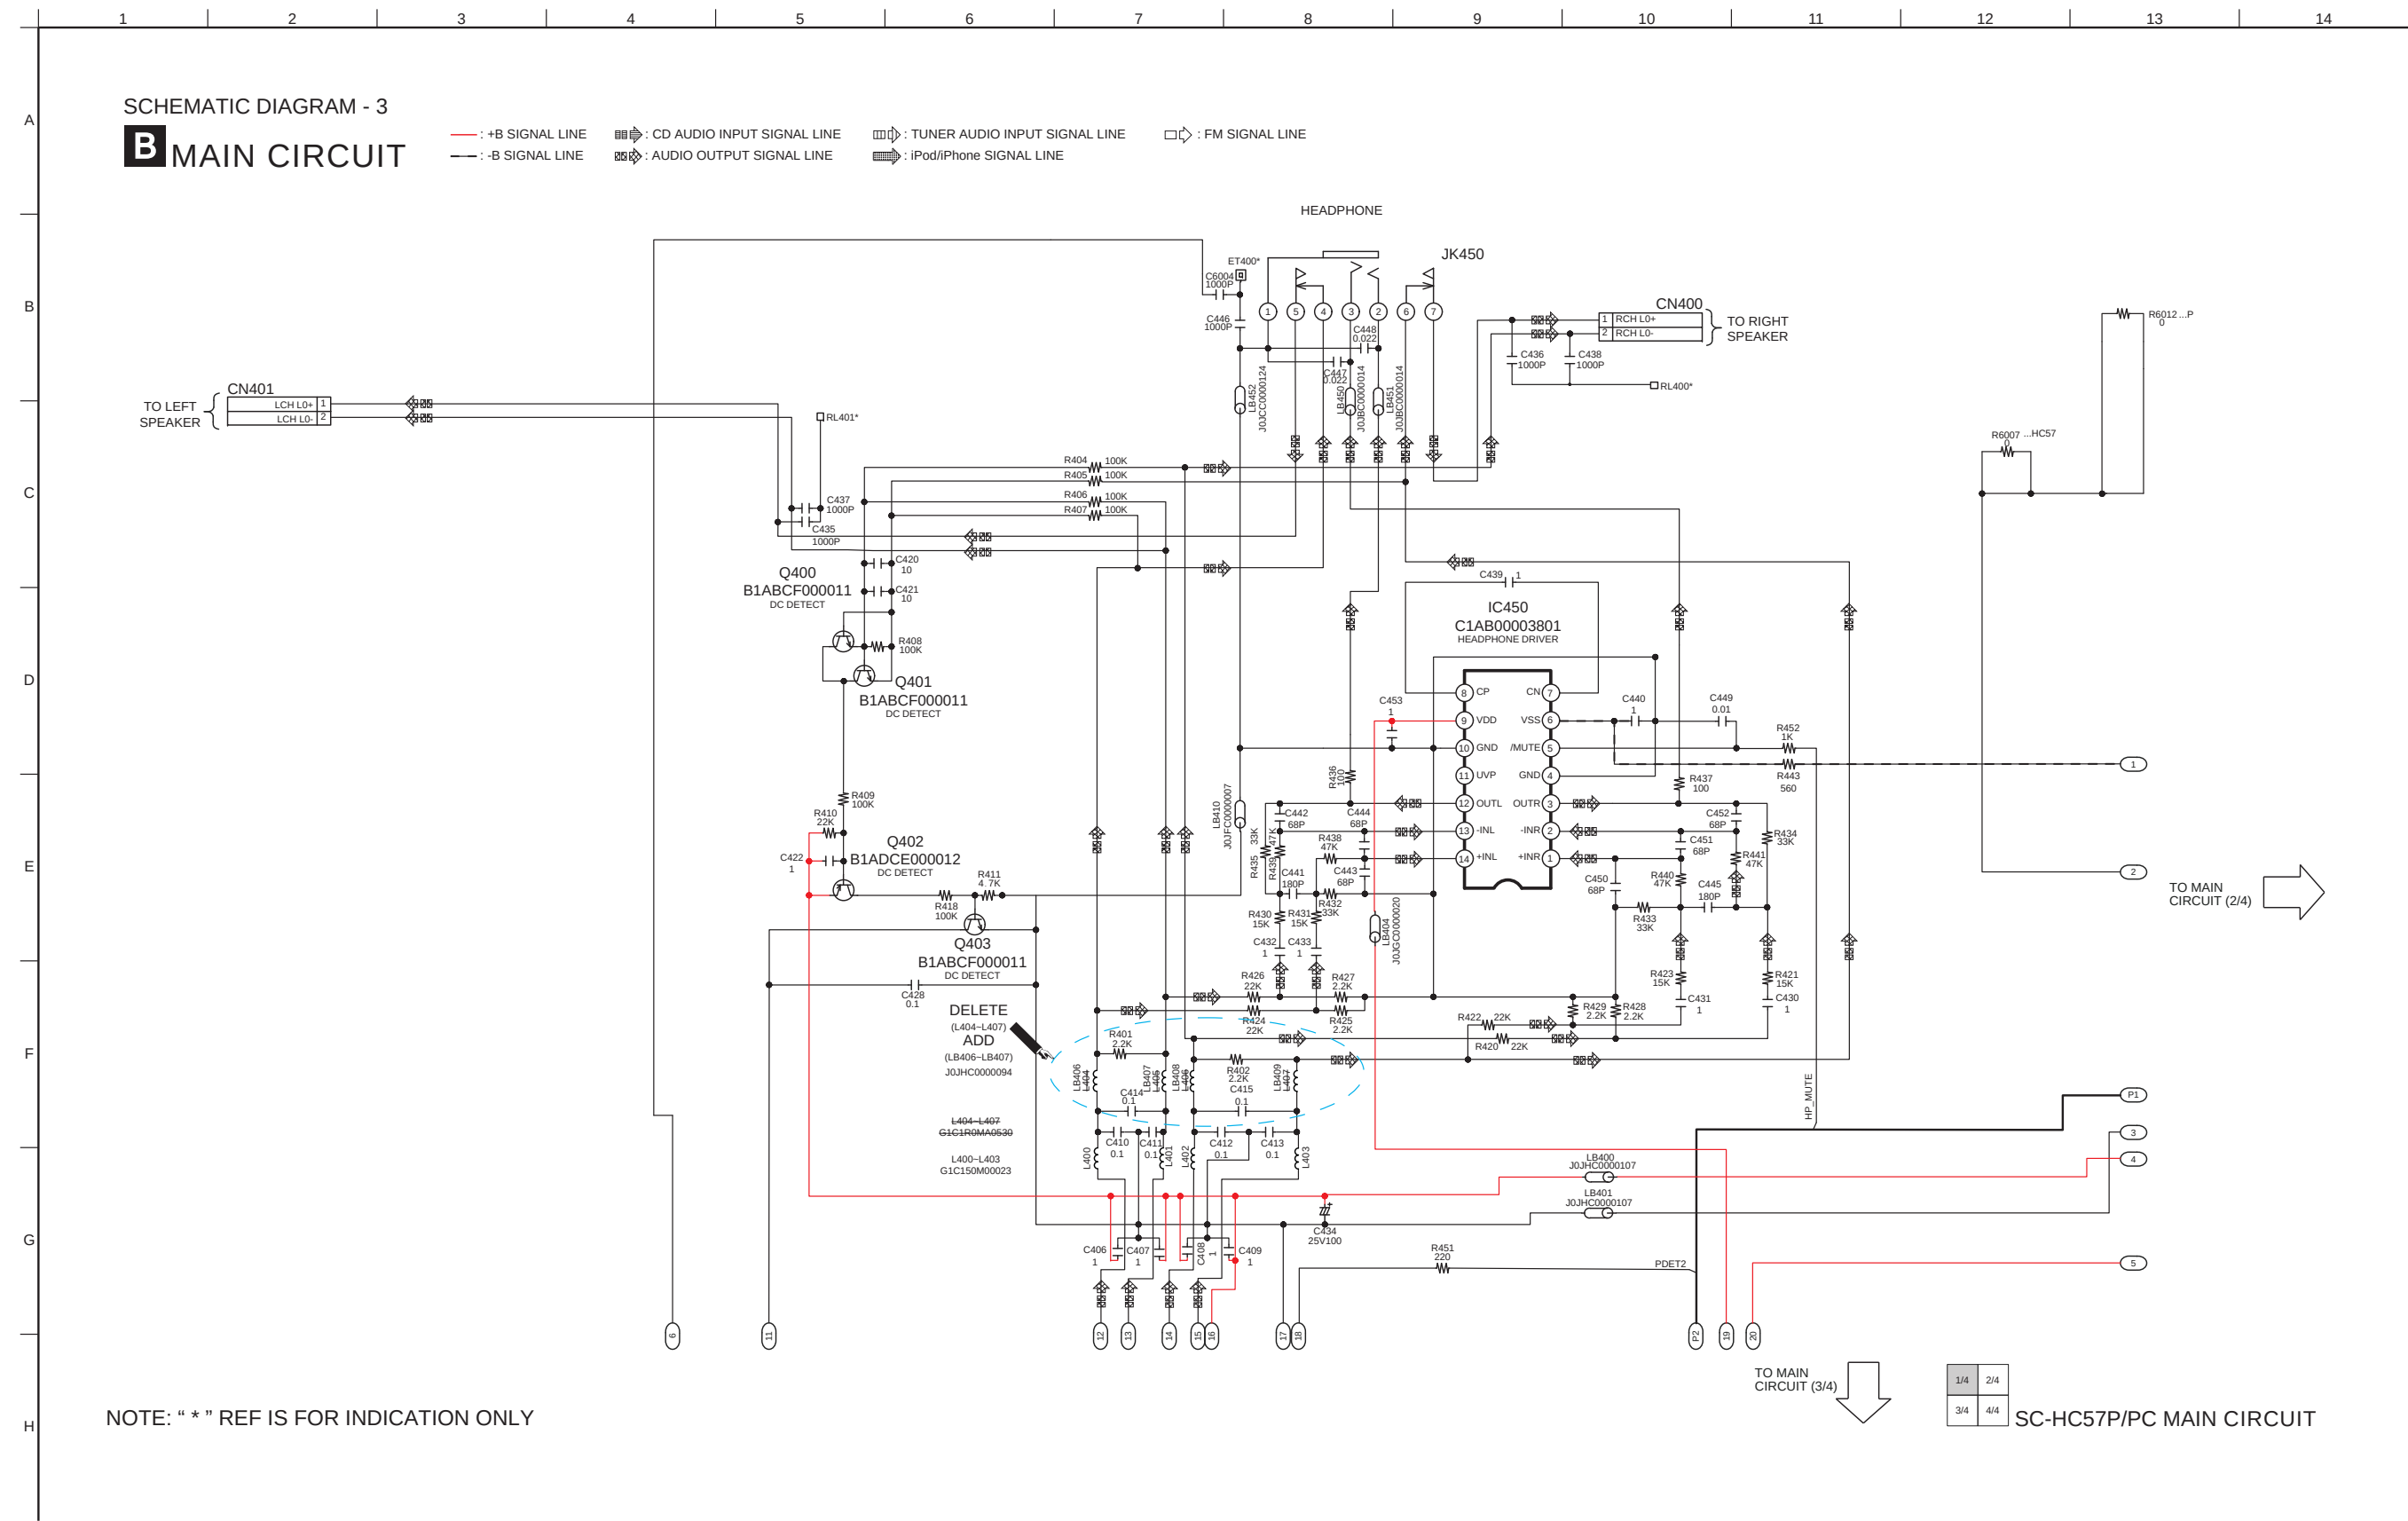


2.2. MAIN CIRCUIT (2/4) (For SC-HC57P/PC-K)

With reference to original service manual (section 15.5.) on page 120 for Model No. SC-HC57P/PC-K

SCHEMATIC DIAGRAM - 4

B MAIN CIRCUIT

— : +B SIGNAL LINE : CD AUDIO INPUT SIGNAL LINE : TUNER AUDIO INPUT SIGNAL LINE : FM SIGNAL LINE
— : -B SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : iPod/iPhone SIGNAL LINE

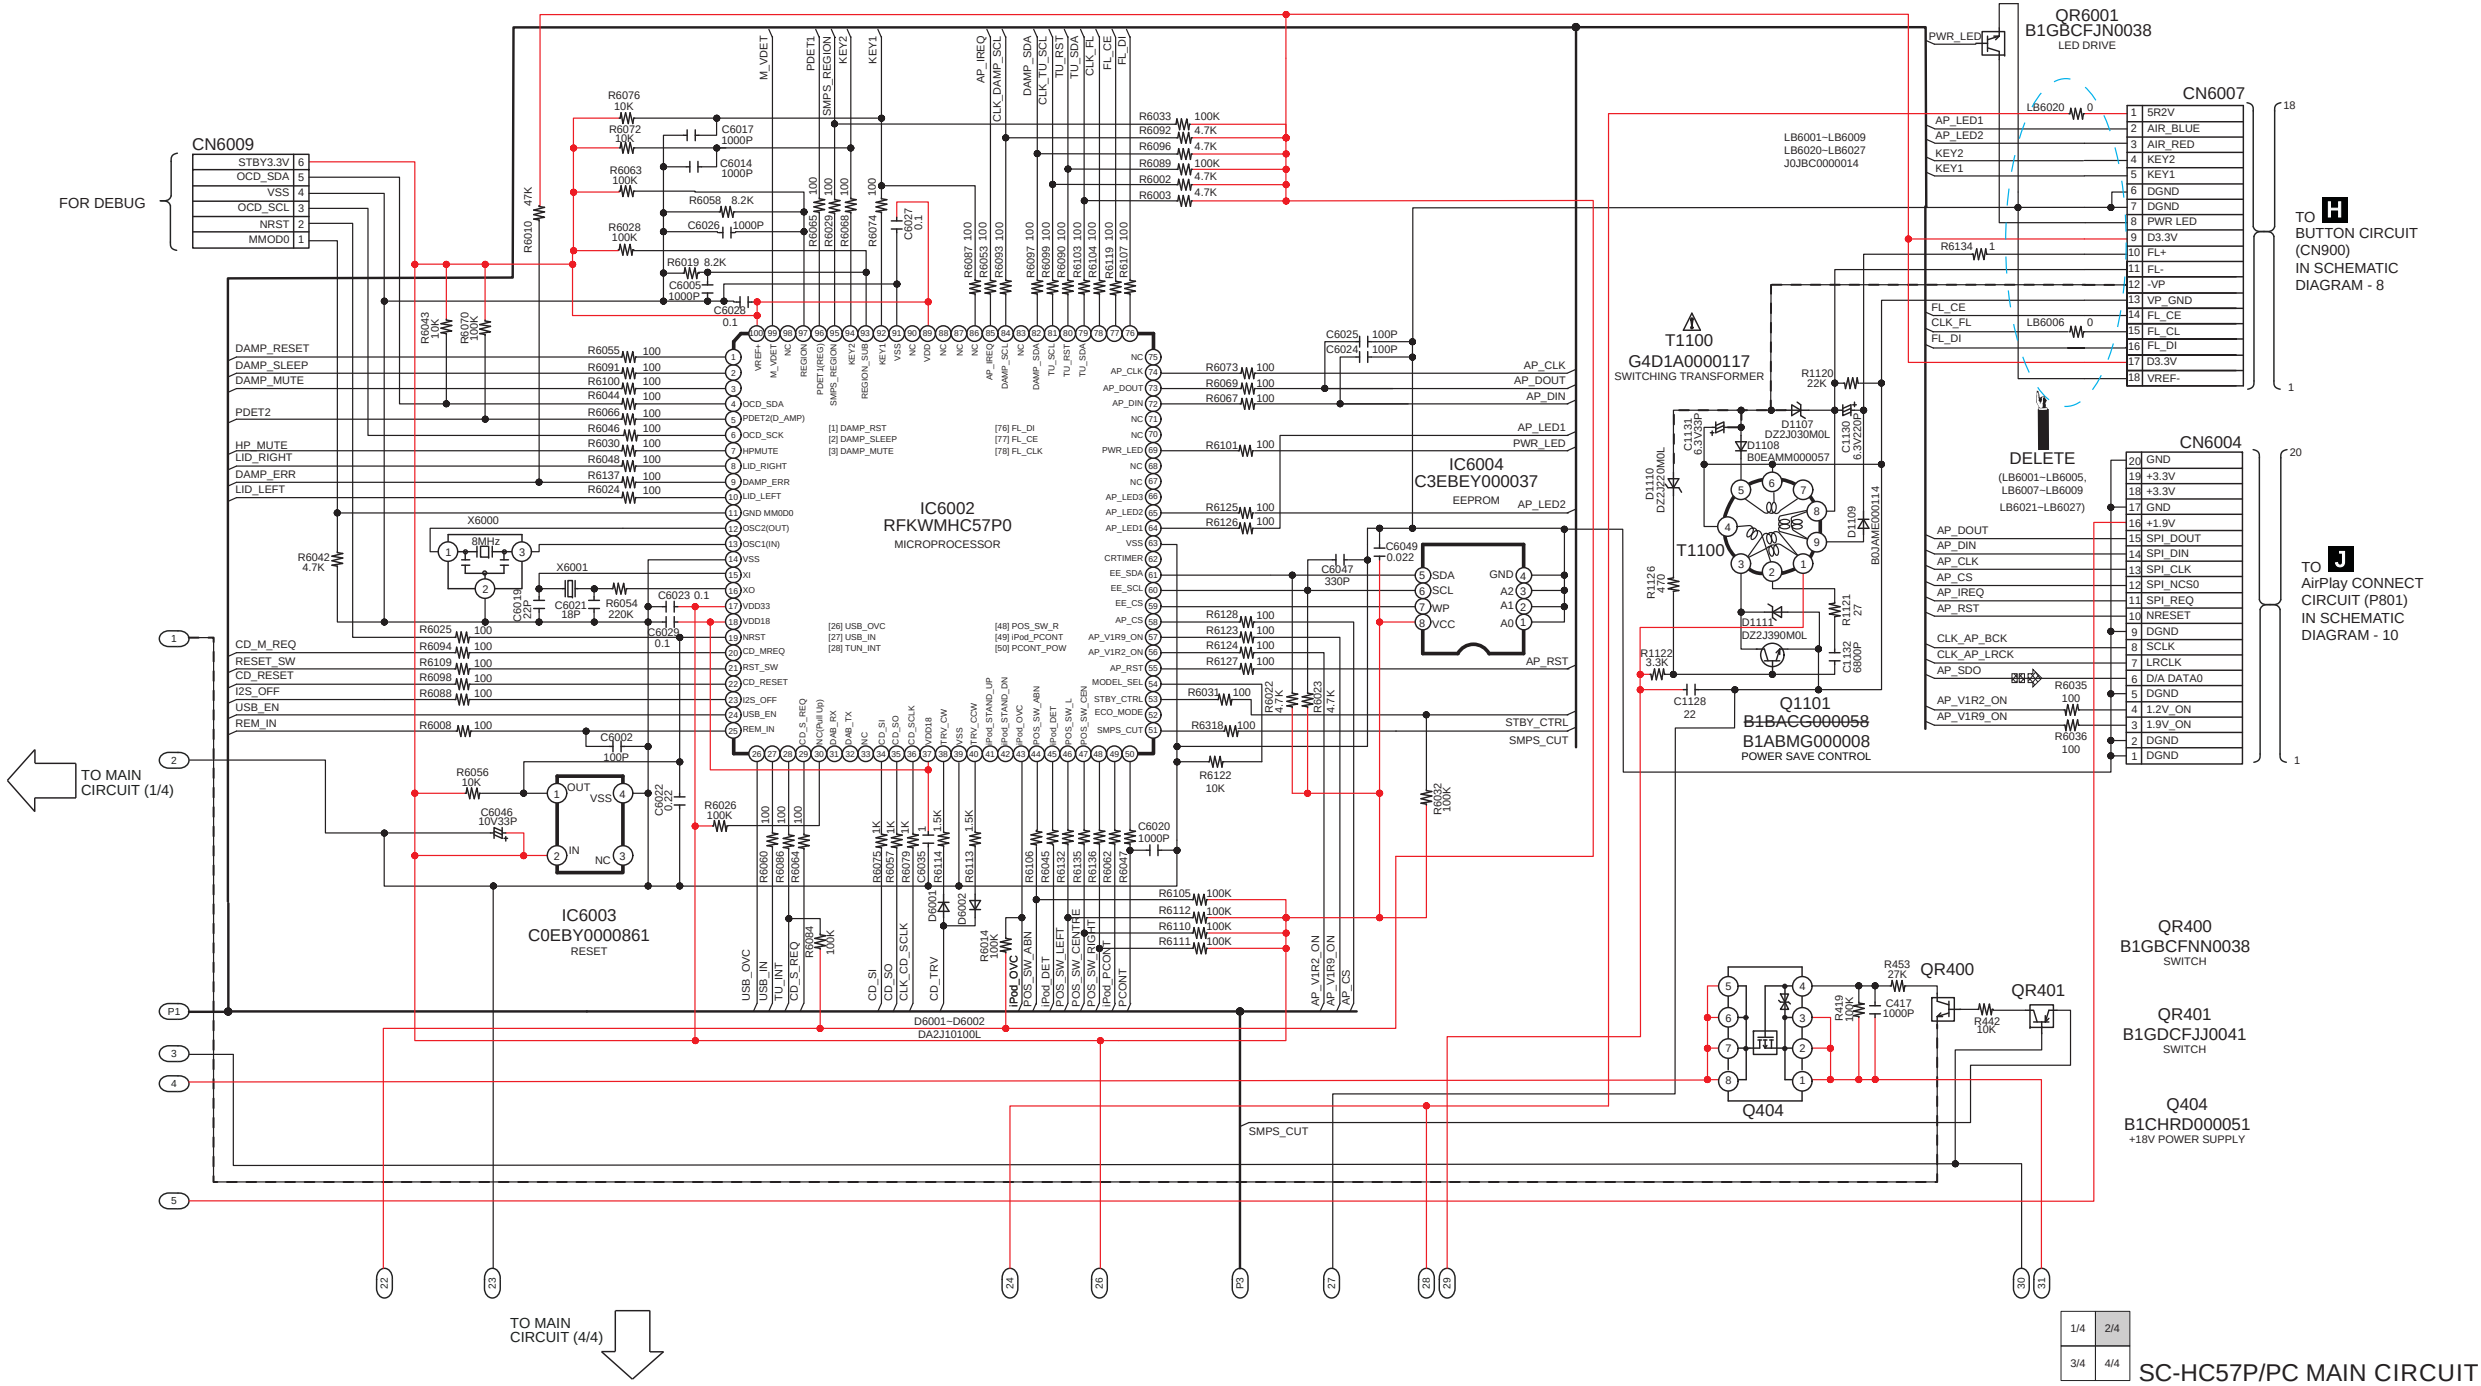

With reference to original service manual (section 15.6.) on page 121 for Model No. SC-HC57P/PC-K

B MAIN CIRCUIT




2.4. MAIN CIRCUIT (4/4) (For SC-HC57P/PC-K)

With reference to original service manual (section 15.7.) on page 122 for Model No. SC-HC57P/PC-K

SCHEMATIC DIAGRAM - 6


B MAIN CIRCUIT

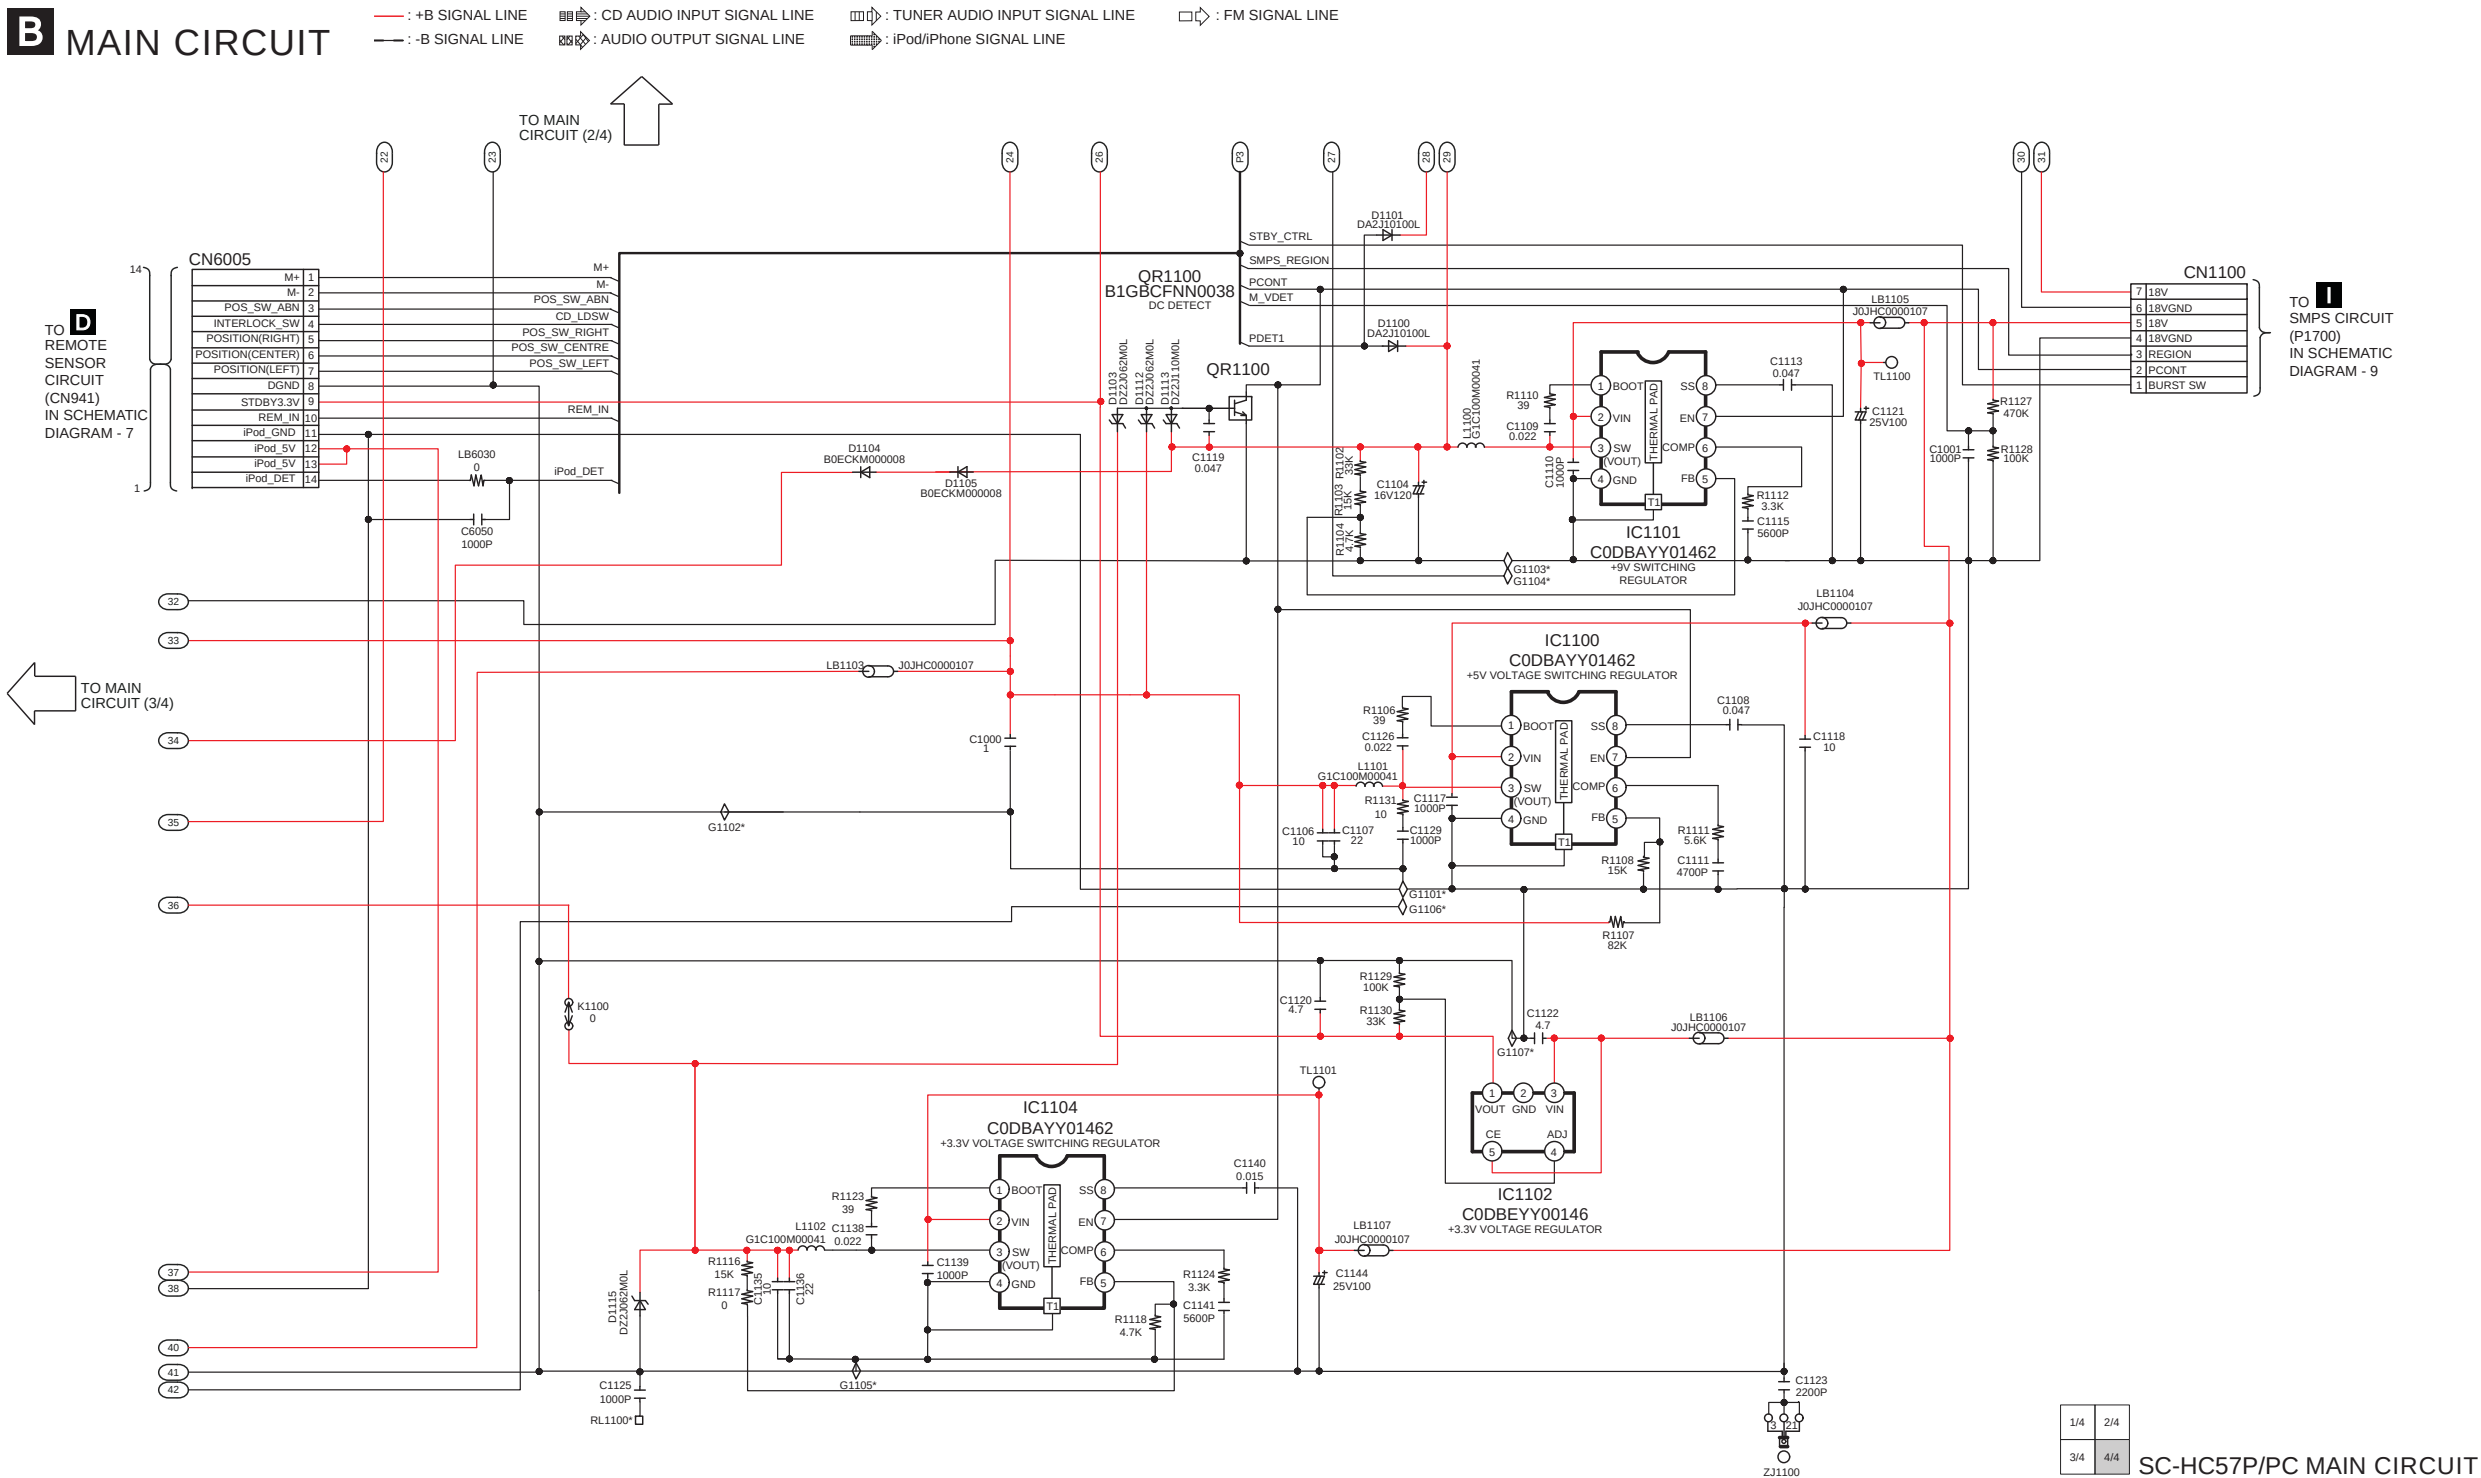

NOTE: " * " REF IS FOR INDICATION ONLY

2.5. MAIN CIRCUIT (1/4) (For SC-HC57EG-K/W)

With reference to original service manual (section 15.4.) on page 119 for Model No. SC-HC57EG-K/W

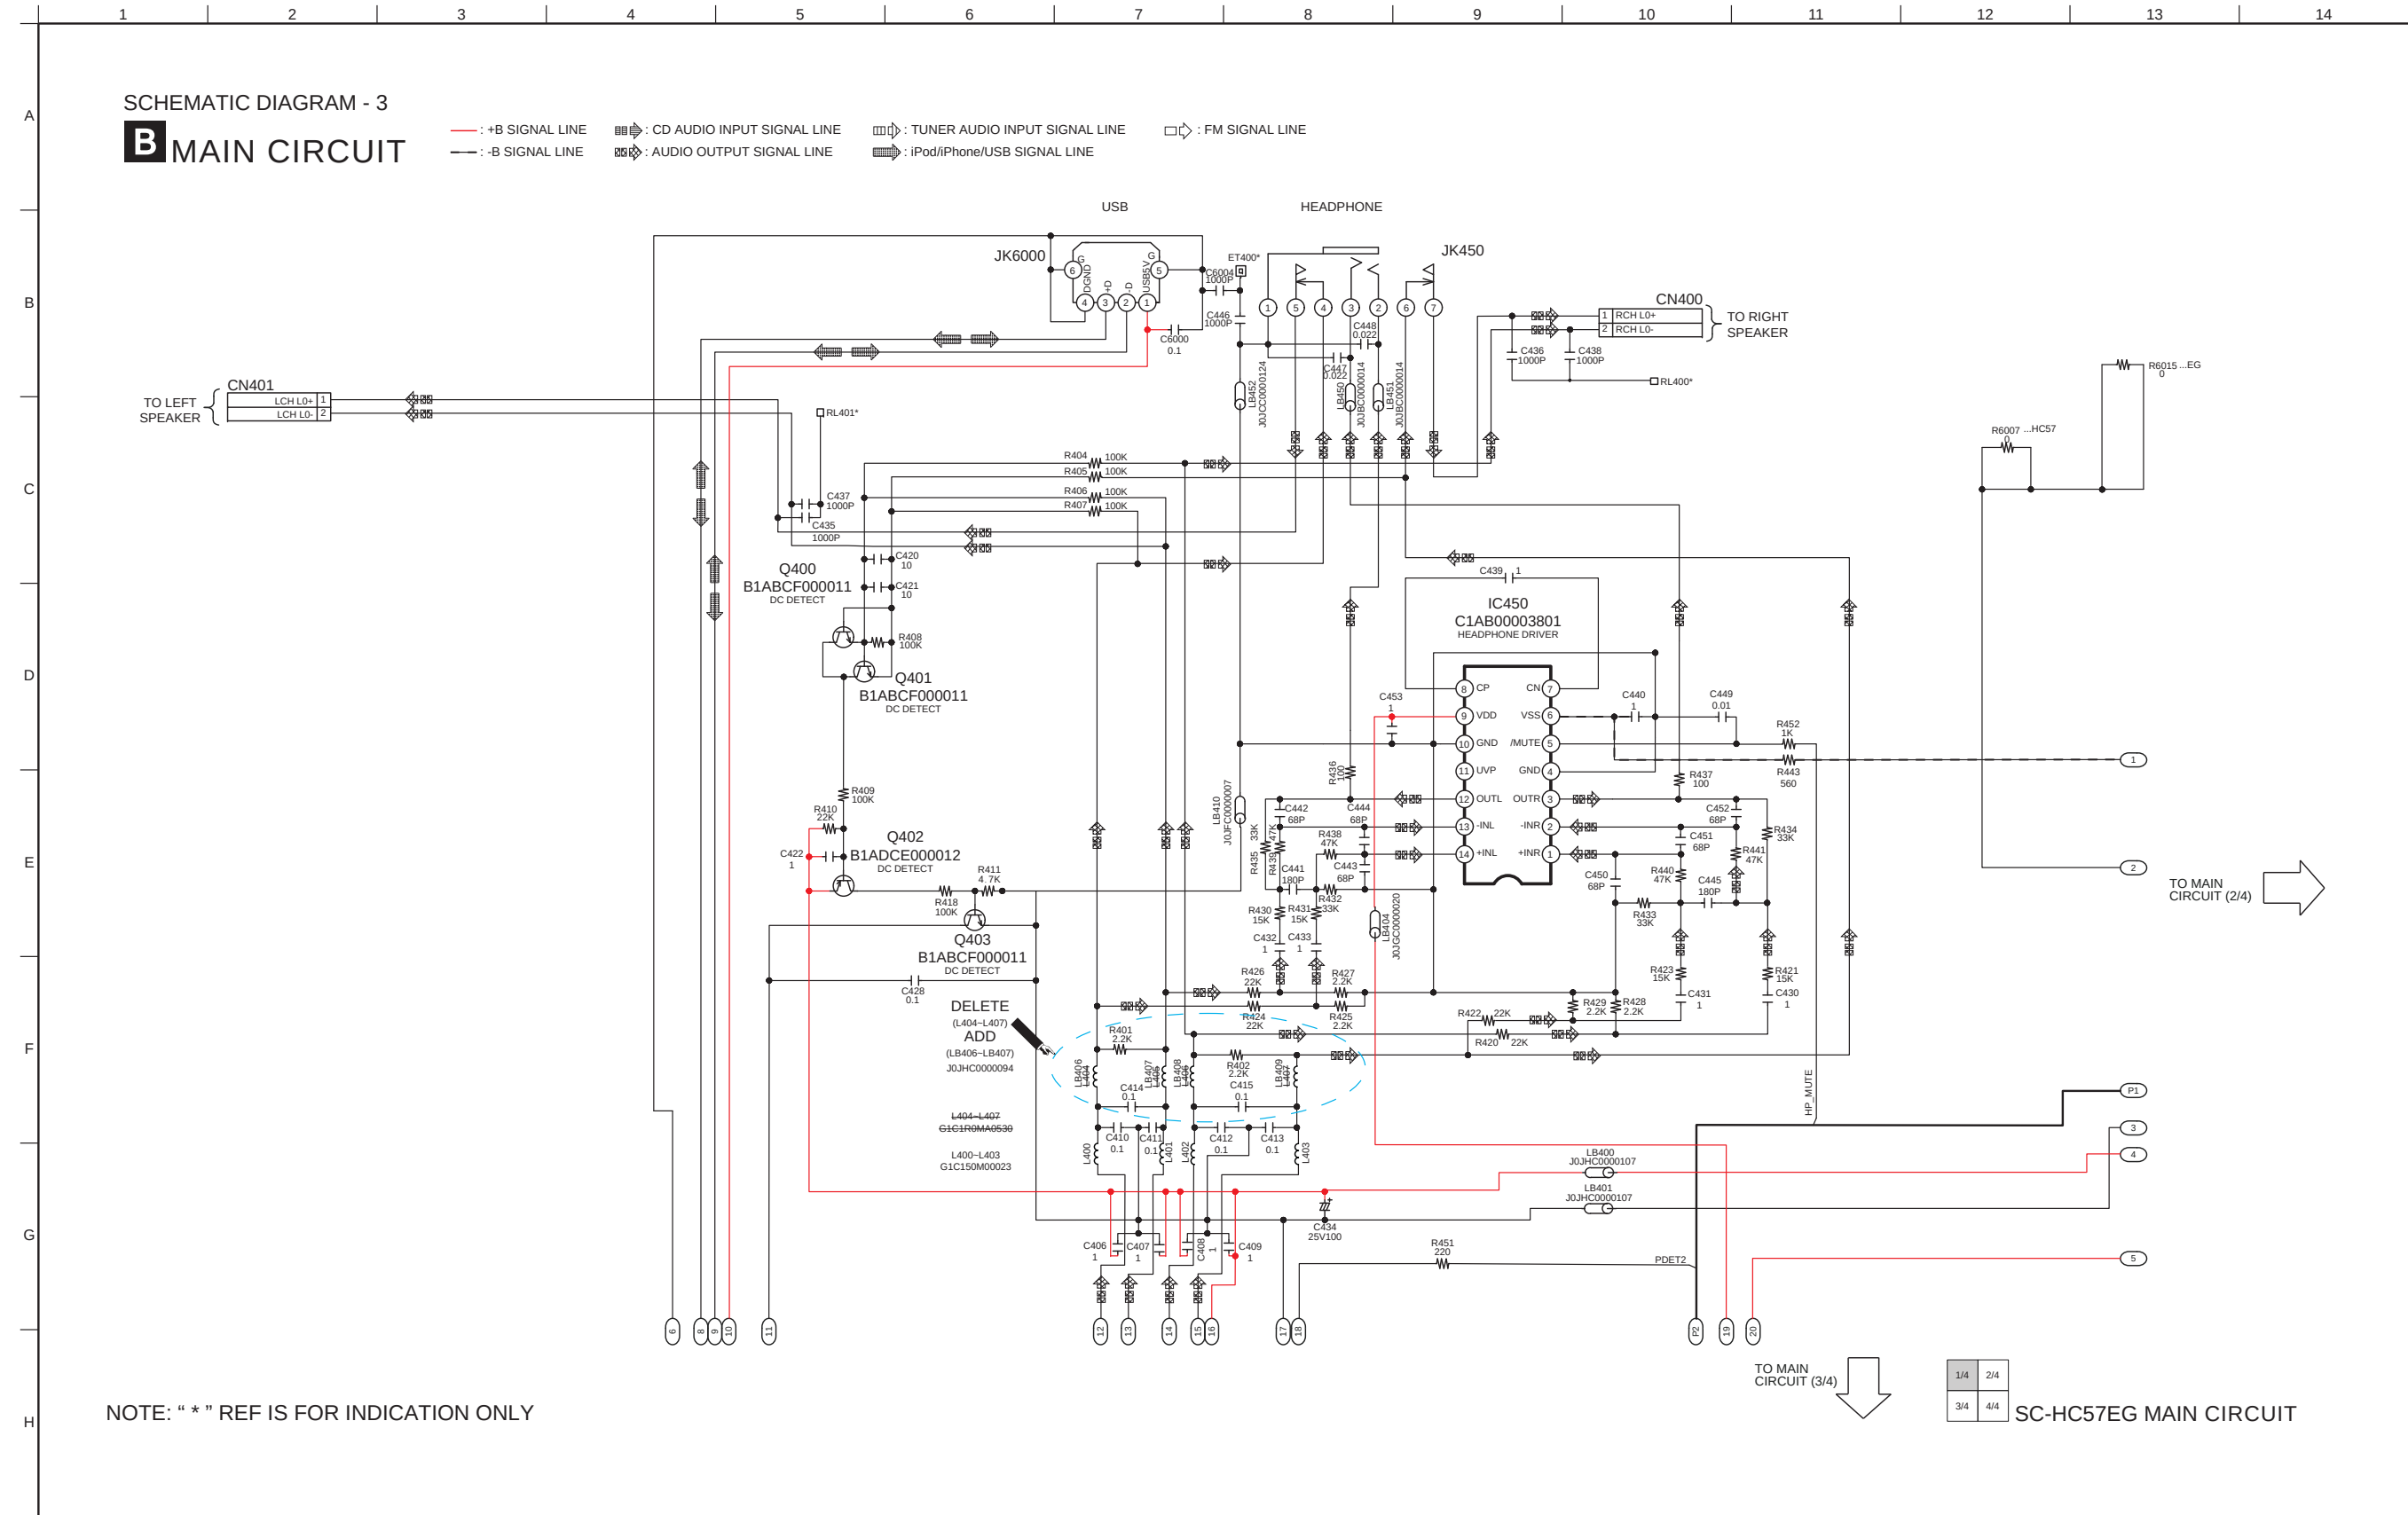


2.6. MAIN CIRCUIT (2/4) (For SC-HC57EG-K/W)

With reference to original service manual (section 15.5.) on page 120 for Model No. SC-HC57EG-K/W

SCHEMATIC DIAGRAM - 4

B MAIN CIRCUIT

— : +B SIGNAL LINE : CD AUDIO INPUT SIGNAL LINE : TUNER AUDIO INPUT SIGNAL LINE : FM SIGNAL LINE
— : -B SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : iPod/iPhone/USB SIGNAL LINE

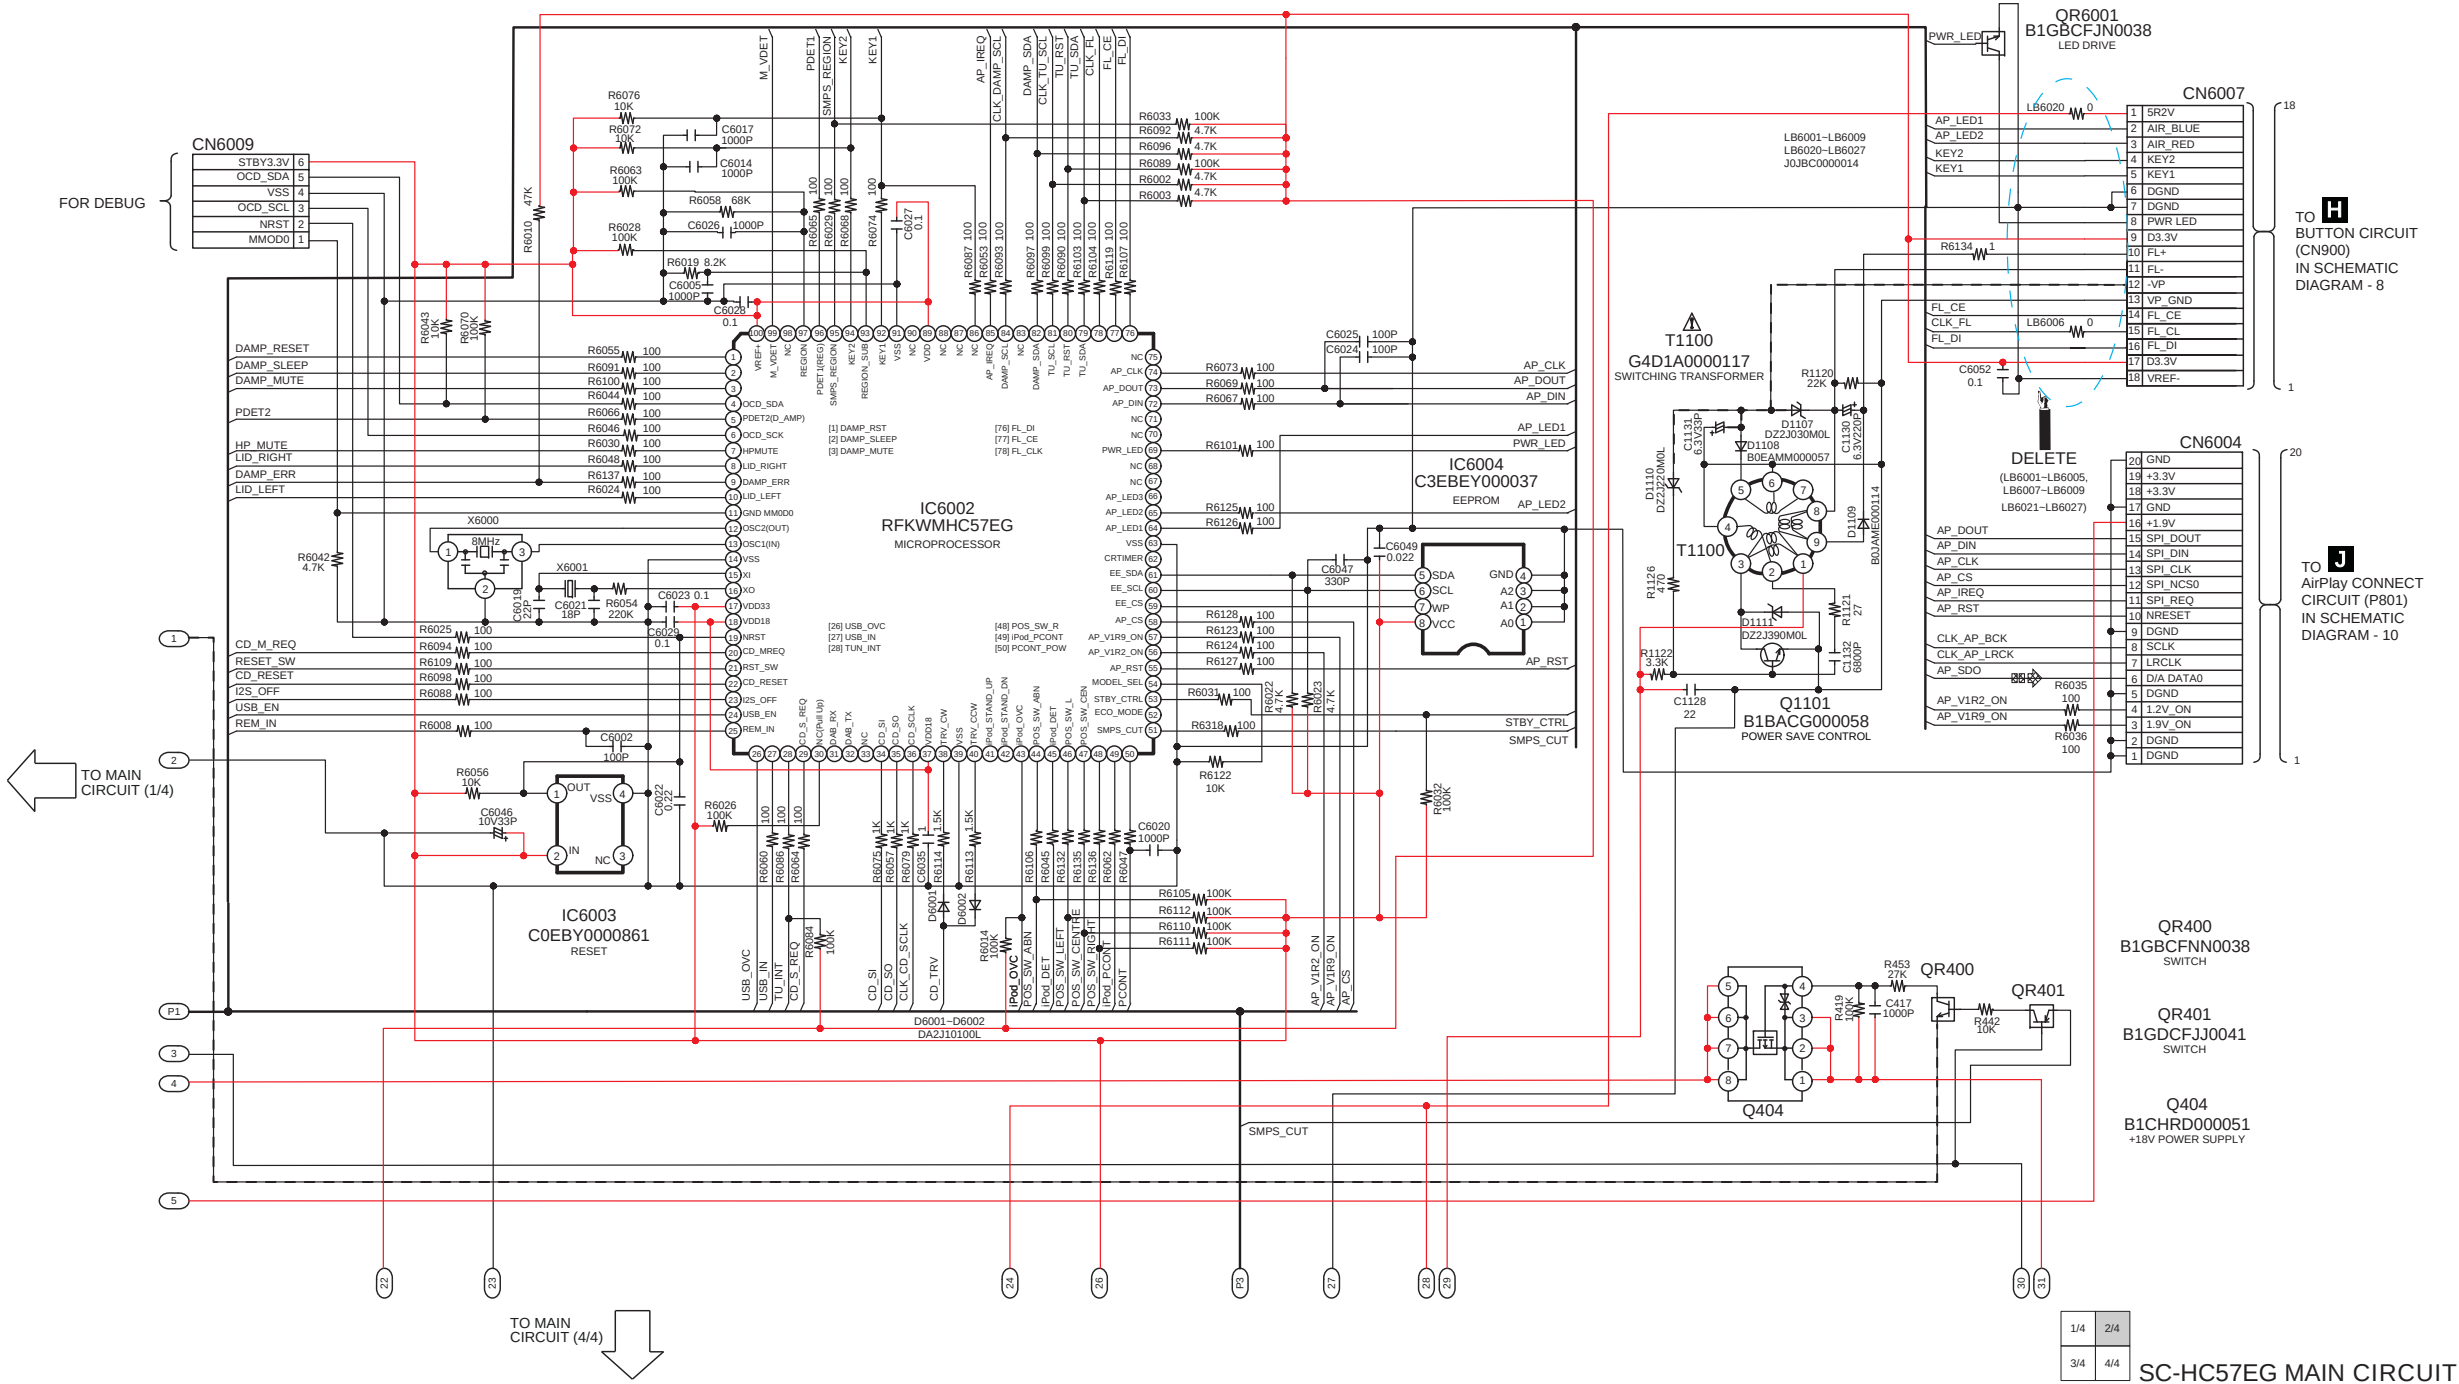


2.8. MAIN CIRCUIT (4/4) (For SC-HC57EG-K/W)

With reference to original service manual (section 15.7.) on page 122 for Model No. SC-HC57EG-K/W

SCHEMATIC DIAGRAM - 6


B MAIN CIRCUIT

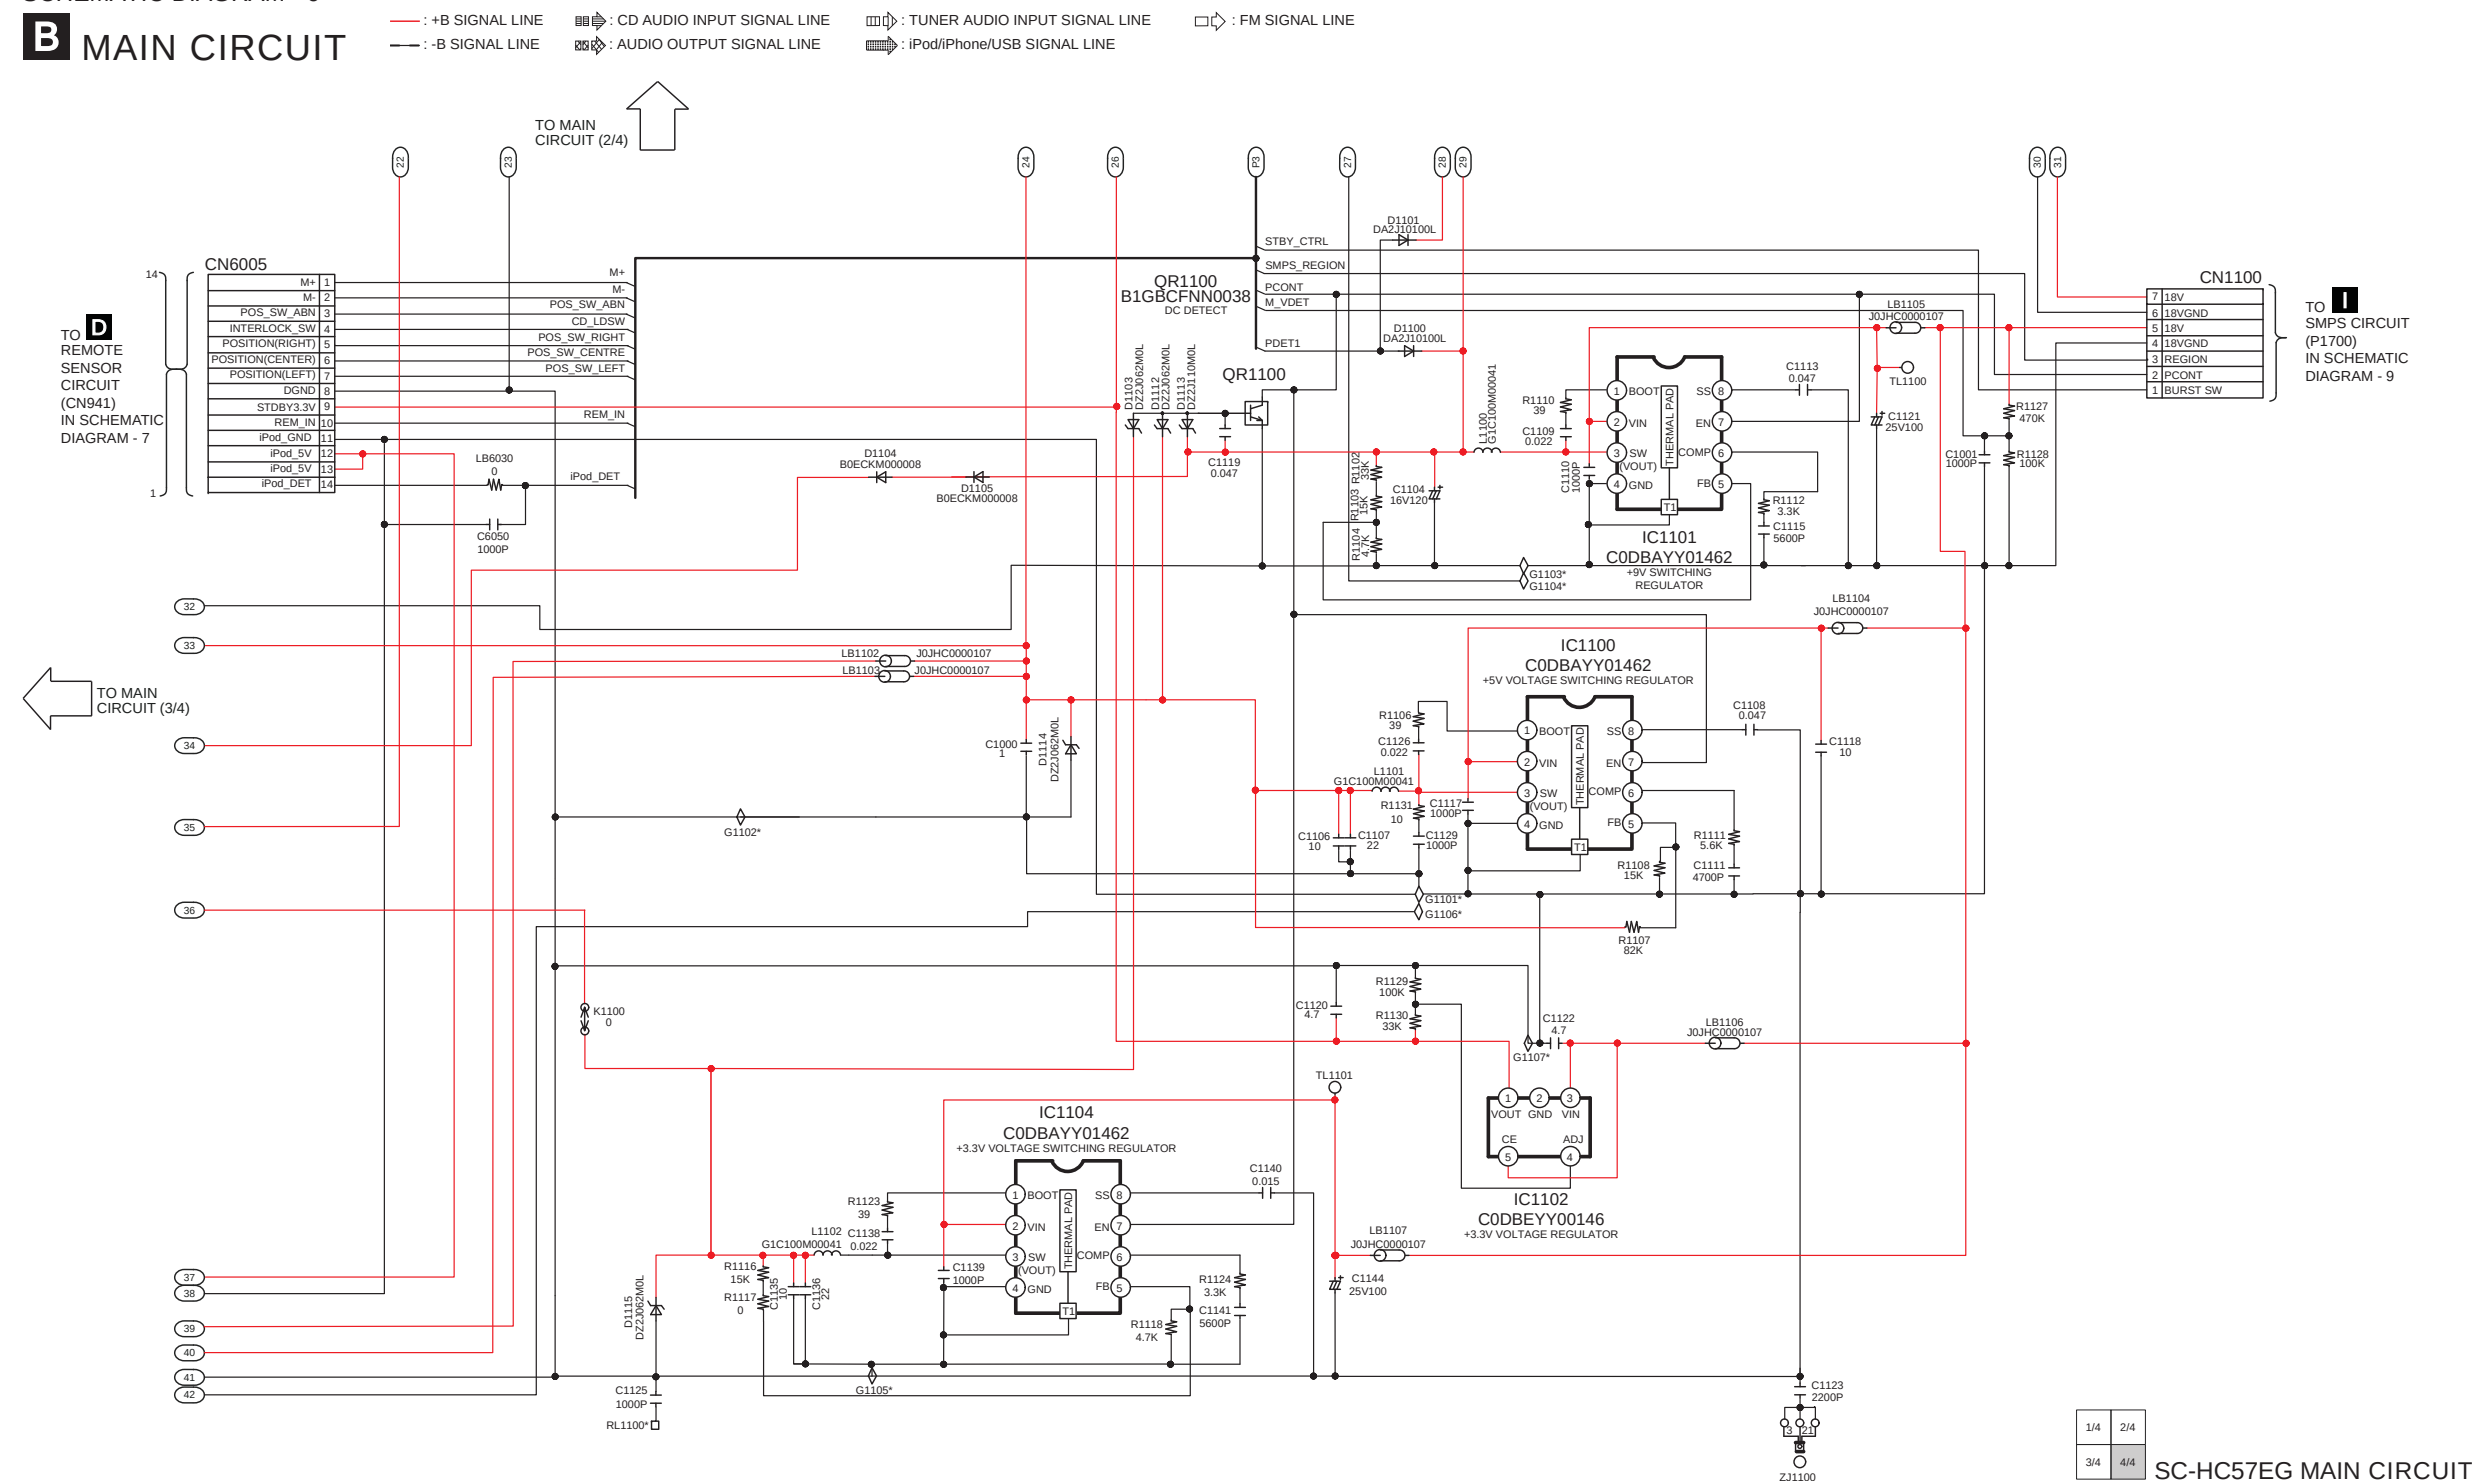

NOTE: " * " REF IS FOR INDICATION ONLY

2.9. MAIN CIRCUIT (1/4) (For SC-HC57PU-K)

With reference to original service manual (section 15.4.) on page 119 for Model No. SC-HC57PU-K

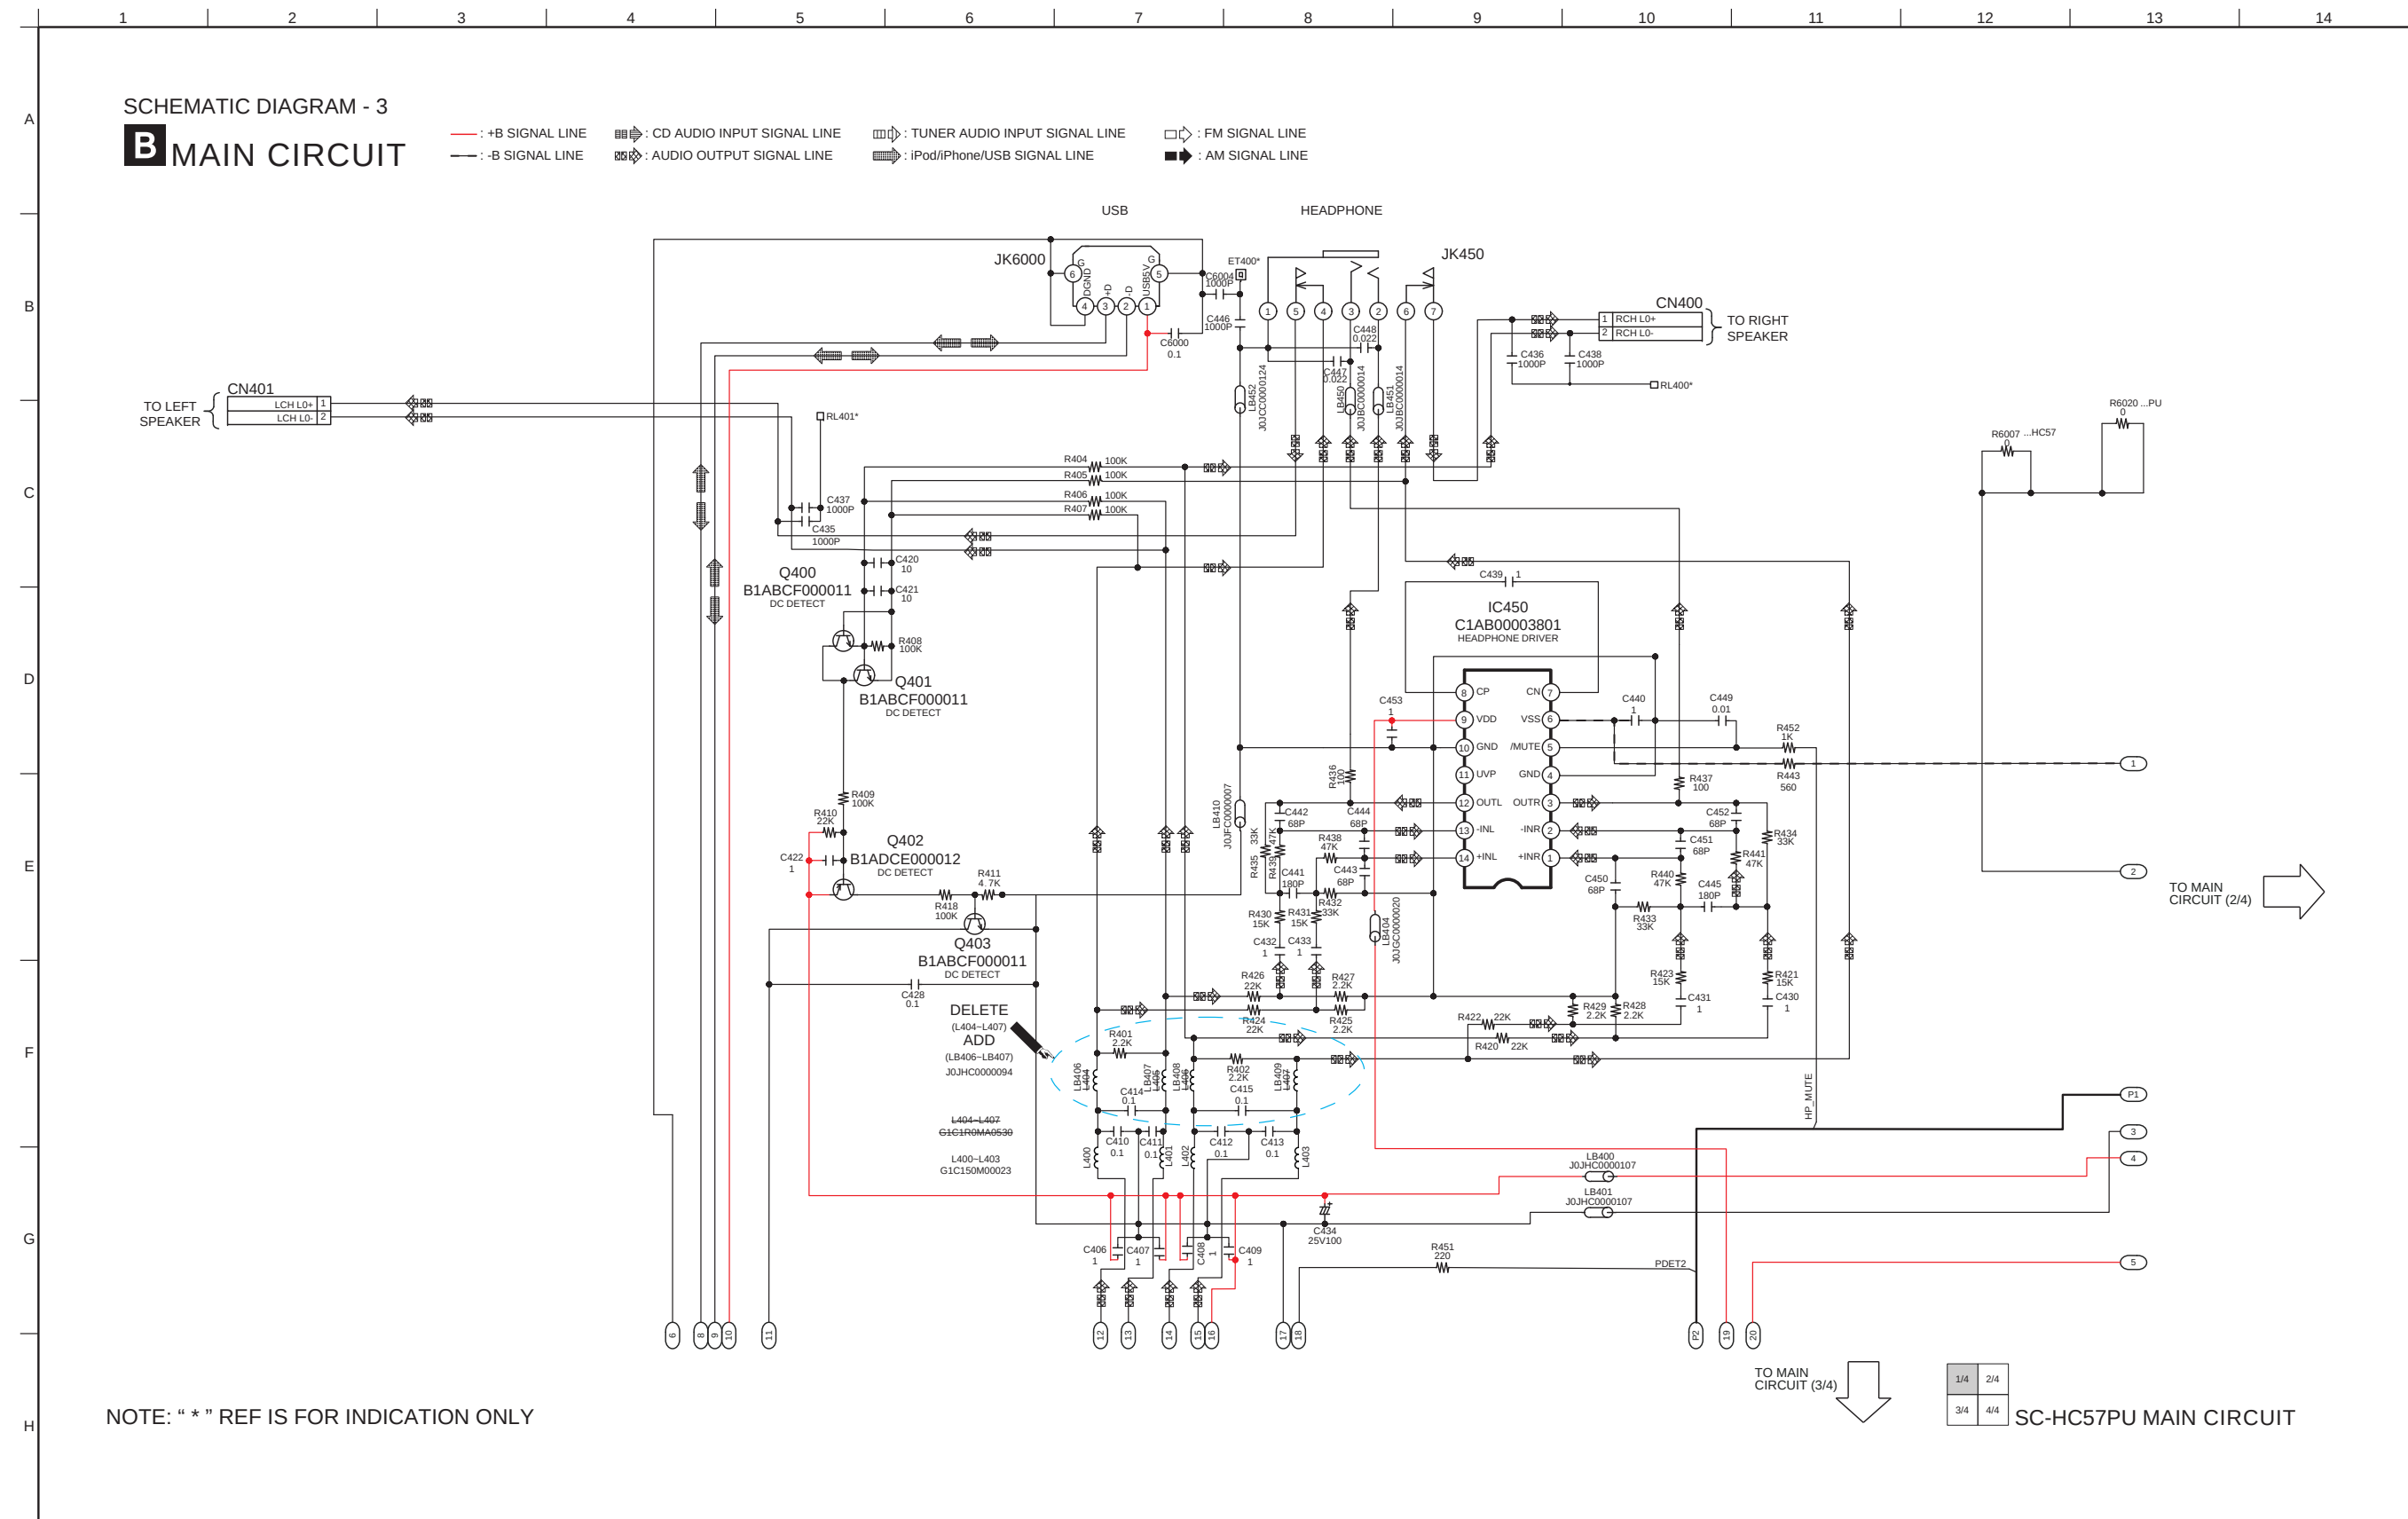


2.10. MAIN CIRCUIT (2/4) (For SC-HC57PU-K)

With reference to original service manual (section 15.5.) on page 120 for Model No. SC-HC57PU-K

SCHEMATIC DIAGRAM - 4

B MAIN CIRCUIT

- : +B SIGNAL LINE : CD AUDIO INPUT SIGNAL LINE : TUNER AUDIO INPUT SIGNAL LINE : FM SIGNAL LINE
— : -B SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : iPod/iPhone/USB SIGNAL LINE : AM SIGNAL LINE

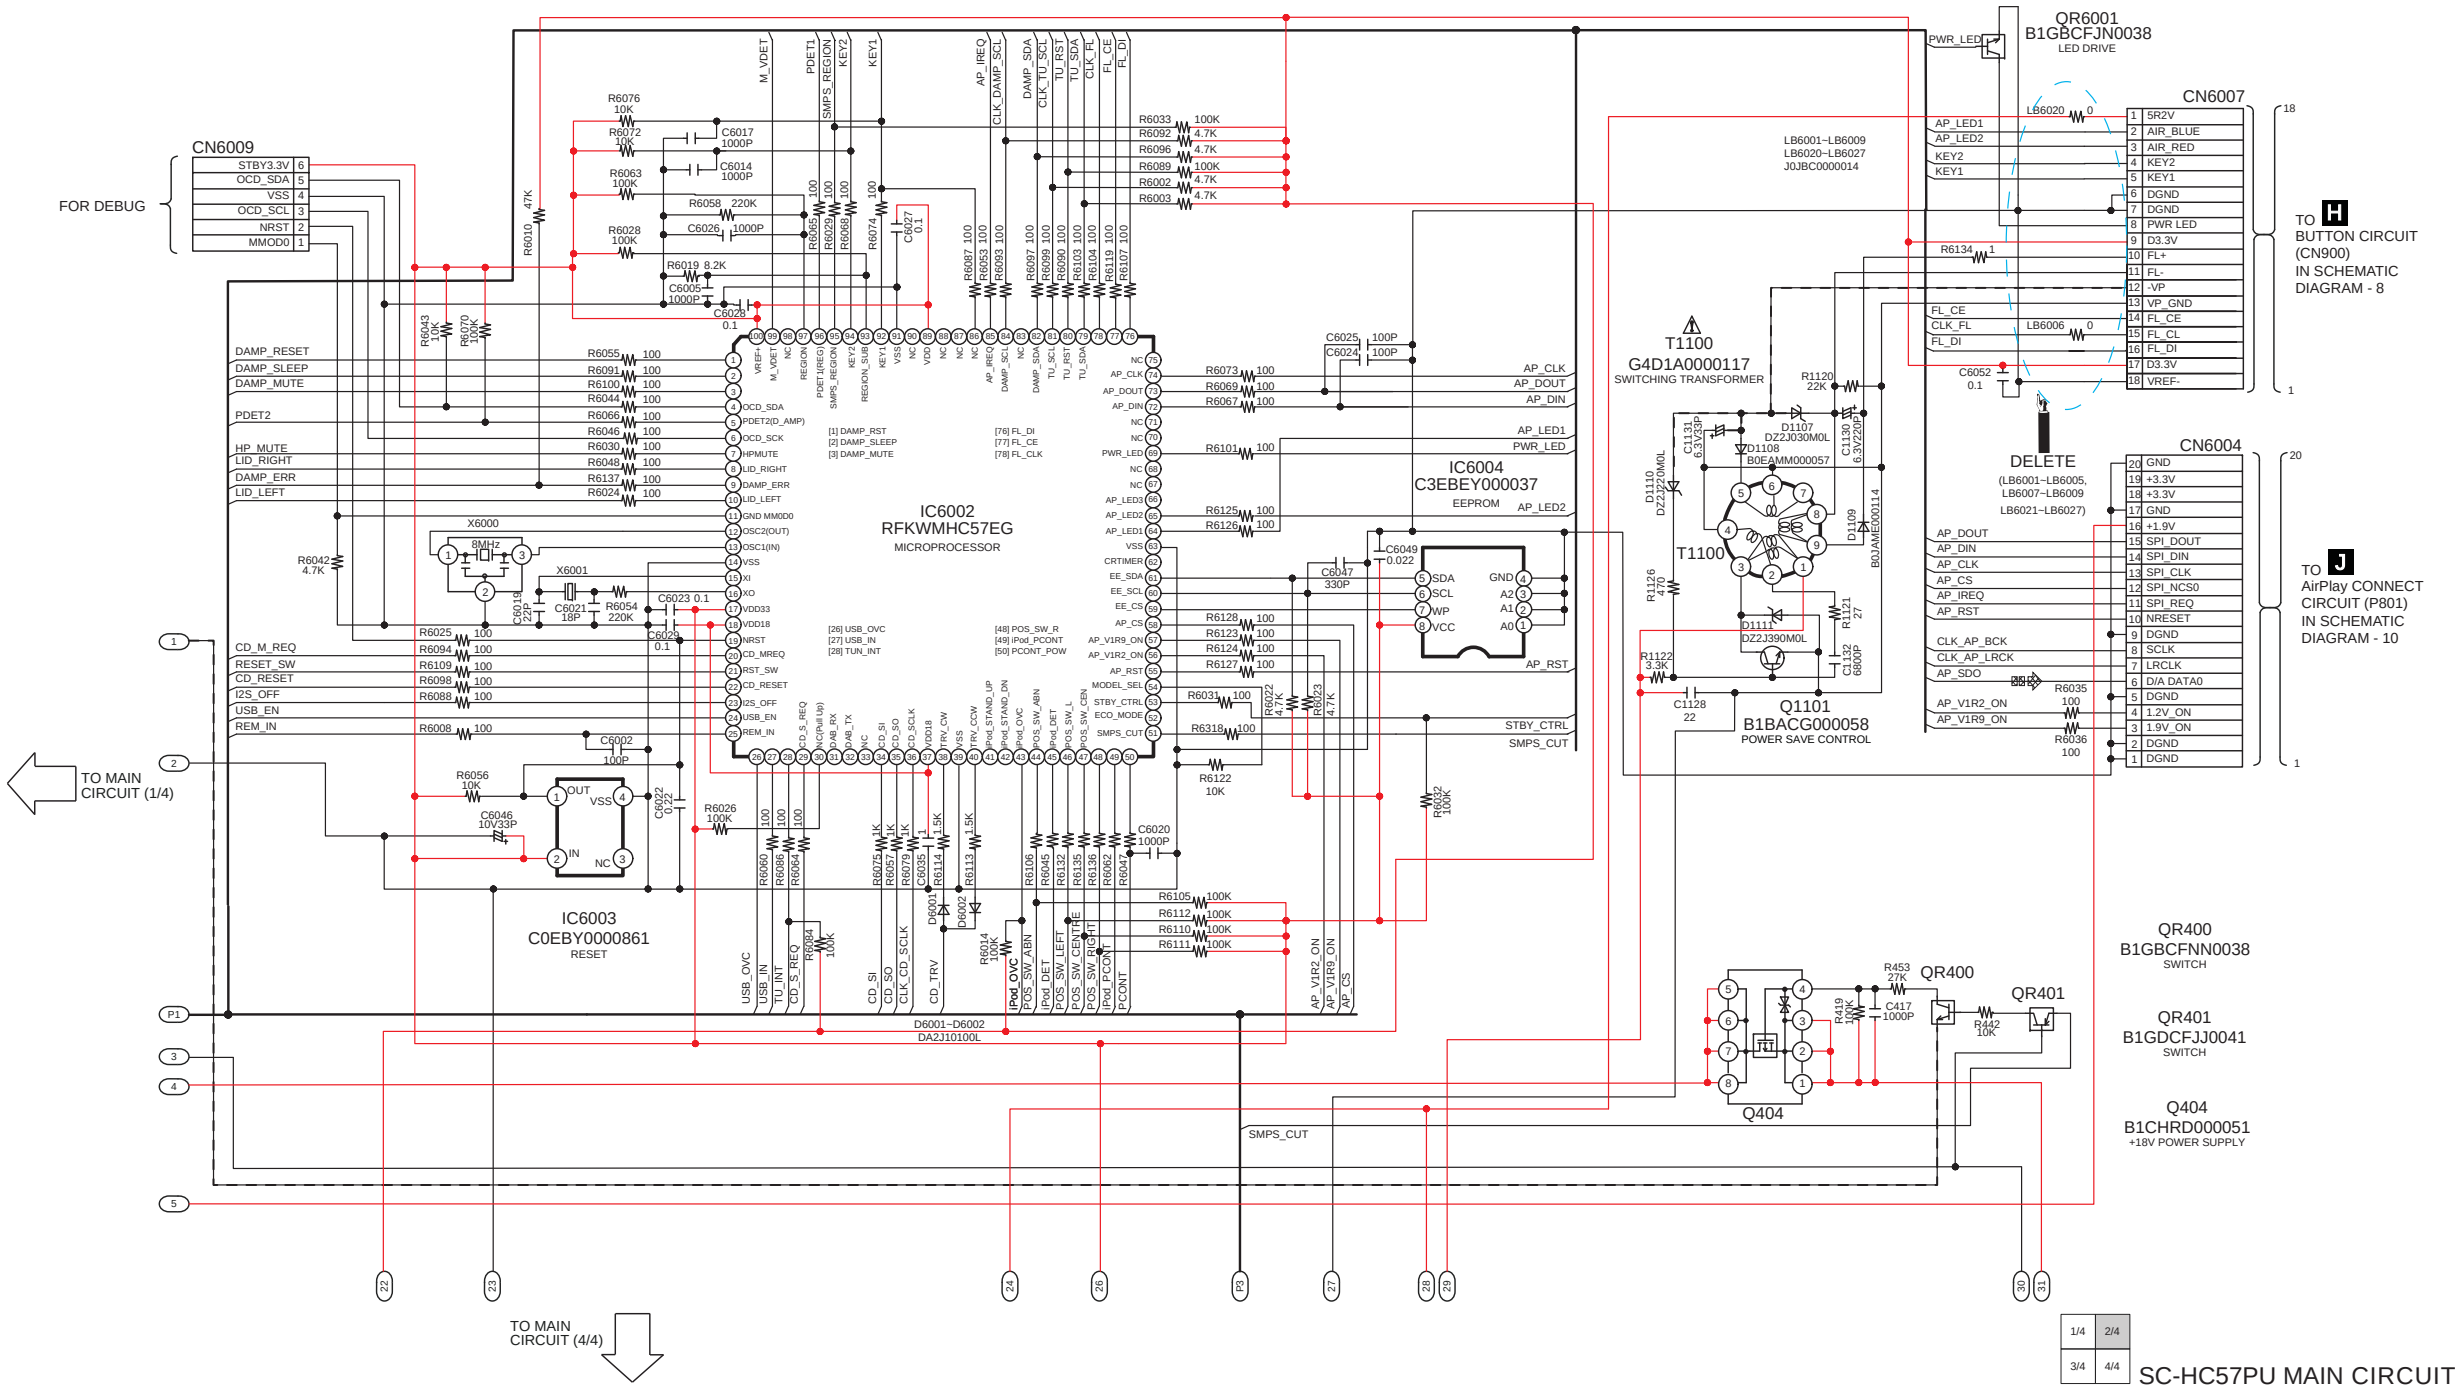

With reference to original service manual (section 15.6.) on page 121 for Model No. SC-HC57PU-K

With reference to original service manual (section 15.6.) on page 121 for Model No. SC-HC57PU-K




With reference to original service manual (section 15.7.) on page 122 for Model No. SC-HC57PU-K

B MAIN CIRCUIT



2.13. MAIN CIRCUIT (1/4) (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 15.4.) on page 125 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

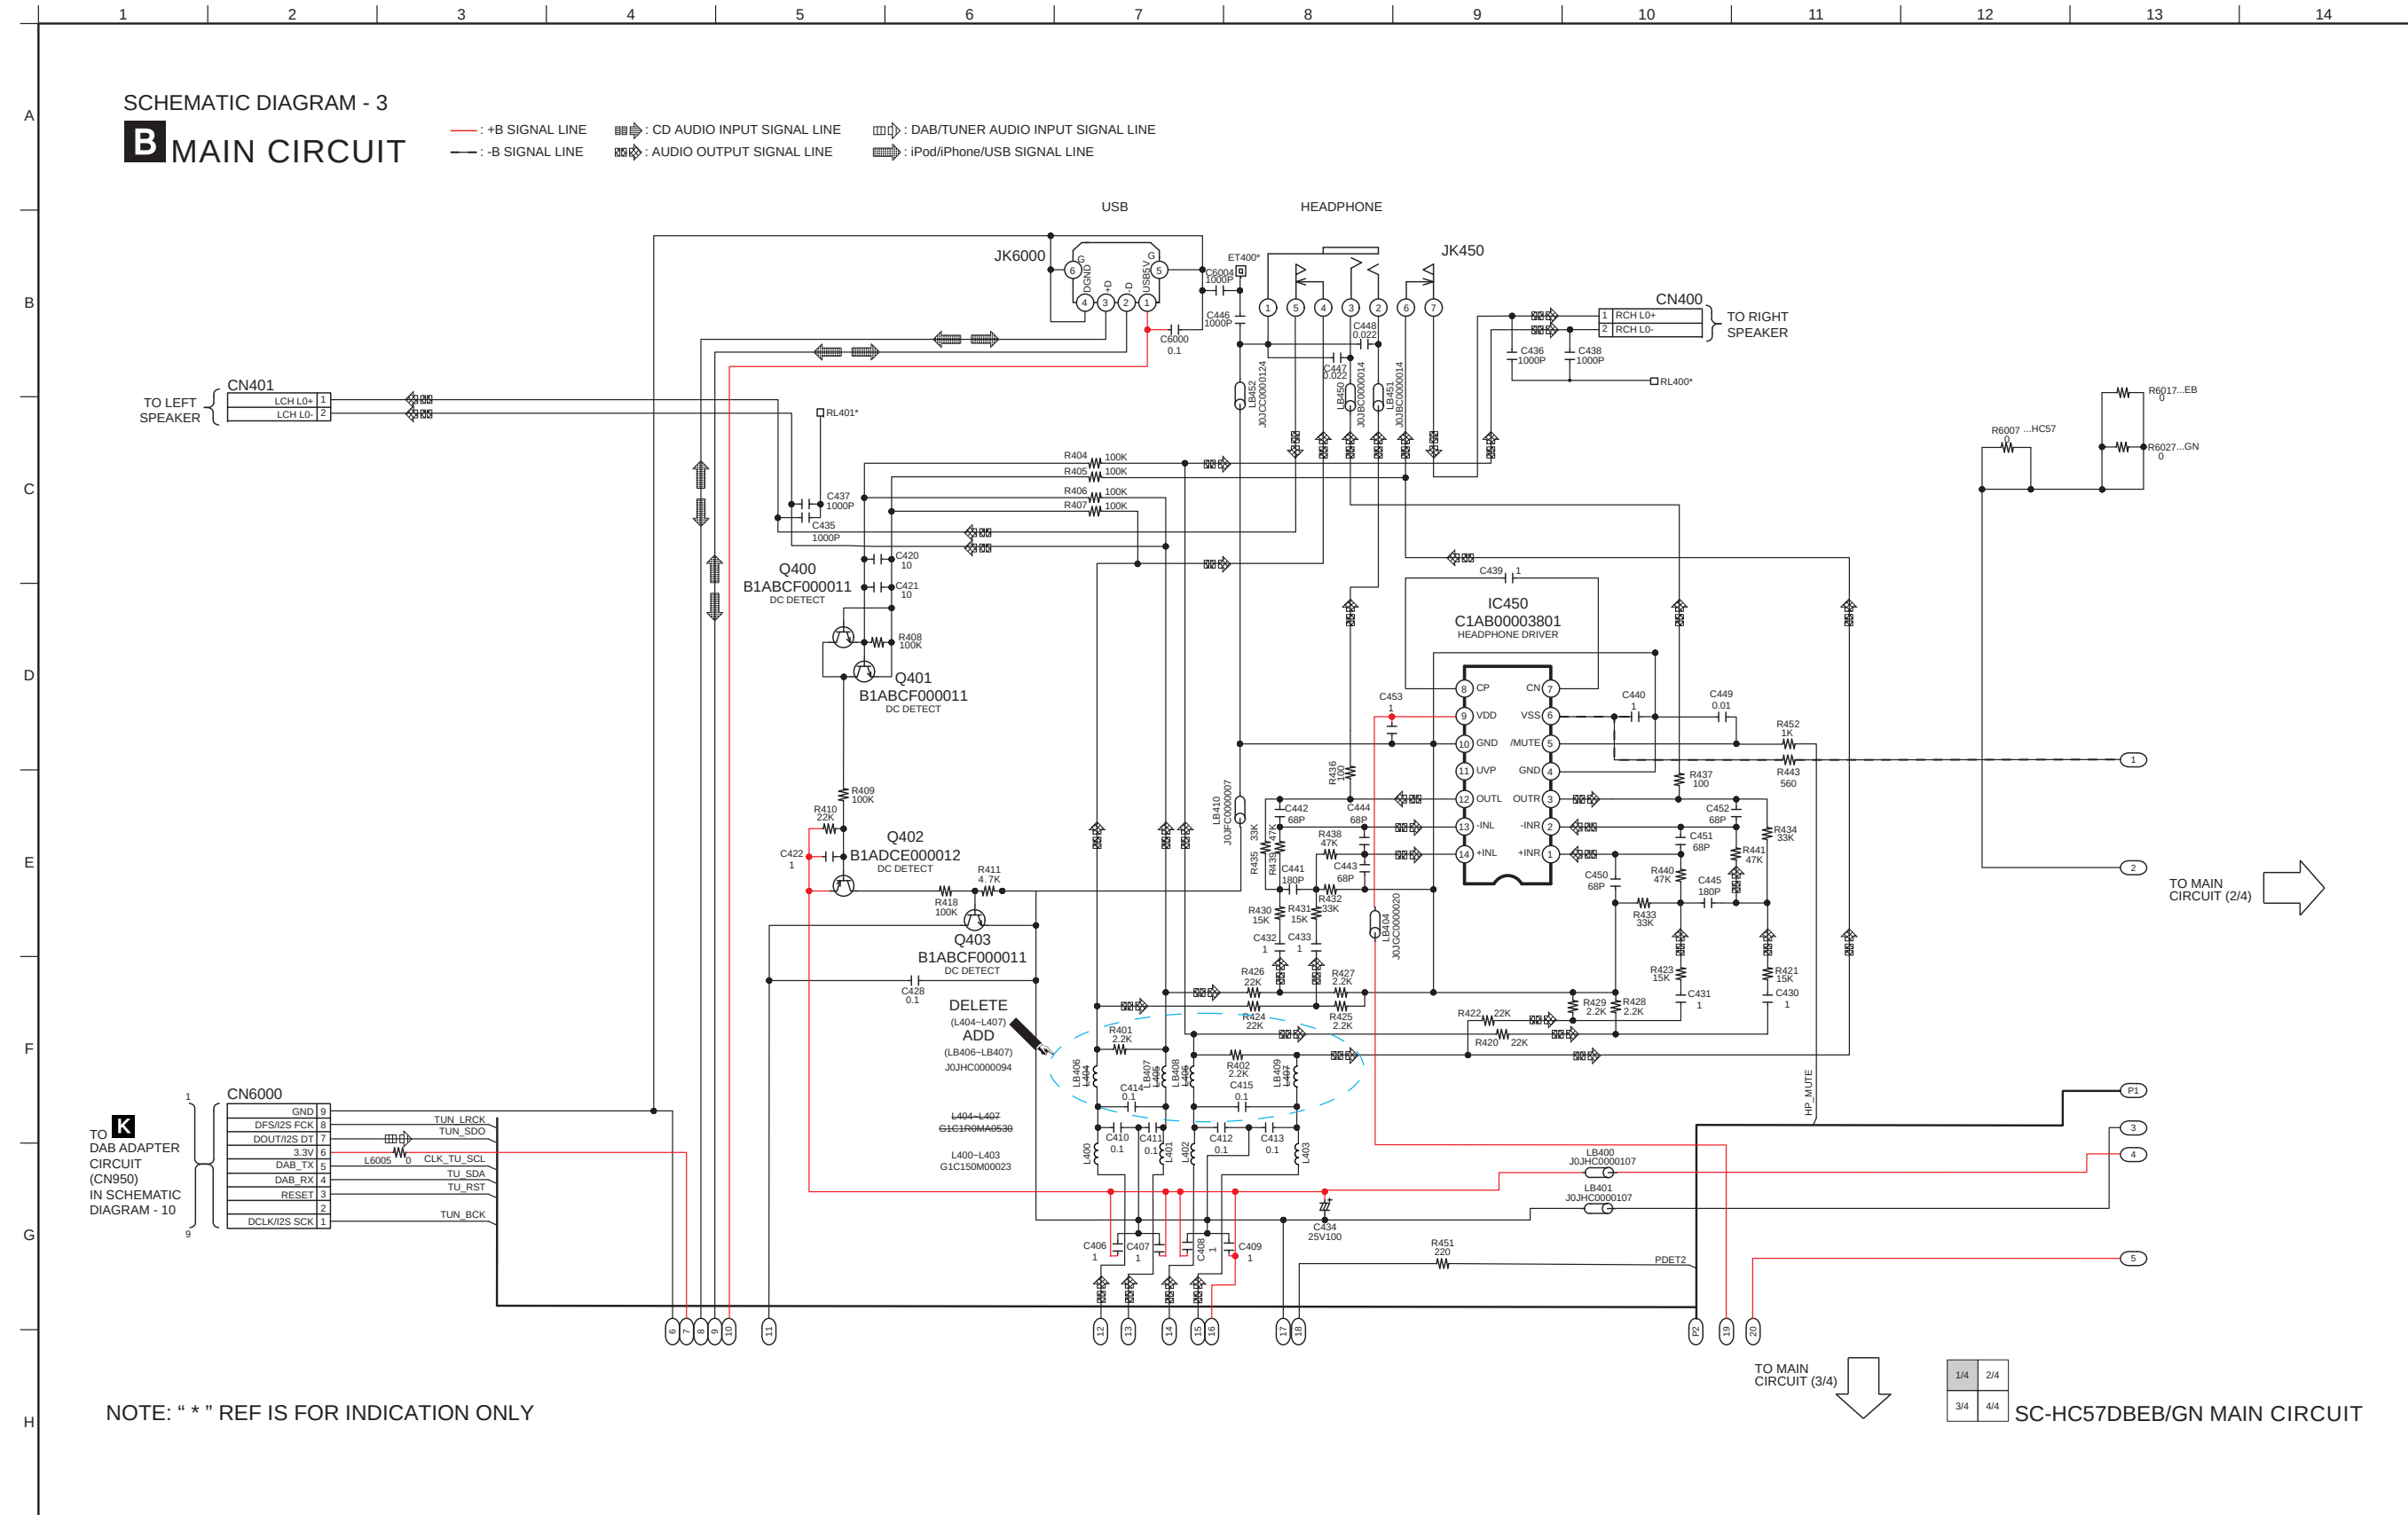


2.14. MAIN CIRCUIT (2/4) (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 15.5.) on page 126 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

SCHEMATIC DIAGRAM - 4

B MAIN CIRCUIT

— : +B SIGNAL LINE : CD AUDIO INPUT SIGNAL LINE : DAB/TUNER AUDIO INPUT SIGNAL LINE
— : -B SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : iPod/iPhone/USB SIGNAL LINE

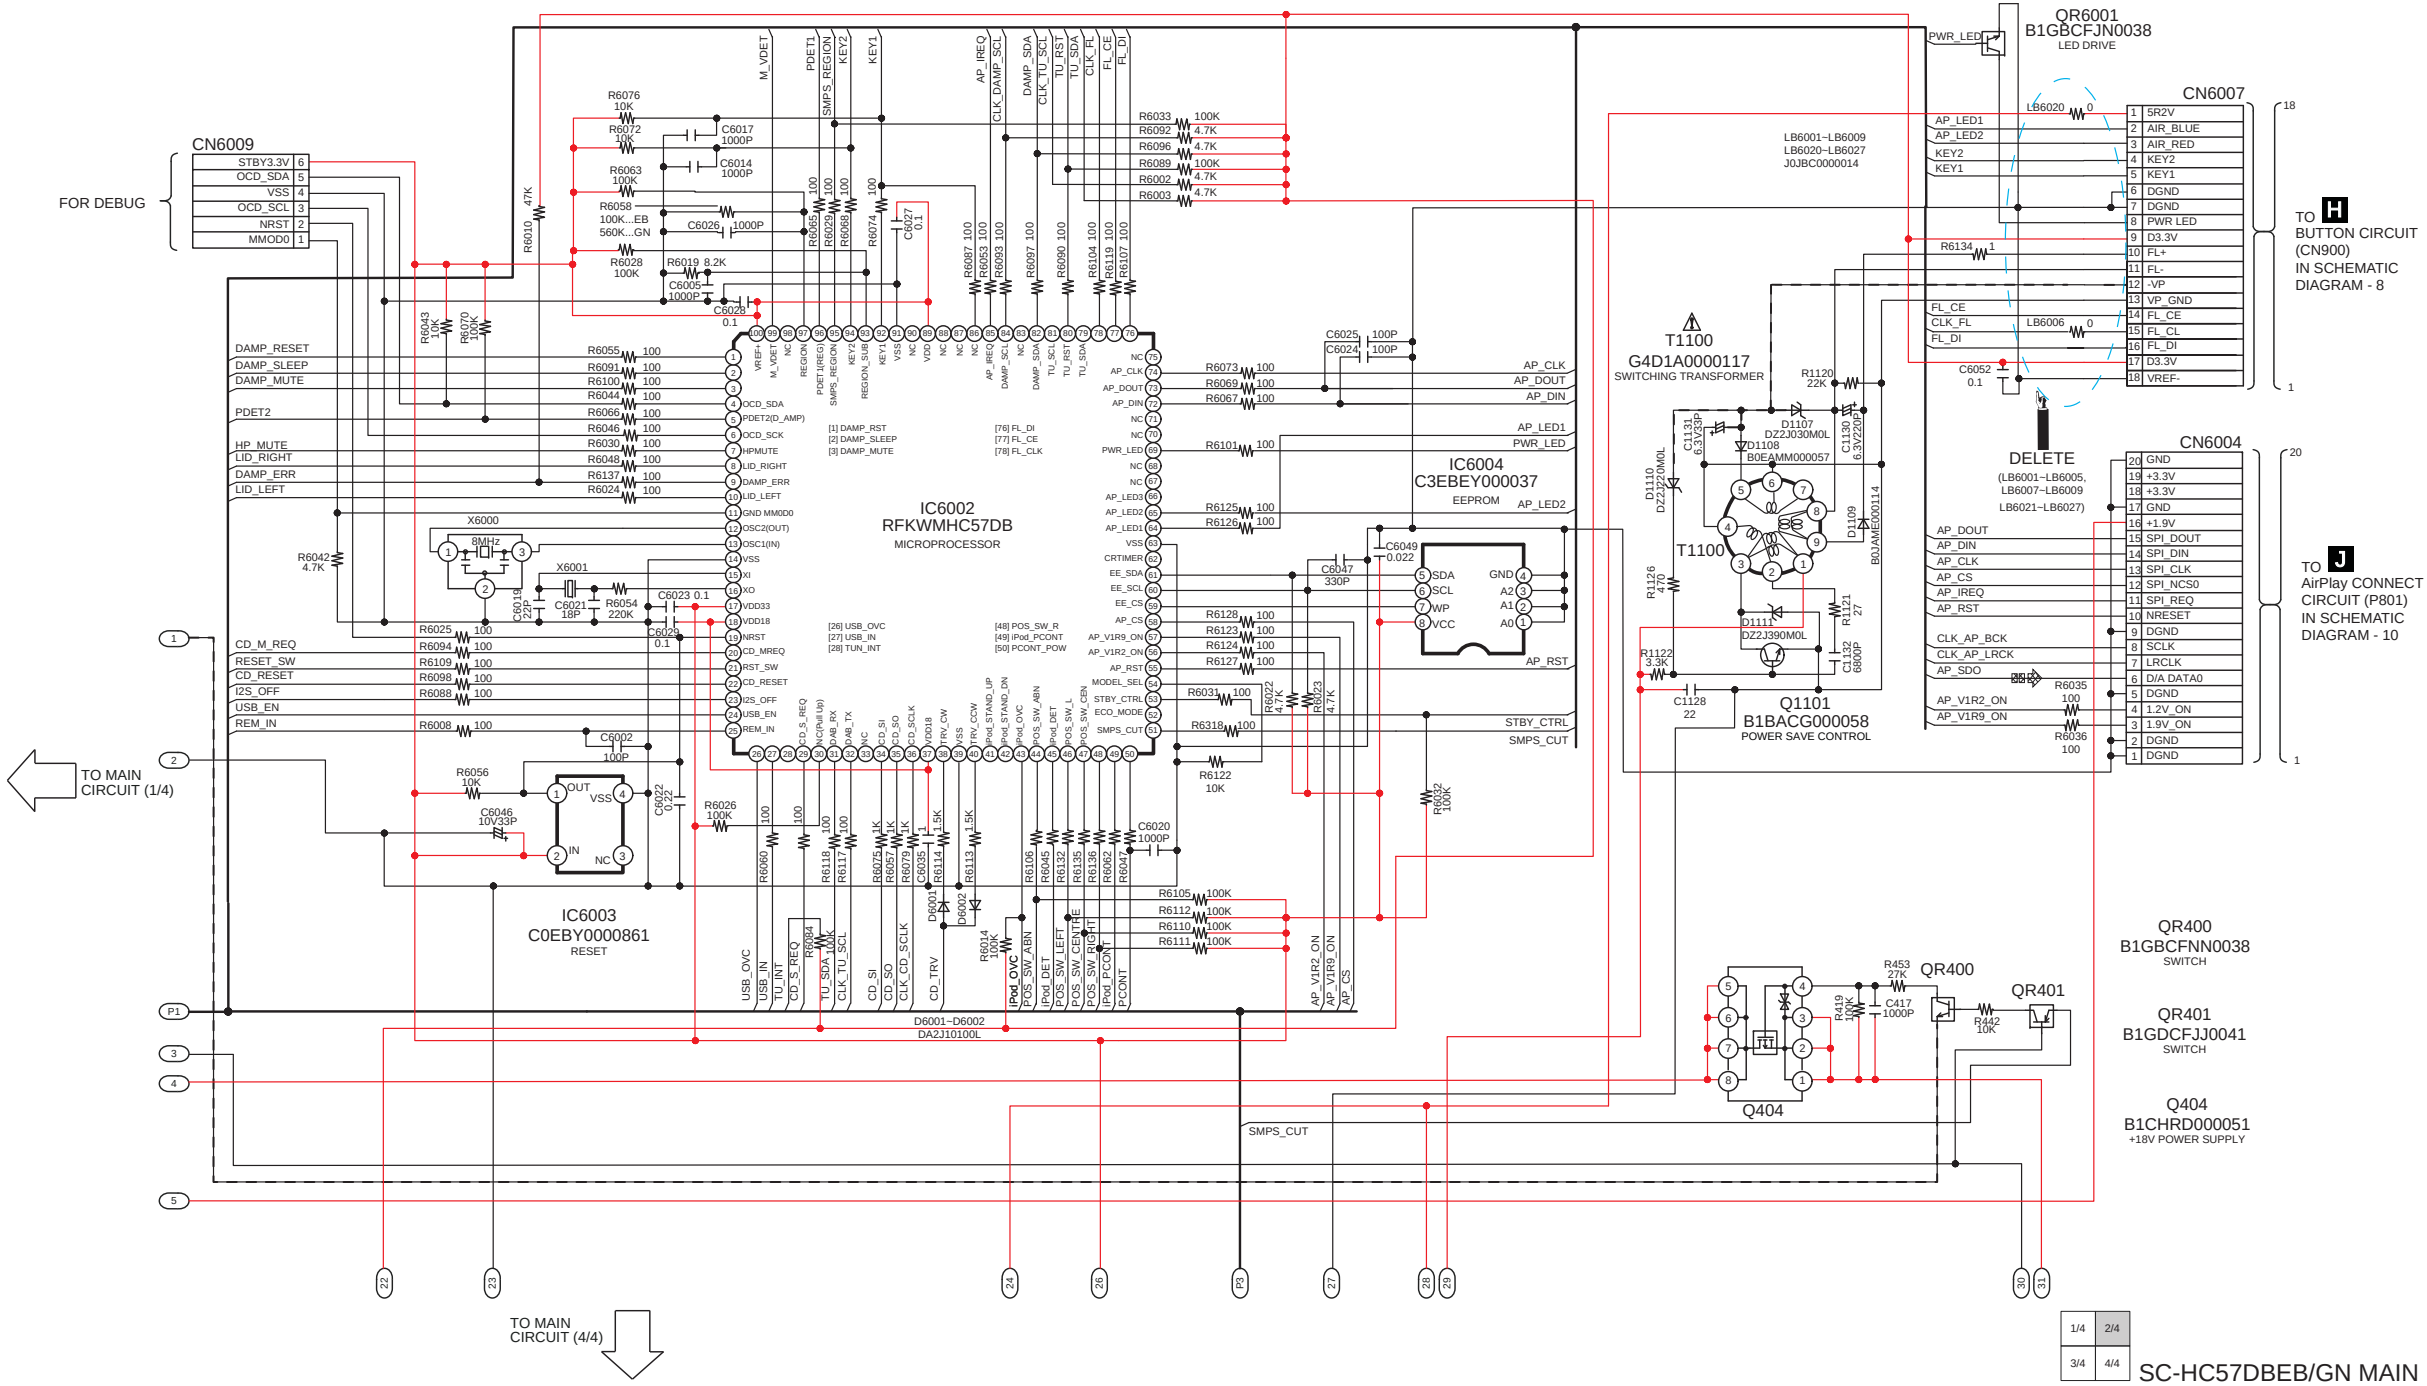


SC-HC57DBEB/GN MAIN CIRCUIT

2.15. MAIN CIRCUIT (3/4) (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 15.6.) on page 127 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

SCHEMATIC DIAGRAM - 5

B MAIN CIRCUIT

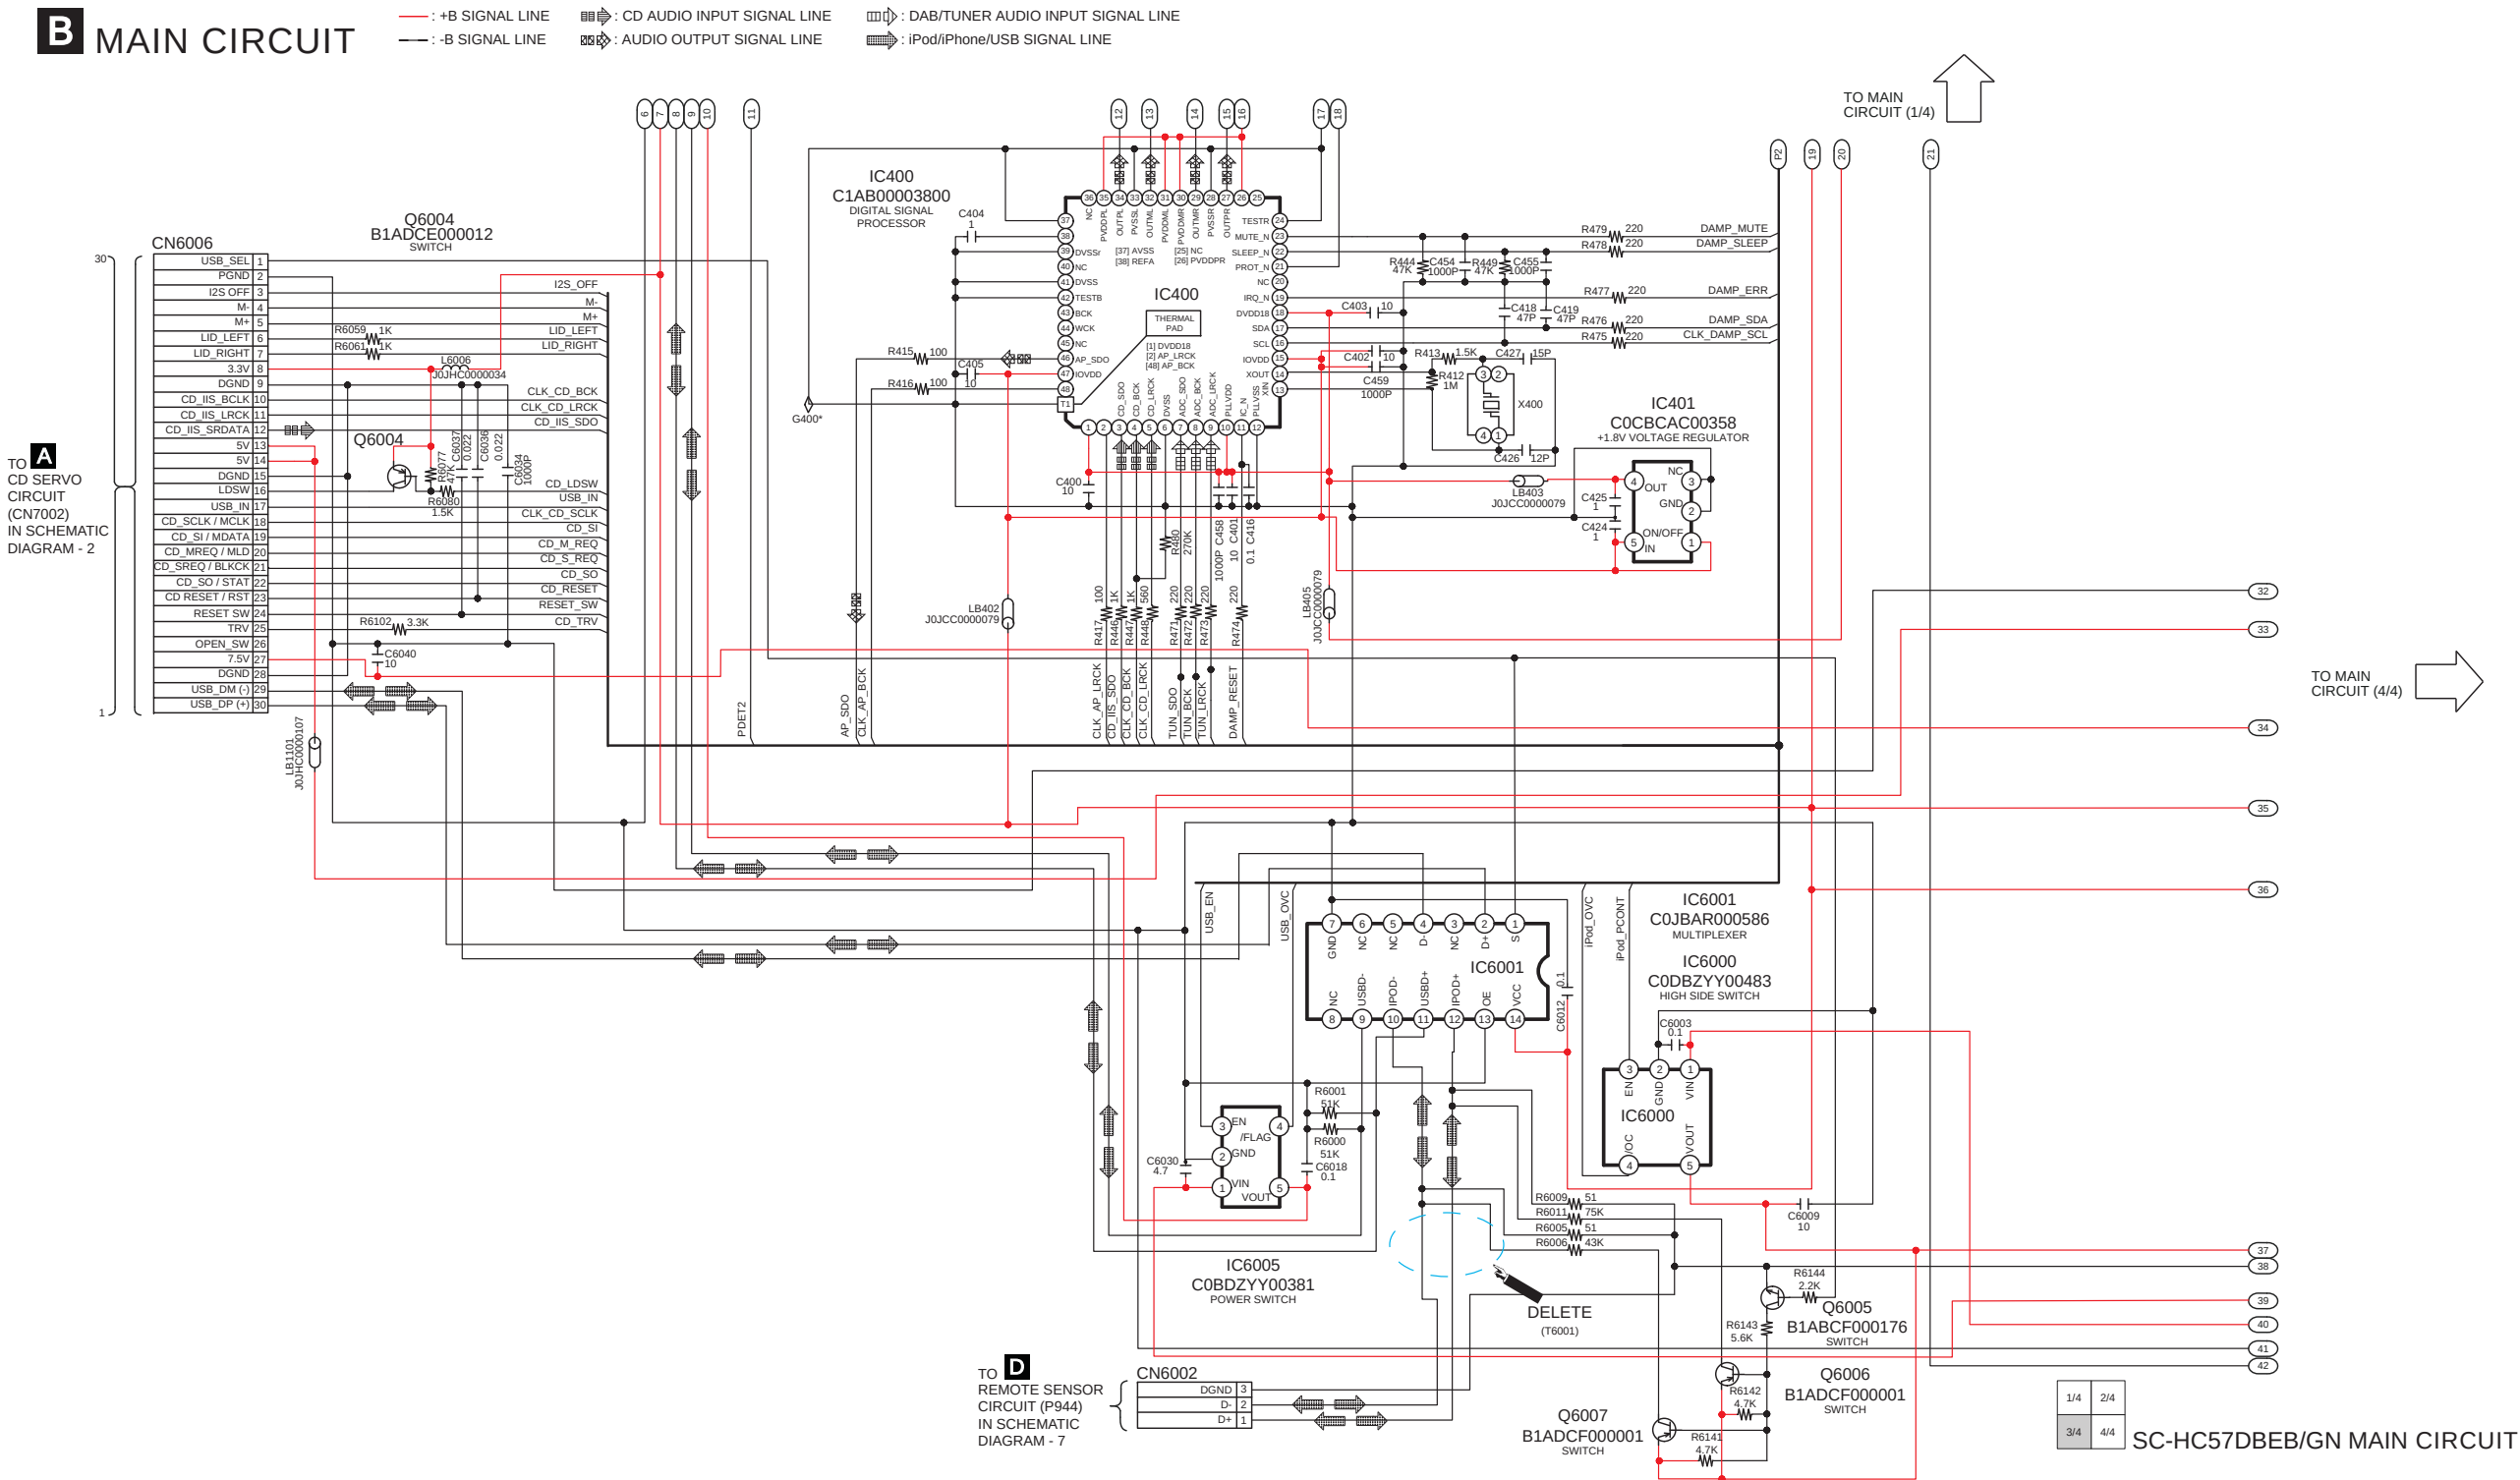


2.16. MAIN CIRCUIT (4/4) (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 15.7.) on page 128 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

SCHEMATIC DIAGRAM - 6

B MAIN CIRCUIT

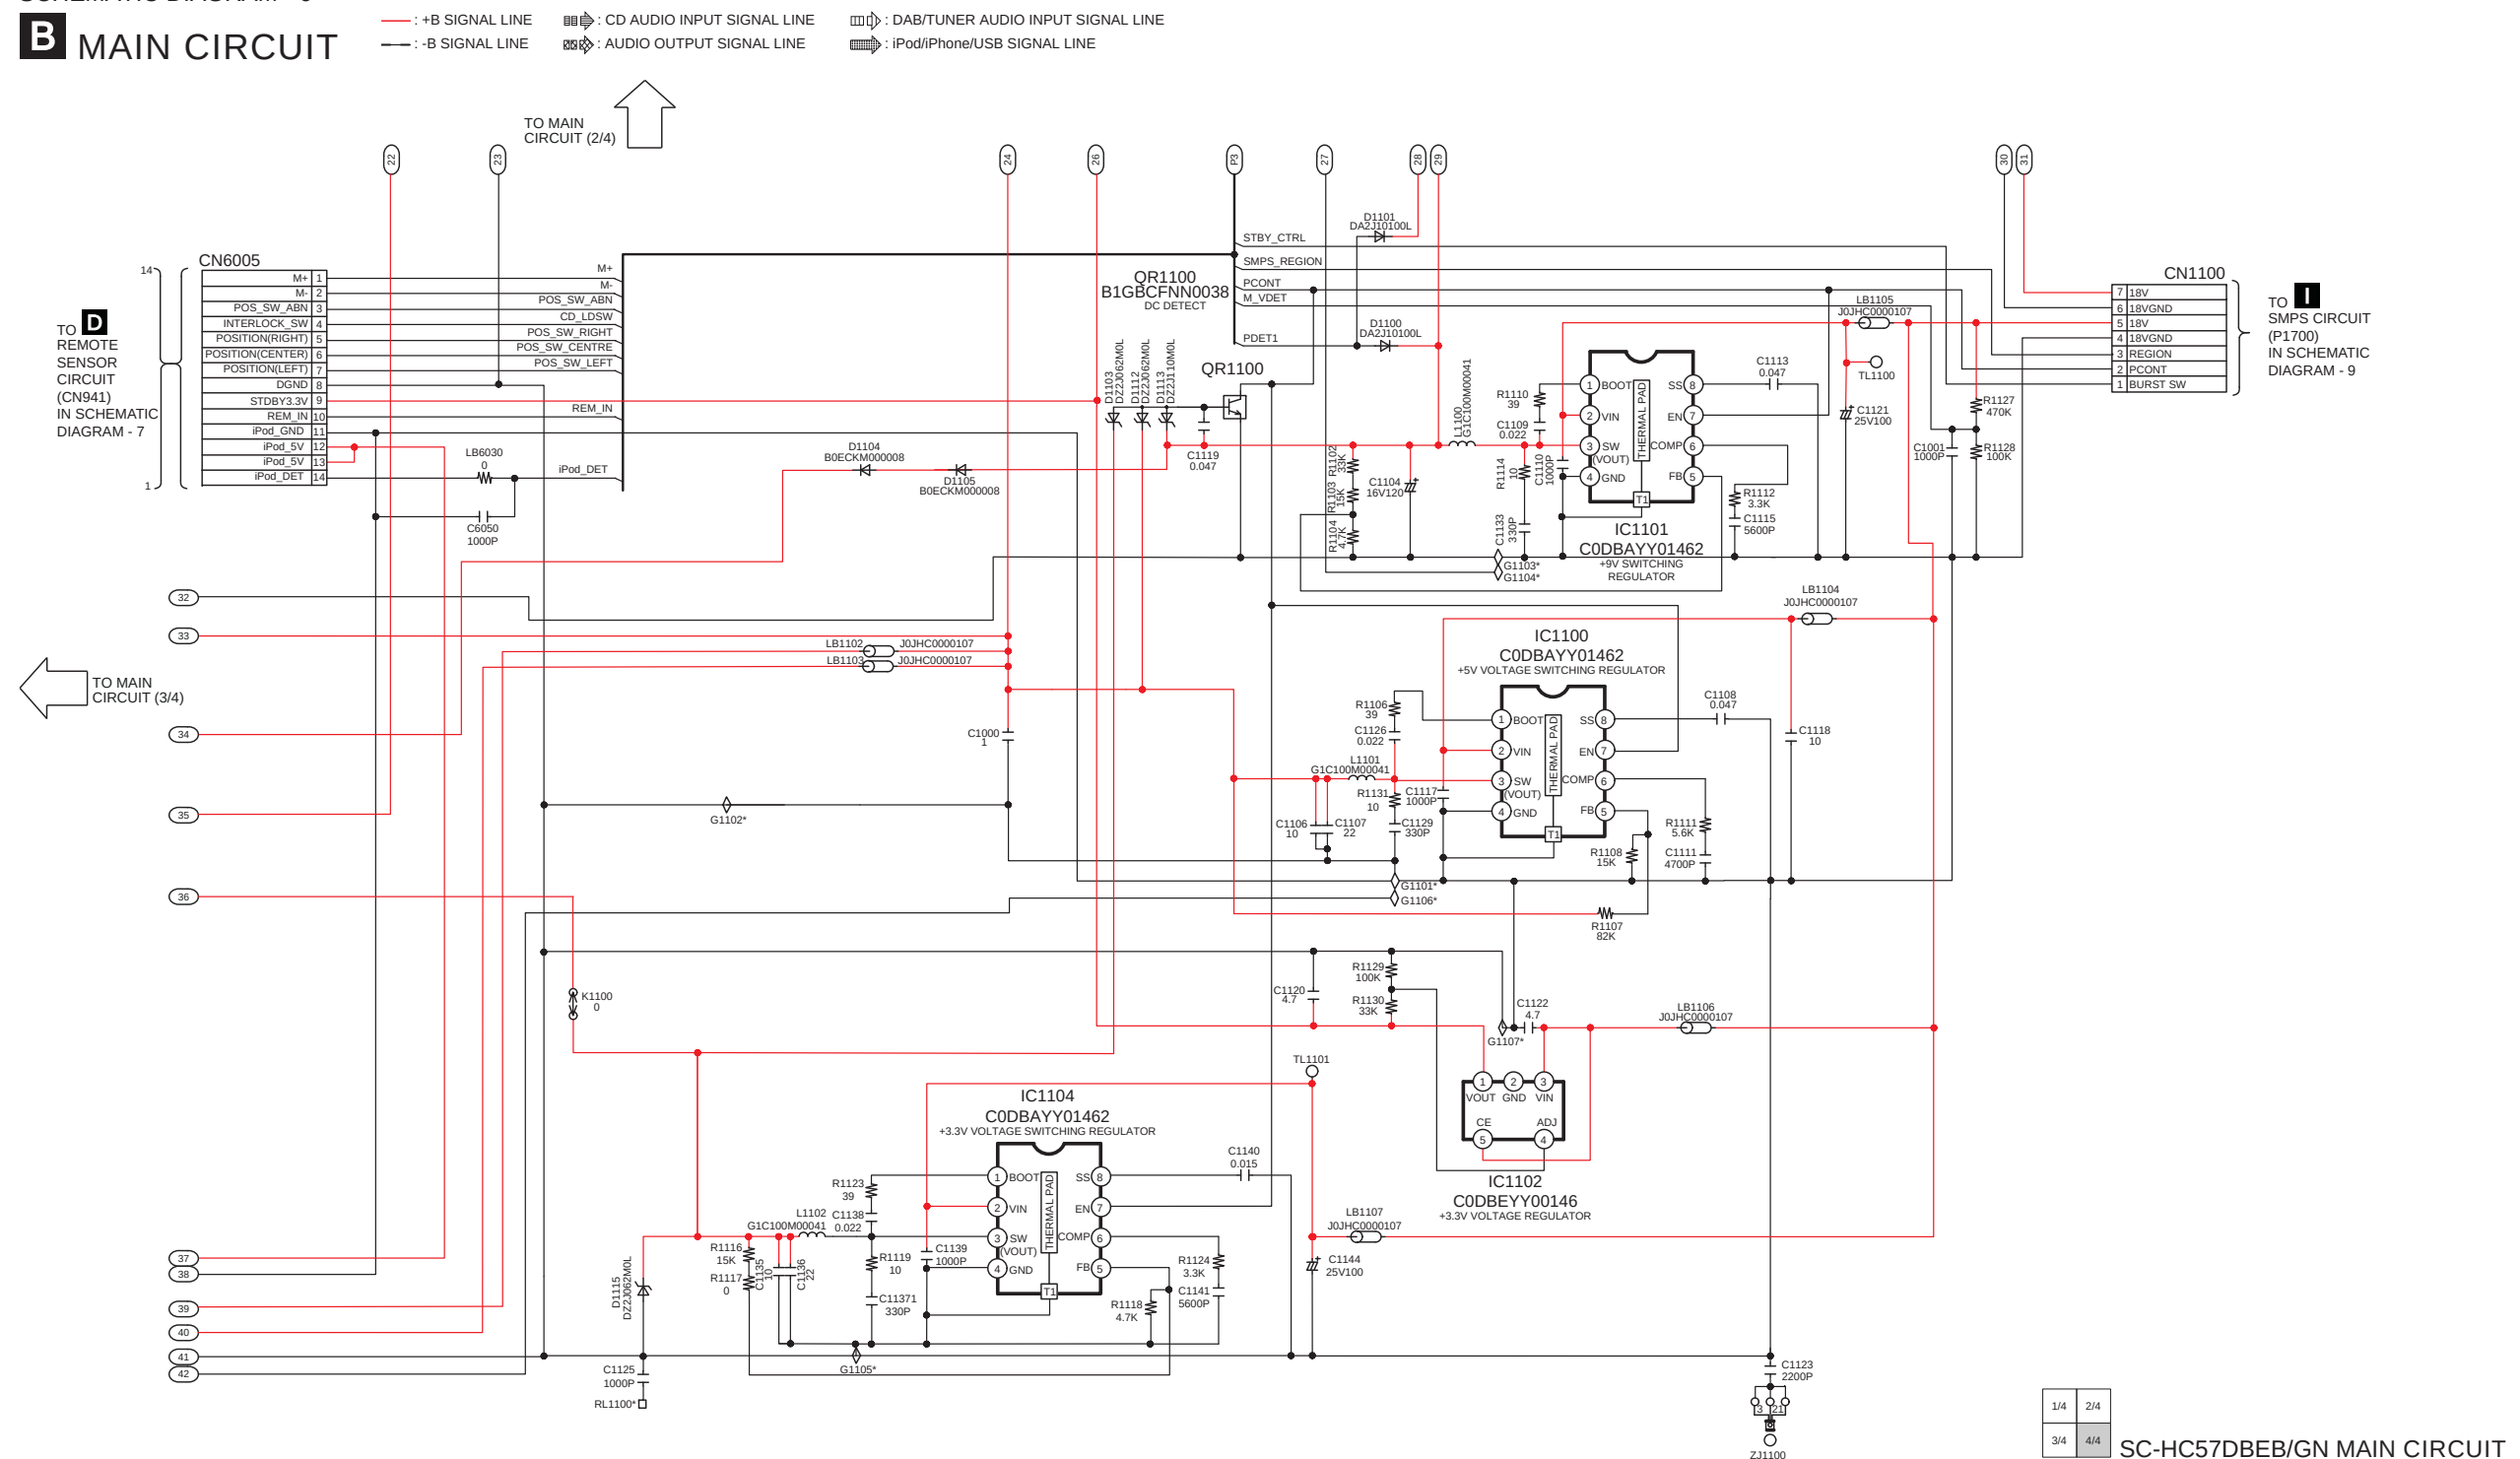


NOTE: " * " REF IS FOR INDICATION ONLY

3 Printed Circuit Board

3.1. MAIN P.C.B. (Side A) (For SC-HC57P/PC-K)

With reference to original service manual (section 16.2.) on page 128 for Model No. SC-HC57P/PC-K

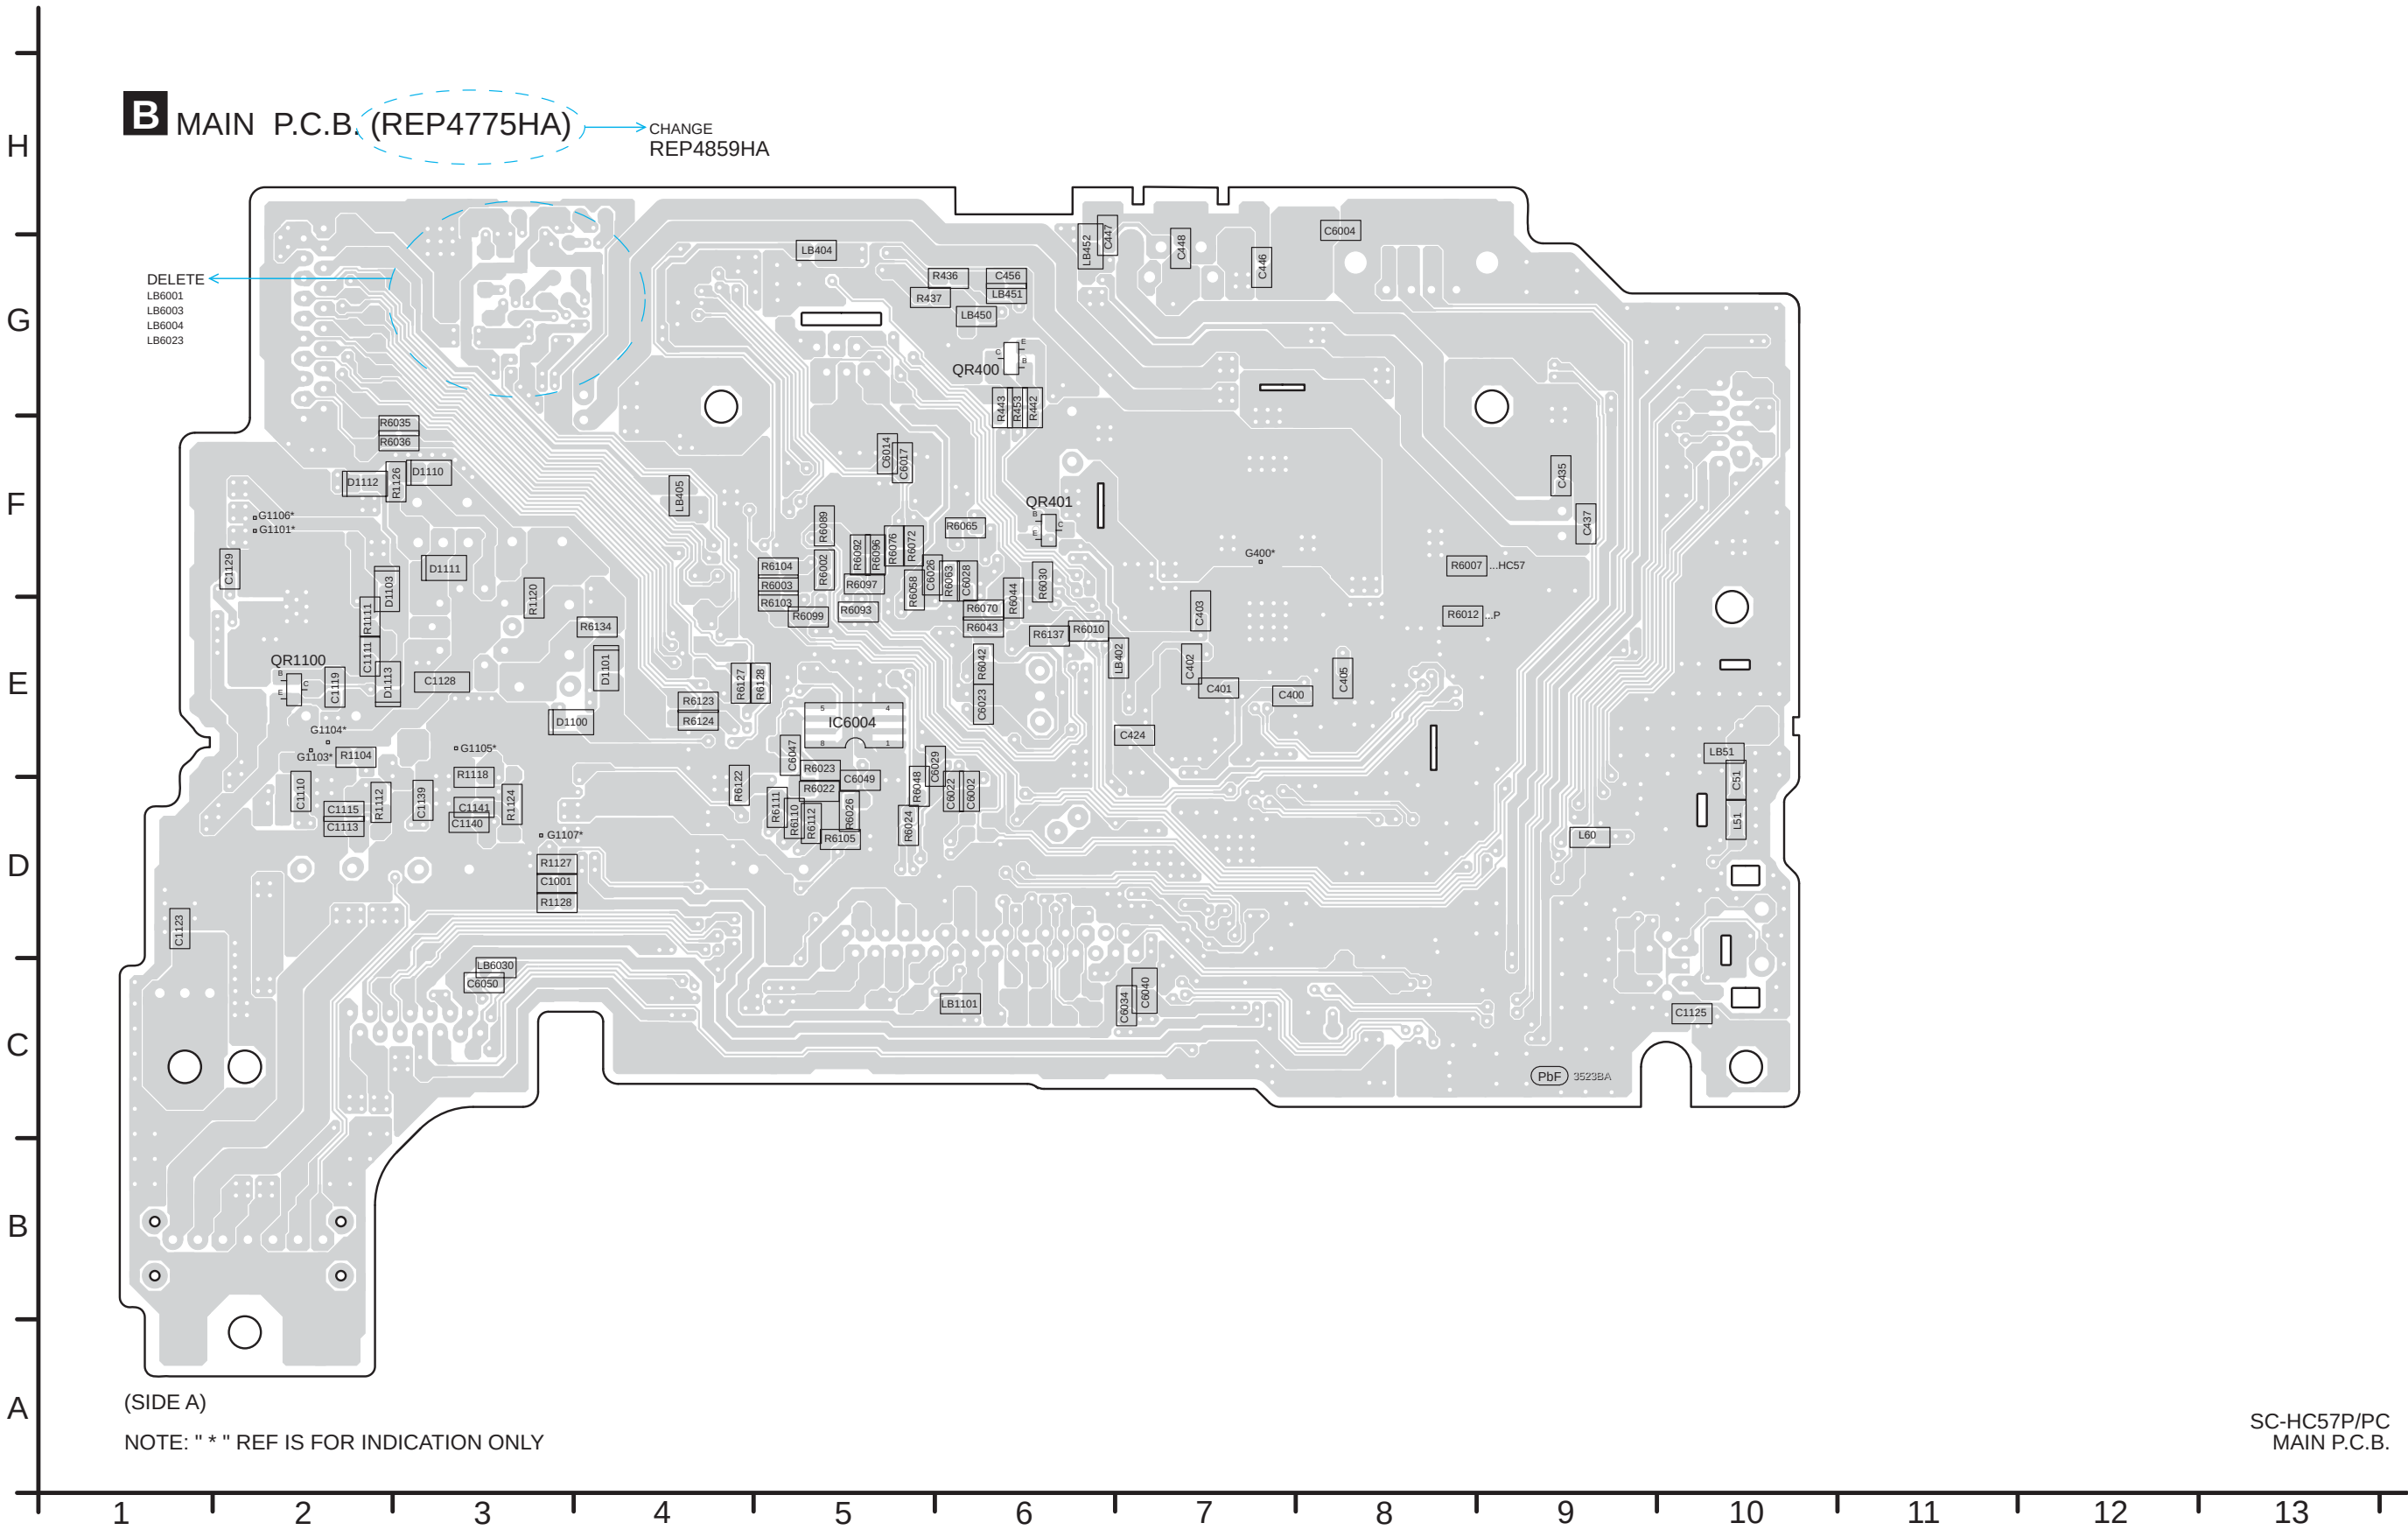


With reference to original service manual (section 16.3.) on page 129 for Model No. SC-HC57P/PC-K



3.3. iPod & REMOTE SENSOR P.C.B. (For SC-HC57P/PC-K)

With reference to original service manual (section 16.4.) on page 130 for Model No. SC-HC57P/PC-K

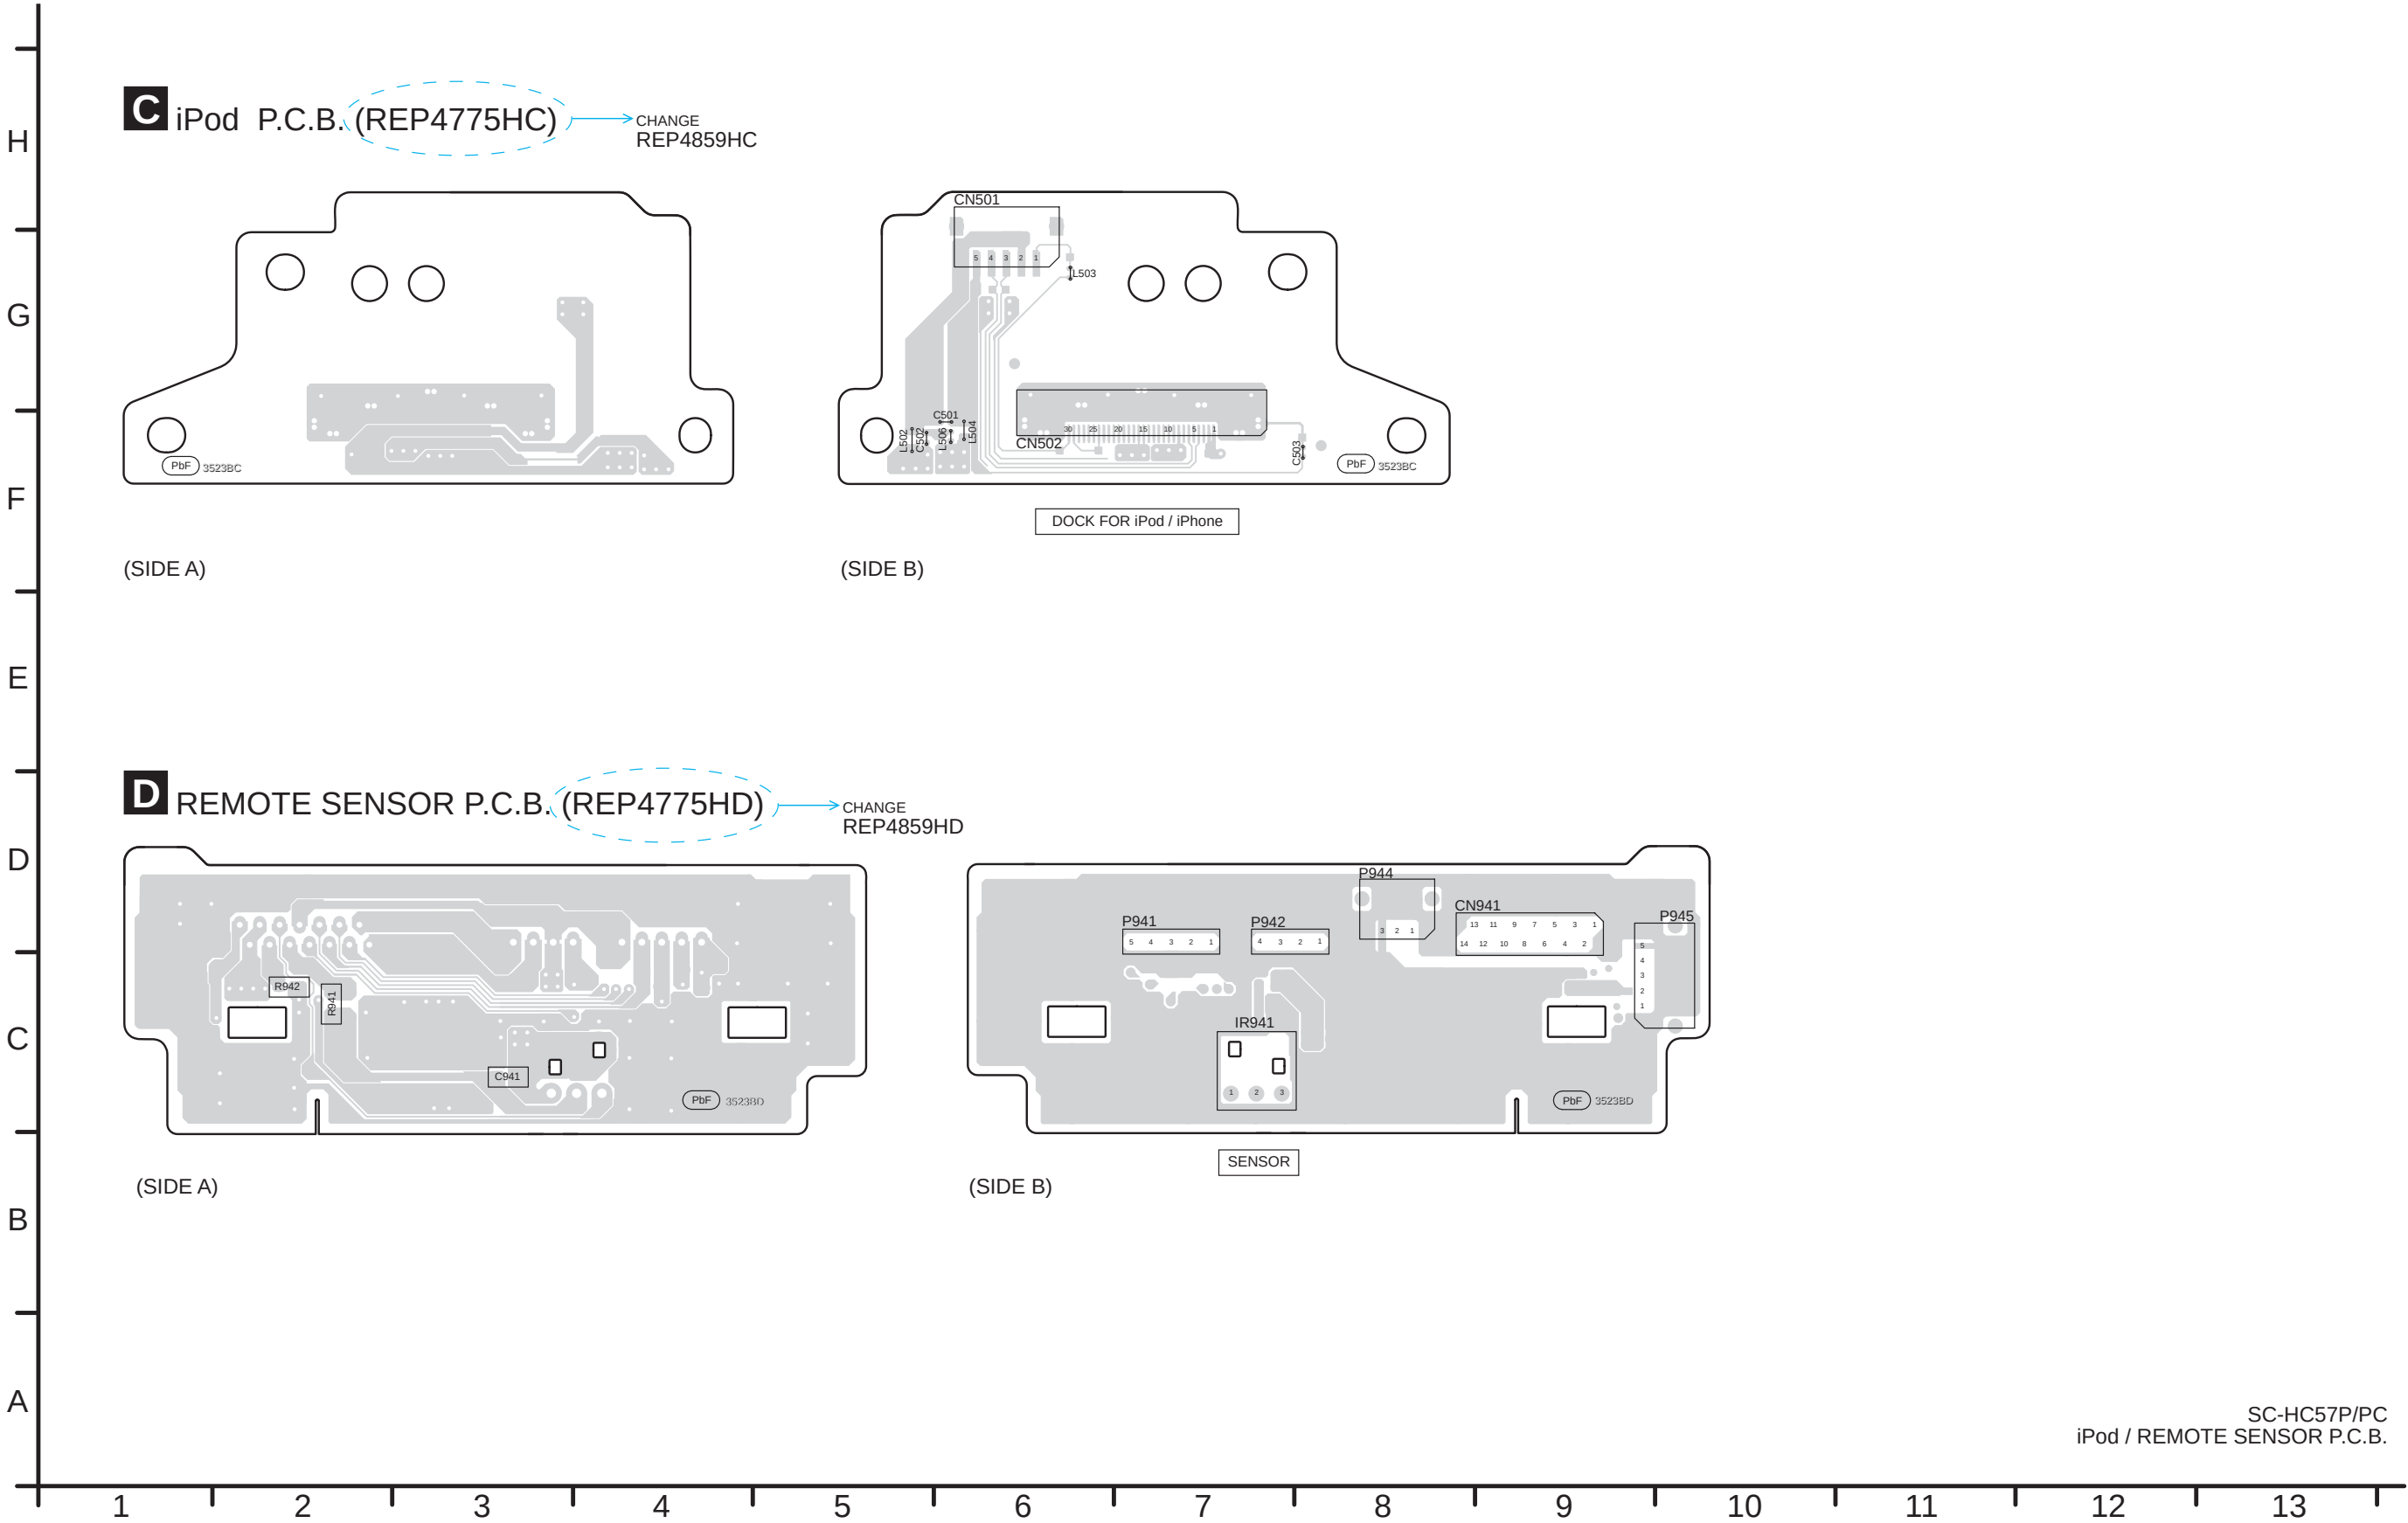

With reference to original service manual (section 16.6.) on page 132 for Model No. SC-HC57P/PC-K

With reference to original service manual (section 16.6.) on page 132 for Model No. SC-HC57P/PC-K

A vertical number line with tick marks labeled A, B, C, D, E, F, G, and H from bottom to top.



A vertical number line with four tick marks. From bottom to top, the tick marks are labeled A, B, C, and D. The distance between A and B is approximately 1 unit, between B and C is approximately 1 unit, and between C and D is approximately 1 unit.




CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE.
PLEASE DO NOT TOUCH THIS P.C.B

SC-HC57P/PC
BUTTON / SMPS P.C.B.

3.5. MAIN P.C.B. (Side A) (For SC-HC57EG-K/W)

With reference to original service manual (section 16.2.) on page 128 for Model No. SC-HC57EG-K/W

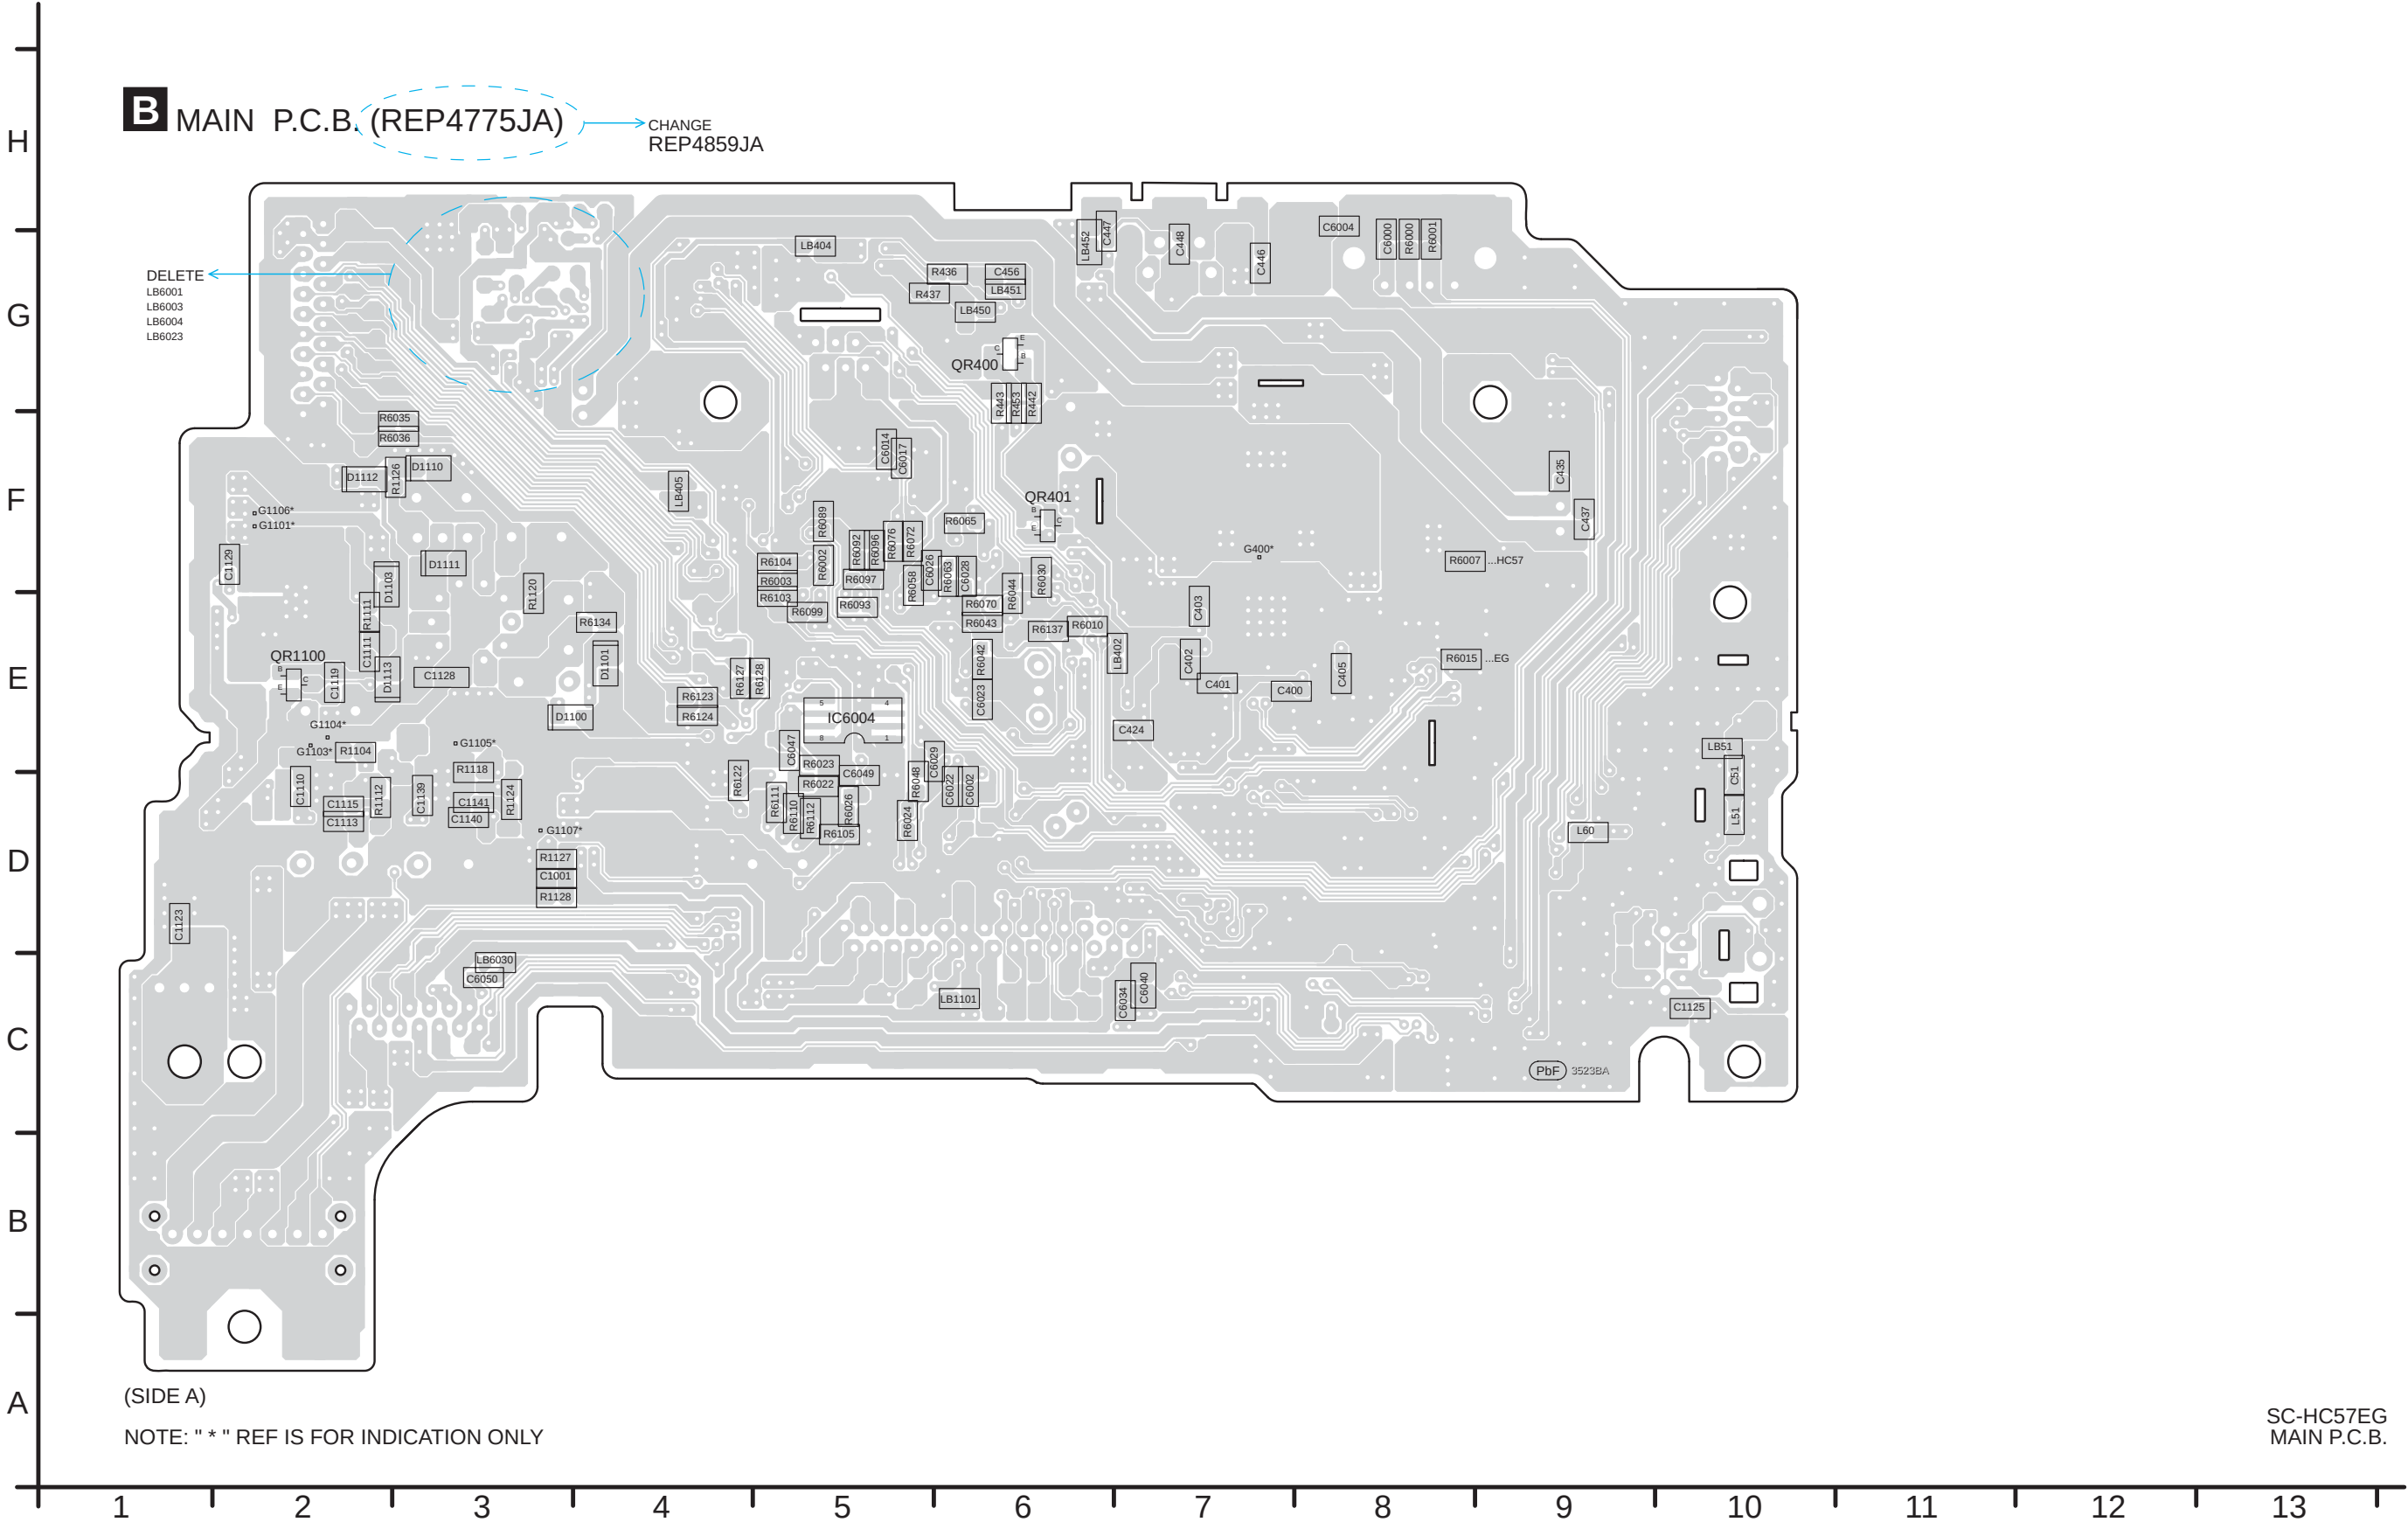


With reference to original service manual (section 16.3.) on page 129 for Model No. SC-HC57EG-K/W



3.7. iPod & REMOTE SENSOR P.C.B. (For SC-HC57EG-K/W)

With reference to original service manual (section 16.4.) on page 130 for Model No. SC-HC57EG-K/W

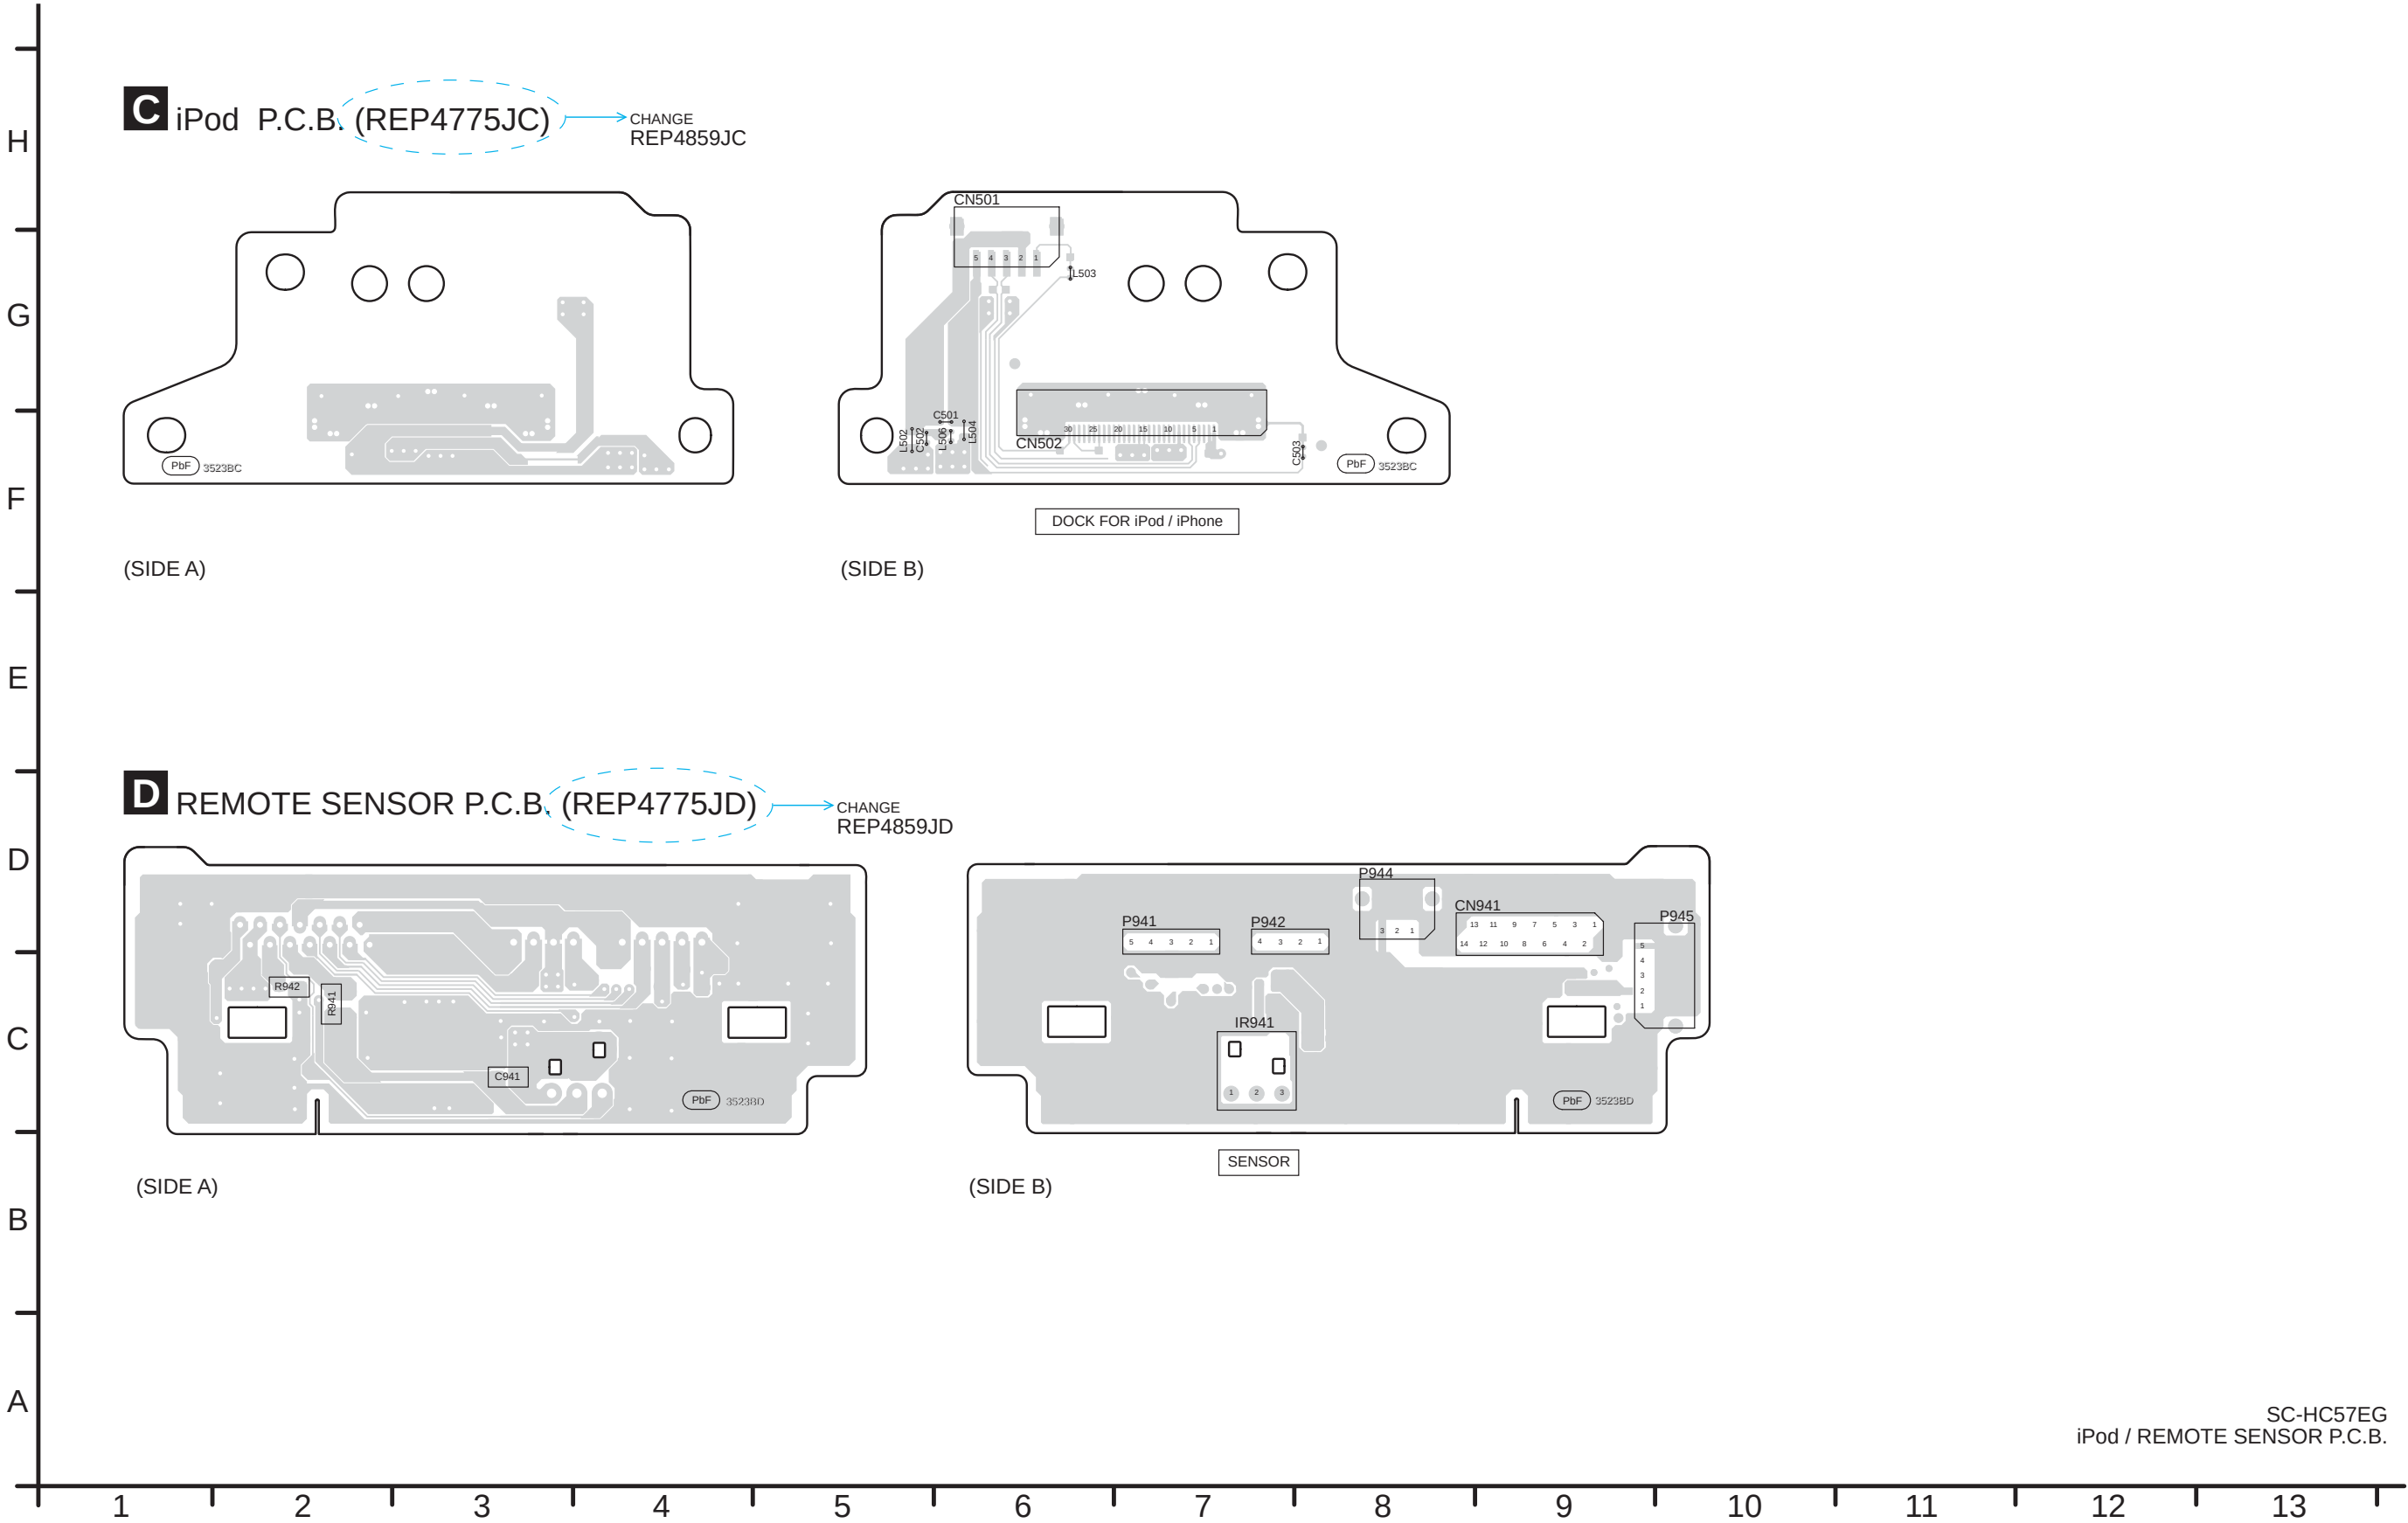

With reference to original service manual (section 16.6.) on page 132 for Model No. SC-HC57EG-K/W

With reference to original service manual (section 16.6.) on page 132 for Model No. SC-HC57EG-K/W

A vertical number line with tick marks labeled A, B, C, D, E, F, G, and H from bottom to top.



A vertical number line with four tick marks. From bottom to top, the tick marks are labeled A, B, C, and D. The distance between A and B is approximately 1 unit, between B and C is approximately 1 unit, and between C and D is approximately 1 unit.




CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE.
PLEASE DO NOT TOUCH THIS P.C.B

SC-HC57EG
BUTTON / SMPS P.C.B.

3.9. MAIN P.C.B. (Side A) (For SC-HC57PU-K)

With reference to original service manual (section 16.2.) on page 128 for Model No. SC-HC57PU-K

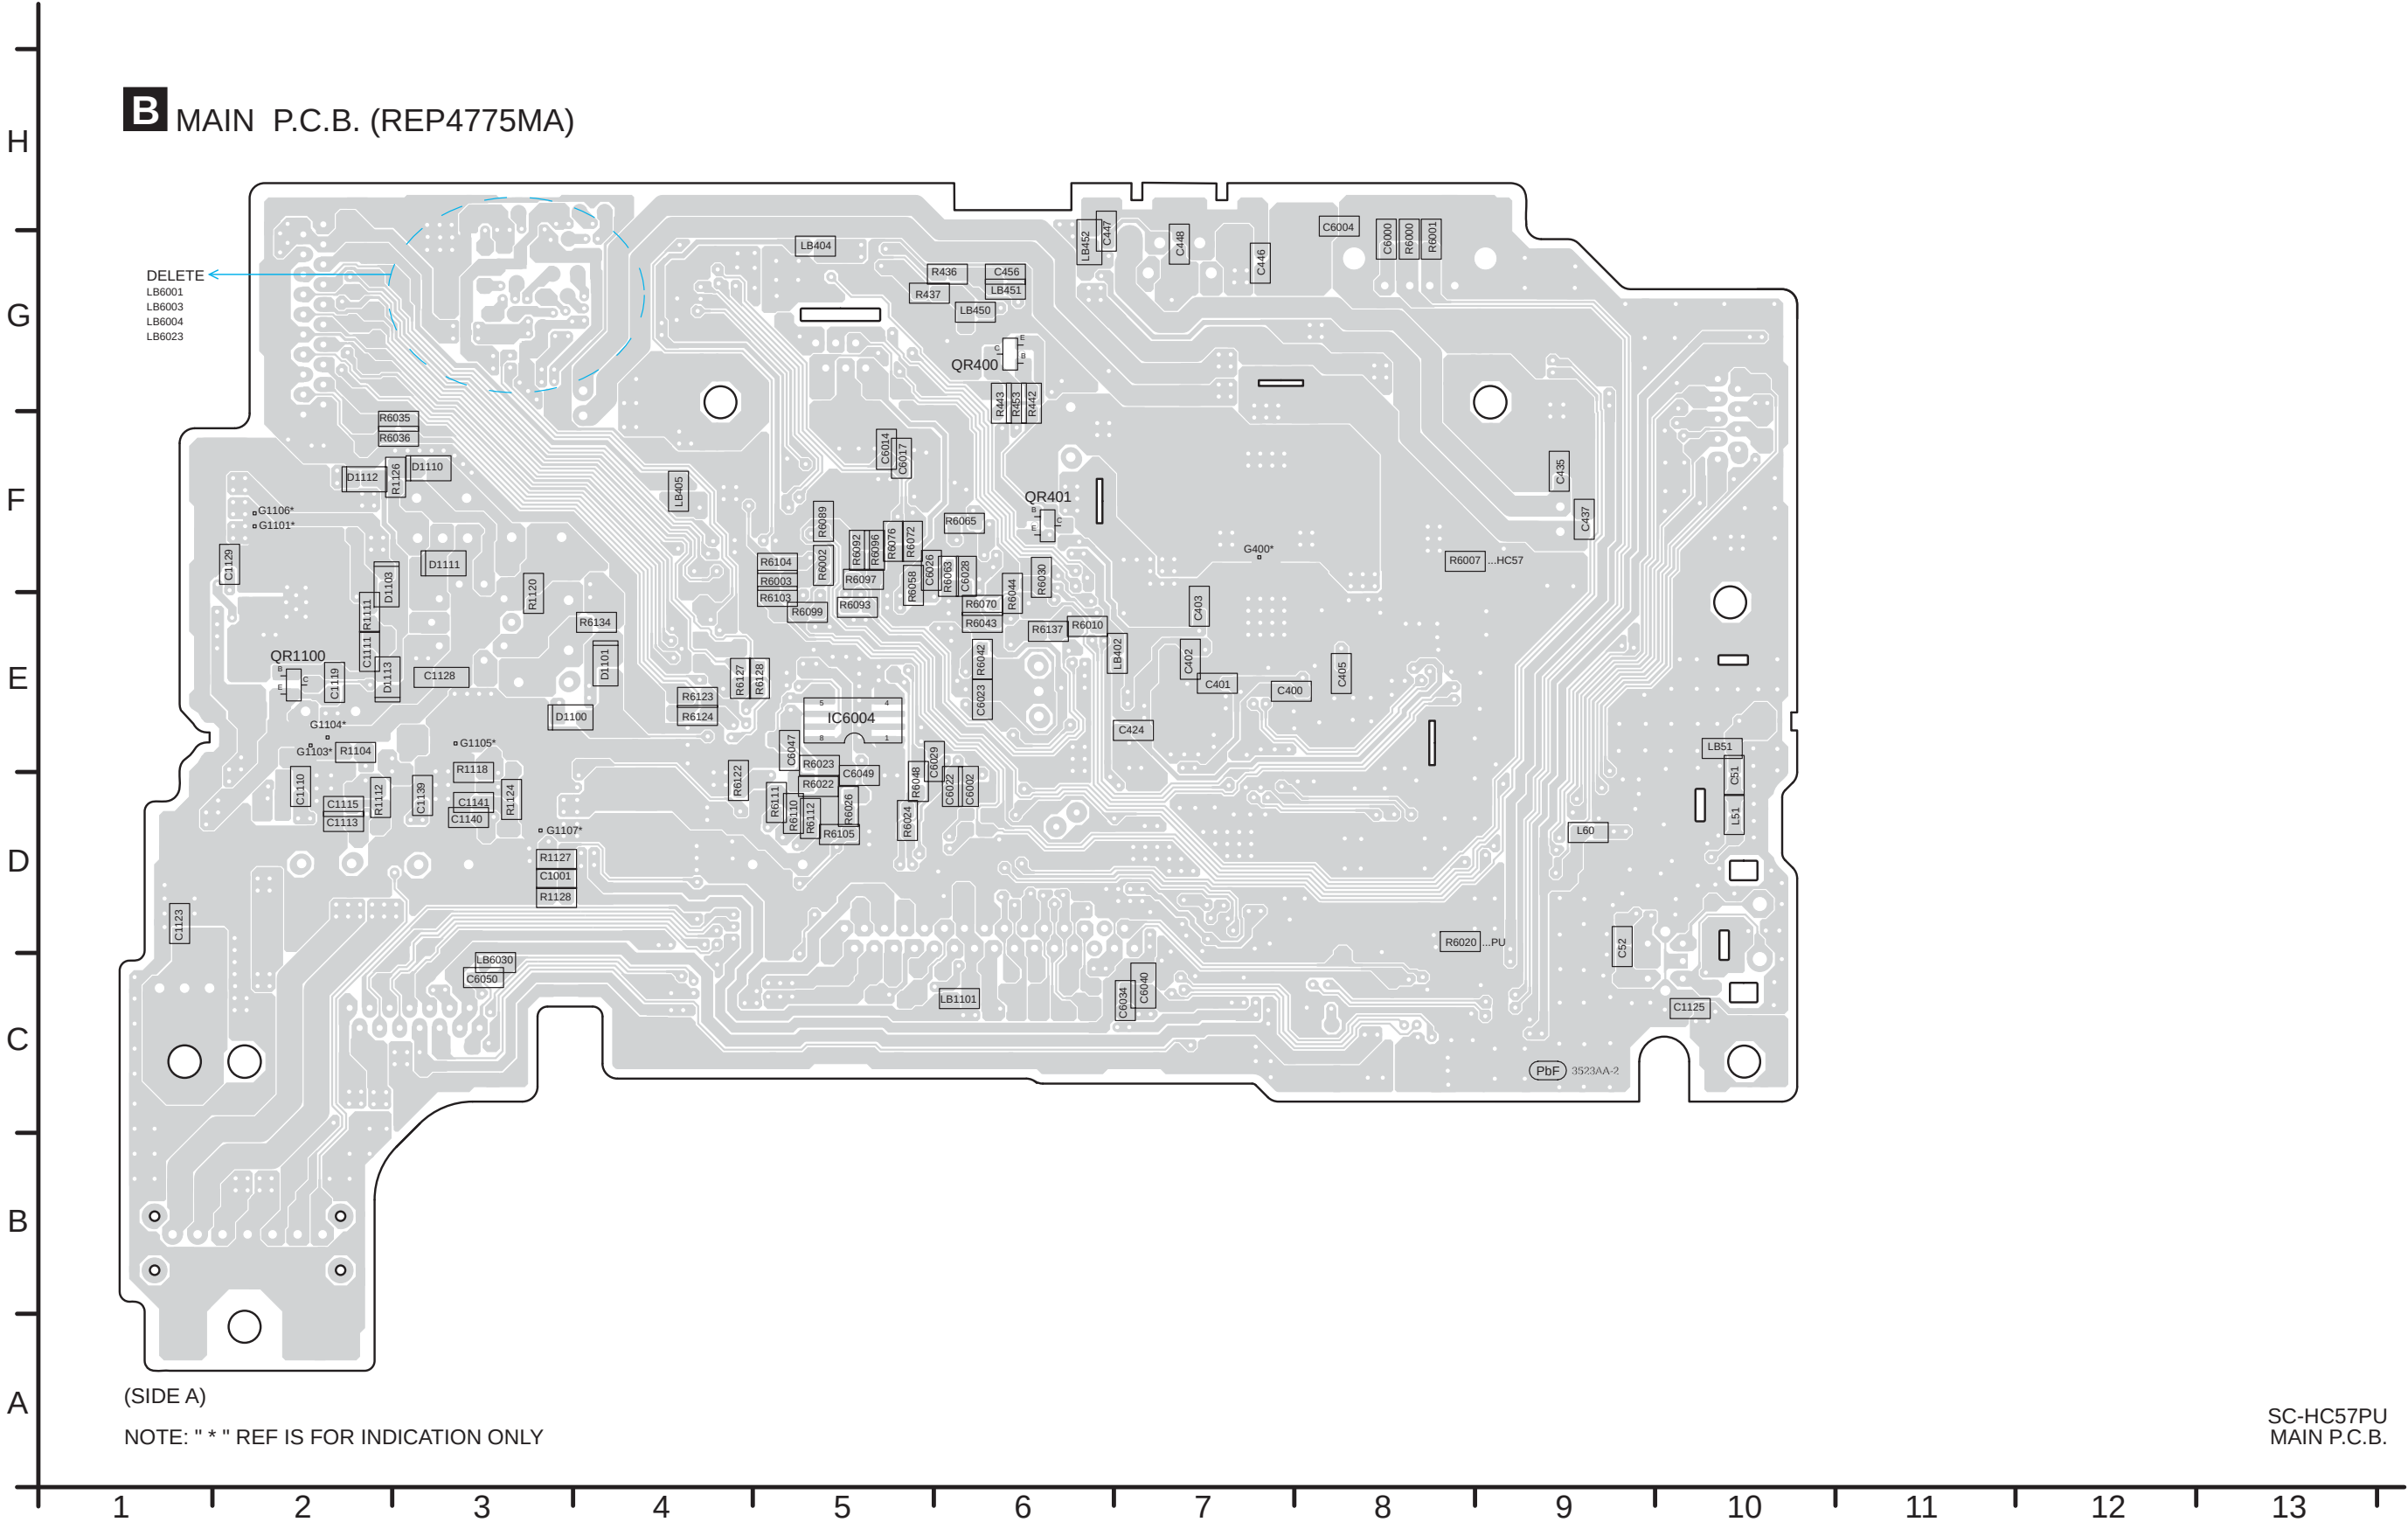

With reference to original service manual (section 16.3.) on page 129 for Model No. SC-HC57PU-K

A B C D E F G H

(SIDE B)


NOTE: " * " REF IS FOR INDICATION ONLY



30

3.11. iPod & REMOTE SENSOR P.C.B. (For SC-HC57PU-K)

With reference to original service manual (section 16.4.) on page 130 for Model No. SC-HC57PU-K

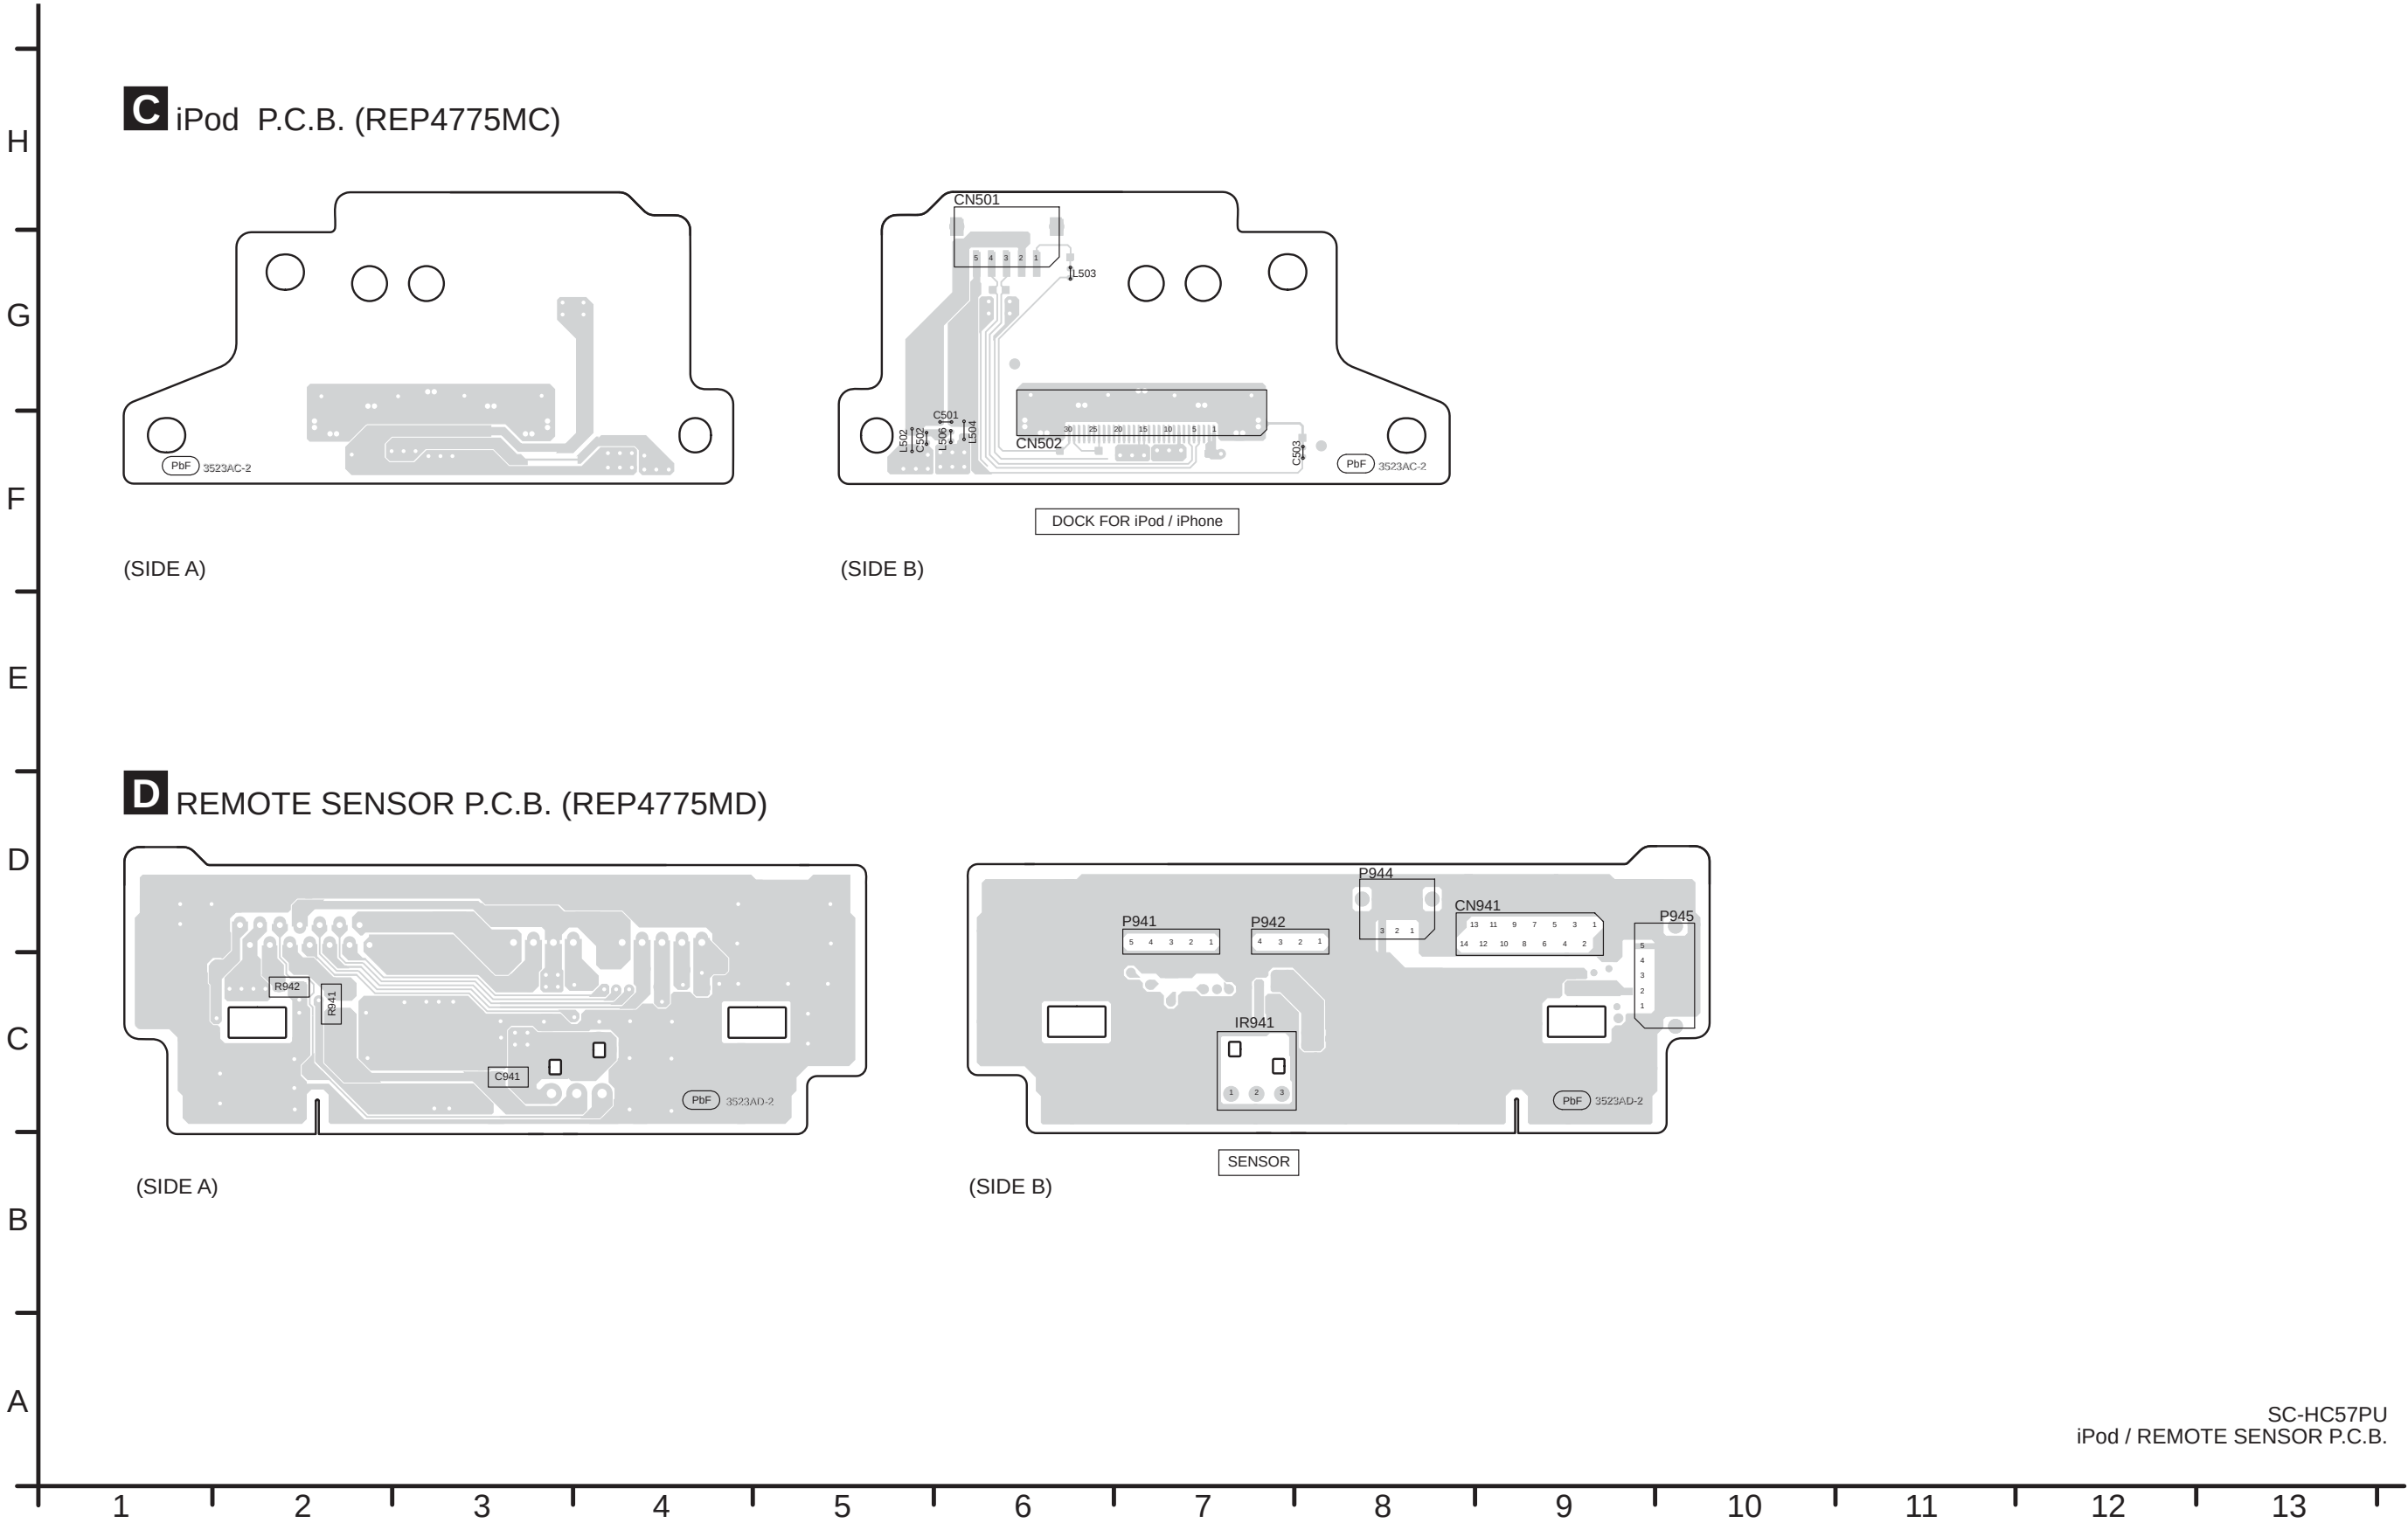

With reference to original service manual (section 16.6.) on page 132 for Model No. SC-HC57PU-K


With reference to original service manual (section 16.6.) on page 132 for Model No. SC-HC57PU-K

CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE.
PLEASE DO NOT TOUCH THIS P.C.B

SC-HC57PU
BUTTON / SMPS P.C.B.


3.13. MAIN P.C.B. (Side A) (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 16.2.) on page 134 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

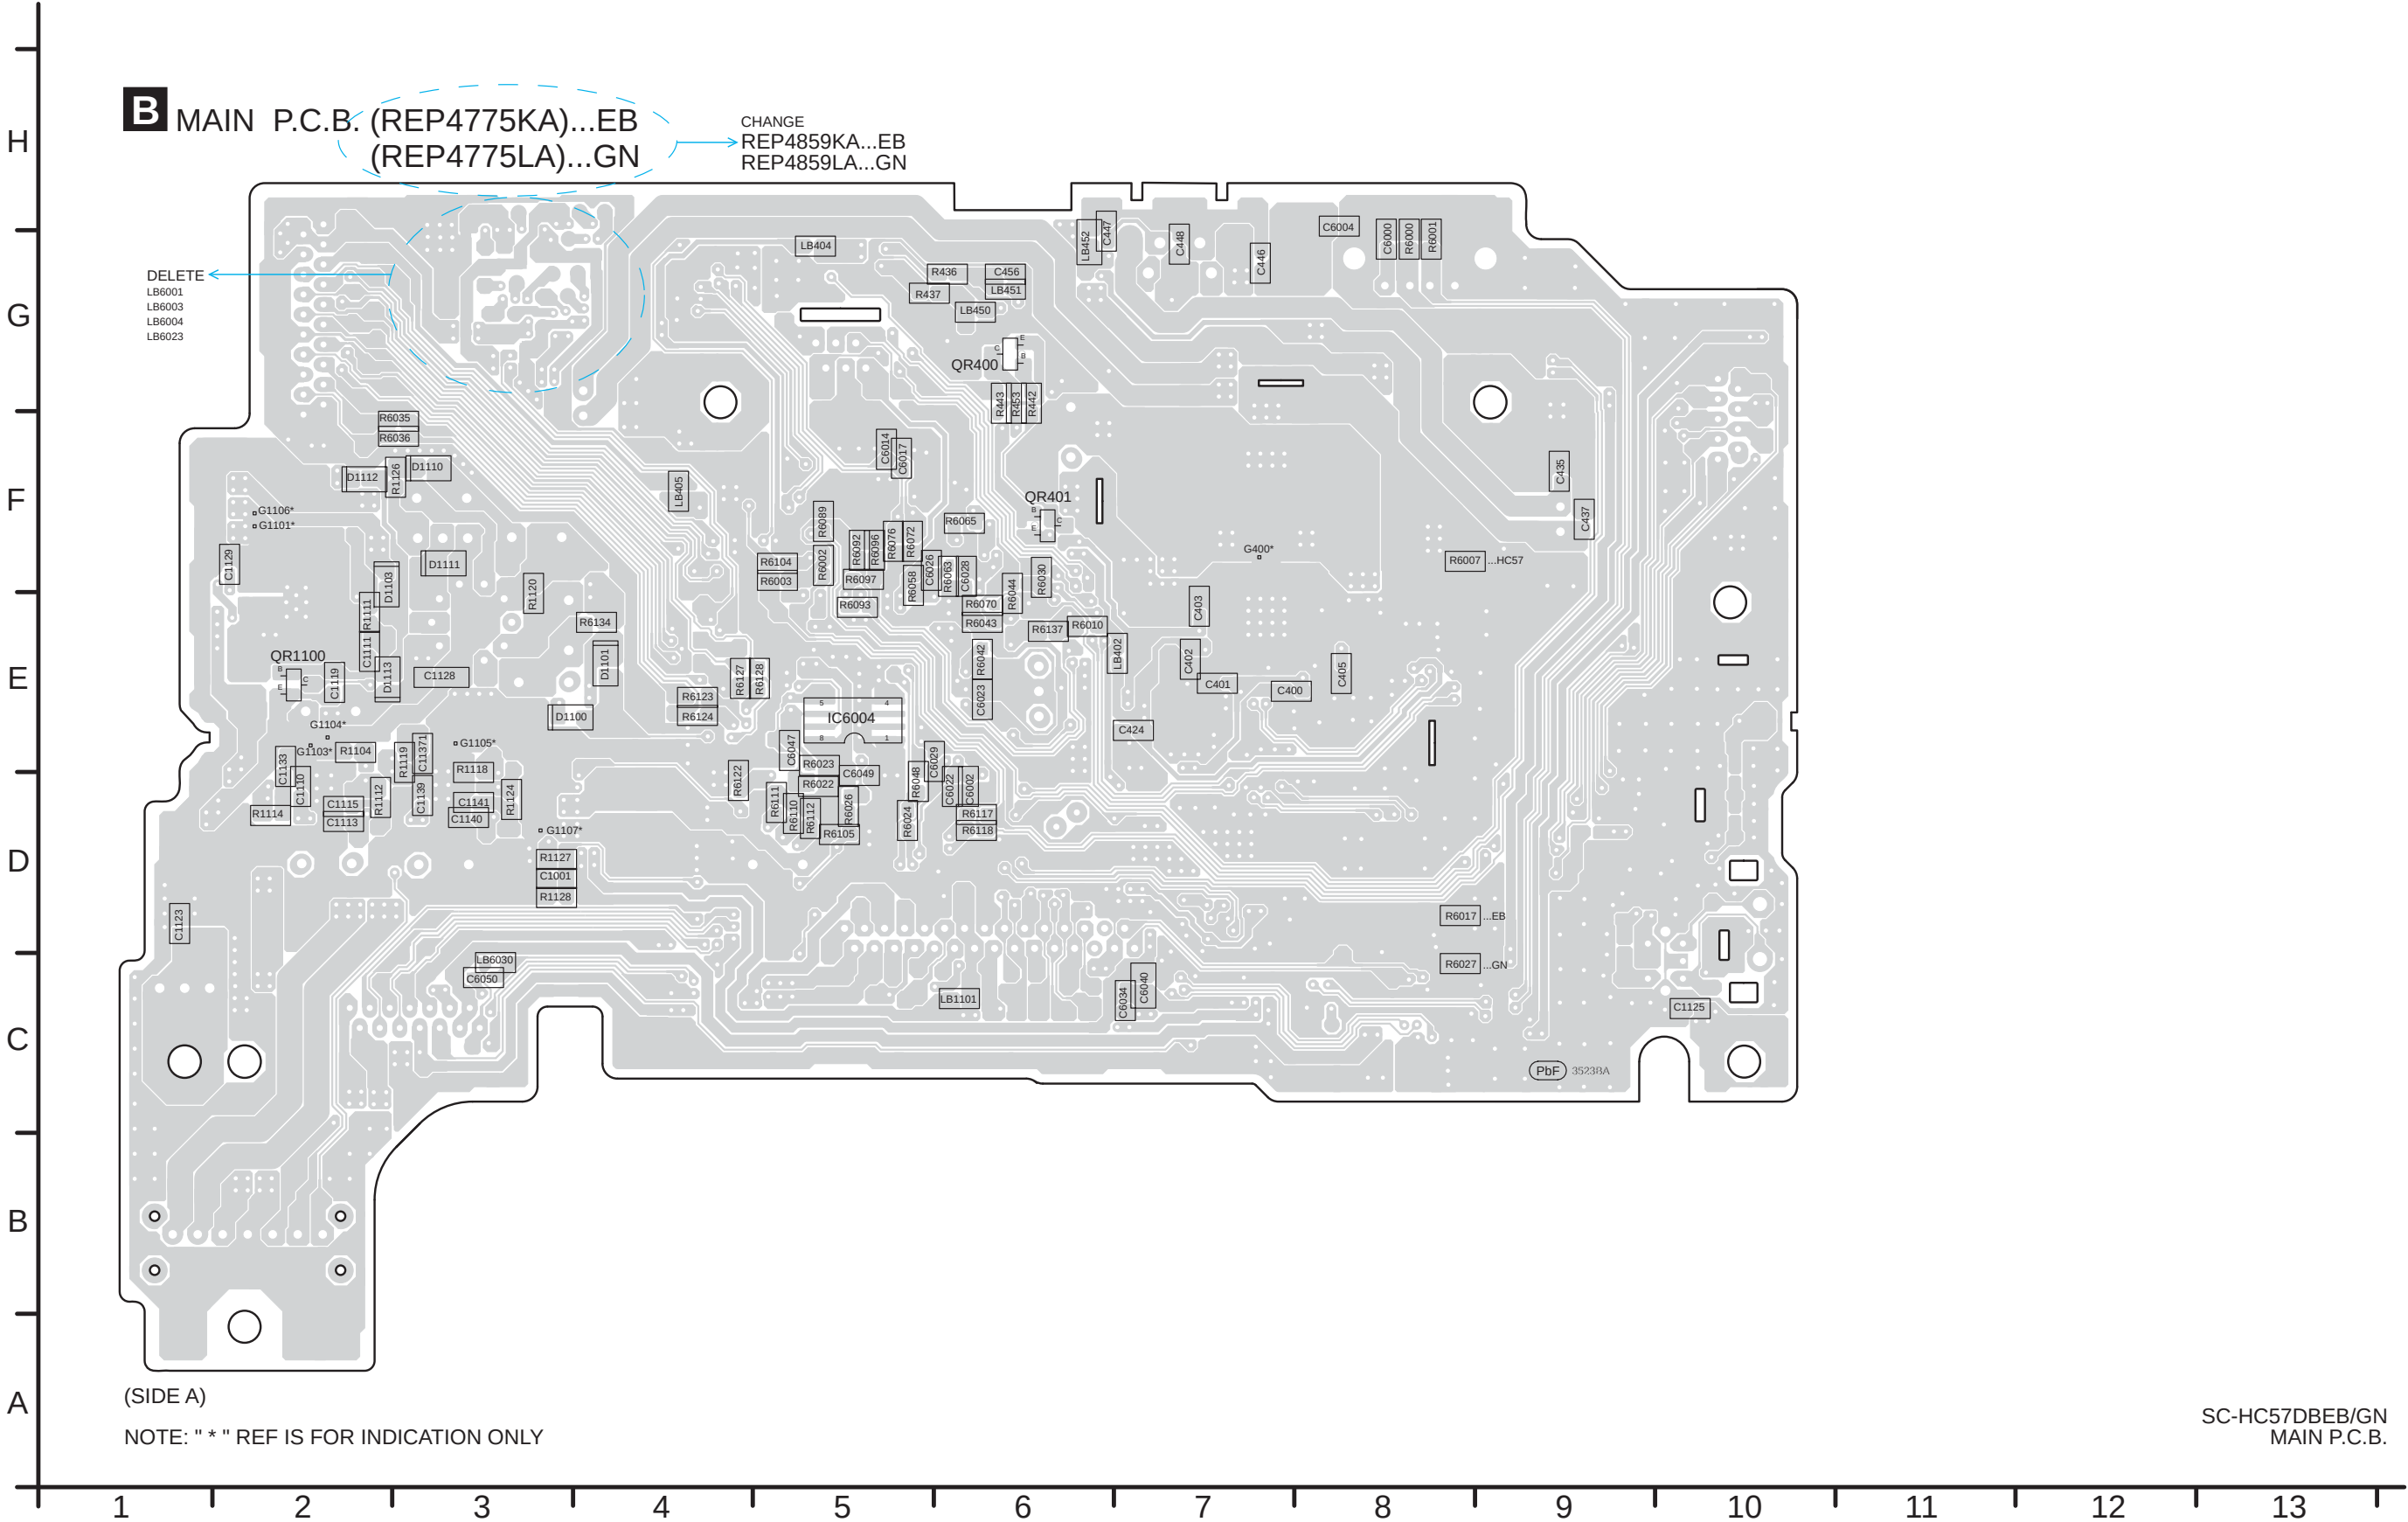


3.14. MAIN P.C.B. (Side B) (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 16.3.) on page 135 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

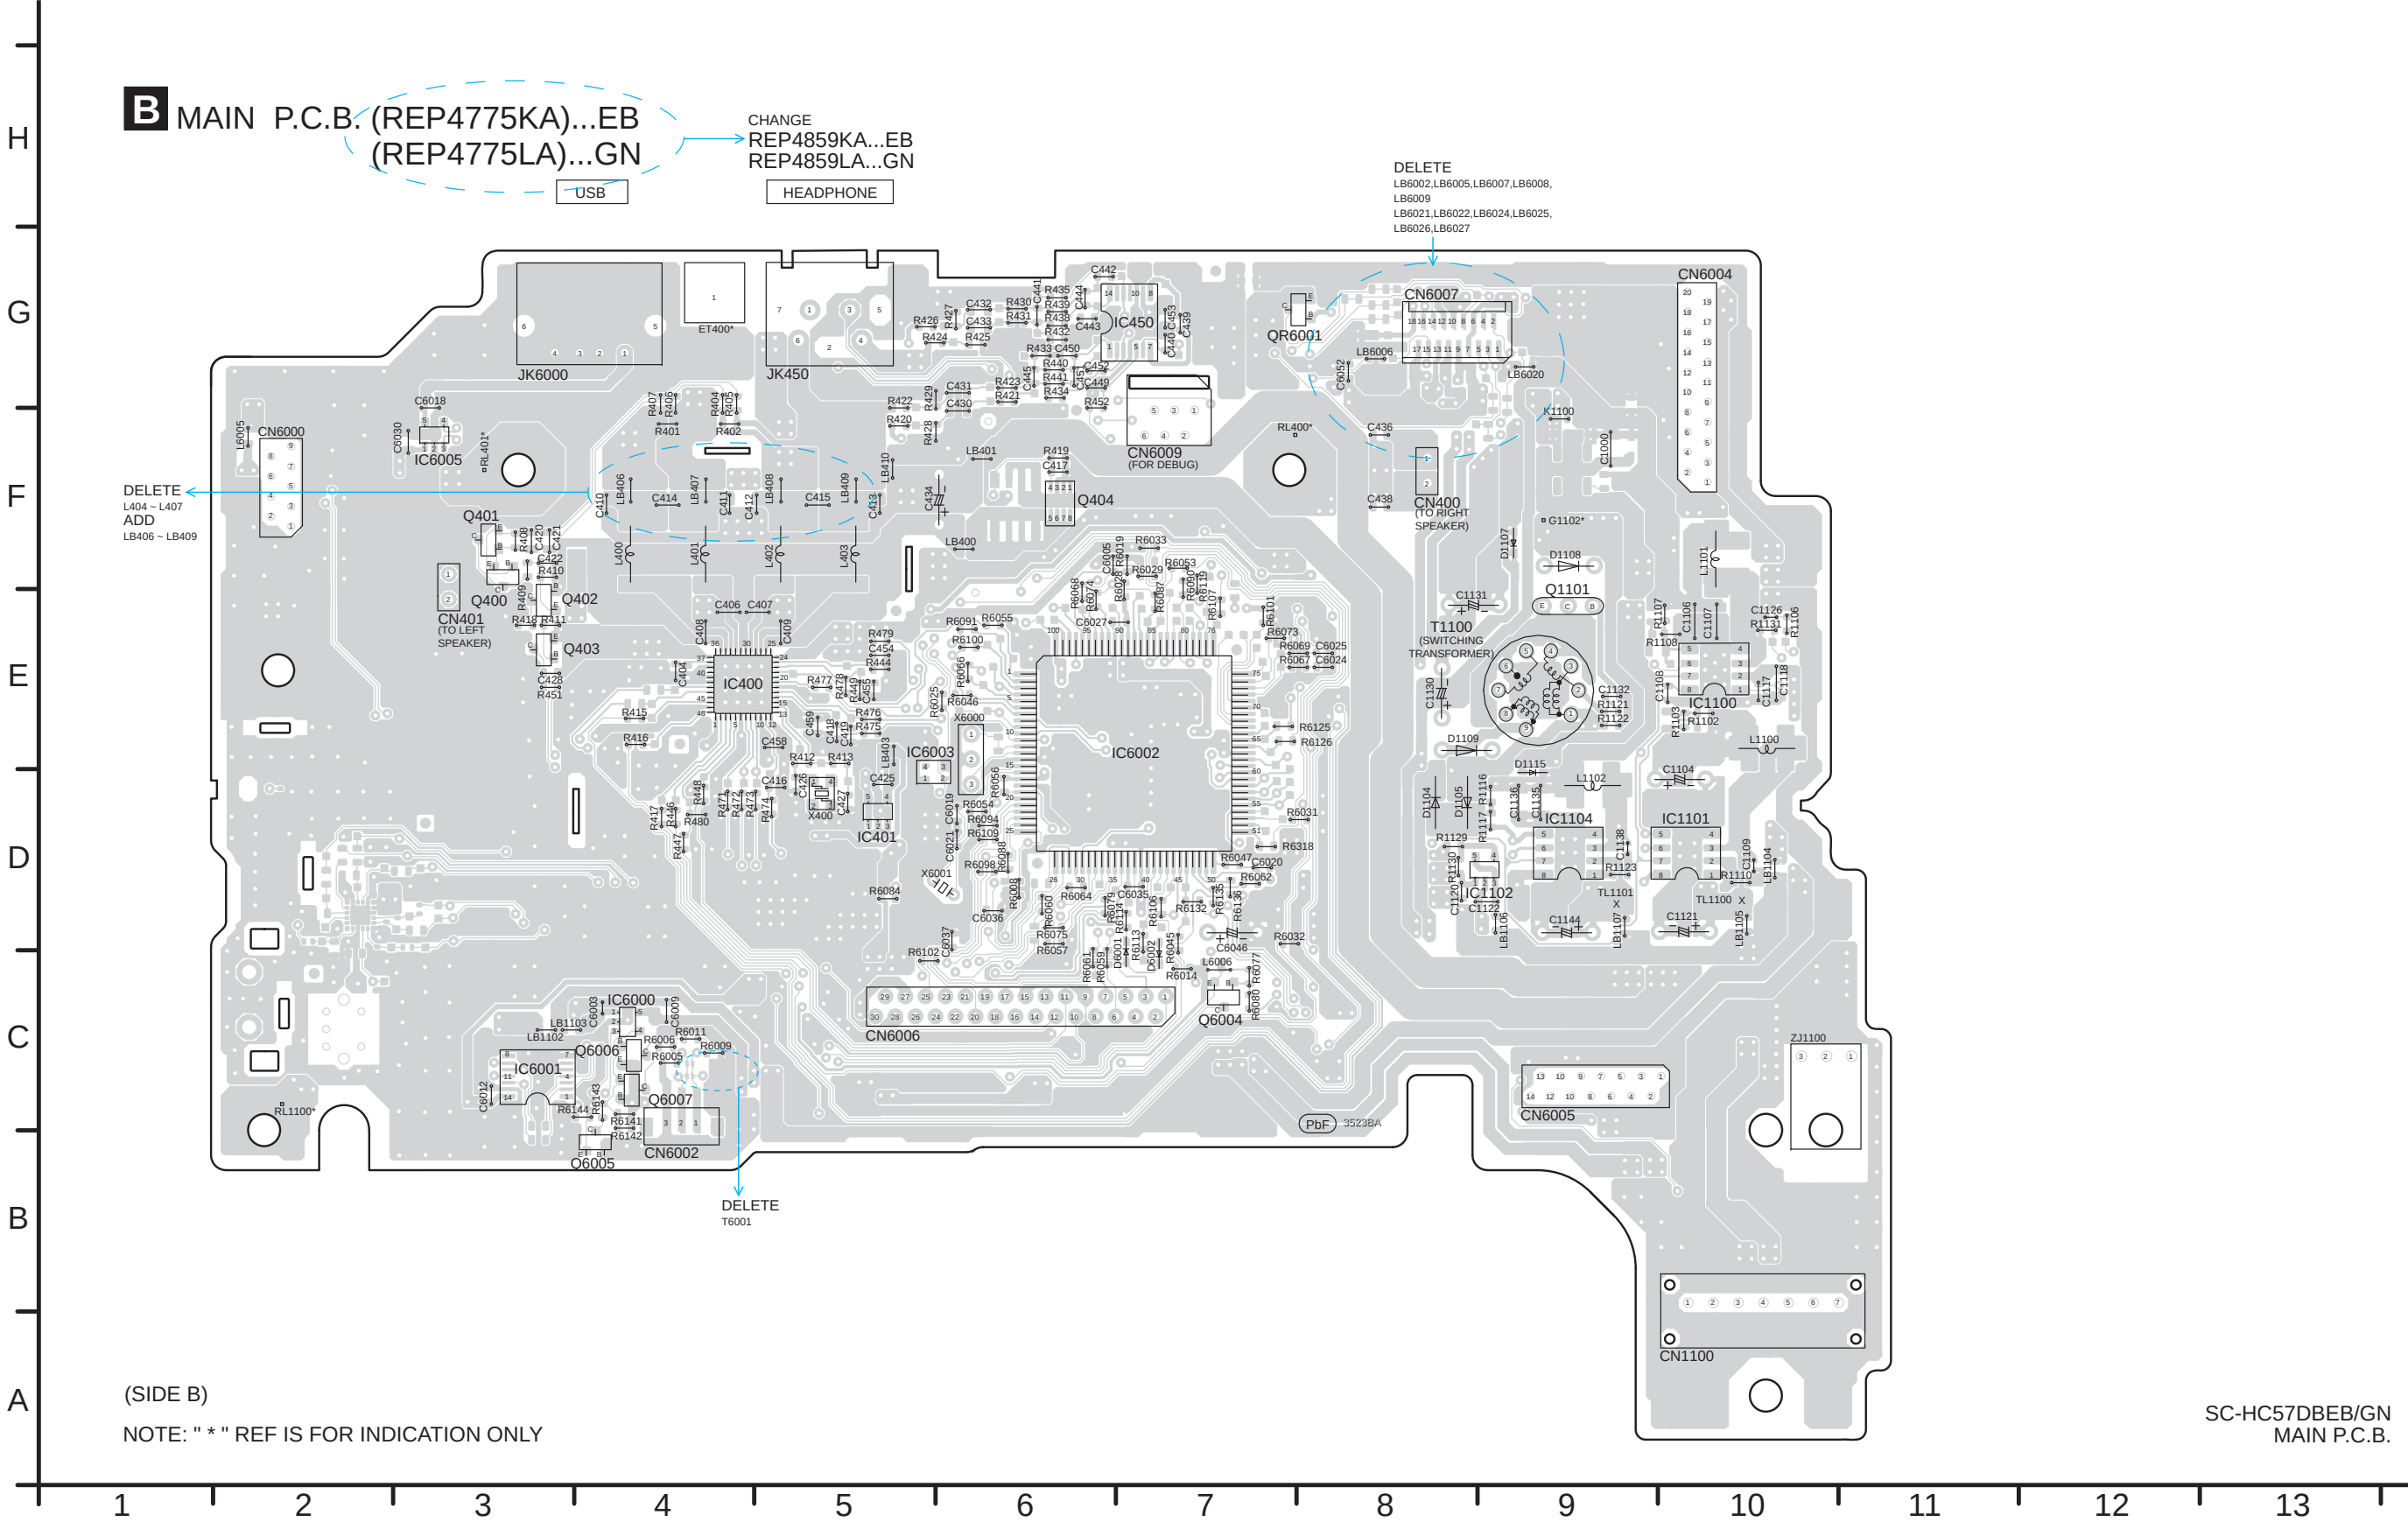


3.15. iPod & REMOTE SENSOR P.C.B. (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 16.4.) on page 136 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

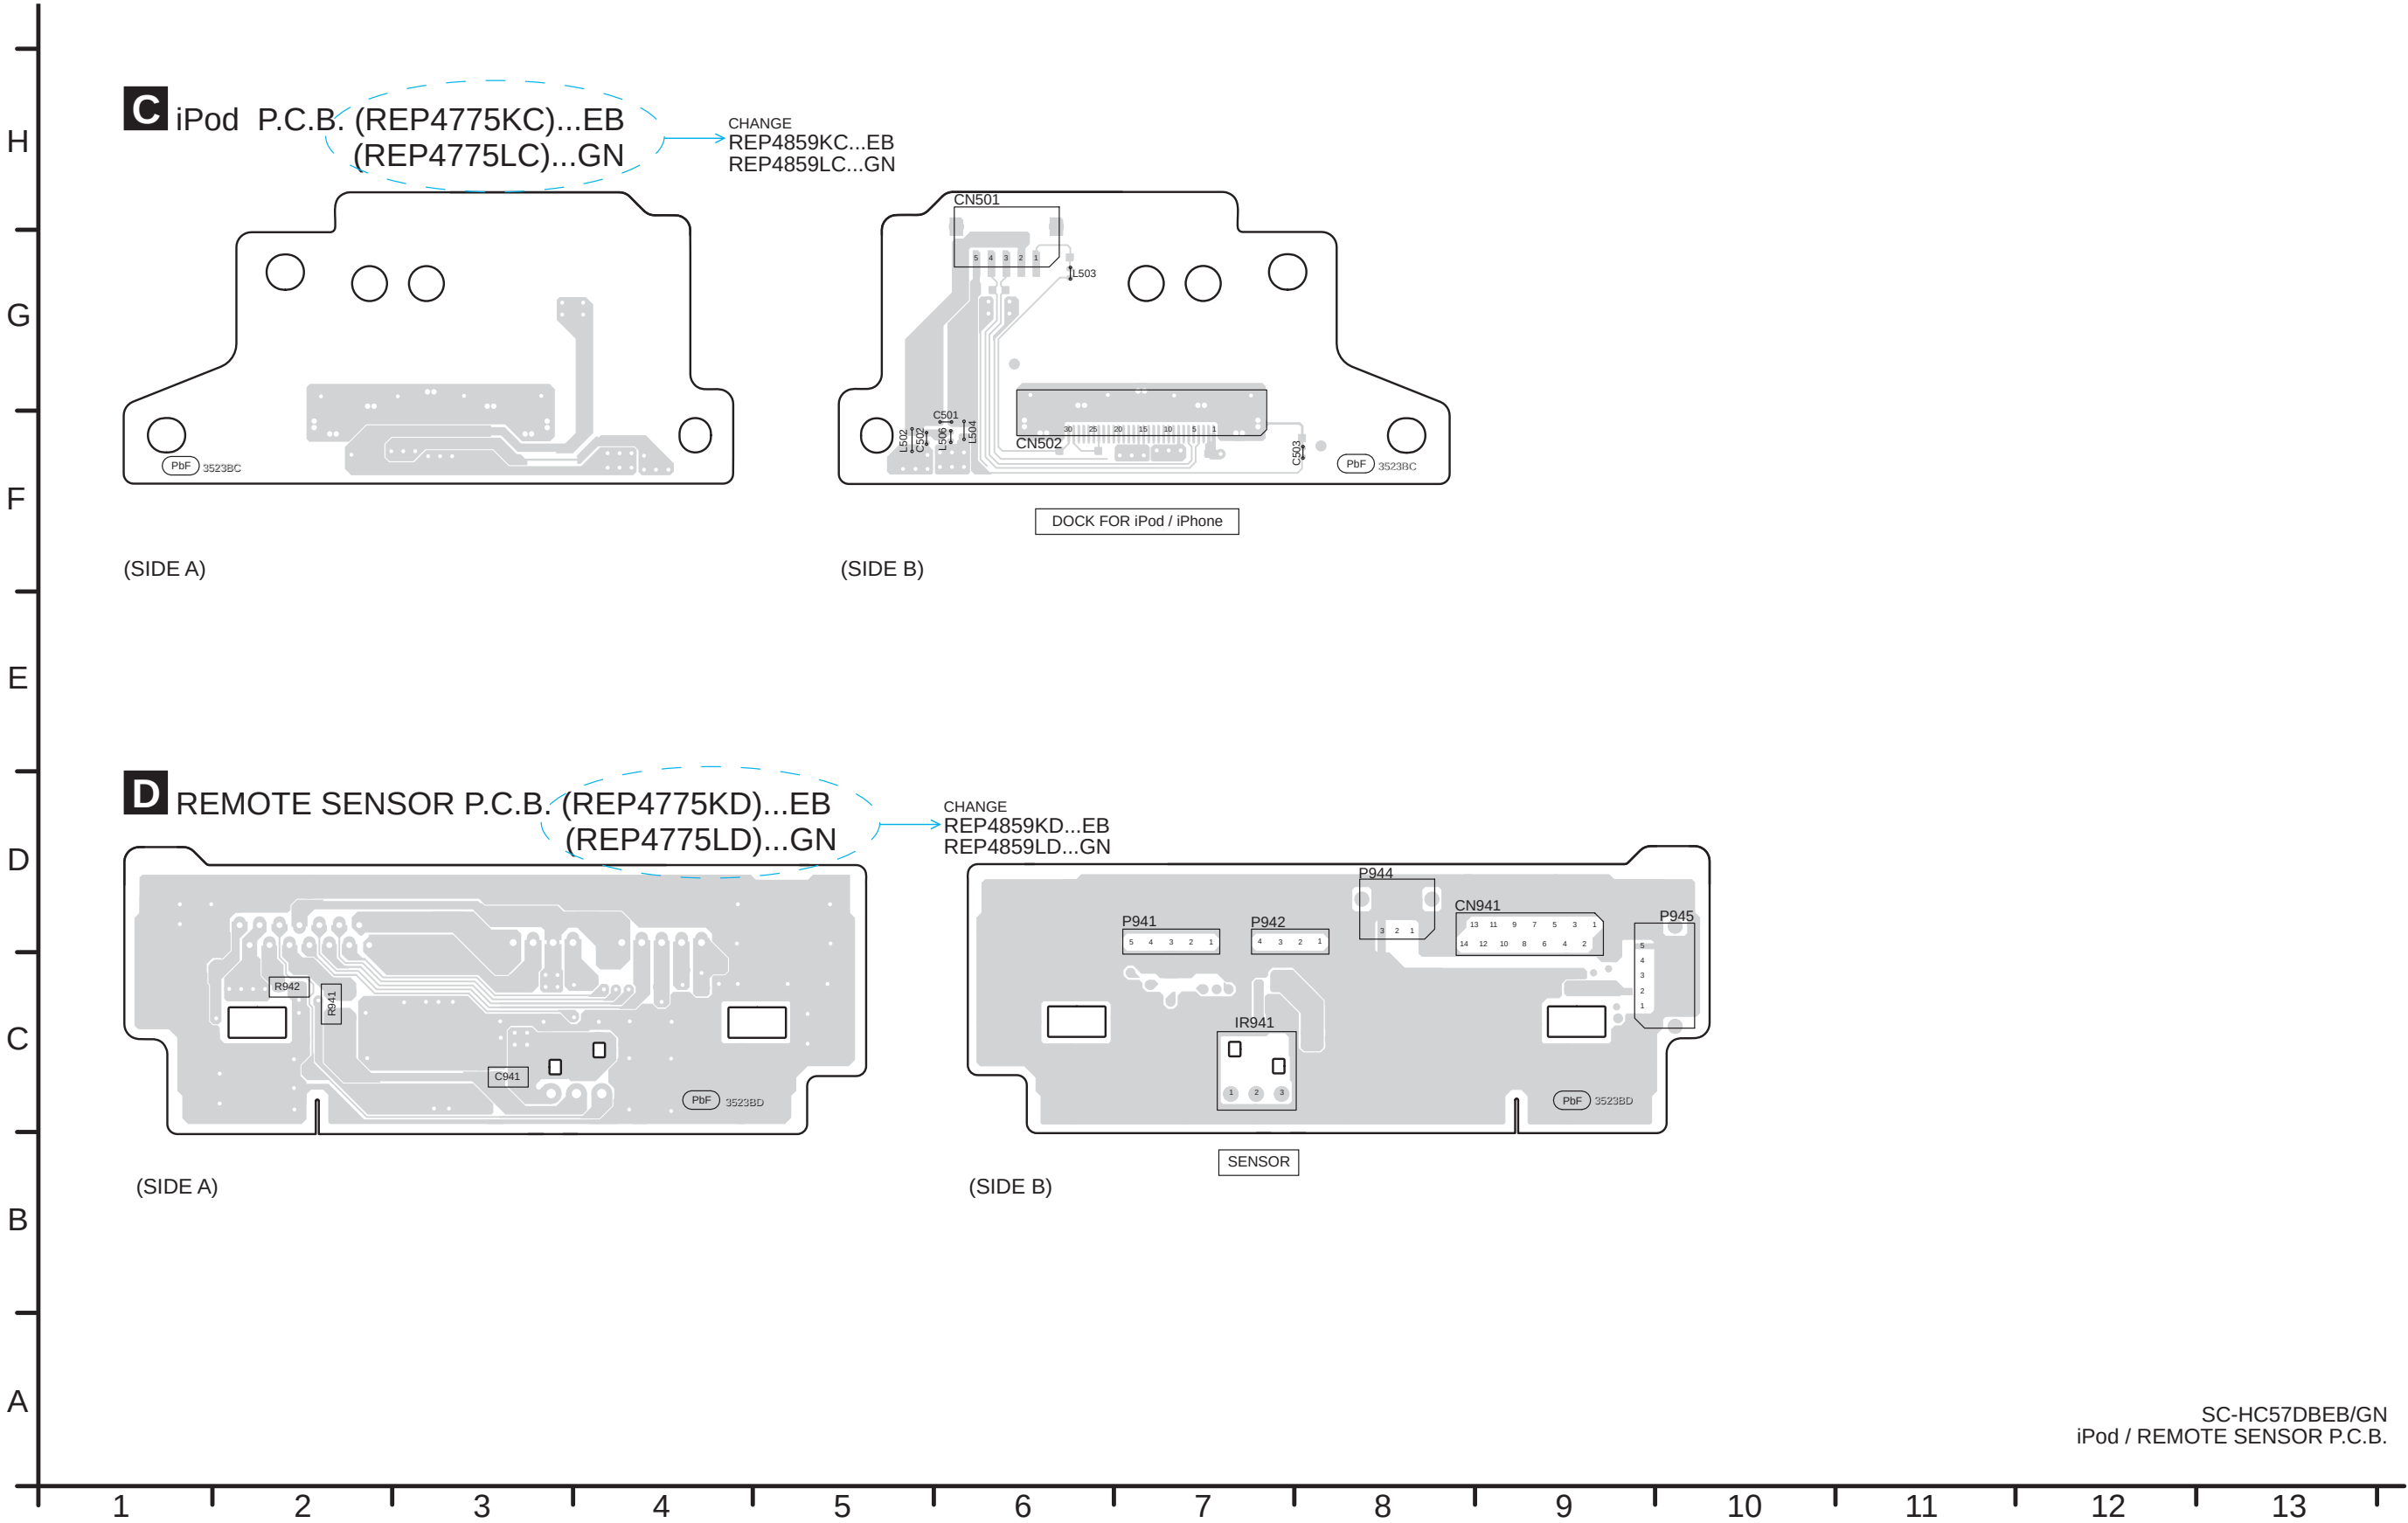

3.16. BUTTON & SMPS P.C.B. (For SC-HC57DBEBK, SC-HC57DBGNK)

With reference to original service manual (section 16.6.) on page 138 for Model No. SC-HC57DBEBK, SC-HC57DBGNK

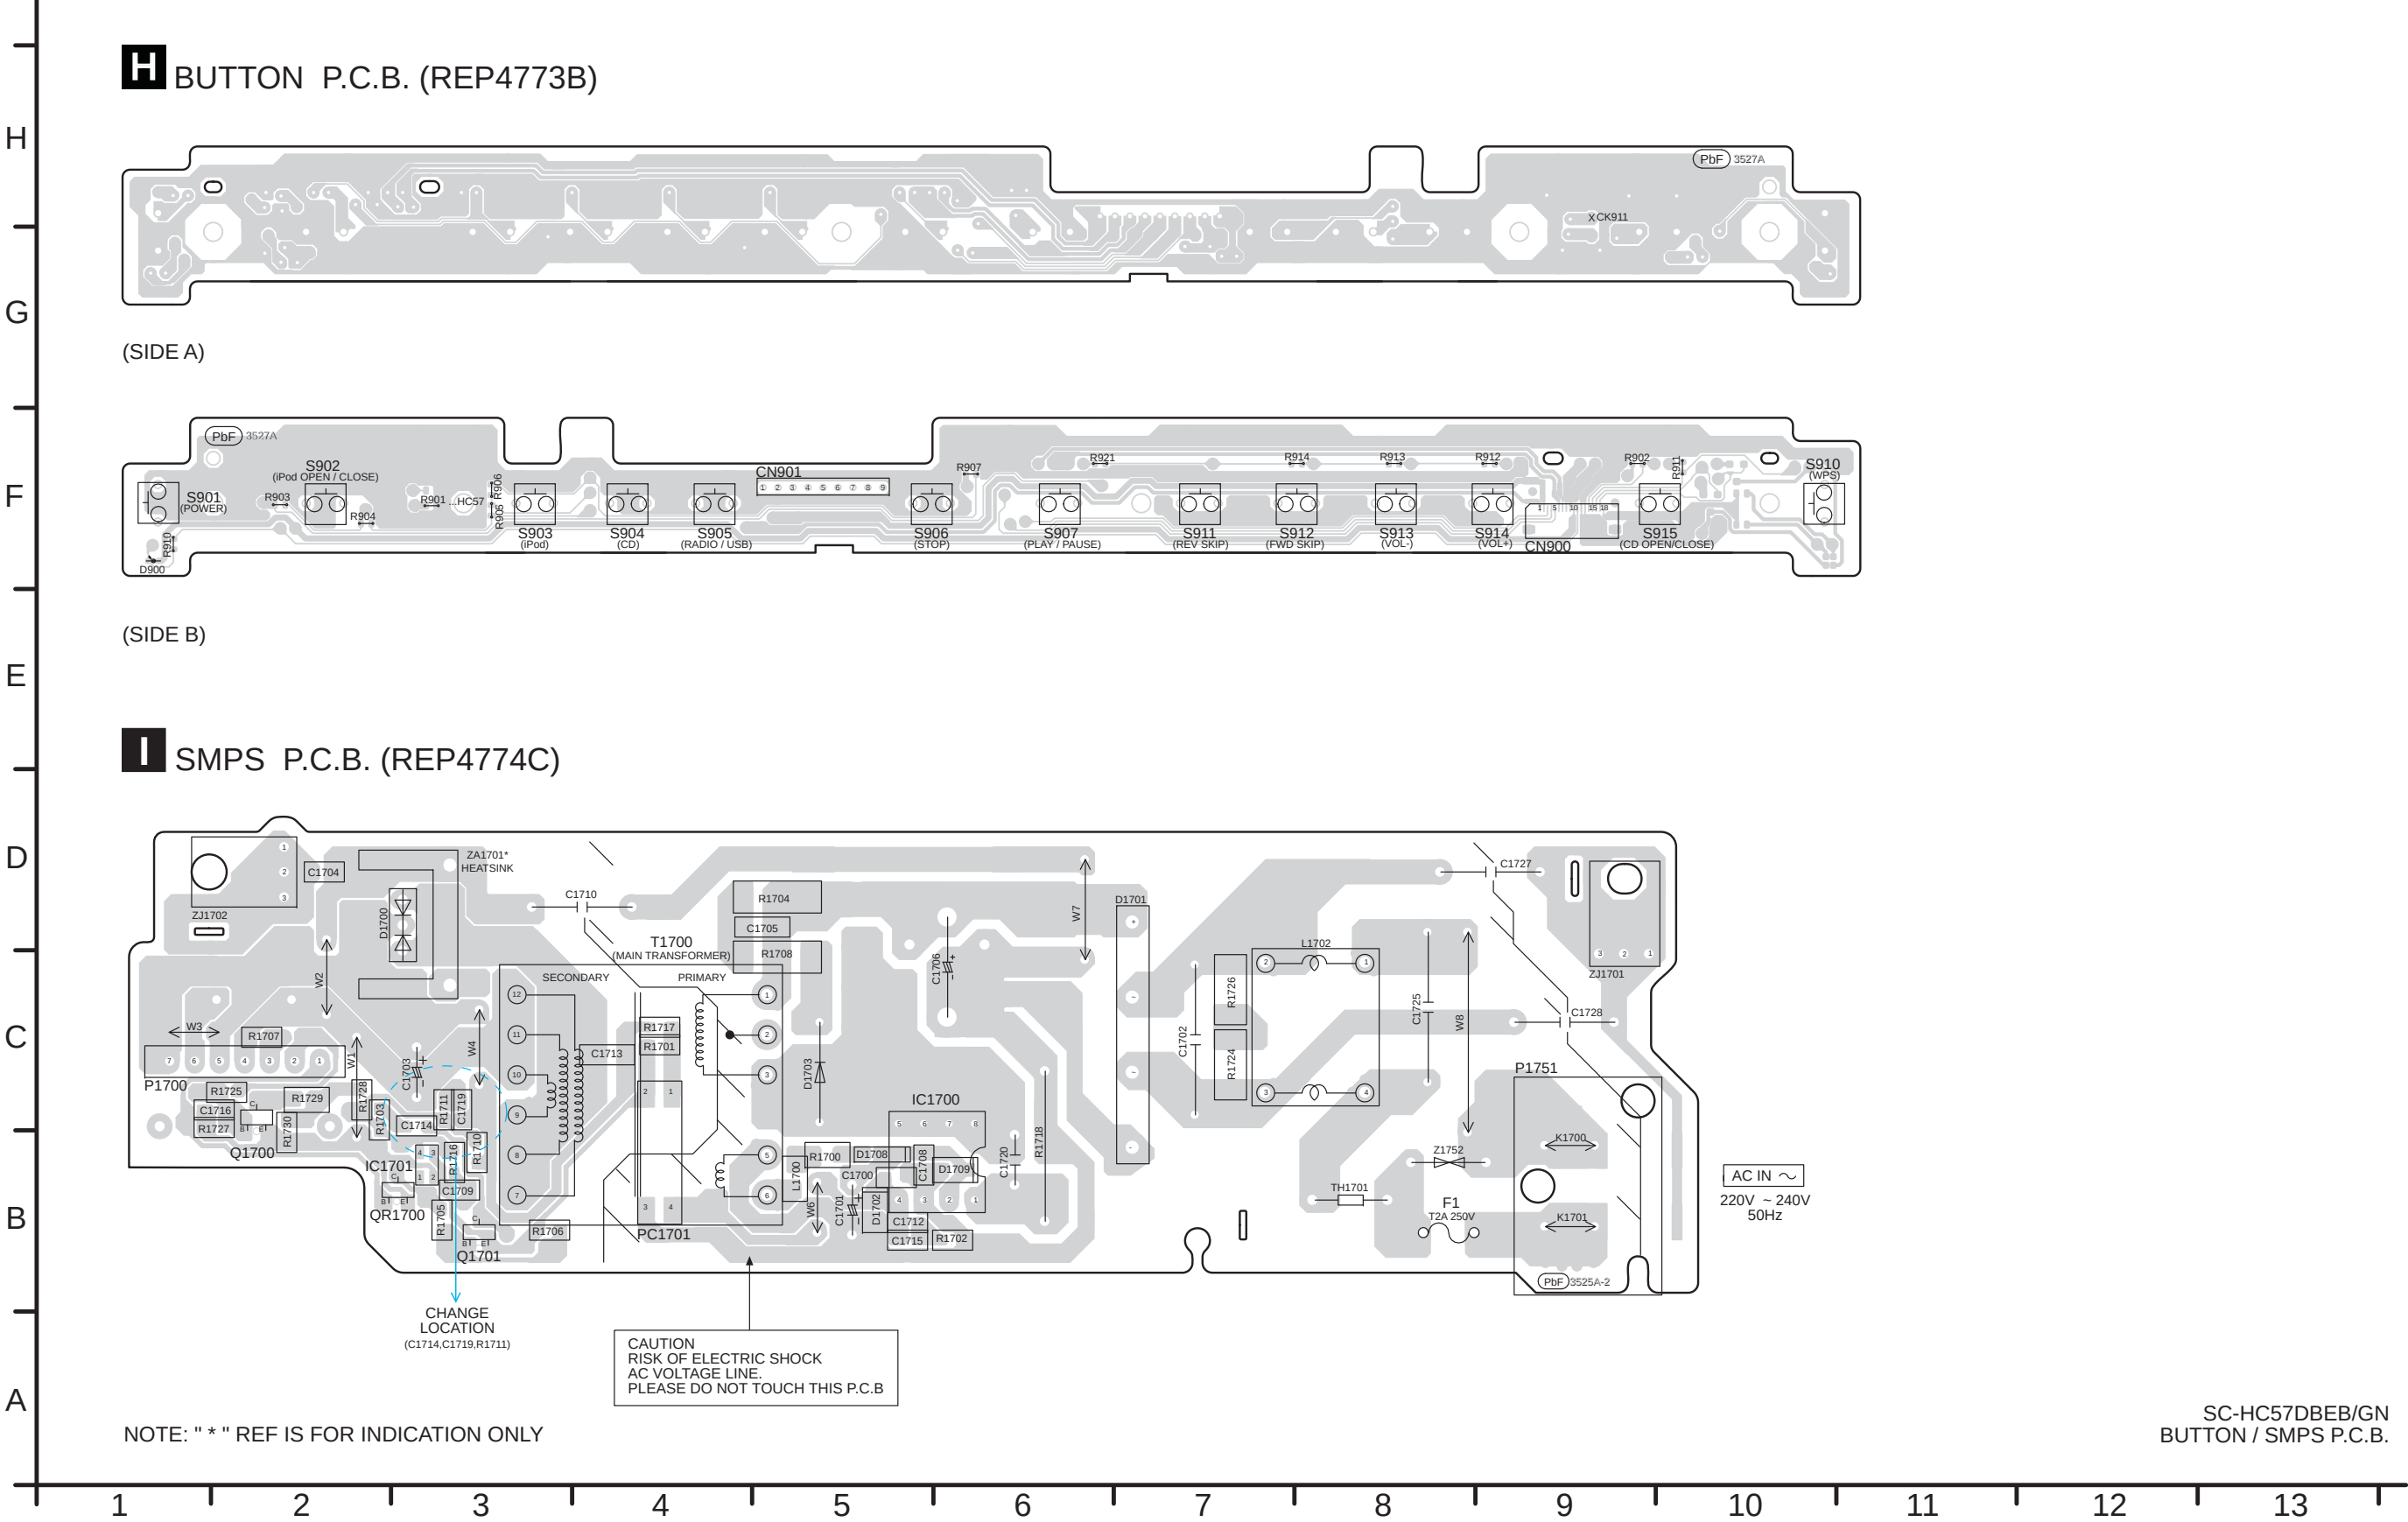

4 Replacement Parts List

Reason for Change

*The circled item indicates the reason. If no marking, see the Notes in the bottom column.

	1. Improve performance
	2. Change of material or dimension
	3. To meet approved specification
	4. Standardization
☐	5. Addition
☐	6. Deletion
	7. Correction
☐	8. Other

Interchangeability Code

**The circled item indicates the interchangeability. If no marking, see the Notes in the bottom column.

Parts		Set Production	
	A Original		Early
	New		Late
	B Original		Early
	New		Late
☐	C Original		Early
	New		Late
	D Original		Early
	New		Late
	E Other		

Please revise the original parts list in the Service Manual to conform to the change(s) shown herein.

If new part numbers are shown, be sure to use them when ordering parts.

Please file and use this manual together with the original service manual.

4.1. Electrical Replacement Parts List

4.1.1. SC-HC57P/PC-K

Ref. No.	Original Part No.	New Part No.	Notes	New Part Name & Descriptions	Remarks
LB6025	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6005	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6007	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6021	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB408	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB409	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6026	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6002	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6009	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6027	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6024	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB406	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB407	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6008	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6022	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6001	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6003	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6004	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6023	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
T6001	EXC24CE900U	-	6/C	NOISE FILTER	DELETE
L404	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L405	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L406	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L407	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
PCB2	REP4775HA	REP4859HA	8/C	MAIN P.C.B.	CHANGE
PCB2	REP4775HC	REP4859HC	8/C	iPod P.C.B.	CHANGE
PCB2	REP4775HD	REP4859HD	8/C	REMOTE SENSOR P.C.B.	CHANGE

T.I No. ME2123155, ME2123208, ME2123239, ME2123332 (For Factory Reference only).

4.1.2. SC-HC57EG-K/W

Ref. No.	Original Part No.	New Part No.	Notes	New Part Name & Descriptions	Remarks
LB6025	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6005	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6007	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6021	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB408	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB409	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6026	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6002	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6009	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6027	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6024	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB406	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB407	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6008	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6022	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6001	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6003	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6004	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6023	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
T6001	EXC24CE900U	-	6/C	NOISE FILTER	DELETE
L404	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L405	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L406	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L407	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
PCB2	REP4775JA	REP4859JA	8/C	MAIN P.C.B.	CHANGE
PCB2	REP4775JC	REP4859JC	8/C	iPod P.C.B.	CHANGE
PCB2	REP4775JD	REP4859JD	8/C	REMOTE SENSOR P.C.B.	CHANGE

T.I No. ME2123155, ME2123208, ME2123239, ME2123332 (For Factory Reference only).

4.1.3. SC-HC57PU-K

Ref. No.	Original Part No.	New Part No.	Notes	New Part Name & Descriptions	Remarks
LB6025	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6005	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6007	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6021	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB408	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB409	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6026	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6002	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6009	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6027	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6024	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB406	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB407	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6008	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6022	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6001	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6003	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6004	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6023	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
T6001	EXC24CE900U	-	6/C	NOISE FILTER	DELETE
L404	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L405	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L406	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L407	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE

T.I No. ME2123155, ME2123208, ME2123239, ME2123332 (For Factory Reference only).

4.1.4. SC-HC57DBEBK, SC-HC57DBGNK

Ref. No.	Original Part No.	New Part No.	Notes	New Part Name & Descriptions	Remarks
LB6025	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6005	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6007	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6021	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB408	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB409	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6026	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6002	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6009	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6027	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6024	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB406	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB407	-	J0JHC0000094	5/C	INDUCTOR	ADD
LB6008	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6022	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6001	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6003	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6004	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
LB6023	D0GBR00JA008	-	6/C	CHIP JUMPER	DELETE
T6001	EXC24CE900U	-	6/C	NOISE FILTER	DELETE
L404	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L405	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L406	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
L407	G1C1R0MA0530	-	6/C	INDUCTOR	DELETE
PCB2	REP4775KA	REP4859KA	8/C	MAIN P.C.B.	CHANGE (EB only)
PCB2	REP4775KC	REP4859KC	8/C	iPod P.C.B.	CHANGE (EB only)
PCB2	REP4775KD	REP4859KD	8/C	REMOTE SENSOR P.C.B.	CHANGE (EB only)
PCB2	REP4775LA	REP4859LA	8/C	MAIN P.C.B.	CHANGE (GN only)
PCB2	REP4775LC	REP4859LC	8/C	iPod P.C.B.	CHANGE (GN only)
PCB2	REP4775LD	REP4859LD	8/C	REMOTE SENSOR P.C.B.	CHANGE (GN only)

T.I No. ME2123155, ME2123208, ME2123239, ME2123332 (For Factory Reference only).

IPSG1212