# Service Manual

**Portable CD Player** 



SL-J910EB SL-J910EG SL-J910GH SL-J910GK

Colour

(A).....Blue Type

Please use this manual together with the service manual for Model No. SL-J910GD/SL-J910SG, Order No. AD0311174C0.

#### 

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

## CONTENTS

Page	Page
2 Replacement Parts List2	1 Note 1

# 1 Note

• This simplified service manual is provided to indicate the differences between the original model No. SL-J910SG-A and the subsequent model No. SL-J910EB-A, SL-J910EG-A, SL-J910GH-A and SL-J910GK-A.

# **Panasonic**

© 2004 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

# 2 Replacement Parts List

#### Note:

• Important safety notice:

Components identified by  $\underline{\wedge}$  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-

retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

• All parts are supplied by MESA.

## 2.1. For SL-J910EB

Ref.No.	Change of Parts No.		Part Name & Description	Remarks	
	SL-J910SG-A	SL-J910EB-A			
Cabinet Parts	Cabinet Parts				
21	RGN2586-H	RGN2589-H1	NAME PLATE		
Accessory Part	Accessory Parts				
A2	K2DA42E00001		POWER PLUG ADAPTOR		
A8	RFC0071A-C		SOFT CASE	DELETE	
A9	RJA0019-2X	RJA0053-3X	AC MAINS LEAD	$\triangle$	
A10	RQT7228-Z		OPERATING INSTRUCTIONS	DELETE	
A10	RQT7225-K		OPERATING INSTRUCTIONS	DELETE	
Packaging Parts					
P3	RPQ1402	RPQ1482	PAD 1		

# 2.2. For SL-J910EG

Ref.No.	Change	of Parts No.	Part Name & Description	Remarks
	SL-J910SG-A	SL-J910EG-A		
Cabinet Parts		•	•	•
21	RGN2586-H	RGN2588-H1	NAME PLATE	
Accessory Par	ts			
A2	K2DA42E00001		POWER PLUG ADAPTOR	
A8	RFC0071A-C		SOFT CASE	DELETE
A10	RQT7228-Z	RQT7223-E	OPERATING INSTRUCTIONS	FRENCH, GERMANY, SPANISH, NETHER LANDS, SWEDISH, DANISH, ITALIAN, PORTUGUESE, CZECH, POLISH
A10	RQT7225-K		OPERATING INSTRUCTIONS	DELETE
Packaging Par	ts	•		·
P3	RPQ1402	RPQ1482	PAD 1	

# 2.3. For SL-J910GH

Ref.No.	Change of Parts No.		Part Name & Description	Remarks
	SL-J910SG-A	SL-J910GH-A		
Accessory Parts				
A2	K2DA42E00001		POWER PLUG ADAPTOR	
A9	RJA0019-2X	RJA0053-3X	AC MAINS LEAD	$\triangle$
A10	RQT7228-Z	RQT7227-K	OPERATING INSTRUCTIONS	CHINESE
A10	RQT7225-K		OPERATING INSTRUCTIONS	DELETE

# 2.4. For SL-J910GK

Ref.No.	Change	Change of Parts No.	Part Name & Description	Remarks
	SL-J910SG-A	SL-J910GK-A		
Cabinet Parts		•		·
21	RGN2586-H	RGN2592-H	NAME PLATE	
Accessory Par	ts	•	•	•
A2	K2DA42E00001		POWER PLUG ADAPTOR	▲ DELETE
A4	L0EAAB000016	L0EAAB000017	SPEAKER/BATTERY CHARGER	
A9	RJA0019-2X	K2CA2CA00020	AC MAINS LEAD	$\triangle$
A10	RQT7228-Z		OPERATING INSTRUCTIONS	DELETE
Packaging Parts				
P2	RPK2047	RPK2048	GIFT BOX	

2 F0401KH