

Service Manual

Potable CD Player
SL-S205



MASH *
multi-stage noise shaping

Please file and use this manual together with the service manual for Model No. SL-S200, Order No. AD9803045C0.

Colour
(K) Black Type

Area
(P) U.S.A.

Notes: • This simplified service manual is provided to indicate the differences between the original No. SL-S200 (P) and the subsequent model No. SL-S205 (P).

* MASH is a trademark of NTT.


■ Replacement Parts List

Notes: • Important safety notice:

Components identified by \triangle mark have special characteristics important for safety.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

• All parts are supplied by MESA.

Ref. No.	Change of Parts No.		Part Name & Description	Remarks
	SL-S200	 SL-S205		
CABINET PARTS				
1	RFKJLS200P-H	RFKJLS205P-K	BOTTOM CABINET ASS'Y	CHANGE
7	RYF0441E-H	RYF0441L-K	CD COVER ASS'Y	CHANGE
PACKING MATERIALS				
P43	RPQ0848	RPQ0876	MOUNT	CHANGE
P44	_____	RPQ0855	SPACER	ADDITION
ACCESSORIES				
A44 △	_____	RP-BP60PYS	RECHARGEABLE BATTERY	ADDITION
A44-1	_____	RXQ0449	BATTERY CASE	ADDITION

\triangle WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic®

© 1998 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying
and distribution is a violation of law.

■ Packaging

