

Service Manual

COMPACT
disc
DIGITAL AUDIO

MASH*
multi-stage noise shaping

※ MASH is a trademark of NTT.

Portable CD Player
SL-S230NC

Please file and use this manual together with the service manual for Model No. SL-S230, Order No. AD9803046C1 and Model No. RP-HC100, Order No. AD9808144C1.

Notes:

- The SL-S230NC consists of a portable CD player "SL-S230" and a headphone "RP-HC100" contained in one and the same packing case.
- So the new parts are those packed in and named below.
- For information of others than those packed in, refer to both the SL-S230 Service Manual and the RP-HC100 Service Manual.
- All parts are supplied by MESA.


Colour

(S) Silver Type

Area

(P) U.S.A.

■ Packaging

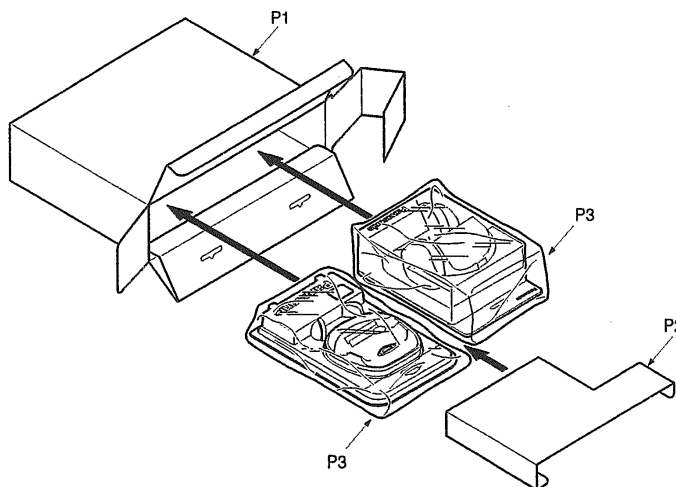

■ Replacement Parts List

Ref. No.	Parts No.	Part Name & Description	Remarks
PACKING MATERIALS			
P1	RFX1862	GIFT BOX	
P2	RFX1863	PARTITION	
P3	RFX1864	POLYETHYLENE COVER	

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic®

© 1998 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying
and distribution is a violation of law.

Printed in Japan
F980801200KH