# Service Manual

Portable CD Player



SL-SK434EB SL-SK434EG

Colour

(S).....Silver Type

(D).....Orange Type (EG only)

Please use this manual together with the service manual for Model No. SL-SX428EB Order No. AD0403014C8.

#### ♠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

#### 1 Note

• This simplified service manual is provided to indicate the differences between the original model No. SL-SX428EB and the subsequent model No. SL-SK434EB, SL-SK434EG.

© 2004 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

## 2 Replacement Parts List

#### Note:

• Important safety notice:

Components identified by  $\triangle$  mark have special characteristics important for safety.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

• All parts are supplied by SPC.

#### 2.1. Cabinet Parts

Ref.No.	Change of Parts No.			Part Name & Description	Remarks
	SL-SX428EB	SL-SK434EB	SL-SK434EG		
14	RYF0702C-S	RYF0702F-S	RYF0702F-S	CD LID UNIT	
25	RGN2675-H	RGN2718-H		NAME PLATE	<b>A</b>
25	RGN2675-H		RGN2717-H	NAME PLATE	<b>A</b>

### 2.2. Accessory Parts and Packaging Parts

#### Note:

 The parenthesized indications in the Remarks columns specify the product.


(EBS): SL-SK434EB-S (EGS): SL-SK434EG-S (EGD): SL-SK434EG-D

Parts without these indications can be used for all products.

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
A1	L0BAB0000185	STEREO EARPHONES	1	
A2	RFC0080-X	SPLASH POUCH WITH SPEAKER	1	(EBS) (EGS)
A2	RFC0080-D	SPLASH POUCH WITH SPEAKER	1	(EGD)
A3	RFEA435B-S	AC ADAPTOR	1	⚠ (EBS)
A3	RFEA431E-S	AC ADAPTOR	1	⚠ (EGS)(EGD)
A4	RQT7654-B	O/I BOOK	1	English

Ref.	Part No.	Part Name & Description	Pcs	Remarks
<b>A</b> 5	RQT7657-E	O/I BOOK	1	(EGS) (EGD) Germany Italian French Swedish Netherlands Danish Spanish Polish Czech Russian Portuguese
P1	RPF0111-2	PROTECTION BAG	1	
P2	RPK2161	GIFT BOX	1	(EBS) (EGS)
P2	RPK2171	GIFT BOX	1	(EGD)
P3	RPQ1768	PAD 1	1	
P4	RPQ1779	PAD 2	1	
P5	RPQ1780	вох	1	

# 3 Packaging

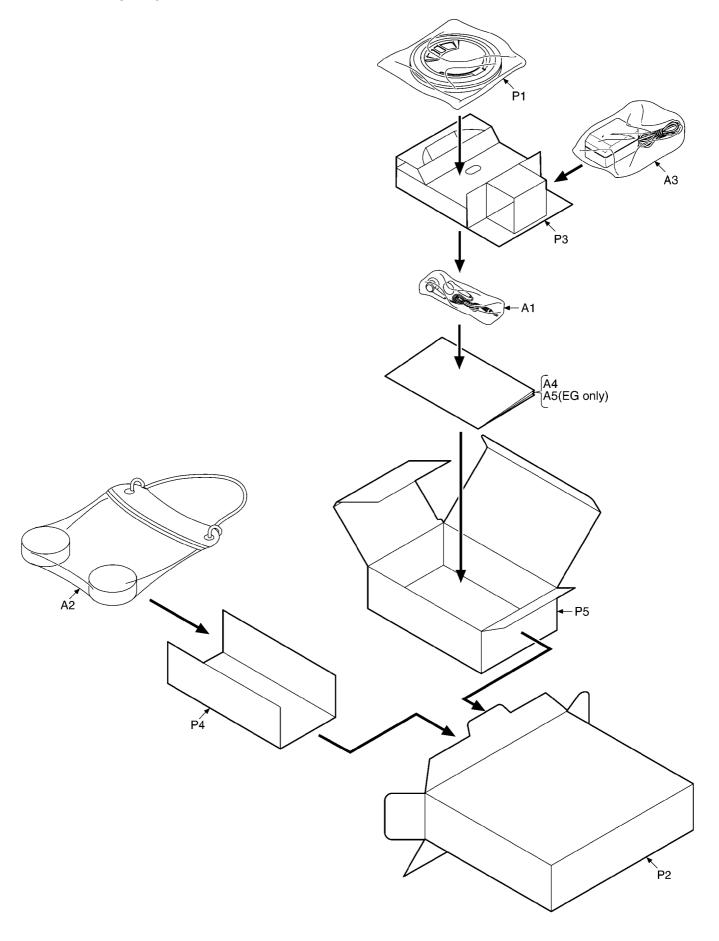

3

K0404YH/HM