

Service Manual

Portable CD Player



SL-SX320EG

Colour

(Y).....Yellow Type

Subject : Addition of colour.

Please use this supplement manual together with the service manual for Model No.SL-SX320EG, Order No.AD0302047C2.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

1 Change of Replacement Parts List

Note:

*Mentioned in this parts list is only those different from Model No. SL-SX320EG-S.

All other parts are the same as for SL-SX320EG-S.

Ref. No.	Change of Part No.		Part Name & Description	Remarks
	SL-SX320EG-S	SL-SX320EG-Y		
CABINET AND CHASSIS				
1-1	RMG0605-K	RMG0605-K1	FLOATING RUBBER	
3	RJC93038-2	RJC93038-3	BATTERY TERMINAL	
4	RKS0376-A	RKS0376-H	BOTTOM CABINET	
9	RGD0094-S	RGD0094-Y	CD LID	
10	RGK1626-A	RGK1626-S	ORNAMENT RING	
11	RGP0995-A	RGP0995-D	LCD PANEL	
13	RGU2191-A	RGU2191-S	OPERATION BUTTON B	
14	RMR1521-H	RMR1521-Y	LID COVER	
19	RKK0171-A	RKK0171-H	BATTERY LID	
20	RKM0482A-A	RKM0482A-H	MIDDLE CABINET	
IC				
IC301	C2BBFD000409	C2BBFD000453	IC	
PACKAGING				
P5	RPK1909	RPK1961	GIFT BOX	
P7	RPQ1529	RPQ1600	PAD	
SWITCH				
S202	RSP1A024-A	K0L1BB000025	SW, REST DET.	

Panasonic

© 2003 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

2 Change of Packaging

- The form of P7 pad is changed.

