

Service
Service
Service



Service Manual



CONTENTS

Circuit diagram - CD part
Power & AMP part
Audio part

PCB Layout diagram - top view
bottom view

Service parts list

© Copyright 2007 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by LX 0716 Service Audio Subject to modification


GB 3141 785 31720

Version 1.0




PHILIPS


CD part

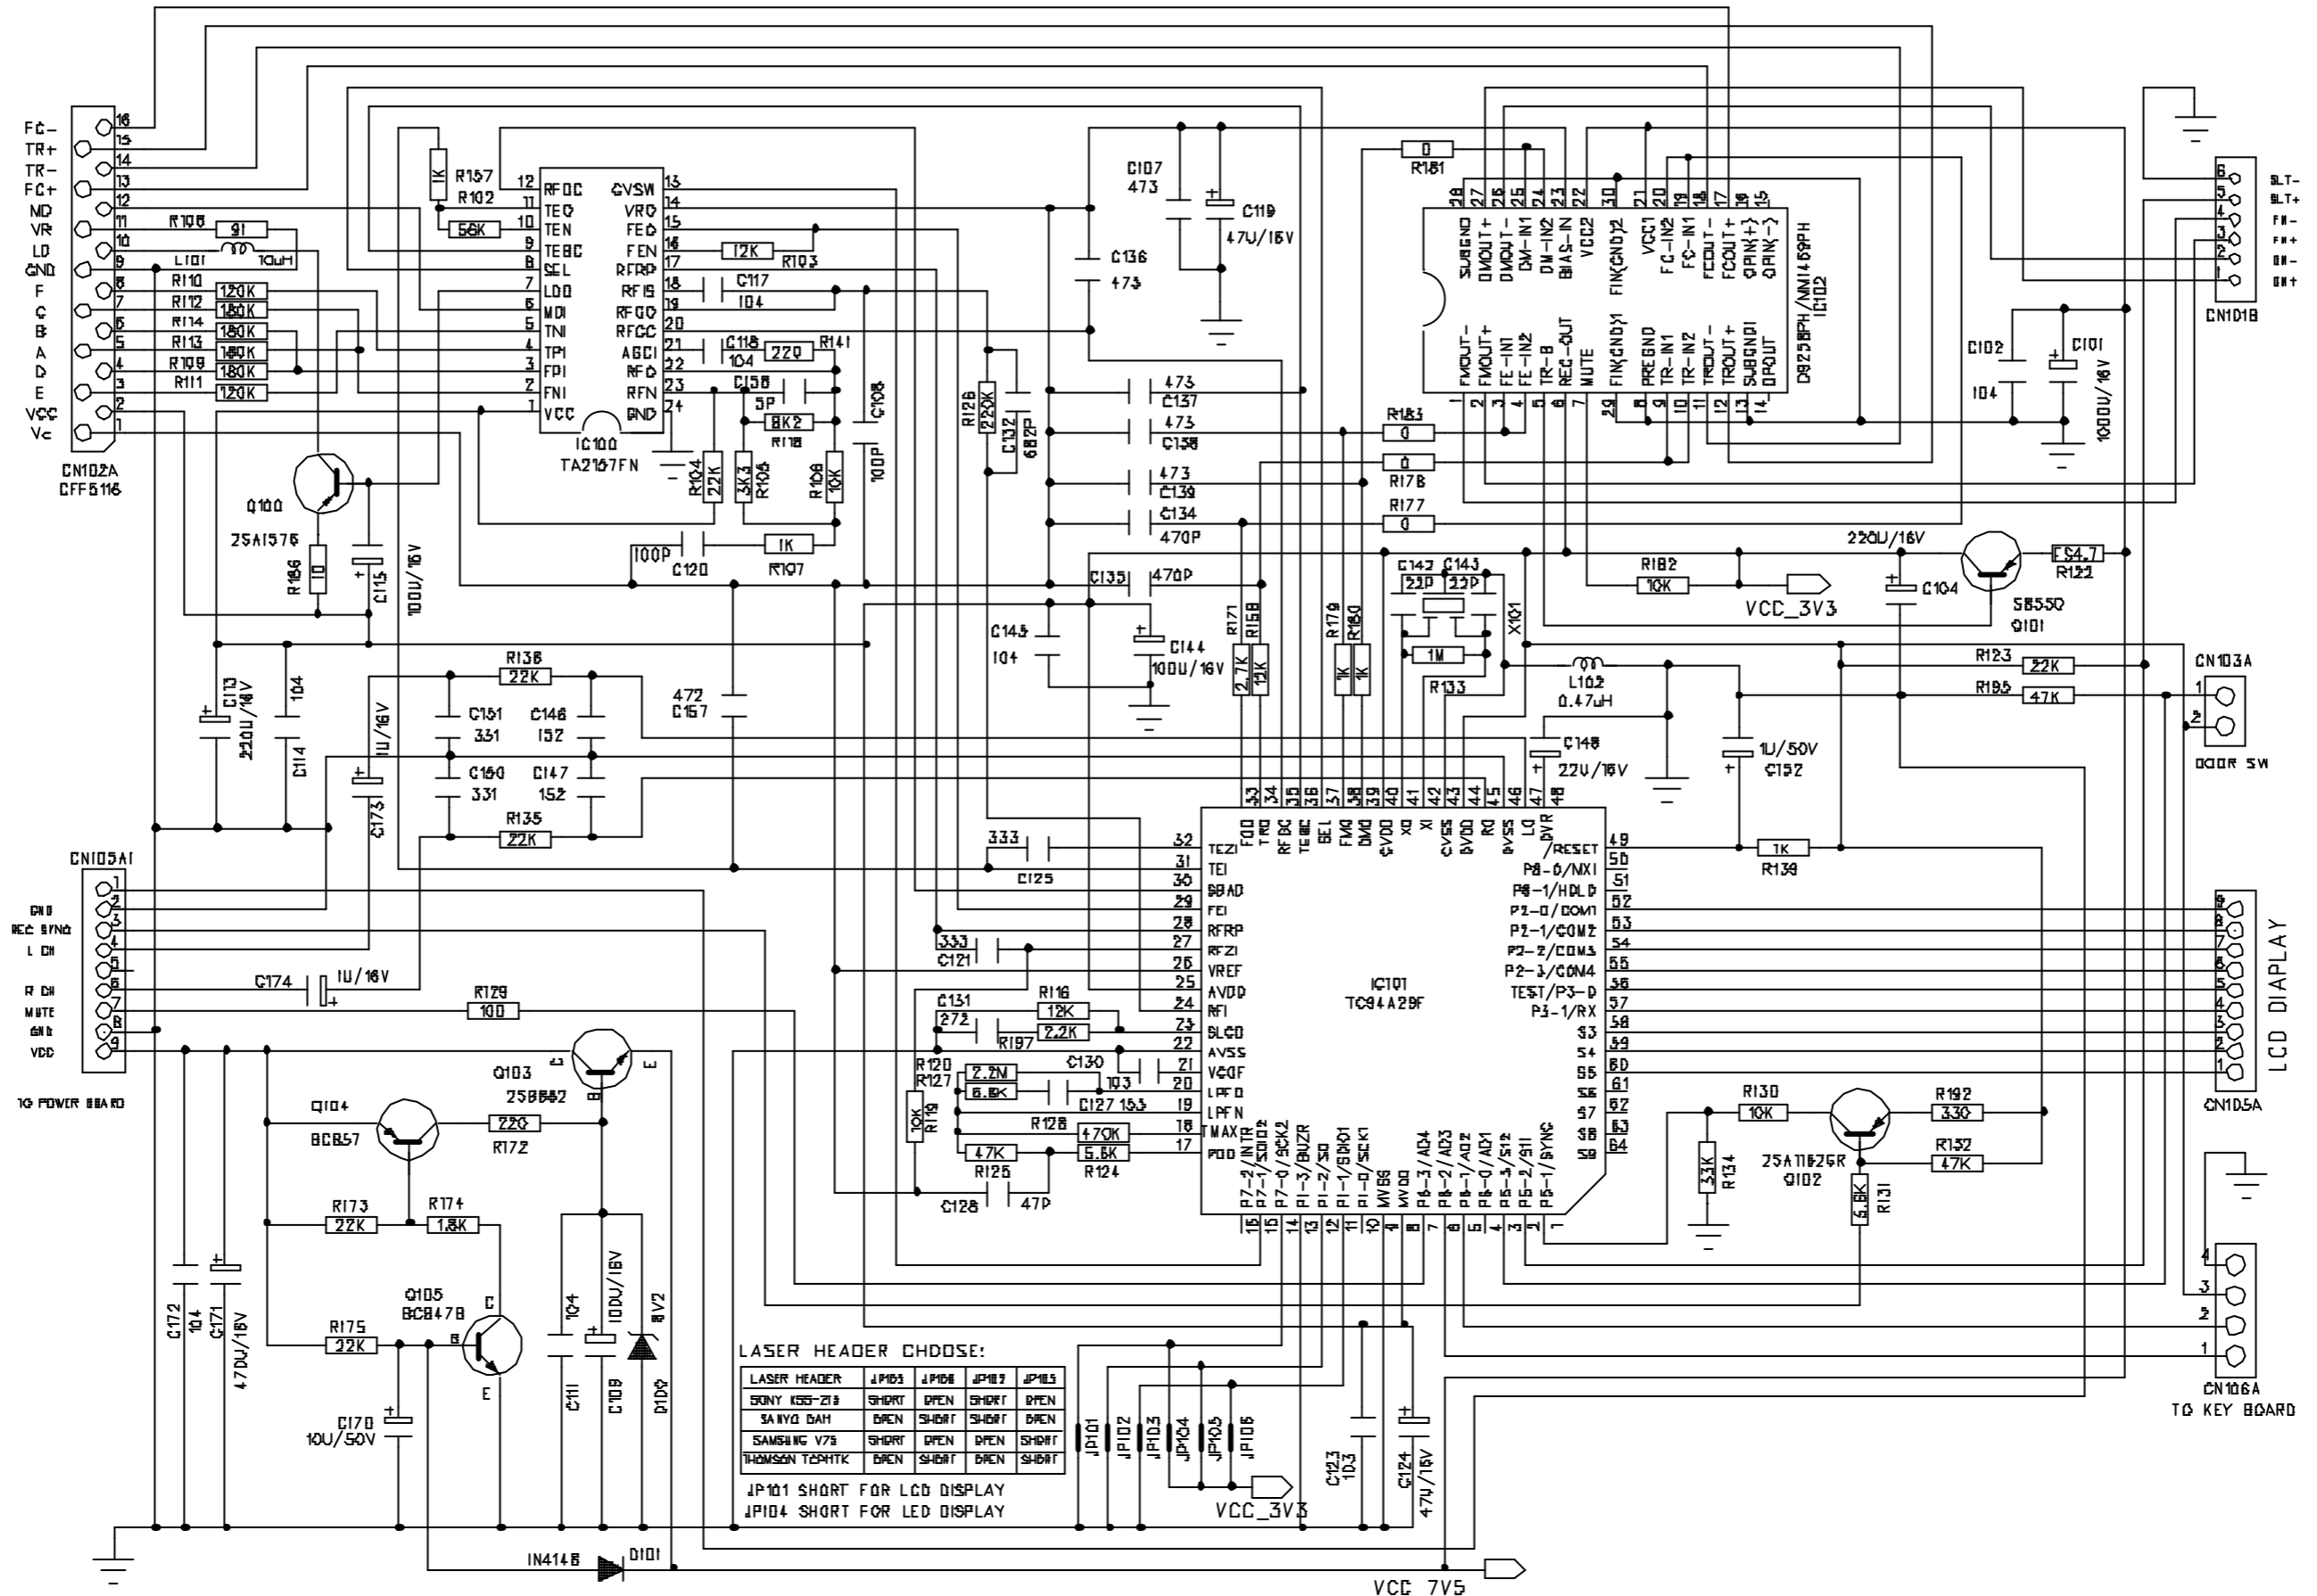


Power & AMP part

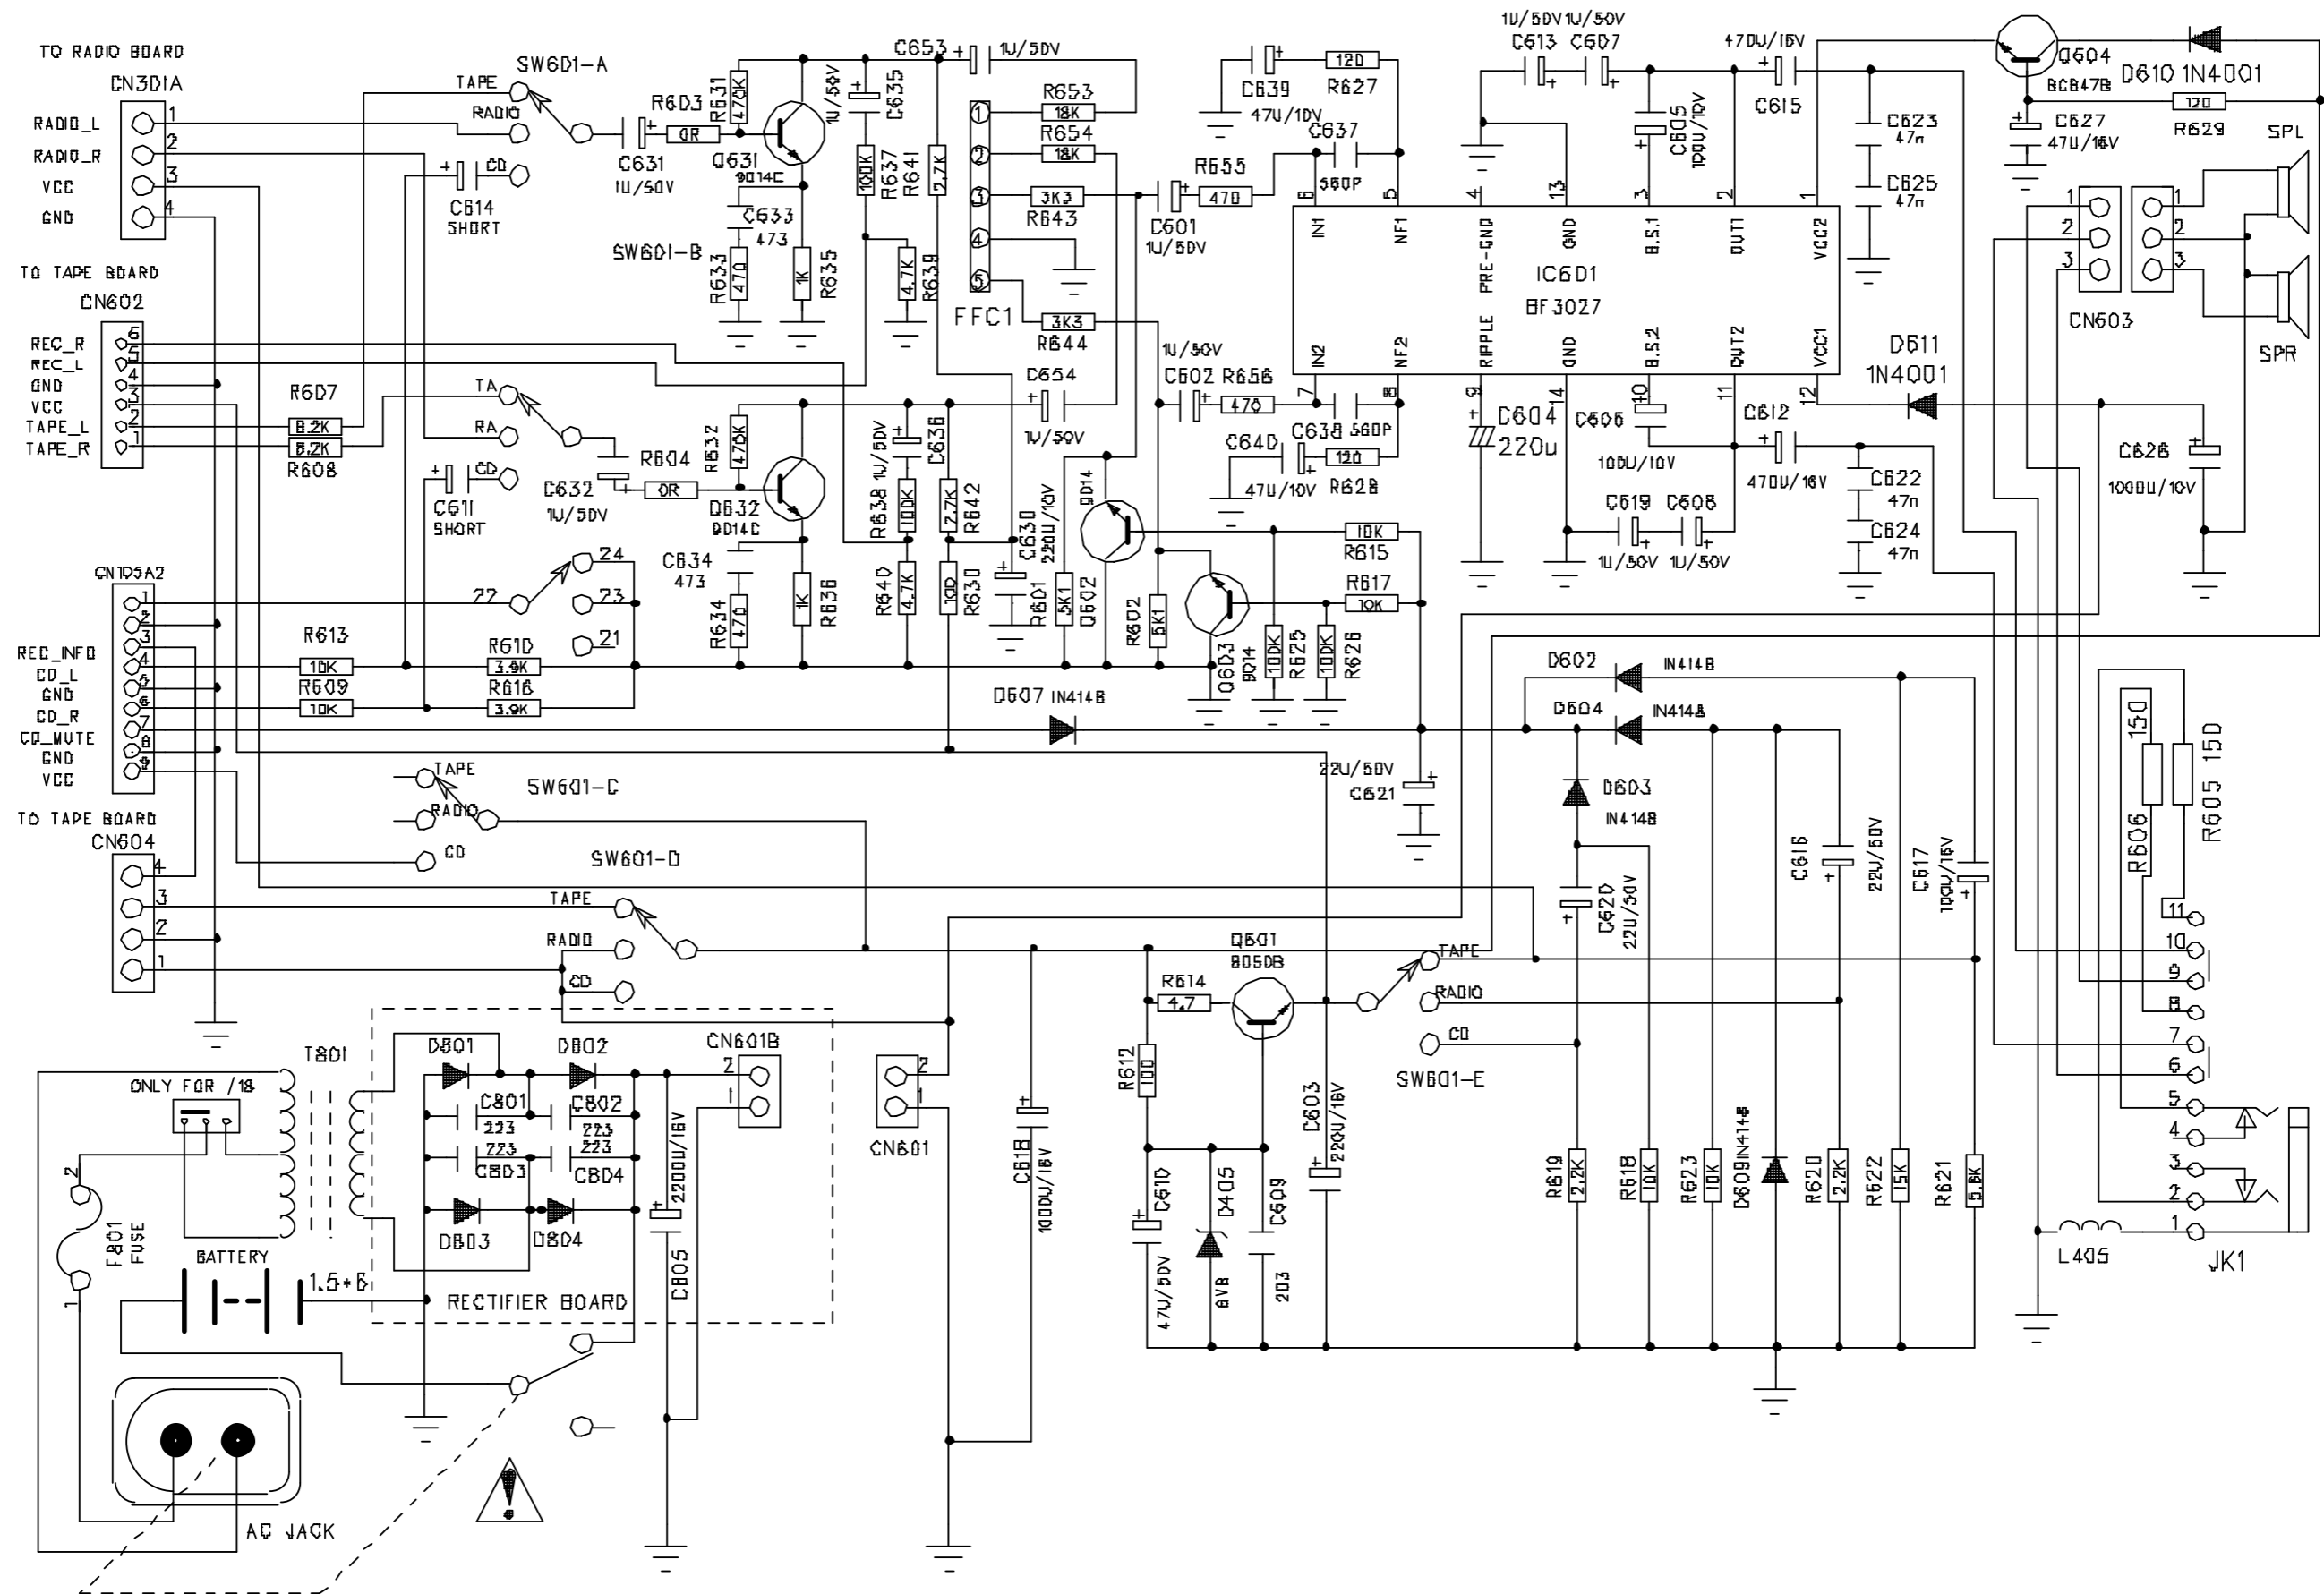


Radio part

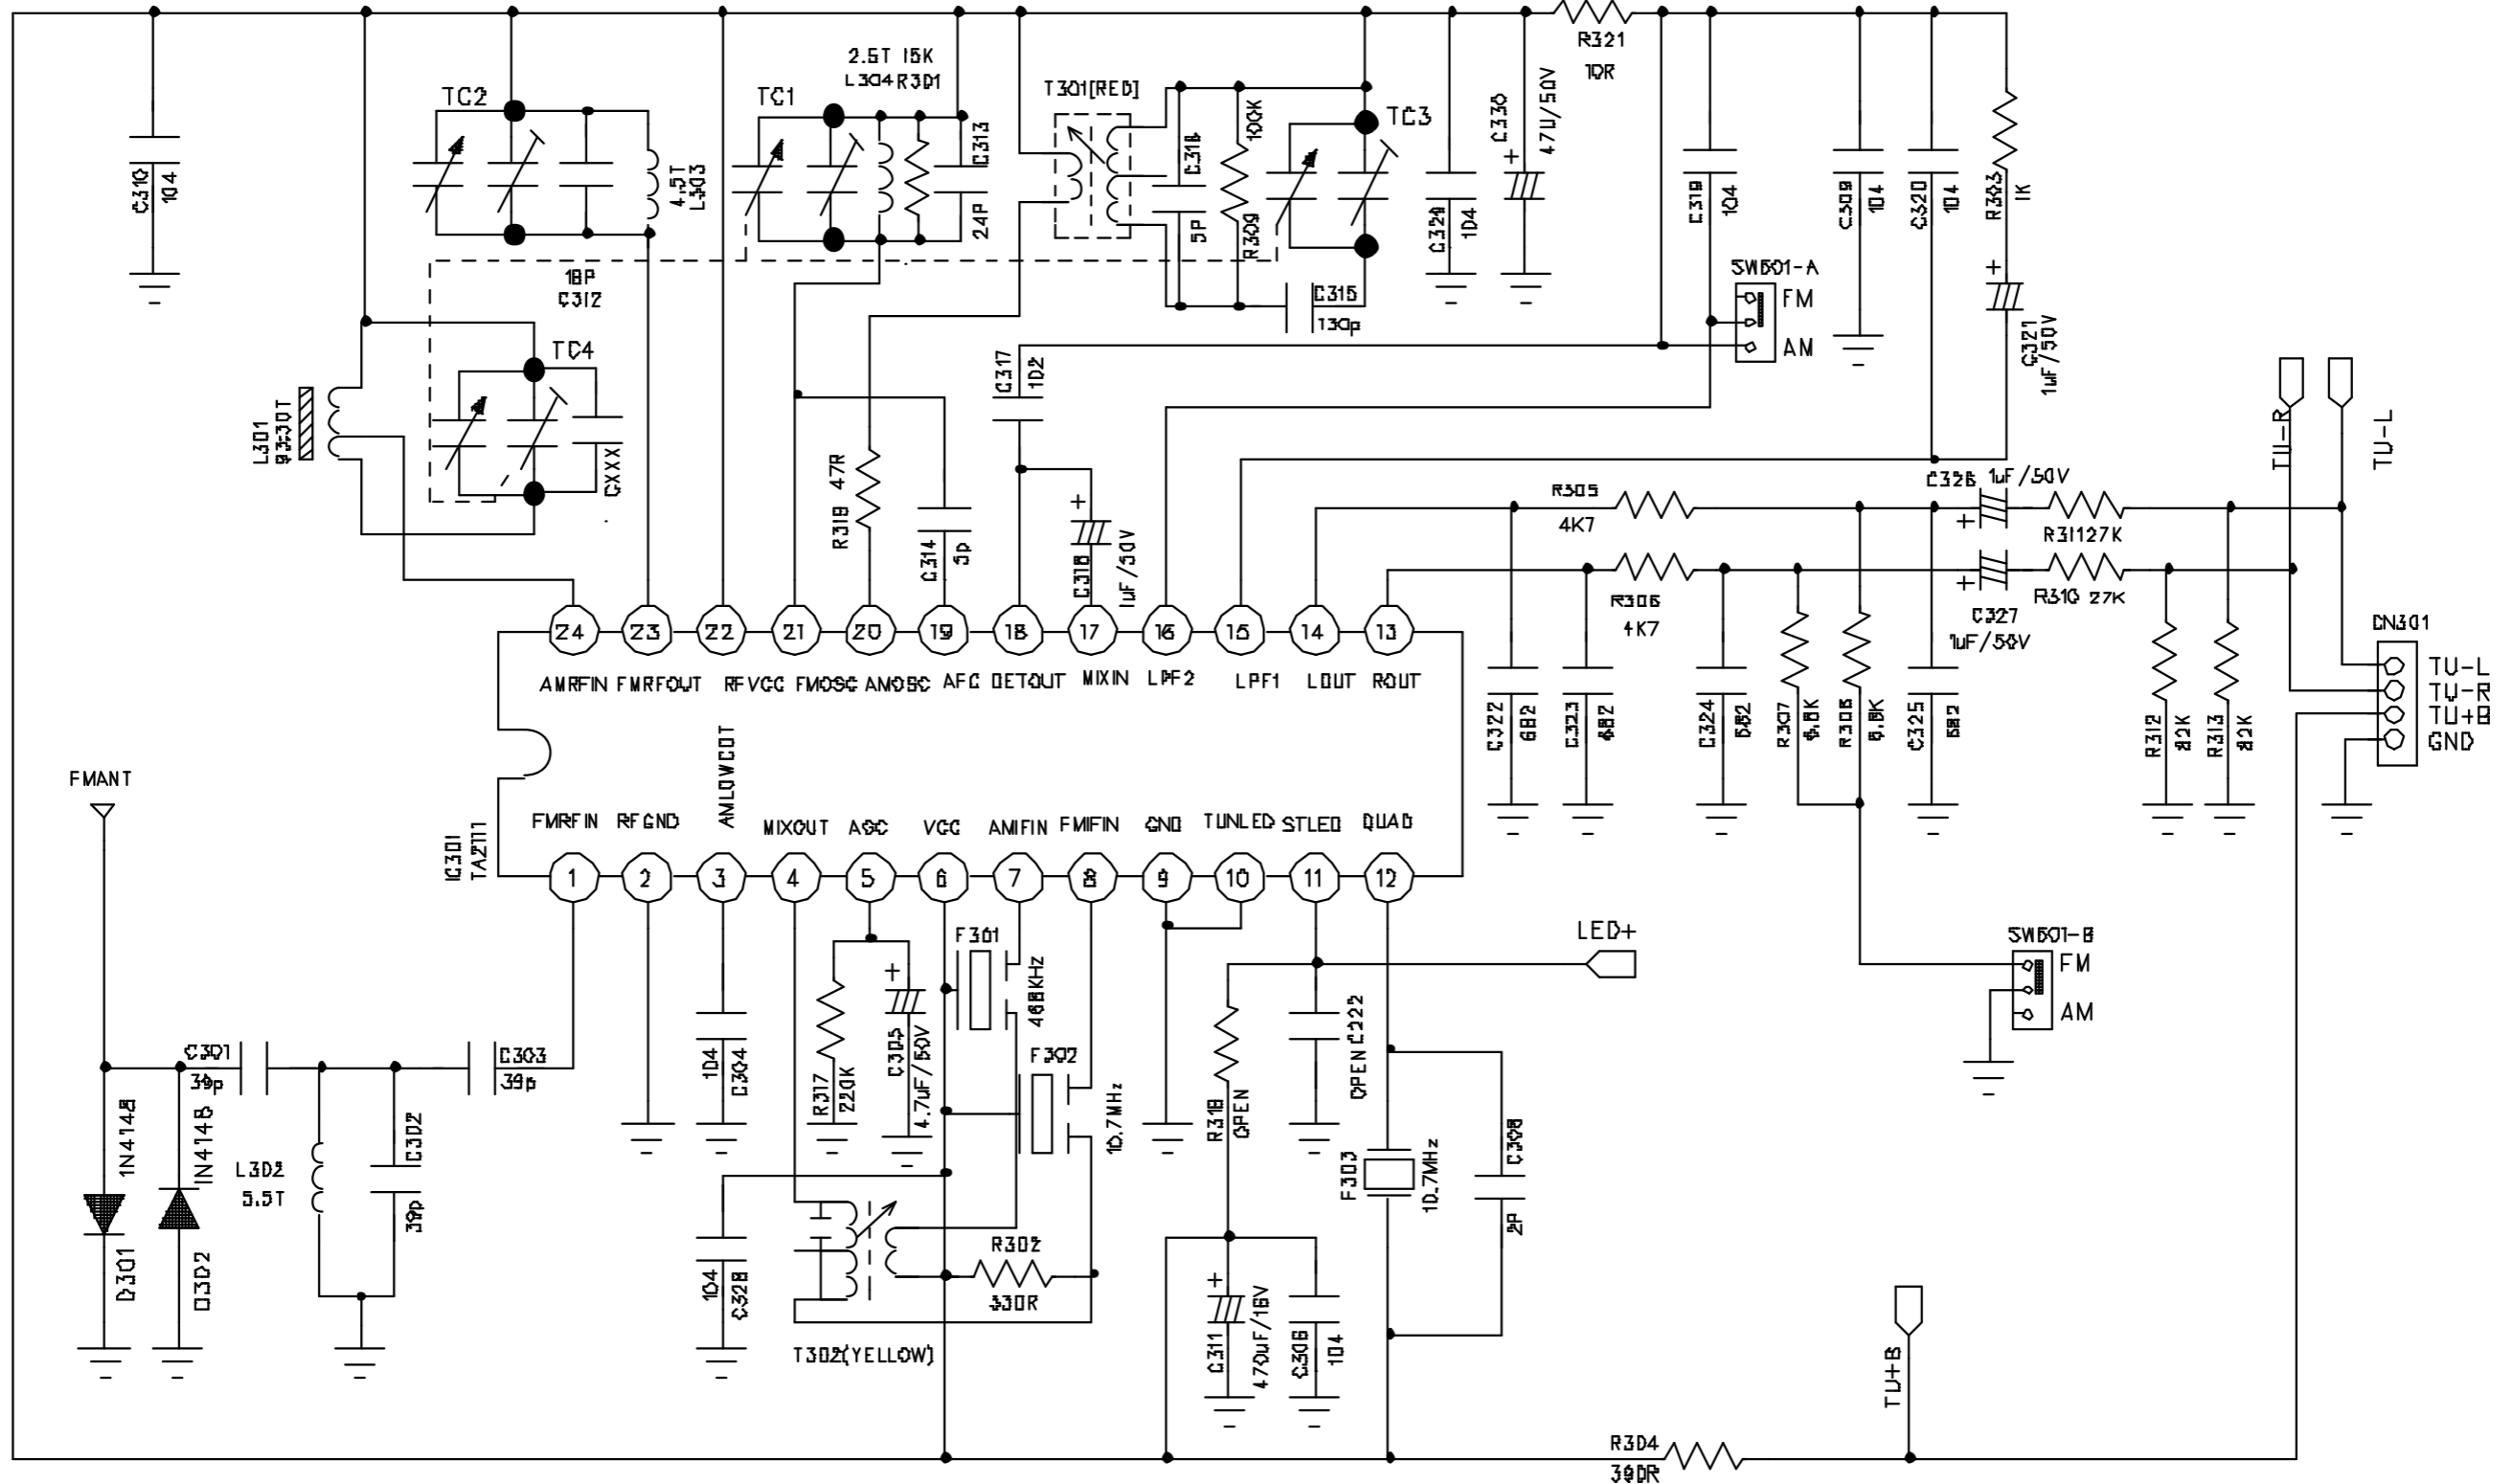

	C322, C323	C324, C325
/17 /37	103	822
OTHERS	153	103

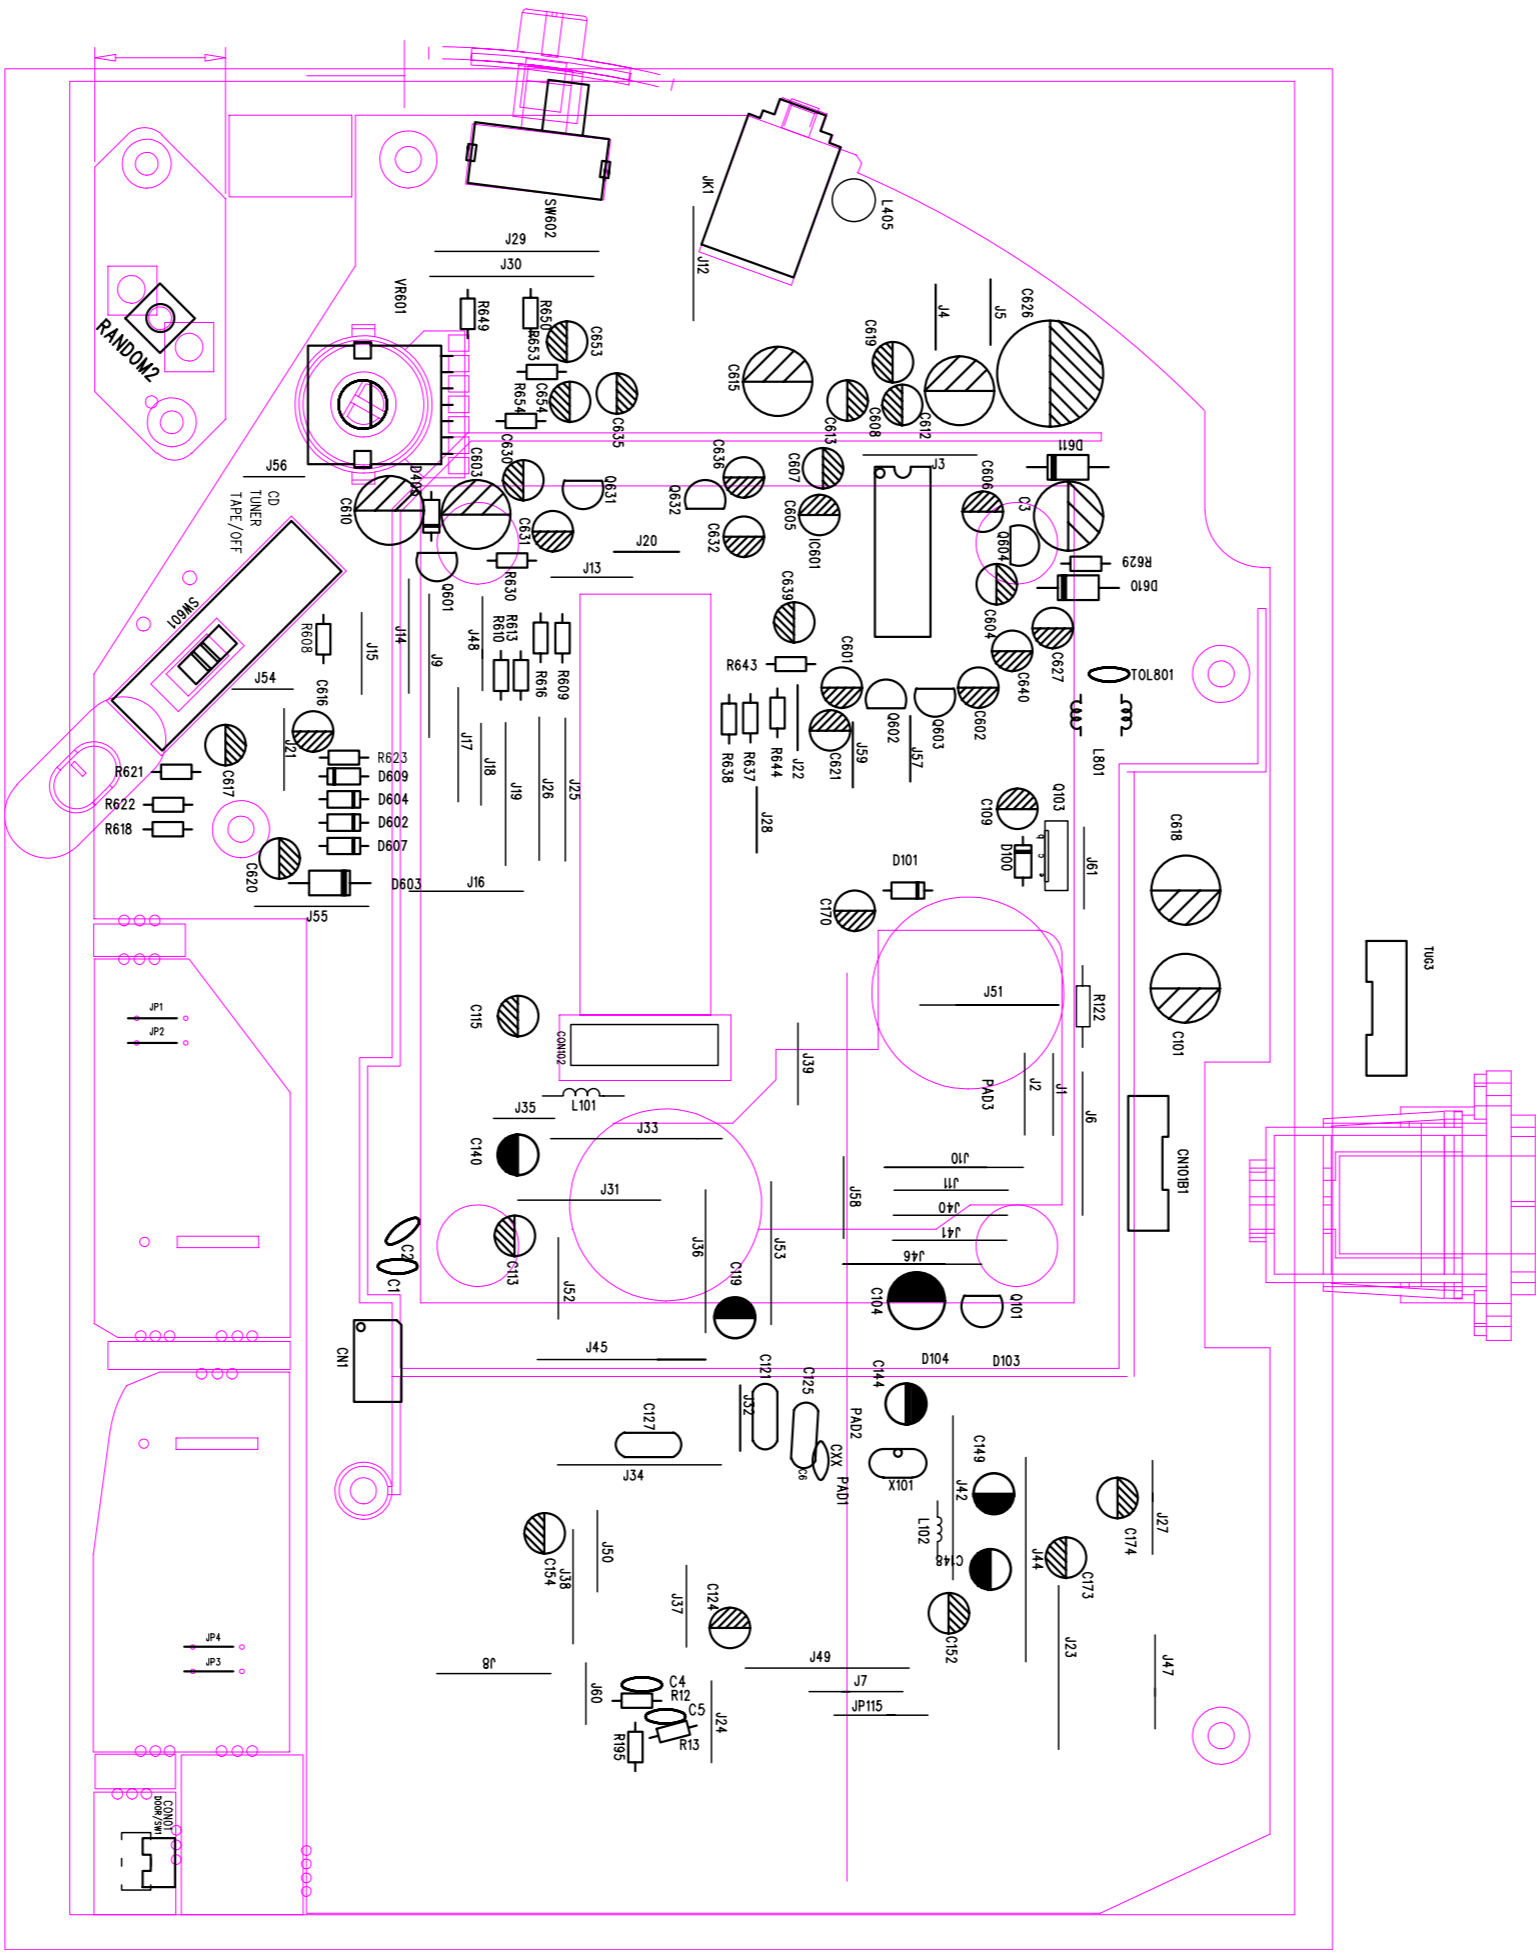

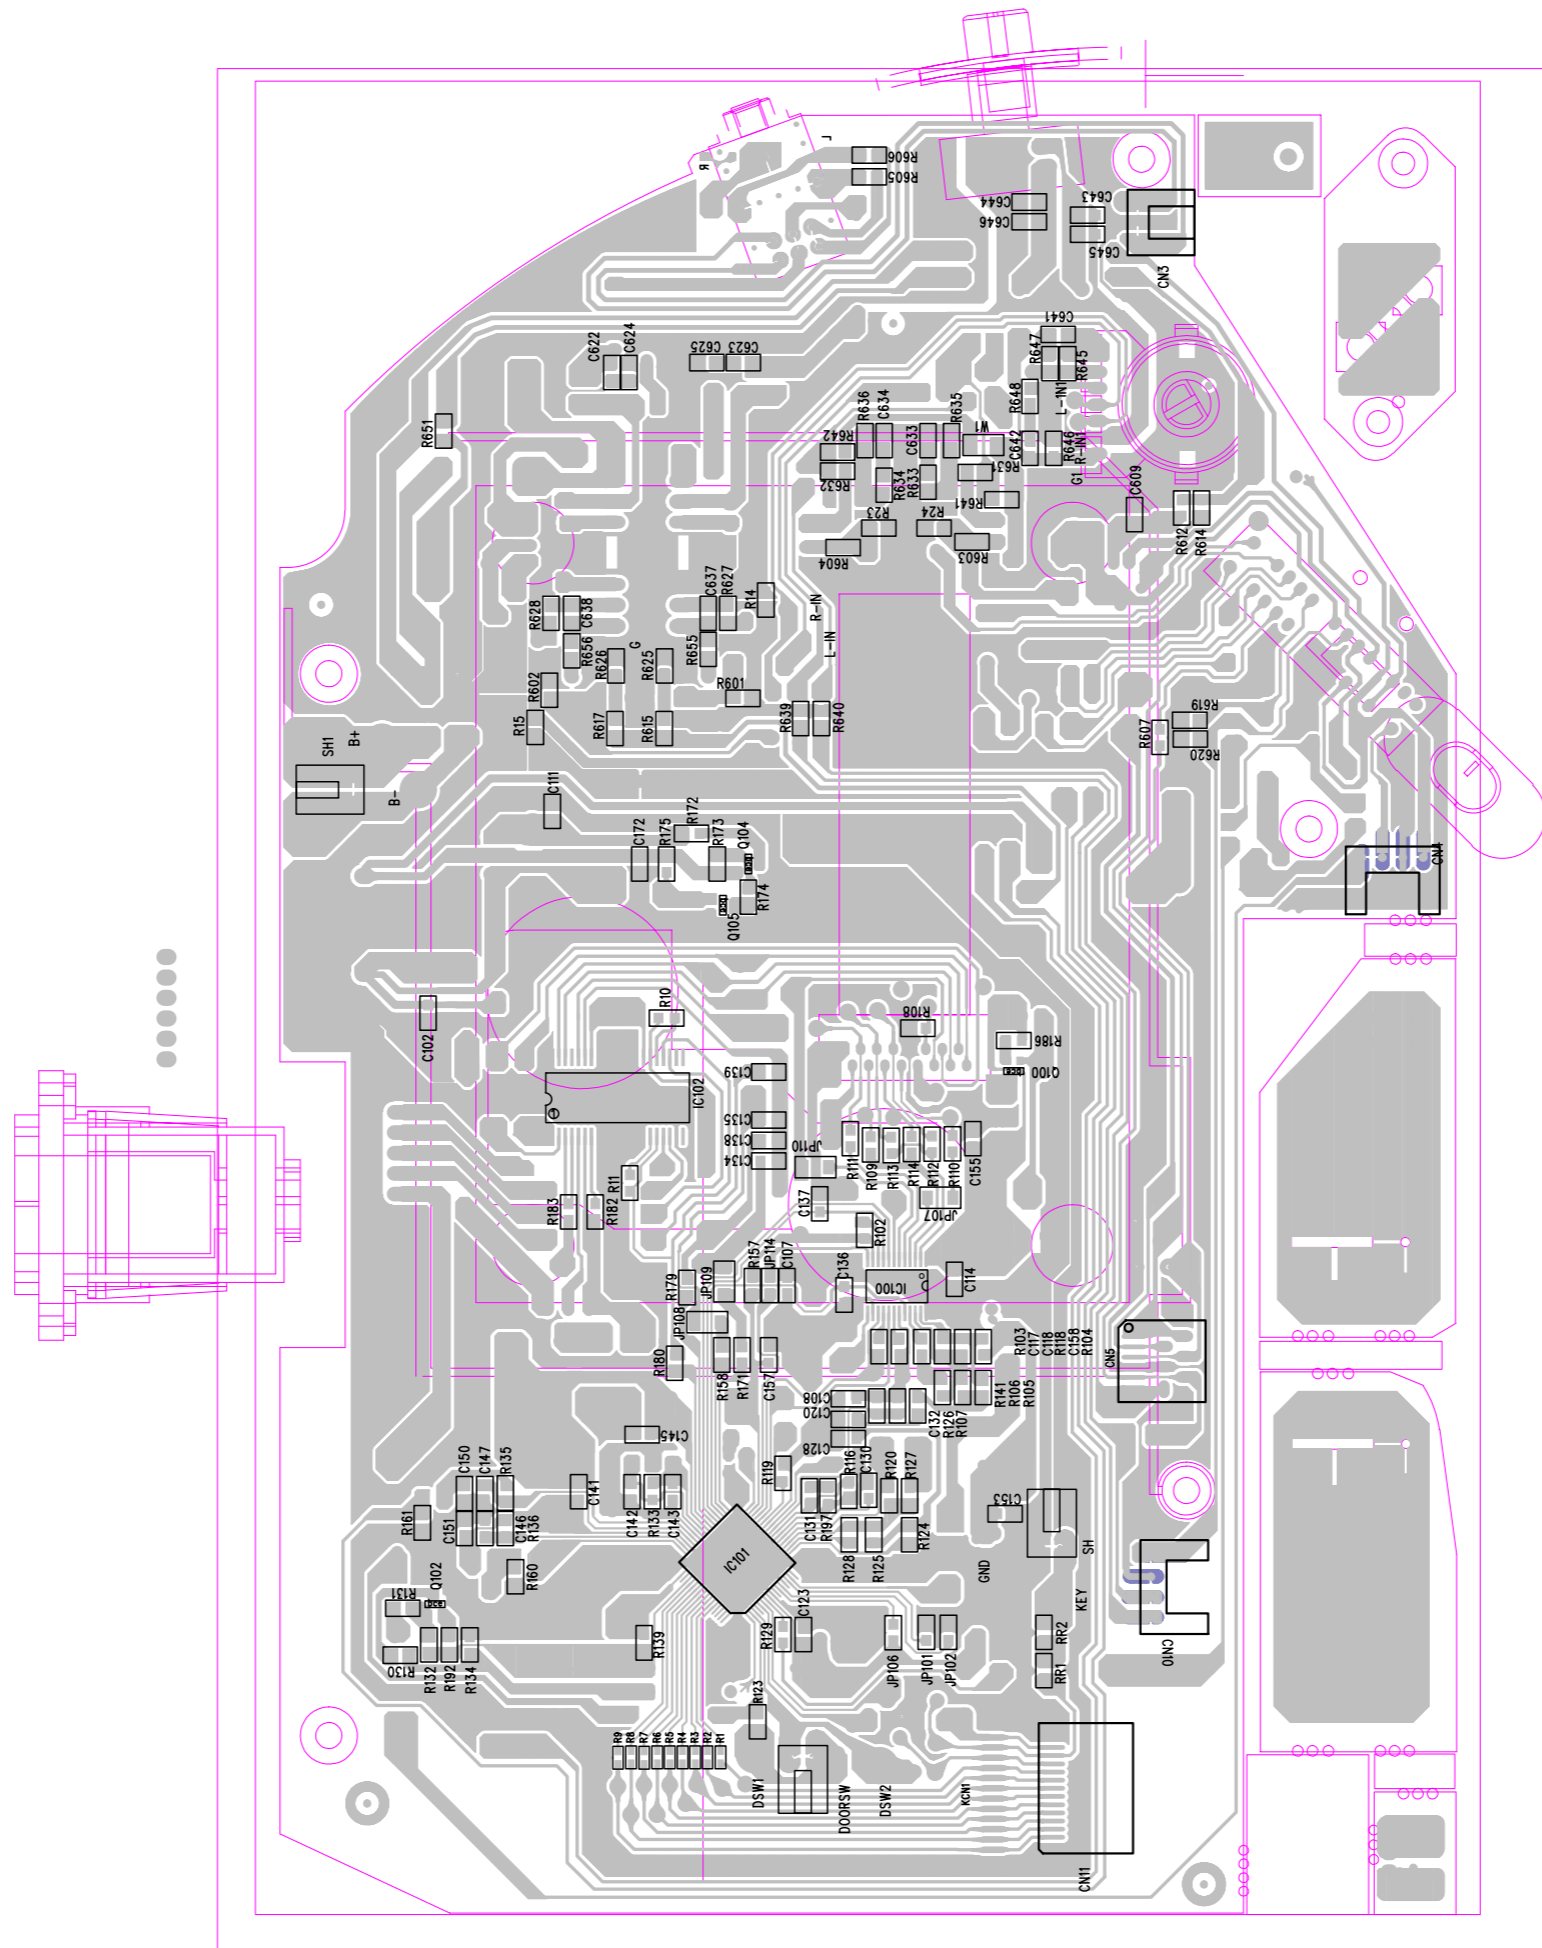

SPARE PARTS LIST FOR -/61

11	996510002001	BATTERY DOOR
12	996510003633	FM ANTENNA
13	996510003634	CD DOOR SPRING
14	996510002000	HANDLE
15	996510001999	CD MECHANISM COVER
16	996510001998	CD DOOR
17	996510001994	CASS DOOR GEAR
18	996510001995	CASS DOOR GEAR HOLDER
20	996510001997	CASS DOOR
21	996510001991	POWER TRANSFORMER (T41-0584)
22	996510001992	CASSDECK VW-21 AZ1022(PHILIPS)
23	996510001989	P.C.B AZ-1022/12 TUNER BD.
34	996510001990	P.C.B AZ-1022/12 MAIN BD.
ACC	994000001745	POWER CORD SET (BLACK) VDE
CDM	996510003632	CD MECHANISM

SPARE PARTS LIST FOR -/93

A	996510001989	P.C.B AZ-1022/12 TUNER BD.
B	996510001990	P.C.B AZ-1022/12 MAIN BD.
C	996510001991	POWER TRANSFORMER (T41-0584)
D	996510001992	CASSDECK VW-21 AZ1022(PHILIPS)
E	996510001993	P.C.BAZ-102-018-11 RECORDINGBD
F	996510001994	CASS DOOR GEAR
G	996510001995	CASS DOOR GEAR HOLDER
H	996510001996	CASSETE DOOR LENS
I	996510001997	CASS DOOR
J	996510001998	CD DOOR
K	996510001999	CD MECHANISM COVER
L	996510002000	HANDLE
M	996510002001	BATTERY DOOR

Notes: Only these parts mentioned in the list are normal service parts.