


Service
Service
Service

00/01/05/07/10/30

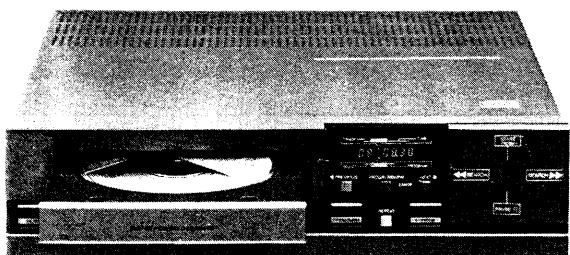

35 491 A12.

Service Manual

COMPACT
disc
DIGITAL AUDIO

CONTENTS

1. Elucidation on the lay-out and table of contents per page.
2. Control buttons and technical specification.
3. Servicing hints.
4. Measurements and adjustments.
5. Exploded views and parts lists of mechanical parts.
6. Block diagram, circuit diagrams, data on PCBs, parts lists of electrical parts and wiring diagram.
7. Faultfinding method.
8. Modifications.
9. Additional information.

554

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

CLASS 1
LASER PRODUCT

3122 110 03420



1. ELUCIDATION ON THE LAYOUT OF THE DOCUMENTATION

The documentation consists of chapters.

The number of the chapter is indicated by the first digit of the page number.

The second digit of the page number is the sequence numbering.

If modifications or supplements require new supplementary or replacement pages, the page number is extended with a third part:

A digit behind the page number indicates that it concerns a supplementary page.

A replacement page is indicated by a letter behind the page number.

Example

3-6 is page 6 of chapter 3

3-6-1 is a supplementary page behind page 3-6

3-6-a is the replacement page of page 3-6 (so page 3-6 can be removed from the documentation).

All pages are provided with a date of issue.

TABLE OF CONTENTS PER PAGE

Chapter	Page	Contents		Chapter	Page	Contents		
1	1-1	Elucidation on the lay-out of the documentation		6	6-7	Servo PCB Parts list		
	1-2-a	Table of contents per page	A84-143		6-8	Servo PCB Parts list		
2	2-1	Control buttons			6-9	Circuit diagram servo Circuit (part 2)		
	2-2	Technical specification			6-9-1	Circuit diagram servo Circuit (part 1)	A84-143	
3	3-1-a	Servicing hints	A84-143		6-9-2	Servo PCB Parts list	A84-143	
	3-2-a	Initiating the service loops	A84-143		6-9-3	Servo PCB Parts list	A84-143	
		List of service aids			6-9-4	Circuit diagram servo Circuit (part 2)	A84-143	
		Demounting the top cover			6-10	Circuit diagram decoding Circuit (part 1)		
		Demounting the bottom plate			6-11	Decoding PCB Parts list		
		Replacing glass fuse 1451			6-12	Decoding PCB Parts list		
		Replacing the transformer fuse			6-13	Circuit diagram Decoding circuit (part 2)		
		Servicing the front			6-14	Circuit diagram Tray control PCB Parts list		
		Demounting the micropro- cessor and display PCB			6-14-1	Circuit diagram Tray control PCB Parts list	A84-143	
	3-3	Servicing the supply PCB			6-15	Wiring diagram		
		Servicing the servo and de- coder PCB			6-15-1	Wiring diagram	A84-143	
		Servicing the tray mechanism			6-16	Wiring diagram for CD104/01 List of standard symbols List of chip components		
4	4-1-a	Mechanical measurements and adjustments to be per- formed on the CDM	A84-143		7	7-1-a	Faultfinding method	A84-143
		Mechanical adjustments of the tray mechanism			7-2-a	Faultfinding method	A84-143	
	4-2-a	Specification measurement	A84-143		7-3-a	Faultfinding method	A84-143	
		Changing the transformer connections			7-4-a	Faultfinding method	A84-143	
		Laser power supply (POS. VOLT. SH.)			7-5-a	Faultfinding method	A84-143	
		Checking and adjusting			7-6	Faultfinding method		
		Adjusting the focus band- width			7-7	Faultfinding method		
		Check of the AGC and off- set circuits			7-8-a	Faultfinding method	A84-143	
5	5-1-a	Exploded view tray	A84-143		8	8-1	Sheet changes	A84-143
		Parts list of mechanical parts			8-2	Component changes	A84-143	
	5-2-a	Exploded view cabinet	A84-143		8-3	Component changes	A84-143	
6	6-1-a	Block diagram	A84-143					
	6-2-a	Circuit diagram of the power supply	A84-143					
	6-3-a	Power supply PCBs	A84-143					
		Parts list						
		Mains filter circuit						
	6-4-a	Circuit diagram of the control and display circuit	A84-143					
	6-5-a	Control and display PCBs	A84-143					
		Parts list						
	6-6	Circuit diagram servo Circuit (part 1)						

2. CONTROL BUTTONS

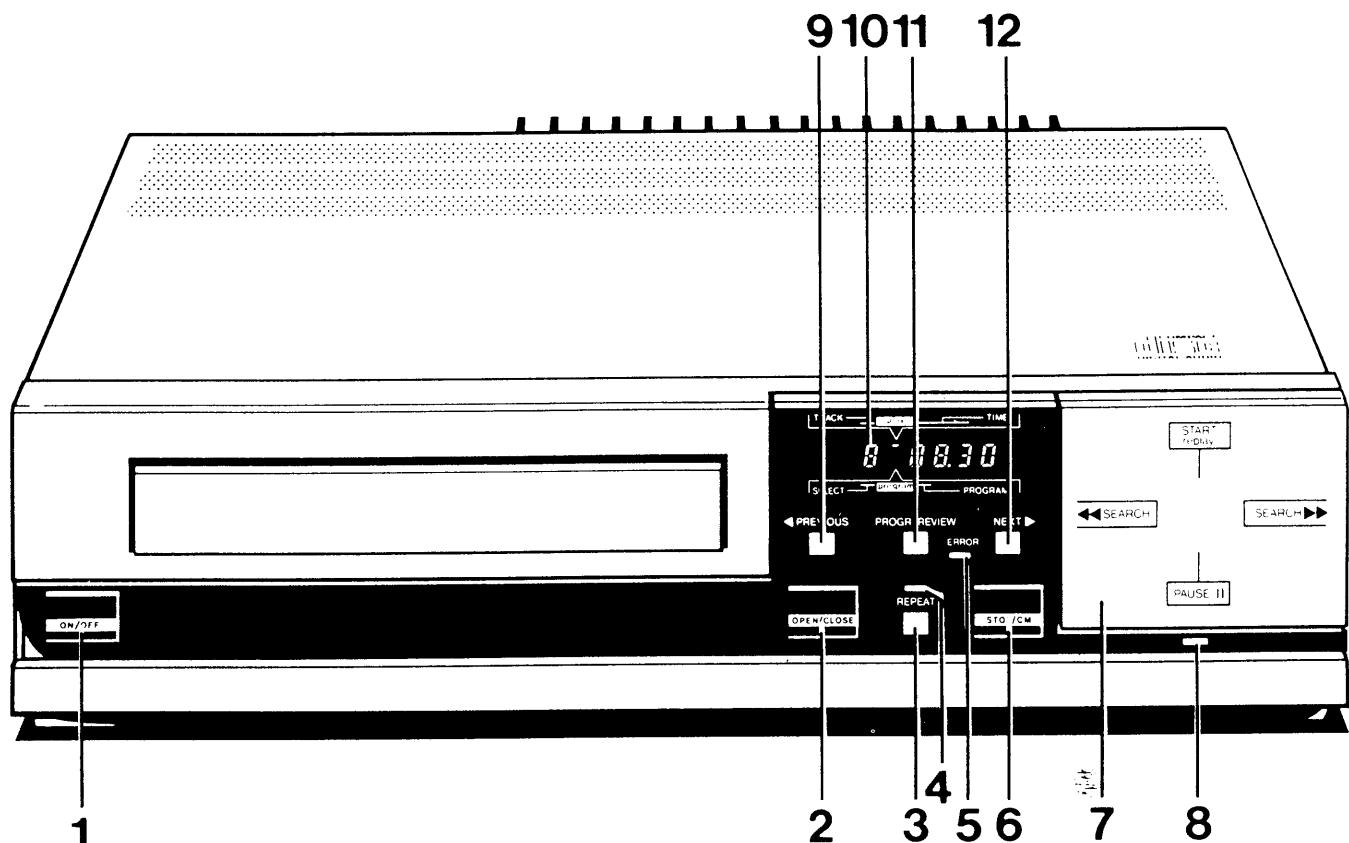


Fig. 1

36 010A

1. 'ON/OFF' key: for switching the player on and off
2. 'OPEN/CLOSE' key: for opening and closing the tray
3. 'REPEAT' key: for repeating a disc or a program
4. 'REPEAT' LED: comes on when you press the REPEAT key
5. 'ERROR' LED: flashes when you make an operating or programming error
6. 'STOP/CM' key: for stopping the playback process prematurely ('STOP') and for clearing a programme ('CM' = Clear Memory)
7. Multi key: for starting playback ('START'), returning to the beginning of a number ('replay'), searching quickly for a passage ('<< SEARCH' and 'SEARCH >>') and holding the beginning of a number or a passage or for interrupting playback ('PAUSE')
8. 'PAUSE' LED: comes on when you depress 'PAUSE'
9. 'PREVIOUS' key: for returning to a previous number during playback and storage of a program
10. Multi-indicator: is capable of showing, after insertion of the disc, the quantity of numbers and the total playing time and indicates, during playback, which number is being played and how much playing time of it has already passed; is used in programming to indicate the numbers you want to store, and shows the numbers stored
11. 'PROGR/REVIEW' key: for storing the numbers of a program and for displaying the program stored
12. 'NEXT' key: for passing over to the next number during playback or storage of a program

TECHNICAL SPECIFICATION

• System	: Compact Disc Digital Audio System	• Channel separation	: ≥ 86 dB
• Mains voltages	: 110 V, 127 V, 220 V, 240 V $\pm 10\%$ (to be changed by changing the transformer connections)	• Channel difference	: < 0.3 dB
	: CD104/01 110 V, 127 V, 220 V, 240 V switchable with the help of the voltage adapter	• Overall harmonic distortion	: $\leq 0.005\%$ (0 dB)
	: CD104/07 117 V (with a special transformer)	• Intermodulation-distortion	: $\leq 0.005\%$ (0 dB)
• Mains frequencies	: 50 Hz, 60 Hz (no conversion required)	• De-emphasis	: 0 or 15/50 μ s (switched by the subcode on the disc)
• Power consumption	: ≤ 30 W	• Dimensions (wxhxd)	: 320x86x300 mm (tray closed)
• Frequency range	: 20 Hz \div 20 kHz ± 0.3 dB		: 320x86x450 mm (tray opened)
• Output voltage	: max. 2 Vrms/ ≥ 2.2 k Ω	• Weight	: approx. 7 kg
• Output impedance	: ≤ 100 Ω		
• S/N ratio	: ≥ 90 dB		

The above specifications apply within a frequency range of 20 Hz \div 20 kHz

SERVICING THE SUPPLY PCB

- Remove the 2 screws E (see Fig. 3).
- When the connectors have been loosened, the supply PCB can be taken out of the set from the rear.

Attention

The Audio cable is soldered to the decoder PCB.

When mounting the supply PCB care should be taken that the PCB falls in the guiding on the frame.

SERVICING THE SERVO PCB AND THE DECODER PCB (see Fig. 3)

- Remove the top cover.
- Remove the 2 screws A on the servo PCB.
- Remove screw B and bracket C.
- Loosen the motor control PCB of the drawer by undoing the 2 screws D.
- When the servo PCB is placed in the service position (see Fig. 4) measurement can be performed on both the servo PCB and the decoder PCB (component side).
- When the decoder PCB has to be taken out of the set, remove the bottom plate and the supply PCB. Then remove the 2 screws at the component side of the decoder PCB and bracket C that is holding the decoder PCB.
- When the connectors have been unplugged, the decoder PCB can be removed.

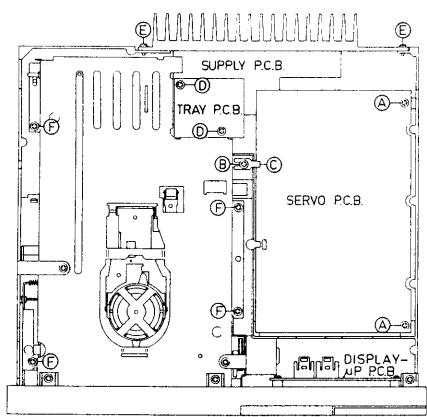


Fig. 3

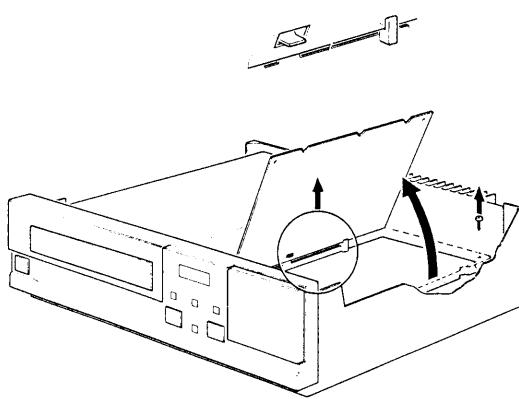


Fig. 4

SERVICING THE TRAY MECHANISM**Demounting the tray mechanism**

- Remove the top cover.
- Remove the front.
- Remove the 4 screws F (see Fig. 3).
- Loosen connectos 61 and 64 on the tray control PCB.
- The tray mechanism can now be taken out of the set.
- For repairs the tray mechanism can be made operative outside the set by fixing again connectors 61 and 64 on the drawer control PCB.
- In voltageless condition the drawer can be opened by moving the drawer forward by means of a non-scratching sharp device (for example finger nails) that is placed between front and drawer.

Attention

If, during a repair, the tray mechanism or the tray control PCB has been demounted, the set will not function. To avoid this the contacts of the tray in-end switch SK2 on the tray control PCB should be interconnected.

Replacing the disc hold-down

- See: Exploded View Tray.
- Place the disc hold-down (item 107) in its highest position (drawer opened as far as possible).
- The disc hold-down can be loosened by bending the 2 lugs on bracket item 508 apart and taking out the disc hold-down.

Replacing the tray motor

- See: Exploded View Tray.
- Demount the tray mechanism.
- Remove the belt (item 129) from the motor pulley.
- Remove the 2 screws with item no. 119.
- The motor can now be loosened.

Demounting the drawer (item 127) and lifting plate (item 513) assy

See: Exploded View Tray.

- Demount the tray mechanism.
- Remove motor bracket item 509 by undoing the 3 screws on bracket item 509.
- Remove roller item 108 by loosening the spring ring.
- Slide the tray forward and remove it.

3. SERVICING HINTS

In order to prevent loose metal objects from getting in the CD mechanism it will be necessary to see to a clean repair station.

Before the player is being used or serviced, the transportation screws should be removed.

These screws have to be reapplied after servicing.

The objective can be cleaned with a blow brush.

For servicing hints for the CD mechanism refer to Service Manuals CDM-0 and CDM-1.

Do not loosen any screws other than those mentioned in the hints.

The player consists of various MOS ICs. Since MOS ICs are generally very sensitive to overload and overvoltage, servicing operations should be performed with the utmost care. For further instructions see the information leaflet in the package of the ICs.

In the player chip components have been applied. For insertion and removal of chip components see the figure below.

The disc should always bed down well on the turntable. For this purpose a disc hold-down has been mounted in a bracket of the drawer mechanism.

When the drawer mechanism has to be demounted for repair, a loose hold-down should be employed.

The set can then function normally.

Code number of the disc hold-down is 4822 532 60906.

For adjustments that have to be performed on the lower side for which the unit should be in the position of normal end use, servicing supports are supplied. These supports can be mounted in the four holes of the frame.

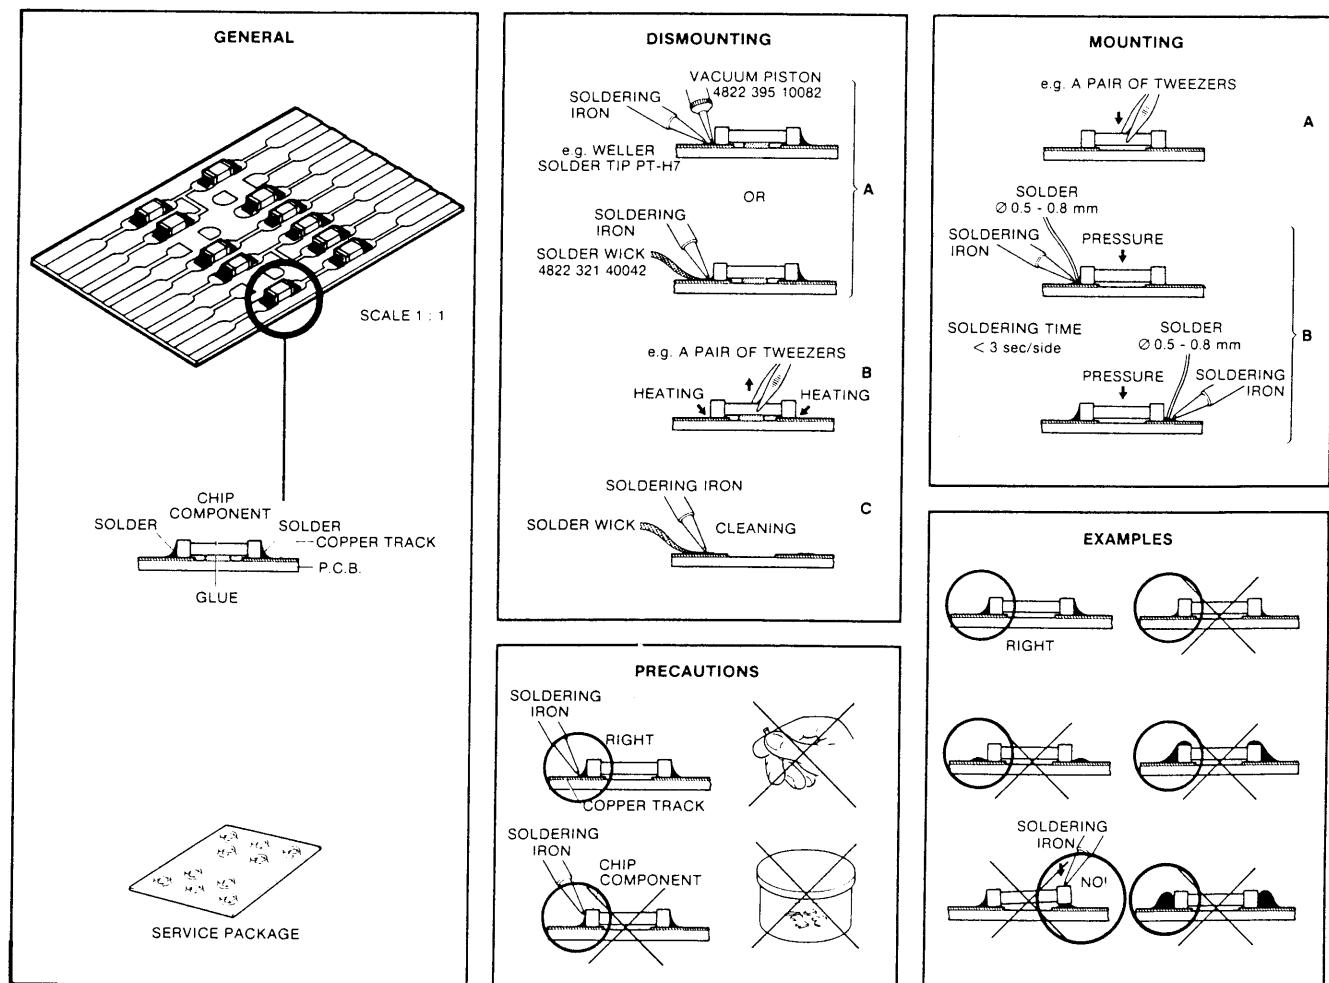


Fig. 2

The servo μ P can be set to the servicing mode to check the switch and display PCB and to separately test the servo systems.

INITIATING SERVICE LOOP A

- Put a disc on the turntable.
- Simultaneously depress the PAUSE, NEXT and STOP keys and hold them depressed while the mains voltage is switched on.
In this situation the laser and focus control are operative and the motor is running.
The light pen stays permanently under the lead-in tracks.
The radial servo system is switched off.
In this service loop the LEDs and the display can be checked as follows:
- The display will indicate 00—0102 and will increase and shift towards the left.
- If now the SEARCH REVERSE key is depressed, the REPEAT, ERROR and PAUSE LEDs will light up after two clock strokes of the display and, in the display, the play bar will light up.
The player remains in service loop A.

When the SEARCH REVERSE Key is pressed again the set returns to the previous mode.

INITIATING SERVICE LOOP B

The player can be brought from service loop A to service loop B by pressing the SEARCH FORWARD key. Now the radial servo system has been switched on independently of the P-bit and the sub-code.

In service loop B the display continues to indicate the same as in service loop A, except for the PLAY or PROGRAM bar.

The REPEAT LED will light up to indicate that the set is in service loop B.

After approx 1 minute music can be heard. (The time depends on the length of the running-in track).

From service loop B the set can be brought to the position of normal end use by pressing the START/REPLAY key while the set is displaying one of the musical numbers on the disc.

Remark:

If servo μ P MAB8440/D034 has been built in, no music can be heard after approx 1 minute.

To make this possible the MUTE line to pin 39 of the ERCO can be interrupted and be applied to the +2 power supply voltage.

SERVICE AIDS

Service supports	4822 395 30202
Audio performance test disc	4822 397 30085
Disc without local defects, disc with DO failures, black spots and finger-prints	4822 397 30096
Screwdriver set TORX	
Set straight	4822 395 50145
Set square	4822 395 50132
Disc hold down	4822 532 60906
7 th order filter	4822 395 30204

DEMOUNTING THE TOP COVER

- Remove the 4 screws in the sides.
- Remove the cover from the set by pulling it backwards.

Attention

When mounting the top cover, care should be taken that the top cover is placed correctly in the guidings of the front before mounting the four screws.

DEMOUNTING THE BOTTOM PLATE

- Remove the 3 screws in the bottom plate.
- Pick up the bottom plate at the rear of the set and pull it from the 3 fixing bosses at the front of the set.

REPLACING GLASS FUSE 1451

- Remove the bottom plate.
- Now the fuse on the mains filter PCB is accessible at the lower side via a hole in the frame.
This hole is located between the left side of the set and the Compact Disc mechanism.
When the insulating paper is unfolded the glass fuse becomes visible.

REPLACING THE TRANSFORMER FUSE

- Remove the bottom plate.
- Remove the plastic cap covering the underside of the transformer.
- The transformer fuse is now accessible.
- Replace the screening cap once the fuse has been replaced.

SERVICING THE FRONT

Demounting the front.

- Remove the top cover.
- Remove the 3 fixing screws at the upper side and the 3 screws at the lower side of the front.
- The front can now be removed from the set by pulling it forwards.
- When the two plugs are removed from the connectors on the operating panel the front can be removed from the set.

Demounting the microprocessor and display PCBs

This is in fact one PCB made up of 2 loose PCBs that are interconnected with ribbon cables.

The microprocessor PCB can be demounted by removing the 2 screws.

When this PCB is turned over, the conductor side of the display PCB becomes visible.

The display PCB can be loosened by undoing the 5 screws on this PCB.

Attention

Some buttons now lie loose in the front. The multi-function button can be demounted by removing the clamping ring at the rear of the front and by undoing the 4 snap connections.

4. MECHANICAL MEASUREMENTS AND ADJUSTMENTS

MECHANICAL MEASUREMENTS AND ADJUSTMENTS TO BE PERFORMED ON THE CDM

- For checking and adjusting the angle setting see the Service Manual of the C.D.M.
- In case of adjustment of the height of the turntable by means of the set screw on the motor shaft, the voltage across resistor 3240 on the servo PCB should be set to 0 Volt.

Note:

For checking and adjusting the angle setting the drawer mechanism has to be demounted.
See sub servicing hints.

MECHANICAL ADJUSTMENTS OF THE TRAY MECHANISM

Adjusting the clearance of the disc (see Fig. 5)

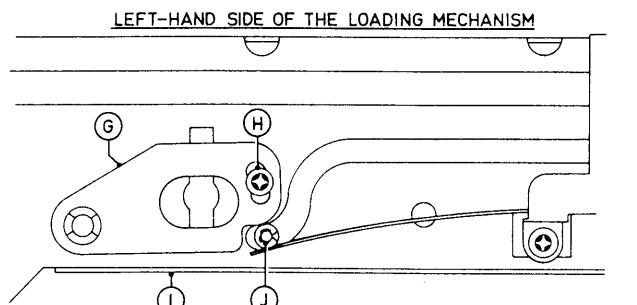


Fig. 5

36013A22

The disc may not rub against the black lifting plate (item 513 of the Exploded View Tray).

In case this should happen, the clearance can be adjusted with adjusting plate G and screw H.

With those the height of axis J of the lifting plate can be adjusted.

The adjustment should be performed with the drawer in position 'CLOSE'.

When screw H is loosened, adjusting plate G can be displaced in so far as this is allowed by the slotted hole of adjusting plate G.

If you can hear the disc rubbing, the adjusting plate should be adjusted.

In practice the disc will be adjusted parallel to edge I of the tray chassis.

Adjusting the play of the tray (see Fig. 6)

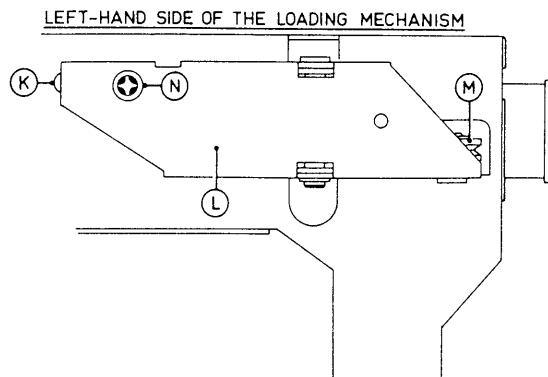


Fig. 6

36014A22

Spiral spring K ensures that bracket L, with wheel M on it, presses against the drawer so that the play of the drawer becomes minimum.

Optimum adjustment is obtained when the distance between screw N and the drawer chassis is adjusted for 0.35 mm.

Adjusting the ornamental front of the drawer (see Fig. 7)

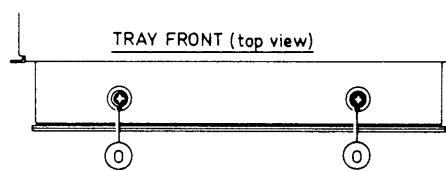


Fig. 7

36012A22

The position of the ornamental front of the drawer relative to the front of the set can be adjusted.

By means of screws O both the height and the position left-right can be adjusted.

ELECTRICAL MEASUREMENTS AND ADJUSTMENTS

Specification measurement

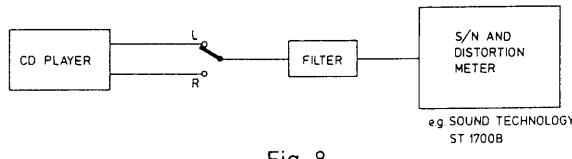


Fig. 8

To measure the specification use can be made of audio test disc 4822 397 30085.

Use a 7th order filter, e.g. 4822 395 30204 (see Fig. 8), to measure:

- Total harmonic distortion (THD).
- Intermodulation distortion.
- Signal-to-noise ratio (S/N).

Changing the transformer connections

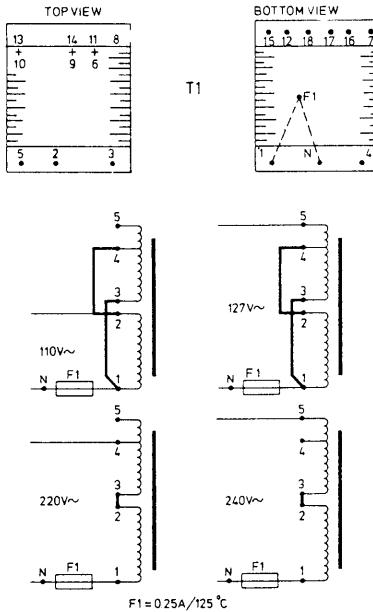


Fig. 9

If the unit has to be connected to a mains voltage deviating from that mentioned on the type plate, the transformer connections should be changed as indicated in the figure.

Attention

In case of adaptation to 110 V or 127 V the glass fuse on the mains filter PCB must be changed from 200 mA-T to 400 mA-T.

Laser power supply (POS. VOLT. SH.)

For check and preliminary adjustment of the laser supply see Service Manual C.D.M.

Adjusting the laser supply

Play track 1 of test disc 4822 397 30096 (disc without defects).

Connect a DC voltmeter across resistor 3308 on the servo PCB (= on emitter of transistor 6239 and ground). Adjust the laser power supply with resistor 3180 until the voltage across resistor 3308 is 575 ± 75 mV.

Adjusting the focus bandwidth

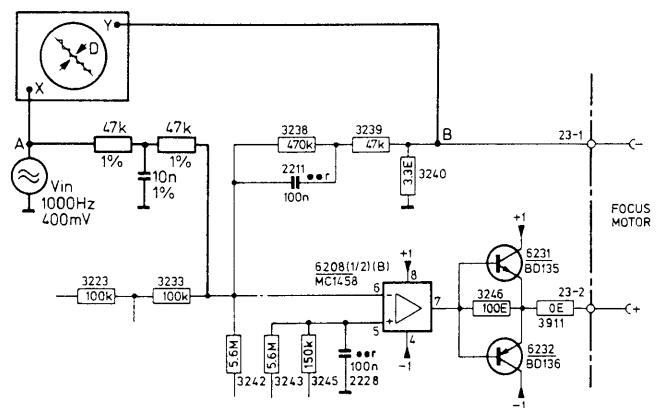


Fig. 10

Make a measuring arrangement according to the figure. Play track 1 of test disc 4822 397 30096 (disc without defects).

Adjust trimming resistor 3158 (focus gain) on PRE. AMPL. + LASER PCB for a 180° phase difference between signals A and B.

Attention:

For some PCBs the focus gain has been called adjusting resistor 3138.

This corresponds with a minimum distance D in the Lissajous pattern.

$$R = 47 \text{ k}\Omega - 1\% \quad 5322 116 54671$$

$$C = 10 \text{ nF} - 1\% \quad 5322 121 54154$$

Check of the AGC and offset circuits


(See SERVO PCB)

Play track 1 of test disc 4822 397 30096 (disc without defects).

The voltage between pin 1 of IC6212 and \perp should be $-4 \text{ V} \pm 2 \text{ V}$.

The voltage between pin 14 of IC6215 and \perp should be $0 \text{ V} \pm 2 \text{ V}$.

EXPLODED VIEW TRAY

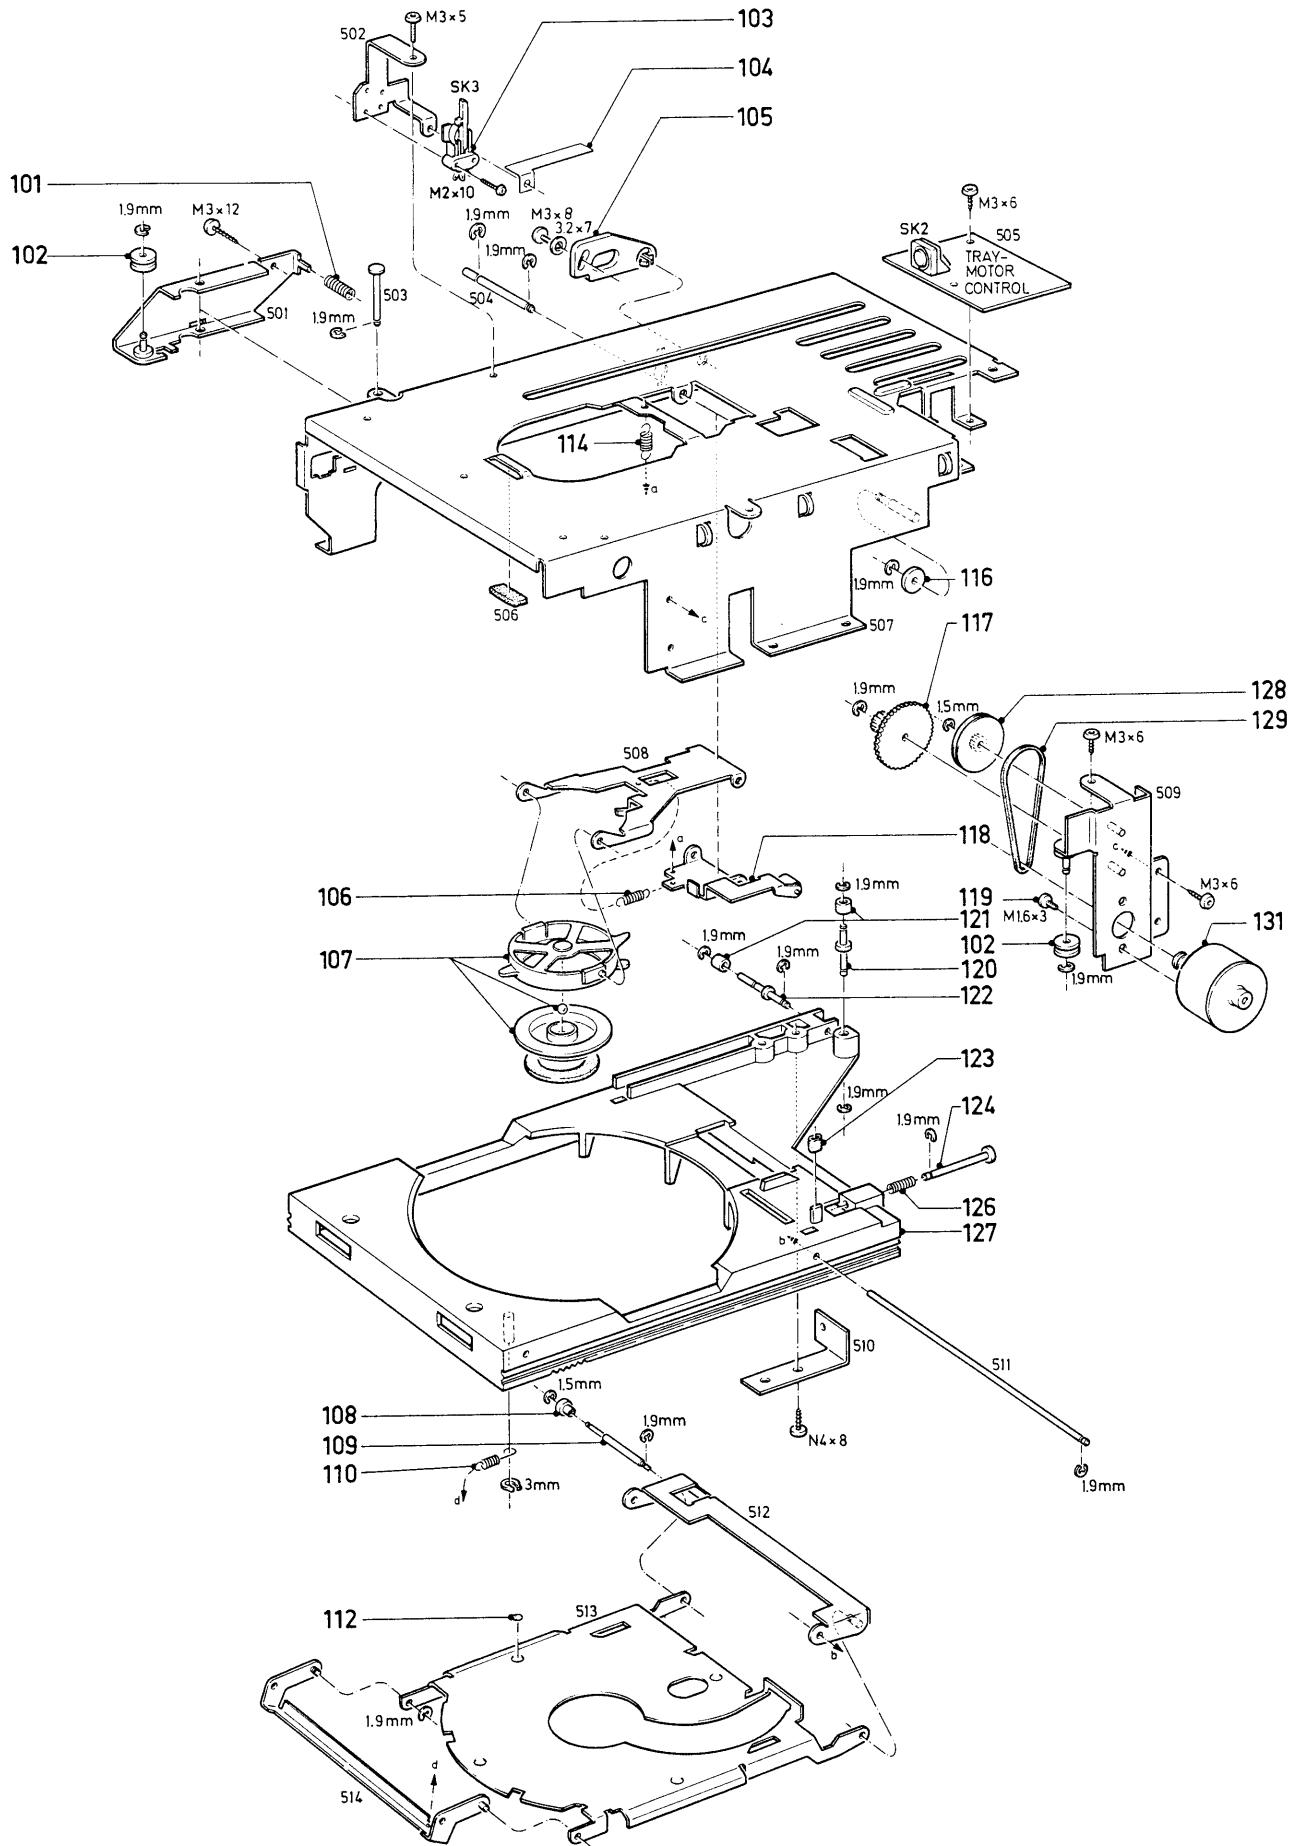

TRAY

101	4822 492 51628	119	4822 502 11699
102	4822 528 80977	120	4822 535 91712
103	4822 276 11277	121	4822 532 51521
104	4822 492 63071	122	4822 535 91719
105	4822 466 81483	123	4822 532 51518
106	4822 492 32396	124	4822 535 91711
107	4822 526 10261	126	4822 492 51627
108	4822 532 11114	127	4822 444 40113
109	4822 535 91709	128	4822 528 50177
110	4822 492 32404	129	4822 358 30335
112	4822 466 60965	131	4822 361 20483
114	4822 492 32395		
116	4822 532 51519		
117	4822 522 31777		
118	4822 402 60909		

CABINET


201	4822 492 51626	216	4822 410 23523
202	4822 410 23525	216	4822 410 23971 for CD104/30
203	4822 492 63038	217	4822 443 61296
204	4822 443 40148	217	4822 443 61457 for CD104/30
204	4822 443 40198 for CD104/30	218	4822 276 11262
205	4822 532 10284	219	4822 325 80226
206	4822 443 50451	220	5322 272 10215 for CD104/01
206	4822 443 50572 for CD104/30	221	4822 502 11613
207	4822 450 60411	222	4822 146 20894
208	4822 410 23521	222	4822 146 20897 for CD104/07
209	4822 450 60409	223	4822 255 40181
211	4822 410 23526	224	4822 492 63039
212	4822 410 23524	225	4822 256 30231 for CD104/01
213	4822 410 23522	226	4822 462 40409
214	4822 410 23519		


Note


For mechanical parts of the C.D. mechanism see
Service Manual C.D.M.
Code number turntable motor 4822 361 20484.

5-2-a
1984-11-15


EXPLODED VIEW CABINET

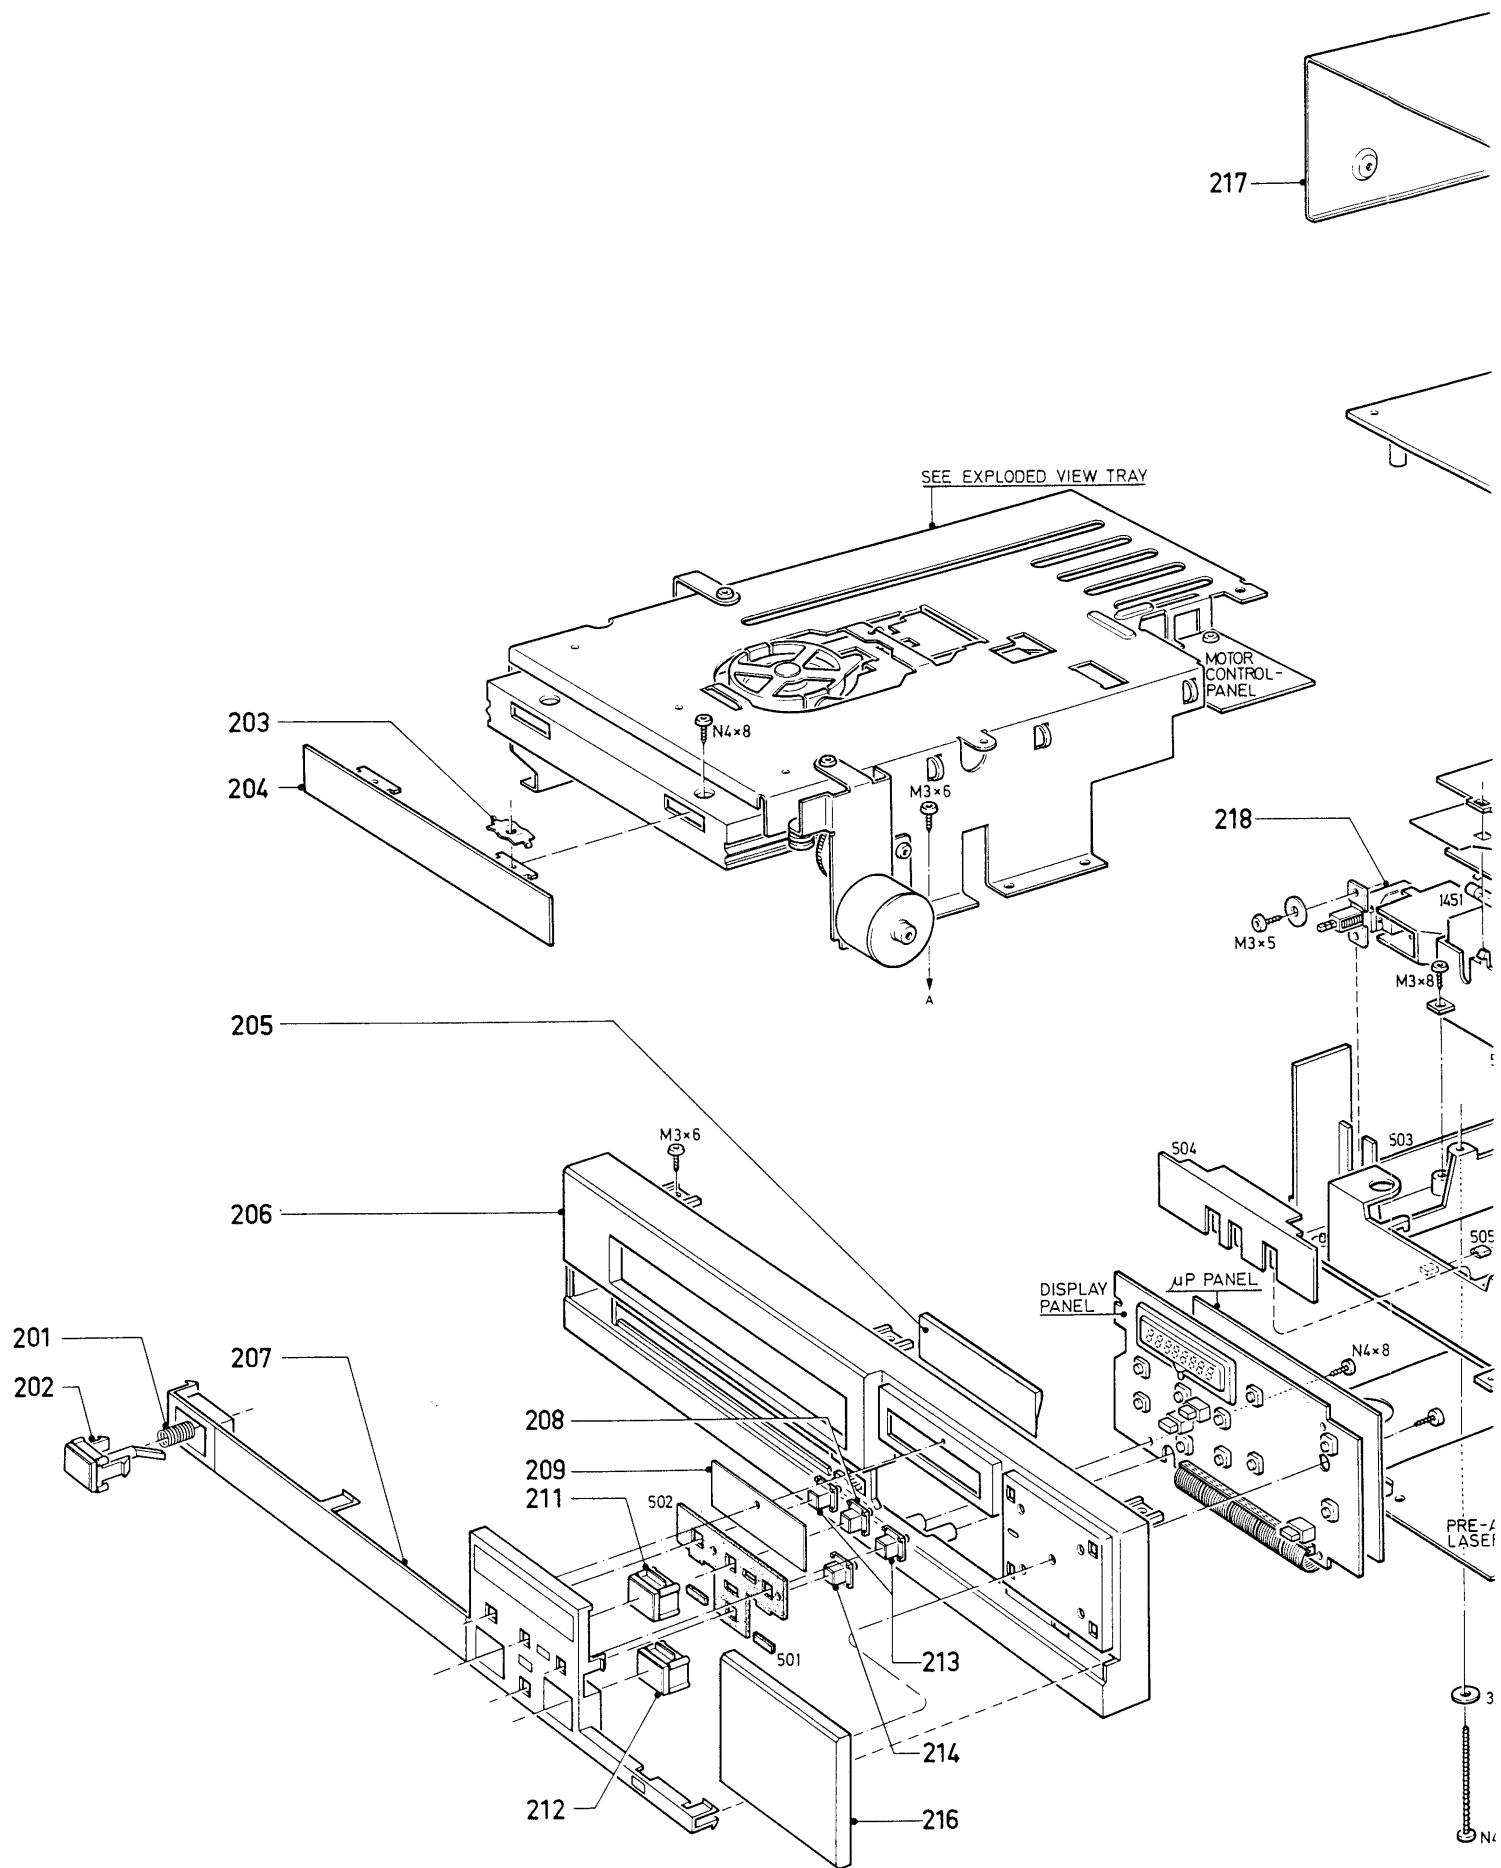


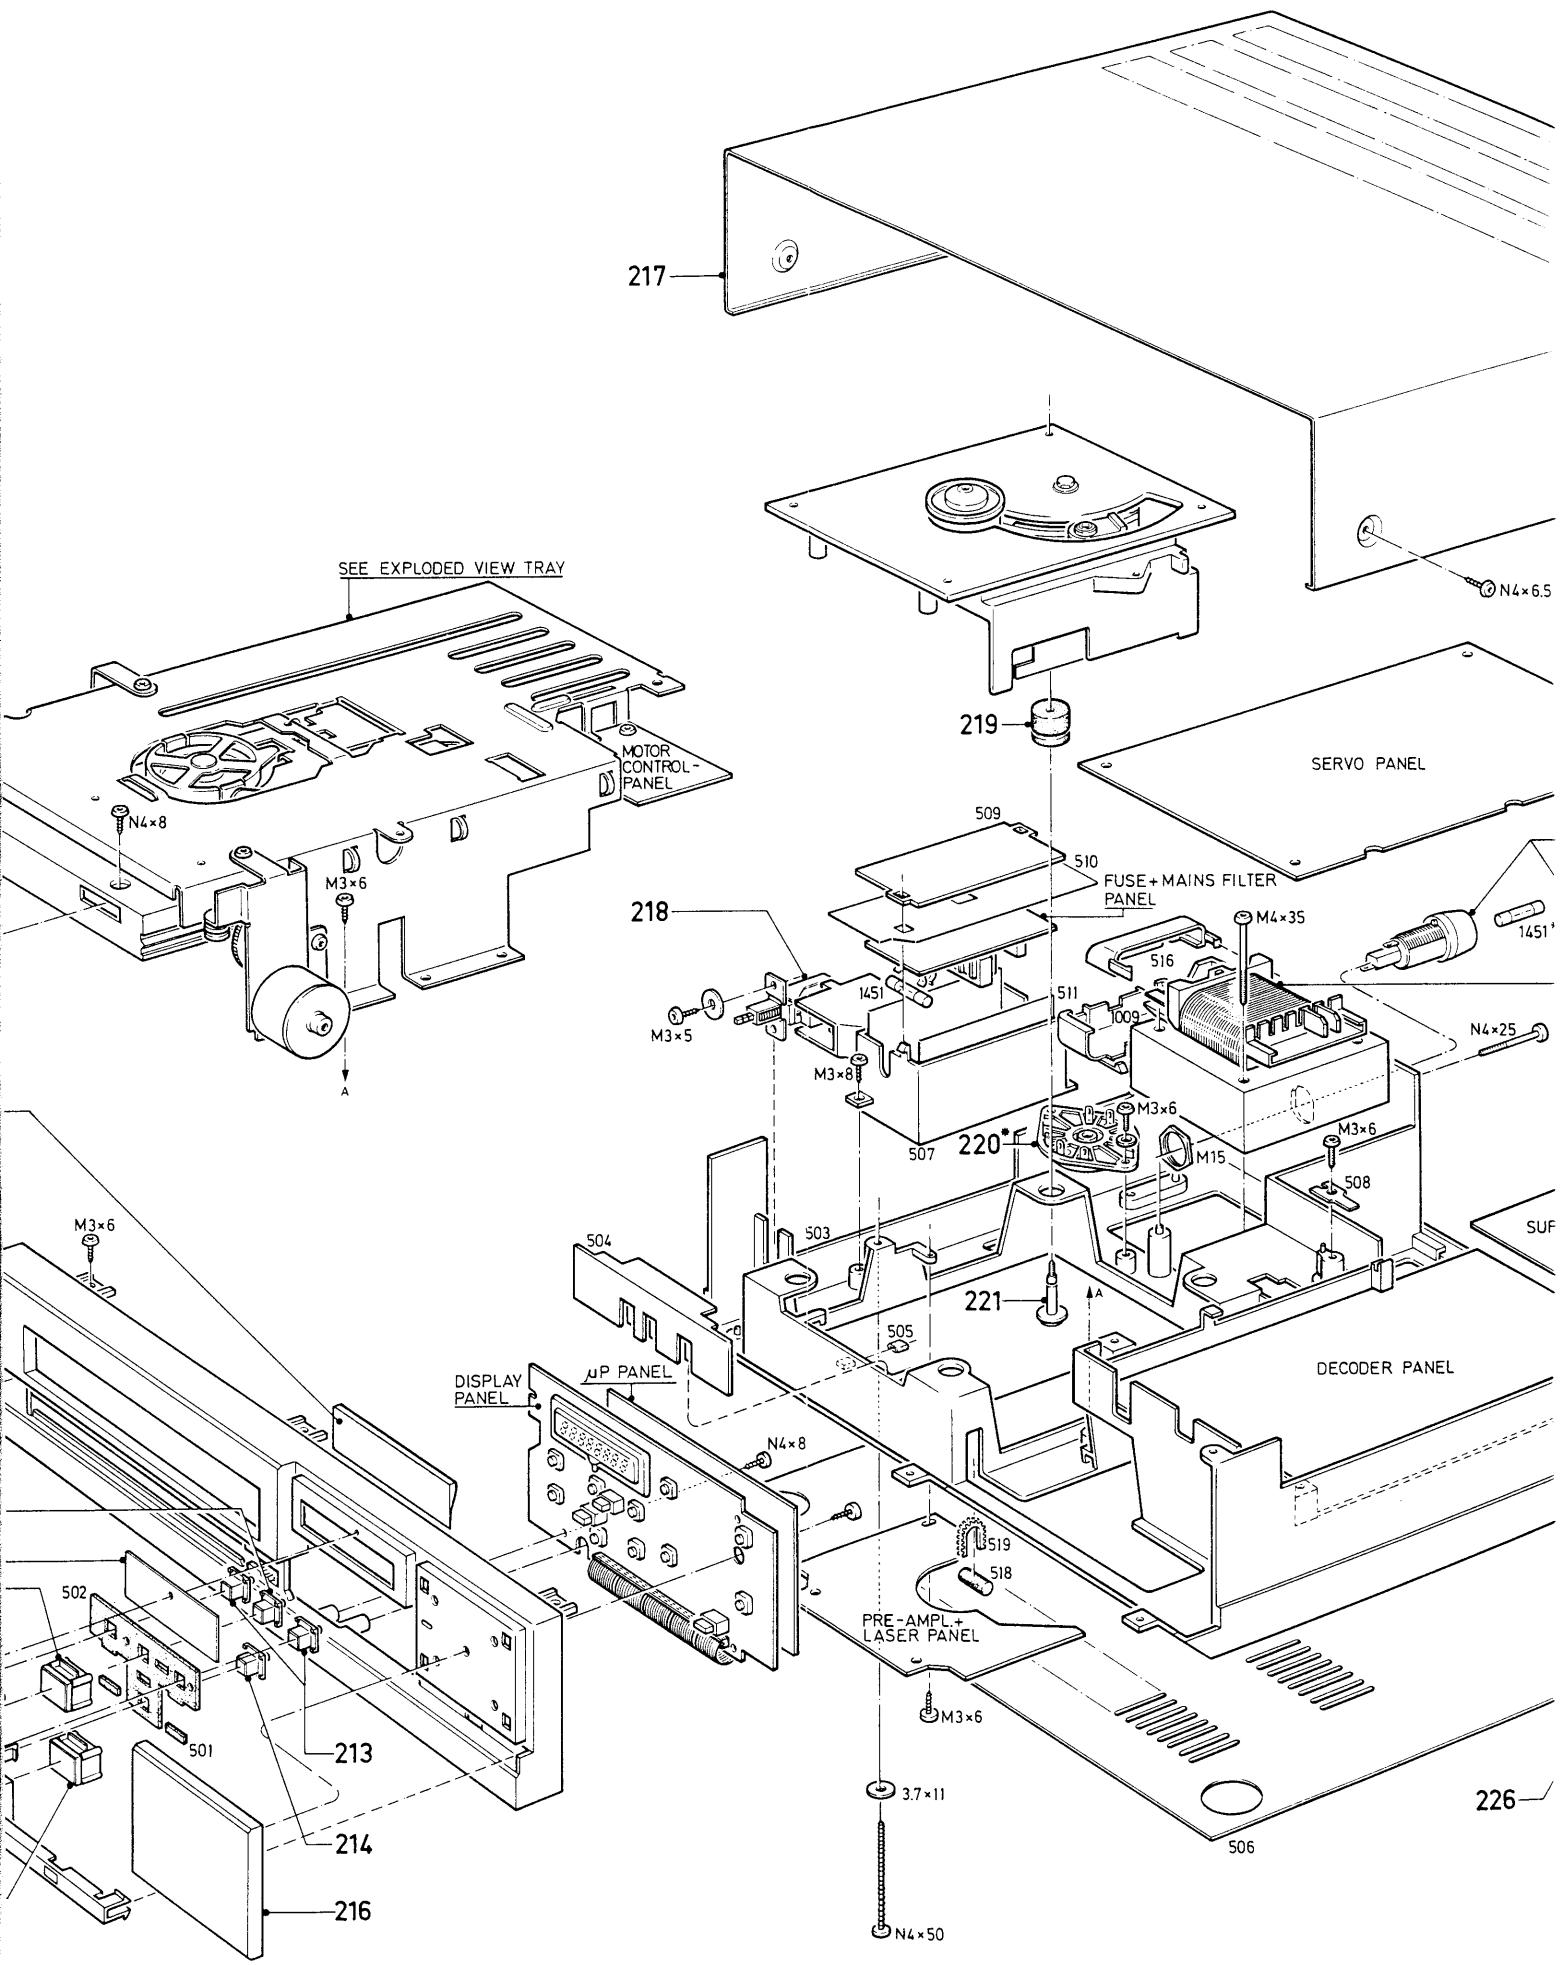


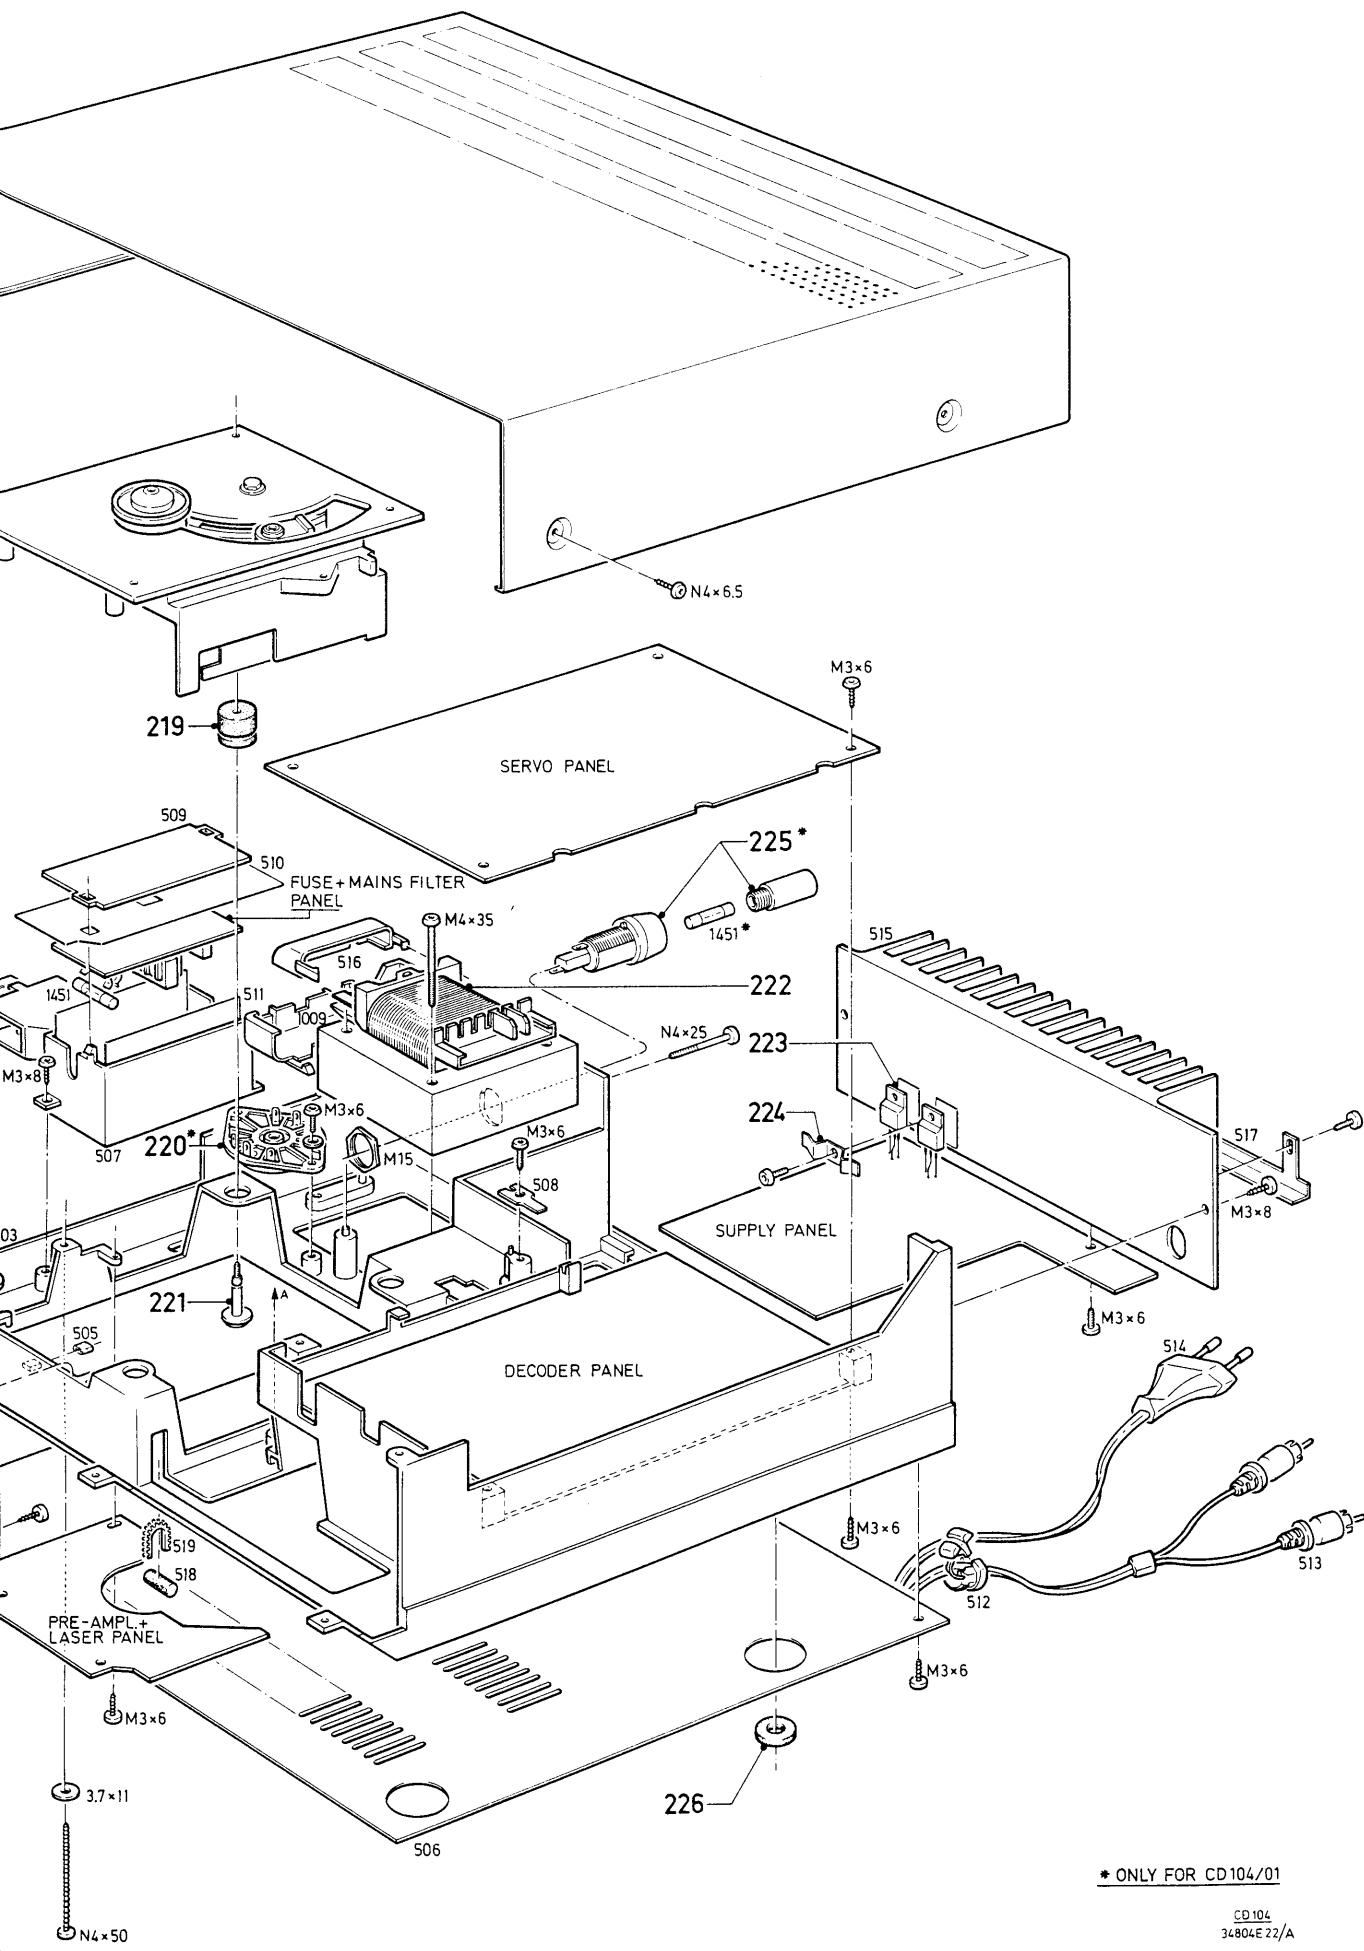


BLOCK DIAGRAM

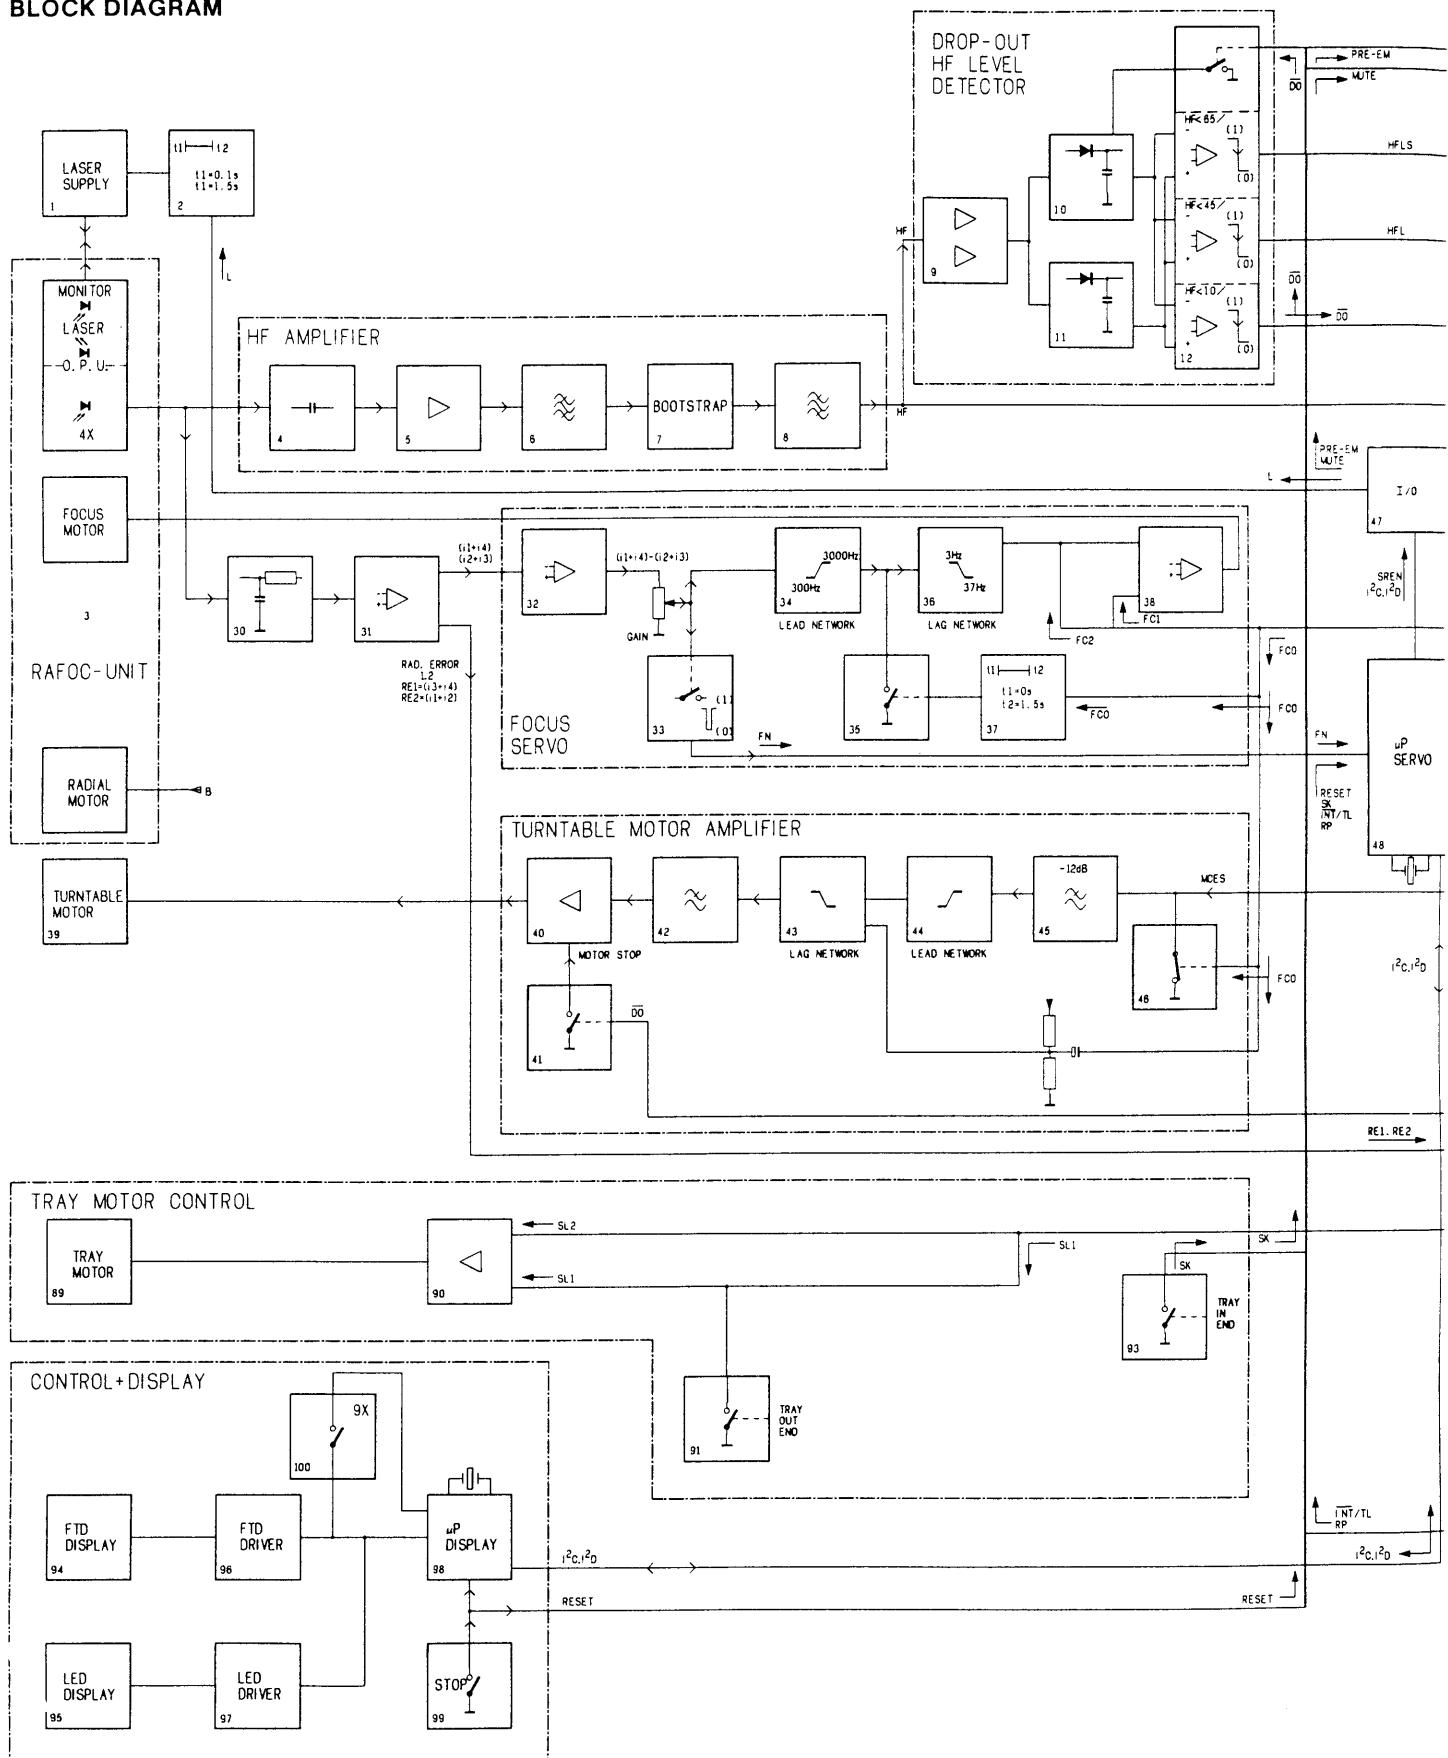


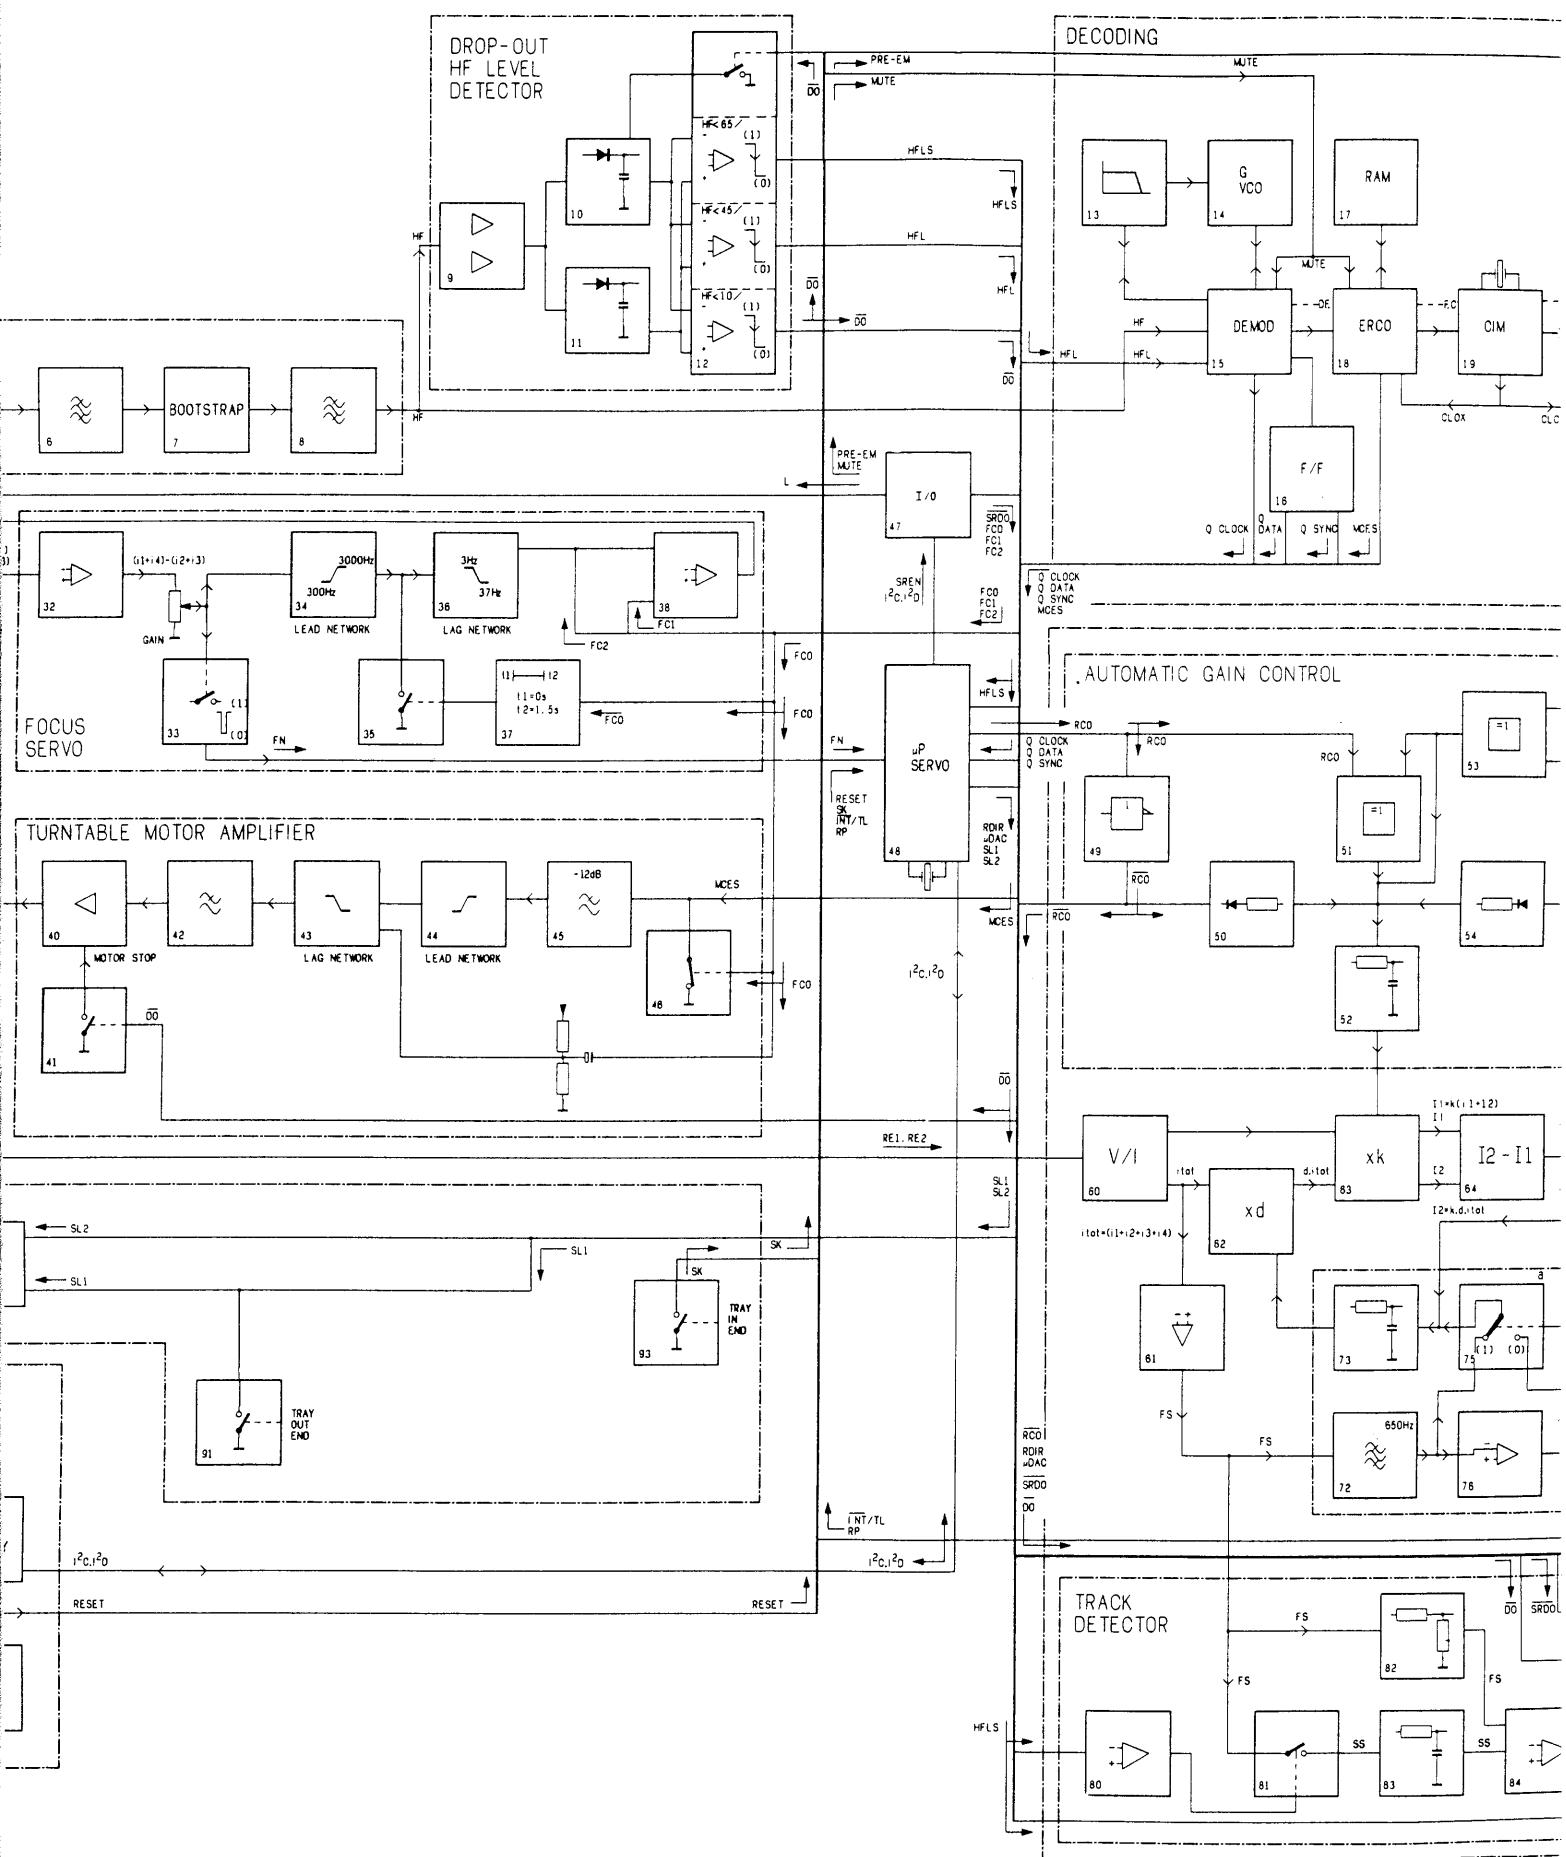


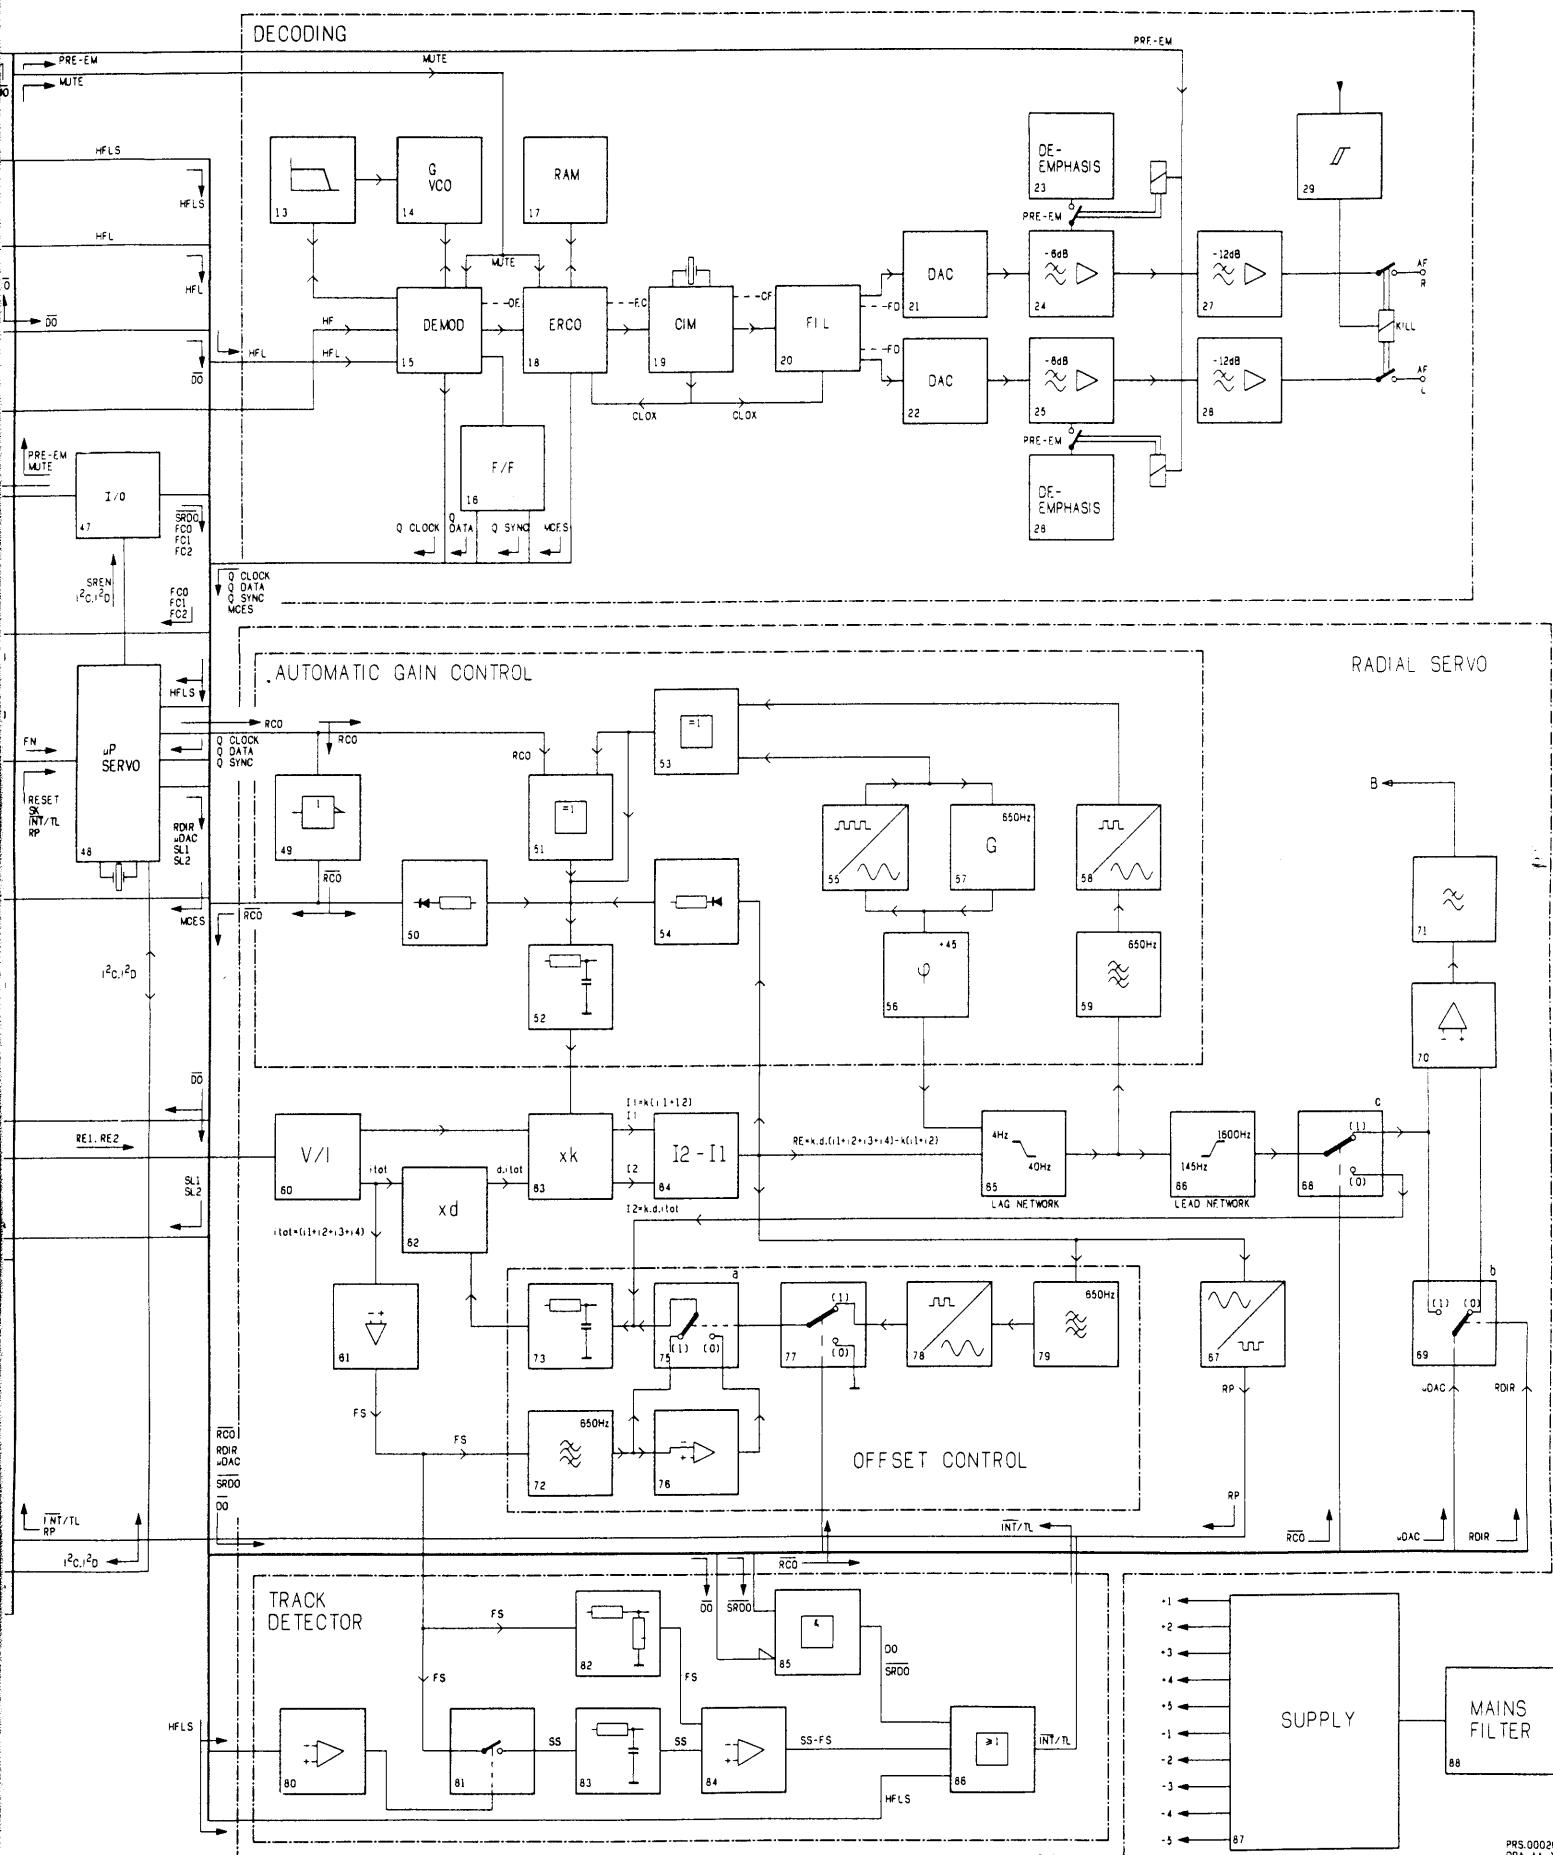


SUPPLY CIRCUIT

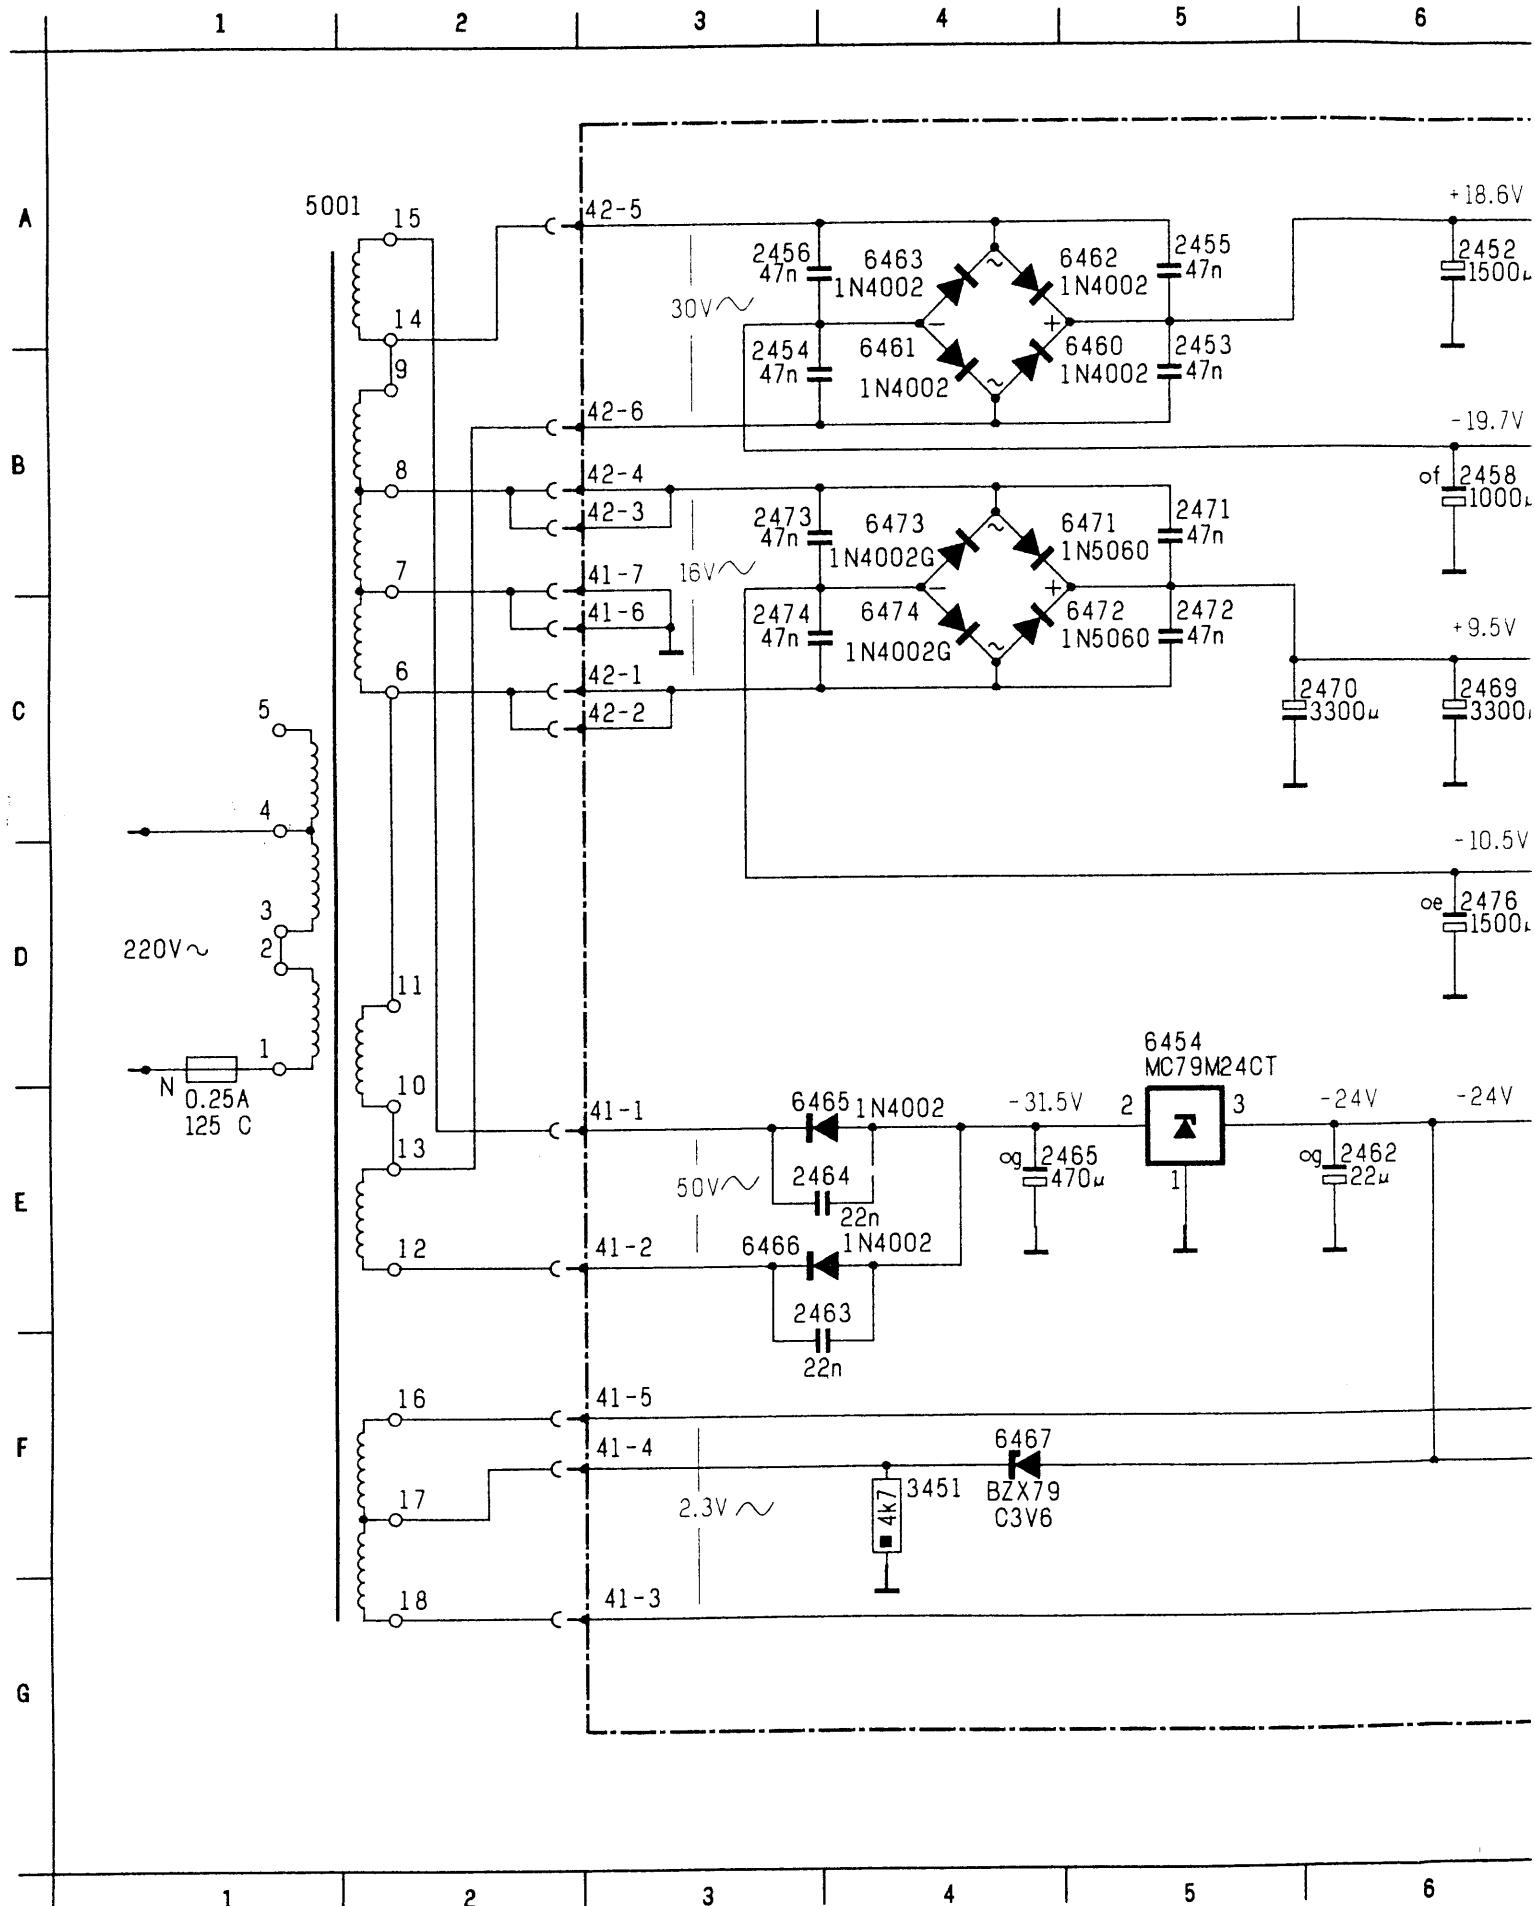

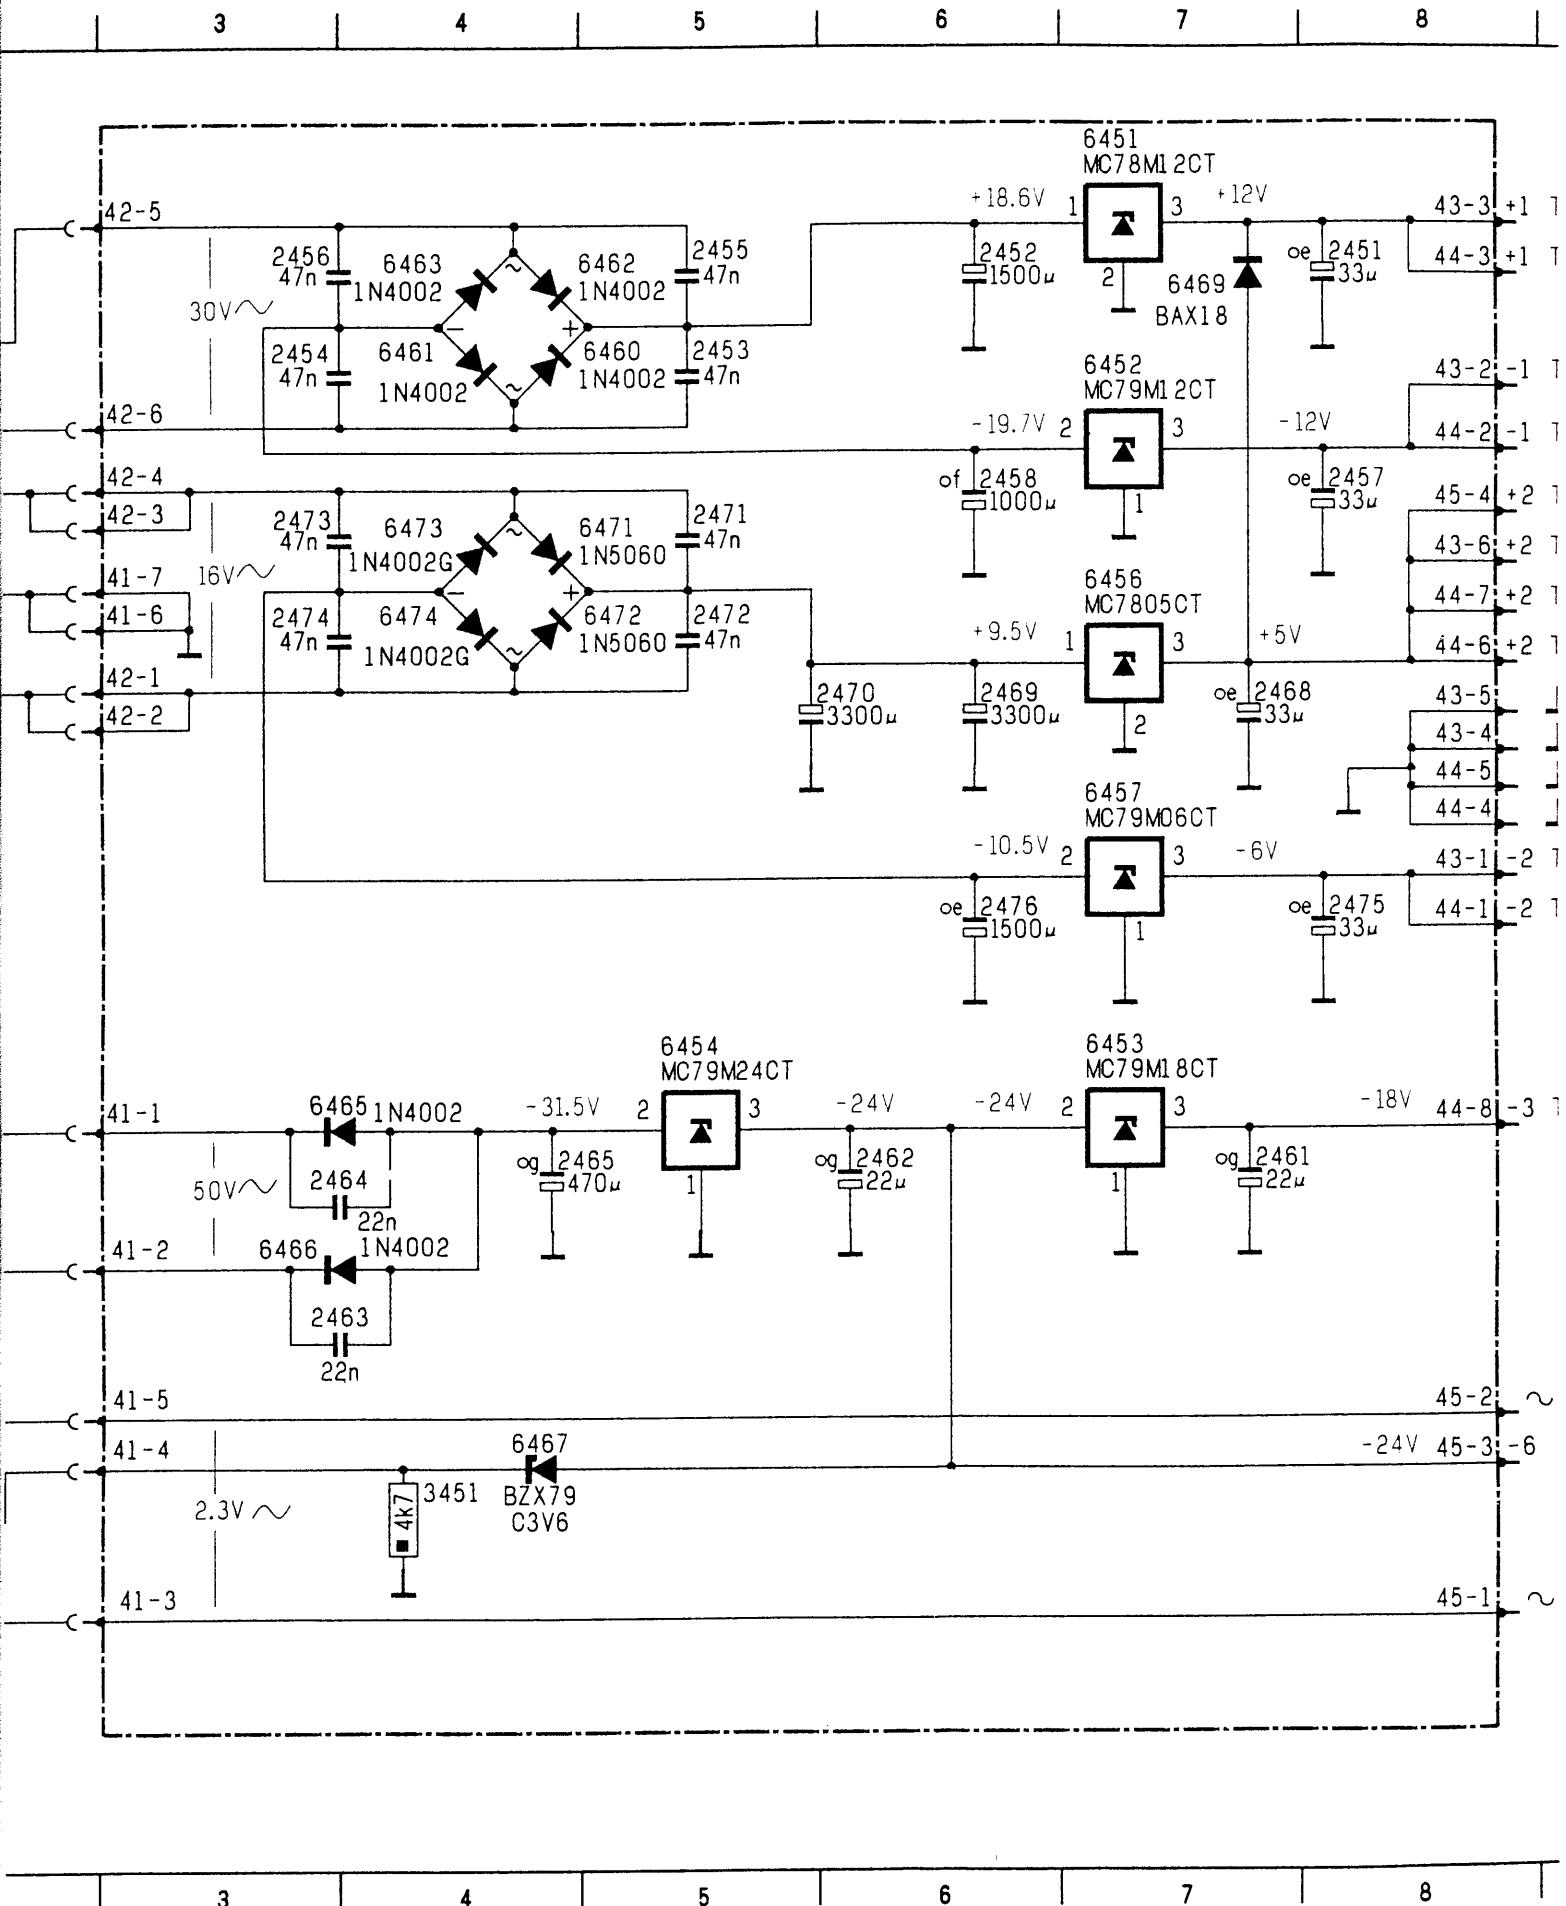

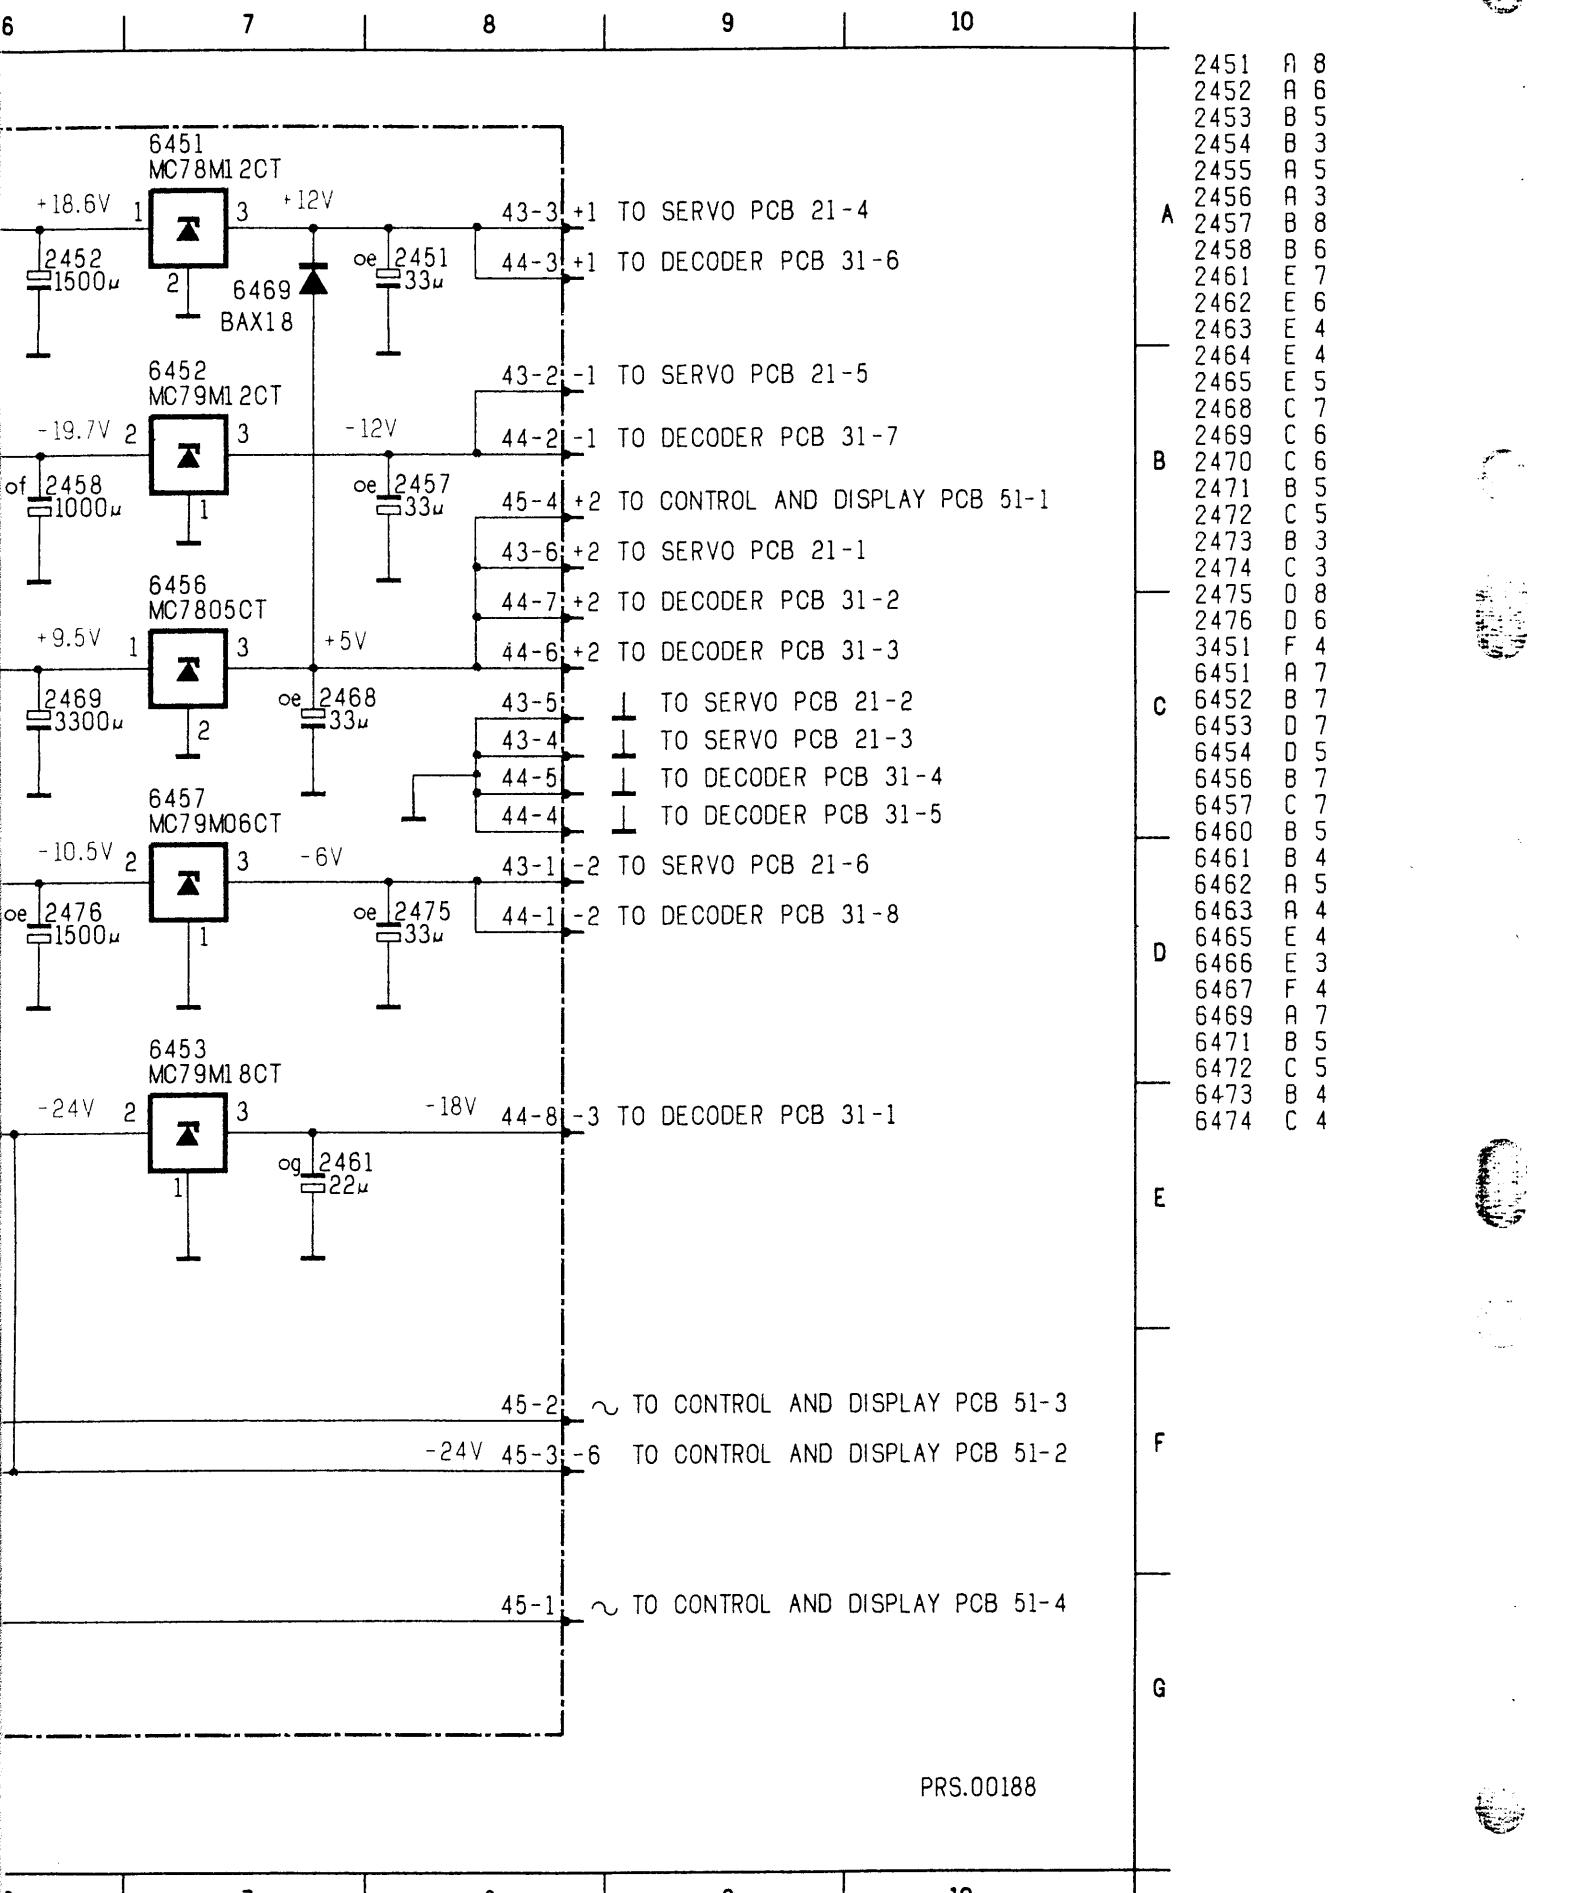


SUPPLY P.C.B.

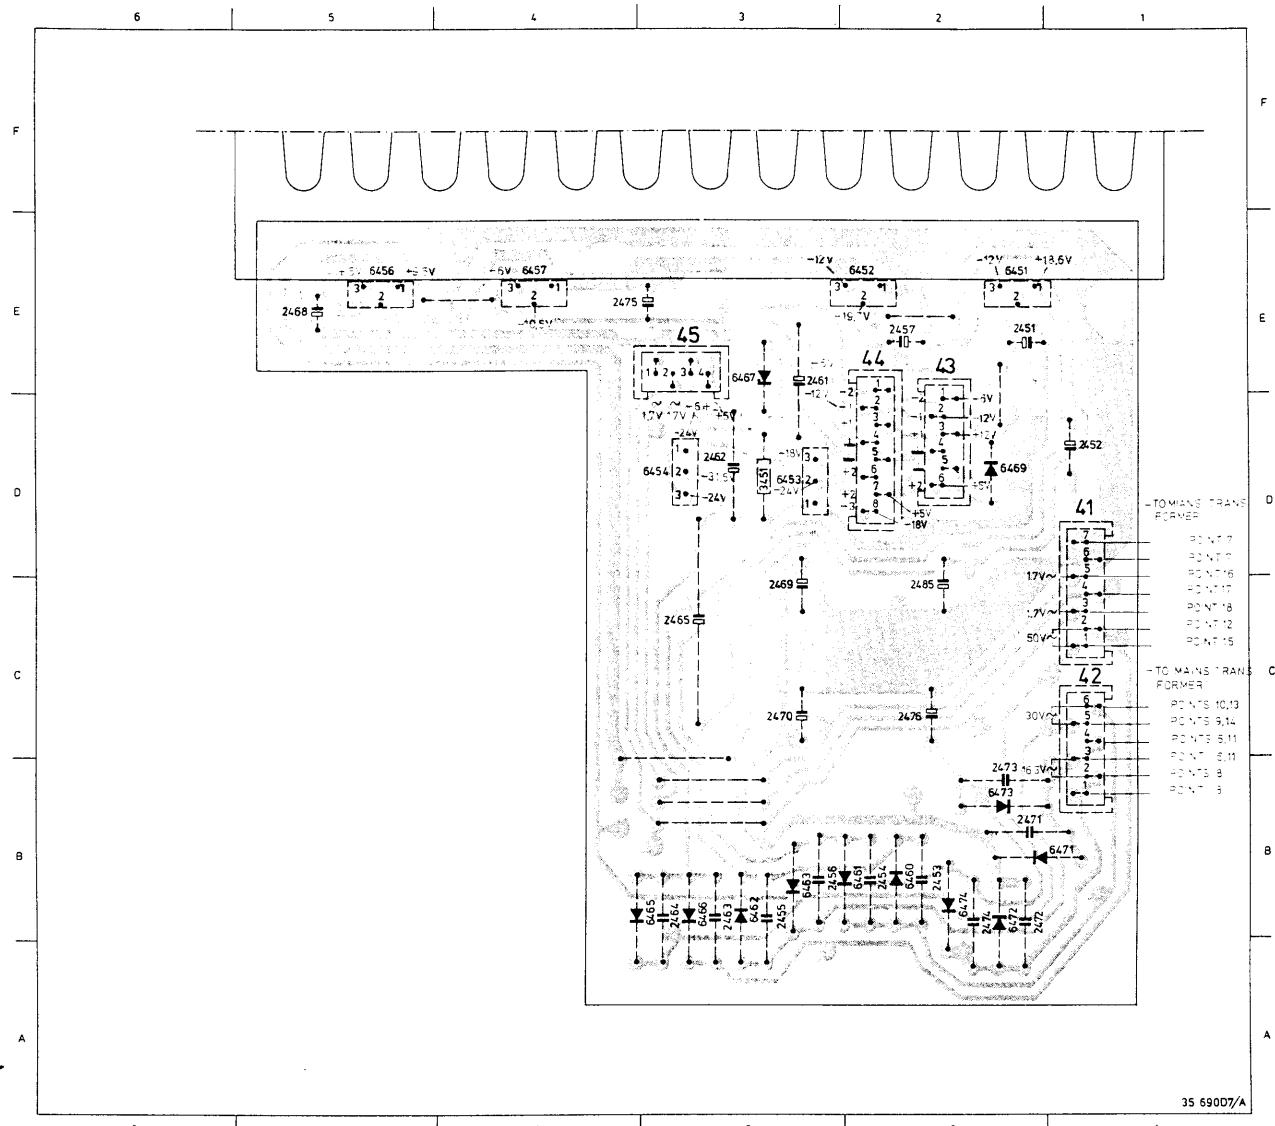

SUPPLY


			
MC78M12CT	5322 209 86176	2453÷2456}	4822 122 10288
MC79M12CT	4822 209 82065	2471÷2474}	4822 122 10289
MC79M18CT	4822 209 82054	2463, 2464	4822 122 10289
MC79M24CT	4822 209 82055	2452, 2476	4822 124 21471
MC7805CT	4822 209 80891	2469, 2470	4822 124 21469
MC79M06CT	4822 209 82056		
Miscellaneous			
1N4002G	5322 130 30684	Mica washer	4822 255 40181
BAX18A	4822 130 31025	Spring clip	4822 492 63039
BZX79-C3V6	5322 130 34834	Mains transformer 1009	4822 146 20894
1N5060	4822 130 31164	Transf. fuse 125°C/0,25 A	4822 252 20007

SUPPLY P.C.B.

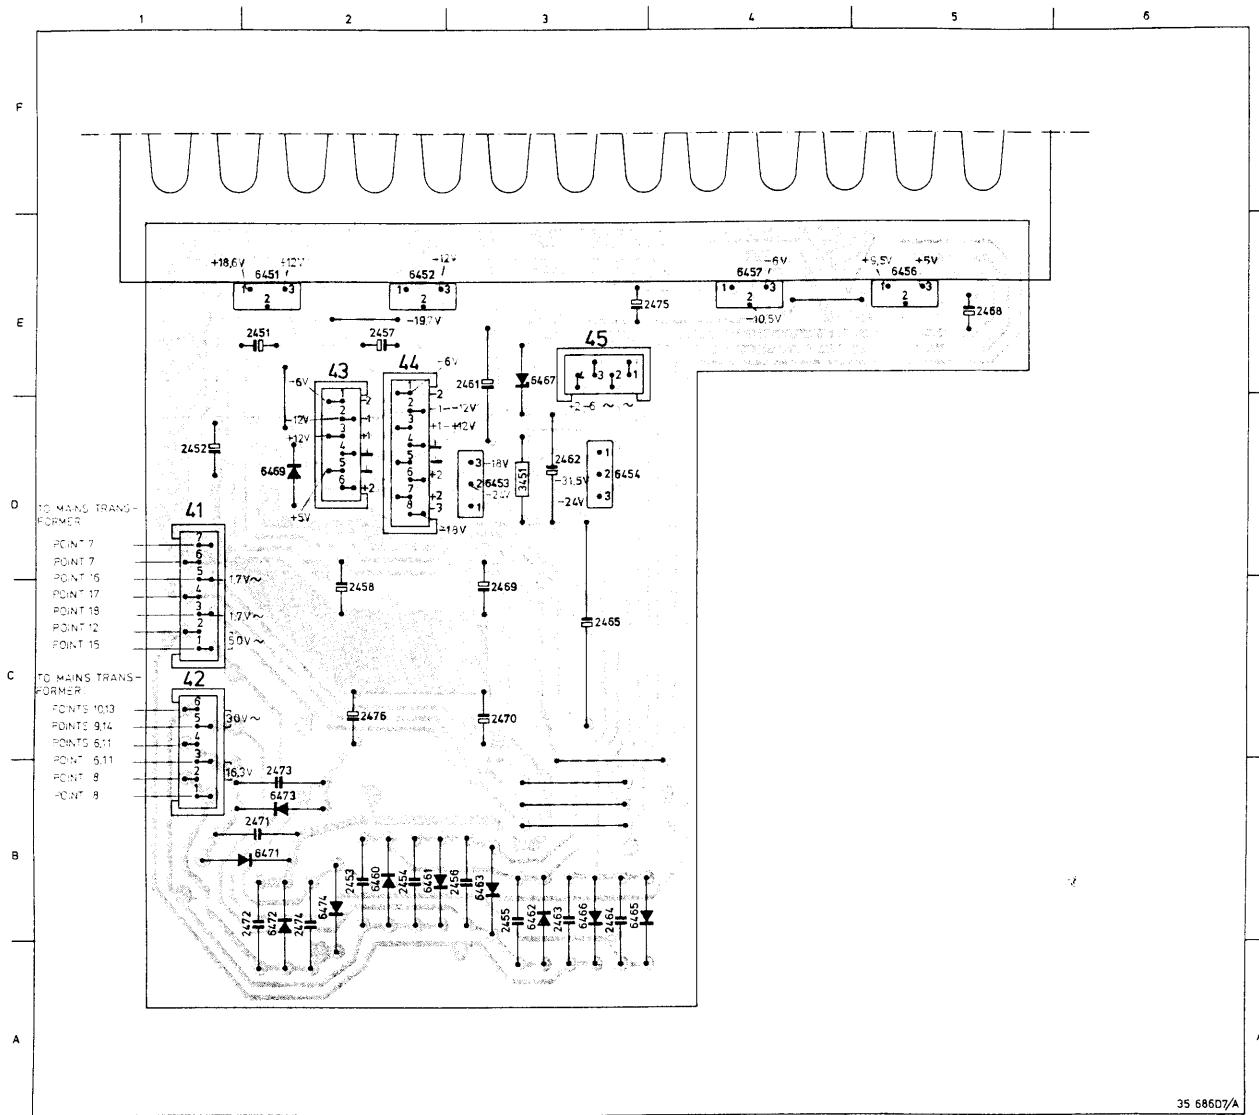


35 6860/A

MAINS FILTER

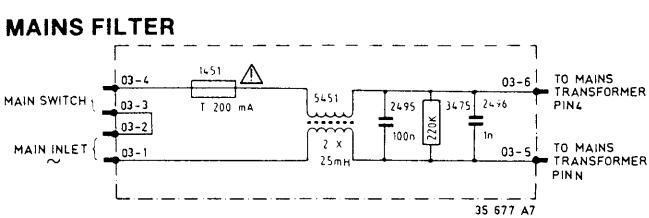


	5451	2x25 mH	4822 157 51576
	2495	100 nF- 250 V	5322 121 44302
	2496	1 nF-1000 V	4822 122 40368
	3475	220 kΩ-VR 25	5322 116 64114
	1451	220/240 V version 200 mA-T 110/127 V version 400 mA-T	4822 253 30012 4822 253 30016
Miscellaneous			
Fuse holder springs			
4822 492 60063			

MAINS FILTER P.C.B.

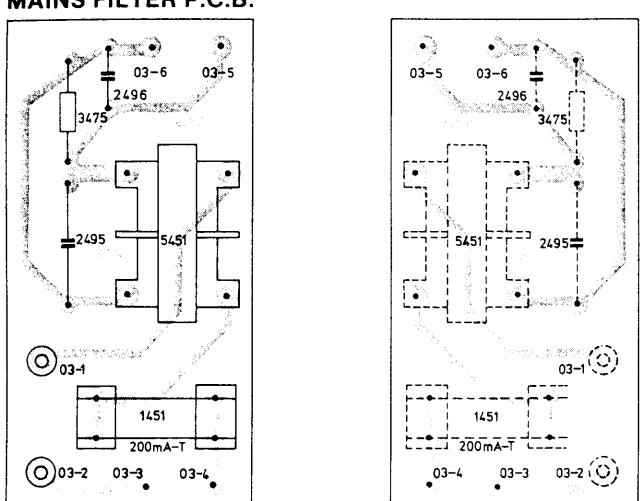


CONTROL + DISPLAY CIRCUIT

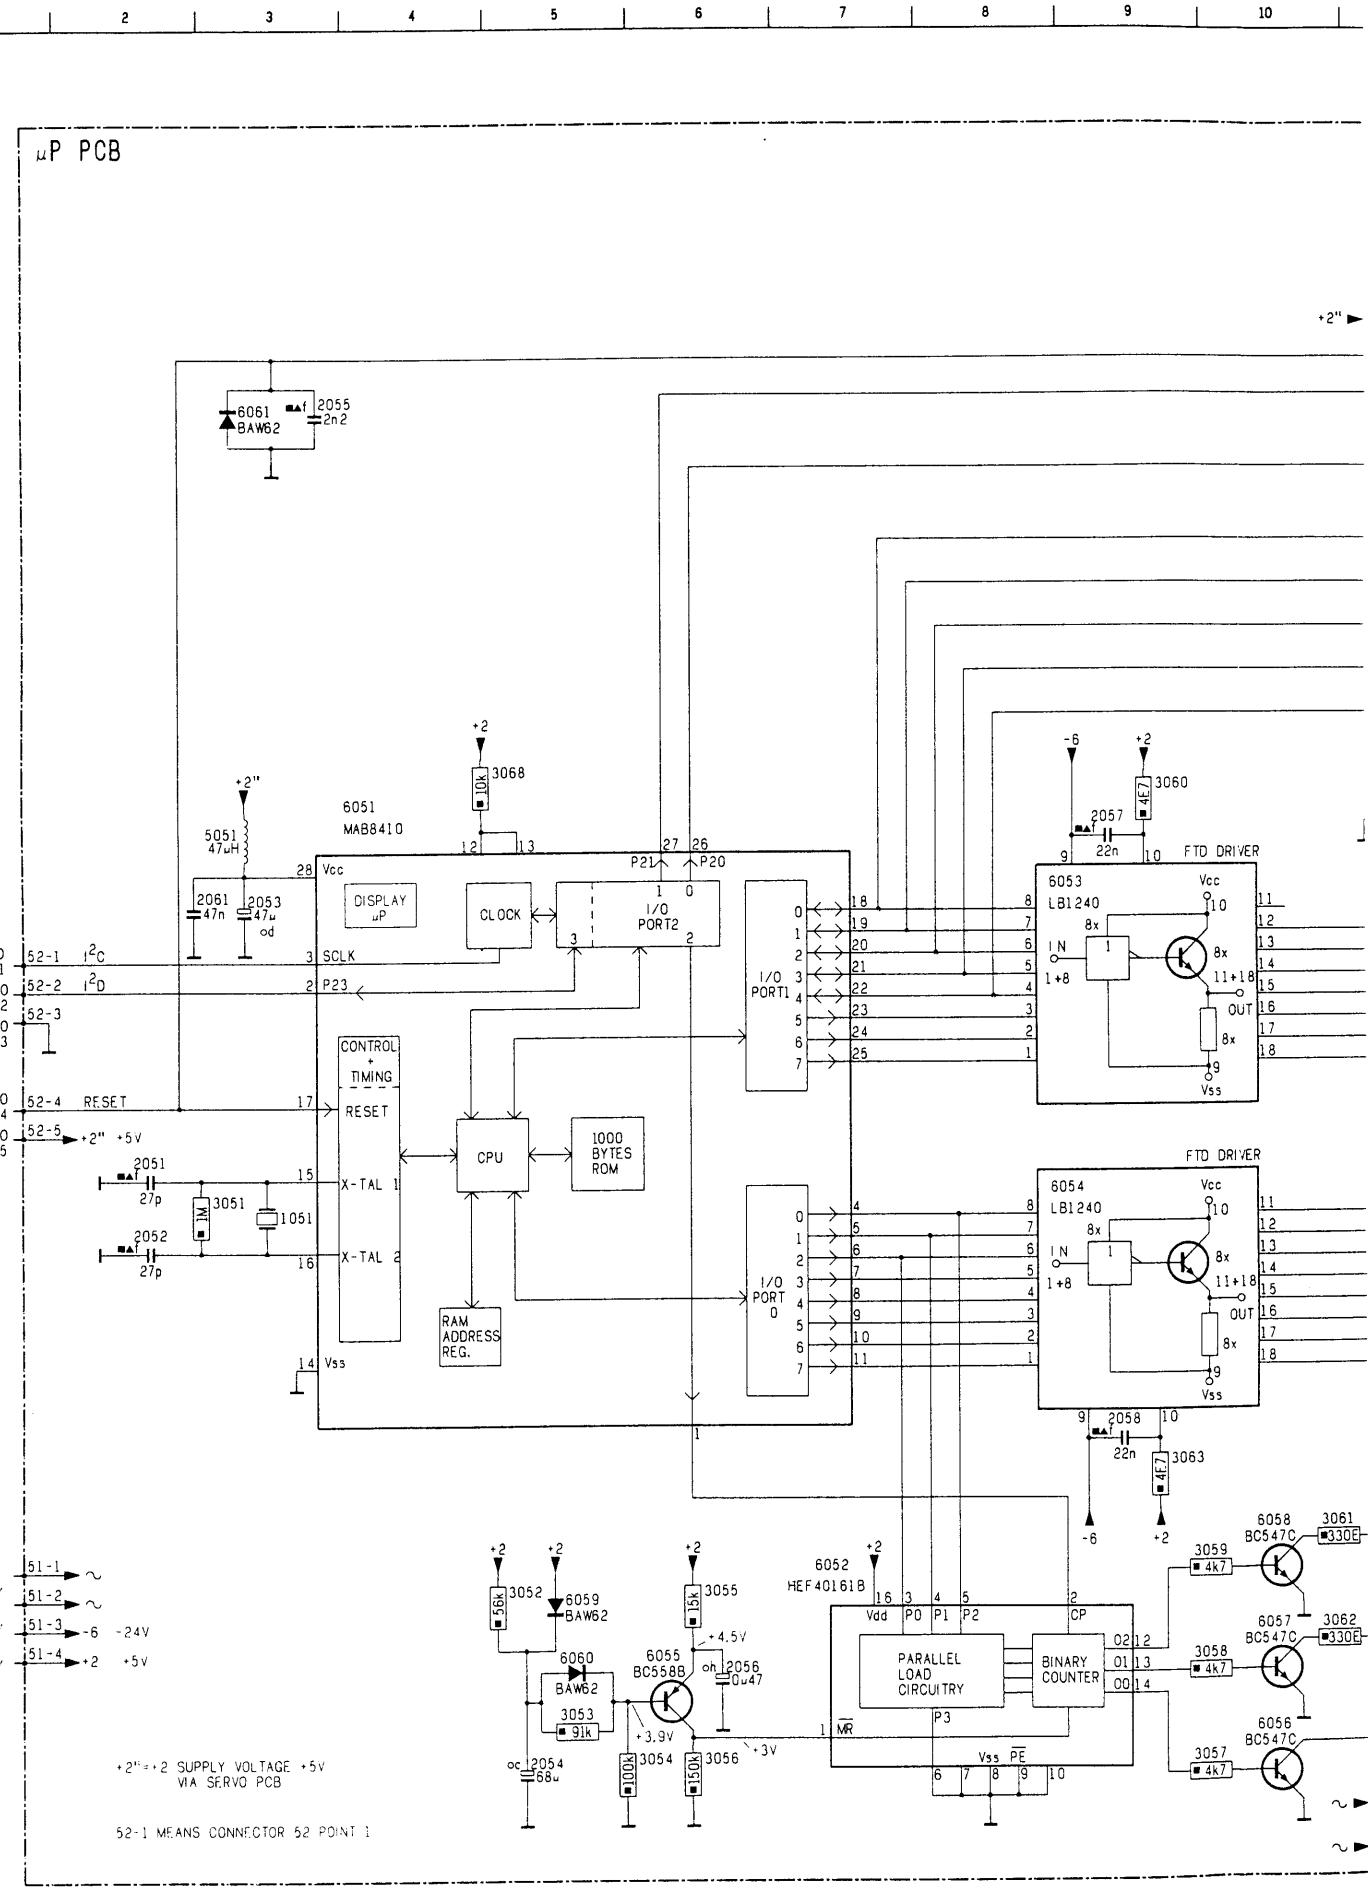


4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14


DISPLAY PCB

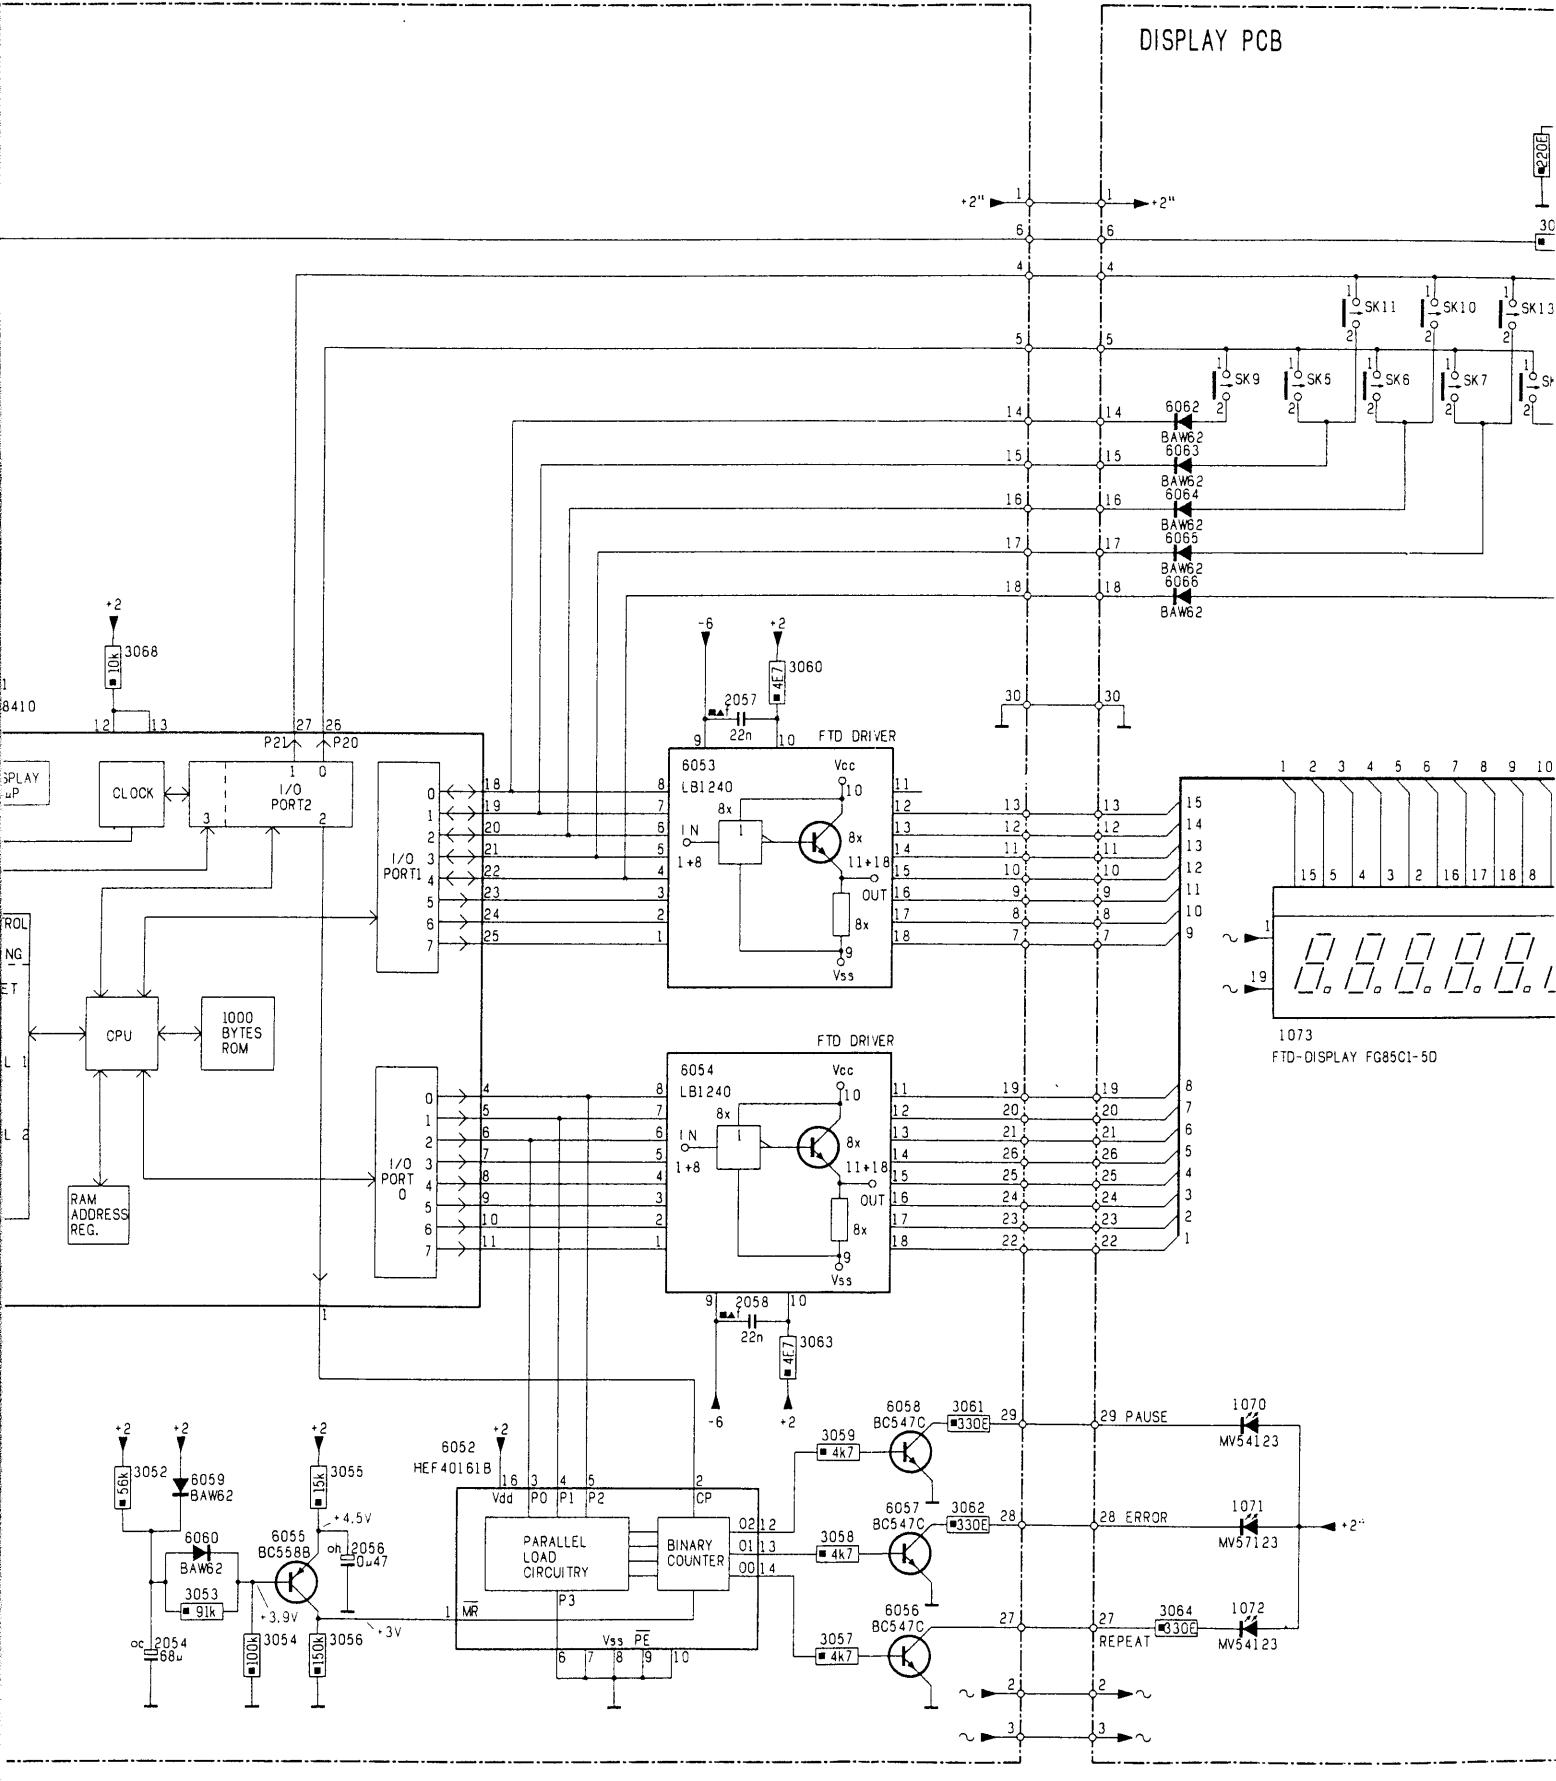

4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14

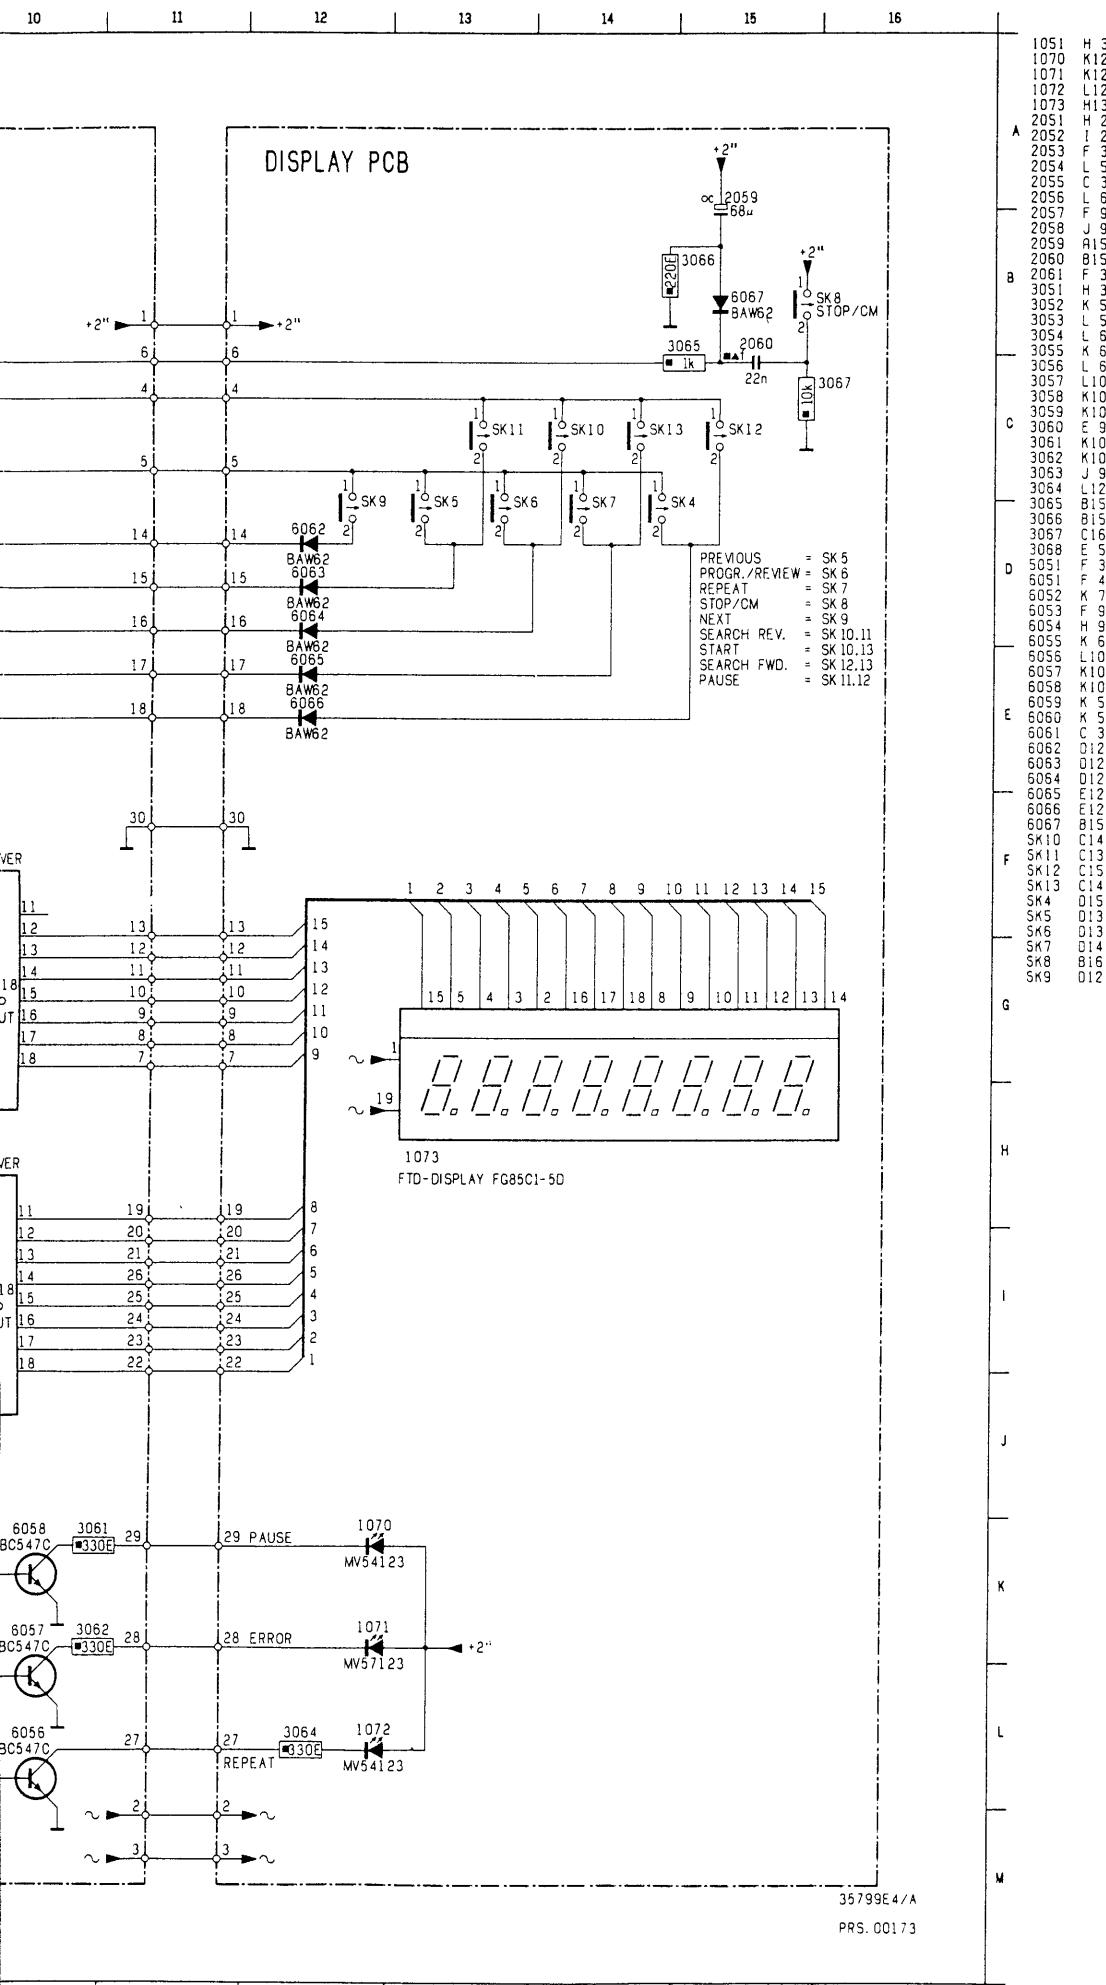

CONTROL + DISPLAY P.C.B.

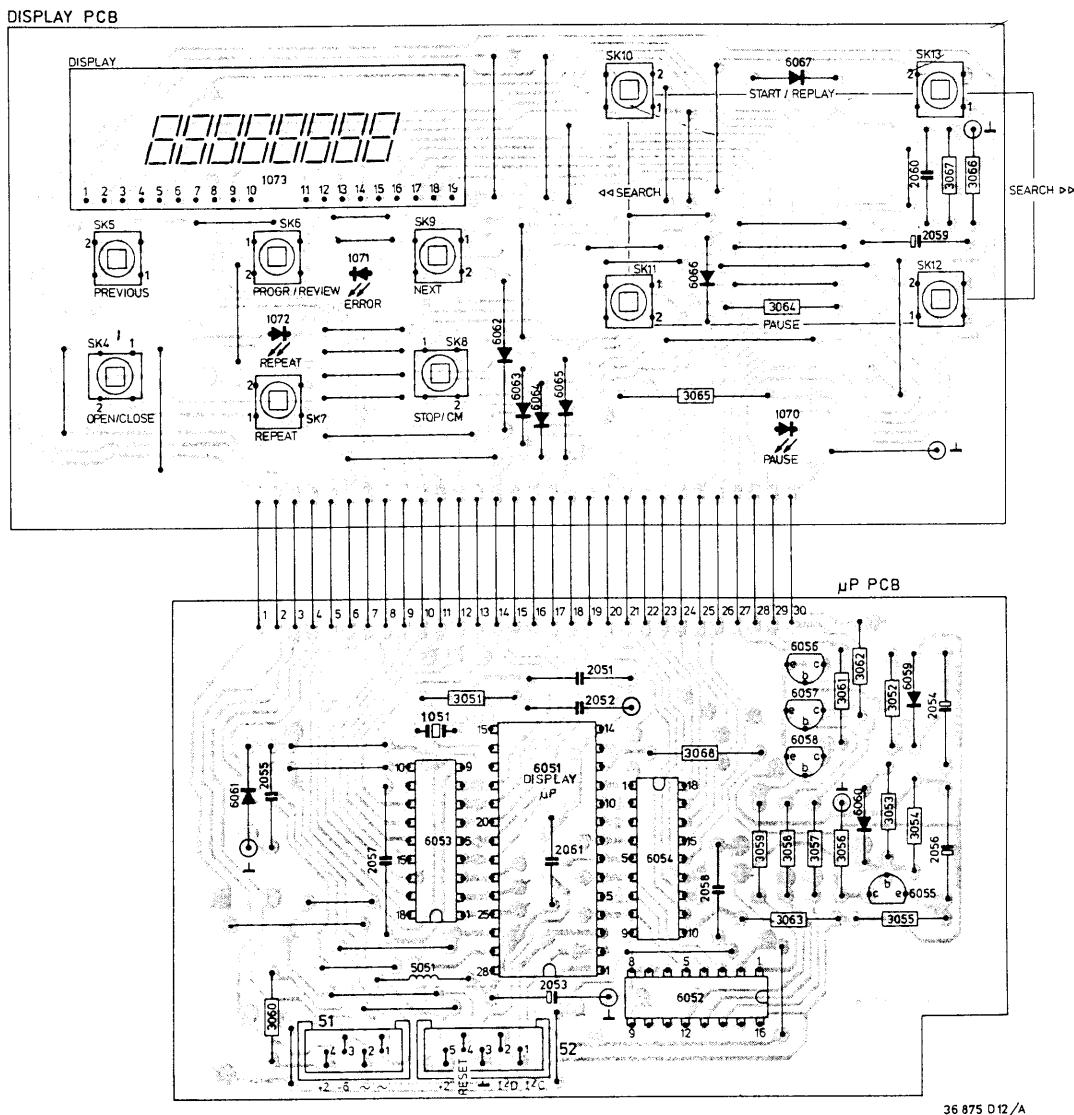


BEHOORT BIJ 36 875 C

CONTROL AND DISPLAY

6051 MAB8410-B017 6052 HEF40161BP 6053, 6054 LB1240	4822 209 10906 5322 209 10344 4822 209 82057	5051 47 mH	4822 156 20966
		2061 47 nF-50 V	4822 122 10288
BC547C BC588B	4822 130 40959 4822 130 44197	1070, 1072 MV54123 (green) 1071 MV57123 (red)	4822 130 32222 4822 130 32301
			I.C.
BAW62	4822 130 30613	IC-socket 28p.	4822 255 40156

CONTROL + DISPLAY P.C.B.

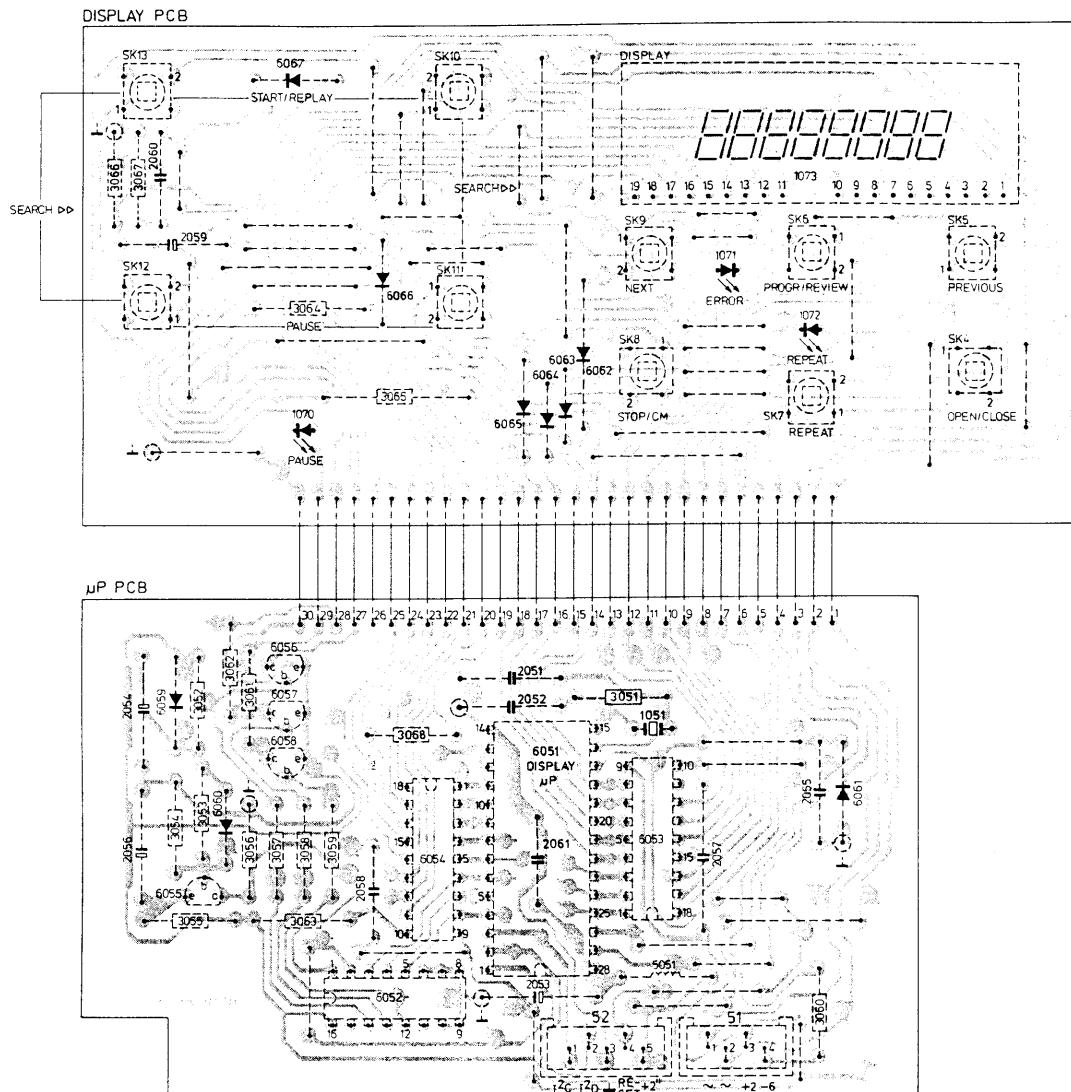

36 878 012/A

DISPLAY	
1073	FG85CI-5D FTD-Display 4822 130 90182
SK4÷13	Tact switch 4822 276 11276
1051	Quartz cristal 4822 242 70392

1051 C02	2051 C03	2056 A02	2061 C02	3055 A02	3060 D01	3065 B04
1070 B04	2052 C02	2057 D02	3051 C02	3056 B02	3061 B02	3066 A05
1071 D04	2053 C01	2058 B02	3052 A02	3057 B02	3062 B03	3067 A05
1072 D04	2054 A02	2059 A04	3053 A02	3058 B02	3063 B02	3068 B02
1073 D05	2055 D02	2060 A05	3054 A02	3059 B02	3064 B04	5051 C01


6051 C02	6056 B03	6061 D02	6066 B04
6052 B01	6057 B02	6062 C04	6067 B05
6053 C02	6058 B02	6063 C04	
6054 B02	6059 A02	6064 C04	
6055 A02	6060 B02	6065 C04	


1051 C02	2051 C03	2056 E02	2061 C02	3055 E02	3060 B01	3065 D04
1070 D04	2052 C02	2057 B02	3051 C02	3056 D02	3061 D03	3066 E05
1071 B04	2053 C01	2058 D02	3052 E02	3057 D02	3062 D03	3067 E05
1072 B04	2054 E02	2059 E04	3053 E02	3058 D02	3063 D02	3068 D02
1073 B05	2055 B02	2060 E05	3054 E02	3059 D02	3064 D04	5051 C01


6051 C02	6056 D03	6061 B02	6066 D04
6052 D01	6057 D03	6062 C04	6067 D05
6053 C02	6058 D02	6063 C04	
6054 D02	6059 E03	6064 C04	
6055 E02	6060 D02	6065 C04	

1984-07-02

SERVO 1

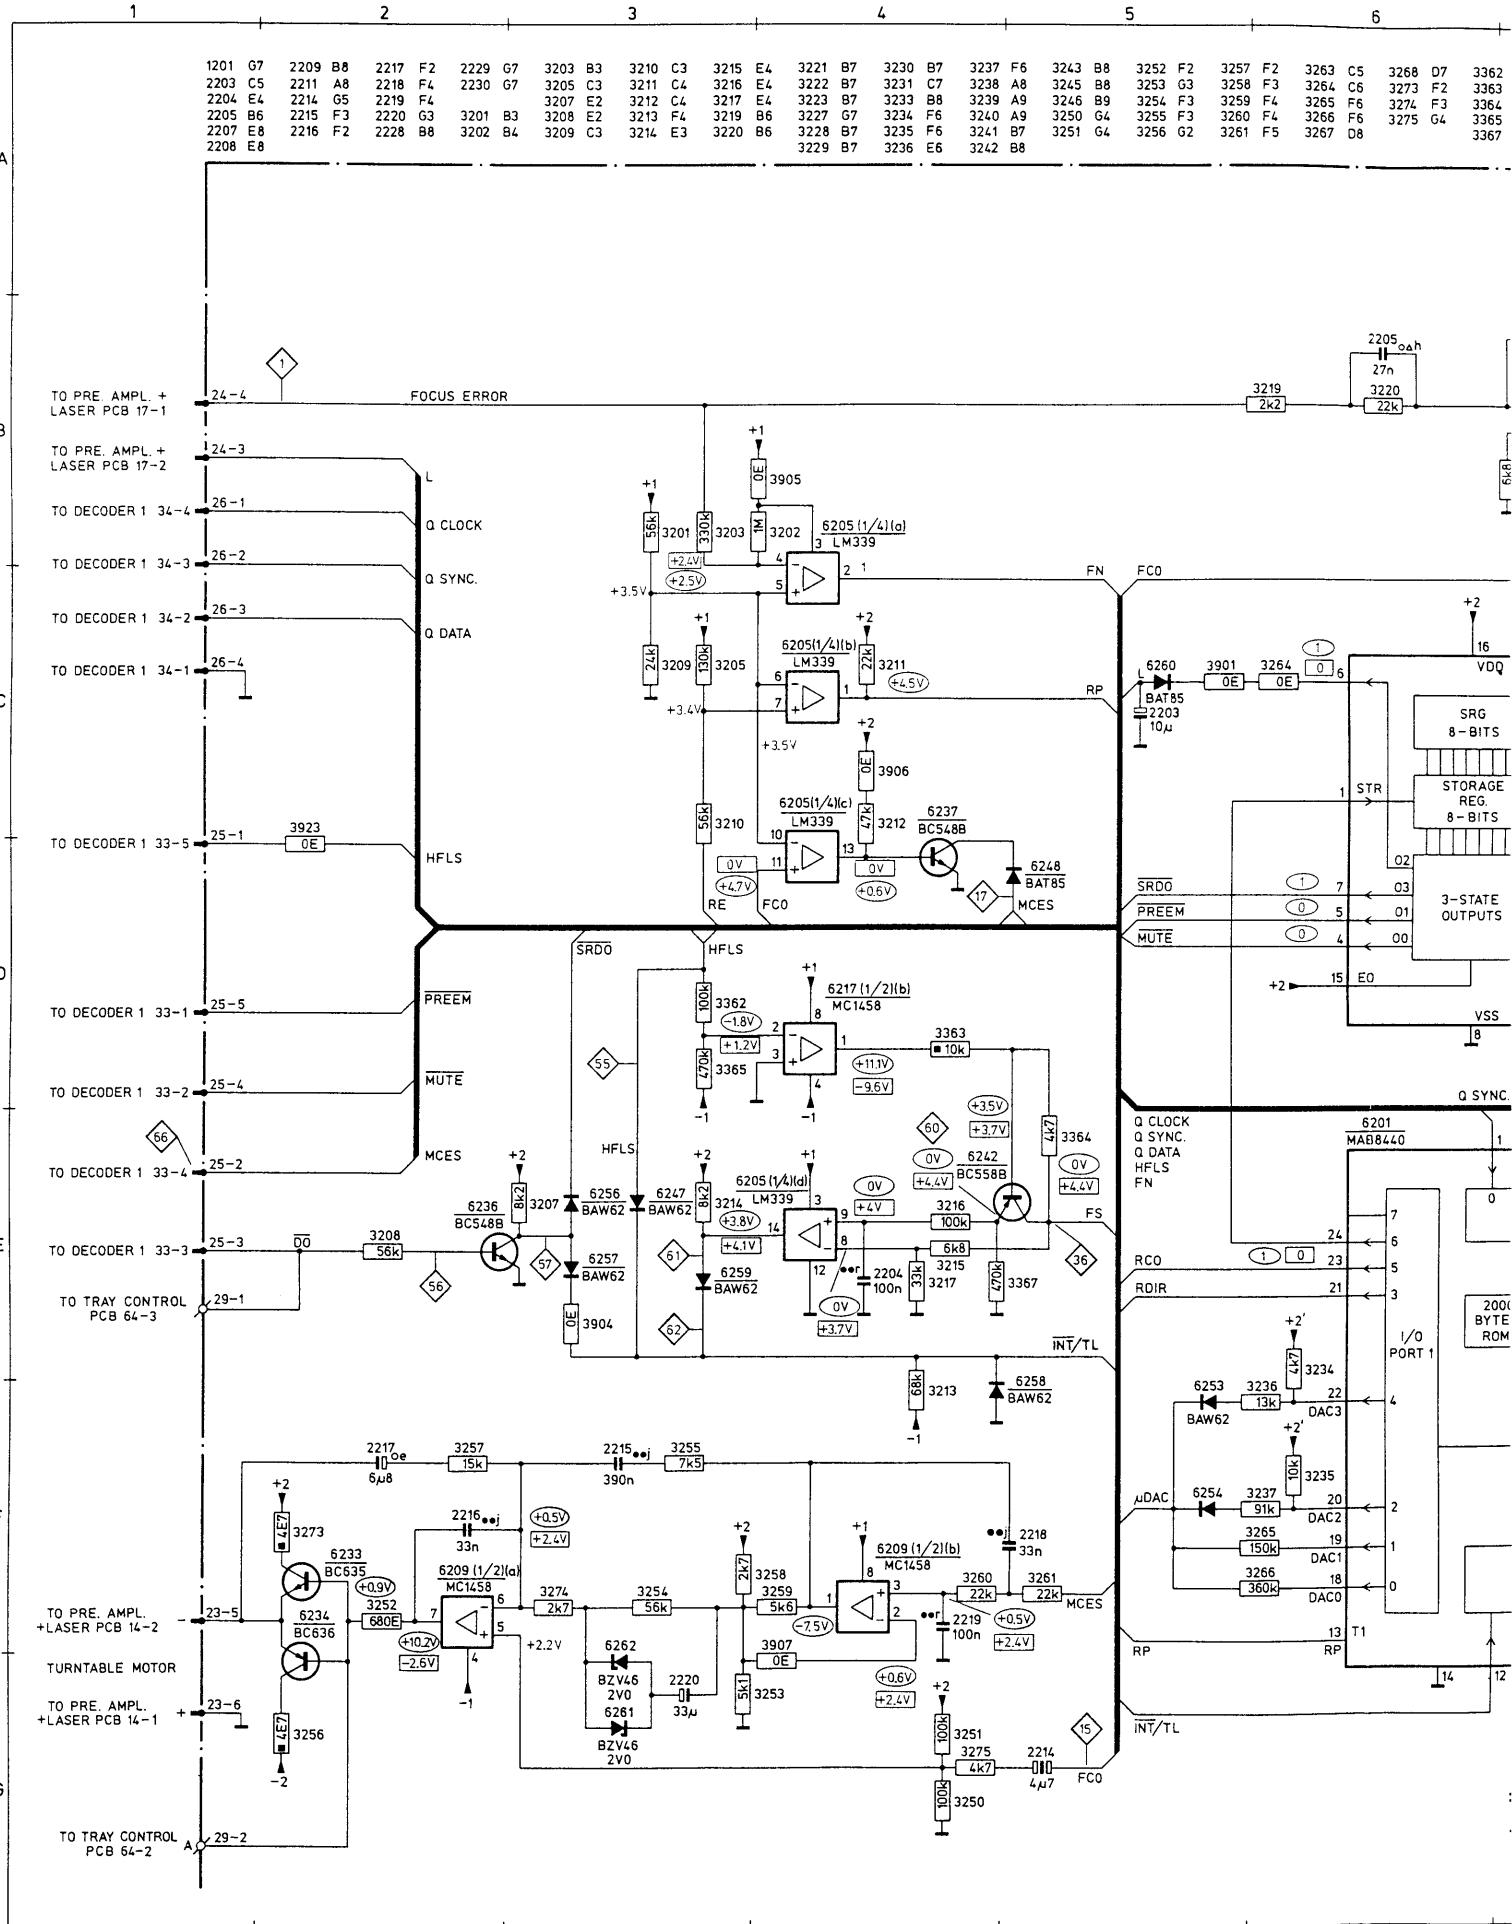

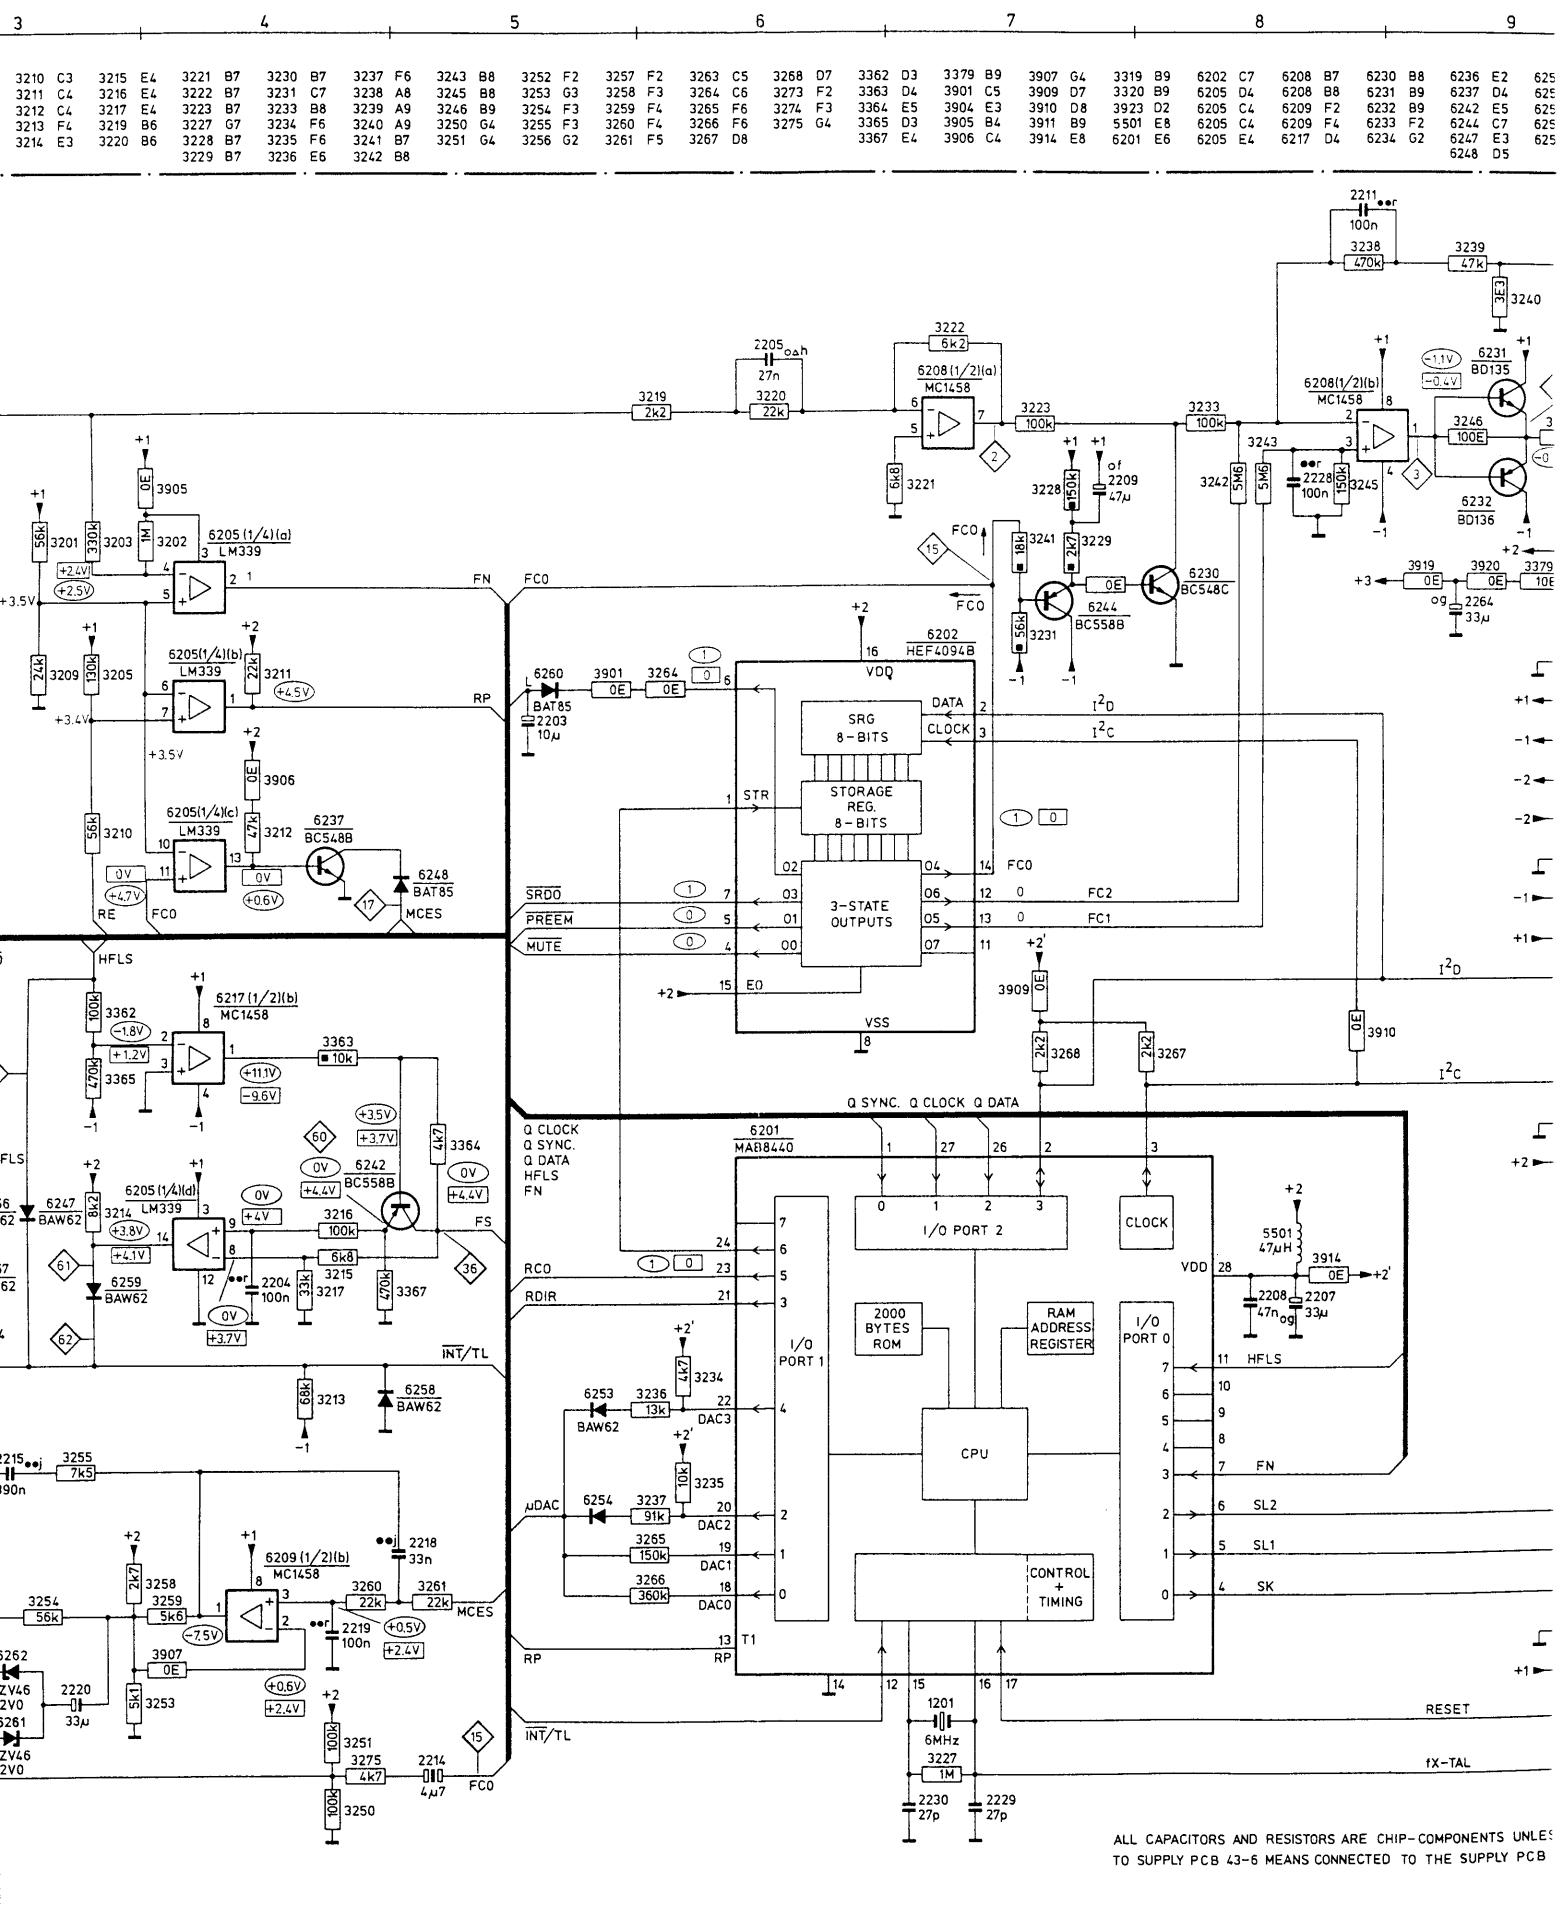

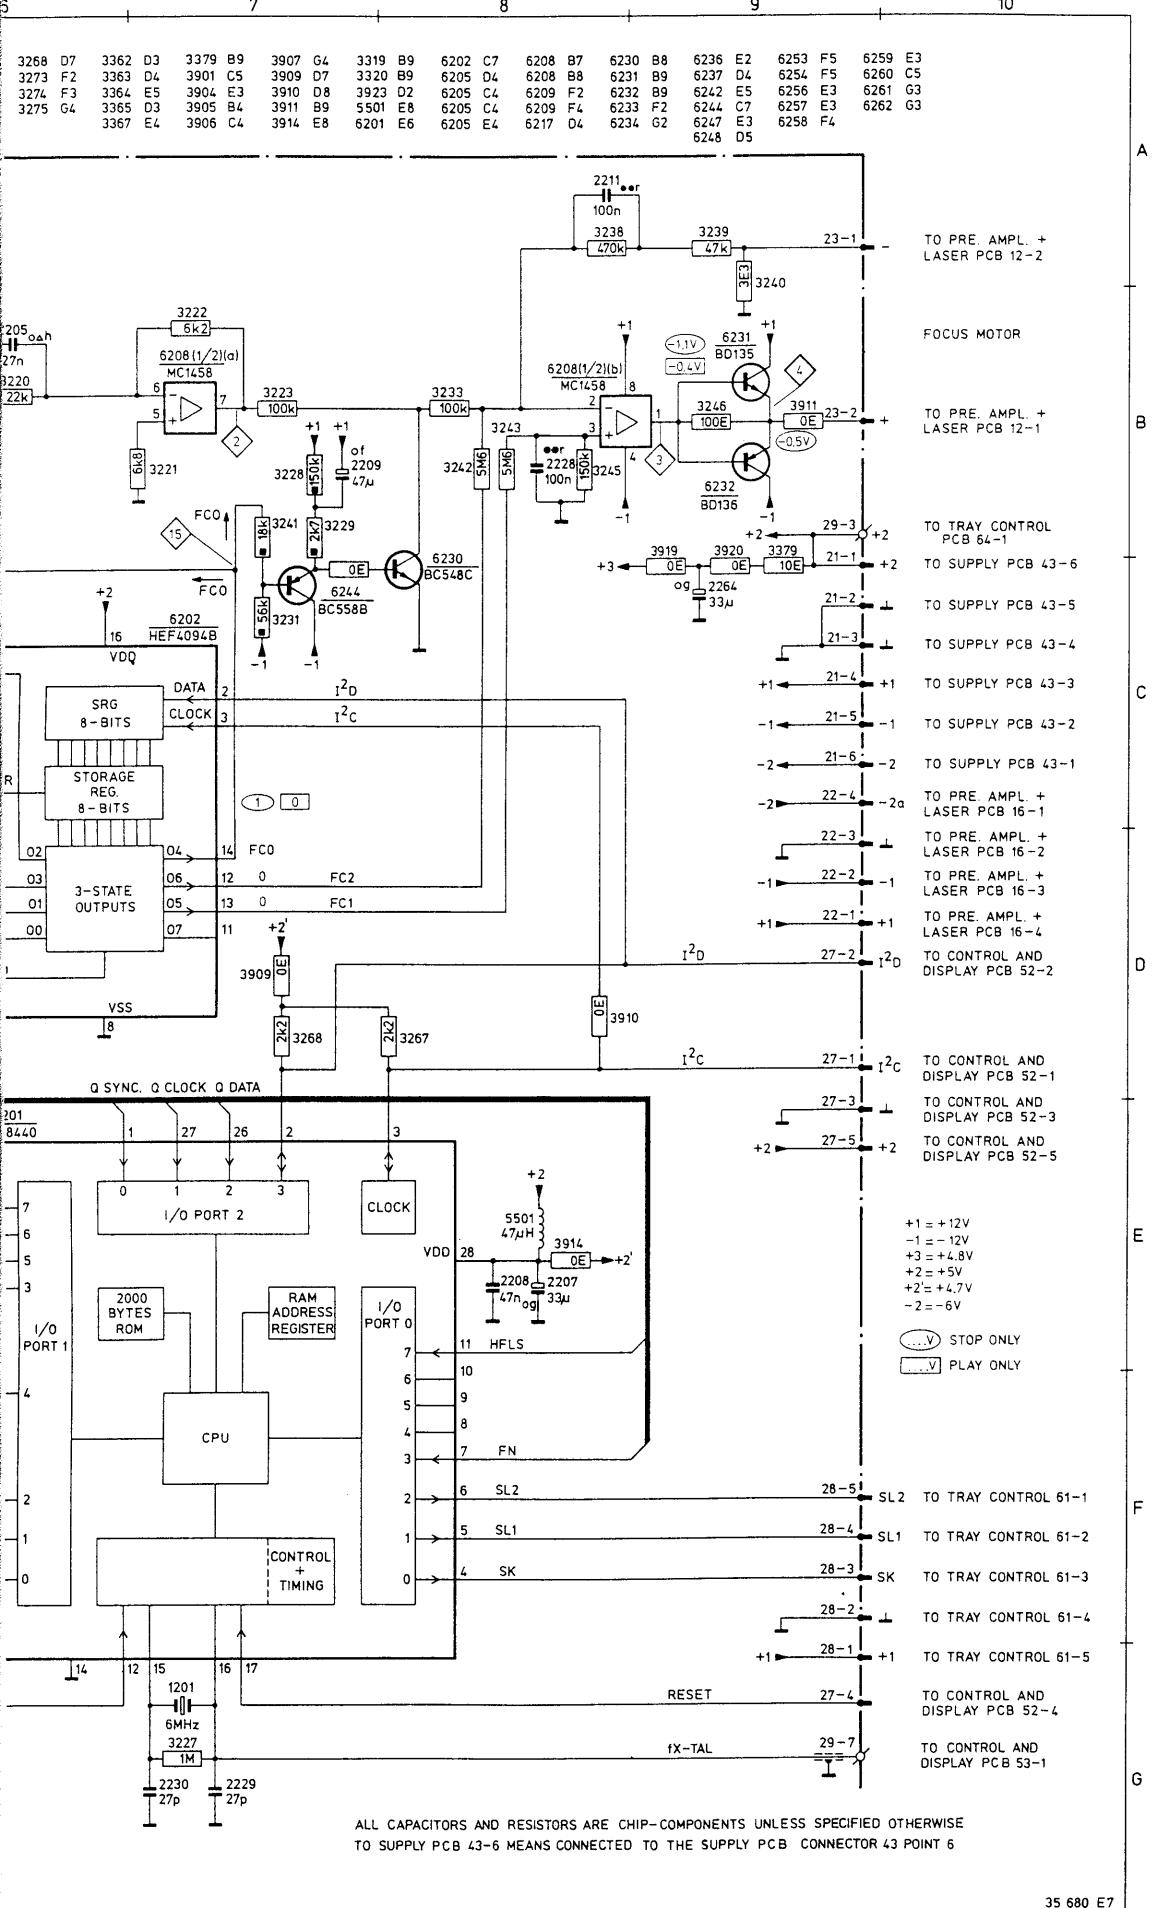


1201	C3	2208	B3	2217	I2	2229	B3	2238	I3	2247	H4	2259	G3	2266	G3	3205	B4	3211	B4	3216	C4	3222	F3	3233	F3	3238	E3
2203	D2	2211	E3	2218	H3	2230	C3	2239	I4	2250	I4	2261	D4	2267	G2	3207	D2	3212	B4	3217	C4	3223	F3	3234	C3	3239	E2
2204	B4	2214	H2	2219	H3	2233	I4	2243	G4	2251	G3	2262	C4	3201	B4	3208	D2	3213	B3	3219	D3	3227	C3	3235	C3	3240	E2
2205	D2	2215	H3	2220	I2	2236	I3	2244	H3	2256	H4	2264	E4	3202	B4	3209	B4	3214	B4	3220	E3	3230	E3	3236	C3	3242	E3
2207	B2	2216	H2	2228	E2	2237	I4	2246	G4	2257	H4	2265	G3	3203	B4	3210	B4	3215	B4	3221	E3	3232	B2	3237	C3	3243	E3
3245	F3	3253	I3	3258	I2	3265	C3	3274	H3	3282	H4	3287	E4	3299	D4	3305	D4	3312	G4	3320	E4	3327	I4	3341	C5	3350	H3
3246	E2	3254	I2	3259	I3	3266	C3	3275	H2	3283	H4	3288	E4	3300	D3	3306	D4	3313	F4	3323	I4	3328	I4	3342	C5	3351	G4
3250	I3	3255	H3	3260	H3	3267	I4	3279	I4	3284	G4	3291	H4	3301	D4	3307	D4	3316	H3	3324	I3	3335	F4	3345	H4	3352	G4
3251	I2	3256	H2	3261	H3	3268	B2	3280	I4	3285	E5	3292	H4	3302	D4	3308	E4	3318	E3	3325	I3	3336	G4	3346	I4	3353	G4
3252	H2	3257	I2	3264	C2	3273	I2	3281	G5	3286	D5	3298	E4	3304	C4	3311	G4	3319	E3	3326	I4	3340	C5	3349	G3	3356	G3
3357	G4	3363	B4	3372	H4	3380	G3	3386	G2	3394	E4	3399	D4	3907	I3	3913	H4	3918	E3	5501	B2	6205	B4	6213	H4	6218	G3
3358	G4	3364	B4	3373	I4	3381	C3	3387	G2	3395	D4	3901	D2	3909	B2	3914	C2	3919	E4	5502	H2	6208	F3	6214	D4	6230	F3
3359	H4	3365	B5	3375	G4	3382	G3	3391	C4	3396	E4	3904	B4	3910	B2	3915	D5	3920	E4	5503	H2	6209	H3	6215	G4	6231	F2
3360	G4	3367	C4	3376	G3	3384	G2	3392	D4	3397	F3	3905	C4	3911	E2	3916	D3	3921	G2	6201	B3	6211	F4	6216	E4	6232	E2
3362	A4	3370	H4	3379	E5	3385	G2	3393	D4	3398	D3	3906	B4	3912	H4	3917	G4	3923	B3	6202	C2	6212	I4	6217	B5	6233	H2
6234	H2	6240	G3	6248	F1	6253	C3	6258	B3	6256	D2	6261	E4	6267	G2	6273	B4	6279	C2	6285	F4	6291	H4	6297	G3	6303	E2
6236	D2	6241	G3	6249	C4	6254	C3	6259	B4	6264	E4	6269	D4	6275	B2	6281	C4	6287	F4	6293	H4	6299	G3	6305	E2		
6237	C4	6242	C4	6250	G5	6255	F4	6260	D2	6265	E4	6270	G4	6276	B2	6282	C4	6288	F4	6294	H4	6299	G3	6305	E2		
6238	E3	6243	E5	6251	E4	6256	C2	6261	I2	6266	I4	6271	H4	6277	G2	6283	E4	6289	F4	6295	H4	6299	G3	6305	E2		
6239	E3	6247	B3	6252	G4	6257	C3	6262	I3	6267	I4	6272	H4	6278	G2	6284	E4	6289	F4	6295	H4	6299	G3	6305	E2		

SERVO

MAB8440P/D034	μP	4822 209 10885	0E	chip jumper
HEF4094B		5322 209 14485	2E2	4822 111 90507
LM339N		4822 209 80631	3E3	4822 111 90447
MC1458N		4822 209 81349	4E7	5322 111 90376
			100E	5322 111 90091
BC548C		4822 130 44196	120E	4822 111 90403
BD135		4822 130 40823	470E	4822 111 90217
BD136		4822 130 40824	680E	4822 111 90162
BC635		5322 130 44349	820E	4822 111 90171
BC636		4822 130 44283	1k	5322 111 90092
BC558B		4822 130 44197	1k5	4822 111 90151
			1k8	5322 111 90101
BAW62		4822 130 30613	2k2	4822 111 90248
BAT85		4822 130 31983	2k7	4822 111 90179
BZV46-2V0		4822 130 31248	3k3	4822 111 90188
			3k9	4822 116 60156
1201	6 MHz	4822 242 70392	4k7	5322 111 90111
			5k1	5322 111 90268
5501	47 mH	4822 156 20966	5k6	5322 111 90114
			6k2	4822 111 90545
2203	10 μF-10 V	5322 124 14066	6k8	4822 111 90544
2208	47 nF-50 V	4822 122 10288	7k5	5322 111 90276
2214	4.7 μF-35 V bip	4822 124 21292	8k2	5322 111 90251
2220	33 μF-10 V	4822 124 20945	10k	4822 111 90512
			13k	4822 111 90155
2229, 2230	27 pF	4822 122 31966	15k	5322 111 90267
			18k	4822 111 90514
28p		4822 255 40156	22k	4822 111 90248
Miscellaneous			33k	4822 111 90514
Mica washer for 6231/6232		4822 255 40133	36k	4822 111 90543
Spring clip for 6231/6232		4822 255 40128	47k	5322 111 90115
			56k	4822 111 90202
			68k	4822 111 90542
			75k	4822 116 60185
			82k	5322 111 90277
			91k	4822 111 90214
			100k	4822 111 90214
			120k	4822 111 90149
			130k	4822 111 90511
			150k	4822 116 60166
			180k	5322 111 90273
			220k	4822 111 90197
			330k	4822 111 90513
			360k	4822 111 90515
			470k	4822 111 90161
			1M	4822 111 90252
			5M6	4822 111 90508


1984-07-02

SERVO P.C.B.

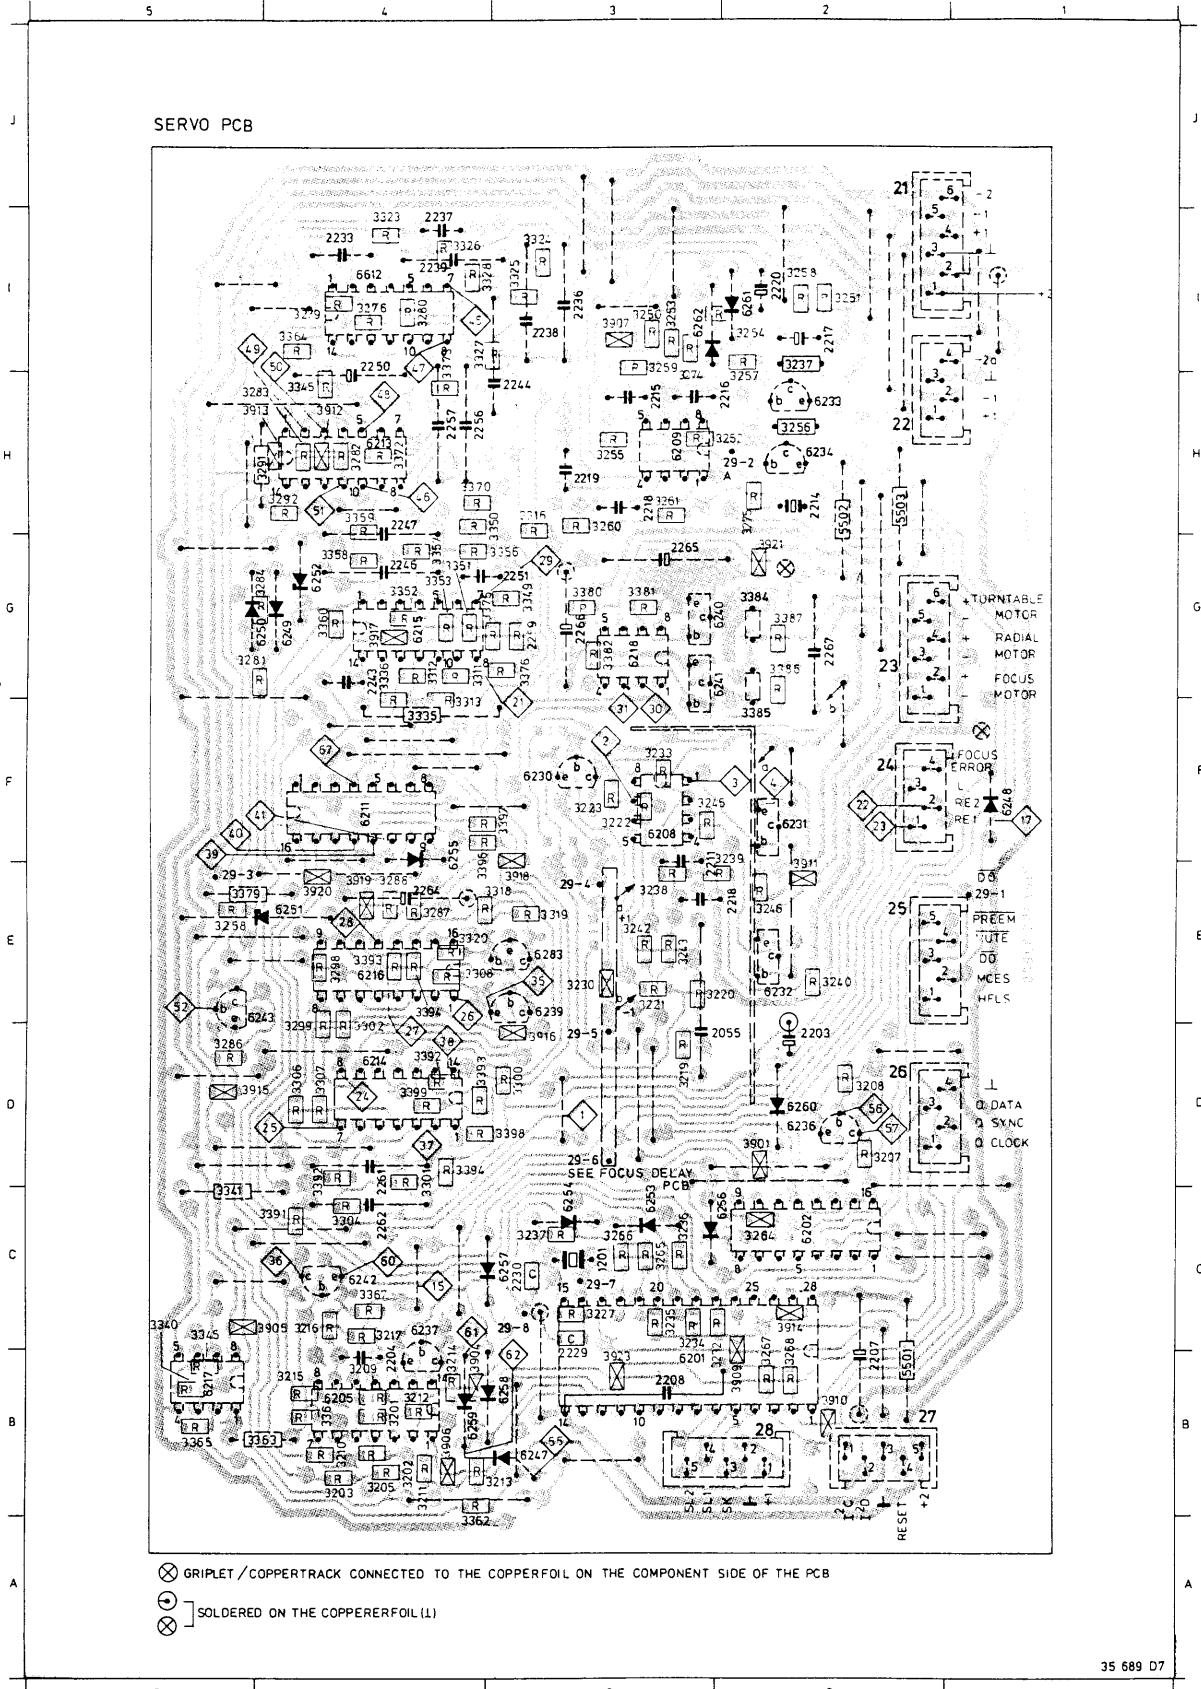


35 689 D7


FOCUS DELAY P.C.B.

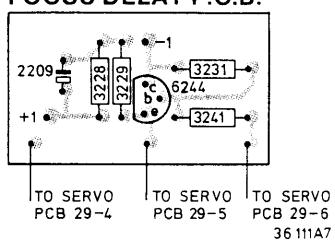


FOCUS DELAY P.C.B.

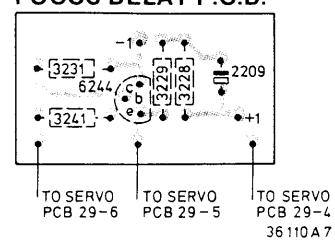


SERVO P.C.B.

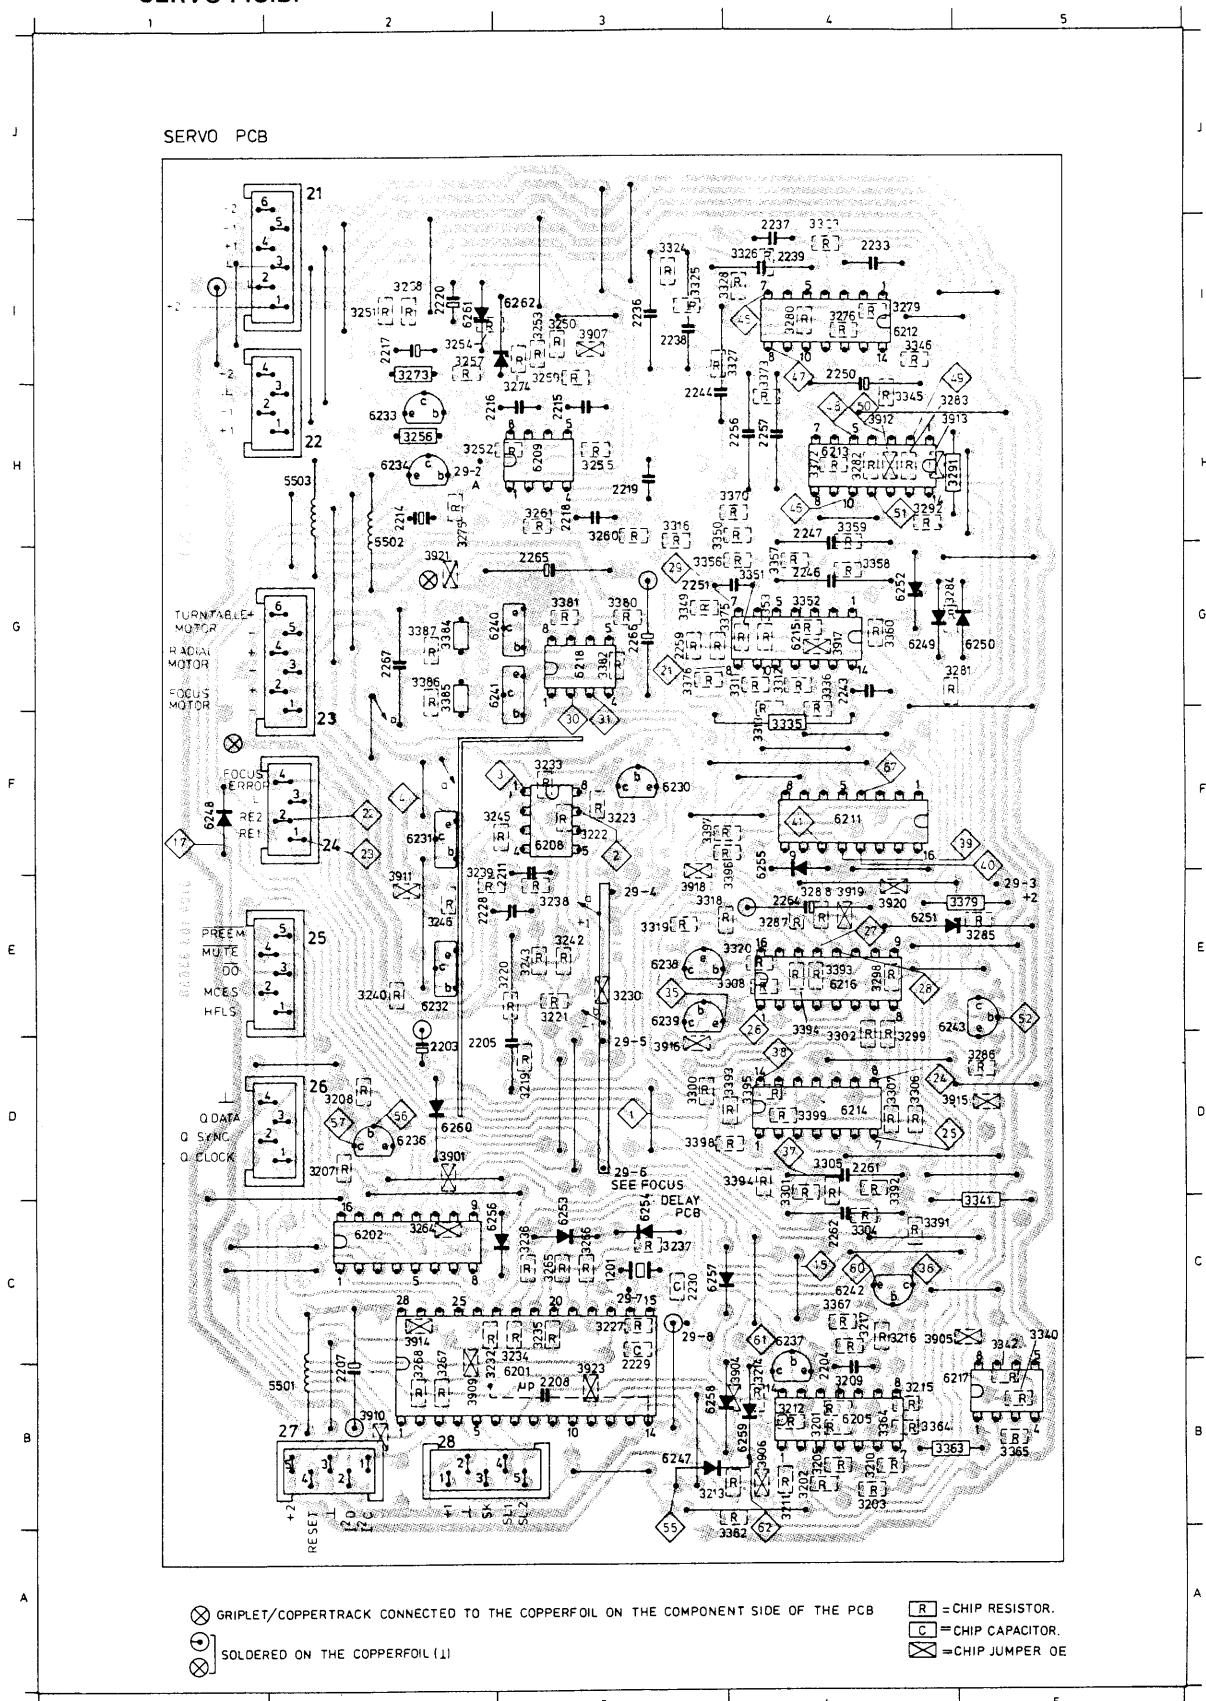

FOCUS DELAY P.C.B.

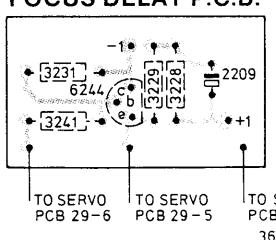

FOCUS DELAY P.C.B.

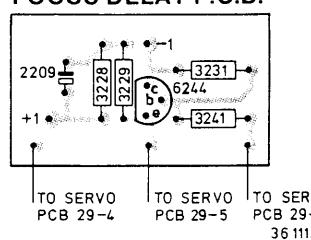


1201 C3	2208 B3	2217 I2	2229 B3	2238 I3	2247 H4	2259 G3	2266 G3	3205 B4	3211 B4	3216 C4	3222 F3	3233 F3	3238 E3
2203 D2	2211 E3	2218 H3	2230 C3	2239 I4	2250 I4	2261 D4	2267 G2	3207 D2	3212 B4	3217 C4	3223 F3	3234 C3	3239 E2
2204 B4	2214 H2	2219 H3	2223 I4	2243 G4	2251 G3	2262 C4	3201 B4	3208 D2	3213 B3	3219 D3	3227 C3	3235 C3	3240 E2
2205 D2	2215 H3	2220 I2	2236 I3	2244 H3	2256 H4	2264 E4	3202 B4	3209 B4	3214 B4	3220 E3	3230 E3	3236 C3	3242 E3
2207 B2	2216 H2	2228 E2	2237 I4	2246 G4	2257 H4	2265 G3	3203 B4	3210 B4	3215 B4	3221 E3	3232 B2	3237 C3	3243 E3
3245 F3	3253 I3	3258 I2	3265 C3	3274 H3	3282 H4	3287 E4	3299 D4	3305 D4	3312 G4	3320 E4	3327 I4	3341 C5	3350 H3
3246 E2	3254 I2	3259 I3	3266 C3	3275 H2	3283 H4	3288 E4	3300 D3	3306 D4	3313 F4	3323 I4	3328 I4	3342 C5	3351 G4
3250 I3	3255 H3	3260 H3	3267 I4	3279 I4	3284 G4	3291 H4	3301 D4	3307 D4	3316 H3	3324 I3	3335 F4	3345 H4	3352 G4
3251 I2	3256 H2	3261 H3	3268 B2	3280 I4	3285 E5	3292 H4	3302 D4	3308 E4	3318 E3	3325 I3	3336 G4	3346 I4	3353 G4
3252 H2	3257 I2	3264 C2	3273 I2	3281 G5	3286 D5	3298 E4	3304 C4	3311 G4	3319 E3	3326 I4	3340 C5	3349 G3	3356 G3
3357 G4	3363 B4	3372 H4	3380 G3	3386 G2	3394 E4	3399 D4	3907 I3	3913 H4	3918 E3	5501 B2	6205 B4	6213 H4	6218 G3
3358 G4	3364 B4	3373 I4	3381 G3	3387 G2	3395 D4	3901 D2	3909 B2	3914 C2	3919 E4	5502 H2	6208 F3	6214 D4	6230 F3
3359 H4	3365 B5	3375 G4	3382 G3	3391 C4	3396 E4	3904 B4	3910 B2	3915 D5	3920 E4	5503 H2	6209 H3	6215 G4	6231 F2
3360 G4	3367 C4	3376 G3	3384 G2	3392 D4	3397 F3	3905 C4	3911 E2	3916 D3	3921 G2	6201 B3	6211 F4	6216 E4	6232 E2
3362 A4	3370 H4	3379 E5	3385 G2	3393 D4	3398 D3	3906 B4	3912 H4	3917 G4	3923 B3	6202 C2	6212 I4	6217 B5	6233 H2
6234 H2	6240 G3	6248 F1	6253 C3	6258 B3									
6236 D2	6241 G3	6249 G4	6254 C3	6259 B4									
6237 C4	6242 C4	6250 G5	6255 F4	6260 D2									
6238 E3	6243 E5	6251 E4	6256 C2	6261 I2									
6239 E3	6247 B3	6252 G4	6257 C3	6262 I3									

SERVO


		0E Chip jumper	4822 111 90163
HEF4053BP		2E2	4822 111 90507
LM324N		3E3	4822 111 90447
HEF4070BP		4E7	5322 111 90376
TCA240		100E	5322 111 90091
μ A714CN		120E	4822 111 90403
		470E	4822 111 90217
		680E	4822 111 90162
		820E	4822 111 90171
		1k	5322 111 90171
BC548B		1k5	4822 111 90151
BF494		1k8	5322 111 90101
BD135		2k2	4822 111 90248
BD136		2k7	4822 111 90179
		3k3	4822 111 90188
		3k9	4822 116 60156
		4k7	5322 111 90111
BAW62		5k1	5322 111 90268
BZX79-C2V4		5k6	5322 111 90114
BZX79-C5V1		6k2	4822 111 90545
		6k8	4822 111 90544
		7k5	5322 111 90276
		8k2	5322 111 90118
		10k	4822 111 90248
5502, 5503		13k	4822 111 90509
		15k	4822 111 90196
		18k	4822 111 90238
		22k	4822 111 90251
		24k	4822 111 90512
2236, 2238	5,6 nF-63 V-2%	27k	4822 111 90155
2239	390 pF-630V-2%	33k	5322 111 90267
2244	680 pF-250 V-2%	36k	4822 111 90514
2246, 2247,	{ 6,8 nF-63 V-2%	47k	4822 111 90543
2257	{ 1,8 nF-160 V-2%	56k	5322 111 90115
2261, 2262,	{	68k	4822 111 90202
2256		75k	4822 111 90542
		82k	4822 116 60185
		91k	5322 111 90277
2259	22 nF	100k	4822 111 90214
		120k	4822 111 90149
		130k	4822 111 90511
		150k	4822 116 60166
		180k	5322 111 90273
		220k	4822 111 90197
		330k	4822 111 90513
3291	47k-SFR16	360k	4822 111 90515
3384, 3385	PTC 9E4-60 V	470k	4822 111 90161
		1M	4822 111 90252
		5M6	4822 111 90508

SERVO 2

2233 E 2	2246 F 7	2261 J11	3276 G 1	3284 E 3	3293 G 5	3304 J 1	3313 F 6	3324 B 5	3340 K 9	3351 E 7	3360 F 9	3380 C 12	3391 J 10	33
2236 B 5	2247 G 7	2262 J11	3279 A 2	3285 D 4	3294 G 3	3305 K 1	3314 F 6	3325 B 6	3341 J 8	3352 E 7	3370 D 8	3381 B 13	3392 K 11	33
2237 B 5	2250 A 8		3232 D 5	3286 D 4	3298 I 4	3306 K 2	3316 H 8	3326 B 5	3342 K 9	3352 E 8	3372 B 9	3382 D 13	3393 J 13	55
2238 B 5	2251 D 7	2265 B13	3280 B 2	3287 F 4	3299 I 2	3307 J 3	3318 H 7	3327 C 6	3345 A 8	3356 F 7	3373 C 8	3384 C 13	3394 J 11	55
2239 B 6	2256 C 8	2266 D13	3281 D 3	3288 F 4	3300 H 1	3308 K 6	3319 I 7	3328 C 7	3346 B 9	3357 G 7	3375 E 8	3385 C 13	3395 J 13	62
2243 G 9	2257 C 8	2267 D14	3282 B 2	3291 G 2	3301 I 1	3311 E 6	3320 I 7	3335 I 8	3349 D 8	3358 F 8	3376 E 9	3386 E 13	3396 I 14	62
2244 D 7	2259 E 8		3283 B 3	3292 G 2	3302 I 3	3312 F 5	3323 B 4	3336 I 8	3350 E 7	3359 G 8	3387 E 14	3397 I 13		62

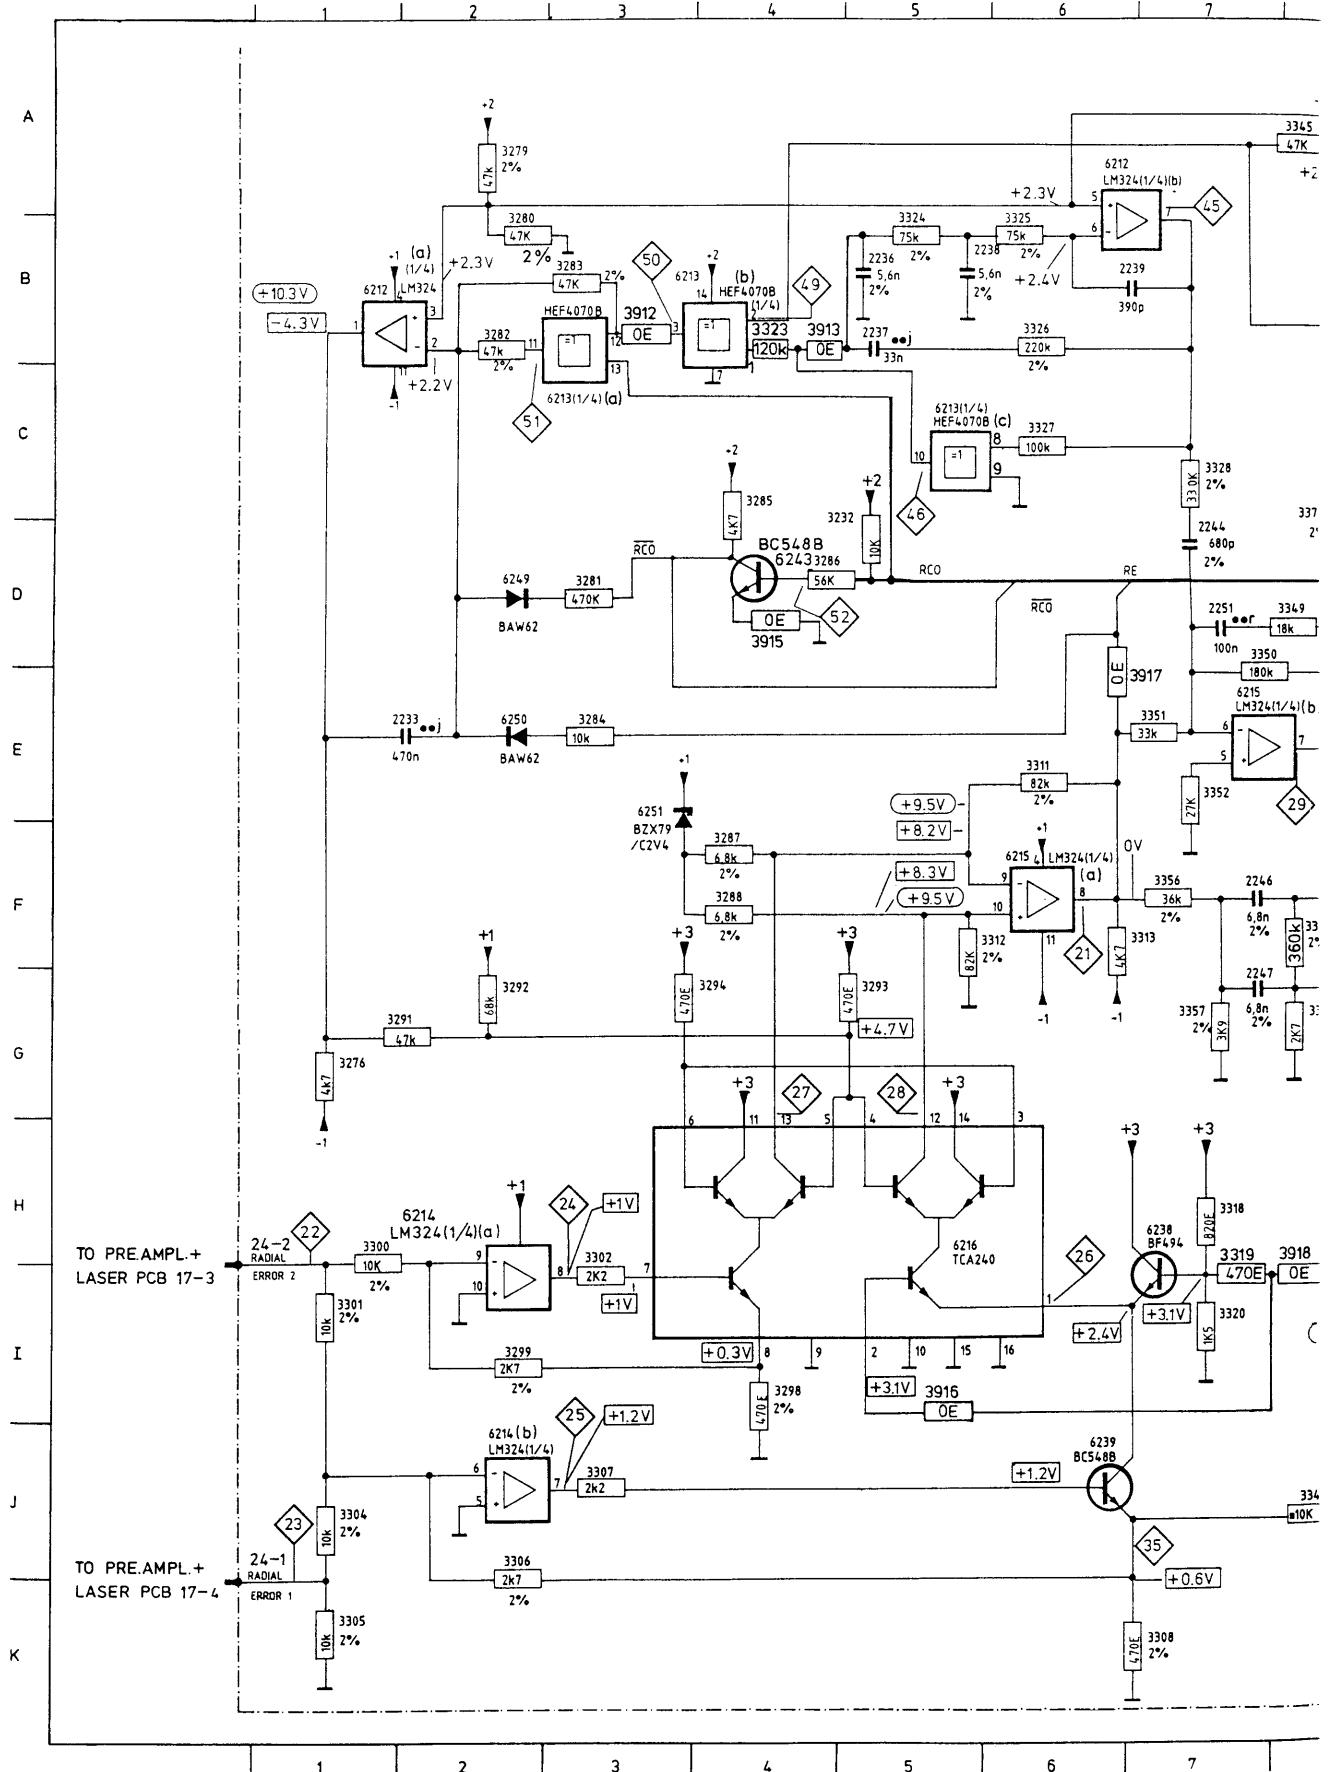


G 1	3284 E 3	3293 G 5	3304 J 1	3313 F 6	3324 B 5	3340 K 9	3351 E 7	3360 F 9	3380 C 12	3391 J 10	3398 J 12	6212 C 9	6214 H 2	6216 H 5	6243 D 4	3912 B3	
A 2	3285 D 4	3294 G 3	3305 K 1	3318 B 6	3325 B 6	3341 J 8	3352 E 7	3370 D 8	3381 B 13	3392 K 11	3399 K 13	6212 A 8	6214 J12	6217 J 9	6249 D 2	3913 C4	
D 5	3286 D 4	3298 I 4	3306 K 2	3316 H 8	3326 B 6	3342 K 9	3353 E 8	3372 B 9	3382 D 13	3393 J 13	5502 A 13	6213 B 3	6214 J14	6218 C 13	6250 E 2	3915 D4	
B 2	3287 F 4	3299 I 2	3307 J 3	3318 H 7	3327 C 6	3345 A 8	3356 F 7	3373 C 8	3384 C 13	3394 J 11	5503 E 13	6213 C 5	6215 H 9	6238 I 7	6251 E 3	3915 I5	
D 3	3288 F 4	3300 H 1	3308 K 6	3319 I 7	3328 C 7	3346 B 9	3357 G 7	3375 E 8	3385 C 13	3395 J 13	6211 F 11	6213 B 4	6215 F 8	6239 J 6	6252 G 8	3916 E6	
B 2	3291 G 2	3301 I 1	3311 E 6	3320 I 7	3335 I 8	3349 D 8	3358 F 8	3376 E 9	3386 E 13	3396 I 14	6212 A 6	6213 B 8	6215 F 6	6240 B 13	6255 F 10	3917 E6	
B 3	3292 G 2	3302 I 3	3312 F 5	3323 B 4	3336 I 8	3350 E 7	3359 G 8	3387 E 14	3397 I 13	6212 B 1	6214 J 2	6215 F 7	6241 D 13	3918 I8			

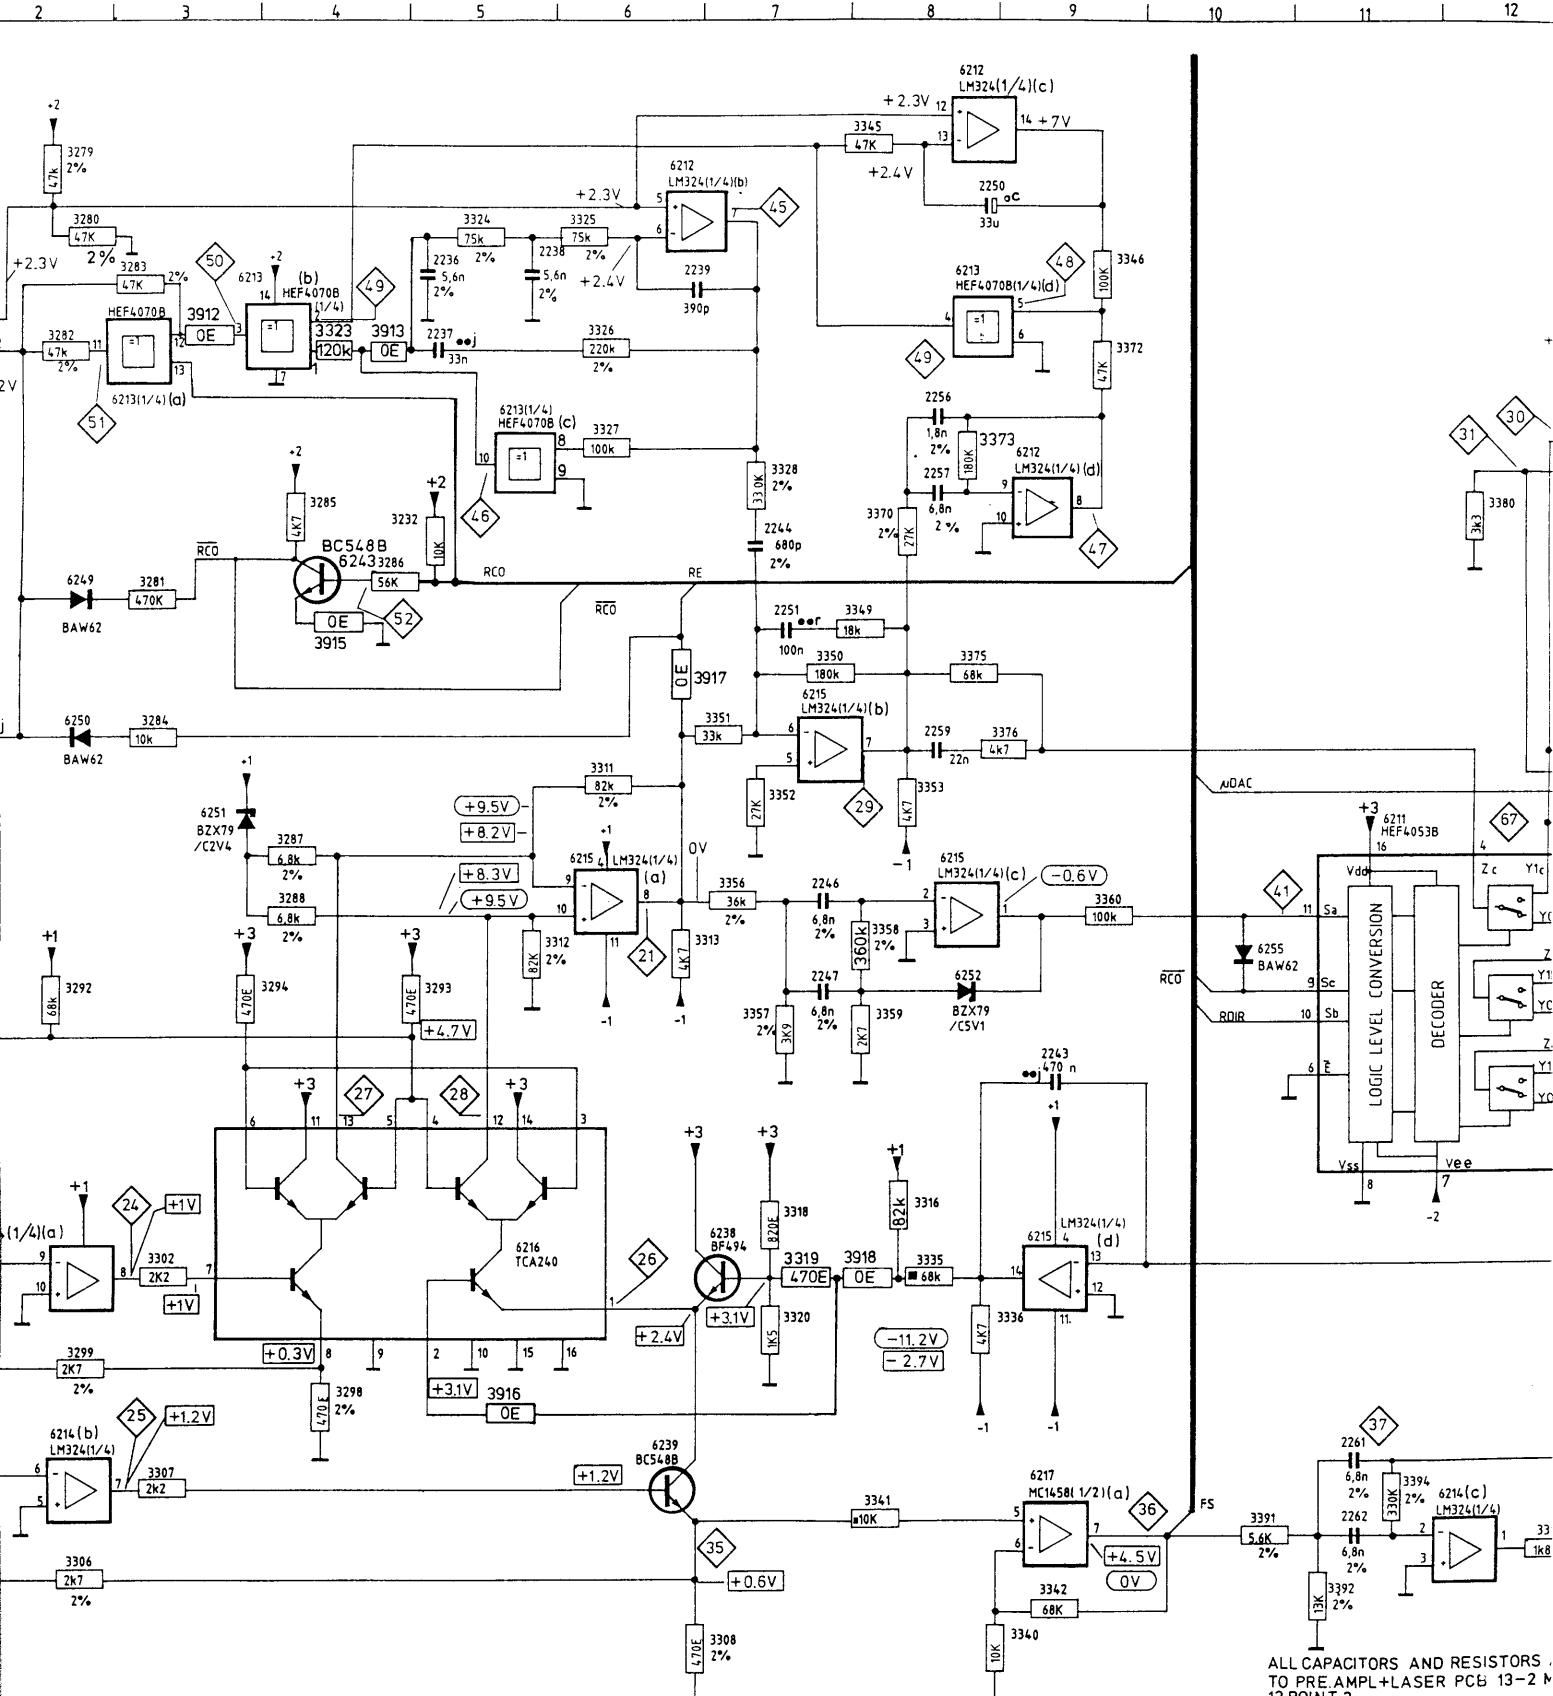

ALL CAPACITORS AND RESISTORS
TO PRE.AMP+LASER PCB 13-2
13 POINT 2

1984-07-02

0 C 12	3391 J 10	3398 J 12	6212' C 9	6214 H 2	6216 H 5	6243 D 4	3912 B3
1 B 13	3392 K 11	3399 K 13	6212 A 8	6214 J12	6217 J 9	6249 D 2	3913 C4
2 D 13	3393 J 13	5502 B 3	6214 J14	6218 C 13	6250 E 2	3921 A13	
4 C 13	3394 J 13	5503 E 13	6213 C 5	6215 H 9	6238 J 7	6251 E 3	3915 D4
5 C 13	3395 J 13	6211 F 11	6213 B 4	6215 F 8	6239 J 6	6252 G 8	3916 I5
6 E 13	3396 I 14	6212 A 6	6213 B 8	6215 F6	6240 B 13	6255 F 10	3917 E6
7 E 14	3397 I 13	6212 B 1	6214 J 2	6215 F7	6241 D 13	3918 I8	

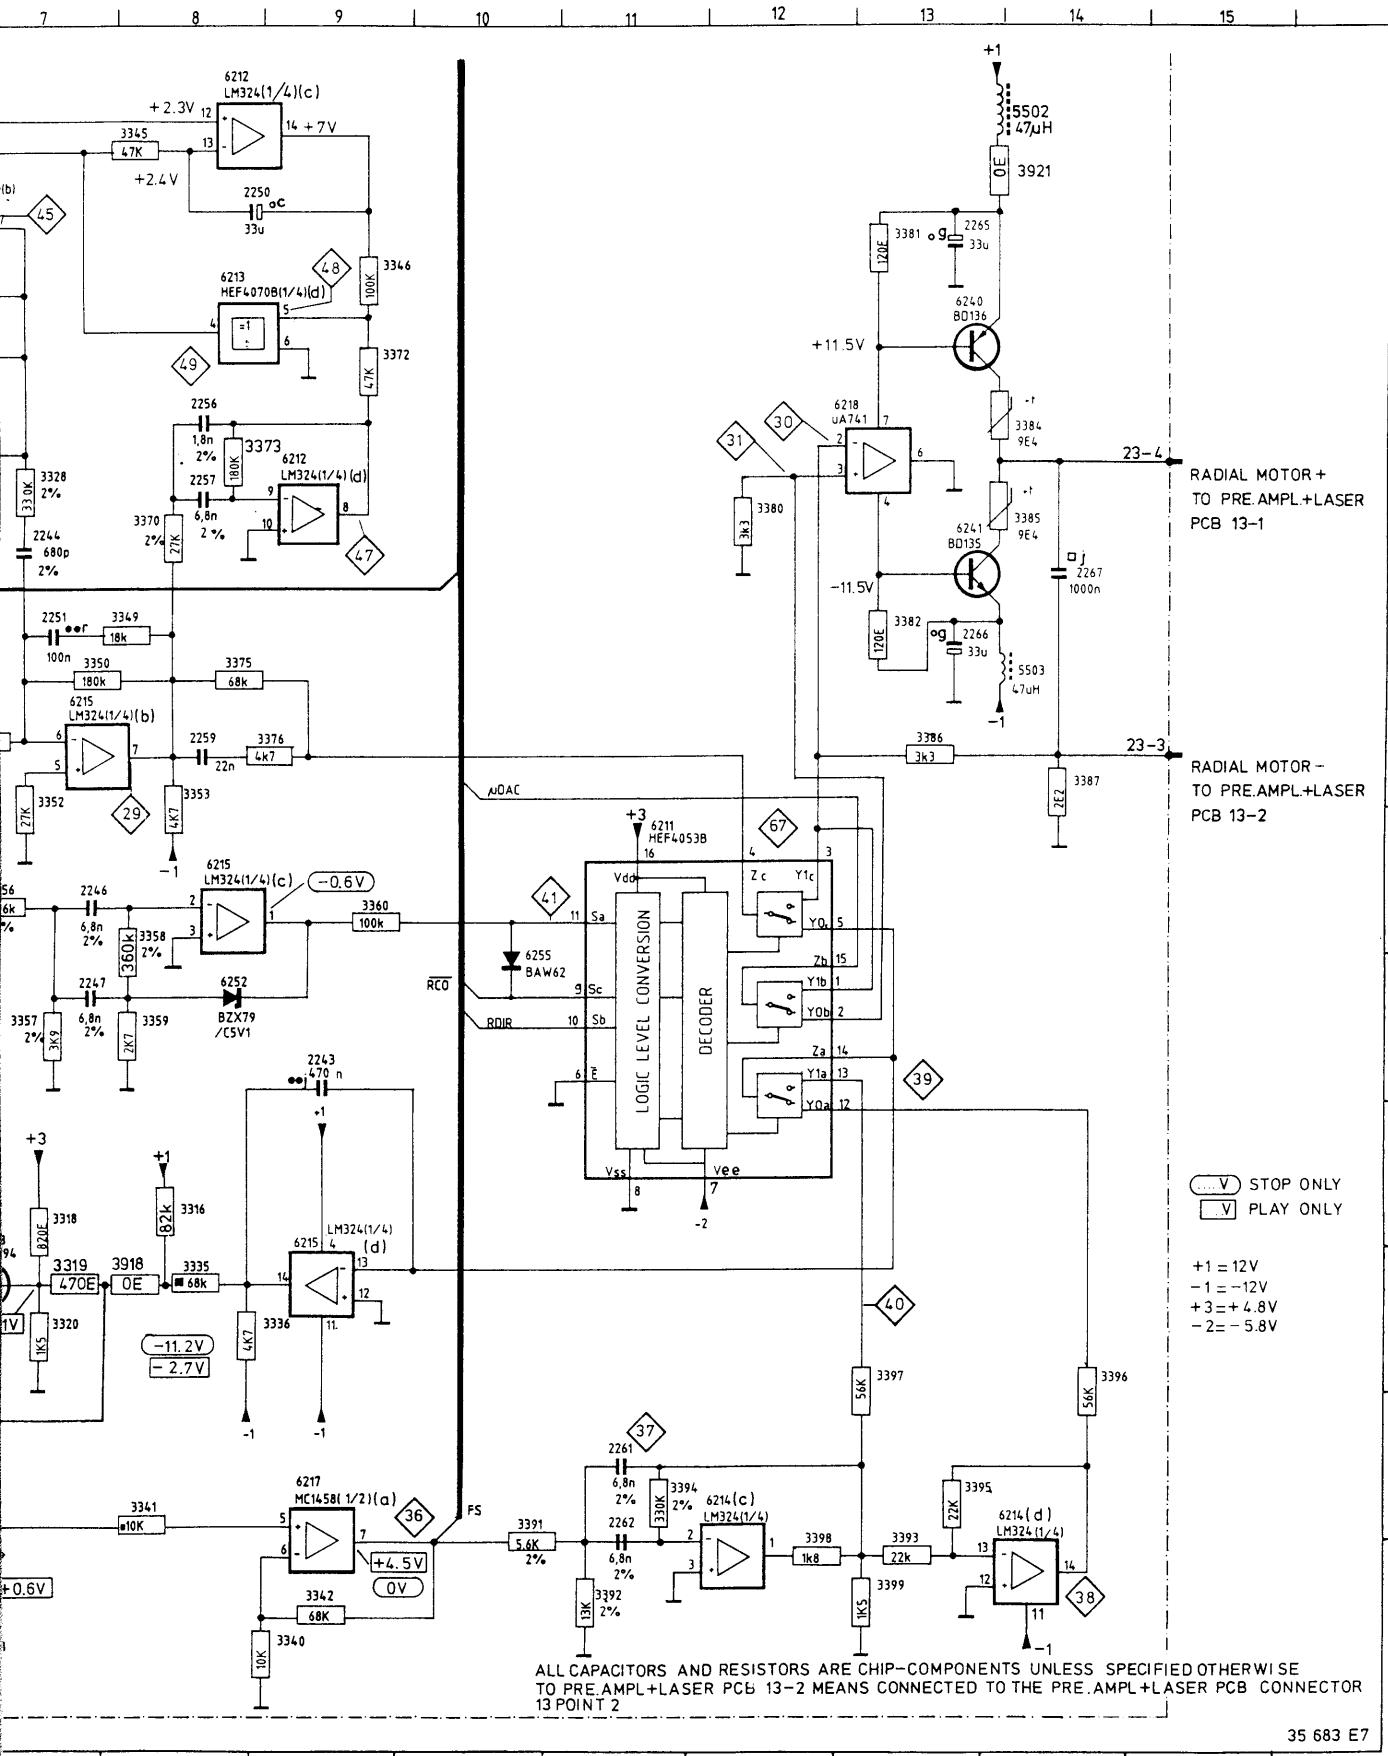


(---) STOP ONLY
[] PLAY ONLY


+1 = 12V
-1 = -12V
+3 = +4.8V
-2 = -5.8V

35 683 E7


SERVO 1

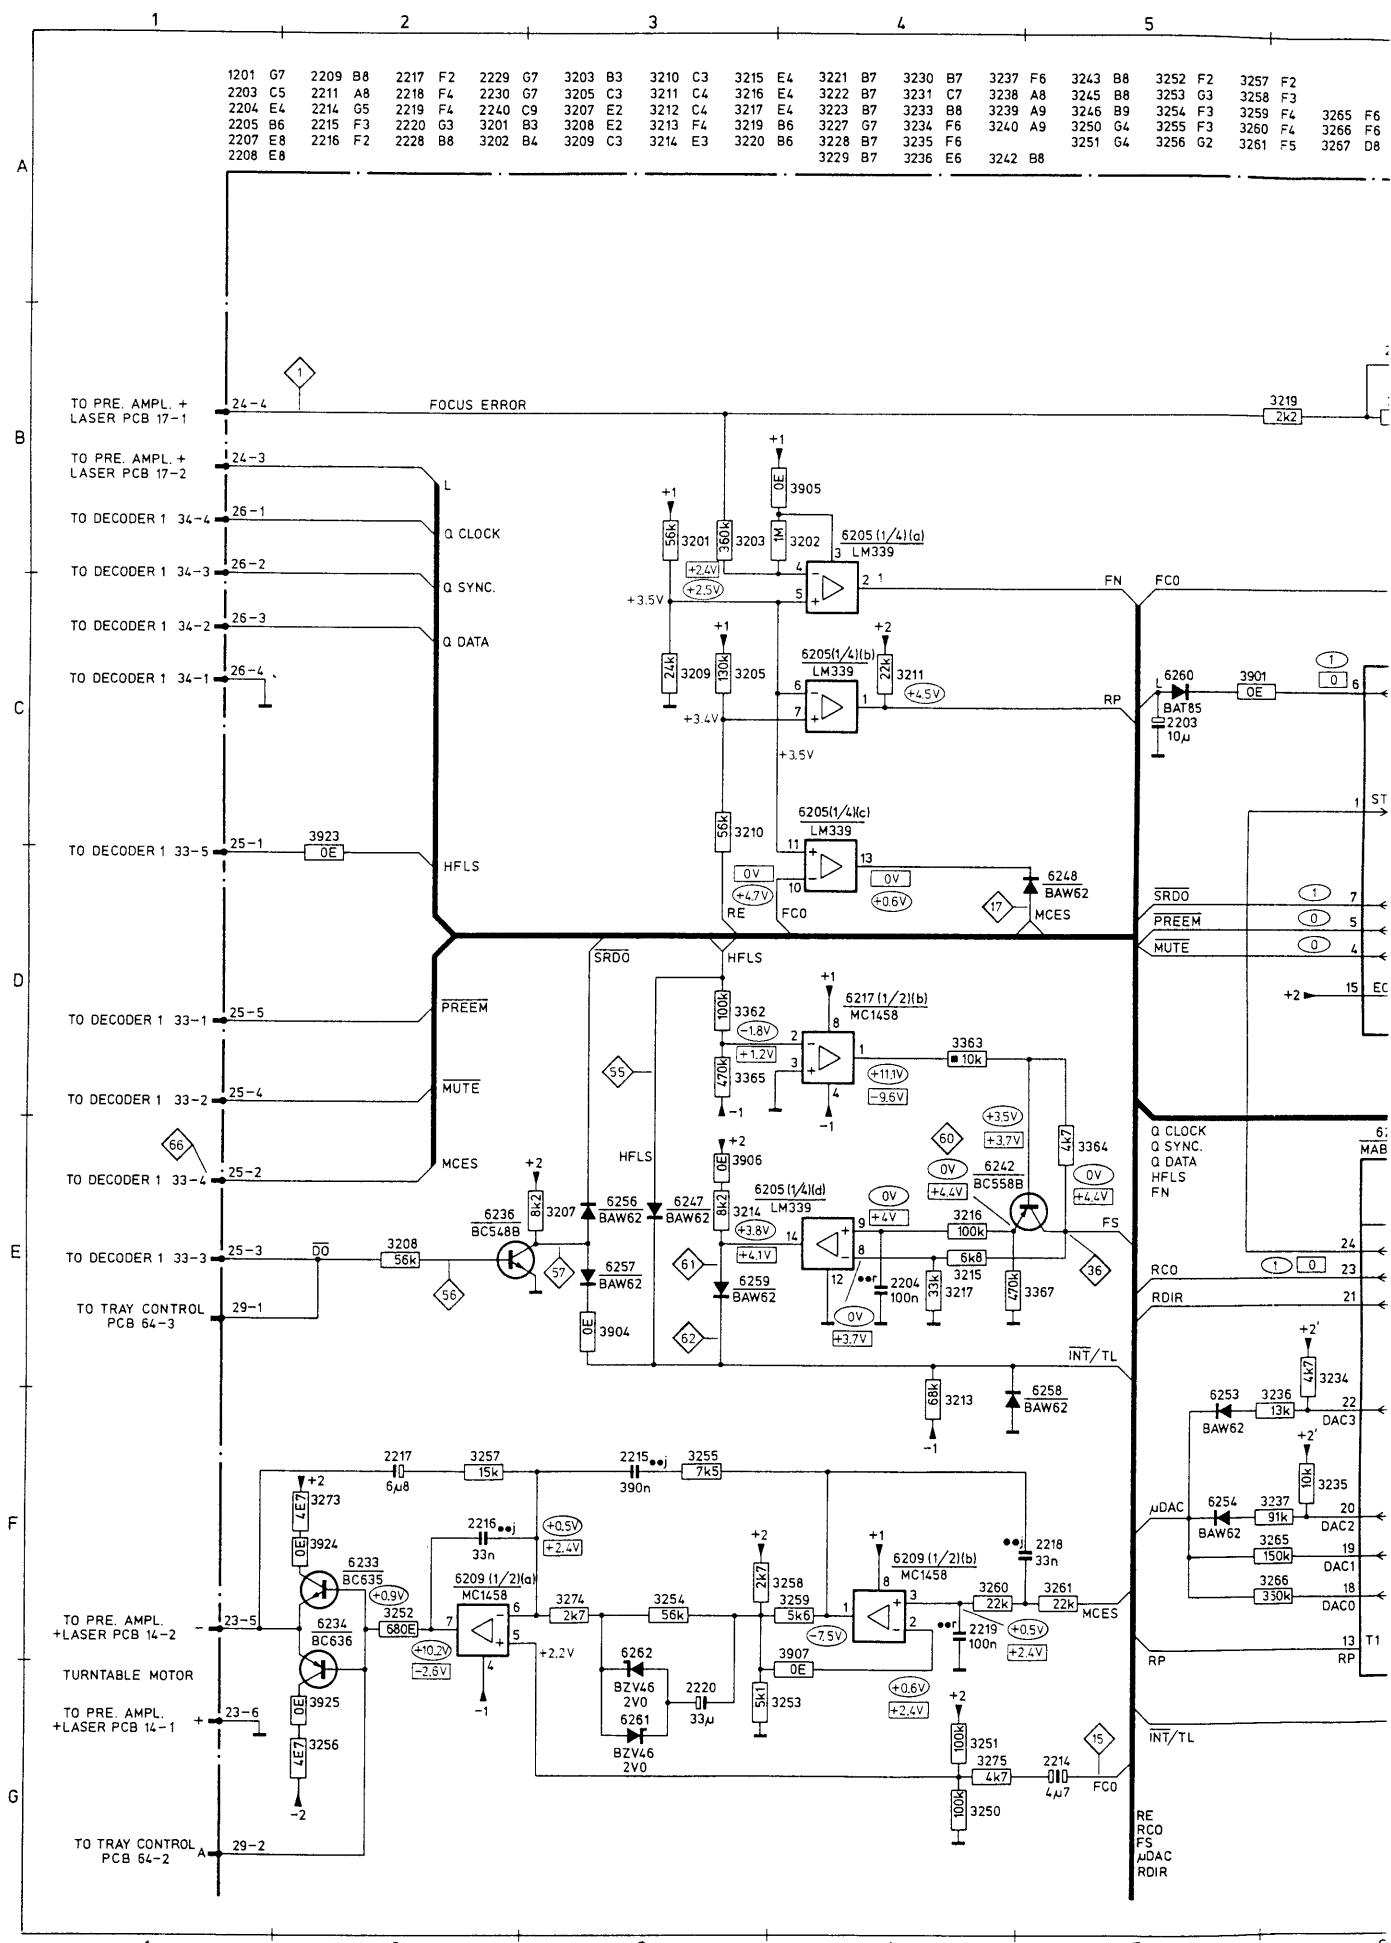

2	3	4	5	6	7	8
2217 F2 2229 G7 3203 B3 3210 C3 3215 E4 3221 B7 3230 B7 3237 F6 3243 B8 3252 F2 3257 F2 3268 D7 3362 D3 3379 B9 3907 G4 3919 B9 6201 E6 2218 F4 2230 G7 3205 C3 3211 C4 3216 E4 3222 B7 3231 C7 3238 A8 3245 B8 3253 G3 3258 F3 3273 F2 3363 D4 3901 B2 3909 D7 3920 B9 6202 C7 6205 D4 62 2219 F4 2240 C9 3207 E2 3212 C4 3217 E4 3223 B7 3233 B8 3239 A9 3246 B9 3254 F3 3259 F4 3265 F6 3274 F3 3364 E5 3904 E3 3910 D8 3923 D2 6205 C4 62 2220 G3 3201 B3 3208 E2 3213 F4 3219 B6 3227 G7 3234 F6 3240 A9 3250 G4 3255 F3 3260 F4 3266 F6 3275 G4 3365 D3 3905 B4 3911 B9 3924 F2 6205 C4 62 2228 B8 3202 B4 3209 C3 3214 E3 3220 B6 3228 B7 3235 F6 3251 G4 3256 G2 3261 F5 3267 D8 3367 E4 3906 E3 3914 E8 3925 G2 6205 E4 62 3229 B7 3236 E6 3242 B8	3222 5k2 6208 (1/2)(a) MC1458 3223 100k 3233 100k 3243 5M 3243 5M 6201 E6 6202 C7 6205 D4 62 3219 2k2 27n 3220 22k 3228 100k 3230 2k2 3231 100k 3233 100k 3242 5M 3243 5M 6201 E6 6202 C7 6205 D4 62 3221 6k3 6208 (1/2)(a) MC1458 3223 100k 3228 100k 3230 2k2 3231 100k 3233 100k 3242 5M 3243 5M 6201 E6 6202 C7 6205 D4 62 3228 100k 3230 2k2 3231 100k 3233 100k 3242 5M 3243 5M 6201 E6 6202 C7 6205 D4 62 3233 100k 3242 5M 3243 5M 6201 E6 6202 C7 6205 D4 62 5201 E8					

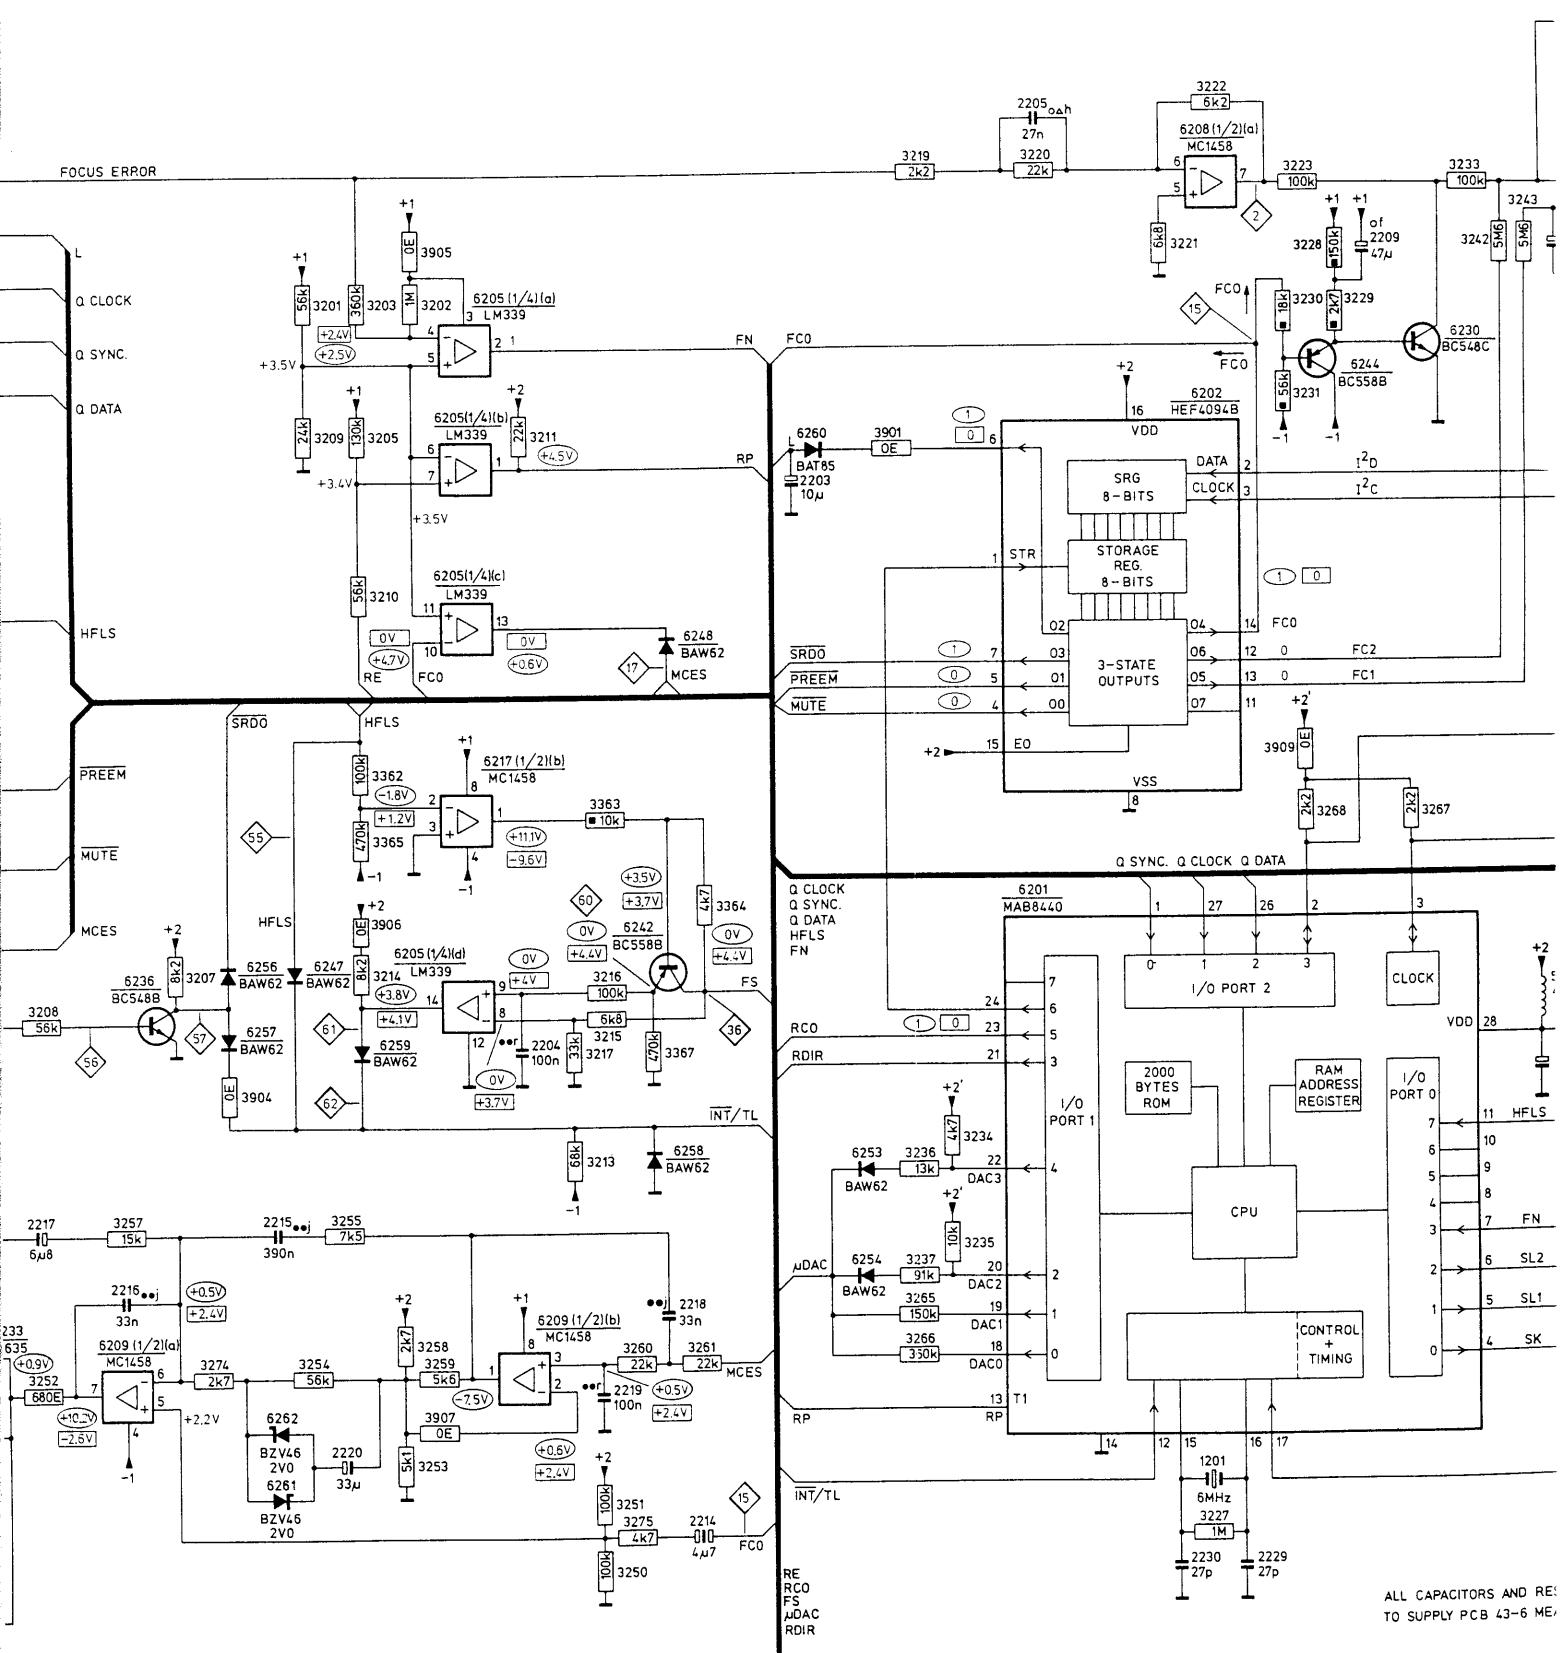

ALL CAPACITORS AND RE:
TO SUPPLY PCB 43-6 ME

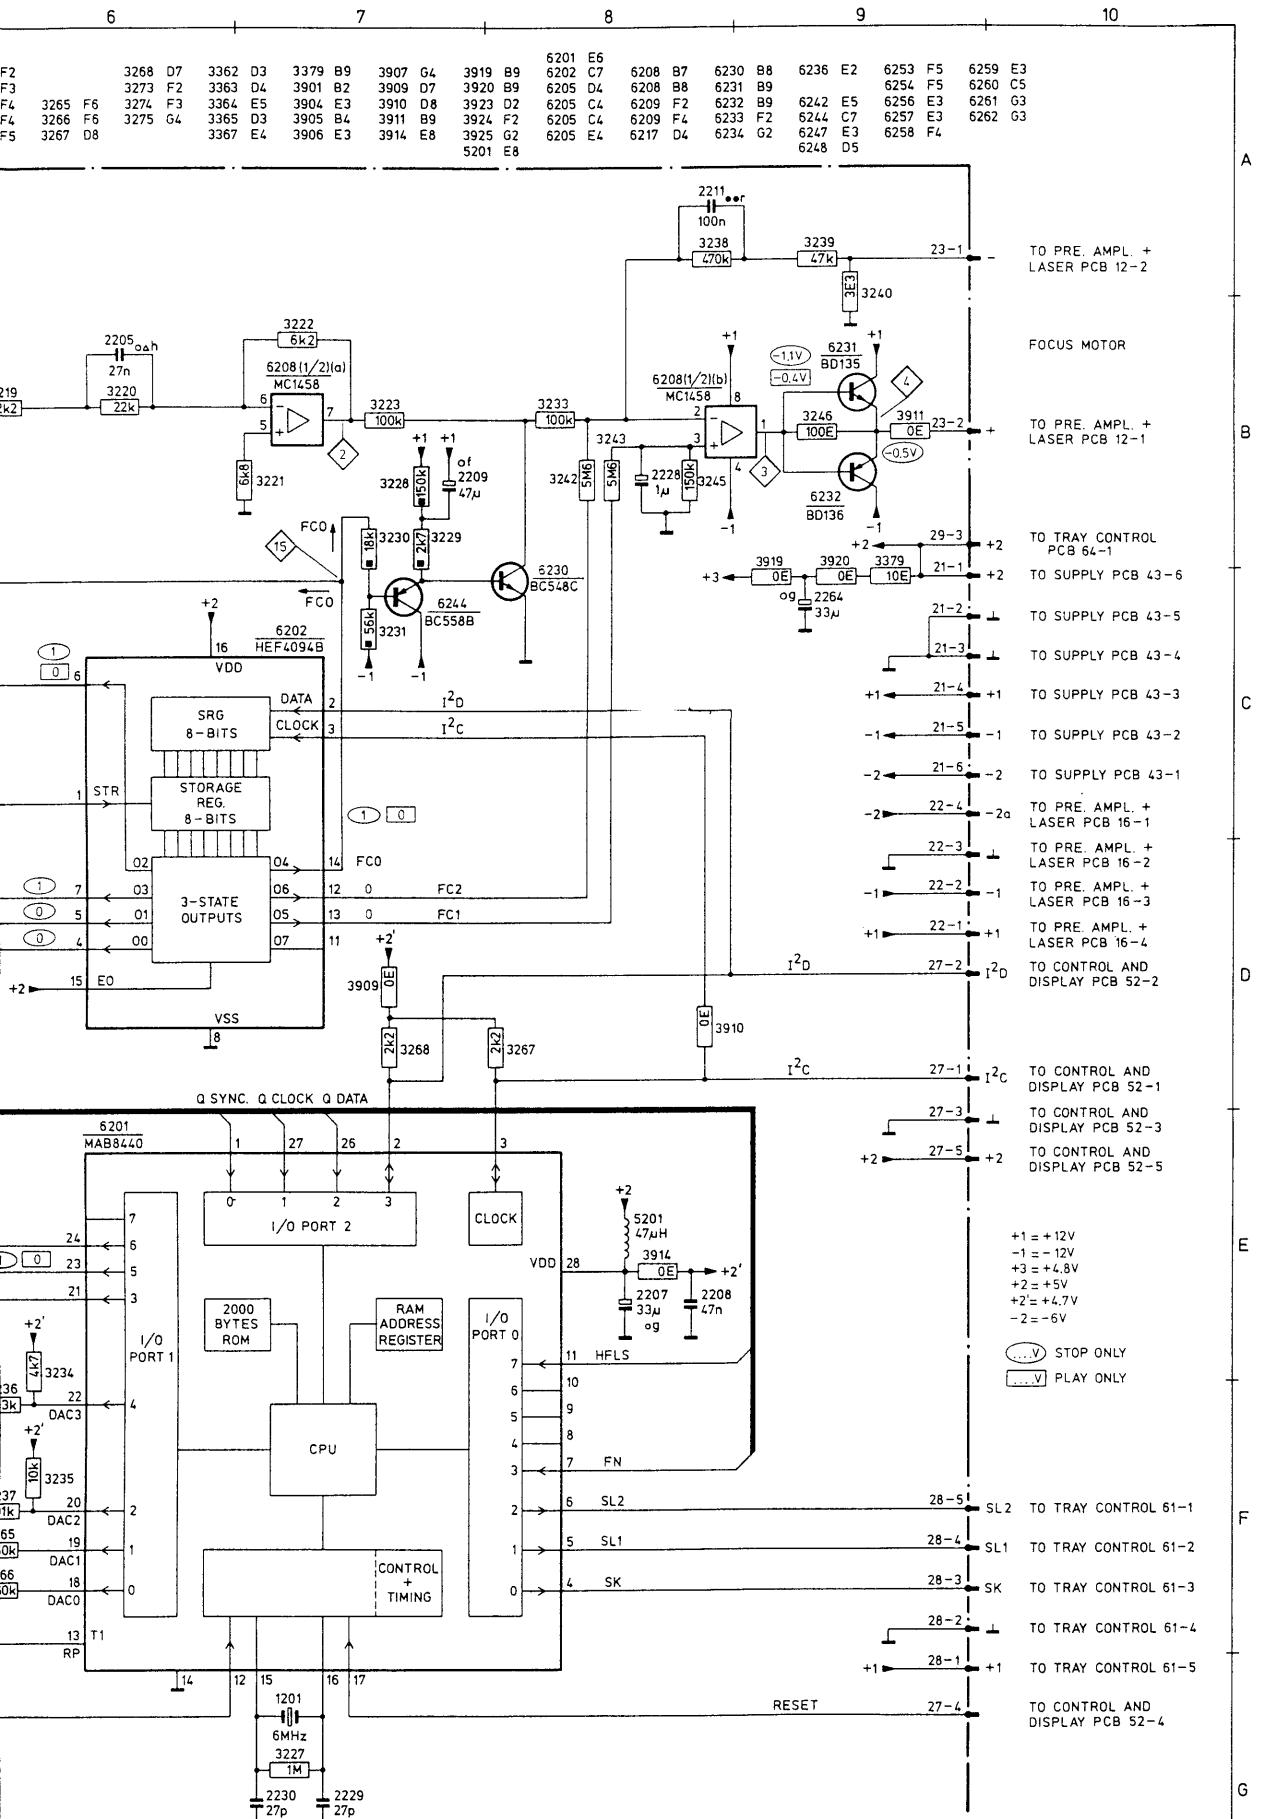


1201	C03	2208	B03	2216	H03	2228	F02	2237	I04	2246	G04	2257	H04	2265	G03	3203	B04	3210	B04	3216	C04	3222	E03	3230	D03	3235	C03
2203	D01	2209	E03	2217	I02	2229	C03	2238	I03	2247	H04	2259	G03	2266	G03	3205	B04	3211	B04	3217	C04	3223	E03	3231	E03	3236	C03
2204	B04	2211	E03	2218	H03	2230	C03	2239	I04	2250	H04	2261	D04	2267	G02	3207	B04	3213	B03	3219	D03	3227	C03	3232	B02	3237	C03
2205	F02	2214	H02	2219	H03	2223	I04	2243	G04	2251	G03	2262	C04	3201	B04	3208	D01	3214	B04	3220	F02	3228	F03	3233	E03	3238	F03
2207	C02	2215	H03	2220	I02	2236	I03	2244	H03	2256	H03	2264	F04	3202	B04	3209	B04	3215	B04	3221	F03	3229	F03	3234	B03	3239	F02
3240	F02	3250	I03	3255	H03	3260	H03	3268	B02	3279	I04	3284	G04	3291	H04	3299	D04	3305	C04	3312	G04	3320	F04	3327	I04	3341	C05
3242	F03	3251	I02	3256	I02	3261	H03	3273	I02	3280	I04	3285	F05	3292	H04	3300	D03	3306	D04	3313	E04	3323	I04	3328	I03	3342	C05
3243	F03	3252	H02	3257	H02	3265	C03	3274	H03	3281	G04	3286	D05	3293	F04	3301	C04	3307	D04	3316	H03	3324	I03	3335	E04	3345	H04
3245	E02	3253	I03	3258	H02	3266	C03	3275	H02	3282	H04	3287	F04	3294	F04	3302	D04	3308	F04	3318	F03	3325	I03	3336	G04	3346	I04
3246	F02	3254	I02	3259	H03	3267	B02	3276	I04	3283	H04	3288	F04	3298	F04	3304	C04	3311	G04	3319	F03	3326	I04	3340	C05	3349	G04
3350	G03	3357	G04	3363	B04	3372	H04	3380	G03	3386	G02	3394	D04	3399	D04	3907	I03	3913	H04	3918	F03	3924	I02	6201	B03	6211	E04
3351	G04	3358	G04	3364	B04	3373	H04	3381	G03	3387	G02	3395	D04	3901	D01	3909	B02	3914	C02	3919	F04	3925	H02	6202	C02	6212	I04
3352	G04	3359	H04	3365	B05	3375	G03	3382	G03	3391	C04	3396	F04	3904	B04	3910	B02	3915	D04	3920	F04	5201	B02	6205	B04	6213	H04
3353	G04	3360	G04	3367	C04	3376	G03	3384	G02	3392	C04	3397	E03	3905	C04	3911	F02	3916	D03	3921	G02	5202	H02	6208	E03	6214	D04
3356	G03	3362	A04	3370	H04	3379	F05	3385	E02	3393	D04	3398	F04	3906	B04	3912	H04	3917	G04	3923	B03	5203	H02	6209	H03	6215	G04

SERVO

MAB8440P/D041	μ P	4822 209 10916	
HEF4094B		5322 209 14485	
LM339N		4822 209 80631	
MC1458N		4822 209 81349	
		4822 130 44196	
BD135		4822 130 40823	
BD136		4822 130 40824	
BC635		5322 130 44349	
BC636		4822 130 44283	
BC558B		4822 130 44197	
		4822 130 30613	
BZV46-2V0		4822 130 31248	
1201	6 MHz	4822 242 70392	
5201	47 mH	4822 156 20966	
2203	10 μ F-10 V	5322 124 14066	
2208	47 nF-50 V	4822 122 10288	
2214	4,7 μ F-35 V bip	4822 124 21292	
2217	6,8 μ F-16 V	4822 124 21538	
2220	33 μ F-10 V	4822 124 20945	
2228	1 μ F-25 V	4822 124 21457	
2229,2230	27 pF	4822 122 31966	
	IC		
28p		4822 255 40156	
Miscellaneous			
Mica washer for 6231/6232		4822 255 40133	
Spring clip for 6231/6232		4822 255 40128	
3256,3273	4,7 Ω fuse res.	4822 111 50483	

SERVO PCB

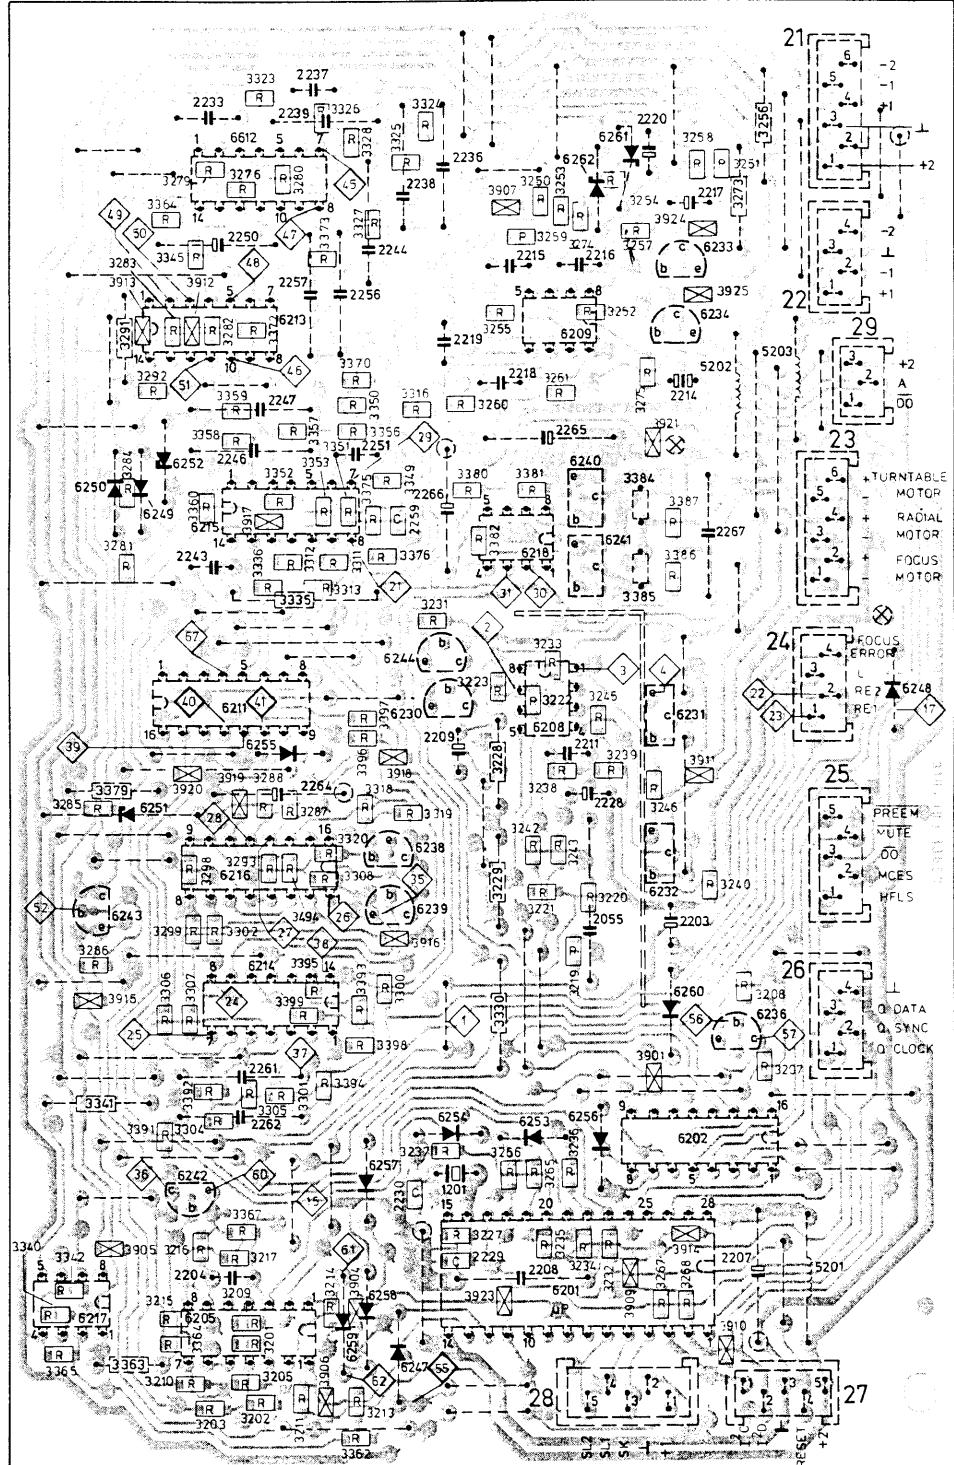


 GRIPLET/COPPERTRACK CONNECTED TO THE COPPERFOIL ON THE COMPONENT SIDE OF THE PCB

36 880 D12/A

SOLDERED ON THE COPPERFOIL (上)

SERVO P.C.B.

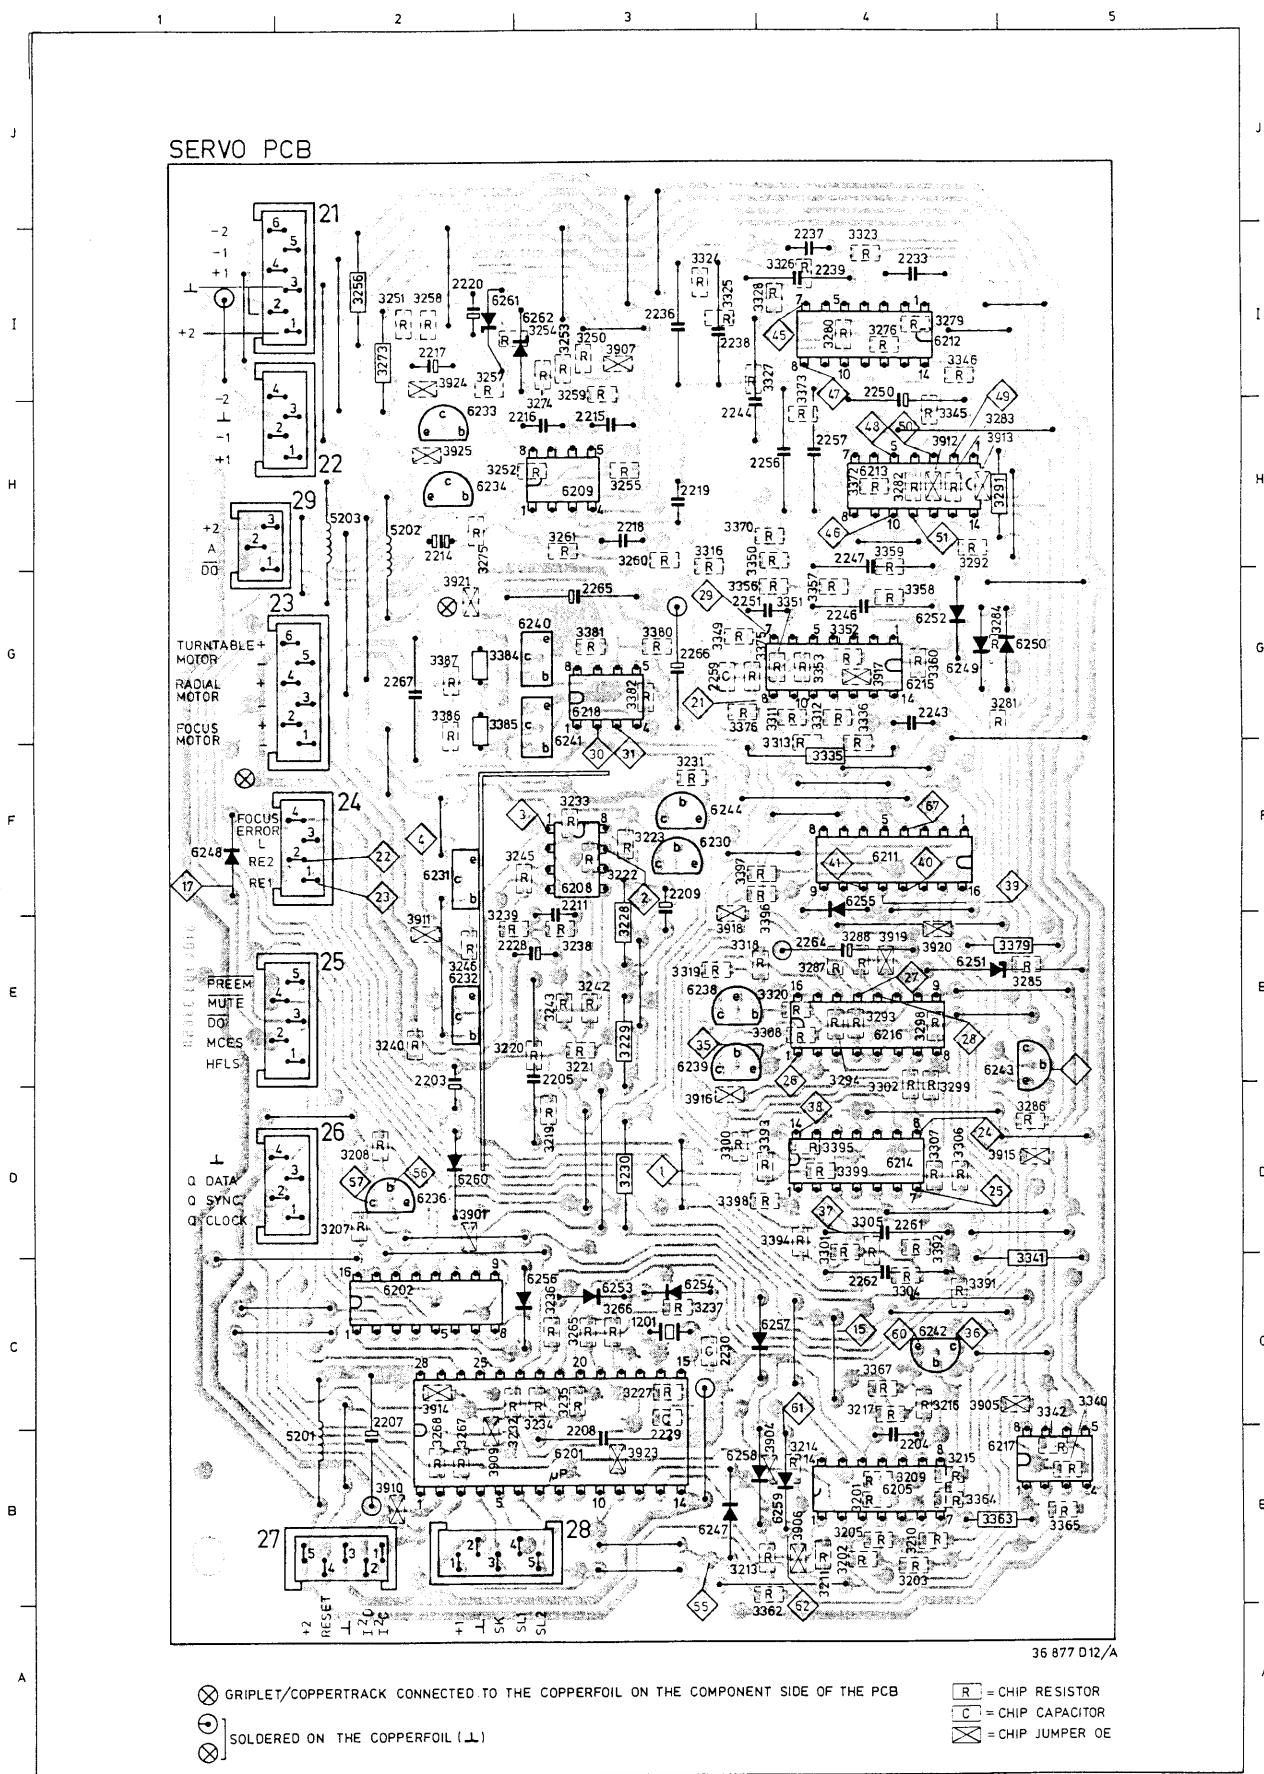

1201	C03	2208	B03	2216	H03	2228	E02	2237	I04	2246	G04	2257	H04	2265	G03	3203	B04	3210	B04
2203	E02	2209	F03	2217	I02	2229	B03	2238	I03	2247	H04	2259	G03	2266	G03	3205	B04	3211	B04
2204	B04	2211	F03	2218	H03	2230	C03	2239	I04	2250	I04	2261	D04	2267	G02	3207	D02	3213	B03
2205	E03	2214	H02	2219	H03	2233	I04	2243	G04	2251	G03	2262	C04	3201	B04	3208	D02	3214	B04
2207	C02	2215	H03	2220	I02	2236	I03	2244	H03	2256	H04	2264	E04	3202	B04	3209	B04	3215	B04

3216	C04	3222	F03	3230	D03	3235	C03	3240	E02	3250	I03	3255	H03	3260	H03	3268	B02	3279	I04
3217	C04	3223	F03	3231	F03	3236	C03	3242	E03	3251	I02	3256	I02	3261	H03	3273	I02	3280	I04
3219	D03	3227	C03	3232	B02	3237	C03	3243	E03	3252	H02	3257	I02	3265	C03	3274	H03	3281	G04
3220	E02	3228	E03	3233	F03	3238	E03	3245	F02	3253	I03	3258	B02	3266	C03	3275	H02	3282	H04
3221	E03	3229	E03	3234	C03	3239	E02	3246	E02	3254	I03	3259	I03	3267	B02	3276	I04	3283	H04

3284	G04	3291	H04	3299	D04	3305	D04	3312	G04	3320	E04	3327	I04	3341	C05	3350	H03	3357	G04
3285	E05	3292	H04	3300	D03	3306	D04	3313	F04	3323	I04	3328	I03	3342	C05	3351	G04	3358	G04
3286	D05	3293	E04	3301	D04	3307	D04	3316	H03	3324	I03	3335	F04	3345	H04	3352	G04	3359	H04
3287	E04	3294	E04	3302	D04	3308	E03	3318	E03	3325	I03	3336	G04	3346	I04	3353	G04	3360	G04
3288	E04	3298	E04	3304	C04	3311	G04	3319	E03	3326	I04	3340	C05	3349	G03	3356	G03	3362	B03


3363	B04	3372	H04	3380	G03	3386	G02	3394	D04	3399	D04	3907	I03	3913	H04	3918	E03	3924	I02
3364	B04	3373	I04	3381	C03	3387	G02	3395	D04	3901	D02	3909	B02	3914	C02	3919	E04	3925	H02
3365	B05	3375	G03	3382	G03	3391	C04	3396	E03	3904	B04	3910	B02	3915	D04	3920	E04	5201	B02
3367	C04	3376	G03	3384	G02	3392	D04	3397	F03	3905	C04	3911	E02	3916	D03	3921	G02	5202	H02
3370	H03	3379	E05	3385	G02	3393	D03	3398	D03	3906	B04	3912	H04	3917	G04	3923	B03	5203	H02

SERVO


HEF4053BP	5322 209 14121	0E	Chip jumper
LM324N	4822 209 80587	1E5	4822 111 90163
HEF4070BP	4822 209 10265	2E2	4822 111 90381
TCA240	4822 209 80629	3E3	4822 111 90507
μ A714CN	4822 209 80617	4E7	4822 111 90447
		100E	5322 111 90376
BC548B	4822 130 44196	120E	5322 111 90091
BF494	4822 130 44195	470E	4822 111 90403
BD135	4822 130 40823	680E	4822 111 90217
BD136	4822 130 40824	820E	4822 111 90162
		1k	4822 111 90171
BAW62	4822 130 30613	1k5	5322 111 90171
BZX79-C2V4	4822 130 31253	1k8	4822 111 90151
BZX79-C5V1	4822 130 34233	2k2	5322 111 90101
		2k7	4822 111 90248
5202, 5203	4822 156 20966	3k3	4822 111 90179
		3k9	4822 111 90188
2236, 2238	5,6 nF-63 V-2%	4k7	4822 116 60156
2239	390 pF-630 V-2%	5k1	5322 111 90111
2244	680 pF-250 V-2%	5k6	5322 111 90268
2246, 2247, } 2257	6,8 nF- 63 V-2%	6k2	5322 111 90114
2261, 2262, }	1,8 nF-160 V-2%	6k8	4822 111 90545
2256	5322 121 54087	7k5	5322 111 90544
		8k2	5322 111 90276
2259	22 nF	10k	5322 111 90118
	4822 122 31797	13k	4822 111 90248
		15k	4822 111 90509
		18k	4822 111 90196
		22k	4822 111 90238
		24k	4822 111 90251
		27k	4822 111 90512
		33k	4822 111 90155
		36k	5322 111 90267
		47k	4822 111 90514
		56k	4822 111 90543
		68k	5322 111 90115
		75k	4822 111 90202
		82k	4822 111 90542
		91k	4822 116 60185
		100k	5322 111 90277
		120k	4822 111 90214
		130k	4822 111 90149
		150k	4822 116 60166
		180k	5322 111 90273
		220k	4822 111 90197
		330k	4822 111 90513
3291	47k-SFR16	360k	4822 111 90515
3384, 3385	PTC 9E4-60 V	470k	4822 111 90161
		1M	4822 111 90252
		5M6	4822 111 90508

SERVO 2

2233 E 2	2246 F 7	2261 J11	3276 G 1	3284 E 3	3293 G 5	3304 J 1	3313 F 6	3324 B 5	3340 K 9	3351 E 7	3360 F 9	3380 C 12	3391 J 10	3	
2236 B 5	2247 G 7	2262 J11	3279 A 2	3285 D 4	3294 G 3	3305 K 1	3316 H 8	3326 B 6	3342 K 9	3352 E 7	3370 D 8	3381 B 13	3392 K 11	5	
2237 B 5	2250 A 8		3286 D 4	3298 I 4		3306 K 2		3318 H 7	3327 C 6	3343 E 8	3353 F 7	3372 B 9	3382 D 13	3393 J 13	5
2238 B 5	2251 D 7	2265 B13	3280 B 2	3287 F 4	3299 I 2	3307 J 3	3319 I 7	3328 C 7	3346 B 9	3357 G 7	3373 C 8	3384 C 13	3394 J 11	5	
2239 B 6	2256 C 8	2266 D13	3281 D 3	3288 F 4	3300 H 1	3308 K 6	3319 I 7	3320 I 7	3335 I 8	3349 D 8	3358 F 8	3375 E 8	3385 C 13	3395 J 13	6
2243 G 9	2257 C 8	2267 D14	3282 B 2	3291 G 2	3301 I 1	3311 E 6	3320 I 7	3335 I 8	3349 D 8	3358 F 8	3376 E 9	3386 E 13	3396 I 14	6	
2244 D 7	2259 E 8	3232 D5	3283 B 3	3292 G 2	3302 I 3	3312 F 5	3323 B 4	3336 I 8	3350 E 7	3359 G 8	3387 E 14	3397 I 13	6		

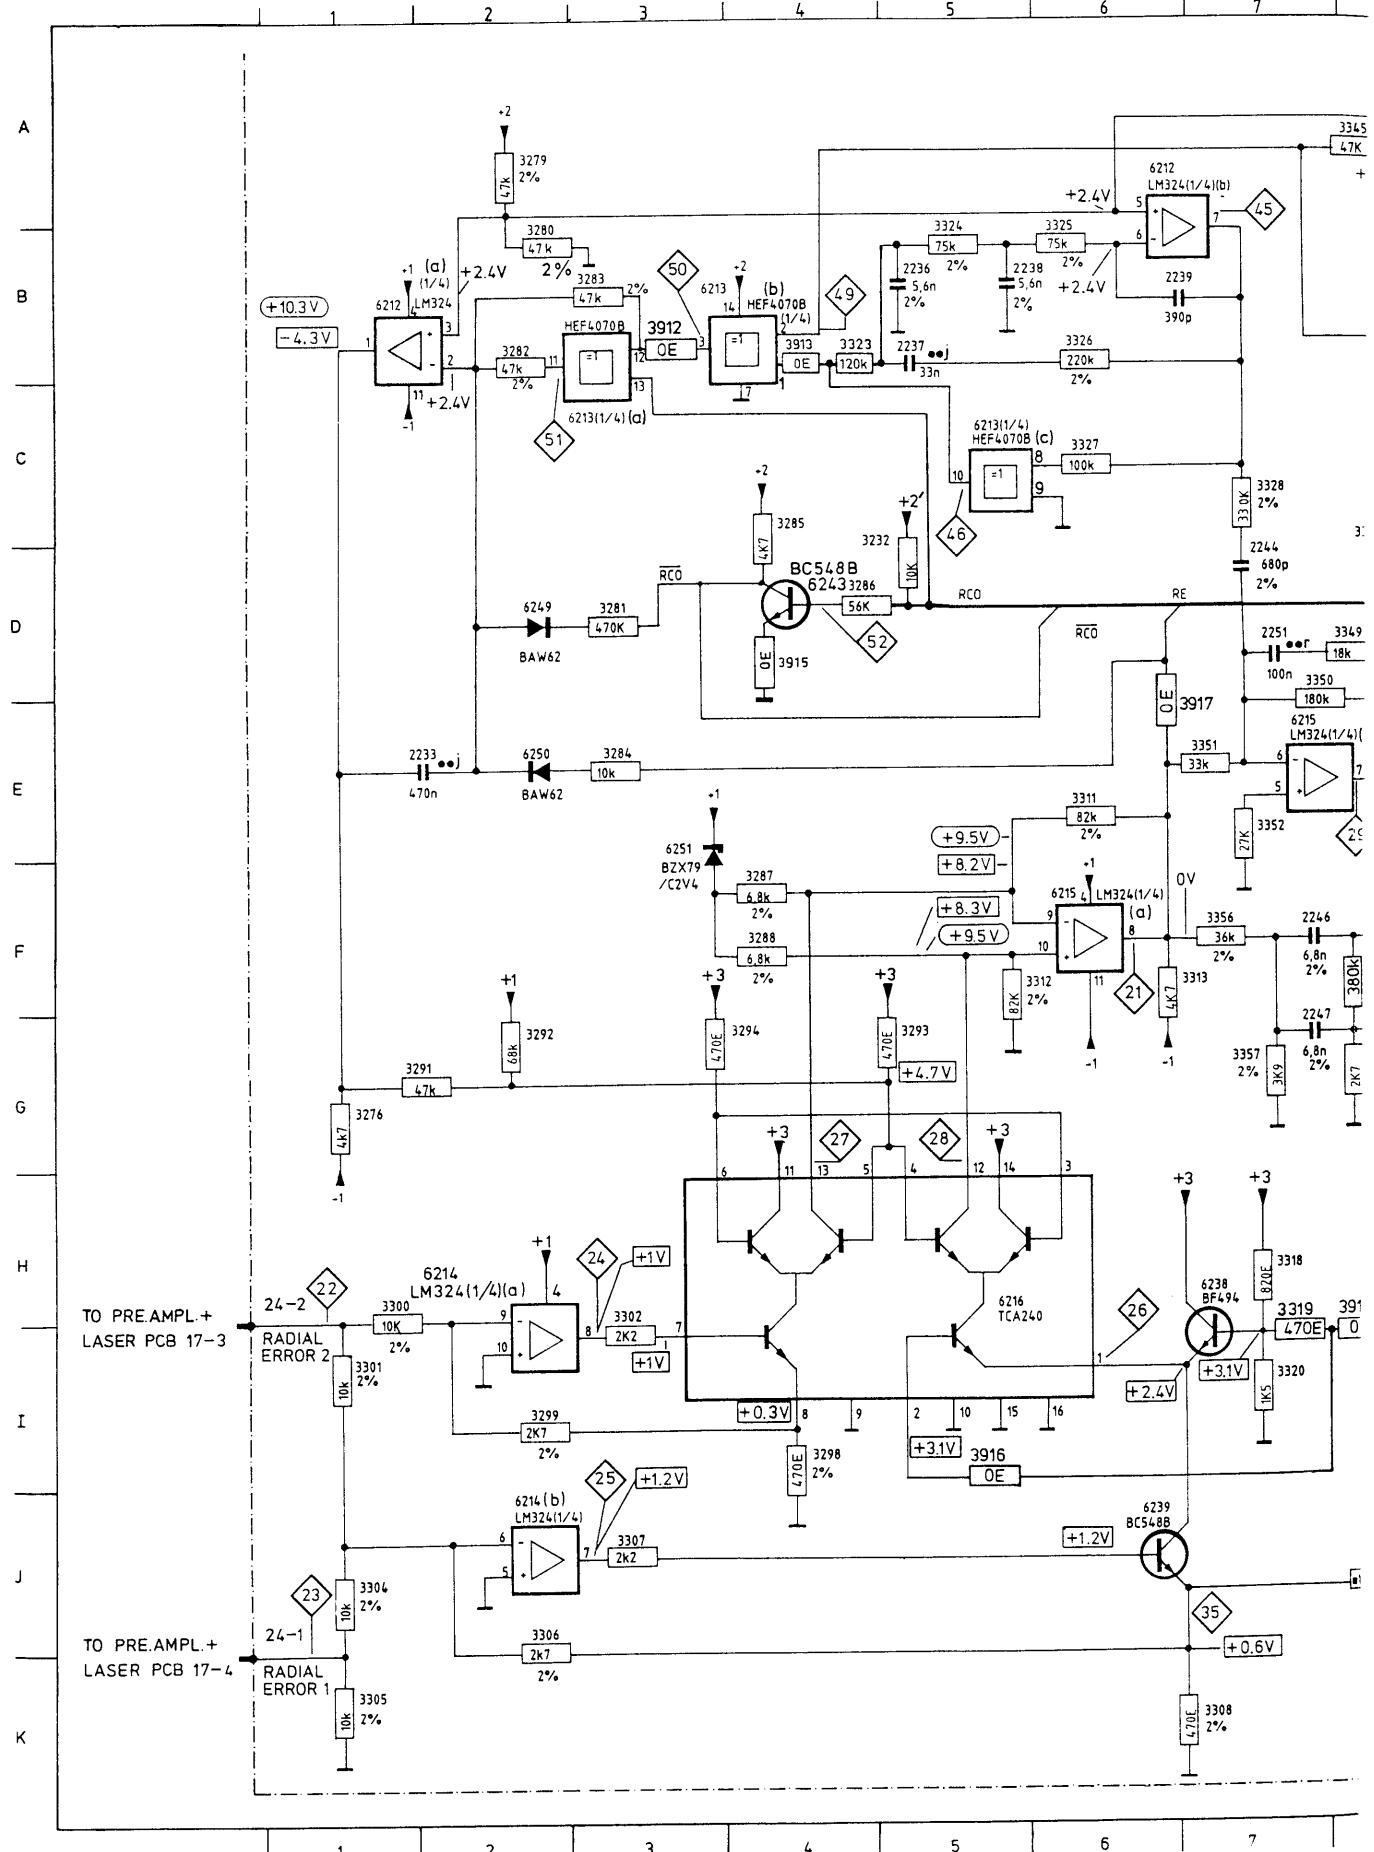


3284 E 3	3293 G S	3304 J 1	3313 F 6	3324 B 5	3340 K 9	J351 E 7	3360 F 9	3380 C 12	3391 J 10	3398 J 12	6212 C 9	6214 H 2	6216 H 5	6243 D 4	3912 B3
3285 D 4	3294 G 3	3305 K 1	3316 B 6	3341 J 8	3352 E 7	3370 D 8	3381 B 13	3392 K 11	3399 K 13	6212 A 8	6214 J12	6217 J 9	6249 D 2	3913 C4	
3286 D 4	3298 I 4	3306 K 2	3316 H 8	3342 B 6	3342 K 9	3353 E 8	3372 B 9	3382 D 13	3393 J 13	5202 A 13	6213 B 3	6214 J14	6218 C 13	6250 E 2	3921 A13
3287 F 4	3299 I 2	3307 J 3	3318 H 7	3327 C 6	3345 A 8	3356 F 7	3373 C 8	3384 C 13	3394 J 11	5203 E 13	6213 H 9	6223 B 4	6224 J 6	6252 G 8	3916 I5
3288 F 4	3300 H 1	3308 K 6	3319 I 7	3328 C 7	3346 B 9	3357 G 7	3375 E 8	3385 C 13	3395 J 13	6211 F 11	6212 A 6	6213 B 8	6215 F 6	6240 B 13	6255 F 10
3291 G 2	3301 I 1	3311 E 6	3320 I 7	3335 I 8	3349 D 8	3358 F 8	3376 E 9	3386 E 13	3396 I 14	6212 B 1	6214 J 2	6215 F7	6241 O 13	3917 E6	
3292 G 2	3302 I 3	3312 F 5	3323 B 4	3336 I 8	3359 G 8		3387 E 14	3397 I 13					3918 I8		

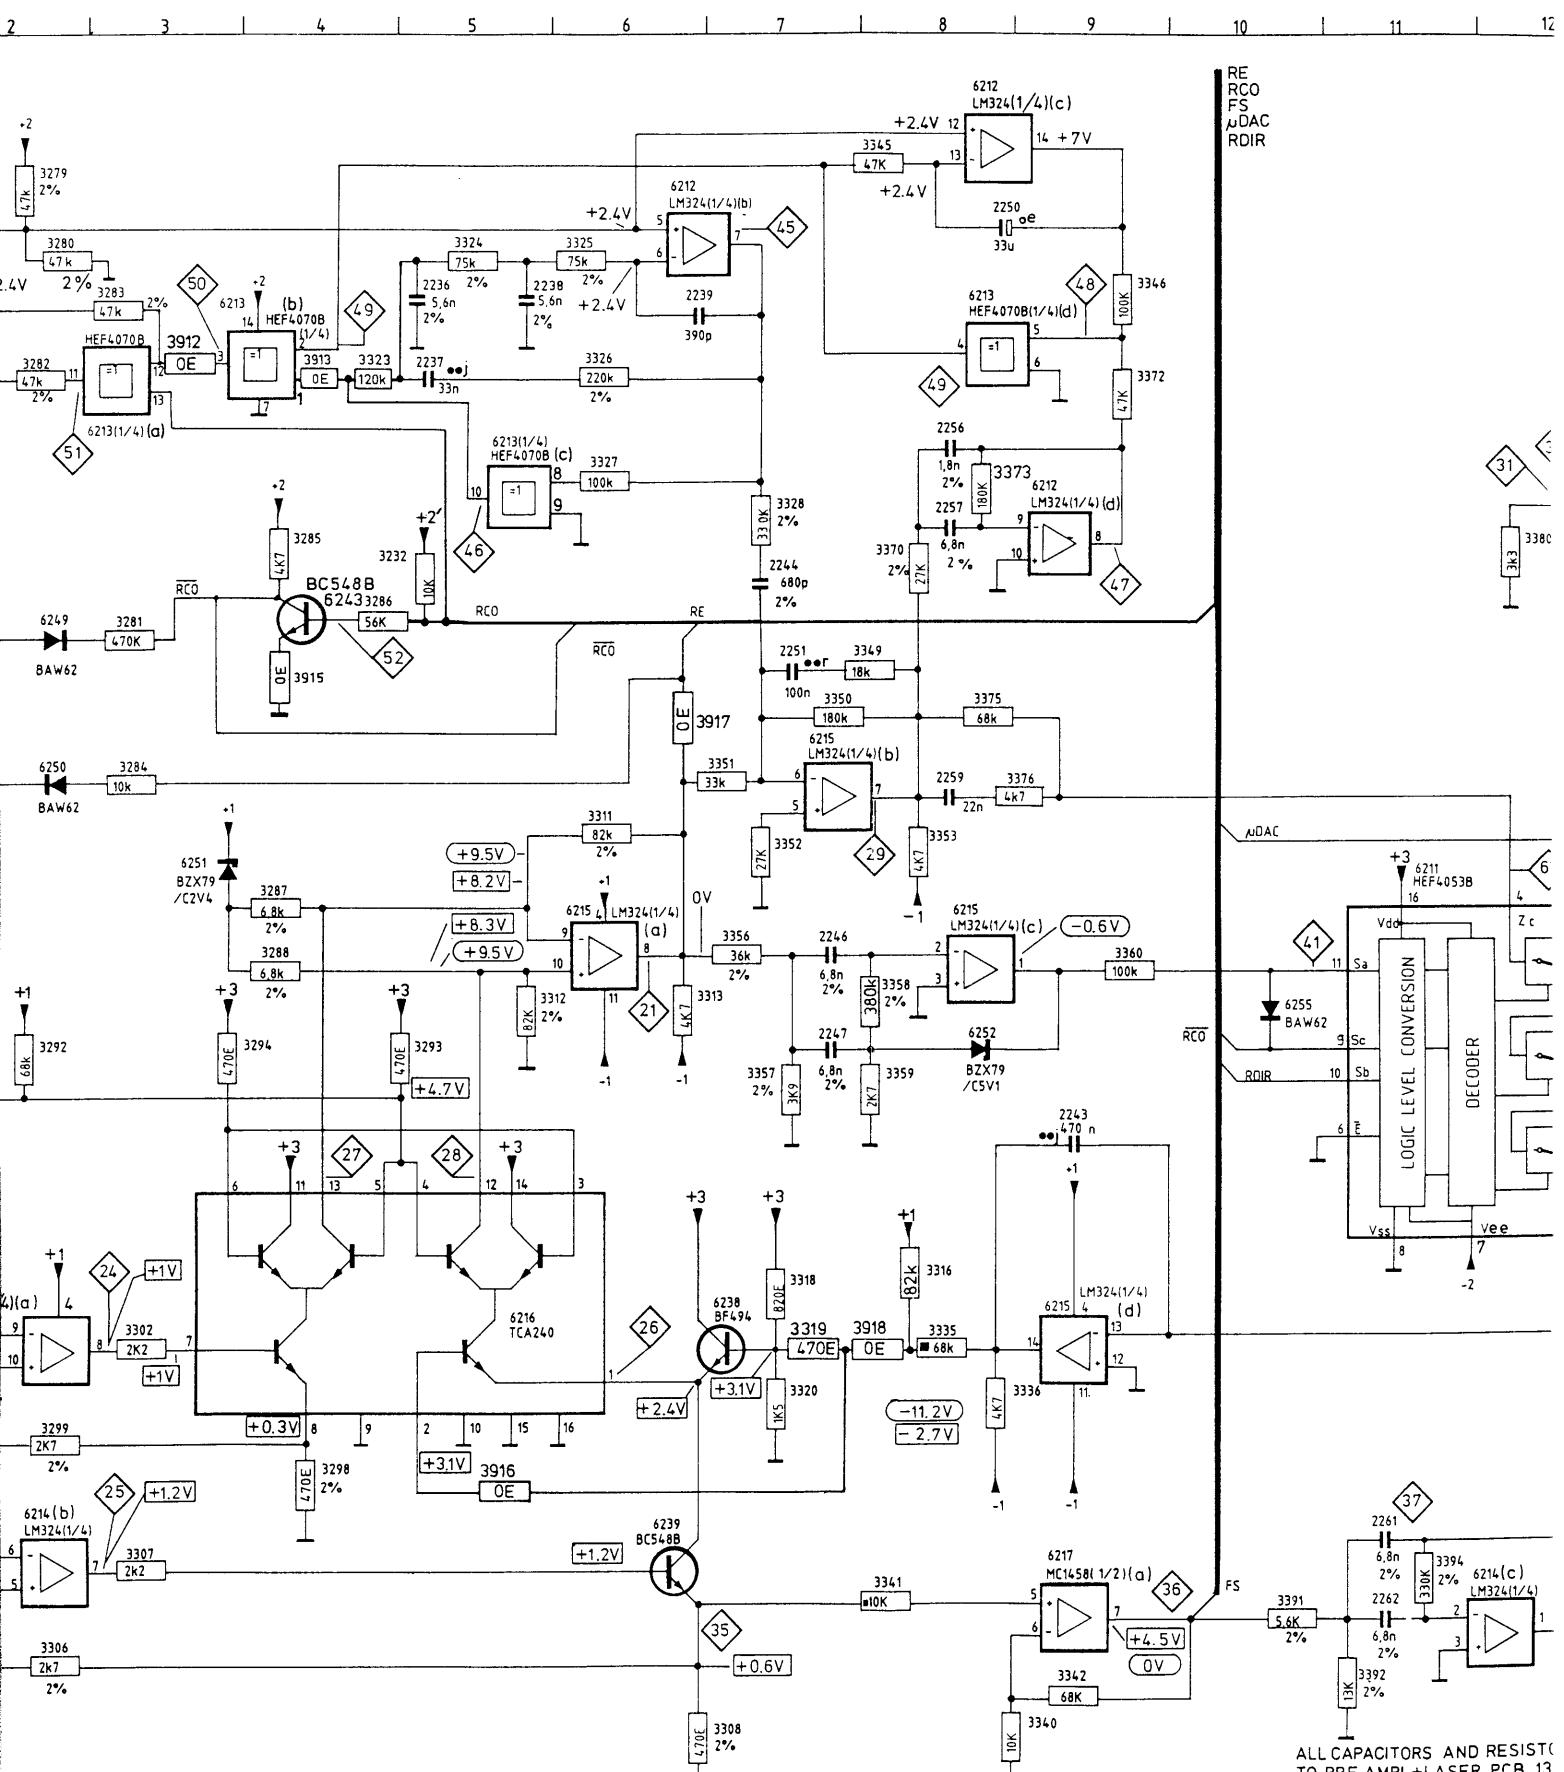

ALL CAPACITORS AND RESISTORS TO PRE AMPL+LASER PCB 13 POINT 2

80 C 12	3391 J 10	3398 J 12	6212' C 9	6214 H 2	6216 H 5	6243 D 4	3912 B3
81 B 13	3392 K 11	3399 K 13	6212 A 8	6214 J12	6217 J 9	6249 D 2	3913 C4
82 D 13	3393 J 13	5202 A 13	6213 B 3	6214 J14	6218 C 13	6250 E 2	3921 A13
84 C 13	3394 J 11	5203 E 13	6213 C 5	6215 H 9	6238 J 7	6251 E 3	3915 D4
85 C 13	3395 J 13	6211 F 11	6213 B 4	6215 F 8	6239 J 6	6252 G 8	3916 I5
86 E 13	3396 I 14	6212 A 6	6213 B 8	6215 F 6	6240 B 13	6255 F 10	3917 E6
87 E 14	3397 I 13	6212 B 1	6214 J 2	6215 F 7	6241 D 13	3918 I8	

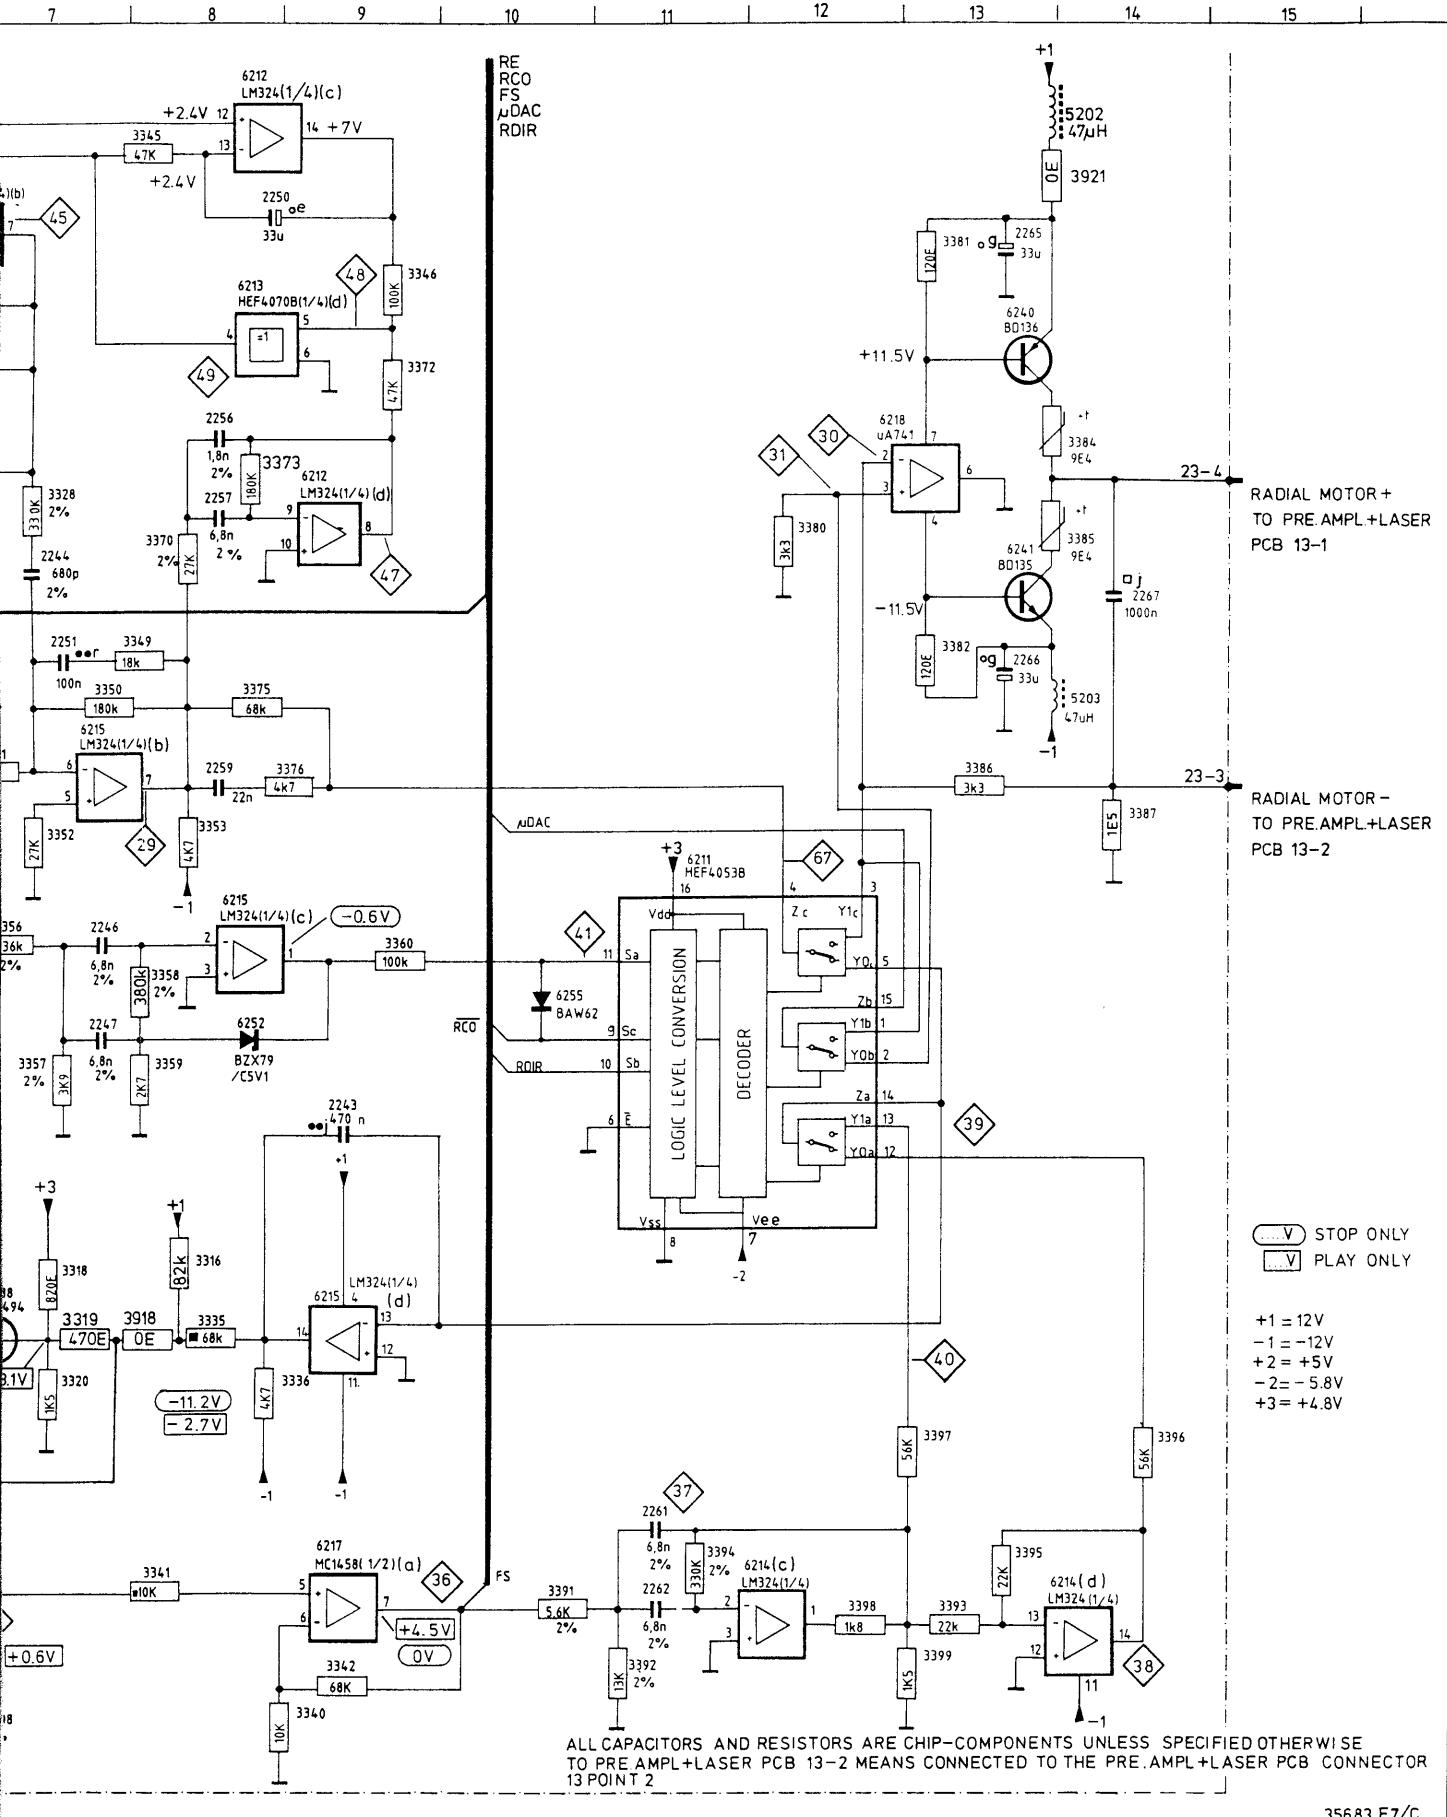



35683 E7/C

CS 99 123


DECODING 1

1504 E14	2501 C2	2506 F2	2512 B4	2517 K5	2522 D8	2538 F6	3502 C1	3507 D1	3513 JS	3519 B7	3524 J7	3529 B9	3534 C12
1507 K9	2502 E1	2507 B4	2513 G6	2518 K6	2523 C9	2539 G6	3503 B2	3509 D2	3515 A6	3520 B7	3525 88	3530 C9	3535 C12
1510 K7	2503 C3	2508 F3	2514 B6	2519 B8	2524 B11	2542 E13	3503 C3	3510 E1	3516 C6	3521 C7	3526 J6	3531 D8	3536 B13
		2509 E2	2515 C6	2520 A9	2527 B12	2543 E14	3504 B2	3511 E1	3517 JS	3522 I7	3527 C8	3532 A3	3537 B13
		2505 F1	2516 B7	2521 B9	2525 C12	2550 E16	3505 C3	3512 F2	3518 JS	3523 B8	3528 E7	3533 D11	3538 C13

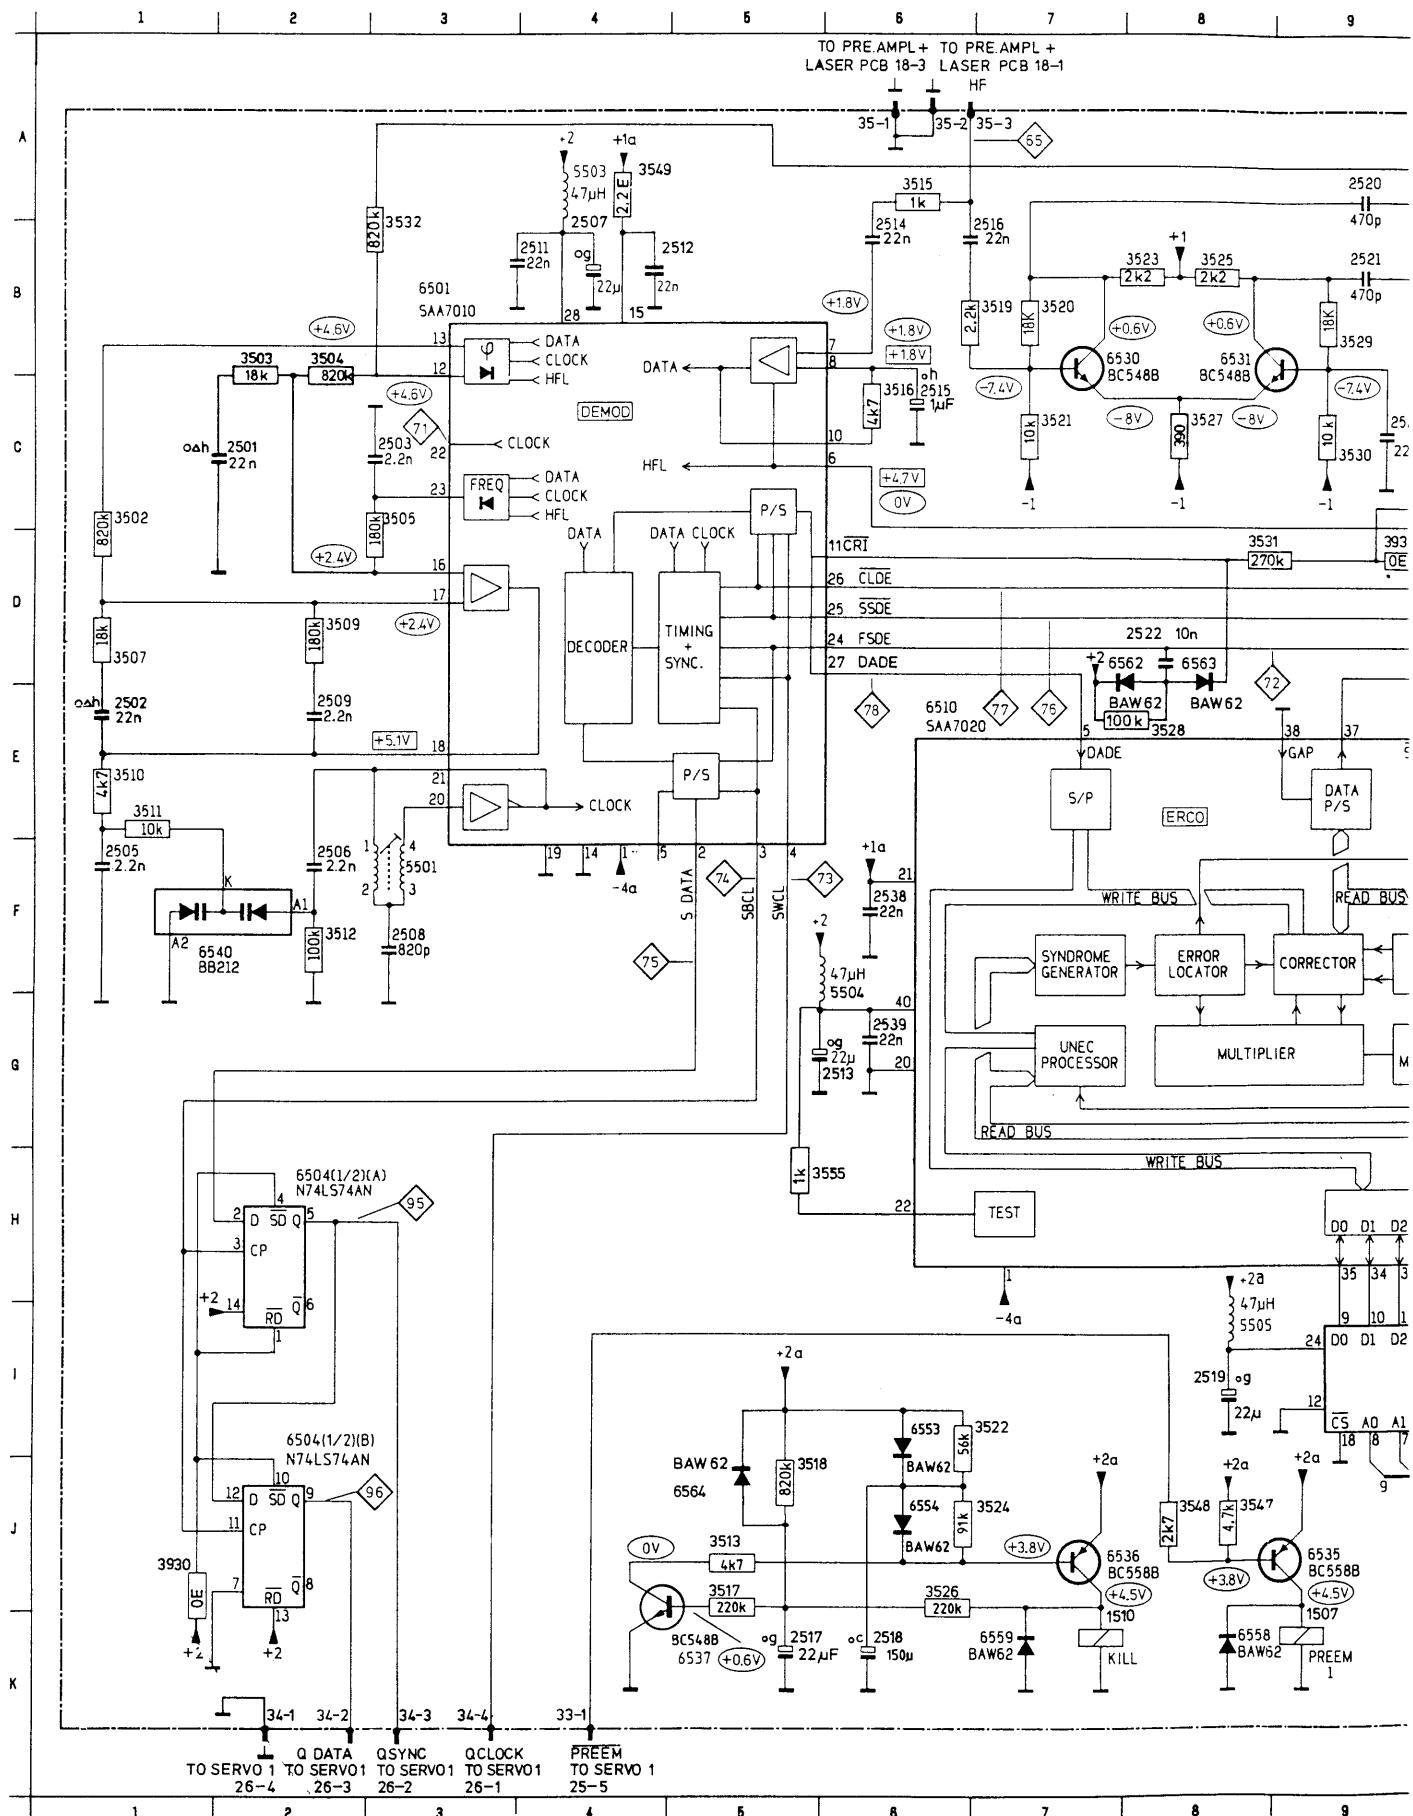

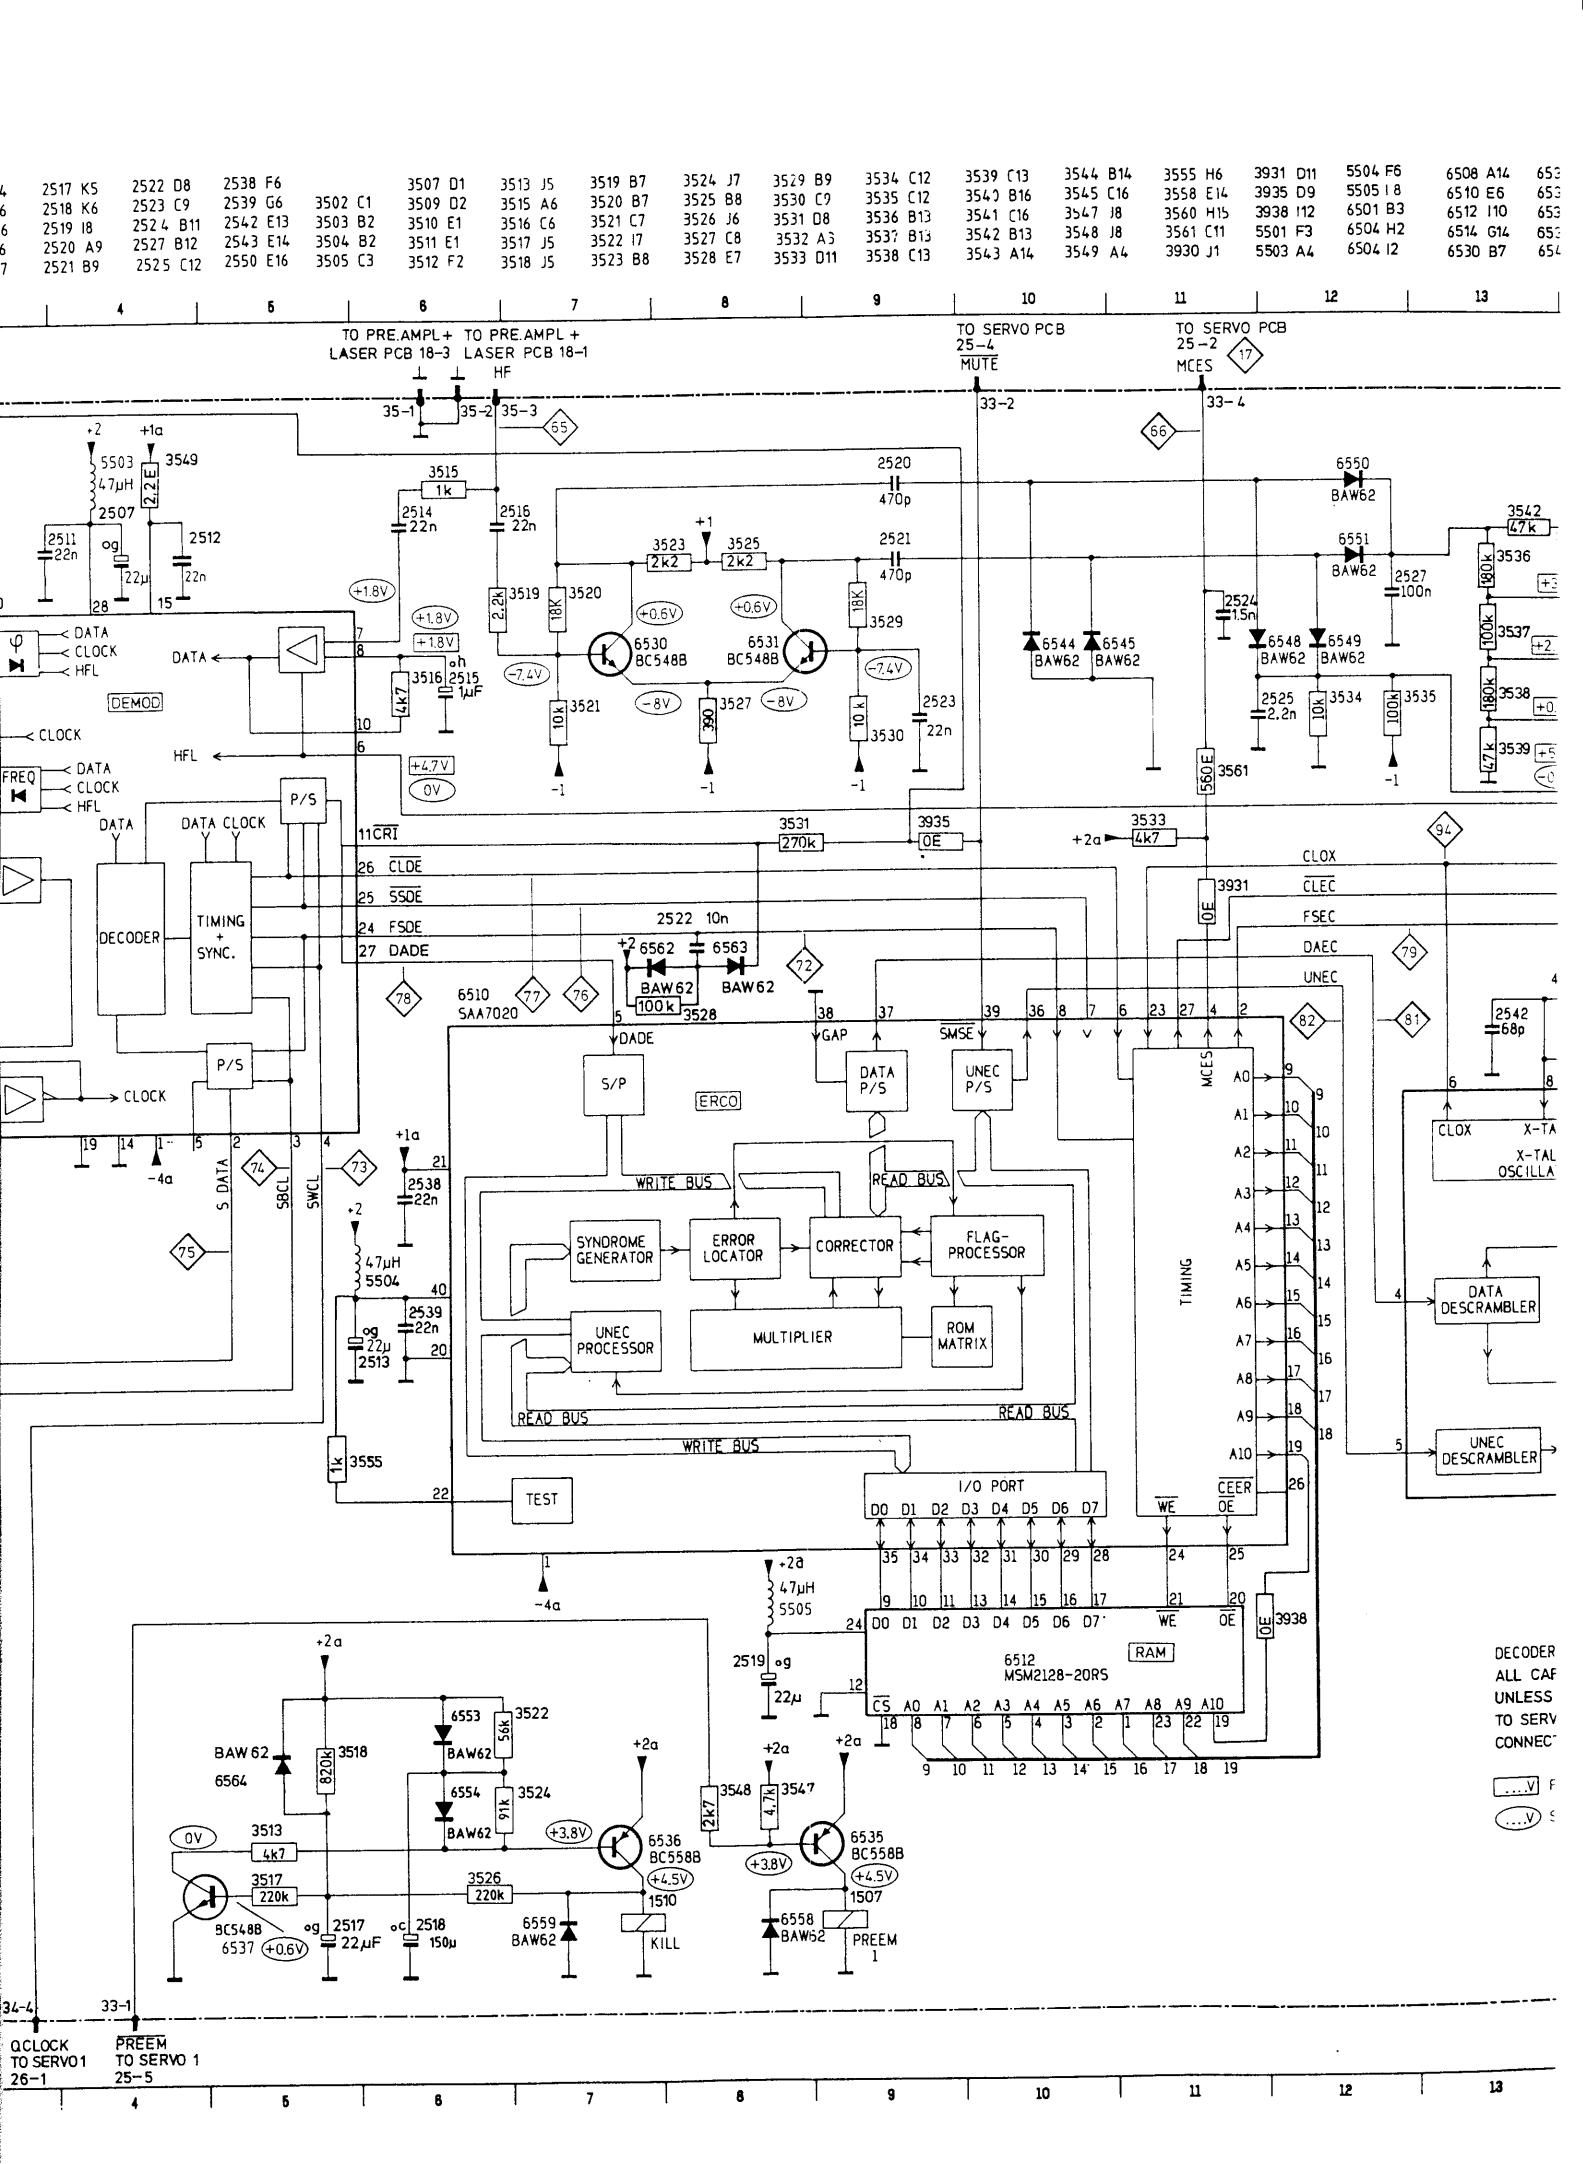

29 B9 3534 C12 3539 C13 3544 B14 3555 H6 3931 D11 5504 F6
 30 C9 3535 C12 3543 B16 3545 C16 3558 E14 3935 D9 5505 I8
 31 D8 3536 B13 3541 C16 3547 J8 3560 H15 3938 I2 6501 B3
 32 A3 3537 B13 3542 B13 3548 J8 3561 C11 5501 F3 6504 H2
 33 D11 3538 C13 3543 A14 3549 A4 3930 J1 5503 A4 6504 I2
 3543 A14 3549 A4 3930 J1 5503 A4 6504 I2
 3543 A14 3549 A4 3930 J1 5503 A4 6504 I2

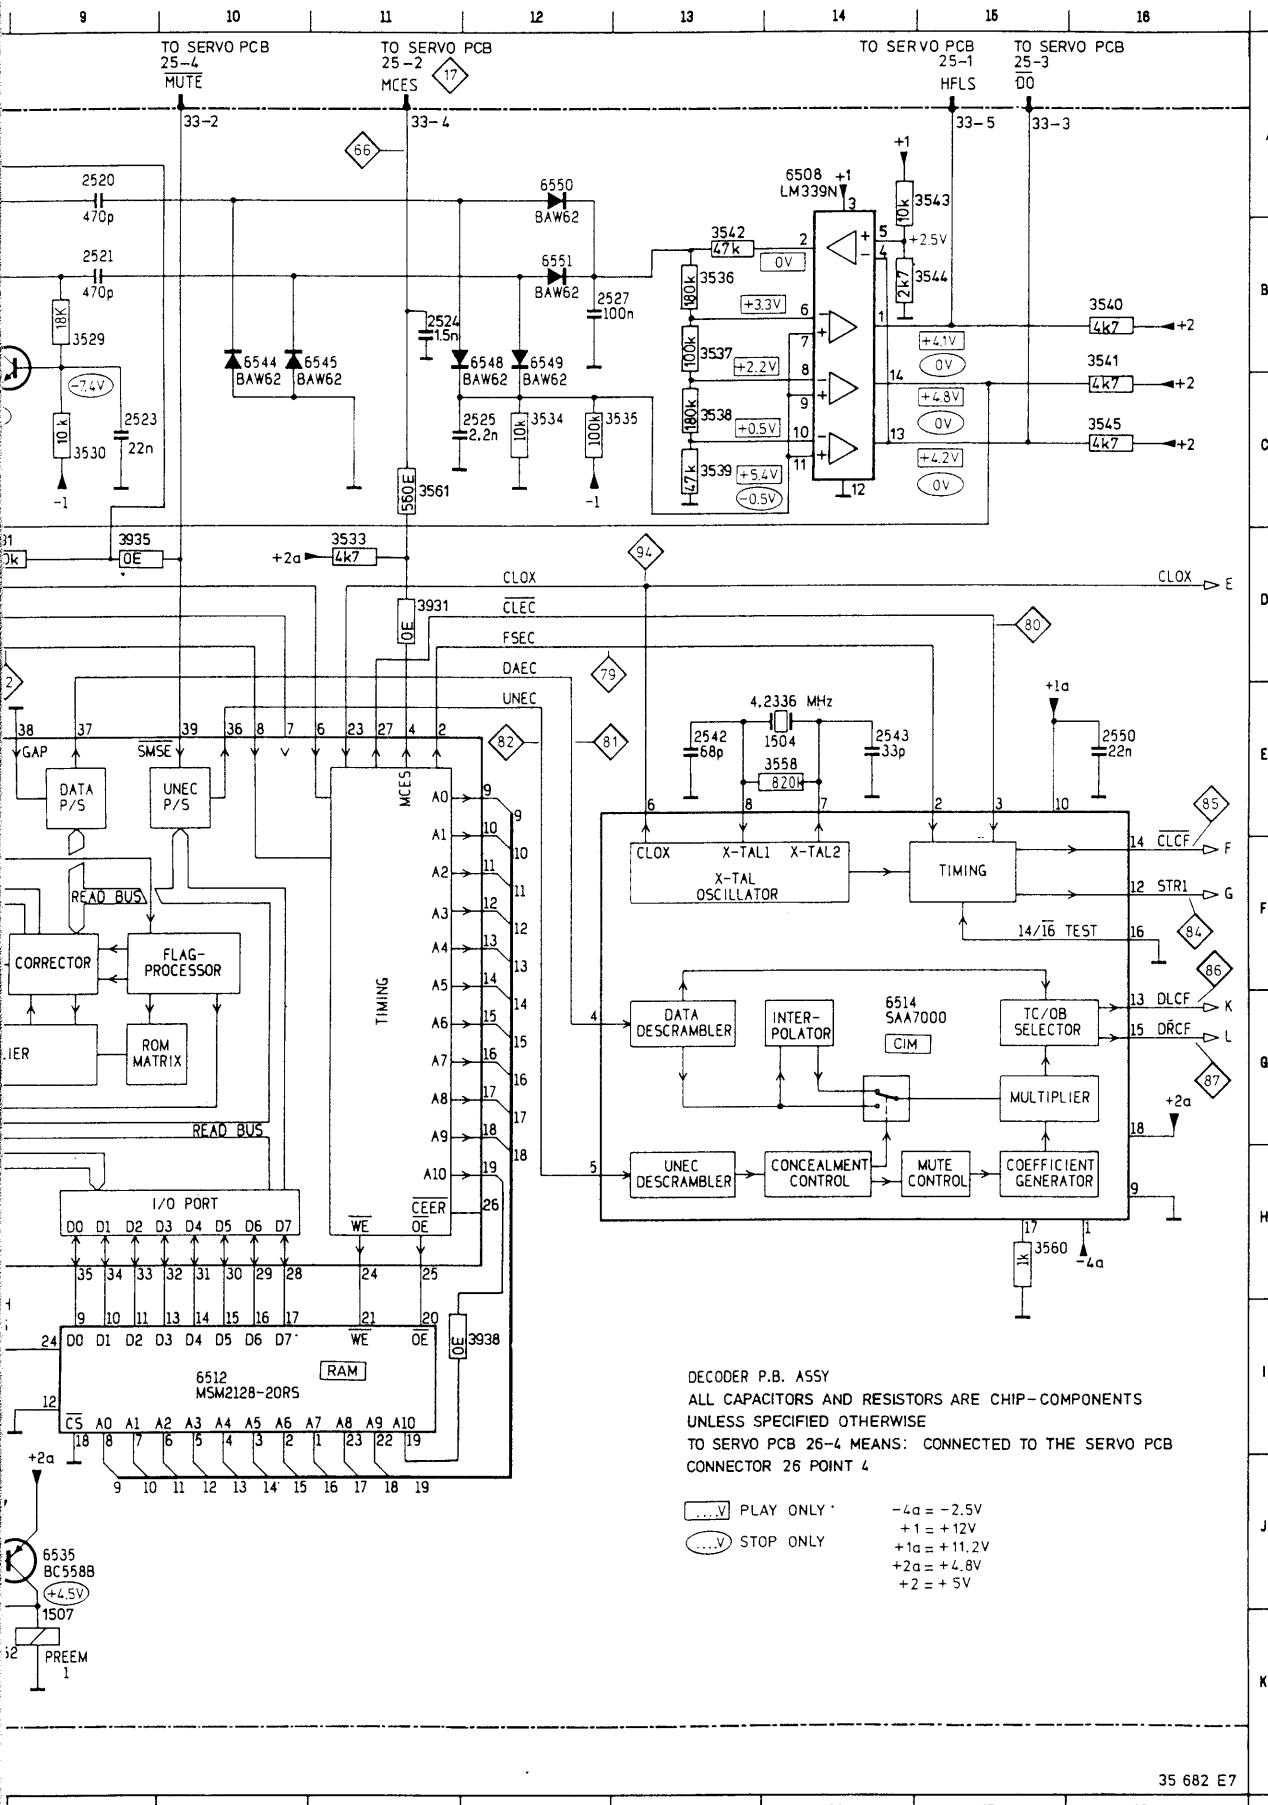


1504 C2	2503 A2	2508 B3	2514 B2	2519 C4	2524 C5	2542 C2	2559 E3	2567 E6	2575 F5
1507 D5	2504 D2	2509 B2	2515 A1	2520 A3	2525 A4	2543 D2	2560 E3	2568 E6	2580 E4
1510 F5	2505 B3	2511 B1	2516 A3	2521 A4	2527 A5	2550 D2	2562 E3	2570 E6	2581 E4
2501 B3	2506 B3	2512 A3	2517 D4	2522 B2	2538 C3	2555 E4	2564 E3	2571 E6	2582 E3
2502 B3	2507 B1	2513 C2	2518 D5	2523 A4	2539 C2	2558 E4	2566 D6	2573 E5	2583 E3
2584 E3	2589 E3	2597 E2	2605 E4	2618 E5	2625 F2	2632 E2	2637 E2	3503 A3	3510 B3
2585 E3	2591 E3	2599 E2	2606 E5	2619 E5	2627 E4	2633 E2	2638 E2	3504 A2	3511 B3
2586 E3	2593 E2	2601 D5	2608 E4	2620 D2	2628 F3	2634 E2	2639 E2	3505 A2	3512 B3
2587 E3	2594 E2	2602 E4	2610 F5	2623 D4	2630 E2	2635 E2	2641 E2	3507 A2	3513 D5
2588 E3	2595 E2	2603 E5	2617 E5	2624 E4	2631 E2	2636 E2	3502 A2	3509 B2	3515 A2
3516 A2	3521 B3	3526 D6	3531 B2	3536 B5	3541 A5	3547 D6	3558 C2	3566 D4	3572 E6
3517 D4	3522 D5	3527 B4	3532 B2	3537 B5	3542 B5	3548 D6	3560 D1	3567 D3	3573 D5
3518 D4	3523 B3	3528 B1	3533 C4	3538 B5	3543 A5	3549 A3	3561 C5	3569 E4	3574 E6
3519 A3	3524 D5	3529 A4	3534 A4	3539 B5	3544 A5	3550 D3	3564 D4	3570 E4	3576 E5
3520 A3	3525 B4	3530 B4	3535 B4	3540 A5	3545 A5	3555 C2	3565 D3	3571 E3	3577 E6
3579 F5	3584 E3	3593 E4	3598 E5	3605 E2	3931 C3	3941 E4	5505 C4	6512 C4	6523 E5
3580 F5	3585 E3	3594 D5	3599 E5	3606 E2	3935 C2	3944 D4	6501 B2	6514 D2	6525 E5
3581 F4	3590 D2	3595 E4	3600 F5	3607 D4	3936 D2	5501 B3	6504 B6	6517 D3	6530 A3
3582 E5	3591 E2	3596 E4	3601 F5	3608 D4	3937 E6	5503 B1	6508 A5	6519 D3	6531 A4
3583 E5	3592 E2	3597 E4	3602 F4	3930 A6	3938 C4	5504 C1	6510 C2	6520 D2	6535 D6
6536 D6	6548 A4	6554 C5	6563 B1						
6537 D5	6549 A4	6558 D5	6564 D5						
6540 B4	6550 A4	6559 F6							
6544 A4	6551 A4	6561 D4							
6545 A4	6553 D5	6562 B1							

DECODER

	SAA7010 DEMOD N74LS74AN LM339N SAA7020 ERCO MSM2128-20R SAA7000 CIM	4822 209 10857 4822 209 80782 4822 209 80631 4822 209 10377 4822 209 10379 4822 209 10375		OE chip jumper 2E2 47E 82E 100E 150E 390E 560E 620E 1k 1k8 2k2 2k7 4k7 10k 18k 47k 56k 91k 100k 180k 220k 270k 820k	4822 111 90163 4822 111 90507 4822 111 90217 4822 116 60158 5322 111 90091 5322 111 90098 5322 111 90138 5322 111 90113 4822 111 90516 5322 111 90092 5322 111 90101 5322 111 90102 4822 111 90179 5322 111 90111 4822 111 90249 4822 111 90238 5322 111 90112 5322 111 90115 5322 111 90277 4822 111 90148 5322 111 90273 4822 111 90197 4822 111 90302 4822 111 90205
	BC548B BC558B	4822 130 40937 4822 130 44197			
	BAW62 BB212	4822 130 30613 4822 130 31129			
	1504 X-tal 4.2336 MHz	4822 242 70643			
	1507, 1510 Reed relais	4822 280 20115		33p 68p 100p 470p 820p 1n5 2n2 10n 22n 100n	4822 122 31756 4822 122 31961 4822 122 31765 4822 122 31727 4822 122 31974 4822 122 31781 4822 122 31644 4822 122 31728 4822 122 31797 4822 122 31947
	5501 5502, 5504, } 5505 } 47 μH	4822 156 21155 4822 156 20966			

DECODER P.C.B.

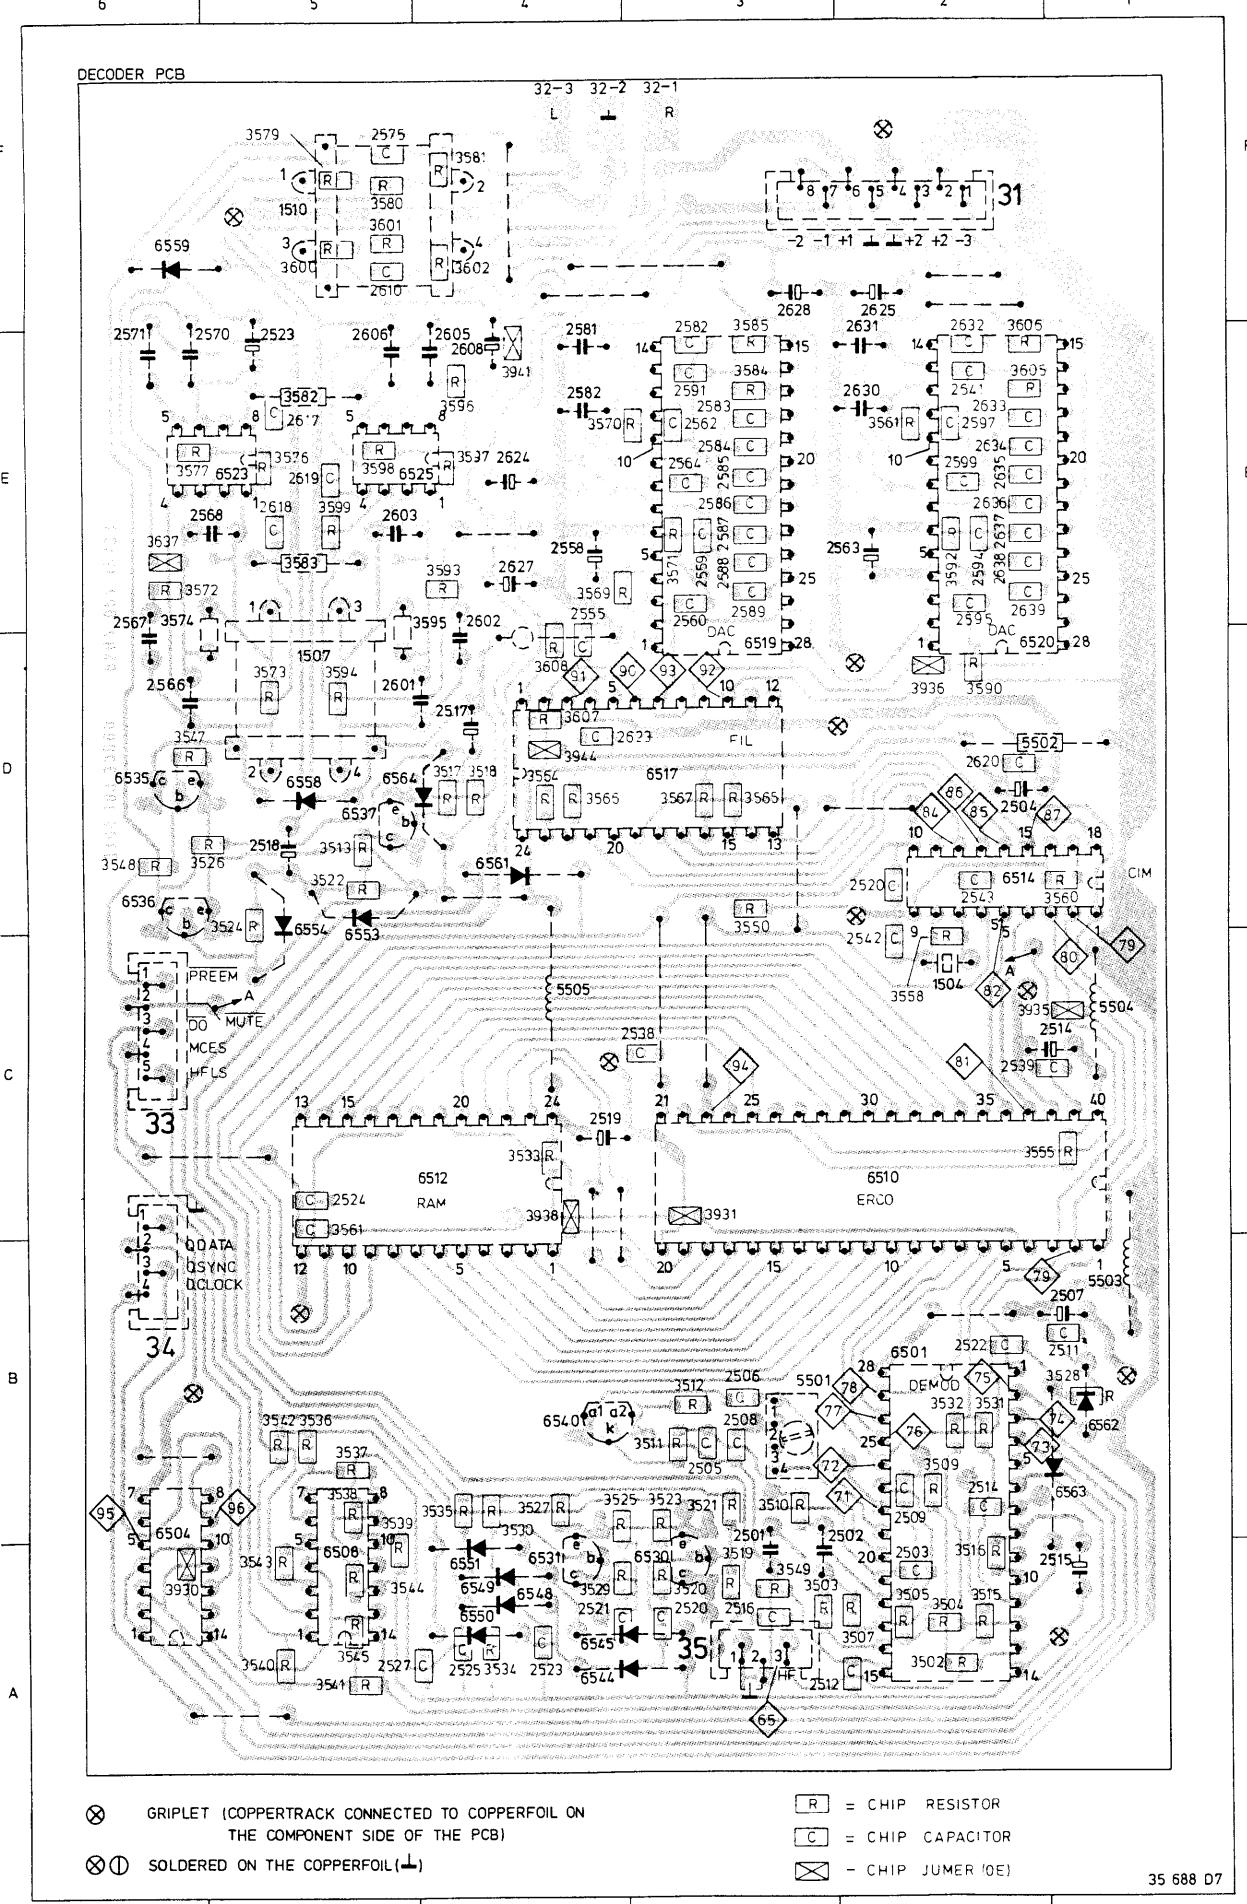

⊗ GRIPLET (COPPERTRACK CONNECTED TO COPPERFOIL ON
THE COMPONENT SIDE OF THE PCB)

⊗① SOLDERED ON THE COPPERFOIL (—)


[R] = CHIP RESISTOR

[C] = CHIP CAPACITOR

[J] = CHIP JUMPER (OE)

35 688 D7

DECODER P.C.B.

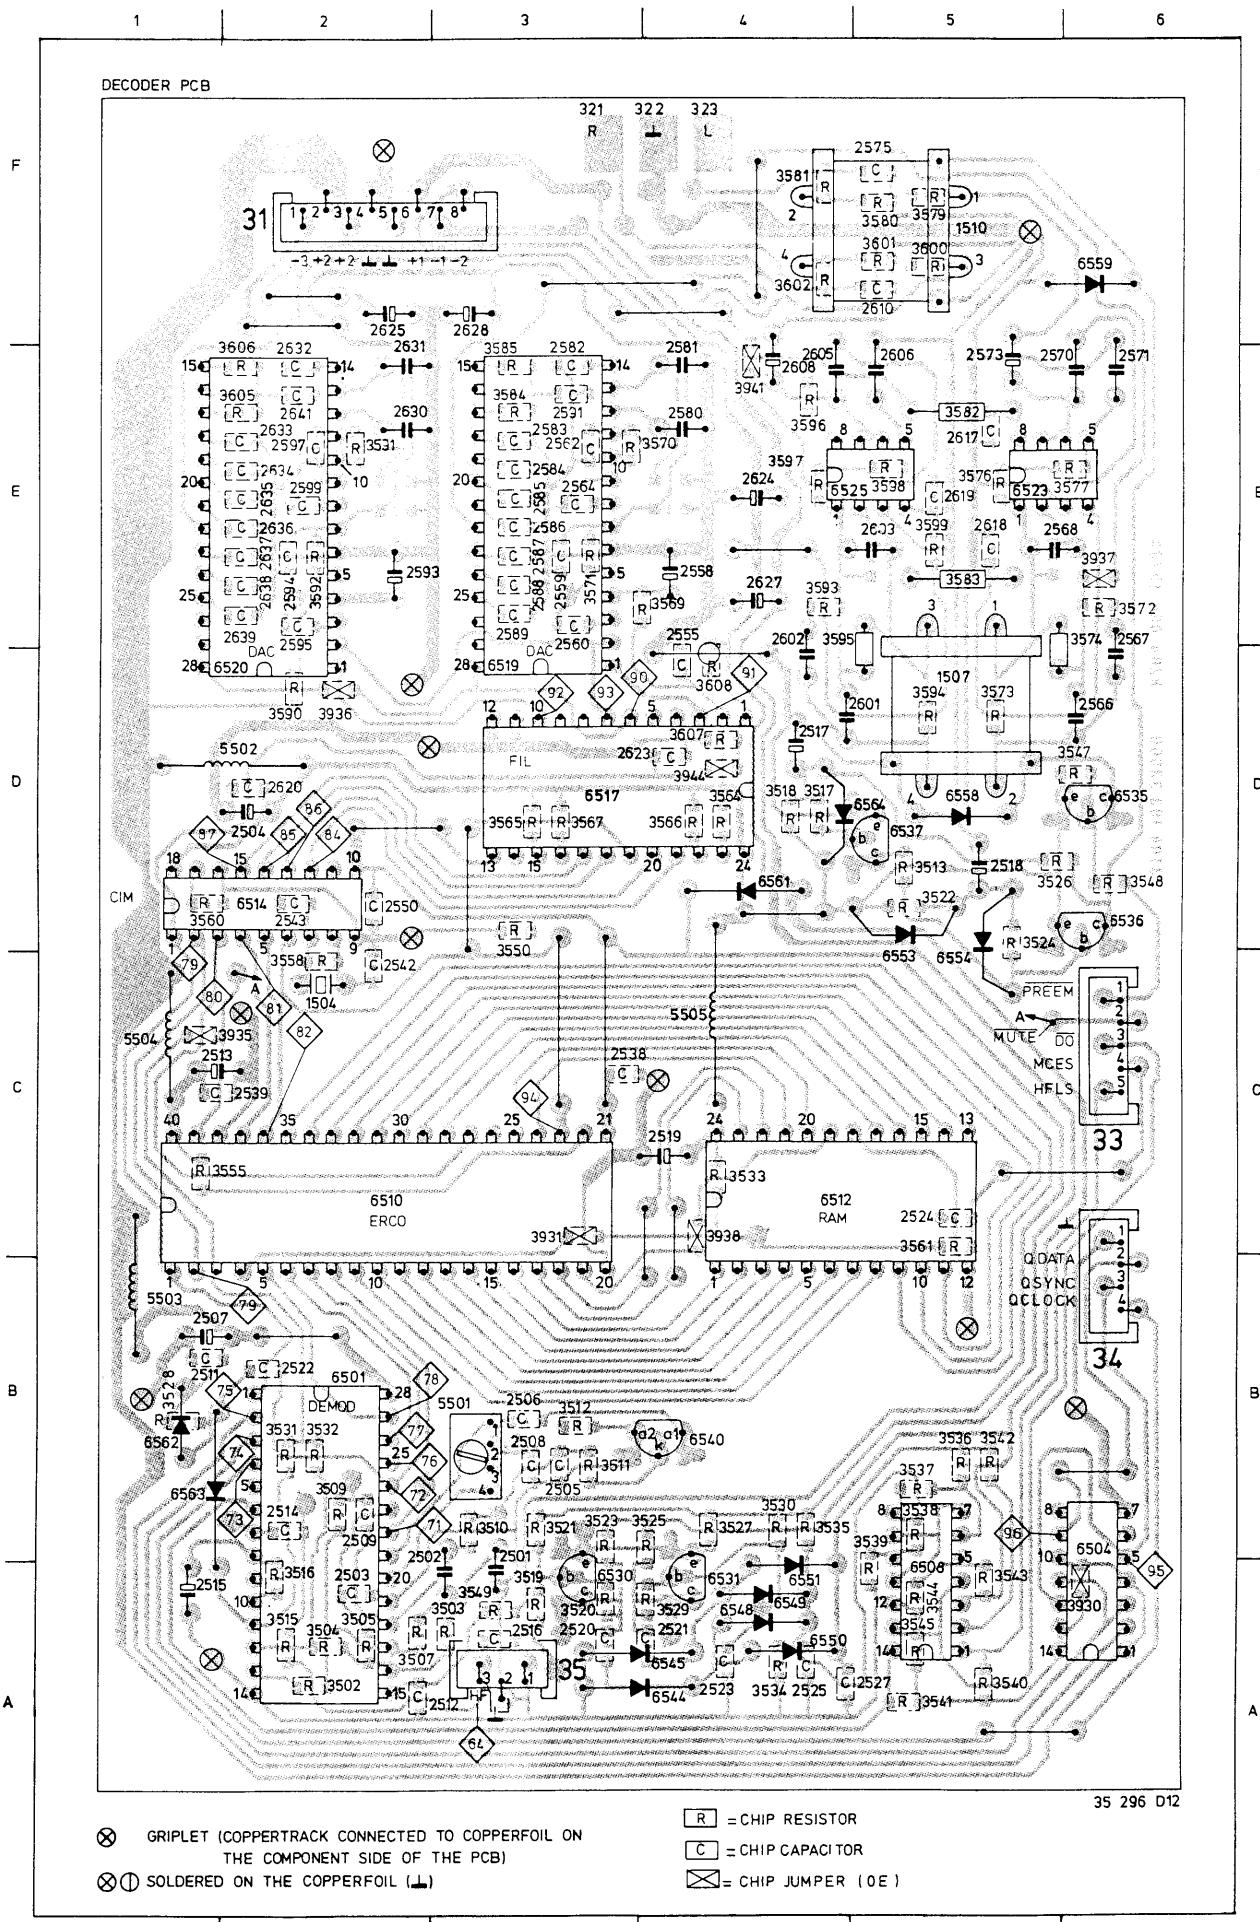

- ⊗ GRIPLET (COPPERTRACK CONNECTED TO COPPERFOIL ON THE COMPONENT SIDE OF THE PCB)
- ⊗(1) SOLDERED ON THE COPPERFOIL (L)

R - CHIR RESISTOR

= CHIP CAPACITOR

CHIP IMPER (OE)


1504 C2	2503 A2	2508 B3	2514 B2	2519 C4	2524 C5	2542 C2	2559 E3	2567 E6	2575 F5
1507 D5	2504 D2	2509 B2	2515 A1	2520 A3	2525 A4	2543 D2	2560 E3	2568 E6	2580 E4
1510 F5	2505 B3	2511 B1	2516 A3	2521 A4	2527 A5	2550 D2	2562 E3	2570 E6	2581 E4
2501 B3	2506 B3	2512 A3	2517 D4	2522 B2	2538 C3	2555 E4	2564 E3	2571 E6	2582 E3
2502 B3	2507 B1	2513 C2	2518 D5	2523 A4	2539 C2	2558 E4	2566 D6	2573 E5	2583 E3
2584 E3	2589 E3	2597 E2	2605 E4	2618 E5	2625 F2	2632 E2	2637 E2	3503 A3	3510 B3
2585 E3	2591 E3	2599 E2	2606 E5	2619 E5	2627 E4	2633 E2	2638 E2	3504 A2	3511 B3
2586 E3	2593 E2	2601 D5	2608 E4	2620 D2	2628 F3	2634 E2	2639 E2	3505 A2	3512 B3
2587 E3	2594 E3	2602 E4	2610 F5	2623 D4	2630 E2	2635 E2	2641 E2	3507 A2	3513 D5
2588 E3	2595 E2	2603 E5	2617 E5	2624 E4	2631 E2	2636 E2	3502 A2	3509 B2	3515 A2
3516 A2	3521 B3	3526 D6	3531 B2	3536 B5	3541 A5	3547 D6	3558 C2	3566 D4	3572 E6
3517 D4	3522 D5	3527 B4	3532 B2	3537 B5	3542 B5	3548 D6	3560 D1	3567 D3	3573 D5
3518 D4	3523 B3	3528 B1	3533 C4	3538 B5	3543 A5	3549 A3	3561 C5	3569 E4	3574 E6
3519 A3	3524 D5	3529 A4	3534 A4	3539 B5	3544 A5	3550 D3	3564 D4	3570 E4	3576 E5
3520 A3	3525 B4	3530 B4	3535 B4	3540 A5	3545 A5	3555 C2	3565 D3	3571 E3	3577 E6
3579 F5	3584 E3	3593 E4	3598 E5	3605 E2	3931 C3	3941 E4	5505 C4	6512 C4	6523 E5
3580 F5	3585 E3	3594 D5	3599 E5	3606 E2	3935 C2	3944 D4	6501 B2	6514 D2	6525 E5
3581 F4	3590 D2	3595 E4	3600 F5	3607 D4	3936 D2	5501 B3	6504 B6	6517 D3	6530 A3
3582 E5	3591 E2	3596 E4	3601 F5	3608 D4	3937 E6	5503 B1	6508 A5	6519 D3	6531 A4
3583 E5	3592 E2	3597 E4	3602 F4	3930 A6	3938 C4	5504 C1	6510 C2	6520 D2	6535 D6
6536 D6	6548 A4	6554 C5	6563 B1						
6537 D5	6549 A4	6558 D5	6564 D5						
6540 B4	6550 A4	6559 F6							
6544 A4	6551 A4	6561 D4							
6545 A4	6553 C5	6562 B1							

DECODER

	SAA7030	FIL	4822 209 10378
	TDA1540D	DAC	4822 209 81453
	NE5532N		5322 209 86234
	BAX18A		4822 130 34121
	OE		4822 111 90163
	2E2		4822 111 90507
	47E		4822 111 90217
	82E		4822 116 60158
	100E		5322 111 90091
	150E		5322 111 90098
	390E		5322 111 90138
	560E		5322 111 90113
	620E		4822 111 90516
	1k		5322 111 90092
	1k8		5322 111 90101
	2k2		5322 111 90102
	2k7		4822 111 90179
	4k7		5322 111 90111
	10k		4822 111 90249
	18k		4822 111 90238
	47k		5322 111 90112
	56k		5322 111 90115
	91k		5322 111 90277
	100k		4822 111 90148
	180k		5322 111 90273
	220k		4822 111 90197
	270k		4822 111 90302
	820k		4822 111 90205
	33p		4822 122 31756
	68p		4822 122 31961
	100p		4822 122 31765
	470p		4822 122 31727
	820p		4822 122 31974
	1n5		4822 122 31781
	2n2		4822 122 31644
	10n		4822 122 31728
	22n		4822 122 31797
	100n		4822 122 31947


DECODING 2

2504 E15	2555 C4	2560 B7	2568 A11	2580 E6	2585 E8	2591 E11	2599 G10	2606 I12	2620 E15	2630 J6	2635 J8	2641 J1
2562 A8		2570 B12	2581 E7	2586 E9	2593 G6	2601 G11	2608 I14	2623 G14	2631 J7	2636 J9	3550 E	
2564 B10		2571 C12	2582 E7	2587 E9	2594 G7	2602 G11	2610 I16	2624 G16	2632 J7	2637 J9	3564 C	
2558 B6	2566 A11	2573 C14	2583 E7	2588 E9	2595 G7	2603 G11	2617 B13	2625 H16	2633 J7	2638 J9	3565 C	
2559 A7	2567 A11	2575 C16	2584 E8	2589 E10	2597 G8	2605 H12	2618 C13	2627 E16	2634 J8	2639 J10	3566 C	
						2619 I13	2628 G16					

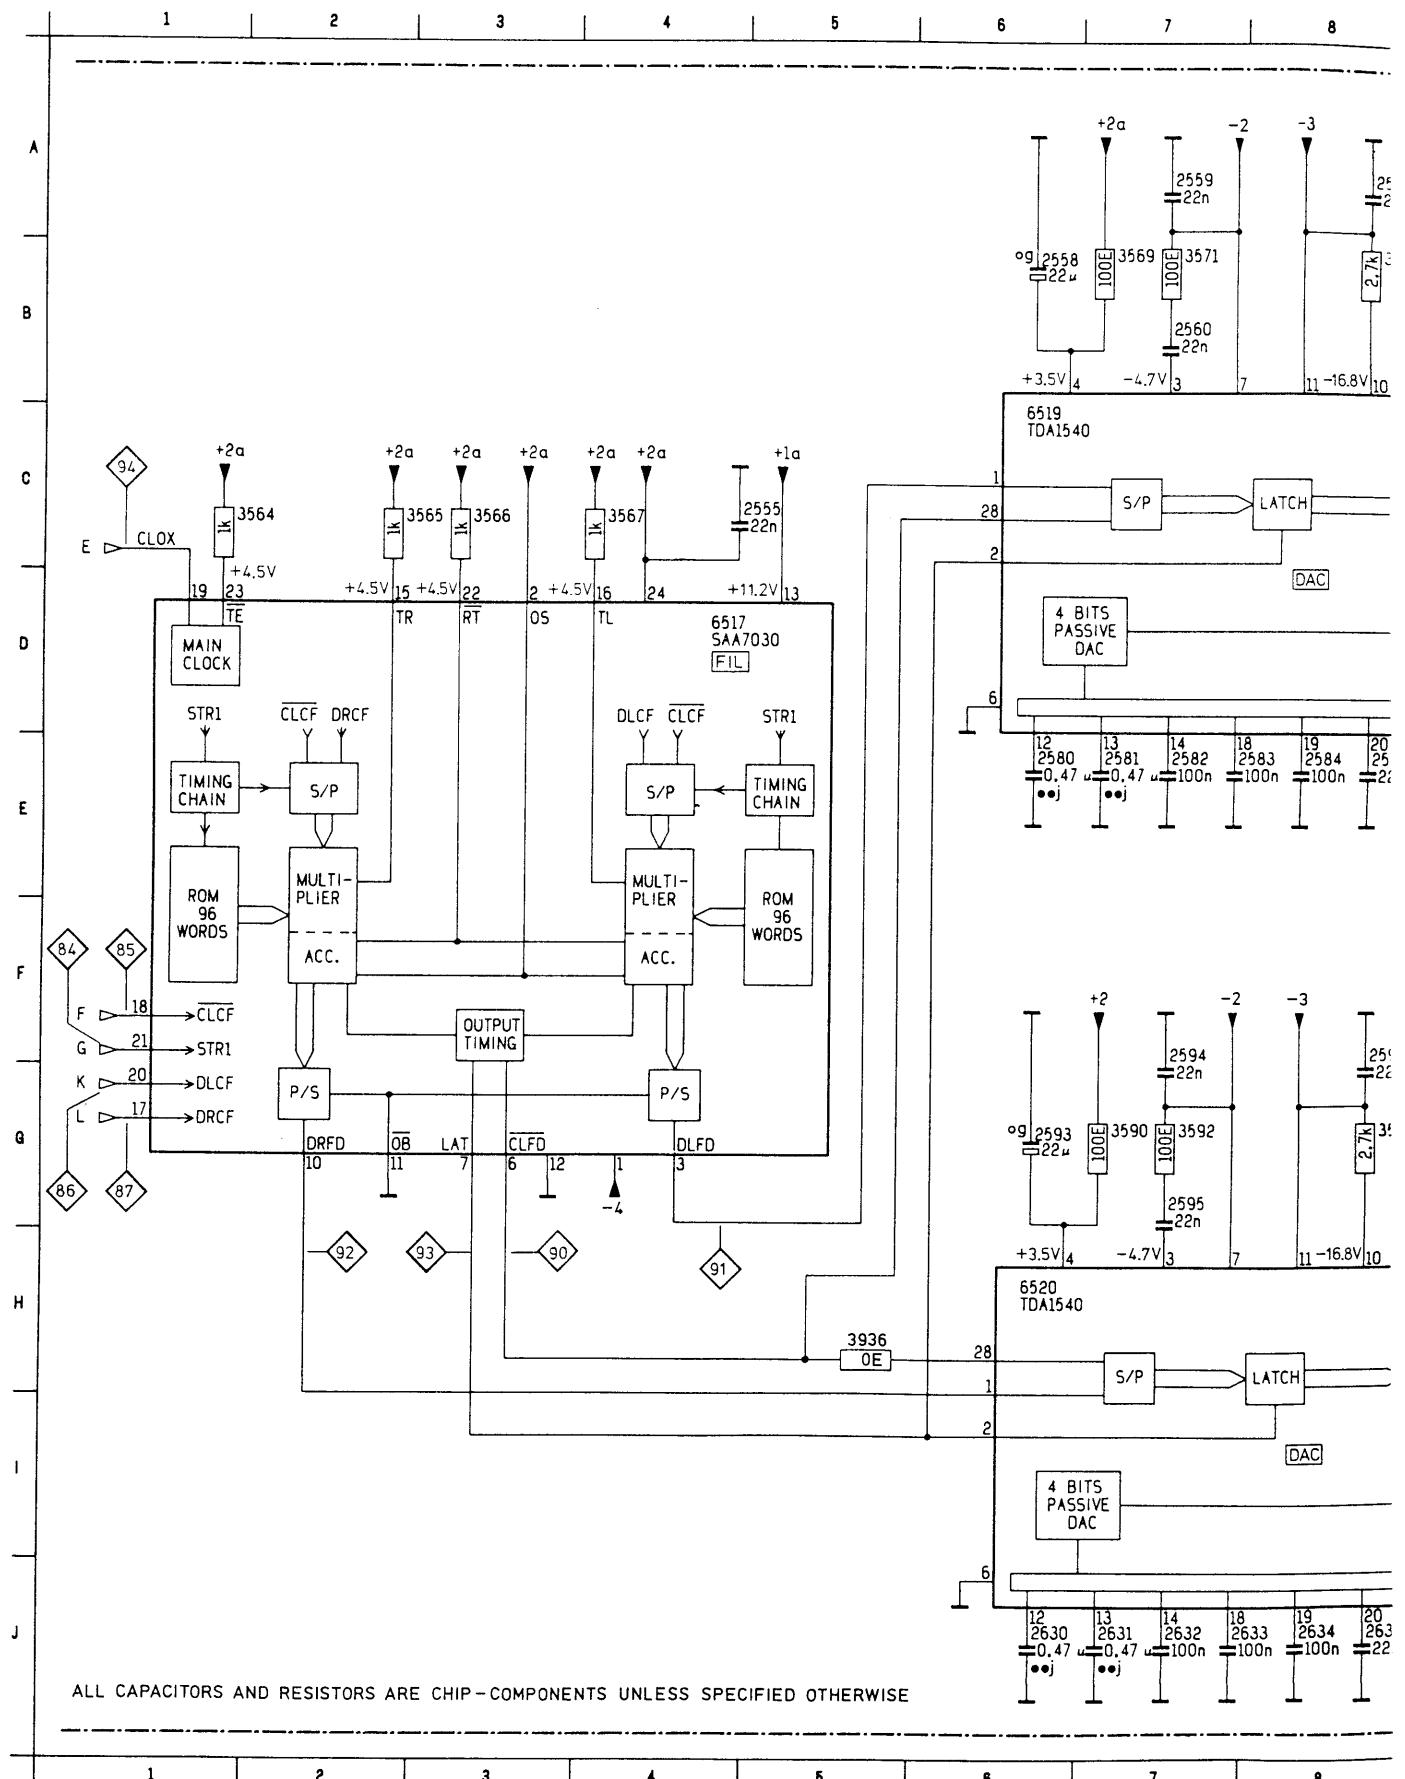

ALL CAPACITORS AND RESISTORS ARE CHIP-COMPONENTS UNLESS SPECIFIED OTHERWISE


2580 E6	2585 E8	2591 E11	2599 G10	2606 I12	2620 E15	2630 J6	2635 J8	2641 J11	3567 C4	3573 A12	3580 C15	3591 G8	3597 H12	3605 I11
2581 E7	2586 E9	2593 G6	2601 G11	2608 I14	2623 G14	2631 J7	2636 J9	3550 E15	3569 B7	3574 B11	3581 C15	3592 G7	3598 H12.	3606 I11
2582 E7	2587 E9	2594 G7	2602 G11	2610 I16	2624 G16	2632 J7	2637 J9	3564 C1	3570 B8	3576 B12	3582 B13	3593 G11	3599 I13	3607 G15
2583 E7	2588 E9	2595 G7	2603 G11	2617 B13	2625 H16	2633 J7	2638 J9	3565 C2	3571 B7	3577 C12	3583 D13	3594 G12	3600 I14	3608 F15
2584 E8	2589 E10	2597 G8	2605 H12	2618 C13	2627 E16	2634 J8	2639 J10	3566 C3	3572 A11	3579 C14	3584 D11	3595 G11	3601 I15	6517 D4
				2619 I13	2628 G16						3585 D11	3596 H13	3602 I15	
											3590 G7			

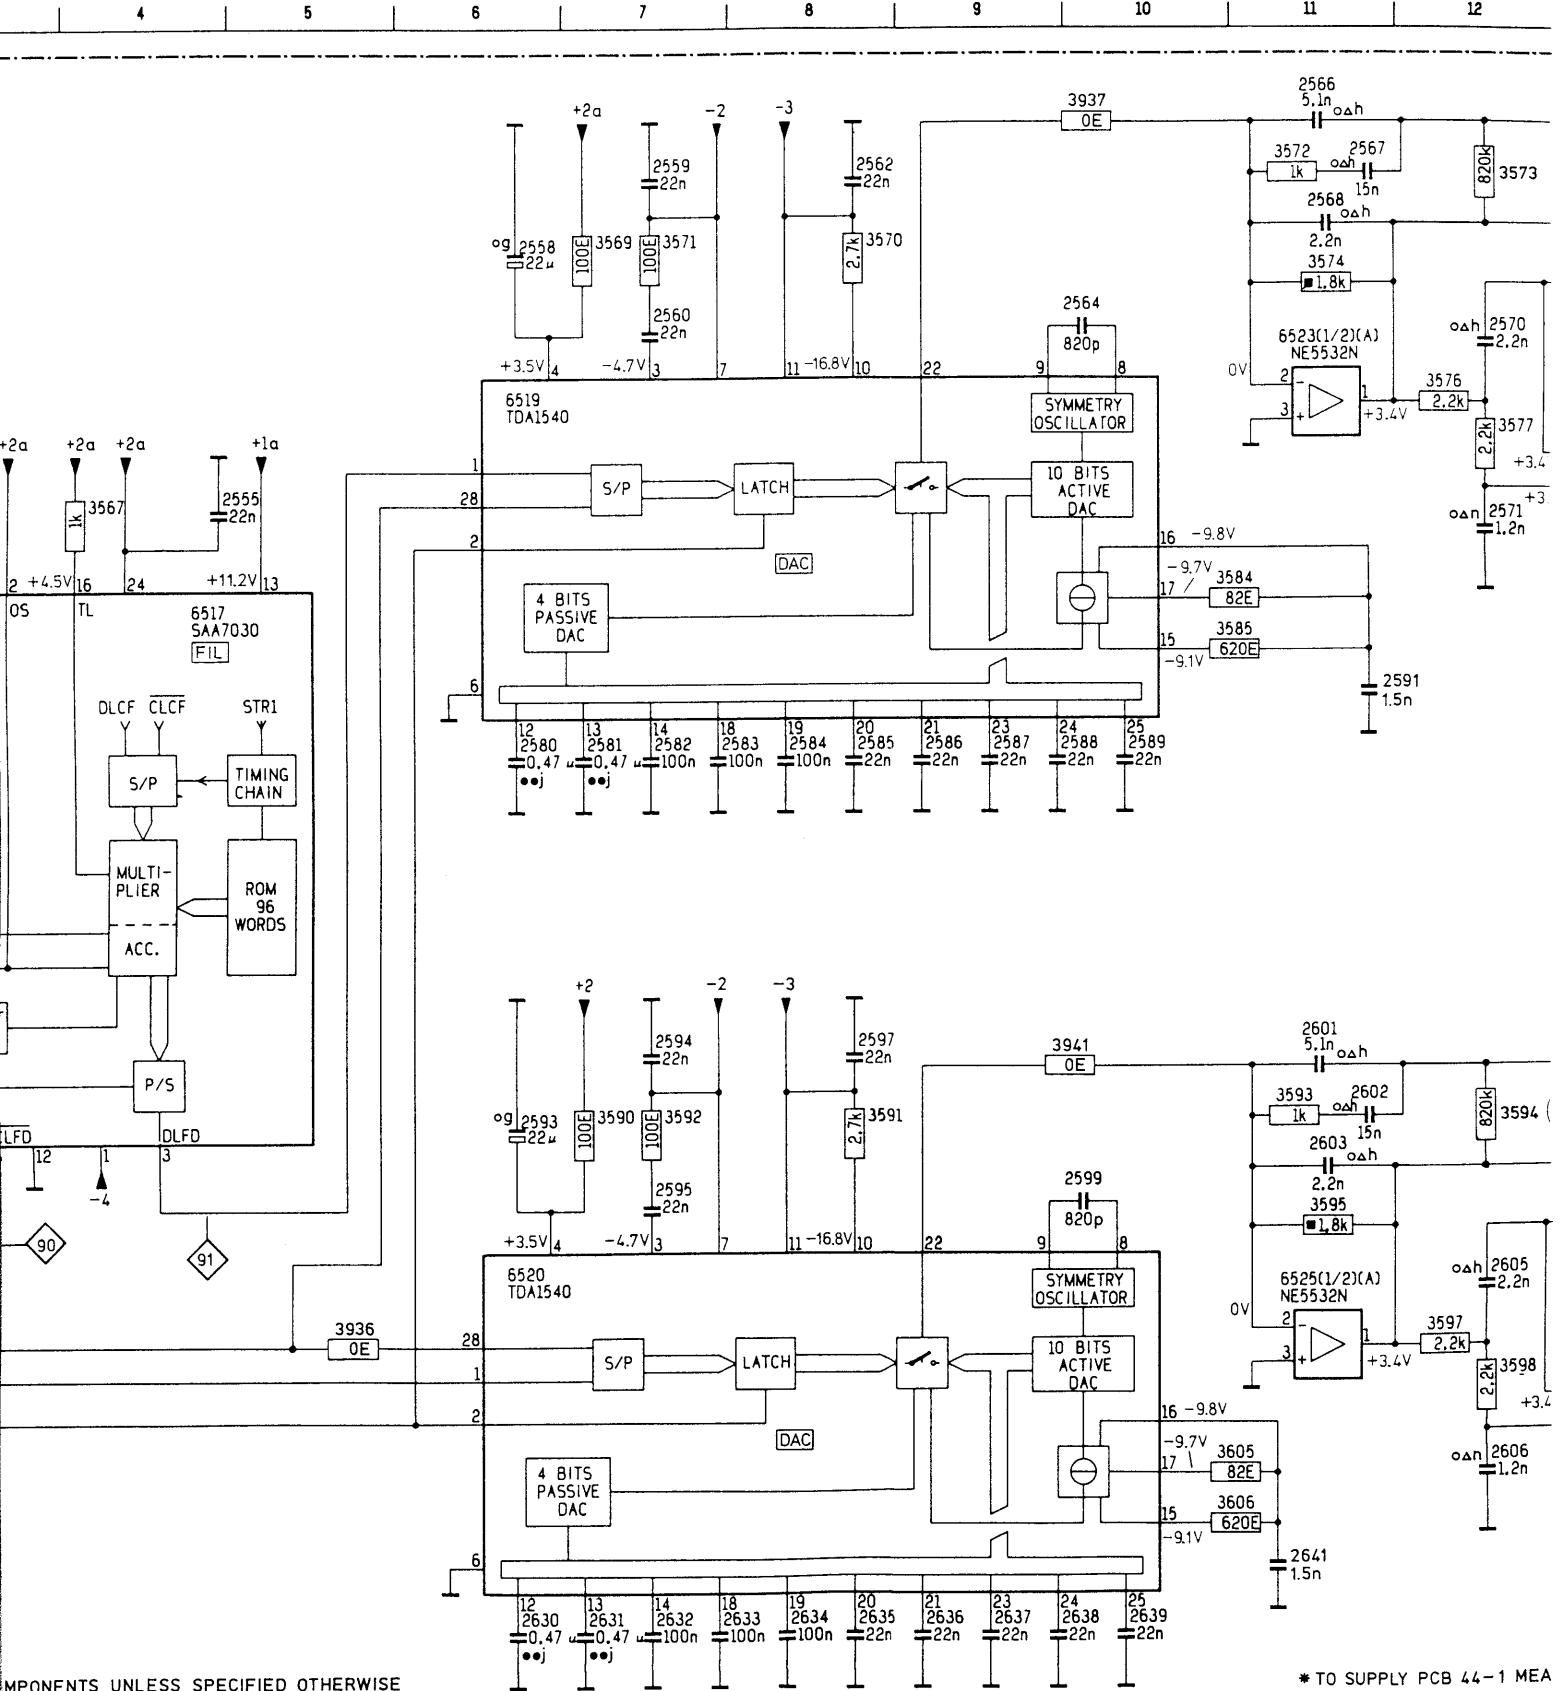

COMPONENTS UNLESS SPECIFIED OTHERWISE

* TO SUPPLY PCB 44-1 MEA

J8	2641 J11	3567 C4	3573 A12	3580 C15	3591 G8	3597 H12	3605 I11	6519 C6	6525 I13	3936 H5
J9	3550 E15	3569 B7	3574 B11	3581 C15	3592 G7	3598 H12	3606 I11	6520 H6	6561 D15	3937 A10
J9	3564 C1	3570 B8	3576 B12	3582 B13	3593 G11	3599 H13	3607 G15	6523 B11	5502 E15	3941 F10
J9	3565 C2	3571 B7	3577 C12	3583 D13	3594 G12	3600 I14	3608 F15	6523 C13		3944 F14
J10	3566 C3	3572 A11	3579 C14		3595 G11	3601 I15	6517 D4	6525 H11		
				3585 D11	3596 H13	3602 I15				
					3590 G7					

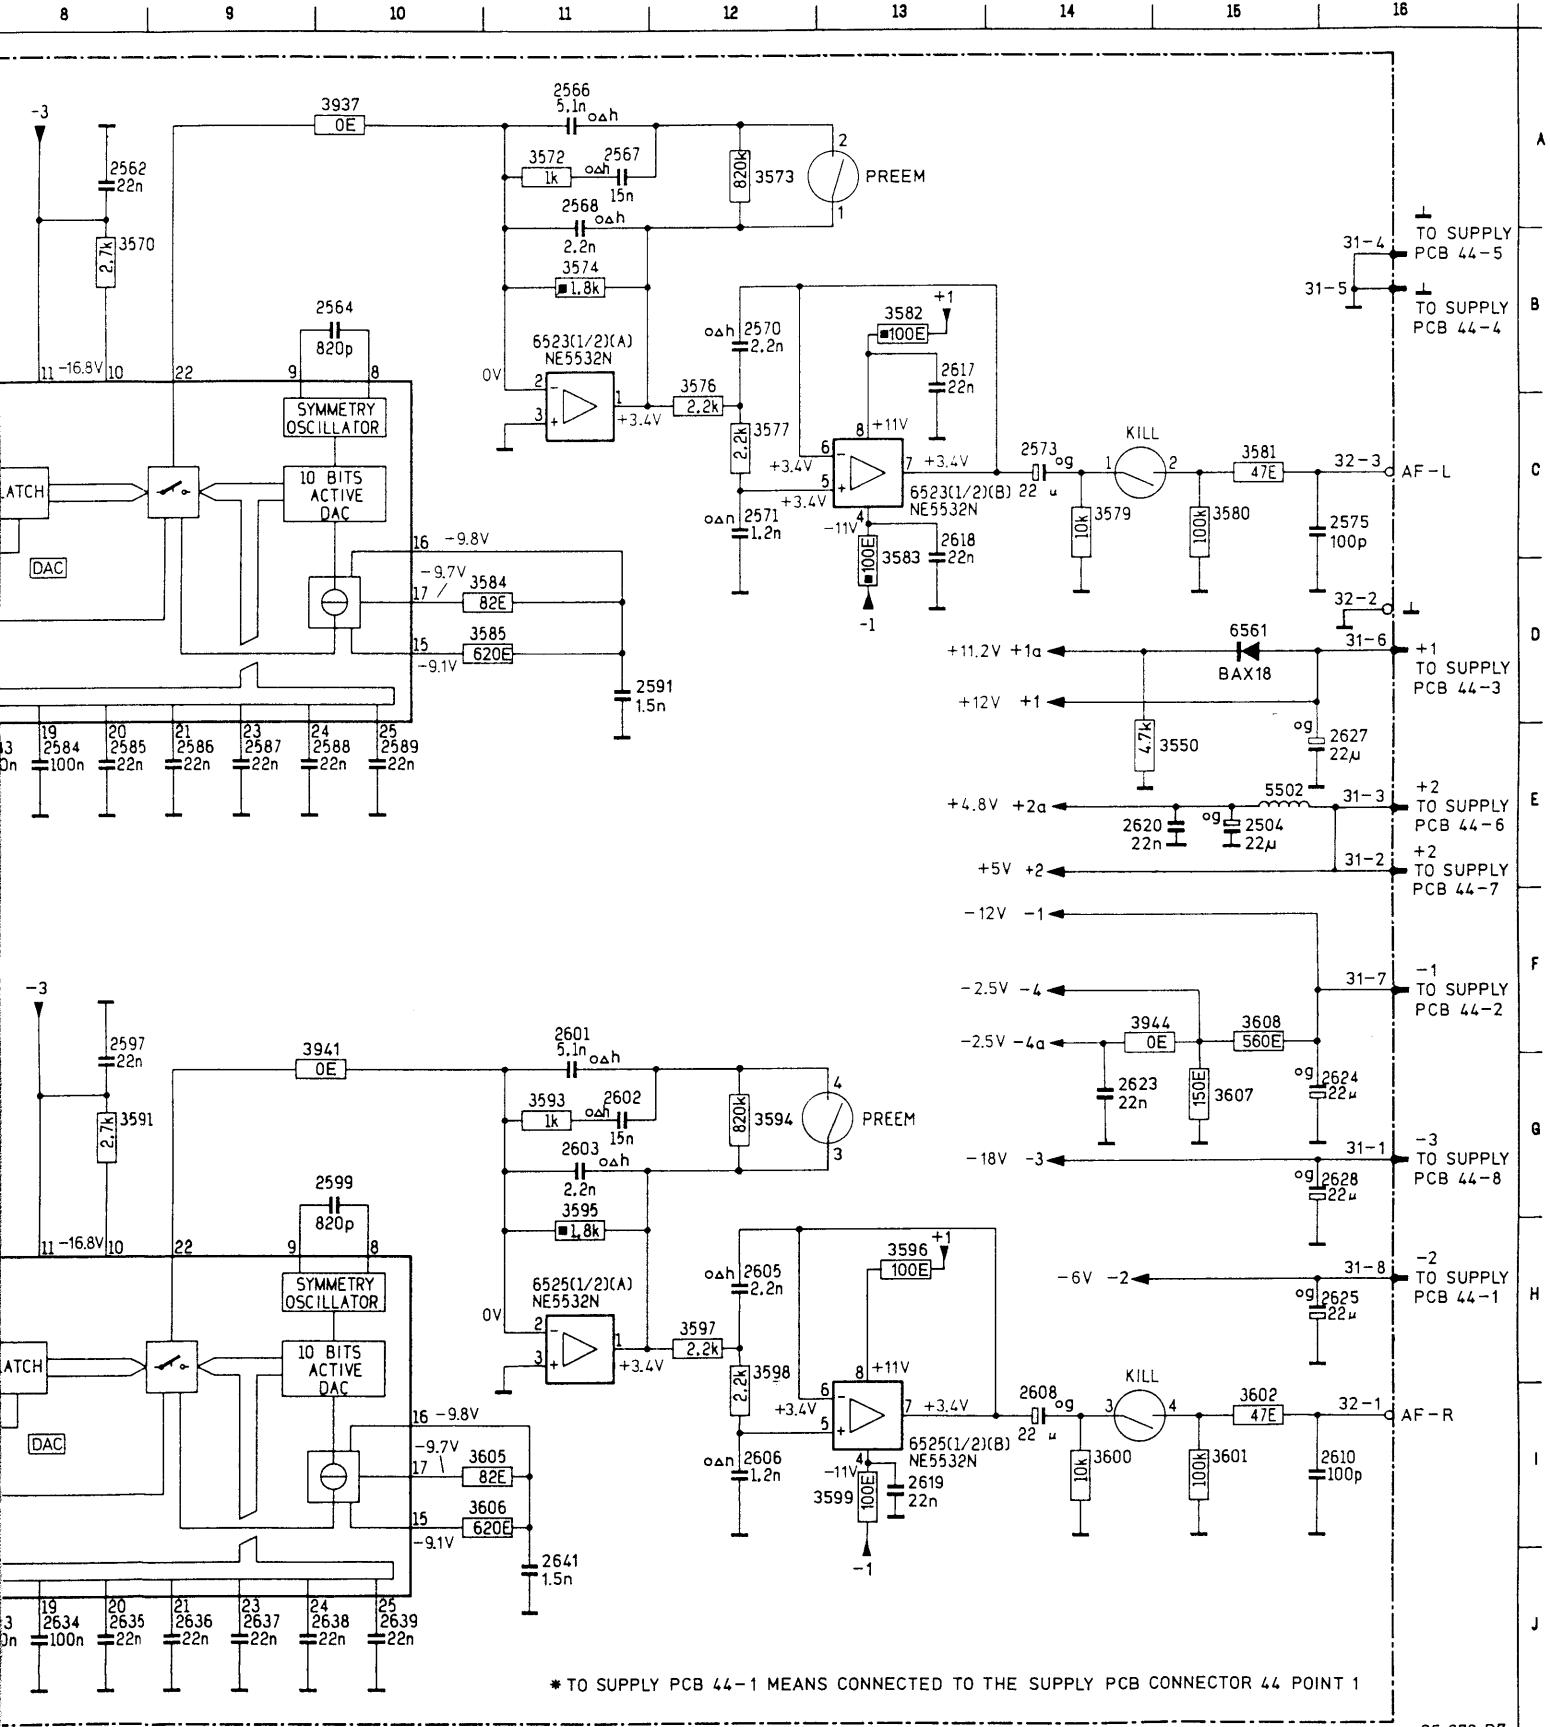


* TO SUPPLY PCB 44-1 MEANS CONNECTED TO THE SUPPLY PCB CONNECTOR 44 POINT 1

35 679 D7



1984-07-02

TRAY CONTROL CIRCUIT

2801 E 2	2804 C 8	3803 D 3	3806 G 5	3809 H 5	3812 I 6	3815 F 6	6801 B 5	6804 D 4	6807 D 2	6810 E 6	6813 H 6
2802 H 5	3801 D 2	3804 D 3	3807 H 4	3810 D 4	3813 H 7	3816 A 8	6802 O 3	6805 G 7	6808 H 5	6811 H 4	
2803 B 6	3802 H 4	3805 E 3	3808 E 4	3811 O 7	3814 B 7	3817 B 5	6803 H 5	6806 B 8	6809 G 8	6812 H 6	

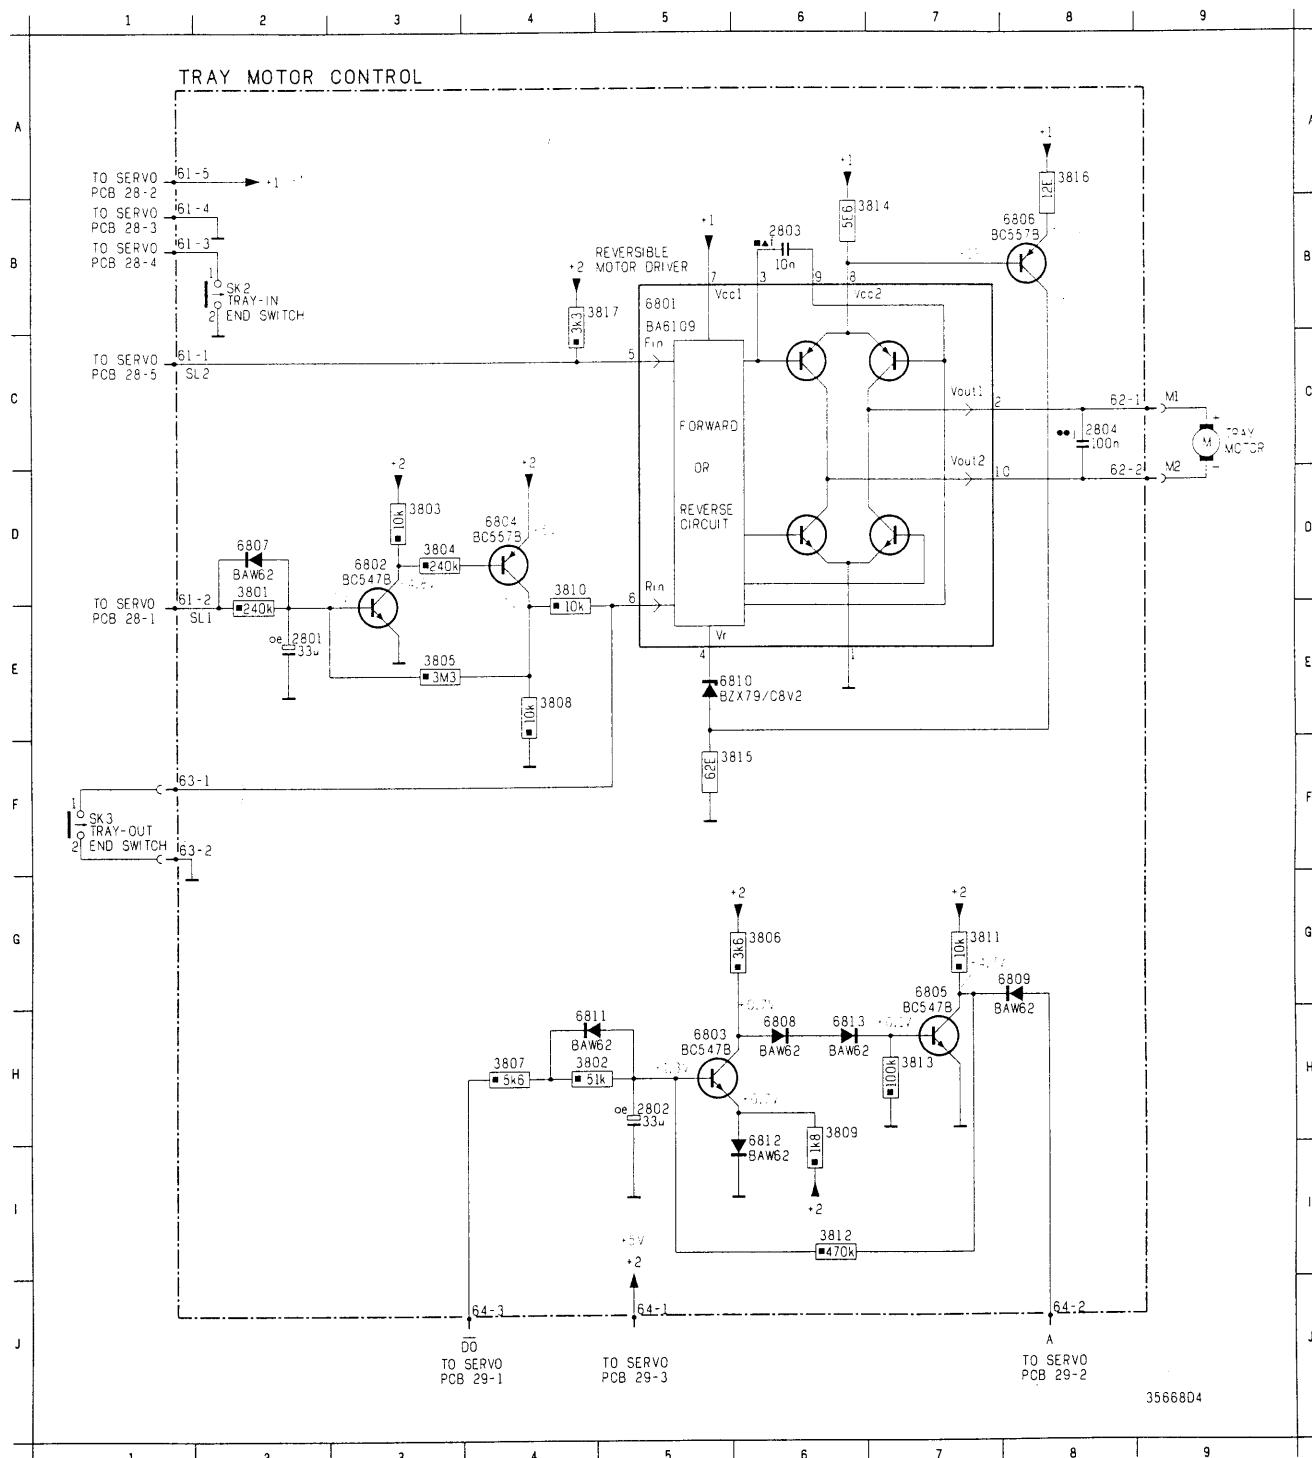

TRAY CONTROL P.C.B.

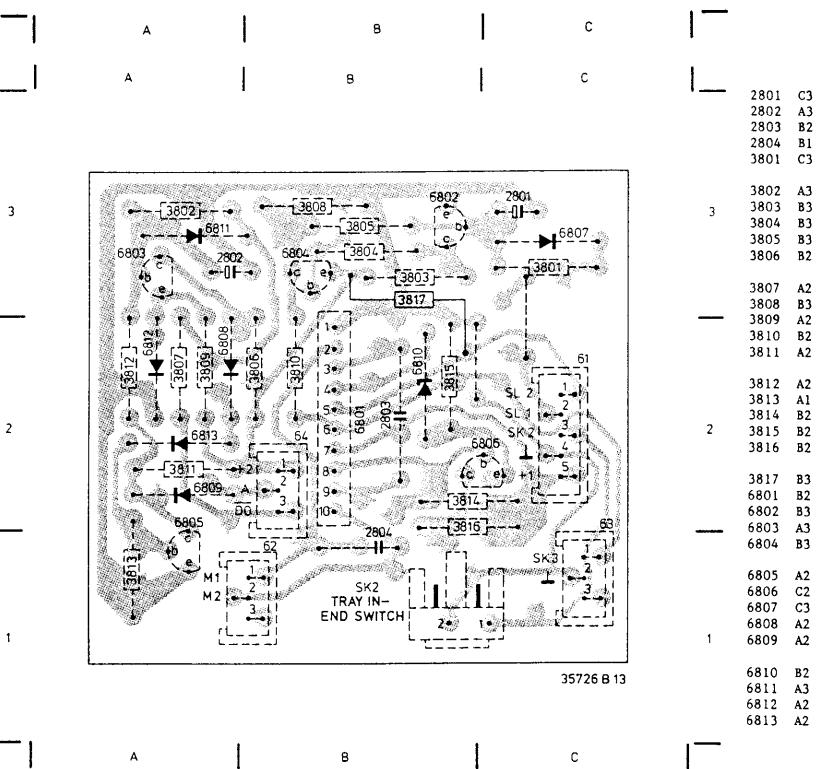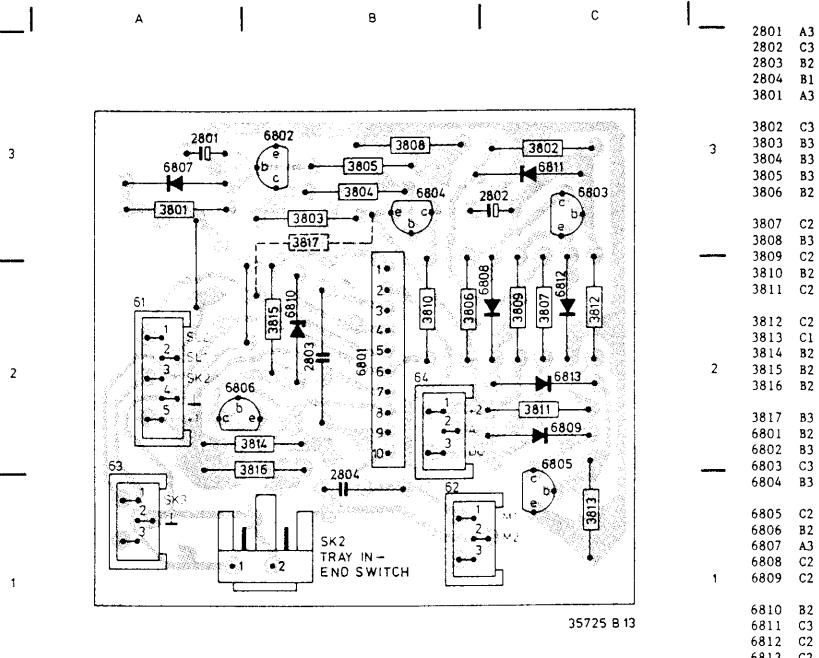

Tray control


6801	BA6109	4822 209 82059	3814 5E6 - NFR25 4822 111 30502 3815 62E - NFR25 4822 111 30529 3816 12E - NFR25 4822 111 30511
BC547B		4822 130 40959	
BC557B		4822 130 44568	
			SK2 Tact switch 4822 276 10863
BAW62		4822 130 30613	
BZX79-C8V2		4822 130 34382	

6-14-1


1984-11-15

TRAY CONTROL CIRCUIT

2801	E 2	2804	C 8	3803	D 3	3806	G 6	3809	H 6	3812	I 6	3813	H 7	3815	E 6	6801	B 5	6804	D 4	6807	D 2	6810	E 6	6813	G 6	\ \ \ G 6
2802	H 5	3801	O 2	3804	D 3	3807	H 4	3810	O 4	3813	A 8	3816	B 5	6802	D 3	6805	G 7	6808	G 5	6809	G 8	6811	G 4	SK2	B 2	
2803	B 6	3802	H 4	3805	E 3	3808	E 4	3811	G 7	3814	B 7	3817	B 5	6803	G 5	6806	B 8	6809	G 8	6812	H 6	SK3	F 1			

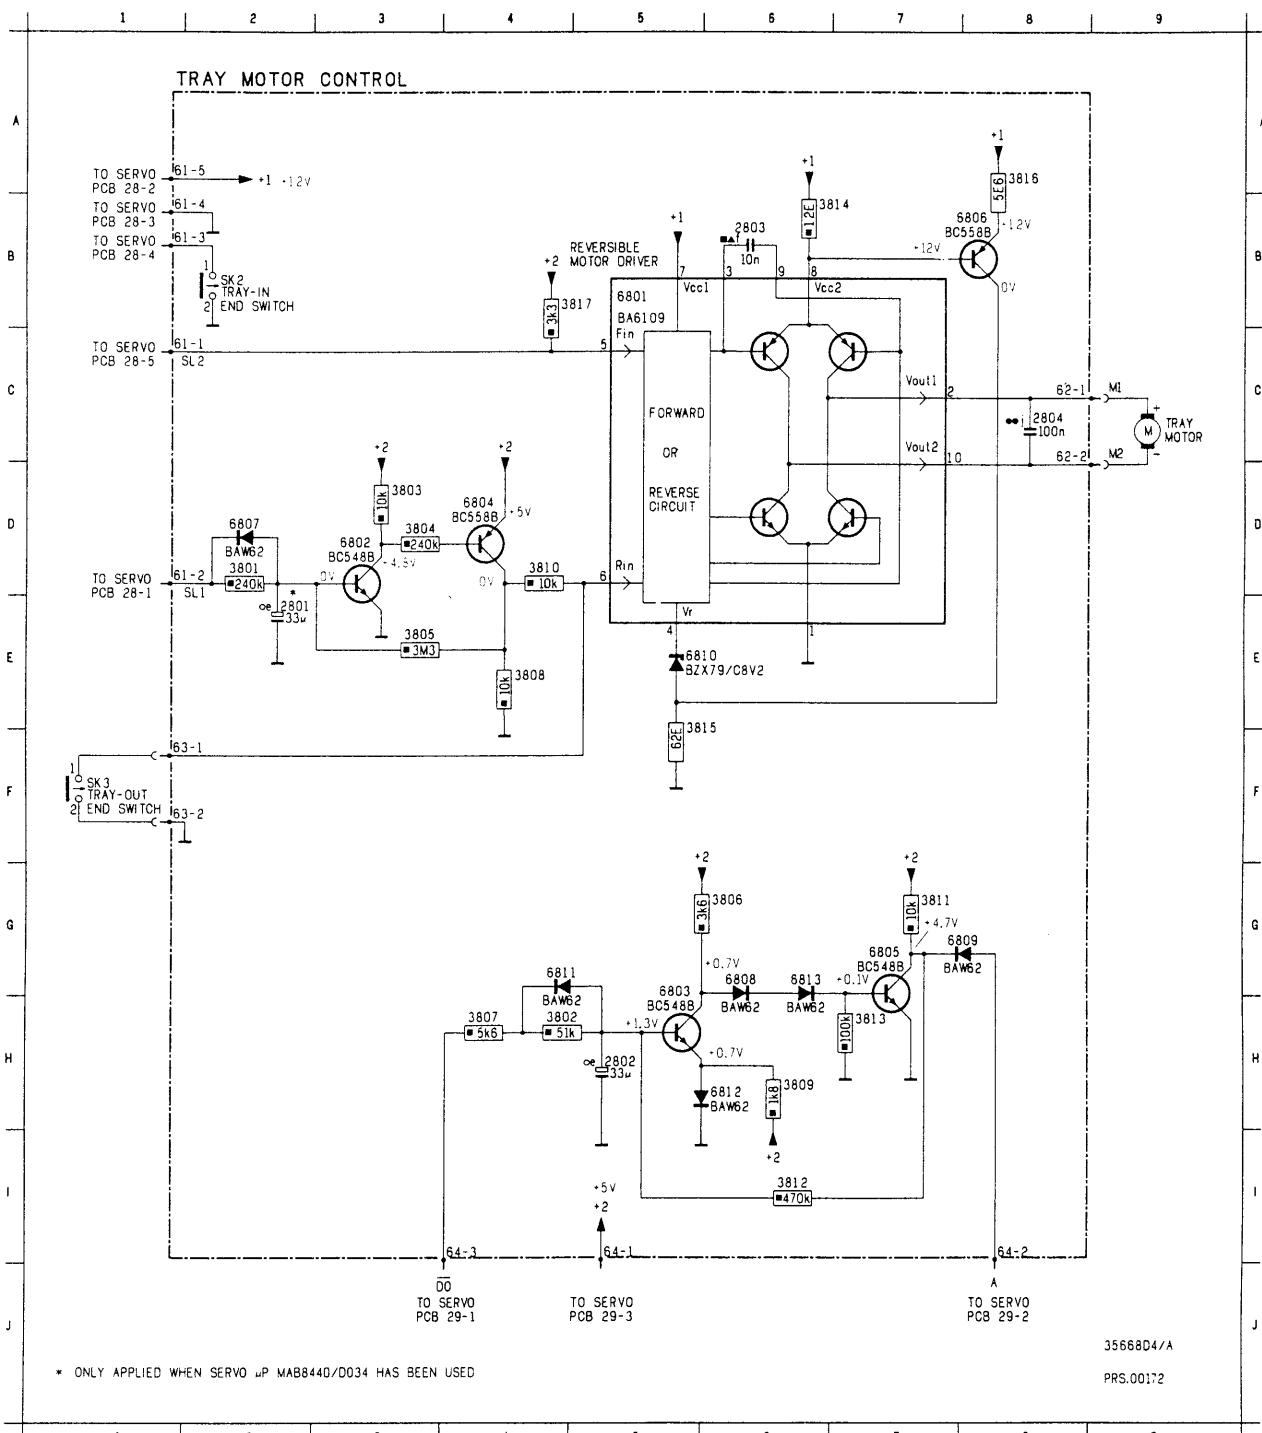

TRAY CONTROL P.C.B.

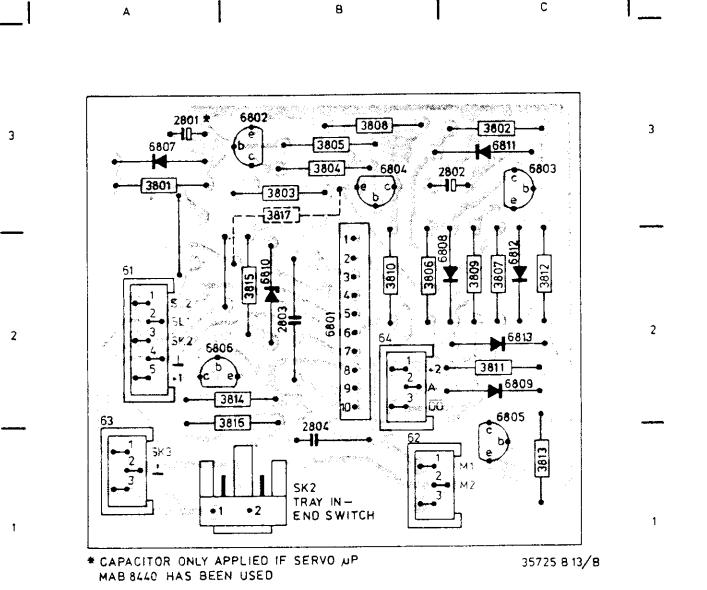

2801 A3
2802 C3
2803 B2
2804 B1
3801 A3

3802 C3
3803 B3
3804 B3
3805 B3
3806 B2


3807 C2
3808 B3
3809 C2
3810 B2
3811 C2

3812 C2
3813 C1
3814 B2
3815 B2
3816 B2

3817 B3
6801 B2
6802 B3
6803 C3
6804 B3

6805 C2
6806 B2
6807 A3
6808 C2
6809 C2

6810 B2
6811 C3
6812 C2
6813 C2






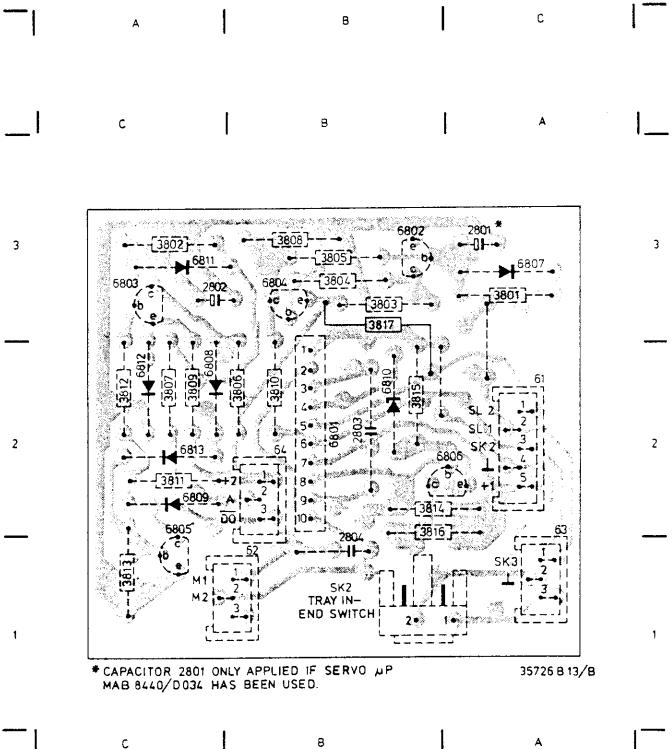



C B A


Tray control

6801 BA6109 4822 209 82059	3814 12E - NFR25 4822 111 30511		
	3815 62E - NFR25 4822 111 30529		
BC548B 4822 130 44196	3816 5E6 - NFR25 4822 111 30502		
BC558B 4822 130 44197			
	SK2 Tact switch 4822 276 10863		
BAW62 4822 130 30613			
BZX79-C8V2 4822 130 34382			


1984-07-02

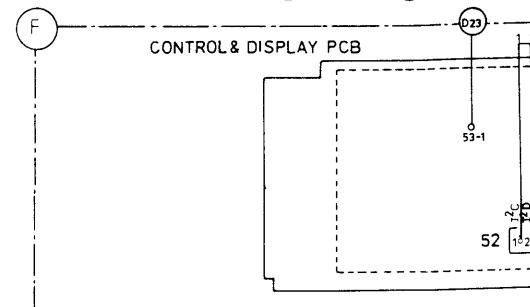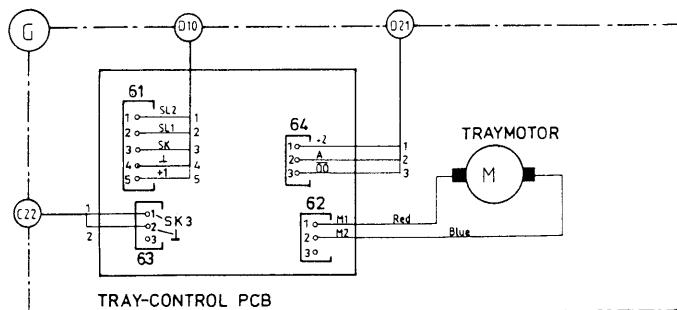
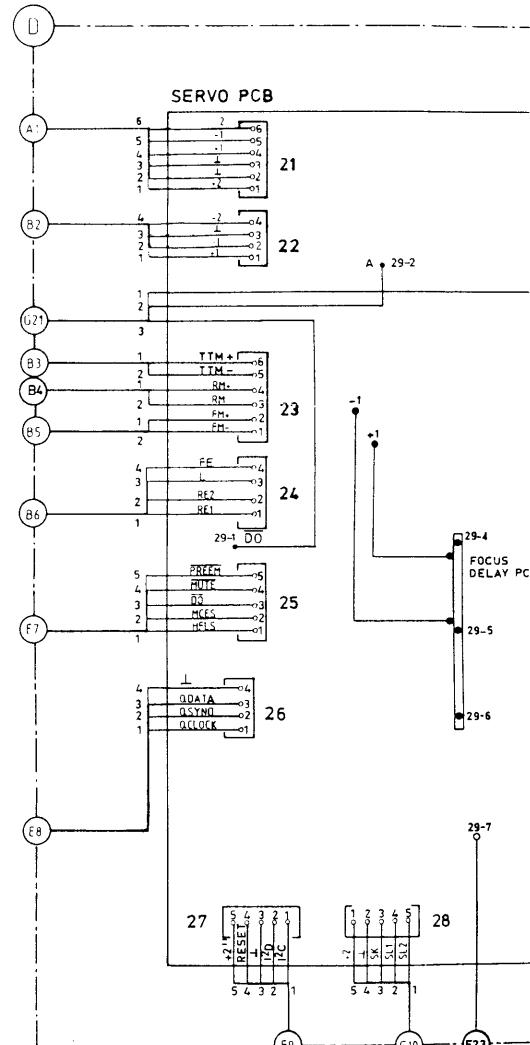
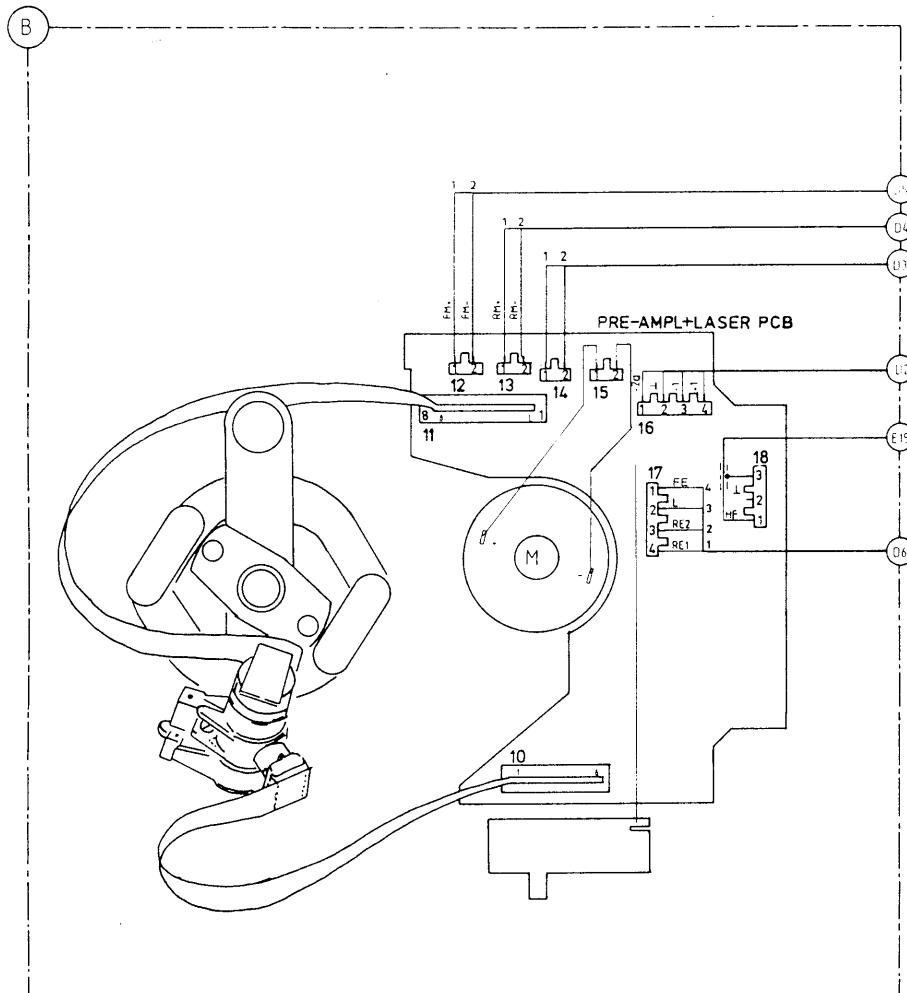
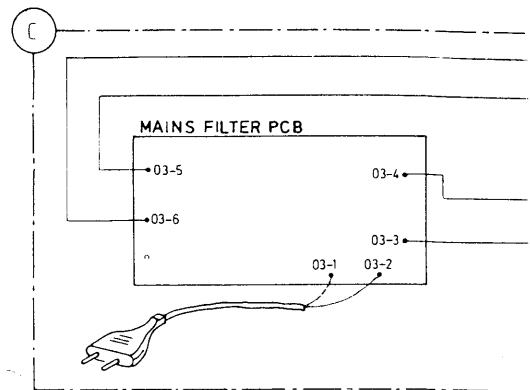
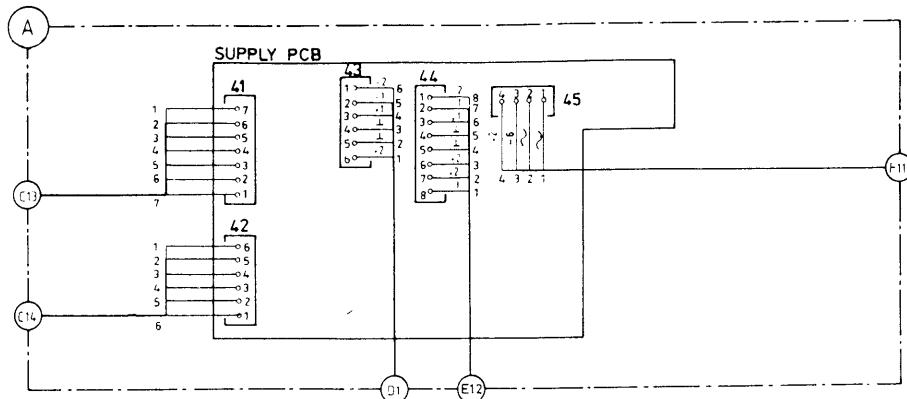


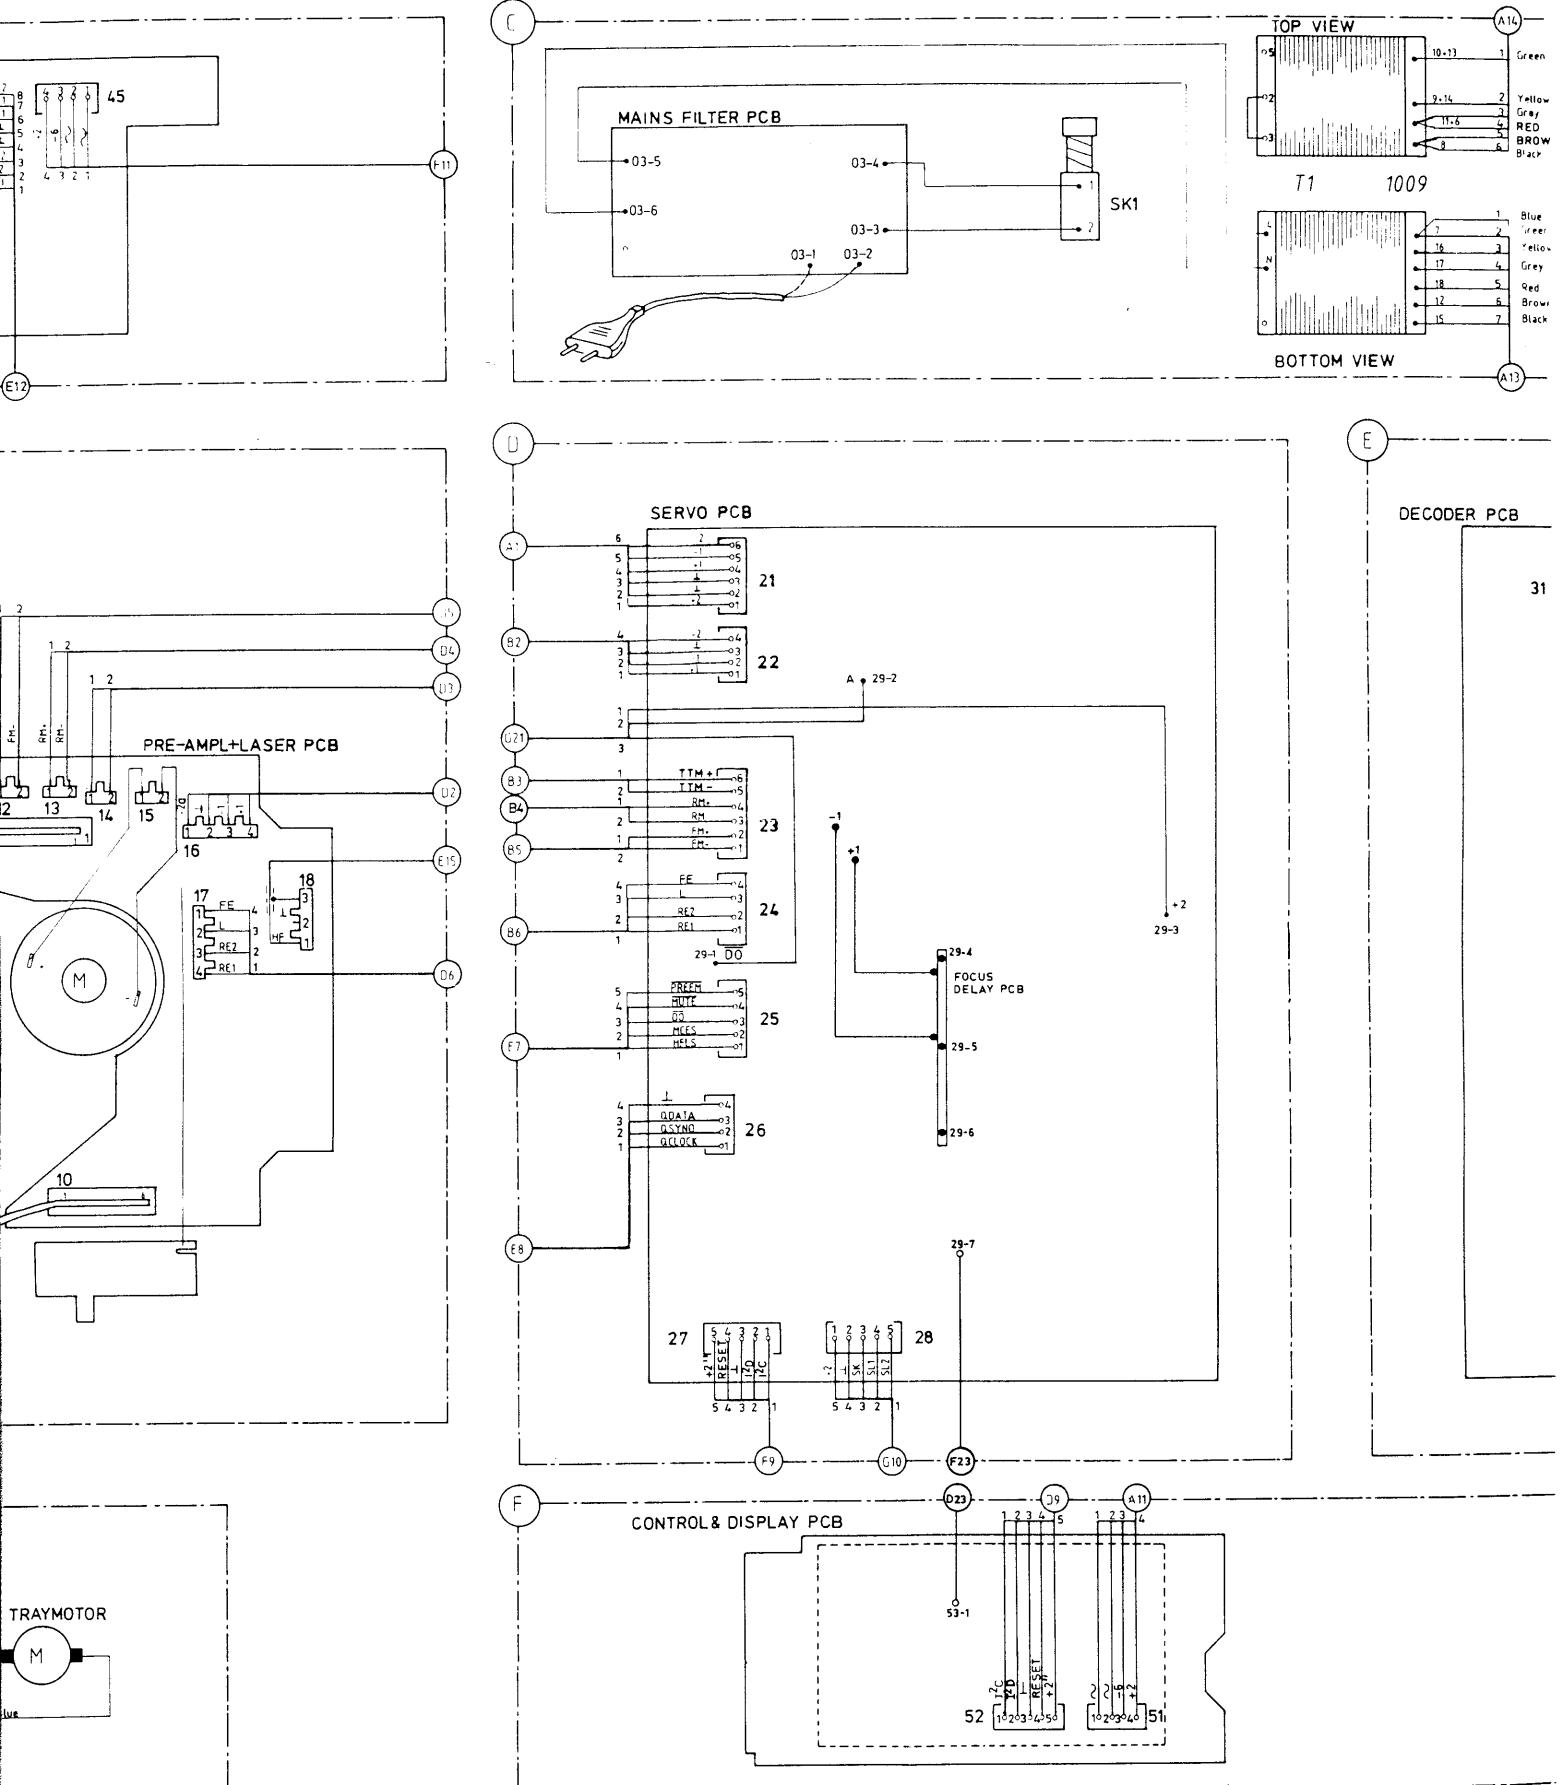


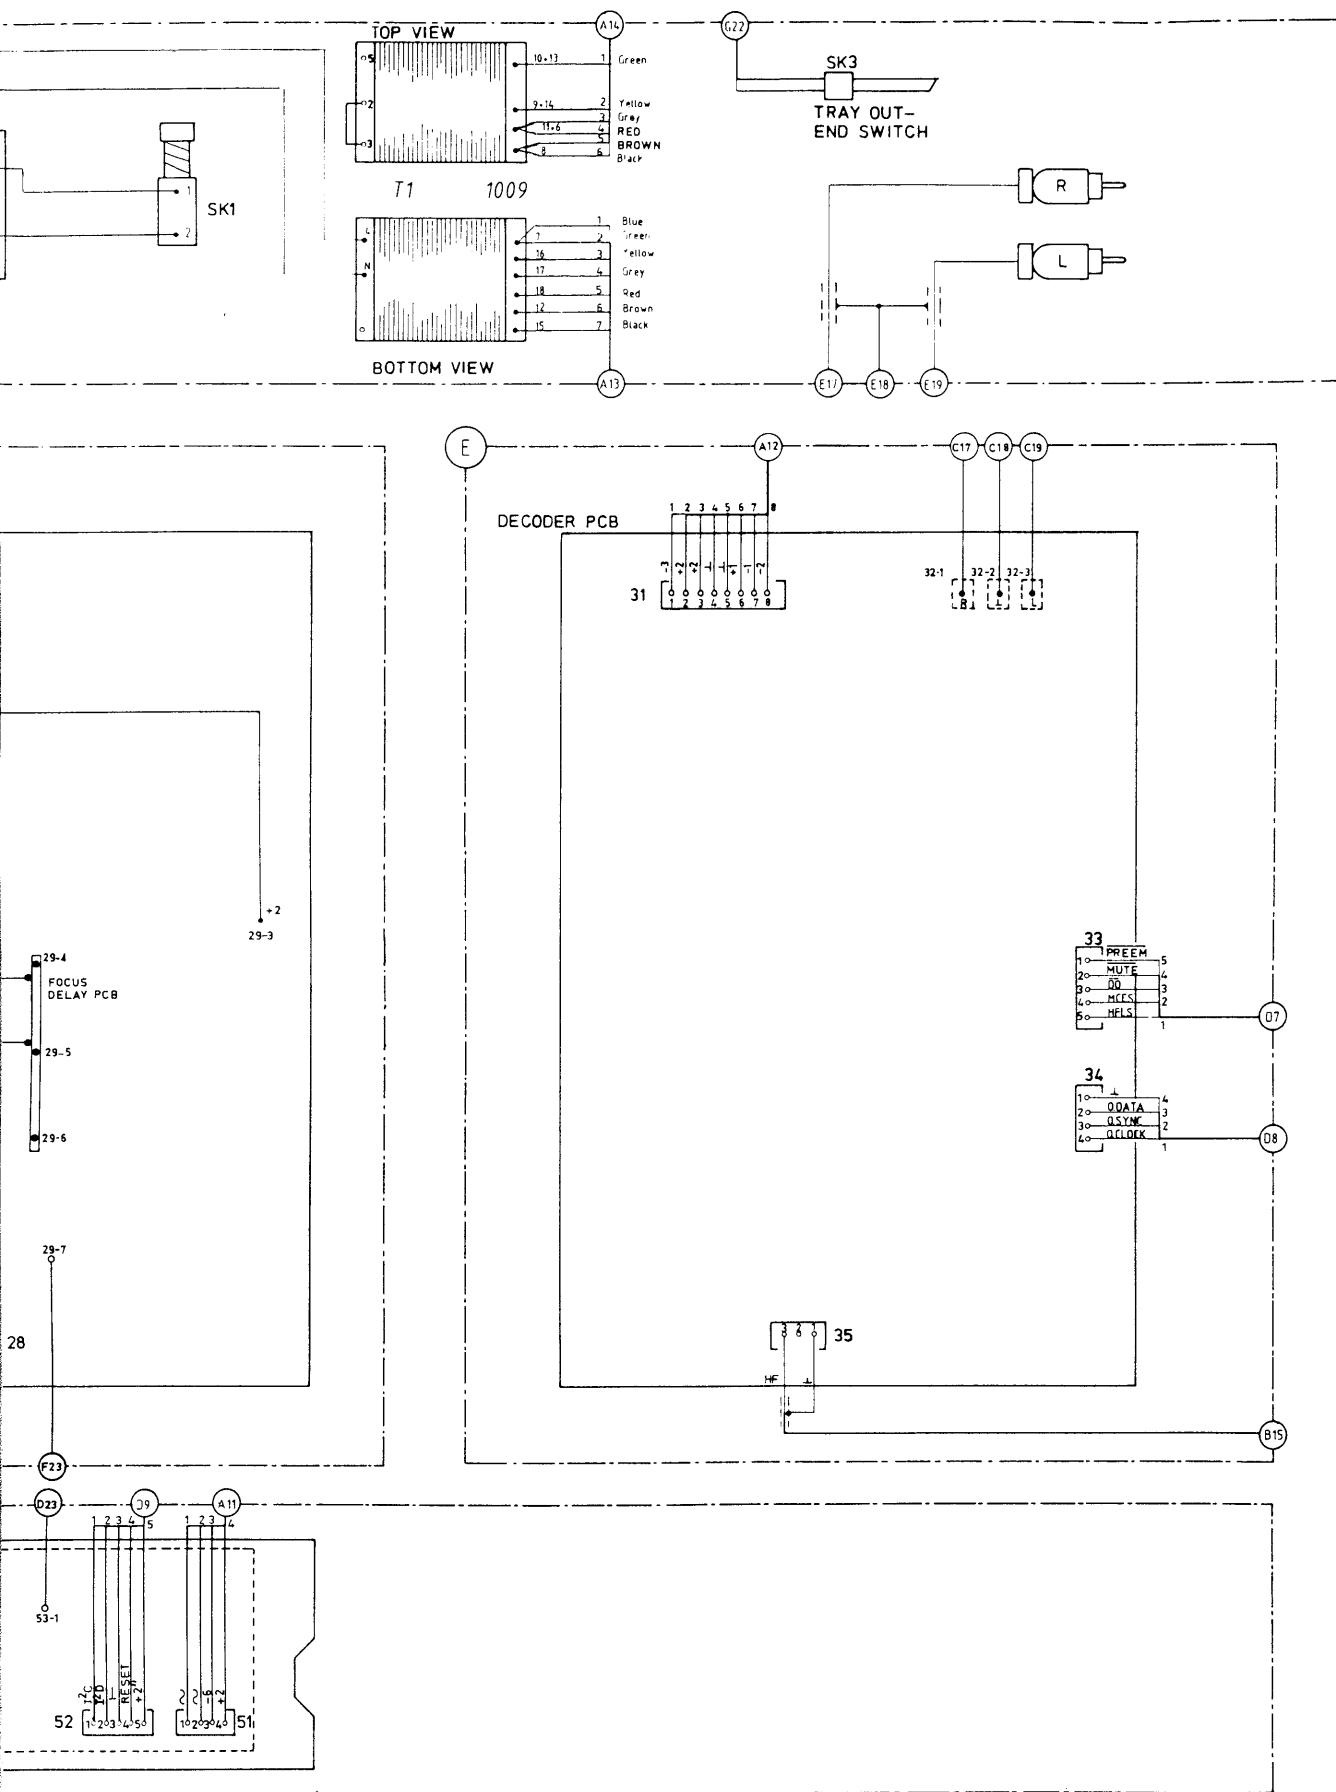


35 740 E11

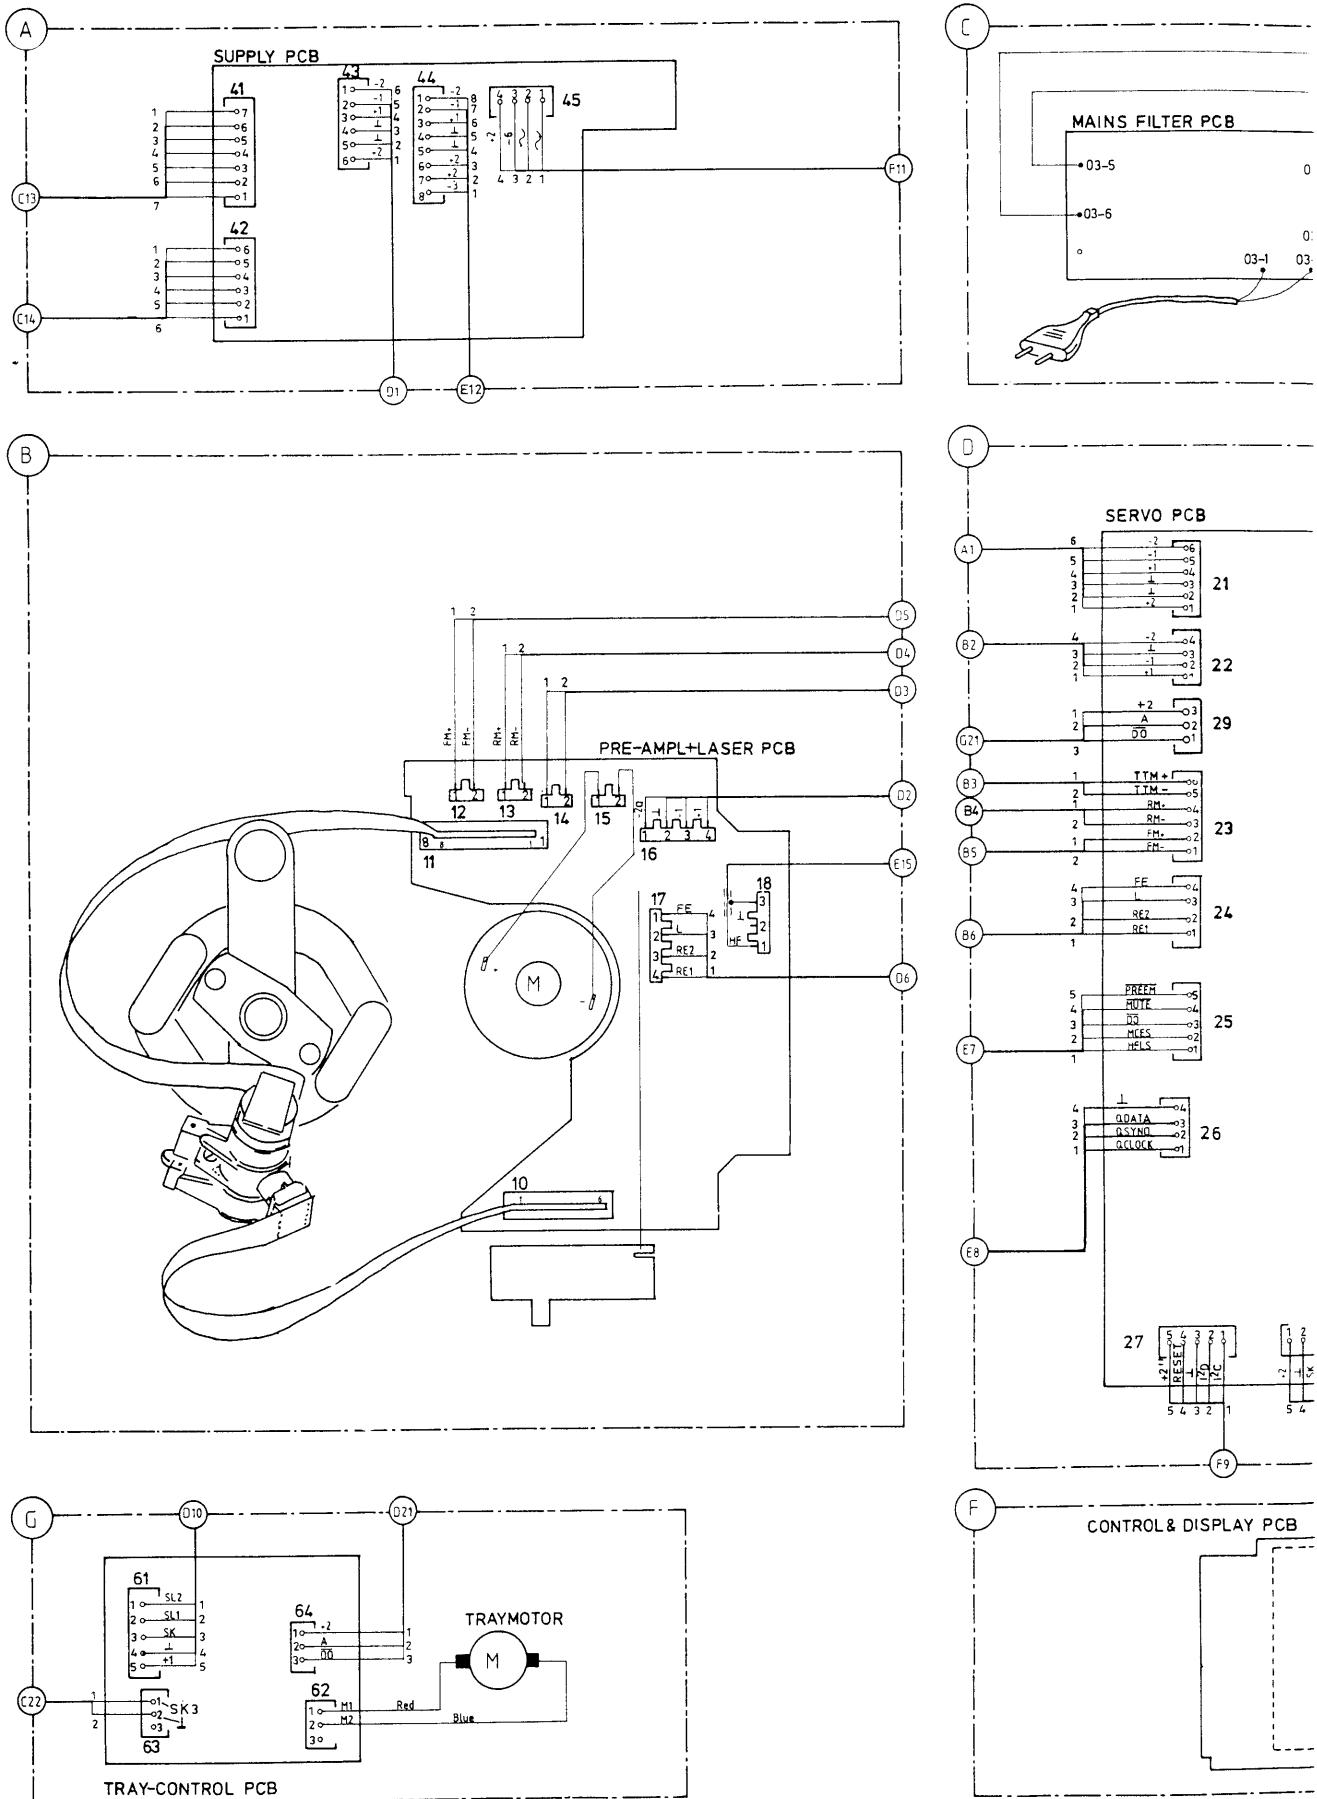

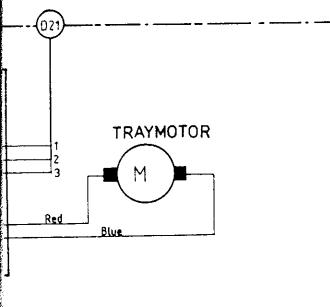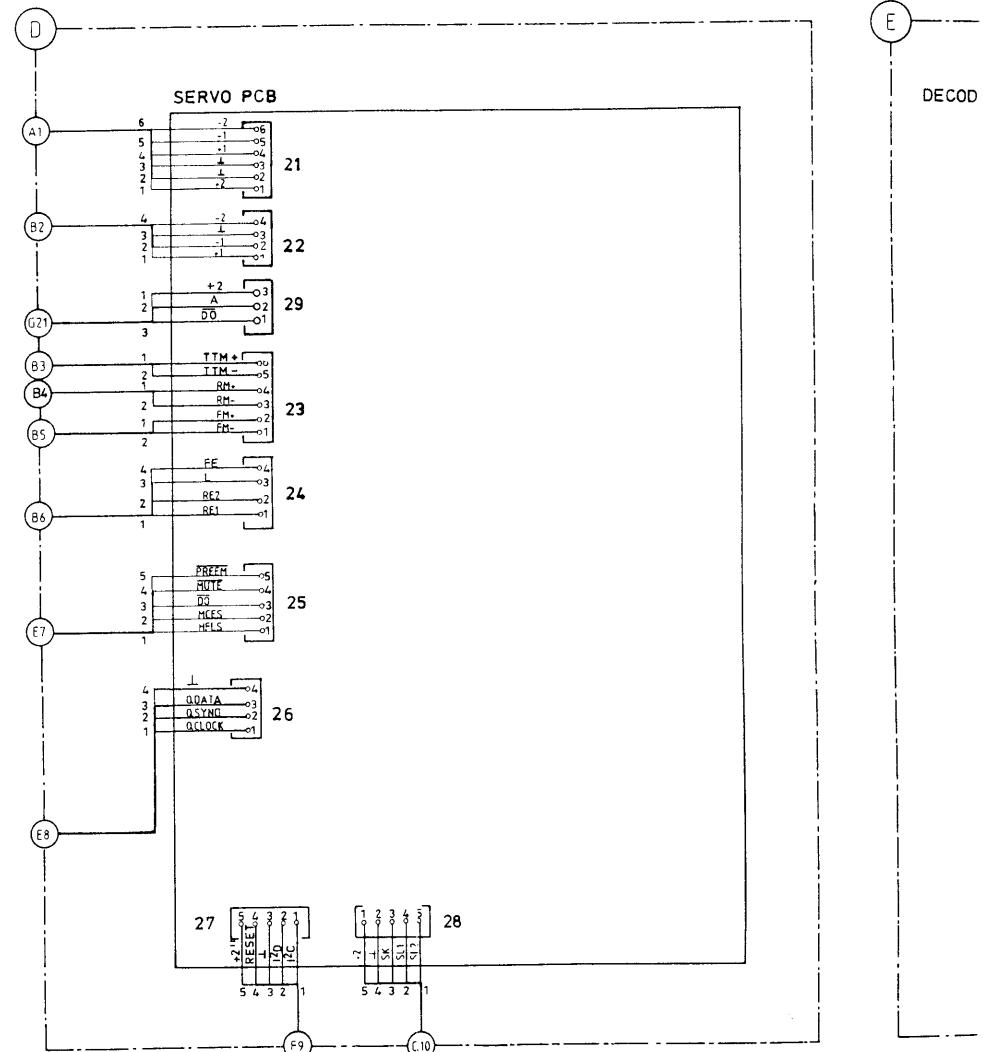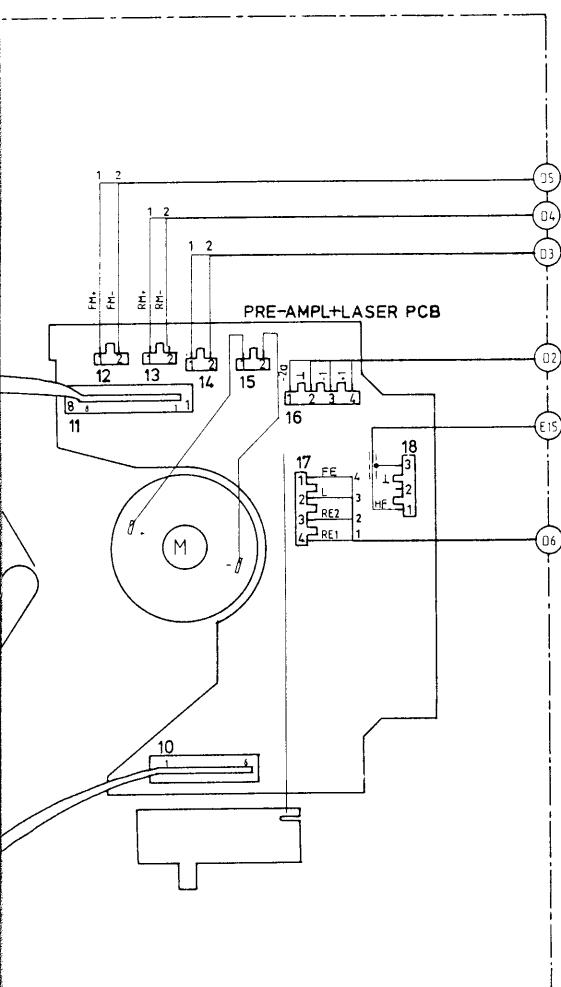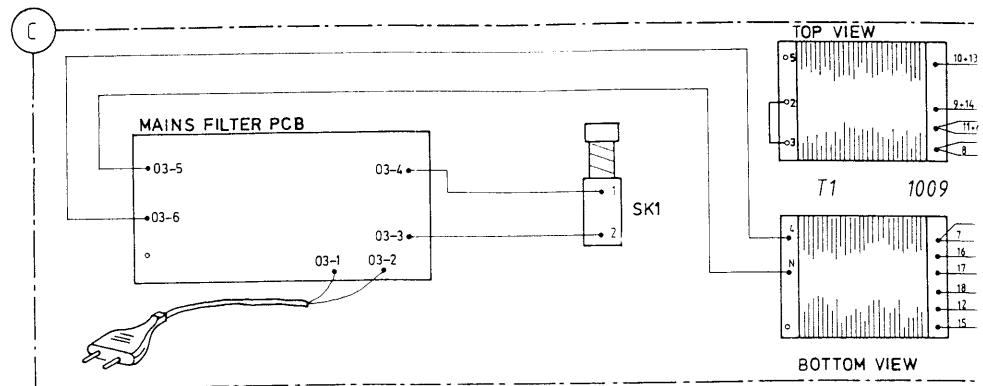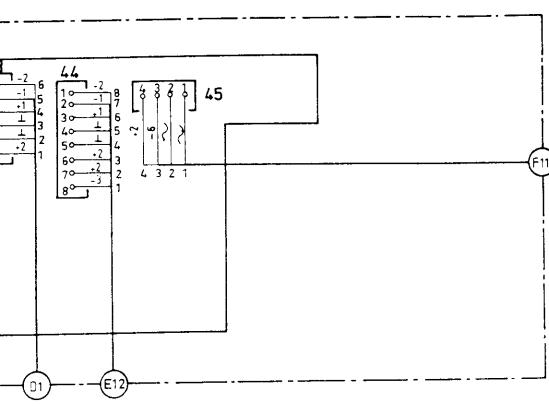

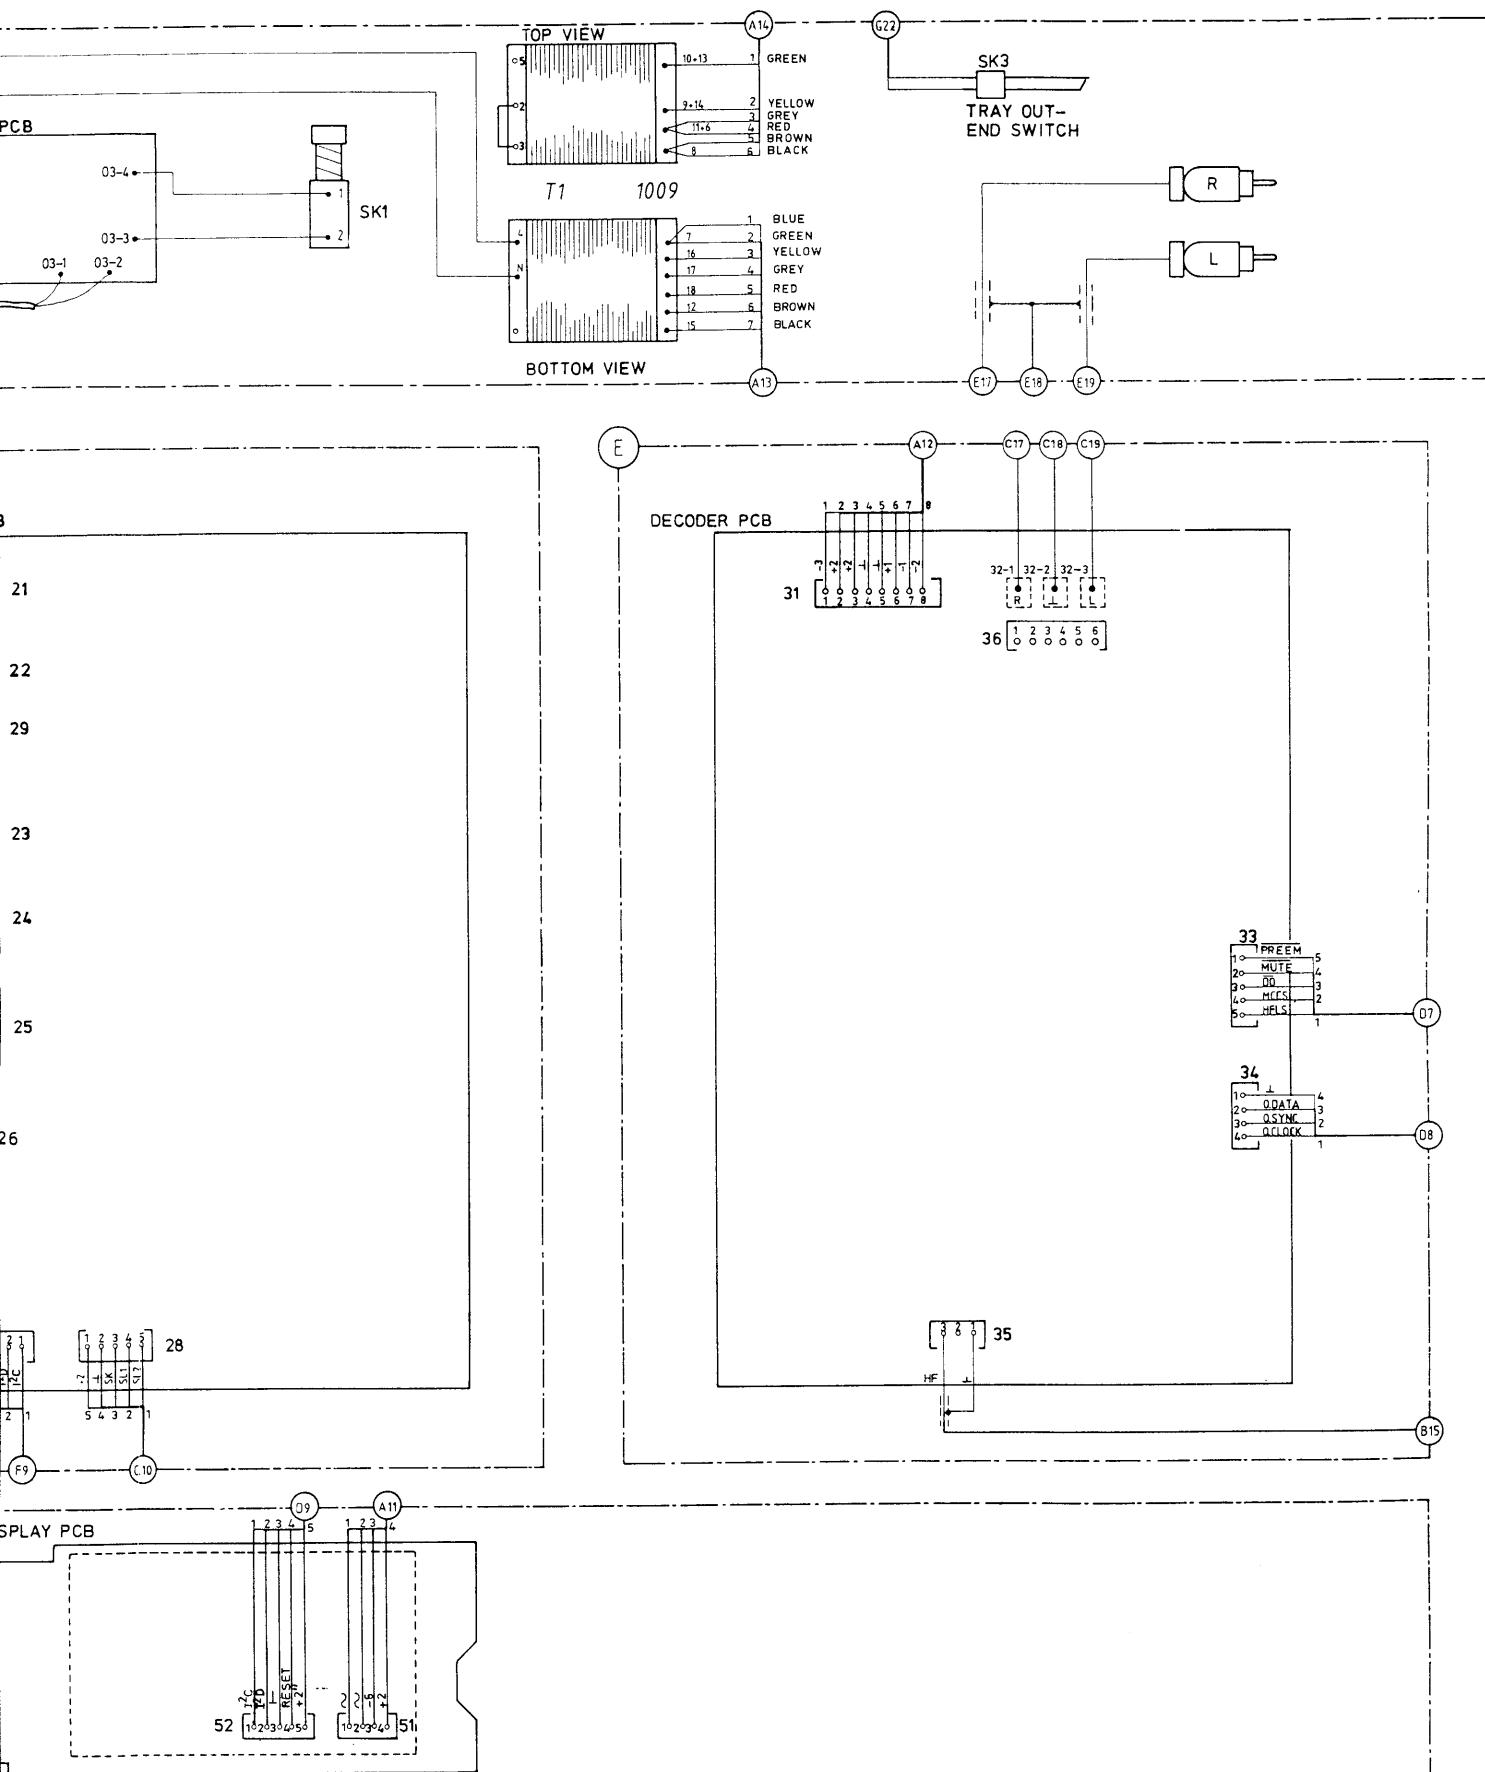

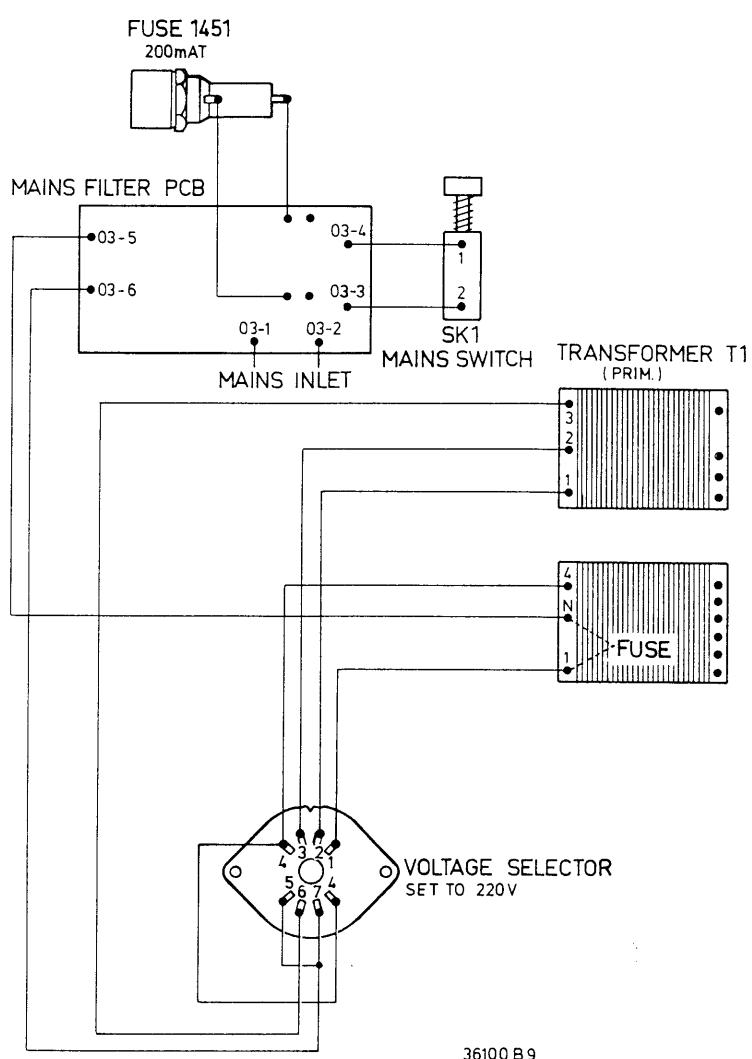

36100 B 9

	Carbon film 0.2 W 70°C 5%		Ceramic plate Tuning ≤ 120 pF NP.0 2% Others -20/+80%
	Carbon film 0.33 W 70°C 5%		Polyester flat foil 10%
	Metal film 0.33 W 70°C 5%		Metallized polyester flat film 10%
	Carbon film 0.5 W 70°C 5%		Polyester flat foil small size (Mylar) 10%
	Carbon film 0.67 W 70°C 5%		Polystyrene film/foil 1%
	Carbon film 1.15 W 70°C 5%		Tubular ceramic
(C) Chip component			Miniature single
			Subminiature tantalum ± 20%
*a = 2,5 V b = 4 V c = 6,3 V d = 10 V e = 16 V f = 25 V g = 40 V h = 63 V j = 100 V l = 125 V m = 150 V n = 160 V q = 200 V r = 250 V s = 300 V t = 350 V u = 400 V v = 500 V w = 630 V x = 1000 V A = 1,6 V B = 6 V C = 12 V D = 15 V E = 20 V F = 35 V G = 50 V H = 75 V I = 80 V			

27 037A/C

© Chips			© Chips 0,125 W				© Chips 0,125 W			
1.5 pF	5%	4822 122 31792	9.1	E	10%	4822 111 90398	9.1	k	5%	4822 111 90373
1.8 pF	5%	4822 122 32087	10	E	5%	5322 111 90095	10	k	2%	4822 111 90249
3.3 pF	5%	4822 122 32079	11	E	5%	4822 111 90338	11	k	5%	4822 111 90337
3.9 pF	5%	4822 122 32081	12	E	5%	4822 111 90551	12	k	2%	4822 111 90253
4.7 pF	5%	4822 122 32082	13	E	5%	4822 111 90343	13	k	2%	4822 111 90509
8.2 pF	5%	4822 122 32083	15	E	5%	4822 111 90344	15	k	5%	4822 111 90196
10 pF	5%	4822 122 31971	16	E	5%	4822 111 90347	16	k	5%	4822 111 90346
18 pF	5%	4822 122 31769	18	E	5%	5322 111 90139	18	k	5%	4822 111 90238
22 pF	10%	4822 122 31837	20	E	5%	4822 111 90352	20	k	5%	4822 111 90349
27 pF	5%	4822 122 31966	22	E	5%	4822 111 90186	22	k	2%	4822 111 90251
33 pF	5%	4822 122 31756	27	E	5%	4822 116 60186	24	k	2%	4822 111 90512
39 pF	5%	4822 122 31972	30	E	5%	4822 111 90356	27	k	2%	4822 111 90542
47 pF	5%	4822 122 31772	33	E	5%	4822 111 90357	30	k	2%	4822 111 90216
56 pF	5%	4822 122 31967	36	E	5%	4822 111 90359	33	k	5%	5322 111 90267
68 pF	10%	4822 122 31961	39	E	5%	4822 111 90361	36	k	2%	4822 111 90514
82 pF	10%	4822 122 31839	43	E	5%	5322 116 60125	39	k	5%	5322 111 90108
100 pF	5%	4822 122 31765	47	E	5%	4822 111 90217	43	k	5%	4822 111 90363
120 pF	5%	4822 122 31766	51	E	5%	4822 111 90365	47	k	2%	4822 111 90543
150 pF	5%	4822 122 31767	56	E	5%	4822 116 60187	51	k	5%	5322 111 90274
180 pF	2%	4822 122 31794	62	E	5%	4822 111 90367	56	k	2%	4822 111 90573
220 pF	5%	4822 122 31965	68	E	5%	4822 111 90203	62	k	5%	5322 111 90275
330 pF	10%	4822 122 31642	75	E	5%	4822 111 90371	68	k	5%	4822 111 90202
390 pF	5%	4822 122 31771	82	E	5%	4822 116 60158	75	k	2%	4822 111 90574
470 pF	5%	4822 122 31727	91	E	5%	4822 111 90375	82	k	2%	4822 111 90575
560 pF	5%	4822 122 31773	100	E	5%	5322 111 90091	91	k	5%	5322 111 90277
680 pF	5%	4822 122 31775	110	E	5%	4822 111 90335	100	k	2%	4822 111 90214
820 pF	10%	4822 122 31974	120	E	5%	4822 111 90339	110	k	5%	5322 111 90269
1 nF	10%	5322 122 31647	130	E	5%	4822 116 60164	120	k	2%	4822 111 90568
1,2 nF	5%	4822 122 31807	150	E	5%	5322 111 90098	130	k	2%	4822 111 90511
1,5 nF	10%	4822 122 31781	160	E	5%	4822 111 90345	150	k	5%	5322 111 90099
2,2 nF	10%	4822 122 31644	180	E	5%	5322 111 90242	160	k	2%	5322 111 90264
2,7 nF	10%	4822 122 31783	200	E	5%	4822 111 90348	180	k	2%	4822 111 90565
3,3 nF	10%	4822 122 31969	220	E	5%	4822 111 90178	200	k	5%	4822 111 90351
4,7 nF	10%	4822 122 31784	240	E	5%	4822 111 90459	220	k	5%	4822 111 90197
5,6 nF	10%	4822 122 31916	270	E	5%	4822 111 90154	240	k	2%	4822 111 90215
6,8 nF	10%	4822 122 31976	300	E	5%	4822 111 90156	270	k	5%	4822 111 90302
10 nF	10%	4822 122 31728	330	E	5%	5322 111 90106	300	k	5%	5322 111 90266
12 nF	10%	5322 122 31648	360	E	1%	4822 111 90288	330	k	2%	4822 111 90513
15 nF	10%	4822 122 31782	390	E	5%	5322 111 90138	360	k	2%	4822 111 90515
18 nF	5%	4822 122 31759	430	E	2%	4822 111 90213	390	k	5%	4822 111 90182
22 nF	10%	4822 122 31797	470	E	5%	5322 111 90109	430	k	5%	4822 111 90168
33 nF	10%	4822 122 31981	510	E	5%	4822 111 90245	470	k	5%	4822 111 90161
100 nF	20%	4822 122 31947	560	E	5%	5322 111 90113	510	k	5%	4822 111 90364
© Chips 0,125 W			620	E	5%	4822 111 90366	560	k	5%	4822 111 90169
680	E	5%	4822 111 90162	620	k	2%	4822 111 90213			
750	E	5%	4822 111 90438	680	k	2%	4822 111 90106			
820	E	5%	4822 111 90171	750	k	5%	4822 111 90369			
910	E	5%	4822 111 90372	820	k	5%	4822 111 90205			
1	k	5%	5322 111 90092	910	k	5%	4822 111 90374			
1,1	k	5%	4822 111 90294	1	M	2%	4822 111 90252			
1,2	k	5%	5322 111 90096	1,1	M	5%	4822 111 90408			
1,3	k	5%	4822 111 90244	1,2	M	10%	4822 111 90409			
1,5	k	5%	4822 111 90151	1,3	M	10%	4822 111 90411			
1,6	k	5%	5322 111 90265	1,5	M	10%	4822 111 90412			
1,8	k	5%	5322 111 90101	1,6	M	10%	4822 111 90413			
2	E	10%	4822 111 90384	2	k	5%	4822 111 90415			
2,2	E	10%	4822 111 90507	2,2	k	2%	4822 111 90185			
2,4	E	10%	4822 111 90385	2,4	k	5%	4822 111 90416			
2,7	E	10%	4822 111 90386	2,7	k	2%	4822 111 90417			
3	E	10%	4822 111 90387	3	k	5%	4822 111 90418			
3,3	E	10%	4822 111 90447	3,3	k	5%	4822 111 90191			
3,6	E	10%	4822 111 90389	3,6	k	5%	4822 111 90419			
3,9	E	10%	4822 111 90391	3,9	k	2%	4822 111 90421			
4,3	E	10%	4822 111 90392	4,3	k	5%	4822 111 90422			
4,7	E	5%	5322 111 90376	4,7	k	5%	4822 111 90423			
5,1	E	10%	4822 111 90393	5,1	k	5%	4822 111 90424			
5,6	E	10%	4822 111 90394	5,6	k	2%	4822 111 90508			
6,2	E	10%	4822 111 90395	6,2	k	5%	4822 111 90426			
6,8	E	5%	4822 111 90254	6,8	k	2%	4822 111 90328			
7,5	E	10%	4822 111 90396	7,5	k	5%	4822 111 90427			
8,2	E	10%	4822 111 90397	8,2	k	5%	4822 111 90329			
					9,1	M	10%	4822 111 90428		

FAULTFINDING METHOD

Preface

In course of the development of the troubleshooting guide for the Compact Disc it has become clear that a different approach from the one applied so far was required.

For, it is no longer possible to use the classic strategy, i.e. basing the troubleshooting method on a number of possible faults in the unit.

Practice has shown that a certain fault, with the associated symptom, can have a wide variety of causes.

The reason is that this player incorporates a number of feedback loop configurations — which, moreover, might affect each other — and this impedes the obvious measurements.

The method below divides the player from diagram point of view into nine clearly distinguishable sub-groups and by performing some measurements, the sub-group being in failure can be isolated. Later the defective circuit can be further examined according to the method given.

PRACTICAL HINTS

Test discs

It is important to handle the test discs with great care. For, the troubles (black dots, fingerprints, etc.) are exclusively and unambiguously positioned.

Damage can cause additional drop-outs etc. and as a result the conscious fault on this disc is no longer exclusive.

In that case it is no longer possible to check e.g. whether the track detector is working correctly.

Measurements on op-amps

In the electronic circuits of the servo systems op-amps are frequently being applied. These op-amps can be used as amplifiers, as filters, as invertors, as buffers, etc.

In those cases where feedback is applied in one way or the other, the voltage difference at the differential inputs inclines to zero. This applies both to DC and to AC.

The cause can be traced back to the properties of an ideal op-amp ($Z_i = \infty$; $G = \infty$; $Z_o = 0$).

In practice this means that it is nearly impossible to perform measurements on the inverting and non-inverting inputs of op-amps if one input is directly connected to ground.

In those cases only the output signal will be measurable.

That is why in most cases no AC voltages can be given to the inputs.

The DC voltages at the inputs are equal.

Stimulating with „0” and „1”

In the troubleshooting method certain pins should in a number of cases be connected to ground or be connected to the power supply voltage.

This way of acting offers the possibility to overrule certain circuits and to stimulate others.

In this way the diagnose time can be reduced.

In a number of cases the relevant pins appear to be **op-amp outputs**.

In this respect it should be mentioned that the outputs of the used op-amps are short-circuit protected.

This implies that the output of an op-amp can be made low (= usually ground potential) without consequences.

On the other hand should be pointed out that it is **not allowed** to connect the **output** of an op-amp directly to the **power supply voltage**.

I/Os of microprocessors should not be connected directly to power supply voltage.

These I/Os are allowed to be brought to „0” in case this is mentioned explicitly.

Selection of ground point

It is very important to select a ground point as close as possible to the test point.

Conditions for injecting

- It should be pointed out that injection of levels or signals from a strange source is **never** allowed to occur when the power supply voltage is lacking in the circuit in question.
- Naturally, the injected level is never allowed to exceed the power supply voltage of the circuit in question.

Continuous burning of the laser

- Disconnect plug 24 on the servo PCB and connect pin 24-3 (laser) of the cable connector to ground. Now the focus loop and the radial loop are interrupted as well:
24-1 (RE1 = Radial Error 1), 24-2 (RE2 = Radial Error 2) and 24-4 (FE = Focus Error).
The laser also burns continuously when the set is in service loop A.

Irregular working of the display

Irregular working of the display when the set is opened and playing, might have been caused by incidental body effect in the region of the crystal oscillators.
Switching „off” and „on” of the mains voltage will eliminate this effect.

Indication of checkpoint

In the circuit diagram and PCB diagrams the checkpoints have been given a serial number (e.g. 12), to which the troubleshooting method will refer.
For oscilloscopes, amplitudes, time bases and position of set, see tables of checkpoints.

GENERAL CHECKPOINTS

In the detailed troubleshooting method following below a number of general conditions, required for proper functioning of the player, will **not** be repeated.
Before starting the detailed troubleshooting method these general points should be checked.

- a. Ensure that disc and objective are clean (remove dust, fingerprints, etc.) and use undamaged discs.
- b. Convince yourself of the presence of the clock frequencies, viz.:
 - 6 MHz for μ P servo (pin 16)
 - 4.233600 MHz for CIM-IC (pin 8)
 - 4.35 MHz for free-running PLL circuit on the DEMOD IC (pin 22) in pos. play
 - 6 MHz for control and display μ P (pin 15)
- c. Check whether all power supply voltages are present and have the correct level.
See PCB drawings.
- d. Check whether the two mutes (KILL and SMSE) are inactive so that data are nowhere interrupted.
KILL = the collector of transistor 6536 on the decoder PCB.
This should go high about 3 seconds after the mains voltage is switched on.
SMSE = pin 39 of the ERCO IC on the decoder PCB.
Normally this pin is high during play and low during search.

- e. Check good working of both microprocessors by means of their built-in self-check program and possible peripheral check program.

Method

Self-check of the servo μ P

- Disconnect points 2, 3 and 17 of the display μ P.
- Interconnect pins 6, 14, 18 and 21 of the socket of the servo μ P.
- When the μ P functions properly, pin 22 should go from "0" to "1" within 1 second after switch-on of the mains voltage.

Self-check of the display μ P

- Take the servo μ P out of its socket and ensure points 2, 3 and 17 of the display μ P are connected.
- Interconnect pins 6, 14, 18 and 21 of the display μ P.
- If the μ P is functioning properly, pin 22 should go from "1" to "0" within 1 second after switch-on of the mains voltage.

Periferal check

Place disc on turntable and switch off mains voltage.

Initiating service loop A

Ensure that the tray PCB is mounted or that the tray end switch (SK2) on the tray PCB is closed when the drawer is closed.

Keep the NEXT, STOP/CM and PAUSE keys depressed during switch-on of the mains voltage. Release the keys after 2 seconds.

Now the player is in the SERVICE LOOP A.

This means that the laser is working, the focusing control is working and the turntable motor is running while the light pin settles itself against the inner stop (i.e. constantly remains in the lead-in tracks).

The radial servo system is switched off.

In this service loop the LEDs and the display can be checked as follows:

The display will indicate 00—0102 and increase towards the left.

If now the SEARCH reverse key is depressed, the REPEAT, ERROR and PAUSE leds will light up after 2 clock strokes of the display. The set remains in service loop A. When the SEARCH reverse key is pressed again, the set will resume the initial position.

Initiating service loop B

Service loop B can be reached from service loop A by pressing the SEARCH forward key. In service loop B the display continues to indicate the same as in service loop A, except for the play/program bar. Furthermore the REPEAT led will light up.

After approx 1 minute music can be heard. (The time depends on the length of the lead-in track).

From service loop B the set can be brought to the position of normal end use by pressing the START/REPLAY key when one of the musical numbers on the disc is being displayed.

If the START/REPLAY key is operated when the display shows a musical number that is not on the disc, the set will stop and two horizontal bars will appear on the display.

f. Eye pattern

Check on the oscilloscope whether the H.F.-signal — called eye pattern.

Set for this purpose the time basis of the oscilloscope to 0.5 μ s and check test point 65 (on the decoder PCB).

This picture is fairly stable if PLL circuit is in lock and turntable loop is controlling correctly.

A vibrating or **unstable eye pattern** can be caused by a poor turntable motor, or by bringing the set in **service loop A**.

DETAILED TROUBLESHOOTING METHOD

A number of quick and efficient checks immediately give a definite answer on poorly functioning sections of the player.

To check the servo systems two service loops have been built in μ P 6201.

Before calling in service loop A or service loop B, it should be checked (position power on) whether the bus (clock, data; pin 3 and 2 of μ P 6201 resp.) is free. In other words, checking whether these lines do not have a short circuit to ground or supply voltage (level low or „high“). In such a case the buttons cannot be operated.

For troubleshooting the step-by-step method below is followed.

First step (with disc on turntable)

Bring the player in service loop A.

If one of the conditions for service loop A is not met, the questions below should be answered positively **in the sequence given**.

Mostly this means that when one question has been answered positively, all the preceding circuits, to which the questions refer, are functioning well.

Example: if the eye pattern is present, we may conclude that the laser is working, the laser is in focus and that the turntable motor is running.

Note:

In some situations, certain faults in the radial servo circuit affect the focus servo circuit (e.g. if supply voltage +1 of IC6214 in the radial circuit fails, the focus coil starts oscillating).

To determine if this situation exists, connect point 36 on the servo PCB to ground.

In this way, the influence of the radial servo circuit on the focus servo circuit can be eliminated.

A. Is the laser giving light?
(Test method: see sub A).

B. Is the angle disc-light pin within the tolerance, i.e. $90^\circ \pm 0.5^\circ$?
(Test method: see description mentioned in chapter "Mechanical measurements and adjustments" of the C.D.M. manual).

C. Is the laser giving sufficient light?
(Test method: see sub C).

D. Does the objective come in focus?
(Test method: see sub D).

E. Is the turntable motor running and, if so, is it running at the correct speed?
(Test method: see sub E).

If the answers to questions A through E are positive, it should be possible to bring the player in service loop A.

Second step (with disc on turntable)

Bring the player in service loop B.

This means that the eye pattern on point 65 (on the decoder PCB has to be stable, while MCES on point 17 on the servo PCB has to be more stable too).

Note that the set is not only tracking a song in loop B, but also playing the song, provided the digital circuit is working.

If this does not work, return to service loop A and answer the questions below positively in the sequence given.

- tween 25 Hz and 60 Hz at 2 V_{pp} by means of an AF generator ($Z_i \leq 600 \Omega$). The exact frequency is player-dependent.
- Select such a frequency that the monitor diodes of the light pin give output signals as indicated on test points 5, 6, 7 and 8.
 - Check test points 9, 10, 11 and 12.
 - Check test point 13.
 - Check test point 14.

Is the same as signal on test point 13 but amplitude is dependent on position of potentiometer R3158.

If all the checks are positive, close focus loop (insert plug 24). Now the focusing circuit should be able to operate. Reconnect transistor 6230.

It should be noted here that the amplitudes on test points 5 through 13 are slightly dependent on the characteristic of the monitor diodes.

Sub. E. IS TURNTABLE MOTOR RUNNING AND, IF SO, IS IT RUNNING AT THE CORRECT SPEED?

Test method (Test points on servo PCB)

- Place disc on turntable and bring set in service loop A.
- If focusing point is found, check whether FCO is low on point 15.
- If not, check focus circuit sub D.
If so, proceed.
- Now only power on, disconnect plug 25 on the servo PCB and check MCES= point 2 of cable connector 25 or point 66 on the decoder PCB see figure F.
If not, check DEMOD and ERCO circuit, see sub L.
If so, proceed.
- Reconnect plug 25, disconnect plug 15 on the pre-amplifier PCB and inject a DC signal to the cable connector of the motor or directly to the turntable motor.
The turntable motor should be running now.
(A DC voltage of 2,5 V approximately corresponds with the rpm during scanning of the innermost tracks).
In this condition the player should be brought in service loop A (depress Stop button while mains voltage is switched on).
If DC < 2,5 V Figure G should be visible on test point 17 (servo PCB).
- If DC > 2,5 V Figure H should be visible on test point 17.

If so, check turntable control circuit (circuit from point 17 to turntable motor).

If not, check whether MCES is released by means of FCO at pin 13 of IC6205C.

This can be done by disconnecting plug 25 on the servo PCB and measure on point 2 of cable connector 25.
If MCES is working now, check circuit around IC 6205C.

- Reconnect plug 25.
- Take player out of service loop A, depress Power-on button and then Play button and check eye pattern on point 65 (on decoder PCB).
To stabilize the eye pattern, bring light pin above tracks by hand, or by briefly (5 s) depressing Fast Forward button.
If eye pattern on point 65 is not present or unstable, check RF pre-amplifier (see Annex V).
- If eye pattern is correct, proceed.

- Check whether point 55 (= HFLS) on the servo PCB is correct in service loop A (see Figure Y). If not, check HFLS detector circuit (is circuit between point 55 and 56). If so, proceed.
- Take player out of service loop A by depressing the power button.
- Check locking-in of PLL circuit of DEMOD-IC. See Annex II. Checking locking-in of PLL circuit.
If PLL is locking-in, proceed.
- Check timing signals on output of DEMOD IC as indicated in sub L.
Is the digital decoder circuit functioning according to specification? If timing signals are correct, proceed.
- If MCES is still not functioning properly, replace the relevant specific digital IC.
- MCES has to be present now.

Sub. F. ARE THE DO AND HFLS DETECTORS FUNCTIONING?

Test method (Test points on servo PCB)

- Starting point is:
HFLS = 1 when spot is exactly on track
HFLS = 0 between tracks (e.g. during track jumping)
DO = 0, or DO = 1 in case of drop-out
DO = 1, or DO = 0 when there is no drop-out.

Approximative method

(applicable in service loop A)

- Place disc on turntable.
- Bring player in service loop A.
- Check whether DO (test point 57) is not continuously „high”. Normally test point 57 is „low”; however small spikes of approximately 100mV are present in case of scratches on the disc.
- Check HFLS (test point 55).

Precise method

(can be checked in playing set only)

- Place test sample 5A (4822 397 30096) on turntable.
Switch power on and depress Play button.
- Select track no. 10: Check point 55.
HFLS pulses should be present.
- Select track no. 15: Check point 56.
DO pulses should be present. With this track the HFLS pulses on point 55 should also be present.
- In case of track jumping HFLS pulses are always present on point 55.

Sub. G. IS TRACK DETECTOR FUNCTIONING WELL?

Test method (Test points on servo PCB)

Switch off the offset circuit:

Loosen resistor 3335 (at the side where it is in contact with pin 14 of IC6215).
Mount a 47 kΩ trimming potentiometer between +1 and -1 supply voltage (for example between pins 4 and 11 of IC6215). Connect the wiper of the trimming potentiometer to the loose side of resistor 3335.

- Place a disc on the turntable.
- Bring the set in service loop A.
- Adjust the signal on test point 21 symmetrically round 0V by means of the external 47 kΩ trimming potentiometer.
The amplitude of the signal may change during this adjustment.
- Measure F.S. on point 36.

Here too the frequency variation depends on the eccentricity of the disc.

- Check point 60.
- Check point 61. Signal cannot be triggered.
- Check point 62.
- Switch the offset circuit on again.

Sub. H. IS THE RADIAL CONTROL FUNCTIONING PROPERLY?

Attention: The offset circuit (d-multiplier) and the AGC circuit (k-multiplier) are correction circuits. This means that under optimal conditions (new disc, minimum tolerances of components) the set may be working properly even if a fault is present in offset or AGC circuit.

Test method (Testpoints on servo PCB)

- a. Place disc on turntable.
- b. Switch off AGC circuit (k-multiplier) and switch off offset circuit (d-multiplier).

Method:

Switching off AGC circuit: interconnect points 5 and 6 of IC 6216.

Switch off the offset circuit:

Loosen resistor 3335 (at the side where it is in contact with pin 14 of IC6215).

Mount a 47 kΩ trimming potentiometer between +1 and —1 supply voltage (for example between pins 4 and 11 of IC6215). Connect the wiper of the trimming potentiometer to the loose side of resistor 3335.

- Place a disc on the turntable.
- Bring the set in service loop A.
- Adjust the signal on test point 21 symmetrically round

0 V by means of the external 47 kΩ trimming pot. The amplitude of the signal may change during this adjustment.

- c. Bring set in service loop B.
At this moment there is a high probability that the set is working.
If so, check b and d factor (see Annexes IV and III).
If not, proceed.
- d. Bring set in service loop A and check signal on point 21.

The AC-component has to be 12-14 V symmetrically, around a DC level of zero volt.

If this is correct, proceed to e).

If this is not correct check following testpoints

- 22, 23 : value should be 0.7 V_{pp}
- 24 : value should be 0.2 V_{pp}
- 25 : value should be 0.25 V_{pp}
- 26 : value should be 20 mV_{pp}
- 27, 28 : value should be 800 mV_{pp}

Note:

The frequency variation strongly depends on the eccentricity of the disc.

If points 22 ÷ 28 are OK, check point 21 again.

If 21 is OK, proceed.

- e. Check point 29 (is RE +650 Hz).

Value should be 6 V_{pp}. If so, proceed.

When the set is in the normal stand-by position 650 Hz at 300 mV is present on point 29.

- f. To check radial output stage, do not use a disc, only power on. Inject on points 30 and 31 respectively a sine-

wave signal of 8 to 10 Hz 3 V_{pp}.
Then the radial motor will go back and forth.

At this moment radial tracking must be possible in service loop B.

- Switch the AGC circuit on again.
If the original fault symptom is still present proceed to Annex IV:
Check of the k-factor.
- Switch the offset circuit on again.
If the original fault symptom is still present, proceed to Annex III:
Check of the d-factor.

Sub. I. IS THE P-BIT FUNCTIONING?

Test method (Test points on decoder PCB)

Bring the set in service loop B again. Between 45 and 95 seconds after the beginning of the disc the P-bit (pin 5 of the µP IC6201 and 2 and 3 of port extender IC6202), i.e. the signal is not continuously high or low. This can be measured with an oscilloscope in DC position and 2 V/div.

Sub. J. IS INFORMATION TRANSMISSION SUBCODE FUNCTIONING? (Testpoints on servo and decoder PCB)

Test Method

Bring player in service loop B.

Check if activity is present on the bus (pins 2 and 3 of the µP IC6201 and 2 and 3 of port extender IC6202), i.e. the signal is not continuously high or low.

If not, check test points 23, 24, 25, 26 and 27 and their interrelations (trigger oscilloscope at point 28).

In order to measure test points 25, 26 and 27 either the STOP or START key have to be depressed.

Sub. K. IS T1 FUNCTIONING, I.E. POLARITY OF RE? (Measure points on servo PCB)

Test method

Bring player in service loop B and measure T1 on pin 13 of µP servo IC6201.

A square-wave voltage (0-5V) should be measured on this pin. As a result of the frequency variation this square-wave is hard to trigger.

Sub. L. IS THE DIGITAL DECODER CIRCUIT FUNCTIONING ACCORDING TO SPECIFICATION?

Test method (Test points on decoding PCB)

- First condition is that the main motor is running at the correct speed. This implies that the PLL circuit is functioning properly. If not, apply test method sub E.
- Second condition is that the RF pre-amplifier is functioning properly. See for this purpose Annex V — Test method RF pre-amplifier.
- Apart from the data outputs, which can in principle not be measured when the unit is playing, a number of communication lines, responsible for timing, can be measured. In this way it is also possible to isolate faults in the „periphery” of the specific digital ICs. These signals can be verified with a normal oscilloscope.

To data outputs the following applies:

- In a playing unit it is only possible to check whether data are **present** or not.
- In a non-playing unit measurements **can** be performed in a number of cases. See the Tables for this purpose.

F. Are DO and HFL detectors functioning?
(test method: see sub F)

G. Is track detector functioning well?
(test method: see sub G)

H. Is the radial control functioning properly?
(test method: see sub H)

If the answers to questions F, G and H are positive, it should be possible to bring the player in service loop B.

Third step (with disc on turntable)

Release the set from service loop B by pressing the START/REPLAY key on the display during playback of a musical number that is present on the disc.

Note that the set is not only tracking a song in loop B, but also playing the song, provided the digital circuit is working.

If this does not work, return to service loop B and answer the question below positively.

I. Is the P-bit functioning?
(test method: see sub I)

J. Is information transmission subcode functioning?
(test method: see sub J)

K. Is T1 functioning, i.e. polarity of RE?
(test method: see sub K)

If the answers to questions I, J and K are positive, it should be possible to bring the player in the Play mode.

Fourth step (with disc on turntable)

If no music is heard in position „play” answer the last question.

L. Is digital decoder circuit functioning according to specification (test method: see sub L).

Sub. A. IS THE LASER GIVING LIGHT?

Test method

Bring the player in service loop A without placing a disc on the turntable. Now the laser is giving light for an unlimited period of time.

Another method for which the laser gives light during an unlimited period of time and the objective is **standing still**, is disconnecting plug 24 on the servo PCB and connecting point 24-3 of the cable connector to ground.

In case of power-on the laser should burn. This is checked with the aid of a light-sensitive component which is slightly screened from ambient light.

Hereafter follow some examples:

a. Connect photosensitive diode type BPW34, code number 4822 130 32108, with correct polarity to an **analogue** multimeter (e.g. PM2412) at range 10 kΩ.
If the laser is burning, the meter will give virtually full scale deflection.

b. Connect LDR, code number 4822 116 10002, to digital multimeter PM2517E.
If the laser is burning, the resistance will drop to approx. 8 kΩ.

If the laser is **not** giving any light, proceed to Annex I.

Sub. C. IS THE LASER GIVING SUFFICIENT LIGHT?

Test method (Test points on Pre-amp PCB)

— Interrupt the collector of TS6230 on the servo PCB or ground the - side of electrolytic capacitor 2209. Disconnect

plug 24 on the servo PCB and connect pin 24-3 (laser) of the cable connector to ground.

Now the laser should continue to give light while FE, RE1 and RE2 are interrupted.

- Place disc on turntable and switch power on.
- Directly inject with AF generator ($Z_i \leq 600$ Ohms) to test point $\triangleleft 1$ FE a sine-wave signal between 25 and 60 Hz (exact frequency is player-dependent) and $2 V_{pp}$.
- Select such a frequency that the monitor diodes of the light pin give output signals as indicated on test points $\triangleleft 5$, $\triangleleft 6$, $\triangleleft 7$ and $\triangleleft 8$. Amplitude 40 - 80 mV.
- If the amplitude is not sufficient, proceed to Annex I.

Sub. D. IS THE OBJECTIVE COMING INTO FOCUS?

Test method

- **No disc on turntable**

Switch power on and actuate Play button.

Now the arm should move inwards. Immediately after that the objective should move two times up-and downwards (this happens during searching of the focusing point). After this the action will stop.

These actions are software-controlled from the servo μ P. If this is not working, check μ P servo, end stage focus circuit or focus coil.

- **With disc on turntable**

Quick test procedure:

For a rough check on the working of the focus circuit, proceed as follows:

- place disc on turntable.
- set player in service loop A.
- remove disc from turntable.
- now examine if the objective focuses by bringing a reflective object (e.g. mirror) above it.

Detailed test procedure

— Check TS6230 (on servo PCB) as follows:
Check whether FN becomes, with each passage of the nominal focusing **low for a short period of time**. Only when focusing point FN has been found, FE will be released via TS6230 (base will become negative).
Check whether base of TS6244 is driven low from servo μ P (= FCO). If not, check servo μ P.
If so, proceed.

— Test focusing circuit as follows:
Interrupt the collector of 6230 on the servo PCB and disconnect plug 24 on the servo PCB. Connect pin 24-3 (laser) of the cable connector to ground.
Now the laser is burning continuously, FE has been released and the focus loop has been interrupted at test point $\triangleleft 1$ (= FE) on servo PCB, circuit diagram C.

Testing of circuit, between test point $\triangleleft 1$ and focusing coil (Test points on servo PCB)

- Directly inject a sine-wave signal of 10 Hz, $2V_{pp}$, to test point $\triangleleft 1$ by means of an AF generator ($Z_i \leq 600$ Ω).
- Check visually whether focusing coil — and thus objective too — responds.
- Check whether this voltage is $0.6 V_{pp}$ on test point $\triangleleft 2$.
- Check whether this voltage is $6 V_{pp}$ on test point $\triangleleft 3$.
- Check whether this voltage is $5 V_{pp}$ on test point $\triangleleft 4$.

Testing the subchassis (Test points on Pre Amp PCB, injection point on servo PCB)

- Place a disc on the turntable.
- Directly inject to test point $\triangleleft 1$ a sine-wave signal be-

Measurements:

DEM0D:

For mode of player (Play, Stop) see Table.

- Check clock on test point ⑦. Test-point ⑦ synchronises when PLL is locking in. To check locking-in see Annex II.
- Trigger oscilloscope with signal on point ⑧ (= FSDE) and measure points ⑥, ⑦, ⑧ and their interrelations.

ERCO:

For mode of player (Play, Stop) see Table.

- Check point ⑨.
- Check test point ⑩.
 - If this is good, trigger oscilloscope with point ⑪ (=FSEC).
- Measure points ⑫ and ⑬ and their interrelations.
- Check UNEC (= test point ⑭).
 - Place test disc „test sample 5A“ on turntable, select track no. 17 and verify test point ⑭.

Important:

If UNEC (test point ⑭) remains continuously „high“, the fault is probably located in the DEMOD IC or the ERCO IC, or the RAM IC.

If the UNEC output is functioning normally, and there still is no music, the fault is probably located in the CIM IC, the FIL IC or the DAC IC.

CIM:

For mode of player (Play, Stop) see Table.

- Check point ⑨.
- Check test point ⑩.
 - If this is good, trigger oscilloscope with point ⑪ (= STR1 = pin 12 of CIM-IC).
- Measure points ⑫, ⑬, ⑭ and their interrelations.

FIL:

For mode of player (Play, Stop) see Table.

- Check point ⑨.
- Check test point ⑩.
 - If this is good, trigger oscilloscope with point ⑪ (= STR1)
- Measure point ⑯.
- Measure points ⑰, ⑱ and ⑲ and their interrelations.

DAC:

In the Play mode the analogue (music) signal is present on the outputs of opamps 6523 (left) and on the outputs of opamps 6525 (right).

If necessary, check KILL relay.

Annex I: LASER IS GIVING NO OR INSUFFICIENT LIGHT

Together with the laser supply and the monitor diode the laser forms a feedback system.

A defect in the laser supply might thus result in destruc-

tion of the laser. Replacement of the laser (= new light pin) will not solve anything. The new laser will also be destroyed since the original fault in the laser supply is still present.

On the other hand it is impossible to check and repair a feedback system when one link is missing.

For this reason the so-called laser simulator 3 is supplied. Code number 4822 395 30229.

This laser simulator consists of a PCB which contains the laser and monitor simulation, a switch to test the On/Off position and a number of sockets.

This PCB can be connected to the laser supply instead of the light pin so that the feedback system is closed.

Repair procedure:

Since the light pin is very sensitive to static charges, care should be taken that during measurements and adjustments of the laser power supply the potentials of the aids and yourself equal the potential of the CD mechanism.

Detach light pin and connect laser simulator as follows: (connections on pre-amp PCB).

Take the flex PCB out of socket 11 and connect the simulator PCB with the socket.

Remove plug 16 and insert it in the socket on the simulator PCB.

Connect the plug with 4 wires to socket 16. Take out plug 17 and insert the plug with 1 wire in socket 17.

- Switch on the mains switch and ensure that the drawer is closed or else that the tray-end-in switch on the tray PCB (Sk2) is depressed.
 - Now press the play key and check if the L-line of the servo μ P, pin 17-2 on the pre-amplifier PCB, goes ‘low’.
- In rest position the current through the laser diode should be ≤ 1 mA. For NEG. VOLT. lasers this can be checked as follows:
 - Set the switch on the simulator PCB in the OFF position and the mains switch in the ON position.
 - Turn trimming resistor 3180 counterclockwise (min. R) and measure the voltage across resistor 3194 on the pre-amp. PCB.
 - On pre-amplifier PCBs with discrete components turn resistor 3180 clockwise (min. R) and measure the voltage across resistor 3194.
- The voltage should be ≤ 15 V.

Check of laser supply control

Set the switch on the simulator PCB in the ON position and measure the voltages between points +V and -V on the simulator PCB.

Resistor 3180 clockwise (max. R): $U_{+V-V} = 225 \text{ mV} \pm 45 \text{ mV}$.
On preamplifier PCBs with discrete components resistor 3180 counterclockwise (max. R): $U_{+V-V} = 225 \text{ mV} \pm 45 \text{ mV}$.

R3180 counterclockwise (min. R): $U_{+V-V} = 750 \text{ mV} \pm 150 \text{ mV}$.

On preamplifier PCBs with discrete components resistor 3180 clockwise (min. R): $U_{+V-V} = 750 \text{ mV} \pm 150 \text{ mV}$

Set resistor 3180 in the mid-position.

This is a preliminary adjustment. After the simulator PCB has been removed the laser current must be adjusted.






Fine adjustment of laser current

- Playback track 1 of test disc 4822 397 30096 (Disc without defects). Connect a DC voltmeter across resistor 3308 on the SERVO PCB circuit diagram D. Adjust the laser power supply with resistor 3180 until the voltage across resistor 3308 is $575 \text{ mV} \pm 50 \text{ mV}$.

SERVO

Nr.	See	Position	Amplitude	f	Time base
1		see fault finding meth.			
2	P	see fault finding meth.	0.6 Vp-p	10 Hz	
3	P	see fault finding meth.	6 Vp-p	10 Hz	
4	P	see fault finding meth.	5 Vp-p	10 Hz	
5	B	see fault finding meth.	40-80 mV	25-60 Hz	
6	B	see fault finding meth.	40-80 mV	25-60 Hz	
7	B	see fault finding meth.	40-80 mV	25-60 Hz	
8	B	see fault finding meth.	40-80 mV	25-60 Hz	
9	C	see fault finding meth.	-2 V	25-60 Hz	
10	C	see fault finding meth.	-2 V	25-60 Hz	
11	C	see fault finding meth.	-2 V	25-60 Hz	
12	C	see fault finding meth.	-2 V	25-60 Hz	
13	D	see fault finding meth.	-8 V, +8 V	25-60 Hz	
14	D	see fault finding meth.	depends on R3158	25-60 Hz	
15		see fault finding meth.			
17	G	see fault finding meth.	5-0 V		A = 140 μ s
17	H	see fault finding meth.	0-5 V		A = 140 μ s
20		see fault finding meth.			
21	J	see fault finding meth.	12-14 Vp-p		
22	J	see fault finding meth.	0.7 Vp-p		
23	J	see fault finding meth.	0.7 Vp-p		
24	J	see fault finding meth.	0.2 Vp-p		
25	J	see fault finding meth.	0.25 Vp-p		
26	J	see fault finding meth.	20 mVp-p		
27	J	see fault finding meth.	800 mVp-p		
28	J	see fault finding meth.	800 mVp-p		
29	J	see fault finding meth.	6 Vp-p		
29	P	ON	0.3 Vp-p		
30		see fault finding meth.			
31		see fault finding meth.			
32	*	see fault finding meth.			
33	*	see fault finding meth.			
35	J	see fault finding meth.	200 mVp-p		
36	J	see fault finding meth.	2 Vp-p		
37	K	see fault finding meth.	10 Vp-p		
38	K	see fault finding meth.	10 Vp-p		
39	L	see fault finding meth.	0-4 Vp-p		A = 769 μ s B = 769 μ s
40	K	see fault finding meth.	9 Vp-p		A = 769 μ s B = 769 μ s
40	M	see fault finding meth.	0-4 Vp-p		A = 769 μ s B = 769 μ s
41	N	see fault finding meth.	6 Vp-p		A = 769 μ s B = 769 μ s
45	P	ON	9 Vp-p	650 Hz	
46	Q	ON	0-5 V	650 Hz	A = 769 μ s B = 769 μ s
47	P	ON	1.5 Vp-p	650 Hz	
48	P	ON	1 Vp-p	650 Hz	
49	R	ON	0-5 V	650 Hz	
50	S	ON	0-5 V	650 Hz	
51	T	ON	5-0 V	650 Hz	
51	U	service loop B	5 V	650 Hz	
52		see fault finding meth.			
55	Y	service loop A	5-0 V		
55	W	play (with test disc)	5-0 V		
56	W	play (with test disc)	5-0 V		
57		see fault finding meth.			
60	X	service loop A	5-3 V		
61	Y	service loop A	5-0 V		
62	Y	service loop A	5-0 V		
65	A	play	1 Vp-p		
66	F	see fault finding meth.	0.25-2.5 V		A = 140 μ s
66	G	see fault finding meth.	5-0 V		A = 140 μ s
66	H	see fault finding meth.	0-5 V		A = 140 μ s
67	J	see fault finding meth.			

DECODING

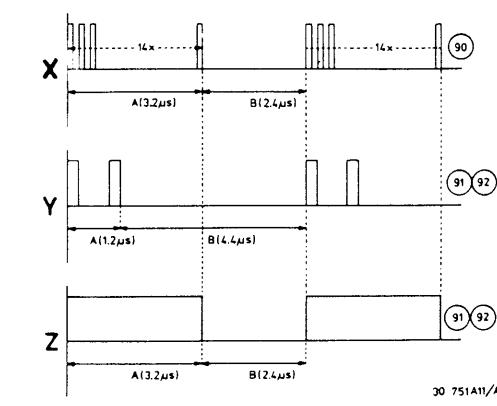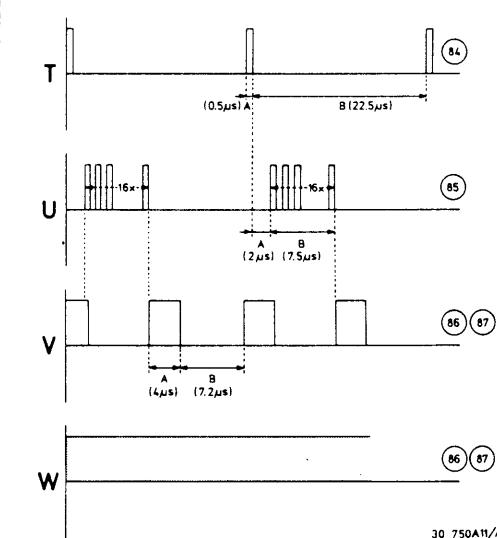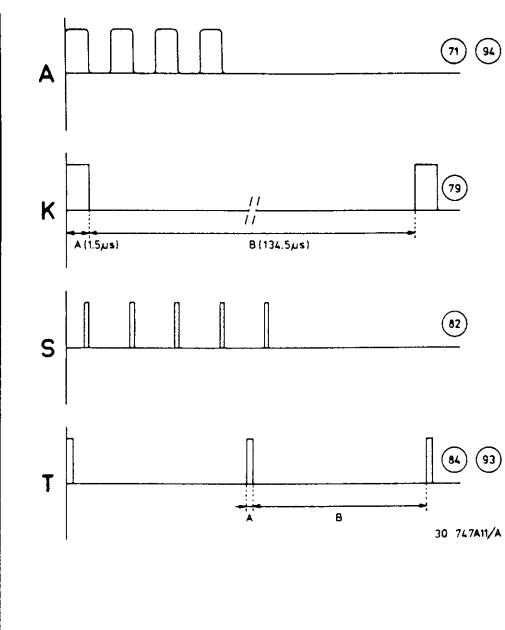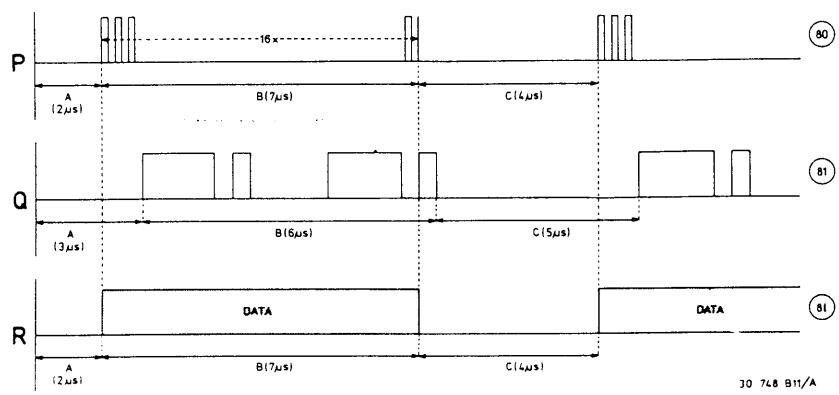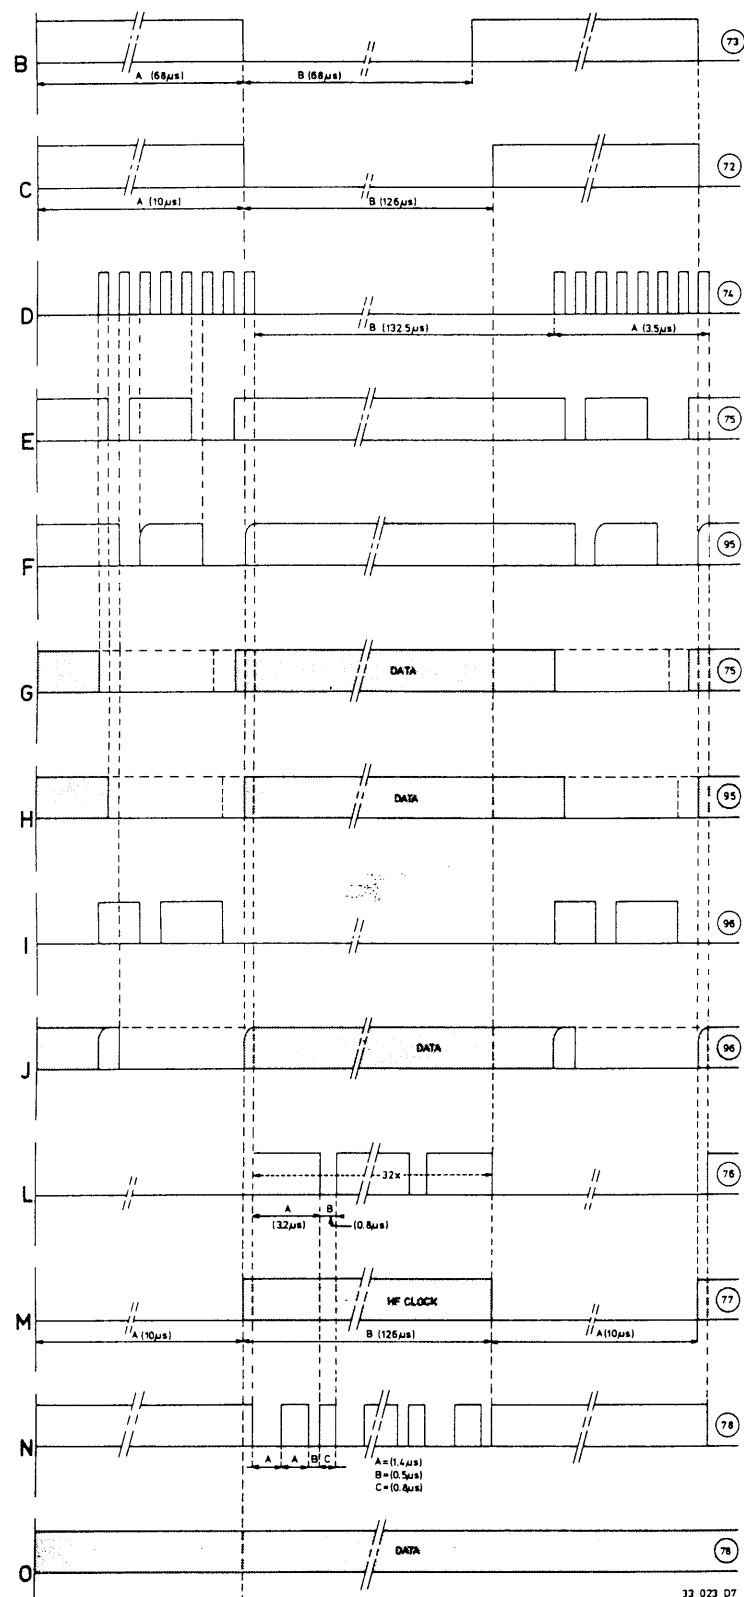

Remark:

It is recommended to use the laser simulator for any measurement in the laser supply, since incidental short-circuits with the test pin can have inconvenient consequences for the laser.

Annex II: CHECKING LOCKING-IN OF PLL CIRCUIT
(Test points on decoding PCB)

First the free-running oscillator should be checked as follows:

- Switch power on, player in pos. play.
- Connect a frequency counter between pin 22 of IC6501 (DEMOD) and \perp .
- This frequency should be $4.350 \text{ MHz} \pm 30 \text{ kHz}$.

Attention

This adjustment should be performed immediately after the unit is switched on.

Checking locking-in:

- Insert disc, disconnect plug 14, inject 2.5 V_{dc} to the socket of plug 14 on pre-amp PCB and set player in service loop B.
- Variation of the DC round 2.5 V should be visible on the oscilloscope (point 71) in the form of a frequency variation. This means that the PLL is locking in.

Annex III: CHECKING d-FACTOR
(Test points on servo PCB)

- Switch off AGC circuit (k-multiplier) and switch off offset circuit (d-multiplier). See sub G and H.

Place disc on turntable and set player in service loop A.

- Check points 22 and 23.
Value should be 0.7 V_{pp} .
Frequency variation strongly depends on the eccentricity of the disc.
- Check point 25.
Value should be 250 mV_{pp} .
- Check point 35.
Value should be 200 mV_{pp} .
- Check point 36.
Value should be 2 V_{pp} .
- Check points 37 and 38.
Value should be 10 V_{pp} .
The signal is more sine-shaped now due to filtering out of 650 Hz .
- Point 39 is hard to measure since switch is in position Y_{oc} and thus connected with input of op-amp 6215. However, a signal of 200 mV_{pp} is present.
- Check point 40.
Value should be 9 V_{pp} .
Bring the player in service loop B. With a disc on turntable and the AGC and offset-circuits are still switched off.
- Check point 41.
- Check point 40 on beam A of oscilloscope and check point 39 on beam B of oscilloscope while oscilloscope is triggered with point 41.
- Switch on the AGC-circuit and the offset circuit.

Annex IV: CHECKING k-FACTOR
(Test points on Servo PCB)**a. Static**

Switch power on **without** depressing the Play button. I.e. $RC0 = \text{high}$; $RC0 = \text{low}$ so switch Y_a is in position 0 and switch Y_c is in position 0.

- Check point 45.
Value should be 9 V_{pp} .
- Check point 46.
- On point 29 now appears a sine-wave signal of 650 Hz , 300 mV , and $180 - 45 = 135^\circ$ shifted in phase relative to signal on point 45.
- Check point 47.
Value should be 1.5 V_{pp} .
- Check point 48.
Value should be 1 V_{pp} .
- Check points 49, 50, 51 and 46 relative to each other.
Amplitudes are 5V .
- Check integrator IC 6212A.

b. Dynamic

Insert disc, select service loop A and check if the signal on point 21 equals to 7 V_{pp} .

- Select service loop B.
Now $RC0 = \text{high}$ and $RC0 = \text{low}$.
So switch Y_a is in position 1.
Switch Y_c switches at $f = 650 \text{ Hz}$.
Point 52 is low; so point 51 is in phase point 50.
Now Fig. U should be present on point 51 with duty cycle jittering round 50%.

Annex V: CHECKING RF PRE-AMPLIFIER
(measure points on pre-amp. PCB)

- a. Check DC-voltages on transistors 6103, 6104, 6105, 6109, 6110, 6111.
- b. For checking sensitivity, frequency and delay characteristic, proceed as follows:
 - Take flex PCBs of sockets 10 and 11.
 - Take plugs 18, 17, 12, 13, 14 and 15 out of sockets.

Attention: do not take of plug 16 (= supply!).

- Unscrew PCB to enable injection at the copper side of the PCB.

Checking sensitivity

- Inject $V_{in} = 140 \text{ mV}_{eff}$, 50 kHz on points 102, 101 via $R = 100 \text{ k}\Omega$ and $C = 39 \text{ pF}$ (see Fig. A).
- V_{out} has to be $245 \text{ mV} \pm 2 \text{ dB}$.

Note:

Ensure that injection cord and test cord are identical.

Checking frequency and delay characteristic

- Adjust V_{in} in such a way that $V_{out} = 245 \text{ mV} = 0 \text{ dB}$ at 50 kHz.
- Between the injected and the measured sine-wave signal the delay should be $450 \text{ ns} \pm 50 \text{ ns}$ at 300 kHz.
This can be measured on the dual beams oscilloscope with V_{in} on beam A and V_{out} on beam B according to Figure B.
- Check frequency and delay characteristic for frequencies given below:

Frequency (kHz)	V_{out} (dB)	Delay (n sec.)	Delay, compared with delay at 300 kHz
1	-15 ± 3		
6,3	-2 ± 1		
16	$-0,5 \pm 1$		
50	0		
100	0 ± 1		-50 ± 20
200	$+1 \pm 1$		0 ± 20
300	$+1,5 \pm 1$	450 ± 50	0
500	$+3,5 \pm 1$		$+20 \pm 20$
700	$+5,5 \pm 2$		$+30 \pm 20$
1000	$+8 \pm 2$		$+30 \pm 20$
1600	$+8 \pm 2$		
2000	$+4,5 \pm 3$		

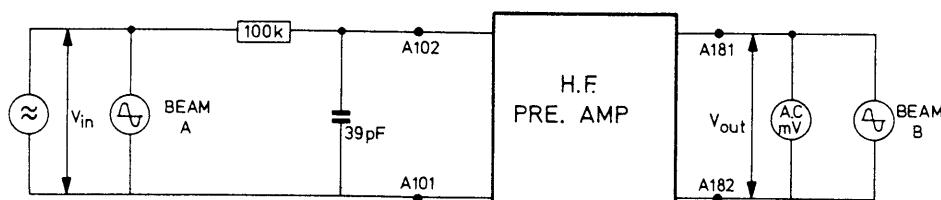


Fig. A

33 393 A12



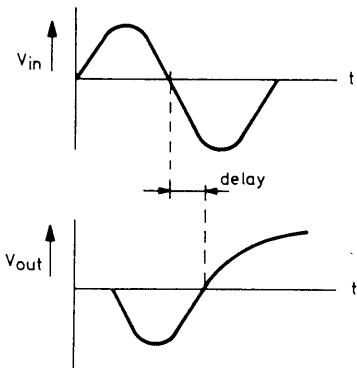


Fig. B 33 394 A12

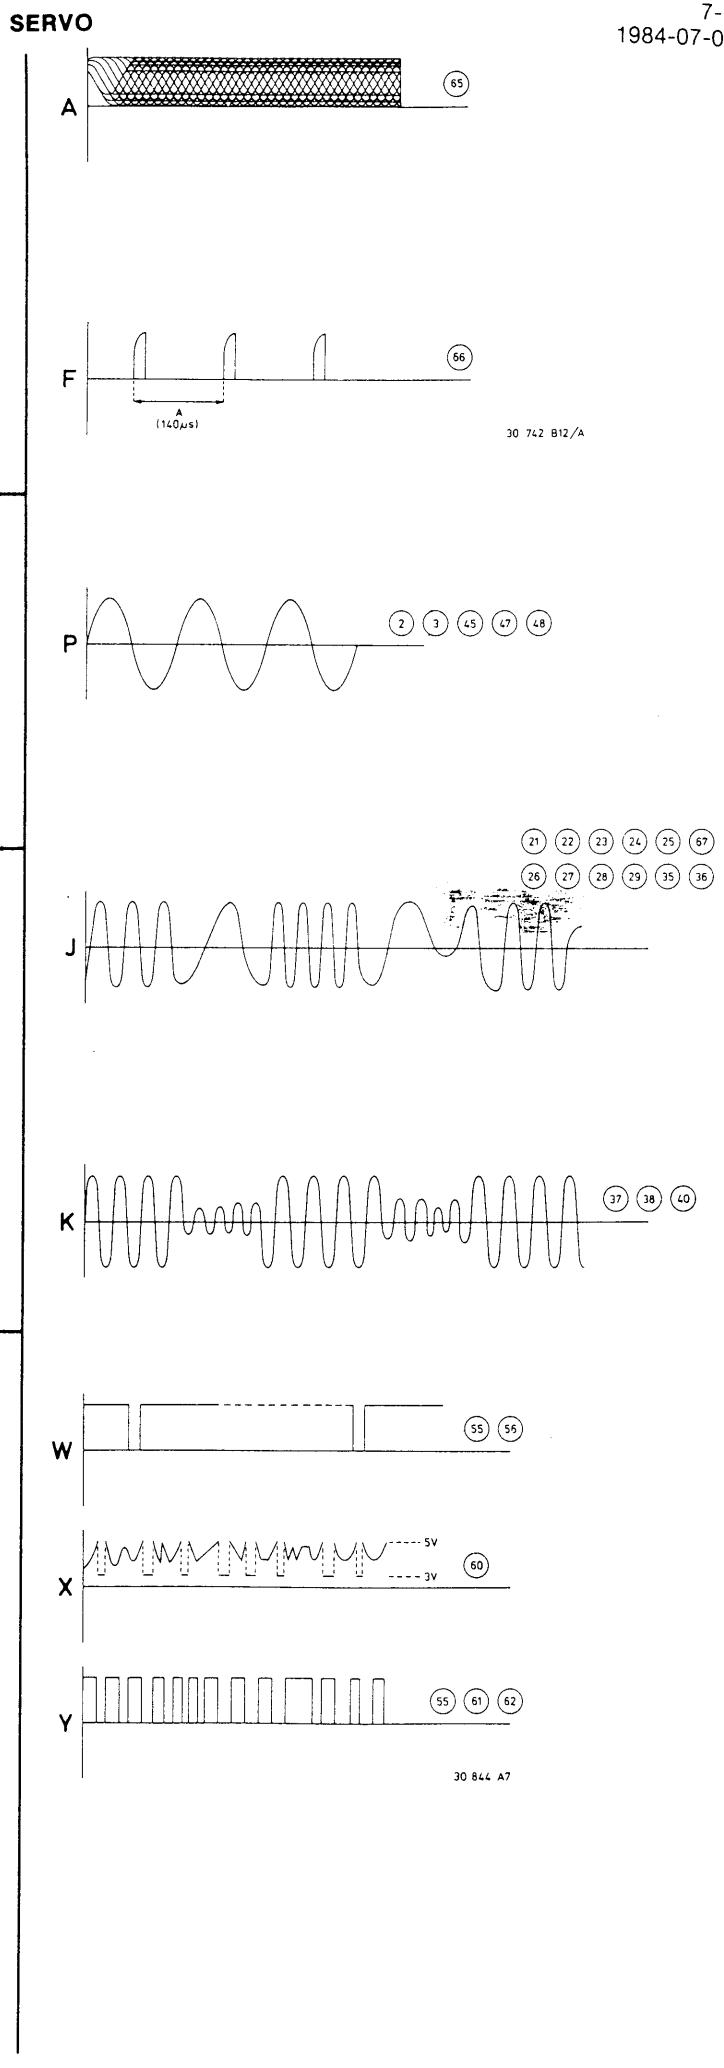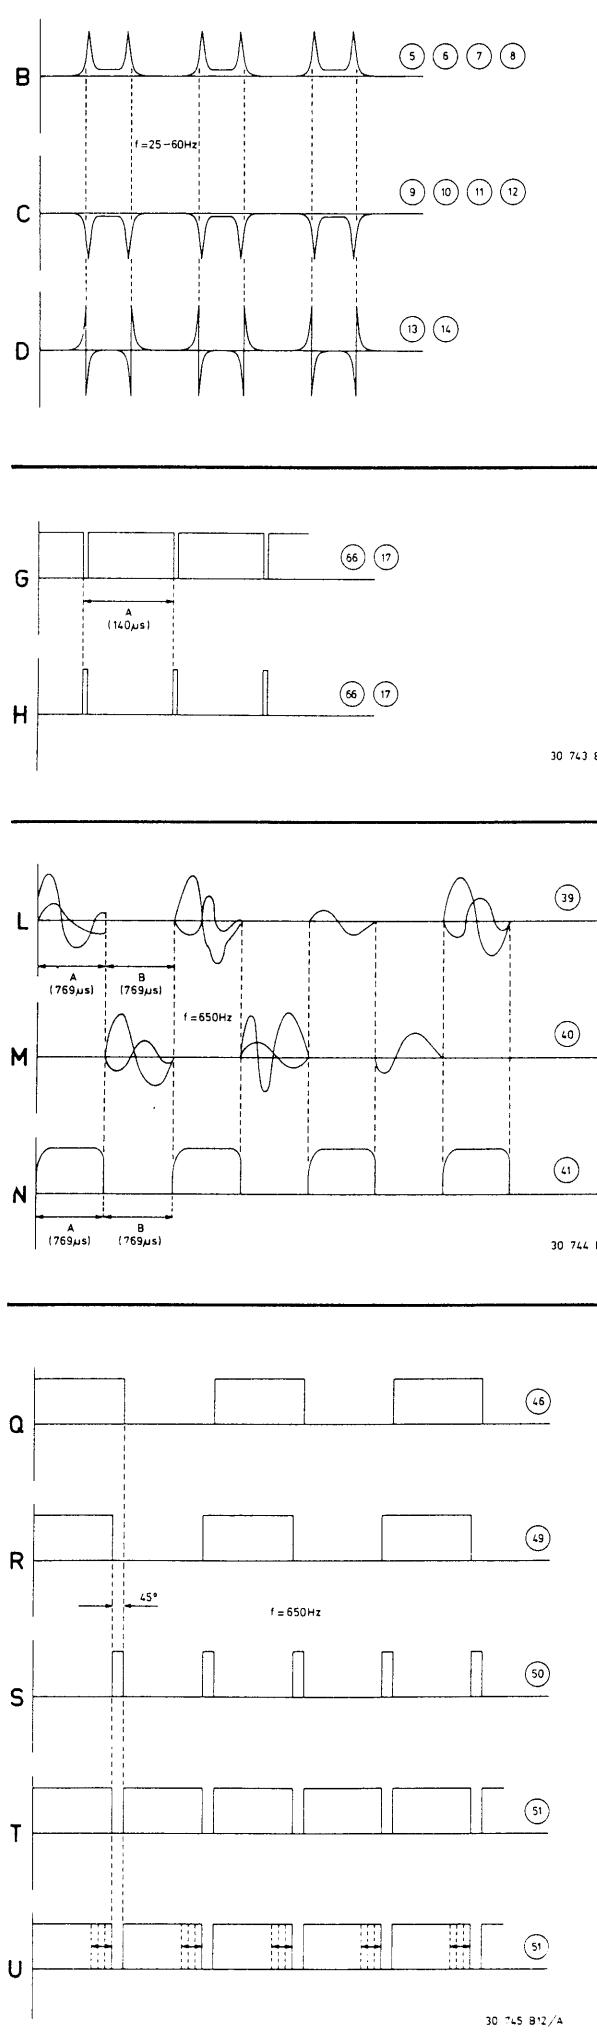

8 CHANGES

SHEET CHANGES

Introduced with A84-143 of 1984-11-15

Description	Reason
Front sheet	CD104/07/30 added, reference to CDM documentations changed
Table of contents	Table of contents adapted
Technical specification	Specification de-emphasis adapted
Servicing hints	Text adapted
Servicing hints	Text adapted
Mechanical measurements and adjustments	Text adapted
Electrical measurements and adjustments	Text adapted
Exploded view "Tray" and parts list	Drawing + parts lists adapted
Exploded view "cabinet"	Drawing adapted
Block diagram	Drawing adapted
Power supply circuit diagram	Drawing adapted + transformer connection diagram added
PCB drawings	Drawing + parts list adapted
Power supply and mains filter	
Control + display diagram	Diagram adapted to stage of production
Control + display	Drawing + parts list adapted to stage of production
PCBs + parts list	
Servo diagram part 1	Diagram adapted to stage of production
PCB drawing servo	Drawing + parts list adapted to stage of production
PCB drawing servo	Drawing + parts list adapted to stage of production
Servo diagram part 2	Diagram adapted to stage of production
Wiring	Wiring adapted to production
Fault finding method	Text adapted

COMPONENT CHANGES

Introduced with A84-143 of 1984-11-15

Sheet 5-1 Exploded view "Tray"

See added change sheet 5-1-a

Change:
Spring item number 111 deleted

Reason:
Spring has no function

"Tray" parts list

Change:
Item number 111 deleted

"Cabinet" parts list

Addition:
Components for CD104/07/30 added

Sheet 5-2 Exploded view "cabinet"

See added change sheet 5-2-a

Addition:
Lens item number 205

Reason:
Improve visibility of display

Sheet 6-2 Power supply circuit diagram

See added change sheet 6-2-a

Deleted:
Diode 6468

Reason:
Diode appeared superfluous after safety tests

Sheet 6-3 Power supply PCBs and parts list

See added change sheet 6-3-a

Change:
Diode 6468 deleted and replaced by interconnection

Correction to parts list:
Diode type 1N002G should be 1N4002G
Code number 5322 130 30684 is correct

Sheet 6-4 Control and display diagram

See added addition sheet 6-5-1

Addition:
1051 quartz crystal 6 MHz
2051, 2052 tubular ceramic capacitor 27 pF
3051 resistor 1 MΩ - SFR25
3068 resistor 10 kΩ - SFR25

Reason:
With the introduction of servo microprocessor MAB8440/D041 the display microprocessor gets its own crystal oscillator which takes care of the timing (previous version servo μP MAB8440/D034). As a result the screened wire to the servo μP pin 16 will be deleted.

Correction:
2055 tubular ceramic capacitor 22 nF should be 2,2 nF

Remark:
The control and display PCB with these changes has been marked by a round yellow sticker "C"

Sheet 6-5 Control and display PCBs and parts list

See added addition sheet 6-5-2

Addition to PCB drawings:

1051	quartz crystal 6 MHz
2051, 2052	tubular ceramic capacitors 27 pF
3051	resistor 1 MΩ - SFR25
3068	resistor 10 kΩ - SFR25

Addition to parts list:

IC base 28P	4822 255 40156
1051 quartz crystal 6MHz	4822 242 70392

Remark:

The control and display PCB with these changes has been marked by a round yellow "C" and following

Sheet 6-6 "Servo 1" circuit diagram

See added addition sheet 6-9-1

Change:

2228 will be 1μF - 25V solid aluminium capacitor (was 100 nF -63V polyester capacitor)

Reason:

Improvement of the lock-in behaviour through delay in the motion of the focus motor

3203 will be 360 kΩ chip resistor (was 330 kΩ)

Reason:

To improve locking-in

3256 and 3273 will be safety resistors of 4,7 Ω (was 4,7 Ω - SFR25)

Reason:

Improve safety
6201 servo μP will be MAB8440/D041 was MAB8440/D034

Reason:

Changed programme in view of motor brake circuit

6248 will be diode BAW62 was BAT85

Reason:

Introduction of motor brake circuit

Deleted:
3212 - 3906 - 6237

Reason:

Introduction of motor brake circuit renders these components superfluous

The screened wire from pin 16 of the servo μP to display μP pin 15 has also been deleted with the introduction of servo μP MAB8440/D041

Reason:

Display μP MAB8410/B017 has its own crystal clock

Addition:
3906 - 3924 - 3925 chip jumper 0 Ω

Reason:

Added in view of adaptation conductor pattern

Correction:

2217 will be solid aluminium capacitor 6,8 μF - 10V (was electrolytic capacitor 6,8 μF - 16V)

3264 0E deleted

3241 18 kΩ - SFR25 will be 3230 18 kΩ - SFR25 (correction name)

5501 will be 5201 (name 5501 was double)

6259 will be BAW62 (type designation added)

Remark:

The servo PCB with these changes has been marked by a round yellow sticker "B"

Sheet 6-7 Servo PCB and parts list
See added addition sheet 6-9-2

Change:

Focus delay PCB has been integrated on servo PCBs
Connector 29 added thus adapting the conductor
pattern

Correction:

5501, 5502, 5503 will be 5201, 5202 and 5203 (names
5501, 5502 and 5503 were double)

Remark:

The servo PCB with these changes has been marked by
a round yellow sticker "B"

Additions to parts list:

2217	MAB8440/D041 servo μ P	4822 209 10916
2228	6,8 μ F - 16V	4822 124 21538
3256, 3273	1 μ F - 25V	4822 124 21457
	fuse res. 4,7 Ω	4822 111 50483

Deleted on parts list:

BAT85	4822 130 31983
-------	----------------

Change on parts list:

5501 will be 5201

Sheet 6-8 Servo PCB and parts list

See added addition sheet 6-9-3

Change:

See changes of sheet 6-7

Additions on parts list:

1E5	Chip resistor	4822 111 90381
-----	---------------	----------------

Change on parts list:

5502, 5503 will be 5202, 5203

Sheet 6-9 "Servo 2" circuit diagram

See added addition sheet 6-9-4

Change:

3387 will be 1,5 Ω chip resistor (was 2,2 Ω)

Reason:

Adaptation as a result of material change for
magnets for CDM

Change:

5502, 5503 will be 5202, 5205

Reason:

Correction of double name

Sheet 6-10 "Decoding 1" circuit diagram

As a result of the replacement of coil 5502 by an
interconnection all +2a power supply voltage are
changed in +2

Sheet 6-11 Decoder on PCB and parts list

Remark:

On the decoder PCB a connector may be present under
the AF connection points. This has been done to render
the decoder PCB of CD104 also suitable for CD304. The
connector in CD304 serves for connection of the
headphone PCB.

Deleted on PCB and parts list:

5501 4822 156 21155 (an interconnection will be applied
to PCB)

Sheet 6-12 Decoder PCB and parts list
See remark on sheet 6-11

Correction:

Test point 64 on connector 33-3 should be test point 65

Sheet 6-13 "Decoding 2" circuit diagram

Deleted:

Coil 5502 is replaced by an interconnection
All +2a power supply voltages changed in +2 power
supply voltage

Sheet 6-14 "Tray control" circuit diagram

See added addition sheet 6-14-1

Change:

6802, 6803 and 6805 will be BC548B (were BC547B)
6804, 6806 will be BC558B (were BC557B)

Reason:

In production BC548B and BC558B are used
3814 will be 12E - NFR25 (was 5E6 - NFR25)
3816 will be 5E6 - NFR25 (was 12E - NFR25)

Reason:

Resistance values of 3814 and 3816
interchanged

Deleted:

2801

Reason:

In servo μ P MAB8440/D041 the delay of SL1
has been provided for in the software.
The delay on the tray PCB will be superfluous
then and can be switched off by removing 2801,
thus making it possible to use up the stock.
PCBs with this change are marked by a round
yellow sticker "A".

"Tray control" PCBs

See added addition sheet 6-14-1

Deleted:

2801

Reason:

See sub "circuit diagram"

"Tray control" parts list

Change:

BC547B	will be BC548B	4822 130 44196
BC557B	will be BC558B	4822 130 44197
3814	will be 12E-NFR25	4822 111 30511 (was 5E6)
3816	will be 5E6-NFR25	4822 111 30502 (was 12E)

Sheet 6-15 Wiring

See added addition sheet 6-15-1

Wiring adapted to stage of production

Nr.	See	Position	Amplitude	f	Time base
71	A	play	0-5 V	4,35 MHz	
72	C	stop/play	0-5 V		A = 10* μ s B = 126 μ s
73	B	stop/play*	0-5 V	7,35 kHz	A = 68 μ s B = 68 μ s
74	D	stop/play	5-0 V		A = 3,5 μ s B = 132,5 μ s
75	E	stop	5-0 V		A = 3,5 μ s B = 132,5 μ s
75	G	play	0-5 V	DATA	
76	L	stop/play	0-5 V		A = 3,2 μ s B = 0,8 μ s
77	M	stop/play	0-5 V		A = 10 μ s B = 126 μ s
78	N	stop	0-5 V		A = 1,4 μ s B = 0,5 μ s C = 0,8 μ s
78	O	play	5 V	DATA	
79	K	stop/play	0-5 V		A = 1,5 μ s B = 134,5 μ s
80	P	stop/play	0-5 V		A = 2 μ s B = 7 μ s C = 4 μ s
81	Q	stop/play	0-5 V		A = 3 μ s B = 6 μ s C = 5 μ s
81	R	play	0-5 V		A = 2 μ s B = 7 μ s C = 4 μ s
82		stop	5 V	DC	
82	S	play with Drop-out test record	0-5 V		
84	T	stop/play	0-5 V		A = 0,5 μ s B = 22,5 μ s
85	U	stop/play	0-5 V		A = 2 μ s B = 7,5 μ s
86	V	stop	0-5 V		A = 4 μ s B = 7,2 μ s
86	W	play	0-5 V	DATA	
87	V	stop	5 V		A = 4 μ s B = 7,2 μ s
87	W	play	5 V	DATA	
90	X	stop/play	0-5 V		A = 3,2 μ s B = 2,4 μ s
91	Y	stop	0-5 V		A = 1,2 μ s B = 4,4 μ s
91	Z	play	0-5 V		A = 3,2 μ s B = 2,4 μ s
92	Y	stop	0-5 V		A = 1,2 μ s B = 4,4 μ s
92	Z	play	0-5 V		A = 3,2 μ s B = 2,4 μ s
93	T	stop/play	0-5 V		A = 0,4 μ s B = 5,5 μ s
94	A	stop/play	0-5 V	4,23 MHz	
95	F	stop	5-0 V		
95	H	play	5-0 V		
96	I	stop	0-5 V		
96	J	play	5-0 V		

* In pos. stop, signal is only present after the set was brought in play mode.

Service
Service
Service

Information

1984-11-15

CD104

A84-143

Voor het aanpassen van de Service Manual aan de huidige produktiestand zijn onderstaande pagina's gewijzigd/toegevoegd.

Wijzigingsbladen

Voorblad
1-2-a
2-1, 2-2-a
3-1-a, 3-2-a
3-3, 4-1-a
4-2-a
5-1-a, 5-2-a
6-1-a, 6-2-a
6-3-a, 6-4-a
6-5-a, 6-6
7-1-a, 7-2-a
7-3-a, 7-4-a
7-5-a, 7-6
7-7, 7-8-a

Toevoegingsbladen

6-9, 6-9-1
6-9-2, 6-9-3
6-9-4, 6-10
6-14-1, 6-15
6-15, 6-16
8-1, 8-2
8-3, 8-4

